



EXPLODED VIEW (DVD MECHANISM)


- | | | |
|---|------------|---------------|
| A | ADJUSTMENT | : N09-4495-05 |
| B | φ2x5 | : N09-4496-05 |
| C | M1.7x1.8 | : N09-6060-05 |
| D | M1.7x3.5 | : N09-6061-05 |
| E | M1.7x3.5 | : N09-6103-05 |
| F | φ2x10 | : N09-6104-05 |
| G | M1.7x2.5 | : N09-6106-05 |
| J | WASHER | : N19-2022-04 |
| K | WASHER | : N19-2171-04 |

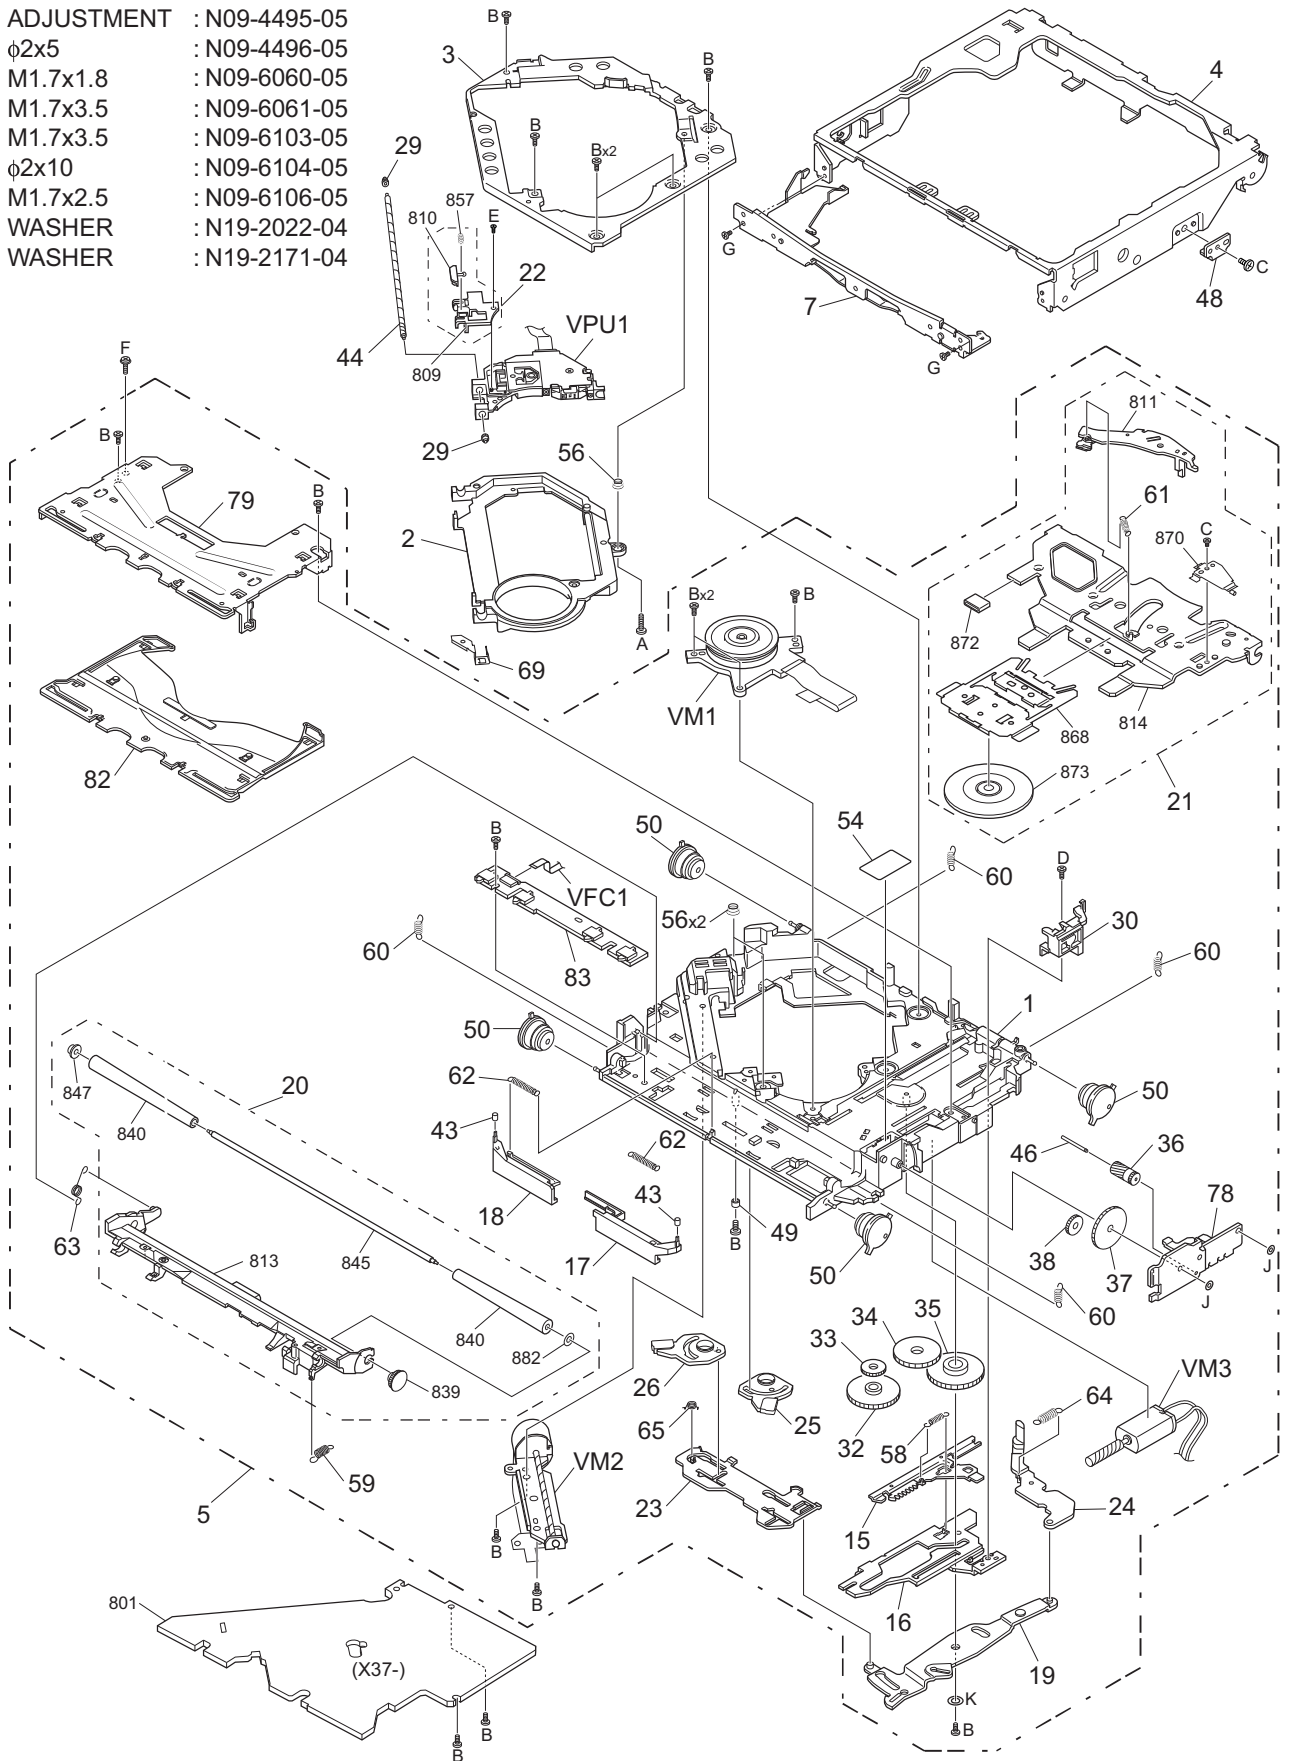


EXPLODED VIEW (UNIT)

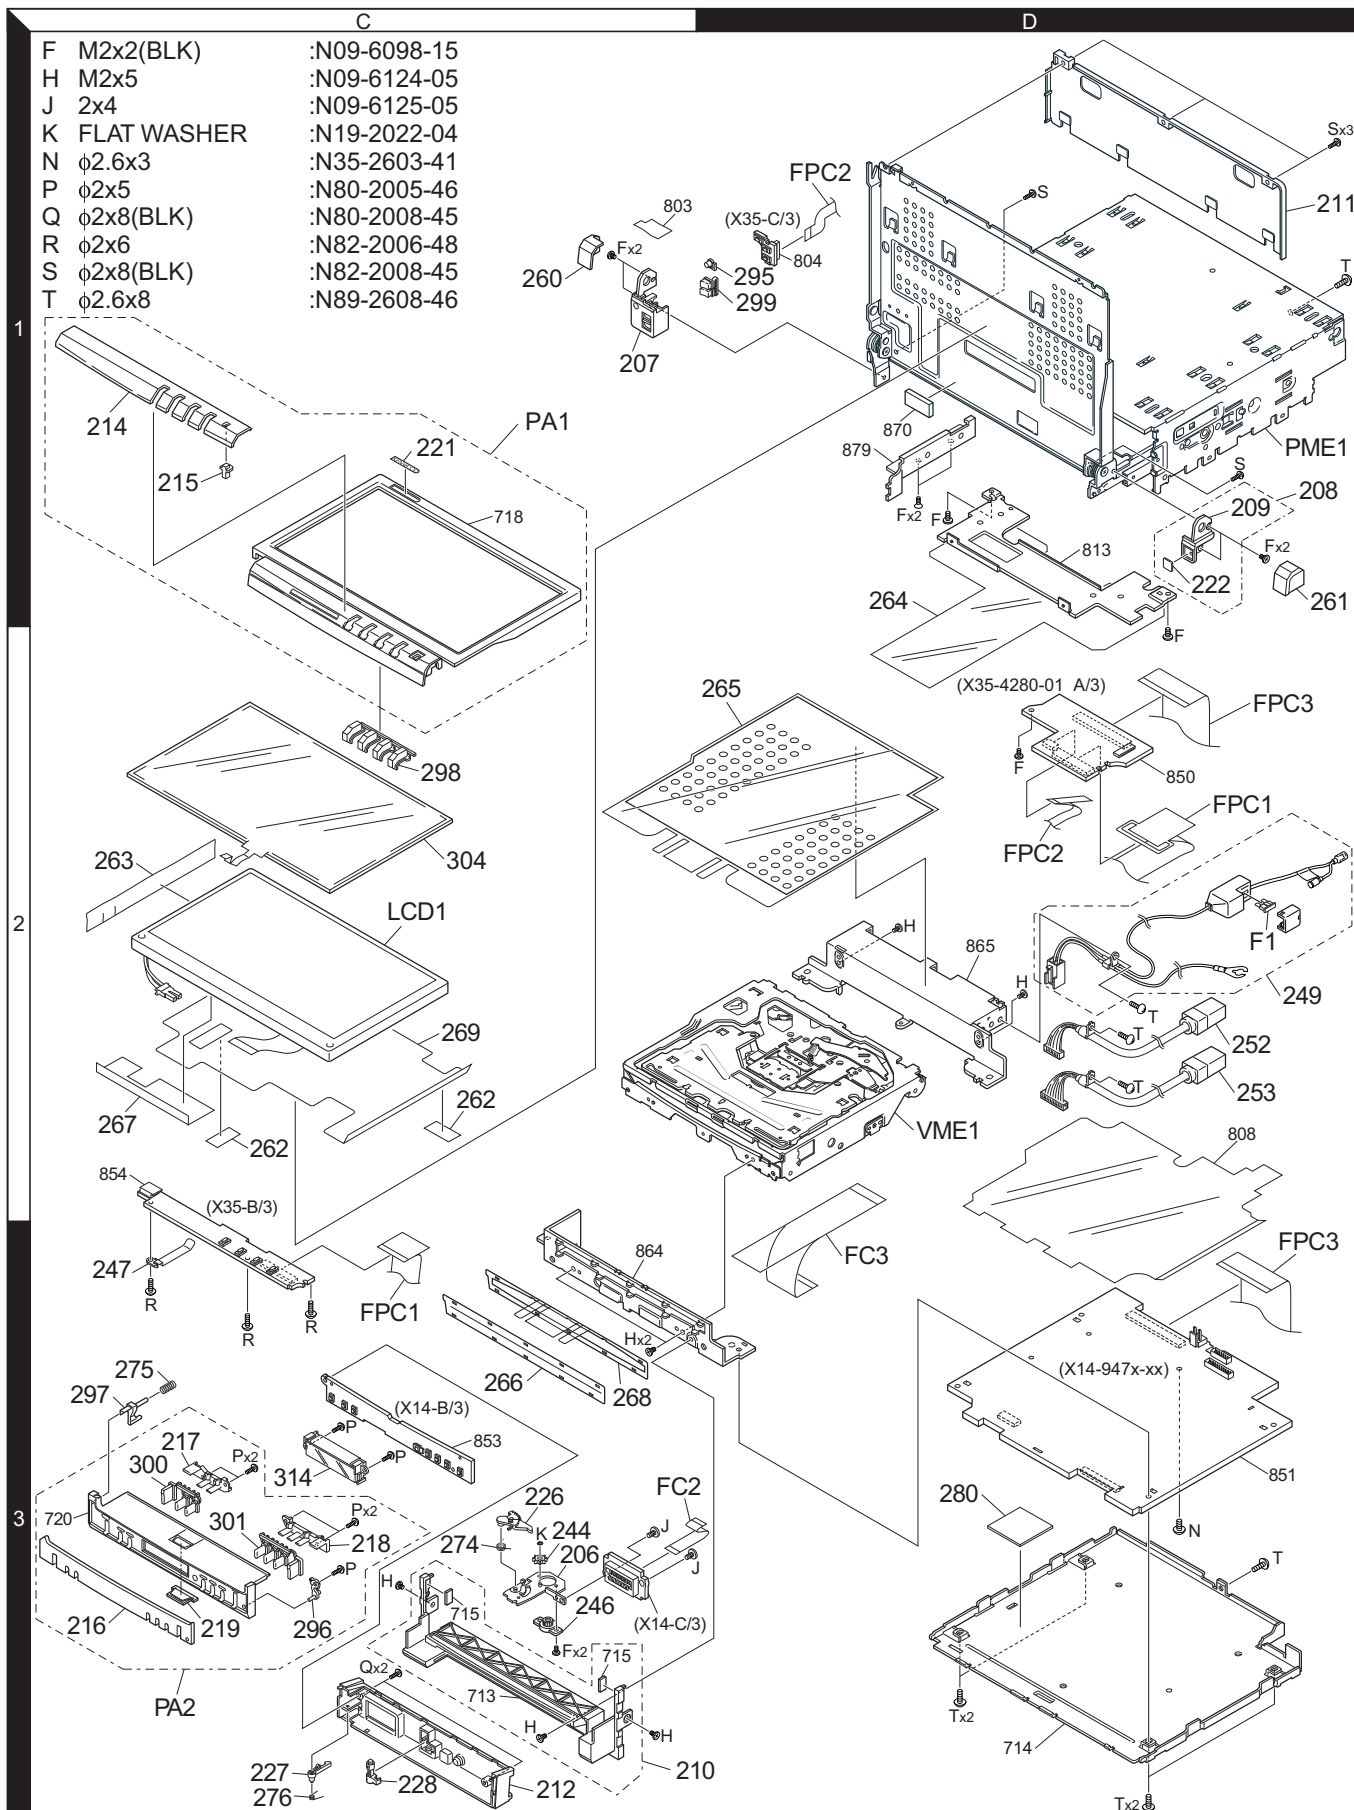

EXPLODED VIEW (PANEL MECHANISM)

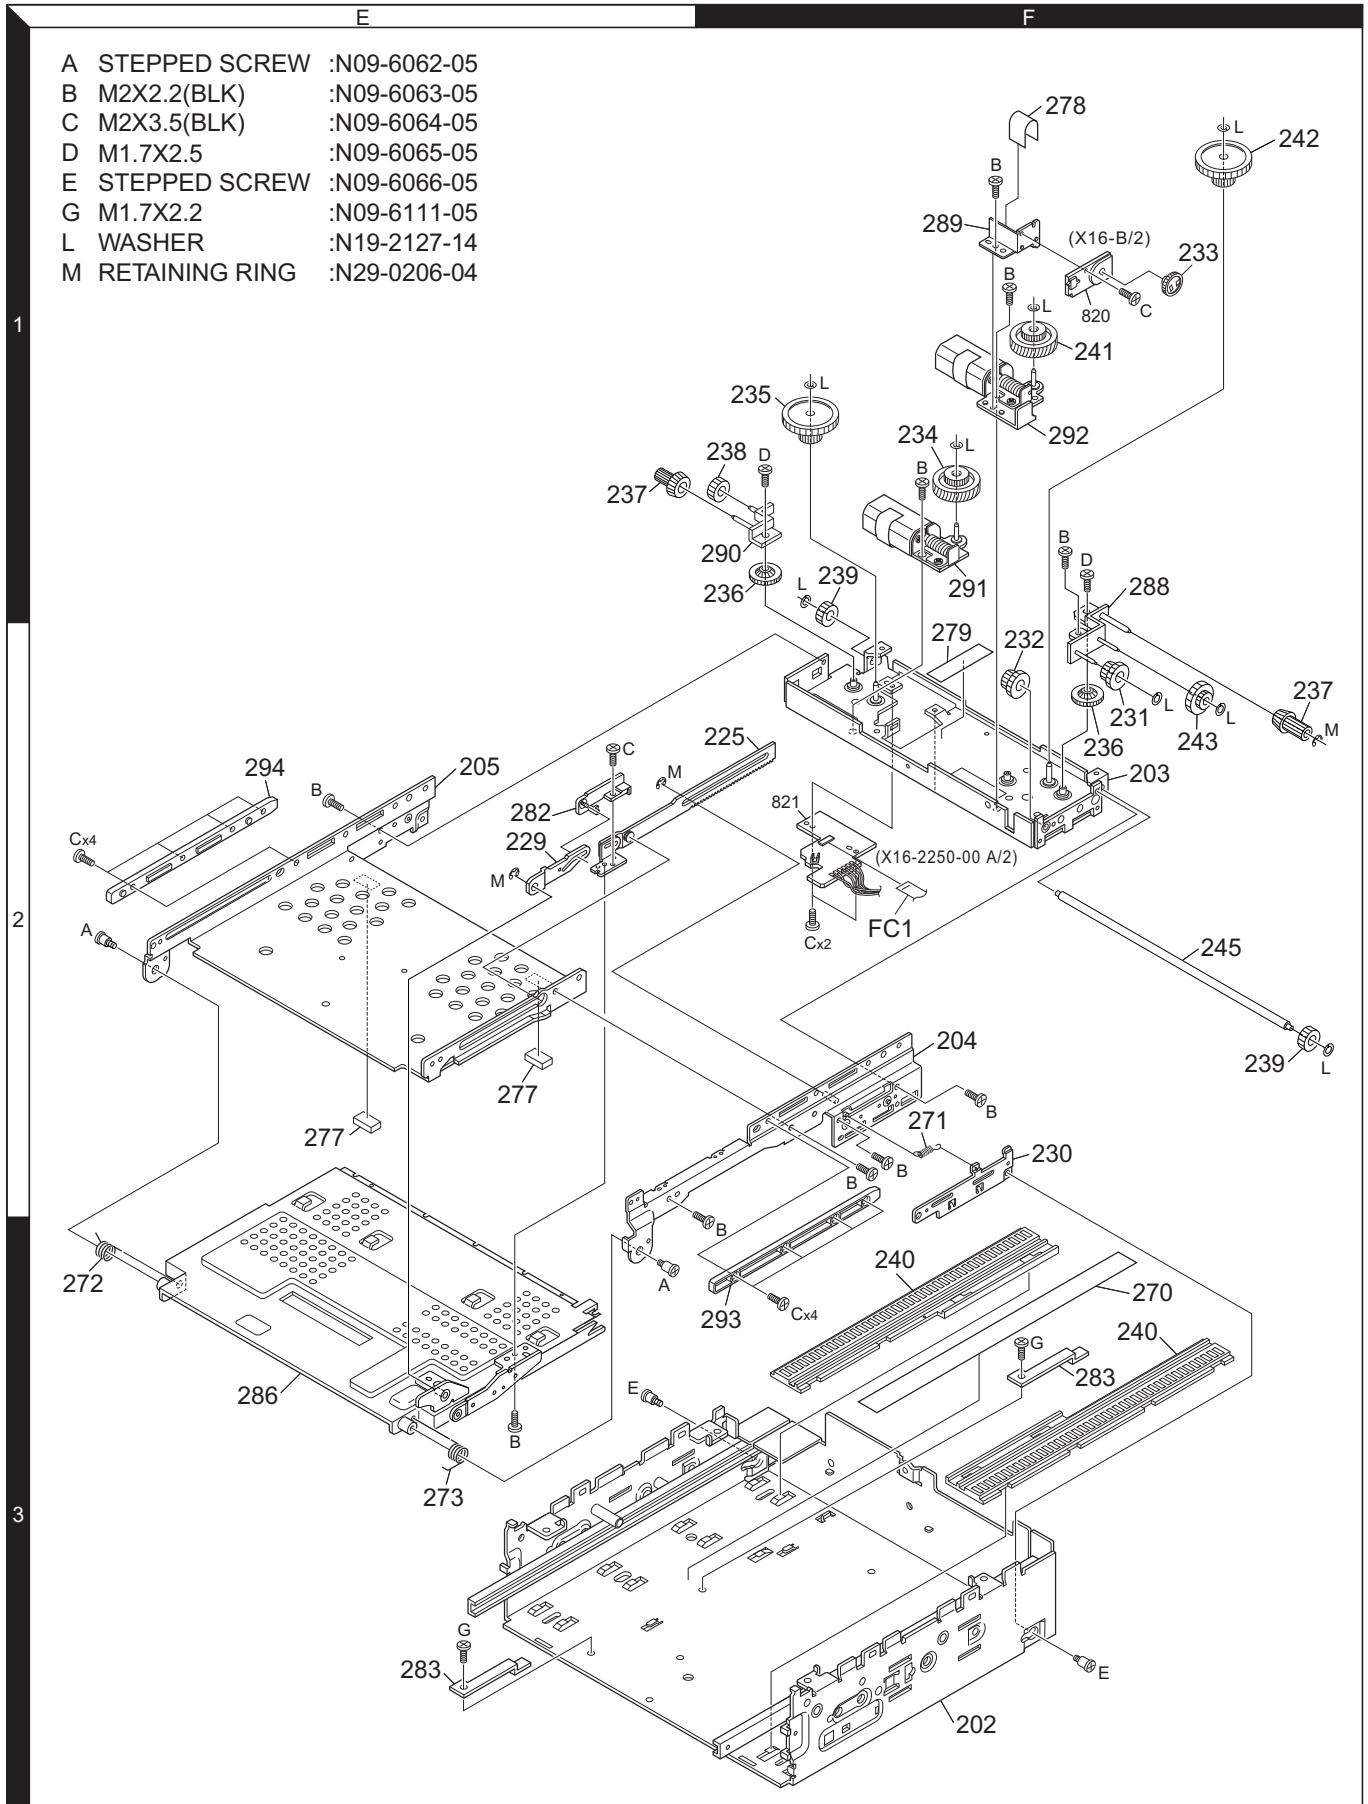

EXPLODED VIEW (AMP UNIT / ACCESSORY)

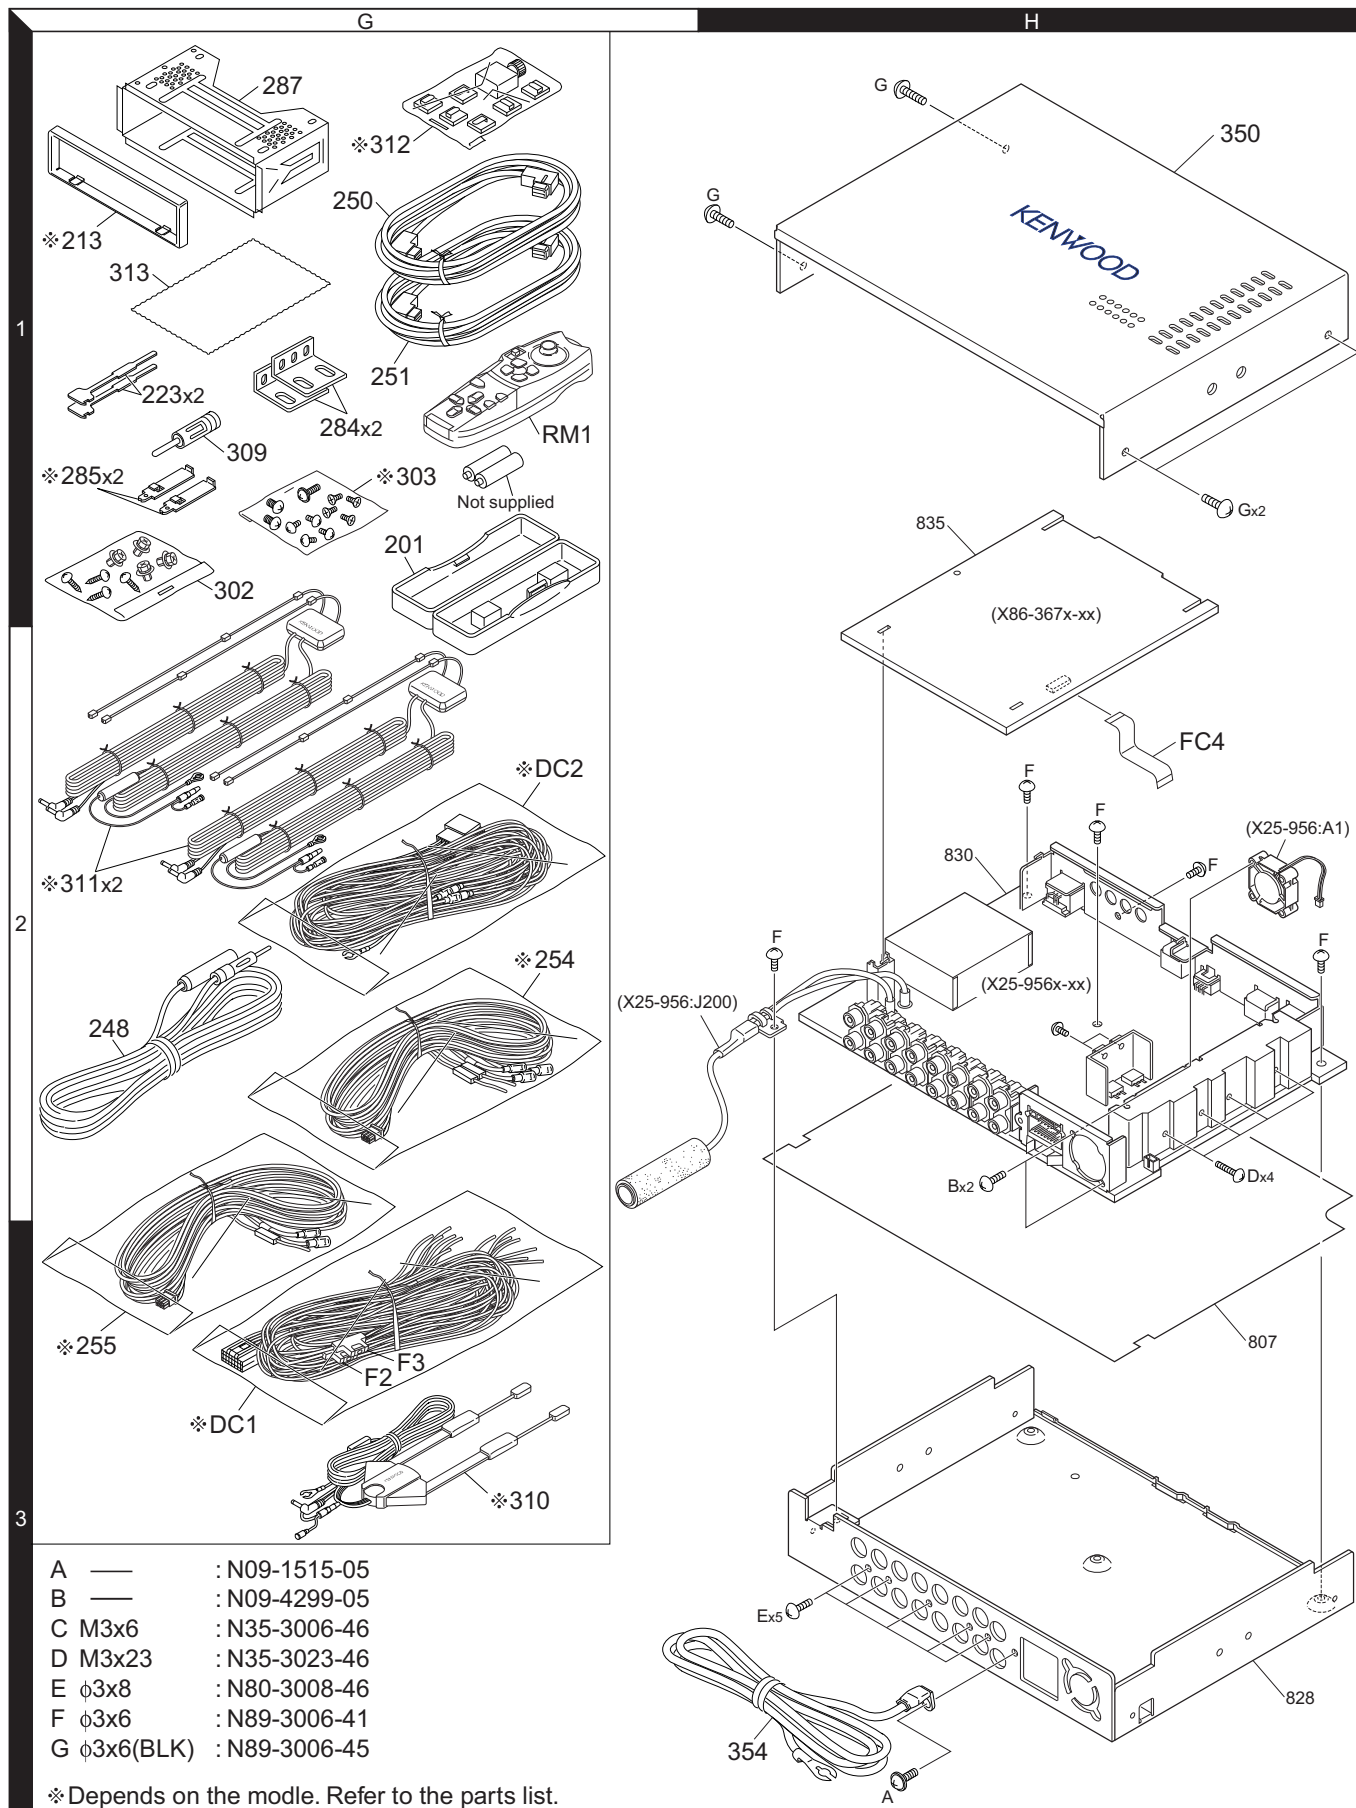

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation	Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
KVT-915DVD,925DVD,935DVD,945DVD,965DVD						213	2G		B07-3058-02	ESCUTCHEON	W1
201	1G		A02-2723-03	PLASTIC CABINET ASSY		213	2G		B07-3083-02	ESCUTCHEON	K1R1E1
202	3F	*	A10-5009-22	CHASSIS CALKING ASSY		214	1C	*	B07-3085-02	ESCUTCHEON	K1R1
203	2F		A10-5013-03	CHASSIS CALKING ASSY		214	1C	*	B07-3086-02	ESCUTCHEON	E1M1H1
204	2F		A10-5015-13	CHASSIS CALKING ASSY		214	1C	*	B07-3086-02	ESCUTCHEON	X1C1
205	2E		A10-5018-12	CHASSIS		214	1C	*	B07-3087-02	ESCUTCHEON	W1
206	3C		A11-1622-04	SUB CHASSIS CALKING ASSY		215	1C	*	B10-4404-04	FRONT GLASS	
207	1C	*	A21-4273-12	DRESSING PANEL	K1R1E1	216	3C	*	B10-4405-12	FRONT GLASS	M1
207	1C	*	A21-4274-12	DRESSING PANEL	M1H1X1	216	3C	*	B10-4406-12	FRONT GLASS	K1R1H1
207	1C	*	A21-4274-12	DRESSING PANEL	C1	216	3C	*	B10-4406-12	FRONT GLASS	X1C1
207	1C	*	A21-4275-12	DRESSING PANEL	W1	216	3C	*	B10-4407-12	FRONT GLASS	E1W1
208	1D	*	A21-4276-14	DRESSING PANEL ASSY	K1R1E1	217	3C	*	B19-2217-13	LIGHTING BOARD	
208	1D	*	A21-4277-14	DRESSING PANEL ASSY	M1H1X1	218	3C	*	B19-2218-13	LIGHTING BOARD	
208	1D	*	A21-4277-14	DRESSING PANEL ASSY	C1	219	3C	*	B19-2219-04	LIGHTING BOARD	
208	1D	*	A21-4278-14	DRESSING PANEL ASSY	W1	221	1C	*	B43-1508-04	KENWOOD BADGE	K1R1E1
209	1D	*	A21-4279-13	DRESSING PANEL	K1R1E1	221	1C	*	B43-1508-04	KENWOOD BADGE	W1
209	1D	*	A21-4280-13	DRESSING PANEL	M1H1X1	221	1C	*	B43-1511-04	KENWOOD BADGE	M1H1X1
209	1D	*	A21-4280-13	DRESSING PANEL	C1	221	1C	*	B43-1511-04	KENWOOD BADGE	C1
209	1D	*	A21-4281-13	DRESSING PANEL	W1	222	1C	*	B43-1509-14	BADGE (DVD)	K1R1E1
210	3C	*	A22-3003-22	SUB PANEL ASSY	K1R1E1	222	1C	*	B43-1509-14	BADGE (DVD)	M1H1X1
210	3C	*	A22-3004-22	SUB PANEL ASSY	M1H1X1	222	1C	*	B43-1509-14	BADGE (DVD)	C1
210	3C	*	A22-3004-22	SUB PANEL ASSY	C1	222	1C	*	B43-1510-14	BADGE (DVD)	W1
210	3C	*	A22-3005-22	SUB PANEL ASSY	W1	LCD1	2C		B38-1122-15	LIQUID CRYSTAL	
211	1D		A46-1776-02	REAR COVER		223	1G		D10-4589-04	LEVER	
212	3C	*	A46-1785-11	REAR COVER		225	2F		D10-4703-13	ARM ASSY	
PA1	1C	*	A64-3065-21	PANEL ASSY	K1	226	3C		D10-4727-03	ARM	
PA1	1C	*	A64-3066-11	PANEL ASSY	M1	227	3C		D10-4728-04	ARM	
PA1	1C	*	A64-3067-11	PANEL ASSY	C1	228	3C		D10-4729-04	LEVER	
PA1	1C	*	A64-3068-11	PANEL ASSY	H1	229	2E		D10-4733-13	ARM	
PA1	1C	*	A64-3069-11	PANEL ASSY	X1	230	2F		D10-4761-04	LEVER ASSY	
PA1	1C	*	A64-3070-11	PANEL ASSY	E1	231	2F		D13-2251-04	GEAR	
PA1	1C	*	A64-3071-11	PANEL ASSY	W1	232	2F		D13-2252-04	GEAR	
PA2	3C	*	A64-3081-12	PANEL ASSY	K1R1	233	1F		D13-2253-04	GEAR	
PA2	3C	*	A64-3082-12	PANEL ASSY	M1	234	1F		D13-2256-04	GEAR	
PA2	3C	*	A64-3083-12	PANEL ASSY	H1X1C1	235	1F		D13-2257-04	GEAR	
PA2	3C	*	A64-3084-12	PANEL ASSY	E1	236	1F		D13-2258-14	GEAR	
PA2	3C	*	A64-3091-11	PANEL ASSY	R1	237	1E		D13-2259-14	GEAR	
PA2	3C	*	A64-3093-12	PANEL ASSY	W1	238	1F		D13-2260-04	GEAR	
PME1	1D	*	A10-5008-31	CHASSIS ASSY		239	1F		D13-2261-04	GEAR	
RM1	1G	*	A70-2046-05	REMOTE CONTROLLER (RC-DV101)		240	3F		D13-2262-13	RACK (GEAR)	
-			B46-0100-50	WARRANTY CARD		241	1F		D13-2263-04	GEAR	
-			B46-0606-04	ID CARD	K1R1M1	242	1F		D13-2264-04	GEAR	
-			B46-0606-04	ID CARD	H1X1C1	243	2F		D13-2265-04	GEAR	
-			B46-0612-14	ID CARD	E1W1	244	3C		D13-2280-04	GEAR	
-			B46-0648-13	USER CARD	K1	245	2F		D21-2416-13	SHAFT	
-		*	B58-1370-04	CAUTION CARD		246	3C		D39-0239-05	DAMPER	
-		*	B58-1411-04	CAUTION CARD	E1W1	247	3C	*	E29-1924-04	LEAD PLATE	
-		*	B64-2602-00	INST. MANUAL (ENG,FRE,SPA,PUR)	K1R1	248	1G		E30-4953-05	CORD WITH PLUG	
-		*	B64-2603-00	INST. MANUAL (ENG,KOR,T-CHI,S-CHI)	M1H1X1	249	2B	*	E30-6164-05	DC CORD	
-		*	B64-2603-00	INST. MANUAL (ENG,KOR,T-CHI,S-CHI)	C1	250	1G	*	E30-6171-05	CORD WITH CONNECTOR (Black) (6M)	
-		*	B64-2604-00	INST. MANUAL (ENG,FRE,GER)	E1W1	251	2G	*	E30-6172-05	CORD WITH CONNECTOR (White) (6M)	
-		*	B64-2621-00	INST. MANUAL (DUT,ITA,SPA,POR)	E1W1	252	2B	*	E30-6173-05	CORD WITH CONNECTOR (Black)	
213	2G		B07-3022-02	ESCUTCHEON	M1H1X1	253	2B	*	E30-6174-05	CORD WITH CONNECTOR (White)	
213	2G		B07-3022-02	ESCUTCHEON	C1	254	1G	*	E30-6197-25	CORD WITH CONNECTOR	E1W1

K : KVT-915DVD **R1** : KVT-915DVD **E1** : KVT-925DVD **W1** : KVT-925DVD
M1 : KVT-935DVD **H1** : KVT-935DVD **X1** : KVT-945DVD **C1** : KVT-965DVD

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

KVT-915DVD,925DVD,935DVD,945DVD,965DVD

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
255	1G	*	E30-6241-25	CORD WITH CONNECTOR	K1R1M1
255	1G	*	E30-6241-25	CORD WITH CONNECTOR	H1X1C1
△ DC1	1G	*	E30-6195-05	DC CORD	K1R1M1
△ DC1	1G	*	E30-6195-05	DC CORD	H1X1C1
△ DC2	1G	*	E30-6196-15	DC CORD	E1W1
FC1	2F		E39-0537-15	FLAT CABLE (9PIN)	
FC2	3C	*	E39-0549-15	FLAT CABLE (22PIN)	
FC3	3D	*	E39-0550-05	FLAT CABLE (50PIN)	
260	1C	*	F07-1124-03	COVER	K1R1E1
260	1C	*	F07-1124-03	COVER	M1H1X1
260	1C	*	F07-1124-03	COVER	C1
260	1C	*	F07-1125-03	COVER	W1
261	1D	*	F07-1126-03	COVER	K1R1E1
261	1D	*	F07-1126-03	COVER	M1H1X1
261	1D	*	F07-1126-03	COVER	C1
261	1D	*	F07-1127-03	COVER	W1
262	2C		F09-1260-04	SHEET	
263	2C		F09-1802-04	SHEET	
264	1D	*	F09-1832-24	SHEET	
265	2D	*	F09-1833-33	SHEET	
266	3C	*	F09-1873-04	SHEET	
267	2C		F12-0775-04	SHIELDING SHEET	
268	3C	*	F19-1408-23	BLIND PLATE	
269	2C		F20-2235-14	INSULATING SHEET	
270	3F		F20-2240-04	INSULATING SHEET	
△ F1	2D		F52-0004-05	FUSE (5A)	
△ F2	3G		F52-0002-05	FUSE (3A : ACC)	
△ F3	3G		F52-0006-05	FUSE (10A : BATT)	
271	2F		G01-3152-04	EXTENSION SPRING	
272	3E		G01-3153-04	TORSION COIL SPRING	
273	3E		G01-3161-04	TORSION COIL SPRING	
274	3C		G01-3168-04	TORSION COIL SPRING	
275	3C		G01-3169-14	COMPRESSION SPRING	
276	3C		G01-3170-04	TORSION COIL SPRING	
277	2E		G11-3512-04	CUSHION	
278	1F		G16-1452-04	SHEET	
279	2F		G16-1453-04	SHEET	
280	3D	*	G16-1465-24	SHEET	
-			H02-0832-03	INNER CARTON CASE	
-		*	H12-2724-03	PACKING FIXTURE	
-		*	H12-2725-14	PACKING FIXTURE	
-			H13-2004-04	CARTON BOARD	
-			H25-0337-04	PROTECTION BAG (180X300X0.03)	
-			H25-0338-04	PROTECTION BAG (250X350X0.03)	
-			H25-1115-04	PROTECTION BAG	E1
-			H25-1132-04	PROTECTION BAG (0.3X280X450)	K1R1W1
-			H25-1132-04	PROTECTION BAG (0.3X280X450)	M1H1X1
-			H25-1132-04	PROTECTION BAG (0.3X280X450)	C1
-		*	H54-2896-23	ITEM CARTON CASE	K1
-		*	H54-2897-23	ITEM CARTON CASE	E1
-		*	H54-2898-23	ITEM CARTON CASE	M1
-		*	H54-2899-23	ITEM CARTON CASE	X1
-		*	H54-2900-23	ITEM CARTON CASE	C1
-		*	H54-2901-23	ITEM CARTON CASE	R1

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
-		*	H54-3180-03	ITEM CARTON CASE	W1
-		*	H54-3181-03	ITEM CARTON CASE	H1
282	2E		J19-5207-13	HOLDER	
283	3E		J19-5235-04	HOLDER	
284	1G		J21-3801-04	MOUNTING HARDWARE	
285	1G		J21-9784-04	MOUNTING HARDWARE	K1R1M1
285	1G		J21-9784-04	MOUNTING HARDWARE	H1X1C1
286	3E		J21-9916-12	MOUNTING HARDWARE ASSY	
287	1G		J21-9934-03	MOUNTING HARDWARE ASSY	
288	1F		J21-9947-04	MOUNTING HARDWARE ASSY	
289	1F		J21-9949-04	MOUNTING HARDWARE	
290	1F		J21-9984-04	MOUNTING HARDWARE ASSY	
291	1F		J21-9986-03	MOUNTING HARDWARE ASSY	
292	1F		J21-9987-03	MOUNTING HARDWARE ASSY	
293	3F		J90-1053-03	GUIDE	
294	2E		J90-1064-03	GUIDE	
FPC1	2D		J84-0150-05	FPC (50PIN)	
FPC2	2D		J84-0151-05	FPC (10PIN)	
FPC3	2D	*	J84-0158-15	FPC (80PIN)	
295	1D	*	K24-4057-14	KNOB (OPEN)	K1R1E1
295	1D	*	K24-4057-14	KNOB (OPEN)	M1H1X1
295	1D	*	K24-4057-14	KNOB (OPEN)	C1
295	1D	*	K24-4058-04	KNOB (OPEN)	W1
296	3C	*	K24-4059-04	KNOB (POWER)	K1R1E1
296	3C	*	K24-4060-04	KNOB (POWER)	M1H1X1
296	3C	*	K24-4060-04	KNOB (POWER)	C1
296	3C	*	K24-4061-04	KNOB (POWER)	W1
297	3C	*	K24-4062-04	KNOB (REREASE)	K1R1E1
297	3C	*	K24-4063-04	KNOB (REREASE)	M1H1X1
297	3C	*	K24-4063-04	KNOB (REREASE)	C1
297	3C	*	K24-4064-04	KNOB (REREASE)	W1
298	2C	*	K25-1551-03	KNOB (SCREEN/MODE/V SEL/FNC.)	K1R1E1
298	2C	*	K25-1551-03	KNOB (SCREEN/MODE/V SEL/FNC.)	M1H1X1
298	2C	*	K25-1551-03	KNOB (SCREEN/MODE/V SEL/FNC.)	C1
298	2C	*	K25-1552-13	KNOB (SCREEN/MODE/V SEL/FNC.)	W1
299	1D	*	K25-1553-14	KNOB (VOL.)	K1R1E1
299	1D	*	K25-1553-14	KNOB (VOL.)	M1H1X1
299	1D	*	K25-1553-14	KNOB (VOL.)	C1
299	1D	*	K25-1554-04	KNOB (VOL.)	W1
300	3C	*	K25-1555-13	KNOB (EJECT/ATT/DISP)	K1R1E1
300	3C	*	K25-1555-13	KNOB (EJECT/ATT/DISP)	M1H1X1
300	3C	*	K25-1555-13	KNOB (EJECT/ATT/DISP)	C1
300	3C	*	K25-1556-13	KNOB (EJECT/ATT/DISP)	W1
301	3C	*	K25-1557-13	KNOB (SKIP/TI)	K1R1E1
301	3C	*	K25-1557-13	KNOB (SKIP/TI)	M1H1X1
301	3C	*	K25-1557-13	KNOB (SKIP/TI)	C1
301	3C	*	K25-1558-13	KNOB (SKIP/TI)	W1
302	1G		N99-1558-05	SCREW SET	
303	1G		N99-1723-05	SCREW SET	
303	1G		N99-1723-05	SCREW SET	K1R1M1
A	2E		N09-6062-05	STEPPED SCREW	H1X1C1
B	3E		N09-6063-05	MACHINE SCREW (M2X2.2)	
C	3F		N09-6064-05	MACHINE SCREW (M2X3.5)	

K : KVT-915DVD **R1** : KVT-915DVD **E1** : KVT-925DVD **W1** : KVT-925DVD
M1 : KVT-935DVD **H1** : KVT-935DVD **X1** : KVT-945DVD **C1** : KVT-965DVD

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

KVT-915DVD,925DVD,935DVD,945DVD,965DVD

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation	Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
D	1F		N09-6065-05	MACHINE SCREW (M1.7X2.5)		C149			CK73FB1C105K	CHIP C 1.0UF K	
E	3F		N09-6066-05	STEPPED SCREW		C150			CK73GB1C104K	CHIP C 0.10UF K	
F	3C		N09-6098-15	MACHINE SCREW		C151-153			CK73GB1H471K	CHIP C 470PF K	
G	3F		N09-6111-05	MACHINE SCREW		C154			CK73GB1H272K	CHIP C 2700PF K	
H	2D		N09-6124-05	MACHINE SCREW (M2.6X3)		C155			C92-1428-05	ELECTRO 330UF 6.3WV	
J	3C	*	N09-6125-05	TAPTITE SCREW (P2X4)		C156			CK73GB1C104K	CHIP C 0.10UF K	
K	3C		N19-2022-04	FLAT WASHER		C157-159			CK73GB1H104K	CHIP C 0.10UF K	
L	2F		N19-2127-14	FLAT WASHER		C160			CK73GB1H103K	CHIP C 0.010UF K	
M	2F		N29-0206-04	RETAINING RING		C200,201			CK73GB1H103K	CHIP C 0.010UF K	
N	3D	*	N35-2603-41	BINDING HEAD MACHINE SCREW		C202			CC73GCH1H220J	CHIP C 22PF J	
P	3C		N80-2005-46	PAN HEAD TAPTITE SCREW		C203			CC73GCH1H080D	CHIP C 8.0PF D	
Q	3C		N80-2008-45	PAN HEAD TAPTITE SCREW		C204			C92-1359-05	CHIP-TAN 10UF 16WV	
R	3C		N82-2006-48	BINDING HEAD TAPTITE SCREW		C205-210			CK73GB1H103K	CHIP C 0.010UF K	
S	1D		N82-2008-45	BINDING HEAD TAPTITE SCREW		C211			CK73FB1C105K	CHIP C 1.0UF K	
T	2D		N89-2608-46	BINDING HEAD TAPTITE SCREW		C212-214			CK73GB1H103K	CHIP C 0.010UF K	
304	1C	*	S79-0845-05	SWITCH ASSY		C215			CC73GCH1H220J	CHIP C 22PF J	
309	1G		T90-0512-05	ANTENNA ADAPTOR	E1W1	C216			CK73GB1A224K	CHIP C 0.22UF K	
310	3G	*	T90-0545-05	ANTENNA ASSY	M1H1X1	C217,218			CK73FB1C105K	CHIP C 1.0UF K	
310	3G	*	T90-0545-05	ANTENNA ASSY	C1	C219			CK73GB1H103K	CHIP C 0.010UF K	
311	3G	*	T90-0551-15	ANTENNA ASSY	K1R1E1	C220			CK73GB1C104K	CHIP C 0.10UF K	
311	3G	*	T90-0551-15	ANTENNA ASSY	W1	C221,222			CC73GCH1H101J	CHIP C 100PF J	
312	2G	*	W01-1552-05	ACCESSORY	M1H1X1	C223			CK73GB1H103K	CHIP C 0.010UF K	
312	2G	*	W01-1552-05	ACCESSORY	C1	C224,225			CK73GB1C104K	CHIP C 0.10UF K	
313	2G	*	W01-1620-05	CLEANING CLOTH		C226-228			CK73GB1H103K	CHIP C 0.010UF K	
314	3C	*	W02-3401-05	ELEC. CIRCUIT MODULE (DISPLAY)		C300			CK73GB1H221K	CHIP C 220PF K	
VME1	2D		X92-5020-00	MECHANISM ASSY (DVS-3040)		C301			CK73FB1A225K	CHIP C 2.2UF K	
VIDEO CONTROL UNIT (X14-947x-xx)						C302-317			CC73GCH1H101J	CHIP C 100PF J	
D301			B30-1658-05	LED (RED,S)		C322			CC73GCH1H101J	CHIP C 100PF J	
D304			B30-1462-05	LED		C351-354			CC73GCH1H101J	CHIP C 100PF J	
D305			B30-1523-05	LED		C355,356			CK73GB0J105K	CHIP C 1.0UF K	
C100		*	C94-0224-05	ELECTRO 2200UF 16WV		C400			C92-1359-05	CHIP-TAN 10UF 16WV	
C101			CK73GB1H562K	CHIP C 5600PF K		C401-403			CK73GB1H103K	CHIP C 0.010UF K	
C102-104			CK73GB1A224K	CHIP C 0.22UF K		C404			CK73GB1C104K	CHIP C 0.10UF K	
C105,106			CK73GB1H472K	CHIP C 4700PF K		C405			CK73FB1C105K	CHIP C 1.0UF K	
C107-118			CK73GB1H104K	CHIP C 0.10UF K		C406			CK73DF1C106Z	CHIP C 10UF Z	
C119,120			CK73GB1H472K	CHIP C 4700PF K		C407			CK73GB1H103K	CHIP C 0.010UF K	
C121			CK73GB1C104K	CHIP C 0.10UF K		C408,409			CK73FB1C105K	CHIP C 1.0UF K	
C122			C92-0667-05	ELECTRO 10UF 10WV		C410			CK73EB1A475K	CHIP C 4.7UF K	
C123			C92-1775-05	CHIP-TAN 10UF 6.3WV		C411			CC73GCH1H331J	CHIP C 330PF J	
C124			CK73GB1H104K	CHIP C 0.10UF K		C412-414			CK73GB1C104K	CHIP C 0.10UF K	
C125,126		*	CE32AU1A560M	CHIP EL 56UF 10WV		C415			CK73EB1A475K	CHIP C 4.7UF K	
C127,128		*	CE32AU0G331M	CHIP EL 330UF 4.0WV		C416,417			CK73GB1H103K	CHIP C 0.010UF K	
C129			CE32AU1C390M	CHIP EL 39UF 16WV		C418			CK73DF1E106Z	CHIP C 10UF Z	
C130			CK73DF1C106Z	CHIP C 10UF Z		C419-422			CK73GB1H103K	CHIP C 0.010UF K	
C131			CC73GCH1H391J	CHIP C 390PF J		C423			CK73GB1H102K	CHIP C 1000PF K	
C132,133		*	C92-1766-05	ELECTRO 22UF 12.5WV		C424			CK73GB1H103K	CHIP C 0.010UF K	
C134			C92-1610-05	ELECTRO 220UF 16WV		C425,426			CK73GB1C683K	CHIP C 0.068UF K	
C135,136			CK73GB1H103K	CHIP C 0.010UF K		C427,428			CK73GB1H103K	CHIP C 0.010UF K	
C137,138			C93-1210-05	CHIP C 10UF K		C429			CK73DF1C106Z	CHIP C 10UF Z	
C139,140			CK73GB1C104K	CHIP C 0.10UF K		C430			CK73GB1C683K	CHIP C 0.068UF K	
C141-144			C93-1210-05	CHIP C 10UF K		C431			CK73GB1C104K	CHIP C 0.10UF K	
C145-147			CK73GB1C104K	CHIP C 0.10UF K		C432			CK73GB1H104K	CHIP C 0.10UF K	
C148			CK73GB1H103K	CHIP C 0.010UF K		C500-502			CK73GB1C104K	CHIP C 0.10UF K	
						C503			CK73GB1A334K	CHIP C 0.33UF K	
						C504			CK73GB1C104K	CHIP C 0.10UF K	

K : KVT-915DVD R1 : KVT-915DVD E1 : KVT-925DVD W1 : KVT-925DVD
M1 : KVT-935DVD H1 : KVT-935DVD X1 : KVT-945DVD C1 : KVT-965DVD

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

VIDEO CONTROL UNIT (X14-947x-xx)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
C505,506 C507 C508 C509 C510			CK73FB1C105K CK73GB1A334K CK73GB1C104K CC73GCH1H681J CC73GCH1H101J	CHIP C 1.0UF K CHIP C 0.33UF K CHIP C 0.10UF K CHIP C 680PF J CHIP C 100PF J	
C511 C512,513 C514-516 C517 C518,519			CK73GB1C683K CK73FB1C105K CK73GB1C104K C92-0628-05 CK73GB1C104K	CHIP C 0.068UF K CHIP C 1.0UF K CHIP C 0.10UF K CHIP-TAN 10UF 10WV CHIP C 0.10UF K	
C520 C521-534 C535 C536,537 C538			C92-0628-05 CK73GB1C104K C92-1359-05 CK73GB1C104K C92-1359-05	CHIP-TAN 10UF 10WV CHIP C 0.10UF K CHIP-TAN 10UF 16WV CHIP C 0.10UF K CHIP-TAN 10UF 16WV	
C539,540 C541,542 C543-556 C557 C558			CK73GB1C104K CC73GCH1H471J CK73GB1C104K C92-1359-05 CK73GB1C104K	CHIP C 0.10UF K CHIP C 470PF J CHIP C 0.10UF K CHIP-TAN 10UF 16WV CHIP C 0.10UF K	
C559 C560 C561 C562 C564			CC73GCH1H331J CC73GCH1H101J CK73GB1C104K CK73FB1C105K CK73GB1C104K	CHIP C 330PF J CHIP C 100PF J CHIP C 0.10UF K CHIP C 1.0UF K CHIP C 0.10UF K	
C567,568 C569 C570 C571 C572			CK73GB1C104K CK73FB1C105K CK73GB1H153K CK73EB1A475K CC73GCH1H151J	CHIP C 0.10UF K CHIP C 1.0UF K CHIP C 0.015UF K CHIP C 4.7UF K CHIP C 150PF J	
C573 C575 C576 C579 C580-584			CC73GCH1H102J C92-1359-05 CK73GB1C104K CC73GCH1H471J CK73GB1C104K	CHIP C 1000PF J CHIP-TAN 10UF 16WV CHIP C 0.10UF K CHIP C 470PF J CHIP C 0.10UF K	
C586,587 C589 C590 C591 C592			CK73GB1C104K CK73GB1C104K C92-1359-05 CK73GB1C104K CC73GCH1H471J	CHIP C 0.10UF K CHIP C 0.10UF K CHIP-TAN 10UF 16WV CHIP C 0.10UF K CHIP C 470PF J	
C593 C594,595 C596-598 C599-607 C608			CK73GB1C104K C92-0628-05 CK73FB1C105K CK73GB1C104K C92-0628-05	CHIP C 0.10UF K CHIP-TAN 10UF 10WV CHIP C 1.0UF K CHIP C 0.10UF K CHIP-TAN 10UF 10WV	
C609-618 C619 C620-653 C654-656 C657			CK73GB1C104K C92-0628-05 CK73GB1C104K C92-0628-05 CK73GB1C104K	CHIP C 0.10UF K CHIP-TAN 10UF 10WV CHIP C 0.10UF K CHIP-TAN 10UF 10WV CHIP C 0.10UF K	
C658,659 C660-667 C670 C671-678 C700			C92-0628-05 CK73GB1C104K C92-0628-05 CK73GB1C104K C92-0628-05	CHIP-TAN 10UF 10WV CHIP C 0.10UF K CHIP-TAN 10UF 10WV CHIP C 0.10UF K CHIP-TAN 10UF 10WV	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
C701,702 C703 C704-723 C724 C725,726			CK73GB1C104K C92-0628-05 CK73GB1C104K C92-0628-05 CK73GB1C104K	CHIP C 0.10UF K CHIP-TAN 10UF 10WV CHIP C 0.10UF K CHIP-TAN 10UF 10WV CHIP C 0.10UF K	
C727 C728 C729-738 C739 C740			C92-0628-05 C92-0633-05 CK73GB1C104K C92-1326-05 CC73GCH1H150J	CHIP-TAN 10UF 10WV CHIP-TAN 22UF 10WV CHIP C 0.10UF K CHIP-TAN 47UF 10WV CHIP C 15PF J	
C741 C742 C743 C744-749 C750			CK73GB0J105K CK73GB1C104K C92-1485-05 CK73GB1C104K C92-0628-05	CHIP C 1.0UF K CHIP C 0.10UF K CHIP C 22UF 6.3WV CHIP C 0.10UF K CHIP-TAN 10UF 10WV	
C751-757 C761 C765 C766 C767			CK73GB1C104K CC73GCH1H150J C92-0676-05 CK73EB1A475K CC73GCH1H040C	CHIP C 0.10UF K CHIP C 15PF J ELECTRO 10UF 25WV CHIP C 4.7UF K CHIP C 4.0PF C	
C768 C770 C771 C772 C774			CK73GB1C104K CC73GCH1H050C C92-0628-05 CK73GB1C104K C92-0093-05	CHIP C 0.10UF K CHIP C 5.0PF C CHIP-TAN 10UF 10WV CHIP C 0.10UF K CHIP C 100UF 6.3WV	
C775 C777 C778 C779 C780,781			CK73GB1C104K CK73GB1H103K CK73GB1C104K C92-1359-05 CC73GCH1H100D	CHIP C 0.10UF K CHIP C 0.010UF K CHIP C 0.10UF K CHIP-TAN 10UF 16WV CHIP C 10PF D	
C782 C783 C784 C897 C899			CC73GCH1H150J CK73GB1C104K CC73GCH1H150J CK73GB1H103K CK73GB1C104K	CHIP C 15PF J CHIP C 0.10UF K CHIP C 15PF J CHIP C 0.010UF K CHIP C 0.10UF K	
C900,901 C902 C903 C904 C905			C92-0628-05 CK73GB1C104K C92-1485-05 CK73GB1C104K CK73GB1A224K	CHIP-TAN 10UF 10WV CHIP C 0.10UF K CHIP C 22UF 6.3WV CHIP C 0.10UF K CHIP C 0.22UF K	
C906-917 C918,919 C920,921 C922 C923-927			CK73GB1C104K CK73GB1H103K CK73GB1C104K CK73GB1H103K CK73GB1C104K	CHIP C 0.10UF K CHIP C 0.010UF K CHIP C 0.10UF K CHIP C 0.010UF K CHIP C 0.10UF K	
C928,929 C930,931 C932 C933 C934			CK73FB1C105K C92-1324-05 CK73GB1C104K C92-0628-05 CK73GB1C104K	CHIP C 1.0UF K CHIP-TAN 4.7UF 16WV CHIP C 0.10UF K CHIP-TAN 10UF 10WV CHIP C 0.10UF K	
C935,936 C937-940 C941,942 C943 C944-947			C92-1359-05 CK73GB1C104K CC73GCH1H471J C92-1359-05 CK73GB1C104K	CHIP-TAN 10UF 16WV CHIP C 0.10UF K CHIP C 470PF J CHIP-TAN 10UF 16WV CHIP C 0.10UF K	

K : KVT-915DVD **R1** : KVT-915DVD **E1** : KVT-925DVD **W1** : KVT-925DVD
M1 : KVT-935DVD **H1** : KVT-935DVD **X1** : KVT-945DVD **C1** : KVT-965DVD

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

VIDEO CONTROL UNIT (X14-947x-xx)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation	Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
C948			C92-1359-05	CHIP-TAN 10UF 16WV		L500		*	L92-0381-05	CHIP FERRITE	
C949			C92-0672-05	ELECTRO 22UF 16WV		L507,508			L40-1001-78	SMALL FIXED INDUCTOR (10UH)	
C950			CK73GB1C104K	CHIP C 0.10UF K		L509			L92-0319-05	CHIP FERRITE	
C951			C92-0672-05	ELECTRO 22UF 16WV		L512			L40-1001-78	SMALL FIXED INDUCTOR (10UH)	
C952-954			CK73GB1C104K	CHIP C 0.10UF K		L514			L40-1001-78	SMALL FIXED INDUCTOR (10UH)	
C955			C92-1359-05	CHIP-TAN 10UF 16WV		L515,516			L92-0319-05	CHIP FERRITE	
C956			CK73GB1C104K	CHIP C 0.10UF K		L519			L40-1001-78	SMALL FIXED INDUCTOR (10UH)	
C957			CK73GB1H332K	CHIP C 3300PF K		L700,701		*	L92-0373-05	CHIP FERRITE	
C958			C92-1359-05	CHIP-TAN 10UF 16WV		L705		*	L92-0381-05	CHIP FERRITE	
C959			CK73GB1H332K	CHIP C 3300PF K		L709			L40-1001-78	SMALL FIXED INDUCTOR (10UH)	
C960,961			CK73GB1H681K	CHIP C 680PF K		L710-713		*	L92-0381-05	CHIP FERRITE	
C962			CK73GB1C104K	CHIP C 0.10UF K		L900			L92-0330-05	CHIP FERRITE	
C963,964			CK73GB1H681K	CHIP C 680PF K		L901-903			L40-1001-78	SMALL FIXED INDUCTOR (10UH)	
C965,966			CK73GB1H332K	CHIP C 3300PF K		X1			L78-0596-05	RESONATOR	
C967,968			CK73GB1C104K	CHIP C 0.10UF K		X2			L77-2304-05	CRYSTAL RESONATOR (32.768KHZ)	
C969-972			CC73GCH1H681J	CHIP C 680PF J		X501			L78-0549-05	RESONATOR (50KHZ)	
C973			CK73GB1C104K	CHIP C 0.10UF K		X700		*	L77-2866-05	CRYSTAL RESONATOR (27MHZ)	
C974			CK73GB1H332K	CHIP C 3300PF K		CP1-10			R90-1096-05	MULTI-COMP 10K X4	
C975			CK73GB1C104K	CHIP C 0.10UF K		CP11,12			RK74HB1J220J	CHIP-COM 22 J 1/16W	
C976			CK73GB1H332K	CHIP C 3300PF K		CP13-20			RK74HB1J470J	CHIP-COM 47 J 1/16W	
C977			CK73GB1C104K	CHIP C 0.10UF K		CP21-34			R90-1096-05	MULTI-COMP 10K X4	
C978			CK73GB1H332K	CHIP C 3300PF K		CP35-43			RK74HB1J220J	CHIP-COM 22 J 1/16W	
C979			CK73GB1H152K	CHIP C 1500PF K		CP44			RK74HB1J470J	CHIP-COM 47 J 1/16W	
C980			CK73GB1H332K	CHIP C 3300PF K		CP45-54		*	RK74HB1J680J	CHIP-COM 68 J 1/16W	
C981,982			CK73GB1H681K	CHIP C 680PF K		CP55-57			R90-1096-05	MULTI-COMP 10K X4	
C983,984			CK73GB1C104K	CHIP C 0.10UF K		CP58-62		*	RK74HB1J680J	CHIP-COM 68 J 1/16W	
C985			CK73GB1H681K	CHIP C 680PF K		CP63,64			R90-1096-05	MULTI-COMP 10K X4	
C986			CK73GB1H152K	CHIP C 1500PF K		CP65-71			RK74HB1J470J	CHIP-COM 47 J 1/16W	
C987-989			CK73GB1H681K	CHIP C 680PF K		CP200			R90-1096-05	MULTI-COMP 10K X4	
C990-997			CK73EB0J106K	CHIP C 10UF K		CP700,701			RK74HB1J472J	CHIP-COM 4.7K J 1/16W	
C998,999			CK73GB1C104K	CHIP C 0.10UF K		CP702-704		*	RK74HB1J330J	CHIP-COM 33 J 1/16W	
CN100		*	E40-9120-05	PIN ASSY		CP705,706			RK74HB1J472J	CHIP-COM 4.7K J 1/16W	
CN200		*	E40-9409-05	PIN ASSY		CP707,708		*	RK74HB1J330J	CHIP-COM 33 J 1/16W	
CN201		*	E41-0390-05	PIN ASSY		CP709-713			RK74HB1J472J	CHIP-COM 4.7K J 1/16W	
CN202		*	E41-0391-05	PIN ASSY		CP714-717			R90-1096-05	MULTI-COMP 10K X4	
CN203			E40-5888-05	FLAT CABLE CONNECTOR		CP718,719		*	RK74HB1J472J	CHIP-COM 4.7K J 1/16W	
CN204			E41-0341-05	FLAT CABLE CONNECTOR		CP720,721			RK74HB1J470J	CHIP-COM 47 J 1/16W	
CN300		*	E41-0395-05	FLAT CABLE CONNECTOR		CP722,723		*	RK74HB1J330J	CHIP-COM 33 J 1/16W	
CN301		*	E41-0456-05	FLAT CABLE CONNECTOR		CP724-733		*	RK74HB1J680J	CHIP-COM 68 J 1/16W	
CN500			E40-5661-05	PIN ASSY		CP734			RK74HB1J472J	CHIP-COM 4.7K J 1/16W	
CN701			E40-9409-05	PIN ASSY		CP735-742			RK74HB1J220J	CHIP-COM 22 J 1/16W	
CN702			E41-0333-05	FLAT CABLE CONNECTOR		CP743			RK74HB1J101J	CHIP-COM 100 J 1/16W	
J300			E58-0865-05	RECTANGULAR RECEPTACLE		CP744			RK74HB1J472J	CHIP-COM 4.7K J 1/16W	
J301			E59-0829-05	RECTANGULAR PLUG		CP900			R90-1096-05	MULTI-COMP 10K X4	
P100-104			E23-0746-05	TERMINAL		CP901-904			RK74HB1J220J	CHIP-COM 22 J 1/16W	
CF100-105			L72-0780-05	CERAMIC FILTER		CP905-913			R90-1096-05	MULTI-COMP 10K X4	
L100		*	L33-1914-05	CHOKE COIL		CP914-919			RK74HB1J220J	CHIP-COM 22 J 1/16W	
L101,102		*	L33-1906-05	CHOKE COIL		R100			RK73GB2A681J	CHIP R 680 J 1/10W	
L103		*	L33-1933-05	CHOKE COIL		R101			RK73GB2A363J	CHIP R 36K J 1/10W	
L104		*	L19-0733-05	TRANSFORMER FOR CONVERTER		R102			RK73GB2A513J	CHIP R 51K J 1/10W	
L105		*	L33-1914-05	CHOKE COIL		R103			RK73GB2A363J	CHIP R 36K J 1/10W	
L106-108			L40-1001-78	SMALL FIXED INDUCTOR (10UH)		R104			RK73GB2A473J	CHIP R 47K J 1/10W	
L200			L92-0319-05	CHIP FERRITE		R105			RK73GB2A100J	CHIP R 10 J 1/10W	
L400			L40-1001-78	SMALL FIXED INDUCTOR (10UH)		R106-108			RK73GB2A220J	CHIP R 22 J 1/10W	

K : KVT-915DVD R1 : KVT-915DVD E1 : KVT-925DVD W1 : KVT-925DVD
M1 : KVT-935DVD H1 : KVT-935DVD X1 : KVT-945DVD C1 : KVT-965DVD

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

VIDEO CONTROL UNIT (X14-947x-xx)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
R109-111 R112 R113 R115 R116			RK73GB2A101J RK73GB2A220J RK73GB2A242J RN73GH1J104D RN73GH1J154D	CHIP R 100 J 1/10W CHIP R 22 J 1/10W CHIP R 2.4K J 1/10W CHIP R 100K D 1/16W CHIP R 150K D 1/16W	
R117 R118 R119 R120 R121		*	RN73GH1J2212D RN73GH1J154D RN73GH1J132D RN73GH1J2552D RN73GH1J433D	CHIP R 22.1K D 1/16W CHIP R 150K D 1/16W CHIP R 1.3K D 1/16W CHIP R 25.5K D 1/16W CHIP R 43K D 1/16W	
R172 R173 R174 R175 R177-179			RK73GB2A223J RK73GB2A103J RK73GB2A432J RK73GB2A472J RK73GB2A223J	CHIP R 22K J 1/10W CHIP R 10K J 1/10W CHIP R 4.3K J 1/10W CHIP R 4.7K J 1/10W CHIP R 22K J 1/10W	
R180 R181 R183 R186 R191			RK73GB2A752J RK73GB2A104J RK73GB2A103J RK73GB2A103J RK73GB2A822J	CHIP R 7.5K J 1/10W CHIP R 100K J 1/10W CHIP R 10K J 1/10W CHIP R 10K J 1/10W CHIP R 8.2K J 1/10W	
R192-197 R198 R199 R200 R201		*	RK73GB2A104J RN73GH1J4021D RN73GH1J102D RK73GB2A622J RN73GH1J102D	CHIP R 100K J 1/10W CHIP R 4.02K D 1/16W CHIP R 1.0K D 1/16W CHIP R 6.2K J 1/10W CHIP R 1.0K D 1/16W	
R202 R203 R204 R205,206 R207		*	RN73GH1J242D RN73GH1J102D RN73GH1J821D RN73GH1J102D RN73GH1J752D	CHIP R 2.4K D 1/16W CHIP R 1.0K D 1/16W CHIP R 820 D 1/16W CHIP R 1.0K D 1/16W CHIP R 7.5K D 1/16W	
R208 R209 R210 R211 R212		*	RN73GH1J102D RK73GB2A622J RK73GB2A104J R92-3416-05 RK73GB2A511J	CHIP R 1.0K D 1/16W CHIP R 6.2K J 1/10W CHIP R 100K J 1/10W CHIP R 0.27 J 1/2W CHIP R 510 J 1/10W	
R213 R214 R215 R216 R217,218			RK73GB2A104J RK73EB2E100J RK73EB2E4R7J RK73EB2E100J RK73EB2E102J	CHIP R 100K J 1/10W CHIP R 10 J 1/4W CHIP R 4.7 J 1/4W CHIP R 10 J 1/4W CHIP R 1.0K J 1/4W	
R219 R220-222 R223 R224 R225-227			RK73GB2A104J RK73GB2A750J RK73GB2A102J RK73GB2A750J RK73EB2E101J	CHIP R 100K J 1/10W CHIP R 75 J 1/10W CHIP R 1.0K J 1/10W CHIP R 75 J 1/10W CHIP R 100 J 1/4W	
R228 R229,230 R231 R232 R233			RK73GB2A102J RK73EB2E101J RK73EB2E102J RK73GB2A102J RK73EB2E102J	CHIP R 1.0K J 1/10W CHIP R 100 J 1/4W CHIP R 1.0K J 1/4W CHIP R 1.0K J 1/10W CHIP R 1.0K J 1/4W	
R234 R234 R235 R236 R237			RK73GB2A103J RK73GB2A103J RK73GB2A103J RK73EB2E102J RK73GB2A103J	CHIP R 10K J 1/10W CHIP R 10K J 1/10W CHIP R 10K J 1/10W CHIP R 1.0K J 1/4W CHIP R 10K J 1/10W	R1M1H1 X1C1 K1E1W1 R1E1W1

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
R237 R238 R238,239 R239 R240			RK73GB2A103J RK73GB2A103J RK73GB2A103J RK73GB2A103J RK73GB2A103J	CHIP R 10K J 1/10W CHIP R 10K J 1/10W CHIP R 10K J 1/10W CHIP R 10K J 1/10W CHIP R 10K J 1/10W	X1C1 M1 K1H1 R1E1W1 M1X1C1
R241 R242 R243 R244 R245,246			RK73GB2A102J RK73GB2A104J RK73GB2A225J RK73GB2A102J RK73GB2A392J	CHIP R 1.0K J 1/10W CHIP R 100K J 1/10W CHIP R 2.2M J 1/10W CHIP R 1.0K J 1/10W CHIP R 3.9K J 1/10W	
R247 R248 R249 R250 R251			RK73GB2A104J RK73GB2A473J RK73GB2A104J RK73EB2E102J RK73GB2A104J	CHIP R 100K J 1/10W CHIP R 47K J 1/10W CHIP R 100K J 1/10W CHIP R 1.0K J 1/4W CHIP R 100K J 1/10W	
R252 R253 R254 R255 R256-262			RK73GB2A683J RK73GB2A104J RK73GB2A683J RK73GB2A102J RK73GB2A104J	CHIP R 68K J 1/10W CHIP R 100K J 1/10W CHIP R 68K J 1/10W CHIP R 1.0K J 1/10W CHIP R 100K J 1/10W	
R263 R264-267 R268 R269 R270			RK73GB2A123J RK73GB2A104J RK73GB2A123J RK73GB2A473J RK73GB2A104J	CHIP R 12K J 1/10W CHIP R 100K J 1/10W CHIP R 12K J 1/10W CHIP R 47K J 1/10W CHIP R 100K J 1/10W	
R271 R272 R273 R274 R275			RK73GB2A224J RK73GB2A104J RK73GB2A103J RK73GB2A104J RK73GB2A684J	CHIP R 220K J 1/10W CHIP R 100K J 1/10W CHIP R 10K J 1/10W CHIP R 100K J 1/10W CHIP R 680K J 1/10W	
R276-279 R280 R281,282 R283 R284			RK73GB2A104J RK73GB2A101J RK73GB2A104J RK73GB2A472J RK73GB2A473J	CHIP R 100K J 1/10W CHIP R 100 J 1/10W CHIP R 100K J 1/10W CHIP R 4.7K J 1/10W CHIP R 47K J 1/10W	
R285 R286 R287 R288-292 R293,294			RK73GB2A105J RK73GB2A104J RK73GB2A473J RK73GB2A101J RK73GB2A104J	CHIP R 1.0M J 1/10W CHIP R 100K J 1/10W CHIP R 47K J 1/10W CHIP R 100 J 1/10W CHIP R 100K J 1/10W	
R295-299 R300 R301-303 R304-310 R311			RK73GB2A101J RK73GB2A681J RK73EB2E102J RK73EB2E101J RK73EB2E391J	CHIP R 100 J 1/10W CHIP R 680 J 1/10W CHIP R 1.0K J 1/4W CHIP R 100 J 1/4W CHIP R 390 J 1/4W	
R312 R313 R314-316 R317 R318			RK73EB2E511J RK73GB2A104J RK73EB2E561J RK73EB2E101J RK73GB2A222J	CHIP R 510 J 1/4W CHIP R 100K J 1/10W CHIP R 560 J 1/4W CHIP R 100 J 1/4W CHIP R 2.2K J 1/10W	
R319 R320 R321 R322 R323			RK73GB2A332J RK73EB2E241J RK73EB2E361J RK73GB2A562J RK73GB2A103J	CHIP R 3.3K J 1/10W CHIP R 240 J 1/4W CHIP R 360 J 1/4W CHIP R 5.6K J 1/10W CHIP R 10K J 1/10W	

K : KVT-915DVD **R1** : KVT-915DVD **E1** : KVT-925DVD **W1** : KVT-925DVD
M1 : KVT-935DVD **H1** : KVT-935DVD **X1** : KVT-945DVD **C1** : KVT-965DVD

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

VIDEO CONTROL UNIT (X14-947x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination	Ref. No.	Add	New	Parts No.	Description	Destination
R324			RK73EB2E391J	CHIP R 390 J 1/4W		R543			RK73GB2A273J	CHIP R 27K J 1/10W	
R325			RK73EB2E511J	CHIP R 510 J 1/4W		R550,551			RK73GB2A104J	CHIP R 100K J 1/10W	
R326			RK73EB2E101J	CHIP R 100 J 1/4W		R553			RK73GB2A104J	CHIP R 100K J 1/10W	
R327,328			RK73GB2A271J	CHIP R 270 J 1/10W		R559			RK73GB2A104J	CHIP R 100K J 1/10W	
R329			RK73GB2A223J	CHIP R 22K J 1/10W		R561,562			RK73GB2A220J	CHIP R 22 J 1/10W	
R330-336			RK73GB2A101J	CHIP R 100 J 1/10W		R563			RK73GB2A104J	CHIP R 100K J 1/10W	
R337		*	RK73EB2E911J	CHIP R 910 J 1/4W		R567			RK73GB2A331J	CHIP R 330 J 1/10W	
R338			RK73EB2E621J	CHIP R 620 J 1/4W		R570			RK73GB2A914J	CHIP R 910K J 1/10W	
R339			RK73GB2A104J	CHIP R 100K J 1/10W		R572			RK73GB2A103J	CHIP R 10K J 1/10W	
R340			RK73GB2A473J	CHIP R 47K J 1/10W		R577		*	RN73GH1J302D	CHIP R 3.0K D 1/16W	
R341-343			RK73EB2E100J	CHIP R 10 J 1/4W		R578			RN73GH1J182D	CHIP R 1.8K D 1/16W	
R344-347			RK73EB2E102J	CHIP R 1.0K J 1/4W		R579			RN73GH1J391D	CHIP R 390 D 1/16W	
R348,349			RK73EB2E101J	CHIP R 100 J 1/4W		R580			RK73GB2A473J	CHIP R 47K J 1/10W	
R350			RK73EB2E102J	CHIP R 1.0K J 1/4W		R582			RK73GB2A912J	CHIP R 9.1K J 1/10W	
R351			RK73GB2A103J	CHIP R 10K J 1/10W		R584,585			RK73GB2A220J	CHIP R 22 J 1/10W	
R353			RK73GB2A103J	CHIP R 10K J 1/10W		R586			RK73GB2A272J	CHIP R 2.7K J 1/10W	
R403			RK73GB2A303J	CHIP R 30K J 1/10W		R590			RN73GH1J222D	CHIP R 2.2K D 1/16W	
R404			RK73GB2A103J	CHIP R 10K J 1/10W		R592			RN73GH1J332D	CHIP R 3.3K D 1/16W	
R405			RK73GB2A123J	CHIP R 12K J 1/10W		R593,594			RN73GH1J222D	CHIP R 2.2K D 1/16W	
R407			RK73GB2A433J	CHIP R 43K J 1/10W		R597,598		*	RN73GH1J101D	CHIP R 100 D 1/16W	
R408			RK73GB2A222J	CHIP R 2.2K J 1/10W		R599,600			RK73GB2A104J	CHIP R 100K J 1/10W	
R409			RK73GB2A103J	CHIP R 10K J 1/10W		R601		*	RN73GH1J101D	CHIP R 100 D 1/16W	
R410			RK73GB2A271J	CHIP R 270 J 1/10W		R602			RN73GH1J562D	CHIP R 5.6K D 1/16W	
R411			RK73GB2A102J	CHIP R 1.0K J 1/10W		R603-609			RK73GB2A104J	CHIP R 100K J 1/10W	
R412			RK73GB2A101J	CHIP R 100 J 1/10W		R610-612			RK73GB2A330J	CHIP R 33 J 1/10W	
R413			RK73GB2A473J	CHIP R 47K J 1/10W		R613,614			RK73GB2A104J	CHIP R 100K J 1/10W	
R414			RK73GB2A123J	CHIP R 12K J 1/10W		R615-617			RN73GH1J562D	CHIP R 5.6K D 1/16W	
R415-418			RK73GB2A103J	CHIP R 10K J 1/10W		R618			RK73GB2A330J	CHIP R 33 J 1/10W	
R419			RK73GB2A201J	CHIP R 200 J 1/10W		R623-625			RK73GB2A470J	CHIP R 47 J 1/10W	
R420			RK73GB2A123J	CHIP R 12K J 1/10W		R629			RK73GB2A203J	CHIP R 20K J 1/10W	
R421			RK73GB2A243J	CHIP R 24K J 1/10W		R630			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R422			RK73GB2A153J	CHIP R 15K J 1/10W		R631			RK73GB2A330J	CHIP R 33 J 1/10W	
R423			RK73GB2A273J	CHIP R 27K J 1/10W		R632,633			RK73GB2A103J	CHIP R 10K J 1/10W	
R424,425			RK73GB2A822J	CHIP R 8.2K J 1/10W		R635			RK73GB2A101J	CHIP R 100 J 1/10W	
R426,427			RK73GB2A101J	CHIP R 100 J 1/10W		R700,701			RK73GB2A104J	CHIP R 100K J 1/10W	
R428,429			RK73GB2A103J	CHIP R 10K J 1/10W		R702			RK73GB2A473J	CHIP R 47K J 1/10W	
R430			RK73GB2A303J	CHIP R 30K J 1/10W		R703			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R431			RK73GB2A622J	CHIP R 6.2K J 1/10W		R704-710			RK73GB2A103J	CHIP R 10K J 1/10W	
R432,433			RK73GB2A103J	CHIP R 10K J 1/10W		R711			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R434			RK73GB2A101J	CHIP R 100 J 1/10W		R712			RK73GB2A103J	CHIP R 10K J 1/10W	
R435,436			RK73GB2A222J	CHIP R 2.2K J 1/10W		R713			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R500			RK73GB2A103J	CHIP R 10K J 1/10W		R714,715			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R501,502		*	RN73GH1J302D	CHIP R 3.0K D 1/16W		R716			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R503			RK73GB2A220J	CHIP R 22 J 1/10W		R717			RK73GB2A330J	CHIP R 33 J 1/10W	
R504			RK73GB2A101J	CHIP R 100 J 1/10W		R718			RK73GB2A820J	CHIP R 82 J 1/10W	
R505			RK73GB2A104J	CHIP R 100K J 1/10W		R719,720			RK73GB2A220J	CHIP R 22 J 1/10W	
R506,507			RK73GB2A330J	CHIP R 33 J 1/10W		R721			RK73GB2A330J	CHIP R 33 J 1/10W	
R508			RK73GB2A472J	CHIP R 4.7K J 1/10W		R722,723			RK73GB2A820J	CHIP R 82 J 1/10W	
R509,510			RK73GB2A103J	CHIP R 10K J 1/10W		R724			RK73GB2A103J	CHIP R 10K J 1/10W	
R511			RK73GB2A104J	CHIP R 100K J 1/10W		R725			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R512			RK73GB2A272J	CHIP R 2.7K J 1/10W		R726-728			RK73GB2A103J	CHIP R 10K J 1/10W	
R513			RK73GB2A912J	CHIP R 9.1K J 1/10W		R729			RK73GB2A330J	CHIP R 33 J 1/10W	
R520			RK73GB2A104J	CHIP R 100K J 1/10W		R730			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R529			RK73GB2A104J	CHIP R 100K J 1/10W		R731			RK73GB2A220J	CHIP R 22 J 1/10W	
R537-539			RK73GB2A104J	CHIP R 100K J 1/10W		R732			RK73GB2A472J	CHIP R 4.7K J 1/10W	

K : KVT-915DVD **R1** : KVT-915DVD **E1** : KVT-925DVD **W1** : KVT-925DVD
M1 : KVT-935DVD **H1** : KVT-935DVD **X1** : KVT-945DVD **C1** : KVT-965DVD

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

VIDEO CONTROL UNIT (X14-947x-xx)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
R733 R734 R735,736 R737 R738			RK73GB2A103J RK73GB2A471J RK73GB2A104J RK73GB2A182J RK73GB2A151J	CHIP R 10K J 1/10W CHIP R 470 J 1/10W CHIP R 100K J 1/10W CHIP R 1.8K J 1/10W CHIP R 150 J 1/10W	
R739,740 R741,742 R743 R744 R745-747			RK73GB2A472J RK73GB2A101J RK73GB2A103J RK73GB2A472J RK73GB2A151J	CHIP R 4.7K J 1/10W CHIP R 100 J 1/10W CHIP R 10K J 1/10W CHIP R 4.7K J 1/10W CHIP R 150 J 1/10W	
R751 R754 R755 R756 R762			RK73GB2A331J RK73FB2B221J RK73EB2E750J RK73GB2A472J RN73GH1J123D	CHIP R 330 J 1/10W CHIP R 220 J 1/8W CHIP R 75 J 1/4W CHIP R 4.7K J 1/10W CHIP R 12K D 1/16W	
R763 R764 R765 R766 R767-769		*	RN73GH1J152D RN73GH1J243D RK73GB2A472J RK73GB2A220J RK73GB2A101J	CHIP R 1.5K D 1/16W CHIP R 24K D 1/16W CHIP R 4.7K J 1/10W CHIP R 22 J 1/10W CHIP R 100 J 1/10W	
R770 R771,772 R900-903 R904,905 R906			RK73GB2A472J RK73GB2A101J RK73GB2A470J RK73GB2A220J RK73GB2A103J	CHIP R 4.7K J 1/10W CHIP R 100 J 1/10W CHIP R 47 J 1/10W CHIP R 22 J 1/10W CHIP R 10K J 1/10W	
R907,908 R909,910 R911 R912-914 R915			RK73GB2A821J RK73GB2A202J RK73GB2A472J RK73GB2A470J RK73GB2A103J	CHIP R 820 J 1/10W CHIP R 2.0K J 1/10W CHIP R 4.7K J 1/10W CHIP R 47 J 1/10W CHIP R 10K J 1/10W	
R916-918 R919 R920 R921 R922-926			RK73GB2A750J RK73GB2A4R7J RK73GB2A472J RK73GB2A470J RK73GB2A472J	CHIP R 75 J 1/10W CHIP R 4.7 J 1/10W CHIP R 4.7K J 1/10W CHIP R 47 J 1/10W CHIP R 4.7K J 1/10W	
R927,928 R929 R930-933 R934 R935-938			RK73GB2A302J RK73GB2A470J RK73GB2A201J RK73GB2A302J RK73GB2A472J	CHIP R 3.0K J 1/10W CHIP R 47 J 1/10W CHIP R 200 J 1/10W CHIP R 3.0K J 1/10W CHIP R 4.7K J 1/10W	
R939-941 R942-944 R945 R946 R947			RK73GB2A302J RK73GB2A201J RK73GB2A470J RK73GB2A201J RK73GB2A302J	CHIP R 3.0K J 1/10W CHIP R 200 J 1/10W CHIP R 47 J 1/10W CHIP R 200 J 1/10W CHIP R 3.0K J 1/10W	
R948-956 R957-959 R960-963 R964 R965,966			RK73GB2A472J RK73GB2A470J RK73GB2A302J RK73GB2A102J RK73GB2A201J	CHIP R 4.7K J 1/10W CHIP R 47 J 1/10W CHIP R 3.0K J 1/10W CHIP R 1.0K J 1/10W CHIP R 200 J 1/10W	
R967 R968-971 R972 R973,974 R975			RK73GB2A102J RK73GB2A201J RK73GB2A472J RK73GB2A302J RK73GB2A103J	CHIP R 1.0K J 1/10W CHIP R 200 J 1/10W CHIP R 4.7K J 1/10W CHIP R 3.0K J 1/10W CHIP R 10K J 1/10W	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
R976 R977-984 R985,986 R987 R989-992			RK73GB2A302J RK73GB2A100J RK73GB2A223J RK73GB2A103J RK73GB2A223J	CHIP R 3.0K J 1/10W CHIP R 10 J 1/10W CHIP R 22K J 1/10W CHIP R 10K J 1/10W CHIP R 22K J 1/10W	
R993 R994,995 R996 VR100 VR400			RK73GB2A470J RK73GB2A223J RK73GB2A104J R32-0244-05 R32-0235-05	CHIP R 47 J 1/10W CHIP R 22K J 1/10W CHIP R 100K J 1/10W SEMI FIXED VARIABLE RESISTOR SEMI FIXED VARIABLE RESISTOR	
VR401-403 VR404 VR405-409 VR700 W100-110			R32-0245-05 R32-0235-05 R32-0245-05 R32-0258-05 R92-1252-05	SEMI FIXED VARIABLE RESISTOR SEMI FIXED VARIABLE RESISTOR SEMI FIXED VARIABLE RESISTOR SEMI FIXED VARIABLE RESISTOR CHIP R 0 OHM J 1/16W	
W114 W117 W201 W300 W504,505			R92-1252-05 R92-1252-05 R92-1252-05 R92-2053-05 R92-1252-05	CHIP R 0 OHM J 1/16W CHIP R 0 OHM J 1/16W CHIP R 0 OHM J 1/16W CHIP R 0 J 1/8W CHIP R 0 OHM J 1/16W	
W524 W538,539 W543 W551 W557-561			R92-1252-05 R92-1252-05 R92-1252-05 R92-1252-05 R92-1252-05	CHIP R 0 OHM J 1/16W CHIP R 0 OHM J 1/16W CHIP R 0 OHM J 1/16W CHIP R 0 OHM J 1/16W CHIP R 0 OHM J 1/16W	
W565 W700-708 W710 W712-717 W722-724			R92-1252-05 R92-1252-05 R92-1252-05 R92-1252-05 R92-1252-05	CHIP R 0 OHM J 1/16W CHIP R 0 OHM J 1/16W CHIP R 0 OHM J 1/16W CHIP R 0 OHM J 1/16W CHIP R 0 OHM J 1/16W	
W726-730			R92-1252-05	CHIP R 0 OHM J 1/16W	
S2-6 S8,9 S200 S300			S70-0856-05 S70-0856-05 S62-0863-05 S70-0826-05	TACT SWITCH TACT SWITCH SLIDE SWITCH TACT SWITCH	E1W1
D102,103 D104-108 D109,110 D112,113 D114			SB05-05CP EC31QS04 D1F60 SB05-05CP MA8082-M	DIODE DIODE DIODE DIODE ZENER DIODE	
D115 D116 D117,118 D119 D120			MA8056-M 1SR154-400 RB491D RD6.8M(B2) RD16S	ZENER DIODE DIODE DIODE ZENER DIODE ZENER DIODE	
D200 D201 D203-207 D208 D209		*	DA204U MA8047-H MA3062WA AVRM1608120M6A DA204U	DIODE ZENER DIODE ZENER DIODE VARISTOR DIODE	
D210 D211,212 D213 D214			MA142WA DA204U MA142WA MA3062WA	DIODE DIODE DIODE ZENER DIODE	

K : KVT-915DVD
M1 : KVT-935DVD

R1 : KVT-915DVD
H1 : KVT-935DVD

E1 : KVT-925DVD
X1 : KVT-945DVD

W1 : KVT-925DVD
C1 : KVT-965DVD

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

VIDEO CONTROL UNIT (X14-947x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination	Ref. No.	Add	New	Parts No.	Description	Destination
D215-224 D225 D226 D227-229 D300			AVRM1608120M6A DA204U MA8062-M AVRM1608120M6A DA204U	VARISTOR DIODE ZENER DIODE VARISTOR DIODE		IC520 IC521 IC521 IC522 IC523			TC7WH123FU BS616LV1010E17 CY62126BV70ZI MT48LC2M32T7I MN67761	MOS-IC SRAM IC MEMORY IC DRAM IC MOS-IC	
D302,303 D306 D307-310 D311-313 D314			DA204U MA8062-M MA3062WA DA204U AVRM1608120M6A	DIODE ZENER DIODE ZENER DIODE DIODE VARISTOR		IC524 IC525 IC526 IC527,528 IC529,530		*	HD74LV1G04A HD74LVC08TTP HD74CBT3244TTP TC7SH08FU K4S641632HTC75	MOS-IC MOS-IC MOS-IC MOS-IC DRAM IC	
D315 D350 D500 D501 D502			MA142WK MA8062-M MA3062WA HVD133 RB491D	DIODE ZENER DIODE ZENER DIODE DIODE DIODE		IC529,530 IC531 IC532 IC533 IC534		*	MT48LC4M16T75I TC7SH32FU NJM2373AF-TE1 HD74LV2G74ATTP TC7SH08FU	DRAM IC MOS-IC ANALOGUE IC MOS-IC MOS-IC	
D503,504 D700,701 D900-910 IC100-102 IC103			MA3062WA DA204U AVRM1608270MAB FA7703V TC75W56FU	ZENER DIODE DIODE VARISTOR ANALOGUE IC MOS-IC		IC535 IC536 IC537 IC700 IC701		*	TC7SH04FU HD74LV2G74ATTP TC7WH241FK K6F1008V2CYF55 TC7SH00FU	MOS-IC MOS-IC MOS-IC SRAM IC MOS-IC	
IC104 IC105 IC106 IC200 IC202			TA78DS05AF PQ1X331M2ZP TC7SH04FU - 70F3089YGJ-8R1	ANALOGUE IC ANALOGUE IC MOS-IC MEMORY IC MICROCONTROLLER IC		IC702 IC703 IC704 IC705 IC707		*	29LV160ATI7R0 M4A3212V18TV1 ES6218SF UPC2933T SI-3012KMM	ROM IC MOS-IC MOS-IC ANALOGUE IC ANALOGUE IC	
IC203 IC204 IC205 IC206 IC207			LB1836M-TE-L PST9142NR LB1836M-TE-L TC7SH08F TC7SET08FU	ANALOGUE IC ANALOGUE IC ANALOGUE IC MOS-IC MOS-IC		IC708 IC709 IC710 IC710 IC712		*	NJM2373AF-TE1 ADV7170KSU K4S641632HTC75 MT48LC4M16T75I TK15446L	ANALOGUE IC MOS-IC DRAM IC DRAM IC ANALOGUE IC	
IC208 IC209 IC300 IC400 IC401		*	NJM4565V TC7W14FU RS-181 TC7WH123FU IR3Y26A1	ANALOGUE IC MOS-IC ANALOGUE IC MOS-IC ANALOGUE IC		IC713 IC714 IC716 IC900 IC901		*	NJU7222U50 CY22392FI-K01 HD74LV2G74ATTP DSPB56367PV150 M5280FP	ANALOGUE IC ANALOGUE IC MOS-IC MOS-IC ANALOGUE IC	
IC402 IC500 IC501 IC502 IC503		*	M5237ML TA78L05F NJM2235M HD74LV157ATTP MM1234XFBE	ANALOGUE IC ANALOGUE IC ANALOGUE IC MOS-IC ANALOGUE IC		IC902 IC903 IC904,905 IC904,905 IC906		*	NJM4565V PCM1800E CY7C1021CV10ZI IC61LV641610TI TC7SH08FU	ANALOGUE IC MOS-IC SRAM IC MEMORY IC MOS-IC	
IC504 IC505 IC506 IC507,508 IC509		*	NJM2235M TA78L05F HD6417706F120D TC7SET08FU NJW1303V	ANALOGUE IC ANALOGUE IC MICROPROCESSOR IC MOS-IC ANALOGUE IC		IC907 IC908 IC909 IC910 IC911		*	TC7WH241FK AK4355VF NJU7222U50 AK4382AVT HD74LV2G125A-E	MOS-IC ANALOGUE IC ANALOGUE IC ANALOGUE IC MOS-IC	
IC510 IC511 IC512 IC513 IC514		*	CXA3266Q TC7SH08FU TC7W00FU HD74LVC138TTP TC7SET08FU	MOS-IC MOS-IC MOS-IC MOS-IC MOS-IC		IC912 IC913 IC914 IC915 IC916		*	TC7SH08FU TC7WH241FK NJM4580V TC7SH08FU TC7WH241FK	MOS-IC MOS-IC ANALOGUE IC MOS-IC MOS-IC	
IC515 IC516 IC517 IC518 IC519		*	HD74LV1G04A TC74LCX74FT MM1389XFBE MBM29DL322B0R2 MBM29DL322B8R3	MOS-IC MOS-IC ANALOGUE IC ROM IC ROM IC		IC917-919 IC920 IC921 IC922 Q100-103		*	NJM4580V TC7SET00FU TC7SET08FU TC7WH241FK UN5212	ANALOGUE IC MOS-IC MOS-IC MOS-IC DIGITAL TRANSISTOR	

K : KVT-915DVD R1 : KVT-915DVD E1 : KVT-925DVD W1 : KVT-925DVD
M1 : KVT-935DVD H1 : KVT-935DVD X1 : KVT-945DVD C1 : KVT-965DVD

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

VIDEO CONTROL UNIT (X14-947x-xx)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
Q104 Q105 Q107,108 Q109 Q110		*	2SD1819A HAT1038R HAT1016R HAT3008R UN5212	TRANSISTOR FET DUAL FET DUAL FET DIGITAL TRANSISTOR	
Q111 Q112 Q113 Q114 Q115			2SB1218A 2SD1819A UN5212 2SA2013 2SD1819A	TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR TRANSISTOR	
Q200 Q201 Q202 Q212 Q213			UN5212 UN5213 UN5113 UN5212 UN5214	DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR	
Q214 Q215 Q216 Q217 Q218			UN5113 DTB123YK UN5212 UN5113 DTB123YK	DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR	
Q220 Q221,222 Q223 Q300 Q301,302			UN5213 UN5212 DTB123YK UN5212 UN5112	DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR	
Q303,304 Q305 Q306 Q307 Q308			UN5214 UN5112 UN5214 UN5212 UN5112	DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR	
Q400 Q510 Q511 Q513,514 Q515		*	2SB1189 2SB1218A 2SD1819A 2SD1819A 2SB1218A	TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR	

SWITCH UNIT (X16-2250-00)

CN1			E41-0404-05	FLAT CABLE (19PIN)	
R2 R1 VR1			RK73GB2A273J RK73GB2A751J R31-0237-05	CHIP R 27K J 1/10W CHIP R 750 J 1/10W SEMI FIXED VARIABLE RESISTOR	
S1 S2,S3 S4			S68-0863-05 S68-0871-05 S68-0863-05	PUSH SWITCH PUSH SWITCH PUSH SWITCH	
PH1			T95-0235-05	PHOTO INTERRUPTER	

ELECTRIC UNIT (X25-956x-xx)

C1 C2 C3,4 C5 C6			CK73GB1E473K C90-5574-05 CK73GB1H103K C90-2866-05 C90-5572-05	CHIP C 0.047UF K ELECTRO 10UF 16WV CHIP C 0.010UF K ELECTRO 220UF 16WV ELECTRO 100UF 10WV	
C7 C8 C9,10			C90-5428-05 CK73GB1H103K CK73FB1C105K	ELECTRO 3900UF 16WV CHIP C 0.010UF K CHIP C 1.0UF K	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
C11 C12 C13 C14 C16			CK73GB1C104K CK73FB1A105K CD04AY1A221M CK73FB1C105K CD04BA1H3R3M	CHIP C 0.10UF K CHIP C 1.0UF K ELECTRO 220UF 10WV CHIP C 1.0UF K ELECTRO 3.3UF 50WV	
C17 C18 C21 C22-24 C25			CK73GB1H561K CK73GB0J105K C94-0032-05 CK73GB1H103K CK73FB1A105K	CHIP C 560PF K CHIP C 1.0UF K ELECTRO 47UF 6.3WV CHIP C 0.010UF K CHIP C 1.0UF K	
C26 C27 C28 C29 C31			CD04AY1A221M CK73GB1E473K CK73FB1C105K C90-5573-05 CK73FB1A105K	ELECTRO 220UF 10WV CHIP C 0.047UF K CHIP C 1.0UF K ELECTRO 220UF 10WV CHIP C 1.0UF K	
C32 C33 C34 C35 C36-39			CK73FB1C105K C94-0034-05 C94-0057-05 C94-0151-05 CK73EB1C225K	CHIP C 1.0UF K ELECTRO 220UF 6.3WV ELECTRO 4.7UF 16WV ELECTRO 100UF 16WV CHIP C 2.2UF K	
C40 C41 C42 C43,44 C45			C90-5575-05 CK73GB1E223K CK73GB1H103K CD04BA1E4R7M CK73GB1H103K	ELECTRO 22UF 16WV CHIP C 0.022UF K CHIP C 0.010UF K ELECTRO 4.7UF 25WV CHIP C 0.010UF K	
C100 C101 C102 C103,104 C105			CK73GB1H102K CK73GB1H103K C90-5568-05 CK73GB1H103K CK73GB1H104K	CHIP C 1000PF K CHIP C 0.010UF K ELECTRO 330UF 6.3WV CHIP C 0.010UF K CHIP C 0.10UF K	
C106 C107 C108-110 C111 C112			CK73FB1C105K CK73GB1H104K CK73GB1H103K CK73GB1H104K CK73GB1H103K	CHIP C 1.0UF K CHIP C 0.10UF K CHIP C 0.010UF K CHIP C 0.10UF K CHIP C 0.010UF K	
C113 C114,115 C201 C201,202 C201,202			CK73GB1H104K CK73GB1H103K CK73GB1H103K CK73GB1H103K CK73GB1H103K	CHIP C 0.10UF K CHIP C 0.010UF K CHIP C 0.010UF K CHIP C 0.010UF K CHIP C 0.010UF K	H1X1C1 K1R1E1 W1M1
C206 C206 C209 C209 C211			CK73GB1H103K CK73GB1H103K C90-5574-05 C90-5574-05 CC73GCH1H331J	CHIP C 0.010UF K CHIP C 0.010UF K ELECTRO 10UF 16WV ELECTRO 10UF 16WV CHIP C 330PF J	K1R1E1 W1M1 K1R1E1 W1M1 K1R1E1
C211 C212 C212 C213 C215-217			CC73GCH1H331J C90-5574-05 C90-5574-05 CK73GB1H103K CK73GB1H103K	CHIP C 330PF J ELECTRO 10UF 16WV ELECTRO 10UF 16WV CHIP C 0.010UF K CHIP C 0.010UF K	W1M1 K1R1E1 W1M1
C219,220 C219,220 C222,223 C224 C225			CC73GCH1H100D CC73GCH1H100D CK73GB1H104K CK73GB1H103K CC73GCH1H151J	CHIP C 10PF D CHIP C 10PF D CHIP C 0.10UF K CHIP C 0.010UF K CHIP C 150PF J	K1R1E1 W1M1

K : KVT-915DVD **R1** : KVT-915DVD **E1** : KVT-925DVD **W1** : KVT-925DVD
M1 : KVT-935DVD **H1** : KVT-935DVD **X1** : KVT-945DVD **C1** : KVT-965DVD

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

ELECTRIC UNIT (X25-956x-xx)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation	Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
C226			CK73GB1A474K	CHIP C 0.47UF K		C425			CK73GB1A224K	CHIP C 0.22UF K	
C227			CK73GB1E223K	CHIP C 0.022UF K		C426			CK73EB1A475K	CHIP C 4.7UF K	
C228			CK73GB1H103K	CHIP C 0.010UF K		C427			CK73FB1C105K	CHIP C 1.0UF K	
C229			C90-5574-05	ELECTRO 10UF 16WV		C428			CK73GB1H103K	CHIP C 0.010UF K	
C230			C94-0052-05	ELECTRO 2.2UF 50WV		C429			CK73GB1H104K	CHIP C 0.10UF K	
C231-243			CK73GB1H103K	CHIP C 0.010UF K	E1W1M1	C430			C94-0039-05	ELECTRO 10UF 16WV	
C231-243			CK73GB1H103K	CHIP C 0.010UF K	H1X1C1	C431,432			CK73EB1A475K	CHIP C 4.7UF K	
C244			C90-5574-05	ELECTRO 10UF 16WV	E1W1M1	C433,434			CK73FB1C105K	CHIP C 1.0UF K	
C244			C90-5574-05	ELECTRO 10UF 16WV	H1X1C1	C436			CK73GB1C104K	CHIP C 0.10UF K	
C245			CK73GB1H103K	CHIP C 0.010UF K	E1W1M1	C437,438			CK73FB1C105K	CHIP C 1.0UF K	
C245			CK73GB1H103K	CHIP C 0.010UF K	H1X1C1	C439			C90-5575-05	ELECTRO 22UF 16WV	
C300			CK73GB1H104K	CHIP C 0.10UF K		C440			C94-0039-05	ELECTRO 10UF 16WV	
C301			C92-0675-05	ELECTRO 4.7UF 25WV		C441-446	*		CD04AX1A100M	ELECTRO 10UF 10WV	
C302			C92-1428-05	ELECTRO 330UF 6.3WV		C447,448			CK73FB1C105K	CHIP C 1.0UF K	
C303			C92-0675-05	ELECTRO 4.7UF 25WV		C449			CK73GB1H103K	CHIP C 0.010UF K	
C304			C92-0093-05	CHIP C 100UF 6.3WV		C450			C90-5572-05	ELECTRO 100UF 10WV	
C305			CK73GB1H104K	CHIP C 0.10UF K		C451-456			C94-0040-05	ELECTRO 22UF 16WV	
C306			C92-0675-05	ELECTRO 4.7UF 25WV		C457			CK73GB1H103K	CHIP C 0.010UF K	
C307			C92-1428-05	ELECTRO 330UF 6.3WV		C459,460			CK73GB1H561K	CHIP C 560PF K	
C308			C92-0675-05	ELECTRO 4.7UF 25WV		C461			CK73GB1H104K	CHIP C 0.10UF K	
C309			C92-0093-05	CHIP C 100UF 6.3WV		C462			CK73GB1A474K	CHIP C 0.47UF K	
C310			CK73GB1H104K	CHIP C 0.10UF K		C465			CD04AY1C220M	ELECTRO 22UF 16WV	
C311			C92-0675-05	ELECTRO 4.7UF 25WV		C466			CK73GB0J105K	CHIP C 1.0UF K	
C312			CK73GB1H104K	CHIP C 0.10UF K		C482			CK73GB1H103K	CHIP C 0.010UF K	
C313			C92-1428-05	ELECTRO 330UF 6.3WV		C483-485			CK73FB1C105K	CHIP C 1.0UF K	
C314,315			C92-0675-05	ELECTRO 4.7UF 25WV		C486			C94-0039-05	ELECTRO 10UF 16WV	
C316			C92-0093-05	CHIP C 100UF 6.3WV		C487			CK73GB1A474K	CHIP C 0.47UF K	
C317			C92-0092-05	CHIP C 47UF 6.3WV		C488			C94-0039-05	ELECTRO 10UF 16WV	
C318			C94-0035-05	ELECTRO 22UF 10WV		C489			CK73GB1H103K	CHIP C 0.010UF K	
C319			C92-0675-05	ELECTRO 4.7UF 25WV		C490			C94-0039-05	ELECTRO 10UF 16WV	
C320			C90-5574-05	ELECTRO 10UF 16WV		C491,492			CK73EB0J106K	CHIP C 10UF K	
C321,322			CK73GB1C104K	CHIP C 0.10UF K		C493-495	*		CD04AX1A100M	ELECTRO 10UF 10WV	
C323			C90-5573-05	ELECTRO 220UF 10WV		C496-499			C94-0179-05	ELECTRO 0.22UF 50WV	
C324			CK73GB1H103K	CHIP C 0.010UF K		C500-503			C94-0054-05	ELECTRO 4.7UF 50WV	
C325			C90-5573-05	ELECTRO 220UF 10WV		C504-506			CK73GB1H103K	CHIP C 0.010UF K	
C326			CK73GB1C104K	CHIP C 0.10UF K		C507			C94-0040-05	ELECTRO 22UF 16WV	
C327			CK73GB1H103K	CHIP C 0.010UF K		C508			CK73GB1H103K	CHIP C 0.010UF K	
C328			C90-5573-05	ELECTRO 220UF 10WV		C509			C90-5573-05	ELECTRO 220UF 10WV	
C329			C90-5568-05	ELECTRO 330UF 6.3WV		C510,511			C90-5577-05	ELECTRO 47UF 16WV	
C330			CK73GB1C104K	CHIP C 0.10UF K		C512	*		C94-0043-05	ELECTRO 100UF 16WV	
C331			C92-0672-05	ELECTRO 22UF 16WV		C513-516			C90-5577-05	ELECTRO 47UF 16WV	
C332,333			CK73GB1C104K	CHIP C 0.10UF K		C517	*		C94-0043-05	ELECTRO 100UF 16WV	
C334			CK73GB1H104K	CHIP C 0.10UF K		C518-523			CK73GB1H103K	CHIP C 0.010UF K	
C342,343			CK73EB0J106K	CHIP C 10UF K		C524,525			C90-5574-05	ELECTRO 10UF 16WV	
C344			CK73GB1H103K	CHIP C 0.010UF K		C526,527			CK73GB1H222K	CHIP C 2200PF K	
C400-405			CK73GB1C104K	CHIP C 0.10UF K		C528-533			C90-5577-05	ELECTRO 47UF 16WV	
C406			CK73GB1H103K	CHIP C 0.010UF K		C534			C90-5568-05	ELECTRO 330UF 6.3WV	
C407,408			CK73GB1A474K	CHIP C 0.47UF K		C535-540			CK73GB1H103K	CHIP C 0.010UF K	
C409			CK73FB1C105K	CHIP C 1.0UF K		C541,542			C94-0040-05	ELECTRO 22UF 16WV	
C410			CK73GB1A474K	CHIP C 0.47UF K		C543,544			C94-0037-05	ELECTRO 47UF 10WV	
C411-414			CK73FB1C105K	CHIP C 1.0UF K		C545			CK73GB1H103K	CHIP C 0.010UF K	
C415			CK73GB1A474K	CHIP C 0.47UF K		C600			CE04DW1H4R7M	ELECTRO 4.7UF 50WV	
C416-422			CK73FB1C105K	CHIP C 1.0UF K		C602			CE04DW1H4R7M	ELECTRO 4.7UF 50WV	
C423			CK73GB1A224K	CHIP C 0.22UF K		C606,607			C94-0054-05	ELECTRO 4.7UF 50WV	
C424			CK73FB1C105K	CHIP C 1.0UF K		C608,609	*		C90-5565-05	ELECTRO 47UF 6.3WV	

K : KVT-915DVD **R1** : KVT-915DVD **E1** : KVT-925DVD **W1** : KVT-925DVD
M1 : KVT-935DVD **H1** : KVT-935DVD **X1** : KVT-945DVD **C1** : KVT-965DVD

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

ELECTRIC UNIT (X25-956x-xx)

Ref. No.	Added	New	Parts No.	Description	Destination
C611,612 C613,614 C615 C700 C701			C94-0040-05 CK73GB1H103K C94-0035-05 CD04AY1C220M C94-0179-05	ELECTRO 22UF 16WV CHIP C 0.010UF K ELECTRO 22UF 10WV ELECTRO 22UF 16WV ELECTRO 0.22UF 50WV	
C704 C705,706 C711,712 C713			CK73GB0J105K CK73GB1H103K CK73GB1H473K CK73GB1A474K	CHIP C 1.0UF K CHIP C 0.010UF K CHIP C 0.047UF K CHIP C 0.47UF K	
CN1 CN11 CN20,21 CN22,23 J1			E40-3246-05 E40-4970-05 E40-9423-05 E40-9421-05 E58-0836-05	PIN ASSY FLAT CABLE CONNECTOR SOCKET FOR PIN ASSY PIN ASSY RECTANGULAR RECEPTACLE	
J2 J200 J300 J301 J500		*	E58-0969-05 E30-6208-15 E58-0964-05 E58-0963-05 E63-0865-05	RECTANGULAR RECEPTACLE CORD WITH PLUG RECTANGULAR RECEPTACLE RECTANGULAR RECEPTACLE PIN JACK	
J501 J502 J600 J601 P600		*	E63-0891-05 E63-0864-05 E56-0843-05 E56-0846-05 E23-0745-05	PIN JACK PIN JACK CYLINDRICAL RECEPTACLE CYLINDRICAL RECEPTACLE TERMINAL	
A1	2H	*	F09-1759-05	FAN	
L1 L2 L100 L101 L102-106			L33-1063-15 L40-2205-34 L40-1005-34 L92-0075-05 L92-0330-05	CHOKE COIL SMALL FIXED INDUCTOR (22UH) SMALL FIXED INDUCTOR CHIP FERRITE CHIP FERRITE	
L200 L200 L203 L204-207 L209			L40-4795-34 L40-4795-34 L33-1123-05 L40-4795-34 L40-1005-34	SMALL FIXED INDUCTOR SMALL FIXED INDUCTOR LINE FILTER COIL SMALL FIXED INDUCTOR SMALL FIXED INDUCTOR	K1R1E1 W1M1
L400,401 L403 X100 X200 X200			L40-1005-34 L92-0330-05 L78-0821-05 L77-2002-05 L77-2002-05	SMALL FIXED INDUCTOR CHIP FERRITE RESONATOR CRYSTAL RESONATOR CRYSTAL RESONATOR	K1R1E1 W1M1
B C D	2H 2H 2H	*	N09-4299-05 N35-3006-46 N35-3023-46	TAPTITE SCREW (PAN HEAD B TI) BINDING HEAD MACHINE SCREW BINDING HEAD MACHINE SCREW	
R1 R2 R3 R4 R5,6			RK73EB2E102J RK73GB2A222J RK73GB2A101J RK73EB2E103J RK73GB2A223J	CHIP R 1.0K J 1/4W CHIP R 2.2K J 1/10W CHIP R 100 J 1/10W CHIP R 10K J 1/4W CHIP R 22K J 1/10W	
R7 R8 R9,10 R11 R12			RK73GB2A222J RK73GB2A104J RK73EB2E750J RK73FB2B221J RK73EB2E472J	CHIP R 2.2K J 1/10W CHIP R 100K J 1/10W CHIP R 75 J 1/4W CHIP R 220 J 1/8W CHIP R 4.7K J 1/4W	

Ref. No.	Added	New	Parts No.	Description	Destination
R13 R14 R15 R16,17 R18			RK73GB2A223J RK73GB2A104J R92-2063-05 R92-0365-05 RK73GB2A153J	CHIP R 22K J 1/10W CHIP R 100K J 1/10W CHIP R 680 J 1/2W CHIP R 1.0K J 1/2W CHIP R 15K J 1/10W	
R19 R20 R21 R22 R23,24			RK73GB2A223J RK73GB2A102J RK73GH1J273D RK73GH1J472D RK73FB2B472J	CHIP R 22K J 1/10W CHIP R 1.0K J 1/10W CHIP R 27K D 1/16W CHIP R 4.7K D 1/16W CHIP R 4.7K J 1/8W	
R25 R25 R26 R27 R27			R92-0366-05 R92-0366-05 RK73GB2A561J RK73GB2A223J RK73GB2A223J	CHIP R 560 J 1W CHIP R 560 J 1W CHIP R 560 J 1/10W CHIP R 22K J 1/10W CHIP R 22K J 1/10W	K1R1M1 H1X1C1
R28 R30 R31 R34 R35			RK73FB2B221J RK73FB2B221J RK73GB2A334J RK73GB2A103J RK73GB2A104J	CHIP R 220 J 1/8W CHIP R 220 J 1/8W CHIP R 330K J 1/10W CHIP R 10K J 1/10W CHIP R 100K J 1/10W	
R36 R37 R38 R39 R40			RK73FB2B561J RK73GB2A153J RK73GB2A103J RK73GB2A223J RK73GB2A473J	CHIP R 560 J 1/8W CHIP R 15K J 1/10W CHIP R 10K J 1/10W CHIP R 22K J 1/10W CHIP R 47K J 1/10W	
R41 R42 R43 R44 R45			RK73GH1J273D RK73GH1J472D RK73GB2A153J RK73GB2A102J RK73GB2A223J	CHIP R 27K D 1/16W CHIP R 4.7K D 1/16W CHIP R 15K J 1/10W CHIP R 1.0K J 1/10W CHIP R 22K J 1/10W	
R46 R47 R48 R49 R50			RK73GB2A104J RK73GH1J243D RK73GH1J432D R92-3243-05 RK73GB2A912J	CHIP R 100K J 1/10W CHIP R 24K D 1/16W CHIP R 4.3K D 1/16W SMALL-RD 3.3K J 1/2W CHIP R 9.1K J 1/10W	
R51 R52 R53 R54 R55			RK73GB2A104J RK73FB2B221J RK73EB2E153J RK73GB2A473J RK73GB2A153J	CHIP R 100K J 1/10W CHIP R 220 J 1/8W CHIP R 15K J 1/4W CHIP R 47K J 1/10W CHIP R 15K J 1/10W	
R56 R57 R58 R59 R60			RK73EB2E123J RK73GH1J153D RK73GH1J512D RK73EB2E472J RK73GB2A104J	CHIP R 12K J 1/4W CHIP R 15K D 1/16W CHIP R 5.1K D 1/16W CHIP R 4.7K J 1/4W CHIP R 100K J 1/10W	
R61 R62 R63 R64 R65			RK73GB2A473J RK73EB2E102J RK73FB2B102J RK73GB2A104J RK73GB2A272J	CHIP R 47K J 1/10W CHIP R 1.0K J 1/4W CHIP R 1.0K J 1/8W CHIP R 100K J 1/10W CHIP R 2.7K J 1/10W	
R66 R67 R68 R69 R70			RK73GB2A470J RK73GB2A752J RK73GB2A913J RK73GB2A563J RK73GB2A470J	CHIP R 47 J 1/10W CHIP R 7.5K J 1/10W CHIP R 91K J 1/10W CHIP R 56K J 1/10W CHIP R 47 J 1/10W	

K : KVT-915DVD **R1** : KVT-915DVD **E1** : KVT-925DVD **W1** : KVT-925DVD
M1 : KVT-935DVD **H1** : KVT-935DVD **X1** : KVT-945DVD **C1** : KVT-965DVD

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

ELECTRIC UNIT (X25-956x-xx)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation	Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
R71			RK73GB2A103J	CHIP R 10K J 1/10W		R205			RK73GB2A222J	CHIP R 2.2K J 1/10W	K1R1E1
R72,73			RK73GB2A913J	CHIP R 91K J 1/10W		R205			RK73GB2A222J	CHIP R 2.2K J 1/10W	W1M1
R74			RK73GB2A473J	CHIP R 47K J 1/10W		R206			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R75			R92-1252-05	CHIP R 0 OHM J 1/16W	E1W1	R207			RK73GB2A332J	CHIP R 3.3K J 1/10W	
R77			R92-1252-05	CHIP R 0 OHM J 1/16W		R211			RK73GB2A223J	CHIP R 22K J 1/10W	
R100-106			RK73GB2A104J	CHIP R 100K J 1/10W	H1X1C1	R214			RK73FB2B102J	CHIP R 1.0K J 1/8W	
R100,101			RK73GB2A104J	CHIP R 100K J 1/10W	K1R1E1	R215			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R100,101			RK73GB2A104J	CHIP R 100K J 1/10W	W1M1	R216			RK73GB2A103J	CHIP R 10K J 1/10W	
R103			RK73GB2A104J	CHIP R 100K J 1/10W	K1R1E1	R217			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R103			RK73GB2A104J	CHIP R 100K J 1/10W	W1M1	R218			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R105			RK73GB2A104J	CHIP R 100K J 1/10W	K1R1E1	R219			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R105			RK73GB2A104J	CHIP R 100K J 1/10W	W1M1	R221			RK73GB2A103J	CHIP R 10K J 1/10W	E1W1M1
R107,108			RK73GB2A222J	CHIP R 2.2K J 1/10W		R221			RK73GB2A103J	CHIP R 10K J 1/10W	H1X1C1
R109			RK73GB2A102J	CHIP R 1.0K J 1/10W		R222			RK73GB2A104J	CHIP R 100K J 1/10W	E1W1M1
R110-113			RK73GB2A104J	CHIP R 100K J 1/10W		R222			RK73GB2A104J	CHIP R 100K J 1/10W	H1X1C1
R114			RK73GB2A223J	CHIP R 22K J 1/10W		R223			RK73GB2A103J	CHIP R 10K J 1/10W	E1W1M1
R115,116			RK73GB2A472J	CHIP R 4.7K J 1/10W		R223			RK73GB2A103J	CHIP R 10K J 1/10W	H1X1C1
R118-122			RK73GB2A104J	CHIP R 100K J 1/10W		R224			RK73GB2A562J	CHIP R 5.6K J 1/10W	E1W1M1
R123,124			RK73GB2A101J	CHIP R 100 J 1/10W		R224			RK73GB2A562J	CHIP R 5.6K J 1/10W	H1X1C1
R125			RK73GB2A102J	CHIP R 1.0K J 1/10W		R225			RK73GB2A153J	CHIP R 15K J 1/10W	E1W1M1
R127			RK73GB2A102J	CHIP R 1.0K J 1/10W		R225			RK73GB2A153J	CHIP R 15K J 1/10W	H1X1C1
R129			R92-1252-05	CHIP R 0 OHM J 1/16W		R226			RK73GB2A823J	CHIP R 82K J 1/10W	E1W1M1
R130-132			RK73GB2A102J	CHIP R 1.0K J 1/10W		R226			RK73GB2A823J	CHIP R 82K J 1/10W	H1X1C1
R133			RK73GB2A101J	CHIP R 100 J 1/10W		R227			RK73GB2A103J	CHIP R 10K J 1/10W	E1W1M1
R134			RK73GB2A103J	CHIP R 10K J 1/10W		R227			RK73GB2A103J	CHIP R 10K J 1/10W	H1X1C1
R135			RK73GB2A101J	CHIP R 100 J 1/10W		R228			RK73GB2A333J	CHIP R 33K J 1/10W	E1W1M1
R136			RK73GB2A103J	CHIP R 10K J 1/10W		R228			RK73GB2A333J	CHIP R 33K J 1/10W	H1X1C1
R138			R92-1252-05	CHIP R 0 OHM J 1/16W		R229			RK73GB2A272J	CHIP R 2.7K J 1/10W	E1W1M1
R140,141			RK73GB2A102J	CHIP R 1.0K J 1/10W		R229			RK73GB2A272J	CHIP R 2.7K J 1/10W	H1X1C1
R142			RK73GB2A104J	CHIP R 100K J 1/10W		R230-233			RK73GB2A103J	CHIP R 10K J 1/10W	E1W1M1
R143,144			RK73GB2A101J	CHIP R 100 J 1/10W		R230-233			RK73GB2A103J	CHIP R 10K J 1/10W	H1X1C1
R145,146			RK73GB2A103J	CHIP R 10K J 1/10W		R234			RK73GB2A222J	CHIP R 2.2K J 1/10W	E1W1M1
R147,148			RK73GB2A101J	CHIP R 100 J 1/10W		R234			RK73GB2A222J	CHIP R 2.2K J 1/10W	H1X1C1
R149			RK73GB2A104J	CHIP R 100K J 1/10W		R300			RK73FB2B100J	CHIP R 10 J 1/8W	
R150,151			RK73GB2A102J	CHIP R 1.0K J 1/10W	E1W1M1	R301			RK73FB2B4R7J	CHIP R 4.7 J 1/8W	
R150,151			RK73GB2A102J	CHIP R 1.0K J 1/10W	X1C1	R302,303			RK73FB2B100J	CHIP R 10 J 1/8W	
R155			RK73GB2A102J	CHIP R 1.0K J 1/10W	M1X1C1	R304			RK73FB2B4R7J	CHIP R 4.7 J 1/8W	
R155,156			RK73GB2A102J	CHIP R 1.0K J 1/10W	E1W1	R305,306			RK73FB2B100J	CHIP R 10 J 1/8W	
R159,160			RK73GB2A562J	CHIP R 5.6K J 1/10W		R307			RK73FB2B4R7J	CHIP R 4.7 J 1/8W	
R161			RK73GB2A103J	CHIP R 10K J 1/10W		R308			RK73FB2B100J	CHIP R 10 J 1/8W	
R162			RK73GB2A104J	CHIP R 100K J 1/10W	R1M1H1	R309			RK73EB2E100J	CHIP R 10 J 1/4W	
R162			RK73GB2A104J	CHIP R 100K J 1/10W	X1C1	R310			RK73FB2B4R7J	CHIP R 4.7 J 1/8W	
R163			RK73GB2A104J	CHIP R 100K J 1/10W	K1	R311			RK73FB2B100J	CHIP R 10 J 1/8W	
R163,164			RK73GB2A104J	CHIP R 100K J 1/10W	E1W1	R312-316			RK73GB2A622J	CHIP R 6.2K J 1/10W	
R164			RK73GB2A104J	CHIP R 100K J 1/10W	R1X1C1	R317-319			RK73GB2A223J	CHIP R 22K J 1/10W	
R165			RK73GB2A104J	CHIP R 100K J 1/10W	M1	R320-327			RK73EB2E101J	CHIP R 100 J 1/4W	
R165,166			RK73GB2A104J	CHIP R 100K J 1/10W	K1H1	R328-330			RK73EB2E750J	CHIP R 75 J 1/4W	
R166			RK73GB2A104J	CHIP R 100K J 1/10W	R1	R331			RK73GB2A750J	CHIP R 75 J 1/10W	
R167			RK73GB2A104J	CHIP R 100K J 1/10W	E1W1M1	R332			RK73EB2E750J	CHIP R 75 J 1/4W	
R167			RK73GB2A104J	CHIP R 100K J 1/10W	X1C1	R333,334			RK73EB2E102J	CHIP R 1.0K J 1/4W	
R169-174			R92-1252-05	CHIP R 0 OHM J 1/16W		R335-339			RK73GB2A133J	CHIP R 13K J 1/10W	
R175,176			RK73GB2A104J	CHIP R 100K J 1/10W		R340			RK73GB2A103J	CHIP R 10K J 1/10W	
R202,203			RK73GB2A222J	CHIP R 2.2K J 1/10W	K1R1E1	R343			RK73EB2E100J	CHIP R 10 J 1/4W	
R202,203			RK73GB2A222J	CHIP R 2.2K J 1/10W	W1M1	R344			RK73GB2A473J	CHIP R 47K J 1/10W	
R204			RK73GB2A472J	CHIP R 4.7K J 1/10W		R345,346			RK73GB2A102J	CHIP R 1.0K J 1/10W	

K : KVT-915DVD **R1** : KVT-915DVD **E1** : KVT-925DVD **W1** : KVT-925DVD
M1 : KVT-935DVD **H1** : KVT-935DVD **X1** : KVT-945DVD **C1** : KVT-965DVD

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

ELECTRIC UNIT (X25-956x-xx)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
R347,348 R349-351 R400-402 R403 R404-416			RK73GB2A471J RK73EB2E100J RK73GB2A680J RK73GB2A152J RK73GB2A562J	CHIP R 470 J 1/10W CHIP R 10 J 1/4W CHIP R 68 J 1/10W CHIP R 1.5K J 1/10W CHIP R 5.6K J 1/10W	
R417 R418 R419 R422,423 R424			R92-1252-05 RK73GB2A562J R92-1252-05 RK73GB2A223J RK73GB2A102J	CHIP R 0 OHM J 1/16W CHIP R 5.6K J 1/10W CHIP R 0 OHM J 1/16W CHIP R 22K J 1/10W CHIP R 1.0K J 1/10W	
R425,426 R427-434 R435-440 R441-446 R448			RK73GB2A472J RK73GB2A103J RK73GB2A471J RK73GB2A223J RK73GB2A473J	CHIP R 4.7K J 1/10W CHIP R 10K J 1/10W CHIP R 470 J 1/10W CHIP R 22K J 1/10W CHIP R 47K J 1/10W	
R451 R452 R453 R454 R455			RK73GB2A242J RK73GB2A101J RK73GB2A103J RK73GB2A562J RK73GB2A103J	CHIP R 2.4K J 1/10W CHIP R 100 J 1/10W CHIP R 10K J 1/10W CHIP R 5.6K J 1/10W CHIP R 10K J 1/10W	
R456-459 R460,461 R462 R463 R464			RK73GB2A102J RK73GB2A103J RK73GB2A682J RK73GB2A103J RK73GB2A104J	CHIP R 1.0K J 1/10W CHIP R 10K J 1/10W CHIP R 6.8K J 1/10W CHIP R 10K J 1/10W CHIP R 100K J 1/10W	
R465 R466-468 R469-472 R473,474 R475			RK73GB2A102J RK73GB2A103J RK73GB2A223J RK73GB2A103J RK73GB2A473J	CHIP R 1.0K J 1/10W CHIP R 10K J 1/10W CHIP R 22K J 1/10W CHIP R 10K J 1/10W CHIP R 47K J 1/10W	
R476 R477 R478 R479 R480			RK73EB2E102J RK73GB2A104J RK73GB2A103J RK73GB2A102J RK73GB2A682J	CHIP R 1.0K J 1/4W CHIP R 100K J 1/10W CHIP R 10K J 1/10W CHIP R 1.0K J 1/10W CHIP R 6.8K J 1/10W	
R481,482 R500 R501 R502 R503			RK73GB2A103J RK73EB2E102J RK73EB2E101J RK73EB2E102J RK73EB2E101J	CHIP R 10K J 1/10W CHIP R 1.0K J 1/4W CHIP R 100 J 1/4W CHIP R 1.0K J 1/4W CHIP R 100 J 1/4W	
R504,505 R506,507 R508-513 R514-519 R520,521			RK73EB2E102J RK73GB2A750J RK73FB2B473J RK73FB2B103J RK73GB2A361J	CHIP R 1.0K J 1/4W CHIP R 75 J 1/10W CHIP R 47K J 1/8W CHIP R 10K J 1/8W CHIP R 360 J 1/10W	
R522-527 R528,529 R530-532 R533-538 R539			RK73FB2B223J RK73GB2A223J RK73GB2A101J RK73FB2B820J RK73GB2A361J	CHIP R 22K J 1/8W CHIP R 22K J 1/10W CHIP R 100 J 1/10W CHIP R 82 J 1/8W CHIP R 360 J 1/10W	
R540 R541 R600-602 R603 R604,605			RK73EB2E750J RK73GB2A361J RK73EB2E102J RK73EB2E4R7J RK73EB2E102J	CHIP R 75 J 1/4W CHIP R 360 J 1/10W CHIP R 1.0K J 1/4W CHIP R 4.7 J 1/4W CHIP R 1.0K J 1/4W	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
R606 R607 R608 R609 R610			RK73EB2E100J RK73EB2E4R7J RK73EB2E100J RK73EB2E472J RK73EB2E101J	CHIP R 10 J 1/4W CHIP R 4.7 J 1/4W CHIP R 10 J 1/4W CHIP R 4.7K J 1/4W CHIP R 100 J 1/4W	
R611-614 R615,616 R617 R700 R702			RK73EB2E472J RK73EB2E101J RK73GB2A750J RK73GB2A223J RK73GB2A103J	CHIP R 4.7K J 1/4W CHIP R 100 J 1/4W CHIP R 75 J 1/10W CHIP R 22K J 1/10W CHIP R 10K J 1/10W	
R703 R704 R705 R706			RK73GB2A101J RK73GB2A102J RK73GB2A562J RK73GB2A103J	CHIP R 100 J 1/10W CHIP R 1.0K J 1/10W CHIP R 5.6K J 1/10W CHIP R 10K J 1/10W	
D1 D2 D3 D4 D5,6			RM10ZLF MA8056-M RB160L-40 MA8056-M D1F60	DIODE ZENER DIODE DIODE ZENER DIODE DIODE	
D5,6 D7 D7 D8,9 D8,9			1SR154-400 DAP202U MA142WA D1F60 1SR154-400	DIODE DIODE DIODE DIODE DIODE	
D10 D11 D12 D13 D13			MA8068-M MA8056-M MA8047-M DAN202U MA142WK	ZENER DIODE ZENER DIODE ZENER DIODE DIODE DIODE	
D14 D15 D15 D16 D17			MA8068-M DAP202U MA142WA MA3062WA MA3110-M	ZENER DIODE DIODE DIODE ZENER DIODE ZENER DIODE	
D18 D19 D101-104 D101-104 D105,106			MA8056-M MA8068-M DAP202U MA142WA DAN202U	ZENER DIODE ZENER DIODE DIODE DIODE DIODE	
D105,106 D107 D107 D201 D202			MA142WK DAP202U MA142WA IMSA-6801 DAN202U	DIODE DIODE DIODE SURGE ABSORBER DIODE	E1W1M1
D202 D202 D202 D300-311 D312			DAN202U MA142WK MA142WK DA204U MA3062WA	DIODE DIODE DIODE DIODE ZENER DIODE	H1X1C1 E1W1M1 H1X1C1
D316 D317-319 D320-323 D325 D325			MA3062-M MA3062WA DA204U DAP202U MA142WA	ZENER DIODE ZENER DIODE DIODE DIODE DIODE	

K : KVT-915DVD **R1** : KVT-915DVD **E1** : KVT-925DVD **W1** : KVT-925DVD
M1 : KVT-935DVD **H1** : KVT-935DVD **X1** : KVT-945DVD **C1** : KVT-965DVD

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

ELECTRIC UNIT (X25-956x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination	Ref. No.	Add	New	Parts No.	Description	Destination
D326,327			MA3062WA	ZENER DIODE		Q4			2SB1443	TRANSISTOR	
D400			DA204U	DIODE		Q5			DTA124EUA	DIGITAL TRANSISTOR	
D402			DA204U	DIODE		Q5			UN5112	DIGITAL TRANSISTOR	
D404			DA204U	DIODE		Q6			2SB1184	TRANSISTOR	
D405-414			D1F60	DIODE		Q7			2SC4081	TRANSISTOR	
D405-414			1SR154-400	DIODE		Q8			DTC124EUA	DIGITAL TRANSISTOR	
D415-418			DAP202U	DIODE		Q8			UN5212	DIGITAL TRANSISTOR	
D415-418			MA142WA	DIODE		Q9			2SA1906	TRANSISTOR	
D422			DAP202U	DIODE		Q10			DTC114YUA	DIGITAL TRANSISTOR	
D422			MA142WA	DIODE		Q10			UN5214	DIGITAL TRANSISTOR	
D423			MA8068-M	ZENER DIODE		Q11			2SB1443	TRANSISTOR	
D425,426			MA3062WA	ZENER DIODE		Q12			DTC114YUA	DIGITAL TRANSISTOR	K1R1M1
D500-505			DA204U	DIODE		Q12			DTC114YUA	DIGITAL TRANSISTOR	H1X1C1
D506-508			DAP202U	DIODE		Q12			UN5214	DIGITAL TRANSISTOR	K1R1M1
D506-508			MA142WA	DIODE		Q12			UN5214	DIGITAL TRANSISTOR	H1X1C1
D509-516		*	MAZ9120H	ZENER DIODE		Q13			2SA1576A	TRANSISTOR	
D600-605			DA204U	DIODE		Q14			DTC114YUA	DIGITAL TRANSISTOR	
D606-612			MA3062WA	ZENER DIODE		Q14			UN5214	DIGITAL TRANSISTOR	
D700,701			DAP202U	DIODE		Q15			DTA114EUA	DIGITAL TRANSISTOR	
D700,701			MA142WA	DIODE		Q15			UN5111	DIGITAL TRANSISTOR	
IC1			M5237ML	ANALOGUE IC		Q16			2SA1576A	TRANSISTOR	
IC2			MM1108XFFE	ANALOGUE IC		Q17			2SB1240	TRANSISTOR	
IC3-5			M5237ML	ANALOGUE IC		Q17,18			2SB1240	TRANSISTOR	
IC6			ICL7660SIBA	ANALOGUE IC		Q17,18			2SB1240	TRANSISTOR	
IC6			TC7662BEOA	ANALOGUE IC		Q19			2SB1548(P)	TRANSISTOR	
IC10		*	703030BYGF-M12	MICROCONTROLLER IC		Q20			2SA1906	TRANSISTOR	
IC12		*	S-24CS02AFT	MEMORY IC	E1W1	Q21			2SC4081	TRANSISTOR	
IC13			S-80837CNNB	MOS-IC		Q22			DTA123JK	DIGITAL TRANSISTOR	
IC14			TC7W14FU	MOS-IC		Q23			2SC4081	TRANSISTOR	
IC15		*	SN74LV10APWR	MOS-IC		Q24			2SB1548(P)	TRANSISTOR	
IC16			TC7W08FU	MOS-IC		Q25			DTA124EUA	DIGITAL TRANSISTOR	
IC21			TDA7479D	ANALOGUE IC	K1R1E1	Q25			UN5112	DIGITAL TRANSISTOR	
IC21			TDA7479D	ANALOGUE IC	W1M1	Q26			DTC144EUA	DIGITAL TRANSISTOR	
IC22			TDA7407D	ANALOGUE IC		Q26			UN5213	DIGITAL TRANSISTOR	
IC23			NJM4565M-TE2	ANALOGUE IC	E1W1M1	Q27			DTC124EUA	DIGITAL TRANSISTOR	
IC23			NJM4565M-TE2	ANALOGUE IC	H1X1C1	Q27			UN5212	DIGITAL TRANSISTOR	
IC31-34			BA3121F	ANALOGUE IC		Q28			2SB1443	TRANSISTOR	
IC36,37			NJM2267V	ANALOGUE IC		Q29			2SC4081	TRANSISTOR	
IC40			MM1234XFBF	ANALOGUE IC		Q30			2SA1576A	TRANSISTOR	
IC41			CXA2069Q	MOS-IC		Q31			2SC4081	TRANSISTOR	
IC42			NJM4580V	ANALOGUE IC		Q32			2SA1576A	TRANSISTOR	
IC43			TC9215AF	MOS-IC		Q33			2SC4081	TRANSISTOR	
IC44			TDA7501	ANALOGUE IC		Q34			2SA1576A	TRANSISTOR	
IC45			TA8273H	ANALOGUE IC		Q35			2SC4081	TRANSISTOR	
IC47			NJM4565V	ANALOGUE IC		Q36			DTC144EUA	DIGITAL TRANSISTOR	
IC50,51			BA3121F	ANALOGUE IC		Q36			UN5213	DIGITAL TRANSISTOR	
IC52-54			NJM4565M-TE2	ANALOGUE IC		Q37			DTA124EUA	DIGITAL TRANSISTOR	
IC60			TC7SET08FU	MOS-IC		Q37			UN5112	DIGITAL TRANSISTOR	
IC61,62			BA3121F	ANALOGUE IC		Q100-104			DTA124EUA	DIGITAL TRANSISTOR	
IC63			TC7SH14FU	MOS-IC		Q100-104			UN5112	DIGITAL TRANSISTOR	
IC70			TA8263BH	ANALOGUE IC		Q201			2SC4081	TRANSISTOR	
Q1			DTC144EUA	DIGITAL TRANSISTOR		Q203			2SB1188(Q,R)	TRANSISTOR	
Q1			UN5213	DIGITAL TRANSISTOR		Q204			DTC124EUA	DIGITAL TRANSISTOR	
Q2			2SC4081	TRANSISTOR		Q204			UN5212	DIGITAL TRANSISTOR	
Q3			2SA1576A	TRANSISTOR		Q206			2SC4081	TRANSISTOR	

K : KVT-915DVD R1 : KVT-915DVD E1 : KVT-925DVD W1 : KVT-925DVD
M1 : KVT-935DVD H1 : KVT-935DVD X1 : KVT-945DVD C1 : KVT-965DVD

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

ELECTRIC UNIT (X25-956x-xx)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
Q207			DTC124EUA	DIGITAL TRANSISTOR	
Q207			UN5212	DIGITAL TRANSISTOR	
Q210			2SC4081	TRANSISTOR	E1W1M1
Q210			2SC4081	TRANSISTOR	H1X1C1
Q211			DTC114EUA	DIGITAL TRANSISTOR	E1W1M1
Q211			DTC114EUA	DIGITAL TRANSISTOR	H1X1C1
Q211			UN5211	DIGITAL TRANSISTOR	E1W1M1
Q211			UN5211	DIGITAL TRANSISTOR	H1X1C1
Q212			DTA124EUA	DIGITAL TRANSISTOR	E1W1M1
Q212			DTA124EUA	DIGITAL TRANSISTOR	H1X1C1
Q212			UN5112	DIGITAL TRANSISTOR	E1W1M1
Q212			UN5112	DIGITAL TRANSISTOR	H1X1C1
Q400,401			2SA1576A	TRANSISTOR	
Q402-407			DTC323TU	DIGITAL TRANSISTOR	
Q408			DTA124EUA	DIGITAL TRANSISTOR	
Q408			UN5112	DIGITAL TRANSISTOR	
Q410,411			DTC323TU	DIGITAL TRANSISTOR	
Q500			DTA124EUA	DIGITAL TRANSISTOR	
Q500			UN5112	DIGITAL TRANSISTOR	
Q501,502			DTC323TU	DIGITAL TRANSISTOR	
Q503			2SA1576A	TRANSISTOR	
TH41			PT722A100C	POSITIVE RESISTOR	
TH700			PT722A100C	POSITIVE RESISTOR	
A200			W02-3416-05	FM/AM FRONT-END	K1R1
A200			W02-3417-05	FM/AM FRONT-END	E1W1M1
A200			W02-3417-05	FM/AM FRONT-END	H1X1C1
VIDEO UNIT (X35-4280-01)					
C1,2			CK73DF1E106Z	CHIP C 10UF Z	
C3			C93-1281-05	CHIP C 0.47UF K	
C5			C93-1273-05	CHIP C 15PF J	
C6			C93-1278-05	CHIP C 0.018UF K	
C7			CK73GB1E473K	CHIP C 0.047UF K	
C8			C93-1269-05	CHIP C 220PF J	
C9			CK73GB0J225K	CHIP C 2.2UF K	
C10			CK73GB1H103K	CHIP C 0.010UF K	
C11			CK73GB0J225K	CHIP C 2.2UF K	
C13			CK73GB1A474K	CHIP C 0.47UF K	
C14			CK73HB1C103K	CHIP C 0.010UF K	
C15			CK73GB1E473K	CHIP C 0.047UF K	
C16			CK73HB1C183K	CHIP C 0.018UF K	
C17			CK73HB1C103K	CHIP C 0.010UF K	
C18			C93-1281-05	CHIP C 0.47UF K	
C21			CK73GB0J225K	CHIP C 2.2UF K	
C22			CK73HB1H152K	CHIP C 1500PF K	
C23			CK73DF1E106Z	CHIP C 10UF Z	
C24			CK73GB1H103K	CHIP C 0.010UF K	
C25			C93-1270-05	CHIP C 3300PF K	
C26			CK73GB1H103K	CHIP C 0.010UF K	
C101			CK73GB1H104K	CHIP C 0.10UF K	
C102			CK73DF1C106Z	CHIP C 10UF Z	
C103			CK73GB1H103K	CHIP C 0.010UF K	
C104			C93-1210-05	CHIP C 10UF K	
C105			CE32AU1C390M	CHIP EL 39UF 16WV	
C106			CK73GB1H103K	CHIP C 0.010UF K	
Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
C107			C93-1210-05	CHIP C 10UF K	
C108			CE32AU1C390M	CHIP EL 39UF 16WV	
C109			CK73FB1C105K	CHIP C 1.0UF K	
C110			CK73GB1H103K	CHIP C 0.010UF K	
C111			C93-1210-05	CHIP C 10UF K	
C112			CK73FB1E154K	CHIP C 0.15UF K	
C113			CK73EB1C225K	CHIP C 2.2UF K	
C114			CK73FB1C224K	CHIP C 0.22UF K	
C115			CK73GB1H104K	CHIP C 0.10UF K	
C116			CE32BB0J221M	CHIP EL 220UF 6.3WV	
C118			CK73GB1H103K	CHIP C 0.010UF K	
C210			CK73GB1H103K	CHIP C 0.010UF K	
C211			CK73EB1A475K	CHIP C 4.7UF K	
C230			CK73GB1H103K	CHIP C 0.010UF K	
C231,232			CK73DF1E106Z	CHIP C 10UF Z	
C233			CK73GB1H103K	CHIP C 0.010UF K	
C234			CC73HCH1H560J	CHIP C 56PF J	
C301,302			CK73DF1E106Z	CHIP C 10UF Z	
C303			CK73GB1H103K	CHIP C 0.010UF K	
C304			CK73GB1H104K	CHIP C 0.10UF K	
C305,306			CK73GB1H103K	CHIP C 0.010UF K	
C307			CE32BB0J221M	CHIP EL 220UF 6.3WV	
C308			CK73GB1H103K	CHIP C 0.010UF K	
C309			CC73HCH1H100D	CHIP C 10PF D	
C310			CK73HB1H561K	CHIP C 560PF K	
C311			CK73HB1C103K	CHIP C 0.010UF K	
C312			CK73GB1H103K	CHIP C 0.010UF K	
C313,314			CK73HB1C103K	CHIP C 0.010UF K	
C315,316			CK73GB1H104K	CHIP C 0.10UF K	
C317			CK73HB1C103K	CHIP C 0.010UF K	
C318,319			CK73GB1H104K	CHIP C 0.10UF K	
C320			CC73HCH1H560J	CHIP C 56PF J	
C321			CK73GB1H104K	CHIP C 0.10UF K	
C322			CC73GCH1E102J	CHIP C 1000PF J	
C323			CC73HCH1H101J	CHIP C 100PF J	
C324,325			CK73HB1C103K	CHIP C 0.010UF K	
C326			CC73GCH1H681J	CHIP C 680PF J	
C327,328			CK73GB1H104K	CHIP C 0.10UF K	
C329			CC73HCH1H390J	CHIP C 39PF J	
C330			CE32BB0J221M	CHIP EL 220UF 6.3WV	
C331,332			CC73HCH1H390J	CHIP C 39PF J	
C333			CK73GB1H104K	CHIP C 0.10UF K	
C334			CK73GB1H103K	CHIP C 0.010UF K	
C335,336			CK73GB1H104K	CHIP C 0.10UF K	
C338			CK73DF1C106Z	CHIP C 10UF Z	
C339			CK73HB1C103K	CHIP C 0.010UF K	
C401			CK73HB1H102K	CHIP C 1000PF K	
C421,422			CK73FB1C105K	CHIP C 1.0UF K	
C423			CK73EB0J106K	CHIP C 10UF K	
C424			CK73HB1C103K	CHIP C 0.010UF K	
C425			CK73FB1C105K	CHIP C 1.0UF K	
C426			CK73EB1E105K	CHIP C 1.0UF K	
C427			CK73FB1A225K	CHIP C 2.2UF K	
C428			CK73EB0J106K	CHIP C 10UF K	
C501-503			CK73HB1C103K	CHIP C 0.010UF K	

K : KVT-915DVD **R1** : KVT-915DVD **E1** : KVT-925DVD **W1** : KVT-925DVD
M1 : KVT-935DVD **H1** : KVT-935DVD **X1** : KVT-945DVD **C1** : KVT-965DVD

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

VIDEO UNIT (X35-4280-01)

Ref. No.	Add	New	Parts No.	Description	Destination	Ref. No.	Add	New	Parts No.	Description	Destination
C504			CK73EB0J106K	CHIP C 10UF K		R239			RK73HB1J123J	CHIP R 12K J 1/16W	
C505			CK73HB1H271K	CHIP C 270PF K		R240			RK73HB1J220J	CHIP R 22 J 1/16W	
CN1			E40-9797-05	PIN ASSY		R241			RK73HB1J123J	CHIP R 12K J 1/16W	
CN301			E41-0341-05	FLAT CABLE CONNECTOR		R242			RK73HB1J220J	CHIP R 22 J 1/16W	
CN302			E41-0133-05	FLAT CABLE CONNECTOR		R253			RK73HB1J000J	CHIP R 0.0 J 1/16W	
CN303			E41-0404-05	FLAT CABLE CONNECTOR		R307			RK73HB1J101J	CHIP R 100 J 1/16W	
CN304			E40-9623-05	FLAT CABLE CONNECTOR		R308			RK73HB1J621J	CHIP R 620 J 1/16W	
CN305			E40-9708-05	PIN ASSY		R311			RK73HB1J000J	CHIP R 0.0 J 1/16W	
CN501	*		E41-2087-05	FLAT CABLE CONNECTOR		R313			RK73HB1J000J	CHIP R 0.0 J 1/16W	
CN502			E41-0133-05	FLAT CABLE CONNECTOR		R314,315			RK73HB1J103J	CHIP R 10K J 1/16W	
CN503			E41-0455-05	FLAT CABLE CONNECTOR		R316			RK73HB1J102J	CHIP R 1.0K J 1/16W	
CN601			E41-0340-05	FLAT CABLE CONNECTOR		R318			RK73HB1J102J	CHIP R 1.0K J 1/16W	
P1,2	*		E29-1963-05	PINCHER TIP		R320			RK73HB1J000J	CHIP R 0.0 J 1/16W	
F1			F53-0251-05	FUSE		R321			RK73HB1J472J	CHIP R 4.7K J 1/16W	
CF308			L72-0786-05	CERAMIC FILTER		R323			RK73HB1J000J	CHIP R 0.0 J 1/16W	
L1			L19-0727-05	TRANSFORMER FOR CONVERTER		R324,325			RK73HB1J472J	CHIP R 4.7K J 1/16W	
L101,102			L41-3392-13	SMALL FIXED INDUCTOR		R326			RK73HB1J473J	CHIP R 47K J 1/16W	
L103			L41-4792-13	SMALL FIXED INDUCTOR		R327			RK73HB1J683J	CHIP R 68K J 1/16W	
L104-106			L40-1001-78	SMALL FIXED INDUCTOR (10UH)		R328			RK73HB1J153J	CHIP R 15K J 1/16W	
L301-303			L79-0982-05	LC FILTER		R329			RK73HB1J101J	CHIP R 100 J 1/16W	
L306			L40-5695-34	SMALL FIXED INDUCTOR (5.6UH)		R330			RK73HB1J182J	CHIP R 1.8K J 1/16W	
L309			L79-0982-05	LC FILTER		R331			RK73HB1J331J	CHIP R 330 J 1/16W	
L401			L40-1001-78	SMALL FIXED INDUCTOR (10UH)		R332			RK73HB1J332J	CHIP R 3.3K J 1/16W	
L501			L40-1001-78	SMALL FIXED INDUCTOR (10UH)		R333-335			RK73HB1J000J	CHIP R 0.0 J 1/16W	
CP301,302			R90-1094-05	MULTI-COMP 1K X4		R337,338			RK73HB1J101J	CHIP R 100 J 1/16W	
CP303			R90-1524-05	MULTI-COMP 220 X4		R339			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R1			RK73HB1J512J	CHIP R 5.1K J 1/16W		R340-344			RK73HB1J101J	CHIP R 100 J 1/16W	
R3			RK73HB1J220J	CHIP R 22 J 1/16W		R345			RK73HB1J683J	CHIP R 68K J 1/16W	
R4			RN73GH1J153D	CHIP R 15K D 1/16W		R346			RK73HB1J105J	CHIP R 1.0M J 1/16W	
R5			RK73HB1J153J	CHIP R 15K J 1/16W		R347			RK73HB1J153J	CHIP R 15K J 1/16W	
R6			RN73GH1J623D	CHIP R 62K D 1/16W		R348			RK73HB1J362J	CHIP R 3.6K J 1/16W	
R7			RK73HB1J220J	CHIP R 22 J 1/16W		R349			RK73HB1J103J	CHIP R 10K J 1/16W	
R8			RK73HB1J512J	CHIP R 5.1K J 1/16W		R350-352			RK73HB1J101J	CHIP R 100 J 1/16W	
R9			RK73GH1J244D	CHIP R 240K D 1/16W		R353			RK73HB1J100J	CHIP R 10 J 1/16W	
R10			RK73HB1J331J	CHIP R 330 J 1/16W		R359,360			RK73HB1J100J	CHIP R 10 J 1/16W	
R11			RK73HB1J220J	CHIP R 22 J 1/16W		R361			RK73GB2A562J	CHIP R 5.6K J 1/10W	
R12			RK73HB1J105J	CHIP R 1.0M J 1/16W		R362			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R13			RK73HB1J220J	CHIP R 22 J 1/16W		R367-369			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R14			RN73GH1J4220D	CHIP R 422.0 D 1/16W		R371			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R15			RN73GH1J513D	CHIP R 51K D 1/16W		R373,374			RK73HB1J561J	CHIP R 560 J 1/16W	
R16,17			RK73HB1J220J	CHIP R 22 J 1/16W		R401			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R18			RK73HB1J222J	CHIP R 2.2K J 1/16W		R402			RK73HB1J432J	CHIP R 4.3K J 1/16W	
R101			RK73GH1J104D	CHIP R 100K D 1/16W		R403			RK73HB1J912J	CHIP R 9.1K J 1/16W	
R102			RK73GH1J113D	CHIP R 11K D 1/16W		R404			RK73HB1J303J	CHIP R 30K J 1/16W	
R103			RK73GH1J184D	CHIP R 180K D 1/16W		R421			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R104			RK73GH1J133D	CHIP R 13K D 1/16W		R422			RK73HB1J154J	CHIP R 150K J 1/16W	
R105			RK73HB1J473J	CHIP R 47K J 1/16W		R423			RK73HB1J104J	CHIP R 100K J 1/16W	
R106			RK73HB1J103J	CHIP R 10K J 1/16W		R441			RK73GB2A681J	CHIP R 680 J 1/10W	
R218			RK73HB1J222J	CHIP R 2.2K J 1/16W		R451,452			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R219			RK73HB1J513J	CHIP R 51K J 1/16W		R453			RK73GB2A681J	CHIP R 680 J 1/10W	
R234			RN73GH1J472D	CHIP R 4.7K D 1/16W		R454			RK73GB2A331J	CHIP R 330 J 1/10W	
R235			RN73GH1J912D	CHIP R 9.1K D 1/16W		R455			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R236			RN73GH1J222D	CHIP R 2.2K D 1/16W		R456			RK73GB2A331J	CHIP R 330 J 1/10W	
						R501,502			RK73HB1J333J	CHIP R 33K J 1/16W	
						R503-506			RK73EB2E100J	CHIP R 10 J 1/4W	

K : KVT-915DVD R1 : KVT-915DVD E1 : KVT-925DVD W1 : KVT-925DVD
M1 : KVT-935DVD H1 : KVT-935DVD X1 : KVT-945DVD C1 : KVT-965DVD

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

VIDEO UNIT (X35-4280-01)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
R641 R642 R651 R652 R654			RK73GB2A621J RK73HB1J391J RK73HB1J000J RK73FB2B471J RK73GB2A301J	CHIP R 620 J 1/10W CHIP R 390 J 1/16W CHIP R 0.0 J 1/16W CHIP R 470 J 1/8W CHIP R 300 J 1/10W	
VR203 VR301 W107 W216,217 W301-304			R32-0235-05 R32-0245-05 R92-2052-05 R92-2052-05 R92-1252-05	SEMI FIXED VARIABLE RESISTOR SEMI FIXED VARIABLE RESISTOR CHIP R 0 OHM J 1/10W CHIP R 0 OHM J 1/10W CHIP R 0 OHM J 1/16W	
W310 W354-358			R92-1252-05 R92-1252-05	CHIP R 0 OHM J 1/16W CHIP R 0 OHM J 1/16W	
S401-404 S601-603			S70-0856-05 S70-0856-05	TACT SWITCH TACT SWITCH	
D1,2 D3 D4,5 D6 D7			MA8047-M MA115 DA204U MA2S784 MA8056-M	ZENER DIODE DIODE DIODE DIODE ZENER DIODE	
D8 D9 D10 D101 D102-104		*	1608SGXA DA204U * AVR1005270MAA * MA2ZD18 MA2S784	ZENER DIODE DIODE VARISTOR DIODE DIODE	
D301 D302,303 D304 D309 D310-313			MA8051-M DA204U MA8051-M 1SV231 1608SGXA	ZENER DIODE DIODE ZENER DIODE VARIABLE CAPACITANCE DIODE ZENER DIODE	
D314 D401 D403-410 D501-504 IC1			DA204U 1608SGXA AVRM1608180M6A MA8051-M OZ9601S-C	DIODE ZENER DIODE VARISTOR ZENER DIODE ANALOGUE IC	
IC101 IC203 IC301 IC302 IC303			LT1947 TA75W558FU TC200G02AF0104 TC7SH08FU NJM2107F	ANALOGUE IC ANALOGUE IC MOS-IC MOS-IC ANALOGUE IC	
IC304 IC401 Q1 Q2,3 Q5			TC7WH14FU TPS819 2SC4081 SI5513DC 2SC4081	MOS-IC ANALOGUE IC TRANSISTOR DUAL FET TRANSISTOR	
Q201 Q202 Q203 Q301 Q501			IMZ1A 2SD601A 2SB709A 2SC4097 DTC124EE	DUAL TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR	
Q502,503 Q601		*	PUMD10 DTC124EE	DUAL TRANSISTOR DIGITAL TRANSISTOR	
DVD PLAYER UNIT (X37-1020-04)					
C1			CK73FB0J106M	CHIP C 10UF M	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
C2 C3,4 C5 C6 C7			CK73HB1A104K CK73FB0J106M CK73HB1A104K CC73HCH1E221J CK73HB1A104K	CHIP C 0.10UF K CHIP C 10UF M CHIP C 0.10UF K CHIP C 220PF J CHIP C 0.10UF K	
C8 C9,10 C11 C12 C13			CK73FB0J106M CK73HB1A104K CK73HB1H332K CK73HB1A104K CK73FB0J106M	CHIP C 10UF M CHIP C 0.10UF K CHIP C 3300PF K CHIP C 0.10UF K CHIP C 10UF M	
C14 C15 C17 C18 C19			C92-1792-05 CK73HB1C103K CC73GCH1H471J CK73HB1A104K CC73GCH1H471J	CHIP C 22UF M CHIP C 0.010UF K CHIP C 470PF J CHIP C 0.10UF K CHIP C 470PF J	
C20 C21 C22-24 C25,26 C27			CK73HB1A333K CK73HB1A473K CK73HB1A104K C93-1215-05 CK73HB1A104K	CHIP C 0.033UF K CHIP C 0.047UF K CHIP C 0.10UF K CHIP C 10UF M CHIP C 0.10UF K	
C31 C32,33 C34,35 C36 C37			C92-1685-05 CC73GCH1E102J CC73GCH1H681J CK73HB1H222K CC73GCH1H331J	CHIP C 47UF M CHIP C 1000PF J CHIP C 680PF J CHIP C 2200PF K CHIP C 330PF J	
C38,39 C40,41 C42 C43 C44			CK73HB1C103K CK73HB1A104K CK73HB1C223K CC73HCH1H470J CC73GCH1H681J	CHIP C 0.010UF K CHIP C 0.10UF K CHIP C 0.022UF K CHIP C 47PF J CHIP C 680PF J	
C45 C46 C47 C48-50 C51			CK73HB1E682K CK73HB1A104K CC73GCH1E102J CK73HB1A104K C93-1271-05	CHIP C 6800PF K CHIP C 0.10UF K CHIP C 1000PF J CHIP C 0.10UF K CHIP C 0.10UF M	
C52-55 C56,57 C58-60 C62 C63			CK73HB1A104K C93-1271-05 CK73HB1A104K CK73HB1A104K C93-1271-05	CHIP C 0.10UF K CHIP C 0.10UF M CHIP C 0.10UF K CHIP C 0.10UF K CHIP C 0.10UF M	
C64,65 C67 C68 C69-73 C74			CK73HB1C103K CC73HCH1H220J CC73HCH1H150J CK73HB1A104K CK73EB1A106K	CHIP C 0.010UF K CHIP C 22PF J CHIP C 15PF J CHIP C 0.10UF K CHIP C 10UF K	
C75,76 C77 C78 C79-81 C82			CK73HB1C103K CK73HB1A104K CC73GCH1H331J CK73HB1C103K CK73HB1A104K	CHIP C 0.010UF K CHIP C 0.10UF K CHIP C 330PF J CHIP C 0.010UF K CHIP C 0.10UF K	
C83 C84 C85 C87,88 C89			CC73HCH1E221J CC73HCH1H101J C92-1684-05 CK73HB1C103K CK73FB0J106M	CHIP C 220PF J CHIP C 100PF J CHIP C 82UF K CHIP C 0.010UF K CHIP C 10UF M	

K : KVT-915DVD **R1** : KVT-915DVD **E1** : KVT-925DVD **W1** : KVT-925DVD
M1 : KVT-935DVD **H1** : KVT-935DVD **X1** : KVT-945DVD **C1** : KVT-965DVD

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

DVD PLAYER UNIT (X37-1020-04)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation	Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
C90-95			CK73HB1A104K	CHIP C 0.10UF K		R18			RK73GH1J221D	CHIP R 220 D 1/16W	
C96			CK73GB1A224K	CHIP C 0.22UF K		R19			RK73HB1J100J	CHIP R 10 J 1/16W	
C97,98			CK73HB1A104K	CHIP C 0.10UF K		R27,28			RK73HB1J472J	CHIP R 4.7K J 1/16W	
C99			C92-1685-05	CHIP C 47UF M		R29			RK73HB1J103J	CHIP R 10K J 1/16W	
C100			CK73GB0J105K	CHIP C 1.0UF K		R30			RK73HB1J473J	CHIP R 47K J 1/16W	
C101			CK73HB1C103K	CHIP C 0.010UF K		R31			RK73HB1J102J	CHIP R 1.0K J 1/16W	
C102			CK73FB0J106M	CHIP C 10UF M		R32			RK73GH1J153D	CHIP R 15K D 1/16W	
C103			CK73FB1A225K	CHIP C 2.2UF K		R33			RK73HB1J105J	CHIP R 1.0M J 1/16W	
C104			CK73HB1A104K	CHIP C 0.10UF K		R36			RK73HB1J103J	CHIP R 10K J 1/16W	
C106			CK73HB1A104K	CHIP C 0.10UF K		R37			RK73HB1J273J	CHIP R 27K J 1/16W	
C107			CK73GB0J105K	CHIP C 1.0UF K		R38			RK73HB1J472J	CHIP R 4.7K J 1/16W	
C108			C93-1228-05	CHIP C 10UF M		R39			RK73HB1J273J	CHIP R 27K J 1/16W	
C110-113			CC73HCH1H470J	CHIP C 47PF J		R40			RK73HB1J472J	CHIP R 4.7K J 1/16W	
C114,115			CK73FB1A225K	CHIP C 2.2UF K		R41			RK73HB1J103J	CHIP R 10K J 1/16W	
C116			CK73GB1A224K	CHIP C 0.22UF K		R42			RK73HB1J105J	CHIP R 1.0M J 1/16W	
C117			CK73HB1C223K	CHIP C 0.022UF K		R43			RK73HB1J152J	CHIP R 1.5K J 1/16W	
C119			CK73EB0J226K	CHIP C 22UF K		R44			RK73HB1J202J	CHIP R 2.0K J 1/16W	
C123			CC73HCH1H470J	CHIP C 47PF J		R45			RK73GH1J183D	CHIP R 18K D 1/16W	
C125-134			CK73HB1C103K	CHIP C 0.010UF K		R46			RK73GB2A752J	CHIP R 7.5K J 1/10W	
C135,136			CC73HCH1H050C	CHIP C 5.0PF C		R47			RK73GH1J103D	CHIP R 10K D 1/16W	
C137			CK73HB1H102K	CHIP C 1000PF K		R48			R92-3353-05	CHIP R 1.0 F 1/8W	
C138			CK73EB1A106K	CHIP C 10UF K		R53			R92-3353-05	CHIP R 1.0 F 1/8W	
CN1			E41-0273-05	FLAT CABLE CONNECTOR (30PIN)		R54			R92-3348-05	CHIP R 0.47 F 1/2W	
CN2			E41-0271-05	FLAT CABLE CONNECTOR (4PIN)		R55,56			RK73GB2A820J	CHIP R 82 J 1/10W	
CN3			E41-0272-05	FLAT CABLE CONNECTOR (11PIN)		R57			RK73GB2A391J	CHIP R 390 J 1/10W	
CN4			E41-0312-05	FLAT CABLE CONNECTOR (50PIN)							
CN5			E41-0335-05	FLAT CABLE CONNECTOR (4PIN)		R58,59			RK73GB2A103J	CHIP R 10K J 1/10W	
L1			L92-0365-05	CHIP FERRITE		R60			RK73GB2A472J	CHIP R 4.7K J 1/10W	
L2			L92-0329-05	CHIP FERRITE		R61			RK73GB2A153J	CHIP R 15K J 1/10W	
L3-8			L92-0365-05	CHIP FERRITE		R62,63			RK73GH1J153D	CHIP R 15K D 1/16W	
L10-13			L92-0365-05	CHIP FERRITE		R64			RK73GH1J303D	CHIP R 30K D 1/16W	
L16-18			L92-0365-05	CHIP FERRITE							
L21-27			L92-0365-05	CHIP FERRITE		R65			RK73GH1J183D	CHIP R 18K D 1/16W	
L28			L92-0375-05	CHIP FERRITE		R66,67			RK73GH1J153D	CHIP R 15K D 1/16W	
X1			L77-2808-05	CRYSTAL RESONATOR (16.897849MHZ)		R68			RK73GH1J513D	CHIP R 51K D 1/16W	
CP1			RK74HB1J102J	CHIP-COM 1.0K J 1/16W		R71			RK73GH1J202D	CHIP R 2.0K D 1/16W	
CP3			RK74HB1J472J	CHIP-COM 4.7K J 1/16W		R72			RK73GH1J123D	CHIP R 12K D 1/16W	
CP4-8			RK74HB1J220J	CHIP-COM 22 J 1/16W		R73			RK73HB1J103J	CHIP R 10K J 1/16W	
CP9			RK74HB1J820J	CHIP-COM 82 J 1/16W		R74			RK73HB1J472J	CHIP R 4.7K J 1/16W	
CP11			R90-0726-05	MULTI-COMP 10K X2		R75-79			RK73HB1J132J	CHIP R 1.3K J 1/16W	
CP12			RK74HB1J472J	CHIP-COM 4.7K J 1/16W		R80-83			RK73HB1J103J	CHIP R 10K J 1/16W	
CP13-16			RK74HB1J103J	CHIP-COM 10K J 1/16W		R88			RK73HB1J103J	CHIP R 10K J 1/16W	
R3,4			RK73GH1J103D	CHIP R 10K D 1/16W							
R5			RK73GB2A4R7J	CHIP R 4.7 J 1/10W		R89			RK73HB1J820J	CHIP R 82 J 1/16W	
R6			RK73GB2A100J	CHIP R 10 J 1/10W		R90			RK73HB1J103J	CHIP R 10K J 1/16W	
R7,8			RK73HB1J273J	CHIP R 27K J 1/16W		R91			RK73HB1J220J	CHIP R 22 J 1/16W	
R9			RK73GH1J223D	CHIP R 22K D 1/16W		R92			RK73HB1J820J	CHIP R 82 J 1/16W	
R10			RK73GH1J392D	CHIP R 3.9K D 1/16W		R93			RK73HB1J103J	CHIP R 10K J 1/16W	
R11			RK73GH1J183D	CHIP R 18K D 1/16W							
R12			RK73GB2A4R7J	CHIP R 4.7 J 1/10W		R94,95			RK73HB1J820J	CHIP R 82 J 1/16W	
R13,14			RK73HB1J125J	CHIP R 1.2M J 1/16W		R101			RK73HB1J103J	CHIP R 10K J 1/16W	
R15			RK73GB2A200J	CHIP R 20 J 1/10W		R103-106			RK73HB1J220J	CHIP R 22 J 1/16W	
R16			R92-3409-05	CHIP R 6.8 F 1/4W		R107,108			RK73HB1J103J	CHIP R 10K J 1/16W	
R17			R92-3350-05	CHIP R 2.2 F 1/10W		R109			RK73HB1J332J	CHIP R 3.3K J 1/16W	
						R110			RK73HB1J473J	CHIP R 47K J 1/16W	
						R111			RK73GB2A150J	CHIP R 15 J 1/10W	
						R112,113			RK73HB1J221J	CHIP R 220 J 1/16W	
						R114			RK73HB1J220J	CHIP R 22 J 1/16W	
						R117			RK73GB2A752J	CHIP R 7.5K J 1/10W	

K : KVT-915DVD **R1** : KVT-915DVD **E1** : KVT-925DVD **W1** : KVT-925DVD
M1 : KVT-935DVD **H1** : KVT-935DVD **X1** : KVT-945DVD **C1** : KVT-965DVD

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

DVD PLAYER UNIT (X37-1020-04)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
R119,120 R121,122 R123 R124 R126,127			RK73HB1J510J RK73HB1J103J R92-3385-05 RK73HB1J103J RK73HB1J104J	CHIP R 51 J 1/16W CHIP R 10K J 1/16W CHIP R 8.2 F 1/10W CHIP R 10K J 1/16W CHIP R 100K J 1/16W	
R128,129 R130 R131-143 W1-3			RK73HB1J472J RK73HB1J751J RK73HB1J103J R92-1252-05	CHIP R 4.7K J 1/16W CHIP R 750 J 1/16W CHIP R 10K J 1/16W CHIP R 0 OHM J 1/16W	
S4 S5			S68-0874-05 S68-0866-05	PUSH SWITCH PUSH SWITCH	
D1,2 D3-5 D6 D7 D8			MAZS0510M MA2J729 MAZS0560M MA4ZD03 MA142WA	ZENER DIODE DIODE ZENER DIODE DIODE DIODE	
IC1 IC2 IC4 IC4 IC5			AN8703FH NJU7042 MN103S26E MN103S26E2 S-80829CLBB	ANALOGUE IC ANALOGUE IC MOS-IC MOS-IC ANALOGUE IC	
IC6 IC7 IC8 IC9 IC10			LA6505 DF2328VTE250S0 S-80815CLBB UPC2918T NJM2880U33	ANALOGUE IC MICROCONTROLLER IC ANALOGUE IC ANALOGUE IC ANALOGUE IC	
IC11 IC12 Q1 Q2 Q3			S-24C04BMFN HD74LV2G66A 2SB0970 MCH6101-E 2SJ0536	MEMORY IC MOS-IC TRANSISTOR TRANSISTOR FET	
Q4 Q5 Q6 Q9 Q10			UN5114 UN5214 2SD1819A UN5114 UN5214	DIGITAL TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR	
Q13 Q15 TH1			UN5114 UN5114 TH11-3H103FT	DIGITAL TRANSISTOR DIGITAL TRANSISTOR THERMISTOR	
TUNER UNIT (X86-367x-xx)					
C1-4 C5 C6,7 C8 C8			CC73GCH1H101J CK73GB1H103K CC73GCH1H101J CK73GB1C104K CK73GB1H104K	CHIP C 100PF J CHIP C 0.010UF K CHIP C 100PF J CHIP C 0.10UF K CHIP C 0.10UF K	E1W1 E1W1
C9,10 C11 C11 C11-14 C15-18			CC73GCH1H101J CK73GB1H103K CK73GB1H103K CK73GB1H103K CK73GB1H102K	CHIP C 100PF J CHIP C 0.010UF K CHIP C 0.010UF K CHIP C 0.010UF K CHIP C 1000PF K	K1R1M1 H1X1C1 E1W1
C19 C19 C20 C21			CK73GB1E223K CK73GB1H223K CK73GB1H472K CK73GB1H332K	CHIP C 0.022UF K CHIP C 0.022UF K CHIP C 4700PF K CHIP C 3300PF K	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
C22,23 C24 C25 C26,27 C26,27			CK73GB1H103K C94-0032-05 CC73GCH1H330J CK73GB1H222K CK73GB1H222K	CHIP C 0.010UF K ELECTRO 47UF 6.3WV CHIP C 33PF J CHIP C 2200PF K CHIP C 2200PF K	E1W1M1 X1C1
C28 C29-32 C33 C33 C34,35			CK73GB1H103K CC73GCH1H101J CK73GB1H222K CK73GB1H222K CK73GB1H103K	CHIP C 0.010UF K CHIP C 100PF J CHIP C 2200PF K CHIP C 2200PF K CHIP C 0.010UF K	E1W1M1 X1C1 E1W1M1
C34,35 C38 C39 C40 C41			CK73GB1H103K CK73GB1H103K CK73GB1H222K CK73GB1H102K C94-0054-05	CHIP C 0.010UF K CHIP C 0.010UF K CHIP C 2200PF K CHIP C 1000PF K ELECTRO 4.7UF 50WV	X1C1
C42 C43 C44 C45,46 C47			CK73GB1H103K C94-0032-05 CK73GB1H103K C90-5573-05 CK73GB1H222K	CHIP C 0.010UF K ELECTRO 47UF 6.3WV CHIP C 0.010UF K ELECTRO 220UF 10WV CHIP C 2200PF K	
C48 C49 C50,51 C52 C53-56			C94-0040-05 CK73GB1H103K C94-0054-05 C94-0041-05 CC73GCH1H101J	ELECTRO 22UF 16WV CHIP C 0.010UF K ELECTRO 4.7UF 50WV ELECTRO 33UF 16WV CHIP C 100PF J	
C57 C101 C102 C103 C103			CK73GB1H103K CC73GCH1H221J CK73GB1H103K CK73GB1E223K CK73GB1H223K	CHIP C 0.010UF K CHIP C 220PF J CHIP C 0.010UF K CHIP C 0.022UF K CHIP C 0.022UF K	
C104,105 C104,105 C106 C107 C107			CK73GB1C104K CK73GB1H104K CK73GB1H103K CK73GB1C104K CK73GB1H104K	CHIP C 0.10UF K CHIP C 0.10UF K CHIP C 0.010UF K CHIP C 0.10UF K CHIP C 0.10UF K	
C108 C109 C109 C110,111 C110,111			CK73GB1H103K CK73GB1E223K CK73GB1H223K CK73GB1C104K CK73GB1H104K	CHIP C 0.010UF K CHIP C 0.022UF K CHIP C 0.022UF K CHIP C 0.10UF K CHIP C 0.10UF K	
C112 C112,113 C112,113 C114 C114			CC73GCH1H100D CC73GCH1H100D CC73GCH1H100D CK73GB1C104K CK73GB1H104K	CHIP C 10PF D CHIP C 10PF D CHIP C 10PF D CHIP C 0.10UF K CHIP C 0.10UF K	K1R1H1 E1W1M1 X1C1
C115 C116 C117 C118 C118			CC73GCH1H560J CK73GB1H222K CC73GCH1H220J CK73GB1H102K CK73GB1H102K	CHIP C 56PF J CHIP C 2200PF K CHIP C 22PF J CHIP C 1000PF K CHIP C 1000PF K	E1W1 E1W1 E1W1M1 X1C1
C119 C120 C121 C122 C122			CK73GB1H103K C94-0042-05 CK73GB1H103K CK73GB1E473K CK73GB1H473K	CHIP C 0.010UF K ELECTRO 47UF 16WV CHIP C 0.010UF K CHIP C 0.047UF K CHIP C 0.047UF K	K1R1H1

K : KVT-915DVD **R1** : KVT-915DVD **E1** : KVT-925DVD **W1** : KVT-925DVD
M1 : KVT-935DVD **H1** : KVT-935DVD **X1** : KVT-945DVD **C1** : KVT-965DVD

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

TUNER UNIT (X86-367x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination	Ref. No.	Add	New	Parts No.	Description	Destination
C123			CK73GB1H103K	CHIP C 0.010UF K		C210-212			CK73GB1H103K	CHIP C 0.010UF K	E1W1
C124			C94-0042-05	ELECTRO 47UF 16WV	K1R1H1	C211,212			CK73GB1H103K	CHIP C 0.010UF K	K1R1M1
C125			CK73GB1A474K	CHIP C 0.47UF K	E1W1	C211,212			CK73GB1H103K	CHIP C 0.010UF K	H1X1C1
C125			CK73GB1E473K	CHIP C 0.047UF K	K1R1M1	C213			C94-0039-05	ELECTRO 10UF 16WV	
C125			CK73GB1E473K	CHIP C 0.047UF K	H1X1C1	C214			CK73GB1H103K	CHIP C 0.010UF K	
C125			CK73GB1H473K	CHIP C 0.047UF K	K1R1M1	C218-220			CK73FB1C105K	CHIP C 1.0UF K	
C125			CK73GB1H473K	CHIP C 0.047UF K	H1X1C1	C221			CK73GB1A474K	CHIP C 0.47UF K	K1R1M1
C126			CK73GB1C104K	CHIP C 0.10UF K		C221			CK73GB1A474K	CHIP C 0.47UF K	H1X1C1
C126			CK73GB1H104K	CHIP C 0.10UF K		C221			CK73GB1C104K	CHIP C 0.10UF K	E1W1
C127			CC73GCH1H471J	CHIP C 470PF J		C221			CK73GB1H104K	CHIP C 0.10UF K	E1W1
C128			CK73GB1H472K	CHIP C 4700PF K		C224			CK73GB1H103K	CHIP C 0.010UF K	
C129			CC73GCH1H560J	CHIP C 56PF J	M1X1C1	C225			CK73GB1C104K	CHIP C 0.10UF K	
C130			CC73GCH1H330J	CHIP C 33PF J		C225			CK73GB1H104K	CHIP C 0.10UF K	
C131			CC73GCH1H270J	CHIP C 27PF J		C226			CC73GCH1H560J	CHIP C 56PF J	
C132			CK73GB1H102K	CHIP C 1000PF K		C227			CK73FB1C105K	CHIP C 1.0UF K	
C133			CK73GB1C104K	CHIP C 0.10UF K		C229,230			CK73GB1H103K	CHIP C 0.010UF K	
C133			CK73GB1H104K	CHIP C 0.10UF K		C231,232			CK73GB1E223K	CHIP C 0.022UF K	K1R1H1
C134			C94-0051-05	ELECTRO 1UF 50WV		C231,232			CK73GB1H153K	CHIP C 0.015UF K	E1W1M1
C135			CK73GB1H222K	CHIP C 2200PF K		C231,232			CK73GB1H153K	CHIP C 0.015UF K	X1C1
C136			CK73GB1A224K	CHIP C 0.22UF K		C231,232			CK73GB1H223K	CHIP C 0.022UF K	K1R1H1
C137			CK73GB1H472K	CHIP C 4700PF K		C233-236			CK73GB1H102K	CHIP C 1000PF K	
C138			C94-0051-05	ELECTRO 1UF 50WV		C237,238			CC73GCH1H121J	CHIP C 120PF J	
C139			CK73GB1E473K	CHIP C 0.047UF K		C239,240			CK73GB1H102K	CHIP C 1000PF K	
C139			CK73GB1H473K	CHIP C 0.047UF K		C241,242			CK73GB1H103K	CHIP C 0.010UF K	
C140			CK73GB1A224K	CHIP C 0.22UF K		C243			C94-0042-05	ELECTRO 47UF 16WV	
C141-143			CK73GB1H103K	CHIP C 0.010UF K		C245,246			CK73GB1A474K	CHIP C 0.47UF K	
C144			C94-0161-05	ELECTRO 0.47UF 50WV		CN1			E40-9636-05	FLAT CABLE CONNECTOR	
C145			CC73GCH1H100D	CHIP C 10PF D		CN2			E40-9184-05	PIN ASSY	
C146			C94-0042-05	ELECTRO 47UF 16WV		CN3			E40-3640-05	PIN ASSY	
C147			CK73GB1C104K	CHIP C 0.10UF K		J1-4			E11-0625-05	PHONE JACK (LGY6502-0900)	
C147			CK73GB1H104K	CHIP C 0.10UF K		CF1	*		L72-0794-05	CERAMIC FILTER	K1R1H1
C148			CK73GB1E223K	CHIP C 0.022UF K		CF2			L72-0758-05	CERAMIC FILTER	E1W1M1
C148			CK73GB1H223K	CHIP C 0.022UF K		CF2			L72-0758-05	CERAMIC FILTER	X1C1
C149			C94-0052-05	ELECTRO 2.2UF 50WV		CF3			L72-0774-05	CERAMIC FILTER	E1W1M1
C150			CK73GB1H103K	CHIP C 0.010UF K		CF3			L72-0774-05	CERAMIC FILTER	X1C1
C151			CK73GB1C104K	CHIP C 0.10UF K		CF101			L72-0742-05	CERAMIC FILTER	
C151			CK73GB1H104K	CHIP C 0.10UF K		CF102			L72-0792-05	CERAMIC FILTER	K1R1H1
C152,153			CK73GB1H102K	CHIP C 1000PF K		CF103			L72-0751-05	CERAMIC FILTER	E1W1M1
C154			CK73GB1C104K	CHIP C 0.10UF K		CF103			L72-0751-05	CERAMIC FILTER	X1C1
C154			CK73GB1H104K	CHIP C 0.10UF K		L1			L40-1585-34	SMALL FIXED INDUCTOR (0.15UH)	
C155			CC73GCH1H101J	CHIP C 100PF J	E1W1M1	L2			L40-5685-34	SMALL FIXED INDUCTOR (0.56UH)	
C155			CC73GCH1H101J	CHIP C 100PF J	X1C1	L3			L40-1585-34	SMALL FIXED INDUCTOR (0.15UH)	
C156			CK73GB1H103K	CHIP C 0.010UF K	K1R1H1	L4			L40-5685-34	SMALL FIXED INDUCTOR (0.56UH)	
C157			CK73GB1A224K	CHIP C 0.22UF K	E1W1M1	L5			L40-1585-34	SMALL FIXED INDUCTOR (0.15UH)	
C157			CK73GB1A224K	CHIP C 0.22UF K	X1C1	L6			L40-5685-34	SMALL FIXED INDUCTOR (0.56UH)	
C201			C94-0039-05	ELECTRO 10UF 16WV	E1W1	L7			L40-1585-34	SMALL FIXED INDUCTOR (0.15UH)	
C202			CK73GB1H103K	CHIP C 0.010UF K	E1W1	L8			L40-5685-34	SMALL FIXED INDUCTOR (0.56UH)	
C203			CK73GB1A224K	CHIP C 0.22UF K	E1W1	L9			L40-6805-34	SMALL FIXED INDUCTOR	
C203			CK73GB1A474K	CHIP C 0.47UF K	K1R1M1	L10			L92-0329-05	CHIP FERRITE	
C203			CK73GB1A474K	CHIP C 0.47UF K	H1X1C1	L11			L40-2795-34	SMALL FIXED INDUCTOR (2.7UH)	E1W1M1
C204,205			CK73GB1H222K	CHIP C 2200PF K	E1W1	L11			L40-2795-34	SMALL FIXED INDUCTOR (2.7UH)	X1C1
C206,207			CK73GB1E223K	CHIP C 0.022UF K	E1W1	L12,13			L40-1295-34	SMALL FIXED INDUCTOR	E1W1M1
C206,207			CK73GB1H223K	CHIP C 0.022UF K	E1W1	L12,13			L40-1295-34	SMALL FIXED INDUCTOR	X1C1
C208			C94-0161-05	ELECTRO 0.47UF 50WV	E1W1	L13,14			L40-1095-34	SMALL FIXED INDUCTOR (1UH)	K1R1H1
C209			C94-0044-05	ELECTRO 4.7UF 25WV	E1W1						

K : KVT-915DVD R1 : KVT-915DVD E1 : KVT-925DVD W1 : KVT-925DVD
M1 : KVT-935DVD H1 : KVT-935DVD X1 : KVT-945DVD C1 : KVT-965DVD

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

TUNER UNIT (X86-367x-xx)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation	Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
L14			L40-1095-34	SMALL FIXED INDUCTOR (1UH)	E1W1M1	R24			RK73GB2A470J	CHIP R 47 J 1/10W	X1C1
L14			L40-1095-34	SMALL FIXED INDUCTOR (1UH)	X1C1	R25			RK73GB2A151J	CHIP R 150 J 1/10W	E1W1M1
L15,16			L40-1005-34	SMALL FIXED INDUCTOR		R25			RK73GB2A151J	CHIP R 150 J 1/10W	X1C1
L17			L33-1152-05	CHOKE COIL		R26,27			RK73GB2A101J	CHIP R 100 J 1/10W	
L101			L30-0756-05	TV IFT		R28			RK73GB2A151J	CHIP R 150 J 1/10W	
L102			L40-1505-34	SMALL FIXED INDUCTOR (15UH)	K1R1H1	R29			RK73GB2A681J	CHIP R 680 J 1/10W	
L103			L30-0745-05	TV IFT	K1R1H1	R30			RK73GB2A123J	CHIP R 12K J 1/10W	
L103			L30-0749-05	TV IFT	E1W1M1	R31			RK73GB2A222J	CHIP R 2.2K J 1/10W	
L103			L30-0749-05	TV IFT	X1C1	R32			RK73GB2A470J	CHIP R 47 J 1/10W	
L104			L40-1001-78	SMALL FIXED INDUCTOR (10UH)		R33			RK73GB2A122J	CHIP R 1.2K J 1/10W	
L105			L40-5695-34	SMALL FIXED INDUCTOR (5.6UH)	E1W1M1	R34			RK73GB2A392J	CHIP R 3.9K J 1/10W	
L105			L40-5695-34	SMALL FIXED INDUCTOR (5.6UH)	X1C1	R37			R92-1252-05	CHIP R 0 OHM J 1/16W	E1W1M1
L106			L40-1001-78	SMALL FIXED INDUCTOR (10UH)		R37			R92-1252-05	CHIP R 0 OHM J 1/16W	X1C1
L108			L40-2285-34	SMALL FIXED INDUCTOR (0.22UH)	M1X1C1	R38,39			R92-1252-05	CHIP R 0 OHM J 1/16W	K1R1H1
L201,202			L40-1005-34	SMALL FIXED INDUCTOR	E1W1	R39			R92-1252-05	CHIP R 0 OHM J 1/16W	M1X1C1
L202			L40-1005-34	SMALL FIXED INDUCTOR	K1R1M1	R101			RK73GB2A102J	CHIP R 1.0K J 1/10W	
L202			L40-1005-34	SMALL FIXED INDUCTOR	H1X1C1	R102			RK73GB2A682J	CHIP R 6.8K J 1/10W	
X101			L77-2084-05	CRYSTAL RESONATOR (30.55MHZ)	K1R1H1	R103,104			RK73GB2A471J	CHIP R 470 J 1/10W	E1W1
X102			L77-2720-05	CRYSTAL RESONATOR (22.70MHZ)	E1W1M1	R105			RK73GB2A333J	CHIP R 33K J 1/10W	E1W1M1
X102			L77-2720-05	CRYSTAL RESONATOR (22.70MHZ)	X1C1	R105			RK73GB2A333J	CHIP R 33K J 1/10W	X1C1
X103			L77-2721-05	CRYSTAL RESONATOR (22.20MHZ)	E1W1M1	R105			RK73GB2A473J	CHIP R 47K J 1/10W	K1R1H1
X103			L77-2721-05	CRYSTAL RESONATOR (22.20MHZ)	X1C1	R106			RK73GB2A563J	CHIP R 56K J 1/10W	
X104			L77-2722-05	CRYSTAL RESONATOR (21.70MHZ)	E1W1M1	R107			RK73GB2A152J	CHIP R 1.5K J 1/10W	
X104			L77-2722-05	CRYSTAL RESONATOR (21.70MHZ)	X1C1	R108,109			RK73GB2A331J	CHIP R 330 J 1/10W	
X105			L77-2095-05	CRYSTAL RESONATOR (3.58MHZ)		R110			RK73GB2A273J	CHIP R 27K J 1/10W	E1W1M1
X106			L77-2096-05	CRYSTAL RESONATOR (4.43MHZ)	K1E1W1	R110			RK73GB2A273J	CHIP R 27K J 1/10W	X1C1
X106			L77-2096-05	CRYSTAL RESONATOR (4.43MHZ)	M1H1X1	R111			RK73GB2A181J	CHIP R 180 J 1/10W	K1R1H1
X106			L77-2096-05	CRYSTAL RESONATOR (4.43MHZ)	C1	R112			RK73GB2A333J	CHIP R 33K J 1/10W	
X106		*	L77-2835-05	CRYSTAL RESONATOR (3.575611MHZ)	R1	R113			RK73GB2A473J	CHIP R 47K J 1/10W	
						R114,115			RK73GB2A331J	CHIP R 330 J 1/10W	K1R1H1
R1			RK73GB2A471J	CHIP R 470 J 1/10W		R116			RK73GB2A272J	CHIP R 2.7K J 1/10W	
R2-5			RK73GB2A101J	CHIP R 100 J 1/10W		R117			RK73GB2A103J	CHIP R 10K J 1/10W	E1W1M1
R6			RK73GB2A472J	CHIP R 4.7K J 1/10W	E1W1M1	R117			RK73GB2A103J	CHIP R 10K J 1/10W	X1C1
R6			RK73GB2A472J	CHIP R 4.7K J 1/10W	X1C1	R119			RK73GB2A222J	CHIP R 2.2K J 1/10W	E1W1M1
R7			RK73GB2A101J	CHIP R 100 J 1/10W		R119			RK73GB2A222J	CHIP R 2.2K J 1/10W	X1C1
R8			RK73GB2A473J	CHIP R 47K J 1/10W		R120			RK73GB2A182J	CHIP R 1.8K J 1/10W	K1R1H1
R9			RK73GB2A333J	CHIP R 33K J 1/10W		R121			RK73GB2A103J	CHIP R 10K J 1/10W	
R10			RK73GB2A822J	CHIP R 8.2K J 1/10W		R122			RK73GB2A223J	CHIP R 22K J 1/10W	K1R1H1
R11			RK73GB2A223J	CHIP R 22K J 1/10W		R123			RK73GB2A103J	CHIP R 10K J 1/10W	E1W1
R12-15			RK73GB2A102J	CHIP R 1.0K J 1/10W		R124			RK73GB2A222J	CHIP R 2.2K J 1/10W	E1W1M1
R16			RK73GB2A682J	CHIP R 6.8K J 1/10W	E1W1M1	R124			RK73GB2A222J	CHIP R 2.2K J 1/10W	X1C1
R16			RK73GB2A682J	CHIP R 6.8K J 1/10W	X1C1	R125			RK73GB2A272J	CHIP R 2.7K J 1/10W	
R17,18			RK73GB2A103J	CHIP R 10K J 1/10W	E1W1M1	R126			RK73GB2A104J	CHIP R 100K J 1/10W	E1W1M1
R17,18			RK73GB2A103J	CHIP R 10K J 1/10W	X1C1	R126			RK73GB2A104J	CHIP R 100K J 1/10W	X1C1
R19			RK73GB2A222J	CHIP R 2.2K J 1/10W	E1W1M1	R127			RK73GB2A222J	CHIP R 2.2K J 1/10W	E1W1M1
R19			RK73GB2A222J	CHIP R 2.2K J 1/10W	X1C1	R127			RK73GB2A222J	CHIP R 2.2K J 1/10W	X1C1
R20			RK73GB2A470J	CHIP R 47 J 1/10W	E1W1M1	R128			RK73GB2A104J	CHIP R 100K J 1/10W	E1W1M1
R20			RK73GB2A470J	CHIP R 47 J 1/10W	X1C1	R128			RK73GB2A104J	CHIP R 100K J 1/10W	X1C1
R21			RK73GB2A681J	CHIP R 680 J 1/10W	E1W1M1	R129			RK73GB2A332J	CHIP R 3.3K J 1/10W	K1R1H1
R21			RK73GB2A681J	CHIP R 680 J 1/10W	X1C1	R130			RK73GB2A104J	CHIP R 100K J 1/10W	E1W1M1
R22			RK73GB2A222J	CHIP R 2.2K J 1/10W	E1W1M1	R130			RK73GB2A104J	CHIP R 100K J 1/10W	X1C1
R22			RK73GB2A222J	CHIP R 2.2K J 1/10W	X1C1	R131,132			RK73GB2A103J	CHIP R 10K J 1/10W	E1W1
R23			RK73GB2A123J	CHIP R 12K J 1/10W	E1W1M1	R133			RK73GB2A472J	CHIP R 4.7K J 1/10W	E1W1
R23			RK73GB2A123J	CHIP R 12K J 1/10W	X1C1	R134			RK73GB2A103J	CHIP R 10K J 1/10W	
R24			RK73GB2A470J	CHIP R 47 J 1/10W	E1W1M1	R135			RK73GB2A273J	CHIP R 27K J 1/10W	

K : KVT-915DVD **R1** : KVT-915DVD **E1** : KVT-925DVD **W1** : KVT-925DVD
M1 : KVT-935DVD **H1** : KVT-935DVD **X1** : KVT-945DVD **C1** : KVT-965DVD

△ Indicates safety critical components.

PARTS LIST

- * New parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

TUNER UNIT (X86-367x-xx)

Ref. No.	Add	New	Parts No.	Description				Desti- nation	Ref. No.	Add	New	Parts No.	Description				Desti- nation
R136			RK73GB2A103J	CHIP R	10K	J	1/10W		R221			RK73GB2A683J	CHIP R	68K	J	1/10W	E1W1M1
R137			RK73GB2A393J	CHIP R	39K	J	1/10W		R221			RK73GB2A683J	CHIP R	68K	J	1/10W	X1C1
R138			RK73GB2A103J	CHIP R	10K	J	1/10W		R222			RK73GB2A124J	CHIP R	120K	J	1/10W	K1R1H1
R139			RK73GB2A472J	CHIP R	4.7K	J	1/10W		R222			RK73GB2A473J	CHIP R	47K	J	1/10W	E1W1M1
R140			RK73GB2A103J	CHIP R	10K	J	1/10W		R222			RK73GB2A473J	CHIP R	47K	J	1/10W	X1C1
R141			RK73GB2A223J	CHIP R	22K	J	1/10W		R223			RK73GB2A102J	CHIP R	1.0K	J	1/10W	K1R1M1 H1X1C1 E1W1
R146,147			RK73GB2A102J	CHIP R	1.0K	J	1/10W		R227			RK73GB2A472J	CHIP R	4.7K	J	1/10W	
R148			RK73GB2A561J	CHIP R	560	J	1/10W		R228,229			R92-1252-05	CHIP R	0 OHM	J	1/16W	
R149			R92-1252-05	CHIP R	0 OHM	J	1/16W		R228,229			R92-1252-05	CHIP R	0 OHM	J	1/16W	
R150,151			RK73GB2A102J	CHIP R	1.0K	J	1/10W		R229			R92-1252-05	CHIP R	0 OHM	J	1/16W	
R152			RK73GB2A561J	CHIP R	560	J	1/10W		VR1			R32-0234-05	SEMI FIXED VARIABLE RESISTOR				K1R1H1 K1R1H1
R153			RK73GB2A102J	CHIP R	1.0K	J	1/10W		VR101			R32-0234-05	SEMI FIXED VARIABLE RESISTOR				
R154			RK73GB2A104J	CHIP R	100K	J	1/10W		VR102			R32-0246-05	SEMI FIXED VARIABLE RESISTOR				
R155			RK73GB2A102J	CHIP R	1.0K	J	1/10W										
R157			RK73GB2A561J	CHIP R	560	J	1/10W										
R158			RK73GB2A153J	CHIP R	15K	J	1/10W	E1W1M1	D1-4			RN739F	DIODE				E1W1M1 X1C1
R160			RK73GB2A102J	CHIP R	1.0K	J	1/10W		D5			DAN235U	DIODE				
R161			RK73GB2A273J	CHIP R	27K	J	1/10W		D5			DAN235U	DIODE				
R162			RK73GB2A104J	CHIP R	100K	J	1/10W		D6			1SS250	DIODE				
R163			RK73GB2A103J	CHIP R	10K	J	1/10W		D101			DA204U	DIODE				
R163			RK73GB2A103J	CHIP R	10K	J	1/10W	X1C1	D102,103			DAP236U	DIODE				E1W1M1
R164			RK73GB2A223J	CHIP R	22K	J	1/10W	E1W1M1	D102,103			DAP236U	DIODE				X1C1
R164			RK73GB2A223J	CHIP R	22K	J	1/10W	X1C1	D104			DAN235U	DIODE				E1W1
R165,166			RK73GB2A391J	CHIP R	390	J	1/10W	E1W1M1	D105			DA204U	DIODE				K1R1H1
R165,166			RK73GB2A391J	CHIP R	390	J	1/10W	X1C1	D105,106			DA204U	DIODE				E1W1M1
R167			RK73GB2A393J	CHIP R	39K	J	1/10W	E1W1M1 X1C1	D105,106			DA204U	DIODE				X1C1
R168			RK73GB2A391J	CHIP R	390	J	1/10W		IC1			BA7652AF	ANALOGUE IC				E1W1
R169,170			RK73GB2A101J	CHIP R	100	J	1/10W		IC2			CM0018AM	MOS-IC				E1W1
R171			RK73GB2A470J	CHIP R	47	J	1/10W		IC3			BA6161F	ANALOGUE IC				
R171			RK73GB2A470J	CHIP R	47	J	1/10W		IC101			AN5186FBV	ANALOGUE IC				
R172			RK73GB2A471J	CHIP R	470	J	1/10W	E1W1M1 X1C1	IC102			TDA8842H*B	ANALOGUE IC				E1W1
R172			RK73GB2A471J	CHIP R	470	J	1/10W		IC201			TDA9830T	ANALOGUE IC				
R173			RK73GB2A473J	CHIP R	47K	J	1/10W		IC202			AN5281NSC	ANALOGUE IC				
R174			RK73GB2A513J	CHIP R	51K	J	1/10W		IC203,204			NJM4565M-TE2	ANALOGUE IC				E1W1
R175			RK73GB2A473J	CHIP R	47K	J	1/10W		Q1			DTA114EUA	DIGITAL TRANSISTOR				
R176			RK73GB2A333J	CHIP R	33K	J	1/10W	K1R1H1 E1W1M1 X1C1 E1W1M1 X1C1	Q1			UN5111	DIGITAL TRANSISTOR				E1W1
R177-180			R92-1252-05	CHIP R	0 OHM	J	1/16W		Q2			DTC124EUA	DIGITAL TRANSISTOR				E1W1M1
R177,178			R92-1252-05	CHIP R	0 OHM	J	1/16W		Q2			DTC124EUA	DIGITAL TRANSISTOR				X1C1
R177,178			R92-1252-05	CHIP R	0 OHM	J	1/16W		Q2			UN5212	DIGITAL TRANSISTOR				E1W1M1
R181			RK73GB2A103J	CHIP R	10K	J	1/10W		Q2			UN5212	DIGITAL TRANSISTOR				X1C1
R182			R92-1252-05	CHIP R	0 OHM	J	1/16W	E1W1M1 X1C1 E1W1 E1W1	Q3			DTC143TUA	DIGITAL TRANSISTOR				E1W1M1
R182			R92-1252-05	CHIP R	0 OHM	J	1/16W		Q3			DTC143TUA	DIGITAL TRANSISTOR				X1C1
R201			RK73GB2A822J	CHIP R	8.2K	J	1/10W		Q3			UN5216	DIGITAL TRANSISTOR				E1W1M1
R202			RK73GB2A392J	CHIP R	3.9K	J	1/10W		Q3			UN5216	DIGITAL TRANSISTOR				X1C1
R203			RK73GB2A473J	CHIP R	47K	J	1/10W		Q4,5			2SC2714(Y)	TRANSISTOR				E1W1M1
R204			RK73GB2A823J	CHIP R	82K	J	1/10W	K1R1H1 E1W1 E1W1 M1X1C1	Q4,5			2SC2714(Y)	TRANSISTOR				X1C1
R205			RK73GB2A124J	CHIP R	120K	J	1/10W		Q5			2SC2714(Y)	TRANSISTOR				K1R1H1
R207			RK73GB2A334J	CHIP R	330K	J	1/10W		Q101,102			2SC4081	TRANSISTOR				E1W1
R208			RK73GB2A474J	CHIP R	470K	J	1/10W		Q101,102			2SD1819A	TRANSISTOR				E1W1
R211-214			RK73GB2A153J	CHIP R	15K	J	1/10W		Q102			2SC4081	TRANSISTOR				M1X1C1
R215,216			RK73GB2A683J	CHIP R	68K	J	1/10W	K1R1H1	Q102,103			2SD1819A	TRANSISTOR				M1X1C1
R217,218			RK73GB2A273J	CHIP R	27K	J	1/10W		Q102,103			2SC4081	TRANSISTOR				K1R1H1
R219			RK73GB2A823J	CHIP R	82K	J	1/10W		Q104-106			2SD1819A	TRANSISTOR				K1R1H1
R220			RK73GB2A104J	CHIP R	100K	J	1/10W		Q104-106			DTC124EUA	DIGITAL TRANSISTOR				M1X1C1
R221			RK73GB2A223J	CHIP R	22K	J	1/10W		Q104-107			DTC124EUA	DIGITAL TRANSISTOR				E1W1

K : KVT-915DVD **R1** : KVT-915DVD **E1** : KVT-925DVD **W1** : KVT-925DVD
M1 : KVT-935DVD **H1** : KVT-935DVD **X1** : KVT-945DVD **C1** : KVT-965DVD

⚠ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

TUNER UNIT (X86-367x-xx)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
Q104-107 Q108,109 Q108,109 Q111-114 Q111-114			UN5212 2SC4081 2SD1819A 2SC4081 2SD1819A	DIGITAL TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR	E1W1 K1R1H1 K1R1H1
Q111-115 Q111-115 Q111-115 Q111-115 Q116			2SC4081 2SC4081 2SD1819A 2SD1819A 2SA1576A	TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR	E1W1M1 X1C1 E1W1M1 X1C1 E1W1M1
Q116 Q116 Q116 Q117-119 Q117-119			2SA1576A 2SB1218A 2SB1218A DTC144EUA UN5213	TRANSISTOR TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR	X1C1 E1W1M1 X1C1
Q201,202 Q201,202			DTC144EUA UN5213	DIGITAL TRANSISTOR DIGITAL TRANSISTOR	
A1 A1 A1			W02-3191-15 W02-3191-15 W02-3389-05	TUNER ASSY TUNER ASSY TUNER ASSY	E1W1M1 X1C1 K1R1H1

COMPOUND ASSY UNIT (X90-373x-xx)

350	1H	*	A01-2813-01	METALLIC CABINET	
354 FC4	3H 2H	* *	E30-4972-15 E39-0555-05	GROUND WIRE FLAT CABLE (24PIN)	
- - -			H25-0329-04 H25-0329-04 H25-1111-04	PROTECTION BAG (280X450X0.03) PROTECTION BAG (280X450X0.03) PROTECTION BAG (280X450X0.03)	K1R1M1 H1X1C1 E1W1
A E F G	3H 3H 2H 1H		N09-1515-05 N80-3008-46 N89-3006-41 N89-3006-45	TAPPING SCREW (3X8) PAN HEAD TAPTITE SCREW BINDING HEAD TAPTITE SCREW BINDING HEAD TAPTITE SCREW	

DVD MECHANISM ASSY (X92-5020-00)

1 2 3 4 5	2B 1A 1A 1B 2B		A10-4909-21 A10-4910-11 A10-4911-02 A10-4913-11 A10-4952-61	CHASSIS CHASSIS CHASSIS CHASSIS CHASSIS ASSY	
7	1B	*	A10-4990-33	CHASSIS ASSY	
15 16 17 18 19	3B 3B 3B 2A 3B		D10-4650-03 D10-4651-02 D10-4652-02 D10-4653-02 D10-4654-04	SLIDER SLIDER SLIDER SLIDER ARM ASSY	
20 21 22 23 24	3A 1B 1A 3B 3B		D10-4658-33 D10-4659-43 D10-4660-04 D10-4686-03 D10-4687-03	ARM ASSY LEVER ASSY ARM ASSY SLIDER ARM	
25 26 29 30	3B 3B 1A 2B		D10-4689-03 D10-4690-03 D12-0635-03 D12-0636-13	ARM ARM CAM CAM	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
32 33 34 35 36	3B 3B 3B 3B 2B		D13-2221-04 D13-2222-04 D13-2223-04 D13-2224-04 D13-2225-04	GEAR GEAR GEAR GEAR GEAR	
37 38 43 44 46	2B 3B 2A 1A 2B		D13-2226-04 D13-2227-04 D14-0785-04 D21-2395-13 D21-2414-04	GEAR GEAR ROLLER SHAFT SHAFT	
48 49 50	1B 2B 2A		D32-0648-04 D32-0654-04 D39-0254-05	STOPPER STOPPER DAMPER	
VFC1	2A		E39-0464-05	FLAT CABLE (4PIN)	
54	2B		F09-1748-04	SHEET	
56 58 59 60 61	1A 3B 3A 2B 1B		G01-3112-04 G01-3114-14 G01-3116-14 G01-3117-04 G01-3118-04	COMPRESSION SPRING EXTENSION SPRING EXTENSION SPRING EXTENSION SPRING EXTENSION SPRING	
62 63 64 65 69	2A 3A 3B 3B 2A		G01-3119-04 G01-3121-14 G01-3140-04 G01-3142-04 G02-1421-03	EXTENSION SPRING TORSION COIL SPRING EXTENSION SPRING TORSION COIL SPRING FLAT SPRING	
78 79 82	3B 1A 2A		J21-9792-03 J21-9793-12 J90-1031-21	MOUNTING HARDWARE MOUNTING HARDWARE GUIDE	
A B C D E	1A 1A 1B 2B 1A		N09-4495-05 N09-4496-05 N09-6060-05 N09-6061-05 N09-6103-05	ADJUSTABLE SCREW (ADJUSTMENT SC) TAPTITE SCREW (02 2X5P-TITE) MACHINE SCREW (02M1.7X1.8 CR) MACHINE SCREW (02M1.7X3.5CUP) MACHINE SCREW (M1.7X3.5(NK G)	
F G J K	1A 1B 2A 3A		N09-6104-05 N09-6106-05 N19-2022-04 N19-2171-04	MACHINE SCREW (2X10 S-TITE) MACHINE SCREW (M1.7X2.5) FLAT WASHER FLAT WASHER	
VM1 VM2 VM3 VPU1	2B 3A 3B 1A		T42-1058-15 T49-0101-05 T42-1061-04 T25-0222-05	MOTOR ASSY (SPINDLE) MOTOR ASSY (FEED) MOTOR ASSY (LOADING) OPTICAL PICKUP HEAD	
83	2A		W02-3408-15	ELECTRIC CIRCUIT MODULE	

K : KVT-915DVD **R1** : KVT-915DVD **E1** : KVT-925DVD **W1** : KVT-925DVD
M1 : KVT-935DVD **H1** : KVT-935DVD **X1** : KVT-945DVD **C1** : KVT-965DVD

△ Indicates safety critical components.