



# KDC-MP5032

## EXPLODED VIEW (CD MECHANISM)

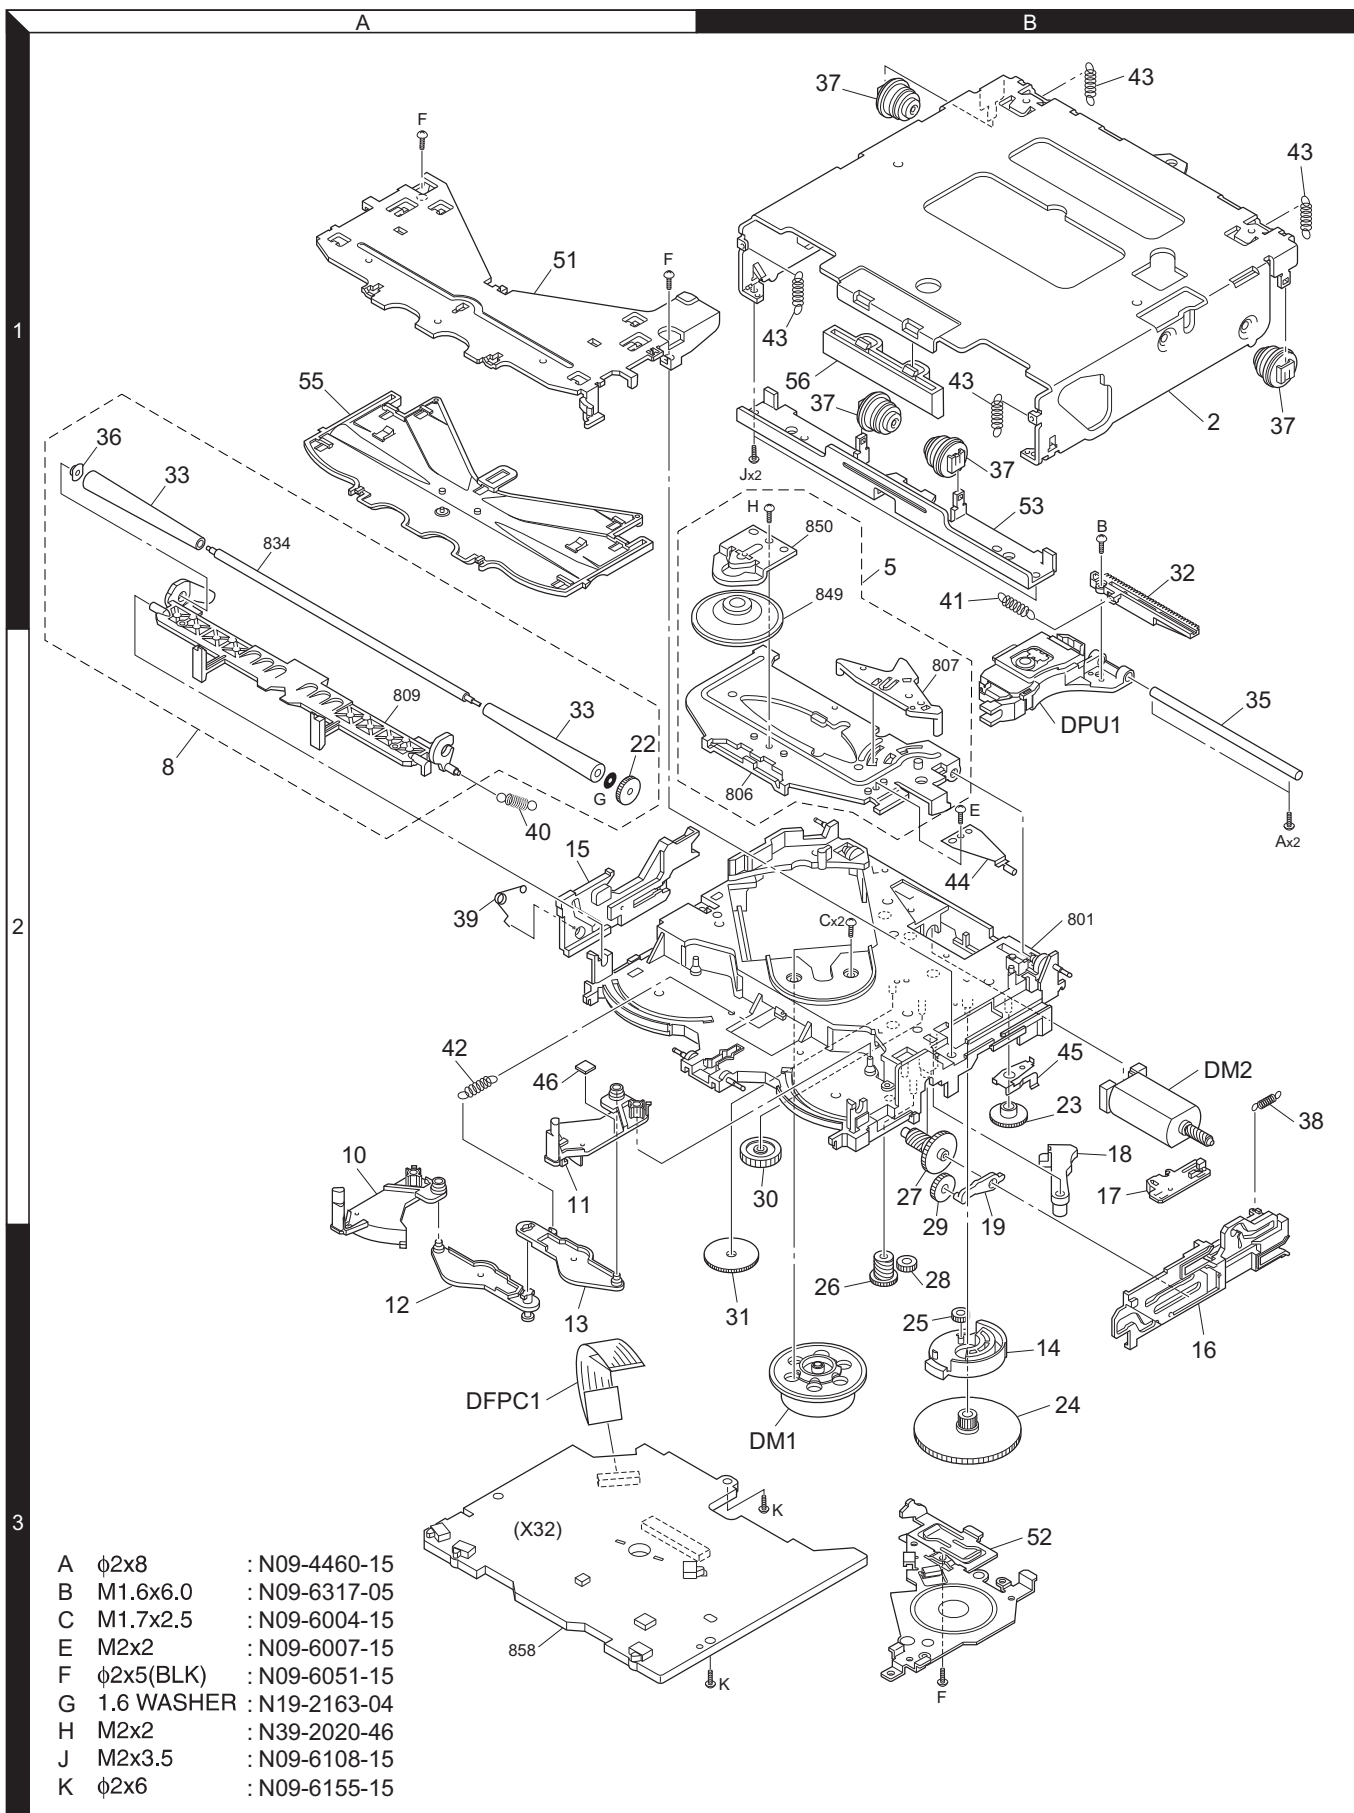

|   |            |               |
|---|------------|---------------|
| A | φ2x8       | : N09-4460-15 |
| B | M1.6x6.0   | : N09-6317-05 |
| C | M1.7x2.5   | : N09-6004-15 |
| E | M2x2       | : N09-6007-15 |
| F | φ2x5(BLK)  | : N09-6051-15 |
| G | 1.6 WASHER | : N19-2163-04 |
| H | M2x2       | : N39-2020-46 |
| J | M2x3.5     | : N09-6108-15 |
| K | φ2x6       | : N09-6155-15 |

## EXPLODED VIEW (UNIT)

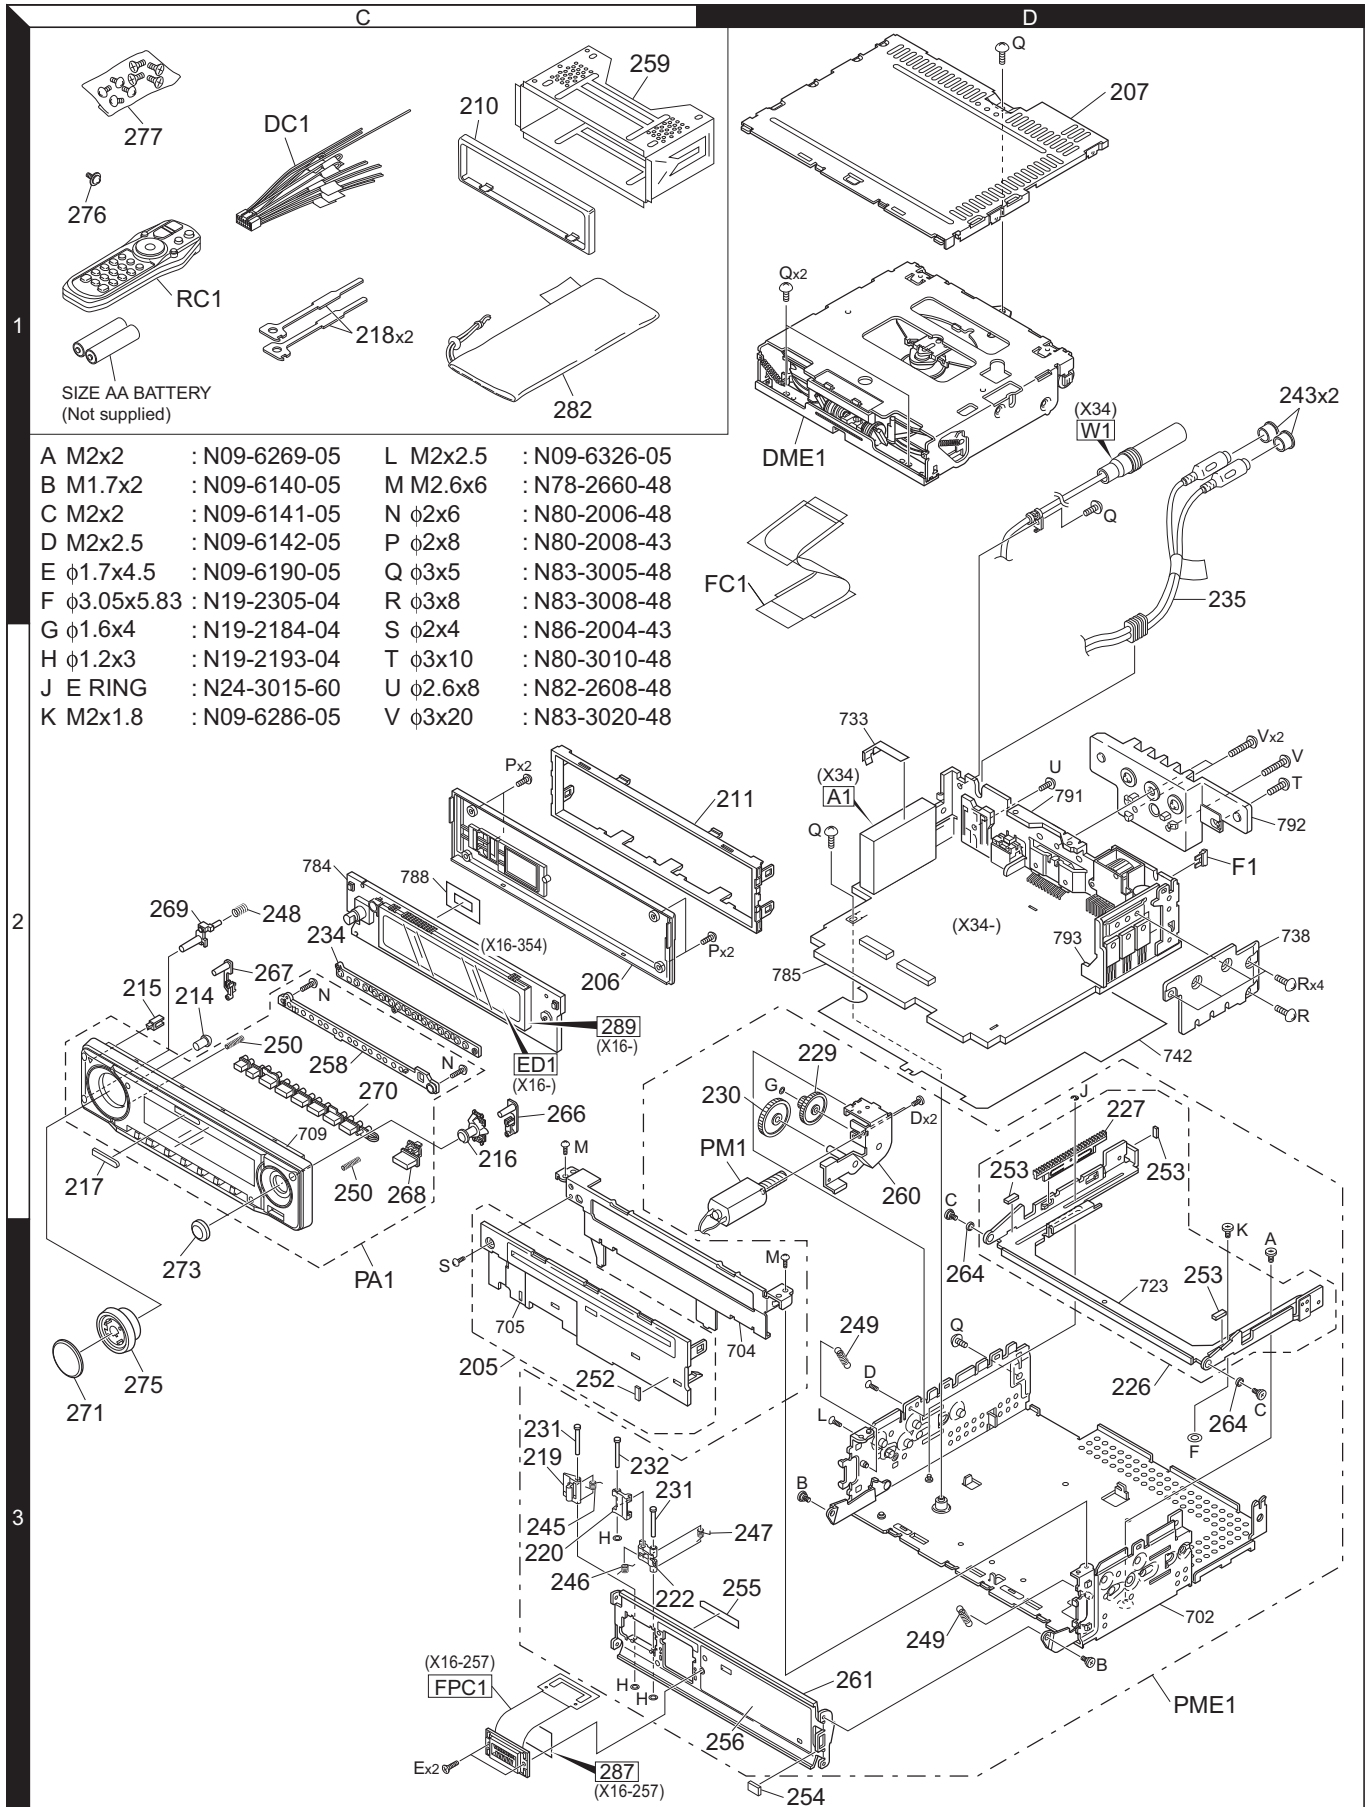

# KDC-MP5032

## PARTS LIST

\* New parts  
Parts without **Parts No.** are not supplied.  
Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.  
Teile ohne **Parts No.** werden nicht geliefert.

| Ref. No.          | A<br>d<br>d | N<br>e<br>w | Parts No.   | Description                     | Desti-<br>nation |
|-------------------|-------------|-------------|-------------|---------------------------------|------------------|
| <b>KDC-MP5032</b> |             |             |             |                                 |                  |
| 205               | 3C          |             | A22-3023-22 | SUB PANEL ASSY                  |                  |
| 206               | 2C          |             | A46-1817-01 | REAR COVER                      |                  |
| 207               | 1D          |             | A52-0845-12 | TOP PLATE                       |                  |
| PA1               | 3C          | *           | A64-3733-02 | PANEL ASSY                      |                  |
| PME1              | 3D          |             | A10-5205-22 | CHASSIS ASSY                    |                  |
| RC1               | 1C          |             | A70-2067-15 | REMOTE CONTROLLER ASSY (RC-527) |                  |
| -                 |             |             | B46-0681-04 | ID CARD                         |                  |
| -                 |             |             | B46-0682-00 | WARRANTY CARD                   |                  |
| -                 |             |             | B58-1426-04 | CAUTION CARD                    |                  |
| -                 |             | *           | B64-3311-00 | INSTRUCTION MANUAL (ENGLISH)    |                  |
| -                 |             | *           | B64-3312-00 | INSTRUCTION MANUAL (FRE.SPA.)   |                  |
| 210               | 1C          |             | B07-3125-01 | ESCUTCHEON                      |                  |
| 211               | 2C          |             | B07-3095-02 | ESCUTCHEON                      |                  |
| 214               | 2C          | *           | B10-4837-04 | FRONT GLASS (RC-SENSOR)         |                  |
| 215               | 2C          | *           | B19-2359-04 | LIGHTING BOARD                  |                  |
| 216               | 2C          | *           | B19-2360-03 | LIGHTING BOARD (JOG-BASE)       |                  |
| 217               | 2C          |             | B43-1518-04 | BADGE                           |                  |
| 218               | 1C          |             | D10-4589-04 | LEVER                           |                  |
| 219               | 3C          |             | D10-4805-03 | LEVER                           |                  |
| 220               | 3C          |             | D10-4806-03 | LEVER                           |                  |
| 222               | 3C          |             | D10-4807-13 | LEVER                           |                  |
| 226               | 3D          |             | D10-4875-13 | SLIDER ASSY                     |                  |
| 227               | 2D          |             | D13-2318-13 | RACK (GEAR)                     |                  |
| 229               | 2D          |             | D13-2320-04 | GEAR                            |                  |
| 230               | 2D          |             | D13-2321-04 | GEAR                            |                  |
| 231               | 3C          |             | D21-2442-04 | SHAFT                           |                  |
| 232               | 3C          |             | D21-2443-04 | SHAFT                           |                  |
| 234               | 2C          |             | E29-2026-03 | CONDUCTIVE RUBBER               |                  |
| 235               | 1D          |             | E30-6426-05 | CORD WITH PINPLUG               |                  |
| △ DC1             | 1C          |             | E30-6428-05 | DC CORD                         |                  |
| FC1               | 1D          |             | E39-0736-05 | FLAT CABLE (24P)                |                  |
| 243               | 1D          |             | F29-0626-04 | INSULATING COVER                |                  |
| △ F1              | 2D          |             | F52-0023-05 | FUSE (MINI BLADE TYPE) 10A      |                  |
| 245               | 3C          |             | G01-3210-04 | TORSION COIL SPRING             |                  |
| 246               | 3C          |             | G01-3211-04 | TORSION COIL SPRING             |                  |
| 247               | 3D          |             | G01-3212-04 | TORSION COIL SPRING             |                  |
| 248               | 2C          |             | G01-3213-04 | COMPRESSION SPRING              |                  |
| 249               | 3D          |             | G01-3215-04 | EXTENSION SPRING                |                  |
| 250               | 2C          | *           | G01-3291-04 | COMPRESSION SPRING              |                  |
| 252               | 3C          |             | G11-3594-04 | CUSHION                         |                  |
| 253               | 2D          |             | G11-3646-04 | CUSHION                         |                  |
| 254               | 3D          | *           | G16-1606-04 | SHEET                           |                  |
| 255               | 3D          |             | G16-1482-14 | SHEET                           |                  |
| 256               | 3D          |             | G16-1483-04 | SHEET                           |                  |
| -                 |             |             | H10-4925-02 | POLYSTYRENE FOAMED FIXTURE      |                  |
| -                 |             |             | H25-0329-04 | PROTECTION BAG (280X450X0.03)   |                  |
| -                 |             |             | H25-0337-04 | PROTECTION BAG (180X300X0.03)   |                  |
| -                 |             | *           | H54-3654-03 | ITEM CARTON CASE                |                  |
| 258               | 2C          |             | J19-7053-02 | HOLDER                          |                  |
| 259               | 1C          |             | J21-9716-03 | MOUNTING HARDWARE ASSY          |                  |

(North America)

| Ref. No.                              | A<br>d<br>d | N<br>e<br>w | Parts No.     | Description                   | Desti-<br>nation |
|---------------------------------------|-------------|-------------|---------------|-------------------------------|------------------|
| 260                                   | 2D          |             | J22-0114-03   | MOUNTING HARDWARE ASSY        |                  |
| 261                                   | 3D          |             | J22-0263-02   | MOUNTING HARDWARE             |                  |
| 264                                   | 3D          |             | J31-1062-04   | COLLAR                        |                  |
| 266                                   | 2C          | *           | K24-4428-03   | PUSH KNOB (EJECT)             |                  |
| 267                                   | 2C          | *           | K24-4431-03   | PUSH KNOB (ATT)               |                  |
| 268                                   | 2C          |             | K24-4292-03   | PUSH KNOB (SRC)               |                  |
| 269                                   | 2C          | *           | K24-4434-03   | PUSH KNOB (RELEASE)           |                  |
| 270                                   | 2C          | *           | K25-1781-02   | PUSH KNOB (PRESET)            |                  |
| 271                                   | 3C          |             | K28-0103-03   | KEY TOP (VOL)                 |                  |
| 273                                   | 3C          |             | K28-0106-03   | KEY TOP (CONTROL)             |                  |
| 275                                   | 3C          | *           | K29-7194-03   | KNOB (VOL)                    |                  |
| 276                                   | 1C          |             | N09-6280-05   | TAPPING SCREW                 |                  |
| 277                                   | 1C          |             | N99-1758-05   | SCREW SET                     |                  |
| A                                     | 3D          |             | N09-6269-05   | STEPPED SCREW (M2X2)          |                  |
| B                                     | 3D          |             | N09-6140-05   | STEPPED SCREW (M1.7X2)        |                  |
| C                                     | 3D          |             | N09-6141-05   | STEPPED SCREW (M2X2)          |                  |
| D                                     | 3D          |             | N09-6142-05   | MACHINE SCREW (M2X2.5)        |                  |
| E                                     | 3C          |             | N09-6190-05   | TAPPING SCREW (1.7X4.5)       |                  |
| F                                     | 3D          |             | N19-2305-04   | FLAT WASHER (3.05X5.83)       |                  |
| G                                     | 2D          |             | N19-2184-04   | FLAT WASHER (1.6X4.0)         |                  |
| H                                     | 3C          |             | N19-2193-04   | FLAT WASHER (1.2X3)           |                  |
| J                                     | 2D          |             | N24-3015-60   | E TYPE RETAINING RING         |                  |
| K                                     | 2D          |             | N09-6286-05   | STEPPED SCREW (M2X1.8)        |                  |
| L                                     | 3D          |             | N09-6326-05   | MACHINE SCREW (M2X2.5)        |                  |
| M                                     | 2C          |             | N78-2660-48   | PAN HEAD TAPTITE SCREW        |                  |
| N                                     | 2C          |             | N80-2006-48   | PAN HEAD TAPTITE SCREW        |                  |
| P                                     | 2C          |             | N80-2008-43   | PAN HEAD TAPTITE SCREW        |                  |
| Q                                     | 1D          |             | N83-3005-48   | PAN HEAD TAPTITE SCREW        |                  |
| R                                     | 2D          |             | N83-3008-48   | PAN HEAD TAPTITE SCREW        |                  |
| S                                     | 3C          |             | N86-2004-43   | BINDING HEAD TAPTITE SCREW    |                  |
| PM1                                   | 2D          |             | T42-1086-14   | MOTOR ASSY                    |                  |
| 282                                   | 1C          |             | W01-1661-05   | CARRYING CASE                 |                  |
| DME1                                  | 1D          |             | X92-5470-00   | CD MECHANISM ASSY (DXM-6680W) |                  |
| <b>SUB-CIRCUIT UNIT (X16-2570-10)</b> |             |             |               |                               |                  |
| J1                                    |             | *           | E58-1038-05   | RECTANGULAR RECEPTACLE        |                  |
| 287                                   | 3C          |             | F20-2284-14   | INSULATING SHEET              |                  |
| FPC1                                  | 3C          |             | J86-0003-05   | FPC (LEAD FREE)               |                  |
| <b>SWITCH UNIT (X16-2920-13)</b>      |             |             |               |                               |                  |
| D1-11                                 |             |             | B30-1605-05   | LED (2COLOR PG/RED)           |                  |
| D12-17                                |             |             | B30-1729-05   | LED (1608,BLUE)               |                  |
| C1,2                                  |             |             | CK73GB1H103K  | CHIP C 0.010UF K              |                  |
| C3                                    |             |             | CC73GCH1H470J | CHIP C 47PF J                 |                  |
| C4                                    |             |             | CK73FB1A225K  | CHIP C 2.2UF K                |                  |
| C7-12                                 |             |             | CK73GB1H103K  | CHIP C 0.010UF K              |                  |
| J1                                    |             |             | E59-0846-05   | RECTANGULAR PLUG              |                  |
| 289                                   | 2C          |             | J19-7055-03   | HOLDER                        |                  |
| CP1                                   |             |             | RK74HB1J102J  | CHIP-COM 1.0K J 1/16W         |                  |
| CP2                                   |             |             | RK74GA1J102J  | CHIP-COM 1.0K J 1/16W         |                  |

△ Indicates safety critical components.

## PARTS LIST

## SWITCH UNIT (X16-2920-13)

| Ref. No.                            | Add | New | Parts No.      | Description                | Destination |
|-------------------------------------|-----|-----|----------------|----------------------------|-------------|
| CP3                                 |     |     | RK74HB1J102J   | CHIP-COM 1.0K J 1/16W      |             |
| R1                                  |     |     | RK73EB2E101J   | CHIP R 100 J 1/4W          |             |
| R2-6                                |     |     | RK73EB2E471J   | CHIP R 470 J 1/4W          |             |
| R7                                  |     |     | RK73GB2A103J   | CHIP R 10K J 1/10W         |             |
| R8                                  |     |     | RK73GB2A4R7J   | CHIP R 4.7 J 1/10W         |             |
| R9                                  |     |     | RK73GB2A474J   | CHIP R 470K J 1/10W        |             |
| R10                                 |     |     | RK73GB2A203J   | CHIP R 20K J 1/10W         |             |
| R11                                 |     |     | RK73GB2A104J   | CHIP R 100K J 1/10W        |             |
| R12                                 |     |     | RK73GB2A101J   | CHIP R 100 J 1/10W         |             |
| R13                                 |     |     | RK73GB2A223J   | CHIP R 22K J 1/10W         |             |
| R14                                 |     |     | RK73GB2A471J   | CHIP R 470 J 1/10W         |             |
| R15                                 |     |     | RK73EB2E621J   | CHIP R 620 J 1/4W          |             |
| R16-18                              |     |     | RK73FB2B431J   | CHIP R 430 J 1/8W          |             |
| R19,20                              |     |     | RK73GB2A331J   | CHIP R 330 J 1/10W         |             |
| R21                                 |     |     | RK73GB2A751J   | CHIP R 750 J 1/10W         |             |
| R23,24                              |     |     | RK73GB2A332J   | CHIP R 3.3K J 1/10W        |             |
| R25,26                              |     |     | RK73SB3A200J   | CHIP R 20 J 1W             |             |
| R28                                 |     |     | RK73GB2A223J   | CHIP R 22K J 1/10W         |             |
| R29                                 |     |     | RK73GB2A472J   | CHIP R 4.7K J 1/10W        |             |
| R32,33                              |     |     | RK73GB2A471J   | CHIP R 470 J 1/10W         |             |
| W1,2                                |     |     | R92-2053-05    | CHIP R 0 OHM J 1/8W        |             |
| S6                                  |     |     | S70-0901-05    | TACT SWITCH                |             |
| S11                                 |     |     | S70-0901-05    | TACT SWITCH                |             |
| S20                                 |     |     | S70-0901-05    | TACT SWITCH                |             |
| S21                                 |     | *   | S70-0941-05    | TACT SWITCH                |             |
| S2                                  |     |     | T99-0456-15    | ROTARY ENCODER             |             |
| D21-23                              |     |     | STZ6.8N        | ZENER DIODE                |             |
| D24                                 |     |     | STZ6.2N        | ZENER DIODE                |             |
| ED1                                 |     |     | 3-BT-226N      | FLUORESCENT INDICATOR TUBE |             |
| IC1                                 |     |     | LC75756W       | MOS-IC                     |             |
| IC2                                 |     |     | PN44S22M02KW   | ANALOGUE IC                |             |
| Q1                                  |     |     | KRA307-P       | DIGITAL TRANSISTOR         |             |
| Q2                                  |     |     | 2SA1577        | TRANSISTOR                 |             |
| Q3                                  |     |     | KRC404-P       | DIGITAL TRANSISTOR         |             |
| Q4,5                                |     |     | KTC4075EP(Y,GR | TRANSISTOR                 |             |
| Q6                                  |     |     | 2SA1576A       | TRANSISTOR                 |             |
| Q7                                  |     |     | KRC404-P       | DIGITAL TRANSISTOR         |             |
| <b>CD PLAYER UNIT (X32-5860-00)</b> |     |     |                |                            |             |
| C1,2                                |     |     | CK73GB1A105K   | CHIP C 1.0UF K             |             |
| C3,4                                |     |     | CC73GCH1H681J  | CHIP C 680PF J             |             |
| C5,6                                |     |     | CC73GCH1H680J  | CHIP C 68PF J              |             |
| C7,8                                |     |     | CK73GB1H222K   | CHIP C 2200PF K            |             |
| C9                                  |     |     | CK73GB1H104K   | CHIP C 0.10UF K            |             |
| C10                                 |     |     | CK73FB0J106K   | CHIP C 10UF K              |             |
| C11                                 |     |     | CK73GB1H103K   | CHIP C 0.010UF K           |             |
| C12                                 |     |     | CK73GB1A105K   | CHIP C 1.0UF K             |             |
| C20                                 |     |     | CC73GCH1H391J  | CHIP C 390PF J             |             |
| C21                                 |     |     | CK73GB1H472K   | CHIP C 4700PF K            |             |
| C22                                 |     |     | CK73GB1H152K   | CHIP C 1500PF K            |             |
| C23                                 |     |     | CC73GCH1H391J  | CHIP C 390PF J             |             |
| C24                                 |     |     | CK73EB1A475K   | CHIP C 4.7UF K             |             |
| C25                                 |     |     | CK73FB0J106K   | CHIP C 10UF K              |             |
| C30                                 |     |     | CK73GB1H104K   | CHIP C 0.10UF K            |             |

| Ref. No. | Add | New | Parts No.     | Description           | Destination |
|----------|-----|-----|---------------|-----------------------|-------------|
| C31      |     |     | CK73GB1A105K  | CHIP C 1.0UF K        |             |
| C32      |     |     | CK73GB1H104K  | CHIP C 0.10UF K       |             |
| C34      |     |     | CK73FB0J475K  | CHIP C 4.7UF K        |             |
| C35      |     |     | CK73GB1H104K  | CHIP C 0.10UF K       |             |
| C38-40   |     |     | CK73GB1H104K  | CHIP C 0.10UF K       |             |
| C41      |     |     | CK73GB0J225K  | CHIP C 2.2UF K        |             |
| C42      |     |     | CK73GB1A105K  | CHIP C 1.0UF K        |             |
| C43      |     |     | C92-1792-05   | ELECTRO 22UF 6.3WV    |             |
| C46      |     |     | CK73GB1H104K  | CHIP C 0.10UF K       |             |
| C50      |     |     | CK73GB1H104K  | CHIP C 0.10UF K       |             |
| C51      |     |     | CK73GB1H102K  | CHIP C 1000PF K       |             |
| C52      |     |     | CK73GB0J225K  | CHIP C 2.2UF K        |             |
| C53,54   |     |     | CK73GB0J475K  | CHIP C 4.7UF K        |             |
| C55      |     |     | CK73FB0J106K  | CHIP C 10UF K         |             |
| C56,57   |     |     | CK73GB1H104K  | CHIP C 0.10UF K       |             |
| C58      |     |     | CK73FB0J475K  | CHIP C 4.7UF K        |             |
| C60      |     |     | CK73GB0J225K  | CHIP C 2.2UF K        |             |
| C61      |     |     | CK73GB1H104K  | CHIP C 0.10UF K       |             |
| C62      |     |     | CK73FB0J475K  | CHIP C 4.7UF K        |             |
| C63      |     |     | CK73GB0J225K  | CHIP C 2.2UF K        |             |
| C64      |     |     | CK73GB1H152K  | CHIP C 1500PF K       |             |
| C65,66   |     |     | CK73GB1H102K  | CHIP C 1000PF K       |             |
| C67      |     |     | CK73GB1H152K  | CHIP C 1500PF K       |             |
| C68      |     |     | CK73GB1H103K  | CHIP C 0.010UF K      |             |
| C69      |     |     | CK73GB1H332K  | CHIP C 3300PF K       |             |
| C70      |     |     | CK73GB1H682K  | CHIP C 6800PF K       |             |
| C71      |     |     | CK73GB1H104K  | CHIP C 0.10UF K       |             |
| C72      |     |     | CK73GB1H103K  | CHIP C 0.010UF K      |             |
| C73      |     |     | CC73GCH1H120J | CHIP C 12PF J         |             |
| C74      |     |     | CC73GCH1H060D | CHIP C 6.0PF D        |             |
| C75      |     |     | CK73GB1H104K  | CHIP C 0.10UF K       |             |
| C76      |     |     | CC73GCH1H030C | CHIP C 3.0PF C        |             |
| C77      |     |     | CC73GCH1H020C | CHIP C 2.0PF C        |             |
| C78      |     |     | CK73GB0J225K  | CHIP C 2.2UF K        |             |
| C79,80   |     |     | CK73GB1H104K  | CHIP C 0.10UF K       |             |
| C81,82   |     |     | CC73GCH1H470J | CHIP C 47PF J         |             |
| C83      |     |     | CK73GB1H103K  | CHIP C 0.010UF K      |             |
| C85      |     |     | CK73FB0J106K  | CHIP C 10UF K         |             |
| C96      |     |     | CK73GB0J475K  | CHIP C 4.7UF K        |             |
| C100     |     |     | CK73GB1C224K  | CHIP C 0.22UF K       |             |
| C101     |     |     | CK73GB1H103K  | CHIP C 0.010UF K      |             |
| CN1      |     |     | E41-2083-15   | FLAT CABLE CONNECTOR  |             |
| CN2      |     |     | E41-2297-05   | FLAT CABLE CONNECTOR  |             |
| X1       |     |     | L78-0862-05   | RESONATOR (16.00MHZ)  |             |
| X2       |     |     | L78-0851-05   | RESONATOR (16.93MHZ)  |             |
| CP1      |     |     | RK74GA1J101J  | CHIP-COM 100 J 1/16W  |             |
| CP2      |     |     | RK74GA1J472J  | CHIP-COM 4.7K J 1/16W |             |
| CP4,5    |     |     | RK74GA1J101J  | CHIP-COM 100 J 1/16W  |             |
| CP6,7    |     |     | RK74HB1J103J  | CHIP-COM 10K J 1/16W  |             |
| CP8-11   |     |     | RK74HB1J101J  | CHIP-COM 100 J 1/16W  |             |
| CP12     |     |     | RK74GA1J101J  | CHIP-COM 100 J 1/16W  |             |
| CP13     |     |     | RK74GA1J103J  | CHIP-COM 10K J 1/16W  |             |
| CP14     |     |     | RK74GA1J101J  | CHIP-COM 100 J 1/16W  |             |

(North America)

△ Indicates safety critical components.

## PARTS LIST

## CD PLAYER UNIT (X32-5860-00)

| Ref. No.                                     | Add | New | Parts No.                                                                    | Description                                                                                                       | Destination |
|----------------------------------------------|-----|-----|------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------|-------------|
| CP27<br>CP28<br>R1,2<br>R3,4<br>R5,6         |     |     | RK74GB1J472J<br>RK74GB1J103J<br>RK73GH2A103D<br>RK73GB2A272J<br>RK73GB2A752J | CHIP-COM 4.7K J 1/16W<br>CHIP-COM 10K J 1/16W<br>CHIP R 10K D 1/10W<br>CHIP R 2.7K J 1/10W<br>CHIP R 7.5K J 1/10W |             |
| R7,8<br>R9,10<br>R11,12<br>R14-16<br>R20     |     |     | RK73GB2A333J<br>RK73GH2A103D<br>RK73GB2A331J<br>RK73GB2A2R2J<br>RK73GB2A123J | CHIP R 33K J 1/10W<br>CHIP R 10K D 1/10W<br>CHIP R 330 J 1/10W<br>CHIP R 2.2 J 1/10W<br>CHIP R 12K J 1/10W        |             |
| R21<br>R22,23<br>R24<br>R25<br>R26           |     |     | RK73GB2A133J<br>RK73GB2A123J<br>RK73GB2A432J<br>RK73GB2A472J<br>RK73GB2A183J | CHIP R 13K J 1/10W<br>CHIP R 12K J 1/10W<br>CHIP R 4.3K J 1/10W<br>CHIP R 4.7K J 1/10W<br>CHIP R 18K J 1/10W      |             |
| R27<br>R28<br>R29<br>R30<br>R31              |     |     | RK73GB2A163J<br>RK73GB2A133J<br>RK73GB2A102J<br>RK73GB2A101J<br>RK73GB2A133J | CHIP R 16K J 1/10W<br>CHIP R 13K J 1/10W<br>CHIP R 1.0K J 1/10W<br>CHIP R 100 J 1/10W<br>CHIP R 13K J 1/10W       |             |
| R40-44<br>R48<br>R50-52<br>R55<br>R56        |     |     | RK73GB2A103J<br>RK73GB2A472J<br>RK73GB2A103J<br>RK73GB2A103J<br>RK73GB2A101J | CHIP R 10K J 1/10W<br>CHIP R 4.7K J 1/10W<br>CHIP R 10K J 1/10W<br>CHIP R 10K J 1/10W<br>CHIP R 100 J 1/10W       |             |
| R57<br>R70<br>R71<br>R72<br>R74              |     |     | RK73GB2A472J<br>RK73GB2A102J<br>RK73GB2A101J<br>RK73GB2A333J<br>RK73GB2A333J | CHIP R 4.7K J 1/10W<br>CHIP R 1.0K J 1/10W<br>CHIP R 100 J 1/10W<br>CHIP R 33K J 1/10W<br>CHIP R 33K J 1/10W      |             |
| R75<br>R78<br>R79<br>R80,81<br>R88           |     |     | RK73GB2A750J<br>RK73GB2A103J<br>RK73GB2A333J<br>RK73GB2A682J<br>RK73GB2A472J | CHIP R 75 J 1/10W<br>CHIP R 10K J 1/10W<br>CHIP R 33K J 1/10W<br>CHIP R 6.8K J 1/10W<br>CHIP R 4.7K J 1/10W       |             |
| R89<br>R90<br>R91<br>R92<br>R93              |     |     | RK73GB2A104J<br>RK73GB2A4R7J<br>RK73GB2A910J<br>RK73GB2A225J<br>RK73GB2A103J | CHIP R 100K J 1/10W<br>CHIP R 4.7 J 1/10W<br>CHIP R 91 J 1/10W<br>CHIP R 2.2M J 1/10W<br>CHIP R 10K J 1/10W       |             |
| R100<br>R101<br>R102<br>R103,104<br>R112,113 |     |     | RK73GB2A470J<br>RK73GB2A102J<br>RK73GB2A272J<br>RK73GB2A223J<br>RK73GB2A100J | CHIP R 47 J 1/10W<br>CHIP R 1.0K J 1/10W<br>CHIP R 2.7K J 1/10W<br>CHIP R 22K J 1/10W<br>CHIP R 10 J 1/10W        |             |
| R150<br>R151<br>R152<br>W1<br>W20,21         |     |     | RK73GB2A103J<br>RK73GB2A2R2J<br>RK73EB2E3R3J<br>R92-1252-05<br>R92-1252-05   | CHIP R 10K J 1/10W<br>CHIP R 2.2 J 1/10W<br>CHIP R 3.3 J 1/4W<br>CHIP R 0 OHM J 1/16W<br>CHIP R 0 OHM J 1/16W     |             |
| S1,2<br>S3                                   |     |     | S68-0863-05<br>S68-0862-05                                                   | PUSH SWITCH<br>PUSH SWITCH                                                                                        |             |
| D1<br>IC1                                    |     |     | DAP202U<br>TAR5S33-F                                                         | DIODE<br>ANALOGUE IC                                                                                              |             |

| Ref. No.                                     | Add | New | Parts No.                                                                     | Description                                                                                               | Destination |
|----------------------------------------------|-----|-----|-------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------|-------------|
| IC2<br>IC3<br>IC4<br>IC5<br>IC6              |     |     | NJM4580V-ZB<br>BA5824FP<br>703030BYGCGJ21A<br>XC6219B332MR<br>BA33BCOWFP      | ANALOGUE IC<br>ANALOGUE IC<br>MICROCONTROLLER IC<br>ANALOGUE IC<br>ANALOGUE IC                            |             |
| IC7<br>IC9<br>IC11<br>Q1<br>Q4               |     |     | UPD63763CGJ<br>BR24L02FV-W<br>TC7SET32FU-F<br>2SA1576A<br>2SB0970             | MOS-IC<br>ROM IC<br>MOS-IC<br>TRANSISTOR<br>TRANSISTOR                                                    |             |
| Q5<br>Q6<br>Q7<br>Q8                         |     |     | DTA143XUA<br>DTC143XUA<br>DTA143XUA<br>DTC143XUA                              | DIGITAL TRANSISTOR<br>DIGITAL TRANSISTOR<br>DIGITAL TRANSISTOR<br>DIGITAL TRANSISTOR                      |             |
| <b>ELECTRIC UNIT (X34-3420-15)</b>           |     |     |                                                                               |                                                                                                           |             |
| D302                                         |     |     | B30-1567-05                                                                   | LED (1608,RED)                                                                                            |             |
| C1<br>C3<br>C4<br>C5<br>C6                   |     |     | C90-6746-05<br>C90-5692-05<br>CK73GB1H103K<br>CD04AS1V100M<br>CD04AS0J101M    | ELECTRO 3300UF 16WV<br>ELECTRO 220UF 16WV<br>CHIP C 0.010UF K<br>ELECTRO 10UF 35WV<br>ELECTRO 100UF 6.3WV |             |
| C7<br>C8<br>C9,10<br>C11<br>C12              |     |     | CK73FB1C105K<br>CD04AT1A221M<br>CD04AS1C101M<br>CD04AS1HR47M<br>CD04BK1E101M  | CHIP C 1.0UF K<br>ELECTRO 220UF 10WV<br>ELECTRO 100UF 16WV<br>ELECTRO 0.47UF 50WV<br>ELECTRO 100UF 25WV   |             |
| C14<br>C15<br>C16<br>C17<br>C19              |     |     | CD04AS1C470M<br>CD04AS1C220M<br>CD04AS1C470M<br>CD04BK1E101M<br>CK73GB1C224K  | ELECTRO 47UF 16WV<br>ELECTRO 22UF 16WV<br>ELECTRO 47UF 16WV<br>ELECTRO 100UF 25WV<br>CHIP C 0.22UF K      |             |
| C20<br>C101<br>C102<br>C103<br>C104          |     |     | CD04BK1A221M<br>CD04AS1H3R3M<br>CK73GB1A105K<br>CK73GB1H104K<br>CK73GB1H103K  | ELECTRO 220UF 10WV<br>ELECTRO 3.3UF 50WV<br>CHIP C 1.0UF K<br>CHIP C 0.10UF K<br>CHIP C 0.010UF K         |             |
| C105<br>C106<br>C107<br>C108-111<br>C201     |     |     | CK73GB1H223K<br>CK73FB1C105K<br>CK73GB1H102K<br>CK73GB1H103K<br>CD04AS0J470M  | CHIP C 0.022UF K<br>CHIP C 1.0UF K<br>CHIP C 1000PF K<br>CHIP C 0.010UF K<br>ELECTRO 47UF 6.3WV           |             |
| C202<br>C203,204<br>C205<br>C206,207<br>C208 |     |     | CK73GB1H103K<br>CC73GCH1H220J<br>CK73GB1H104K<br>CK73GB1H103K<br>CK73GB1H102K | CHIP C 0.010UF K<br>CHIP C 22PF J<br>CHIP C 0.10UF K<br>CHIP C 0.010UF K<br>CHIP C 1000PF K               |             |
| C209-211<br>C302-305<br>C307<br>C309<br>C310 |     |     | CK73GB1H103K<br>CK73GB1H103K<br>CK73GB1H103K<br>CK73GB1H103K<br>CD04BK1E101M  | CHIP C 0.010UF K<br>CHIP C 0.010UF K<br>CHIP C 0.010UF K<br>CHIP C 0.010UF K<br>ELECTRO 100UF 25WV        |             |
| C317-319<br>C320<br>C324                     |     |     | CK73GB1H104K<br>CK73GB1H103K<br>CC73GCH1H101J                                 | CHIP C 0.10UF K<br>CHIP C 0.010UF K<br>CHIP C 100PF J                                                     |             |

(North America)

△ Indicates safety critical components.

## PARTS LIST

## ELECTRIC UNIT (X34-3420-15)

| Ref. No. | Add | New | Parts No.     | Description                    | Destination | Ref. No.  | Add | New | Parts No.    | Description           | Destination |
|----------|-----|-----|---------------|--------------------------------|-------------|-----------|-----|-----|--------------|-----------------------|-------------|
| C326     |     |     | CC73GCH1H101J | CHIP C 100PF J                 |             | CP206     |     |     | RK74GB1J222J | CHIP-COM 2.2K J 1/16W |             |
| C401     |     |     | CD04AS1C470M  | ELECTRO 47UF 16WV              |             | CP207,208 |     |     | RK74GA1J102J | CHIP-COM 1.0K J 1/16W |             |
| C402,403 |     |     | CK73FB1A335K  | CHIP C 3.3UF K                 |             | R1        |     |     | RK73FB2B153J | CHIP R 15K J 1/8W     |             |
| C404     |     |     | CK73GB1A105K  | CHIP C 1.0UF K                 |             | R2        |     |     | RK73GB2A101J | CHIP R 100 J 1/10W    |             |
| C405     |     |     | CD04AT1H4R7M  | ELECTRO 4.7UF 50WV             |             | R3        |     |     | RK73GB2A223J | CHIP R 22K J 1/10W    |             |
| C406,407 |     |     | CD04AS1H010M  | ELECTRO 1UF 50WV               |             | R4        |     |     | RK73GB2A472J | CHIP R 4.7K J 1/10W   |             |
| C408,409 |     |     | CK73FB1C105K  | CHIP C 1.0UF K                 |             | R5        |     |     | RK73FB2B221J | CHIP R 220 J 1/8W     |             |
| C410     |     |     | CK73GB1H103K  | CHIP C 0.010UF K               |             | R6        |     |     | RK73GB2A153J | CHIP R 15K J 1/10W    |             |
| C412     |     |     | CD04AS1V100M  | ELECTRO 10UF 35WV              |             | R7        |     |     | RK73GH2A243D | CHIP R 24K D 1/10W    |             |
| C413,414 |     |     | CK73FB1E474K  | CHIP C 0.47UF K                |             | R8        |     |     | RK73GH2A432D | CHIP R 4.3K D 1/10W   |             |
| C415,416 |     |     | CD04AS1H2R2M  | ELECTRO 2.2UF 50WV             |             | R9        |     |     | RK73FB2B102J | CHIP R 1.0K J 1/8W    |             |
| C417-422 |     |     | CD04AS1C220M  | ELECTRO 22UF 16WV              |             | R10       |     |     | RK73FB2B152J | CHIP R 1.5K J 1/8W    |             |
| C431     |     |     | CD04AS1V100M  | ELECTRO 10UF 35WV              |             | R11       |     |     | RK73GH2A303D | CHIP R 30K D 1/10W    |             |
| C435,436 |     |     | CK73GB1H152K  | CHIP C 1500PF K                |             | R12       |     |     | RK73GH2A392D | CHIP R 3.9K D 1/10W   |             |
| C437,438 |     |     | CC73GCH1H101J | CHIP C 100PF J                 |             | R13-16    |     |     | RK73GB2A473J | CHIP R 47K J 1/10W    |             |
| C501     |     |     | CK73FB1C105K  | CHIP C 1.0UF K                 |             | R20       |     |     | RK73GB2A473J | CHIP R 47K J 1/10W    |             |
| C502     |     |     | CD04AS1C101M  | ELECTRO 100UF 16WV             |             | R21       |     |     | RK73GB2A103J | CHIP R 10K J 1/10W    |             |
| C503-506 |     |     | C90-5700-05   | NP-ELEC 4.7UF 16WV             |             | R22       |     |     | RK73SB3A220J | CHIP R 22 J 1W        |             |
| C507     |     |     | CK73FB1C105K  | CHIP C 1.0UF K                 |             | R23       |     |     | RK73GB2A102J | CHIP R 1.0K J 1/10W   |             |
| C510,511 |     |     | CD04AS1HR47M  | ELECTRO 0.47UF 50WV            |             | R24       |     |     | RK73GB2A513J | CHIP R 51K J 1/10W    |             |
| C512     |     |     | CD04AS0J470M  | ELECTRO 47UF 6.3WV             |             | R25,26    |     |     | RK73GB2A102J | CHIP R 1.0K J 1/10W   |             |
| C513     |     |     | CK73GB1H103K  | CHIP C 0.010UF K               |             | R27       |     |     | RK73GB2A221J | CHIP R 220 J 1/10W    |             |
| C529     |     |     | C90-6742-05   | NP-ELECT 4.7UF 16WV            |             | R28,29    |     |     | RK73GB2A2R2J | CHIP R 2.2 J 1/10W    |             |
| C944     |     |     | CK73GB1H104K  | CHIP C 0.10UF K                |             | R30       |     |     | RK73GB2A332J | CHIP R 3.3K J 1/10W   |             |
| C953,954 |     |     | CD04AS1V100M  | ELECTRO 10UF 35WV              |             | R31       |     |     | RK73GB2A222J | CHIP R 2.2K J 1/10W   |             |
| C955     |     |     | CK73GB1H103K  | CHIP C 0.010UF K               |             | R32       |     |     | RK73GB2A223J | CHIP R 22K J 1/10W    |             |
| C956     |     |     | CD04AT1A101M  | ELECTRO 100UF 10WV             |             | R102,103  |     |     | RK73EB2E103J | CHIP R 10K J 1/4W     |             |
| C957,958 |     |     | CK73GB1H102K  | CHIP C 1000PF K                |             | R104      |     |     | RK73EB2E472J | CHIP R 4.7K J 1/4W    |             |
| C959     |     |     | CD04AS1C470M  | ELECTRO 47UF 16WV              |             | R105      |     |     | RK73SB3A471J | CHIP R 470 J 1W       |             |
| C960     |     |     | CK73GB1H104K  | CHIP C 0.10UF K                |             | R106      |     |     | RK73GB2A223J | CHIP R 22K J 1/10W    |             |
| C961     |     |     | CD04AS1V100M  | ELECTRO 10UF 35WV              |             | R107      |     |     | RK73FB2B472J | CHIP R 4.7K J 1/8W    |             |
| CN1      |     |     | E41-2244-05   | FLAT CABLE CONNECTOR           |             | R108      |     |     | R92-5024-05  | CHIP R 1K J 1/2W      |             |
| CN2      |     |     | E41-2259-05   | PIN ASSY                       |             | R109      |     |     | RK73GB2A223J | CHIP R 22K J 1/10W    |             |
| CN3      |     |     | E41-2245-05   | FLAT CABLE CONNECTOR           |             | R110      |     |     | R92-5024-05  | CHIP R 1K J 1/2W      |             |
| CN4      |     |     | E41-2446-05   | PIN ASSY                       |             | R112      |     |     | RK73GB2A473J | CHIP R 47K J 1/10W    |             |
| △ J1     |     |     | E58-0991-05   | RECTANGULAR RECEPTACLE         |             | R113,114  |     |     | RK73GB2A104J | CHIP R 100K J 1/10W   |             |
| J2       |     |     | E56-0855-05   | CYLINDRICAL RECEPTACLE         |             | R115      |     |     | RK73FB2B683J | CHIP R 68K J 1/8W     |             |
| J3       |     |     | E63-0896-05   | PIN JACK                       |             | R116      |     |     | RK73GB2A393J | CHIP R 39K J 1/10W    |             |
| W1       | 1D  |     | E30-6218-15   | CORD WITH PLUG                 |             | R117      |     |     | RK73FB2B203J | CHIP R 20K J 1/8W     |             |
|          |     |     |               |                                |             | R118      |     |     | RK73GB2A104J | CHIP R 100K J 1/10W   |             |
| L1       |     |     | L33-1988-05   | CHOKE COIL ASSY                |             | R122,123  |     |     | RK73GB2A103J | CHIP R 10K J 1/10W    |             |
| L2       |     |     | L33-2262-05   | CHOKE COIL                     |             | R124      |     |     | RK73GB2A104J | CHIP R 100K J 1/10W   |             |
| L3       |     |     | L33-1978-05   | CHOKE COIL                     |             | R125      |     |     | RK73GB2A223J | CHIP R 22K J 1/10W    |             |
| L201     |     |     | L40-4795-91   | SMALL FIXED INDUCTOR (4.7UH,J) |             | R126      |     |     | R92-5088-05  | CHIP R 3.3K J 3/4W    |             |
| L202     |     |     | L92-0075-05   | CHIP FERRITE                   |             | R127      |     |     | RK73EB2E333J | CHIP R 33K J 1/4W     |             |
| L301     |     |     | L33-2260-05   | CHOKE COIL                     |             | R128,129  |     |     | RK73GB2A103J | CHIP R 10K J 1/10W    |             |
| L304     |     |     | L41-4795-33   | SMALL FIXED INDUCTOR (4.7U)    |             | R130      |     |     | RK73GB2A102J | CHIP R 1.0K J 1/10W   |             |
| X1       |     |     | L77-2880-05   | CRYSTAL RESONATOR              |             | R131      |     |     | RK73GB2A473J | CHIP R 47K J 1/10W    |             |
| X2       |     |     | L78-0872-05   | RESONATOR (12MHZ)              |             | R201      |     |     | RK73GB2A222J | CHIP R 2.2K J 1/10W   |             |
|          |     |     |               |                                |             | R202      |     |     | RK73GB2A225J | CHIP R 2.2M J 1/10W   |             |
| Q        | 2D  |     | N83-3005-48   | PAN HEAD TAPTITE SCREW         |             | R203      |     |     | RK73GB2A104J | CHIP R 100K J 1/10W   |             |
| T        | 2D  |     | N80-3010-48   | PAN HEAD TAPTITE SCREW         |             | R204      |     |     | RK73GB2A102J | CHIP R 1.0K J 1/10W   |             |
| U        | 2D  |     | N82-2608-48   | BINDING HEAD TAPTITE SCREW     |             | R207,208  |     |     | RK73GB2A103J | CHIP R 10K J 1/10W    |             |
| V        | 2D  |     | N83-3020-48   | PAN HEAD TAPTITE SCREW         |             | R210      |     |     | RK73GB2A473J | CHIP R 47K J 1/10W    |             |
| CP203    |     |     | RK74GA1J471J  | CHIP-COM 470 J 1/16W           |             | R211      |     |     | RK73GB2A102J | CHIP R 1.0K J 1/10W   |             |

(North America)

△ Indicates safety critical components.

## PARTS LIST

## ELECTRIC UNIT (X34-3420-15)

| Ref. No. | A<br>d<br>d | N<br>e<br>w | Parts No.    | Description         | Desti-<br>nation |
|----------|-------------|-------------|--------------|---------------------|------------------|
| R212     |             |             | RK73GB2A473J | CHIP R 47K J 1/10W  |                  |
| R213     |             |             | RK73GB2A102J | CHIP R 1.0K J 1/10W |                  |
| R215     |             |             | RK73GB2A104J | CHIP R 100K J 1/10W |                  |
| R216     |             |             | RK73GB2A102J | CHIP R 1.0K J 1/10W |                  |
| R218     |             |             | RK73GB2A102J | CHIP R 1.0K J 1/10W |                  |
| R224     |             |             | RK73GB2A473J | CHIP R 47K J 1/10W  |                  |
| R227,228 |             |             | RK73GB2A472J | CHIP R 4.7K J 1/10W |                  |
| R229,230 |             |             | RK73GB2A473J | CHIP R 47K J 1/10W  |                  |
| R232     |             |             | RK73GB2A473J | CHIP R 47K J 1/10W  |                  |
| R233     |             |             | RK73GB2A471J | CHIP R 470 J 1/10W  |                  |
| R234,235 |             |             | RK73GB2A392J | CHIP R 3.9K J 1/10W |                  |
| R236,237 |             |             | RK73GB2A473J | CHIP R 47K J 1/10W  |                  |
| R239     |             |             | RK73GB2A222J | CHIP R 2.2K J 1/10W |                  |
| R240     |             |             | RK73GB2A101J | CHIP R 100 J 1/10W  |                  |
| R241     |             |             | RK73GB2A222J | CHIP R 2.2K J 1/10W |                  |
| R249,250 |             |             | RK73GB2A473J | CHIP R 47K J 1/10W  |                  |
| R253     |             |             | RK73GB2A222J | CHIP R 2.2K J 1/10W |                  |
| R254     |             |             | RK73GB2A473J | CHIP R 47K J 1/10W  |                  |
| R257,258 |             |             | RK73GB2A222J | CHIP R 2.2K J 1/10W |                  |
| R259,260 |             |             | RK73GB2A104J | CHIP R 100K J 1/10W |                  |
| R261     |             |             | RK73GB2A333J | CHIP R 33K J 1/10W  |                  |
| R262-265 |             |             | RK73GB2A102J | CHIP R 1.0K J 1/10W |                  |
| R266,267 |             |             | RK73GB2A103J | CHIP R 10K J 1/10W  |                  |
| R268-271 |             |             | RK73GB2A471J | CHIP R 470 J 1/10W  |                  |
| R273-275 |             |             | RK73GB2A101J | CHIP R 100 J 1/10W  |                  |
| R279,280 |             |             | RK73GB2A473J | CHIP R 47K J 1/10W  |                  |
| R281,282 |             |             | RK73GB2A103J | CHIP R 10K J 1/10W  |                  |
| R283     |             |             | RK73GB2A223J | CHIP R 22K J 1/10W  |                  |
| R284     |             |             | RK73GB2A471J | CHIP R 470 J 1/10W  |                  |
| R301     |             |             | RK73EB2E102J | CHIP R 1.0K J 1/4W  |                  |
| R302,303 |             |             | RK73EB2E100J | CHIP R 10 J 1/4W    |                  |
| R304     |             |             | RK73EB2E102J | CHIP R 1.0K J 1/4W  |                  |
| R305-308 |             |             | RK73EB2E471J | CHIP R 470 J 1/4W   |                  |
| R309     |             |             | RK73EB2E472J | CHIP R 4.7K J 1/4W  |                  |
| R310     |             |             | RK73EB2E102J | CHIP R 1.0K J 1/4W  |                  |
| R313     |             |             | RK73GB2A472J | CHIP R 4.7K J 1/10W |                  |
| R314     |             |             | RK73GB2A8R2J | CHIP R 8.2 J 1/10W  |                  |
| R316     |             |             | RK73GB2A104J | CHIP R 100K J 1/10W |                  |
| R317     |             |             | RK73GB2A471J | CHIP R 470 J 1/10W  |                  |
| R318     |             |             | RK73GB2A104J | CHIP R 100K J 1/10W |                  |
| R319     |             |             | RK73GB2A471J | CHIP R 470 J 1/10W  |                  |
| R320     |             |             | RK73FB2B102J | CHIP R 1.0K J 1/8W  |                  |
| R321     |             |             | RK73GB2A223J | CHIP R 22K J 1/10W  |                  |
| R322     |             |             | RK73GB2A471J | CHIP R 470 J 1/10W  |                  |
| R323     |             |             | RK73GB2A472J | CHIP R 4.7K J 1/10W |                  |
| R324     |             |             | RK73GB2A471J | CHIP R 470 J 1/10W  |                  |
| R325     |             |             | RK73GB2A472J | CHIP R 4.7K J 1/10W |                  |
| R326     |             |             | RK73GB2A222J | CHIP R 2.2K J 1/10W |                  |
| R332     |             |             | RK73GB2A241J | CHIP R 240 J 1/10W  |                  |
| R334,335 |             |             | RK73GB2A102J | CHIP R 1.0K J 1/10W |                  |
| R341     |             |             | RK73GB2A9R1J | CHIP R 9.1 J 1/10W  |                  |
| R401     |             |             | RK73GB2A103J | CHIP R 10K J 1/10W  |                  |
| R402,403 |             |             | RK73GB2A361J | CHIP R 360 J 1/10W  |                  |
| R404,405 |             |             | RK73GB2A223J | CHIP R 22K J 1/10W  |                  |
| R406,407 |             |             | RK73GB2A361J | CHIP R 360 J 1/10W  |                  |

| Ref. No. | A<br>d<br>d | N<br>e<br>w | Parts No.    | Description          | Desti-<br>nation |
|----------|-------------|-------------|--------------|----------------------|------------------|
| R408,409 |             |             | RK73GB2A223J | CHIP R 22K J 1/10W   |                  |
| R410,411 |             |             | RK73GB2A361J | CHIP R 360 J 1/10W   |                  |
| R412,413 |             |             | RK73GB2A223J | CHIP R 22K J 1/10W   |                  |
| R414-419 |             |             | RK73FB2B181J | CHIP R 180 J 1/8W    |                  |
| R426     |             |             | RK73GB2A222J | CHIP R 2.2K J 1/10W  |                  |
| R427     |             |             | RK73GB2A472J | CHIP R 4.7K J 1/10W  |                  |
| R428     |             |             | RK73GB2A102J | CHIP R 1.0K J 1/10W  |                  |
| R429     |             |             | RK73GB2A473J | CHIP R 47K J 1/10W   |                  |
| R431     |             |             | RK73GB2A100J | CHIP R 10 J 1/10W    |                  |
| R432     |             |             | RK73EB2E2R2J | CHIP R 2.2 J 1/4W    |                  |
| R433,434 |             |             | RK73GB2A101J | CHIP R 100 J 1/10W   |                  |
| R435     |             |             | RK73GB2A9R1J | CHIP R 9.1 J 1/10W   |                  |
| R440,441 |             |             | RK73GB2A102J | CHIP R 1.0K J 1/10W  |                  |
| R501     |             |             | RK73GB2A102J | CHIP R 1.0K J 1/10W  |                  |
| R503     |             |             | RK73GB2A203J | CHIP R 20K J 1/10W   |                  |
| R505,506 |             |             | RK73GB2A223J | CHIP R 22K J 1/10W   |                  |
| R507     |             |             | RK73GB2A221J | CHIP R 220 J 1/10W   |                  |
| R508     |             |             | RK73EB2E472J | CHIP R 4.7K J 1/4W   |                  |
| R509     |             |             | RK73EB2E101J | CHIP R 100 J 1/4W    |                  |
| R510     |             |             | RK73EB2E472J | CHIP R 4.7K J 1/4W   |                  |
| R511-515 |             |             | RK73EB2E101J | CHIP R 100 J 1/4W    |                  |
| R516,517 |             |             | RK73EB2E100J | CHIP R 10 J 1/4W     |                  |
| R518     |             |             | RK73EB2E4R7J | CHIP R 4.7 J 1/4W    |                  |
| R519     |             |             | RK73GB2A102J | CHIP R 1.0K J 1/10W  |                  |
| R908     |             |             | RK73GB2A473J | CHIP R 47K J 1/10W   |                  |
| R920     |             |             | RK73GB2A391J | CHIP R 390 J 1/10W   |                  |
| R921     |             |             | RK73GB2A242J | CHIP R 2.4K J 1/10W  |                  |
| R922     |             |             | RK73GB2A102J | CHIP R 1.0K J 1/10W  |                  |
| R924     |             |             | RK73GB2A512J | CHIP R 5.1K J 1/10W  |                  |
| R925     |             |             | RK73GB2A101J | CHIP R 100 J 1/10W   |                  |
| R926     |             |             | RK73GB2A102J | CHIP R 1.0K J 1/10W  |                  |
| R927     |             |             | RK73GB2A113J | CHIP R 11K J 1/10W   |                  |
| R928     |             |             | RK73FB2B4R7J | CHIP R 4.7 J 1/8W    |                  |
| R929     |             |             | RK73GB2A332J | CHIP R 3.3K J 1/10W  |                  |
| R932     |             |             | RK73GB2A100J | CHIP R 10 J 1/10W    |                  |
| R933     |             |             | RK73FB2B152J | CHIP R 1.5K J 1/8W   |                  |
| R934     |             |             | RK73GB2A104J | CHIP R 100K J 1/10W  |                  |
| R935     |             |             | RK73GB2A472J | CHIP R 4.7K J 1/10W  |                  |
| R936     |             |             | RK73GB2A103J | CHIP R 10K J 1/10W   |                  |
| R937     |             |             | RK73GB2A101J | CHIP R 100 J 1/10W   |                  |
| R938     |             |             | RK73FB2B1R0J | CHIP R 1.0 J 1/8W    |                  |
| R941-944 |             |             | RK73GB2A471J | CHIP R 470 J 1/10W   |                  |
| R945-949 |             |             | RK73GB2A103J | CHIP R 10K J 1/10W   |                  |
| R950     |             |             | RK73GB2A432J | CHIP R 4.3K J 1/10W  |                  |
| R951     |             |             | RK73GB2A100J | CHIP R 10 J 1/10W    |                  |
| R952     |             |             | RK73GB2A431J | CHIP R 430 J 1/10W   |                  |
| R953     |             |             | RK73GB2A510J | CHIP R 51 J 1/10W    |                  |
| W103     |             |             | R92-1252-05  | CHIP R 0 OHM J 1/16W |                  |
| W104     |             |             | R92-2053-05  | CHIP R 0 OHM J 1/8W  |                  |
| W110     |             |             | R92-1252-05  | CHIP R 0 OHM J 1/16W |                  |
| W111     |             |             | R92-2053-05  | CHIP R 0 OHM J 1/8W  |                  |
| W112,113 |             |             | R92-1252-05  | CHIP R 0 OHM J 1/16W |                  |
| W114,115 |             |             | R92-2053-05  | CHIP R 0 OHM J 1/8W  |                  |
| W121     |             |             | R92-1252-05  | CHIP R 0 OHM J 1/16W |                  |
| W123     |             |             | R92-2053-05  | CHIP R 0 OHM J 1/8W  |                  |

(North America)

△ Indicates safety critical components.

## PARTS LIST

## ELECTRIC UNIT (X34-3420-15)

| Ref. No. | Add | New | Parts No.     | Description          | Destination |
|----------|-----|-----|---------------|----------------------|-------------|
| W124     |     |     | R92-1252-05   | CHIP R 0 OHM J 1/16W |             |
| W125,126 |     |     | R92-2053-05   | CHIP R 0 OHM J 1/8W  |             |
| W127     |     |     | R92-1252-05   | CHIP R 0 OHM J 1/16W |             |
| S1,2     |     |     | S68-0886-05   | PUSH SWITCH          |             |
| D1       |     |     | S2V60*A       | DIODE                |             |
| D2       |     |     | RB160L-40     | DIODE                |             |
| D3       |     |     | 02DZ5.6F-Y    | ZENER DIODE          |             |
| D4       |     |     | 02DZ9.1F-X    | ZENER DIODE          |             |
| D5       |     |     | 02DZ8.2F-Y    | ZENER DIODE          |             |
| D8       |     |     | 02DZ12F-X     | ZENER DIODE          |             |
| D9       |     |     | 10EDA20       | DIODE                |             |
| D10      |     |     | SFPB-54VNF    | DIODE                |             |
| D101     |     |     | 10EDA20       | DIODE                |             |
| D102     |     |     | 1SR154-400    | DIODE                |             |
| D103     |     |     | 10EDA20       | DIODE                |             |
| D104,105 |     |     | 1SR154-400    | DIODE                |             |
| D107     |     |     | 02DZ4.7F-Y    | ZENER DIODE          |             |
| D108,109 |     |     | 02DZ6.8F-Y    | ZENER DIODE          |             |
| D110     |     |     | KDS121-P      | DIODE                |             |
| D111     |     |     | 02DZ6.2F-Y    | ZENER DIODE          |             |
| D301     |     |     | IMSA-6801-E   | SURGE ABSORBER       |             |
| D304-309 |     |     | STZ6.2N       | ZENER DIODE          |             |
| D310     |     |     | DA204K        | DIODE                |             |
| D311     |     |     | 02DZ16F-Y     | ZENER DIODE          |             |
| D401-403 |     |     | KDS120-P      | DIODE                |             |
| D407     |     |     | 02DZ5.6F-Y    | ZENER DIODE          |             |
| D411     |     |     | KDS120-P      | DIODE                |             |
| D413,414 |     |     | UDZS5.6B      | ZENER DIODE          |             |
| D501,502 |     |     | KDS120-P      | DIODE                |             |
| D503,504 |     |     | 1SR154-400    | DIODE                |             |
| D505,506 |     |     | 10EDA20       | DIODE                |             |
| D507-510 |     |     | 1SR154-400    | DIODE                |             |
| D511,512 |     |     | STZ6.8N       | ZENER DIODE          |             |
| D513-515 |     |     | STZ6.2N       | ZENER DIODE          |             |
| D903     |     |     | 02DZ6.8F-Y    | ZENER DIODE          |             |
| D904     |     |     | DA227         | DIODE                |             |
| D905     |     |     | 02DZ16F-Y     | ZENER DIODE          |             |
| IC1      |     | *   | 30624MGP77GP  | MICROCONTROLLER IC   |             |
| IC2      |     |     | E-TDA7415     | ANALOGUE IC          |             |
| IC3      |     |     | M5237ML-CF0J  | ANALOGUE IC          |             |
| IC4      |     |     | E-TDA7560A    | ANALOGUE IC          |             |
| IC5      |     |     | BA00CCWT-V5   | ANALOGUE IC          |             |
| IC6      |     |     | SN74HC02APWR  | MOS-IC               |             |
| IC7      |     |     | S-80836CNNB-J | MOS-IC               |             |
| IC8      |     |     | LB1930M-E     | ANALOGUE IC          |             |
| IC10     |     |     | BR24L04FV-W   | ROM IC               |             |
| IC11     |     |     | TA75S558F-F   | ANALOGUE IC          |             |
| IC12     |     |     | SI-8050JF3NF  | ANALOGUE IC          |             |
| IC902    |     |     | NJM4565V-ZB   | ANALOGUE IC          |             |
| Q1       |     |     | 2SB1565       | TRANSISTOR           |             |
| Q2       |     |     | 2SC4081       | TRANSISTOR           |             |
| Q3       |     |     | 2SA1576A      | TRANSISTOR           |             |
| Q4       |     |     | UMC2N         | TRANSISTOR           |             |
| Q5       |     |     | 2SB1565       | TRANSISTOR           |             |

| Ref. No.                                      | Add | New | Parts No.        | Description        | Destination |
|-----------------------------------------------|-----|-----|------------------|--------------------|-------------|
| Q6                                            |     |     | UMC2N            | TRANSISTOR         |             |
| Q7                                            |     |     | 2SB1565          | TRANSISTOR         |             |
| Q8                                            |     |     | 2SC4081          | TRANSISTOR         |             |
| Q9                                            |     |     | 2SB1443          | TRANSISTOR         |             |
| Q10                                           |     |     | 2SC4081          | TRANSISTOR         |             |
| Q11                                           |     |     | KRC403-P         | DIGITAL TRANSISTOR |             |
| Q12                                           |     |     | 2SC4081          | TRANSISTOR         |             |
| Q13                                           |     |     | 2SA1576A         | TRANSISTOR         |             |
| Q14,15                                        |     |     | 2SC4081          | TRANSISTOR         |             |
| Q16                                           |     |     | 2SB1443          | TRANSISTOR         |             |
| Q17                                           |     |     | KRC403-P         | DIGITAL TRANSISTOR |             |
| Q18                                           |     |     | 2SA1577          | TRANSISTOR         |             |
| Q101                                          |     |     | 2SB1188 (Q,R)    | TRANSISTOR         |             |
| Q102                                          |     |     | KRC407-P         | DIGITAL TRANSISTOR |             |
| Q103                                          |     |     | 2SB1188 (Q,R)    | TRANSISTOR         |             |
| Q104                                          |     |     | 2SA1576A         | TRANSISTOR         |             |
| Q105                                          |     |     | KRA302-P         | DIGITAL TRANSISTOR |             |
| Q106                                          |     |     | KRC407-P         | DIGITAL TRANSISTOR |             |
| Q108                                          |     |     | KRC404-P         | DIGITAL TRANSISTOR |             |
| Q109                                          |     |     | 2SC4081          | TRANSISTOR         |             |
| Q111,112                                      |     |     | 2SC4081          | TRANSISTOR         |             |
| Q113                                          |     |     | KTA2014EP (Y,GR) | TRANSISTOR         |             |
| Q114                                          |     |     | KRA304-P         | DIGITAL TRANSISTOR |             |
| Q115,116                                      |     |     | KRA303-P         | DIGITAL TRANSISTOR |             |
| Q300                                          |     |     | 2SB1689          | TRANSISTOR         |             |
| Q301                                          |     |     | KRC403-P         | DIGITAL TRANSISTOR |             |
| Q304                                          |     |     | KRC407-P         | DIGITAL TRANSISTOR |             |
| Q400-405                                      |     |     | KRC410-P         | DIGITAL TRANSISTOR |             |
| Q905                                          |     |     | 2SC2873-F        | TRANSISTOR         |             |
| Q906                                          |     |     | KRA303-P         | DIGITAL TRANSISTOR |             |
| Q907                                          |     |     | 2SA1576A         | TRANSISTOR         |             |
| TH1                                           |     |     | PRF21BE471QB2    | POSITIVE RESISTOR  |             |
| A1                                            | 2D  |     | X86-3840-11      | FRONT-END UNIT     |             |
| <b>CD MECHANISM (X92-5470-00) (DXM-6680W)</b> |     |     |                  |                    |             |
| 2                                             | 1B  |     | A10-4827-32      | CHASSIS            |             |
| 5                                             | 1B  |     | D10-4576-83      | ARM ASSY           |             |
| 8                                             | 2A  |     | D10-4579-23      | LEVER ASSY         |             |
| 10                                            | 3A  |     | D10-4581-13      | ARM                |             |
| 11                                            | 2A  |     | D10-4582-13      | ARM                |             |
| 12                                            | 3A  |     | D10-4583-03      | ARM                |             |
| 13                                            | 3A  |     | D10-4584-03      | ARM                |             |
| 14                                            | 3B  |     | D10-4585-03      | ARM                |             |
| 15                                            | 2A  |     | D10-4586-13      | SLIDER             |             |
| 16                                            | 3B  |     | D10-4587-52      | SLIDER             |             |
| 17                                            | 3B  |     | D10-4588-13      | SLIDER             |             |
| 18                                            | 3B  |     | D10-4595-04      | ARM                |             |
| 19                                            | 3B  |     | D10-4596-24      | ARM                |             |
| 22                                            | 2A  |     | D13-2151-04      | GEAR               |             |
| 23                                            | 2B  |     | D13-2152-04      | GEAR               |             |
| 24                                            | 3B  |     | D13-2153-04      | GEAR               |             |
| 25                                            | 3B  |     | D13-2154-04      | GEAR               |             |
| 26                                            | 3B  |     | D13-2155-04      | WORM               |             |
| 27                                            | 3B  |     | D13-2156-14      | GEAR               |             |

(North America)

△ Indicates safety critical components.

PARTS LIST

CD MECHANISM (X92-5470-00) (DXM-6680W)

| Ref. No. | A<br>d<br>d | N<br>e<br>w | Parts No.   | Description                   | Desti-<br>nation | Ref. No. | A<br>d<br>d | N<br>e<br>w | Parts No. | Description | Desti-<br>nation |
|----------|-------------|-------------|-------------|-------------------------------|------------------|----------|-------------|-------------|-----------|-------------|------------------|
| 28       | 3B          |             | D13-2157-04 | GEAR                          |                  |          |             |             |           |             |                  |
| 29       | 3B          |             | D13-2158-04 | GEAR                          |                  |          |             |             |           |             |                  |
| 30       | 3B          |             | D13-2168-04 | GEAR                          |                  |          |             |             |           |             |                  |
| 31       | 3B          |             | D13-2171-04 | GEAR                          |                  |          |             |             |           |             |                  |
| 32       | 1B          |             | D13-2381-13 | RACK (GEAR)                   |                  |          |             |             |           |             |                  |
| 33       | 2A          |             | D14-0759-04 | ROLLER                        |                  |          |             |             |           |             |                  |
| 35       | 2B          |             | D21-2382-04 | SHAFT                         |                  |          |             |             |           |             |                  |
| 36       | 1A          |             | D23-0954-04 | RETAINER                      |                  |          |             |             |           |             |                  |
| 37       | 1B          |             | D39-0246-05 | DAMPER                        |                  |          |             |             |           |             |                  |
| 38       | 2B          |             | G01-3072-04 | EXTENSION SPRING              |                  |          |             |             |           |             |                  |
| 39       | 2A          |             | G01-3073-04 | TORSION COIL SPRING           |                  |          |             |             |           |             |                  |
| 40       | 2A          |             | G01-3074-04 | EXTENSION SPRING              |                  |          |             |             |           |             |                  |
| 41       | 1B          |             | G01-3075-24 | EXTENSION SPRING              |                  |          |             |             |           |             |                  |
| 42       | 2A          |             | G01-3076-04 | EXTENSION SPRING              |                  |          |             |             |           |             |                  |
| 43       | 1B          |             | G01-3077-14 | EXTENSION SPRING              |                  |          |             |             |           |             |                  |
| 44       | 2B          |             | G02-1399-04 | FLAT SPRING                   |                  |          |             |             |           |             |                  |
| 45       | 2B          |             | G02-1408-04 | FLAT SPRING                   |                  |          |             |             |           |             |                  |
| 46       | 2A          |             | G13-1258-04 | CUSHION                       |                  |          |             |             |           |             |                  |
| 51       | 1A          |             | J21-9676-32 | MOUNTING HARDWARE             |                  |          |             |             |           |             |                  |
| 52       | 3B          |             | J21-9677-22 | MOUNTING HARDWARE             |                  |          |             |             |           |             |                  |
| 53       | 1B          |             | J21-9678-13 | MOUNTING HARDWARE             |                  |          |             |             |           |             |                  |
| 55       | 1A          |             | J90-1001-11 | GUIDE                         |                  |          |             |             |           |             |                  |
| 56       | 1B          |             | J90-1023-03 | GUIDE                         |                  |          |             |             |           |             |                  |
| DFPC1    | 3A          |             | J84-0141-05 | FLEXIBLE PRINTED WIRING BOARD |                  |          |             |             |           |             |                  |
| A        | 2B          |             | N09-4460-15 | TAPTITE SCREW (P 2X8)         |                  |          |             |             |           |             |                  |
| B        | 1B          |             | N09-6317-05 | TAPTITE SCREW                 |                  |          |             |             |           |             |                  |
| C        | 2B          |             | N09-6004-05 | MACHINE SCREW (M1.7X2.5)      |                  |          |             |             |           |             |                  |
| E        | 2B          |             | N09-6007-15 | MACHINE SCREW (M2X2)          |                  |          |             |             |           |             |                  |
| F        | 1A          |             | N09-6051-15 | TAPTITE SCREW (P 2X5)         |                  |          |             |             |           |             |                  |
| G        | 2A          |             | N19-2163-04 | FLAT WASHER (1.6X6X0.25)      |                  |          |             |             |           |             |                  |
| H        | 1B          |             | N39-2020-46 | PAN HEAD MACHINE SCREW        |                  |          |             |             |           |             |                  |
| J        | 1B          |             | N09-6108-15 | TAPTITE SCREW (M2X3.5)        |                  |          |             |             |           |             |                  |
| K        | 3B          |             | N09-6155-15 | SEMS (TAPTITE SCREW) (P 2X6)  |                  |          |             |             |           |             |                  |
| DM1      | 3B          |             | T42-1066-14 | DC MOTOR ASSY (SP)            |                  |          |             |             |           |             |                  |
| DM2      | 2B          |             | T42-1067-14 | DC MOTOR ASSY (LO)            |                  |          |             |             |           |             |                  |
| DPU1     | 2B          |             | X93-2130-00 | OPTICAL PICKUP ASSY           |                  |          |             |             |           |             |                  |

(North America)

⚠ Indicates safety critical components.