


2. EXPLODED VIEWS AND PARTS LIST

2.1 PACKING

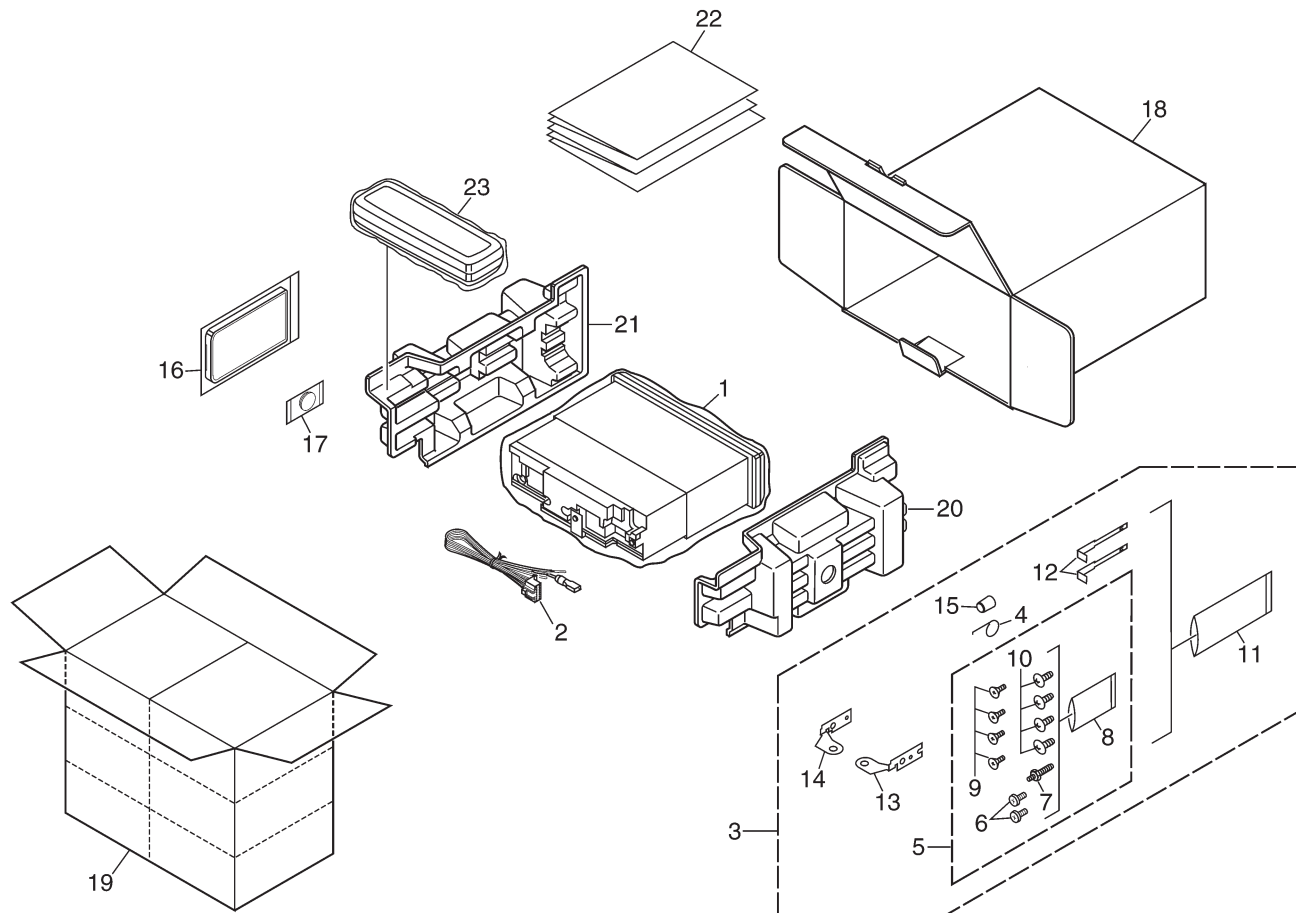

NOTE:

● Parts marked by "*" are generally unavailable because they are not in our Master Spare Parts List.

● Screws adjacent to ▽ mark on the product are used for disassembly.

● For the applying amount of lubricants or glue, follow the instructions in this manual.

(In the case of no amount instructions, apply as you think it appropriate.)

(1) PACKING SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.
1	Polyethylene Bag	See Contrast table(2)	16	Remote Control Unit	See Contrast table(2)
2	Cord Assy	CDE7154	* 17	Battery	See Contrast table(2)
3	Accessory Assy	See Contrast table(2)	18	Carton	See Contrast table(2)
4	Spring	CBH1650	19	Contain Box	See Contrast table(2)
5	Screw Assy	See Contrast table(2)	20	Protector	CHP2663
6	Fixing Screw	See Contrast table(2)	21	Protector	CHP2664
7	Screw	CBA1650	22-1	Owner's Manual	See Contrast table(2)
* 8	Polyethylene Bag	CEG-127	22-2	Owner's Manual	See Contrast table(2)
9	Screw	CRZ50P090FTC	22-3	Installation Manual	See Contrast table(2)
10	Screw	TRZ50P080FTC	* 22-4	Caution Card	See Contrast table(2)
* 11	Polyethylene Bag	CEG-158	* 22-5	Card	See Contrast table(2)
12	Handle	CNC5395	* 22-6	Caution Card	CRP1207
13	Holder	See Contrast table(2)	* 22-7	Warranty Card	See Contrast table(2)
14	Holder	See Contrast table(2)	23	Case Assy	CXB3520
15	Bush	CNV3930			

(2) CONTRAST TABLE

DEH-P750MP/XN/UC, DEH-P7500MP/XN/UC and DEH-P7550MP/XN/ES are constructed the same except for the following:


Mark No.	Symbol and Description	Part No.		
		DEH-P750MP/XN/UC	DEH-P7500MP/XN/UC	DEH-P7550MP/XN/ES
1	Polyethylene Bag	CEG1173	CEG1173	CEG-162
3	Accessory Assy	CEA3376	CEA3376	CEA3439
5	Screw Assy	CEA3848	CEA3848	CEA3849
6	Fixing Screw	BPZ20P060FZK	BPZ20P060FZK	Not used
13	Holder	CND1249	CND1249	Not used
14	Holder	CND1250	CND1250	Not used
16	Remote Control Unit	CXC1361	CXC1361	CXC1265
* 17	Battery	Not used	Not used	CEX1065
18	Carton	CHG5089	CHG5088	CHG5087
19	Contain Box	CHL5089	CHL5088	CHL5087
22-1	Owner's Manual	CRD3767	CRD3769	CRD3771
22-2	Owner's Manual	Not used	Not used	CRD3772
22-3	Installation Manual	CRD3768	CRD3770	CRD3773
* 22-4	Caution Card	Not used	Not used	CRP1216
* 22-5	Card	Not used	ARY1048	Not used
* 22-7	Warranty Card	CRY1070	Not used	Not used

● Owner's Manual, Installation Manual


Model	Part No.	Language
DEH-P750MP/XN/UC	CRD3767	English, Spanish
	CRD3768	English, Spanish
DEH-P7500MP/XN/UC	CRD3769	English, Spanish
	CRD3770	English, Spanish
DEH-P7550MP/XN/ES	CRD3771	English, Spanish, Portuguese(B)
	CRD3772	Traditional chinese, Arabic
	CRD3773	English, Spanish, Portuguese(B), Traditional chinese, Arabic

2.2 EXTERIOR(DEH-P750MP/XN/UC,DEH-P750MP/XN/UC)




A

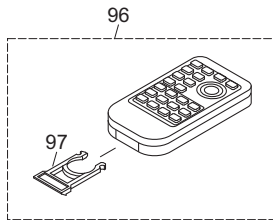



B

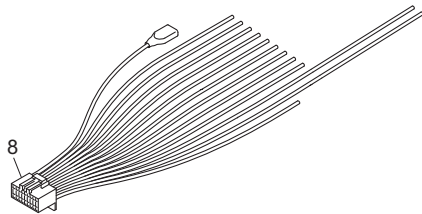


C

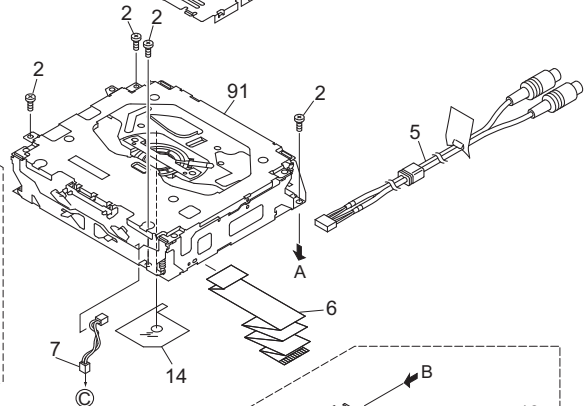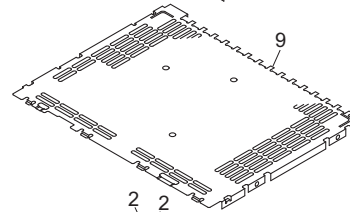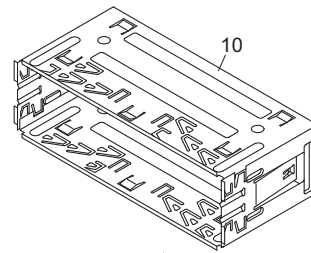


D

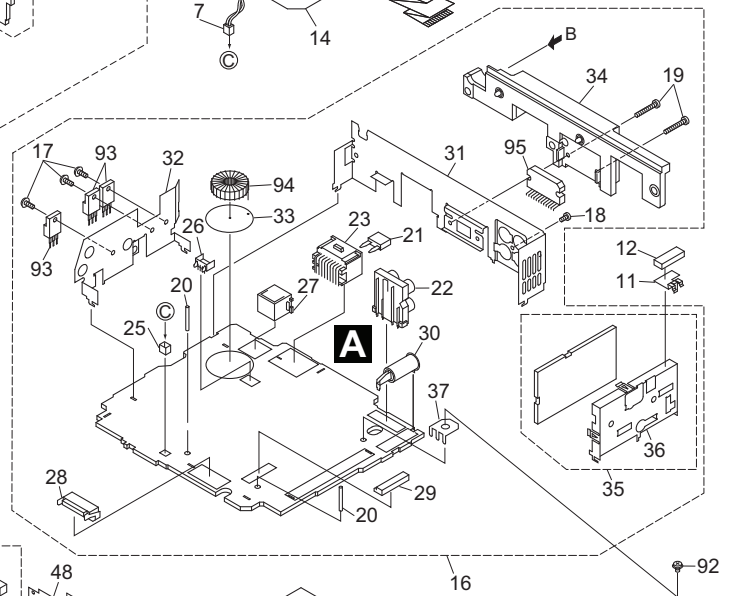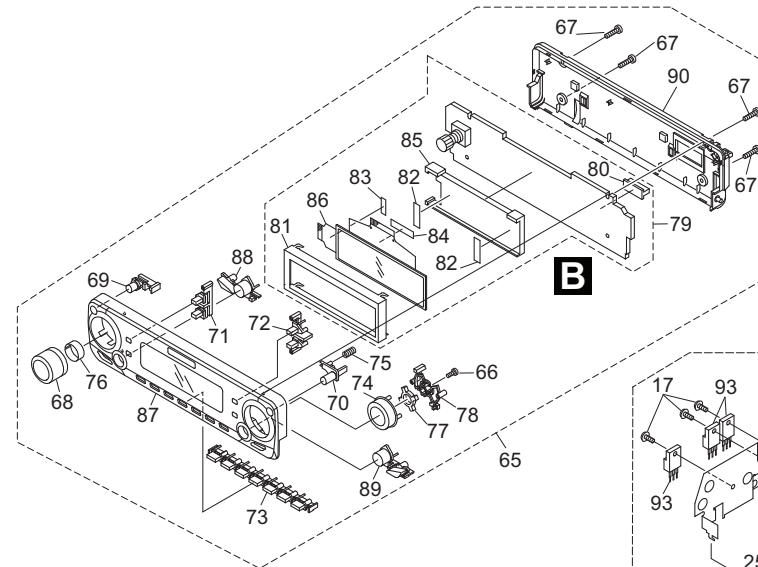

E

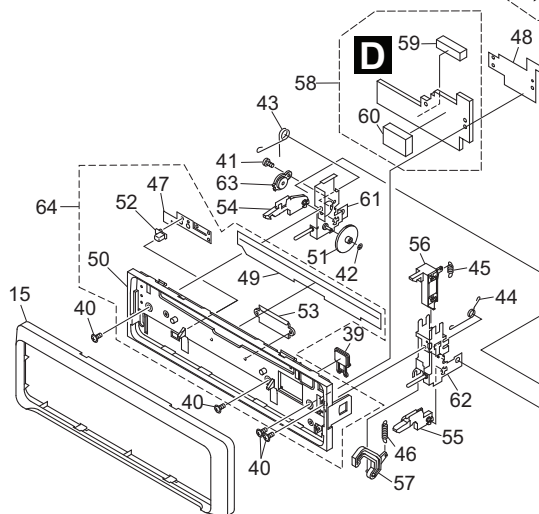

F

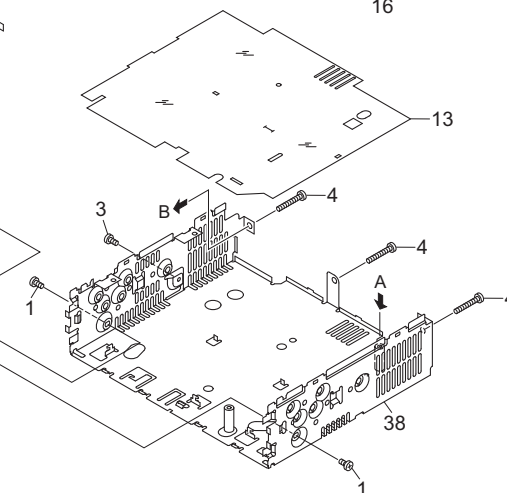

(1) EXTERIOR(DEH-P750MP/XN/UC, DEH-P7500MP/XN/UC) SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.	
1	Screw	BMZ30P040FZK	51	Gear	CNV5997	A
2	Screw	BSZ26P060FTC	52	Pin	CNV6486	
3	Screw	BSZ30P060FTC	53	Lighting Conductor	CNV6487	
4	Screw	BSZ30P200FTC	54	Arm	CNV7400	
5	Cord Assy	CDE7129	55	Arm	CNV7401	
6	Flat Cable	CDE7149	56	Arm	CNV7402	
7	Cord Assy	CDE7150	57	Arm	CNV7403	
8	Cord Assy	CDE7154	58	Panel Unit	CWM8758	
9	Case	CNB2870	59	Socket(CN1950)	CKS3550	
10	Holder	CNC8659	60	Connector(CN1951)	CKS4462	B
11	Earth Plate	CNC8915	61	Holder Unit	CXB9501	
12	Cushion	CNM4870	62	Holder Unit	CXB9502	
13	Insulator	CNM7935	63	Damper Unit	CXB9503	
14	Insulator	CNM8174	64	Panel Unit(Service)	CXX1691	
15	Panel	See Contrast table(2)	65	Detach Grille Assy	See Contrast table(2)	
16	Tuner Amp Unit	See Contrast table(2)	66	Screw	BPZ20P060FTC	
17	Screw	ASZ26P060FTC	67	Screw	BPZ20P100FZK	
18	Screw	BPZ26P080FTC	68	Knob	See Contrast table(2)	
19	Screw	BSZ26P160FTC	69	Button(CLK)	CAC7751	
20	Clamper	CEF1035	70	Button(OPEN)	CAC7728	C
21	Fuse(10A)	CEK1208	71	Button(TEXT/SCRL)	CAC7737	
22	Pin Jack(CN361)	CKB1051	72	Button(AUDIO/FUNC)	CAC7738	
23	Plug(CN981)	CKM1376	73	Button(1-6)	CAC7750	
24			74	Button(CROSS)	See Contrast table(2)	
25	Plug(CN704)	CKS-783	75	Spring	CBH2654	
26	Plug(CN362)	CKS1238	76	Spring	CBL1470	
27	Connector(CN101)	CKS3408	77	Cushion	CNM8291	
28	Plug(CN801)	CKS3537	78	Holder	CNV7405	
29	Connector(CN701)	CKS3837	79	Keyboard Unit	CWM8713	
30	Antenna Jack(CN401)	CKX1056	80	Connector(CN1901)	CKS4524	D
31	Holder	CND1239	81	Holder	CND1354	
32	Holder	CND1352	82	Cushion	CNM6633	
33	Insulator	CNM8245	83	Spacer	CNM7697	
34	Heat Sink	CNR1668	84	Spacer	CNM7698	
35	FM/AM Tuner Unit	CWE1646	85	Holder	CNV6910	
36	Holder	CND1054	86	OEL Unit	MXS8045	
37	Terminal(CN402)	VNF1084	87	Grille Unit	See Contrast table(2)	
38	Chassis Unit	CXB9528	88	Button Unit(SRC/EQ)	CXB9924	
39	Button(EJECT)	CAC7752	89	Button Unit(EQ-EX/BAND)	CXB9925	
40	Screw(M2x4.5)	CBA1647	90	Cover	XNS7014	E
41	Screw(M2x4)	CBA1649	91	CD Mechanism Module(S10MP3)	CXK5662	
42	Washer	CBF1038	92	Screw	ISS26P055FTC	
43	Spring	CBH2650	93	Transistor(Q742,901,921)	2SD2375	
44	Spring	CBH2651	94	Choke Coil(L981)	CTH1280	
45	Spring	CBH2652	95	IC(IC301)	PAL007A	
46	Spring	CBH2653	96	Remote Control Unit	CXC1361	
47	Spring	CBL1512	97	Cover	CZN5357	
48	Holder	CND1254				
49	Cover	CNM6854				F
50	Panel	CNS7245				

A

(2) CONTRAST TABLE

DEH-P750MP/XN/UC and DEH-P7500MP/XN/UC are constructed the same except for the following:

Mark No.	Symbol and Description	Part No.	
		DEH-P750MP/XN/UC	DEH-P7500MP/XN/UC
15	Panel	CNS6935	CNS6934
16	Tuner Amp Unit	CWM8707	CWM8708
65	Detach Grille Assy	CXB9914	CXB9913
68	Knob	CAA2764	CAA2761
74	Button(CROSS)	CAC7843	CAC7863
87	Grille Unit	CXB9855	CXB9853

B

C


D

E


F

2.3 EXTERIOR(DEH-P7550MP/XN/ES)


A

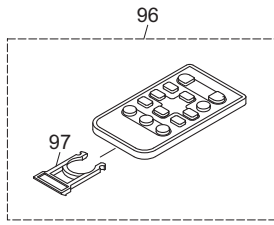


B

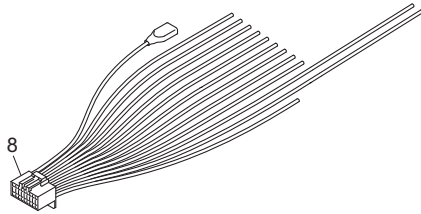


C

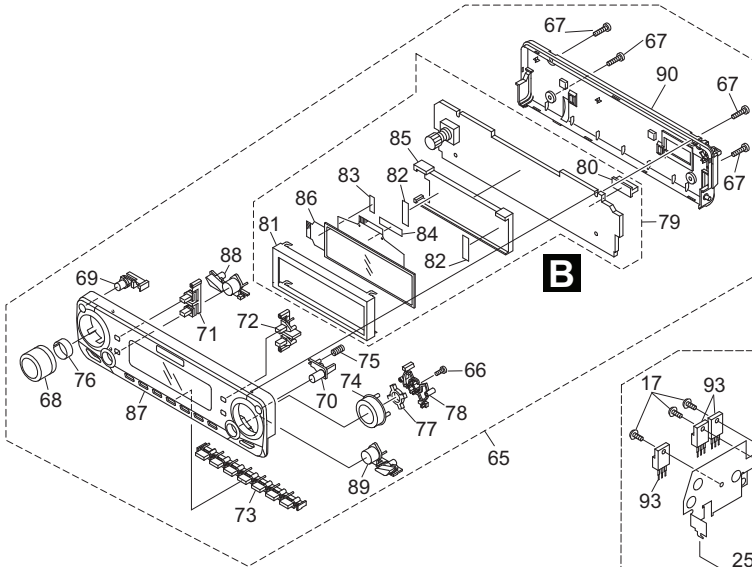


D

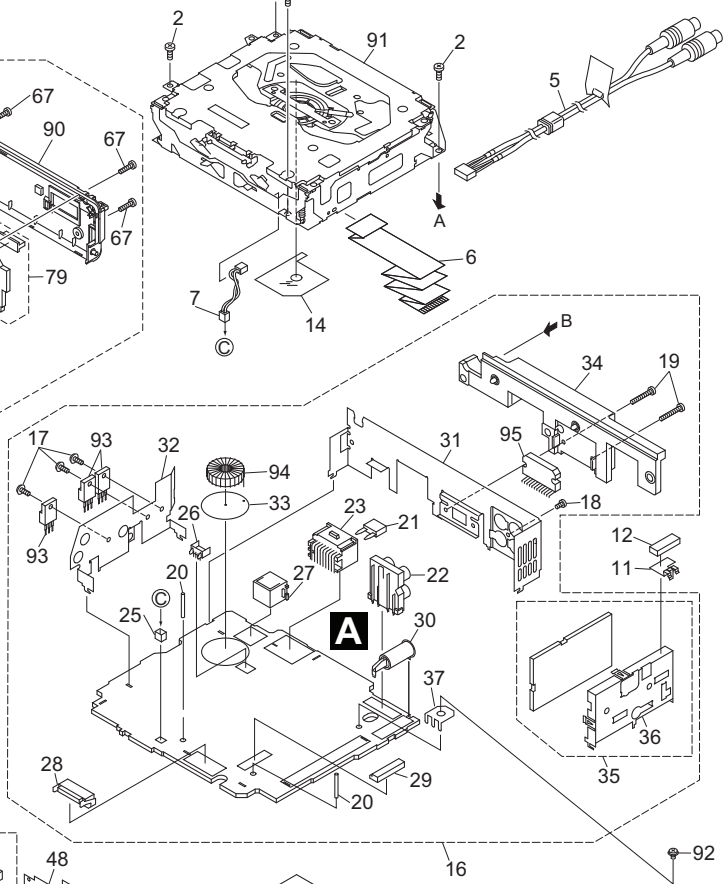

E

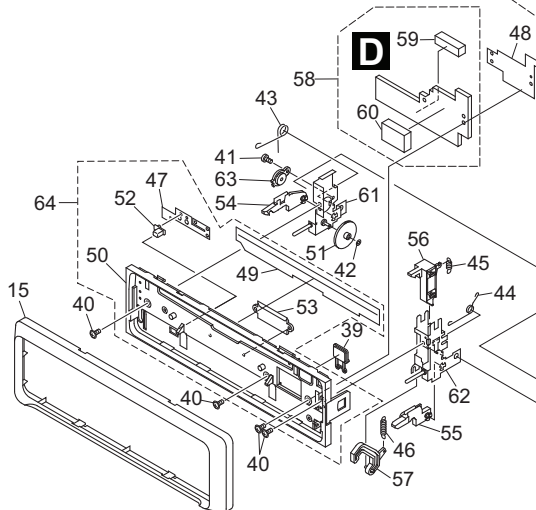


F

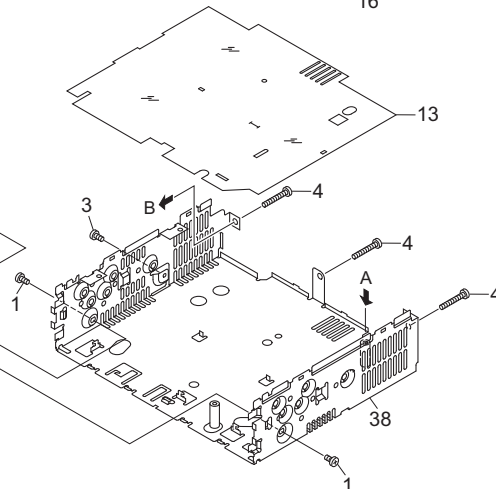

● EXTERIOR(DEH-P7550MP/XN/ES) SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.	
1	Screw	BMZ30P040FZK	51	Gear	CNV5997	A
2	Screw	BSZ26P060FTC	52	Pin	CNV6486	
3	Screw	BSZ30P060FTC	53	Lighting Conductor	CNV6487	
4	Screw	BSZ30P200FTC	54	Arm	CNV7400	
5	Cord Assy	CDE7129	55	Arm	CNV7401	
6	Flat Cable	CDE7149	56	Arm	CNV7402	
7	Cord Assy	CDE7150	57	Arm	CNV7403	
8	Cord Assy	CDE7154	58	Panel Unit	CWM8758	
9	Case	CNB2870	59	Socket(CN1950)	CKS3550	
10	Holder	CNC8659	60	Connector(CN1951)	CKS4462	B
11	Earth Plate	CNC8915	61	Holder Unit	CXB9501	
12	Cushion	CNM4870	62	Holder Unit	CXB9502	
13	Insulator	CNM7935	63	Damper Unit	CXB9503	
14	Insulator	CNM8174	64	Panel Unit(Service)	CXX1691	
15	Panel	CNS6935	65	Detach Grille Assy	CXB9915	
16	Tuner Amp Unit	CWM8709	66	Screw	BPZ20P060FTC	
17	Screw	ASZ26P060FTC	67	Screw	BPZ20P100FZK	
18	Screw	BPZ26P080FTC	68	Knob	CAA2764	
19	Screw	BSZ26P160FTC	69	Button(CLK)	CAC7751	
20	Clamper	CEF1035	70	Button(OPEN)	CAC7728	C
21	Fuse(10A)	CEK1208	71	Button(TEXT/SCRL)	CAC7737	
22	Pin Jack(CN361)	CKB1051	72	Button(AUDIO/FUNC)	CAC7738	
23	Plug(CN981)	CKM1376	73	Button(1-6)	CAC7750	
24			74	Button(CROSS)	CAC7843	
25	Plug(CN704)	CKS-783	75	Spring	CBH2654	
26	Plug(CN362)	CKS1238	76	Spring	CBL1470	
27	Connector(CN101)	CKS3408	77	Cushion	CNM8291	
28	Plug(CN801)	CKS3537	78	Holder	CNV7405	
29	Connector(CN701)	CKS3837	79	Keyboard Unit	CWM8713	
30	Antenna Jack(CN401)	CKX1056	80	Connector(CN1901)	CKS4524	D
31	Holder	CND1239	81	Holder	CND1354	
32	Holder	CND1352	82	Cushion	CNM6633	
33	Insulator	CNM8245	83	Spacer	CNM7697	
34	Heat Sink	CNR1668	84	Spacer	CNM7698	
35	FM/AM Tuner Unit	CWE1646	85	Holder	CNV6910	
36	Holder	CND1054	86	OEL Unit	MXS8045	
37	Terminal(CN402)	VNF1084	87	Grille Unit	CXB9854	
38	Chassis Unit	CXB9528	88	Button Unit(SRC/EQ)	CXB9924	
39	Button(EJECT)	CAC7752	89	Button Unit(EQ-EX/BAND)	CXB9925	
40	Screw(M2x4.5)	CBA1647	90	Cover	XNS7014	E
41	Screw(M2x4)	CBA1649	91	CD Mechanism Module(S10MP3)	CXK5662	
42	Washer	CBF1038	92	Screw	ISS26P055FTC	
43	Spring	CBH2650	93	Transistor(Q742,901,921)	2SD2375	
44	Spring	CBH2651	94	Choke Coil(L981)	CTH1280	
45	Spring	CBH2652	95	IC(IC301)	PAL007A	
46	Spring	CBH2653	96	Remote Control Unit	CXC1265	
47	Spring	CBL1512	97	Cover	CNS7068	
48	Holder	CND1254				
49	Cover	CNM6854				F
50	Panel	CNS7245				

2.4 CD MECHANISM MODULE

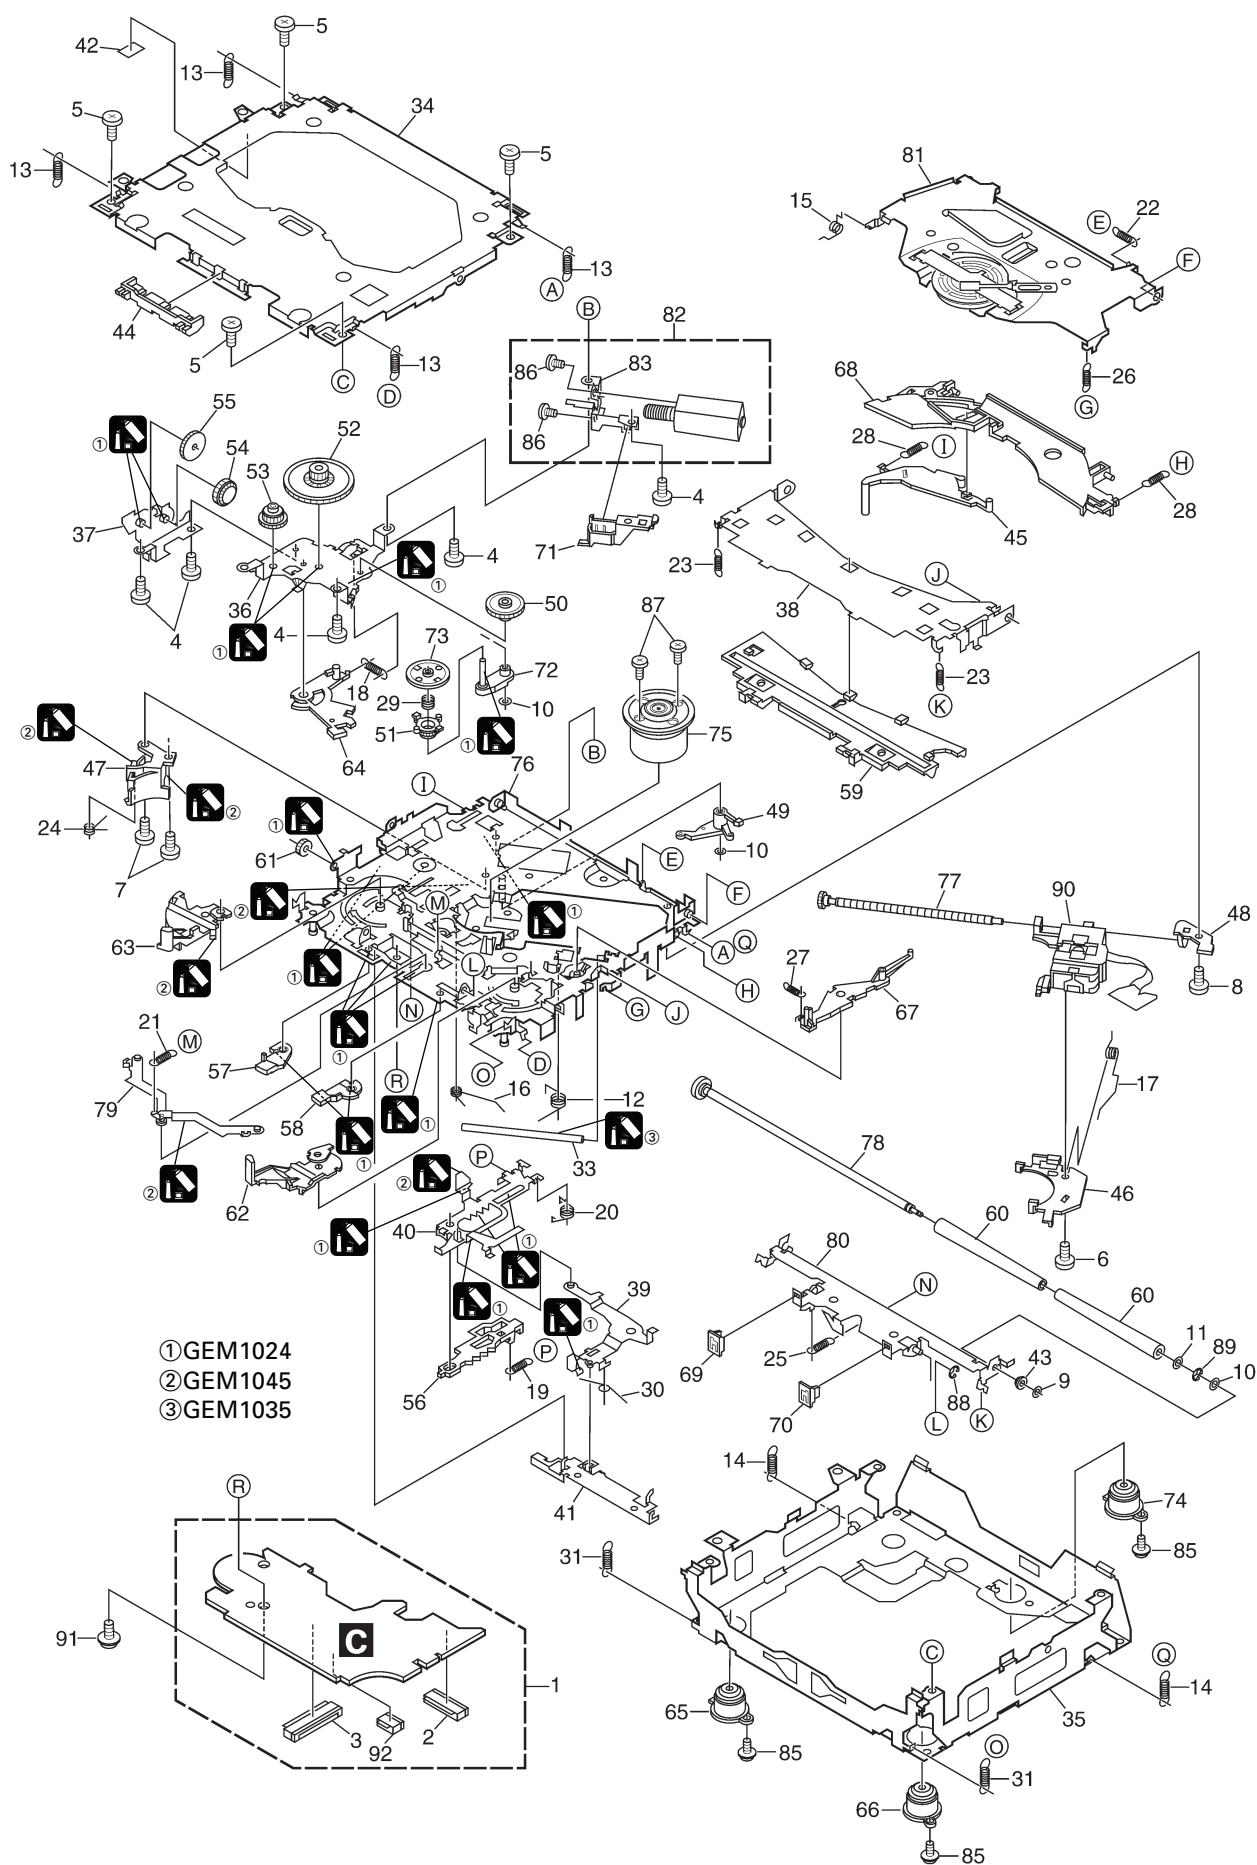

● CD MECHANISM MODULE SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.	
1	CD Core Unit(S10MP3)	CWX2792	46	Rack	CNV7199	
2	Connector(CN101)	CKS4182	47	Holder	CNV7201	
3	Connector(CN901)	CKS4017	48	Holder	CNV7202	
4	Screw	BMZ20P035FTC	49	Arm	CNV7203	
5	Screw	BSZ20P040FTC	50	Gear	CNV7207	
6	Screw(M2x4)	CBA1362	51	Gear	CNV7208	
7	Screw(M2x3)	CBA1511	52	Gear	CNV7209	
8	Screw(M2x3)	CBA1527	53	Gear	CNV7210	B
9	Washer	CBF1037	54	Gear	CNV7211	
10	Washer	CBF1038	55	Gear	CNV7212	
11	Washer	CBF1060	56	Rack	CNV7214	
12	Spring	CBH2390	57	Arm	CNV7215	
13	Spring	CBH2606	58	Arm	CNV7216	
14	Spring	CBH2607	59	Guide	CNV7217	
15	Spring	CBH2608	60	Roller	CNV7218	
16	Spring	CBH2609	61	Gear	CNV7219	
17	Spring	CBH2610	62	Arm	CNV7221	
18	Spring	CBH2611	63	Arm	CNV7220	C
19	Spring	CBH2612	64	Arm	CNV7222	
20	Spring	CBH2613	65	Damper	CNV7313	
21	Spring	CBH2614	66	Damper	CNV7314	
22	Spring	CBH2615	67	Arm	CNV7341	
23	Spring	CBH2616	68	Arm	CNV7342	
24	Spring	CBH2617	69	Guide	CNV7360	
25	Spring	CBH2620	70	Guide	CNV7361	
26	Spring	CBH2621	71	Holder	CNV7437	
27	Spring	CBH2641	72	Arm	CNV7444	
28	Spring	CBH2642	73	Gear	CNV7595	D
29	Spring	CBH2643	74	Damper	CNV7618	
30	Spring	CBH2659	75	Motor Unit(M1)	CXB6007	
31	Spring	CBH2688	76	Chassis Unit	CXB8728	
32			77	Screw Unit	CXB8729	
33	Shaft	CLA3845	78	Gear Unit	CXB8731	
34	Frame	CNC9962	79	Arm Unit	CXB8732	
35	Frame	CNC9963	80	Arm Unit	CXB8735	
36	Bracket	CNC9966	81	Arm Unit	CXB8852	
37	Bracket	CNC9967	82	Motor Unit(M2)	CXB8933	E
38	Arm	CNC9968	83	Bracket	CNC9985	
39	Arm	CNC9973	84			
40	Lever	CNC9983	85	Screw(M2x5)	EBA1028	
41	Lever	CNC9984	86	Screw	JFZ20P020FTC	
42	Sheet	CNM8134	87	Screw	JGZ17P022FTC	
43	Collar	CNV6906	88	Washer	YE15FTC	
44	Guide	CNV6925	89	Washer	YE20FTC	
45	Arm	CNV7198	90	Pickup Unit(Service)(P10)	CXX1641	
			91	Screw	IMS26P030FTC	F
			92	Connector(CN902)	CKS2191	

5. ELECTRICAL PARTS LIST

NOTES:

- Parts whose parts numbers are omitted are subject to being not supplied.
- The part numbers shown below indicate chip components.

Chip Resistor

RS1/○S○○○J,RS1/○○S○○○J

Chip Capacitor (except for CQS.....)

CKS....., CCS....., CSZS.....

====Circuit Symbol and No.==Part Name			Part No.	====Circuit Symbol and No.==Part Name			Part No.
A Unit Number : CWM8707(DEH-P750MP/XN/UC) Unit Name : Tuner Amp Unit							
MISCELLANEOUS							
IC	101	IC	HA12187FP	D	803	Diode	DAP202U
IC	131	IC	PML009A	D	804	Diode	DAN202U
IC	171	IC	NJM4558MD	D	805	Diode	DAP202U
IC	301	IC	PAL007A	D	821	Diode	HZS11L(A1)
IC	341	IC	PA2028A	D	841	Diode	HZS11L(A1)
IC	601	IC	PD5804A	D	842	Diode	RB411D
IC	652	IC	BD4835G	D	901	Diode	MPG06G-6415G50
IC	801	IC	TC74VHCT125AFT	D	902	Diode	HZS6L(B2)
IC	841	IC	NJM2360M	D	921	Diode	HZS9L(B3)
IC	861	IC	BA033FP	D	931	Diode	HZS7L(C3)
Q	101	Transistor	UMF23N	D	932	Diode	HZS7L(A1)
Q	301	Transistor	DTC124EU	D	941	Diode	MPG06G-6415G50
Q	321	Transistor	IMD2A	D	951	Diode	DAN202U
Q	361	Transistor	HN1C03F	D	981	Diode	MPG06G-6415G50
Q	362	Transistor	HN1C03F	D	982	Diode	MPG06G-6415G50
Q	363	Transistor	HN1C03F	ZNR	401	Surge Protector	DSP-201M-A21F
Q	364	Transistor	IMD2A	L	101	Inductor	LCTA2R2J2520
Q	501	Transistor	2SC4081	L	131	Inductor	LCTA2R2J2520
Q	741	Transistor	IMD2A	L	341	Ferri-Inductor	LAU220K
Q	742	Transistor	2SD2375	L	401	Inductor	LAU1R0K
Q	743	Transistor	2SD1760F5	L	402	Ferri-Inductor	LAU100K
Q	801	Transistor	DTC143EU	L	403	Inductor	LAU1R0K
Q	821	Transistor	IMD2A	L	404	Inductor	LCTA4R7J2520
Q	822	Transistor	2SD1767	L	601	Ferri-Inductor	LAU100K
Q	831	Transistor	UMF23N	L	701	Ferri-Inductor	LAU100K
Q	841	Transistor	IMD2A	L	801	Inductor	CTF1379
Q	842	Transistor	2SD1760F5	L	831	Ferri-Inductor	LAU100K
Q	901	Transistor	2SD2375	L	842	Inductor	CTF1510
Q	902	Transistor	IMD2A	L	951	Inductor	CTF1530
Q	921	Transistor	2SD2375	L	981	Choke Coil 600μH	CTH1280
Q	922	Transistor	2SB1243	X	601	Radiator 10.00MHz	CSS1475
Q	923	Transistor	DTC114EU	S	801	Switch(DSENSE)	CSN1039
Q	931	Transistor	IMX1	VR	322	Semi-fixed 10kΩ(B)	CCP1229
Q	941	Transistor	DTC114EU	FU	361	Fuse 3A	CEK1286
Q	951	Transistor	2SA1576A	FU	362	Fuse 3A	CEK1286
D	171	Diode	DAP202U	RESISTORS			
D	172	Diode	DAN202U	R	101		RS1/16S562J
D	173	Diode Network	DA204U	R	102		RS1/16S332J
D	174	Diode Network	DA204U	R	103		RS1/16S181J
D	301	Diode	MPG06G-6415G50	R	104		RS1/16S181J
				R	105		RS1/16S223J
D	302	Diode	MPG06G-6415G50				
D	322	Diode	RB706F-40	R	106		RS1/16S223J
D	342	Diode	1SS396	R	107		RS1/16S102J
D	361	Diode	1SS133	R	108		RS1/16S102J
D	501	Diode	DAN202U	R	109		RS1/16S222J
				R	110		RS1/16S101J
D	502	Diode	HZS9L(A2)				
D	741	Diode	HZS9L(B1)				
D	742	Diode	HZS6L(C1)				
D	801	Diode Network	DA204U				
D	802	Diode	DAN202U				

====Circuit Symbol and No.==Part Name

Part No.

====Circuit Symbol and No.==Part Name

Part No.

R 111
R 112
R 113
R 114
R 131

RS1/16S101J
RS1/16S103J
RS1/16S150J
RS1/16S470J
RS1/16S102J

R 610
R 613
R 614
R 616
R 617

RS1/16S102J
RS1/16S104J
RS1/16S104J
RS1/16S104J
RS1/16S104J

A

R 132
R 133
R 134
R 135
R 136

RS1/16S102J
RS1/16S102J
RS1/16S102J
RS1/16S101J
RS1/16S101J

R 627
R 628
R 629
R 642
R 651

RS1/16S681J
RS1/16S681J
RS1/16S681J
RS1/16S104J
RS1/16S102J

R 137
R 138
R 139
R 140
R 141

RS1/16S101J
RS1/16S101J
RS1/16S101J
RS1/16S101J
RAB4C102J

R 652
R 653
R 702
R 703
R 704

RS1/16S102J
RS1/16S183J
RS1/16S473J
RS1/16S682J
RS1/16S682J

B

R 171
R 172
R 173
R 174
R 175

RS1/16S104J
RS1/16S104J
RS1/16S563J
RS1/16S563J
RS1/16S474J

R 705
R 706
R 707
R 708
R 709

RS1/16S682J
RS1/16S682J
RS1/16S221J
RS1/16S221J
RS1/16S221J

R 176
R 301
R 302
R 303
R 304

RS1/16S474J
RS1/16S103J
RS1/16S103J
RS1/16S103J
RS1/16S331J

R 710
R 711
R 712
R 713
R 714

RS1/16S221J
RS1/16S221J
RS1/16S221J
RS1/16S0R0J
RS1/16S0R0J

R 323
R 332
R 334
R 335
R 341

RS1/16S560J
RS1/16S104J
RS1/16S104J
RS1/16S222J
RS1/16S103J

R 741
R 742
R 743
R 798
R 799

RD1/4PU391J
RD1/4PU221J
RS1/16S331J
RS1/16S104J
RS1/16S102J

C

R 342
R 361
R 362
R 363
R 364

RS1/16S103J
RS1/16S820J
RS1/16S820J
RS1/16S820J
RS1/16S820J

R 801
R 802
R 803
R 804
R 805

RS1/16S222J
RS1/16S222J
RS1/16S222J
RS1/16S222J
RS1/16S222J

R 365
R 366
R 367
R 368
R 369

RS1/16S820J
RS1/16S820J
RS1/16S223J
RS1/16S223J
RS1/16S223J

R 806
R 807
R 808
R 809
R 810

RS1/16S472J
RS1/16S222J
RS1/16S102J
RS1/16S473J
RS1/16S104J

R 370
R 371
R 372
R 373
R 374

RS1/16S223J
RS1/16S223J
RS1/16S223J
RS1/16S471J
RS1/16S471J

R 811
R 812
R 813
R 814
R 815

RS1/16S473J
RS1/16S563J
RD1/4PU391J
RS1/16S102J
RS1/16S104J

D

R 375
R 376
R 377
R 378
R 379

RS1/16S471J
RS1/16S471J
RS1/16S471J
RS1/16S471J
RS1/16S103J

R 816
R 817
R 818
R 819
R 821

RS1/16S104J
RS1/16S102J
RS1/16S102J
RS1/16S472J
RS1/16S221J

R 380
R 381
R 382
R 383
R 384

RS1/16S103J
RS1/16S103J
RS1/16S103J
RS1/16S103J
RS1/16S103J

R 822
R 823
R 831
R 832
R 833

RS1/16S221J
RS1/16S1R0J
RS1/16S472J
RS1/16S102J
RS1/16S472J

E

R 389
R 401
R 403
R 404
R 405

RS1/16S102J
RS1/16S681J
RS1/16S681J
RS1/16S681J
RS1/16S681J

R 841
R 844
R 845
R 846
R 847

RS1/16S821J
RS1/16S1R0J
RS1/16S391J
RS1/16S121J
RD1/4PU152J

R 406
R 407
R 501
R 502
R 601

RS1/16S681J
RS1/16S681J
RS1/16S103J
RS1/16S473J
RS1/16S472J

R 861
R 901
R 902
R 903
R 904

RS1/16S0R0J
RS1/16S223J
RS1/16S332J
RD1/4PU391J
RS1/16S0R0J

R 602
R 604
R 605
R 608
R 609

RS1/16S104J
RS1/16S473J
RS1/16S0R0J
RS1/16S473J
RS1/16S104J

R 921
R 922
R 923
R 924
R 925

RD1/4PU221J
RS1/16S152J
RD1/4PU152J
RS1/16S223J
RS1/16S223J

F

====Circuit Symbol and No.====Part Name

Part No.

====Circuit Symbol and No.====Part Name

Part No.

A

R 931 RS1/16S104J
R 932 RS1/16S473J
R 933 RS1/16S103J
R 934 RS1/16S473J
R 935 RS1/16S472J

C 342
C 343
C 345
C 346
C 347

CEJQ101M16
CASAQ3R3M16
CKSYB684K25
CEAL100M16
CKSQYB225K10

R 943 RS1/16S103J
R 951 RS1/16S102J
R 952 RS1/16S472J
R 953 RS1/16S472J
R 954 RS1/16S153J

C 348
C 349
C 350
C 351
C 353

CEJQ330M25
CEJQ330M25
CEJQ330M25
CEJQ330M25
CKSRYB105K10

R 955 RS1/16S104J
R 981 RD1/4PU102J
R 982 RD1/4PU102J

C 354
C 355
C 356
C 357
C 358

CKSRYB105K10
CKSRYB105K10
CKSRYB105K10
CKSRYB105K10
CKSRYB105K10

CAPACITORS

B

C 102 CKSRYB104K25
C 131 CCSQCH152J50
C 132 CCSQCH152J50
C 133 CKSRYB105K10
C 134 CKSRYB105K10

C 361
C 362
C 363
C 364
C 365

CEJQ100M50
CEJQ100M25
CEJQ100M50
CEJQ100M25
CEJQ100M50

C 137 CEAL1R0M50
C 138 CEAL1R0M50
C 139 CKSRYB105K10
C 140 CEAL1R0M50
C 141 CEJQ470M10

C 366
C 367
C 368
C 369
C 370

CEJQ100M50
CKSRYB222K50
CKSRYB222K50
CKSRYB222K50
CKSRYB222K50

C 142 CKSRYB104K25
C 143 CEALNP4R7M16
C 144 CEJQNP4R7M16
C 145 CCSQCH152J50
C 146 CCSQCH152J50

C 371
C 372
C 373
C 401
C 402

CKSRYB222K50
CKSRYB222K50
CEJQ220M25
CKSRYB103K50
CKSRYB103K50

C

C 147 CEALNP4R7M16
C 148 CEJQNP4R7M16
C 149 CEALNP4R7M16
C 150 CEJQNP4R7M16
C 151 CEALNP4R7M16

C 403
C 404
C 405
C 408
C 601

CEJQ470M10
CKSRYB103K50
CEJQ101M10
CCSRCH101J50
CEJQ4R7M35

C 152 CEJQNP4R7M16
C 153 CCSRCH100D50
C 154 CCSRCH100D50
C 155 CCSRCH100D50
C 156 CCSRCH100D50

C 602
C 603
C 605
C 606
C 652

CKSRYB103K50
CCSRCH180J50
CCSRCH220J50
CCSRCH470J50
CKSRYB105K10

D

C 157 CCSRCH100D50
C 158 CCSRCH100D50
C 159 CKSRYB474K10
C 160 CKSRYB474K10
C 161 CEJQ100M50

C 702 470μF/10V
C 741
C 742
C 743
C 744

CCH1438
CKSRYB473K50
CKSRYB102K50
CEJQ101M16
CKSRYB473K50

C 163 CKSRYB104K25
C 164 CKSRYB104K25
C 171 CKSRYB103K50
C 173 CKSRYB104K25
C 174 CKSRYB104K25

C 745
C 801
C 821
C 832
C 833

CEHAR101M10
CKSRYB473K50
CKSRYB473K50
CCSRCH101J50
CKSRYB473K50

C 175 CKSRYB104K25
C 176 CKSRYB104K25
C 177 CKSRYB474K10
C 178 CKSRYB474K10
C 179 CCSRCH101J50

C 834
C 841
C 842
C 843
C 844

CKSRYB105K10
CKSRYB104K25
CEJQ470M16
CEJQ101M10
CKSRYB104K25

E

C 180 CCSRCH101J50
C 301 CFTNA224J50
C 302 CFTNA224J50
C 305 CFTNA224J50
C 306 CFTNA224J50

C 845
C 846
C 847
C 849
C 864

4.7μF

CCSRCH331J50
CKSRYB103K50
CEJQ470M25
CCG1111
CKSRYB474K10

C 309 CEHAR330M10
C 310 CCH1486
C 311 CKSRYB104K25
C 312 CEJQ100M16
C 313 CKSQYB225K10

C 865
C 866
C 867
C 901
C 902

470μF/16V
470μF/16V

CKSRYB103K50
CEJQ220M6R3
CKSYB475K10
CCH1331
CCH1331

F

C 314 CKSQYB225K10
C 333 CEJQ220M25
C 334 CEJQ100M50
C 335 CEJQ100M50
C 341 CEAL4R7M35

C 903
C 904
C 905
C 921
C 922

CKSRYB472K50
CKSRYB103K50
CEHAR470M16
CEJQ221M10
CKSRYB103K50

====Circuit Symbol and No.====Part Name

Part No.

C	923		CEHAR101M10
C	931		CKSRYB104K25
C	941		CKSQYB105K16

A Unit Number : CWM8708(DEH-P7500MP/XN/UC)
Unit Name : Tuner Amp Unit

MISCELLANEOUS

IC	101	IC	HA12187FP
IC	131	IC	PML009A
IC	171	IC	NJM4558MD
IC	301	IC	PAL007A
IC	341	IC	PA2028A
IC	601	IC	PD5804A
IC	652	IC	BD4835G
IC	801	IC	TC74VHCT125AFT
IC	841	IC	NJM2360M
IC	861	IC	BA033FP
Q	101	Transistor	UMF23N
Q	301	Transistor	DTC124EU
Q	321	Transistor	IMD2A
Q	361	Transistor	IMH3A
Q	362	Transistor	IMH3A
Q	363	Transistor	IMH3A
Q	364	Transistor	IMD2A
Q	501	Transistor	2SC4081
Q	741	Transistor	IMD2A
Q	742	Transistor	2SD2375
Q	743	Transistor	2SD1760F5
Q	801	Transistor	DTC143EU
Q	821	Transistor	IMD2A
Q	822	Transistor	2SD1767
Q	831	Transistor	UMF23N
Q	841	Transistor	IMD2A
Q	842	Transistor	2SD1760F5
Q	901	Transistor	2SD2375
Q	902	Transistor	IMD2A
Q	921	Transistor	2SD2375
Q	922	Transistor	2SB1243
Q	923	Transistor	DTC114EU
Q	931	Transistor	IMX1
Q	941	Transistor	DTC114EU
Q	951	Transistor	2SA1576A
D	171	Diode	DAP202U
D	172	Diode	DAN202U
D	173	Diode Network	DA204U
D	174	Diode Network	DA204U
D	301	Diode	MPG06G-6415G50
D	302	Diode	MPG06G-6415G50
D	322	Diode	RB706F-40
D	361	Diode	1SS133
D	501	Diode	DAN202U
D	502	Diode	HZS9L(A2)
D	741	Diode	HZS9L(B1)
D	742	Diode	HZS6L(C1)
D	801	Diode Network	DA204U
D	802	Diode	DAN202U
D	803	Diode	DAP202U
D	804	Diode	DAN202U
D	805	Diode	DAP202U
D	821	Diode	HZS11L(A1)
D	841	Diode	HZS11L(A1)
D	842	Diode	RB411D
D	901	Diode	MPG06G-6415G50
D	902	Diode	HZS6L(B2)
D	921	Diode	HZS9L(B3)
D	931	Diode	HZS7L(C3)
D	932	Diode	HZS7L(A1)

====Circuit Symbol and No.====Part Name

Part No.

D	941	Diode	MPG06G-6415G50
D	951	Diode	DAN202U
D	981	Diode	MPG06G-6415G50
D	982	Diode	MPG06G-6415G50
ZNR	401	Surge Protector	DSP-201M-A21F
L	101	Inductor	LCTA2R2J2520
L	131	Inductor	LCTA2R2J2520
L	341	Ferri-Inductor	LAU220K
L	401	Inductor	LAU1R0K
L	402	Ferri-Inductor	LAU100K
L	403	Inductor	LAU1R0K
L	404	Inductor	LCTA4R7J2520
L	601	Ferri-Inductor	LAU100K
L	701	Ferri-Inductor	LAU100K
L	801	Inductor	CTF1379
L	831	Ferri-Inductor	LAU100K
L	842	Inductor	CTF1510
L	951	Inductor	CTF1530
L	981	Choke Coil 600μH	CTH1280
X	601	Radiator 10.00MHz	CSS1475
S	801	Switch(DSENS)	CSN1039
VR	322	Semi-fixed 10kΩ(B)	CCP1229
FU	361	Fuse 3A	CEK1286
FU	362	Fuse 3A	CEK1286
MIC	321	Microphone	CPM1011
SP	601	Buzzer	CPV1062
		FM/AM Tuner Unit	CWE1646
		Fuse 10A	CEK1208

RESISTORS

R	101	RS1/16S562J
R	102	RS1/16S332J
R	103	RS1/16S181J
R	104	RS1/16S181J
R	105	RS1/16S223J
R	106	RS1/16S223J
R	107	RS1/16S102J
R	108	RS1/16S102J
R	109	RS1/16S222J
R	110	RS1/16S101J
R	111	RS1/16S101J
R	112	RS1/16S103J
R	113	RS1/16S150J
R	114	RS1/16S470J
R	131	RS1/16S102J
R	132	RS1/16S102J
R	133	RS1/16S102J
R	134	RS1/16S102J
R	135	RS1/16S101J
R	136	RS1/16S101J
R	137	RS1/16S101J
R	138	RS1/16S101J
R	139	RS1/16S101J
R	140	RS1/16S101J
R	141	RAB4C102J
R	171	RS1/16S104J
R	172	RS1/16S104J
R	173	RS1/16S563J
R	174	RS1/16S563J
R	175	RS1/16S474J
R	176	RS1/16S474J
R	301	RS1/16S103J
R	302	RS1/16S103J
R	303	RS1/16S103J
R	304	RS1/16S331J
R	323	RS1/16S560J
R	332	RS1/16S104J
R	334	RS1/16S104J
R	335	RS1/16S222J
R	341	RS1/16S103J

	====Circuit Symbol and No.====Part Name	Part No.	====Circuit Symbol and No.====Part Name	Part No.
A	R 342	RS1/16S103J	R 799	RS1/16S102J
	R 343	RS1/16S0R0J	R 801	RS1/16S222J
	R 361	RS1/16S820J	R 802	RS1/16S222J
	R 362	RS1/16S820J	R 803	RS1/16S222J
	R 363	RS1/16S820J	R 804	RS1/16S222J
	R 364	RS1/16S820J	R 805	RS1/16S222J
	R 365	RS1/16S820J	R 806	RS1/16S472J
	R 366	RS1/16S820J	R 807	RS1/16S222J
	R 367	RS1/16S223J	R 808	RS1/16S102J
	R 368	RS1/16S223J	R 809	RS1/16S473J
	R 369	RS1/16S223J	R 810	RS1/16S104J
	R 370	RS1/16S223J	R 811	RS1/16S473J
	R 371	RS1/16S223J	R 812	RS1/16S563J
	R 372	RS1/16S223J	R 813	RD1/4PU391J
	R 373	RS1/16S471J	R 814	RS1/16S102J
B	R 374	RS1/16S471J	R 815	RS1/16S104J
	R 375	RS1/16S471J	R 816	RS1/16S104J
	R 376	RS1/16S471J	R 817	RS1/16S102J
	R 377	RS1/16S471J	R 818	RS1/16S102J
	R 378	RS1/16S471J	R 819	RS1/16S472J
	R 379	RS1/16S0R0J	R 821	RS1/16S221J
	R 380	RS1/16S0R0J	R 822	RS1/16S221J
	R 381	RS1/16S0R0J	R 823	RS1/16S1R0J
	R 382	RS1/16S0R0J	R 831	RS1/16S472J
	R 383	RS1/16S0R0J	R 832	RS1/16S102J
	R 384	RS1/16S0R0J	R 833	RS1/16S472J
	R 389	RS1/16S102J	R 841	RS1/16S821J
	R 401	RS1/16S681J	R 844	RS1/16S1R0J
	R 403	RS1/16S681J	R 845	RS1/16S391J
	R 404	RS1/16S681J	R 846	RS1/16S121J
C	R 405	RS1/16S681J	R 847	RD1/4PU152J
	R 406	RS1/16S681J	R 861	RS1/16S0R0J
	R 407	RS1/16S681J	R 901	RS1/16S223J
	R 501	RS1/16S103J	R 902	RS1/16S332J
	R 502	RS1/16S473J	R 903	RD1/4PU391J
	R 601	RS1/16S472J	R 904	RS1/16S0R0J
	R 602	RS1/16S104J	R 921	RD1/4PU221J
	R 604	RS1/16S473J	R 922	RS1/16S152J
	R 605	RS1/16S0R0J	R 923	RD1/4PU152J
	R 608	RS1/16S473J	R 924	RS1/16S223J
D	R 609	RS1/16S104J	R 925	RS1/16S223J
	R 610	RS1/16S102J	R 931	RS1/16S104J
	R 613	RS1/16S104J	R 932	RS1/16S473J
	R 615	RS1/16S104J	R 933	RS1/16S103J
	R 616	RS1/16S104J	R 934	RS1/16S473J
	R 617	RS1/16S104J	R 935	RS1/16S472J
	R 627	RS1/16S681J	R 943	RS1/16S103J
	R 628	RS1/16S681J	R 951	RS1/16S102J
	R 629	RS1/16S681J	R 952	RS1/16S472J
	R 642	RS1/16S104J	R 953	RS1/16S472J
	R 651	RS1/16S102J	R 954	RS1/16S153J
	R 652	RS1/16S102J	R 955	RS1/16S104J
	R 653	RS1/16S183J	R 981	RD1/4PU102J
	R 702	RS1/16S473J	R 982	RD1/4PU102J
	R 703	RS1/16S682J		
E	R 704	RS1/16S682J	CAPACITORS	
	R 705	RS1/16S682J	C 102	CKSRYB104K25
	R 706	RS1/16S682J	C 131	CCSQCH152J50
	R 707	RS1/16S221J	C 132	CCSQCH152J50
	R 708	RS1/16S221J	C 133	CKSRYB105K10
			C 134	CKSRYB105K10
	R 709	RS1/16S221J		
	R 710	RS1/16S221J	C 137	CEAL1R0M50
	R 711	RS1/16S221J	C 138	CEAL1R0M50
	R 712	RS1/16S221J	C 139	CKSRYB105K10
	R 713	RS1/16S0R0J	C 140	CEAL1R0M50
			C 141	CEJQ470M10
	R 714	RS1/16S0R0J		
	R 741	RD1/4PU391J	C 142	CKSRYB104K25
	R 742	RD1/4PU221J	C 143	CEALNP4R7M16
F	R 743	RS1/16S331J	C 144	CEJQNP4R7M16
	R 798	RS1/16S104J	C 145	CCSQCH152J50
			C 146	CCSQCH152J50

====Circuit Symbol and No.====Part Name

Part No.

====Circuit Symbol and No.====Part Name

Part No.

C 147
C 148
C 149
C 150
C 151

CEALNP4R7M16
CEJQNP4R7M16
CEALNP4R7M16
CEJQNP4R7M16
CEALNP4R7M16

C 405
C 408
C 601
C 602
C 603

CEJQ101M10
CCSRCH101J50
CEJQ4R7M35
CKSRYB103K50
CCSRCH180J50

A

C 152
C 153
C 154
C 155
C 156

CEJQNP4R7M16
CCSRCH100D50
CCSRCH100D50
CCSRCH100D50
CCSRCH100D50

C 605
C 606
C 652
C 702 470μF/10V
C 741

CCSRCH220J50
CCSRCH470J50
CKSRYB105K10
CCH1438
CKSRYB473K50

C 157
C 158
C 159
C 160
C 161

CCSRCH100D50
CCSRCH100D50
CKSRYB474K10
CKSRYB474K10
CEJQ100M50

C 742
C 743
C 744
C 745
C 801

CKSRYB102K50
CEJQ101M16
CKSRYB473K50
CEHAR101M10
CKSRYB473K50

B

C 163
C 164
C 171
C 173
C 174

CKSRYB104K25
CKSRYB104K25
CKSRYB103K50
CKSRYB104K25
CKSRYB104K25

C 821
C 832
C 833
C 834
C 841

CKSRYB473K50
CCSRCH101J50
CKSRYB473K50
CKSRYB105K10
CKSRYB104K25

C 175
C 176
C 177
C 178
C 179

CKSRYB104K25
CKSRYB104K25
CKSRYB474K10
CKSRYB474K10
CCSRCH101J50

C 842
C 843
C 844
C 845
C 846

CEJQ470M16
CEJQ101M10
CKSRYB104K25
CCSRCH331J50
CKSRYB103K50

C 180
C 301
C 302
C 305
C 306

CCSRCH101J50
CFTNA224J50
CFTNA224J50
CFTNA224J50
CFTNA224J50

C 847
C 849 4.7μF
C 864
C 865
C 866

CEJQ470M25
CCG1111
CKSRYB474K10
CKSRYB103K50
CEJQ220M6R3

C

C 309 3300μF/16V
C 310
C 311
C 312
C 313

CEHAR330M10
CCH1486
CKSRYB104K25
CEJQ100M16
CKSQYB225K10

C 867
C 901 470μF/16V
C 902 470μF/16V
C 903
C 904

CKSYB475K10
CCH1331
CCH1331
CKSRYB472K50
CKSRYB103K50

C 314
C 333
C 334
C 335
C 341

CKSQYB225K10
CEJQ220M25
CEJQ100M50
CEJQ100M50
CEAL4R7M35

C 905
C 921
C 922
C 923
C 931

CEHAR470M16
CEJQ221M10
CKSRYB103K50
CEHAR101M10
CKSRYB104K25

C 342
C 343
C 345
C 346
C 347

CEJQ101M16
CASAQ3R3M16
CKSYB684K25
CEAL100M16
CKSQYB225K10

C 941

CKSQYB105K16

D

A Unit Number : CWM8709(DEH-P7550MP/XN/ES)
Unit Name : Tuner Amp Unit

MISCELLANEOUS

C 348
C 349
C 353
C 354
C 355

CEJQ330M25
CEJQ330M25
CKSRYB105K10
CKSRYB105K10
CKSRYB105K10

IC 101 IC
IC 131 IC
IC 171 IC
IC 301 IC
IC 341 IC

HA12187FP
PML009A
NJM4558MD
PAL007A
PA2028A

C 356
C 357
C 358
C 361
C 362

CKSRYB105K10
CKSRYB105K10
CKSRYB105K10
CEJQ100M50
CEJQ100M25

IC 601 IC
IC 652 IC
IC 801 IC
IC 841 IC
IC 861 IC

PD5804A
BD4835G
TC74VHCT125AFT
NJM2360M
BA033FP

E

C 363
C 364
C 365
C 366
C 367

CEJQ100M50
CEJQ100M25
CEJQ100M50
CEJQ100M50
CKSRYB222K50

Q 101 Transistor
Q 301 Transistor
Q 321 Transistor
Q 361 Transistor
Q 362 Transistor

UMF23N
DTC124EU
IMD2A
IMH3A
IMH3A

C 368
C 369
C 370
C 371
C 372

CKSRYB222K50
CKSRYB222K50
CKSRYB222K50
CKSRYB222K50
CKSRYB222K50

Q 363 Transistor
Q 364 Transistor
Q 501 Transistor
Q 741 Transistor
Q 742 Transistor

IMH3A
IMD2A
2SC4081
IMD2A
2SD2375

C 373
C 401
C 402
C 403
C 404

CEJQ220M25
CKSRYB103K50
CKSRYB103K50
CEJQ470M10
CKSRYB103K50

Q 743 Transistor
Q 801 Transistor
Q 821 Transistor
Q 822 Transistor
Q 831 Transistor

2SD1760F5
DTC143EU
IMD2A
2SD1767
UMF23N

F

	====Circuit Symbol and No.====Part Name	Part No.	====Circuit Symbol and No.====Part Name	Part No.
A	Q 841 Transistor	IMD2A	R 106	RS1/16S223J
	Q 842 Transistor	2SD1760F5	R 107	RS1/16S102J
	Q 901 Transistor	2SD2375	R 108	RS1/16S102J
	Q 902 Transistor	IMD2A	R 109	RS1/16S222J
	Q 921 Transistor	2SD2375	R 110	RS1/16S101J
	Q 922 Transistor	2SB1243	R 111	RS1/16S101J
	Q 923 Transistor	DTC114EU	R 112	RS1/16S103J
	Q 931 Transistor	IMX1	R 113	RS1/16S150J
	Q 941 Transistor	DTC114EU	R 114	RS1/16S470J
	Q 951 Transistor	2SA1576A	R 131	RS1/16S102J
B	D 171 Diode	DAP202U	R 132	RS1/16S102J
	D 172 Diode	DAN202U	R 133	RS1/16S102J
	D 173 Diode Network	DA204U	R 134	RS1/16S102J
	D 174 Diode Network	DA204U	R 135	RS1/16S101J
	D 301 Diode	MPG06G-6415G50	R 136	RS1/16S101J
	D 302 Diode	MPG06G-6415G50	R 137	RS1/16S101J
	D 322 Diode	RB706F-40	R 138	RS1/16S101J
	D 361 Diode	1SS133	R 139	RS1/16S101J
	D 501 Diode	DAN202U	R 140	RS1/16S101J
	D 502 Diode	HZS9L(A2)	R 141	RAB4C102J
	D 741 Diode	HZS9L(B1)	R 171	RS1/16S104J
	D 742 Diode	HZS6L(C1)	R 172	RS1/16S104J
	D 801 Diode Network	DA204U	R 173	RS1/16S563J
	D 802 Diode	DAN202U	R 174	RS1/16S563J
	D 803 Diode	DAP202U	R 175	RS1/16S474J
C	D 804 Diode	DAN202U	R 176	RS1/16S474J
	D 805 Diode	DAP202U	R 301	RS1/16S103J
	D 821 Diode	HZS11L(A1)	R 302	RS1/16S103J
	D 841 Diode	HZS11L(A1)	R 303	RS1/16S103J
	D 842 Diode	RB411D	R 304	RS1/16S331J
	D 901 Diode	MPG06G-6415G50	R 323	RS1/16S560J
	D 902 Diode	HZS6L(B2)	R 332	RS1/16S104J
	D 921 Diode	HZS9L(B3)	R 334	RS1/16S104J
	D 931 Diode	HZS7L(C3)	R 335	RS1/16S222J
	D 932 Diode	HZS7L(A1)	R 341	RS1/16S103J
	D 941 Diode	MPG06G-6415G50	R 342	RS1/16S103J
	D 951 Diode	DAN202U	R 343	RS1/16S0R0J
	D 981 Diode	MPG06G-6415G50	R 361	RS1/16S820J
	D 982 Diode	MPG06G-6415G50	R 362	RS1/16S820J
	ZNR 401 Surge Protector	DSP-201M-A21F	R 363	RS1/16S820J
D	L 101 Inductor	LCTA2R2J2520	R 364	RS1/16S820J
	L 131 Inductor	LCTA2R2J2520	R 365	RS1/16S820J
	L 341 Ferri-Inductor	LAU220K	R 366	RS1/16S820J
	L 401 Inductor	LAU1R0K	R 367	RS1/16S223J
	L 402 Ferri-Inductor	LAU100K	R 368	RS1/16S223J
	L 403 Inductor	LAU1R0K	R 369	RS1/16S223J
	L 404 Inductor	LCTA4R7J2520	R 370	RS1/16S223J
	L 601 Ferri-Inductor	LAU100K	R 371	RS1/16S223J
	L 701 Ferri-Inductor	LAU100K	R 372	RS1/16S223J
	L 801 Inductor	CTF1379	R 373	RS1/16S471J
E	L 831 Ferri-Inductor	LAU100K	R 374	RS1/16S471J
	L 842 Inductor	CTF1510	R 375	RS1/16S471J
	L 951 Inductor	CTF1530	R 376	RS1/16S471J
	L 981 Choke Coil 600μH	CTH1280	R 377	RS1/16S471J
	X 601 Radiator 10.00MHz	CSS1475	R 378	RS1/16S471J
	S 801 Switch(DSENS)	CSN1039	R 379	RS1/16S0R0J
	VR 322 Semi-fixed 10kΩ(B)	CCP1229	R 380	RS1/16S0R0J
	FU 361 Fuse 3A	CEK1286	R 381	RS1/16S0R0J
	FU 362 Fuse 3A	CEK1286	R 382	RS1/16S0R0J
	MIC 321 Microphone	CPM1011	R 383	RS1/16S0R0J
	SP 601 Buzzer	CPV1062	R 384	RS1/16S0R0J
	FM/AM Tuner Unit	CWE1646	R 389	RS1/16S102J
	Fuse 10A	CEK1208	R 401	RS1/16S681J
			R 403	RS1/16S681J
			R 404	RS1/16S681J
F	R 101	RS1/16S562J	R 405	RS1/16S681J
	R 102	RS1/16S332J	R 406	RS1/16S681J
	R 103	RS1/16S181J	R 407	RS1/16S681J
	R 104	RS1/16S181J	R 501	RS1/16S103J
	R 105	RS1/16S223J	R 502	RS1/16S473J

====Circuit Symbol and No.==Part Name

Part No.

====Circuit Symbol and No.==Part Name

Part No.

R 601	RS1/16S472J
R 602	RS1/16S104J
R 604	RS1/16S473J
R 605	RS1/16S0R0J
R 608	RS1/16S473J
R 609	RS1/16S104J
R 610	RS1/16S102J
R 612	RS1/16S104J
R 614	RS1/16S104J
R 616	RS1/16S104J
R 617	RS1/16S104J
R 627	RS1/16S681J
R 628	RS1/16S681J
R 629	RS1/16S681J
R 642	RS1/16S104J
R 651	RS1/16S102J
R 652	RS1/16S102J
R 653	RS1/16S183J
R 702	RS1/16S473J
R 703	RS1/16S682J
R 704	RS1/16S682J
R 705	RS1/16S682J
R 706	RS1/16S682J
R 707	RS1/16S221J
R 708	RS1/16S221J
R 709	RS1/16S221J
R 710	RS1/16S221J
R 711	RS1/16S221J
R 712	RS1/16S221J
R 713	RS1/16S0R0J
R 714	RS1/16S0R0J
R 741	RD1/4PU391J
R 742	RD1/4PU221J
R 743	RS1/16S331J
R 798	RS1/16S104J
R 799	RS1/16S102J
R 801	RS1/16S222J
R 802	RS1/16S222J
R 803	RS1/16S222J
R 804	RS1/16S222J
R 805	RS1/16S222J
R 806	RS1/16S472J
R 807	RS1/16S222J
R 808	RS1/16S102J
R 809	RS1/16S473J
R 810	RS1/16S104J
R 811	RS1/16S473J
R 812	RS1/16S563J
R 813	RD1/4PU391J
R 814	RS1/16S102J
R 815	RS1/16S104J
R 816	RS1/16S104J
R 817	RS1/16S102J
R 818	RS1/16S102J
R 819	RS1/16S472J
R 821	RS1/16S221J
R 822	RS1/16S221J
R 823	RS1/16S1R0J
R 831	RS1/16S472J
R 832	RS1/16S102J
R 833	RS1/16S472J
R 841	RS1/16S821J
R 844	RS1/16S1R0J
R 845	RS1/16S391J
R 846	RS1/16S121J
R 847	RD1/4PU152J
R 861	RS1/16S0R0J
R 901	RS1/16S223J
R 902	RS1/16S332J
R 903	RD1/4PU391J

R 904	RS1/16S0R0J
R 921	RD1/4PU221J
R 922	RS1/16S152J
R 923	RD1/4PU152J
R 924	RS1/16S223J
R 925	RS1/16S223J
R 931	RS1/16S104J
R 932	RS1/16S473J
R 933	RS1/16S103J
R 934	RS1/16S473J
R 935	RS1/16S472J
R 943	RS1/16S103J
R 951	RS1/16S102J
R 952	RS1/16S472J
R 953	RS1/16S472J
R 954	RS1/16S153J
R 955	RS1/16S104J
R 981	RD1/4PU102J
R 982	RD1/4PU102J
CAPACITORS	
C 102	CKSRYB104K25
C 131	CCSQCH152J50
C 132	CCSQCH152J50
C 133	CKSRYB105K10
C 134	CKSRYB105K10
C 137	CEAL1R0M50
C 138	CEAL1R0M50
C 139	CKSRYB105K10
C 140	CEAL1R0M50
C 141	CEJQ470M10
C 142	CKSRYB104K25
C 143	CEALNP4R7M16
C 144	CEJQNP4R7M16
C 145	CCSQCH152J50
C 146	CCSQCH152J50
C 147	CEALNP4R7M16
C 148	CEJQNP4R7M16
C 149	CEALNP4R7M16
C 150	CEJQNP4R7M16
C 151	CEALNP4R7M16
C 152	CEJQNP4R7M16
C 153	CCSRCH100D50
C 154	CCSRCH100D50
C 155	CCSRCH100D50
C 156	CCSRCH100D50
C 157	CCSRCH100D50
C 158	CCSRCH100D50
C 159	CKSRYB474K10
C 160	CKSRYB474K10
C 161	CEJQ100M50
C 163	CKSRYB104K25
C 164	CKSRYB104K25
C 171	CKSRYB103K50
C 173	CKSRYB104K25
C 174	CKSRYB104K25
C 175	CKSRYB104K25
C 176	CKSRYB104K25
C 177	CKSRYB474K10
C 178	CKSRYB474K10
C 179	CCSRCH101J50
C 180	CCSRCH101J50
C 301	CFTNA224J50
C 302	CFTNA224J50
C 305	CFTNA224J50
C 306	CFTNA224J50
C 309	CEHAR330M10
C 310	CCH1486
C 311	CKSRYB104K25
C 312	CEJQ100M16
C 313	CKSQYB225K10

3300μF/16V

====Circuit Symbol and No.====Part Name

Part No.

====Circuit Symbol and No.====Part Name

Part No.

A

C	314	CKSQYB225K10
C	333	CEJQ220M25
C	334	CEJQ100M50
C	335	CEJQ100M50
C	341	CEAL4R7M35

C	905	CEHAR470M16
C	921	CEJQ221M10
C	922	CKSRYB103K50
C	923	CEHAR101M10
C	931	CKSRYB104K25

C	342	CEJQ101M16
C	343	CASAO3R3M16
C	345	CKSYB684K25
C	346	CEAL100M16
C	347	CKSQYB225K10

C	941	CKSQYB105K16
---	-----	--------------

B Unit Number : CWM8713
Unit Name : Keyboard Unit

MISCELLANEOUS

B

C	348	CEJQ330M25
C	349	CEJQ330M25
C	353	CKSRYB105K10
C	354	CKSRYB105K10
C	355	CKSRYB105K10

IC	1901	HIC	RS-140
IC	1902	IC	S-818A33AUC-BGN
IC	1940	IC	PD5808A
IC	1980	IC	PD6405A
IC	1981	IC	TC7WH32FU

C	356	CKSRYB105K10
C	357	CKSRYB105K10
C	358	CKSRYB105K10
C	361	CEJQ100M50
C	362	CEJQ100M25

IC	1990	IC	PD8105A
Q	1960	Transistor	2SC4617
Q	1961	Transistor	2SD1664
Q	1980	Transistor	2SC4154-11
Q	1981	Transistor	IMD2A

C	363	CEJQ100M50
C	364	CEJQ100M25
C	365	CEJQ100M50
C	366	CEJQ100M50
C	367	CKSRYB222K50

Q	1982	Transistor	IMD2A
D	1903	LED	CL190UBX
D	1904	LED	CL190UBX
D	1905	LED	CL-195PG-CD
D	1906	LED	CL-195PG-CD

C

C	368	CKSRYB222K50
C	369	CKSRYB222K50
C	370	CKSRYB222K50
C	371	CKSRYB222K50
C	372	CKSRYB222K50

D	1914	LED	CL-195PG-CD
D	1915	LED	CL-195PG-CD
D	1917	LED	CL-195PG-CD
D	1919	LED	CL-195PG-CD
D	1921	LED	CL-195PG-CD

C	373	CEJQ220M25
C	401	CKSRYB103K50
C	402	CKSRYB103K50
C	403	CEJQ470M10
C	404	CKSRYB103K50

D	1931	LED	CL-195PG-CD
D	1940	Diode	1SS355
D	1980	Diode	DAN202U
D	1982	Diode	UDZ13(B)
L	1901	Inductor	CTF1530

C	405	CEJQ101M10
C	408	CCSRCH101J50
C	601	CEJQ4R7M35
C	602	CKSRYB103K50
C	603	CCSRCH180J50

L	1940	Inductor	CTF1530
TH	1960	Thermistor	CCX1037
X	1940	Radiator 10.0MHz	CSS1577
S	1901	Encoder(VOLUME)	CSD1059
S	1902	Push Switch	CSG1112

D

C	605	CCSRCH220J50
C	606	CCSRCH470J50
C	652	CKSRYB105K10
C	702	CCH1438
C	741	CKSRYB473K50

S	1903	Push Switch	CSG1112
S	1904	Push Switch	CSG1112
S	1905	Push Switch	CSG1112
S	1906	Push Switch	CSG1111
S	1907	Push Switch	CSG1111

C	742	CKSRYB102K50
C	743	CEJQ101M16
C	744	CKSRYB473K50
C	745	CEHAR101M10
C	801	CKSRYB473K50

S	1908	Switch	CSG1107
S	1909	Switch	CSG1107
S	1910	Switch	CSG1107
S	1911	Switch	CSG1107
S	1912	Switch	CSG1107

E

C	821	CKSRYB473K50
C	832	CCSRCH101J50
C	833	CKSRYB473K50
C	834	CKSRYB105K10
C	841	CKSRYB104K25

S	1913	Switch	CSG1107
S	1914	Push Switch	CSG1111
S	1915	Push Switch	CSG1111
S	1916	Push Switch	CSG1111
S	1917	Push Switch	CSG1112

C	842	CEJQ470M16
C	843	CEJQ101M10
C	844	CKSRYB104K25
C	845	CCSRCH331J50
C	846	CKSRYB103K50

S	1918	Push Switch	CSG1160
S	1919	Push Switch	CSG1160
S	1920	Push Switch	CSG1112
S	1921	Push Switch	CSG1112
VR	1970	Semi-fixed 15kΩ(B)	CCP1230

C	847	CEJQ470M25
C	849	CCG1111
C	864	CKSRYB474K10
C	865	CKSRYB103K50
C	866	CEJQ220M6R3

VR	1971	Semi-fixed 20kΩ(B) OEL Unit	CCP1231 MXS8045
----	------	--------------------------------	--------------------

RESISTORS

F

C	867	CKSYB475K10
C	901	CCH1331
C	902	CCH1331
C	903	CKSRYB472K50
C	904	CKSRYB103K50

R	1901	RS1/16S222J
R	1902	RS1/16S222J
R	1903	RS1/16S473J
R	1905	RS1/16S0R0J
R	1911	RS1/16S103J

====Circuit Symbol and No.====Part Name

Part No.

R 1912
R 1913
R 1914
R 1915
R 1916

RS1/16S822J
RS1/16S121J
RS1/16S184J
RS1/16S2R2J
RS1/16S560J

R 1918
R 1920
R 1922
R 1924
R 1926

RS1/16S181J
RS1/16S560J
RS1/16S181J
RS1/16S560J
RS1/16S560J

R 1928
R 1929
R 1930
R 1932
R 1933

RS1/16S121J
RS1/16S121J
RS1/16S680J
RS1/16S181J
RS1/16S181J

R 1940
R 1941
R 1942
R 1943
R 1944

RS1/16S222J
RS1/16S101J
RAB4C101J
RAB4C101J
RAB4C101J

R 1945
R 1946
R 1947
R 1948
R 1949

RAB4C101J
RAB4C101J
RAB4C101J
RAB4C101J
RAB4C101J

R 1950
R 1952
R 1953
R 1954
R 1955

RAB4C101J
RS1/16S101J
RS1/16S101J
RAB4C473J
RS1/16S473J

R 1956
R 1957
R 1958
R 1959
R 1960

RS1/16S103J
RAB4C101J
RS1/16S473J
RS1/16S154J
RS1/16S223J

R 1961
R 1962
R 1963
R 1980
R 1981

RS1/16S683J
RS1/16S392J
RS1/16S393J
RS1/16S473J
RS1/16S473J

R 1982
R 1983
R 1985
R 1991
R 1992

RS1/16S473J
RS1/16S102J
RS1/16S0R0J
RS1/16S101J
RS1/16S101J

R 1993
R 1994
R 1996
R 1997
R 1998

RS1/16S101J
RS1/16S101J
RS1/16S332J
RS1/16S222J
RS1/16S102J

R 1999
R 2000

RS1/16S102J
RAB4C102J

CAPACITORS

C 1906
C 1907
C 1908
C 1909
C 1910

CKSRYB104K25
CKSRYB104K25
CKSYF106Z10
CSZSR4R7M16
CSZSR4R7M10

C 1940
C 1941
C 1942
C 1943
C 1944

CKSRYB103K50
CKSRYB473K50
CKSRYB105K10
CKSRYB103K50
CSZSR4R7M10

C 1972
C 1973
C 1974
C 1975
C 1976

CKSRYB104K25
CKSRYB104K25
CKSRYB104K25
CKSRYB104K25
CKSRYB104K25

====Circuit Symbol and No.====Part Name

Part No.

C 1981
C 1983
C 1984
C 1990
C 1991

CKSRYB103K50
CKSRYB103K50
CSZSR4R7M16
CKSRYB103K50
CKSRYB104K25

C 1992

CKSRYB104K25



Unit Number : CWM8758

Unit Name : Panel Unit

MISCELLANEOUS

D 1970

LED

CL220PGC

S 1970

Push Switch(EJECT)

CSG1112

RESISTORS

R 1970

RS1/16S101J

R 1971

RS1/16S101J

R 1972

RS1/16S0R0J

CAPACITORS

C 1970

CKSRYB104K16



Unit Number : CWX2792

Unit Name : CD Core Unit(S10MP3)

MISCELLANEOUS

IC 201

IC

UPD63760GJ

IC 202

IC

MSM51V4265EP-70TS

IC 203

IC

BA033SFP

IC 301

IC

BA5996FM

IC 501

IC

UPD61002GC

IC 502

IC

BA25BC0WFP

IC 701

IC

PE5385A

IC 702

IC

TC74VHCT08AFT

IC 703

IC

S-818A33AUC-BGN

Q 101

Transistor

2SB1132

Q 601

Transistor

DTC323TK

Q 602

Transistor

DTC323TK

Q 603

Transistor

2SB709A

Q 701

Transistor

UN2111

D 101

Diode

1SS355

D 201

Diode

1SR154-400

D 501

Diode

1SR154-400

D 601

Diode

MA152WA

L 201

Inductor

CTF1386

L 202

Inductor

CTF1386

L 204

Inductor

CTF1386

L 205

Inductor

CTF1386

L 206

Inductor

CTF1386

L 207

Inductor

CTF1386

L 208

Inductor

CTF1386

L 209

Inductor

CTF1386

L 211

Inductor

CTF1386

L 212

Inductor

CTF1386

L 501

Inductor

CTF1386

L 502

Inductor

CTF1386

L 503

Inductor

CTF1386

L 701

Inductor

CTF1386

L 702

Inductor

LCYBR22J1608

L 703

Inductor

CTF1386

L 704

Inductor

CTF1386

X 201

Ceramic Resonator 16.934MHz

CSS1603

X 202

Ceramic Resonator 24.57MHz

CSS1615

X 702

Resonator 16.000MHz

CSS1627

S 901

Switch(HOME)

CSN1051

S 902

Switch(CLAMP)

CSN1051

====Circuit Symbol and No.===Part Name

Part No.

====Circuit Symbol and No.===Part Name

Part No.

A S 903 Spring Switch(DSCSNS)
S 904 Switch(12EJ)
S 905 Switch(8EJ)

CSN1052
CSN1051
CSN1051

R 707
R 708
R 709
R 710
R 711

RS1/16SS0R0J
RS1/16SS102J
RS1/16SS102J
RS1/16SS102J
RS1/16SS102J

RESISTORS

R 101
R 102
R 103
R 104
R 105

RS1/10S1R5J
RS1/10S1R5J
RS1/10S1R5J
RS1/10S1R5J
RS1/10S1R5J

R 712
R 713
R 714
R 715
R 716

RS1/16SS102J
RS1/16SS102J
RS1/16SS473J
RAB4CQ221J
RAB4CQ221J

R 201
R 202
R 203
R 204
R 206

RS1/16SS102J
RS1/16SS333J
RS1/16SS333J
RS1/16SS333J
RS1/16SS0R0J

R 717
R 718
R 719
R 720
R 721

RAB4CQ221J
RAB4CQ221J
RAB4CQ221J
RS1/16SS471J
RS1/16SS471J

B R 208
R 210
R 212
R 213
R 214

RS1/16SS0R0J
RS1/16SS0R0J
RS1/16SS221J
RS1/16SS1002D
RS1/16SS1002D

R 722
R 723
R 724
R 725
R 726

RAB4CQ221J
RS1/16SS102J
RS1/16S473J
RS1/16SS222J
RS1/16SS103J

R 215
R 216
R 217
R 218
R 219

RS1/16SS6801D
RS1/16SS6801D
RS1/16SS1002D
RS1/16SS1002D
RS1/16SS1002D

R 727
R 728
R 729
R 730
R 731

RS1/16SS473J
RS1/16SS473J
RS1/16SS223J
RS1/16SS473J
RS1/16SS104J

R 220
R 221
R 222
R 223
R 224

RS1/16SS1002D
RS1/16SS103J
RS1/16SS103J
RS1/16SS103J
RS1/16SS103J

R 732
R 733
R 737
R 739
R 740

RS1/16SS104J
RS1/16SS104J
RAB4CQ473J
RAB4CQ473J
RS1/16SS473J

C R 225
R 226
R 227
R 228
R 229

RS1/16SS103J
RS1/16SS393J
RS1/16SS103J
RS1/16SS182J
RS1/16SS103J

R 741
R 742
R 745
R 747
R 748

RS1/16SS104J
RS1/16SS104J
RS1/16SS473J
RS1/16SS104J
RS1/16SS104J

R 231
R 232
R 233
R 237
R 238

RS1/16SS0R0J
RS1/16SS182J
RS1/16SS0R0J
RS1/16SS104J
RS1/16SS473J

R 751
R 752
R 754
R 755
R 756

RS1/16SS221J
RS1/16SS221J
RS1/16SS102J
RS1/16SS102J
RS1/16SS104J

D R 240
R 241
R 301
R 302
R 303

RS1/16SS0R0J
RS1/16SS221J
RS1/16SS183J
RS1/16SS822J
RS1/16SS0R0J

R 757
R 801
R 802
R 803
R 901

RS1/16SS104J
RS1/16SS104J
RS1/16SS473J
RS1/16SS273J
RS1/16SS221J

R 304
R 305
R 306
R 307
R 308

RS1/16SS183J
RS1/16SS822J
RS1/16SS0R0J
RS1/16SS183J
RS1/16SS822J

R 902
R 903
R 904
R 905
R 906

RS1/16SS221J
RS1/16SS221J
RS1/16SS221J
RS1/16SS221J
RS1/16SS221J

R 309
R 310
R 311
R 501
R 502

RS1/16SS183J
RS1/16SS822J
RS1/16SS0R0J
RS1/16SS221J
RS1/16SS221J

CAPACITORS

C 101
C 102
C 103
C 104
C 105

CKSSYB104K10
CKSSYB104K10
CEV101M16
CEV101M4
CKSSYB104K10

E R 503
R 504
R 505
R 506
R 507

RS1/16SS221J
RAB4CQ223J
RAB4CQ223J
RAB4CQ223J
RS1/16SS223J

C 106
C 108
C 109
C 201
C 202

CCSRCH101J50
CKSSYB104K10
CEV100M16
CKSSYB471K50
CKSSYB104K10

R 508
R 509
R 510
R 511
R 512

RS1/16SS223J
RS1/16SS102J
RS1/16SS223J
RS1/16SS223J
RS1/16SS223J

C 203
C 204
C 205
C 206
C 207

CKSSYB104K10
CEV220M6R3
CKSSYB103K16
CKSSYB103K16
CEV221M4

F R 601
R 602
R 603
R 604
R 605

RS1/16S101J
RS1/16S101J
RS1/16S223J
RS1/16S223J
RS1/16SS103J

====Circuit Symbol and No.==Part Name

Part No.

C	208		CKSSYB104K10
C	209		CKSSYB104K10
C	210		CKSSYB104K10
C	211		CKSSYB104K10
C	216		CKSSYB332K50
C	217		CKSSYB104K10
C	218		CKSSYB223K16
C	219		CKSSYB104K10
C	220		CKSSYB103K16
C	221		CKSSYB104K10
C	222		CCSSCH270J50
C	223		CCSSCJ3R0C50
C	224		CKSSYB104K10
C	225		CKSSYB103K16
C	226		CCSSCH680J50
C	227		CCSSCH470J50
C	228		CKSSYB682K25
C	230		CKSSYB104K10
C	232		CKSSYB104K10
C	233	47μF/6.3V	CCH1436
C	234		CEV221M4
C	235		CKSRYB224K16
C	237		CKSSYB104K10
C	238		CKSSYB104K10
C	239		CCSSCH9R0D50
C	242		CKSSYB104K10
C	243		CKSSYB104K10
C	245		CKSSYB104K10
C	246		CKSSYB104K10
C	301		CKSSYB331K50
C	302		CKSSYB331K50
C	303		CKSSYB472K25
C	304		CKSSYB472K25
C	305		CEV101M16
C	306		CKSRYB224K16
C	501		CKSSYB104K10
C	502		CKSSYB471K50
C	503		CKSSYB104K10
C	504	47μF/6.3V	CCH1436
C	505		CKSRYB224K16
C	506		CKSSYB104K10
C	508		CKSSYB104K10
C	509		CKSSYB104K10
C	510		CKSSYB104K10
C	511		CKSSYB104K10
C	601		CCSRCH102J50
C	602		CCSRCH102J50
C	603	4.7μF/25V	CCH1508
C	604	4.7μF/25V	CCH1508
C	701		CKSSYB104K10
C	702		CKSSYB471K50
C	703		CKSSYB103K16
C	704		CEV1R0M50
C	705		CKSSYB104K10
C	706		CKSSYB471K50
C	707		CKSSYB104K10
C	708		CKSSYB104K10
C	710		CKSSYB104K10
C	711	10μF/10V	CCH1349
C	712		CKSRYB224K16
C	713		CKSSYB104K10
C	714		CKSSYB104K10
C	715		CKSSYB103K16
C	716		CKSSYB103K16
C	717		CCSSCH8R0D50
C	718		CCSSCH8R0D50
C	901		CKSSYB104K10
C	903		CCSRCH101J50

====Circuit Symbol and No.==Part Name

Part No.

Miscellaneous Parts List

		Pickup Unit(Service)(P10)	CXX1641
M	1	Motor Unit(SPINDLE)	CXB6007
M	2	Motor Unit(LOADING/CARRIAGE)	CXB8933

A

B

C

D

E

F