


EXPLODED VIEW

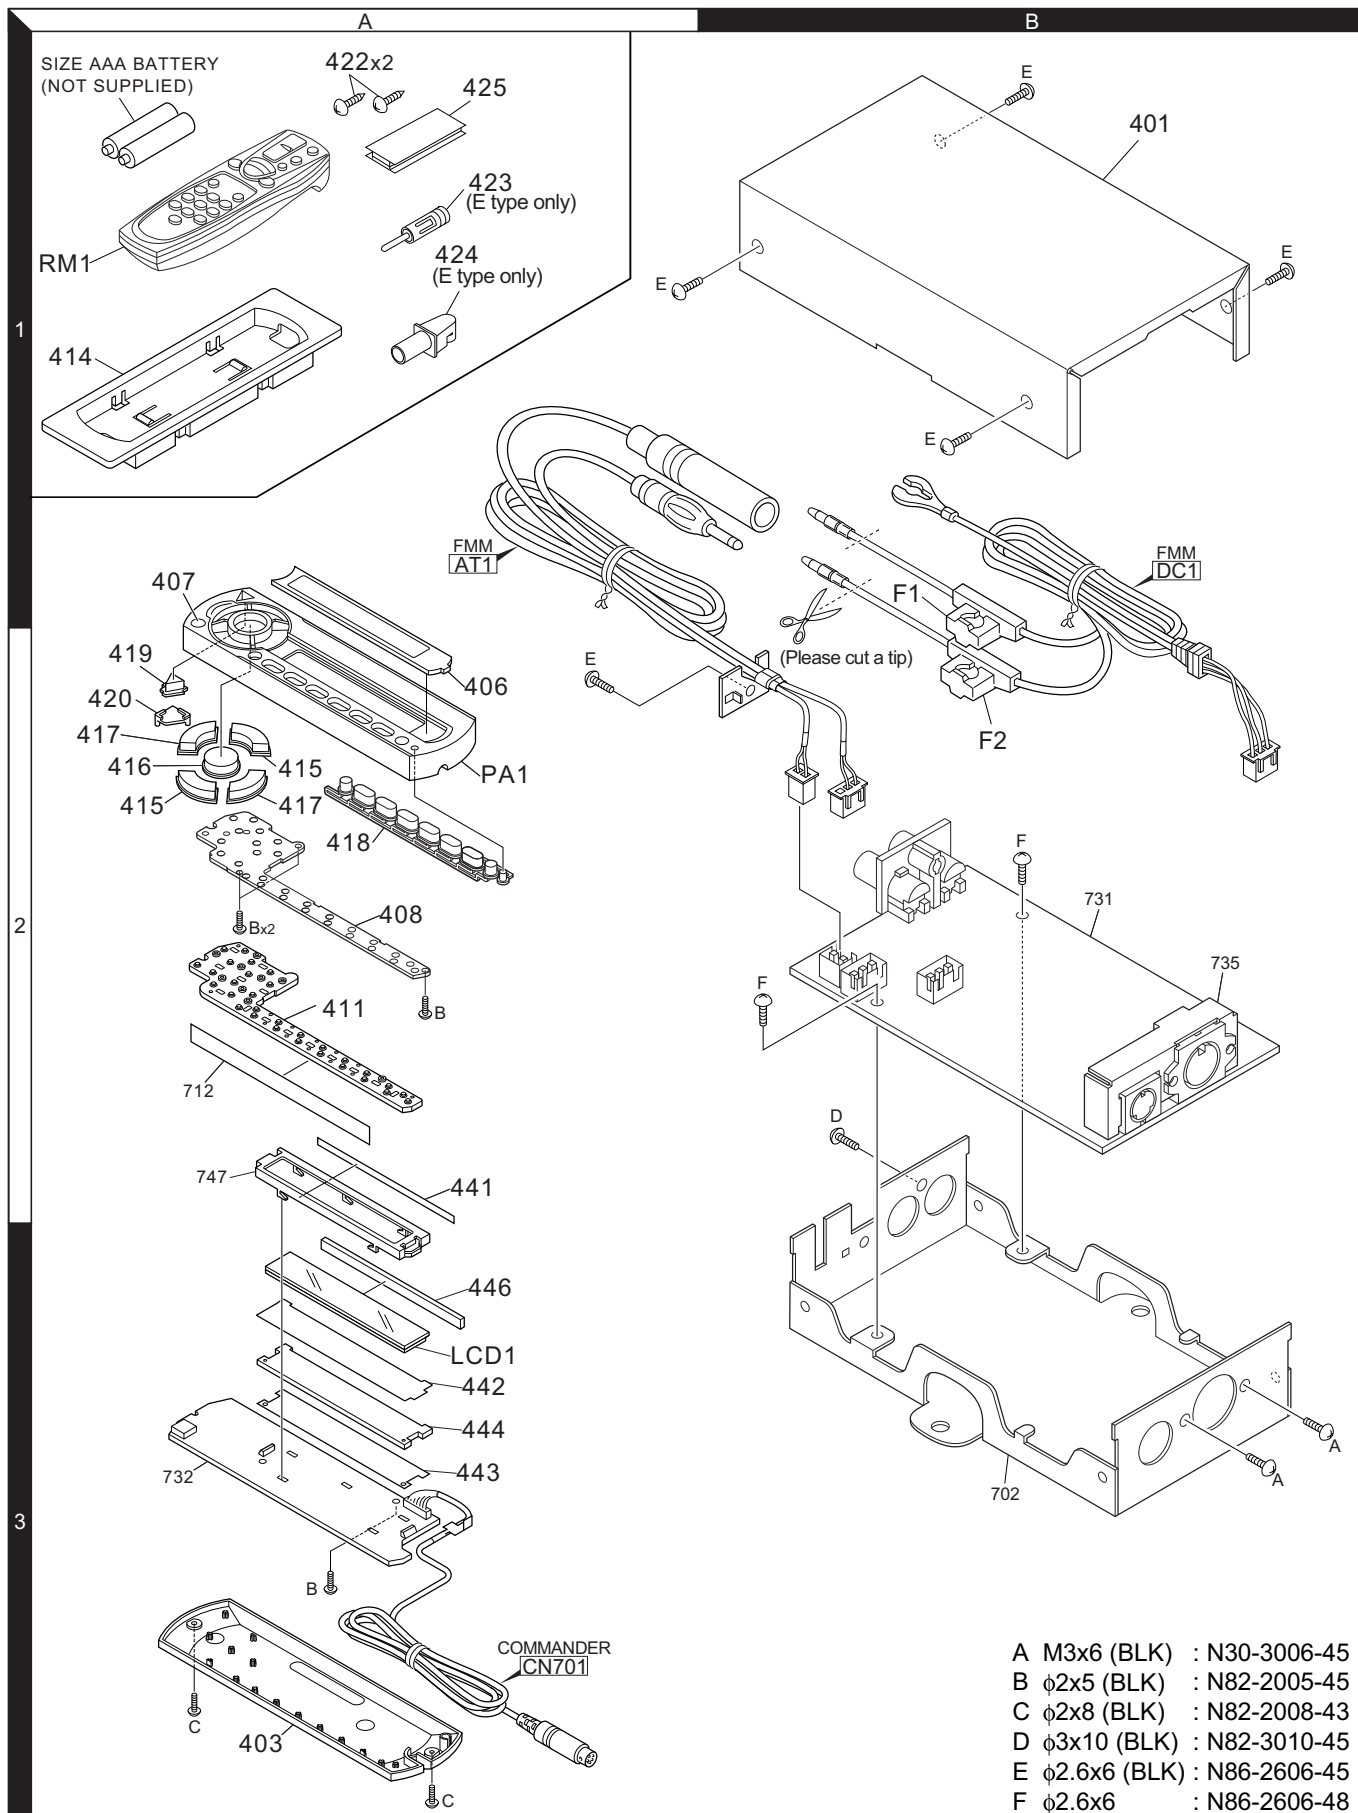

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

Ref. No.	Add	New	Parts No.	Description	Destination
KCA-R71FM					
401	1B	*	A01-2850-08	METALLIC CABINET	K
401	1B	*	A01-2852-08	METALLIC CABINET	E
403	3A	*	A46-1806-08	REAR COVER	K
403	3A	*	A46-1812-08	REAR COVER	E
PA1	2A	*	A64-3412-08	PANEL ASSY	K
PA1	2A	*	A64-3414-08	PANEL ASSY	E
RM1	1A	*	A70-2051-05	REMOTE CONTROLLER ASSY (RC-535)	K
RM1	1A	*	A70-2052-05	REMOTE CONTROLLER ASSY (RC-525)	E
-			B46-0100-50	WARRANTY CARD	
-		*	B58-1401-04	CAUTION CARD	
-		*	B64-2780-00	INST.MANUAL (ENG.FRE.SPA.T-CHI)	K
-		*	B64-2781-00	INSTRUCTI.MANUAL (ENG.FRE.SPA.)	E
-		*	B64-2782-00	INSTR.MANUAL (GER.DUT.ITA.POR.)	E
406	2A	*	B10-4561-08	FRONT GLASS	
407	1A	*	B19-2269-08	LIGHTING BOARD	
408	2A	*	B19-2270-08	LIGHTING BOARD	
411	2A	*	E29-1992-08	CONDUCTIVE RUBBER	
F1,2			F06-3026-05	FUSE 3A	
-		*	H12-2756-08	PACKING FIXTURE	
-		*	H54-3157-08	ITEM CARTON CASE	K
-		*	H54-3160-08	ITEM CARTON CASE	E
414	2A	*	J19-7009-08	UNIT HOLDER	
415	2A	*	K24-4174-08	KNOB (UP/DOWN)	K
415	2A	*	K24-4215-08	KNOB (UP/DOWN)	E
416	2A	*	K24-4175-08	KNOB (MENU)	K
416	2A	*	K24-4217-08	KNOB (MENU)	E
417	2A	*	K24-4213-08	KNOB (SEEK)	K
417	2A	*	K24-4216-08	KNOB (SEEK)	E
418	2A	*	K25-1653-08	KNOB (1-6)	
419	2A	*	K29-7101-08	KEY TOP (SRC)	
420	2A	*	K29-7102-08	KNOB BASE (SRC HOLDER)	
422	1A	*	N99-1755-08	SCREW	
A	3B		N30-3006-45	PAN HEAD MACHINE SCREW	
B	2A		N82-2005-45	BINDING HEAD TAPTITE SCREW	
C	3A	*	N82-2008-43	BINDING HEAD TAPTITE SCREW	
D	2B		N82-3010-45	BINDING HEAD TAPTITE SCREW	
E	1B		N86-2606-45	BINDING HEAD TAPTITE SCREW	
F	2B	*	N86-2606-48	BINDING HEAD TAPTITE SCREW	
423	1A		T90-0512-05	ANTENNA ADAPTOR	E
424	1A	*	T90-0521-05	ANTENNA ADAPTOR	E
425	1A	*	W01-1633-08	VELCRO	
FM MODULATOR UNIT					
C1			CE04DW1A221M	ELECTRO 220UF 10WV	
C102		*	C93-1371-08	CHIP C 1000PF J	
C103			CE04BW1H4R7M	NP-ELEC 4.7UF 50WV	
C104			CK73GB1C104K	CHIP C 0.10UF K	
C106			CE04DW1H010M	ELECTRO 1.0UF 50WV	
C107			CK73GB1H472K	CHIP C 4700PF K	

Ref. No.	Add	New	Parts No.	Description	Destination
C108			CC73GCH1H180J	CHIP C 18PF J	
C109			CK73GB1H153K	CHIP C 0.015UF K	
C112			CE04DW1E220M	ELECTRO 22UF 25WV	
C114			CC73GCH1H681J	CHIP C 680PF J	E
C114		*	C93-1371-08	CHIP C 1000PF J	K
C115			CK73GB0J105K	CHIP C 1.0UF K	
C118		*	C91-2274-08	MP-F C 0.22UF J	
C120			CE04DW1H4R7M	ELECTRO 4.7UF 50WV	
C153			CE04DW1E100M	ELECTRO 10UF 25WV	
C154			CC73GCH1H471J	CHIP C 470PF J	
C202		*	C93-1371-08	CHIP C 1000PF J	
C203			CE04BW1H4R7M	NP-ELEC 4.7UF 50WV	
C207			CK73GB1H472K	CHIP C 4700PF K	
C208			CC73GCH1H180J	CHIP C 18PF J	
C209			CK73GB1H153K	CHIP C 0.015UF K	
C212			CE04DW1E220M	ELECTRO 22UF 25WV	
C214			CC73GCH1H681J	CHIP C 680PF J	E
C214		*	C93-1371-08	CHIP C 1000PF J	K
C218		*	C91-2274-08	MP-F C 0.22UF J	
C220			CE04DW1H4R7M	ELECTRO 4.7UF 50WV	
C253			CE04DW1E100M	ELECTRO 10UF 25WV	
C254			CC73GCH1H471J	CHIP C 470PF J	
C301			CE04DW1E100M	ELECTRO 10UF 25WV	
C302			CC73GCH1H101J	CHIP C 100PF J	
C303			CC73GCH1H150J	CHIP C 15PF J	
C306			CK73GB1E333K	CHIP C 0.033UF K	
C307			CC73GCH1H180J	CHIP C 18PF J	
C308			CC73GCH1H471J	CHIP C 470PF J	
C309			CE04DW1H4R7M	ELECTRO 4.7UF 50WV	
C312			CE04DW1E470M	ELECTRO 47UF 25WV	
C313			CE04DW1A101M	ELECTRO 100UF 10WV	
C314			CC73GCH1H330J	CHIP C 33PF J	
C315			CK73GB1H332K	CHIP C 3300PF K	
C401			CE04DW1E220M	ELECTRO 22UF 25WV	
C402			CE04DW1E100M	ELECTRO 10UF 25WV	
C403			CC73GCH1H101J	CHIP C 100PF J	
C404			CC73GCH1H120J	CHIP C 12PF J	
C405			CE04DW1H4R7M	ELECTRO 4.7UF 50WV	
C411-413			CC73GCH1H150J	CHIP C 15PF J	
C414			CC73GCH1H471J	CHIP C 470PF J	
C416			CK73GB1E223K	CHIP C 0.022UF K	
C418			CC73GCH1H101J	CHIP C 100PF J	
C419			CC73GCH1H330J	CHIP C 33PF J	
C420			CK73GB1E223K	CHIP C 0.022UF K	
C421			CC73GCH1H471J	CHIP C 470PF J	
C451			CC73GCH1H471J	CHIP C 470PF J	
C501			CC73GCH1H330J	CHIP C 33PF J	
C502			CC73GCH1H220J	CHIP C 22PF J	
C504			CK73GB1E223K	CHIP C 0.022UF K	
C505			CK73GB0J105K	CHIP C 1.0UF K	
C506		*	C94-0228-08	ELECTRO 1000UF 16WV	
C517-522			CC73GCH1H101J	CHIP C 100PF J	
C551			CK73GB1C104K	CHIP C 0.10UF K	
C552			CK73GB1H103K	CHIP C 0.010UF K	
C561-566			CC73GCH1H101J	CHIP C 100PF J	

E : Europe K : North America M : Other Areas W : Without Europe

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

FM MODULATOR UNIT

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
C602 C603 C604 C608 C651		*	C94-0228-08 CE04DW1A101M CK73GB1C104K CK73GB1C104K CK73GB1C104K	ELECTRO 1000UF 16WV ELECTRO 100UF 10WV CHIP C 0.10UF K CHIP C 0.10UF K CHIP C 0.10UF K	
C652 SC501		*	CK73GB0J105K C90-6703-08	CHIP C 1.0UF K ELECTRO 0.47F 5.5WV	
AT1 DC1 LUG1 PN301,302 PN302	1A 1B	*	E30-6376-08 E30-6377-08 E23-0746-05 E41-2228-08 E41-2229-08	CORD WITH PLUG (ANT) DC CORD ASSY TERMINAL PIN ASSY PIN ASSY	
SKT101 SKT401 SKT402		*	E63-0904-08 E56-0860-08 E56-0861-08	PIN JACK CYLINDRICAL RECEPTACLE (8P MIN DIN) CYLINDRICAL RECEPTACLE (13P DIN)	
VC401		*	KDV1472-B	VARIABLE CAPACITANCE DIODE	
L601 X301 X501		*	L33-2220-08 L77-2895-08 L77-2894-08	CHOKE COIL 100UH CRYSTAL RESONATOR 38KHZ CRYSTAL RESONATOR 4.5MHZ	
J401-403 R102 R103 R104,105 R107,108			R92-2053-05 RK73GB2A152J RK73GB2A682J RK73GB2A103J RK73GB2A103J	CHIP R 0 J 1/8W CHIP R 1.5K J 1/10W CHIP R 6.8K J 1/10W CHIP R 10K J 1/10W CHIP R 10K J 1/10W	
R109 R110 R112,113 R115 R116			RK73GB2A682J RK73GB2A103J RK73GB2A682J RK73GB2A222J RK73GB2A362J	CHIP R 6.8K J 1/10W CHIP R 10K J 1/10W CHIP R 6.8K J 1/10W CHIP R 2.2K J 1/10W CHIP R 3.6K J 1/10W	
R117 R118 R120 R121 R151		*	RK73GB2A471J RK73GB2A152J RK73GB2A753J RK73GB2A473J RK73GB2A103J	CHIP R 470 J 1/10W CHIP R 1.5K J 1/10W CHIP R 75K J 1/10W CHIP R 47K J 1/10W CHIP R 10K J 1/10W	
R152 R153 R154 R155 R202			RK73GB2A471J RK73GB2A103J RK73GB2A473J RK73GB2A101J RK73GB2A152J	CHIP R 470 J 1/10W CHIP R 10K J 1/10W CHIP R 47K J 1/10W CHIP R 100 J 1/10W CHIP R 1.5K J 1/10W	
R203 R204,205 R207,208 R209 R210			RK73GB2A682J RK73GB2A103J RK73GB2A103J RK73GB2A682J RK73GB2A103J	CHIP R 6.8K J 1/10W CHIP R 10K J 1/10W CHIP R 10K J 1/10W CHIP R 6.8K J 1/10W CHIP R 10K J 1/10W	
R212,213 R215 R217 R220 R252		*	RK73GB2A682J RK73GB2A222J RK73GB2A471J RK73GB2A753J RK73GB2A471J	CHIP R 6.8K J 1/10W CHIP R 2.2K J 1/10W CHIP R 470 J 1/10W CHIP R 75K J 1/10W CHIP R 470 J 1/10W	
R254 R255 R301 R302			RK73GB2A473J RK73GB2A101J RK73GB2A102J RK73GB2A152J	CHIP R 47K J 1/10W CHIP R 100 J 1/10W CHIP R 1.0K J 1/10W CHIP R 1.5K J 1/10W	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
R303,304 R306 R307 R308 R309			RK73GB2A103J RK73GB2A682J RK73GB2A683J RK73GB2A155J RK73GB2A471J	CHIP R 10K J 1/10W CHIP R 6.8K J 1/10W CHIP R 68K J 1/10W CHIP R 1.5M J 1/10W CHIP R 470 J 1/10W	
R310 R311 R314 R316 R318			RK73GB2A561J RK73FB2B331J RK73GB2A222J RK73GB2A332J RK73GB2A682J	CHIP R 560 J 1/10W CHIP R 330 J 1/8W CHIP R 2.2K J 1/10W CHIP R 3.3K J 1/10W CHIP R 6.8K J 1/10W	
R321 R322-324 R325 R327 R351			RK73GB2A223J RK73GB2A103J RK73GB2A154J RK73GB2A4R7J RK73GB2A223J	CHIP R 22K J 1/10W CHIP R 10K J 1/10W CHIP R 150K J 1/10W CHIP R 4.7 J 1/10W CHIP R 22K J 1/10W	
R352 R353 R355 R356 R401			RK73GB2A332J RK73GB2A681J RK73GB2A183J RK73GB2A222J RK73GB2A223J	CHIP R 3.3K J 1/10W CHIP R 680 J 1/10W CHIP R 18K J 1/10W CHIP R 2.2K J 1/10W CHIP R 22K J 1/10W	
R402 R403 R404 R405,406 R407			RK73GB2A222J RK73GB2A561J RK73GB2A104J RK73GB2A103J RK73GB2A101J	CHIP R 2.2K J 1/10W CHIP R 560 J 1/10W CHIP R 100K J 1/10W CHIP R 10K J 1/10W CHIP R 100 J 1/10W	
R411 R412 R413 R414 R451			RK73GB2A153J RK73GB2A221J RK73GB2A152J RK73GB2A222J RK73GB2A391J	CHIP R 15K J 1/10W CHIP R 220 J 1/10W CHIP R 1.5K J 1/10W CHIP R 2.2K J 1/10W CHIP R 390 J 1/10W	
R501 R502,503 R511 R512 R513			RK73GB2A103J RK73FB2B103J RK73FB2B332J RK73FB2B102J RK73FB2A472J	CHIP R 10K J 1/10W CHIP R 10K J 1/8W CHIP R 3.3K J 1/8W CHIP R 1.0K J 1/8W CHIP R 4.7K J 1/10W	
R514 R515 R516 R517 R518			RK73FB2B332J RK73FB2B102J RK73FB2B332J RK73FB2B102J RK73FB2B221J	CHIP R 3.3K J 1/8W CHIP R 1.0K J 1/8W CHIP R 3.3K J 1/8W CHIP R 1.0K J 1/8W CHIP R 220 J 1/8W	
R519-521 R522 R531 R534 R536			RK73FB2B102J RK73FB2A472J RK73GB2A104J RK73GB2A104J RK73GB2A104J	CHIP R 1.0K J 1/8W CHIP R 4.7K J 1/10W CHIP R 100K J 1/10W CHIP R 100K J 1/10W CHIP R 100K J 1/10W	
R551,552 R601 R602,603 R604-606 R607			RK73FB2B103J RK73GB2A103J RK73GB2A472J RK73FB2B103J RK73FB2A472J	CHIP R 10K J 1/8W CHIP R 10K J 1/10W CHIP R 4.7K J 1/10W CHIP R 10K J 1/8W CHIP R 4.7K J 1/10W	
R611 R612 R613,614 R617 R617			RK73GB2A103J RK73GB2A472J RK73GB2A102J RK73FB2A472J RK73GB2A473J	CHIP R 10K J 1/10W CHIP R 4.7K J 1/10W CHIP R 1.0K J 1/10W CHIP R 4.7K J 1/10W CHIP R 47K J 1/10W	

E : Europe K : North America M : Other Areas W : Without Europe

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

FM MODULATOR UNIT

Ref. No.	Add	New	Parts No.	Description	Destination	Ref. No.	Add	New	Parts No.	Description	Destination
R651 VR301,302		*	RK73GB2A471J R32-0295-08	CHIP R 470 J 1/10W SEMI FIXED VARIABLE RESIS. 10K		446 CN701	3A	*	E29-2020-08 E30-6378-08	CONDUCTIVE RUBBER CORD WITH DIN CONNECTOR	
RY401		*	S76-0814-08	RELAY RF		R701-703 R704 R705-710 R711-719 R720			RK73GB2A331J RK73GB2A391J RK73GB2A221J RK73GB2A102J RK73GB2A473J	CHIP R 330 J 1/10W CHIP R 390 J 1/10W CHIP R 220 J 1/10W CHIP R 1.0K J 1/10W CHIP R 47K J 1/10W	
D101 D201 D301 D601-605 IC101-103		*	KDS122 KDS122 KDS122 1N4004A CO5532A	DIODE DIODE DIODE DIODE ANALOGUE IC		R722-726 R727 R728 R729,730 R731			RK73GB2A472J RK73GB2A473J RK73GB2A100J RK73GB2A471J RK73GB2A102J	CHIP R 4.7K J 1/10W CHIP R 47K J 1/10W CHIP R 10 J 1/10W CHIP R 470 J 1/10W CHIP R 1.0K J 1/10W	
IC301 IC302 IC501 IC601 Q102,103		*	NJM2035M CO5532A LC72366-9B63 KIA7806AF KTK5134S	ANALOGUE IC ANALOGUE IC MICROCONTROLLER IC ANALOGUE IC FET		R732 R733,734 R735 R736 R737			RK73GB2A471J RK73GB2A102J RK73GB2A100J RK73GB2A101J RK73GB2A473J	CHIP R 470 J 1/10W CHIP R 1.0K J 1/10W CHIP R 10 J 1/10W CHIP R 100 J 1/10W CHIP R 47K J 1/10W	
Q151 Q152 Q153 Q203 Q251		*	KTC3875S-Y KRC105S KTC3875S-Y KTK5134S KTC3875S-Y	TRANSISTOR TRANSISTOR TRANSISTOR FET TRANSISTOR		R751			RK73GB2A102J	CHIP R 1.0K J 1/10W	
Q301 Q303-305 Q351 Q401,402 Q411		*	KTC3875S-Y KTK5134S KTC3875S-Y KTC3879S-Y KTC4080-0	TRANSISTOR FET TRANSISTOR TRANSISTOR TRANSISTOR		D717-722 IC701 IC702 Q701 Q702		*	KDS122 LC75808W NJL67H380A KTC3875S KRA303	DIODE MOS-IC ANALOGUE IC TRANSISTOR TRANSISTOR	
Q501,502 Q601 Q602 Q603 Q604		*	KRC110S KTA1505S-Y KRC110S KTC3875S-Y KRC103S	TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR		Q703			KRA305	TRANSISTOR	
Q605 Q606 Q607 Q608 Q609		*	KTA1505S-Y KTC4374-Y KRC103S KRC110S KRC105S	TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR							
ZD511-516 ZD518 ZD601,602 ZD603		*	KDZ5.6EV KDZ5.6EV KDZ5.6EV KDZ8.2EV	ZENER DIODE ZENER DIODE ZENER DIODE ZENER DIODE							
CONTROL UNIT											
441 442 443 444 D701,702	2A 3A 3A 3A	*	B11-1465-08 B11-1466-08 B11-1467-08 B19-2271-08 B30-1698-05	REFLECTION SHEET OPTICAL DIFFUSER REFLECTION SHEET LIGHTING BOARD LED							
D703 D704-716 LCD1	3A	*	B30-1564-05 B30-1567-05 B38-1161-08	LED LED LIQUID CRYSTAL							
C701-703 C704 C705-707 C708 C709		*	CK73GB1C104K CC73GCH1H681J CK73GB1C104K C92-1895-08 C92-1896-08	CHIP C 0.10UF K CHIP C 680PF J CHIP C 0.10UF K ELECTRO 10UF 16WV ELECTRO 47UF 16WV							
C710 C711		*	C92-1895-08 CK73GB1E223K	ELECTRO 10UF 16WV CHIP C 0.022UF K							

E : Europe K : North America M : Other Areas W : Without Europe

△ Indicates safety critical components.