


KDC-MPV6022/622/7023


EXPLODED VIEW (MECHANISM)

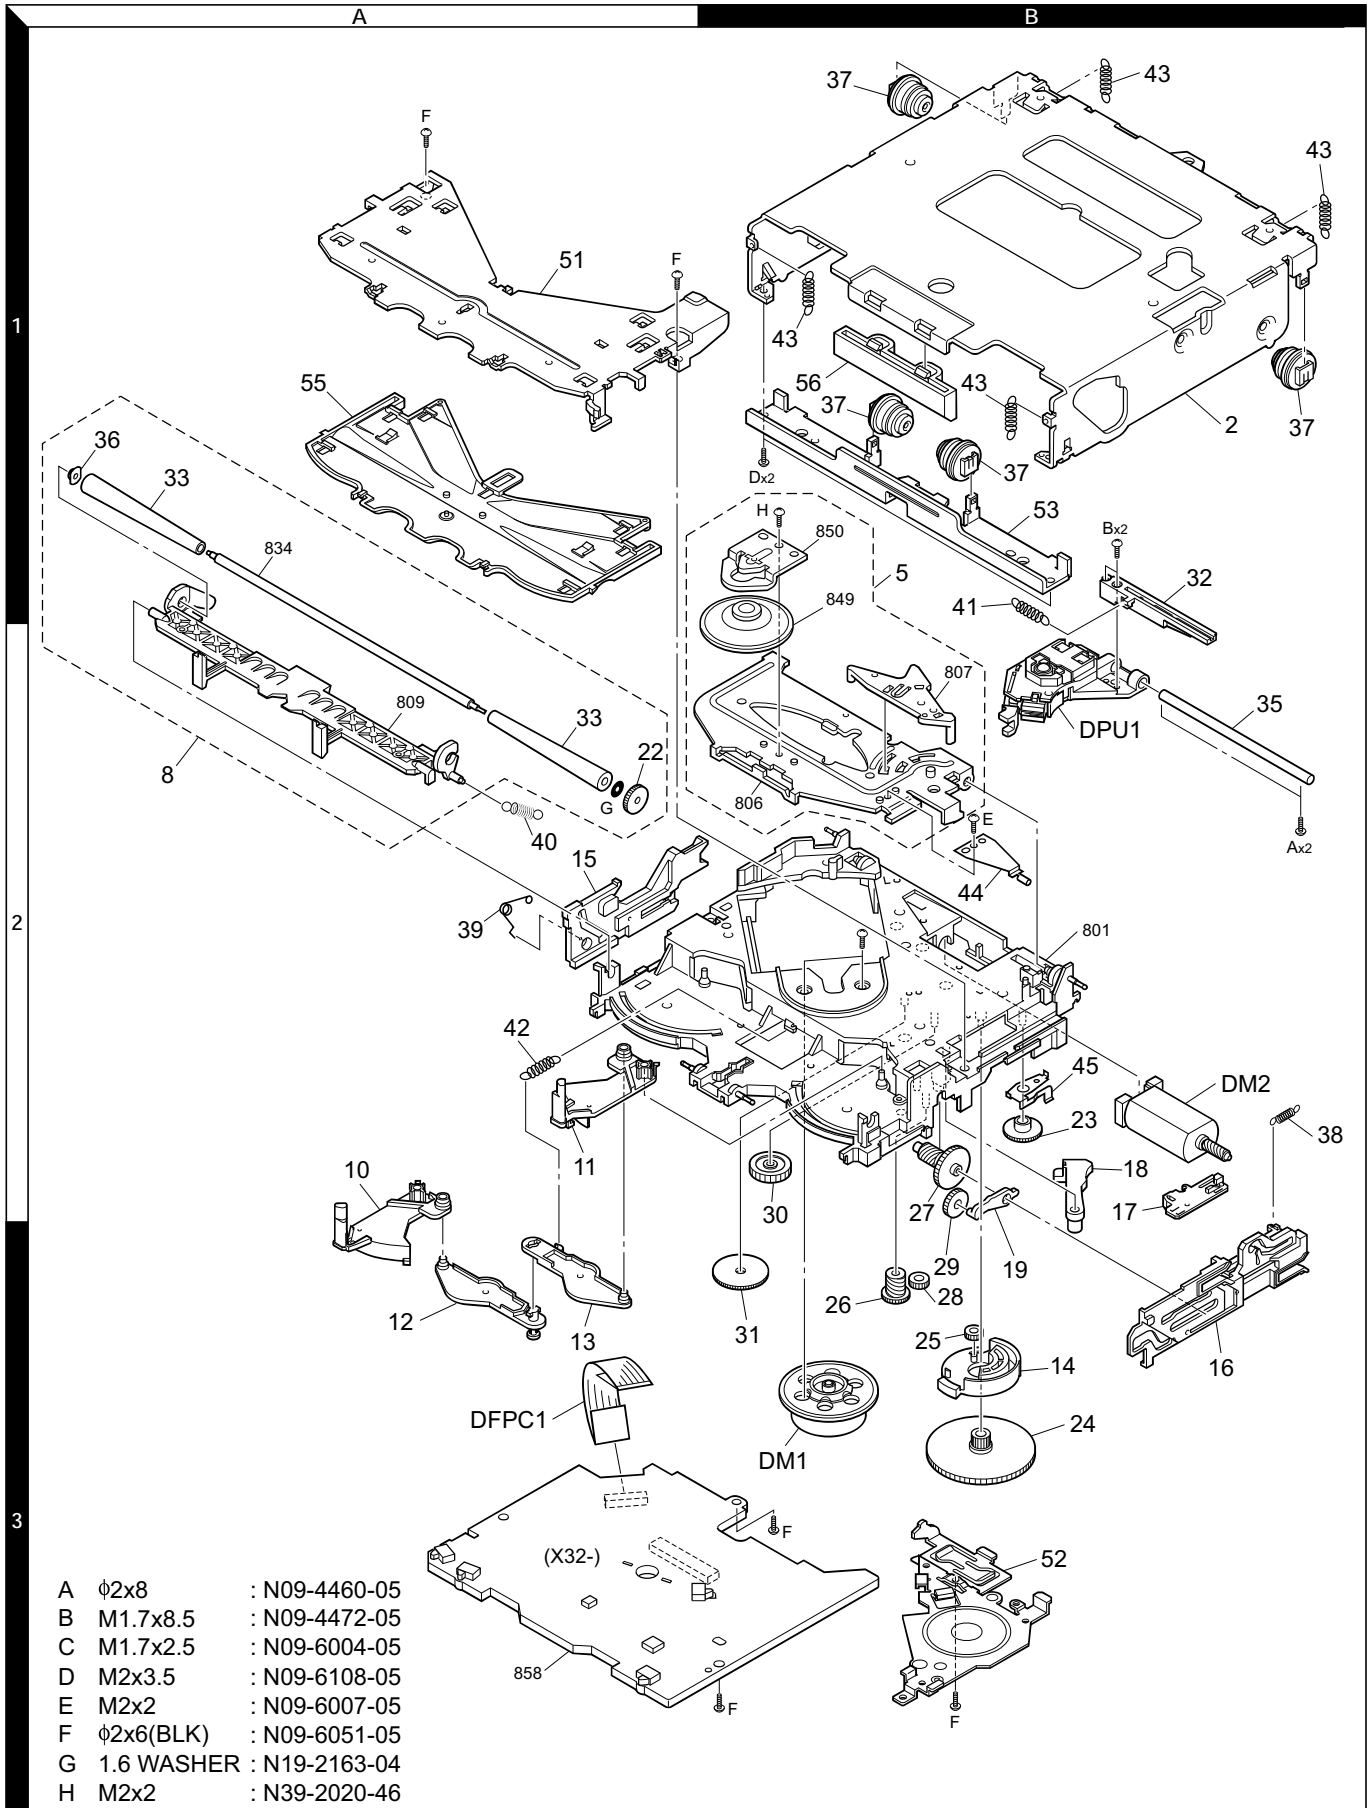

Parts with the exploded numbers larger than 700 are not supplied.

KDC-MPV6022/622/7023

EXPLODED VIEW (UNIT)

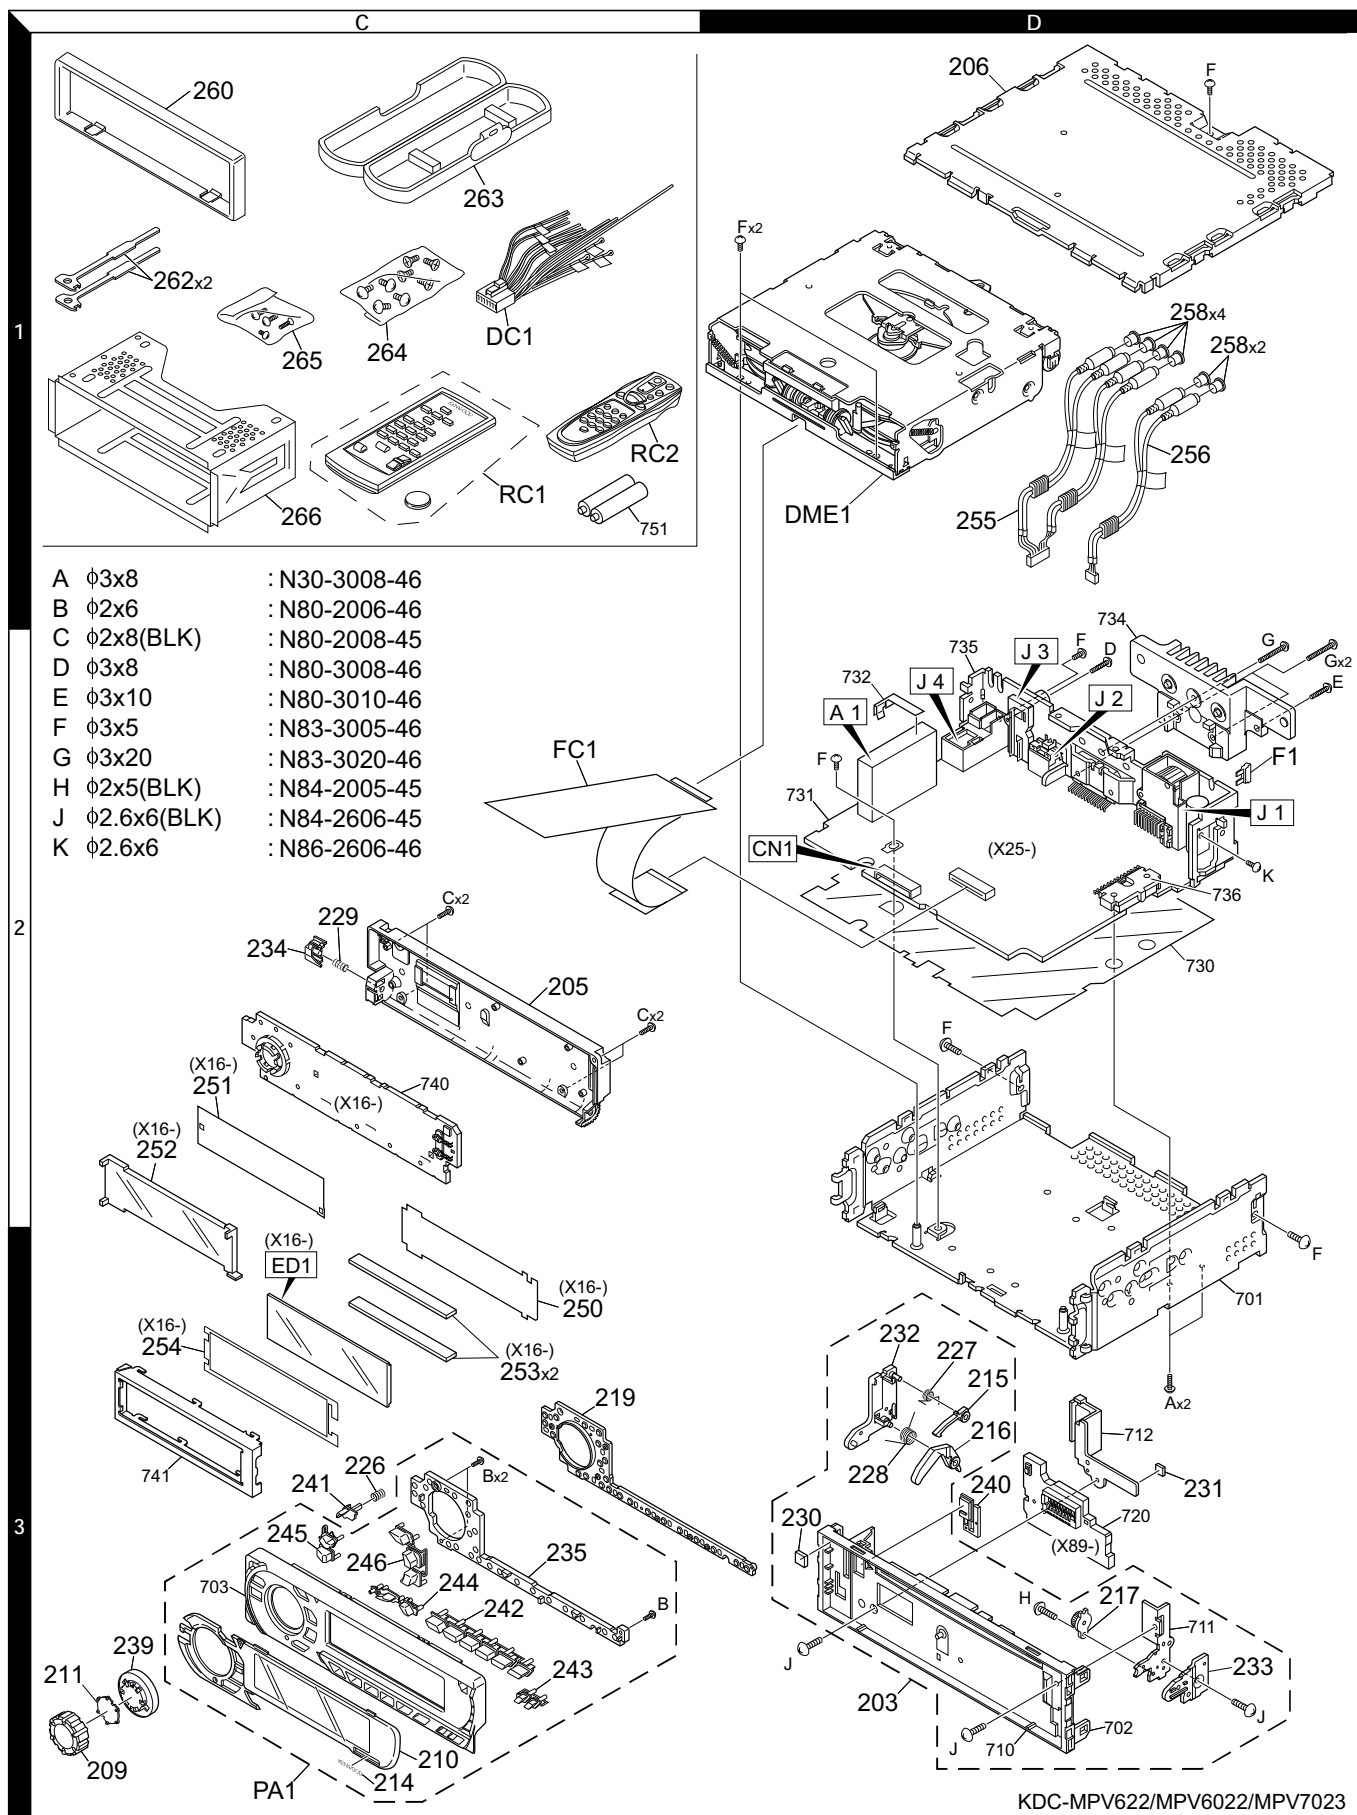

KDC-MPV622/MPV6022/MPV7023

Parts with the exploded numbers larger than 700 are not supplied.

KDC-MPV6022/622/7023

PARTS LIST

* New Parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

Ref. No.	A d d	N e w	Parts No.	Description	Dest inati on
KDC-MPV6022/MPV622/MPV7023					
203	3D	*	A22-2982-02	SUB PANEL ASSY	K7
205	2C	*	A46-1778-01	REAR COVER	
206	1D	*	A52-0829-02	TOP PLATE	
263	1C	*	A02-1486-13	PLASTIC CABINET ASSY	
PA1	3C	*	A64-2826-02	PANEL ASSY	
PA1	3C	*	A64-2831-02	PANEL ASSY	M
PA1	3C	*	A64-2854-02	PANEL ASSY	K8
RC1	1C	*	A70-2026-05	REMOTE CONTROLLER ASSY(RC-410)	M
RC2	1C	*	A70-2040-05	REMOTE CONTROLLER ASSY(RC-505)	K7K8
-			B46-0100-50	WARRANTY CARD	K7K8
-			B46-0606-04	ID CARD	
-			B46-0612-14	ID CARD	
-			B46-0653-03	USER CARD	
-		*	B64-2516-00	INST. MANUAL (ENG,FRE,SPA)	
-		*	B64-2517-00	INST. MANUAL (ENG,T-CHI)	M
-		*	B64-2518-00	INST. MANUAL (ARABIC)	M
209	3C	*	B09-0529-03	CAP	K8
210	3C	*	B10-4306-01	FRONT GLASS	
210	3C	*	B10-4308-01	FRONT GLASS	
210	3C	*	B10-4327-01	FRONT GLASS	K7
211	3C	*	B19-2200-04	LIGHTING BOARD	K8M
214	3C	*	B43-1284-04	BADGE	
260	1C	*	B07-3022-02	ESCUTCHEON	
215	3D	*	D10-4730-03	LEVER	
216	3D	*	D10-4731-03	LEVER	
217	3D	*	D39-0255-05	DAMPER	K7
262	1C	*	D10-4589-04	LEVER	
219	3C	*	E29-1927-02	CONDUCTIVE RUBBER	
255	1D	*	E30-6228-05	CORD WITH PINPLUG	
256	1D	*	E30-6229-05	CORD WITH PINPLUG	
DC1	1C	*	E30-4940-05	DC CORD	K8M
FC1	2C	*	E39-0438-05	FLAT CABLE (24PIN)	
258	1D	*	F29-0626-04	INSULATING COVER	
F1	2D	*	F52-0006-05	FUSE(MINI BLADE TYPE : 10A)	
226	3C	*	G01-3129-04	COMPRESSION SPRING	
227	3D	*	G01-3171-04	TORSION COIL SPRING	K7
228	3D	*	G01-3172-04	TORSION COIL SPRING	
229	2C	*	G01-3173-04	COMPRESSION SPRING	
230	3D	*	G13-1267-04	CUSHION	
231	3D	*	G13-1268-04	CUSHION	
-			H10-4856-12	POLYSTYRENE FOAMED FIXTURE	K7
-			H25-0329-04	PROTECTION BAG (280X450X0.03)	
-			H25-0337-04	PROTECTION BAG (180X300X0.03)	
-		*	H54-2781-03	ITEM CARTON CASE	
-		*	H54-2782-03	ITEM CARTON CASE	
-		*	H54-2784-03	ITEM CARTON CASE	M
232	3D	*	J19-5203-03	HOLDER	K8
233	3D	*	J19-5204-03	HOLDER	
234	2C	*	J19-5205-03	HOLDER	
235	3C	*	J19-5206-02	HOLDER	
266	1C	*	J21-9716-03	MOUNTING HARDWARE ASSY	

K7: KDC-MPV622 K8: KDC-MPV6022 M: KDC-MPV7023

Ref. No.	A d d	N e w	Parts No.	Description	Dest inati on
239	3C	*	K23-1072-13	KNOB (VOL)	
240	3D	*	K24-4000-03	KNOB (EJECT)	
241	3C	*	K24-4002-04	KNOB (DOOR)	
242	3C	*	K25-1521-03	KNOB (1-6)	
243	3C	*	K25-1522-04	KNOB (DISP)	
244	3C	*	K25-1523-03	KNOB (PLAY,STOP)	
245	3C	*	K25-1524-03	KNOB (FM,AM)	
246	3C	*	K25-1525-03	KNOB (SRC,SKIP)	
264	1C	*	N99-1719-05	SCREW SET	
265	1C	*	N99-1730-15	SCREW SET	
A	3D	*	N30-3008-46	PAN HEAD MACHINE SCREW	
B	3C	*	N80-2006-46	PAN HEAD TAPTITE SCREW	
C	2C	*	N80-2008-45	PAN HEAD TAPTITE SCREW	
F	2D	*	N83-3005-46	PAN HEAD TAPTITE SCREW	
H	3D	*	N84-2005-45	PAN HEAD TAPTITE SCREW	
J	3D	*	N84-2606-45	PAN HEAD TAPTITE SCREW	
-		*	X16-2040-10	SWITCH UNIT	
-		*	X25-9570-12	ELECTRIC UNIT	
-		*	X25-9570-13	ELECTRIC UNIT	K7 K8 M
-		*	X25-9570-21	ELECTRIC UNIT	
-		*	X89-2570-10	DAUGHTER UNIT	
DME1	1D	*	X92-4670-00	MECHANISM ASSY (DXM-6410W)	
SWITCH UNIT (X16-2040-10)					
250	3C	*	B11-1396-04	OPTICAL DIFFUSER	
251	2C	*	B11-1397-04	REFLECTION SHEET	
252	2C	*	B19-2198-03	LIGHTING BOARD	
D1 -14		*	B30-1605-05	LED(2COLOR PG/RED)	
D15 ,16		*	B30-1564-05	LED(1608,BLUE)	
D50 ,51		*	B30-1599-05	LED(NICHIA FULL)	
ED1		*	B38-1105-05	LIQUID CRYSTAL	
C1		*	CK73GB1H102K	CHIP C 1000PF	K
C2 -5		*	CK73GB1C104K	CHIP C 0.10UF	K
C6		*	CK73GB1H103K	CHIP C 0.010UF	K
C7		*	CK73FB1A225K	CHIP C 2.2UF	K
C8 -11		*	CK73GB1H103K	CHIP C 0.010UF	K
C50		*	CK73GB0J105K	CHIP C 1.0UF	K
C51 -53		*	CK73GB1H103K	CHIP C 0.010UF	K
C54 -56		*	CK73FB0J475K	CHIP C 4.7UF	K
C57 -62		*	CK73GB1H103K	CHIP C 0.010UF	K
253	3C	*	E29-1925-04	CONDUCTIVE RUBBER	
J1		*	E59-0829-05	RECTANGULAR PLUG	
254	3C	*	F09-1823-04	SHEET	
CP1		*	R90-0714-05	MULTI-COMP 10K X4	
CP3		*	R90-1016-05	MULTI-COMP 470 X4	
CP50,51		*	R90-0720-05	MULTI-COMP 100K X4	
CP52		*	R90-1022-05	MULTI-COMP 470 X2	
R1		*	RK73GB2A303J	CHIP R 30K	J 1/10W
R2 -5		*	RK73GB2A222J	CHIP R 2.2K	J 1/10W
R6		*	RK73GB2A473J	CHIP R 47K	J 1/10W
R9		*	RK73GB2A392J	CHIP R 3.9K	J 1/10W
R10		*	RK73GB2A751J	CHIP R 750	J 1/10W
R11		*	RK73GB2A4R7J	CHIP R 4.7	J 1/10W

△ indicates safety critical components.

KDC-MPV6022/622/7023

PARTS LIST

* New Parts
Parts without **Parts No.** are not supplied.
Les articles non mentionnes dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

Ref. No.	A d d	N e w	Parts No.	Description	Dest inati on
R13 R15 R16 -19 R20 -23 R24 ,25			RK73GB2A101J RK73GB2A102J RK73GB2A222J RK73FB2B331J RK73FB2B361J	CHIP R 100 J 1/10W CHIP R 1.0K J 1/10W CHIP R 2.2K J 1/10W CHIP R 330 J 1/8W CHIP R 360 J 1/8W	
R50 R51 ,52 R53 ,54 R55 ,56 R57 ,58			RK73GB2A4R7J RK73GB2A103J RK73GB2A151J RK73GB2A221J RK73GB2A151J	CHIP R 4.7 J 1/10W CHIP R 10K J 1/10W CHIP R 150 J 1/10W CHIP R 220 J 1/10W CHIP R 150 J 1/10W	
R59 ,60 R61 -64			RK73GB2A221J RK73GB2A391J	CHIP R 220 J 1/10W CHIP R 390 J 1/10W	
S24			T99-0446-05	ROTARY ENCODER	
D17 IC1 IC2 IC3 Q1			MA3082-L LC75808W PNA4S22M M62333FP 2SC4081	ZENER DIODE MOS-IC ANALOGUE IC MOS-IC TRANSISTOR	
Q2 Q3 ,4 Q50 -58			DTA114EUA 2SC4081 2SC4081	DIGITAL TRANSISTOR TRANSISTOR TRANSISTOR	
ELECTRIC UNIT (X25-9570-12/13/21)					
C1 C2 C3 C4 -6 C21			C90-5235-05 CK73GB1H103K CK73GB1H102K CK73GB1H103K CE04NW1A101M	ELECTRO 220UF 16WV CHIP C 0.010UF K CHIP C 1000PF K CHIP C 0.010UF K ELECTRO 100UF 10WV	
C22 ,23 C24 ,25 C26 C27 C28			CE04NW1E100M CE04NW1C100M CE04NW1E100M CE04CW1H100M C90-2926-05	ELECTRO 10UF 25WV ELECTRO 10UF 16WV ELECTRO 10UF 25WV ELECTRO 10UF 50WV ELECTRO 220UF 16WV	△
C29 C32 C33 C34 C41 ,42			CE04NW1C100M CK73GB1E223K CE04NW1H010M CK73GB1H103K C90-2963-05	ELECTRO 10UF 16WV CHIP C 0.022UF K ELECTRO 1.0UF 50WV CHIP C 0.010UF K ELECTRO 100UF 25WV	
C43 ,44 C45 C51 ,52 C111 C119			C90-5418-05 CK73GB1A224K CK73GB1H103K CK73GB1H102K CK73GB1H103K	ELECTRO 220UF 16WV CHIP C 0.22UF K CHIP C 0.010UF K CHIP C 1000PF K CHIP C 0.010UF K	
C163 C201,202 C203 C204 C205			CK73GB1A224K CE04NW1HR47M CK73GB1H223K CK73GB1H103K CK73GB1A474K	CHIP C 0.22UF K ELECTRO 0.47UF 50WV CHIP C 0.022UF K CHIP C 0.010UF K CHIP C 0.47UF K	
C206 C207,208 C209 C210 C211			CC73GCH1H151J CE04NW1H010M CE04NW1H2R2M CK73GB1H103K CE04NW1A470M	CHIP C 150PF J ELECTRO 1.0UF 50WV ELECTRO 2.2UF 50WV CHIP C 0.010UF K ELECTRO 47UF 10WV	K8M
C212,213			CK73GB1C104K	CHIP C 0.10UF K	

SWITCH UNIT (X16-2040-10)

Ref. No.	A d d	N e w	Parts No.	Description	Dest inati on
C214,215 C216,217 C218-221 C251-254 C255			CK73GB1H103K CE04NW1H010M CE04NW1H0R1M C90-5296-05 CE04NW1HR47M	CHIP C 0.010UF K ELECTRO 1.0UF 50WV ELECTRO 0.1UF 50WV NP-ELECT 0.22UF 50WV ELECTRO 0.47UF 50WV	
C256 C257 C258 C301,302 C303			CE04NW1C220M CK73GB1C104K CE04NW1H010M CE04NW1HR47M CE04NW1A470M	ELECTRO 22UF 16WV CHIP C 0.10UF K ELECTRO 1.0UF 50WV ELECTRO 0.47UF 50WV ELECTRO 47UF 10WV	
C304 C351-354 C355 C356,357 C358,359			CK73GB1H103K CE04NW1C100M CE04NW1A470M CK73GB1H103K CE04NW1HR47M	CHIP C 0.010UF K ELECTRO 10UF 16WV ELECTRO 47UF 10WV CHIP C 0.010UF K ELECTRO 0.47UF 50WV	K8M K8M
C360 C401-404 C405 C406 C407			CK73GB1H103K CK73GB1C104K CK73GB0J105K CK73GB1C104K CC73GCH1H220J	CHIP C 0.010UF K CHIP C 0.10UF K CHIP C 1.0UF K CHIP C 0.10UF K CHIP C 22PF J	K8M
C408 C409 C500 C501,502 C503			CC73GCH1H270J CE04CW0J470M CK73FB1A225K CK73GB1H103K CK73GB1H472K	CHIP C 27PF J ELECTRO 47UF 6.3WV CHIP C 2.2UF K CHIP C 0.010UF K CHIP C 4700PF K	
CN1 CN2 CN3 CN4 J1			E41-0167-05 E41-0168-05 E40-3238-05 E40-3241-05 E58-0863-15	PIN ASSY (18PIN) FLAT CABLE CONNECTOR (24PIN) PIN ASSY (3PIN) PIN ASSY (6PIN) RECTANGULAR RECEPTACLE	K7 K8M
J2 J3 J4 P1 W1 -9			E56-0834-05 E63-0887-05 E04-0312-05 E23-0745-05 E31-0001-00	CYLINDRICAL RECEPTACLE PIN JACK RF COAXIAL CABLE RECEPTACLE TERMINAL JUMPER WIRE	
W11 -35			E31-0001-00	JUMPER WIRE	
L1 L3 L6 -8 L10 ,11 L12			L33-1170-05 L33-1123-05 L40-4795-91 L40-4795-91 L33-1925-05	CHOKE COIL ASSY LINE FILTER COIL SMALL FIXED INDUCTOR (4.7UH,J) SMALL FIXED INDUCTOR (4.7UH,J) CHOKE COIL	
X1 X2			L78-0821-05 L77-2738-05	RESONATOR (20MHz) CRYSTAL RESONATOR (32.768KHz)	
D E F G K	2D 2D 2D 2D 2D		N80-3008-46 N80-3010-46 N83-3005-46 N83-3020-46 N86-2606-46	PAN HEAD TAPTITE SCREW PAN HEAD TAPTITE SCREW PAN HEAD TAPTITE SCREW PAN HEAD TAPTITE SCREW BINDING HEAD TAPTITE SCREW	
R1 R2 R3 R4 R5 ,6			RK73GB2A823J RK73GB2A363J RK73GB2A104J RK73FB2B203J RK73GB2A103J	CHIP R 82K J 1/10W CHIP R 36K J 1/10W CHIP R 100K J 1/10W CHIP R 20K J 1/8W CHIP R 10K J 1/10W	

K7: KDC-MPV622 K8: KDC-MPV6022 M: KDC-MPV7023

△ indicates safety critical components.

KDC-MPV6022/622/7023

PARTS LIST

* New Parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

ELECTRIC UNIT (X25-9570-12/13/21)

Ref. No.	A d d	N e w	Parts No.	Description	Dest inati on	Ref. No.	A d d	N e w	Parts No.	Description	Dest inati on
R7			RK73GB2A223J	CHIP R 22K J 1/10W		R254			RK73GB2A152J	CHIP R 1.5K J 1/10W	
R8			RD14DB2H332J	SMALL-RD 3.3K J 1/2W		R255			RK73GB2A101J	CHIP R 100 J 1/10W	
R9			RD14BB2C333J	RD 33K J 1/6W		R256			RK73GB2A103J	CHIP R 10K J 1/10W	
R10			RK73GB2A223J	CHIP R 22K J 1/10W		R257			RK73GB2A153J	CHIP R 15K J 1/10W	
R11			RK73GB2A104J	CHIP R 100K J 1/10W		R259-262			RK73GB2A223J	CHIP R 22K J 1/10W	
R12			RK73GB2A473J	CHIP R 47K J 1/10W		R301,302			RK73EB2E100J	CHIP R 10 J 1/4W	
R13			RK73GB2A562J	CHIP R 5.6K J 1/10W		R303			RK73EB2E101J	CHIP R 100 J 1/4W	
R21			RK73FB2B152J	CHIP R 1.5K J 1/8W		R304,305			RK73EB2E472J	CHIP R 4.7K J 1/4W	
R22 ,23			RD14BB2C472J	RD 4.7K J 1/6W		R306			RK73EB2E4R7J	CHIP R 4.7 J 1/4W	
R24 -28			RK73GB2A103J	CHIP R 10K J 1/10W		R307-309			RK73EB2E472J	CHIP R 4.7K J 1/4W	
R32			RK73GB2A104J	CHIP R 100K J 1/10W		R310,311			RK73EB2E101J	CHIP R 100 J 1/4W	
R34			RK73EB2E103J	CHIP R 10K J 1/4W		R312-315			RK73GB2A104J	CHIP R 100K J 1/10W	
R35			RK73GB2A104J	CHIP R 100K J 1/10W		R351,352			RK73GB2A361J	CHIP R 360 J 1/10W	
R36			RK73GB2A222J	CHIP R 2.2K J 1/10W		R355,356			RK73GB2A223J	CHIP R 22K J 1/10W	
R41 -44			RK73GB2A473J	CHIP R 47K J 1/10W		R357,358			RK73EB2E181J	CHIP R 180 J 1/4W	
R51 ,52			RK73GB2A222J	CHIP R 2.2K J 1/10W		R359,360			RK73GB2A361J	CHIP R 360 J 1/10W	
R53 -56			RK73GB2A102J	CHIP R 1.0K J 1/10W		R361,362			RK73GB2A223J	CHIP R 22K J 1/10W	
R57 ,58			RK73GB2A222J	CHIP R 2.2K J 1/10W		R363,364			RK73EB2E181J	CHIP R 180 J 1/4W	
R59			RK73GB2A101J	CHIP R 100 J 1/10W		R365			RK73FB2B4R7J	CHIP R 4.7 J 1/8W	K8M
R60			RK73GB2A222J	CHIP R 2.2K J 1/10W		R373			RK73GB2A102J	CHIP R 1.0K J 1/10W	K8M
R61 ,62			RK73GB2A104J	CHIP R 100K J 1/10W		R376,377			RK73GB2A912J	CHIP R 9.1K J 1/10W	K8M
R63			RK73GB2A222J	CHIP R 2.2K J 1/10W		R378,379			RK73FB2B102J	CHIP R 1.0K J 1/8W	K8M
R64 ,65			RK73GB2A104J	CHIP R 100K J 1/10W		R401-408			RK73GB2A104J	CHIP R 100K J 1/10W	
R67 ,68			RK73GB2A471J	CHIP R 470 J 1/10W		R409			RK73GB2A153J	CHIP R 15K J 1/10W	
R101			RK73GB2A102J	CHIP R 1.0K J 1/10W		R410			RK73GB2A104J	CHIP R 100K J 1/10W	K7K8
R102			RK73GB2A471J	CHIP R 470 J 1/10W		R410,411			RK73GB2A104J	CHIP R 100K J 1/10W	M
R103			RK73GB2A472J	CHIP R 4.7K J 1/10W		R412			RK73GB2A104J	CHIP R 100K J 1/10W	K7K8
R104			RK73GB2A471J	CHIP R 470 J 1/10W		R415,416			RK73GB2A104J	CHIP R 100K J 1/10W	
R105			RK73GB2A472J	CHIP R 4.7K J 1/10W		R419			RK73GB2A104J	CHIP R 100K J 1/10W	K7M
R106			RK73GB2A222J	CHIP R 2.2K J 1/10W		R419,420			RK73GB2A104J	CHIP R 100K J 1/10W	K8
R151			RK73GB2A471J	CHIP R 470 J 1/10W		R421			RK73GB2A104J	CHIP R 100K J 1/10W	K7M
R152			RK73GB2A102J	CHIP R 1.0K J 1/10W		R422			RK73GB2A103J	CHIP R 10K J 1/10W	
R153			RK73GB2A471J	CHIP R 470 J 1/10W		W105-108			R92-1252-05	CHIP R 0 OHM J 1/16W	K8M
R154			RK73GB2A102J	CHIP R 1.0K J 1/10W		S1			S74-0821-05	MICRO SWITCH	
R155			RK73GB2A222J	CHIP R 2.2K J 1/10W		D1			1N5393G-M6	DIODE	
R156-158			RK73GB2A471J	CHIP R 470 J 1/10W		D2 -4			MA4068(N)-M	ZENER DIODE	
R159			RK73GB2A102J	CHIP R 1.0K J 1/10W		D21			MA4082(N)-L	ZENER DIODE	
R160			RK73GB2A222J	CHIP R 2.2K J 1/10W		D22 -25			AM01Z	DIODE	
R161			RK73GB2A225J	CHIP R 2.2M J 1/10W		D26			DAN202U	DIODE	
R162,163			RK73GB2A104J	CHIP R 100K J 1/10W		D26			MA142WK	DIODE	
R164,165			RK73GB2A473J	CHIP R 47K J 1/10W		D41			SFPB-54V	DIODE	
R166			RK73GB2A472J	CHIP R 4.7K J 1/10W		D151-162			DA204K	DIODE	
R167			RK73GB2A474J	CHIP R 470K J 1/10W		D151-162			KDS226	DIODE	
R168			RK73GB2A102J	CHIP R 1.0K J 1/10W		D163			MA4062-L	ZENER DIODE	
R185,186			RK73GB2A474J	CHIP R 470K J 1/10W		D164			MA4120-L	ZENER DIODE	
R187			RK73GB2A222J	CHIP R 2.2K J 1/10W		D165			MA4062-L	ZENER DIODE	
R188			RK73GB2A473J	CHIP R 47K J 1/10W		D166			DA204U	DIODE	
R201			RK73GB2A103J	CHIP R 10K J 1/10W		D201,202			RD6.8M(B2)	ZENER DIODE	
R202-204			RK73GB2A472J	CHIP R 4.7K J 1/10W		D203-205			DAP202U	DIODE	
R205			RK73GB2A222J	CHIP R 2.2K J 1/10W		D203-205			MA142WA	DIODE	
R206-208			RK73GB2A102J	CHIP R 1.0K J 1/10W		D251-258			AM01Z	DIODE	
R209,210			RK73GB2A103J	CHIP R 10K J 1/10W		D269-271			1SS133	DIODE	
R211,212			RK73GB2A333J	CHIP R 33K J 1/10W		D301			MA4062-L	ZENER DIODE	
R251			RK73GB2A103J	CHIP R 10K J 1/10W		D303,304			MA4062-L	ZENER DIODE	
R252,253			RK73GB2A473J	CHIP R 47K J 1/10W							

K7: KDC-MPV622 K8: KDC-MPV6022 M: KDC-MPV7023

△ indicates safety critical components.

KDC-MPV6022/622/7023

PARTS LIST

* New Parts
Parts without **Parts No.** are not supplied.
Les articles non mentionnes dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

ELECTRIC UNIT (X25-9570-12/13/21)

Ref. No.	A d d	N e w	Parts No.	Description	Dest inati on
D307,308 D309-311 D356 D357,358 D359			MA4062-L MA4068(N)-M MA4062-L MA4068(N)-M DA204U	ZENER DIODE ZENER DIODE ZENER DIODE ZENER DIODE DIODE	K8M K8M K8M
D401 IC1 IC2 IC3 IC4		*	1SS133 UPD703030GC012 TDA7411 BA4911-V4 TA8273H	DIODE MI-COM IC ANALOGUE IC ANALOGUE IC ANALOGUE IC	
IC6 IC8 IC9 Q1 -3 Q4		*	HD74HC27FP PST3436UL SI-8050JD 2SC4081 2SA1036K	MOS-IC MOS-IC ANALOGUE IC TRANSISTOR TRANSISTOR	
Q21 Q22 ,23 Q31 Q31 Q31			2SD2375 UMC2N DTC144EUA KRC404 UN5213	TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR	
Q41 Q151 Q151 Q151 Q152			2SC4081 DTA114YUA KRA307 UN5114 2SA1576A	TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR	
Q153 Q153 Q153 Q154 Q201			DTC144EUA KRC404 UN5213 2SA1577 DTC143TUA	DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR	
Q201 Q201 Q350 Q350 Q350			KRC410 UN5216 DTA124EUA KRA303 UN5112	DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR	
Q351,352 Q351,352 Q351,352 Q354 Q354			DTC143TUA KRC410 UN5216 DTA124EUA KRA303	DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR	
Q354 Q355,356 Q355,356 Q355,356 TH1			UN5112 DTC143TUA KRC410 UN5216 PTH9C42BE471Q	DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR POSITIVE RESISTOR	
A1		*	X86-3720-11	FRONT-END UNIT	
CD PLAYER UNIT (X32-5410-00)					
C1 C2 C3 C4 C5			C92-0628-05 CK73FB1A105K CK73FB1A225K CK73GB1H103K CC73GCH1H680J	CHIP-TAN 10UF 10WV CHIP C 1.0UF K CHIP C 2.2UF K CHIP C 0.010UF K CHIP C 68PF J	
C6 C7			CC73GCH1H681J CK73GB1H104K	CHIP C 680PF J CHIP C 0.10UF K	
C8 C9 ,10 C11 C12 C13			CK73GB1H222K CK73GB1H104K CC73GCH1H681J CK73GB1H222K CC73GCH1H680J	CHIP C 2200PF K CHIP C 0.10UF K CHIP C 680PF J CHIP C 2200PF K CHIP C 68PF J	
C15 C16 C17 C18 C19 ,20			CK73EB1A475K CK73GB1H104K CK73GB1H331K CK73GB1H472K CK73GB1H104K	CHIP C 4.7UF K CHIP C 0.10UF K CHIP C 330PF K CHIP C 4700PF K CHIP C 0.10UF K	
C21 C22 C23 C26 C27			CK73EB1A475K CK73GB0J105K CK73FB1A225K CK73GB1H104K C92-0712-05	CHIP C 4.7UF K CHIP C 1.0UF K CHIP C 2.2UF K CHIP C 0.10UF K CHIP-TAN 22UF 6.3WV	
C28 C29 C30 C31 -35 C36			CK73GB1H102K CK73GB1H331K CK73GB1H152K CK73GB1H104K C92-0712-05	CHIP C 1000PF K CHIP C 330PF K CHIP C 1500PF K CHIP C 0.10UF K CHIP-TAN 22UF 6.3WV	
C41 C42 C45 C47 C48			CK73GB1H104K CK73EB1A475K CK73GB1H102K C92-0628-05 CK73GB1H104K	CHIP C 0.10UF K CHIP C 4.7UF K CHIP C 1000PF K CHIP-TAN 10UF 10WV CHIP C 0.10UF K	
C50 C52 C53 C55 C56			CK73GB1H104K CK73GB1H152K CK73GB1H104K CC73GCH1H470J CC73GCH1H680J	CHIP C 0.10UF K CHIP C 1500PF K CHIP C 0.10UF K CHIP C 47PF J CHIP C 68PF J	
C57 C59 C61 C63 C65			CK73GB1H104K CK73GB1H104K CK73GB1H104K CC73GCH1H020C CK73GB1H104K	CHIP C 0.10UF K CHIP C 0.10UF K CHIP C 0.10UF K CHIP C 2.0PF C CHIP C 0.10UF K	
C67 C68 C70 C74 C75			CK73GB1H222K CC73GCH1H060D CK73GB1H104K CK73GB1H682K CK73GB1H332K	CHIP C 2200PF K CHIP C 6.0PF D CHIP C 0.10UF K CHIP C 6800PF K CHIP C 3300PF K	
C76 C77 C78 C79 -82 C83			CK73GB1H103K CK73GB1H104K CK73EB1A475K CK73GB1H152K CK73GB1H104K	CHIP C 0.010UF K CHIP C 0.10UF K CHIP C 4.7UF K CHIP C 1500PF K CHIP C 0.10UF K	
C84 C85 C87 C88			C92-0628-05 CK73GB1H104K CK73EB1A475K CK73GB1H104K	CHIP-TAN 10UF 10WV CHIP C 0.10UF K CHIP C 4.7UF K CHIP C 0.10UF K	
CN1 CN1 CN2 CN2			E40-9527-05 E41-0213-05 E40-9536-05 E41-0193-05	FLAT CABLE CONNECTOR (16PIN) FLAT CABLE CONNECTOR (16PIN) FLAT CABLE CONNECTOR (24PIN) FLAT CABLE CONNECTOR (24PIN)	
L1			L92-0329-05	CHIP FERRITE	

K7: KDC-MPV622 K8: KDC-MPV6022 M: KDC-MPV7023

⚠ indicates safety critical components.

KDC-MPV6022/622/7023

PARTS LIST

* New Parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

CD PLAYER UNIT (X32-5410-00)

Ref. No.	A d d	N e w	Parts No.	Description	Dest inati on
L5			L92-0329-05	CHIP FERRITE	
X1			L78-0851-05	RESONATOR (16.934MHZ)	
X2			L78-0862-05	RESONATOR (16.00MHZ)	
CP1 ,2			R90-1019-05	MULTI-COMP 100 X2	
CP4			R90-0719-05	MULTI-COMP 4.7K X2	
CP5			R90-0737-05	MULTI-COMP 100K X2	
CP6			R90-1019-05	MULTI-COMP 100 X2	
CP7			R90-0737-05	MULTI-COMP 100K X2	
CP13			R90-0720-05	MULTI-COMP 100K X4	
CP15			R90-0718-05	MULTI-COMP 4.7K X4	
CP16-22			R90-1014-05	MULTI-COMP 100 X4	
CP23			R90-0714-05	MULTI-COMP 10K X4	
CP24			R90-0720-05	MULTI-COMP 100K X4	
R1			R92-3044-05	CHIP R 18K D 1/10W	
R2			R92-3041-05	CHIP R 11K D 1/10W	
R3			RK73FB2B303J	CHIP R 30K J 1/8W	
R4			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R5			RK73FB2B272J	CHIP R 2.7K J 1/8W	
R6			RK73FB2B331J	CHIP R 330 J 1/8W	
R7 ,8			RK73FB2B752J	CHIP R 7.5K J 1/8W	
R9			RK73FB2B272J	CHIP R 2.7K J 1/8W	
R10			RK73FB2B331J	CHIP R 330 J 1/8W	
R11			R92-3041-05	CHIP R 11K D 1/10W	
R12			RK73FB2B303J	CHIP R 30K J 1/8W	
R13			R92-3044-05	CHIP R 18K D 1/10W	
R14			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R16			RK73GB2A123J	CHIP R 12K J 1/10W	
R17			RK73GB2A133J	CHIP R 13K J 1/10W	
R18			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R19 ,20			RK73GB2A123J	CHIP R 12K J 1/10W	
R21			RK73GB2A432J	CHIP R 4.3K J 1/10W	
R22			RK73GB2A133J	CHIP R 13K J 1/10W	
R23 ,24			RK73GB2A104J	CHIP R 100K J 1/10W	
R25			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R26			RK73GB2A104J	CHIP R 100K J 1/10W	
R27			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R28			RK73GB2A103J	CHIP R 10K J 1/10W	
R29			RK73GB2A133J	CHIP R 13K J 1/10W	
R30			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R31			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R32			RK73GB2A103J	CHIP R 10K J 1/10W	
R33			RK73GB2A104J	CHIP R 100K J 1/10W	
R34			RK73GB2A183J	CHIP R 18K J 1/10W	
R35			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R36			RK73GB2A163J	CHIP R 16K J 1/10W	
R38			RK73GB2A104J	CHIP R 100K J 1/10W	
R39 -41			RK73GB2A103J	CHIP R 10K J 1/10W	
R42 ,43			RK73GB2A104J	CHIP R 100K J 1/10W	
R46			RK73GB2A4R7J	CHIP R 4.7 J 1/10W	
R47			RK73GB2A104J	CHIP R 100K J 1/10W	
R49			RK73GB2A104J	CHIP R 100K J 1/10W	
R50			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R51			RK73GB2A103J	CHIP R 10K J 1/10W	
R52			RK73GB2A104J	CHIP R 100K J 1/10W	

Ref. No.	A d d	N e w	Parts No.	Description	Dest inati on
R53			RK73GB2A473J	CHIP R 47K J 1/10W	
R55			RK73GB2A103J	CHIP R 10K J 1/10W	
R57			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R59			RK73GB2A274J	CHIP R 270K J 1/10W	
R62 ,63			RK73GB2A302J	CHIP R 3.0K J 1/10W	
R67			RK73GB2A682J	CHIP R 6.8K J 1/10W	
R69			RK73GB2A333J	CHIP R 33K J 1/10W	
R70			RK73GB2A103J	CHIP R 10K J 1/10W	
R71 ,72			RK73GB2A101J	CHIP R 100 J 1/10W	
R73			RK73GB2A241J	CHIP R 240 J 1/10W	
R75			RK73GB2A103J	CHIP R 10K J 1/10W	
R76			RK73GB2A101J	CHIP R 100 J 1/10W	
R77			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R78			RK73GB2A104J	CHIP R 100K J 1/10W	
W1			R92-1252-05	CHIP R 0 OHM J 1/16W	
S1 ,2			S68-0863-05	PUSH SWITCH	
S3			S68-0862-05	PUSH SWITCH	
D1			DAP202U	DIODE	
IC1			TAR5S33	ANALOGUE IC	
IC2			NJM4580V	ANALOGUE IC	
IC4			BA5824FP	ANALOGUE IC	
IC6			L88MS33T	ANALOGUE IC	
IC7			703033BYGC-J02	MI-COM IC	
IC8			TC74HCT7007AF	MOS-IC	
IC11			UPD63760GJ	MOS-IC	
IC13			IS41LV16257	MEMORY IC	
IC13			MSM51V4265EP70	MOS-IC	
Q1			DTA143XUA	DIGITAL TRANSISTOR	
Q2 ,3			DTC124EUA	DIGITAL TRANSISTOR	
Q4			MCH6101	TRANSISTOR	
Q5			DTA143EUA	DIGITAL TRANSISTOR	
DAUGHTER UNIT (X89-2570-10)					
D1			B30-1566-05	LED (1608,RED)	
C1			CK73GB1H103K	CHIP C 0.010UF K	
CN1			E41-0169-05	SOCKET FOR PIN ASSY (18PIN)	
J1			E58-0865-05	RECTANGULAR RECEPTACLE (16PIN)	
R1			RK73EB2E102J	CHIP R 1.0K J 1/4W	
R2 -5			RK73EB2E471J	CHIP R 470 J 1/4W	
R6 ,7			RK73EB2E102J	CHIP R 1.0K J 1/4W	
R8			RK73EB2E241J	CHIP R 240 J 1/4W	
R9 ,10			RK73EB2E471J	CHIP R 470 J 1/4W	
R11 -13			RK73EB2E102J	CHIP R 1.0K J 1/4W	
S1			S70-0871-05	TACT SWITCH	
MECHANISM ASSY (X92-4670-00)					
2	1B		A10-4827-12	CHASSIS	
5	1B		D10-4576-33	ARM ASSY	
8	1A		D10-4579-03	LEVER ASSY	
10	3A		D10-4581-13	ARM	
11	2A		D10-4582-13	ARM	
12	3A		D10-4583-03	ARM	

K7: KDC-MPV622 K8: KDC-MPV6022 M: KDC-MPV7023

△ indicates safety critical components.

PARTS LIST

Teile ohne **Parts No.** werden nicht geliefert.

MECHANISM ASSY (X92-4670-00)

Ref. No.	Add	New	Parts No.	Description	Destination

⚠ indicates safety critical components.