



EXPLODED VIEW / PARTS LIST

Panel section

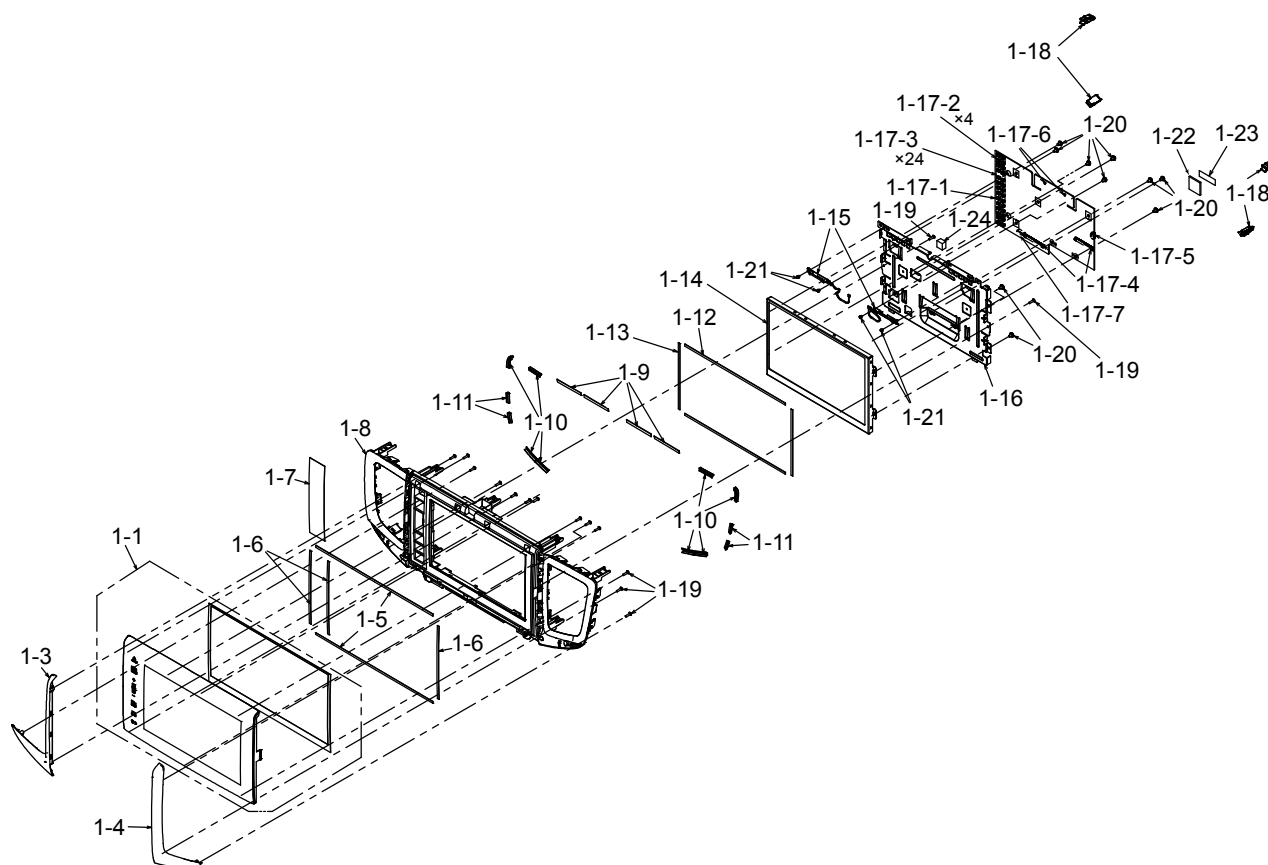

NO.	PART NO.	DESCRIPTION	Q'TY	NO.	PART NO.	DESCRIPTION	Q'TY
1	-----	*Unused number	-	1-16	331-5691-01	LCD HOLDER	1
1-1	948-4108-01	TOUCH-PANEL-ASSY	1	1-17	-----	*Unused number	-
1-2	-----	*Unused number	-	1-17-1	-----	PANEL PWB (440500-039)	1
1-3	383-0880-00	DECORATE PART-L	1	1-17-2	001-7138-80	LED	4
1-4	383-0881-00	DECORATE PART-R	1	1-17-3	001-7148-95	LED	24
1-5	347-9392-00	CUSHION A	2	1-17-4	074-2248-60	OUTLET SOCKET	2
1-6	347-9393-00	CUSHION B	3	1-17-5	076-6020-04	PLUG	1
1-7	347-9385-02	ILLUMI SHEET	1	1-17-6	092-2203-00	ANT-RECEPT	2
1-8	370-6733-02	ESCUTCHEON	1	1-17-7	076-6000-59	PLUG	1
1-9	347-9400-00	FELT A	4	1-18	335-8461-00	CLIP	4
1-10	347-9401-00	FELT B	8	1-19	716-0778-52	SPECIAL SCREW	15
1-11	347-9459-00	FELT C	4	1-20	780-2604-50	IT SCREW	10
1-12	347-9388-00	CUSHION H	2	1-21	716-1468-01	SPECIAL SCREW	4
1-13	347-9389-00	CUSHION V	2	1-22	345-6126-00	CUSHION RUBBER	1
1-14	379-0500-00	TFT	1	1-23	347-9609-00	LCD SHEET	1
1-15	060-8122-20	B/T_WIFI-ANT	2	1-24	347-9625-00	PWB SPACER	1

Main section

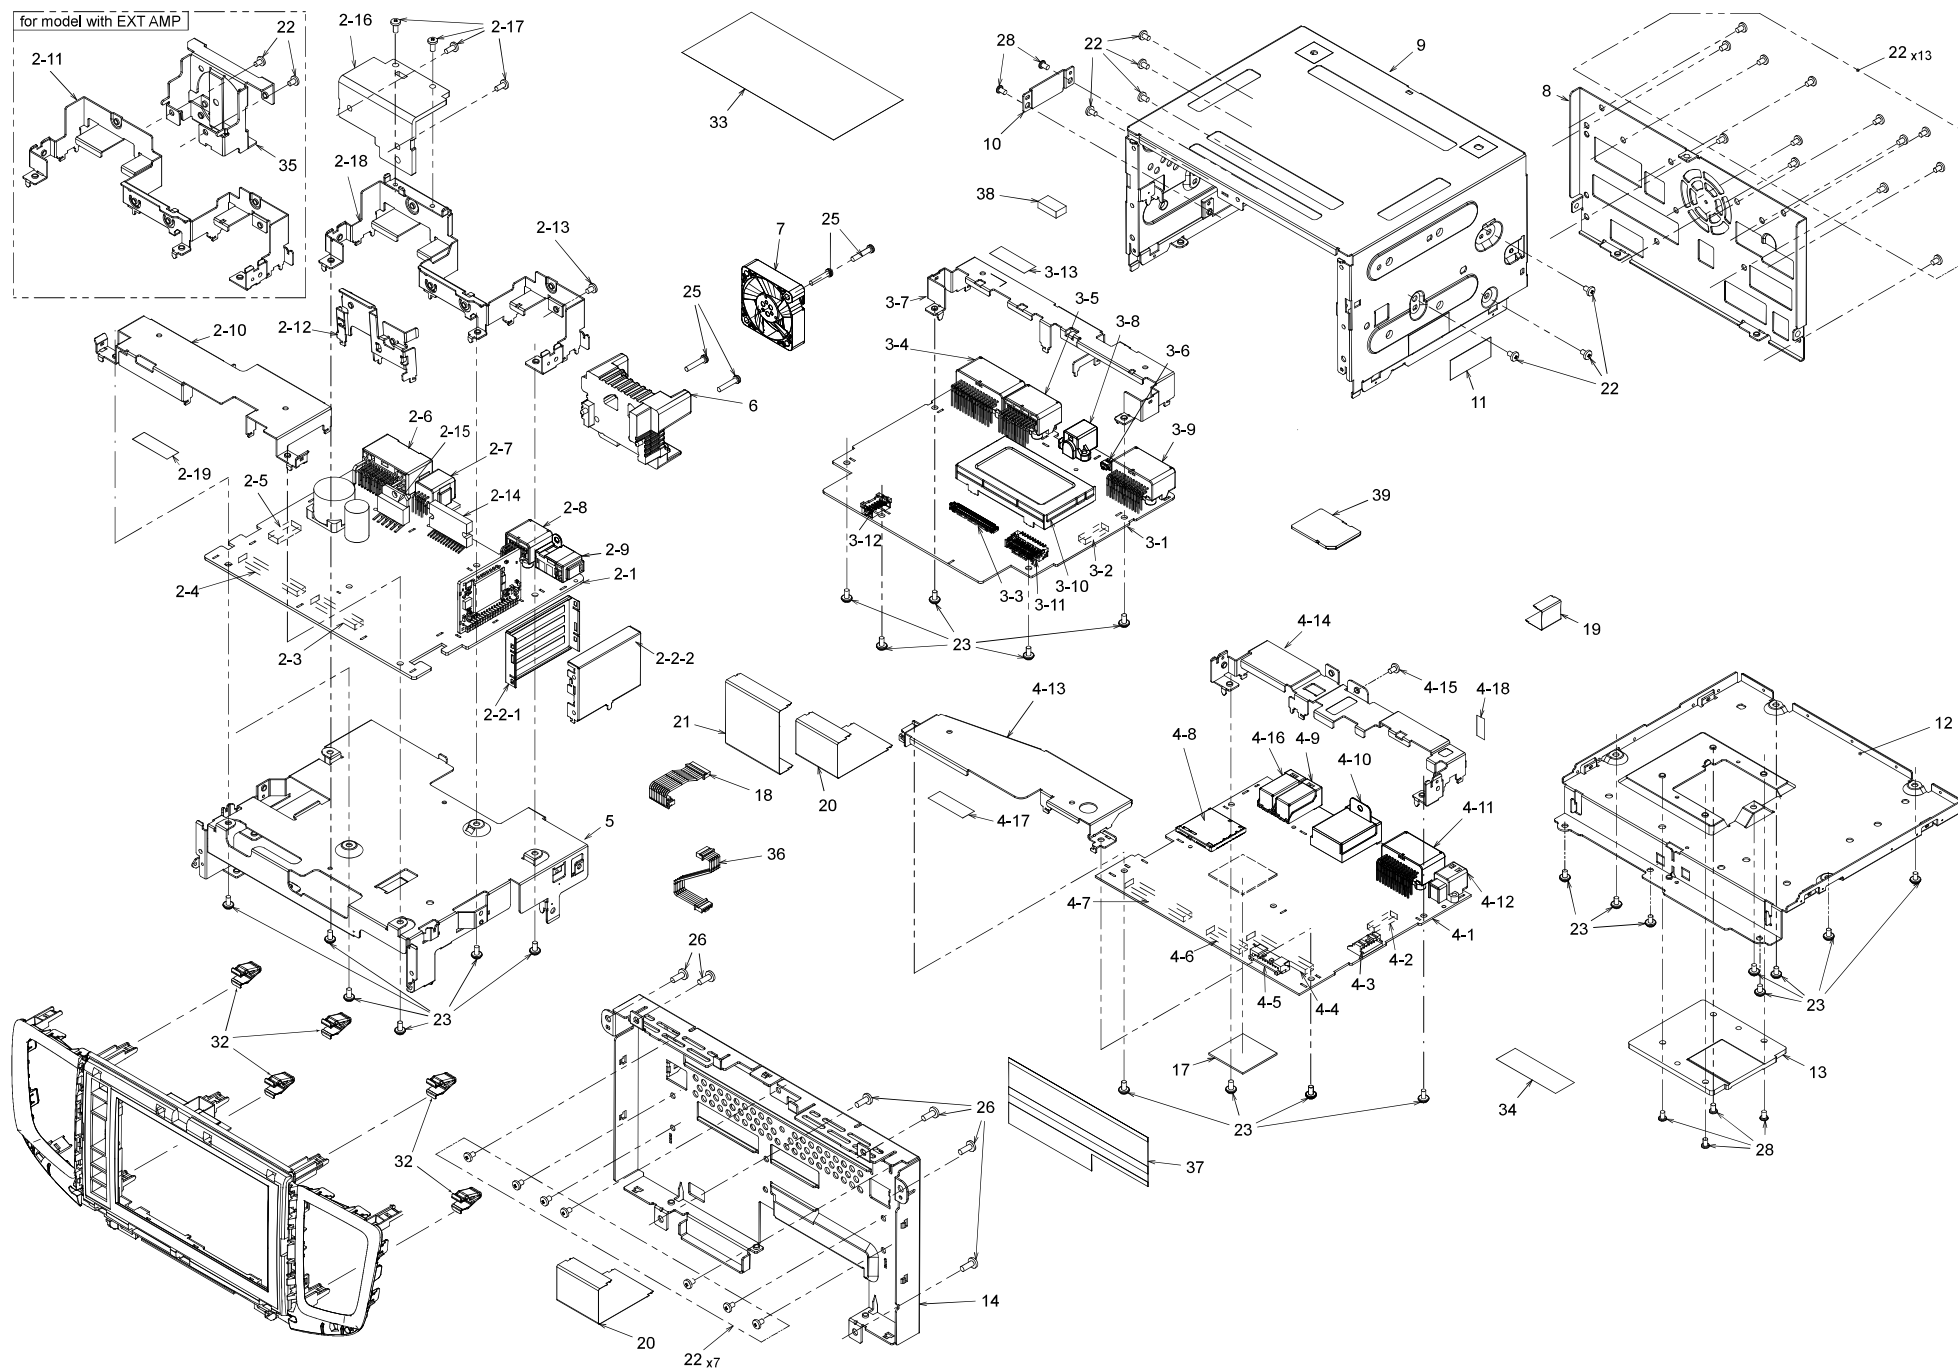

NO.	PART NO.	DESCRIPTION	Q'TY	NO.	PART NO.	DESCRIPTION	Q'TY
1	-----	*Unused number	-	4-9	074-4099-00	OUTLET SOCKET	1
2	-----	*Unused number	-	4-10	-----	*Not mounted (OUTLET SOCKET)	-
2-1	-----	AUDIO PWB (440901-039)	1	4-11	074-4017-24	OUTLET SOCKET	1
2-2	-----	*Unused number	-	4-12	092-2249-00	ANT-RECEPT	1
2-2-1	-----	*Not mounted (SHIELD CASE-U)	-	4-13	331-5700-03	PWB HOLDER(CPU)	1
2-2-2	-----	*Not mounted (SHIELD CASE-B)	-	4-14	331-5699-01	CN HOLDER(CPU)	1
2-3	074-2248-60	OUTLET SOCKET	1	4-15	-----	*Not mounted (MACHINE SCREW)	-
2-4	074-2248-80	OUTLET SOCKET	1	4-16	074-4099-30	OUTLET SOCKET	1
2-5	076-6021-56	PLUG	1	4-17	-----	BAR CODE LABEL(009200-290)	1
2-6	074-4118-24	OUTLET SOCKET	1	4-18	347-9616-00	SPACER	1
2-7	074-4031-08	OUTLET SOCKET	1	5	312-0548-04	INNER CHASSIS	1
2-8	074-4017-12	OUTLET SOCKET	1	6	313-2219-01	HEAT SINK(FAN)	1
2-9	-----	*Not mounted (ANT-RECEPT)	-	7	020-3061-30	DC-MOTOR	1
2-10	331-5697-01	PWB-HOLDER(AD)	1	8	307-0840-38	BACK-CVR	1
2-11	-----	*Not mounted (CN HOLDER(AD))	-	9	310-2054-03	TOP CASE	1
2-12	331-5693-01	IC HOLDER(SUB)	1	10	331-5692-01	SD COVER	1
2-13	-----	*Not mounted (MACHINE SCREW)	-	11	347-9412-00	SHADE	1
2-14	051-2084-00	IC (4CH)(TB2941HQ)	1	12	311-2099-01	BOTTOM CASE	1
2-15	051-2019-01	IC (1CH)(TDA7396)	1	13	313-2231-00	HEAT SINK(SOC)	1
2-16	313-2221-01	HEAT SINK(SUB)	1	14	309-1998-02	FRONT PLATE	1
2-17	714-2608-8B	MACHINE SCREW	4	15	-----	*Unused number	-
2-18	331-5696-01	CN HOLDER(AD)	1	16	-----	*Unused number	-
2-19	-----	BAR CODE LABEL(009200-290)	1	17	345-7413-00	CUSHION	1
3	-----	*Unused number	-	18	854-4677-50	EXTENSION LEAD	1
3-1	-----	IF PWB (469000-039)	1	19	816-3180-05	FLAT WIRE	1
3-2	074-2248-40	OUTLET SOCKET	1	20	816-3181-06	FLAT WIRE	2
3-3	074-2248-60	OUTLET SOCKET	1	21	816-3182-05	FLAT WIRE	1
3-4	074-4017-28	OUTLET SOCKET	1	22	714-2604-8B	MACHINE SCREW	27
3-5	074-4017-20	OUTLET SOCKET	1	23	780-2604-50	IT SCREW	23
3-6	076-0569-02	PLUG	1	24	-----	*Unused number	-
3-7	331-5698-03	CN HOLDER(IF)	1	25	732-2614-1B	SEMS SCREW(M2.6x14)	4
3-8	-----	*Not mounted (ANT-RECEPT)	-	26	716-1553-50	TAPPING SCREW(3x8)	6
3-9	-----	*Not mounted (OUTLET SOCKET)	-	27	-----	*Unused number	-
3-10	-----	*Not mounted (TUNER PACK(XM))	-	28	780-2604-51	SPECIAL SCREW(M2.6x4)	6
3-11	076-6021-60	PLUG	1	29	-----	*Unused number	-
3-12	076-6021-56	PLUG	1	30	-----	*Unused number	-
3-13	-----	BAR CODE LABEL(009200-290)	1	31	-----	*Unused number	-
4	-----	*Unused number	-	32	335-7317-00	CLIP	5
4-1	-----	CPU-PWB (440700-039)	1	33	276-1661-05	SETPLATE(for PH3702WA)	1
4-2	074-2248-40	OUTLET SOCKET	1		276-1661-06	SETPLATE(for PH3714WA)	1
4-3	076-6023-07	PLUG	1	34	-----	*Not mounted (XM CODE LABEL)	-
4-4	074-2248-60	OUTLET SOCKET	1	35	-----	*Not mounted (FAN HOLDER)	-
4-5	076-6021-60	PLUG	1	36	854-4681-50	EXTENSION LEAD	1
4-6	074-2248-50	OUTLET SOCKET	1	37	347-9533-00	INSULATOR	1
4-7	074-2248-80	OUTLET SOCKET	1	38	345-8008-00	GASKET	1
4-8	-----	*Not mounted (OUTLET SOCKET)	-	39	-----	*Not mounted (SD CARD)	-

[illegible]