


EXPLODED VIEW (DVD MECHANISM)




Parts with the exploded numbers larger than 700 are not supplied.

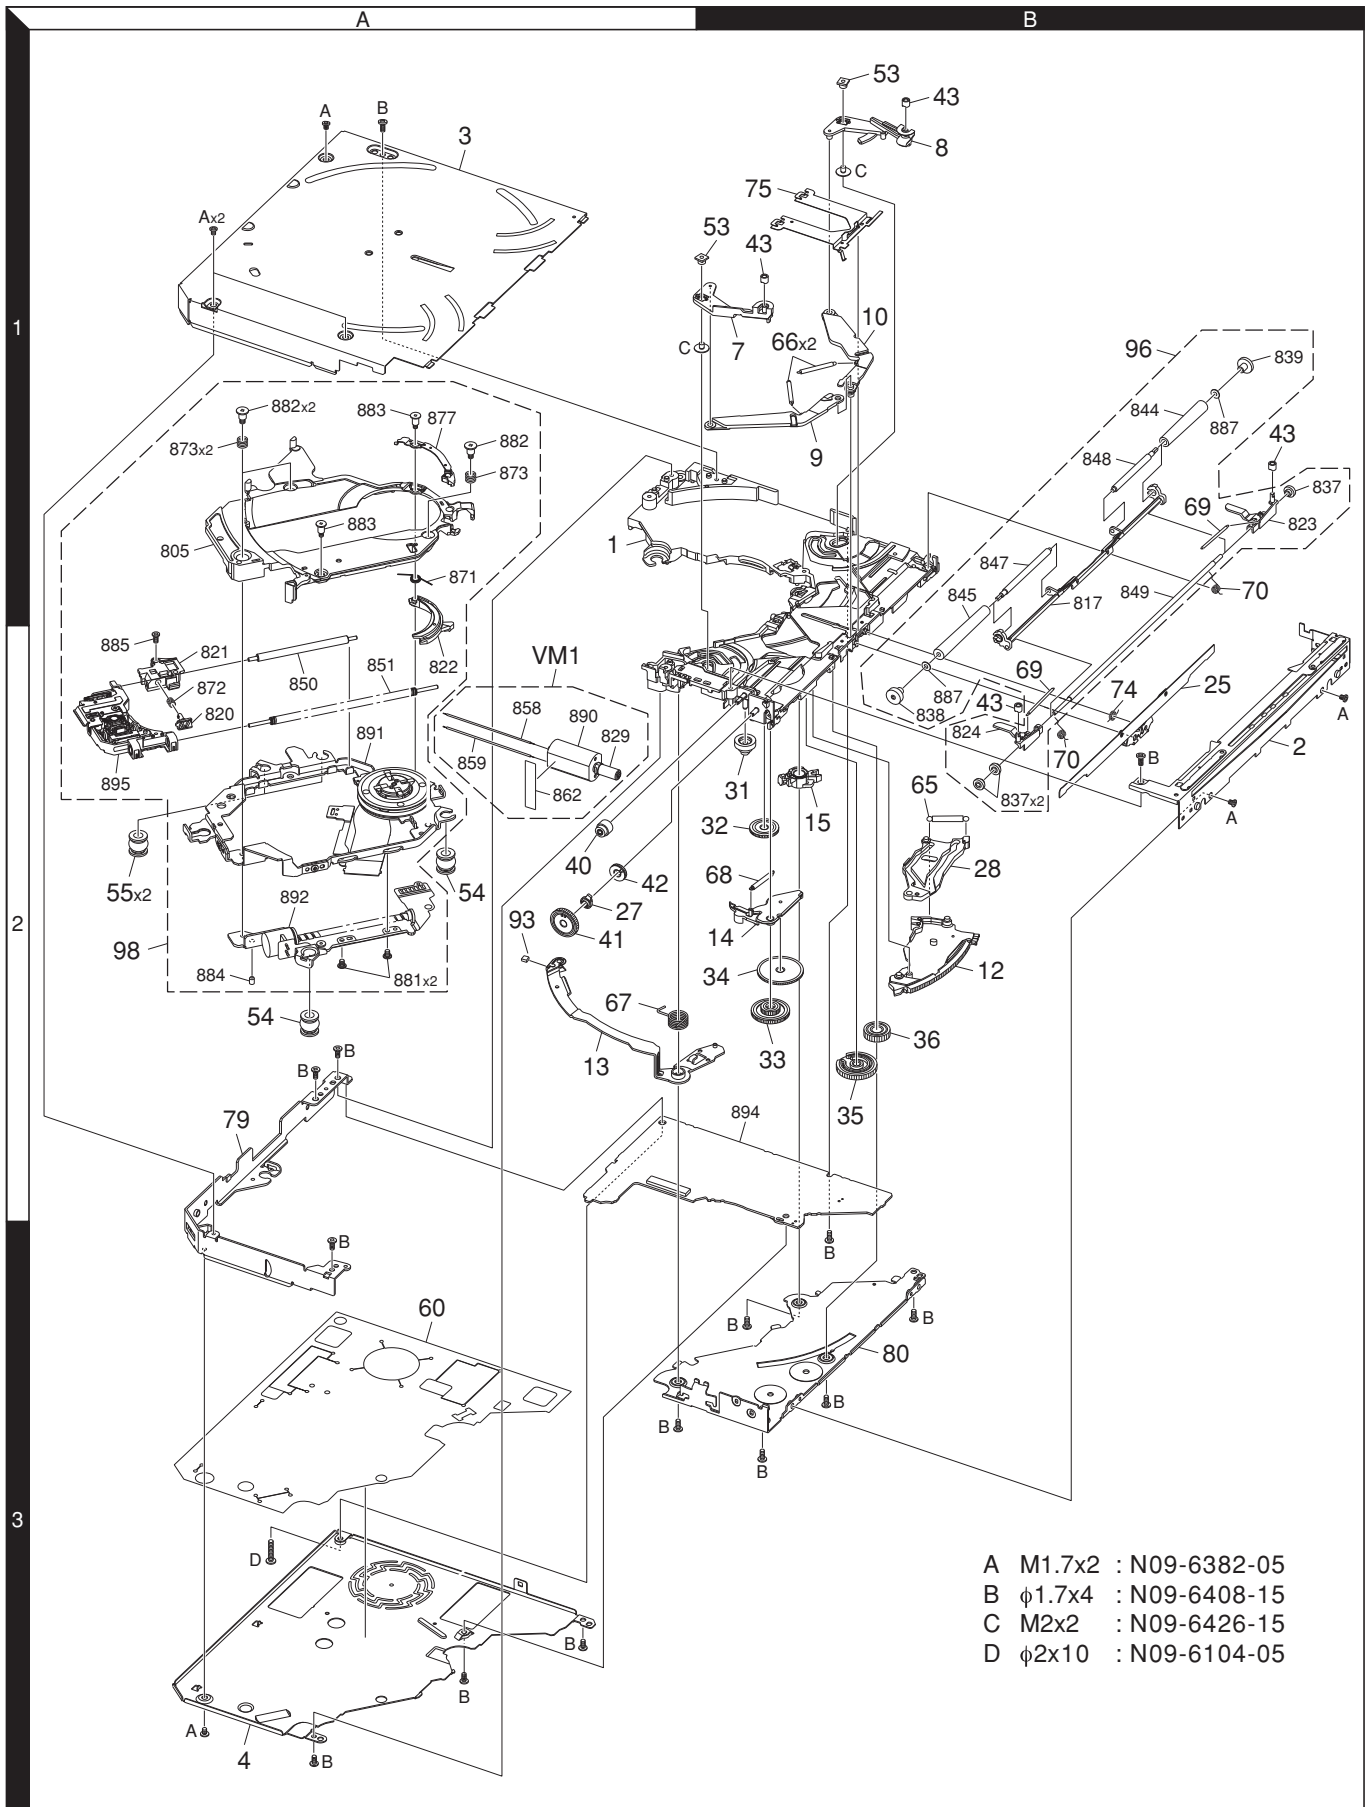

48

EXPLODED VIEW (PANEL MECHANISM)

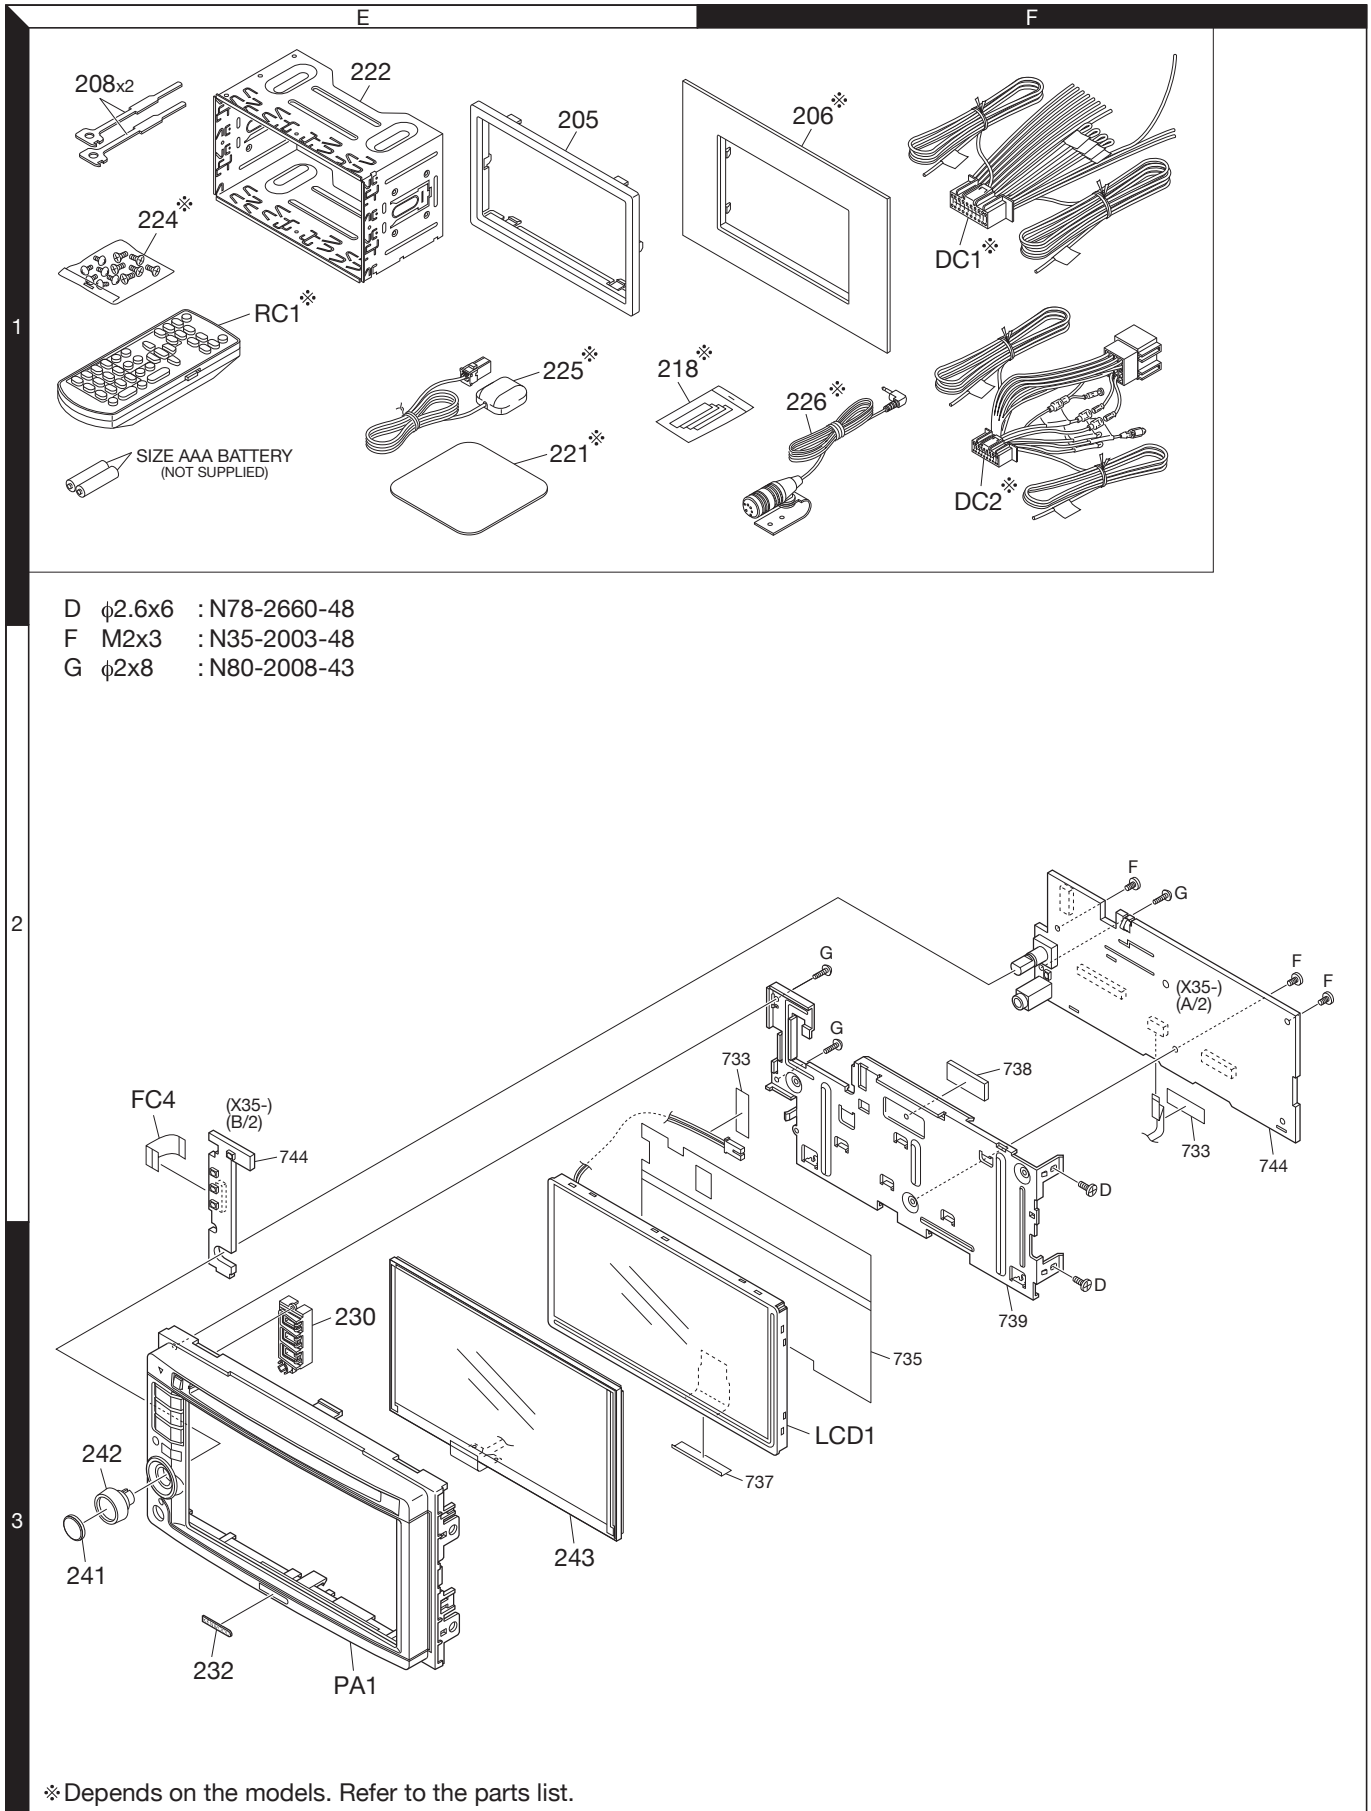

Parts with the exploded numbers larger than 700 are not supplied.

DDX5024/5034/5034BT/5034M/5054/514/54R
DNX5140/5240/5240BT/6000EX/6140

PARTS LIST

* New parts
Parts without **Parts No.** are not supplied.
Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
DDX5024/5034/5034BT/5034M/5054/514/54R DNX5140/5240/5240BT/6000EX/6140					
RC1	1E		A70-2083-15	REMOTE CONTROLLER AS (RC-DV340)	M1M2X1
RC1	1E		A70-2083-15	REMOTE CONTROLLER AS (RC-DV340)	R1Q1Q2
RC1	1E		A70-2083-15	REMOTE CONTROLLER AS (RC-DV340)	R2
-		*	B54-4690-00	INSTALLATION MANUA (ENG.FRE.SPA	KR1R2
-		*	B54-4690-00	INSTALLATION MANUA (ENG.FRE.SPA	K1K2K3
-		*	B54-4691-00	INSTALLATION MANUAL (PORTUGUESE	R1R2
-		*	B54-4692-00	INSTALLATION MANUAL (ENG.UKR.)	EQ1Q2
-		*	B54-4692-00	INSTALLATION MANUAL (ENG.UKR.)	E1E2
-		*	B54-4693-00	INSTALLATION MANUA (F.G.D.I.S.P	EE1E2
-		*	B54-4694-00	INSTALLATION MANUAL (RUSSIAN)	Q1Q2
-		*	B54-4696-00	INSTALLATION MANUAL (ENGLISH)	M1M2X1
-		*	B54-4711-00	INSTALLATION MANUAL (S-CHL.KOR)	M1
-		*	B54-4712-00	INSTALLATION MANUAL (ARABIC)	M2
-		*	B64-4254-00	INSTRUCTION MANUAL (ENGLISH)	KR1R2
-		*	B64-4254-00	INSTRUCTION MANUAL (ENGLISH)	K1K2K3
-		*	B64-4255-00	INSTRUCTION MANUAL (FRENCH)	KK1K2
-		*	B64-4255-00	INSTRUCTION MANUAL (FRENCH)	K3
-		*	B64-4256-00	INSTRUCTION MANUAL (SPANISH)	KR1R2
-		*	B64-4256-00	INSTRUCTION MANUAL (SPANISH)	K1K2K3
-		*	B64-4257-00	INSTRUCTION MANUAL (PORTUGUESE)	R1R2
-		*	B64-4258-00	INSTRUCTION MANUAL (ENGLISH)	EQ1Q2
-		*	B64-4258-00	INSTRUCTION MANUAL (ENGLISH)	E1E2
-		*	B64-4259-00	INSTRUCTION MANUAL (FRENCH)	EE1E2
-		*	B64-4260-00	INSTRUCTION MANUAL (GERMAN)	EE1E2
-		*	B64-4261-00	INSTRUCTION MANUAL (DUTCH)	EE1E2
-		*	B64-4262-00	INSTRUCTION MANUAL (ITALIAN)	EE1E2
-		*	B64-4263-00	INSTRUCTION MANUAL (SPANISH)	EE1E2
-		*	B64-4264-00	INSTRUCTION MANUAL (PORTUGUESE)	EE1E2
-		*	B64-4265-00	INSTRUCTION MANUAL (RUSSIAN)	Q1Q2
-		*	B64-4266-00	INSTRUCTION MANUAL (UKRAINIAN)	EQ1Q2
-		*	B64-4266-00	INSTRUCTION MANUAL (UKRAINIAN)	E1E2
-		*	B64-4267-00	INSTRUCTION MANUAL (ENGLISH)	M1M2X1
-		*	B64-4269-00	INSTRUCTION MANUAL (S-CHINESE)	M1
-		*	B64-4270-00	INSTRUCTION MANUAL (KOREAN)	M1
-		*	B64-4271-00	INSTRUCTION MANUAL (ARABIC)	M2
-		*	B64-4275-00	INSTRUCTION MANUAL (ENGLISH)	K1K2K3
-		*	B64-4276-00	INSTRUCTION MANUAL (FRE.SPA.)	K1K2K3
-		*	B64-4277-00	INSTRUCTION MANUAL (ENGLISH)	E1E2
-		*	B64-4278-00	INSTRUCTION MANUAL (FRE.GER.DUT	E1E2
-		*	B64-4279-00	INSTRUCTION MANUAL (ITA.SPA.POR	E1E2
205	1E		B07-3165-02	ESCUTCHEON	
206	1F		B07-3172-12	ESCUTCHEON	M2X1
206	1F		B07-3172-12	ESCUTCHEON	Q1Q2M1
208	1E		D10-7012-04	LEVER	
210	2C		E30-6810-05	CORD WITH PLUG	K3
210	2C		E30-6810-05	CORD WITH PLUG	R2K2E2
DC1	1F	*	E30-6881-05	DC CORD	KR1M1
DC1	1F	*	E30-6881-05	DC CORD	K1K2K3
DC1	1F	*	E30-6881-05	DC CORD	M2X1R2
DC2	1F		E30-6796-05	DC CORD	EQ1Q2
DC2	1F		E30-6796-05	DC CORD	E1E2
FC1	3C		E39-0995-15	FLAT CABLE	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
FC2	3C		E39-0996-15	FLAT CABLE	
FC3	2C		E39-0997-15	FLAT CABLE	
WH1	1D		E39-0994-15	WIRING HARNESS	
213	1D		F09-2929-04	CAP	
214	2C		F09-2959-05	FAN	
F1	2D		F52-0007-05	FUSE(MINI BLADE TYPE) 15A	
-		*	H54-4490-03	ITEM CARTON CASE	K
-		*	H54-4491-03	ITEM CARTON CASE	R1
-		*	H54-4492-03	ITEM CARTON CASE	E
-		*	H54-4493-03	ITEM CARTON CASE	Q1
-		*	H54-4494-03	ITEM CARTON CASE	Q2
-		*	H54-4495-03	ITEM CARTON CASE	M1X1
-		*	H54-4496-03	ITEM CARTON CASE	M2
-		*	H54-4497-03	ITEM CARTON CASE	K1
-		*	H54-4499-03	ITEM CARTON CASE	E1
-		*	H54-4500-03	ITEM CARTON CASE	K2
-		*	H54-4501-03	ITEM CARTON CASE	E2
-		*	H54-4641-03	ITEM CARTON CASE	R2
-		*	H54-4642-03	ITEM CARTON CASE	K3
218	1F		H30-0595-04	ADHESIVE DOUBLE-COATED TAPE	M2X1
218	1F		H30-0595-04	ADHESIVE DOUBLE-COATED TAPE	Q1Q2M1
220	2D		J11-0660-05	CLAMPER	K1K2K3
221	1E		J21-9867-04	MOUNTING HARDWARE	E1E2
221	1E		J21-9867-04	MOUNTING HARDWARE	K1K2K3
222	1E		J22-0657-03	MOUNTING HARDWARE ASSY	
224	1E		N99-1779-15	SCREW SET	KR1M1
224	1E		N99-1779-15	SCREW SET	K1K2K3
224	1E		N99-1779-15	SCREW SET	M2X1R2
A	2D		N09-6731-05	MACHINE SCREW (M3.0X14)	
B	3D		N35-2604-43	BINDING HEAD MACHINE SCREW	
C	2C		N35-2620-48	BINDING HEAD MACHINE SCREW	
D	3F		N78-2660-48	PAN HEAD TAPTITE SCREW	
E	1D		N86-2605-48	BINDING HEAD TAPTITE SCREW	
225	1E		W02-5305-05	ANTENNA MODULE (GPS-ANT)	E1E2
225	1E		W02-5305-05	ANTENNA MODULE (GPS-ANT)	K1K2K3
226	1F		W01-1718-05	MICROPHONE	K3
226	1F		W01-1718-05	MICROPHONE	R2K2E2
DISPLAY ASSY					
PA1	3E	*	A64-4862-01	PANEL ASSY	K
PA1	3E	*	A64-4863-01	PANEL ASSY	R1
PA1	3E	*	A64-4864-01	PANEL ASSY	E
PA1	3E	*	A64-4865-01	PANEL ASSY	Q2
PA1	3E	*	A64-4866-01	PANEL ASSY	M1M2X1
PA1	3E	*	A64-4867-01	PANEL ASSY	K1
PA1	3E	*	A64-4869-01	PANEL ASSY	E1
PA1	3E	*	A64-4870-01	PANEL ASSY	K2
PA1	3E	*	A64-4871-01	PANEL ASSY	E2
PA1	3E	*	A64-4874-01	PANEL ASSY	Q1
PA1	3E	*	A64-4945-01	PANEL ASSY	K3
PA1	3E	*	A64-4946-01	PANEL ASSY	R2
230	3E		B19-2492-13	LIGHTING BOARD	
232	3E		B43-1518-04	BADGE	
LCD1	3F		B38-1202-05	LCD	

E: DDX5024 E1: DNX5240 E2: DNX5240BT (Europe) Q1: DDX5054 Q2: DDX54R (Russian)
K: DDX514 K1: DNX5140 K2: DNX6140 K3: DNX6000EX (North America)
X1: DDX5034 (Australia) R1: DDX5034 R2: DDX5034BT (Latin America)
M1: DDX5034 M2: DDX5034M (Other Areas)

PARTS LIST

DISPLAY ASSY

Ref. No.	Add	New	Parts No.	Description	Destination
FC4	2E		E39-0998-15	FLAT CABLE	
241	3E		K28-0302-04	KEY TOP (VOL)	
242	3E		K28-0304-23	KNOB ASSY (VOL)	
F	2F		N35-2003-48	BINDING HEAD MACHINE SCREW	
G	2F		N80-2008-43	PAN HEAD TAPTITE SCREW	
243	3E	*	S79-0867-05	SWITCH ASSY	
DVD PLAYER ASSY					
B	3D		N35-2604-43	BINDING HEAD MACHINE SCREW	
VME1	1C	*	X92-6400-00	DVD MECHANISM ASSY (DVS-8220W)	
CONTROL ASSY (NAVI ASSY)					
WH2	2D	*	E39-0993-35	WIRING HARNESS	E1E2
WH2	2D	*	E39-0993-35	WIRING HARNESS	K1K2K3
250	2D	*	W02-5306-15	NAVIGATION MODULE	K1K2K3
250	2D		W02-5308-25	NAVIGATION MODULE	E1E2
VIDEO CONTROL UNIT (X15-124x-xx)					
C1			C90-5670-05	ELECTRO	2200UF 16WV
C4 ,5			CK73GB1H104K	CHIP C	0.10UF K
C8			CK73GB1H104K	CHIP C	0.10UF K
C9			CK73FB1A225K	CHIP C	2.2UF K
C10			CE32BQ1E101M	CHIP EL	100UF 25WV
C100,101			CC73HCH1H101J	CHIP C	100PF J
C102			CK73GB1H104K	CHIP C	0.10UF K
C103			CC73HCH1H221J	CHIP C	220PF J
C104,105			CC73HCH1H470J	CHIP C	47PF J
C106,107			CK73HB1C473K	CHIP C	0.047UF K
C108			CC73HCH1H221J	CHIP C	220PF J
C109,110			CC73HCH1H470J	CHIP C	47PF J
C111			CK73HB1C473K	CHIP C	0.047UF K
C112,113			CC73HCH1H221J	CHIP C	220PF J
C116			CK73GB1H103K	CHIP C	0.010UF K
C117			CK73GB1H223K	CHIP C	0.022UF K
C118,119			CK73GB1H103K	CHIP C	0.010UF K
C120			CK73GB1H153K	CHIP C	0.015UF K
C121			CK73GB1H223K	CHIP C	0.022UF K
C124-129			CK73HB1H102K	CHIP C	1000PF K
C130,131			CK73FB0J106K	CHIP C	10UF K
C132,133			CK73GB1H104K	CHIP C	0.10UF K
C134,135			CK73FB0J106K	CHIP C	10UF K
C136-141			CK73GB1H104K	CHIP C	0.10UF K
C142,143			CK73EB1E225K	CHIP C	2.2UF K
C144-149			CK73GB1H104K	CHIP C	0.10UF K
C150-157			CK73GB1H103K	CHIP C	0.010UF K
C158-161			CK73GB1H104K	CHIP C	0.10UF K
C162-169			CK73HB1H102K	CHIP C	1000PF K
C170			CK73EB1E106K	CHIP C	10UF K
C171			CK73GB1H103K	CHIP C	0.010UF K
C172			CK73GB1H104K	CHIP C	0.10UF K
C173,174			CE32BQ1E680M	CHIP EL	68UF 25WV
C175			CK73GB1H104K	CHIP C	0.10UF K
C176			CK73GB1H103K	CHIP C	0.010UF K

Ref. No.	Add	New	Parts No.	Description	Destination
C177,178			CK73EB1E106K	CHIP C	10UF K
C179			CK73GB1H103K	CHIP C	0.010UF K
C180			CK73GB1H104K	CHIP C	0.10UF K
C181,182			CE32BQ1E680M	CHIP EL	68UF 25WV
C183			CK73GB1H104K	CHIP C	0.10UF K
C184			CK73GB1H103K	CHIP C	0.010UF K
C185			CK73EB1E106K	CHIP C	10UF K
C186-189			CK73HB1H102K	CHIP C	1000PF K
C190			CE32AV0J221M	CHIP EL	220UF 6.3WV
C191			CK73GB1H103K	CHIP C	0.010UF K
C192,193			CK73GB1H104K	CHIP C	0.10UF K
C194			CK73GB1H103K	CHIP C	0.010UF K
C195			CE32AV0J221M	CHIP EL	220UF 6.3WV
C196			CE32AV0G331M	CHIP EL	330UF 4.0WV
C197			CK73GB1H103K	CHIP C	0.010UF K
C198,199			CK73GB1H104K	CHIP C	0.10UF K
C200			CK73GB1H103K	CHIP C	0.010UF K
C201			CK73HB1A104K	CHIP C	0.10UF K
C204,205			CK73GB1A474K	CHIP C	0.47UF K
C206			CE32BJ1C470M	CHIP EL	47UF 16WV
C207			CK73GB1A474K	CHIP C	0.47UF K
C208			CK73GB1H103K	CHIP C	0.010UF K
C209			CK73GB1A474K	CHIP C	0.47UF K
C210			CK73GB0J475K	CHIP C	4.7UF K
C211			CK73FB0J106K	CHIP C	10UF K
C212			CK73GB0J475K	CHIP C	4.7UF K
C213			CK73HB1H102K	CHIP C	1000PF K
C214			CE32AV1A121M	CHIP EL	120UF 10WV
C215-217			CK73HB1H102K	CHIP C	1000PF K
C218,219			CK73GB1A105K	CHIP C	1.0UF K
C220			CE32BJ1C470M	CHIP EL	47UF 16WV
C225-227			CK73GB1A105K	CHIP C	1.0UF K
C229			CK73GB1H103K	CHIP C	0.010UF K
C232			CK73GB1H104K	CHIP C	0.10UF K
C233,234			CK73GB1A105K	CHIP C	1.0UF K
C235,236			CE32BJ1C220M	CHIP EL	22UF 16WV
C239			CK73GB1H103K	CHIP C	0.010UF K
C240-243			CK73GB1A105K	CHIP C	1.0UF K
C244			CK73FB0J106K	CHIP C	10UF K
C245			CK73GB1H104K	CHIP C	0.10UF K
C246			CK73FB0J106K	CHIP C	10UF K
C247			CK73GB1H104K	CHIP C	0.10UF K
C248			CE32BQ0J331M	CHIP EL	330UF 6.3WV
C249			CK73GB1A105K	CHIP C	1.0UF K
C250			CK73FB0J106K	CHIP C	10UF K
C265			CK73HB1H102K	CHIP C	1000PF K
C271,272			CC73GCH1H471J	CHIP C	470PF J
C300,301			CK73GB1H104K	CHIP C	0.10UF K
C300,301			CK73GB1H104K	CHIP C	0.10UF K
C300,301			CK73GB1H104K	CHIP C	0.10UF K
C300,301			CK73GB1H104K	CHIP C	0.10UF K
C300,301			CK73GB1H104K	CHIP C	0.10UF K
C301			CK73GB1H104K	CHIP C	0.10UF K
C302			CK73GB1H103K	CHIP C	0.010UF K
C303			CK73GB1H104K	CHIP C	0.10UF K

E: DDX5024 E1: DNX5240 E2: DNX5240BT (Europe) Q1: DDX5054 Q2: DDX54R (Russian)
K: DDX514 K1: DNX5140 K2: DNX6140 K3: DNX6000EX (North America)
X1: DDX5034 (Australia) R1: DDX5034 R2: DDX5034BT (Latin America)
M1: DDX5034 M2: DDX5034M (Other Areas)

△ Indicates safety critical components.

PARTS LIST

VIDEO CONTROL UNIT (X15-124x-xx)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation	Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
C304 C307 C308 C309 C312,313			CK73GB1H103K CK73GB1H104K CK73GB1H103K CE32BQ1E101M CK73HB1H102K	CHIP C 0.010UF K CHIP C 0.10UF K CHIP C 0.010UF K CHIP EL 100UF 25WV CHIP C 1000PF K		C752-758 C761,762 C763,764 C801-804 C807			CK73GB1H104K CK73FB0J106K CK73GB1H104K CK73GB1A105K CK73GB1A105K	CHIP C 0.10UF K CHIP C 10UF K CHIP C 0.10UF K CHIP C 1.0UF K CHIP C 1.0UF K	
C314 C408 C410 C412 C413			CK73GB1H103K CK73GB1A474K CE32BJ0J470M CK73GB1A474K CE32BQ1C221M	CHIP C 0.010UF K CHIP C 0.47UF K CHIP EL 47UF 6.3WV CHIP C 0.47UF K CHIP EL 220UF 16WV	E1E2	C808,809 C811 C812-825 C826 C827,828			CK73GB1H104K CK73GB1A105K CK73GB1H104K CK73GB1A105K CK73GB1H104K	CHIP C 0.10UF K CHIP C 1.0UF K CHIP C 0.10UF K CHIP C 1.0UF K CHIP C 0.10UF K	
C413 C414 C414 C501 C501			CE32BQ1C221M CK73GB1H103K CK73GB1H103K CK73GB1H104K CK73GB1H104K	CHIP EL 220UF 16WV CHIP C 0.010UF K CHIP C 0.010UF K CHIP C 0.10UF K CHIP C 0.10UF K	K1K2K3 E1E2 K1K2K3 K3 R2K2E2	C829 C830 C833 C834,835 C836-839			CK73GB1A105K CK73GB1H104K CK73GB1A105K CC73HCH1H100D CK73FB0J106K	CHIP C 1.0UF K CHIP C 0.10UF K CHIP C 1.0UF K CHIP C 10PF D CHIP C 10UF K	
C502,503 C502,503 C504-507 C504-507 C508			CC73HCH1H100D CC73HCH1H100D CK73GB1A105K CK73GB1A105K CK73FB0J106K	CHIP C 10PF D CHIP C 10PF D CHIP C 1.0UF K CHIP C 1.0UF K CHIP C 10UF K	K3 R2K2E2 K3 R2K2E2 K3	C840 C841 C842 C843 C862,863			CK73GB1H104K CE32BQ1C221M CC73HCH1H101J CK73FB0J106K CK73GB1C104K	CHIP C 0.10UF K CHIP EL 220UF 16WV CHIP C 100PF J CHIP C 10UF K CHIP C 0.10UF K	
C508 C509 C509 C510,511 C510,511			CK73FB0J106K CC73HCH1H101J CC73HCH1H101J CK73GB1H104K CK73GB1H104K	CHIP C 10UF K CHIP C 100PF J CHIP C 100PF J CHIP C 0.10UF K CHIP C 0.10UF K	R2K2E2 K3 R2K2E2 K3 R2K2E2	C864 C865			CK73GB1H104K CK73HB1H102K	CHIP C 0.10UF K CHIP C 1000PF K	
C601-603 C604-606 C607 C621-624 C625			CK73GB1H104K CK73GB1A105K CK73FB0J106K CK73GB1H104K CK73GB0J475K	CHIP C 0.10UF K CHIP C 1.0UF K CHIP C 10UF K CHIP C 0.10UF K CHIP C 4.7UF K		CN1 CN2 CN301 CN401 CN401			E41-2685-05 E41-2735-05 E41-2237-05 E41-2772-05 E41-2772-05	PIN ASSY PIN ASSY FLAT CABLE CONNECTOR PIN ASSY PIN ASSY	E1E2 K1K2K3
C626-630 C631 C632-638 C651 C655,656			CK73GB1H104K CK73GB0J475K CK73GB1H104K CK73FB0J475K CK73FB0J106K	CHIP C 0.10UF K CHIP C 4.7UF K CHIP C 0.10UF K CHIP C 4.7UF K CHIP C 10UF K		CN701 J201 J202 J203 J301		*	E41-2979-05 E11-0625-05 E11-0656-05 E63-0956-05 E58-1115-05	FLAT CABLE CONNECTOR PHONE JACK (IPOD-A) PHONE JACK (IPOD-V YELLOW) RCA PIN JACK (AV-OUT,V-IN) RECTANGULAR RECEPTACLE	
C657,658 C661,662 C663,664 C665,666 C667-670			CK73GB1H104K CK73EB1C106K CK73HB1H222K CK73HB1H271K CK73EB1C106K	CHIP C 0.10UF K CHIP C 10UF K CHIP C 2200PF K CHIP C 270PF K CHIP C 10UF K		J401 J401 J401 J501 J501			E56-0809-15 E56-0809-15 E56-0809-15 E11-0625-05 E11-0625-05	CYLINDRICAL RECEPTACLE CYLINDRICAL RECEPTACLE CYLINDRICAL RECEPTACLE PHONE JACK (IPOD-A) PHONE JACK (IPOD-A)	KM1M2 R2Q1Q2 X1ER1 K3 R2K2E2
C672 C673 C691 C701,702 C703			CK73FB0J106K CK73GB1H103K CK73GB1H104K CK73FB0J106K CE32BQ1E680M	CHIP C 10UF K CHIP C 0.010UF K CHIP C 0.10UF K CHIP C 10UF K CHIP EL 68UF 25WV	△	J502 J502 J681 W801			E04-0433-05 E04-0433-05 E11-0625-05 E30-6777-05	RF COAXIAL CABLE RECEPTACLE RF COAXIAL CABLE RECEPTACLE PHONE JACK (IPOD-A) CORD WITH CONNECTOR (USB CABLE)	K3 R2K2E2
C704 C705-725 C726,727 C728 C729,730			CK73GB1A105K CK73GB1H104K CC73HCH1H100D CK73GB1H104K CC73HCH1H220J	CHIP C 1.0UF K CHIP C 0.10UF K CHIP C 10PF D CHIP C 0.10UF K CHIP C 22PF J		L1 L100-103 L104-107 L108 L201			L33-2358-05 L33-2369-05 L33-2455-05 L92-0373-05 L92-0319-05	CHOKE COIL CHOKE COIL CHOKE COIL CHIP FERRITE CHIP FERRITE	
C731 C732 C741 C742-748 C751			CK73FB0J106K CK73GB1H104K CK73GB0J475K CK73GB1H104K CK73GB0J475K	CHIP C 10UF K CHIP C 0.10UF K CHIP C 4.7UF K CHIP C 0.10UF K CHIP C 4.7UF K		L203 L204 L300 L300 L300			L92-0319-05 L41-1005-33 L92-0373-05 L92-0373-05 L92-0373-05	CHIP FERRITE SMALL FIXED INDUCTOR (10U) CHIP FERRITE CHIP FERRITE CHIP FERRITE	KM1M2 K1E1K2 K3
						L300 L300 L302			L92-0373-05 L92-0373-05 L33-2369-05	CHIP FERRITE CHIP FERRITE CHOKE COIL	R2Q1Q2 X1ER1

E: DDX5024 E1: DNX5240 E2: DNX5240BT (Europe) Q1: DDX5054 Q2: DDX54R (Russian)

K: DDX514 K1: DNX5140 K2: DNX6140 K3: DNX6000EX (North America)

X1: DDX5034 (Australia) R1: DDX5034 R2: DDX5034BT (Latin America)

M1: DDX5034 M2: DDX5034M (Other Areas)

△Indicates safety critical components.

PARTS LIST

VIDEO CONTROL UNIT (X15-124x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination	Ref. No.	Add	New	Parts No.	Description	Destination
L303			L92-0329-05	CHIP FERRITE		R161-165			RK73GB2A000J	CHIP R 0.0 J 1/10W	
L401			L33-2369-05	CHOKE COIL	E1E2	R201,202			RK73HB1J202J	CHIP R 2.0K J 1/16W	
L401			L33-2369-05	CHOKE COIL	K1K2K3	R203			RK73EB2E100J	CHIP R 10 J 1/4W	
L501,502			L92-0373-05	CHIP FERRITE	K3	R204			RK73HB1J223J	CHIP R 22K J 1/16W	
L501,502			L92-0373-05	CHIP FERRITE	R2K2E2	R205,206			RK73EB2E100J	CHIP R 10 J 1/4W	
L601,602			L92-0319-05	CHIP FERRITE		R207			RK73HB1J223J	CHIP R 22K J 1/16W	
L701-706			L92-0373-05	CHIP FERRITE		R208			RK73EB2E100J	CHIP R 10 J 1/4W	
L731			L92-0373-05	CHIP FERRITE		R209			RK73GB2A222J	CHIP R 2.2K J 1/10W	
L741			L92-0373-05	CHIP FERRITE		R210			RK73FB2B101J	CHIP R 100 J 1/8W	
L751			L92-0373-05	CHIP FERRITE		R211			RK73GB2A750J	CHIP R 75 J 1/10W	
L801			L92-0642-05	CHIP FERRITE		R212			RK73EB2E101J	CHIP R 100 J 1/4W	
L803			L92-0642-05	CHIP FERRITE		R213			RK73GB2A102J	CHIP R 1.0K J 1/10W	
L804,805			L92-0641-05	FERRITE CORE		R215			RK73HB1J100J	CHIP R 10 J 1/16W	
L806			L92-0651-05	CHIP FERRITE	KM1M2	R228			RK73GH2A471D	CHIP R 470 D 1/10W	
L806			L92-0651-05	CHIP FERRITE	R2Q1Q2	R229			RK73HB1J332J	CHIP R 3.3K J 1/16W	
L806			L92-0651-05	CHIP FERRITE	X1ER1	R236-238			RK73GH2A102D	CHIP R 1.0K D 1/10W	
L806,807			L92-0651-05	CHIP FERRITE	E1E2	R239			RK73HB1J103J	CHIP R 10K J 1/16W	
L806,807			L92-0651-05	CHIP FERRITE	K1K2K3	R241			RK73GH2A102D	CHIP R 1.0K D 1/10W	
L808			L92-0641-05	FERRITE CORE	E1E2	R243			RK73HB1J101J	CHIP R 100 J 1/16W	
L808			L92-0641-05	FERRITE CORE	K1K2K3	R244			RK73HB1J103J	CHIP R 10K J 1/16W	
L811			L92-0373-05	CHIP FERRITE		R245			RK73GH2A102D	CHIP R 1.0K D 1/10W	
X701			L77-2866-05	CRYSTAL RESONATOR (27MHZ)		R246-249			RK73HB1J105J	CHIP R 1.0M J 1/16W	
X801			L77-2943-05	CRYSTAL RESONATOR (24.000MHZ)		R250			RK73HB1J103J	CHIP R 10K J 1/16W	
F	1D		N35-2003-48	BINDING HEAD MACHINE SCREW	K2E2K3	R253			RK73HB1J332J	CHIP R 3.3K J 1/16W	
H	1D		N82-2608-48	BINDING HEAD TAPTITE SCREW		R254			RK73GH2A102D	CHIP R 1.0K D 1/10W	
CP701-708			RK74HB1J220J	CHIP-COM 22 J 1/16W		R255,256			RK73HB1J105J	CHIP R 1.0M J 1/16W	
CP709-713			RK74HB1J100J	CHIP-COM 10 J 1/16W		R257,258			RK73HB1J101J	CHIP R 100 J 1/16W	
CP714,715			RK74HB1J220J	CHIP-COM 22 J 1/16W		R259			RK73HB1J103J	CHIP R 10K J 1/16W	
CP721-724			RK74HB1J330J	CHIP-COM 33 J 1/16W		R265			RK73GH2A102D	CHIP R 1.0K D 1/10W	
CP751,752			RK74HB1J103J	CHIP-COM 10K J 1/16W		R266			RK73EB2E750J	CHIP R 75 J 1/4W	
CP753,754			RK74HB1J220J	CHIP-COM 22 J 1/16W		R270			RK73GB2A750J	CHIP R 75 J 1/10W	
R6			RK73GB2A823J	CHIP R 82K J 1/10W		R271			RK73EB2E101J	CHIP R 100 J 1/4W	
R7			RK73GB2A103J	CHIP R 10K J 1/10W		R272			RK73HB1J100J	CHIP R 10 J 1/16W	
R8			RK73GB2A224J	CHIP R 220K J 1/10W		R283			RK73HB1J103J	CHIP R 10K J 1/16W	E1E2
R9			RK73GB2A333J	CHIP R 33K J 1/10W		R283			RK73HB1J103J	CHIP R 10K J 1/16W	K1K2K3
R10			RK73GB2A224J	CHIP R 220K J 1/10W		R284			RK73HB1J000J	CHIP R 0.0 J 1/16W	KM1M2
R101			RK73GH2A681D	CHIP R 680 D 1/10W		R284			RK73HB1J000J	CHIP R 0.0 J 1/16W	R2Q1Q2
R102			RK73GH2A221D	CHIP R 220 D 1/10W		R284-289			RK73HB1J102J	CHIP R 1.0K J 1/16W	X1ER1
R103,104			RK73GH2A561D	CHIP R 560 D 1/10W		R284-289			RK73HB1J102J	CHIP R 1.0K J 1/16W	E1E2
R105-108			RK73GB2A683J	CHIP R 68K J 1/10W							K1K2K3
R109			RK73GB2A103J	CHIP R 10K J 1/10W		R286			RK73HB1J000J	CHIP R 0.0 J 1/16W	KM1M2
R110			RK73GH2A562D	CHIP R 5.6K D 1/10W		R286			RK73HB1J000J	CHIP R 0.0 J 1/16W	R2Q1Q2
R111			RK73GB2A103J	CHIP R 10K J 1/10W		R286			RK73HB1J000J	CHIP R 0.0 J 1/16W	X1ER1
R112			RK73GH2A472D	CHIP R 4.7K D 1/10W		R288			RK73HB1J000J	CHIP R 0.0 J 1/16W	KM1M2
R113			RK73GH2A562D	CHIP R 5.6K D 1/10W		R288			RK73HB1J000J	CHIP R 0.0 J 1/16W	R2Q1Q2
R114			RK73GH2A103D	CHIP R 10K D 1/10W		R288			RK73HB1J000J	CHIP R 0.0 J 1/16W	X1ER1
R119-122			RK73GH2A333D	CHIP R 33K D 1/10W		R304,305			RK73HB1J101J	CHIP R 100 J 1/16W	KM1M2
R135,136			RK73GB2A220J	CHIP R 22 J 1/10W		R304,305			RK73HB1J101J	CHIP R 100 J 1/16W	K1E1K2
R139			RK73GB2A220J	CHIP R 22 J 1/10W		R304,305			RK73HB1J101J	CHIP R 100 J 1/16W	K3
R142			RK73GB2A220J	CHIP R 22 J 1/10W		R304,305			RK73HB1J101J	CHIP R 100 J 1/16W	R2Q1Q2
R143-152			RK73EB2E100J	CHIP R 10 J 1/4W		R304,305			RK73HB1J101J	CHIP R 100 J 1/16W	X1ER1
R153-156			R92-5158-05	CHIP R 0.022 J 1/4W		R310			RK73HB1J472J	CHIP R 4.7K J 1/16W	KM1M2
R158			R92-5159-05	CHIP R 0.033 J 1/4W		R310			RK73HB1J472J	CHIP R 4.7K J 1/16W	K1E1K2
R159			R92-5158-05	CHIP R 0.022 J 1/4W		R310			RK73HB1J472J	CHIP R 4.7K J 1/16W	K3
						R310			RK73HB1J472J	CHIP R 4.7K J 1/16W	R2Q1Q2

E: DDX5024 E1: DNX5240 E2: DNX5240BT (Europe) Q1: DDX5054 Q2: DDX54R (Russian)

K: DDX514 K1: DNX5140 K2: DNX6140 K3: DNX6000EX (North America)

X1: DDX5034 (Australia) R1: DDX5034 R2: DDX5034BT (Latin America)

M1: DDX5034 M2: DDX5034M (Other Areas)

△ Indicates safety critical components.

PARTS LIST

VIDEO CONTROL UNIT (X15-124x-xx)

Ref. No.	Ad	New	Parts No.	Description	Destination	Ref. No.	Ad	New	Parts No.	Description	Destination
R310			RK73HB1J472J	CHIP R 4.7K J 1/16W	X1ER1	R509			RK73HB1J473J	CHIP R 47K J 1/16W	R2K2E2
R311-314			RK73HB1J103J	CHIP R 10K J 1/16W	KM1M2	R512,513			RK73EB2E101J	CHIP R 100 J 1/4W	K3
R311-314			RK73HB1J103J	CHIP R 10K J 1/16W	K1E1K2	R512,513			RK73EB2E101J	CHIP R 100 J 1/4W	R2K2E2
R311-314			RK73HB1J103J	CHIP R 10K J 1/16W	K3	R603			RK73GH2A471D	CHIP R 470 D 1/10W	
R311-314			RK73HB1J103J	CHIP R 10K J 1/16W	R2Q1Q2	R604-606			RK73GH2A102D	CHIP R 1.0K D 1/10W	
R311-314			RK73HB1J103J	CHIP R 10K J 1/16W	X1ER1	R613			RK73GH2A331D	CHIP R 330 D 1/10W	
R403			RK73EB2E102J	CHIP R 1.0K J 1/4W	E1E2	R614			RK73GH2A150D	CHIP R 15 D 1/10W	
R403			RK73EB2E102J	CHIP R 1.0K J 1/4W	K1K2K3	R620-625			RK73GH2A750D	CHIP R 75 D 1/10W	
R403-405			RK73EB2E102J	CHIP R 1.0K J 1/4W	KM1M2	R626			RK73GH2A240D	CHIP R 24 D 1/10W	
R403-405			RK73EB2E102J	CHIP R 1.0K J 1/4W	R2Q1Q2	R627			RK73GH2A151D	CHIP R 150 D 1/10W	
R403-405			RK73EB2E102J	CHIP R 1.0K J 1/4W	X1ER1	R629			RK73GH2A750D	CHIP R 75 D 1/10W	
R404			RK73EB2E101J	CHIP R 100 J 1/4W	E1E2	R651-654			RK73HB1J220J	CHIP R 22 J 1/16W	
R404			RK73EB2E101J	CHIP R 100 J 1/4W	K1K2K3	R655			RK73GH2A333D	CHIP R 33K D 1/10W	
R405			RK73EB2E102J	CHIP R 1.0K J 1/4W	E1E2	R656			RK73GH2A393D	CHIP R 39K D 1/10W	
R405			RK73EB2E102J	CHIP R 1.0K J 1/4W	K1K2K3	R657			RK73GH2A562D	CHIP R 5.6K D 1/10W	
R406			RK73HB1J101J	CHIP R 100 J 1/16W		R658-660			RK73GB2A2R2J	CHIP R 2.2 J 1/10W	
R412-415			RK73GB2A750J	CHIP R 75 J 1/10W	KM1M2	R661,662			RK73HB1J103J	CHIP R 10K J 1/16W	
R412-415			RK73GB2A750J	CHIP R 75 J 1/10W	R2Q1Q2	R663,664			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R412-415			RK73GB2A750J	CHIP R 75 J 1/10W	X1ER1	R665,666			RK73HB1J752J	CHIP R 7.5K J 1/16W	
R416			RK73EB2E101J	CHIP R 100 J 1/4W	KM1M2	R667,668			RK73HB1J471J	CHIP R 470 J 1/16W	
R416			RK73EB2E101J	CHIP R 100 J 1/4W	R2Q1Q2	R669-672			RK73HB1J473J	CHIP R 47K J 1/16W	
R416			RK73EB2E101J	CHIP R 100 J 1/4W	X1ER1	R673,674			RK73HB1J103J	CHIP R 10K J 1/16W	
R417			RK73HB1J100J	CHIP R 10 J 1/16W	KM1M2	R675			RK73HB1J272J	CHIP R 2.7K J 1/16W	
R417			RK73HB1J100J	CHIP R 10 J 1/16W	R2Q1Q2	R681			RK73HB1J103J	CHIP R 10K J 1/16W	
R417			RK73HB1J100J	CHIP R 10 J 1/16W	X1ER1	R683-686			RK73HB1J220J	CHIP R 22 J 1/16W	
R418			RK73EB2E101J	CHIP R 100 J 1/4W	KM1M2	R687			RK73HB1J103J	CHIP R 10K J 1/16W	
R418			RK73EB2E101J	CHIP R 100 J 1/4W	R2Q1Q2	R688			RK73HB1J220J	CHIP R 22 J 1/16W	
R418			RK73EB2E101J	CHIP R 100 J 1/4W	X1ER1	R696			RK73HB1J220J	CHIP R 22 J 1/16W	
R419			RK73HB1J100J	CHIP R 10 J 1/16W	KM1M2	R697			RK73FB2B151J	CHIP R 150 J 1/8W	
R419			RK73HB1J100J	CHIP R 10 J 1/16W	R2Q1Q2	R698			RK73GB2A151J	CHIP R 150 J 1/10W	
R419			RK73HB1J100J	CHIP R 10 J 1/16W	X1ER1	R703			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R420			RK73EB2E101J	CHIP R 100 J 1/4W	KM1M2	R704			RK73HB1J101J	CHIP R 100 J 1/16W	
R420			RK73EB2E101J	CHIP R 100 J 1/4W	R2Q1Q2	R709-712			RK73HB1J220J	CHIP R 22 J 1/16W	
R420			RK73EB2E101J	CHIP R 100 J 1/4W	X1ER1	R713			RK73HB1J100J	CHIP R 10 J 1/16W	
R421			RK73HB1J100J	CHIP R 10 J 1/16W	KM1M2	R732-738			RK73HB1J220J	CHIP R 22 J 1/16W	
R421			RK73HB1J100J	CHIP R 10 J 1/16W	R2Q1Q2	R739,740			RK73HB1J101J	CHIP R 100 J 1/16W	
R421			RK73HB1J100J	CHIP R 10 J 1/16W	X1ER1	R742-746			RK73HB1J101J	CHIP R 100 J 1/16W	
R422			RK73EB2E101J	CHIP R 100 J 1/4W	KM1M2	R748-753			RK73HB1J220J	CHIP R 22 J 1/16W	
R422			RK73EB2E101J	CHIP R 100 J 1/4W	R2Q1Q2	R754-756			RK73HB1J101J	CHIP R 100 J 1/16W	
R422			RK73EB2E101J	CHIP R 100 J 1/4W	X1ER1	R758			RK73HB1J105J	CHIP R 1.0M J 1/16W	
R423			RK73HB1J100J	CHIP R 10 J 1/16W	KM1M2	R759			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R423			RK73HB1J100J	CHIP R 10 J 1/16W	R2Q1Q2	R761			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R423			RK73HB1J100J	CHIP R 10 J 1/16W	X1ER1	R763,764			RK73HB1J100J	CHIP R 10 J 1/16W	
R424			RK73EB2E100J	CHIP R 10 J 1/4W		R769			RK73GH2A153D	CHIP R 15K D 1/10W	
R425			RK73EB2E4R7J	CHIP R 4.7 J 1/4W		R770			RK73GH2A123D	CHIP R 12K D 1/10W	
R428			RK73EB2E100J	CHIP R 10 J 1/4W		R772			RK73HB1J103J	CHIP R 10K J 1/16W	
R501,502			RK73HB1J104J	CHIP R 100K J 1/16W	K3	R774			RK73HB1J103J	CHIP R 10K J 1/16W	
R501,502			RK73HB1J104J	CHIP R 100K J 1/16W	R2K2E2	R776			RK73HB1J103J	CHIP R 10K J 1/16W	
R503,504			RK73HB1J223J	CHIP R 22K J 1/16W	K3	R777			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R503,504			RK73HB1J223J	CHIP R 22K J 1/16W	R2K2E2	R795-797			RK73HB1J103J	CHIP R 10K J 1/16W	
R505,506			RK73HB1J104J	CHIP R 100K J 1/16W	K3	R805,806			RK73EB2E4R7J	CHIP R 4.7 J 1/4W	
R505,506			RK73HB1J104J	CHIP R 100K J 1/16W	R2K2E2	R808,809			RK73EB2E4R7J	CHIP R 4.7 J 1/4W	E1E2
R507,508			RK73HB1J223J	CHIP R 22K J 1/16W	K3	R808,809			RK73EB2E4R7J	CHIP R 4.7 J 1/4W	K1K2K3
R507,508			RK73HB1J223J	CHIP R 22K J 1/16W	R2K2E2	R812			RK73HB1J103J	CHIP R 10K J 1/16W	
R509			RK73HB1J473J	CHIP R 47K J 1/16W	K3	R814			RK73HB1J103J	CHIP R 10K J 1/16W	

E: DDX5024 E1: DNX5240 E2: DNX5240BT (Europe) Q1: DDX5054 Q2: DDX54R (Russian)

△Indicates safety critical components.

K: DDX514 K1: DNX5140 K2: DNX6140 K3: DNX6000EX (North America)

X1: DDX5034 (Australia) R1: DDX5034 R2: DDX5034BT (Latin America)

M1: DDX5034 M2: DDX5034M (Other Areas)

PARTS LIST

VIDEO CONTROL UNIT (X15-124x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination	Ref. No.	Add	New	Parts No.	Description	Destination
R815			RK73GH2A622D	CHIP R 6.2K D 1/10W		D501			STZ6.8N	ZENER DIODE	R2K2E2
R821			RK73GH2A622D	CHIP R 6.2K D 1/10W		D681			AVRM16270MAAB	VARISTOR	
R823			RK73HB1J103J	CHIP R 10K J 1/16W		D801,802			AVRL1613R3FTA	VARISTOR	
R825			RK73HB1J102J	CHIP R 1.0K J 1/16W		IC100,101			LTC3728LEGN	ANALOGUE IC	
R826			RK73HB1J103J	CHIP R 10K J 1/16W		IC201			NJM2794RB2ZB	ANALOGUE IC	
R846			RK73HB1J000J	CHIP R 0.0 J 1/16W		IC202			NJM2505AF-ZB	ANALOGUE IC	
R849			RK73GB2A332J	CHIP R 3.3K J 1/10W		IC203			XC6201P502PR	ANALOGUE IC	
R851			RK73HB1J473J	CHIP R 47K J 1/16W		IC205			AN15885A-VF	ANALOGUE IC	
R853-856			RK73HB1J103J	CHIP R 10K J 1/16W		IC206			MM1508XNRE-E	ANALOGUE IC	
R857-860			RK73HB1J152J	CHIP R 1.5K J 1/16W		IC207			NJM2286V-ZB	ANALOGUE IC	
R861			RK73HB1J472J	CHIP R 4.7K J 1/16W	KM1M2	IC301			74AHCT08PW	MOS-IC	KM1M2
R861			RK73HB1J472J	CHIP R 4.7K J 1/16W	K1E1K2	IC301			74AHCT08PW	MOS-IC	K1E1K2
R861			RK73HB1J472J	CHIP R 4.7K J 1/16W	K3	IC301			74AHCT08PW	MOS-IC	K3
R861			RK73HB1J472J	CHIP R 4.7K J 1/16W	R2Q1Q2	IC301			74AHCT08PW	MOS-IC	R2Q1Q2
R861			RK73HB1J472J	CHIP R 4.7K J 1/16W	X1ER1	IC301			74AHCT08PW	MOS-IC	X1ER1
R861,862			RK73HB1J472J	CHIP R 4.7K J 1/16W	E2	IC501			NJM4565V-ZB	ANALOGUE IC	K3
R863-880			RK73HB1J103J	CHIP R 10K J 1/16W		IC501			NJM4565V-ZB	ANALOGUE IC	R2K2E2
R881			RK73HB1J202J	CHIP R 2.0K J 1/16W		IC502			TC7WH126FU-F	MOS-IC	K3
R883			RK73HB1J103J	CHIP R 10K J 1/16W		IC502			TC7WH126FU-F	MOS-IC	R2K2E2
R886			RK73HB1J473J	CHIP R 47K J 1/16W		IC601			MM1671XNRE	ANALOGUE IC	
R887			RK73HB1J103J	CHIP R 10K J 1/16W		IC602			NJM2573V-ZB	ANALOGUE IC	
R890			RK73FB2B000J	CHIP R 0.0 J 1/8W		IC651			PCM1754DB	MOS-IC	
R892			RK73GB2A103J	CHIP R 10K J 1/10W		IC652			NJM4565V-ZB	ANALOGUE IC	
R893			RK73HB1J102J	CHIP R 1.0K J 1/16W		IC654			NJM4565V-ZB	ANALOGUE IC	
R895,896			RK73HB1J000J	CHIP R 0.0 J 1/16W		IC701			MS8312A-CMG	MICROPROCESSOR IC	
R898			RK73HB1J103J	CHIP R 10K J 1/16W		IC702		*	S29GL64A9I6B5	ROM IC	
R899			RK73HB1J331J	CHIP R 330 J 1/16W		IC703,704		*	A3V28S40ETPG6	DRAM IC	
R900			RK73HB1J220J	CHIP R 22 J 1/16W		IC705			SI-3010KD	ANALOGUE IC	
R905,906			RK73HB1J220J	CHIP R 22 J 1/16W		IC801			S1R72C05F15	MOS-IC	
R913,914			RK73HB1J105J	CHIP R 1.0M J 1/16W		IC804			MIC2005-08YM6	MOS-IC	
L503			T90-0587-05	CHIP ANTENNA	K3	IC805			XC6219B332PR	ANALOGUE IC	
L503			T90-0587-05	CHIP ANTENNA	R2K2E2	IC806			XC6219B182PR	ANALOGUE IC	
D100-103			1SS357-F	DIODE		IC852			MFI341S2162	MICROPROCESSOR IC	
D201			DAP202U	DIODE		IC853			74AHC573PW	MOS-IC	
D202			UDZW4.7(B)	ZENER DIODE		Q1		*	KRC406-P	DIGITAL TRANSISTOR	
D203			AVRM16270MAAB	VARISTOR		Q2 ,3			2SA1576A	TRANSISTOR	
D204-206			AVRM16120M6AB	VARISTOR		Q4			TPC8110-F	FET	
D207			AVRM16270MAAB	VARISTOR		Q100-103		*	KRC408-P	DIGITAL TRANSISTOR	
D212,213			AVRM16270MAAB	VARISTOR		Q104-107			HAT2218R-E	DUAL FET	
D301			1SS355	DIODE	KM1M2	Q301,302			2SC4081	TRANSISTOR	KM1M2
D301			1SS355	DIODE	K1E1K2	Q301,302			2SC4081	TRANSISTOR	K1E1K2
D301			1SS355	DIODE	K3	Q301,302			2SC4081	TRANSISTOR	K3
D301			1SS355	DIODE	R2Q1Q2	Q301,302			2SC4081	TRANSISTOR	R2Q1Q2
D301			1SS355	DIODE	X1ER1	Q301,302			2SC4081	TRANSISTOR	X1ER1
D400-403			UDZW6.2(B)	ZENER DIODE	KM1M2	Q303			UMG2N	TRANSISTOR	KM1M2
D400-403			UDZW6.2(B)	ZENER DIODE	R2Q1Q2	Q303			UMG2N	TRANSISTOR	K1E1K2
D400-403			UDZW6.2(B)	ZENER DIODE	X1ER1	Q303			UMG2N	TRANSISTOR	K3
D404			STZ6.8N	ZENER DIODE	KM1M2	Q303			UMG2N	TRANSISTOR	R2Q1Q2
D404			STZ6.8N	ZENER DIODE	R2Q1Q2	Q303			UMG2N	TRANSISTOR	X1ER1
D404			STZ6.8N	ZENER DIODE	X1ER1	Q651			2SA1576A	TRANSISTOR	
D405-408			AVRM16270MAAB	VARISTOR	KM1M2	Q652			2SC4081	TRANSISTOR	
D405-408			AVRM16270MAAB	VARISTOR	R2Q1Q2	Q653			2SA1576A	TRANSISTOR	
D405-408			AVRM16270MAAB	VARISTOR		Q681			2SA1576A	TRANSISTOR	
D405-408			AVRM16270MAAB	VARISTOR		Q682			2SC4081	TRANSISTOR	
D501			STZ6.8N	ZENER DIODE	X1ER1						
					K3						

E: DDX5024 E1: DNX5240 E2: DNX5240BT (Europe) Q1: DDX5054 Q2: DDX54R (Russian)

K: DDX514 K1: DNX5140 K2: DNX6140 K3: DNX6000EX (North America)

X1: DDX5034 (Australia) R1: DDX5034 R2: DDX5034BT (Latin America)

M1: DDX5034 M2: DDX5034M (Other Areas)

△ Indicates safety critical components.

PARTS LIST

VIDEO CONTROL UNIT (X15-124x-xx)

Ref. No.	Ad	New	Parts No.	Description	Destination
A501			W02-5292-25	ELECTRIC CIRCUIT MODULE (BT)	K3
A501			W02-5292-25	ELECTRIC CIRCUIT MODULE (BT)	R2K2E2
ELECTRIC UNIT (X34-575x-xx)					
C1			CK73FB1E474K	CHIP C 0.47UF K	
C2			CK73GB1H222K	CHIP C 2200PF K	
C4			C90-6851-05	ELECTRO 220UF 25WV	
C6			CK73GB1H222K	CHIP C 2200PF K	
C8			CK73GB1H103K	CHIP C 0.010UF K	
C9 ,10			CK73GB1H222K	CHIP C 2200PF K	
C14			CK73FB1A335K	CHIP C 3.3UF K	
C15			CK73GB1A105K	CHIP C 1.0UF K	
C16			CK73GB1H103K	CHIP C 0.010UF K	
C17			CK73GB1A105K	CHIP C 1.0UF K	
C18 ,19			CK73GB1H222K	CHIP C 2200PF K	
C20			CK73GB1H103K	CHIP C 0.010UF K	E1E2
C20			CK73GB1H103K	CHIP C 0.010UF K	K1K2K3
C21			CK73FB0J106K	CHIP C 10UF K	
C24 ,25			CK73GB1H222K	CHIP C 2200PF K	
C26			CK73GB1H104K	CHIP C 0.10UF K	
C29			CD04AV0J101M	ELECTRO 100UF 6.3WV	
C30			CK73FB1C105K	CHIP C 1.0UF K	
C31			CK73GB1A105K	CHIP C 1.0UF K	
C32			CK73GB1H103K	CHIP C 0.010UF K	
C33			CK73GB1A105K	CHIP C 1.0UF K	
C34	*		CD04BN1C221M	ELECTRO 220UF 16WV	
C35			CK73GB1A105K	CHIP C 1.0UF K	
C36			CC73GCH1H101J	CHIP C 100PF J	EQ1Q2
C36			CC73GCH1H101J	CHIP C 100PF J	E1E2
C37			CK73GB1H103K	CHIP C 0.010UF K	
C38			C93-1470-05	CHIP C 15000PF K	EQ1Q2
C38			C93-1470-05	CHIP C 15000PF K	E2
C38			C93-1470-05	CHIP C 15000PF K	M1M2E1
C41			CK73GB1A105K	CHIP C 1.0UF K	
C43 -45			CK73GB1H103K	CHIP C 0.010UF K	
C46			CK73FB1E474K	CHIP C 0.47UF K	
C47			C90-5612-05	ELECTRO 3900UF 16WV	
C51 -54			CC73GCH1H101J	CHIP C 100PF J	
C100			CK73GB1H104K	CHIP C 0.10UF K	
C101			CK73GB1H103K	CHIP C 0.010UF K	
C102			CK73GB1H104K	CHIP C 0.10UF K	
C104			CK73GB1H104K	CHIP C 0.10UF K	
C106			CK73GB1H103K	CHIP C 0.010UF K	
C108			CC73GCH1H220J	CHIP C 22PF J	
C109			CC73GCH1H180J	CHIP C 18PF J	
C110			CK73FB0J106K	CHIP C 10UF K	
C111			CK73GB1H473K	CHIP C 0.047UF K	
C112			CK73GB1H102K	CHIP C 1000PF K	
C113			CK73GB1H103K	CHIP C 0.010UF K	
C114			CD04AV0J101M	ELECTRO 100UF 6.3WV	
C115,116			CK73GB1H103K	CHIP C 0.010UF K	
C117			CK73GB1H104K	CHIP C 0.10UF K	
C119			CK73GB1H104K	CHIP C 0.10UF K	
C120			CK73GB1H102K	CHIP C 1000PF K	
C121			CK73GB1H104K	CHIP C 0.10UF K	

Ref. No.	Ad	New	Parts No.	Description	Destination
C122,123			CK73GB1H103K	CHIP C 0.010UF K	
C124			CK73GB1H104K	CHIP C 0.10UF K	
C125			CK73GB1H102K	CHIP C 1000PF K	
C126-129			CK73GB1H104K	CHIP C 0.10UF K	
C132,133			CC73GCH1H070D	CHIP C 7.0PF D	
C302			CD04AV1C470M	ELECTRO 47UF 16WV	
C303,304			CK73GB1A474K	CHIP C 0.47UF K	
C305,306			CE32BJ1H2R2M	CHIP EL 2.2UF 50WV	
C307,308			CK73GB1A474K	CHIP C 0.47UF K	
C315			CK73GB1H103K	CHIP C 0.010UF K	R2K2K3
C316			CK73GB1A105K	CHIP C 1.0UF K	
C318			CE32BJ1C100M	CHIP EL 10UF 16WV	
C321			CK73GB1H103K	CHIP C 0.010UF K	
C322			CE32BJ1C100M	CHIP EL 10UF 16WV	
C323,324			CK73GB1H103K	CHIP C 0.010UF K	
C325			CK73FB1A335K	CHIP C 3.3UF K	
C326			CK73GB1A105K	CHIP C 1.0UF K	
C327			CK73FB1A335K	CHIP C 3.3UF K	
C328,329			CK73GB1A105K	CHIP C 1.0UF K	
C330-332			CE32BJ1H010M	CHIP EL 1.0UF 50WV	
C334			CK73FB1E474K	CHIP C 0.47UF K	
C335			CE32BJ0J470M	CHIP EL 47UF 6.3WV	
C336			CK73FB1E474K	CHIP C 0.47UF K	
C400	*		CD04AV1C220M	ELECTRO 22UF 16WV	EQ1Q2
C400	*		CD04AV1C220M	ELECTRO 22UF 16WV	E1E2
C400	*		CD04AV1C220M	ELECTRO 22UF 16WV	M1M2X1
C401			CK73GB1H103K	CHIP C 0.010UF K	EQ1Q2
C401			CK73GB1H103K	CHIP C 0.010UF K	E1E2
C401			CK73GB1H103K	CHIP C 0.010UF K	M1M2X1
C402-405			CK73GB1A474K	CHIP C 0.47UF K	EQ1Q2
C402-405			CK73GB1A474K	CHIP C 0.47UF K	E1E2
C402-405			CK73GB1A474K	CHIP C 0.47UF K	M1M2X1
C417-420			CK73GB1A474K	CHIP C 0.47UF K	KM1M2
C417-420			CK73GB1A474K	CHIP C 0.47UF K	K1E1K2
C417-420			CK73GB1A474K	CHIP C 0.47UF K	K3
C417-420			CK73GB1A474K	CHIP C 0.47UF K	R2Q1Q2
C417-420			CK73GB1A474K	CHIP C 0.47UF K	X1ER1
C424			CK73GB1H104K	CHIP C 0.10UF K	KM1M2
C424			CK73GB1H104K	CHIP C 0.10UF K	K1E1K2
C424			CK73GB1H104K	CHIP C 0.10UF K	K3
C424			CK73GB1H104K	CHIP C 0.10UF K	R2Q1Q2
C424			CK73GB1H104K	CHIP C 0.10UF K	X1ER1
C425	*		CD04AV1C220M	ELECTRO 22UF 16WV	KM1M2
C425	*		CD04AV1C220M	ELECTRO 22UF 16WV	K1E1K2
C425	*		CD04AV1C220M	ELECTRO 22UF 16WV	K3
C425	*		CD04AV1C220M	ELECTRO 22UF 16WV	R2Q1Q2
C425	*		CD04AV1C220M	ELECTRO 22UF 16WV	X1ER1
C426,427			CK73GB1H103K	CHIP C 0.010UF K	KM1M2
C426,427			CK73GB1H103K	CHIP C 0.010UF K	K1E1K2
C426,427			CK73GB1H103K	CHIP C 0.010UF K	K3
C426,427			CK73GB1H103K	CHIP C 0.010UF K	R2Q1Q2
C426,427			CK73GB1H103K	CHIP C 0.010UF K	X1ER1
C430			CK73GB1H103K	CHIP C 0.010UF K	EQ1Q2
C430			CK73GB1H103K	CHIP C 0.010UF K	E1E2
C430			CK73GB1H103K	CHIP C 0.010UF K	M1M2X1

E: DDX5024 E1: DNX5240 E2: DNX5240BT (Europe) Q1: DDX5054 Q2: DDX54R (Russian)

K: DDX514 K1: DNX5140 K2: DNX6140 K3: DNX6000EX (North America)

X1: DDX5034 (Australia) R1: DDX5034 R2: DDX5034BT (Latin America)

M1: DDX5034 M2: DDX5034M (Other Areas)

△Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-575x-xx)

Ref. No.	Added	New	Parts No.	Description			Destination	Ref. No.	Added	New	Parts No.	Description			Destination
C500			CK73GB1A105K	CHIP C	1.0UF	K		CN1			E41-2685-05	PIN ASSY			
C501			CC73GCH1H100D	CHIP C	10PF	D	KR1EQ1	CN800			E41-2979-05	FLAT CABLE CONNECTOR			
C501			CC73GCH1H100D	CHIP C	10PF	D	K3E1E2	CN801			E41-2980-05	FLAT CABLE CONNECTOR			
C501			CC73GCH1H100D	CHIP C	10PF	D	Q2M1M2	J1			E58-1043-05	RECTANGULAR RECEPTACLE (POWER)			
C501			CC73GCH1H100D	CHIP C	10PF	D	R2K1K2	J400			E58-1034-05	RECTANGULAR RECEPTACLE (TV-TU)			EQ1Q2
C502		*	CD04AV1C101M	ELECTRO	100UF	16WV		J400			E58-1034-05	RECTANGULAR RECEPTACLE (TV-TU)			E1E2
C512-514			CK73GB1H103K	CHIP C	0.010UF	K		J400			E58-1034-05	RECTANGULAR RECEPTACLE (TV-TU)			M1M2X1
C515			CK73GB1H102K	CHIP C	1000PF	K	E1E2	J401			E58-1097-05	RECTANGULAR RECEPTACLE (EXT-IF)			KM1M2
C520			CC73GCH1H100D	CHIP C	10PF	D	KR1EQ1	J401			E58-1097-05	RECTANGULAR RECEPTACLE (EXT-IF)			K1E1K2
C520			CC73GCH1H100D	CHIP C	10PF	D	K3E1E2	J401			E58-1097-05	RECTANGULAR RECEPTACLE (EXT-IF)			K3
C520			CC73GCH1H100D	CHIP C	10PF	D	Q2M1M2	J401			E58-1097-05	RECTANGULAR RECEPTACLE (EXT-IF)			R2Q1Q2
C520			CC73GCH1H100D	CHIP C	10PF	D	R2K1K2	J401			E58-1097-05	RECTANGULAR RECEPTACLE (EXT-IF)			X1ER1
C521			CK73GB1H103K	CHIP C	0.010UF	K	KR1EQ1	J700			E63-0953-05	RCA PIN JACK (L/R)			
C521			CK73GB1H103K	CHIP C	0.010UF	K	K3E1E2	W501			E30-6809-05	CORD WITH PLUG (ANT)			KM1M2
C521			CK73GB1H103K	CHIP C	0.010UF	K	Q2M1M2	W501			E30-6809-05	CORD WITH PLUG (ANT)			K1K2K3
C521			CK73GB1H103K	CHIP C	0.010UF	K	R2K1K2	W501			E30-6809-05	CORD WITH PLUG (ANT)			R2Q1Q2
C522			CD04AV1V100M	ELECTRO	10UF	35WV	KR1EQ1	W501			E30-6809-05	CORD WITH PLUG (ANT)			X1ER1
C522			CD04AV1V100M	ELECTRO	10UF	35WV	K3E1E2								
C522			CD04AV1V100M	ELECTRO	10UF	35WV	Q2M1M2	257	-		F12-0962-04	SHIELDING TUBE (IN F/E CASE)			E2
C522			CD04AV1V100M	ELECTRO	10UF	35WV	R2K1K2	257	-		F12-0962-04	SHIELDING TUBE (IN F/E CASE)			KR1EQ1
								257	-		F12-0962-04	SHIELDING TUBE (IN F/E CASE)			Q2M1M2
C523			CC73GCH1H331J	CHIP C	330PF	J	KR1EQ1	257	-		F12-0962-04	SHIELDING TUBE (IN F/E CASE)			X1K1E1
C523			CC73GCH1H331J	CHIP C	330PF	J	K3E1E2	F1			F53-0297-05	FUSE (UL,CSA) 1.6A			
C523			CC73GCH1H331J	CHIP C	330PF	J	Q2M1M2								
C523			CC73GCH1H331J	CHIP C	330PF	J	R2K1K2	F2			F53-0306-05	FUSE (UL,CSA) 5A			KM1M2
C523			CC73GCH1H331J	CHIP C	330PF	J	KR1EQ1	F2			F53-0306-05	FUSE (UL,CSA) 5A			K1E1K2
C524			CD04AV1V100M	ELECTRO	10UF	35WV	KR1EQ1	F2			F53-0306-05	FUSE (UL,CSA) 5A			K3
C524			CD04AV1V100M	ELECTRO	10UF	35WV	K3E1E2	F2			F53-0306-05	FUSE (UL,CSA) 5A			R2Q1Q2
C524			CD04AV1V100M	ELECTRO	10UF	35WV	Q2M1M2	F2			F53-0306-05	FUSE (UL,CSA) 5A			X1ER1
C524			CD04AV1V100M	ELECTRO	10UF	35WV	R2K1K2								
C526,527			CK73GB1H103K	CHIP C	0.010UF	K	KR1EQ1	L1			L33-2319-05	CHOKE COIL ASSY			
C526,527			CK73GB1H103K	CHIP C	0.010UF	K	K3E1E2	L100			L92-0319-05	CHIP FERRITE			
								L101			L41-4795-33	SMALL FIXED INDUCTOR (4.7U)			
C526,527			CK73GB1H103K	CHIP C	0.010UF	K	Q2M1M2	L501-504			L41-4795-33	SMALL FIXED INDUCTOR (4.7U)			KR1EQ1
C526,527			CK73GB1H103K	CHIP C	0.010UF	K	R2K1K2	L508			L41-4795-33	SMALL FIXED INDUCTOR (4.7U)			
C527			CK73GB1H103K	CHIP C	0.010UF	K	X1								
C600			C90-6779-05	ELECTRO	0.47UF	16WV		L508			L41-4795-33	SMALL FIXED INDUCTOR (4.7U)			K3E1E2
C602			C90-6779-05	ELECTRO	0.47UF	16WV		L508			L41-4795-33	SMALL FIXED INDUCTOR (4.7U)			Q2M1M2
								L508			L41-4795-33	SMALL FIXED INDUCTOR (4.7U)			R2K1K2
C616			CK73GB1A105K	CHIP C	1.0UF	K		L509			L92-0329-05	CHIP FERRITE			E1E2
C619			CD04BM1E330M	ELECTRO	33UF	25WV		X100			L77-2974-05	CRYSTAL RESONATOR (11.0592MHZ)			
C620,621			C90-6780-05	ELECTRO	1UF	16WV									
C623,624			C90-6779-05	ELECTRO	0.47UF	16WV		X101			L77-2921-15	CRYSTAL RESONATOR (32.768KHZ)			
C626			CK73GB1A105K	CHIP C	1.0UF	K		X500			L77-2002-05	CRYSTAL RESONATOR			KR1EQ1
								X500			L77-2002-05	CRYSTAL RESONATOR			K3E1E2
								X500			L77-2002-05	CRYSTAL RESONATOR			Q2M1M2
								X500			L77-2002-05	CRYSTAL RESONATOR			R2K1K2
C627			CC73GCH1H050C	CHIP C	5.0PF	C		B	2D		N35-2604-43	BINDING HEAD MACHINE SCREW			KM1M2
C700			CE32BJ1C100M	CHIP EL	10UF	16WV		B	2D		N35-2604-43	BINDING HEAD MACHINE SCREW			K1E1K2
C701,702			CK73GB1H102K	CHIP C	1000PF	K		B	2D		N35-2604-43	BINDING HEAD MACHINE SCREW			K3
C703,704			CE32BJ1C100M	CHIP EL	10UF	16WV		B	2D		N35-2604-43	BINDING HEAD MACHINE SCREW			R2Q1Q2
C705,706			CK73GB1H102K	CHIP C	1000PF	K		B	2D		N35-2604-43	BINDING HEAD MACHINE SCREW			X1ER1
C707			CE32BJ1C100M	CHIP EL	10UF	16WV									
C711			CE32BJ1C100M	CHIP EL	10UF	16WV									
C712,713			CK73GB1H102K	CHIP C	1000PF	K									
C714			CE32BJ1C100M	CHIP EL	10UF	16WV		K	3D		N09-6727-05	TAPTITE SCREW			
C715,716			CK73GB1H104K	CHIP C	0.10UF	K		L	2D		N82-3008-48	BINDING HEAD TAPTITE SCREW			
C800,801			CK73GB1H103K	CHIP C	0.010UF	K		R2			RK73FB2B221J	CHIP R	220	J	1/8W
C807,808			CK73GB1H222K	CHIP C	2200PF	K		R3			RK73GB2A103J	CHIP R	10K	J	1/10W
C809			CK73FB1C105K	CHIP C	1.0UF	K		R5			RK73FB2B223J	CHIP R	22K	J	1/8W
C810		*	CD04AV1C101M	ELECTRO	100UF	16WV		R6			RK73EB2E272J	CHIP R	2.7K	J	1/4W
C811			CK73GB1H103K	CHIP C	0.010UF	K		R7			RK73GB2A101J	CHIP R	100	J	1/10W

E: DDX5024 **E1:** DNX5240 **E2:** DNX5240BT (Europe) **Q1:** DDX5054 **Q2:** DDX54R (Russian)

⚠ Indicates safety critical components.

K: DDX514 **K1:** DNX5140 **K2:** DNX6140 **K3:** DNX6000EX (North America)

X1: DDX5034 (Australia) **R1:** DDX5034 **R2:** DDX5034BT (Latin America)

M1: DDX5034 **M2:** DDX5034M (Other Areas)

PARTS LIST

ELECTRIC UNIT (X34-575x-xx)

Ref. No.	Ad	New	Parts No.	Description	Destination	Ref. No.	Ad	New	Parts No.	Description	Destination
R8			RK73GB2A102J	CHIP R 1.0K J 1/10W		R101			RK73GB2A104J	CHIP R 100K J 1/10W	K1K2K3
R9			RK73GB2A101J	CHIP R 100 J 1/10W		R102			RK73GB2A473J	CHIP R 47K J 1/10W	
R10			RK73GB2A473J	CHIP R 47K J 1/10W		R106			RK73GB2A473J	CHIP R 47K J 1/10W	
R11			RK73GB2A100J	CHIP R 10 J 1/10W	E1E2	R107			RK73GB2A101J	CHIP R 100 J 1/10W	E1E2
R11			RK73GB2A100J	CHIP R 10 J 1/10W	K1K2K3	R107			RK73GB2A101J	CHIP R 100 J 1/10W	K1K2K3
R12			RK73FB2B472J	CHIP R 4.7K J 1/8W		R109			RK73GB2A473J	CHIP R 47K J 1/10W	EQ1Q2
R13			RK73GB2A223J	CHIP R 22K J 1/10W		R109			RK73GB2A473J	CHIP R 47K J 1/10W	E1E2
R14			RK73PB2H102J	CHIP R 1.0K J 1/2W		R109			RK73GB2A473J	CHIP R 47K J 1/10W	M1M2X1
R15			RK73GB2A473J	CHIP R 47K J 1/10W		R110			RK73GB2A104J	CHIP R 100K J 1/10W	E1E2
R16			RK73PB2H102J	CHIP R 1.0K J 1/2W		R110			RK73GB2A104J	CHIP R 100K J 1/10W	K1K2K3
R17			RK73GB2A103J	CHIP R 10K J 1/10W		R112			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R18			RK73EB2E103J	CHIP R 10K J 1/4W		R113			RK73GB2A473J	CHIP R 47K J 1/10W	
R19			RK73GB2A000J	CHIP R 0.0 J 1/10W	EQ1Q2	R114			RK73GB2A101J	CHIP R 100 J 1/10W	EQ1Q2
R19			RK73GB2A000J	CHIP R 0.0 J 1/10W	E1E2	R114			RK73GB2A101J	CHIP R 100 J 1/10W	E1E2
R20			RK73GB2A100J	CHIP R 10 J 1/10W		R114			RK73GB2A101J	CHIP R 100 J 1/10W	M1M2X1
R21			RK73GB2A223J	CHIP R 22K J 1/10W		R118			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R22			RK73EB2E272J	CHIP R 2.7K J 1/4W		R119			RK73GH2A333D	CHIP R 33K D 1/10W	
R23			RK73GH2A243D	CHIP R 24K D 1/10W		R120			RK73GH2A222D	CHIP R 2.2K D 1/10W	
R24			RK73GH2A432D	CHIP R 4.3K D 1/10W		R121			RK73GH2A153D	CHIP R 15K D 1/10W	
R25			RK73FB2B222J	CHIP R 2.2K J 1/8W		R122			RK73GB2A105J	CHIP R 1.0M J 1/10W	
R26			RK73GB2A102J	CHIP R 1.0K J 1/10W		R125			RK73GB2A473J	CHIP R 47K J 1/10W	EQ1Q2
R27			RK73GB2A103J	CHIP R 10K J 1/10W	KR1M1	R125			RK73GB2A473J	CHIP R 47K J 1/10W	E1E2
R27			RK73GB2A103J	CHIP R 10K J 1/10W	K1K2K3	R125			RK73GB2A473J	CHIP R 47K J 1/10W	M1M2X1
R27			RK73GB2A103J	CHIP R 10K J 1/10W	M2X1R2	R126,127			RK73GB2A103J	CHIP R 10K J 1/10W	
R28			RK73GB2A222J	CHIP R 2.2K J 1/10W	KR1M1	R128			RK73GB2A473J	CHIP R 47K J 1/10W	KR1R2
R28			RK73GB2A222J	CHIP R 2.2K J 1/10W		R128-131			RK73GB2A473J	CHIP R 47K J 1/10W	
R29			RK73GB2A105J	CHIP R 1.0M J 1/10W	K1K2K3	R128-131			RK73GB2A473J	CHIP R 47K J 1/10W	EQ1Q2
R30			RK73EB2E102J	CHIP R 1.0K J 1/4W	M2X1R2	R128-131			RK73GB2A473J	CHIP R 47K J 1/10W	E1E2
R31			RK73FB2B472J	CHIP R 4.7K J 1/8W		R130,131			RK73GB2A473J	CHIP R 47K J 1/10W	M1M2X1
R32			RK73GB2A104J	CHIP R 100K J 1/10W	KR1M1	R130,131			RK73GB2A473J	CHIP R 47K J 1/10W	KR1R2
R33 ,34			RK73PB2H102J	CHIP R 1.0K J 1/2W		R130,131			RK73GB2A473J	CHIP R 47K J 1/10W	
R33 ,34			RK73PB2H102J	CHIP R 1.0K J 1/2W	K1K2K3	R133,134			RK73GB2A473J	CHIP R 47K J 1/10W	
R33 ,34			RK73PB2H102J	CHIP R 1.0K J 1/2W	M2X1R2	R135			RK73GB2A101J	CHIP R 100 J 1/10W	
R35			RK73GB2A103J	CHIP R 10K J 1/10W	KR1M1	R136			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R35			RK73GB2A103J	CHIP R 10K J 1/10W		R137-142			RK73GB2A101J	CHIP R 100 J 1/10W	EQ1Q2
R35			RK73GB2A103J	CHIP R 10K J 1/10W	K1K2K3	R137-142			RK73GB2A101J	CHIP R 100 J 1/10W	E1E2
R36			RK73GB2A153J	CHIP R 15K J 1/10W	M2X1R2	R137-142			RK73GB2A101J	CHIP R 100 J 1/10W	M1M2X1
R37			RK73GB2A103J	CHIP R 10K J 1/10W		R139-141			RK73GB2A101J	CHIP R 100 J 1/10W	KR1R2
R38			RK73GB2A822J	CHIP R 8.2K J 1/10W		R139-141			RK73GB2A101J	CHIP R 100 J 1/10W	K1K2K3
R44			RK73GB2A683J	CHIP R 68K J 1/10W		R143			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R46			RK73EB2E103J	CHIP R 10K J 1/4W		R144			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R48			RK73GB2A473J	CHIP R 47K J 1/10W		R145			RK73GB2A473J	CHIP R 47K J 1/10W	
R49 ,50			RK73GB2A104J	CHIP R 100K J 1/10W		R146,147			RK73GB2A101J	CHIP R 100 J 1/10W	
R51			RK73GB2A473J	CHIP R 47K J 1/10W		R148			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R52			RK73GB2A472J	CHIP R 4.7K J 1/10W		R149			RK73GB2A101J	CHIP R 100 J 1/10W	
R53			RK73GB2A473J	CHIP R 47K J 1/10W		R150			RK73GB2A302J	CHIP R 3.0K J 1/10W	
R54			RK73GB2A153J	CHIP R 15K J 1/10W		R151			RK73GB2A623J	CHIP R 62K J 1/10W	
R55			RK73GB2A561J	CHIP R 560 J 1/10W		R152			RK73GB2A101J	CHIP R 100 J 1/10W	
R56			RK73EB2E622J	CHIP R 6.2K J 1/4W		R153			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R57			RK73GB2A912J	CHIP R 9.1K J 1/10W		R154			RK73GB2A101J	CHIP R 100 J 1/10W	
R58			RK73GB2A105J	CHIP R 1.0M J 1/10W		R155			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R59			RK73EB2E622J	CHIP R 6.2K J 1/4W		R156			RK73GB2A101J	CHIP R 100 J 1/10W	
R100			RK73GB2A101J	CHIP R 100 J 1/10W		R157			RK73GB2A473J	CHIP R 47K J 1/10W	KR1R2
R101			RK73GB2A104J	CHIP R 100K J 1/10W	E1E2	R157			RK73GB2A473J	CHIP R 47K J 1/10W	K1K2K3
						R157-159			RK73GB2A473J	CHIP R 47K J 1/10W	EQ1Q2

E: DDX5024 E1: DNX5240 E2: DNX5240BT (Europe) Q1: DDX5054 Q2: DDX54R (Russian)

△Indicates safety critical components.

K: DDX514 K1: DNX5140 K2: DNX6140 K3: DNX6000EX (North America)

X1: DDX5034 (Australia) R1: DDX5034 R2: DDX5034BT (Latin America)

M1: DDX5034 M2: DDX5034M (Other Areas)

PARTS LIST

ELECTRIC UNIT (X34-575x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination	Ref. No.	Add	New	Parts No.	Description	Destination
R157-159			RK73GB2A473J	CHIP R 47K J 1/10W	E1E2	R197			RK73GB2A332J	CHIP R 3.3K J 1/10W	E1E2
R157-159			RK73GB2A473J	CHIP R 47K J 1/10W	M1M2X1	R198			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R159			RK73GB2A473J	CHIP R 47K J 1/10W	KR1R2	R200			RK73GB2A101J	CHIP R 100 J 1/10W	
R159			RK73GB2A473J	CHIP R 47K J 1/10W	K1K2K3	R202			RK73GB2A153J	CHIP R 15K J 1/10W	
R160			RK73GB2A101J	CHIP R 100 J 1/10W		R203			RK73GB2A101J	CHIP R 100 J 1/10W	
R161			RK73GB2A222J	CHIP R 2.2K J 1/10W		R208			RK73GB2A152J	CHIP R 1.5K J 1/10W	
R164			RK73GB2A471J	CHIP R 470 J 1/10W		R209-213			RK73GB2A101J	CHIP R 100 J 1/10W	
R165			RK73GB2A682J	CHIP R 6.8K J 1/10W		R215			RK73GB2A103J	CHIP R 10K J 1/10W	KR1EQ1
R166			RK73GB2A472J	CHIP R 4.7K J 1/10W		R215			RK73GB2A103J	CHIP R 10K J 1/10W	Q2M1M2
R168			RK73GB2A471J	CHIP R 470 J 1/10W		R215			RK73GB2A103J	CHIP R 10K J 1/10W	X1K1E1
R169			RK73GB2A104J	CHIP R 100K J 1/10W		R216			RK73GB2A103J	CHIP R 10K J 1/10W	K3
R170			RK73GB2A472J	CHIP R 4.7K J 1/10W		R216			RK73GB2A103J	CHIP R 10K J 1/10W	R2K2E2
R172			RK73GB2A101J	CHIP R 100 J 1/10W	KR1EQ1	R222			RK73GB2A104J	CHIP R 100K J 1/10W	
R172			RK73GB2A101J	CHIP R 100 J 1/10W	K3E1E2	R223			RK73GB2A101J	CHIP R 100 J 1/10W	
R172			RK73GB2A101J	CHIP R 100 J 1/10W	Q2M1M2	R224			RK73GB2A473J	CHIP R 47K J 1/10W	
R172			RK73GB2A101J	CHIP R 100 J 1/10W	R2K1K2	R225,226			RK73GB2A101J	CHIP R 100 J 1/10W	EQ1Q2
R173			RK73GB2A682J	CHIP R 6.8K J 1/10W		R225,226			RK73GB2A101J	CHIP R 100 J 1/10W	E1E2
R174,175			RK73GB2A473J	CHIP R 47K J 1/10W	KR1EQ1	R225,226			RK73GB2A101J	CHIP R 100 J 1/10W	M1M2X1
R174,175			RK73GB2A473J	CHIP R 47K J 1/10W	K3E1E2	R226			RK73GB2A101J	CHIP R 100 J 1/10W	KR1R2
R174,175			RK73GB2A473J	CHIP R 47K J 1/10W	Q2M1M2	R226			RK73GB2A101J	CHIP R 100 J 1/10W	K1K2K3
R174,175			RK73GB2A473J	CHIP R 47K J 1/10W	R2K1K2	R227			RK73GB2A104J	CHIP R 100K J 1/10W	EQ1Q2
R175			RK73GB2A473J	CHIP R 47K J 1/10W	X1	R227			RK73GB2A104J	CHIP R 100K J 1/10W	E1E2
R177			RK73GB2A473J	CHIP R 47K J 1/10W	KR1EQ1	R227			RK73GB2A104J	CHIP R 100K J 1/10W	M1M2X1
R177			RK73GB2A473J	CHIP R 47K J 1/10W	K3E1E2	R228-233			RK73GB2A101J	CHIP R 100 J 1/10W	
R177			RK73GB2A473J	CHIP R 47K J 1/10W	Q2M1M2	R234,235			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R177			RK73GB2A473J	CHIP R 47K J 1/10W	R2K1K2	R236			RK73GB2A104J	CHIP R 100K J 1/10W	
R180			RK73GB2A103J	CHIP R 10K J 1/10W		R237			RK73GB2A473J	CHIP R 47K J 1/10W	
R181			RK73GB2A104J	CHIP R 100K J 1/10W		R238-253			RK73GB2A101J	CHIP R 100 J 1/10W	
R182			RK73GB2A103J	CHIP R 10K J 1/10W	E1E2	R254			RK73GB2A473J	CHIP R 47K J 1/10W	
R182			RK73GB2A103J	CHIP R 10K J 1/10W	K1K2K3	R255-258			RK73GB2A104J	CHIP R 100K J 1/10W	
R183			RK73GB2A473J	CHIP R 47K J 1/10W		R259			RK73GB2A153J	CHIP R 15K J 1/10W	
R184			RK73GB2A103J	CHIP R 10K J 1/10W	KM1M2	R260,261			RK73GB2A104J	CHIP R 100K J 1/10W	
R184			RK73GB2A103J	CHIP R 10K J 1/10W	R2Q1Q2	R263			RK73GB2A103J	CHIP R 10K J 1/10W	
R184			RK73GB2A103J	CHIP R 10K J 1/10W	X1ER1	R302			RK73EB2E2R2J	CHIP R 2.2 J 1/4W	
R185			RK73GB2A222J	CHIP R 2.2K J 1/10W		R303-306			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R186			RK73GB2A223J	CHIP R 22K J 1/10W		R307-310			RK73GB2A101J	CHIP R 100 J 1/10W	
R187			RK73GB2A473J	CHIP R 47K J 1/10W		R311,312			RK73GB2A103J	CHIP R 10K J 1/10W	
R188			RK73GB2A222J	CHIP R 2.2K J 1/10W	KR1EQ1	R317			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R188			RK73GB2A222J	CHIP R 2.2K J 1/10W	K3E1E2	R318			RK73GB2A104J	CHIP R 100K J 1/10W	
R188			RK73GB2A222J	CHIP R 2.2K J 1/10W	Q2M1M2	R319,320			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R188			RK73GB2A222J	CHIP R 2.2K J 1/10W	R2K1K2	R321,322			RK73GB2A103J	CHIP R 10K J 1/10W	
R189			RK73GB2A103J	CHIP R 10K J 1/10W	X1	R323,324			RK73GB2A101J	CHIP R 100 J 1/10W	
R190			RK73GB2A222J	CHIP R 2.2K J 1/10W		R325-327			RK73GB2A103J	CHIP R 10K J 1/10W	E2
R191,192			RK73GB2A102J	CHIP R 1.0K J 1/10W		R325-327			RK73GB2A103J	CHIP R 10K J 1/10W	KR1EQ1
R193			RK73GB2A101J	CHIP R 100 J 1/10W		R325-327			RK73GB2A103J	CHIP R 10K J 1/10W	Q2M1M2
R194			RK73GB2A102J	CHIP R 1.0K J 1/10W		R325-327			RK73GB2A103J	CHIP R 10K J 1/10W	X1K1E1
R195			RK73GB2A153J	CHIP R 15K J 1/10W		R325-329			RK73GB2A103J	CHIP R 10K J 1/10W	R2K2K3
R196			RK73GB2A103J	CHIP R 10K J 1/10W	E1E2	R329			RK73GB2A103J	CHIP R 10K J 1/10W	E2
R196			RK73GB2A103J	CHIP R 10K J 1/10W	Q2X1R2	R329			RK73GB2A103J	CHIP R 10K J 1/10W	KR1EQ1
R196			RK73GB2A103J	CHIP R 10K J 1/10W	R1EQ1	R329			RK73GB2A103J	CHIP R 10K J 1/10W	Q2M1M2
R196,197			RK73GB2A103J	CHIP R 10K J 1/10W	M1M2	R329			RK73GB2A103J	CHIP R 10K J 1/10W	X1K1E1
R197			RK73GB2A103J	CHIP R 10K J 1/10W	KK1K2	R400,401			RK73GB2A100J	CHIP R 10 J 1/10W	EQ1Q2
R197			RK73GB2A103J	CHIP R 10K J 1/10W	K3	R400,401			RK73GB2A100J	CHIP R 10 J 1/10W	E1E2
R197			RK73GB2A303J	CHIP R 30K J 1/10W	X1	R400,401			RK73GB2A100J	CHIP R 10 J 1/10W	M1M2X1
R197			RK73GB2A332J	CHIP R 3.3K J 1/10W	EQ1Q2	R402			RK73GB2A222J	CHIP R 2.2K J 1/10W	EQ1Q2

E: DDX5024 E1: DNX5240 E2: DNX5240BT (Europe) Q1: DDX5054 Q2: DDX54R (Russian)
K: DDX514 K1: DNX5140 K2: DNX6140 K3: DNX6000EX (North America)
X1: DDX5034 (Australia) R1: DDX5034 R2: DDX5034BT (Latin America)
M1: DDX5034 M2: DDX5034M (Other Areas)

△ Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-575x-xx)

Ref. No.	Ad	New	Parts No.	Description	Desti- nation	Ref. No.	Ad	New	Parts No.	Description	Desti- nation
R402			RK73GB2A222J	CHIP R 2.2K J 1/10W	E1E2	R442			RK73EB2E100J	CHIP R 10 J 1/4W	KM1M2
R402			RK73GB2A222J	CHIP R 2.2K J 1/10W	M1M2X1	R442			RK73EB2E100J	CHIP R 10 J 1/4W	K1E1K2
R403			RK73GB2A102J	CHIP R 1.0K J 1/10W	EQ1Q2	R442			RK73EB2E100J	CHIP R 10 J 1/4W	K3
R403			RK73GB2A102J	CHIP R 1.0K J 1/10W	E1E2	R442			RK73EB2E100J	CHIP R 10 J 1/4W	R2Q1Q2
R403			RK73GB2A102J	CHIP R 1.0K J 1/10W	M1M2X1	R442			RK73EB2E100J	CHIP R 10 J 1/4W	X1ER1
R404,405			RK73GB2A100J	CHIP R 10 J 1/10W	EQ1Q2	R443			RK73EB2E4R7J	CHIP R 4.7 J 1/4W	KM1M2
R404,405			RK73GB2A100J	CHIP R 10 J 1/10W	E1E2	R443			RK73EB2E4R7J	CHIP R 4.7 J 1/4W	K1E1K2
R404,405			RK73GB2A100J	CHIP R 10 J 1/10W	M1M2X1	R443			RK73EB2E4R7J	CHIP R 4.7 J 1/4W	K3
R406			RK73EB2E100J	CHIP R 10 J 1/4W	EQ1Q2	R443			RK73EB2E4R7J	CHIP R 4.7 J 1/4W	R2Q1Q2
R406			RK73EB2E100J	CHIP R 10 J 1/4W	E1E2	R443			RK73EB2E4R7J	CHIP R 4.7 J 1/4W	X1ER1
R406			RK73EB2E100J	CHIP R 10 J 1/4W	M1M2X1	R444			RK73EB2E100J	CHIP R 10 J 1/4W	KM1M2
R407			RK73EB2E4R7J	CHIP R 4.7 J 1/4W	EQ1Q2	R444			RK73EB2E100J	CHIP R 10 J 1/4W	K1E1K2
R407			RK73EB2E4R7J	CHIP R 4.7 J 1/4W	E1E2	R444			RK73EB2E100J	CHIP R 10 J 1/4W	K3
R407			RK73EB2E4R7J	CHIP R 4.7 J 1/4W	M1M2X1	R444			RK73EB2E100J	CHIP R 10 J 1/4W	R2Q1Q2
R408			RK73EB2E100J	CHIP R 10 J 1/4W	EQ1Q2	R444			RK73EB2E100J	CHIP R 10 J 1/4W	X1ER1
R408			RK73EB2E100J	CHIP R 10 J 1/4W	E1E2	R445			RK73GB2A100J	CHIP R 10 J 1/10W	KM1M2
R408			RK73EB2E100J	CHIP R 10 J 1/4W	M1M2X1	R445			RK73GB2A100J	CHIP R 10 J 1/10W	K1E1K2
R409-411			RK73EB2E102J	CHIP R 1.0K J 1/4W	EQ1Q2	R445			RK73GB2A100J	CHIP R 10 J 1/10W	K3
R409-411			RK73EB2E102J	CHIP R 1.0K J 1/4W	E1E2	R445			RK73GB2A100J	CHIP R 10 J 1/10W	R2Q1Q2
R409-411			RK73EB2E102J	CHIP R 1.0K J 1/4W	M1M2X1	R445			RK73GB2A100J	CHIP R 10 J 1/10W	X1ER1
R412-414			RK73EB2E101J	CHIP R 100 J 1/4W	EQ1Q2	R446			RK73GB2A473J	CHIP R 47K J 1/10W	KM1M2
R412-414			RK73EB2E101J	CHIP R 100 J 1/4W	E1E2	R446			RK73GB2A473J	CHIP R 47K J 1/10W	K1E1K2
R412-414			RK73EB2E101J	CHIP R 100 J 1/4W	M1M2X1	R446			RK73GB2A473J	CHIP R 47K J 1/10W	K3
R415,416			RK73EB2E102J	CHIP R 1.0K J 1/4W	EQ1Q2	R446			RK73GB2A473J	CHIP R 47K J 1/10W	R2Q1Q2
R415,416			RK73EB2E102J	CHIP R 1.0K J 1/4W	E1E2	R446			RK73GB2A473J	CHIP R 47K J 1/10W	X1ER1
R415,416			RK73EB2E102J	CHIP R 1.0K J 1/4W	M1M2X1	R447			RK73GB2A104J	CHIP R 100K J 1/10W	KM1M2
R417			RK73EB2E101J	CHIP R 100 J 1/4W	EQ1Q2	R447			RK73GB2A104J	CHIP R 100K J 1/10W	K1E1K2
R417			RK73EB2E101J	CHIP R 100 J 1/4W	E1E2	R447			RK73GB2A104J	CHIP R 100K J 1/10W	K3
R417			RK73EB2E101J	CHIP R 100 J 1/4W	M1M2X1	R447			RK73GB2A104J	CHIP R 100K J 1/10W	R2Q1Q2
R418			RK73GB2A100J	CHIP R 10 J 1/10W	EQ1Q2	R447			RK73GB2A104J	CHIP R 100K J 1/10W	X1ER1
R418			RK73GB2A100J	CHIP R 10 J 1/10W	E1E2	R448			RK73GB2A473J	CHIP R 47K J 1/10W	KM1M2
R418			RK73GB2A100J	CHIP R 10 J 1/10W	M1M2X1	R448			RK73GB2A473J	CHIP R 47K J 1/10W	K1E1K2
R419			RK73GB2A750J	CHIP R 75 J 1/10W	EQ1Q2	R448			RK73GB2A473J	CHIP R 47K J 1/10W	K3
R419			RK73GB2A750J	CHIP R 75 J 1/10W	E1E2	R448			RK73GB2A473J	CHIP R 47K J 1/10W	R2Q1Q2
R419			RK73GB2A750J	CHIP R 75 J 1/10W	M1M2X1	R448			RK73GB2A473J	CHIP R 47K J 1/10W	X1ER1
R438			RK73EB2E432J	CHIP R 4.3K J 1/4W	KM1M2	R451-453			RK73GB2A100J	CHIP R 10 J 1/10W	KM1M2
R438			RK73EB2E432J	CHIP R 4.3K J 1/4W	K1E1K2	R451-453			RK73GB2A100J	CHIP R 10 J 1/10W	K1E1K2
R438			RK73EB2E432J	CHIP R 4.3K J 1/4W	K3	R451-453			RK73GB2A100J	CHIP R 10 J 1/10W	K3
R438			RK73EB2E432J	CHIP R 4.3K J 1/4W	R2Q1Q2	R451-453			RK73GB2A100J	CHIP R 10 J 1/10W	R2Q1Q2
R438			RK73EB2E432J	CHIP R 4.3K J 1/4W	X1ER1	R451-453			RK73GB2A100J	CHIP R 10 J 1/10W	X1ER1
R439			RK73EB2E472J	CHIP R 4.7K J 1/4W	KM1M2	R454			RK73GB2A102J	CHIP R 1.0K J 1/10W	KM1M2
R439			RK73EB2E472J	CHIP R 4.7K J 1/4W	K1E1K2	R454			RK73GB2A102J	CHIP R 1.0K J 1/10W	K1E1K2
R439			RK73EB2E472J	CHIP R 4.7K J 1/4W	K3	R454			RK73GB2A102J	CHIP R 1.0K J 1/10W	K3
R439			RK73EB2E472J	CHIP R 4.7K J 1/4W	R2Q1Q2	R454			RK73GB2A102J	CHIP R 1.0K J 1/10W	R2Q1Q2
R439			RK73EB2E472J	CHIP R 4.7K J 1/4W	X1ER1	R454			RK73GB2A102J	CHIP R 1.0K J 1/10W	X1ER1
R440			RK73EB2E101J	CHIP R 100 J 1/4W	KM1M2	R455			RK73GB2A222J	CHIP R 2.2K J 1/10W	KM1M2
R440			RK73EB2E101J	CHIP R 100 J 1/4W	K1E1K2	R455			RK73GB2A222J	CHIP R 2.2K J 1/10W	K1E1K2
R440			RK73EB2E101J	CHIP R 100 J 1/4W	K3	R455			RK73GB2A222J	CHIP R 2.2K J 1/10W	K3
R440			RK73EB2E101J	CHIP R 100 J 1/4W	R2Q1Q2	R455			RK73GB2A222J	CHIP R 2.2K J 1/10W	R2Q1Q2
R440			RK73EB2E101J	CHIP R 100 J 1/4W	X1ER1	R455			RK73GB2A222J	CHIP R 2.2K J 1/10W	X1ER1
R441			RK73EB2E432J	CHIP R 4.3K J 1/4W	KM1M2	R456			RK73EB2E103J	CHIP R 10K J 1/4W	KM1M2
R441			RK73EB2E432J	CHIP R 4.3K J 1/4W	K1E1K2	R456			RK73EB2E103J	CHIP R 10K J 1/4W	K1E1K2
R441			RK73EB2E432J	CHIP R 4.3K J 1/4W	K3	R456			RK73EB2E103J	CHIP R 10K J 1/4W	K3
R441			RK73EB2E432J	CHIP R 4.3K J 1/4W	R2Q1Q2	R456			RK73EB2E103J	CHIP R 10K J 1/4W	R2Q1Q2
R441			RK73EB2E432J	CHIP R 4.3K J 1/4W	X1ER1	R456			RK73EB2E103J	CHIP R 10K J 1/4W	X1ER1

PARTS LIST

ELECTRIC UNIT (X34-575x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination	Ref. No.	Add	New	Parts No.	Description	Destination
R458			RK73GB2A104J	CHIP R 100K J 1/10W		W105			R92-2052-05	CHIP R 0 OHM J 1/10W	
R500			RK73FB2B152J	CHIP R 1.5K J 1/8W		W300-303			R92-1252-05	CHIP R 0 OHM J 1/16W	KR1K1
R501			RK73GB2A102J	CHIP R 1.0K J 1/10W		W300,301			R92-1252-05	CHIP R 0 OHM J 1/16W	EQ1Q2
R502			RK73GB2A223J	CHIP R 22K J 1/10W		W300,301			R92-1252-05	CHIP R 0 OHM J 1/16W	E1E2
R503			RK73GB2A100J	CHIP R 10 J 1/10W		W300,301			R92-1252-05	CHIP R 0 OHM J 1/16W	M1M2X1
R505-507			RK73GB2A222J	CHIP R 2.2K J 1/10W	KR1EQ1	W302-307			R92-1252-05	CHIP R 0 OHM J 1/16W	R2K2K3
R505-507			RK73GB2A222J	CHIP R 2.2K J 1/10W	K3E1E2	W304-309			R92-1252-05	CHIP R 0 OHM J 1/16W	E2
R505-507			RK73GB2A222J	CHIP R 2.2K J 1/10W	Q2M1M2	W310,311			R92-1252-05	CHIP R 0 OHM J 1/16W	KM1M2
R505-507			RK73GB2A222J	CHIP R 2.2K J 1/10W	R2K1K2	W310,311			R92-1252-05	CHIP R 0 OHM J 1/16W	K1E1K2
R600,601			RK73GB2A820J	CHIP R 82 J 1/10W		W310,311			R92-1252-05	CHIP R 0 OHM J 1/16W	K3
R603,604			RK73GB2A820J	CHIP R 82 J 1/10W		W310,311			R92-1252-05	CHIP R 0 OHM J 1/16W	R2Q1Q2
R605			RK73GB2A333J	CHIP R 33K J 1/10W		W800			R92-1252-05	CHIP R 0 OHM J 1/16W	X1ER1
R606			RK73GB2A331J	CHIP R 330 J 1/10W		W802			R92-1252-05	CHIP R 0 OHM J 1/16W	
R607			RK73GB2A682J	CHIP R 6.8K J 1/10W							
R608			RK73GB2A221J	CHIP R 220 J 1/10W							
R609			RK73GB2A223J	CHIP R 22K J 1/10W		D1			RB160L-40	DIODE	
R610			RK73GB2A103J	CHIP R 10K J 1/10W		D2			UDZW5.6(B)	ZENER DIODE	
R611			RK73GB2A270J	CHIP R 27 J 1/10W		D3			DAP202U	DIODE	
R700			RK73FB2B101J	CHIP R 100 J 1/8W		D4			DAN202U	DIODE	
R701			RK73GB2A471J	CHIP R 470 J 1/10W		D6 ,7			1SR154-400	DIODE	
R702			RK73GB2A223J	CHIP R 22K J 1/10W		D8			DAN202U	DIODE	
R705			RK73GB2A223J	CHIP R 22K J 1/10W		D9			1SR154-400	DIODE	
R707			RK73FB2B101J	CHIP R 100 J 1/8W		D10			DAN202U	DIODE	
R708			RK73GB2A471J	CHIP R 470 J 1/10W		D11			1SR154-400	DIODE	
R709			RK73FB2B101J	CHIP R 100 J 1/8W		D12			UDZW6.2(B)	ZENER DIODE	
R710			RK73GB2A471J	CHIP R 470 J 1/10W		D13			UDZW6.8(B)	ZENER DIODE	
R712			RK73GB2A223J	CHIP R 22K J 1/10W		D15			UDZW6.8(B)	ZENER DIODE	
R716			RK73GB2A223J	CHIP R 22K J 1/10W		D17			RM4ZLF-J1NF	DIODE	
R717			RK73FB2B101J	CHIP R 100 J 1/8W		D18			UDZW4.7(B)	ZENER DIODE	
R718			RK73GB2A471J	CHIP R 470 J 1/10W		D19			UDZW6.2(B)	ZENER DIODE	
R719			RK73FB2B101J	CHIP R 100 J 1/8W		D20			DAN202U	DIODE	
R720			RK73GB2A471J	CHIP R 470 J 1/10W		D300,301			DAP202U	DIODE	
R721			RK73GB2A223J	CHIP R 22K J 1/10W		D302,303			UDZW6.8(B)	ZENER DIODE	
R724			RK73GB2A223J	CHIP R 22K J 1/10W		D304-306			DAP202U	DIODE	
R725			RK73FB2B101J	CHIP R 100 J 1/8W		D307			UDZW6.8(B)	ZENER DIODE	
R726			RK73GB2A471J	CHIP R 470 J 1/10W		D400			UDZW4.7(B)	ZENER DIODE	EQ1Q2
R800,801			RK73GB2A102J	CHIP R 1.0K J 1/10W		D400			UDZW4.7(B)	ZENER DIODE	E1E2
R802-811			RK73GB2A101J	CHIP R 100 J 1/10W		D400			UDZW4.7(B)	ZENER DIODE	M1M2X1
R812			RK73GB2A102J	CHIP R 1.0K J 1/10W		D401			DAP202U	DIODE	EQ1Q2
R813			RK73FB2B100J	CHIP R 10 J 1/8W		D401			DAP202U	DIODE	E1E2
R814			RK73FB2B4R7J	CHIP R 4.7 J 1/8W		D401			DAP202U	DIODE	M1M2X1
R818			RK73FB2B100J	CHIP R 10 J 1/8W		D402,403			UDZW6.2(B)	ZENER DIODE	EQ1Q2
R819,820			RK73GB2A103J	CHIP R 10K J 1/10W		D402,403			UDZW6.2(B)	ZENER DIODE	E1E2
R821			RK73GB2A000J	CHIP R 0.0 J 1/10W		D402,403			UDZW6.2(B)	ZENER DIODE	M1M2X1
R822			RK73FB2B821J	CHIP R 820 J 1/8W		D404,405			UDZW6.8(B)	ZENER DIODE	EQ1Q2
R823			RK73GB2A100J	CHIP R 10 J 1/10W		D404,405			UDZW6.8(B)	ZENER DIODE	E1E2
R999			RK73GB2A000J	CHIP R 0.0 J 1/10W	E1E2	D404,405			UDZW6.8(B)	ZENER DIODE	M1M2X1
R999			RK73GB2A000J	CHIP R 0.0 J 1/10W	K1K2K3	D406-413			UDZW6.2(B)	ZENER DIODE	EQ1Q2
W4			R92-1252-05	CHIP R 0 OHM J 1/16W		D406-413			UDZW6.2(B)	ZENER DIODE	E1E2
W100			R92-1252-05	CHIP R 0 OHM J 1/16W		D406-413			UDZW6.2(B)	ZENER DIODE	M1M2X1
W102-104			R92-1252-05	CHIP R 0 OHM J 1/16W	KM1M2	D417			UDZW6.2(B)	ZENER DIODE	EQ1Q2
W102-104			R92-1252-05	CHIP R 0 OHM J 1/16W	R2Q1Q2	D417			UDZW6.2(B)	ZENER DIODE	E1E2
W102-104			R92-1252-05	CHIP R 0 OHM J 1/16W	X1ER1	D417			UDZW6.2(B)	ZENER DIODE	M1M2X1
W102,103			R92-1252-05	CHIP R 0 OHM J 1/16W	E1E2	D418			DA204U	DIODE	
W102,103			R92-1252-05	CHIP R 0 OHM J 1/16W	K1K2K3	D419-421			UDZW6.2(B)	ZENER DIODE	KM1M2

E: DDX5024 E1: DNX5240 E2: DNX5240BT (Europe) Q1: DDX5054 Q2: DDX54R (Russian)

K: DDX514 K1: DNX5140 K2: DNX6140 K3: DNX6000EX (North America)

X1: DDX5034 (Australia) R1: DDX5034 R2: DDX5034BT (Latin America)

M1: DDX5034 M2: DDX5034M (Other Areas)

△ Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-575x-xx)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation	Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
D419-421 D419-421 D419-421 D419-421 D422,423			UDZW6.2(B) UDZW6.2(B) UDZW6.2(B) UDZW6.2(B) UDZW6.8(B)	ZENER DIODE ZENER DIODE ZENER DIODE ZENER DIODE ZENER DIODE	K1E1K2 K3 R2Q1Q2 X1ER1 KM1M2	IC400,401 IC400,401 IC401 IC401 IC402			NJM2794RB2ZB NJM2794RB2ZB NJM2794RB2ZB NJM2794RB2ZB TC7WHU04FU-F	ANALOGUE IC ANALOGUE IC ANALOGUE IC ANALOGUE IC MOS-IC	E1 M1M2X1 KR1R2 K1K2K3 EQ1Q2
D422,423 D422,423 D422,423 D422,423 D424-426			UDZW6.8(B) UDZW6.8(B) UDZW6.8(B) UDZW6.8(B) UDZW6.2(B)	ZENER DIODE ZENER DIODE ZENER DIODE ZENER DIODE ZENER DIODE	K1E1K2 K3 R2Q1Q2 X1ER1 KM1M2	IC402 IC402 IC500 IC500 IC500			TC7WHU04FU-F TC7WHU04FU-F E-TDA7478AD E-TDA7478AD E-TDA7478AD	MOS-IC MOS-IC ANALOGUE IC ANALOGUE IC ANALOGUE IC	E1E2 M1M2X1 KR1EQ1 K3E1E2 Q2M1M2
D424-426 D424-426 D424-426 D424-426 D427			UDZW6.2(B) UDZW6.2(B) UDZW6.2(B) UDZW6.2(B) UDZW4.7(B)	ZENER DIODE ZENER DIODE ZENER DIODE ZENER DIODE ZENER DIODE	K1E1K2 K3 R2Q1Q2 X1ER1 KM1M2	IC500 IC600 Q1 Q2 Q3			E-TDA7478AD E-TDA7850A KTA1046-P KRA303-P 2SB1188(R)	ANALOGUE IC ANALOGUE IC TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR	R2K1K2
D427 D427 D427 D427 D430			UDZW4.7(B) UDZW4.7(B) UDZW4.7(B) UDZW4.7(B) DAP202U	ZENER DIODE ZENER DIODE ZENER DIODE ZENER DIODE DIODE	K1E1K2 K3 R2Q1Q2 X1ER1 KM1M2	Q4 Q5 Q6 Q7 Q8		*	2SA1576A KTA1046-P KRC401-P KRC404-P 2SC4081	TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR	
D430 D430 D430 D430 D431			DAP202U DAP202U DAP202U DAP202U 1SS355	DIODE DIODE DIODE DIODE DIODE	K1E1K2 K3 R2Q1Q2 X1ER1 KM1M2	Q9 Q10 Q11 Q12 Q13		*	KRA302-P 2SA1576A KRC406-P 2SB1689 KRC403-P	DIGITAL TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR	
D431 D431 D431 D431 D500			1SS355 1SS355 1SS355 1SS355 UDZW9.1(B)	DIODE DIODE DIODE DIODE ZENER DIODE	K1E1K2 K3 R2Q1Q2 X1ER1	Q14 Q14 Q14 Q15 Q16 ,17			2SB1188(R) 2SB1188(R) 2SB1188(R) KRC404-P 2SC4081	TRANSISTOR TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR	KR1M1 K1K2K3 M2X1R2 KR1M1
D600,601 D704-707 D710,711 D802-806 D808-812			DAP202U DAP202U DAP202U AVRM16120M6AB AVRM16120M6AB	DIODE DIODE DIODE VARISTOR VARISTOR		Q16 ,17 Q16 ,17 Q17 Q17 Q20			2SC4081 2SC4081 2SC4081 2SC4081 2SC4081	TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR	K1K2K3 M2X1R2 EQ1Q2 E1E2
D816 IC1 IC2 IC100 IC101			UDZW10(B) M5237ML-CF0J R1114N331B-TR 74AHC1G08GW S-80835CNNB-G	ZENER DIODE ANALOGUE IC ANALOGUE IC (3.3V LF) MOS-IC MOS-IC		Q21 Q22 Q23 Q24 Q25		*	KRC404-P 2SB1689 2SC4081 KRA303-P KRC406-P	DIGITAL TRANSISTOR TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR	
IC103 IC103 IC103 IC103 IC103			W05-1387-00 W05-1387-00 W05-1388-00 W05-1388-00 W05-1389-00	ROM IC ROM IC ROM IC ROM IC ROM IC	KK1 K2K3 EE1E2 M2 M1	Q100 Q100 Q101 Q101 Q102			KRC404-P KRC404-P 2SA1576A 2SA1576A KRA302-P	DIGITAL TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR	E1E2 K1K2K3 E1E2 K1K2K3 E1E2
IC103 IC103 IC104 IC105 IC105		*	W05-1390-00 W05-1454-00 30878MJBA31GP 74AHCT1G08GW 74AHCT1G08GW	ROM IC ROM IC MICROCONTROLLER IC MOS-IC MOS-IC	X1R1R2 Q1Q2 E1E2 K1K2K3	Q102 Q103,104 Q105 Q107 Q108		*	KRA302-P KRC411-P KRA311-P KRA302-P 2SC4081	DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR	K1K2K3
IC300 IC302 IC303,304 IC400 IC400,401			TC4052BFT E-TDA7415CB TC4052BFT NJM2794RB2ZB NJM2794RB2ZB	MOS-IC ANALOGUE IC MOS-IC ANALOGUE IC ANALOGUE IC	R2K2K3 E2 EQ1Q2	Q110 Q111 Q112 Q113-115 Q116		*	KRA307-P 2SC4081 KRC406-P 2SC4081 2SA1576A	DIGITAL TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR TRANSISTOR	

E: DDX5024 E1: DNX5240 E2: DNX5240BT (Europe) Q1: DDX5054 Q2: DDX54R (Russian)

K: DDX514 K1: DNX5140 K2: DNX6140 K3: DNX6000EX (North America)

X1: DDX5034 (Australia) R1: DDX5034 R2: DDX5034BT (Latin America)

M1: DDX5034 M2: DDX5034M (Other Areas)

△Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-575x-xx)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
Q117			2SC4081	TRANSISTOR	
Q118			2SA1576A	TRANSISTOR	
Q300-302		*	KRC406-P	DIGITAL TRANSISTOR	R2K2K3
Q300,301		*	KRC406-P	DIGITAL TRANSISTOR	E2
Q300,301		*	KRC406-P	DIGITAL TRANSISTOR	KR1EQ1
Q300,301		*	KRC406-P	DIGITAL TRANSISTOR	Q2M1M2
Q300,301		*	KRC406-P	DIGITAL TRANSISTOR	X1K1E1
Q303-305		*	KRC406-P	DIGITAL TRANSISTOR	EQ1Q2
Q303-305		*	KRC406-P	DIGITAL TRANSISTOR	E1E2
Q303-305		*	KRC406-P	DIGITAL TRANSISTOR	M1M2X1
Q304,305		*	KRC406-P	DIGITAL TRANSISTOR	KR1R2
Q304,305		*	KRC406-P	DIGITAL TRANSISTOR	K1K2K3
Q403		*	KRC406-P	DIGITAL TRANSISTOR	KM1M2
Q403		*	KRC406-P	DIGITAL TRANSISTOR	K1E1K2
Q403		*	KRC406-P	DIGITAL TRANSISTOR	K3
Q403		*	KRC406-P	DIGITAL TRANSISTOR	R2Q1Q2
Q403		*	KRC406-P	DIGITAL TRANSISTOR	X1ER1
Q406			TPC8110-F	FET	KM1M2
Q406			TPC8110-F	FET	K1E1K2
Q406			TPC8110-F	FET	K3
Q406			TPC8110-F	FET	R2Q1Q2
Q406			TPC8110-F	FET	X1ER1
Q407			KRA307-P	DIGITAL TRANSISTOR	KM1M2
Q407			KRA307-P	DIGITAL TRANSISTOR	K1E1K2
Q407			KRA307-P	DIGITAL TRANSISTOR	K3
Q407			KRA307-P	DIGITAL TRANSISTOR	R2Q1Q2
Q407			KRA307-P	DIGITAL TRANSISTOR	X1ER1
Q500			KRC404-P	DIGITAL TRANSISTOR	
Q501			KRA304-P	DIGITAL TRANSISTOR	
Q502			2SB1449(R)-E	TRANSISTOR	
Q503			2SC4081	TRANSISTOR	
Q504		*	KRC406-P	DIGITAL TRANSISTOR	
Q505			2SA1577	TRANSISTOR	
Q700-702		*	KRC406-P	DIGITAL TRANSISTOR	
Q703			KRC410-P	DIGITAL TRANSISTOR	
Q704			KRA304-P	DIGITAL TRANSISTOR	
Q705,706			KRC410-P	DIGITAL TRANSISTOR	
Q707			KRA304-P	DIGITAL TRANSISTOR	
Q708,709			KRC410-P	DIGITAL TRANSISTOR	
Q710			KRA304-P	DIGITAL TRANSISTOR	
Q711			KRC410-P	DIGITAL TRANSISTOR	
Q800			KRA304-P	DIGITAL TRANSISTOR	
Q801			KRC404-P	DIGITAL TRANSISTOR	
Q802			KTA1046-P	TRANSISTOR	
Q803			2SC4081	TRANSISTOR	
Q804		*	KRA308-P	DIGITAL TRANSISTOR	
TH600			PRF18BE471QS2	POSITIVE RESISTOR	
A500			X86-4030-11	FRONT-END UNIT	KR1X1
A500			X86-4030-11	FRONT-END UNIT	K3
A500			X86-4030-11	FRONT-END UNIT	R2K1K2
A500			X86-4032-70	FRONT-END UNIT	EQ1Q2
A500			X86-4032-70	FRONT-END UNIT	E2
A500			X86-4032-70	FRONT-END UNIT	M1M2E1
A501			X89-3062-70	DAUGHTER UNIT	E1E2

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
VIDEO UNIT (X35-4890-10)					
D712,713			B30-3202-05	LED (RGB F4)	
D721			B30-1566-05	LED (1608,RED)	
D722			B30-1713-05	LED (SR,TS)	
D733			B30-1566-05	LED (1608,RED)	
C1			CK73EB1E106K	CHIP C	10UF K
C2 -5			CK73GB1H103K	CHIP C	0.010UF K
C6			CK73GB0J225K	CHIP C	2.2UF K
C7			CK73GB1E183K	CHIP C	0.018UF K
C8			CK73GB0J225K	CHIP C	2.2UF K
C9			CK73GB1A474K	CHIP C	0.47UF K
C10			CK73GB1H152K	CHIP C	1500PF K
C11			CK73GB0J225K	CHIP C	2.2UF K
C12			CK73GB1H103K	CHIP C	0.010UF K
C13 ,14			CK73GB1H473K	CHIP C	0.047UF K
C15			C93-1383-05	CHIP C	220PF F
C16 ,17			CK73EB1E106K	CHIP C	10UF K
C19 -21			C93-1283-05	CHIP C	1.0UF K
C22			C93-1270-05	CHIP C	3300PF K
C23			C93-1273-05	CHIP C	15PF J
C24			C93-1278-05	CHIP C	0.018UF K
C25			C93-1283-05	CHIP C	1.0UF K
C102			CK73EB0J226K	CHIP C	22UF K
C103			CK73FB0J106K	CHIP C	10UF K
C104			CK73GB1H104K	CHIP C	0.10UF K
C105			CK73GB1H103K	CHIP C	0.010UF K
C107			CK73GB1H104K	CHIP C	0.10UF K
C108			CK73EB1E106K	CHIP C	10UF K
C109			CK73GB1H103K	CHIP C	0.010UF K
C112			CK73FB1E154K	CHIP C	0.15UF K
C113			CK73GB1H104K	CHIP C	0.10UF K
C114			CC73GCH1H151J	CHIP C	150PF J
C115,116			CK73GB1C224K	CHIP C	0.22UF K
C117			CC73GCH1H151J	CHIP C	150PF J
C118			CK73EB1E225K	CHIP C	2.2UF K
C119		*	C92-2020-05	ELECTRO	33UF 16WV
C120			CK73GB1H103K	CHIP C	0.010UF K
C121			CK73FB1C105K	CHIP C	1.0UF K
C122-124			CK73EB1C106K	CHIP C	10UF K
C125			CK73GB1H103K	CHIP C	0.010UF K
C126,127			CK73GB1H104K	CHIP C	0.10UF K
C128			CK73EB1C106K	CHIP C	10UF K
C200			CK73GB1A105K	CHIP C	1.0UF K
C201			CK73FB0J106K	CHIP C	10UF K
C202			CK73GB1H104K	CHIP C	0.10UF K
C203			CK73GB1A105K	CHIP C	1.0UF K
C204			CK73FB0J106K	CHIP C	10UF K
C205			CK73GB1H104K	CHIP C	0.10UF K
C206			CK73EB1E225K	CHIP C	2.2UF K
C207,208			CC73GCH1H270J	CHIP C	27PF J
C210-218			CK73GB1H104K	CHIP C	0.10UF K
C219			CC73GCH1H560J	CHIP C	56PF J
C220			CK73FB0J106K	CHIP C	10UF K
C221-224			CK73GB1H104K	CHIP C	0.10UF K

E: DDX5024 E1: DNX5240 E2: DNX5240BT (Europe) Q1: DDX5054 Q2: DDX54R (Russian)

K: DDX514 K1: DNX5140 K2: DNX6140 K3: DNX6000EX (North America)

X1: DDX5034 (Australia) R1: DDX5034 R2: DDX5034BT (Latin America)

M1: DDX5034 M2: DDX5034M (Other Areas)

△ Indicates safety critical components.

PARTS LIST

VIDEO UNIT (X35-4890-10)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
C225 C226,227 C228 C229-246 C247			CK73EB1C106K CK73GB1H103K CK73EB1C106K CK73GB1H104K CC73GCH1H101J	CHIP C 10UF K CHIP C 0.010UF K CHIP C 10UF K CHIP C 0.10UF K CHIP C 100PF J	
C248 C249-251 C252 C253 C254			CK73GB1H103K CK73GB1H104K CK73GB1A105K CK73GB1H102K CK73GB1H104K	CHIP C 0.010UF K CHIP C 0.10UF K CHIP C 1.0UF K CHIP C 1000PF K CHIP C 0.10UF K	
C255 C256,257 C260 C261,262 C263			CK73GB1A105K CK73GB1H104K CC73GCH1H101J CK73FB0J106K CK73EB1E106K	CHIP C 1.0UF K CHIP C 0.10UF K CHIP C 100PF J CHIP C 10UF K CHIP C 10UF K	
C264 C266 C267-270 C271 C272-275			CK73EB1E225K CK73GB1H104K CC73GCH1H101J CK73EB1E106K CK73GB1H104K	CHIP C 2.2UF K CHIP C 0.10UF K CHIP C 100PF J CHIP C 10UF K CHIP C 0.10UF K	
C276,277 C278 C279 C405 C451			CK73GB1A105K CK73GB1H104K CK73EB1E106K CC73GCH1H330J CC73GCH1H560J	CHIP C 1.0UF K CHIP C 0.10UF K CHIP C 10UF K CHIP C 33PF J CHIP C 56PF J	
C458 C459 C460 C462 C464			CC73GCH1H102J CK73EB1C106K CK73GB1H103K CK73GB1H103K CK73GB1H103K	CHIP C 1000PF J CHIP C 10UF K CHIP C 0.010UF K CHIP C 0.010UF K CHIP C 0.010UF K	
C466 C467 C500 C501,502 C503			CE32BJ1C220M CK73GB1H103K CK73FB0J106K CK73GB1H103K CK73GB1H104K	CHIP EL 22UF 16WV CHIP C 0.010UF K CHIP C 10UF K CHIP C 0.010UF K CHIP C 0.10UF K	
C504 C601 C608 C610,611 C701			CK73GB1A105K CK73GB1H104K CK73FB0J106K CK73GB1H102K CK73EB1E105K	CHIP C 1.0UF K CHIP C 0.10UF K CHIP C 10UF K CHIP C 1000PF K CHIP C 1.0UF K	
CN1 CN3 CN4 CN5 CN6			E41-2874-05 E41-2979-05 E41-2204-05 E41-2088-05 E41-2953-15	PIN ASSY FLAT CABLE CONNECTOR FLAT CABLE CONNECTOR FLAT CABLE CONNECTOR FLAT CABLE CONNECTOR	
CN7 J1 J2			E41-2301-05 E59-0855-05 E11-1001-05	FLAT CABLE CONNECTOR RECTANGULAR PLUG 3.5D PHONE JACK	
F1 F100			F53-0297-05 F53-0280-05	FUSE (UL,CSA) 1.6A FUSE 0.63A	
L1 L2 L100 L101			L19-0788-05 L33-2316-05 L33-2316-05 L41-4792-13	TRANSFORMER FOR CONVERTER CHOKE COIL CHOKE COIL SMALL FIXED INDUCTOR (4.7UH)	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
L102 L103,104 L105,106 L200,201 L202-206			L41-1005-33 L41-3392-13 L41-1005-33 L41-1005-33 L92-0319-05	SMALL FIXED INDUCTOR (10U) SMALL FIXED INDUCTOR (3.3UH) SMALL FIXED INDUCTOR (10U) SMALL FIXED INDUCTOR (10U) CHIP FERRITE	
L207 L208 L209-212 L401 L450			L41-1005-33 L41-8281-15 L92-0319-05 L41-2205-33 L41-1005-33	SMALL FIXED INDUCTOR (10U) SMALL FIXED INDUCTOR (0.82U) CHIP FERRITE SMALL FIXED INDUCTOR (22U) SMALL FIXED INDUCTOR (10U)	
L500 L600 X200			L41-1005-33 L92-0319-05 L77-2965-05	SMALL FIXED INDUCTOR (10U) CHIP FERRITE CRYSTAL RESONATOR(12.000MHZ)	
R1 R4 R5 R6 R7			RK73FB2B152J RK73GB2A153J RK73GB2A220J RK73GB2A222J RK73GH2A433D	CHIP R 1.5K J 1/8W CHIP R 15K J 1/10W CHIP R 22 J 1/10W CHIP R 2.2K J 1/10W CHIP R 43K D 1/10W	
R9 R10 R11 R12 R13			RK73GB2A220J RK73GB2A515J RK73GH2A513D RK73GB2A101J RK73GB2A104J	CHIP R 22 J 1/10W CHIP R 5.1M J 1/10W CHIP R 51K D 1/10W CHIP R 100 J 1/10W CHIP R 100K J 1/10W	
R14 R15 R16 R17 R18			RK73GH2A204D RK73GB2A105J RK73GB2A512J RK73GH2A563D RK73GH2A824D	CHIP R 200K D 1/10W CHIP R 1.0M J 1/10W CHIP R 5.1K J 1/10W CHIP R 56K D 1/10W CHIP R 820K D 1/10W	
R19 -21 R22 R23 R25 R26 ,27			RK73GB2A220J RK73GB2A512J RK73GB2A220J RK73GH2A471D RK73GB2A000J	CHIP R 22 J 1/10W CHIP R 5.1K J 1/10W CHIP R 22 J 1/10W CHIP R 470 D 1/10W CHIP R 0.0 J 1/10W	
R100 R102 R104 R107 R108			RK73GB2A000J RK73GB2A000J RK73GB2A562J RK73GH2A124D RK73GH2A113D	CHIP R 0.0 J 1/10W CHIP R 0.0 J 1/10W CHIP R 5.6K J 1/10W CHIP R 120K D 1/10W CHIP R 11K D 1/10W	
R109 R110 R111 R112 R114			RK73GH2A104D RK73GH2A113D RK73GB2A473J RK73FB2B222J RK73GH2A513D	CHIP R 100K D 1/10W CHIP R 11K D 1/10W CHIP R 4.7K J 1/10W CHIP R 2.2K J 1/8W CHIP R 51K D 1/10W	
R115,116 R117 R201 R203 R204			RK73GB2A472J RK73GH2A113D RK73GB2A513J RK73GB2A563J RK73GB2A472J	CHIP R 4.7K J 1/10W CHIP R 11K D 1/10W CHIP R 51K J 1/10W CHIP R 56K J 1/10W CHIP R 4.7K J 1/10W	
R205-207 R208 R210 R211 R212			RK73GB2A000J RK73GH2A432D RK73GB2A105J RK73GH2A222D RK73GH2A153D	CHIP R 0.0 J 1/10W CHIP R 4.3K D 1/10W CHIP R 1.0M J 1/10W CHIP R 2.2K D 1/10W CHIP R 15K D 1/10W	
R213			RK73GB2A000J	CHIP R 0.0 J 1/10W	

E: DDX5024 E1: DNX5240 E2: DNX5240BT (Europe) Q1: DDX5054 Q2: DDX54R (Russian)

K: DDX514 K1: DNX5140 K2: DNX6140 K3: DNX6000EX (North America)

X1: DDX5034 (Australia) R1: DDX5034 R2: DDX5034BT (Latin America)

M1: DDX5034 M2: DDX5034M (Other Areas)

△Indicates safety critical components.

PARTS LIST

VIDEO UNIT (X35-4890-10)

Ref. No.	Add	New	Parts No.	Description	Destination	Ref. No.	Add	New	Parts No.	Description	Destination
R214,215			RK73GB2A101J	CHIP R 100 J 1/10W		R615,616			RK73GB2A103J	CHIP R 10K J 1/10W	
R216			RK73GB2A000J	CHIP R 0.0 J 1/10W		R617			RK73EB2E100J	CHIP R 10 J 1/4W	
R217-221			RK73GB2A101J	CHIP R 100 J 1/10W		R618			RK73GB2A103J	CHIP R 10K J 1/10W	
R222			RK73GB2A000J	CHIP R 0.0 J 1/10W		R619			RK73EB2E100J	CHIP R 10 J 1/4W	
R223-225			RK73GB2A101J	CHIP R 100 J 1/10W		R620			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R226,227			RK73GB2A000J	CHIP R 0.0 J 1/10W		R621			RK73EB2E100J	CHIP R 10 J 1/4W	
R228			RK73GB2A300J	CHIP R 30 J 1/10W		R622			RK73GB2A103J	CHIP R 10K J 1/10W	
R231			RK73GB2A101J	CHIP R 100 J 1/10W		R623-628			RK73EB2E100J	CHIP R 10 J 1/4W	
R233,234			RK73GB2A000J	CHIP R 0.0 J 1/10W		R629			RK73GB2A682J	CHIP R 6.8K J 1/10W	
R235			RK73GB2A101J	CHIP R 100 J 1/10W		R630			RK73EB2E100J	CHIP R 10 J 1/4W	
R237			RK73GB2A000J	CHIP R 0.0 J 1/10W		R632			RK73GB2A100J	CHIP R 10 J 1/10W	
R240			RK73GB2A820J	CHIP R 82 J 1/10W		R633			RK73EB2E101J	CHIP R 100 J 1/4W	
R241,242			RK73FB2B470J	CHIP R 47 J 1/8W		R700			RK73FB2B101J	CHIP R 100 J 1/8W	
R243			RK73GB2A473J	CHIP R 47K J 1/10W		R701			RK73GB2A221J	CHIP R 220 J 1/10W	
R244-246			RK73GB2A101J	CHIP R 100 J 1/10W		R706			RK73GB2A183J	CHIP R 18K J 1/10W	
R248			RK73GB2A473J	CHIP R 47K J 1/10W		R707			RK73GH2A471D	CHIP R 470 D 1/10W	
R251			RK73GB2A103J	CHIP R 10K J 1/10W		R708			RK73GH2A511D	CHIP R 510 D 1/10W	
R253-259			RK73GB2A101J	CHIP R 100 J 1/10W		R709			RK73GH2A361D	CHIP R 360 D 1/10W	
R260			RK73GH2A513D	CHIP R 51K D 1/10W		R710			RK73GB2A681J	CHIP R 680 J 1/10W	
R261			RK73GH2A433D	CHIP R 43K D 1/10W		R711			RK73GH2A201D	CHIP R 200 D 1/10W	
R262			RK73GB2A000J	CHIP R 0.0 J 1/10W		R712			RK73GH2A561D	CHIP R 560 D 1/10W	
R263			RK73GB2A103J	CHIP R 10K J 1/10W		R713			RK73GH2A201D	CHIP R 200 D 1/10W	
R264-266			RK73GB2A000J	CHIP R 0.0 J 1/10W		R716			RK73GB2A151J	CHIP R 150 J 1/10W	
R267			RK73GB2A103J	CHIP R 10K J 1/10W		VR200			R32-0350-05	SEMI FIXED VARIABLE RESISTOR	
R268			RK73GB2A102J	CHIP R 1.0K J 1/10W		S600			S70-0901-05	TACT SWITCH	
R269			RK73GB2A101J	CHIP R 100 J 1/10W		S701-704			S70-0901-05	TACT SWITCH	
R270			RK73GB2A472J	CHIP R 4.7K J 1/10W		S601			T99-0482-05	ROTARY ENCODER	
R271,272			RK73GB2A000J	CHIP R 0.0 J 1/10W		D1			UDZW5.6(B)	ZENER DIODE	
R273			RK73FB2B472J	CHIP R 4.7K J 1/8W		D2 ,3			1SS355	DIODE	
R274-277			RK73GB2A473J	CHIP R 47K J 1/10W		D4			UDZW5.6(B)	ZENER DIODE	
R278,279			RK73GB2A101J	CHIP R 100 J 1/10W		D5			MA2S784-F	DIODE	
R280-283			RK73GB2A103J	CHIP R 10K J 1/10W		D6			UDZW5.6(B)	ZENER DIODE	
R400			RK73GB2A000J	CHIP R 0.0 J 1/10W		D7 ,8			DA204U	DIODE	
R401			RK73GB2A272J	CHIP R 2.7K J 1/10W		D9			AVRM16120M6AB	VARIATOR	
R402			RK73GB2A101J	CHIP R 100 J 1/10W		D100			EP05Q06	DIODE	
R407			RK73GB2A272J	CHIP R 2.7K J 1/10W		D101-103			EP05Q04	DIODE	
R408			RK73GB2A102J	CHIP R 1.0K J 1/10W		D201,202			AVRM16270MAAB	VARIATOR	
R458			RK73GH2A202D	CHIP R 2.0K D 1/10W		D500-503			UDZW6.2(B)	ZENER DIODE	
R459			RK73GH2A182D	CHIP R 1.8K D 1/10W		D601-606			AVRM16180M6AB	VARIATOR	
R460			RK73GB2A222J	CHIP R 2.2K J 1/10W		D608-611			AVRM16180M6AB	VARIATOR	
R461			RK73GH2A473D	CHIP R 47K D 1/10W		D612			DA204U	DIODE	
R462			RK73GH2A333D	CHIP R 33K D 1/10W		D613			AVRM16270MAAB	VARIATOR	
R470			RK73GB2A103J	CHIP R 10K J 1/10W		D700			UDZW6.2(B)	ZENER DIODE	
R476			RK73GB2A103J	CHIP R 10K J 1/10W		D709-711			AVRM16180M6AB	VARIATOR	
R481			RK73GB2A103J	CHIP R 10K J 1/10W		D714-716			AVRM16180M6AB	VARIATOR	
R500,501			RK73GB2A333J	CHIP R 33K J 1/10W		D719			AVRM16180M6AB	VARIATOR	
R502-505			RK73EB2E100J	CHIP R 10 J 1/4W		D725			AVRM16180M6AB	VARIATOR	
R600,601			RK73GB2A103J	CHIP R 10K J 1/10W		D734			AVRM16180M6AB	VARIATOR	
R602,603			RK73EB2E100J	CHIP R 10 J 1/4W		IC1			OZ964ISN-C-SN	ANALOGUE IC	
R604,605			RK73GB2A103J	CHIP R 10K J 1/10W		IC101			74AHC1G04GW	MOS-IC	
R608			RK73GB2A272J	CHIP R 2.7K J 1/10W		IC102			LT1947-PBF	ANALOGUE IC	
R609,610			RK73GB2A303J	CHIP R 30K J 1/10W		IC200			S-1112B25MCG	ANALOGUE IC	
R611,612			RK73GB2A103J	CHIP R 10K J 1/10W		IC201			TA75W558FU-F	ANALOGUE IC	
R613			RK73GB2A750J	CHIP R 75 J 1/10W							
R614			RK73GB2A102J	CHIP R 1.0K J 1/10W							

E: DDX5024 E1: DNX5240 E2: DNX5240BT (Europe) Q1: DDX5054 Q2: DDX54R (Russian)
K: DDX514 K1: DNX5140 K2: DNX6140 K3: DNX6000EX (North America)
X1: DDX5034 (Australia) R1: DDX5034 R2: DDX5034BT (Latin America)
M1: DDX5034 M2: DDX5034M (Other Areas)

△ Indicates safety critical components.

PARTS LIST

VIDEO UNIT (X35-4890-10)

Ref. No.	Added	New	Parts No.	Description	Destination
IC202 IC203 IC204 IC205 IC206			TC7WH74FU-F MST7988LA-ALF 74AHC1G32GW XC6201P532MR 74LVC3G34DP	MOS-IC MOS-IC MOS-IC ANALOGUE IC MOS-IC	
IC207 IC208 IC501 IC700 Q1 ,2			AT25F2048-4Z7 XC6201P502MR 74AHCT1G08GW PIC95603 2SC4081	ROM IC ANALOGUE IC MOS-IC ANALOGUE IC TRANSISTOR	
Q3 Q4 ,5 Q100 Q101 Q201		*	KRC406-P SI5504DC-E3 2SC4081 2SA1576A 2SC4097	DIGITAL TRANSISTOR DUAL FET TRANSISTOR TRANSISTOR TRANSISTOR	
Q202 Q400,401 Q450 Q451 Q500,501		*	2SA1577 2SA1576A KRC405-P UMZ1N KRC405-P	TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR	
Q502 Q503 Q504 Q600-604 Q606		*	KRA305-P KRC406-P KRA305-P 2SC4081 KRA304-P	DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR	

DVD UNIT(X37-1250-00) IN DVD MECHA.

C3 C4 C5 -7 C8 C9			CK73HB1A104K CC73HCH1H471J CK73HB1E103K CC73HCH1H471J CK73HB0J105K	CHIP C CHIP C CHIP C CHIP C CHIP C	0.10UF 470PF 0.010UF 470PF 1.0UF	K J K J K
C11 ,12 C13 C14 C15 C16			CK73HB1E103K CK73HB1H472K CK73GB0J106M CK73HB1A104K CK73GB0J106M	CHIP C CHIP C CHIP C CHIP C CHIP C	0.010UF 4700PF 10UF 0.10UF 10UF	K K M K M
C17 C18 C21 C22 ,23 C50			CK73GB0J475K CK73FB0J226M CK73GB0J106M CK73GB0J475K CK73HB1E103K	CHIP C CHIP C CHIP C CHIP C CHIP C	4.7UF 22UF 10UF 4.7UF 0.010UF	K M M K K
C51 C52 C53 C54 C55			CK73HB1A104K CK73HB1E223K CC73HCH1H470J CC73HCH1H102J CC73HCH1H100D	CHIP C CHIP C CHIP C CHIP C CHIP C	0.10UF 0.022UF 47PF 1000PF 10PF	K K J J D
C56 C57 C58 C60 ,61 C62			CC73HCH1H102J CC73HCH1E681J CK73HB1H682K CK73HB1A104K CC73HCH1H102J	CHIP C CHIP C CHIP C CHIP C CHIP C	1000PF 680PF 6800PF 0.10UF 1000PF	J J K K J
C63 C64 C65 C66			CC73HCH1H331J CK73HB1H222K CC73HCH1E681J CK73HB1H152K	CHIP C CHIP C CHIP C CHIP C	330PF 2200PF 680PF 1500PF	J K J K

Ref. No.	Added	New	Parts No.	Description			Destination
C67 ,68 C69 -72 C73 -82 C84 C85			CC73HCH1H102J CC73HCH1H151J CK73HB1A104K CK73HB0J105K CK73HB1A104K	CHIP C CHIP C CHIP C CHIP C CHIP C	1000PF 150PF 0.10UF 1.0UF 0.10UF	J J K K K	
C90 C93 -95 C97 C99 C100			CK73HB1E103K CK73HB1A104K CK73HB1A104K CK73HB1A104K CK73FB0J226M	CHIP C CHIP C CHIP C CHIP C CHIP C	0.010UF 0.10UF 0.10UF 0.10UF 22UF	K K K K M	
C101 C103 C104 C120,121 C143,144			CK73GB0J475K CK73FB0J226M CK73GB0J475K CK73HB1E223K CC73HCH1H100D	CHIP C CHIP C CHIP C CHIP C CHIP C	4.7UF 22UF 4.7UF 0.022UF 10PF	K M K K D	
C202 C207,208 C210 C212 C213			CK73FB0J226M CK73HB1A104K CK73HB1A104K CK73HB1A104K CK73HB1H332K	CHIP C CHIP C CHIP C CHIP C CHIP C	22UF 0.10UF 0.10UF 0.10UF 3300PF	M K K K K	
C214,215 C216 C217 C218 C219-222			CK73HB1A104K CC73HCH1H471J CK73HB1A104K CK73HB1C473K CK73HB1A104K	CHIP C CHIP C CHIP C CHIP C CHIP C	0.10UF 470PF 0.10UF 0.047UF 0.10UF	K J K K K	
C223 C224 C225 C227 C434			CK73HB0J105K CK73HB1A104K CK73GB0J475K CK73FB0J226M CK73GB0J106M	CHIP C CHIP C CHIP C CHIP C CHIP C	1.0UF 0.10UF 4.7UF 22UF 10UF	K K K M M	
C435 C440-442 C446 C447,448 C449,450			CK73HB1E103K CK73FB0J226M CC73HCH1H101J CC73HCH1H102J CK73HB1H472K	CHIP C CHIP C CHIP C CHIP C CHIP C	0.010UF 22UF 100PF 1000PF 4700PF	K M J J K	
C451 C452-454 C455			CC73HCH1H102J CK73HB0J105K CK73FB0J226M	CHIP C CHIP C CHIP C	1000PF 1.0UF 22UF	J K M	
CN1 CN2 CN3			E41-2594-05 E41-2114-15 E41-2596-05	FLAT CABLE CONNECTOR FLAT CABLE CONNECTOR FLAT CABLE CONNECTOR			
L1 L5 X2		*	L92-0365-05 L92-0365-05 L77-3803-05	CHIP FERRITE CHIP FERRITE CRYSTAL RESONATOR (16.897849MHZ)			
CP2 -4 CP5 -9 CP10 CP11 R1			RK74HB1J103J RK74HB1J330J RK74HB1J820J RK74HB1J103J RK73HB1J103J	CHIP-COM CHIP-COM CHIP-COM CHIP-COM CHIP R	10K 33 82 10K 10K	J J J J J	1/16W 1/16W 1/16W 1/16W 1/16W
R3 ,4 R5 ,6 R7 R8 ,9 R10			RK73HB1J103J RK73HH1J123D RK73HH1J333D RK73HB1J103J RK73HB1J163J	CHIP R CHIP R CHIP R CHIP R CHIP R	10K 12K 33K 10K 16K	J D D J J	1/16W 1/16W 1/16W 1/16W 1/16W

E: DDX5024 E1: DNX5240 E2: DNX5240BT (Europe) Q1: DDX5054 Q2: DDX54R (Russian)

K: DDX514 K1: DNX5140 K2: DNX6140 K3: DNX6000EX (North America)

X1: DDX5034 (Australia) R1: DDX5034 R2: DDX5034BT (Latin America)

M1: DDX5034 M2: DDX5034M (Other Areas)

△Indicates safety critical components.

PARTS LIST

DVD UNIT(X37-1250-00) IN DVD MECHA.

Ref. No.	Ad d	New	Parts No.	Description	Desti- nation
R11			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R13			RK73HB1J103J	CHIP R 10K J 1/16W	
R16			RK73HB1J103J	CHIP R 10K J 1/16W	
R17			RK73HB1J271J	CHIP R 270 J 1/16W	
R19			RK73HB1J301J	CHIP R 300 J 1/16W	
R21 ,22			RK73HH1J103D	CHIP R 10K D 1/16W	
R31			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R50 ,51			RK73HB1J510J	CHIP R 51 J 1/16W	
R52			RK73HH1J153D	CHIP R 15K D 1/16W	
R53			RK73HB1J105J	CHIP R 1.0M J 1/16W	
R54			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R55			RK73HB1J103J	CHIP R 10K J 1/16W	
R56			RK73HH1J472D	CHIP R 4.7K D 1/16W	
R57 ,58			RK73HB1J202J	CHIP R 2.0K J 1/16W	
R59 ,60			RK73HB1J103J	CHIP R 10K J 1/16W	
R63			RK73HB1J103J	CHIP R 10K J 1/16W	
R64 ,65			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R81			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R83 ,84			RK73HB1J473J	CHIP R 47K J 1/16W	
R85			RK73HB1J223J	CHIP R 22K J 1/16W	
R86			RK73HB1J103J	CHIP R 10K J 1/16W	
R87			RK73HB1J105J	CHIP R 1.0M J 1/16W	
R88			RK73HB1J222J	CHIP R 2.2K J 1/16W	
R89 ,90			RK73HB1J123J	CHIP R 12K J 1/16W	
R91			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R92			RK73HB1J273J	CHIP R 27K J 1/16W	
R96			RK73HB1J103J	CHIP R 10K J 1/16W	
R98			RK73HB1J202J	CHIP R 2.0K J 1/16W	
R101			RK73HH1J273D	CHIP R 27K D 1/16W	
R105			RK73HB1J103J	CHIP R 10K J 1/16W	
R120			RK73HB1J103J	CHIP R 10K J 1/16W	
R121			RK73HB1J820J	CHIP R 82 J 1/16W	
R122			RK73HB1J103J	CHIP R 10K J 1/16W	
R123			RK73HB1J330J	CHIP R 33 J 1/16W	
R124-126			RK73HB1J820J	CHIP R 82 J 1/16W	
R150,151			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R152,153			RK73HB1J104J	CHIP R 100K J 1/16W	
R154,155			RK73HB1J103J	CHIP R 10K J 1/16W	
R158,159			RK73HB1J1R0J	CHIP R 1.0 J 1/16W	
R160			R92-3350-05	CHIP R 2.2 F 1/10W	
R162,163			RK73HB1J104J	CHIP R 100K J 1/16W	
R164,165			RK73HH1J101D	CHIP R 100 D 1/16W	
R167			RK73HH1J113D	CHIP R 11K D 1/16W	
R168			RK73HH1J273D	CHIP R 27K D 1/16W	
R169			RK73HB1J125J	CHIP R 1.2M J 1/16W	
R255			R92-5112-05	CHIP R 4.7 F 1/10W	
R257			RK73HH1J202D	CHIP R 2.0K D 1/16W	
R260			RK73HH1J132D	CHIP R 1.3K D 1/16W	
R261			RK73HH1J203D	CHIP R 20K D 1/16W	
R262			RK73HB1J821J	CHIP R 820 J 1/16W	
R263			RK73HB1J242J	CHIP R 2.4K J 1/16W	
R272			RK73HH1J682D	CHIP R 6.8K D 1/16W	
R273			RK73HH1J122D	CHIP R 1.2K D 1/16W	
R274			RK73HH1J682D	CHIP R 6.8K D 1/16W	
R275			RK73HH1J122D	CHIP R 1.2K D 1/16W	

The IC3, and IC11 in the DVD unit (X37-1250-00) are not replaceable components. When these ICs are defective, replace the whole DVD mechanism assembly (X92-6400-00).

Ref. No.	Ad d	New	Parts No.	Description	Desti- nation
R278			R92-5112-05	CHIP R 4.7 F 1/10W	
R284			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R288			R92-3416-05	CHIP R 2.7 1/10W	
R289			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R297			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R298,299			RK73HB1J330J	CHIP R 33 J 1/16W	
R300			RK73HB1J103J	CHIP R 10K J 1/16W	
S1			S68-0911-15	PUSH SWITCH	
S2		*	S68-0917-05	PUSH SWITCH	
D1			1SS402-F	DIODE	
D5 ,6			015AZ5.1-F(Y)	ZENER DIODE	
D8			1SS387-F	DIODE	
IC1			AN22022ABV	ANALOGUE IC	
IC3		*	-	ROM IC	
IC4			MN103S71F	MOS-IC	
IC5			S1000N284T1G	ANALOGUE IC	
IC10			AN41250A-VB	ANALOGUE IC	
IC11		*	-	ROM IC	
IC13		*	NJM2845DL115B	ANALOGUE IC	
IC14		*	NJM2845DL133B	ANALOGUE IC	
Q1 -4			DTA143XE	DIGITAL TRANSISTOR	
Q12 ,13			2SB1709	TRANSISTOR	
Q16			UM6K1N	DUAL FET	

DAUGHTER UNIT (X89-3062-70)

C1			CC73GCH1H180J	CHIP C 18PF J	E1E2
C2			CC73GCH1H070D	CHIP C 7.0PF D	E1E2
C3			CC73GCH1H150J	CHIP C 15PF J	E1E2
C4			CC73GCH1H180J	CHIP C 18PF J	E1E2
C5			CC73GCH1H390J	CHIP C 39PF J	E1E2
C6			CC73GCH1H020C	CHIP C 2.0PF C	E1E2
C7			CC73GCH1H120J	CHIP C 12PF J	E1E2
C8			CK73FB1C105K	CHIP C 1.0UF K	E1E2
C10 -12			CC73GCH1H102J	CHIP C 1000PF J	E1E2
C13			CC73GCH1H221J	CHIP C 220PF J	E1E2
C14			CC73GCH1H030C	CHIP C 3.0PF C	E1E2
C15 ,16			CC73GCH1H560J	CHIP C 56PF J	E1E2
C17			CC73GCH1H102J	CHIP C 1000PF J	E1E2
CN1			E41-3008-05	PIN ASSY	E1E2
W1			E30-6808-05	CORD WITH PLUG (ANT)	E1E2
W2			E30-6807-05	CORD WITH PLUG	E1E2
L1			L41-2705-33	SMALL FIXED INDUCTOR (27U)	E1E2
L2			L41-1588-18	SMALL FIXED INDUCTOR	E1E2
L3			L41-1805-33	SMALL FIXED INDUCTOR (18U)	E1E2
L4 ,5			L41-1588-18	SMALL FIXED INDUCTOR	E1E2
L6			L19-0825-05	BALUN TRANSFORMER	E1E2
L8			L41-1888-18	SMALL FIXED INDUCTOR (0.18U)	E1E2
R1			RK73GB2A104J	CHIP R 100K J 1/10W	E1E2
R3			RK73GB2A562J	CHIP R 5.6K J 1/10W	E1E2
R4			RK73GB2A332J	CHIP R 3.3K J 1/10W	E1E2
R5			RK73GB2A331J	CHIP R 330 J 1/10W	E1E2
R6			RK73GB2A391J	CHIP R 390 J 1/10W	E1E2
R7 ,8			RK73GB2A330J	CHIP R 33 J 1/10W	E1E2

E: DDX5024 E1: DNX5240 E2: DNX5240BT (Europe) Q1: DDX5054 Q2: DDX54R (Russian)
K: DDX514 K1: DNX5140 K2: DNX6140 K3: DNX6000EX (North America)
X1: DDX5034 (Australia) R1: DDX5034 R2: DDX5034BT (Latin America)
M1: DDX5034 M2: DDX5034M (Other Areas)

△ Indicates safety critical components.

PARTS LIST

DAUGHTER UNIT (X89-3062-70)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
R10			RK73GB2A431J	CHIP R 430 J 1/10W	E1E2
R11			RK73GB2A270J	CHIP R 27 J 1/10W	E1E2
R12			RK73GB2A431J	CHIP R 430 J 1/10W	E1E2
R13			RK73GB2A151J	CHIP R 150 J 1/10W	E1E2
R14			RK73GB2A431J	CHIP R 430 J 1/10W	E1E2
R15			RK73GB2A270J	CHIP R 27 J 1/10W	E1E2
R17			RK73GB2A431J	CHIP R 430 J 1/10W	E1E2
D1			IMSA-6801-E	SURGE ABSORBER	E1E2
Q1			2SC3357-A	TRANSISTOR	E1E2

DVD MECHANISM ASSY(X92-6400-00) (DVS-8220W)					
1	1A		A10-5523-01+	CHASSIS	
2	2B		A10-5524-01+	CHASSIS	
3	1A		A10-5525-01+	CHASSIS	
4	3A		A10-5526-02+	CHASSIS	
7	1B		D10-7080-02+	ARM	
8	1B		D10-7081-02+	ARM	
9	1B		D10-7082-02+	LEVER	
10	1B		D10-7083-02+	LEVER	
12	2B		D10-7084-02+	SLIDER	
13	2A		D10-7085-02+	ARM	
14	2B		D10-7086-03+	ARM	
15	2B		D10-7087-02+	ARM	
25	2B		D10-7092-04+	SLIDER ASSY	
27	2A		D10-7091-04+	LEVER	
28	2B		D12-0640-02+	CAM	
31	2B		D13-3029-04+	GEAR	
32	2B		D13-3030-04+	GEAR	
33	2B		D13-3031-04+	GEAR	
34	2B		D13-3032-04+	GEAR	
35	2B		D13-3033-04+	GEAR	
36	2B		D13-3034-04+	GEAR	
40	2A		D13-3038-04+	GEAR	
41	2A		D13-3039-04+	GEAR	
42	2A		D13-3040-04+	GEAR	
43	1B		D14-1034-04+	ROLLER	
53	1B		D21-2487-24	SHAFT	
54	2A		D39-0275-05	DAMPER	
55	2A		D39-0276-05	DAMPER	
60	3A	*	F09-3019-03	SHEET	
65	2B		G01-4734-04	EXTENSION SPRING	
66	1B		G01-4735-04	EXTENSION SPRING	
67	2A		G01-4736-04	TORSION COIL SPRING	
68	2B		G01-4737-04	EXTENSION SPRING	
69	1B		G01-4738-04	EXTENSION SPRING	
70	1B		G01-4740-04	TORSION COIL SPRING	
74	2B		G01-4739-04	TORSION COIL SPRING	
75	1B		G02-1904-03+	FLAT SPRING	
79	2A		J22-0890-01+	MOUNTING HARDWARE	
80	3B		J22-0891-01+	MOUNTING HARDWARE	
A	1A		N09-6382-05	MACHINE SCREW (M1.7X2.0)	
B	3B		N09-6408-15	TAPTITE SCREW (1.7X4 P-TITE)	
C	1B		N09-6426-15	MACHINE SCREW (LOAD ARM SCREW)	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
D	3A		N09-6104-05	MACHINE SCREW (2X10 S-TITE)	
93	2A		T99-0471-05	MAGNET	
96	1B		X94-2080-00	ROLLER ASSY	
98	2A		X94-2060-00	TRAVERSE ASSY (PICKUP,SPINDLE)	
VM1	2A		X94-2070-00	MOTOR ASSY (LOADING)	