


NO	PART NO.	DESCRIPTION	QTY
1	370-5440-04	ESCUTCHEON	1
2	380-5301-01	KNOB	1
4	940-1671A	ESCUTCHEON-ASSY	1
6	947-0352-06	BUTTON-ASSY	1
8	382-3350-01	BUTTON *SEL	1
10	382-3352-01	BUTTON *MAN	1
19	320-0391-41	DUSTPROOF-CVR	1
20	750-2309-01	SPRING	1
21	331-0157-00	LCD HOLDER	1
22	379-1015-21	LCD(INDICATOR)	1
23	335-4512-01	COLOR FILTER	1
24	335-4479-00	BACK LIGHT	1
25	335-4480-00	LCD SPACER	1
26	345-7366-00	RUBBER CONNECTOR	2
27	347-3818-00	SPACER	2
28	335-4477-03	ILLUMI PLATE	1
29	345-5156-01	RUBBER SWITCH	1
30	345-7148-07	LAMP CAP	5
31	017-0345-09	PILOT LAMP	5
32	017-0376-02	PILOT LAMP	2
33	001-0486-04	LED	4
34	001-7009-01	LED	2
35	074-0961-28	OUTLET SOCKET *28P	1
36	001-0207-00	LED *RED	1
37	335-4513-00	LED SPACER	1
38	099-9982-02	SWITCH PWB	1
39	702-2005-81	TAP SCREW	2
40	331-0158-00	FRONT PLATE	1

NO	PART NO.	DESCRIPTION	QTY
42	039-0300-01	MAIN PWB	1
43	012-5194-00	VARIABLE-R *VOL	1
44	076-0414-28	PLUG *28P	1
45	345-3653-01	SPACER	1
46	330-9801-00	TR HOLDER	1
48	331-0160-00	CHOKE HOLDER	1
54	880-2201A	WEATHER-B TUNER BLOCK	1
55	880-1951B	FM/AM TUNER BLOCK	1
57	074-0930-03	OUTLET SOCKET *ISO 26P	1
58	330-9391-01	BACK PLATE	1
59	076-0420-02	PLUG	1
60	076-0288-12	PLUG	1
61	074-0818-00	OUTLET SOCKET *DIN 13P	1
62	331-0161-06	ANT-HOLDER	1
63	311-1591-08	LOWER CASE	1
64	716-1461-00	SPACER	4
65	290-4411-00	LABEL	1
66	290-4642-00	LABEL	1
67	930-0735-00	TAPE-MECHANISM *GFX	1
68	716-0878-00	IT-SCREW	4
69	310-1527-00	UPPER CASE	1
70	714-2605-81	MACHINE SCREW	4
71	716-0871-00	STUD BOLT	1
72	060-0057-52	AUTO FUSE *3A	1
73	335-4476-06	PANEL	1
74	353-0359-00	SHADE	2
75	286-7975-04	SET PLATE	1
77	076-0433-20	PLUG *20P	1
78	345-7148-00	LAMP CAP	5

©Main section

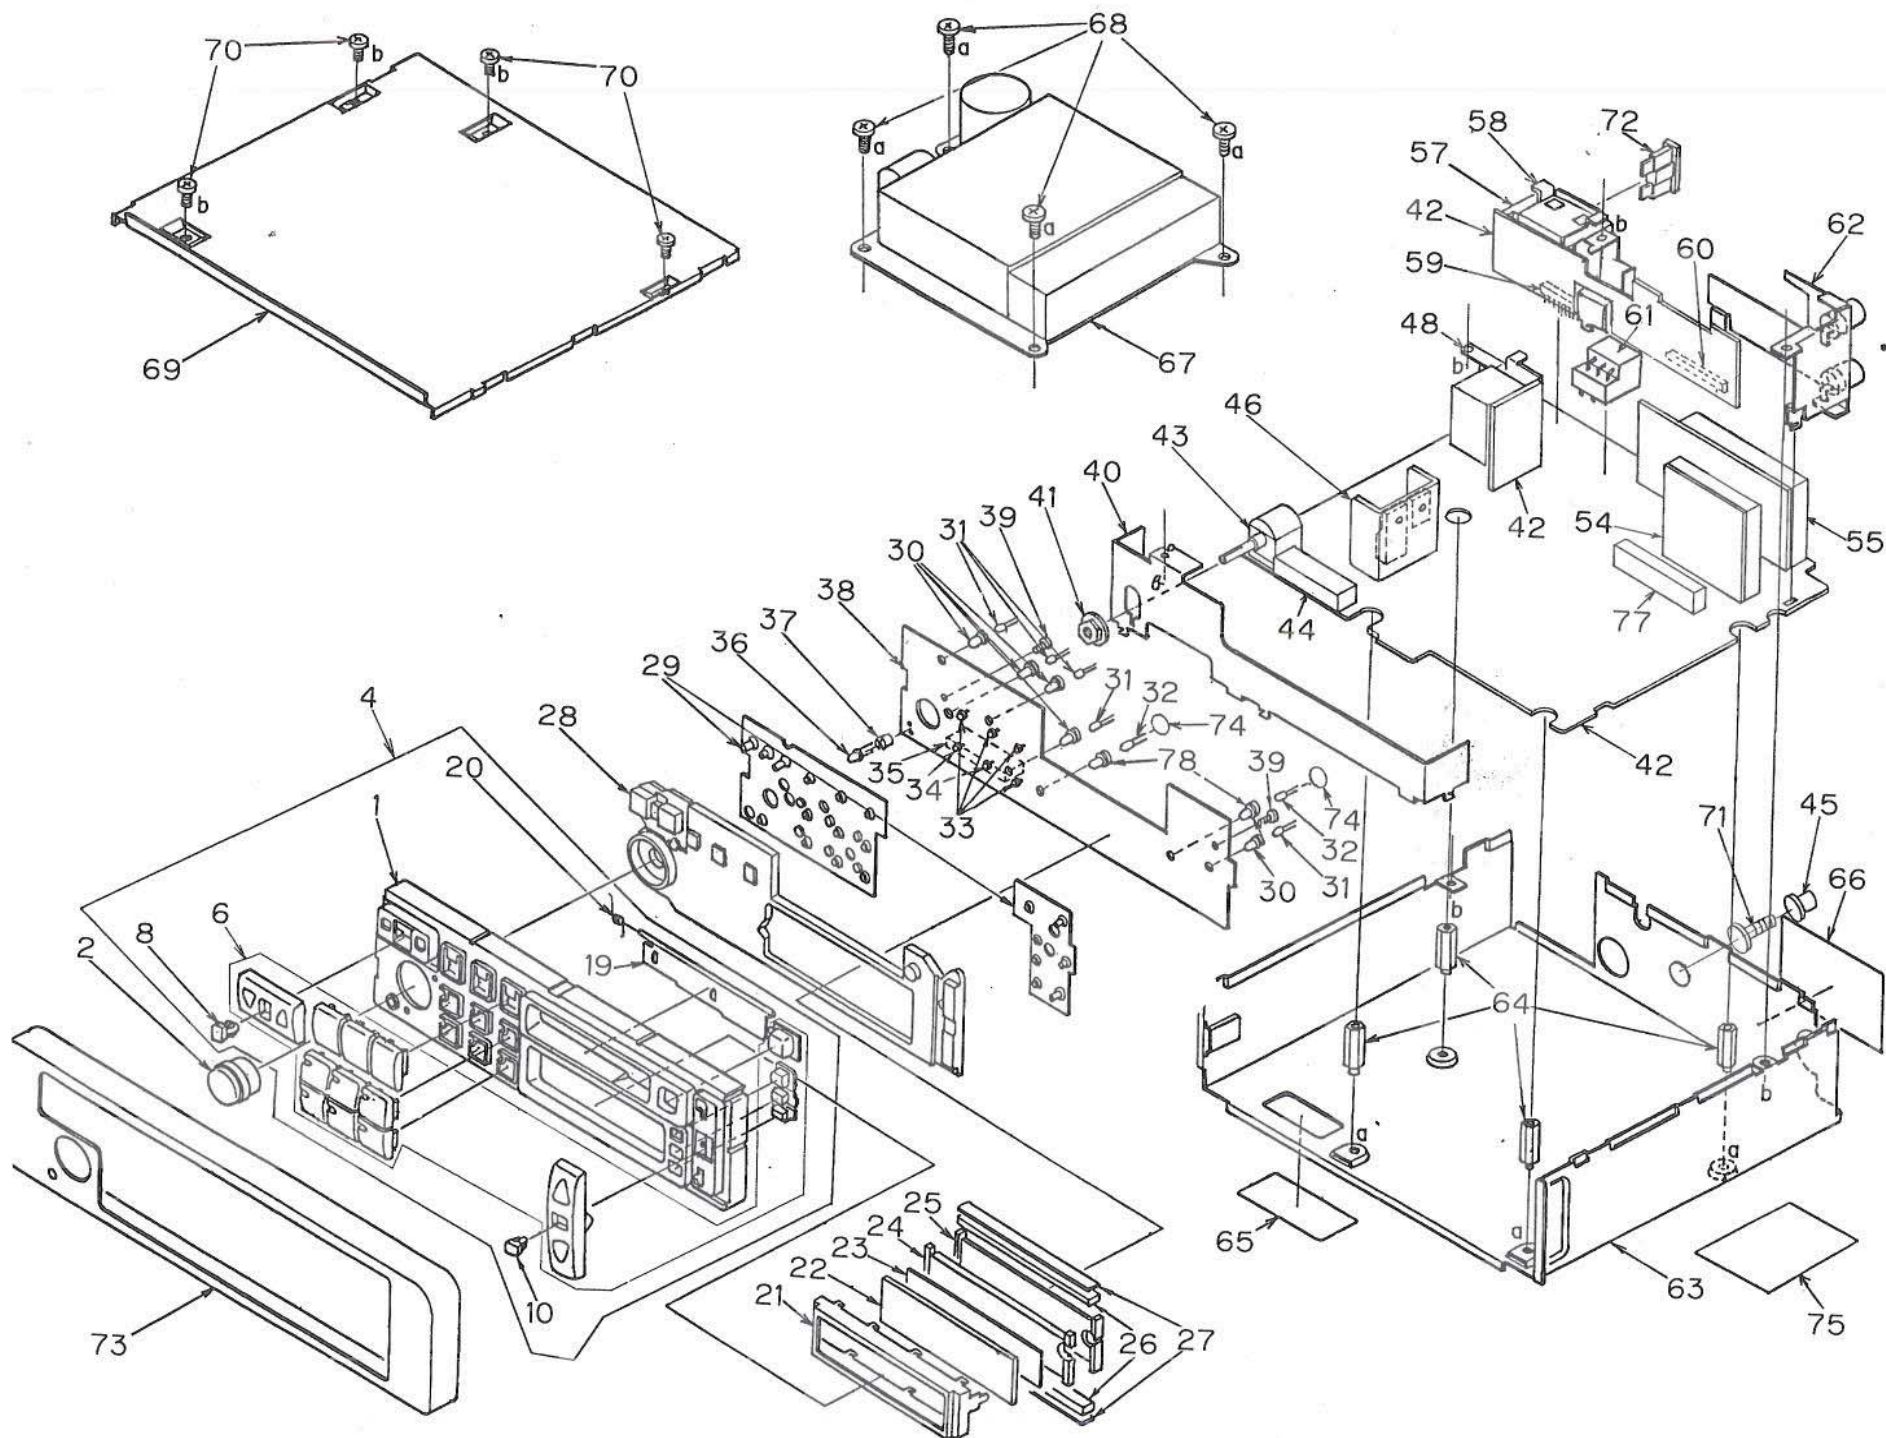

■PARTS LIST:

◎Electrical section

◎ESCUTCHEON P.W.B

REF NO.	PART NO.	DESCRIPTION	QTY
D104	001-0207-00	LED *RED	1
D101-103, 107	001-0486-04	LED GLIHS111	4
D105, 106	001-7009-01	LED GLIHS112	2
C104, 107	043-1601-10	CHIP-C 0.1 μ F	2
IC101	051-1345-15	IC MB88307APFG	1

REF NO.	PART NO.	DESCRIPTION	QTY
IC102, 103	051-6005-00	IC LC75821E	2
C101	176-3301-00	CHIP-C 33pF	1
C102	178-1032-05	CHIP-C 0.01 μ F	1
C103, 106	178-6812-05	CHIP-C 680pF	2

◎MAIN P.W.B

REF NO.	PART NO.	DESCRIPTION	QTY
D105, 1113 207, 212, 215 216, 224, 225 229, 302, 303	001-0330-00	DIODE 1SS119	11
D108, 129, 600 1111, 601	001-0356-00 001-0354-00	DIODE 1SS184 MA151WK	5
D501	001-0356-05 001-0354-05	DIODE 1SS181 MA151WA	1
D205, 222, 227 228	001-0367-00 001-0541-00	DIODE 1SS226 MA157A	4
D101	001-0377-34 001-0376-34	DIODE MA4062L MTZJ6.2A	1
D206, 211	001-0377-41 001-0376-42	DIODE MA4075M MTZJ7.5C	2
D200	001-0377-46 001-0376-47	DIODE MA4091L MTZJ9.1B	1
D201, 204	001-0377-48 001-0376-49	DIODE MA4091H MTZJ10A	2
D102	001-0377-50 001-0376-51	DIODE MA4100M MTZJ10C	1
D208	001-0425-31	DIODE HZS18J	1
D100, 106, 209 210, 223, 310	001-0466-00 001-0499-00	DIODE S5688B ERA15-01	6
D1150, 202	001-0516-00	DIODE MA111	2
D103, 104	001-0579-00	DIODE 1SV128	2
TH001	002-0222-00	THERMISTOR	1
T200	009-0470-02	CHOKE	1
T501	009-0618-01	CHOKE	1
L100	010-2003-03	COIL	1
L104, 107, 201 301	010-2230-02	COIL *0.22 μ H	4
L106	010-2230-03	COIL *0.27 μ H	1
L101, 102, 105	010-2230-16	COIL *3.3 μ H	3
L103	010-2230-33	COIL *82 μ H	1
VR501, 502	012-5123-06	VARIABLE-R *10k	2
VR100, 102	012-5123-13	VARIABLE-R *220k	2
RY100	014-0497-00	RELAY	1
C109, 150, 219	042-0397-00	CHIP-C 16V 1 μ F TAN	3
C114	042-0397-03	CHIP-C 25V 0.47 μ F TAN	1
C126, 226	042-0505-03	ELECTRO-C 16V 2.2 μ F	2
C208	042-0505-84	ELECTRO-C 10V 33 μ F	1
C130, 138, 145 146	043-1600-47	CHIP-C 0.047 μ F	4
C116, 123, 1231 440, 493	043-1600-82	CHIP-C 0.082 μ F	5
C107, 113, 133 149, 208, 222 224, 477	043-1601-10	CHIP-C 0.1 μ F	8
IC105	051-0350-55	IC NJM4558M	1
IC402, 403	051-0853-01	IC M5201FP	2
IC101	051-1014-10	IC TA7291S	1
IC501	051-1038-01	IC CXA1102M	1
IC100	051-1282-00	IC TA7372P	1
IC405	051-1292-00	IC NJM4565M-D	1
IC204	051-1375-35	IC	1
IC305	051-1407-00	IC NJM4556L	1
IC600-603	051-1407-10	IC NJM4556M-B	4
IC202	051-1556-05	IC S-80740AN	1
IC102	051-1585-05	IC TD7104F	1
IC103	051-1717-05	IC LC7219M	1
IC200	051-1822-05	IC S-80722AN	1

REF NO.	PART NO.	DESCRIPTION	QTY
IC404	051-5001-00	IC M51139FPA	1
IC300	051-5003-00	IC M62409FP	1
IC203	051-7400-06	IC HD74LS07FP	1
IC205	052-3121-00	IC μ PD75518GF-207-3B9	1
SUP100, 101	060-0122-10	SURGE PROTECTOR	2
X200	060-0130-50	CERA-RESONATOR *4.19MHz	1
X100	061-1066-00	CRYSTAL*7.2MHz	1
Q210	100-0885-00	TRANSISTOR 2SA885	1
Q101, 116, 119 215, 221, 305 600-603	100-1162-00 100-1037-00 100-1179-00	TRANSISTOR 2SA1162 2SA1037 2SA1179	10
Q118, 208	100-1297-00 101-0811-00	TRANSISTOR 2SA1297 2SB811	2
Q113, 203, 205	100-1431-00	TRANSISTOR 2SA1431	3
Q109	101-1243-00	TRANSISTOR 2SB1243	1
Q102, 103, 105 108, 110, 114 115, 1111 1112, 204, 207 212, 214, 219 2001	102-2712-00 102-2412-00	TRANSISTOR 2SC2712 2SC2412	15
Q107, 200, 201	103-1858-00	TRANSISTOR 2SD1858	3
Q206	103-2012-00	TRANSISTOR 2SD2012	1
Q111	108-0669-00	FET 2SK669	1
Q211, 218, 302	125-0002-02 125-0001-01 125-0014-02	TRANSISTOR RN2402 UN2111 DTA114EK	3
Q112	125-2004-01 125-2020-01	TRANSISTOR RN1401 DTC143EK	1
Q117, 120 1113, 1114 303	125-2004-02 125-2005-01 125-2020-02	TRANSISTOR RN1402 UN2211 DTC114EK	5
Q104, 106, 209 217, 401	125-2004-03	TRANSISTOR RN1403	5
C214, 216, 220	172-1041-11	POLYESTOR-C 0.1 μ F	3
C100	176-1007-00	CHIP-C 10pF	1
C140, 142, 338 348, 601, 602 608, 610, 613 614, 619, 621	176-1011-00	CHIP-C 100pF	12
C134	176-1501-00	CHIP-C 15pF	1
C135	176-1801-00	CHIP-C 18pF	1
C124	176-2201-00	CHIP-C 22pF	1
C105, 492, 499	176-2211-00	CHIP-C 220pF	3
C102, 103	176-2701-00	CHIP-C 27pF	2
C122, 141	176-4096-00	CHIP-C 4pF	2
C443, 496	176-5611-00	CHIP-C 560pF	2
C111, 470, 472 473, 475	176-6801-00	CHIP-C 68pF	5
C1010, 2061 128, 129	178-1022-05	CHIP-C 1000pF	4
C106, 117, 1199 127, 2001, 132 210, 212, 225 309, 467, 468 517, 518 801-810, 814	178-1032-05	CHIP-C 0.01 μ F	25
C444, 497	178-1532-05	CHIP-C 0.015 μ F	2
C101, 110, 1111 137	178-2232-05	CHIP-C 0.022 μ F	4
C208, 480, 482	178-2242-78	CERAMIC CAP-C	2

REF NO.	PART NO.	DESCRIPTION	QTY
C108, 139	182-4763-23	ELECTRO-C 10V 47 μ F	2
C211	182-4763-33	ELECTRO-C 16V 47 μ F	1
C118, 507, 508	183-1053-61	ELECTRO-C 50V 1 μ F	3
C104, 121, 206 213, 218, 155 156, 305, 471 474, 478, 479 512	183-1063-31	ELECTRO-C 16V 10 μ F	13
C323, 335, 605 606, 617, 618	183-1066-21	ELECTRO-C 10V 10 μ F NP	6
C510	183-1073-11	ELECTRO-C 6.3V 100 μ F	1
C207	183-2243-61	ELECTRO-C 50V 0.22 μ F	1
C484, 485	183-2253-61	ELECTRO-C 50V 2.2 μ F	2
C300, 317, 481 446, 448, 483 486-491	183-2256-51	ELECTRO-C 35V 2.2 μ F NP	12
C315	183-2263-11	ELECTRO-C 6.3V 22 μ F	1
C341, 603, 604 615, 616	183-2263-31	ELECTRO-C 16V 22 μ F	5

REF NO.	PART NO.	DESCRIPTION	QTY
C120, 200, 202 303, 307, 466 509	183-3363-21	ELECTRO-C 10V 33 μ F	7
C147, 148, 501 502	183-4753-51	ELECTRO-C 35V 4.7 μ F	4
C125, 2050 136, 1112	183-4763-11	ELECTRO-C 6.3V 47 μ F	4
C112, 511, 513 514	183-6843-61	ELECTRO-C 50V 0.68 μ F	4
C115, 119, 154 201, 203, 205 476, 600, 607 609, 611, 612 620, 622-624	183-6863-21	ELECTRO-C 10V 68 μ F	16
C352, 353	184-2273-22	ELECTRO-C 10V 220 μ F	2
C215	184-3373-31	ELECTRO-C 16V 330 μ F	1
C223	184-4773-12	ELECTRO-C 6.3V 470 μ F	1
C217, 2171	184-4773-32	ELECTRO-C 16V 470 μ F	2


◎SIDE P.W.B (TAPE MECHANISM)

REF NO.	PART NO.	DESCRIPTION	QTY
C6, 7	042-0476-01	ELECTRO-C 10V 33 μ F	2
IC1	051-1546-10	IC BA3430S	1
C8, 9	173-1231-10	POLYESTOR-C 0.012 μ F	2
C1-4, 12	175-5611-50	CHIP-C 560pF	5
C11	183-1043-61	ELECTRO-C 50V 0.1 μ F	1

REF NO.	PART NO.	DESCRIPTION	QTY
C14	183-2263-31	ELECTRO-C 16V 22 μ F	1
C13	183-4743-61	ELECTRO-C 50V 0.47 μ F	1
C10, 15, 16	183-4753-51	ELECTRO-C 35V 4.7 μ F	3
C5	183-4763-11	ELECTRO-C 6.3V 47 μ F	1

■EXPLODED VIEW • PARTS LIST:

©Tape mechanism section 930-0735-00

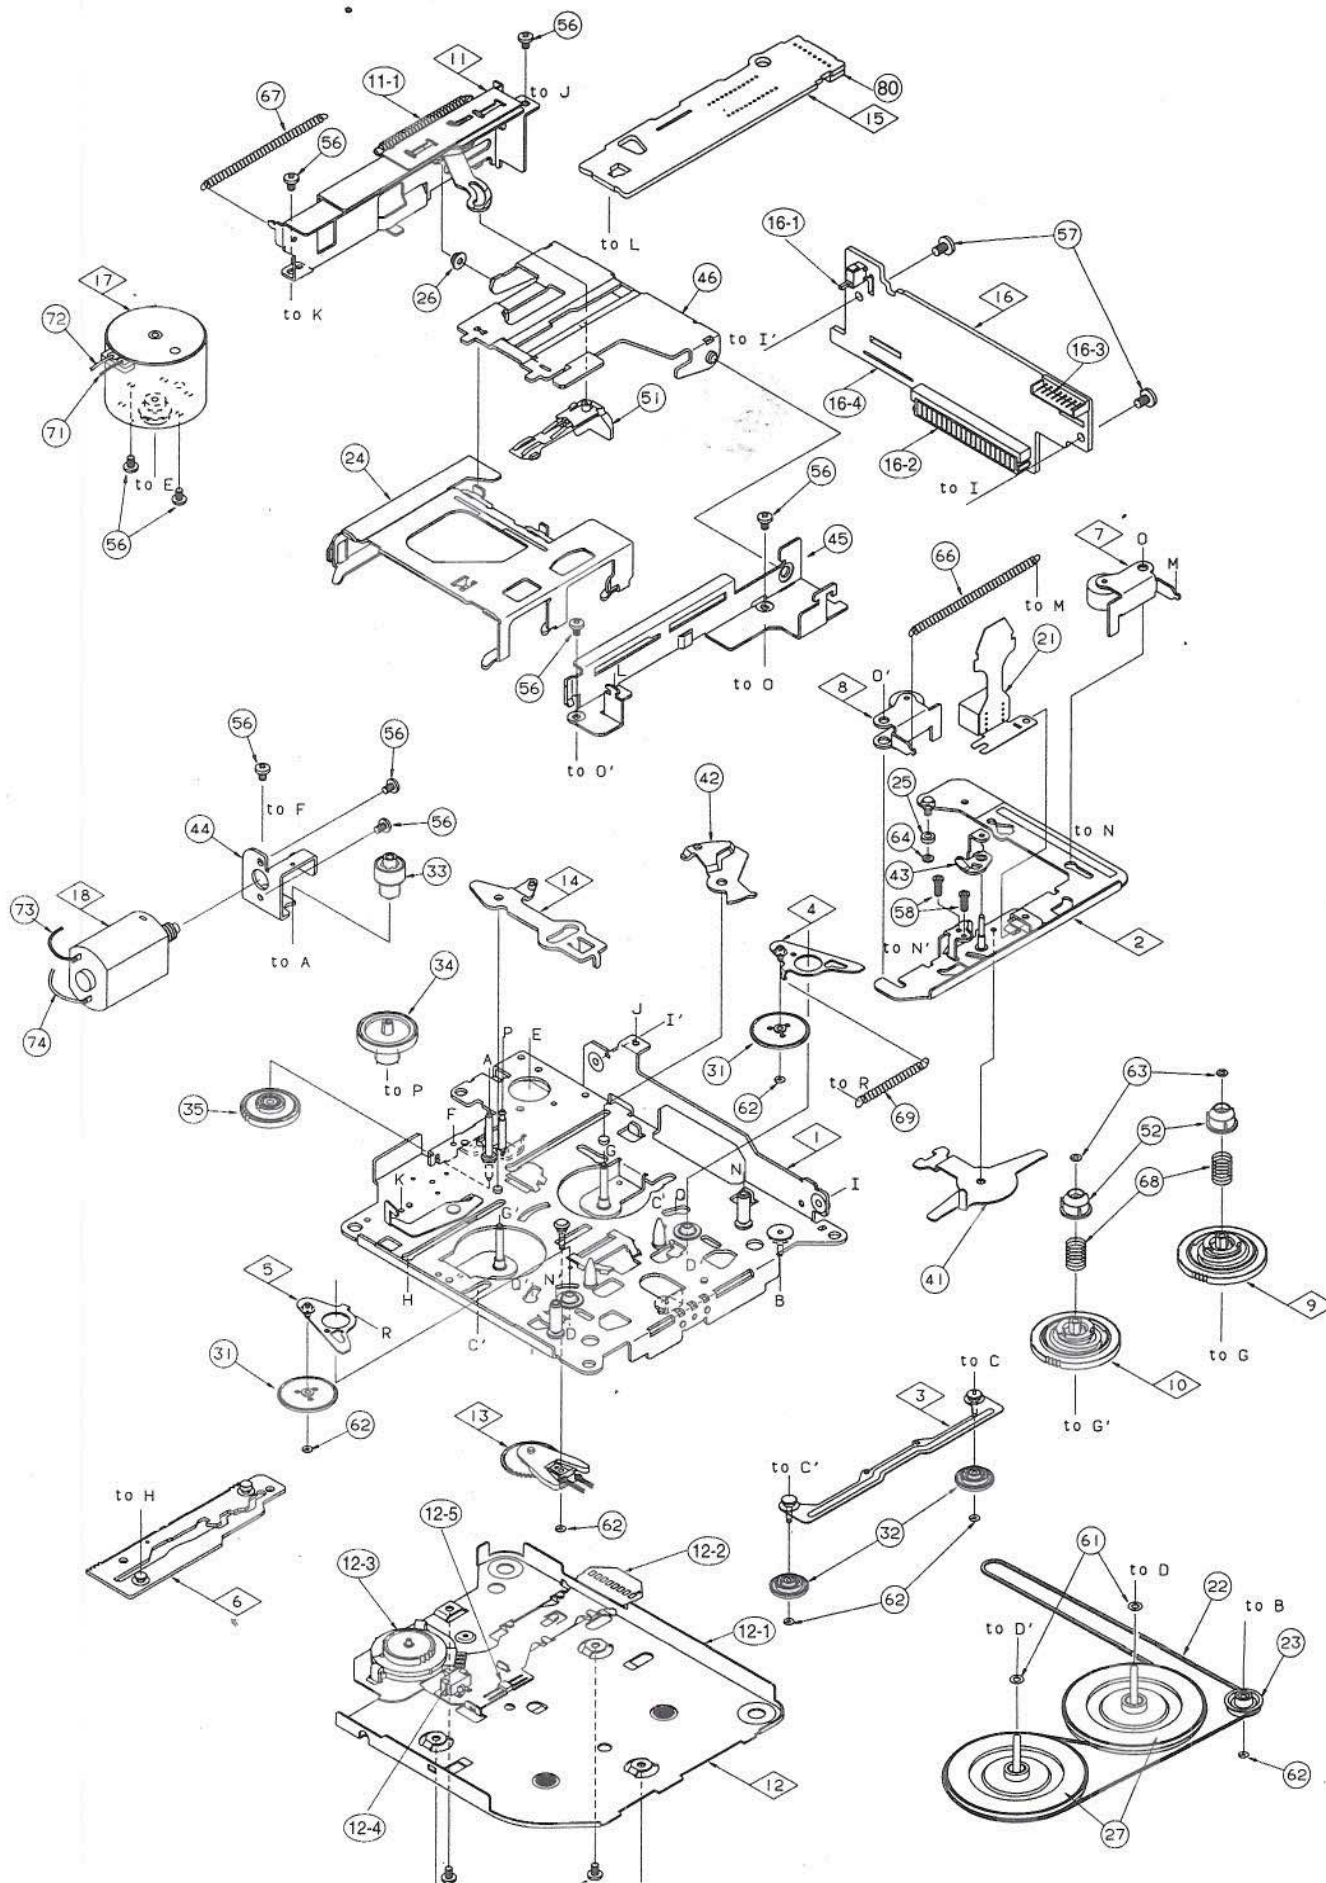

NO	PART NO.	DESCRIPTION	QTY
1	960-4294-08	DECK PLATE-ASSY	1
2	960-4261-04	HEAD PLATE ASSY	1
3	960-4262-03	FF/REW-P-ASSY	1
4	960-4263-01	IDLER-P-ASSY F	1
5	960-4264-01	IDLER-P-ASSY R	1
6	960-4266-05	MODE PLATE-ASSY	1
7	960-4269-04	ROLLER ASSY F	1
8	960-4270-04	ROLLER ASSY R	1
9	960-4271-02	REEL ASSY F	1
10	960-4272-02	REEL ASSY R	1
11	960-4298-90	EJECT SUB-ASSY	1
11-1	750-2948-01	SW-PLATE SPRING	1
12	960-4296-90	BOTTOM SUB-ASSY	1
12-1	960-4295-02	BOTTOM P-ASSY	1
12-2	099-9548-00	FLEX PWB	1
12-3	013-3951-00	SWITCH	1
12-4	013-3953-00	SWITCH	1
12-5	051-1114-03	IC NJL5161K-P	1
12-6	746-0767-00	WASHER	2
13	960-4282-03	DETECT-SUB-ASSY	1
14	960-4301-02	PLAY-L-ASSY GF	1
15	099-9540-00	SIDE PWB	1
15-1	074-0881-08	OUTLET SOCKET*8P	1
16	990-0692-00	REAR-PWB-ASSY	1
16-1	013-3906-00	SWITCH	1
16-2	074-0978-20	OUTLET SOCKET*20P	1
16-3	076-0353-08	PLUG*8P	1
16-4	099-9541-00	PWB	1
17	SMA-130-100	DC-MOTOR*MAIN	1
18	SMA-131-100	DC-MOTOR*POWER	1
21	011-0307-28	HEAD	1
22	602-0118-00	BELT	1
23	604-0046-00	TENSION PULLEY	1

NO	PART NO.	DESCRIPTION	QTY
24	606-0101-05	PACK GUIDE	1
25	610-0342-01	HEAD-P-ROLLER	1
26	610-0343-00	GUIDE A ROLLER	1
27	611-0091-02	FLYWHEEL	2
31	613-0285-02	IDLER GEAR	2
32	613-0286-02	FF/REW GEAR	2
33	613-0288-01	HERICAL GEAR	1
34	613-0289-01	GEAR A	1
35	613-0290-00	POWER GEAR	1
41	630-2597-01	CHANGE LINK	1
42	630-2598-04	EJECT LINK	1
43	630-2600-01	ADJUST LINK	1
44	630-2601-02	MOTOR PLATE	1
45	630-2626-01	PWB FRAME	1
46	630-2605-01	GUIDE ARM	1
51	631-1992-01	PACK STOPPER	1
52	631-1993-01	SLIDE BUSH	2
56	716-0484-00	SCREW*M2X2.25 B	13
57	716-0761-01	SCREW	2
58	716-0833-10	AZIMUTH SCREW	2
61	746-0624-00	WASHER	2
62	746-0724-00	WASHER	6
63	746-0761-00	WASHER	2
64	746-0762-00	WASHER	1
66	750-2946-02	PINCH SPRING	1
67	750-2947-01	EJECT-P-SPRING	1
68	750-2949-00	SLIDE SPRING	2
69	750-3017-01	IDLER-P-SPRING	1
71	800-4911-60	VINYL-COAT-WIRE*BLK	1
72	802-4911-60	VINYL-COAT-WIRE*RED	1
73	806-4914-60	VINYL-COAT-WIRE*BLU	1
74	809-4914-60	VINYL-COAT-WIRE*WHT	1