




EXPLODED VIEW

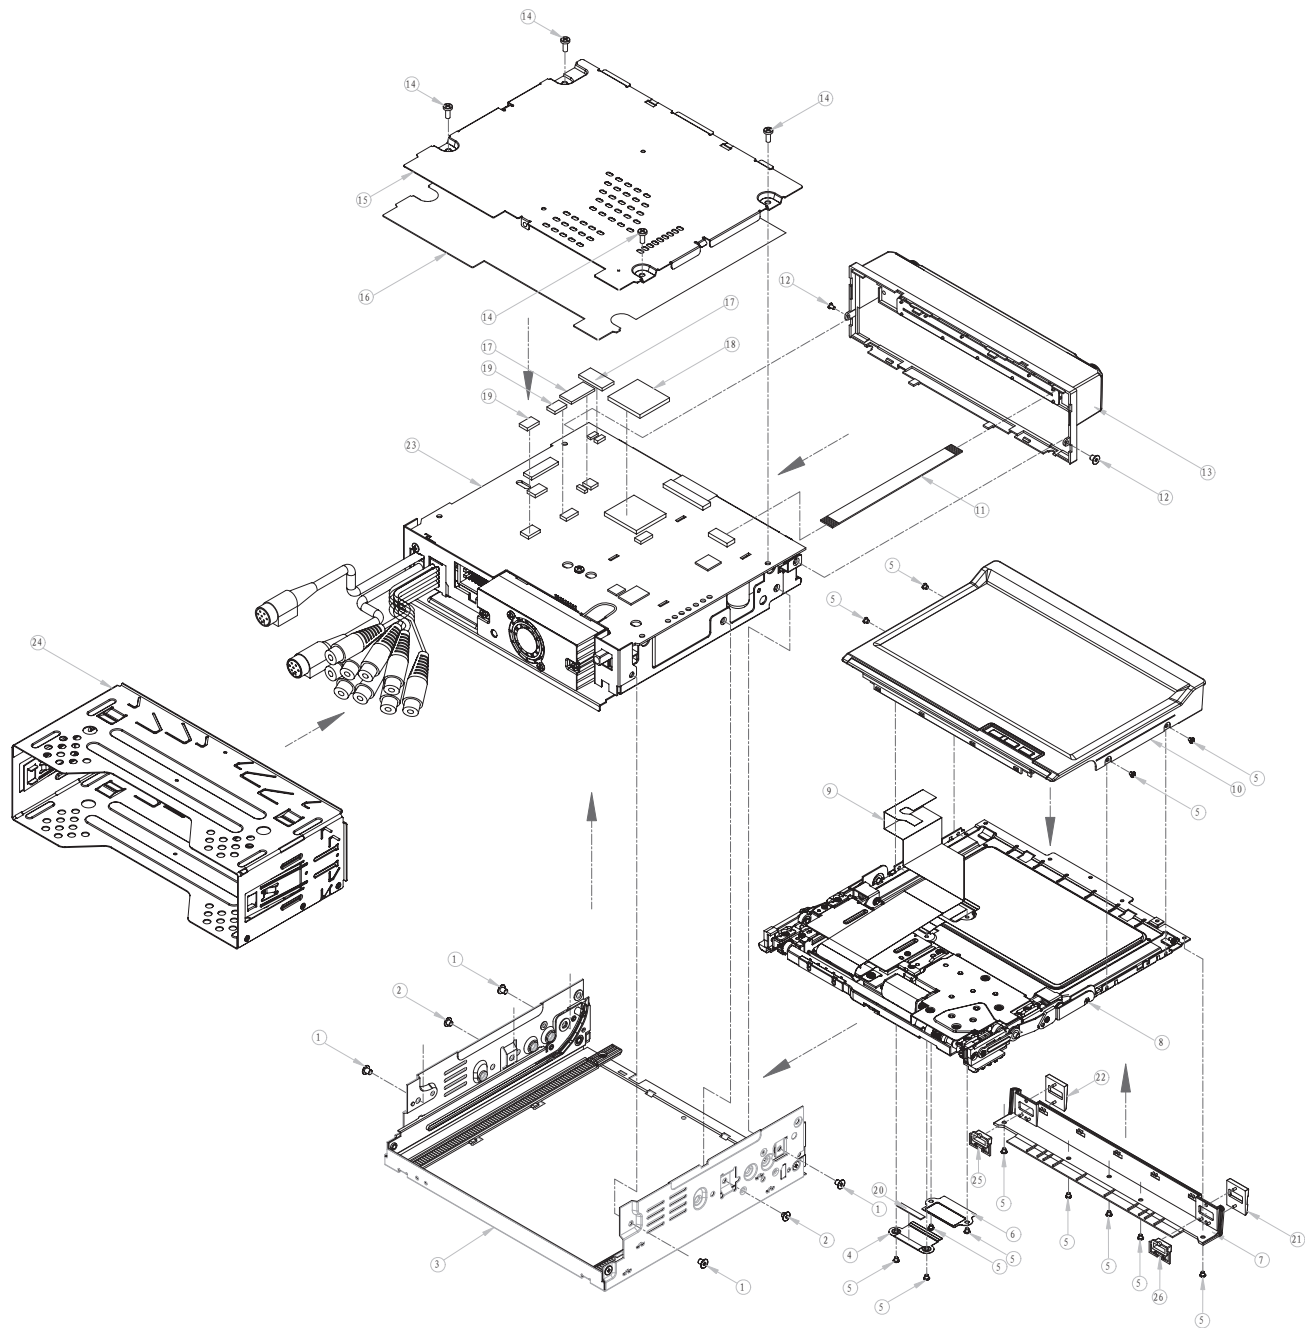


26	1-2810-3006-00-01	knob open	1
25	1-2810-3006-00-03	knob hand	1
24	1-2810-2002-00-00	cupboard	1
23	B-2810-1000-00-00	MB ASM	1
22	1-2810-3018-00-01	decorate plate screen L	1
21	1-2810-3019-00-01	decorate plate screen R	1
20	1-2810-8004-00-00	EVA sheet	1
19	1-2701-8019-00-00	heat sheet 2	2
18	1-2901-8004-00-00	heat sheet	1
17	1-2701-8020-00-00	heat sheet 3	2
16	1-2810-8022-00-00	PC sheet	1
15	1-2701-2201-02-00	top	1
14	1-2651-6010-01-03	screw:M2.6036.0	4
13	B-2810-1004-00-00	panel ASM	1
12	1-2701-6016-02-00	screw:M1.7033.0	2
11	3-WF60-0080-20-85	FFC WIRE	1
10	B-2810-1003-00-00	screen ASM	1
9	3-WFX-7027-64-03	FFC	1
8	B-2810-1002-00-00	drug plate ASM	1
7	1-2810-3004-00-01	screen panel cover	1
6	1-2702-2002-00-01	fpc cover screen 1	1
5	1-2701-6006-00-01	screw:M2.0X2.0	13
4	1-2702-2001-01-00	fpc cover screen	1
3	B-2810-1001-00-00	bottom ASM	1
2	1-2701-6013-00-01	screw:M2.0X2.5	2
1	1-2701-6014-00-01	screw:M3.0X3.5	4
NO.	PART NO.	DESCRIPTION	QTY

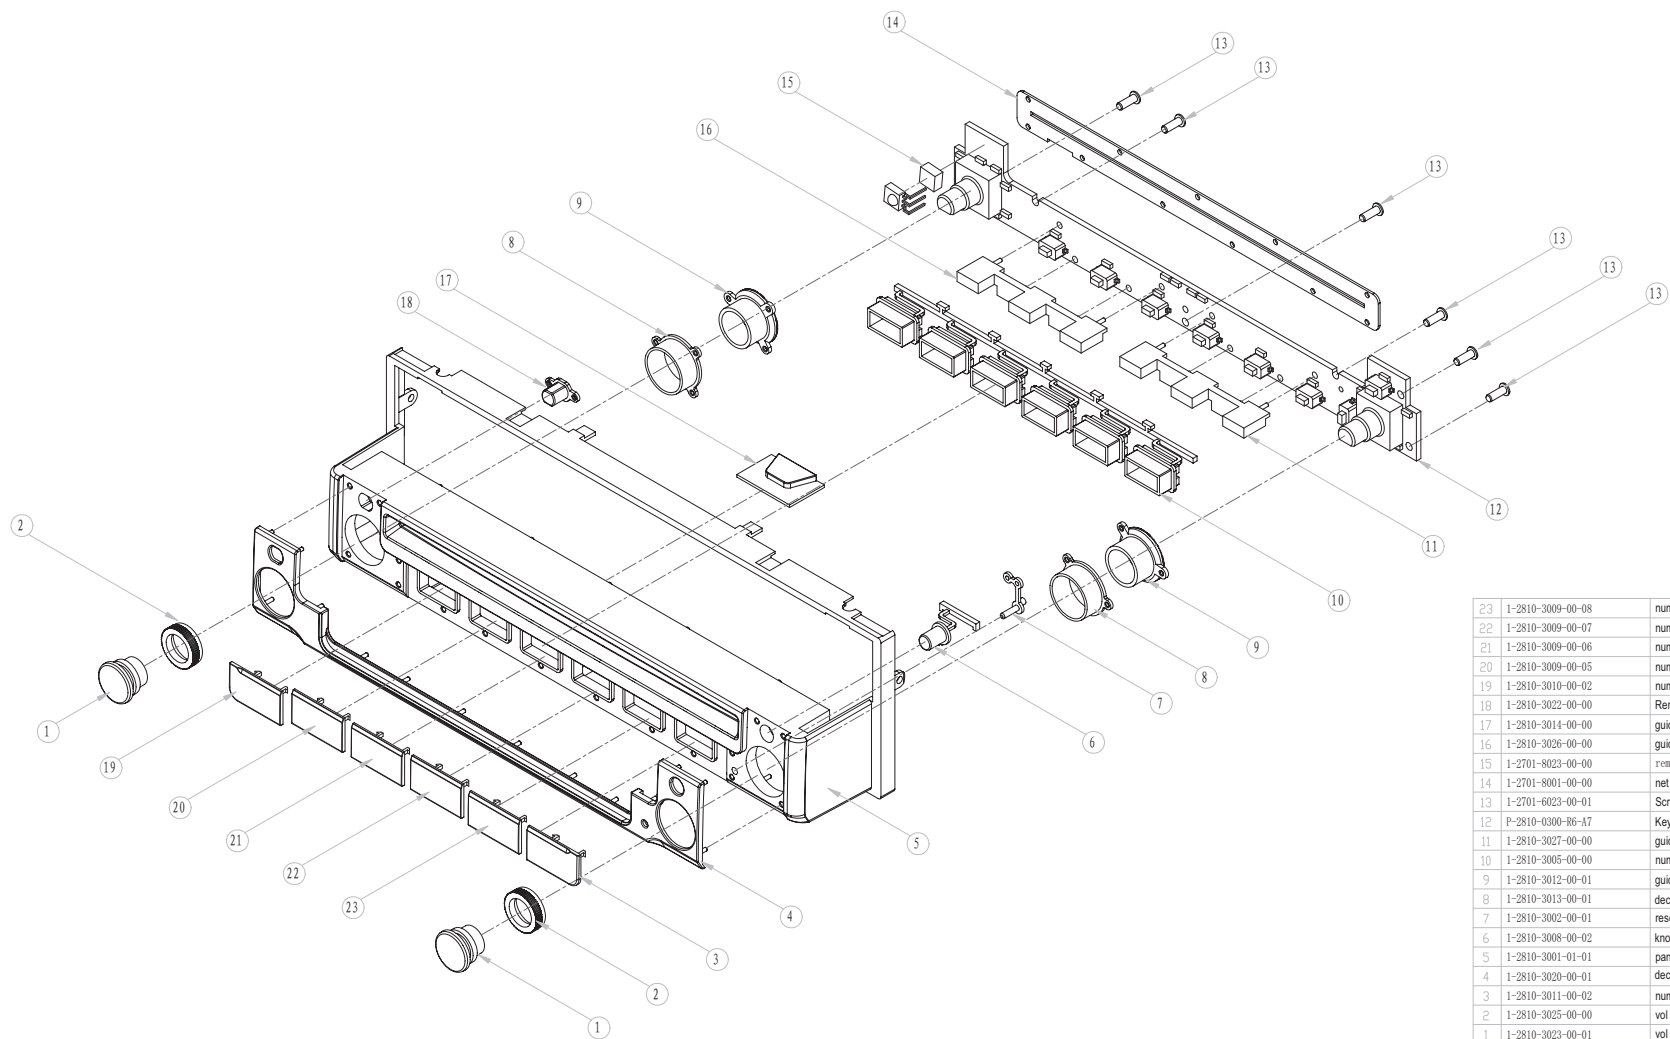


23	1-2810-3009-00-08	num knob center 4	1
22	1-2810-3009-00-07	num knob center 3	1
21	1-2810-3009-00-06	num knob center 2	1
20	1-2810-3009-00-05	num knob center 1	1
19	1-2810-3010-00-02	num knob left	1
18	1-2810-3022-00-00	Remote lens	1
17	1-2810-3014-00-00	guidlight knob disk	1
16	1-2810-3026-00-00	guidlight shaft	1
15	1-2701-8023-00-00	remote bkt	1
14	1-2701-8001-00-00	net disk	1
13	1-2701-6023-00-01	Screw : M2.0 X 5.0	7
12	P-2810-0300-R6-A7	Key pcb ass'y	1
11	1-2810-3027-00-00	guidlight shaft 1	1
10	1-2810-3005-00-00	num key	1
9	1-2810-3012-00-01	guidlight knob L / R	2
8	1-2810-3013-00-01	decorate knob L / R	2
7	1-2810-3002-00-01	reset key	1
6	1-2810-3008-00-02	knob eject	1
5	1-2810-3001-01-01	panel	1
4	1-2810-3020-00-01	decorate plate panle	1
3	1-2810-3011-00-02	num knob right	1
2	1-2810-3025-00-00	vol ring	2
1	1-2810-3023-00-01	vol knob	2
NO.	PART NO.	DESCRIPTION	QTY

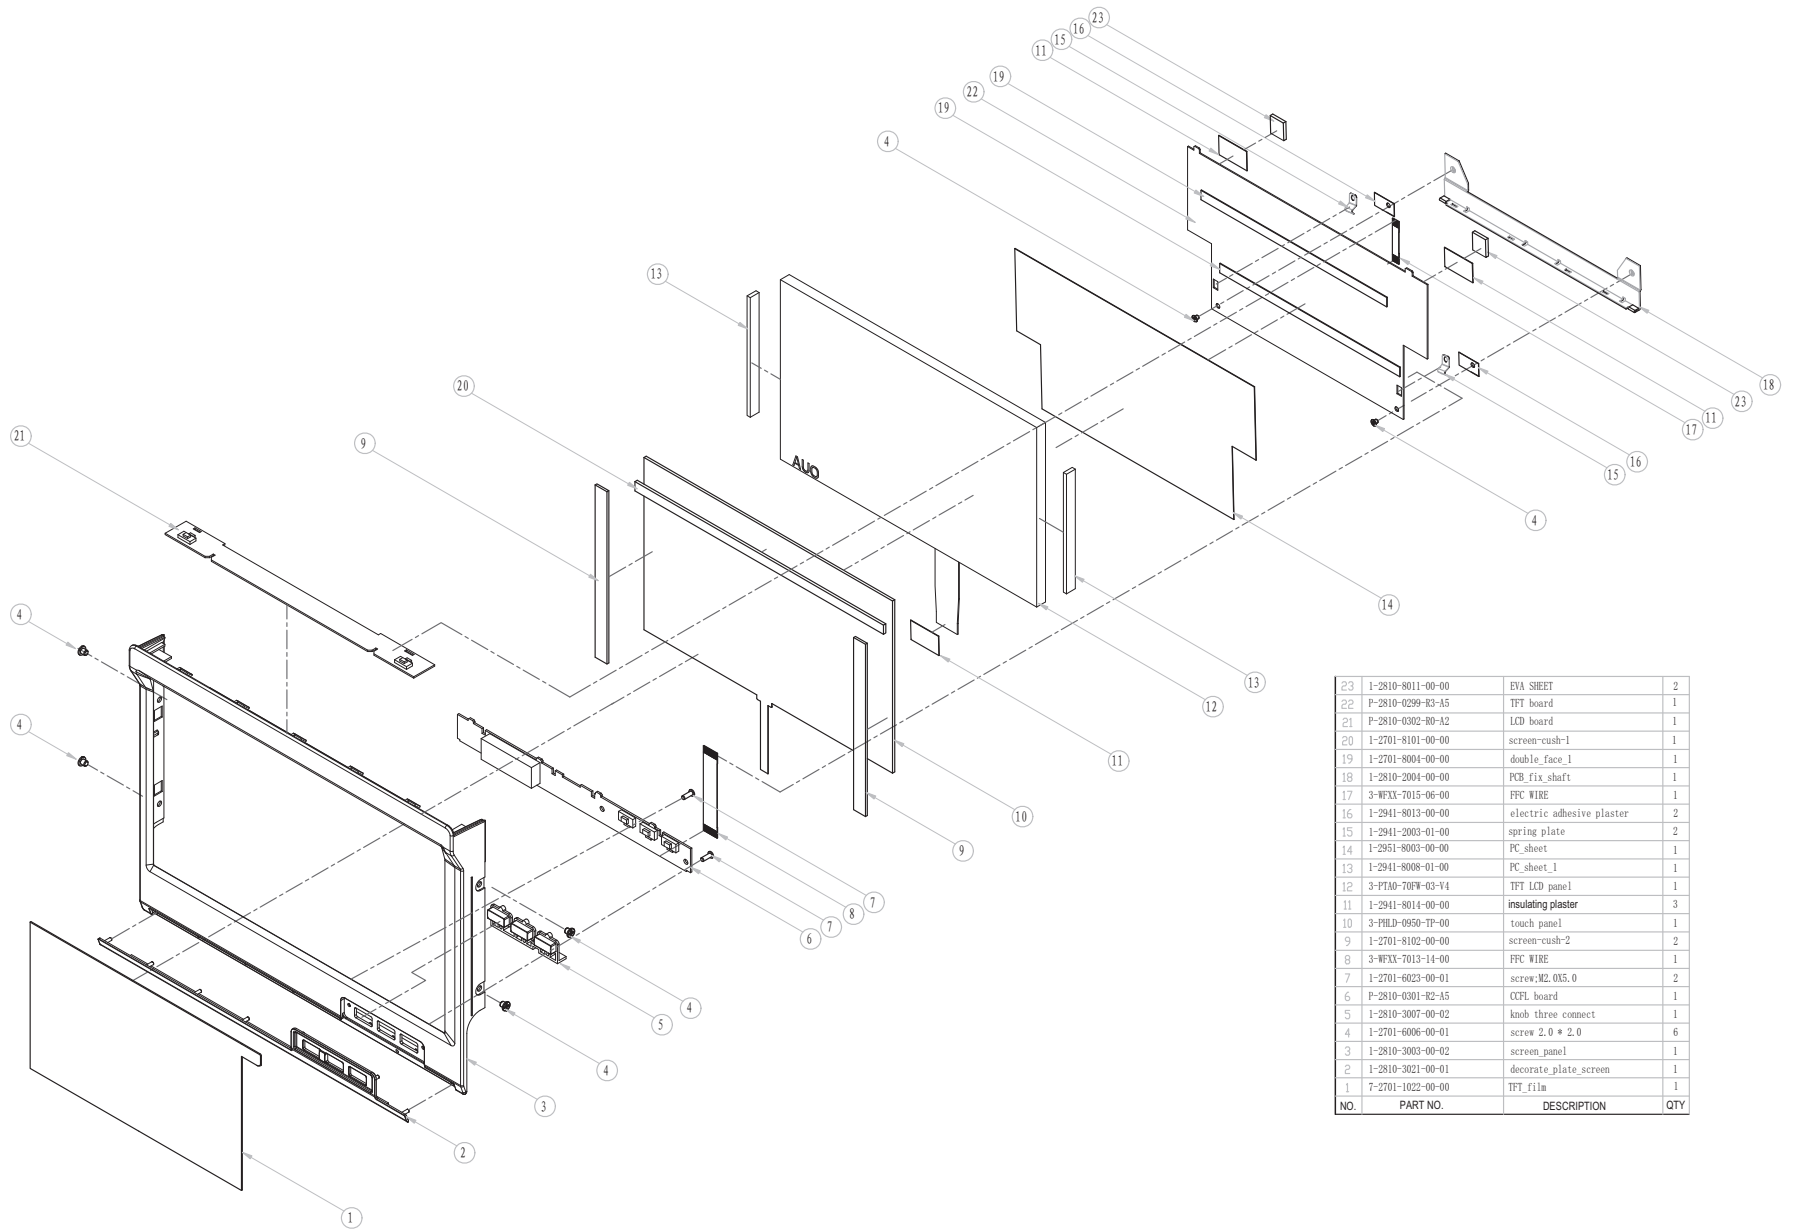


23	1-2810-8011-00-00	EVA SHEET	2
22	P-2810-0299-K3-A5	TFT board	1
21	P-2810-0302-R0-A2	LCD board	1
20	1-2701-8101-00-00	screen-cush-1	1
19	1-2701-8004-00-00	double face 1	1
18	1-2810-2004-00-00	PCB fix shaft	1
17	3-WFX-7015-06-00	FFC WIRE	1
16	1-2941-8013-00-00	electric adhesive plaster	2
15	1-2941-2003-01-00	spring plate	2
14	1-2951-8003-00-00	PC sheet	1
13	1-2941-8008-01-00	PC sheet_1	1
12	3-PTA0-70PW-Q3-V4	TFT LCD panel	1
11	1-2941-8014-00-00	insulating plaster	3
10	3-PILD-0950-TP-00	touch panel	1
9	1-2701-8102-00-00	screen-cush-2	2
8	3-WFX-7013-14-00	FFC WIRE	1
7	1-2701-6023-00-01	screw:M2.0X5.0	2
6	P-2810-0301-K2-A5	CCFL board	1
5	1-2810-3007-00-02	knob three connect	1
4	1-2701-6006-00-01	screw 2.0 * 2.0	6
3	1-2810-3003-00-02	screen_panel	1
2	1-2810-3021-00-01	decorate_plate_screen	1
1	7-2701-1022-00-00	TFT_film	1
NO.	PART NO.	DESCRIPTION	QTY

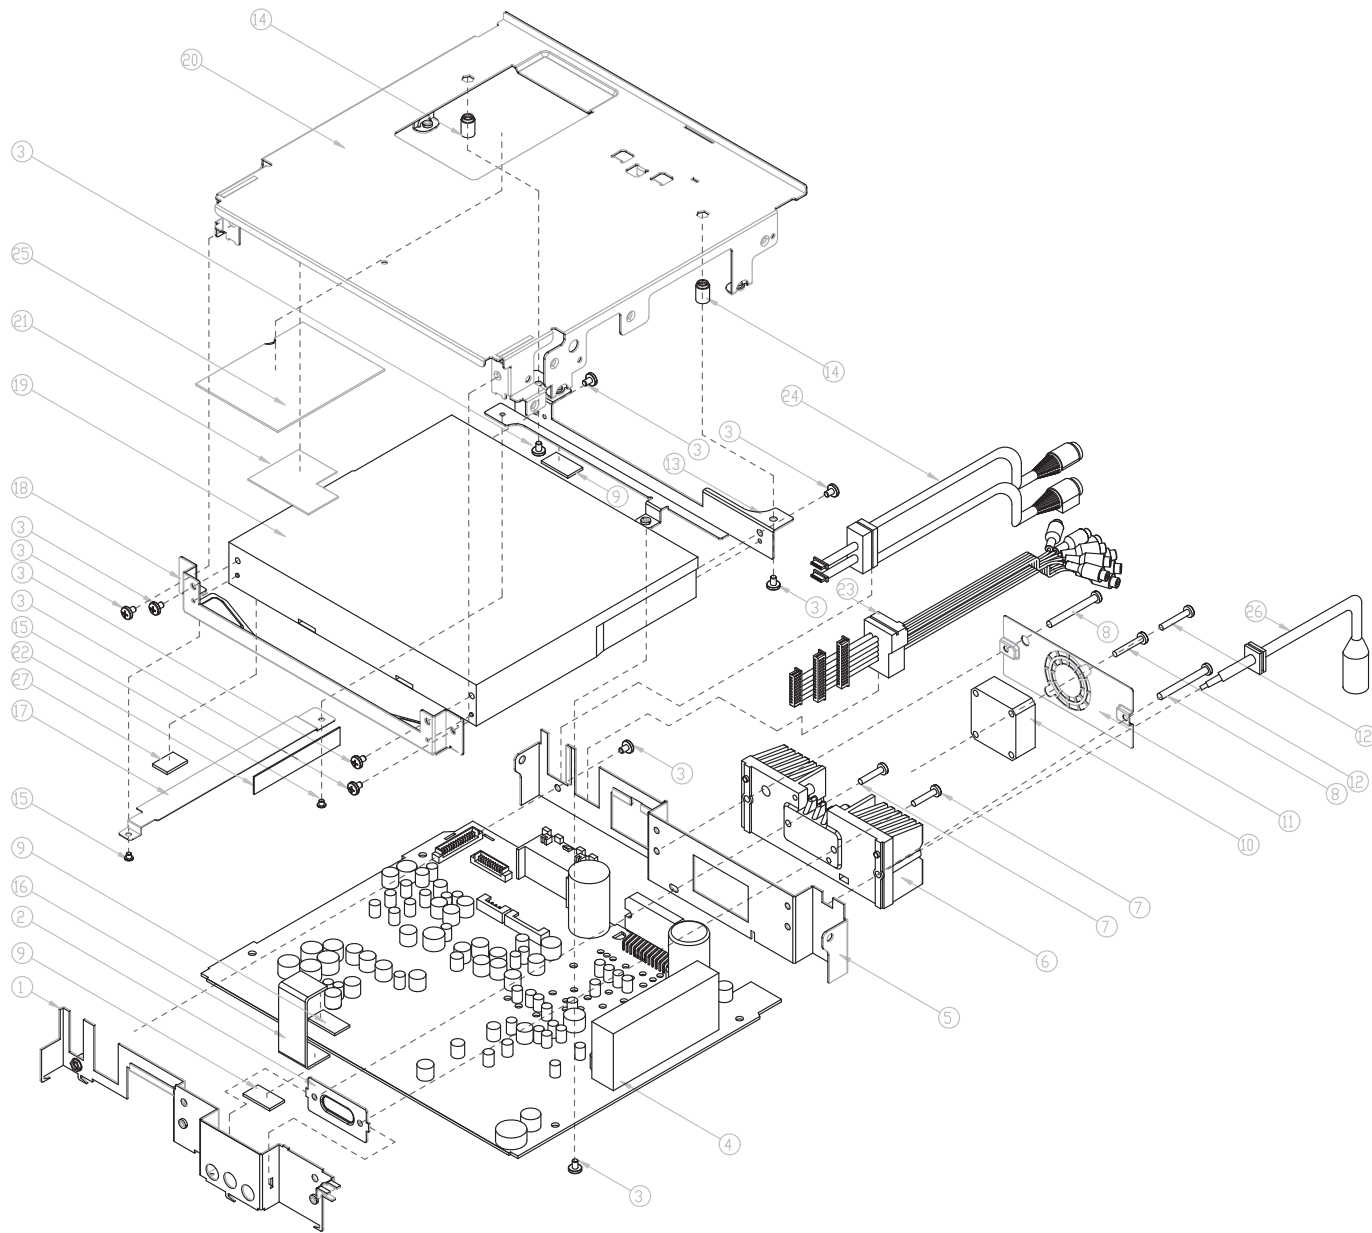

27	1-2701-8031-00-00	insulating_plaster_5	1
26	3-WZ40-1700-37-02	ANTENNA	1
25	1-2701-8009-00-00	PC_sheet_3	1
24	3-WZ40-1700-85-00	SIRIUS&IPOD WIRE	1
23	3-WZ20-0016-10-01	AUDIO&VIDEO_OUT_WIRE	1
22	1-2701-8016-00-00	insulating_plaster	1
21	1-2701-8038-00-00	PC_sheet_4	1
20	1-2701-2001-03-00	bkt_middle	1
19	C-5201-000A-00-00	mechanic asm	1
18	1-2701-2011-01-00	front_bkt	1
17	1-2701-2036-00-00	FPC_shaft	1
16	3-WPXX-7014-50-00	FPC	1
15	1-2701-6006-00-01	screw;M2.0X2.0	2
14	1-2701-4005-00-01	screw_pole_1	2
13	1-2701-2012-02-00	rear_bkt	1
12	1-2701-6019-00-01	screw;M2.6X15.0	2
11	1-2941-2005-03-00	fan_cover	1
10	3-M83X-12TL-17-00	fan	1
9	1-2701-8030-00-00	insulating_plaster_5	3
8	1-2810-6018-00-01	screw;M2.6X24.0	2
7	1-2701-6017-00-02	screw;M2.6X12.0	2
6	1-2941-7001-03-00	heat_plate	1
5	1-2810-2006-01-00	PCB_rear_bkt_1	1
4	P-2810-0298-R7-A9	Main_PCB	1
3	1-2701-6012-00-03	screw;M2.6X3.5	10
2	1-2701-2015-00-00	IC_shaft	1
1	1-2810-2007-01-00	PCB_rear_bkt	1
NO	PART NO.	DESCRIPTION	QTY

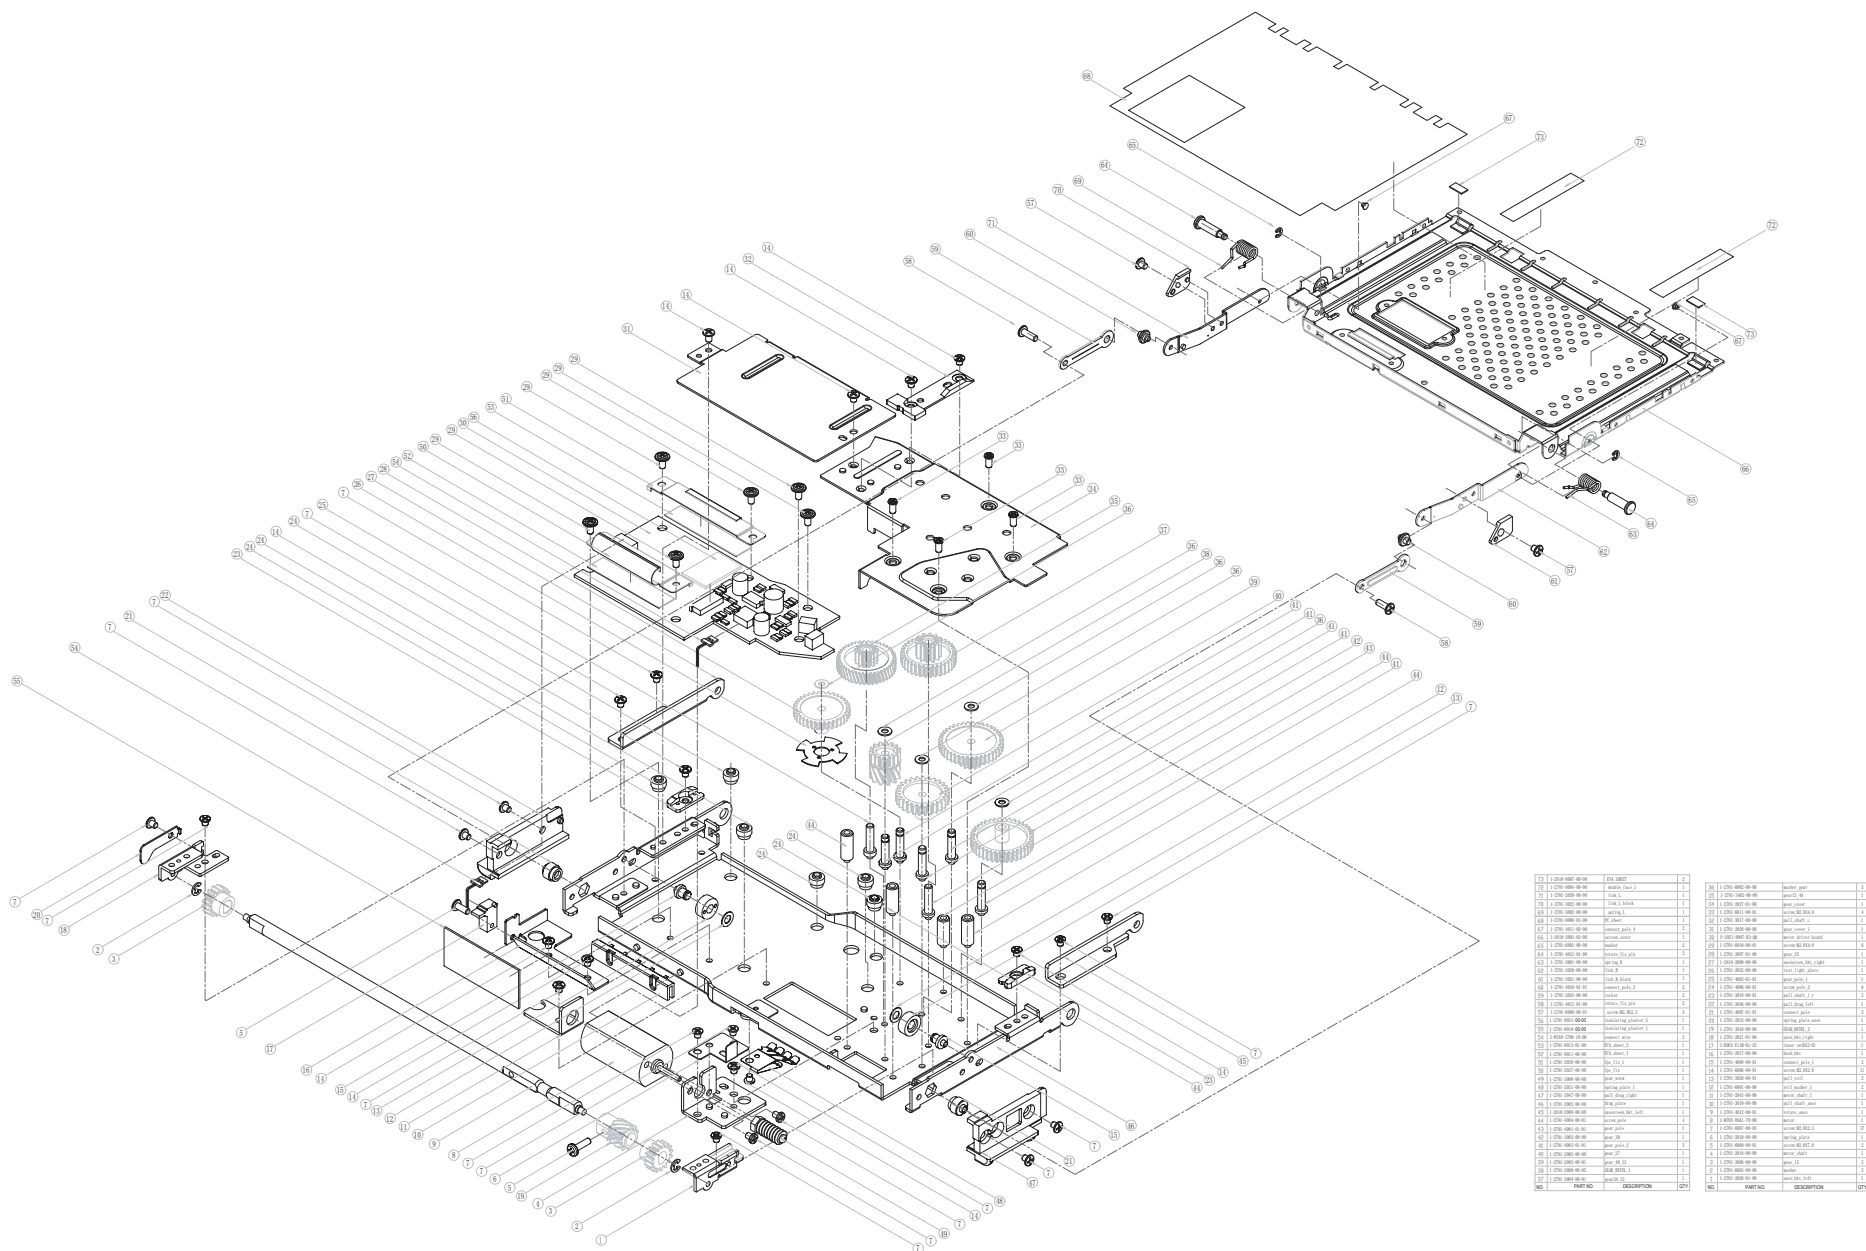

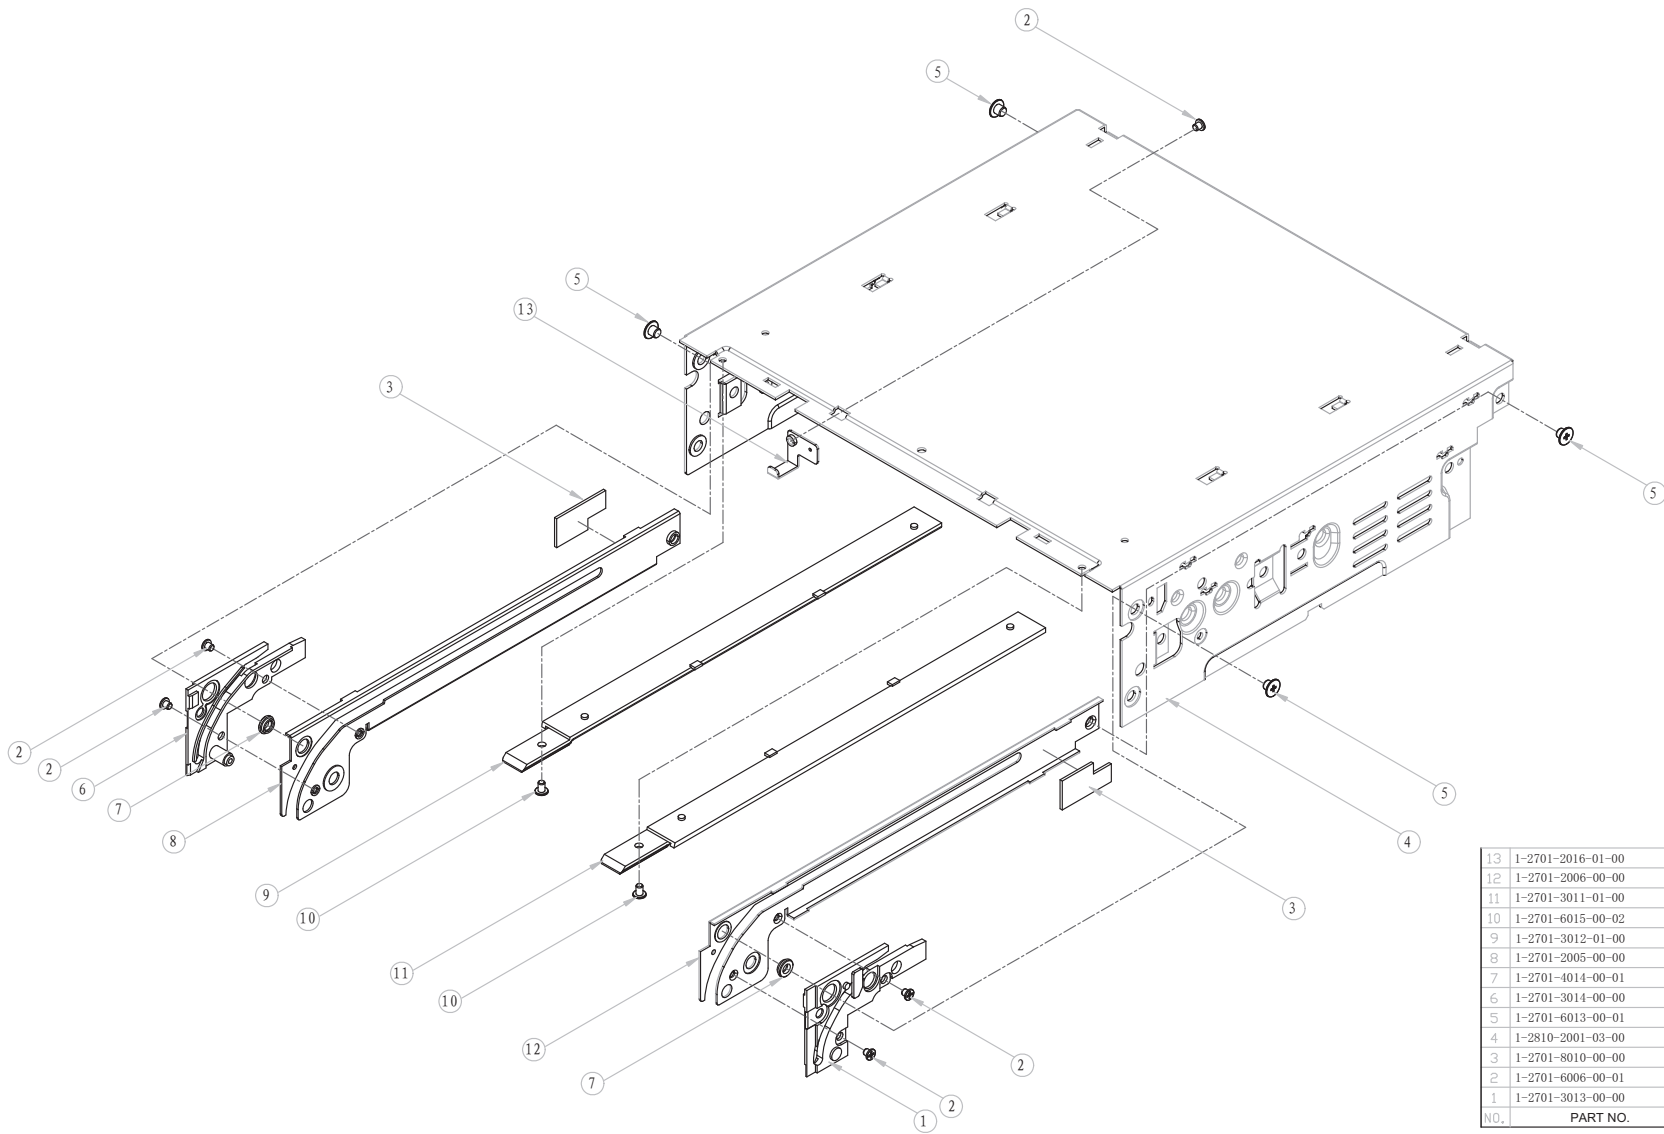

13	1-2701-2016-01-00	switch_shaft	1
12	1-2701-2006-00-00	slote_right	1
11	1-2701-3011-01-00	RACK_RIGHT	1
10	1-2701-6015-00-02	screw;M2.0X3.0	2
9	1-2701-3012-01-00	RACK_left	1
8	1-2701-2005-00-00	slote_left	1
7	1-2701-4014-00-01	screw_pole_slote	2
6	1-2701-3014-00-00	slote_left_pla	1
5	1-2701-6013-00-01	screw;M3.0X2.5	4
4	1-2810-2001-03-00	bottom	1
3	1-2701-8010-00-00	EVA_sheet	2
2	1-2701-6006-00-01	screw;M2.0X2.0	5
1	1-2701-3013-00-00	slote_right_pla	1
NO.	PART NO.	DESCRIPTION	QTY

■ ELECTRICAL PARTS LIST

NO.	PART NO.	DESCRIPTION	REFERENCE	QTY
1	3-RS31-100R-J0-0S	CHIP RES	R15 R31 R33 R37-39 R43 R47 R51 R61-62 R84-85 R160-163 R176 R207-208	20
2	3-RS31-200R-J0-0S	CHIP RES	R193-194	2
3	3-RS31-001K-J0-0S	CHIP RES	R17-18 R49 R52-53 R86 R203-206 R209-212	14
4	3-RS31-010K-J0-0S	CHIP RES	R42 R56 R58 R88 R98 R100 R118 R177 R195-198 R202 R213 R223-226 R236 R191 R192	21
5	3-RS31-020K-J0-0S	CHIP RES	R87 R95 R114	3
6	3-RS31-02K4-J0-0S	CHIP RES	R234-235	2
7	3-RS31-024K-J0-0S	CHIP RES	R242	1
8	3-RS31-030K-J0-0S	CHIP RES	R12 R57	2
9	3-RS31-033K-J0-0S	CHIP RES	R82	1
10	3-RS31-047R-J0-0S	CHIP RES	R21 R74 R78-81 R32 R116	8
11	3-RS31-04K7-J0-0S	CHIP RES	R41 R46 R220-222 R240 R245	7
12	3-RS31-560R-J0-0S	CHIP RES	R19 R28-29 R34-36	6
13	3-RS31-05K6-J0-0S	CHIP RES	R199 R201	2
14	3-RS31-068K-J0-0S	CHIP RES	R241	1
15	3-RS31-001M-F0-0S	CHIP RES	R60	1
16	3-RS31-075R-J0-0S	CHIP RES	R92 R109	2
17	3-RS31-082K-J0-0S	CHIP RES	R238	1
18	3-RS31-100K-J0-0S	CHIP RES	R105 R97	2
19	3-RS31-018K-J0-0S	CHIP RES	R136	1
20	3-RS31-001M-J0-0S	CHIP RES	R200 R237 R239	3
21	3-RS31-220K-J0-0S	CHIP RES	R83 R106	2
22	3-RS31-047K-J0-0S	CHIP RES	R243	1
23	3-RS52-001K-J0-0S	CHIP RES	R13	1
24	3-RS63-04R7-J0-0S	CHIP RES	R178-181	4
25	3-VR23-1030-01-0S	VR	VR1	1
26	3-VR23-4730-01-0S	VR	VR2	1
27	3-CC35-0103-4X-0S	CHIP CAP	C32 C44 C69 C73 C82 C84-85 C91 C93 C95 C97 C111-112	13
28	3-CC35-0473-4X-0S	CHIP CAP	C65	1
29	3-CC35-0104-4X-0S	CHIP CAP	C1 C26 C5 C22 C30-31 C33 C47 C49 C115 C117-122 C142 C144-145 C203 C4 C7 C17 C45	24
30	3-CC35-0474-6Y-0S	CHIP CAP	C70 C103	2
31	3-CC35-0102-4X-0S	CHIP CAP	C71	1
32	3-CC35-0101-30-0S	CHIP CAP	C113-114	2

NO.	PART NO.	DESCRIPTION	REFERENCE	QTY
33	3-CC35-0100-30-0S	CHIP CAP	C72 C138	2
34	3-CC35-0154-4X-0S	CHIP CAP	C135	1
35	3-CC37-0105-4X-0S	CHIP CAP	C37 C39 C62-64 C75 C77-79 C87 C134 C98 C100	13
36	3-CC35-0222-4X-0S	CHIP CAP	C140 C102	2
37	3-CC35-0330-30-0S	CHIP CAP	C13	1
38	3-CC35-0391-30-0S	CHIP CAP	C143	1
39	3-CC35-0472-4X-0S	CHIP CAP	C24	1
40	3-CC35-0561-30-0S	CHIP CAP	C141	1
41	3-CC35-0080-80-0S	CHIP CAP	C137	1
42	3-CC43-0475-4X-0S	CHIP CAP	C61 C66-68	4
43	3-CC43-0106-6Y-0S	CHIP CAP	C15 C25 C139	3
44	3-CC67-0226-6Y-0S	CHIP CAP	C46 C27	2
45	3-CC45-0225-6Y-0S	CHIP CAP	C76 C149	2
46	3-CC47-0225-6Y-0S	CHIP CAP	C2-3	2
47	3-CTA5-0474-54-0S	CHIP TAN CAP	TC52 TC58	2
48	3-CTA5-0224-54-0S	CHIP TAN CAP	C74	1
49	3-CTA5-0106-54-0S	CHIP TAN CAP	C90 TC9 TC12-14 TC27 TC28	7
50	3-CTA2-0476-54-0S	CHIP TAN CAP	C96 TC2-3 TC5 TC6 TC8 TC11 TC15 TC17-19 TC29 TC38-39 TC83	15
51	3-CTB5-0106-54-0S	CHIP TAN CAP	TC21 TC37	2
52	3-CTB2-0107-54-0S	CHIP TAN CAP	TC31 TC7	2
53	3-LA30-601R-G0-0S	CHIP BEAD	FB5-8	4
54	3-L84X-01U2-K0-0S	WIRE WIND IND.	L34	1
55	3-L4S0-0101-CD-32	POWER INDUCTANCE	L2-4 L8 L24 L15	6
56	3-L84X-0101-K0-0S	WIRE WIND IND.	L31 L1 L14 L18-19 L21	6
57	3-L4S0-0100-CD-32	POWER INDUCTANCE	L5	1
58	3-L84X-0100-K0-0S	WIRE WIND IND.	L6 L29-30 L33	4
59	3-L84X-0220-K0-0S	WIRE WIND IND.	L20 L23	2
60	3-DCX0-A335-00-0S	VC DIODE	VD1	1
61	3-DZA3-05V1-00-0S	ZENER	ZD2-5	4
62	3-DKA0-4148-00-0S	SW DIODE	D1-2	2
63	3-Q0KR-C402-0N-6S	TRAN	Q5	1
64	3-QMBT-3904-0N-6S	TRAN	Q8	1
65	3-QSTA-1663-0P-6S	TRAN	Q7	1

NO.	PART NO.	DESCRIPTION	REFERENCE	QTY
66	3-U078-L05M-00-XS	REG	IC5	1
67	3-U0BA-7071-00-9S	SYNC SEPARATE	IC15	1
68	3-UADS-7843-00-AS	T/P IC	U3	1
69	3-U0LD-1117-33-0S	REGULATOR	IC6	1
70	3-UMTV-018N-24-9S	OSD IC	U10	1
71	3-UNJM-2107-00-9S	OP	U12	1
72	3-UNJM-3414-00-9S	DUAL OP	U11	1
73	3-UUPS-0170-00-CS	TIMING CONTROL	U1	1
74	3-U0BU-4S81-00-0S	Y-GATE	IC7102	1
75	3-U0TL-431A-00-0S	BASE SOURCE	ZR2	1
76	3-U0TB-1318-00-80	VIDED DSP	U4	1
77	3-XQ04-4M43-36-3D	CRYSTAL	Y1	1
78	3-JF14-00R5-04-30	FFC CON.	CON9	1
79	3-JF26-00R5-04-30	FFC CON.	CON10	1
80	3-JF06-00R5-04-30	FFC CON.	CON1	1
81	3-JF04-00R5-04-30	FFC CON.	CON20	1
82	3-JF52-00R5-02-30	FFC CON.	CON2	1
83	3-CC35-0103-4X-0S	CHIP CAP	C107 C112 C119	3
84	3-CC35-0104-6Y-0S	CHIP CAP	C118 C121 C123 C10 C11 C14 C16	7
85	3-CC35-0105-6Y-0S	CHIP CAP	C108 C110 C109	3
86	3-CC35-0154-4X-0S	CHIP CAP	C120	1
87	3-CC35-0472-4X-0S	CHIP CAP	C106	1
88	3-CC57-0225-4X-0S	CHIP CAP	C114	1
89	3-CC65-0226-6Y-0S	CHIP CAP	C2 TC1 TC7511	3
90	3-CCSK-0100-30-0S	CHIP CAP	C117	1
91	3-DED0-WHIT-01-0S	LED	D101-103	3
92	3-J100-SM02-B0-30	SOCKET	CON102	1
93	3-JF14-00R5-04-30	FFC CON.	CON101	1
94	3-KTTS-1107-GS-SS	TACT SW	SW101-103	3
95	3-L7XX-0902-UI-0S	DC/DC TRANSFORMER	U102	1
96	3-RS31-0000-J0-0S	CHIP RES	R117	1
97	3-RS31-001K-J0-0S	CHIP RES	R119 R105-107	4
98	3-RS31-002K-J0-0S	CHIP RES	R118 R122	2

NO.	PART NO.	DESCRIPTION	REFERENCE	QTY
99	3-RS31-010K-J0-0S	CHIP RES	R104	1
100	3-RS31-027K-J0-0S	CHIP RES	R109	1
101	3-RS31-02K2-J0-0S	CHIP RES	R110	1
102	3-RS31-04K3-J0-0S	CHIP RES	R121	1
103	3-RS31-05K1-J0-0S	CHIP RES	R102	1
104	3-RS31-100K-J0-0S	CHIP RES	R112 R120 R123 R131	4
105	3-RS31-180R-F0-0S	CHIP RES	R124	1
106	3-RS31-220K-J0-0S	CHIP RES	R132	1
107	3-RS31-300K-J0-0S	CHIP RES	R111	1
108	3-RS31-510R-F0-0S	CHIP RES	R103 R108	2
109	3-RS52-001K-J0-0S	CHIP RES	R115	1
110	3-L4S0-0101-CD-75	POWER INDUCTANCE	L101	1
111	3-U0MP-1015-00-BS	DC/AC REG	U101	1
112	3-CC35-0102-4X-0S	CHIP CAP	C15 C156 C278 C505 C506 C196 C197 C198	8
113	3-CC35-0104-4X-0S	CHIP CAP	C310 C524 C625 C19 C35 C154 C155 C159 C301 C502 C527 C616 C174 C178 C180 C188 C191 C8 C30 C93 C94 C99 C113 C114 C117 C179 C276 C281 C282 C302 C303 C307 C496 C25 C17 C32 C48 C53 C109 C186 C217 C216 C31	43
114	3-CC37-0104-6Y-0S	CHIP CAP	C193 C194 C315 C316 C393 C394 C395 C396 C233 C224 C241 C242 C238 C243	14
115	3-CC37-0105-4X-0S	CHIP CAP	C54 C60 C70 C88 C170 C402 C68 C9 C13 C14 C59 C69 C78 C107 C139 C147 C165 C168 C177 C77 C79 C127 C128 C132 C133 C134 C136 C137 C110 C104	30
116	3-CC35-0101-30-0S	CHIP CAP	C1 C5 C7 C20 C21 C24 C135 C150	8
117	3-CC35-0100-30-0S	CHIP CAP	C130	1
118	3-CC35-0110-30-0S	CHIP CAP	C58 C67 C80 C82	4
119	3-CC35-0121-30-0S	CHIP CAP	C100 C101 C102 C103	4
120	3-CC35-0151-30-0S	CHIP CAP	C39 C43 C56 C75	4
121	3-CC35-0680-30-0S	CHIP CAP	C63 C66 C71 C74	4
122	3-CC35-0161-30-0S	CHIP CAP	C38 C42 C57 C61	4
123	3-CC35-0150-30-0S	CHIP CAP	C52 C83 C212 C213 C214 C218 C219 C220 C221 C222 C223 C225 C226 C228 C229 C230 C231 C232 C236 C237 C119 C120 C121 C122 C161 C6 C41 C206 C234 C235	30
124	3-CC38-0105-4X-0S	CHIP CAP	C85 C86 C106 C157 C171 C184 C189 C351 C352 C62 C4 C3 C44 C118	14
125	3-CC35-0222-4X-0S	CHIP CAP	C90	1
126	3-CC47-0225-6Y-0S	CHIP CAP	C16 C47	2

NO.	PART NO.	DESCRIPTION	REFERENCE	QTY
127	3-CC35-0391-30-0S	CHIP CAP	C7324	1
128	3-CC35-0103-4X-0S	CHIP CAP	C503 C504 C510 C525 C526 C528 C529 C530 C531 C532 C533 C534 C535 C536 C537 C538 C539 C540 C541 C542 C543 C544 C617 C618 C619 C620 C621 C622 C623 C624 C501 C7327 C2 C50 C76 C96 C97 C98 C105 C140 C185 C252 C259 C260 C272 C274 C275 C279 C34 C37 C92 C108 C440 C11 C187 C227 C271 C205 C141 C204 C27 C28 C124 C166 C167 C181 C183 C304 C215 C12 C182 C192 C195	73
129	3-CC35-0681-30-0S	CHIP CAP	C84	1
130	3-CC35-0220-30-0S	CHIP CAP	C305 C306 C46 C288 C290 C291 C292 C293 C111 C112	10
131	3-CC35-0273-4X-0S	CHIP CAP	C199 C160 C175	3
132	3-CC35-0270-80-0S	CHIP CAP	C508 C509	2
133	3-CC35-0330-30-0S	CHIP CAP	C507 C240	2
134	3-CC35-0050-80-0S	CHIP CAP	C553	1
135	3-CC35-0224-4X-0S	CHIP CAP	C148	1
136	3-CC35-0152-4X-0S	CHIP CAP	C64 C65 C72 C73	4
137	3-CC32-0225-4X-0S	CHIP CAP	C164 C173	2
138	3-CC35-0470-30-0S	CHIP CAP	C51	1
139	3-CC35-0472-4X-0S	CHIP CAP	C138	1
140	3-CC35-0561-30-0S	CHIP CAP	C144	1
141	3-CC35-0560-30-0S	CHIP CAP	C33	1
142	3-CC35-0822-4X-0S	CHIP CAP	C142 C143	2
143	3-CC43-0106-6Y-0S	CHIP CAP	C354 C355 C40 C22	4
144	3-CC67-0226-6Y-0S	CHIP CAP	C10 C18 C81 C250 C158 C169 C131	7
145	3-CC65-0226-6Y-0S	CHIP CAP	C49	1
146	3-CC59-0105-4X-0S	CHIP CAP	C55	1
147	3-CC35-0474-6Y-0S	CHIP CAP	C89 C91	2
148	3-CES9-0334-52-RS	SMT E-CAP	TC40 TC41 TC42 TC43	4
149	3-CES9-0474-52-0S	SMT E-CAP	TC35	1
150	3-CES5-0107-52-0S	SMT E-CAP	TC4 TC7 TC98 TC99 TC100 TC101 TC116 TC28 TC65 TC21	10
151	3-CES5-0106-52-0S	SMT E-CAP	TC60 TC18 TC71 TC85 TC17 TC14 TC86 TC87 TC6 TC88 TC5 TC48 TC81 TC83 TC91 TC110 TC112 C152 C309 TC3 TC33	21
152	3-CES9-0105-52-0S	SMT E-CAP	TC469	1
153	3-CES9-0335-52-0S	SMT E-CAP	TC496	1
154	3-CES5-0476-52-0S	SMT E-CAP	TC39 TC68 TC82 TC109	4

NO.	PART NO.	DESCRIPTION	REFERENCE	QTY
155	3-CES5-0108-52-00	SMT E-CAP	TC37	1
156	3-CES2-0227-52-0S	SMT E-CAP	TC67 TC310 TC2 TC503 TC504	5
157	3-CES5-0226-52-0S	SMT E-CAP	TC84 TC111 TC301	3
158	3-CES2-0476-52-0S	SMT E-CAP	C311 TC94 TC54	3
159	3-CE32-0107-52-MS	SMDE-CAP	TC606	1
160	3-CE17-0108-52-01	Insert E-CAP	TC13	1
161	3-CE12-0108-52-00	Insert E-cap	TC15	1
162	3-CE15-0107-52-00	INSERT E-CAP	TC1	1
163	3-CE12-0107-52-00	INSERT E-CAP	TC72 TC9	2
164	3-CE15-0106-52-00	INSERT E-CAP	TC46 TC25 TC63 TC64 TC27 TC49	6
165	3-CE15-0227-52-00	INSERT E-CAP	TC19 TC36 TC44 TC45 TC74 TC75 TC77 TC73 TC76 TC78 TC79	11
166	3-CE12-0477-52-00	INSERT E-CAP	TC32 TC51 TC80 TC62 TC34	5
167	3-CE15-0476-52-00	INSERT E-CAP	TC55 TC442 TC56	3
168	3-CE12-0476-52-00	INSERT E-CAP	TC70 TC8 TC10	3
169	3-CE16-0688-52-00	INSERT E-CAP	TC419 TC31	2
170	3-CE19-0225-52-00	INSERT E-CAP	TC93	1
171	3-CE12-0227-52-00	INSERT E-CAP	TC502 TC16 TC52 TC69	4
172	3-CE15-0226-52-00	INSERT E-CAP	TC506 TC26	2
173	3-CTC2-0107-54-0S	CHIP TAN CAP	TC501	1
174	3-CTC3-0107-54-0S	CHIP TAN CAP	TC22 TC30	2
175	3-CTC2-0227-54-0S	CHIP TAN	TC176 TC90	2
176	3-CTB2-0476-54-0S	CHIP TAN CAP	TC38 TC53 TC95 TC96	4
177	3-CTA2-0476-54-0S	CHIP TAN CAP	TC47 TC508	2
178	3-J216-5016-11-00	Plug	CON1	1
179	3-JF50-00R5-02-31	FFC CON.	J1	1
180	3-JF07-00R5-02-30	FFC CON.	CON16	1
181	3-JF12-00R5-02-31	FFC CON.	CON4	1
182	3-J112-0125-08-30	SOCKET	CON3	1
183	3-JF20-00R5-02-30	FFC CON.	CON2	1
184	3-J104-0125-07-30	SOCKET	CON6	1
185	3-JF52-00R5-02-30	FFC CON.	CON8	1
186	3-J108-0125-08-30	SOCKET	CON7	1

NO.	PART NO.	DESCRIPTION	REFERENCE	QTY
187	3-J109-0125-07-30	SOCKET	CON5 CON13	2
188	3-DKA0-4148-00-0S	SW DIODE	D1 D18 D20 D21 D22 D23 D25 D26 D27 D28 D29 D30 D34 D36 D37 D45 D46 D47 D49 D50 D55 D51 D52 D53 D54 D56 D2 D6 D15 D17 D24 D33 D40 D35 D43 D44 D42 D41 D39 D19	40
189	3-DRX0-SK34-00-0S	SOCK. DIODE	ZD1	1
190	3-DSX0-SK34-00-0S	SOCK. DIODE	D38	1
191	3-DXX0-6801-00-0S	DIODE	D16	1
192	3-DRX0-5404-00-0S	REC DIODE	D10	1
193	3-DRB0-4004-00-0S	REC DIODE	D3 D5 D8 D9 D11 D12 D13 D14 D407 D486 D487 D488 D4 D7 D48 D57	16
194	3-F300-00A5-02-0S	FUSE	FU4 FU9	2
195	3-F300-00A2-02-0S	FUSE	FU6	1
196	3-F300-0A75-03-0S	FUSE	FU1 FU2 FU3 FU5 FU8 FU16	6
197	3-QIRF-7205-PM-6S	MOSFET	IC42 Q25 IC7	3
198	3-QSTA-1663-0P-6S	TRAN	Q33	1
199	3-QMBT-3906-0P-6S	TRAN	Q6 Q8 Q10 Q12 Q21 Q27 Q41 Q43 Q52 Q61 Q1 Q3 Q14 Q463 Q16	15
200	3-Q2SC-2020-0N-6S	TRAN	Q404	1
201	3-QMBT-3904-0N-6S	TRAN	Q19 Q23 Q28 Q29 Q30 Q31 Q32 Q34 Q38 Q48 Q49 Q403 Q493 Q20 Q55 Q56 Q66 Q67 Q57 Q62 Q69 Q72 Q15 Q2 Q22 Q68 Q70 Q71 Q17 Q37	30
202	3-Q2SC-3265-0N-6S	TRAN	Q7 Q9 Q11 Q13 Q60 Q36 Q24 Q44 Q45 Q46 Q47 Q63	12
203	3-Q2SA-1718-0P-6S	TRAN	Q18 Q465	2
204	3-Q2SC-4375-0N-6S	TRAN	Q4 Q50 Q5	3
205	3-Q0KR-C402-0N-6S	TRAN	Q58 Q59	2
206	3-L25X-01L1-K0-0S	CHIP INDUCTANCE	L8 L17 L20 L14	4
207	3-L8SX-0101-K0-0S	WIRE WIND IND.	L27 L22	2
208	3-L8SX-0150-K0-0S	WIRE WIND IND.	L21 L45 L9	3
209	3-L4S0-0471-CD-43	POWER INDUCTANCE	L1 L28	2
210	3-L4S0-0331-F2-2B	POWER INDUCTANCE	L73	1
211	3-L4S0-0220-8B-28	POWER INDUCTANCE	L12	1
212	3-L4S0-0330-8B-28	POWER INDUCTANCE	L7	1
213	3-L415-0101-K0-00	PIN POWER INDUCTOR	L2 L4 L19 L7312 L7313 L5 L6 L26 L10	9
214	3-L817-0101-J0-00	INSERET WIND IND.	L11 L16	2
215	3-L416-0101-K0-55	PIN POWER INDCUTOR	L3 L7310	2
216	3-L415-0471-K0-00	PIN POWER INDCUTOR	L18 L25	2

NO.	PART NO.	DESCRIPTION	REFERENCE	QTY
217	3-L7XX-1420-EE-0S	CMRR COIL	T1	1
218	3-LA5X-026R-00-1S	CHIP BEAD	FB1 FB301 FB311 FB501 FB614 FB616 FB617 FB618 FB27 FB28	10
219	3-LA6X-101R-00-1S	CHIP BEAD	FB2 FB502 FB503 L505	4
220	3-LA30-252R-00-1S	CHIP BEAD	FB512	1
221	3-LA30-222R-00-1S	CHIP BEAD	FB305 FB307 FB308 FB309 FB310	5
222	3-LA30-601R-G0-0S	CHIP BEAD	FB81 FB24 FB23 FB304 FB12 FB83 FB82 FB22 FB13 FB10 FB4 FB3 FB11 FB16 FB5 FB6 FB7 FB8 FB9 FB17 FB18 R144 R145 R147 FB54 FB55 FB56 FB57 FB58 FB59	30
223	3-RS31-0000-J0-0S	CHIP RES	R11 R172 R389 R425 R125 R137 R75 R249 R382 R463 C45 R471 C149 R248 C172 R208 FB14 FB49 FB50 FB51 R198 R12 R17 R23 R24 R285 R331 R470 R501 FB20 RR214 R171 R175 R468 R184	35
224	3-RS31-100K-J0-0S	CHIP RES	R41 R101 R244 R245 R279 R283 R293 R296 R317 R318 R346 R348 R349 R18 R203 R122 R81 R82 R83 R84 R295 R371 R462 R260 R372 R123	26
225	3-RS31-010K-J0-0S	CHIP RES	R14 R27 R50 R56 R100 R109 R126 R146 R150 R156 R182 R205 R250 R251 R252 R253 R256 R258 R262 R264 R275 R294 R310 R311 R324 R325 R326 R327 R328 R329 R342 R367 R369 R373 R401 R402 R409 R433 R459 R460 R165 R266 R421 R423 R15 R16 R25 R26 R31 R115 R132 R133 R176 R201 R315 R413 R194 R464 R406 R385	60
226	3-RS31-010K-F0-0S	CHIP RES	R157 R233 R30 R34 R42 R45 R243 R167	8
227	3-RS31-010R-J0-0S	CHIP RES	R518 R116 R124	3
228	3-RS31-011K-J0-0S	CHIP RES	R225 R226	2
229	3-RS31-012K-J0-0S	CHIP RES	R388 R442 R443	3
230	3-RS31-150R-J0-0S	CHIP RES	R221	1
231	3-RS31-015K-F0-0S	CHIP RES	R58 R428 R458	3
232	3-RS31-15K4-F0-0S	CHIP RES	R502	1
233	3-RS31-018K-J0-0S	CHIP RES	R152	1
234	3-RS31-180K-J0-0S	CHIP RES	R200 R399 R353	3
235	3-RS31-180R-J0-0S	CHIP RES	R7316	1
236	3-RS31-001K-J0-0S	CHIP RES	R13 R63 R98 R138 R139 R149 R178 R207 R224 R231 R232 R320 R337 R345 R350 R393 R394 R419 R219 R227 R93 R107 R117 R134 R135 R20 R73 R74 R97 R179 R209 R212 R215 R255 R257 R396 R405 R430 R104 R161 R351 R465 R466 R162 R76 R185	46
237	3-RS31-01K2-F0-0S	CHIP RES	R282 R103	2
238	3-RS31-001K-F0-0S	CHIP RES	R290 R383 R551 R552 R395 R467	6
239	3-RS31-002K-F0-0S	CHIP RES	R7325	1
240	3-RS31-001M-J0-0S	CHIP RES	R111 R246 R347 R435 R67 R60 R62	7

NO.	PART NO.	DESCRIPTION	REFERENCE	QTY
241	3-RS31-220R-J0-0S	CHIP RES	R113 R114 R5 R54 R426 R188	6
242	3-RS31-200R-J0-0S	CHIP RES	R1 R2 R8 R177 R197 R3 R4 R55 R59	9
243	3-RS31-020K-J0-0S	CHIP RES	R70 R108 R141 R210 R276 R481 R444 R92 R277 R321	10
244	3-RS31-020K-F0-0S	CHIP RES	R286 R287 R289 R390 R412 R438 R440 R547 R548 R549 R550 R272 R36 R39 R47 R51 R273 R268	18
245	3-RS31-220K-J0-0S	CHIP RES	R507 R128	2
246	3-RS31-330K-J0-0S	CHIP RES	R164	1
247	3-RS31-022K-J0-0S	CHIP RES	R496 R323 R379	3
248	3-RS31-024K-J0-0S	CHIP RES	R7324	1
249	3-RS31-027K-J0-0S	CHIP RES	R102 R242 R222 R223 R354	5
250	3-RS31-002K-J0-0S	CHIP RES	R530 R531	2
251	3-RS31-02K2-J0-0S	CHIP RES	R6 R7 R163 R278 R300 R302	6
252	3-RS31-02K2-F0-0S	CHIP RES	R136	1
253	3-RS31-02K7-F0-0S	CHIP RES	R140 R429	2
254	3-RS31-300R-J0-0S	CHIP RES	R19	1
255	3-RS31-030K-J0-0S	CHIP RES	R32 R35 R43 R46 R356	5
256	3-RS31-033R-F0-0S	CHIP RES	R503	1
257	3-RS31-039K-J0-0S	CHIP RES	R288	1
258	3-RS31-039K-F0-0S	CHIP RES	R457	1
259	3-RS31-039R-J0-0S	CHIP RES	R1000	1
260	3-RS31-04K7-J0-0S	CHIP RES	R174 R534 R535 R620 R9 R78 R181 R199 R229 R397 R398 R400 R404 R479 R480 R57 R87 R364 R129 R99 R130 R153 R154 R155 R160 R159 R355 R482 R483 R484 R461	31
261	3-RS31-06K8-J0-0S	CHIP RES	R86	3
262	3-RS31-470R-J0-0S	CHIP RES	R436 R437 R202 R274 R418 R64 R65	7
263	3-RS31-047K-J0-0S	CHIP RES	R85 R110 R112 R236 R281 R301 R304 R316 R332 R334 R357 R358 R359 R360 R361 R362 R363 R365 R366 R370 R448 R451 R284 R380	24
264	3-RS31-047R-J0-0S	CHIP RES	R220	1
265	3-RS31-680R-F0-0S	CHIP RES	R7329	1
266	3-RS31-051K-F0-0S	CHIP RES	R88 R89 R90 R91 R204 R343	6
267	3-RS31-056K-J0-0S	CHIP RES	R61 R453	2
268	3-RS31-056R-J0-0S	CHIP RES	R10	1
269	3-RS31-05K6-J0-0S	CHIP RES	R339	1
270	3-RS31-07K5-J0-0S	CHIP RES	R340	1

NO.	PART NO.	DESCRIPTION	REFERENCE	QTY
271	3-RS31-075R-J0-0S	CHIP RES	R439 R553 R333 R69 R166	5
272	3-RS31-075R-F0-0S	CHIP RES	R151 R158 R169 R180 R183 R186 R187 R196 R505	9
273	3-RS31-08K2-F0-0S	CHIP RES	R118 R170	2
274	3-RS31-09K1-F0-0S	CHIP RES	R168	1
275	3-RS31-100R-J0-0S	CHIP RES	R254 R391 R238 R392 R96 R240 R314 R259 R261	9
276	3-RS31-100R-F0-0S	CHIP RES	R33 R38 R44 R49 R267 R322	6
277	3-RS31-013K-J0-0S	CHIP RES	R66 R80 R119 R228 R230	5
278	3-RS31-392R-F0-0S	CHIP RES	R504	1
279	3-RS31-03K3-J0-0S	CHIP RES	R37 R40 R48 R52 R211 R269 R297 R298 R299 R303 R330 R336 R417 R424	14
280	3-RS95-001K-J0-0S	CHIP RES	R431 R494	2
281	3-RS63-470R-J0-0S	CHIP RES	R142 R427	2
282	3-RS63-04K7-J0-0S	CHIP RES	R449 R403	2
283	3-RS63-04R7-J0-0S	CHIP RES	R526 R414 R515	3
284	3-RS63-001K-J0-0S	CHIP RES	R105 R106 R408 R410 R491	5
285	3-RS63-010K-J0-0S	CHIP RES	R271 R280	2
286	3-RS63-100K-F0-0S	CHIP RES	R241	1
287	3-RS63-100R-J0-0S	CHIP RES	R68 R263 R415 R416 R516 R517 R191 R192	8
288	3-RS63-002R-J0-0S	CHIP RES	R454 R455	2
289	3-RS63-0000-J0-0S	CHIP RES	R270 R239 R411 C200 C201	5
290	3-RS95-0000-J0-0S	CHIP RES	R77	1
291	3-RS64-0R33-J0-0S	CHIP RES	R7315	1
292	3-RS63-010R-J0-0S	CHIP RES	R21	1
293	3-U0LD-1117-33-XS	REG	U8	1
294	3-U0LD-1117-18-XS	Regulator	U2	1
295	3-USST-39VF-16-0S	FLASH	U602	1
296	3-UST7-FAUD-10-80	MCU	U1	1
297	3-UTDA-7418-00-9S	ASP IC	U10	1
298	3-UTDA-7388-00-70	POWER AMP	IC1	1
299	3-UUTC-4558-00-9S	OP AMP.	U3 U4 U9	3
300	3-U0WM-8522-00-AS	IC	U6	1
301	3-XQ05-008M-00-3S	CRYSTAL	X2	1
302	3-XQ05-027M-00-3S	CRYSTAL	Y201	1

NO.	PART NO.	DESCRIPTION	REFERENCE	QTY
303	3-DZA3-06V8-00-0S	ZENER	ZD4	1
304	3-DZA3-0010-00-0S	ZENER	ZD6 ZD9 ZD11 ZD13 ZD23 ZD25 ZD14 ZD15 ZD18	9
305	3-DZA3-04V7-00-0S	ZENER	ZD19	1
306	3-DZA3-05V6-00-0S	ZENER	ZD5 ZD16 ZD21	3
307	3-DZA3-0012-00-0S	ZENER	ZD7	1
308	3-DZA3-05V1-00-0S	ZENER	ZD10 ZD12 ZD401	3
309	3-DZA3-0018-00-0S	ZENER	ZD8	1
310	3-U0TL-431A-00-0S	BASE SOURCE	ZD3 ZD402 ZR1	3
311	3-UZR3-6966-U0-CS	SINGLE CHIP	U201	1
312	3-U0LP-2950-00-9S	IC	U7	1
313	3-UNJM-2360-00-9S	DC/DC REG	IC7303	1
314	3-UNJM-2244-00-9S	VIDEO SW	IC52 IC9	2
315	3-U0MP-1430-00-9S	DC/DC REG	IC4	1
316	3-U57V-6416-20-RS	SDRAM	U603	1
317	3-UAT2-4C16-00-9S	EEPROM	U202	1
318	3-Z2TC-TL26-CR-R0	Tuner	FM/AM_TUNER	1
319	3-U002-4C04-AF-9S	EEPROM	U13	1
320	3-U4HC-4052-PW-BS	ELEC SW	U19 U5	2
321	3-U4HC-4053-PW-BS	ELEC SW	IC5 IC6	2
322	3-U4HC-4094-PW-BS	SHIFT REG	IC29 IC8	2
323	3-U0AD-8092-00-9S	AMPLIFIER	IC39 U303	2
324	3-U0BA-3121-F0-9S	INSULATE OP	IC3 IC37	2
325	3-U0BA-7071-00-9S	SYNC SEPARATE	IC15	1
326	3-M300-1255-00-10	BUZZER	BZ1	1
327	3-U0BA-6951-FS-AS	MOTOR DRIVER	IC24	1
328	3-DED0-WHIT-01-0S	CHIP RES	D401 D402	2
329	3-JF06-00R5-02-30	CHIP RES	CON401	1
330	3-RS31-01K5-F0-0S	CHIP RES	R405	1
331	3-RS31-130R-F0-0S	CHIP RES	R406	1
332	3-RS31-680R-J0-0S	CHIP RES	R401 R402	2
333	3-KTTS-1107-GS-SS	CHIP RES	SW403 SW404	2
334	3-CC35-0102-4X-0S	CHIP CAP	C505	1
335	3-CC35-0104-6Y-0S	CHIP CAP	C501 C502 C503 C506 C3 C4	6

NO.	PART NO.	DESCRIPTION	REFERENCE	QTY
336	3-CC35-0105-6Y-0S	CHIP CAP	C1 C2	2
337	3-CC5X-0106-6Y-0S	CHIP CAP	C507	1
338	3-CES2-0227-52-0S	SMT E-CAP	C513	1
339	3-DED0-0RED-0S-0S	LED	D1 D2 D518 D3	4
340	3-DED0-WHIT-01-0S	LED	D501 D502 D503 D504 D509 D511 D7 D8 D512 D513 D514 D517 D5 D6 D11 D4 D13	17
341	3-JF20-00R5-05-30	SOCKET	CON1	1
342	3-KEEC-11EC-07-10	ENCODER SW	EN501 EN502	2
343	3-KT11-504W-00-SS	Tact sw	SW501 SW502 SW503 SW504 SW505 SW507 SW509 SW510	8
344	3-L8SX-0101-K0-0S	WIRE WIND IND.	L501	1
345	3-QMBT-3904-0N-6S	TRAN	Q1 Q2 Q3	3
346	3-RS31-0000-J0-0S	CHIP RES	R504 R528 R527 R549	4
347	3-RS31-001K-F0-0S	CHIP RES	R18	1
348	3-RS31-001K-J0-0S	CHIP RES	R505 R506 R517	3
349	3-RS31-002K-F0-0S	CHIP RES	R516 R507	2
350	3-RS31-003K-F0-0S	CHIP RES	R515 R525	2
351	3-RS31-010K-F0-0S	CHIP RES	R502	1
352	3-RS31-010K-J0-0S	CHIP RES	R19 R508	2
353	3-RS31-01K2-F0-0S	CHIP RES	R520	1
354	3-RS31-01K5-F0-0S	CHIP RES	R521	1
355	3-RS31-020K-J0-0S	CHIP RES	R17	1
356	3-RS31-02K2-F0-0S	CHIP RES	R523	1
357	3-RS31-100R-F0-0S	CHIP RES	R20 R22	2
358	3-RS31-180R-F0-0S	CHIP RES	R524	1
359	3-RS31-200R-F0-0S	CHIP RES	R519	1
360	3-RS31-270R-F0-0S	CHIP RES	R12	1
361	3-RS31-330R-F0-0S	CHIP RES	R526	1
362	3-RS31-470R-J0-0S	CHIP RES	R1 R2 R4 R5 R11 R13 R14 R15 R16 R509 R530 R531 R532 R533 R538 R540 R541 R542 R543 R546 R6 R7 R3	23
363	3-RS31-047K-F0-0S	CHIP RES	R21	1
364	3-DJ00-IRMS-38-00	IRM-SVG38A	U501	1
365	3-DED0-BLUE-01-0S	LED	D9 D10	2
366	3-DKA0-4148-00-0S	SW DIODE	D12	1