



EXPLODED VIEW (MECHANISM)

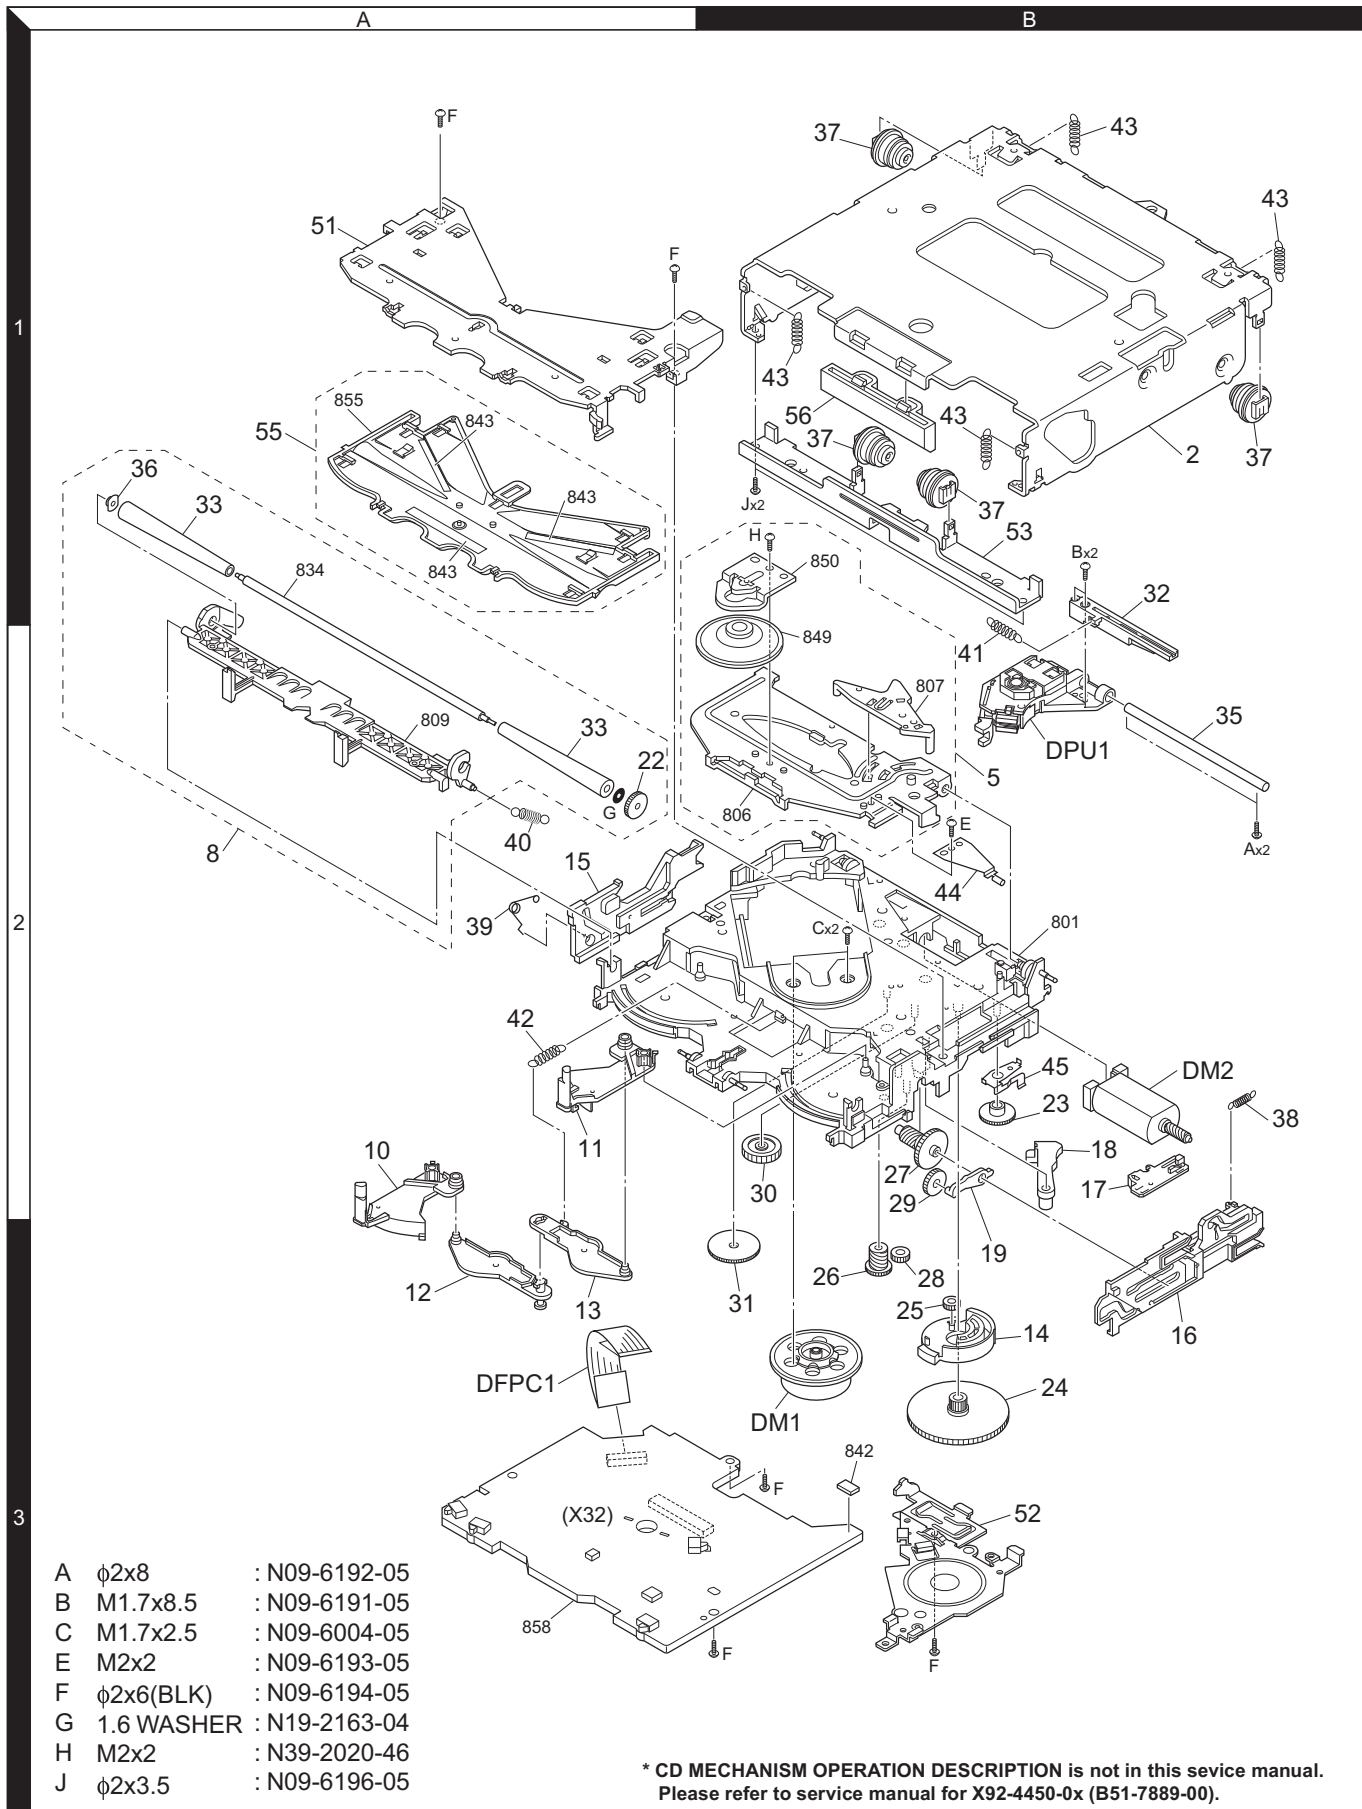

EXPLODED VIEW (UNIT)

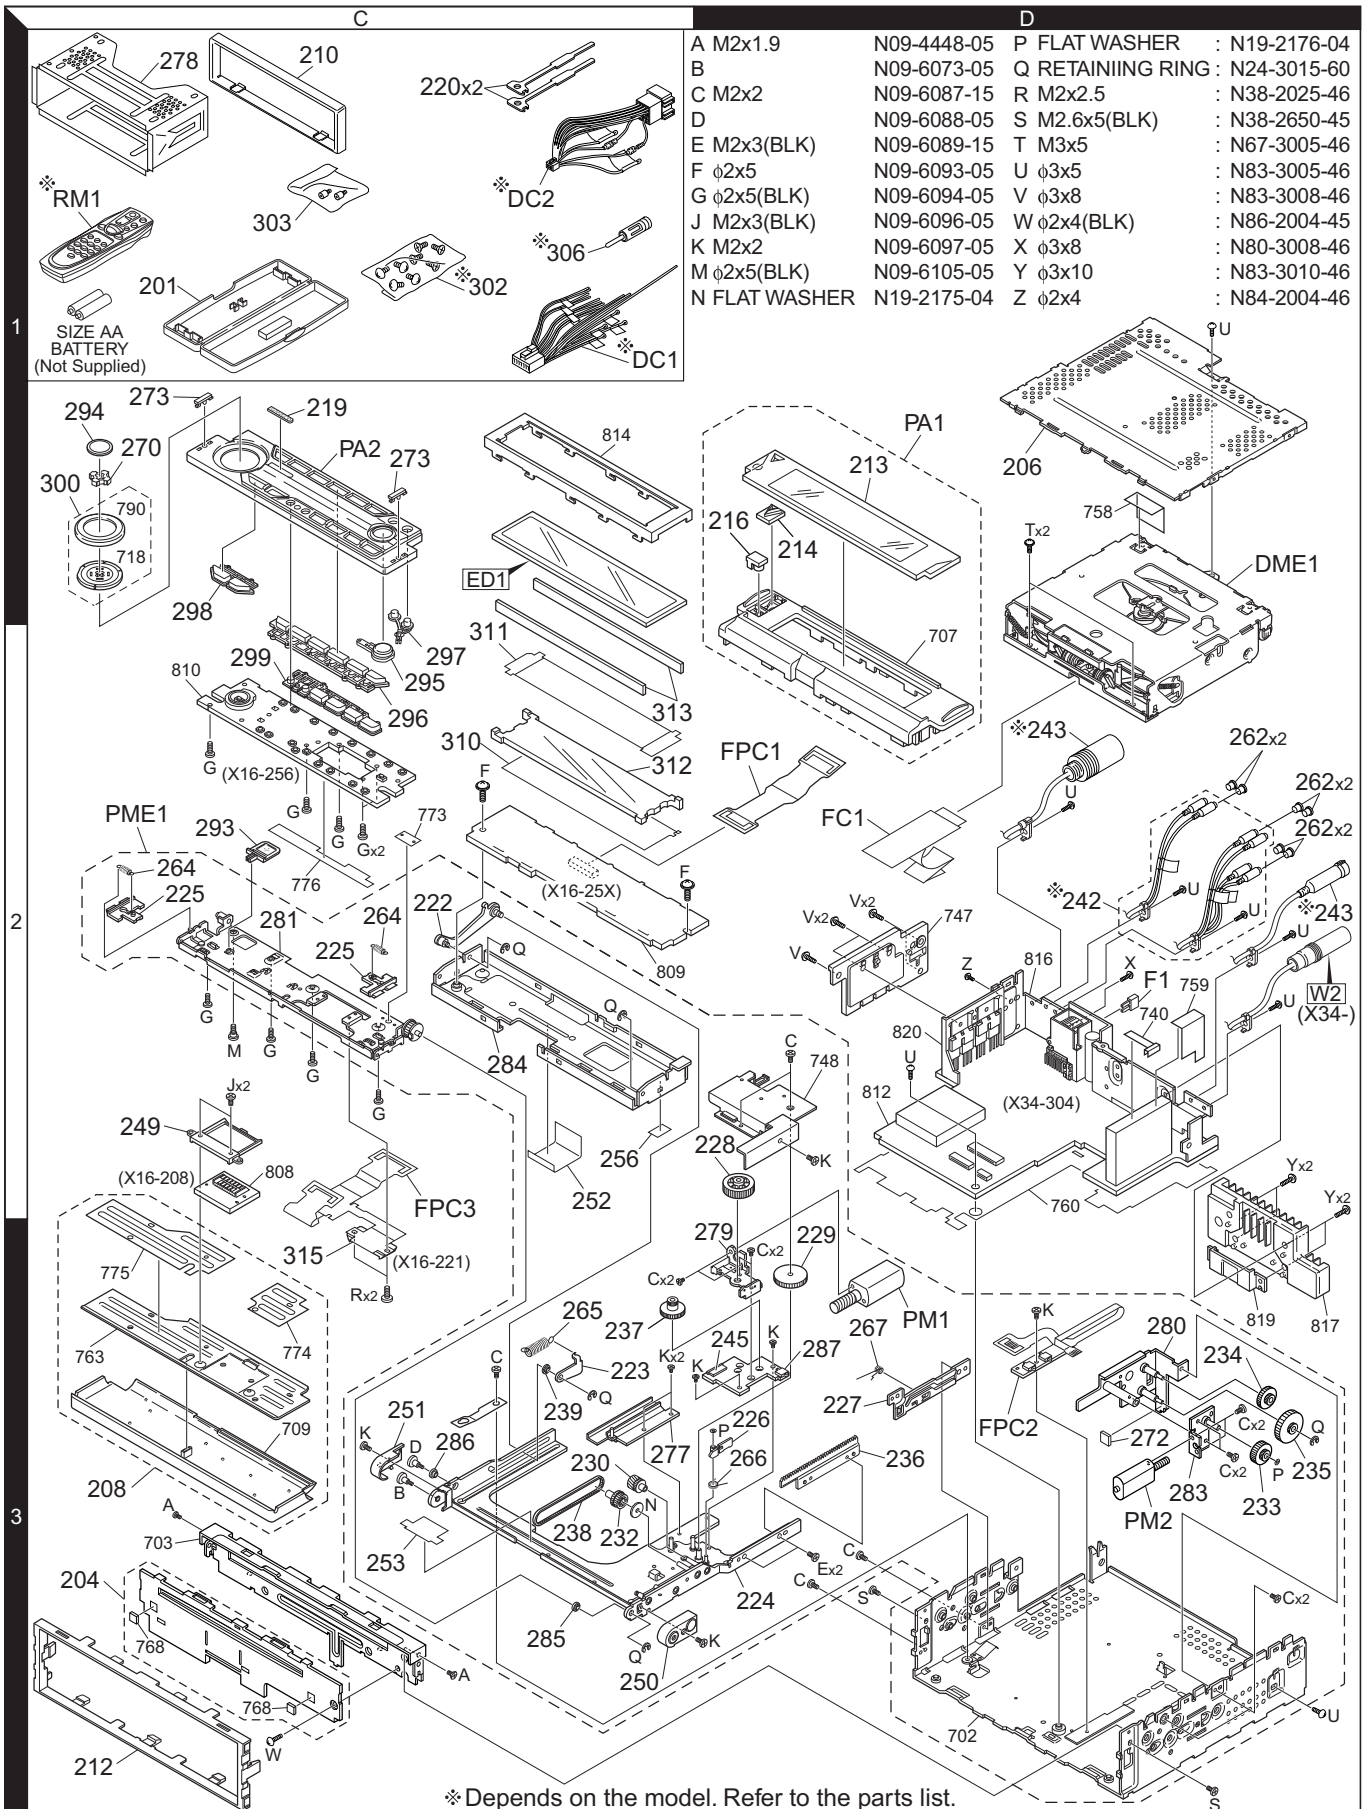

Parts with the exploded numbers larger than 700 are not supplied.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
KDC-8026, KDC-MP825, KDC-MPV8025, KDC-W7027					
201	1C		A02-2731-13	PLASTIC CABINET ASSY	
204	3C		A22-2988-03	SUB PANEL ASSY	
206	1D		A52-0831-02	TOP PLATE	
PA1	1D	*	A64-3228-01	PANEL ASSY	K3
PA1	1D	*	A64-3229-01	PANEL ASSY	K4
PA1	1D	*	A64-3231-01	PANEL ASSY	M1
PA1	1D	*	A64-3233-01	PANEL ASSY	E2
PA2	1C	*	A64-3250-02	PANEL ASSY	K3K4M1
PA2	1C	*	A64-3253-02	PANEL ASSY	E2
PME1	2C	*	A10-5123-01	CHASSIS ASSY	
RM1	1C		A70-2040-05	REMOTE CONTROLLER ASSY (RC-505)	K3K4M1
-			B46-0100-50	WARRANTY CARD	
-			B46-0606-04	ID CARD	K3K4
-			B46-0612-14	ID CARD	M1E2
-		*	B64-2743-00	INST. MANUAL (ENGLISH)	K3K4
-		*	B64-2744-00	INST. MANUAL (FRE, SPA)	K3K4
-		*	B64-2745-00	INST. MANUAL (ENG, T-CHI)	M1
-		*	B64-2750-00	INST. MANUAL (ENGLISH)	E2
-		*	B64-2751-00	INST. MANUAL (FRE, GER)	E2
-		*	B64-2752-00	INST. MANUAL (DUT, ITA)	E2
-		*	B64-2753-00	INST. MANUAL (SPA, POR)	E2
208	3C		B03-5015-03	DRESSING PLATE ASSY	
210	1C		B07-3078-01	ESCUTCHEON	
212	3C		B07-3080-02	ESCUTCHEON	
213	1D	*	B10-4515-01	FRONT GLASS	K3
213	1D	*	B10-4516-01	FRONT GLASS	K4
213	1D	*	B10-4518-01	FRONT GLASS	M1
213	1D	*	B10-4520-01	FRONT GLASS	E2
214	1C	*	B12-1227-04	INDICATOR	
216	1C	*	B19-2248-04	LIGHTING BOARD	
219	1C		B43-1505-04	KENWOOD BADGE	
220	1C		D10-4674-04	LEVER	
222	2C		D10-4716-04	ARM ASSY	
223	3C		D10-4718-04	ARM ASSY	
224	3D		D10-4721-21	SLIDER ASSY	
225	2C		D10-4749-03	LEVER	
226	3D		D10-4750-04	LEVER	
227	3D		D12-0637-03	CAM	
228	2D		D13-2270-04	GEAR	
229	3D		D13-2272-04	GEAR	
230	3C		D13-2273-34	GEAR	
232	3C		D13-2274-24	GEAR	
233	3D		D13-2276-04	GEAR	
234	3D		D13-2277-04	GEAR	
235	3D		D13-2278-04	GEAR	
236	3D		D13-2289-03	RACK (GEAR)	
237	3C		D13-2290-04	GEAR ASSY	
238	3C		D16-0617-15	BELT	
239	3C		D23-0958-04	RETAINER	
242	2D	*	E30-6312-05	CORD WITH PINPLUG (2PRE+1AUX)	K3M1E2
242	1D	*	E30-6314-05	CORD WITH PINPLUG (2PRE)	K4
243	2D		E30-6216-05	CORD WITH DIN CONNECTOR	K3K4M1

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
243	2D		E30-6217-05	CORD WITH DIN CONNECTOR (&REM.)	E2
245	3D		E41-0351-05	FLAT CABLE CONNECTOR	
DC1	1C		E30-6294-05	DC CORD	M1
DC1	1C		E30-6295-05	DC CORD	K3K4
DC2	1C		E30-4942-05	DC CORD	E2
FC1	2D		E39-0565-05	FLAT CABLE	
249	2C		F07-1121-03	COVER	
250	3C		F07-1122-03	COVER	
251	3C		F07-1123-03	COVER	
252	2C		F09-1794-04	SHEET	
253	3C		F09-1798-04	SHEET	
256	2D		F09-1842-04	SHEET	
262	2D		F29-0626-04	INSULATING COVER	
F1	2D		F52-0023-05	FUSE (MINI BLADE TYPE : 10A)	
264	2C	*	G01-3162-04	EXTENSION SPRING	
265	2C	*	G01-3221-04	EXTENSION SPRING	
266	3C		G01-3189-04	TORSION COIL SPRING	
267	3D		G01-3199-04	TORSION COIL SPRING	
270	2C		G11-3539-04	CUSHION	
272	3D		G11-3559-04	CUSHION	
273	1C		G11-3574-04	CUSHION (KEY)	
-		*	H10-4854-22	POLYSTYRENE FOAMED FIXTURE	
-			H21-1151-04	PROTECTION SHEET	
-			H25-0329-04	PROTECTION BAG (280X450X0.03)	K3K4M1
-			H25-0337-04	PROTECTION BAG (180X300X0.03)	
-			H25-1111-04	PROTECTION BAG (280X450X0.03)	E2
-		*	H54-3031-03	ITEM CARTON CASE	K3
-		*	H54-3032-03	ITEM CARTON CASE	K4
-		*	H54-3034-03	ITEM CARTON CASE	M1
-		*	H54-3036-03	ITEM CARTON CASE	E2
277	3C		J19-5220-03	HOLDER	
278	1C		J21-9823-03	MOUNTING HARDWARE ASSY	
279	3D		J21-9951-03	MOUNTING HARDWARE ASSY	
280	3D		J21-9954-02	MOUNTING HARDWARE ASSY	
281	2C	*	J21-9996-32	MOUNTING HARDWARE ASSY	
283	3D		J21-9997-03	MOUNTING HARDWARE ASSY	
284	2C		J21-9999-02	MOUNTING HARDWARE ASSY	
285	3C		J31-1055-04	COLLAR	
286	3C		J31-1056-04	COLLAR	
287	3D		J74-1444-14	RIGID PRINTED WIRING BOARD	
FPC1	2D		J84-0153-05	FLEXIBLE PRINTED WIRING BOARD	
FPC2	3D		J84-0156-04	FLEXIBLE PRINTED WIRING BOARD	
293	2C		K24-4007-04	KNOB (OPEN)	
294	1C	*	K24-4106-03	KNOB (ATT)	
295	1C	*	K24-4167-03	KNOB (SRC)	
296	1C	*	K25-1605-02	KNOB (PRESET1-6)	
297	2C	*	K25-1607-03	KNOB (EJECT)	
298	1C	*	K25-1609-03	KNOB (Q,PLAY)	
299	2C	*	K25-1612-02	KNOB (FM/AM,SKIP)	
300	1C	*	K29-7082-03	KNOB ASSY (VOL.)	
302	1C		N99-1723-05	SCREW SET	K3K4M1
303	1C		N99-1734-05	SCREW SET	

K3 : KDC-MPV8025 **K4** : KDC-MP825 **E2** : KDC-W7027 **M1** : KDC-8026

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

KDC-8026, KDC-MP825, KDC-MPV8025, KDC-W7027

Ref. No.	Add	New	Parts No.	Description	Destination
A	3D		N09-4448-05	MACHINE SCREW	
B	3C		N09-6073-05	STEPPED SCREW	
C	3D	*	N09-6087-15	MACHINE SCREW	
D	3C		N09-6088-05	STEPPED SCREW	
E	3D	*	N09-6089-15	MACHINE SCREW	
F	2C		N09-6093-05	TAPTITE SCREW	
G	2C		N09-6094-05	MACHINE SCREW	
J	2C		N09-6096-05	MACHINE SCREW	
K	3C		N09-6097-05	MACHINE SCREW	
M	2C		N09-6105-05	STEPPED SCREW	
N	2C		N19-2175-04	FLAT WASHER	
P	3D		N19-2176-04	FLAT WASHER	
Q	2C		N24-3015-60	E TYPE RETAINING RING	
R	3C		N38-2025-46	PAN HEAD MACHIN SCREW	
S	3D		N38-2650-45	PAN HEAD MACHIN SCREW	
T	2D		N67-3005-46	PAN HEAD SEMS SCREW	
U	2D		N83-3005-46	PAN HEAD TAPTITE SCREW	
V	2D		N83-3008-46	PAN HEAD TAPTITE SCREW	
W	3C		N86-2004-45	BINDING HEAD TAPTITE SCREW	
RLED			RK73GB2A102J	CHIP R 1.0K J 1/10W	
RPH			RK73GB2A104J	CHIP R 100K J 1/10W	
SW1			S68-0871-05	PUSH SWITCH (PANEL MECHA)	
SW2-3			S68-0863-05	PUSH SWITCH (PANEL MECHA)	
SW4			S68-0864-05	PUSH SWITCH (PANEL MECHA)	
306	1C		T90-0552-05	ANTENNA ADAPTOR	
PH			T95-0212-05	OPTO ISOLATOR (PANEL MECHA)	
PM1	3D		T42-1076-14	MOTOR ASSY	
PM2	3D	*	T42-1077-24	MOTOR ASSY	
DME1	2D	*	X92-4900-00	MECHANISM ASSY (DXM-6540V)	E2
SUB CIRCUIT UNIT (X16-2080-10)					
J1			E59-0833-15	RECTANGULAR PLUG	
CP1			R90-1019-05	MULTI-COMP 100 X2	
IC1			BR24C01AFV-W	MEMORY IC	
SUB CIRCUIT UNIT (X16-2210-10)					
315	3C		E58-0968-05	RECTANGULAR RECEPTACLE	
FPC3	2C		J84-0154-05	FLEXIBLE PRINTED WIRING BOARD	
DISPLAY UNIT (X16-2540-10)					
310	2C		B11-1405-04	REFLECTION SHEET	K4M1E2
311	2C		B11-1406-04	OPTICAL DIFFUSER	K4M1E2
312	2C		B19-2204-02	LIGHTING BOARD	K4M1E2
D11			B30-2233-05	LED (HR 1608)	K4M1E2
D16-19			B30-1571-05	LED (WHITE)	K4M1E2
ED1		*	B38-1143-05	LIQUID CRYSTAL	K4M1E2
C1			CC73GCH1H681J	CHIP C 680PF J	K4M1E2
C2-5			CK73GB1C104K	CHIP C 0.10UF K	K4M1E2
C2-5			CK73GB1H104K	CHIP C 0.10UF K	K4M1E2
C6			CK73GB1H103K	CHIP C 0.010UF K	K4M1E2
C7			CK73FB1A225K	CHIP C 2.2UF K	K4M1E2
C11			CC73GCH1H681J	CHIP C 680PF J	K4M1E2

Ref. No.	Add	New	Parts No.	Description	Destination
C12-14			CK73GB1C104K	CHIP C 0.10UF K	K4M1E2
C12-14			CK73GB1H104K	CHIP C 0.10UF K	K4M1E2
C15			CK73GB1H103K	CHIP C 0.010UF K	K4M1E2
C16			CK73GB1C104K	CHIP C 0.10UF K	K4M1E2
C16			CK73GB1H104K	CHIP C 0.10UF K	K4M1E2
C17-19			CK73FB0J475K	CHIP C 4.7UF K	K4M1E2
C26-29			CK73GB1H103K	CHIP C 0.010UF K	K4M1E2
313	2C		E29-1930-04	CONDUCTIVE RUBBER	K4M1E2
CN1			E40-9364-05	FLAT CABLE CONNECTOR	K4M1E2
CN2			E41-0166-05	FLAT CABLE CONNECTOR	K4M1E2
CP1			R90-1016-05	MULTI-COMP 470 X4	K4M1E2
CP4,5			R90-0724-05	MULTI-COMP 1K X4	K4M1E2
R1			RK73GB2A433J	CHIP R 43K J 1/10W	K4M1E2
R2-5			RK73GB2A222J	CHIP R 2.2K J 1/10W	K4M1E2
R6			RK73GB2A392J	CHIP R 3.9K J 1/10W	K4M1E2
R7,8			RK73GB2A331J	CHIP R 330 J 1/10W	K4M1E2
R9			RK73GB2A101J	CHIP R 100 J 1/10W	K4M1E2
R10			RK73GB2A102J	CHIP R 1.0K J 1/10W	K4M1E2
R11			RK73GB2A4R7J	CHIP R 4.7 J 1/10W	K4M1E2
R12			RK73GB2A751J	CHIP R 750 J 1/10W	K4M1E2
R13			RK73GB2A102J	CHIP R 1.0K J 1/10W	K4M1E2
R14			RK73GB2A4R7J	CHIP R 4.7 J 1/10W	K4M1E2
R15			RK73GB2A104J	CHIP R 100K J 1/10W	K4M1E2
R16			RK73GB2A271J	CHIP R 270 J 1/10W	K4M1E2
R17			RK73GB2A104J	CHIP R 100K J 1/10W	K4M1E2
R18			RK73GB2A331J	CHIP R 330 J 1/10W	K4M1E2
R19			RK73GB2A472J	CHIP R 4.7K J 1/10W	K4M1E2
R20			RK73GB2A104J	CHIP R 100K J 1/10W	K4M1E2
R23			RK73GB2A102J	CHIP R 1.0K J 1/10W	K4M1E2
R24			RK73GB2A473J	CHIP R 47K J 1/10W	K4M1E2
R26			RK73GB2A102J	CHIP R 1.0K J 1/10W	K4M1E2
R31			RK73GB2A433J	CHIP R 43K J 1/10W	K4M1E2
R32-35			RK73GB2A222J	CHIP R 2.2K J 1/10W	K4M1E2
R36			RK73GB2A4R7J	CHIP R 4.7 J 1/10W	K4M1E2
R51,52			RK73FB2B271J	CHIP R 270 J 1/8W	K4M1E2
R53,54			RK73GB2A472J	CHIP R 4.7K J 1/10W	K4M1E2
R67,68			RK73GB2A272J	CHIP R 2.7K J 1/10W	K4M1E2
D1			MA3062-M	ZENER DIODE	K4M1E2
D2-5			DA204U	DIODE	K4M1E2
D26			MA3091-M	ZENER DIODE	K4M1E2
IC1			LC75808W	MOS-IC	K4M1E2
IC2			LC75878W	MOS-IC	K4M1E2
IC3			PNA4S22M	ANALOGUE IC	K4M1E2
Q1			DTA114EE	DIGITAL TRANSISTOR	K4M1E2
Q2			UMX2N	TRANSISTOR	K4M1E2
Q5			2SC4617	TRANSISTOR	K4M1E2
Q6			DTA114EE	DIGITAL TRANSISTOR	K4M1E2
Q11			2SC4617	TRANSISTOR	K4M1E2
DISPLAY UNIT (X16-2550-10)					
310	2C		B11-1405-04	REFLECTION SHEET	K3
311	2C		B11-1408-04	OPTICAL DIFFUSER	K3
312	2C		B19-2204-02	LIGHTING BOARD	K3
D11			B30-2233-05	LED (HR 1608)	K3

K3 : KDC-MPV8025 K4 : KDC-MP825 E2 : KDC-W7027 M1 : KDC-8026

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

DISPLAY UNIT (X16-2550-10)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
D50-53 ED1		*	B30-1599-05 B38-1142-05	LED (NICHIA FULL) LIQUID CRYSTAL	K3 K3
C1 C2-5 C2-5 C6 C7			CC73GCH1H681J CK73GB1C104K CK73GB1H104K CK73GB1H103K CK73FB1A225K	CHIP C 680PF J CHIP C 0.10UF K CHIP C 0.10UF K CHIP C 0.010UF K CHIP C 2.2UF K	K3 K3 K3 K3 K3
C11 C12-14 C12-14 C15 C16			CC73GCH1H681J CK73GB1C104K CK73GB1H104K CK73GB1H103K CK73GB1C104K	CHIP C 680PF J CHIP C 0.10UF K CHIP C 0.10UF K CHIP C 0.010UF K CHIP C 0.10UF K	K3 K3 K3 K3 K3
C16 C17-19 C50-61 C65-67 C68			CK73GB1H104K CK73FB0J475K CK73GB1H103K CK73FB0J475K CK73GB0J105K	CHIP C 0.10UF K CHIP C 4.7UF K CHIP C 0.010UF K CHIP C 4.7UF K CHIP C 1.0UF K	K3 K3 K3 K3 K3
313 CN1 CN2	2C		E29-1930-04 E40-9364-05 E41-0166-05	CONDUCTIVE RUBBER FLAT CABLE CONNECTOR FLAT CABLE CONNECTOR	K3 K3 K3
CP1 CP4,5 CP50-53 CP54,55 CP56			R90-1016-05 R90-0724-05 R90-1022-05 R90-0720-05 R90-1022-05	MULTI-COMP 470 X4 MULTI-COMP 1K X4 MULTI-COMP 470 X2 MULTI-COMP 100K X4 MULTI-COMP 470 X2	K3 K3 K3 K3 K3
R1 R2-5 R6 R7,8 R9			RK73GB2A433J RK73GB2A222J RK73GB2A392J RK73GB2A331J RK73GB2A101J	CHIP R 43K J 1/10W CHIP R 2.2K J 1/10W CHIP R 3.9K J 1/10W CHIP R 330 J 1/10W CHIP R 100 J 1/10W	K3 K3 K3 K3 K3
R10 R11 R12 R13 R14			RK73GB2A102J RK73GB2A4R7J RK73GB2A751J RK73GB2A102J RK73GB2A4R7J	CHIP R 1.0K J 1/10W CHIP R 4.7 J 1/10W CHIP R 750 J 1/10W CHIP R 1.0K J 1/10W CHIP R 4.7 J 1/10W	K3 K3 K3 K3 K3
R15 R16 R17 R18 R19			RK73GB2A104J RK73GB2A271J RK73GB2A104J RK73GB2A331J RK73GB2A472J	CHIP R 100K J 1/10W CHIP R 270 J 1/10W CHIP R 100K J 1/10W CHIP R 330 J 1/10W CHIP R 4.7K J 1/10W	K3 K3 K3 K3 K3
R20 R23 R24 R26 R27-29			RK73GB2A104J RK73GB2A102J RK73GB2A473J RK73GB2A102J RK73GB2A472J	CHIP R 100K J 1/10W CHIP R 1.0K J 1/10W CHIP R 47K J 1/10W CHIP R 1.0K J 1/10W CHIP R 4.7K J 1/10W	K3 K3 K3 K3 K3
R31 R32-35 R36 R50,51 R52			RK73GB2A433J RK73GB2A222J RK73GB2A4R7J RK73GB2A151J RK73GB2A221J	CHIP R 43K J 1/10W CHIP R 2.2K J 1/10W CHIP R 4.7 J 1/10W CHIP R 150 J 1/10W CHIP R 220 J 1/10W	K3 K3 K3 K3 K3
R53,54 R55 R56,57 R58			RK73GB2A151J RK73GB2A221J RK73GB2A151J RK73GB2A221J	CHIP R 150 J 1/10W CHIP R 220 J 1/10W CHIP R 150 J 1/10W CHIP R 220 J 1/10W	K3 K3 K3 K3

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
R59,60 R61 R62-65 R66 R67,68			RK73GB2A151J RK73GB2A221J RK73GB2A271J RK73GB2A4R7J RK73GB2A272J	CHIP R 150 J 1/10W CHIP R 220 J 1/10W CHIP R 270 J 1/10W CHIP R 4.7 J 1/10W CHIP R 2.7K J 1/10W	K3 K3 K3 K3 K3
D1 D2-5 D26 IC1 IC2			MA3062-M DA204U MA3082-L LC75808W LC75878W	ZENER DIODE DIODE ZENER DIODE MOS-IC MOS-IC	K3 K3 K3 K3 K3
IC3 IC4 Q1 Q1 Q2			PNA4S22M M62333FP DTA114EUA UN5111 UMX2N	ANALOGUE IC MOS-IC DIGITAL TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR	K3 K3 K3 K3 K3
Q5 Q6 Q6 Q11-16 Q62-64			2SC4617 DTA114EUA UN5111 UMX2N 2SC4617	TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR TRANSISTOR	K3 K3 K3 K3 K3

SWITCH UNIT (X16-2560-11)

D1-10 D11-15 D17-22 D24			B30-1605-05 B30-1566-05 B30-1566-05 B30-1566-05	LED (2COLOR PG/RED) LED (1608,RED) LED (1608,RED) LED (1608,RED)	
CN1			E41-0419-05	FLAT CABLE CONNECTOR	
R1,2 R3,4 R5 R6-10 R11			RK73FB2B561J RK73FB2B391J RK73FB2B751J RK73FB2B561J RK73GB2A241J	CHIP R 560 J 1/8W CHIP R 390 J 1/8W CHIP R 750 J 1/8W CHIP R 560 J 1/8W CHIP R 240 J 1/10W	
R12 R13 R14 R15 R16			RK73GB2A332J RK73GB2A103J RK73GB2A332J RK73GB2A103J RK73GB2A222J	CHIP R 3.3K J 1/10W CHIP R 10K J 1/10W CHIP R 3.3K J 1/10W CHIP R 10K J 1/10W CHIP R 2.2K J 1/10W	
R17			RK73GB2A103J	CHIP R 10K J 1/10W	
S1 S2-9 S10 S11-20		*	S70-0901-05 S70-0912-05 S70-0901-05 S70-0912-05	TACT SWITCH TACT SWITCH TACT SWITCH TACT SWITCH	
S21			T99-0445-05	ROTARY ENCODER	
D25 Q1 Q1 Q2-4			DAN222 DTA114YUA UN5114 2SD2114K	DIODE DIGITAL TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR	

CD PLAYER UNIT (X32-5540-00)

C1,2 C3,4 C5 C6 C7-9			CK73GB1H222K CK73GB0J105K CK73GB1C104K CK73GB1H103K CK73GB0J105K	CHIP C 2200PF K CHIP C 1.0UF K CHIP C 0.10UF K CHIP C 0.010UF K CHIP C 1.0UF K	
----------------------------------	--	--	--	--	--

K3 : KDC-MPV8025 **K4** : KDC-MP825 **E2** : KDC-W7027 **M1** : KDC-8026

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

CD PLAYER UNIT (X32-5540-00)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation	Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
C10-15			CK73GB1C104K	CHIP C 0.10UF K		CP8			RK74GA1J102J	CHIP-COM 1.0K J 1/16W	
C16			CK73FB0J475K	CHIP C 4.7UF K		CP9			RK74GB1J101J	CHIP-COM 100 J 1/16W	
C17			CK73FB0J106M	CHIP C 10UF M		CP10			RK74GB1J103J	CHIP-COM 10K J 1/16W	
C18			CK73GB1C104K	CHIP C 0.10UF K		CP11			RK74GB1J472J	CHIP-COM 4.7K J 1/16W	
C19			CK73FB0J475K	CHIP C 4.7UF K		CP12			RK74GA1J104J	CHIP-COM 100K J 1/16W	
C20			CK73GB1C104K	CHIP C 0.10UF K		CP13,14			RK74GB1J104J	CHIP-COM 100K J 1/16W	
C21			CK73GB1H102K	CHIP C 1000PF K		CP15			RK74GA1J104J	CHIP-COM 100K J 1/16W	
C22,23			CK73GB0J105K	CHIP C 1.0UF K		CP16			RK74GB1J222J	CHIP-COM 2.2K J 1/16W	
C24-27			CK73GB1C104K	CHIP C 0.10UF K		R1			RK73GB2A100J	CHIP R 10 J 1/10W	
C28			CK73FB0J106M	CHIP C 10UF M		R2			R92-3494-05	CHIP R 5.6 J 1/2W	
C29			CK73GB1C104K	CHIP C 0.10UF K		R3,4			RK73FB2B331J	CHIP R 330 J 1/8W	
C30			CK73GB1H152K	CHIP C 1500PF K		R5			RK73GB2A101J	CHIP R 100 J 1/10W	
C31			CC73GCH1H470J	CHIP C 47PF J		R6			RN73GH1J223D	CHIP R 22K D 1/16W	
C32,33			CK73GB1C104K	CHIP C 0.10UF K		R7			RK73GB2A104J	CHIP R 100K J 1/10W	
C34			CC73GCH1H560J	CHIP C 56PF J		R8			RN73GH1J393D	CHIP R 39K D 1/16W	
C35,36			CK73GB1C104K	CHIP C 0.10UF K		R9			RK73GB2A104J	CHIP R 100K J 1/10W	
C37			CK73GB1H102K	CHIP C 1000PF K		R10			RK73GB2A101J	CHIP R 100 J 1/10W	
C38			CK73GB1H682K	CHIP C 6800PF K		R11,12			RK73GB2A104J	CHIP R 100K J 1/10W	
C39			CK73GB1C104K	CHIP C 0.10UF K		R13			RK73GB2A102J	CHIP R 1.0K J 1/10W	
C41			CK73GB1A334K	CHIP C 0.33UF K		R14-17			RK73GB2A104J	CHIP R 100K J 1/10W	
C42-45			CK73GB1C104K	CHIP C 0.10UF K		R18			RK73GB2A101J	CHIP R 100 J 1/10W	
C46			CK73GB1H682K	CHIP C 6800PF K		R21-23			RK73GB2A103J	CHIP R 10K J 1/10W	
C47			CK73GB1C104K	CHIP C 0.10UF K		R24,25			RK73GB2A4R7J	CHIP R 4.7 J 1/10W	
C48			CC73GCH1H040C	CHIP C 4.0PF C		R27			RK73GB2A104J	CHIP R 100K J 1/10W	
C49			CK73GB1H332K	CHIP C 3300PF K		R28			RK73GB2A103J	CHIP R 10K J 1/10W	
C50			CK73GB1C104K	CHIP C 0.10UF K		R29			RK73GB2A102J	CHIP R 1.0K J 1/10W	
C51			CC73GCH1H330J	CHIP C 33PF J		R31-33			RK73GB2A104J	CHIP R 100K J 1/10W	
C52			CK73FB1A225K	CHIP C 2.2UF K		R34			RK73GB2A472J	CHIP R 4.7K J 1/10W	
C53			CK73GB0J105K	CHIP C 1.0UF K		R35			RK73GB2A104J	CHIP R 100K J 1/10W	
C54,55			CK73GB1H103K	CHIP C 0.010UF K		R36			RK73FB2B4R7J	CHIP R 4.7 J 1/8W	
C56,57			CK73GB1H331K	CHIP C 330PF K		R37			RK73GB2A103J	CHIP R 10K J 1/10W	
C58			CK73GB1H472K	CHIP C 4700PF K		R38			RK73GB2A221J	CHIP R 220 J 1/10W	
C59-63			CK73GB1H152K	CHIP C 1500PF K		R39			RK73GB2A152J	CHIP R 1.5K J 1/10W	
C64			CK73GB1C104K	CHIP C 0.10UF K		R40			RK73GB2A274J	CHIP R 270K J 1/10W	
C66			CC73GCH1H120J	CHIP C 12PF J		R42			RK73GB2A101J	CHIP R 100 J 1/10W	
C67			CC73GCH1H180J	CHIP C 18PF J		R43			RK73GB2A393J	CHIP R 39K J 1/10W	
C68			CK73GB1H103K	CHIP C 0.010UF K		R44,45			RK73GB2A302J	CHIP R 3.0K J 1/10W	
C69			CK73FB1A225K	CHIP C 2.2UF K		R46			RK73GB2A105J	CHIP R 1.0M J 1/10W	
C70			CK73FB1A105K	CHIP C 1.0UF K		R47			RK73GB2A104J	CHIP R 100K J 1/10W	
C71			CK73FB0J106M	CHIP C 10UF M		R48,49			RK73GB2A331J	CHIP R 330 J 1/10W	
C72			CK73GB1H102K	CHIP C 1000PF K		R50			RK73GB2A101J	CHIP R 100 J 1/10W	
CN1			E41-2083-05	FLAT CABLE CONNECTOR (24PIN)		R51			RK73GB2A392J	CHIP R 3.9K J 1/10W	
CN2			E41-2068-05	FLAT CABLE CONNECTOR (16PIN)		R52			RK73GB2A163J	CHIP R 16K J 1/10W	
CN2			E41-2085-05	FLAT CABLE CONNECTOR (16PIN)		R53			RK73GB2A123J	CHIP R 12K J 1/10W	
CN2						R54			RK73GB2A333J	CHIP R 33K J 1/10W	
L1,2			L92-0386-05	CHIP FERRITE		R55			RK73GB2A103J	CHIP R 10K J 1/10W	
X1			L77-2808-05	CRYSTAL RESONATOR (16.897849MHZ)		R56			RK73GB2A123J	CHIP R 12K J 1/10W	
X2			L78-0896-05	RESONATOR (16.00MHZ)		R57,58			RK73GB2A133J	CHIP R 13K J 1/10W	
CP1			RK74GA1J104J	CHIP-COM 100K J 1/16W		R59			RK73GB2A472J	CHIP R 4.7K J 1/10W	
CP2,3			RK74GA1J101J	CHIP-COM 100 J 1/16W		R60			RK73GB2A123J	CHIP R 12K J 1/10W	
CP4			RK74GA1J103J	CHIP-COM 10K J 1/16W		R61			RK73GB2A183J	CHIP R 18K J 1/10W	
CP5			RK74GA1J102J	CHIP-COM 1.0K J 1/16W		R62			RK73GB2A432J	CHIP R 4.3K J 1/10W	
CP6			RK74GA1J104J	CHIP-COM 100K J 1/16W		R63			RK73GB2A133J	CHIP R 13K J 1/10W	
CP7			RK74GB1J102J	CHIP-COM 1.0K J 1/16W		R64			RK73GB2A241J	CHIP R 240 J 1/10W	
						R65			RK73GB2A104J	CHIP R 100K J 1/10W	

K3 : KDC-MPV8025 K4 : KDC-MP825 E2 : KDC-W7027 M1 : KDC-8026

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

CD PLAYER UNIT (X32-5540-00)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
R66 R67 R68,69 R70			RK73GB2A472J RK73GB2A222J RK73GB2A104J RK73GB2A102J	CHIP R 4.7K J 1/10W CHIP R 2.2K J 1/10W CHIP R 100K J 1/10W CHIP R 1.0K J 1/10W	
S1,2 S3			S68-0863-05 S68-0862-05	PUSH SWITCH PUSH SWITCH	
D2 D3 IC1 IC2 IC3			DA204U DAN202U 91CW12AFG-4VF6 UPD63712GC TC94A20F-010	DIODE DIODE MICROCONTROLLER IC MOS-IC MOS-IC	
IC4 IC5 IC5 IC6 IC6			BA5824FP NJM2880U133 NJM2880U33 S-1112B33MCG XC6219B332MR	ANALOGUE IC ANALOGUE IC ANALOGUE IC ANALOGUE IC ANALOGUE IC	
IC7 IC7 IC8 IC9 Q1			S-1112B25MCG XC6219B252MR TC7SH08FU TAR5S33-F 2SK3018	ANALOGUE IC ANALOGUE IC MOS-IC ANALOGUE IC FET	
Q3 Q4 Q5 Q6 Q7			UMD9N 2SK3018 UMD9N UMD12N DTC124EUA	TRANSISTOR FET TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR	
Q8 Q9,10			2SB0970 DTC114YUA	TRANSISTOR DIGITAL TRANSISTOR	
ELECTRIC UNIT (X34-3040-10/11/21, X34-3042-71)					
C1,2 C3,4 C5 C5,6 C7,8			C94-0161-05 CK73FB1C474K C94-0032-05 C94-0032-05 CK73FB1C474K	ELECTRO 0.47UF 50WV CHIP C 0.47UF K ELECTRO 47UF 6.3WV ELECTRO 47UF 6.3WV CHIP C 0.47UF K	K4 K3M1E2 K3M1E2
C9 C10 C11 C11 C12			CK73GB1A474K CC73GCH1H151J CK73GB1E223K CK73GB1H223K CK73GB1H103K	CHIP C 0.47UF K CHIP C 150PF J CHIP C 0.022UF K CHIP C 0.022UF K CHIP C 0.010UF K	
C13-16 C21-24 C21,22 C31-34 C41,42			CK73FB1H104K CK73FB1C105K CK73FB1C105K C94-0179-05 C94-0046-05	CHIP C 0.10UF K CHIP C 1.0UF K CHIP C 1.0UF K ELECTRO 0.22UF 50WV ELECTRO 3.3UF 35WV	K3M1E2 K4
C49,50 C67 C69 C70,71 C71		*	C94-0046-05 CK73FB1H104K CK73FB1H104K CK73GB1H103K CK73GB1H103K	ELECTRO 3.3UF 35WV CHIP C 0.10UF K CHIP C 0.10UF K CHIP C 0.010UF K CHIP C 0.010UF K	K3M1E2 K4
C100 C100 C101 C102 C103		*	C90-5626-05 C94-0213-05 CK73GB1H103K C90-5619-05 CK73GB1H103K	ELECTRO 3900UF 16WV ELECTRO 2200UF 16WV CHIP C 0.010UF K ELECTRO 220UF 16WV CHIP C 0.010UF K	E2 K3K4M1

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
C104 C105 C106 C107 C108			C94-0039-05 C94-0033-05 CK73GB1A474K CK73FB1C105K C94-0188-05	ELECTRO 10UF 16WV ELECTRO 100UF 6.3WV CHIP C 0.47UF K CHIP C 1.0UF K ELECTRO 220UF 10WV	
C109 C110,111 C112,113 C114 C126		*	C94-0186-05 C90-2963-05 C90-5418-05 CK73GB1A224K C94-0046-05	ELECTRO 100UF 10WV ELECTRO 100UF 25WV ELECTRO 220UF 16WV CHIP C 0.22UF K ELECTRO 3.3UF 35WV	
C127 C128 C129 C130 C130		*	CK73GB0J105K C94-0047-05 CK73GB1H103K CK73GB1E223K CK73GB1H223K	CHIP C 1.0UF K ELECTRO 0.1UF 50WV CHIP C 0.010UF K CHIP C 0.022UF K CHIP C 0.022UF K	
C131 C132 C134,135 C200 C201			C94-0051-05 CK73GB1H102K CK73GB1H103K C94-0032-05 CK73GB1H103K	ELECTRO 1UF 50WV CHIP C 1000PF K CHIP C 0.010UF K ELECTRO 47UF 6.3WV CHIP C 0.010UF K	
C202 C203 C204 C206 C207,208			CC73GCH1H220J CC73GCH1H270J CK73GB0J105K CK73GB0J105K CK73GB1H103K	CHIP C 22PF J CHIP C 27PF J CHIP C 1.0UF K CHIP C 1.0UF K CHIP C 0.010UF K	
C211 C213 C250 C251 C252			CK73GB1H102K CK73GB1H103K C94-0042-05 CK73GB1H103K C90-5540-05	CHIP C 1000PF K CHIP C 0.010UF K ELECTRO 47UF 16WV CHIP C 0.010UF K ELECTRO 2.2UF 50WV	E2
C252 C253,254 C253,254 C255 C256			C94-0052-05 CK73GB1C104K CK73GB1H104K C94-0051-05 C94-0041-05	ELECTRO 2.2UF 50WV CHIP C 0.10UF K CHIP C 0.10UF K ELECTRO 1UF 50WV ELECTRO 33UF 16WV	K3K4M1
C257 C258 C259-262 C401 C403			C90-5663-05 C94-0051-05 CK73GB1A224K CK73GB1H103K CK73GB1H103K	ELECTRO 1UF 50WV ELECTRO 1UF 50WV CHIP C 0.22UF K CHIP C 0.010UF K CHIP C 0.010UF K	
C405 C407 C408 C409 C410			CK73GB1H103K CK73GB1H103K CK73FB1A225K CK73GB1H103K C94-0039-05	CHIP C 0.010UF K CHIP C 0.010UF K CHIP C 2.2UF K CHIP C 0.010UF K ELECTRO 10UF 16WV	E2 E2 E2 E2
C411 C412,413			CC73GCH1H331J CC73GCH1H100D	CHIP C 330PF J CHIP C 10PF D	E2 E2
CN1 CN2 CN3 CN4 CN4			E41-0224-05 E40-3237-05 E41-0384-05 E40-9527-05 E41-0213-05	PIN ASSY (12PIN) PIN ASSY (2PIN) PIN ASSY (16PIN) FLAT CABLE CONNECTOR (24PIN) FLAT CABLE CONNECTOR (24PIN)	
CN5 CN6			E40-9368-05 E41-0399-05	FLAT CABLE CONNECTOR (28PIN) FLAT CABLE CONNECTOR (15PIN)	

K3 : KDC-MPV8025 **K4** : KDC-MP825 **E2** : KDC-W7027 **M1** : KDC-8026

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

ELECTRIC UNIT (X34-3040-10/11/21, X34-3042-71)

Ref. No.	Add	New	Parts No.	Description	Destination	Ref. No.	Add	New	Parts No.	Description	Destination
△ CN7			E41-0009-05	PIN ASSY (2PIN)		R133			RK73GB2A104J	CHIP R 100K J 1/10W	
J1			E58-0863-15	RECTANGULAR RECEPTACLE (16PIN)		R134			RK73GB2A473J	CHIP R 47K J 1/10W	
P1			E23-0745-05	TERMINAL		R135			RK73GB2A223J	CHIP R 22K J 1/10W	
W2			E30-6218-05	CORD WITH PLUG (ANT)		R138			RK73GB2A223J	CHIP R 22K J 1/10W	
						R139			RK73FB2B103J	CHIP R 10K J 1/8W	
L1			L33-1170-05	CHOKE COIL ASSY		R140			RK73GB2A103J	CHIP R 10K J 1/10W	
L2			L33-1903-05	CHOKE COIL		R141			RK73GB2A822J	CHIP R 8.2K J 1/10W	
L4			L40-4795-91	SMALL FIXED INDUCTOR (4.7UH,J)		R142			RK73GB2A183J	CHIP R 18K J 1/10W	
L5			L92-0075-05	CHIP FERRITE		R143			RD14DB2H332J	SMALL-RD 3.3K J 1/2W	
L6			L40-4795-91	SMALL FIXED INDUCTOR (4.7UH,J)		R144			RK73EB2E473J	CHIP R 47K J 1/4W	
L7			L33-1039-05	LINE FILTER COIL		R145			RK73GB2A104J	CHIP R 100K J 1/10W	
L11-13			L40-4795-34	SMALL FIXED INDUCTOR	E2	R146			RK73EB2E102J	CHIP R 1.0K J 1/4W	M1E2
L11-13			L40-4795-68	SMALL FIXED INDUCTOR (4.7UH)	E2	R147,148			RK73EB2E103J	CHIP R 10K J 1/4W	
L11,12			L40-4795-34	SMALL FIXED INDUCTOR	K3K4M1	R200			RK73GB2A153J	CHIP R 15K J 1/10W	
L11,12			L40-4795-68	SMALL FIXED INDUCTOR (4.7UH)	K3K4M1	R201			RK73GB2A103J	CHIP R 10K J 1/10W	
X1			L78-0821-05	RESONATOR (20MHz)		R202			RK73GB2A104J	CHIP R 100K J 1/10W	
X2			L77-2738-05	CRYSTAL RESONATOR (32.768KHz)		R203			RK73GB2A103J	CHIP R 10K J 1/10W	E2
X3			L77-2002-05	CRYSTAL RESONATOR (4.332MHz)	E2	R203,204			RK73GB2A103J	CHIP R 10K J 1/10W	K3
U	2D		N83-3005-46	PAN HEAD TAPTITE SCREW		R204,205			RK73GB2A103J	CHIP R 10K J 1/10W	M1
X	2D		N80-3008-46	PAN HEAD TAPTITE SCREW		R205,206			RK73GB2A103J	CHIP R 10K J 1/10W	K4
Y	2D		N83-3010-46	PAN HEAD TAPTITE SCREW							
Z	2D		N84-2004-46	PAN HEAD TAPTITE SCREW							E2
R1,2			RK73EB2E100J	CHIP R 10 J 1/4W		R206			RK73GB2A103J	CHIP R 10K J 1/10W	
R3			RK73EB2E4R7J	CHIP R 4.7 J 1/4W	K4	R207			RK73GB2A104J	CHIP R 100K J 1/10W	
R3,4			RK73EB2E4R7J	CHIP R 4.7 J 1/4W	K3M1E2	R208,209			RK73GB2A103J	CHIP R 10K J 1/10W	
R5,6			RK73EB2E100J	CHIP R 10 J 1/4W	K3M1E2	R212,213			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R7			RK73GB2A472J	CHIP R 4.7K J 1/10W		R214,215			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R8			RK73GB2A103J	CHIP R 10K J 1/10W		R216,217			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R9,10			RK73FB2B333J	CHIP R 33K J 1/8W		R218			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R21,22			RK73GB2A361J	CHIP R 360 J 1/10W		R219,220			RK73GB2A101J	CHIP R 100 J 1/10W	
R23,24			RK73GB2A223J	CHIP R 22K J 1/10W		R221-224			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R31,32			RK73EB2E181J	CHIP R 180 J 1/4W		R225-227			RK73GB2A101J	CHIP R 100 J 1/10W	K3K4E2
R45,46			RK73GB2A361J	CHIP R 360 J 1/10W		R228			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R47,48			RK73GB2A223J	CHIP R 22K J 1/10W		R229			RK73GB2A104J	CHIP R 100K J 1/10W	
R55,56			RK73EB2E181J	CHIP R 180 J 1/4W		R230			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R60,61			RK73GB2A102J	CHIP R 1.0K J 1/10W	K3M1E2	R231			RK73GB2A104J	CHIP R 100K J 1/10W	
R61			RK73GB2A102J	CHIP R 1.0K J 1/10W	K4	R232			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R100			RK73FB2B223J	CHIP R 22K J 1/8W		R233			RK73GB2A104J	CHIP R 100K J 1/10W	
R101			RK73GB2A101J	CHIP R 100 J 1/10W		R234-240			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R102			RK73GB2A222J	CHIP R 2.2K J 1/10W		R241			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R103			RK73GB2A223J	CHIP R 22K J 1/10W		R245,246			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R104			RK73FB2B221J	CHIP R 220 J 1/8W		R247			RK73GB2A104J	CHIP R 100K J 1/10W	
R105			RK73GB2A153J	CHIP R 15K J 1/10W		R248			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R106			R92-3047-05	CHIP R 24K D 1/10W		R250-253			RK73GB2A104J	CHIP R 100K J 1/10W	K3K4M1
R107			R92-3032-05	CHIP R 4.3K D 1/10W		R250,251			RK73GB2A104J	CHIP R 100K J 1/10W	E2
R108			RK73FB2B152J	CHIP R 1.5K J 1/8W		R254,255			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R109-111			RK73GB2A473J	CHIP R 47K J 1/10W		R256			RK73GB2A104J	CHIP R 100K J 1/10W	E2
R112			RK73FB2B152J	CHIP R 1.5K J 1/8W		R256,257			RK73GB2A104J	CHIP R 100K J 1/10W	K3K4M1
R124			RK73FB2B472J	CHIP R 4.7K J 1/8W		R259			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R125,126			RD14DB2H102J	SMALL-RD 1.0K J 1/2W	K3K4M1	R260,261			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R127			RK73GB2A223J	CHIP R 22K J 1/10W	K3K4M1	R262			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R128,129			RD14DB2H102J	SMALL-RD 1.0K J 1/2W		R264			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R130			RK73GB2A223J	CHIP R 22K J 1/10W		R265			RK73GB2A104J	CHIP R 100K J 1/10W	
R131			RK73FB2B472J	CHIP R 4.7K J 1/8W		R266			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R132			RK73FB2B561J	CHIP R 560 J 1/8W	M1E2	R267			RK73GB2A473J	CHIP R 47K J 1/10W	
						R268			RK73GB2A333J	CHIP R 33K J 1/10W	
						R269			RK73GB2A472J	CHIP R 4.7K J 1/10W	

K3 : KDC-MPV8025 **K4** : KDC-MP825 **E2** : KDC-W7027 **M1** : KDC-8026

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

ELECTRIC UNIT (X34-3040-10/11/21, X34-3042-71)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
R270,271 R272 R273 R274 R275			RK73GB2A471J RK73GB2A472J RK73GB2A222J RK73GB2A102J RK73GB2A104J	CHIP R 470 J 1/10W CHIP R 4.7K J 1/10W CHIP R 2.2K J 1/10W CHIP R 1.0K J 1/10W CHIP R 100K J 1/10W	
R277,278 R279,280 R281 R285 R300,301			RK73GB2A471J RK73GB2A472J RK73GB2A473J RK73GB2A102J RK73GB2A472J	CHIP R 470 J 1/10W CHIP R 4.7K J 1/10W CHIP R 47K J 1/10W CHIP R 1.0K J 1/10W CHIP R 4.7K J 1/10W	
R302 R303 R305 R306 R307			RK73GB2A221J RK73GB2A223J RK73GB2A432J RK73GB2A100J RK73GB2A752J	CHIP R 220 J 1/10W CHIP R 22K J 1/10W CHIP R 4.3K J 1/10W CHIP R 10 J 1/10W CHIP R 7.5K J 1/10W	
R308 R309-311 R312 R313-317 R318,319			RK73EB2E102J RK73EB2E471J RK73EB2E101J RK73EB2E472J RK73EB2E101J	CHIP R 1.0K J 1/4W CHIP R 470 J 1/4W CHIP R 100 J 1/4W CHIP R 4.7K J 1/4W CHIP R 100 J 1/4W	K3K4E2 K3K4E2
R321-323 R324,325 R326 R327,328 R329			RK73GB2A222J RK73GB2A472J RK73GB2A104J RK73GB2A472J RK73EB2E472J	CHIP R 2.2K J 1/10W CHIP R 4.7K J 1/10W CHIP R 100K J 1/10W CHIP R 4.7K J 1/10W CHIP R 4.7K J 1/4W	
R330,331 R332 R402 R403 R404			RK73EB2E101J RK73EB2E471J RK73FB2B102J RK73GB2A223J RK73GB2A472J	CHIP R 100 J 1/4W CHIP R 470 J 1/4W CHIP R 1.0K J 1/8W CHIP R 22K J 1/10W CHIP R 4.7K J 1/10W	E2
R405-407 W1			RK73GB2A222J R92-1252-05	CHIP R 2.2K J 1/10W CHIP R 0 OHM J 1/16W	E2 E2
D1 D2 D3 D4 D5			1N5393G-M5 RB160L-40 MA4056(N)-M MA4082(N)-L SFPB-54V	DIODE DIODE ZENER DIODE ZENER DIODE DIODE	
D6 D9-12 D9-12 D13 D14			MA4110-L S1J 1SR154-400 1SS133 MA4056-M	ZENER DIODE DIODE DIODE DIODE ZENER DIODE	M1E2
D15 D16 D17 D20 D23,24			MA4047-M MA4068(N)-M MA4062(N)-M 1SS133 DAP202U	ZENER DIODE ZENER DIODE ZENER DIODE DIODE DIODE	
D23,24 D23,24 D25-27 D25,26 D28		*	LM1MA142WA-G MA142WA RD6.8M(B2) RD6.8M(B2) RD6.8MW	DIODE DIODE ZENER DIODE ZENER DIODE ZENER DIODE	K3M1E2 K4 K3M1E2
D29-31 D33-40			1SS133 S1J	DIODE DIODE	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
D33-40 D50 D51 D52-55 D52,53			1SR154-400 RD6.8M(B2) RD6.8MW MA3062WA MA3062WA	DIODE ZENER DIODE ZENER DIODE ZENER DIODE ZENER DIODE	E2 K3K4M1
D60 D62 D63-65 D66 IC1		*	MA3062WA MA3062WA DA204U IMSA-6801 UPD703030GC042	ZENER DIODE ZENER DIODE DIODE SURGE ABSORBER MICROCONTROLLER IC	
IC2 IC3 IC4 IC5 IC7			TDA7411 M5237ML TDA7560 SI-8050JD S-80837CNNB	ANALOGUE IC ANALOGUE IC ANALOGUE IC ANALOGUE IC MOS-IC	
IC8 IC12 IC13,14 Q1 Q2			TC74HC02AF TDA7479D LB1930M 2SA2057 2SC4081	MOS-IC ANALOGUE IC ANALOGUE IC TRANSISTOR TRANSISTOR	E2
Q3 Q4 Q4 Q5 Q5			2SA1576A DTA124EUA UN5112 DTC124EUA UN5212	TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR	
Q6 Q6 Q7 Q7 Q8,9			DTC144EUA UN5213 DTA124EUA UN5112 2SA2057	DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR	
Q10 Q11 Q11 Q12 Q12			2SC4081 DTC124EUA UN5212 DTA124EUA UN5112	TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR	
Q13 Q14 Q23 Q23 Q24,25			2SA2057 2SC4081 DTC114YUA UN5214 2SB1240	TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR	K3K4M1 K3K4M1 K3K4M1
Q25 Q26 Q26 Q27 Q28			2SB1240 DTC114YUA UN5214 2SA1576A DTA114EUA	TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR	E2
Q28 Q29 Q29 Q30 Q30			UN5111 DTA123JK KRA105S DTC144EUA UN5213	DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR	M1E2 M1E2
Q32-34 Q51,52 Q51,52 Q53 Q53			2SC4081 DTA124EUA UN5112 DTC143TUA UN5216	TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR	

K3 : KDC-MPV8025 **K4** : KDC-MP825 **E2** : KDC-W7027 **M1** : KDC-8026

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

ELECTRIC UNIT (X34-3040-10/11/21, X34-3042-71)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
Q54			DTC124EUA	DIGITAL TRANSISTOR	
Q54			UN5212	DIGITAL TRANSISTOR	
Q55,56			DTC143TUA	DIGITAL TRANSISTOR	
Q55,56			UN5216	DIGITAL TRANSISTOR	
Q59,60			DTC143TUA	DIGITAL TRANSISTOR	
Q59,60			UN5216	DIGITAL TRANSISTOR	
Q63			DTA124EUA	DIGITAL TRANSISTOR	
Q63			UN5112	DIGITAL TRANSISTOR	
Q102			DTC124EUA	DIGITAL TRANSISTOR	
Q102			UN5212	DIGITAL TRANSISTOR	
Q103			2SB1188(Q,R)	TRANSISTOR	
Q104			DTC143TUA	DIGITAL TRANSISTOR	E2
Q104			UN5216	DIGITAL TRANSISTOR	E2
TH1			PTH9C42BD471Q	POSITIVE RESISTOR	
A1			X86-3730-11	FRONT-END UNIT	K3K4M1
A1			X86-3732-70	FRONT-END UNIT	E2
CD MECHANISM ASSY (X92-4900-00)					
2	1B	*	A10-4884-02	CHASSIS	
5	1B	*	D10-4610-03	ARM ASSY	
8	2A	*	D10-4608-03	LEVER ASSY	
10	3A	*	D10-4602-03	ARM	
11	2A	*	D10-4603-03	ARM	
12	3A	*	D10-4604-03	ARM	
13	3A	*	D10-4605-03	ARM	
14	3B	*	D10-4613-03	ARM	
15	2A	*	D10-4615-03	SLIDER	
16	3B	*	D10-4617-02	SLIDER	
17	3B	*	D10-4618-03	SLIDER	
18	3B	*	D10-4614-04	ARM	
19	3B	*	D10-4606-04	ARM	
22	2A	*	D13-2174-04	GEAR	
23	2B	*	D13-2180-04	GEAR	
24	3B	*	D13-2181-04	GEAR	
25	3B	*	D13-2182-04	GEAR	
26	3B	*	D13-2175-04	WORM	
27	3B	*	D13-2176-04	GEAR	
28	3B	*	D13-2177-04	GEAR	
29	3B	*	D13-2178-04	GEAR	
30	3B	*	D13-2183-04	GEAR	
31	3B	*	D13-2184-04	GEAR	
32	2B	*	D13-2173-03	RACK (GEAR)	
33	2A	*	D14-0763-04	ROLLER	
35	2B	*	D21-2389-04	SHAFT	
36	1A	*	D23-0955-04	RETAINER	
37	1B	*	D39-0246-05	DAMPER	
38	2B	*	G01-3095-04	EXTENSION SPRING	
39	2A	*	G01-3093-04	TORSION COIL SPRING	
40	2A	*	G01-3094-04	EXTENSION SPRING	
41	1B	*	G01-3091-04	EXTENSION SPRING	
42	2A	*	G01-3092-04	EXTENSION SPRING	
43	1B	*	G01-3090-04	EXTENSION SPRING	
44	2B	*	G02-1413-04	FLAT SPRING	
45	2B	*	G02-1414-04	FLAT SPRING	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
51	1A	*	J21-9753-02	MOUNTING HARDWARE	
52	3B	*	J21-9755-02	MOUNTING HARDWARE	
53	1B	*	J21-9752-03	MOUNTING HARDWARE	
55	1A	*	J90-1014-01	GUIDE	
56	1B	*	J90-1024-03	GUIDE	
DFPC1	3A		J84-0141-05	FLEXIBLE PRINTED WIRING BOARD	
A	2B	*	N09-6192-05	TAPPING SCREW (P2X8COUNTERSU)	
B	1B	*	N09-6191-05	STEPPED SCREW (M1.7TOTAL8BON)	
C	2B	*	N09-6004-05	MACHINE SCREW (M1.7X2.5 IB-L)	
E	2B	*	N09-6193-05	MACHINE SCREW (M2X2PAN-HEAD#)	
F	1A	*	N09-6194-05	TAPPING SCREW (P2X5BINDING-H)	
G	2A		N19-2163-04	FLAT WASHER	
H	1B		N39-2020-46	PAN HEAD MACHIN SCREW	
J	1B	*	N09-6196-05	TAPTITE SCREW (S2X3.5PRECISI)	
DM1	3B		T42-1066-04	DC MOTOR ASSY (SPINDLE)	
DM2	3B		T42-1067-04	DC MOTOR ASSY (LOADING)	
DPU1	2B		X93-2010-00	OPTICAL PICKUP ASSY	

K3 : KDC-MPV8025 K4 : KDC-MP825 E2 : KDC-W7027 M1 : KDC-8026

△ Indicates safety critical components.