



EXPLODED VIEW (CD MECHANISM)

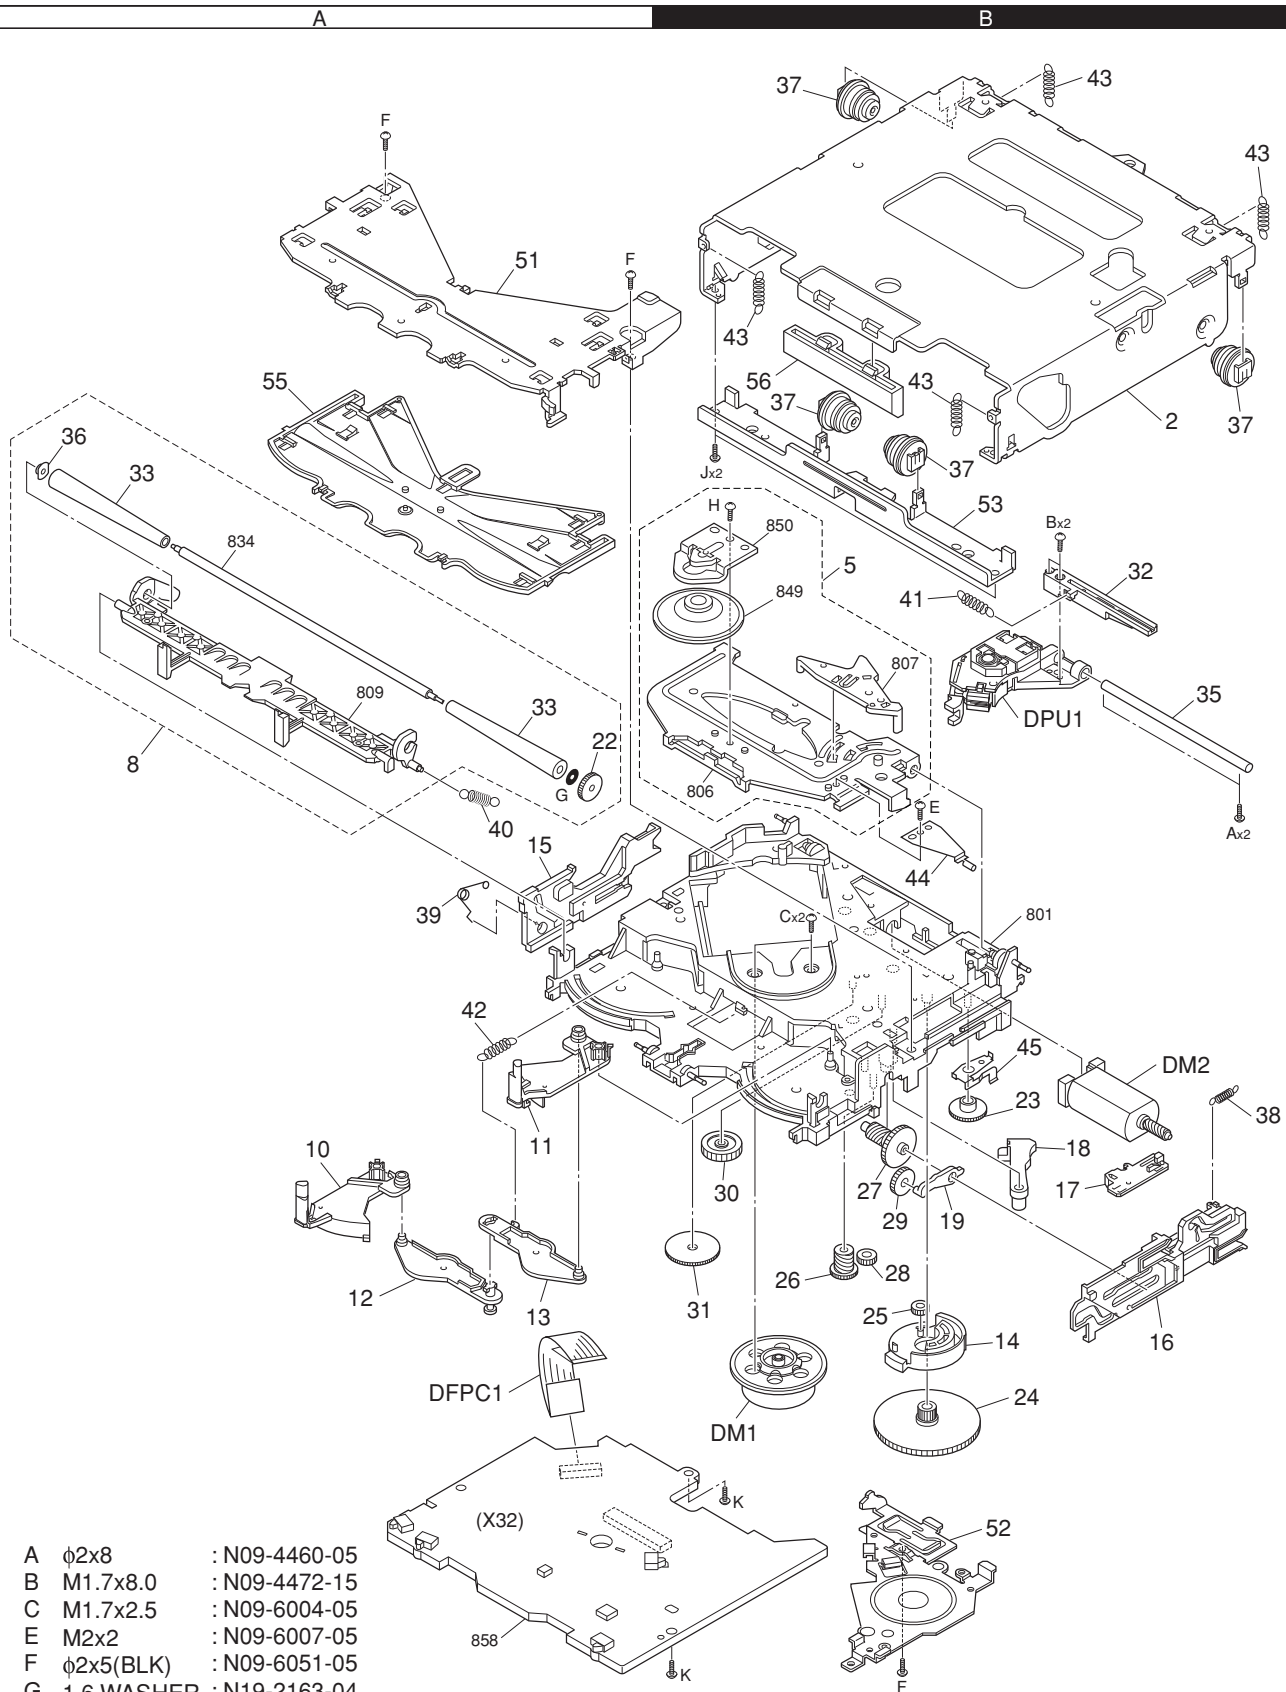

A	φ2x8	: N09-4460-05
B	M1.7x8.0	: N09-4472-15
C	M1.7x2.5	: N09-6004-05
E	M2x2	: N09-6007-05
F	φ2x5(BLK)	: N09-6051-05
G	1.6 WASHER	: N19-2163-04
H	M2x2	: N39-2020-46
J	M2x3.5	: N09-6108-05
K	φ2x6	: N09-6155-05

EXPLODED VIEW (UNIT)

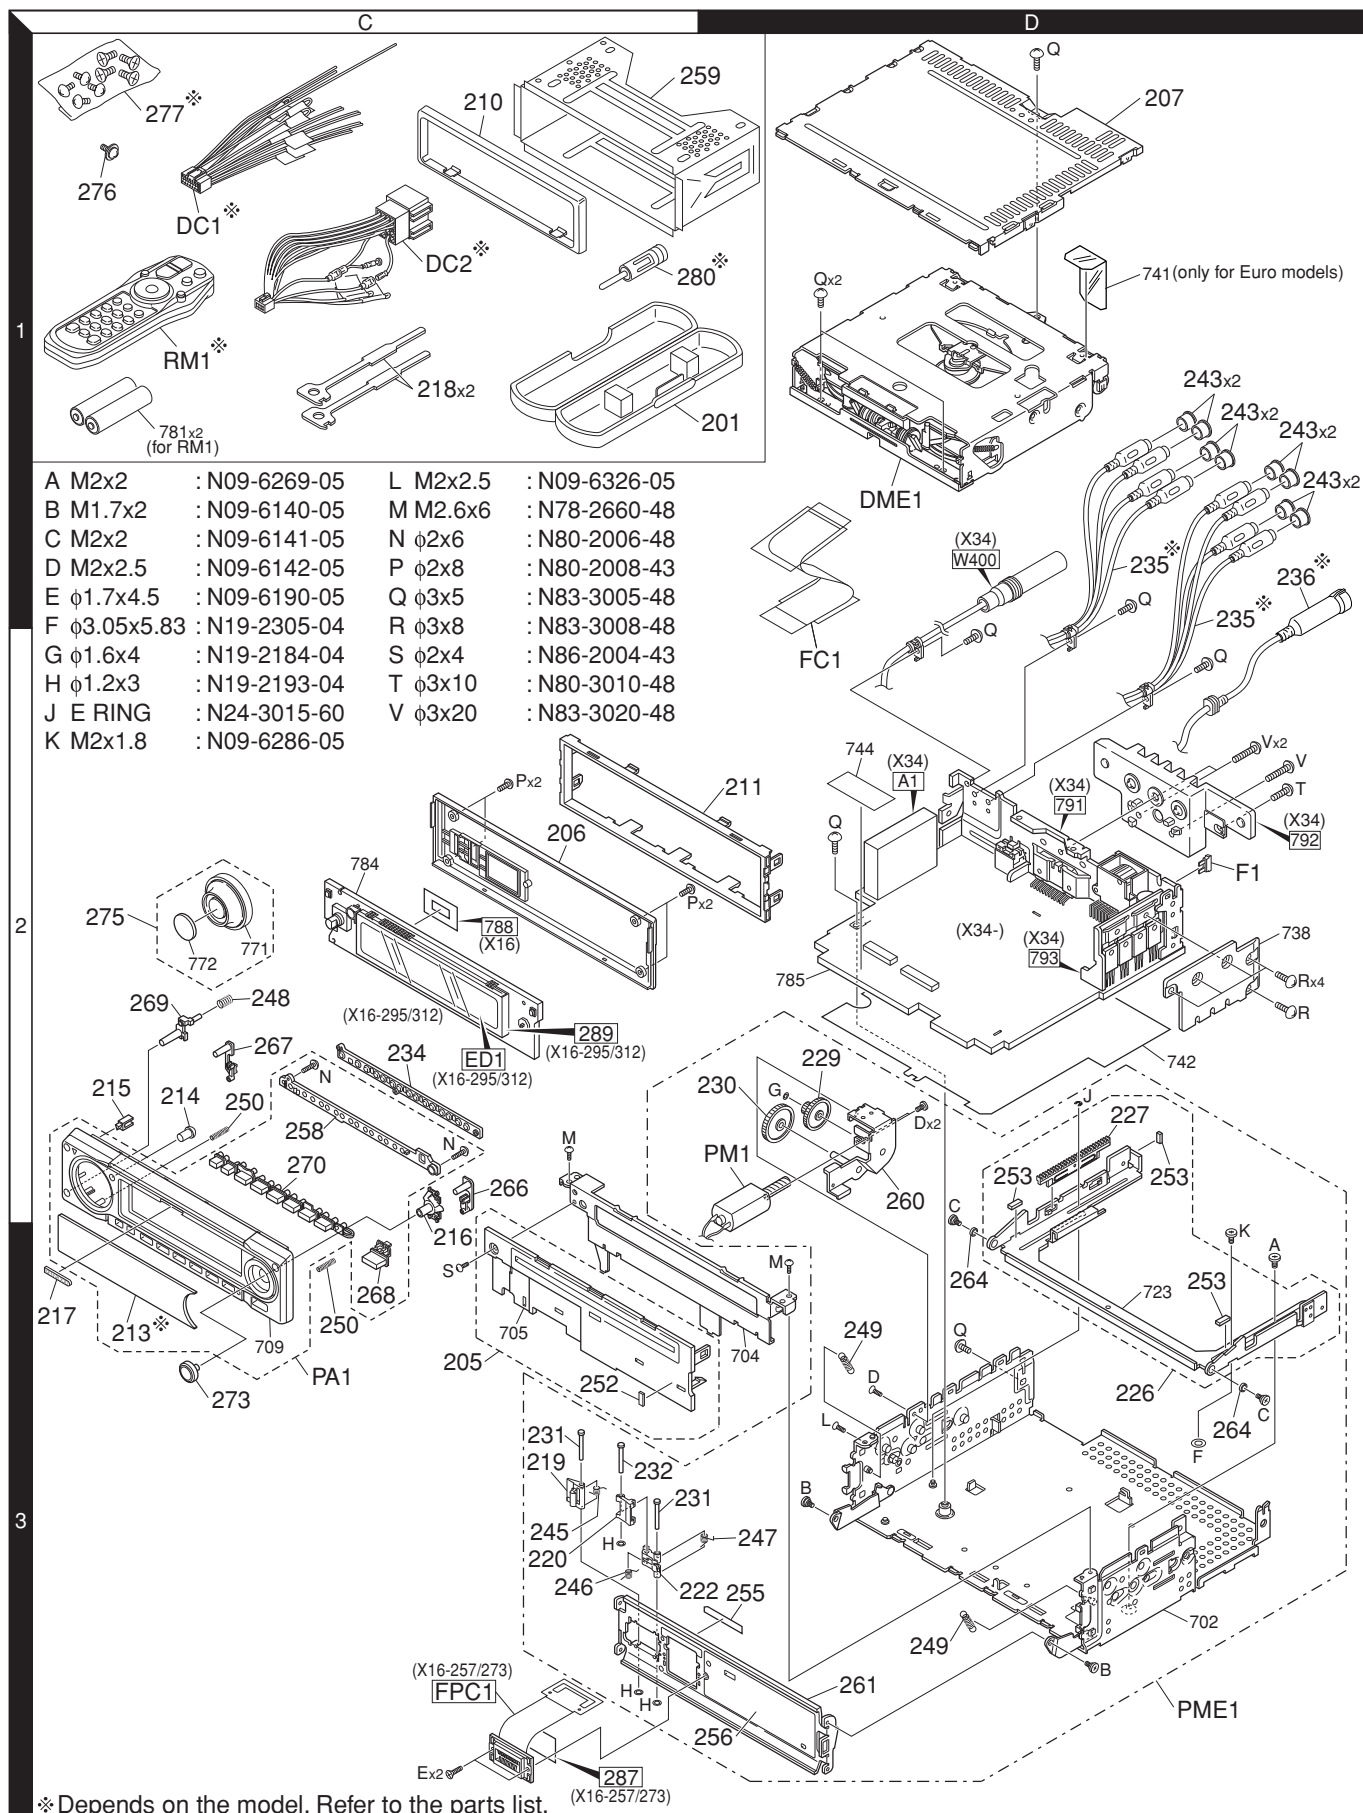

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation	Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
KDC-MP628/MP7028/MP728/MP8029/W7031/W7031Y											
201	1C		A02-2732-03	PLASTIC CABINET ASSY		235	1D	*	E30-6436-05	CORD WITH PINPLUG (8-PLUG)	K4
205	3C		A22-3023-12	SUB PANEL ASSY		235	1D	*	E30-6437-05	CORD WITH PINPLUG (6-PLUG)	K2K3M1
206	2C	*	A46-1817-01	REAR COVER		235	1D	*	E30-6442-05	CORD WITH PINPLUG (4-PLUG)	E1E2
207	1D		A52-0845-12	TOP PLATE		236	1D		E30-6292-15	CORD WITH DIN CONNECTOR	E1E2
PA1	3C	*	A64-3506-12	PANEL ASSY	K2	Δ DC1	1C	*	E30-6408-05	DC CORD	M1
PA1	3C	*	A64-3507-12	PANEL ASSY	K3	Δ DC1	1C		E30-6414-05	DC CORD	K2K3K4
PA1	3C	*	A64-3508-12	PANEL ASSY	E1E2	Δ DC2	1C	*	E30-6412-05	DC CORD	E1E2
PA1	3C	*	A64-3513-12	PANEL ASSY	M1	FC1	2D		E39-0736-05	FLAT CABLE	
PA1	3C	*	A64-3665-02	PANEL ASSY	K4	243	1D	*	F29-0626-04	INSULATING COVER	
PME1	3D	*	A10-5205-22	CHASSIS ASSY	K2K3	Δ F1	2D		F52-0006-05	FUSE (MINI BLADE TYPE) (10A)	
PME1	3D	*	A10-5205-22	CHASSIS ASSY	K4M1E1	245	3C		G01-3210-04	TORSION COIL SPRING	
PME1	3D	*	A10-5224-22	CHASSIS ASSY	E2	246	3C		G01-3211-04	TORSION COIL SPRING	
RM1	1C	*	A70-2067-05	REMOTE CONTROLLER ASSY (RC-527)	K2K3	247	3D		G01-3212-04	TORSION COIL SPRING	
RM1	1C	*	A70-2067-05	REMOTE CONTROLLER ASSY (RC-527)	M1K4	248	2C		G01-3213-04	COMPRESSION SPRING	
-			B46-0100-50	WARRANTY CARD	K2K3	249	3D		G01-3215-04	EXTENSION SPRING	
-			B46-0100-50	WARRANTY CARD	M1K4E2	250	3C	*	G01-3261-04	COMPRESSION SPRING	
-			B46-0606-04	ID CARD	K2K3K4	252	3C		G11-3594-04	CUSHION	
-			B46-0612-14	ID CARD	M1E1E2	253	2D	*	G11-3646-04	CUSHION	
-			B58-1426-04	CAUTION CARD	K2K3K4	255	3D		G16-1482-14	SHEET	
-		*	B64-2962-10	INST. MANUAL (ENGLISH)	K2K3K4	256	3D		G16-1483-04	SHEET	
-		*	B64-2963-10	INST. MANUAL (FRE, SPA)	K2K3K4	-		*	H10-4925-02	POLYSTYRENE FOAMED FIXTURE	K2K3
-		*	B64-2964-00	INST. MANUAL (ENG, T-CHI)	M1	-		*	H10-4925-02	POLYSTYRENE FOAMED FIXTURE	K4M1E1
-		*	B64-2965-00	INST. MANUAL (ARABIC)	M1	-		*	H10-4933-02	POLYSTYRENE FOAMED FIXTURE	E2
-		*	B64-2966-00	INST. MANUAL (ENG, RUS)	E1	-			H25-0329-04	PROTECTION BAG (280X450X0.03)	K2K3
-		*	B64-2966-00	INST. MANUAL (ENG, RUS)	E1	-			H25-0329-04	PROTECTION BAG (280X450X0.03)	K4M1E1
-		*	B64-2987-00	INST. MANUAL (ENGLISH)	E2	-			H25-0337-04	PROTECTION BAG (180X300X0.03)	
-		*	B64-2988-00	INST. MANUAL (FRE, GER)	E2	-			H25-1111-04	PROTECTION BAG (280X450X0.03)	E2
-		*	B64-2989-00	INST. MANUAL (DUT, ITA)	E2	-		*	H54-3342-03	ITEM CARTON CASE (KDC-MP7028)	K4
-		*	B64-2990-00	INST. MANUAL (SPA, POR)	E2	-		*	H54-3343-03	ITEM CARTON CASE (KDC-MP728)	K2
210	1C	*	B07-3125-01	ESCUTCHEON	M1E1	-		*	H54-3344-03	ITEM CARTON CASE (KDC-MP628)	K3
210	1C	*	B07-3125-01	ESCUTCHEON	K4E2	-		*	H54-3346-03	ITEM CARTON CASE (KDC-W7031Y)	E1
210	1C	*	B07-3126-01	ESCUTCHEON	K2K3	-		*	H54-3347-03	ITEM CARTON CASE (KDC-MP8029)	M1
211	2C		B07-3095-02	ESCUTCHEON		-		*	H54-3393-03	ITEM CARTON CASE (KDC-W7031)	E2
213	3C	*	B10-4653-11	FRONT GLASS	K2	258	2C	*	J19-7053-02	HOLDER	
213	3C	*	B10-4654-11	FRONT GLASS	K3	259	1C		J21-9716-03	MOUNTING HARDWARE ASSY	
213	3C	*	B10-4655-11	FRONT GLASS	E1E2	260	2D		J22-0114-03	MOUNTING HARDWARE ASSY	
213	3C	*	B10-4660-11	FRONT GLASS	M1	261	3D	*	J22-0263-02	MOUNTING HARDWARE	
213	3C	*	B10-4715-01	FRONT GLASS	K4	264	3D		J31-1062-04	COLLAR	
214	2C	*	B10-4662-04	FRONT GLASS		266	2C	*	K24-4287-03	PUSH KNOB (EJECT)	M1E1
215	2C	*	B19-2309-03	LIGHTING BOARD		266	2C	*	K24-4287-03	PUSH KNOB (EJECT)	K4E2
216	2C	*	B19-2310-03	LIGHTING BOARD		266	2C	*	K24-4288-03	PUSH KNOB (EJECT)	K2K3
217	3C		B43-1518-04	BADGE		267	2C	*	K24-4290-03	PUSH KNOB (ATT)	M1E1
218	1C		D10-4589-04	LEVER		267	2C	*	K24-4290-03	PUSH KNOB (ATT)	K4E2
219	3C		D10-4805-03	LEVER		267	2C	*	K24-4291-03	PUSH KNOB (ATT)	K2K3
220	3C		D10-4806-03	LEVER		268	3C	*	K24-4293-03	PUSH KNOB (SRC)	M1E1
222	3C		D10-4807-13	LEVER		268	3C	*	K24-4293-03	PUSH KNOB (SRC)	K4E2
226	3D	*	D10-4875-13	SLIDER ASSY		268	3C	*	K24-4294-03	PUSH KNOB (SRC)	K2K3
227	2D		D13-2318-13	RACK (GEAR)		269	2C	*	K24-4296-03	PUSH KNOB (RELEASE)	M1E1
229	2D		D13-2320-04	GEAR		269	2C	*	K24-4296-03	PUSH KNOB (RELEASE)	K4E2
230	2D		D13-2321-04	GEAR		269	2C	*	K24-4297-03	PUSH KNOB (RELEASE)	K2K3
231	3C		D21-2442-04	SHAFT		270	2C	*	K25-1696-02	PUSH KNOB (PRESET)	
232	3C		D21-2443-04	SHAFT		273	3C	*	K29-7144-03	KEY TOP (FM/AM, SEEK)	
234	2C	*	E29-2026-03	CONDUCTIVE RUBBER		275	2C	*	K29-7150-04	KNOB ASSY (VOL)	

E1 : KDC-W7031Y E2 : KDC-W7031 K2 : KDC-MP728
 K3 : KDC-MP628 K4 : KDC-MP7028 M1 : KDC-MP8029
 (E : Europe K : North America M : Other Areas W : Without Europe)

Δ Indicates safety critical components.

PARTS LIST

KDC-MP628/MP7028/MP728/MP8029/W7031/W7031Y

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
276	1C		N09-6212-05	TAPPING SCREW	K2K3K4
276	1C	*	N09-6280-05	TAPPING SCREW	M1E1E2
277	1C		N99-1723-05	SCREW SET	K2K3K4
277	1C	*	N99-1758-05	SCREW SET	M1
A	3D	*	N09-6269-05	STEPPED SCREW	
B	3D		N09-6140-05	STEPPED SCREW	
C	3D		N09-6141-05	STEPPED SCREW	
D	2D		N09-6142-05	MACHINE SCREW	
E	3C		N09-6190-05	TAPPING SCREW	
F	3D	*	N19-2305-04	FLAT WASHER	
G	2D		N19-2184-04	FLAT WASHER	
H	3C		N19-2193-04	FLAT WASHER	
J	2D		N24-3015-60	E TYPE RETAINING RING	
K	3D	*	N09-6286-05	STEPPED SCREW	
L	3D	*	N09-6326-05	MACHINE SCREW	
M	2C	*	N78-2660-48	PAN HEAD TAPTITE SCREW	
N	2C		N80-2006-48	PAN HEAD TAPTITE SCREW	
P	2C		N80-2008-43	PAN HEAD TAPTITE SCREW	
Q	1D		N83-3005-48	PAN HEAD TAPTITE SCREW	
R	2D		N83-3008-48	PAN HEAD TAPTITE SCREW	
S	3C	*	N86-2004-43	BINDING HEAD TAPTITE SCREW	
280	1C		T90-0523-05	ANTENNA ADAPTOR	E1E2
PM1	2D		T42-1086-14	MOTOR ASSY	
DME1	1D		X92-5080-00	MECHANISM ASSY	K2K3
DME1	1D		X92-5080-00	MECHANISM ASSY	M1K4
DME1	1D	*	X92-5080-04	MECHANISM ASSY	E1
DME1	1D	*	X92-5080-05	MECHANISM ASSY	E2
SUB-CIRCUIT UNIT (X16-2570-10 / X16-2732-70)					
287	3C		F20-2284-14	INSULATING SHEET	
FPC1	3C		J86-0003-05	FPC (LEAD FREE)	
SWITCH UNIT (X16-2950-1x / X16-3122-72)					
D1-3			B30-1605-05	LED (2-COLOR, PG/RED)	
D4-7		*	B30-1731-05	LED (BLUE)	
D8			B30-1692-05	LED (HR/YG)	
D9-12			B30-1605-05	LED (2-COLOR, PG/RED)	
D13-15		*	B30-1731-05	LED (BLUE)	
D16-18			B30-1605-05	LED (2-COLOR, PG/RED)	
C1-4			CK73GB1H103K	CHIP C 0.010UF K	
C6-8			CK73GB1H103K	CHIP C 0.010UF K	
C10			CK73GB0J105K	CHIP C 1.0UF K	
C11,12			CK73GB1H332K	CHIP C 3300PF K	K2K3K4
C13			CK73EB1A475K	CHIP C 4.7UF K	K2K3K4
C15			CK73FB1A225K	CHIP C 2.2UF K	K2K3K4
C16-18			CK73GB1H103K	CHIP C 0.010UF K	
C20-23			CK73GB1H103K	CHIP C 0.010UF K	
C24,25			CK73GB1E473K	CHIP C 0.047UF K	
C26,27			CK73GB1H103K	CHIP C 0.010UF K	
C28,29			CK73GB0J105K	CHIP C 1.0UF K	
C30			CK73GB1H103K	CHIP C 0.010UF K	
C31			CC73GCH1H221J	CHIP C 220PF J	
C32			CK73FB1A225K	CHIP C 2.2UF K	
C33			CK73GB1H103K	CHIP C 0.010UF K	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
C34			CK73GB1A224K	CHIP C 0.22UF K	
C35,36			CK73GB1H103K	CHIP C 0.010UF K	
C37		*	C93-1217-05	CHIP C 0.047UF 100WV	
C38			CK73FB1A225K	CHIP C 2.2UF K	
C39			CK73FB0J106K	CHIP C 10UF K	
C40			CK73GB1C104K	CHIP C 0.10UF K	
C41,42			CK73FB0J106K	CHIP C 10UF K	
C43			CC73GCH1H101J	CHIP C 100PF J	
C44			CK73GB1C104K	CHIP C 0.10UF K	
J1			E59-0839-05	RECTANGULAR PLUG	
289	2C	*	J19-7054-03	HOLDER	
X1		*	L78-1208-05	RESONATOR (6.6MHZ)	
CP2			RK74HB1J223J	CHIP-COM 22K J 1/16W	
CP3		*	RK74GA1J223J	CHIP-COM 22K J 1/16W	
CP4			RK74HB1J472J	CHIP-COM 4.7K J 1/16W	
CP5			RK74GA1J332J	CHIP-COM 3.3K J 1/16W	
CP6			RK74GA1J473J	CHIP-COM 47K J 1/16W	
CP7			RK74HB1J473J	CHIP-COM 47K J 1/16W	
CP8		*	RK74GA1J331J	CHIP-COM 330 J 1/16W	
CP9-14			RK74HB1J331J	CHIP-COM 330 J 1/16W	
CP15			RK74HB1J223J	CHIP-COM 22K J 1/16W	
CP16			RK74HB1J331J	CHIP-COM 330 J 1/16W	
CP17			RK74HB1J223J	CHIP-COM 22K J 1/16W	
CP18			RK74HB1J331J	CHIP-COM 330 J 1/16W	
CP19			RK74HB1J223J	CHIP-COM 22K J 1/16W	
CP20			RK74GA1J101J	CHIP-COM 100 J 1/16W	
CP21			RK74HB1J331J	CHIP-COM 330 J 1/16W	
CP22			RK74HB1J223J	CHIP-COM 22K J 1/16W	
CP23			RK74HB1J101J	CHIP-COM 100 J 1/16W	
CP24			RK74HB1J102J	CHIP-COM 1.0K J 1/16W	
CP25		*	RK74HB1J332J	CHIP-COM 3.3K J 1/16W	
CP26			RK74HB1J223J	CHIP-COM 22K J 1/16W	
CP27			RK74HB1J101J	CHIP-COM 100 J 1/16W	
CP28			RK74GA1J101J	CHIP-COM 100 J 1/16W	
CP29			RK74HB1J101J	CHIP-COM 100 J 1/16W	
CP30			RK74HB1J102J	CHIP-COM 1.0K J 1/16W	
CP31			RK74HB1J223J	CHIP-COM 22K J 1/16W	
CP34			RK74HB1J473J	CHIP-COM 47K J 1/16W	
CP35		*	RK74GA1J223J	CHIP-COM 22K J 1/16W	
R1			RK73EB2E751J	CHIP R 750 J 1/4W	
R2-4			RK73FB2B361J	CHIP R 360 J 1/8W	
R5-7			RK73EB2E471J	CHIP R 470 J 1/4W	
R8			RK73FB2B271J	CHIP R 270 J 1/8W	
R9			RK73GB2A333J	CHIP R 33K J 1/10W	
R10			RK73GB2A512J	CHIP R 5.1K J 1/10W	K2K3K4
R11			RK73GB2A223J	CHIP R 22K J 1/10W	E2M1E1
R11,12			RK73GB2A223J	CHIP R 22K J 1/10W	K2K3K4
R13			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R14			RK73GB2A103J	CHIP R 10K J 1/10W	K2K3K4
R15,16			RK73GB2A274J	CHIP R 270K J 1/10W	K2K3K4
R17			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R18			RK73GB2A473J	CHIP R 47K J 1/10W	

E1 : KDC-W7031Y E2 : KDC-W7031 K2 : KDC-MP728
K3 : KDC-MP628 K4 : KDC-MP7028 M1 : KDC-MP8029

40 (E : Europe K : North America M : Other Areas W : Without Europe)

△ Indicates safety critical components.

PARTS LIST

SWITCH UNIT (X16-2950-1x / X16-3122-72)

Ref. No.	Add	New	Parts No.	Description	Destination
R19			RK73GB2A100J	CHIP R 10 J 1/10W	K2K3K4
R20			RK73GB2A332J	CHIP R 3.3K J 1/10W	
R23,24			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R26			RK73GB2A223J	CHIP R 22K J 1/10W	
R27,28			RK73GB2A103J	CHIP R 10K J 1/10W	
R29			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R30			RK73GB2A223J	CHIP R 22K J 1/10W	
R33			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R34			RK73GB2A101J	CHIP R 100 J 1/10W	
R36			RK73GB2A101J	CHIP R 100 J 1/10W	
R37			RK73GB2A473J	CHIP R 47K J 1/10W	
R38			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R39-41			RK73GB2A473J	CHIP R 47K J 1/10W	
R42			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R43,44		*	RK73PB2H120J	CHIP R 12 J 1/2W	
R45-49			RK73EB2E101J	CHIP R 100 J 1/4W	
R50			RK73EB2E102J	CHIP R 1.0K J 1/4W	
R52			RK73GB2A223J	CHIP R 22K J 1/10W	
R53			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R54			RK73EB2E333J	CHIP R 33K J 1/4W	
R55			RK73GB2A473J	CHIP R 47K J 1/10W	
R56			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R58			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R59			RK73GB2A473J	CHIP R 47K J 1/10W	
R60			RK73FB2B220J	CHIP R 22 J 1/8W	
R61			RK73GB2A104J	CHIP R 100K J 1/10W	
R62		*	RK73PB2H2R7J	CHIP R 2.7 J 1/2W	
R64			RK73GB2A223J	CHIP R 22K J 1/10W	
R66			RK73EB2E821J	CHIP R 820 J 1/4W	
W1,2			R92-2053-05	CHIP R 0 OHM J 1/8W	
S2			S70-0901-05	TACT SWITCH	
S17,18			S70-0901-05	TACT SWITCH	
S19		*	S70-0926-15	TACT SWITCH	
S1		*	T99-0456-05	ROTARY ENCODER	
ED1		*	JN12823A	FLUORESCENT INDICATOR TUBE	
IC1		*	MX231613T14T9	ROM IC	K2K3K4
IC2			BA3830F	ANALOGUE IC	
IC4		*	703134GJ011-A	MICROCONTROLLER IC	
IC5		*	BD5237FVE	ANALOGUE IC	
IC6			PNA4S22M	ANALOGUE IC	
IC7			TC74LVX08FT	MOS-IC	
IC8		*	TC7WT126FU-F	MOS-IC	
IC9			TC7SH32FU-F	MOS-IC	
IC10		*	SI-3025KMNF	ANALOGUE IC	
IC11			SI-3033LUSNF	ANALOGUE IC	
Q1,2			2SC4617	TRANSISTOR	
Q3-5			2SD2351(W)	TRANSISTOR	
Q6			2SB1689	TRANSISTOR	
Q7			2SA1774	TRANSISTOR	
Q8		*	DTC143ZE	DIGITAL TRANSISTOR	
Q9			2SC4617	TRANSISTOR	
Q10			2SA1774	TRANSISTOR	
Q11			2SC2713-F	TRANSISTOR	
Q12			2SC4667-F	TRANSISTOR	

Ref. No.	Add	New	Parts No.	Description	Destination
Q13			2SB1198K	TRANSISTOR	
CD PLAYER UNIT (X32-574x-xx) 0-00 : K2K3K4M1, 0-02 : E1E2					
C1,2			CK73GB1A105K	CHIP C 1.0UF K	
C3,4			CC73GCH1H681J	CHIP C 680PF J	
C5,6			CC73GCH1H680J	CHIP C 68PF J	
C7,8			CK73GB1H222K	CHIP C 2200PF K	
C9			CK73GB1H104K	CHIP C 0.10UF K	
C10			CK73FB0J106K	CHIP C 10UF K	
C11			CK73GB1H103K	CHIP C 0.010UF K	
C12			CK73GB1A105K	CHIP C 1.0UF K	
C20			CC73GCH1H391J	CHIP C 390PF J	
C21			CK73GB1H472K	CHIP C 4700PF K	
C22			CK73GB1H152K	CHIP C 1500PF K	
C23			CC73GCH1H391J	CHIP C 390PF J	
C24			CK73EB1A475K	CHIP C 4.7UF K	
C25			CK73FB0J106K	CHIP C 10UF K	
C30			CK73GB1H104K	CHIP C 0.10UF K	
C31			CK73GB0J105K	CHIP C 1.0UF K	
C32			CK73GB1H104K	CHIP C 0.10UF K	
C34			CK73FB0J475K	CHIP C 4.7UF K	
C35			CK73GB1H104K	CHIP C 0.10UF K	
C38-40			CK73GB1H104K	CHIP C 0.10UF K	
C41			CK73GB0J225K	CHIP C 2.2UF K	
C42			CK73GB1A105K	CHIP C 1.0UF K	
C43			C92-1792-05	ELECTRO 22UF 6.3WV	
C50			CK73GB1H104K	CHIP C 0.10UF K	
C51			CK73GB1H102K	CHIP C 1000PF K	
C52			CK73GB1H104K	CHIP C 0.10UF K	
C53,54			CK73GB0J475K	CHIP C 4.7UF K	
C55			CK73FB0J106K	CHIP C 10UF K	
C56,57			CK73GB1H104K	CHIP C 0.10UF K	
C58			CK73FB0J475K	CHIP C 4.7UF K	
C60,61			CK73GB1H104K	CHIP C 0.10UF K	
C62			CK73FB0J475K	CHIP C 4.7UF K	
C63			CK73GB0J225K	CHIP C 2.2UF K	
C64			CK73GB1H152K	CHIP C 1500PF K	
C65,66			CK73GB1H102K	CHIP C 1000PF K	
C67			CK73GB1H152K	CHIP C 1500PF K	
C68			CK73GB1H103K	CHIP C 0.010UF K	
C69			CK73GB1H332K	CHIP C 3300PF K	
C70			CK73GB1H682K	CHIP C 6800PF K	
C71			CK73GB1H104K	CHIP C 0.10UF K	
C72			CK73GB1H103K	CHIP C 0.010UF K	
C73			CC73GCH1H120J	CHIP C 12PF J	
C74			CC73GCH1H060D	CHIP C 6.0PF D	
C75			CK73GB1H104K	CHIP C 0.10UF K	
C76			CC73GCH1H030C	CHIP C 3.0PF C	
C77			CC73GCH1H020C	CHIP C 2.0PF C	
C78			CK73GB0J225K	CHIP C 2.2UF K	
C79,80			CK73GB1H104K	CHIP C 0.10UF K	
C81,82			CC73GCH1H470J	CHIP C 47PF J	
C83			CK73GB1H103K	CHIP C 0.010UF K	
C85			CK73FB0J106K	CHIP C 10UF K	
C90			CK73EB0J226K	CHIP C 22UF K	E1E2

E1 : KDC-W7031Y E2 : KDC-W7031 K2 : KDC-MP728
K3 : KDC-MP628 K4 : KDC-MP7028 M1 : KDC-MP8029
(E : Europe K : North America M : Other Areas W : Without Europe)

△ Indicates safety critical components.

PARTS LIST

CD PLAYER UNIT (X32-574x-xx) 0-00 : K2K3K4M1, 0-02 : E1E2

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
C91 C100 C101			CK73GB1H104K CK73GB1A224K CK73GB1H103K	CHIP C 0.10UF K CHIP C 0.22UF K CHIP C 0.010UF K	E1E2
CN1 CN2			E41-2083-05 E41-2297-05	FLAT CABLE CONNECTOR FLAT CABLE CONNECTOR	
X1 X2			L78-0862-05 L78-0851-05	RESONATOR (16.00MHZ) RESONATOR (16.93MHZ)	
CP1 CP2 CP4,5 CP6,7 CP8-11			RK74GA1J101J RK74GA1J472J RK74GA1J101J RK74HB1J103J RK74HB1J101J	CHIP-COM 100 J 1/16W CHIP-COM 4.7K J 1/16W CHIP-COM 100 J 1/16W CHIP-COM 10K J 1/16W CHIP-COM 100 J 1/16W	
CP12 CP13 CP27 CP28 R1,2			RK74GA1J101J RK74GA1J103J RK74GB1J472J RK74GB1J103J RK73GH2A103D	CHIP-COM 100 J 1/16W CHIP-COM 10K J 1/16W CHIP-COM 4.7K J 1/16W CHIP-COM 10K J 1/16W CHIP R 10K D 1/10W	
R3,4 R5,6 R7,8 R9,10 R11,12			RK73GB2A272J RK73GB2A752J RK73GB2A333J RK73GH2A103D RK73GB2A331J	CHIP R 2.7K J 1/10W CHIP R 7.5K J 1/10W CHIP R 33K J 1/10W CHIP R 10K D 1/10W CHIP R 330 J 1/10W	
R14-16 R20 R21 R22,23 R24			RK73GB2A2R2J RK73GB2A123J RK73GB2A133J RK73GB2A123J RK73GB2A432J	CHIP R 2.2 J 1/10W CHIP R 12K J 1/10W CHIP R 13K J 1/10W CHIP R 12K J 1/10W CHIP R 4.3K J 1/10W	
R25 R26 R27 R28 R29			RK73GB2A472J RK73GB2A183J RK73GB2A163J RK73GB2A133J RK73GB2A102J	CHIP R 4.7K J 1/10W CHIP R 18K J 1/10W CHIP R 16K J 1/10W CHIP R 13K J 1/10W CHIP R 1.0K J 1/10W	
R30 R31 R40-44 R48 R49			RK73GB2A101J RK73GB2A133J RK73GB2A103J RK73GB2A472J RK73GB2A103J	CHIP R 100 J 1/10W CHIP R 13K J 1/10W CHIP R 10K J 1/10W CHIP R 4.7K J 1/10W CHIP R 10K J 1/10W	E1E2
R50 R50 R51,52 R55 R56			RK73GB2A103J RK73GB2A103J RK73GB2A103J RK73GB2A103J RK73GB2A101J	CHIP R 10K J 1/10W CHIP R 10K J 1/10W CHIP R 10K J 1/10W CHIP R 10K J 1/10W CHIP R 100 J 1/10W	K2K3 M1K4
R57 R70 R71 R72 R74			RK73GB2A472J RK73GB2A102J RK73GB2A101J RK73GB2A333J RK73GB2A333J	CHIP R 4.7K J 1/10W CHIP R 1.0K J 1/10W CHIP R 100 J 1/10W CHIP R 33K J 1/10W CHIP R 33K J 1/10W	
R75 R78 R79 R80,81 R88			RK73GB2A750J RK73GB2A103J RK73GB2A333J RK73GB2A682J RK73GB2A472J	CHIP R 75 J 1/10W CHIP R 10K J 1/10W CHIP R 33K J 1/10W CHIP R 6.8K J 1/10W CHIP R 4.7K J 1/10W	
R89			RK73GB2A104J	CHIP R 100K J 1/10W	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
R90 R91 R92 R93 R100			RK73GB2A4R7J RK73GB2A910J RK73GB2A225J RK73GB2A103J RK73GB2A470J	CHIP R 4.7 J 1/10W CHIP R 91 J 1/10W CHIP R 2.2M J 1/10W CHIP R 10K J 1/10W CHIP R 47 J 1/10W	
R101 R102 R103,104 R112,113 R150			RK73GB2A102J RK73GB2A272J RK73GB2A223J RK73GB2A100J RK73GB2A103J	CHIP R 1.0K J 1/10W CHIP R 2.7K J 1/10W CHIP R 22K J 1/10W CHIP R 10 J 1/10W CHIP R 10K J 1/10W	
R151 W1 W20,21			RK73GB2A2R2J R92-1252-05 R92-1252-05	CHIP R 2.2 J 1/10W CHIP R 0 OHM J 1/16W CHIP R 0 OHM J 1/16W	
S1,2 S3			S68-0863-05 S68-0862-05	PUSH SWITCH PUSH SWITCH	
D1 IC1 IC2 IC3 IC4			DAP202U TAR5S33-F NJM4580V-ZB BA5824FP 703030BYGCJ09A	DIODE ANALOGUE IC ANALOGUE IC ANALOGUE IC MICROCONTROLLER IC	
IC5 IC6 IC7 IC8 IC11			XC6219B332MR BA33BCOWFP UPD63763GJ MSM51V4265EP7T TC7SET32FU-F	ANALOGUE IC ANALOGUE IC MOS-IC DRAM IC MOS-IC	E1E2
Q1 Q4 Q5 Q6 Q7			2SA1576A 2SB0970 DTA143XUA DTC143XUA DTA143XUA	TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR	
Q8			DTC143XUA	DIGITAL TRANSISTOR	
ELECTRIC UNIT (X34-3xxx-xx)					
D451			B30-1566-05	LED (RED)	
C1 C10 C11 C20 C21		*	C90-6744-05 CK73FB1C105K CD04AY1A221M CD04BA0J101M C90-5692-05	ELECTRO 3900UF 16WV CHIP C 1.0UF K ELECTRO 220UF 10WV ELECTRO 100UF 6.3WV ELECTRO 220UF 16WV	
C22 C23 C30 C31 C32			CK73GB1H103K CE32CL1C100M CK73GB1A474K CD04AY1A101M CK73GB1A474K	CHIP C 0.010UF K CHIP EL 10UF 16WV CHIP C 0.47UF K ELECTRO 100UF 10WV CHIP C 0.47UF K	
C33 C40 C41 C42 C43		*	CE32BJ1C101M CK73GB1H103K CD04BA0J470M CK73GB1C104K CK73GB1H104K	CHIP EL 100UF 16WV CHIP C 0.010UF K ELECTRO 47UF 6.3WV CHIP C 0.10UF K CHIP C 0.10UF K	
C44 C50 C51 C60 C61			CD04AS1C100M CK73GB1H104K CD04AS1C470M CK73FB1C474K CK73GB0J105K	ELECTRO 10UF 16WV CHIP C 0.10UF K ELECTRO 47UF 16WV CHIP C 0.47UF K CHIP C 1.0UF K	

E1 : KDC-W7031Y E2 : KDC-W7031 K2 : KDC-MP728
K3 : KDC-MP628 K4 : KDC-MP7028 M1 : KDC-MP8029

42 (E : Europe K : North America M : Other Areas W : Without Europe)

△ Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-3xxx-xx)

Ref. No.	Add	New	Parts No.	Description	Destination	Ref. No.	Add	New	Parts No.	Description	Destination
C63			CK73FB0J106K	CHIP C 10UF K		C458			CK73GB0J105K	CHIP C 1.0UF K	K2K4
C64			CK73GB1H103K	CHIP C 0.010UF K		C500-504			CK73EB1A475K	CHIP C 4.7UF K	K2K3K4
C67			CK73GB1H103K	CHIP C 0.010UF K		C505			CK73GB1H103K	CHIP C 0.010UF K	K2K3K4
C68			CK73GB1C104K	CHIP C 0.10UF K		C506			CE32CL1C100M	CHIP EL 10UF 16WV	K2K3K4
C69			CK73FB0J106K	CHIP C 10UF K		C550,551			CK73GB1H103K	CHIP C 0.010UF K	
C71			CK73GB1C104K	CHIP C 0.10UF K		C600,601			CK73EB1C225K	CHIP C 2.2UF K	M1K4
C72			CK73GB1C683K	CHIP C 0.068UF K		C602			CK73GB1H103K	CHIP C 0.010UF K	M1K4
C73		*	CK73EB1C106K	CHIP C 10UF K		C603			CK73GB1E223K	CHIP C 0.022UF K	M1K4
C74		*	CD04BK1E101M	ELECTRO 100UF 25WV		C604			CD04AS1C220M	ELECTRO 22UF 16WV	M1K4
C75		*	CD04BF1C101M	ELECTRO 100UF 16WV		C605-608			CK73EB1C225K	CHIP C 2.2UF K	M1K4
C76			CK73GB1C224K	CHIP C 0.22UF K		C609			CD04BF1C101M	ELECTRO 100UF 16WV	M1K4
C81		*	C93-1382-05	CHIP C 1UF K		C610			CD04AS1C220M	ELECTRO 22UF 16WV	M1K4
C82		*	C93-1381-05	CHIP C 1UF K		C610			CD04AS1E4R7M	ELECTRO 4.7UF 25WV	E2
C84		*	C93-1381-05	CHIP C 1UF K		C610			CD04AS1E4R7M	ELECTRO 4.7UF 25WV	K2K3E1
C85		*	C93-1382-05	CHIP C 1UF K		C611			CE32CL1C100M	CHIP EL 10UF 16WV	
C86			CK73EB1C105K	CHIP C 1.0UF K		C612,613			CD04AT1C100M	ELECTRO 10UF 16WV	M1K4
C87			CK73GB1H103K	CHIP C 0.010UF K		C614			CE32CL1C100M	CHIP EL 10UF 16WV	E1E2
C88			CK73GB1C224K	CHIP C 0.22UF K		C614			CE32CL1C100M	CHIP EL 10UF 16WV	K2K3M1
C100			CK73GB1H104K	CHIP C 0.10UF K		C614,615			CE32CL1C100M	CHIP EL 10UF 16WV	K4
C102,103			CC73GCH1H220J	CHIP C 22PF J		C616,617			CD04AT1C100M	ELECTRO 10UF 16WV	K4
C104-106			CK73GB1H103K	CHIP C 0.010UF K		C618,619			CE32CL1C100M	CHIP EL 10UF 16WV	K4
C107			CK73GB1H102K	CHIP C 1000PF K		C619			CE32CL1C100M	CHIP EL 10UF 16WV	E1E2
C109-113			CK73GB1H103K	CHIP C 0.010UF K		C619			CE32CL1C100M	CHIP EL 10UF 16WV	K2K3M1
C114			CD04AS0J470M	ELECTRO 47UF 6.3WV		C620,621			CD04AS1C100M	ELECTRO 10UF 16WV	
C200,201			CK73GB1H103K	CHIP C 0.010UF K		C622			CE32CL1C100M	CHIP EL 10UF 16WV	
C202			CK73GB1H102K	CHIP C 1000PF K		C623-628			CK73GB1H102K	CHIP C 1000PF K	K4
C203			CK73GB1E223K	CHIP C 0.022UF K		C623,624			CK73GB1H102K	CHIP C 1000PF K	M1
C204			CK73GB1H103K	CHIP C 0.010UF K		C627,628			CK73GB1H102K	CHIP C 1000PF K	M1
C205,206			CK73FB1C105K	CHIP C 1.0UF K		C629			CK73FB1C474K	CHIP C 0.47UF K	K2K3
C300			CD04AS1C470M	ELECTRO 47UF 16WV		C629			CK73FB1C474K	CHIP C 0.47UF K	M1K4
C301			CD04AT1H010M	ELECTRO 1UF 50WV		C630			CD04AT0J470M	ELECTRO 47UF 6.3WV	K2K3
C302			CD04AS1E4R7M	ELECTRO 4.7UF 25WV		C630			CD04AT0J470M	ELECTRO 47UF 6.3WV	M1K4
C303,304			CD04AS1H3R3M	ELECTRO 3.3UF 50WV		C631			CK73FB1C474K	CHIP C 0.47UF K	K2K3
C305			CK73FB1A105K	CHIP C 1.0UF K		C631			CK73FB1C474K	CHIP C 0.47UF K	M1K4
C306			CK73GB1H103K	CHIP C 0.010UF K		C632			CK73GB1H103K	CHIP C 0.010UF K	K2K3
C307			CE32CL1C100M	CHIP EL 10UF 16WV		C632			CK73GB1H103K	CHIP C 0.010UF K	M1K4
C308,309			CD04AS1H2R2M	ELECTRO 2.2UF 50WV		C633,634			CE32CL1C100M	CHIP EL 10UF 16WV	
C310,311			CK73FB1C474K	CHIP C 0.47UF K		C635-638			CK73GB0J105K	CHIP C 1.0UF K	K4
C364,365			CD04AS1H010M	ELECTRO 1UF 50WV		C637,638			CK73GB0J105K	CHIP C 1.0UF K	M1
C369			CK73FB1A105K	CHIP C 1.0UF K		C701			CK73FB1C474K	CHIP C 0.47UF K	
C384			CK73FB1A105K	CHIP C 1.0UF K		C702			CD04AS0J470M	ELECTRO 47UF 6.3WV	
C385,386			CK73GB1H152K	CHIP C 1500PF K		C703			CK73FB1C474K	CHIP C 0.47UF K	
C387,388			CC73GCH1H101J	CHIP C 100PF J		C704			CK73GB1H103K	CHIP C 0.010UF K	
C402			CK73GB1H103K	CHIP C 0.010UF K	E1E2	C750			CK73FB1C105K	CHIP C 1.0UF K	
C403			CK73FB1A225K	CHIP C 2.2UF K	E1E2	C752-755	*		C90-6742-05	NP-ELECT 4.7UF 16WV	
C404			CC73GCH1H331J	CHIP C 330PF J	E1E2	C756			CD04AS1A101M	ELECTRO 100UF 10WV	
C405			CD04AT1C100M	ELECTRO 10UF 16WV	E1E2	C757	*		C90-6742-05	NP-ELECT 4.7UF 16WV	
C407			CK73GB1H103K	CHIP C 0.010UF K		C758			CK73GB1H103K	CHIP C 0.010UF K	
C409,410			CK73GB1H103K	CHIP C 0.010UF K		C759			CK73FB1C105K	CHIP C 1.0UF K	
C412			CK73GB1H103K	CHIP C 0.010UF K		C800-802			CD04AS1C100M	ELECTRO 10UF 16WV	
C414,415			CC73GCH1H120J	CHIP C 12PF J	E1E2	C803			CK73GB1H104K	CHIP C 0.10UF K	
C450-452			CK73GB1C104K	CHIP C 0.10UF K	K3M1	C804			CK73GB1H103K	CHIP C 0.010UF K	
C450-455			CK73GB1C104K	CHIP C 0.10UF K	E1E2	C805			CD04AS1C470M	ELECTRO 47UF 16WV	
C450-455			CK73GB1C104K	CHIP C 0.10UF K	K2K4	C806,807			CK73GB1H102K	CHIP C 1000PF K	
C458			CK73GB0J105K	CHIP C 1.0UF K	E1E2	C808			CD04BA1C101M	ELECTRO 100UF 16WV	

E1 : KDC-W7031Y E2 : KDC-W7031 K2 : KDC-MP728
K3 : KDC-MP628 K4 : KDC-MP7028 M1 : KDC-MP8029
(E : Europe K : North America M : Other Areas W : Without Europe)

△ Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-3xxx-xx)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
C809 C812 C813			CC73GCH1H101J CC73GCH1H471J CC73GCH1H101J	CHIP C 100PF J CHIP C 470PF J CHIP C 100PF J	
CN5 CN450 CN500 CN550 CN600		*	E41-0944-05 E41-2259-05 E41-2344-05 E41-2352-05 E41-0224-05	PIN ASSY PIN ASSY FLAT CABLE CONNECTOR FLAT CABLE CONNECTOR PIN ASSY	E1E2
△ J1 J2 W400	1D	*	E58-0991-05 E56-0855-05 E30-6438-05	RECTANGULAR RECEPTACLE CYLINDRICAL RECEPTACLE CORD WITH PLUG	
L1 L60,61 L81 L100 L101		*	L33-1988-05 L33-2230-05 L33-2228-05 L92-0075-05 L41-4795-33	CHOKE COIL ASSY SMALL FIXED INDUCTOR (100UH) SMALL FIXED INDUCTOR (4.7UH) CHIP FERRITE SMALL FIXED INDUCTOR (4.7UH)	
L400 L401 L403 L405 L600			L33-2260-05 L41-4795-33 L41-4795-33 L41-4795-33 L41-2205-33	CHOKE COIL SMALL FIXED INDUCTOR (4.7UH) SMALL FIXED INDUCTOR (4.7UH) SMALL FIXED INDUCTOR (4.7UH) SMALL FIXED INDUCTOR (4.7UH)	E1E2 M1K4
X100 X101 X401			L78-0872-05 L77-2880-05 L77-2002-05	RESONATOR (12MHZ) CRYSTAL RESONATOR CRYSTAL RESONATOR	E1E2
Q T V	1D 2D 2D		N83-3005-48 N80-3010-48 N83-3020-48	PAN HEAD TAPTITE SCREW PAN HEAD TAPTITE SCREW PAN HEAD TAPTITE SCREW	
CP100 CP101-103 CP101-103 CP101,102 CP104			RK74GB1J101J RK74GA1J101J RK74GA1J101J RK74GA1J101J RK74GA1J102J	CHIP-COM 100 J 1/16W CHIP-COM 100 J 1/16W CHIP-COM 100 J 1/16W CHIP-COM 100 J 1/16W CHIP-COM 1.0K J 1/16W	E1E2 K2K4 K3M1
CP106 CP107 CP108 CP109 CP109			RK74GA1J103J RK74GB1J102J RK74GA1J222J RK74GB1J101J RK74GB1J101J	CHIP-COM 10K J 1/16W CHIP-COM 1.0K J 1/16W CHIP-COM 2.2K J 1/16W CHIP-COM 100 J 1/16W CHIP-COM 100 J 1/16W	K2K3 K4E1E2
CP110,111 R1 R2,3 R10 R11			RK74GA1J101J RK73EB2E102J RK73EB2E103J RK73GH2A243D RK73FB2B221J	CHIP-COM 100 J 1/16W CHIP R 1.0K J 1/4W CHIP R 10K J 1/4W CHIP R 24K D 1/10W CHIP R 220 J 1/8W	M1E1E2
R12 R13 R20 R21 R22			RK73GB2A153J RK73GH2A432D RK73FB2B203J RK73GB2A223J RK73GB2A101J	CHIP R 15K J 1/10W CHIP R 4.3K D 1/10W CHIP R 20K J 1/8W CHIP R 22K J 1/10W CHIP R 100 J 1/10W	
R23 R30 R31 R40 R41			RK73FB2B272J RK73FB2B102J RK73FB2B152J RK73FB2B223J RK73FB2B182J	CHIP R 2.7K J 1/8W CHIP R 1.0K J 1/8W CHIP R 1.5K J 1/8W CHIP R 22K J 1/8W CHIP R 1.8K J 1/8W	
R42			RK73GB2A105J	CHIP R 1.0M J 1/10W	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
R46 R50 R52 R60 R61			RK73SB3A2R2J RK73FB2B152J RK73FB2B102J RK73GH2A103D RN73GH1J153D	CHIP R 2.2 J 1W CHIP R 1.5K J 1/8W CHIP R 1.0K J 1/8W CHIP R 10K D 1/10W CHIP R 15K D 1/16W	
R62 R63 R64 R66 R67			RK73GB2A103J RK73GH2A912D RK73GH2A103D RK73GB2A104J RK73GH2A333D	CHIP R 10K J 1/10W CHIP R 9.1K D 1/10W CHIP R 10K D 1/10W CHIP R 100K J 1/10W CHIP R 33K D 1/10W	
R68 R69 R70 R71 R73		*	RN73GH1J243D RK73GB2A104J RK73GH2A303D RN73GH1J1912D RK73GB2A103J	CHIP R 24K D 1/16W CHIP R 100K J 1/10W CHIP R 30K D 1/10W CHIP R 19.1K D 1/16W CHIP R 10K J 1/10W	
R74 R75 R76,77 R79 R80		*	RK73GH2A822D RK73GB2A105J RK73GB2A104J RK73GB2A102J RK73GH2A434D	CHIP R 8.2K D 1/10W CHIP R 1.0M J 1/10W CHIP R 100K J 1/10W CHIP R 1.0K J 1/10W CHIP R 430K D 1/10W	
R81 R82 R83 R84 R85		*	RK73GB2A473J RK73GH2A103D RK73GB2A104J RK73GH2A153D RK73PB2H102J	CHIP R 47K J 1/10W CHIP R 10K D 1/10W CHIP R 100K J 1/10W CHIP R 15K D 1/10W CHIP R 1.0K J 1/2W	
R86 R91,92 R93 R100-104 R105			RK73GB2A473J RK73GB2A104J RK73FB2B431J RK73GB2A104J RK73GB2A101J	CHIP R 47K J 1/10W CHIP R 100K J 1/10W CHIP R 430 J 1/8W CHIP R 100K J 1/10W CHIP R 100 J 1/10W	
R106 R107 R109 R110 R111			RK73GB2A222J RK73GB2A473J RK73GB2A223J RK73GB2A103J RK73GB2A104J	CHIP R 2.2K J 1/10W CHIP R 47K J 1/10W CHIP R 22K J 1/10W CHIP R 10K J 1/10W CHIP R 100K J 1/10W	
R112 R113 R114 R115 R117			RK73GB2A473J RK73GB2A103J RK73GB2A473J RK73GB2A101J RK73GB2A101J	CHIP R 47K J 1/10W CHIP R 10K J 1/10W CHIP R 47K J 1/10W CHIP R 100 J 1/10W CHIP R 100 J 1/10W	
R118 R119 R120 R121 R122,123			RK73GB2A102J RK73GB2A223J RK73GB2A104J RK73GB2A103J RK73GB2A101J	CHIP R 1.0K J 1/10W CHIP R 22K J 1/10W CHIP R 100K J 1/10W CHIP R 10K J 1/10W CHIP R 100 J 1/10W	
R125 R126 R127 R128 R129			RK73GB2A222J RK73GB2A101J RK73GB2A103J RK73GB2A222J RK73GB2A102J	CHIP R 2.2K J 1/10W CHIP R 100 J 1/10W CHIP R 10K J 1/10W CHIP R 2.2K J 1/10W CHIP R 1.0K J 1/10W	
R130 R131 R132,133 R134 R139			RK73GB2A222J RK73GB2A473J RK73GB2A472J RK73GB2A101J RK73GB2A473J	CHIP R 2.2K J 1/10W CHIP R 47K J 1/10W CHIP R 4.7K J 1/10W CHIP R 100 J 1/10W CHIP R 47K J 1/10W	

E1 : KDC-W7031Y E2 : KDC-W7031 K2 : KDC-MP728
K3 : KDC-MP628 K4 : KDC-MP7028 M1 : KDC-MP8029

44 (E : Europe K : North America M : Other Areas W : Without Europe)

△ Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-3xxx-xx)

Ref. No.	Add	New	Parts No.	Description	Destination	Ref. No.	Add	New	Parts No.	Description	Destination
R141,142			RK73GB2A473J	CHIP R 47K J 1/10W		R407,408			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R144,145			RK73GB2A101J	CHIP R 100 J 1/10W		R409			RK73FB2B102J	CHIP R 1.0K J 1/8W	
R146			RK73GB2A333J	CHIP R 33K J 1/10W		R410-412			RK73GB2A222J	CHIP R 2.2K J 1/10W	E1E2
R147			RK73GB2A102J	CHIP R 1.0K J 1/10W		R450,451			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R148			RK73GB2A473J	CHIP R 47K J 1/10W		R452			RK73GB2A241J	CHIP R 240 J 1/10W	
R149,150			RK73GB2A223J	CHIP R 22K J 1/10W		R453,454			RK73GB2A102J	CHIP R 1.0K J 1/10W	E1E2
R153			RK73GB2A223J	CHIP R 22K J 1/10W	K2K3K4	R453,454			RK73GB2A102J	CHIP R 1.0K J 1/10W	K2K4
R154,155			RK73GB2A223J	CHIP R 22K J 1/10W	M1	R457			RK73GH2A241D	CHIP R 240 D 1/10W	E1E2
R155			RK73GB2A223J	CHIP R 22K J 1/10W	K4	R457			RK73GH2A241D	CHIP R 240 D 1/10W	K2K4
R155-158			RK73GB2A223J	CHIP R 22K J 1/10W	E1E2	R458			RK73GH2A111D	CHIP R 110 D 1/10W	E1E2
R156			RK73GB2A223J	CHIP R 22K J 1/10W	K2	R458			RK73GH2A111D	CHIP R 110 D 1/10W	K2K4
R157			RK73GB2A223J	CHIP R 22K J 1/10W	M1	R500			RK73GB2A473J	CHIP R 47K J 1/10W	K2K3K4
R158			RK73GB2A223J	CHIP R 22K J 1/10W	K4	R501			RK73EB2E101J	CHIP R 100 J 1/4W	
R158-160			RK73GB2A223J	CHIP R 22K J 1/10W	K3	R502			RK73GB2A102J	CHIP R 1.0K J 1/10W	K2K3K4
R158,159			RK73GB2A223J	CHIP R 22K J 1/10W	K2	R503			RK73GB2A333J	CHIP R 33K J 1/10W	K2K3K4
R160			RK73GB2A223J	CHIP R 22K J 1/10W	M1K4	R504,505			RK73GB2A473J	CHIP R 47K J 1/10W	K2K3K4
R161-163			RK73GB2A104J	CHIP R 100K J 1/10W		R506			RK73GB2A821J	CHIP R 820 J 1/10W	K2K3K4
R164			RK73GB2A223J	CHIP R 22K J 1/10W		R507			RK73GB2A104J	CHIP R 100K J 1/10W	K2K3K4
R165,166			RK73GB2A222J	CHIP R 2.2K J 1/10W		R508			RK73GB2A101J	CHIP R 100 J 1/10W	K2K3K4
R168			RK73GB2A222J	CHIP R 2.2K J 1/10W		R509			RK73EB2E103J	CHIP R 10K J 1/4W	K2K3K4
R170-173			RK73GB2A223J	CHIP R 22K J 1/10W		R510,511			RK73EB2E101J	CHIP R 100 J 1/4W	
R176			RK73GB2A104J	CHIP R 100K J 1/10W		R512,513			RK73GB2A334J	CHIP R 330K J 1/10W	K2K3K4
R177			RK73GB2A223J	CHIP R 22K J 1/10W		R514			RK73EB2E101J	CHIP R 100 J 1/4W	
R178			RK73GB2A473J	CHIP R 47K J 1/10W		R515			RK73EB2E102J	CHIP R 1.0K J 1/4W	
R181			RK73GB2A473J	CHIP R 47K J 1/10W		R516			RK73EB2E472J	CHIP R 4.7K J 1/4W	
R183			RK73GB2A473J	CHIP R 47K J 1/10W		R517			RK73EB2E102J	CHIP R 1.0K J 1/4W	
R185			RK73GB2A102J	CHIP R 1.0K J 1/10W		R518,519			RK73GB2A103J	CHIP R 10K J 1/10W	K2K3K4
R187			RK73GB2A473J	CHIP R 47K J 1/10W		R520			RK73GB2A1R0J	CHIP R 1.0 J 1/10W	K2K3K4
R200			RK73EB2E473J	CHIP R 47K J 1/4W		R550			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R201			RD14DB2H332J-T	SMALL-RD 3.3K J 1/2W		R551			RK73GB2A471J	CHIP R 470 J 1/10W	
R202			RK73GB2A183J	CHIP R 18K J 1/10W		R552,553			RK73GB2A104J	CHIP R 100K J 1/10W	
R203			RK73GB2A104J	CHIP R 100K J 1/10W		R554			RK73GB2A471J	CHIP R 470 J 1/10W	
R204			RK73GB2A393J	CHIP R 39K J 1/10W		R600,601			RK73GB2A913J	CHIP R 91K J 1/10W	M1K4
R205			RK73GB2A103J	CHIP R 10K J 1/10W		R602			RK73GB2A103J	CHIP R 10K J 1/10W	M1K4
R206			RK73GB2A474J	CHIP R 470K J 1/10W		R603			RK73GB2A470J	CHIP R 47 J 1/10W	M1K4
R207			RK73GB2A103J	CHIP R 10K J 1/10W		R604			RK73GB2A274J	CHIP R 270K J 1/10W	M1K4
R208			RK73EB2E101J	CHIP R 100 J 1/4W		R605			RK73GB2A563J	CHIP R 56K J 1/10W	M1K4
R209			RK73FB2B683J	CHIP R 68K J 1/8W		R606			RK73GB2A752J	CHIP R 7.5K J 1/10W	M1K4
R210			RK73FB2B203J	CHIP R 20K J 1/8W		R607			RK73GB2A470J	CHIP R 47 J 1/10W	M1K4
R211			RK73GB2A103J	CHIP R 10K J 1/10W		R608			RK73GB2A272J	CHIP R 2.7K J 1/10W	M1K4
R212			RK73GB2A223J	CHIP R 22K J 1/10W		R609			RK73GB2A750J	CHIP R 75 J 1/10W	M1K4
R213			RK73GB2A473J	CHIP R 47K J 1/10W		R610			RK73GB2A182J	CHIP R 1.8K J 1/10W	
R214			RK73GB2A104J	CHIP R 100K J 1/10W		R611			RK73GB2A361J	CHIP R 360 J 1/10W	
R215			RK73FB2B561J	CHIP R 560 J 1/8W	M1E1E2	R612			RK73GB2A820J	CHIP R 82 J 1/10W	M1K4
R216			RK73GB2A223J	CHIP R 22K J 1/10W	K2K3	R613			RK73GB2A123J	CHIP R 12K J 1/10W	M1K4
R216			RK73GB2A223J	CHIP R 22K J 1/10W	M1K4	R614			RK73GB2A103J	CHIP R 10K J 1/10W	M1K4
R217			RK73SB3A471J	CHIP R 470 J 1W	K2K3	R615			RK73GB2A223J	CHIP R 22K J 1/10W	
R217			RK73SB3A471J	CHIP R 470 J 1W	M1K4	R616			RK73GB2A103J	CHIP R 10K J 1/10W	M1K4
R218,219			RK73FB2B472J	CHIP R 4.7K J 1/8W		R617			RK73GB2A223J	CHIP R 22K J 1/10W	
R300			RK73EB2E2R2J	CHIP R 2.2 J 1/4W		R618			RK73GB2A820J	CHIP R 82 J 1/10W	M1K4
R301			RK73GB2A103J	CHIP R 10K J 1/10W		R619			RK73GB2A123J	CHIP R 12K J 1/10W	M1K4
R335,336			RK73GB2A101J	CHIP R 100 J 1/10W		R620			RK73GB2A361J	CHIP R 360 J 1/10W	E1E2
R382,383			RK73GB2A102J	CHIP R 1.0K J 1/10W		R620			RK73GB2A361J	CHIP R 360 J 1/10W	K2K3M1
R404			RK73GB2A223J	CHIP R 22K J 1/10W		R620,621			RK73GB2A361J	CHIP R 360 J 1/10W	K4
R405,406			RK73GB2A471J	CHIP R 470 J 1/10W		R622			RK73GB2A820J	CHIP R 82 J 1/10W	K4

E1 : KDC-W7031Y E2 : KDC-W7031 K2 : KDC-MP728
K3 : KDC-MP628 K4 : KDC-MP7028 M1 : KDC-MP8029
(E : Europe K : North America M : Other Areas W : Without Europe)

△ Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-3xxx-xx)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation	Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
R623			RK73GB2A123J	CHIP R 12K J 1/10W	K4	R772			RK73GB2A221J	CHIP R 220 J 1/10W	
R624			RK73GB2A103J	CHIP R 10K J 1/10W	K4	R800			RK73GB2A391J	CHIP R 390 J 1/10W	
R625			RK73GB2A223J	CHIP R 22K J 1/10W	K4	R801			RK73GB2A242J	CHIP R 2.4K J 1/10W	
R626			RK73GB2A103J	CHIP R 10K J 1/10W	K4	R803			RK73GH2A512D	CHIP R 5.1K D 1/10W	
R627			RK73GB2A223J	CHIP R 22K J 1/10W	K4	R804			RK73GH2A472D	CHIP R 4.7K D 1/10W	
R628			RK73GB2A820J	CHIP R 82 J 1/10W	K4	R805,806			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R629			RK73GB2A123J	CHIP R 12K J 1/10W	K4	R807			RK73GB2A103J	CHIP R 10K J 1/10W	
R630,631			RK73GB2A361J	CHIP R 360 J 1/10W	K4	R808			RK73GB2A113J	CHIP R 11K J 1/10W	
R631			RK73GB2A361J	CHIP R 360 J 1/10W	E1E2	R809			RK73GB2A101J	CHIP R 100 J 1/10W	
R631			RK73GB2A361J	CHIP R 360 J 1/10W	K2K3M1	R810			RK73FB2B152J	CHIP R 1.5K J 1/8W	
R632			RK73GB2A820J	CHIP R 82 J 1/10W	M1K4	R811			RK73GB2A104J	CHIP R 100K J 1/10W	
R633			RK73GB2A123J	CHIP R 12K J 1/10W	M1K4	R812			RK73FB2B4R7J	CHIP R 4.7 J 1/8W	
R634			RK73GB2A103J	CHIP R 10K J 1/10W	M1K4	R813			RK73GB2A332J	CHIP R 3.3K J 1/10W	
R635			RK73GB2A223J	CHIP R 22K J 1/10W		R814,815			RK73GB2A101J	CHIP R 100 J 1/10W	
R636			RK73GB2A103J	CHIP R 10K J 1/10W	M1K4	R817			RK73GB2A100J	CHIP R 10 J 1/10W	
R637			RK73GB2A223J	CHIP R 22K J 1/10W		R818			RK73GB2A8R2J	CHIP R 8.2 J 1/10W	
R638			RK73GB2A820J	CHIP R 82 J 1/10W	M1K4	R819-822	*		RK73GB2A9R1J	CHIP R 9.1 J 1/10W	
R639			RK73GB2A123J	CHIP R 12K J 1/10W	M1K4	R823			RK73FB2B1R0J	CHIP R 1.0 J 1/8W	
R640			RK73GB2A361J	CHIP R 360 J 1/10W		W201			R92-1252-05	CHIP R 0 OHM J 1/16W	E1E2
R641			RK73EB2E100J	CHIP R 10 J 1/4W	K2K3	W603,604			R92-1252-05	CHIP R 0 OHM J 1/16W	E2
R641			RK73EB2E100J	CHIP R 10 J 1/4W	M1K4	W603,604			R92-1252-05	CHIP R 0 OHM J 1/16W	K2K3E1
R642			RK73EB2E4R7J	CHIP R 4.7 J 1/4W	K2K3	W607,608			R92-1252-05	CHIP R 0 OHM J 1/16W	E2
R642			RK73EB2E4R7J	CHIP R 4.7 J 1/4W	M1K4	W607,608			R92-1252-05	CHIP R 0 OHM J 1/16W	K2K3E1
R643			RK73EB2E100J	CHIP R 10 J 1/4W	K2K3	W613-616			R92-1252-05	CHIP R 0 OHM J 1/16W	E2
R643			RK73EB2E100J	CHIP R 10 J 1/4W	M1K4	W613-616			R92-1252-05	CHIP R 0 OHM J 1/16W	K2K3E1
R644			RK73GB2A102J	CHIP R 1.0K J 1/10W	K2K3	W751			R92-1252-05	CHIP R 0 OHM J 1/16W	
R644			RK73GB2A102J	CHIP R 1.0K J 1/10W	M1K4	S1,2			S68-0886-05	PUSH SWITCH	
R655-660			RK73GB2A104J	CHIP R 100K J 1/10W	K4	D1			S2V60*A	DIODE	
R655,656			RK73GB2A104J	CHIP R 100K J 1/10W	M1	D20			RB160L-40	DIODE	
R659,660			RK73GB2A104J	CHIP R 100K J 1/10W	M1	D21			UDZS5.6B	ZENER DIODE	
R700			RK73EB2E472J	CHIP R 4.7K J 1/4W		D30			HZU9.1(B1)-E	ZENER DIODE	
R701			RK73EB2E101J	CHIP R 100 J 1/4W		D31			UDZS8.2B	ZENER DIODE	
R702			RK73EB2E472J	CHIP R 4.7K J 1/4W		D40			UDZS5.6B	ZENER DIODE	
R703-707			RK73EB2E101J	CHIP R 100 J 1/4W		D41			HZU11(B1)-E	ZENER DIODE	
R708			RK73EB2E100J	CHIP R 10 J 1/4W		D41	*		02DZ11F-Y	ZENER DIODE	
R709			RK73EB2E4R7J	CHIP R 4.7 J 1/4W		D50	*		HZU16(B1)-E	ZENER DIODE	
R710			RK73EB2E100J	CHIP R 10 J 1/4W		D60,61			SFPB-54VNF	DIODE	
R711			RK73GB2A102J	CHIP R 1.0K J 1/10W		D80-82			RB060L-40	DIODE	
R712			RK73EB2E102J	CHIP R 1.0K J 1/4W	K2K3	D101			DA227	DIODE	
R712			RK73EB2E102J	CHIP R 1.0K J 1/4W	K4E1E2	D102-104			DAP222	DIODE	
R713-715			RK73EB2E471J	CHIP R 470 J 1/4W	K2K3	D102-104	*		KDS120E-P	DIODE	
R713-715			RK73EB2E471J	CHIP R 470 J 1/4W	K4E1E2	D200,201			DAP202U	DIODE	
R750			RK73GB2A683J	CHIP R 68K J 1/10W		D200,201			KDS120-P	DIODE	
R752			RK73GB2A102J	CHIP R 1.0K J 1/10W		D200,201			MC2846	DIODE	
R753			RK73GB2A473J	CHIP R 47K J 1/10W		D202			UDZS6.2B	ZENER DIODE	
R755-758			RK73GB2A471J	CHIP R 470 J 1/10W		D202			02DZ6.2F-Y	ZENER DIODE	
R759-762			RK73GB2A103J	CHIP R 10K J 1/10W		D203			UDZS6.8B	ZENER DIODE	
R763			RK73GB2A100J	CHIP R 10 J 1/10W		D204			DAP202U	DIODE	
R764			RK73GB2A103J	CHIP R 10K J 1/10W		D204			KDS120-P	DIODE	
R765			RK73GB2A432J	CHIP R 4.3K J 1/10W		D204			MC2846	DIODE	
R766			RK73GB2A431J	CHIP R 430 J 1/10W		D205			UDZS6.8B	ZENER DIODE	
R767			RK73GB2A390J	CHIP R 39 J 1/10W		D206			UDZS4.7B	ZENER DIODE	
R768			RK73GB2A223J	CHIP R 22K J 1/10W		D207			UDZS5.6B	ZENER DIODE	M1E1E2
R770			RK73GB2A133J	CHIP R 13K J 1/10W							
R771			RK73GB2A223J	CHIP R 22K J 1/10W							

E1 : KDC-W7031Y E2 : KDC-W7031 K2 : KDC-MP728
K3 : KDC-MP628 K4 : KDC-MP7028 M1 : KDC-MP8029

46 (E : Europe K : North America M : Other Areas W : Without Europe)

△ Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-3xxx-xx)

Ref. No.	Add	New	Parts No.	Description	Destination	Ref. No.	Add	New	Parts No.	Description	Destination
D207 D208-213 D208-213 D401 D500			02DZ5.6F-Y D1F60-5063 1SR154-400 IMSA-6801-E DA204K	ZENER DIODE DIODE DIODE SURGE ABSORBER DIODE	M1E1E2	Q23 Q23 Q30 Q31 Q32,33			KRC403-P RT1N241M 2SB1565 2SB1184 2SC4081	DIGITAL TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR	
D501 D502 D503 D504 D505			STZ6.2N DA204K STZ6.2N DA204U DAP202U	ZENER DIODE DIODE ZENER DIODE DIODE DIODE	K2K3K4	Q40 Q41 Q42 Q43 Q44			2SB1565 2SB1443 UMD12N UMC2N 2SC4081	TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR	
D505 D505 D506 D600 D601			KDS120-P MC2846 STZ6.2N UDZS5.6B UDZS11B	DIODE DIODE ZENER DIODE ZENER DIODE ZENER DIODE	M1K4 M1K4	Q45 Q50 Q51 Q52 Q60		*	2SD2351(W) 2SB1449(R)-E UMC2N 2SC4081 DTC143TUA	TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR	
D608,609 D608,609 D700-702 D703,704 D705,706			STZ6.8N STZ6.8N STZ6.2N STZ6.8N STZ6.2N	ZENER DIODE ZENER DIODE ZENER DIODE ZENER DIODE ZENER DIODE	K2K3 M1K4 E1E2	Q60 Q60 Q61 Q62 Q63,64		*	KRC410-P RT1N430M UMG2N DTA143TUA 2SJ484-E	DIGITAL TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR FET	
D750-753 D750-753 D754,755 D754,755 D756-759		*	D1F60-5063 1SR154-400 DAP222 KDS120E-P D1F60-5063	DIODE DIODE DIODE DIODE DIODE		Q80 Q81 Q91 Q100 Q101			2SB1188(R) 2SC4081 2SD2351(W) 2SA1576A DTC144EUA	TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR	
D756-759 D800 D801 D802 IC10			1SR154-400 UDZS6.8B DA227 UDZS16B M5237ML-CF0J	DIODE ZENER DIODE DIODE ZENER DIODE ANALOGUE IC		Q101 Q101 Q200,201 Q200,201 Q200,201			KRC404-P RT1N441M DTA124EUA KRA303-P RT1P241M	DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR	
IC60 IC80 IC100 IC102 IC103		*	FA3687V LT3467A S-80836CNNB-J 30625MGPA34GP TC7W02FU-F	ANALOGUE IC ANALOGUE IC MOS-IC MICROCONTROLLER IC MOS-IC		Q202 Q203 Q204,205 Q206 Q207			2SC4081 2SA1576A 2SC4081 DTA123JK DTC144EUA	TRANSISTOR TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR	M1E1E2
IC104 IC200 IC300 IC400 IC450		*	BR24L04FV-W TPD1018F-F E-TDA7415 E-TDA7479AD LB1930M-E	ROM IC ANALOGUE IC ANALOGUE IC ANALOGUE IC ANALOGUE IC	E1E2	Q207 Q207 Q208 Q208 Q209			KRC404-P RT1N441M 2SB1188(Q,R) 2SB1188(Q,R) DTC114YUA	DIGITAL TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR	K2K3 M1K4 K2K3
IC451 IC451 IC500 IC600 IC601		*	MMA6261QR2 MMA6261QR2 RC4580IDR ICL7660SIBAZ NJM4565V-ZB	ANALOGUE IC ANALOGUE IC ANALOGUE IC ANALOGUE IC ANALOGUE IC	E1E2 K2K4 K2K3K4 M1K4 M1	Q209 Q209 Q209 Q209 Q209			DTC114YUA KRC407-P KRC407-P RT1N144M RT1N144M	DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR	M1K4 K2K3 M1K4 K2K3 M1K4
IC601-603 IC603 IC750 IC800 Q10		*	NJM4565V-ZB NJM4565V-ZB E-TDA7560A RC4580IDR 2SB1565	ANALOGUE IC ANALOGUE IC ANALOGUE IC ANALOGUE IC TRANSISTOR	K4 M1	Q402 Q403 Q403 Q403 Q450			2SB1689 DTC124EUA KRC403-P RT1N241M DTC114YUA	TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR	
Q11,12 Q20 Q21 Q22 Q23			UMC2N 2SB1565 2SD2351(W) 2SA1577 DTC124EUA	TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR		Q450 Q450 Q500 Q600 Q601			KRC407-P RT1N144M 2SC4617 2SC4617 2SA1774	DIGITAL TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR	K2K3K4 M1K4 M1K4

E1 : KDC-W7031Y E2 : KDC-W7031 K2 : KDC-MP728
K3 : KDC-MP628 K4 : KDC-MP7028 M1 : KDC-MP8029
(E : Europe K : North America M : Other Areas W : Without Europe)

△ Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-3xxx-xx)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
Q602			2SC4617	TRANSISTOR	M1K4
Q603			2SA1576A	TRANSISTOR	M1K4
Q604			2SC4081	TRANSISTOR	M1K4
Q605			2SA1576A	TRANSISTOR	M1K4
Q606			2SC4081	TRANSISTOR	M1K4
Q607			2SB1443	TRANSISTOR	M1K4
Q608-613			DTC143TUA	DIGITAL TRANSISTOR	K4
Q608-613			KRC410-P	DIGITAL TRANSISTOR	K4
Q608-613			RT1N430M	DIGITAL TRANSISTOR	K4
Q608,609			DTC143TUA	DIGITAL TRANSISTOR	E1E2
Q608,609			DTC143TUA	DIGITAL TRANSISTOR	K2K3M1
Q608,609			KRC410-P	DIGITAL TRANSISTOR	E1E2
Q608,609			KRC410-P	DIGITAL TRANSISTOR	K2K3M1
Q608,609			RT1N430M	DIGITAL TRANSISTOR	E1E2
Q608,609			RT1N430M	DIGITAL TRANSISTOR	K2K3M1
Q612,613			DTC143TUA	DIGITAL TRANSISTOR	E1E2
Q612,613			DTC143TUA	DIGITAL TRANSISTOR	K2K3M1
Q612,613			KRC410-P	DIGITAL TRANSISTOR	E1E2
Q612,613			KRC410-P	DIGITAL TRANSISTOR	K2K3M1
Q612,613			RT1N430M	DIGITAL TRANSISTOR	E1E2
Q612,613			RT1N430M	DIGITAL TRANSISTOR	K2K3M1
Q800			DTA124EUA	DIGITAL TRANSISTOR	
Q800			KRA303-P	DIGITAL TRANSISTOR	
Q800			RT1P241M	DIGITAL TRANSISTOR	
Q801			2SA1774	TRANSISTOR	
Q802			2SC2873-F	TRANSISTOR	
TH750			PRF21BE471QB2	POSITIVE RESISTOR	
A1	2D		X86-3840-11	FRONT-END UNIT	K2K3
A1	2D		X86-3840-11	FRONT-END UNIT	M1K4
A1	2D	*	X86-3842-70	FRONT-END UNIT	E1
A1	2D	*	X86-3842-71	FRONT-END UNIT	E2
MECHANISM ASSY (X92-508x-xx) 0-00 : K2K3K4M1, 0-04 : E1, 0-05 : E2					
2	1B		A10-4827-32	CHASSIS	
5	1B		D10-4576-83	ARM ASSY	
8	2A		D10-4579-23	LEVER ASSY	
10	2A		D10-4581-13	ARM	
11	2A		D10-4582-13	ARM	
12	3A		D10-4583-03	ARM	
13	3A		D10-4584-03	ARM	
14	3B		D10-4585-03	ARM	
15	2A		D10-4586-13	SLIDER	
16	3B		D10-4587-52	SLIDER	
17	2B		D10-4588-13	SLIDER	
18	2B		D10-4595-04	ARM	
19	2B		D10-4596-24	ARM	
22	2A		D13-2151-04	GEAR	
23	2B		D13-2152-04	GEAR	
24	3B		D13-2153-04	GEAR	
25	3B		D13-2154-04	GEAR	
26	3B		D13-2155-04	WORM	
27	2B		D13-2156-14	GEAR	
28	3B		D13-2157-04	GEAR	
29	2B		D13-2158-04	GEAR	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
30	2B		D13-2168-04	GEAR	
31	3B		D13-2171-04	GEAR	
32	1B		D13-2172-13	RACK (GEAR)	
33	2A		D14-0759-04	ROLLER	
35	2B		D21-2382-04	SHAFT	
36	1A		D23-0954-04	RETAINER	
37	1B		D39-0246-05	DAMPER	
38	2B		G01-3072-04	EXTENSION SPRING	
39	2A		G01-3073-04	TORSION COIL SPRING	
40	2A		G01-3074-04	EXTENSION SPRING	
41	1B		G01-3075-14	EXTENSION SPRING	
42	2A		G01-3076-04	EXTENSION SPRING	
43	1B		G01-3077-14	EXTENSION SPRING	
44	2B		G02-1399-04	FLAT SPRING	
45	2B		G02-1408-04	FLAT SPRING	
51	1A		J21-9676-32	MOUNTING HARDWARE	
52	3B		J21-9677-22	MOUNTING HARDWARE	
53	1B		J21-9678-13	MOUNTING HARDWARE	
55	1A		J90-1001-11	GUIDE	
56	1B		J90-1023-03	GUIDE	
DFPC1	3A		J84-0141-05	FLEXIBLE PRINTED WIRING BOARD	
A	2B		N09-4460-05	TAPTITE SCREW (OVAL P TAPTIT)	
B	1B		N09-4472-15	MACHINE SCREW (M1.7X8.0)	
C	2B		N09-6004-05	MACHINE SCREW (M1.7X2.5 IB-L)	
E	2B		N09-6007-05	MACHINE SCREW (PAN M2X2)	
F	1A		N09-6051-05	TAPTITE SCREW (BIND P 2X5)	
G	2A		N19-2163-04	FLAT WASHER	
H	1B		N39-2020-46	PAN HEAD MACHINE SCREW	
J	1B		N09-6108-05	MACHINE SCREW (M2*3.5)	
K	3B		N09-6155-05	SEMS (TAPTITE SCREW) (PT2X6)	
DM1	3B		T42-1066-04	DC MOTOR (SPINDLE)	
DM2	2B		T42-1067-04	DC MOTOR (LOADING)	
DPU1	2B		X93-2010-00	OPTICAL PICKUP ASSY	

E1 : KDC-W7031Y E2 : KDC-W7031 K2 : KDC-MP728
K3 : KDC-MP628 K4 : KDC-MP7028 M1 : KDC-MP8029

48 (E : Europe K : North America M : Other Areas W : Without Europe)

△ Indicates safety critical components.