



EXPLODED VIEW (MECHANISM)

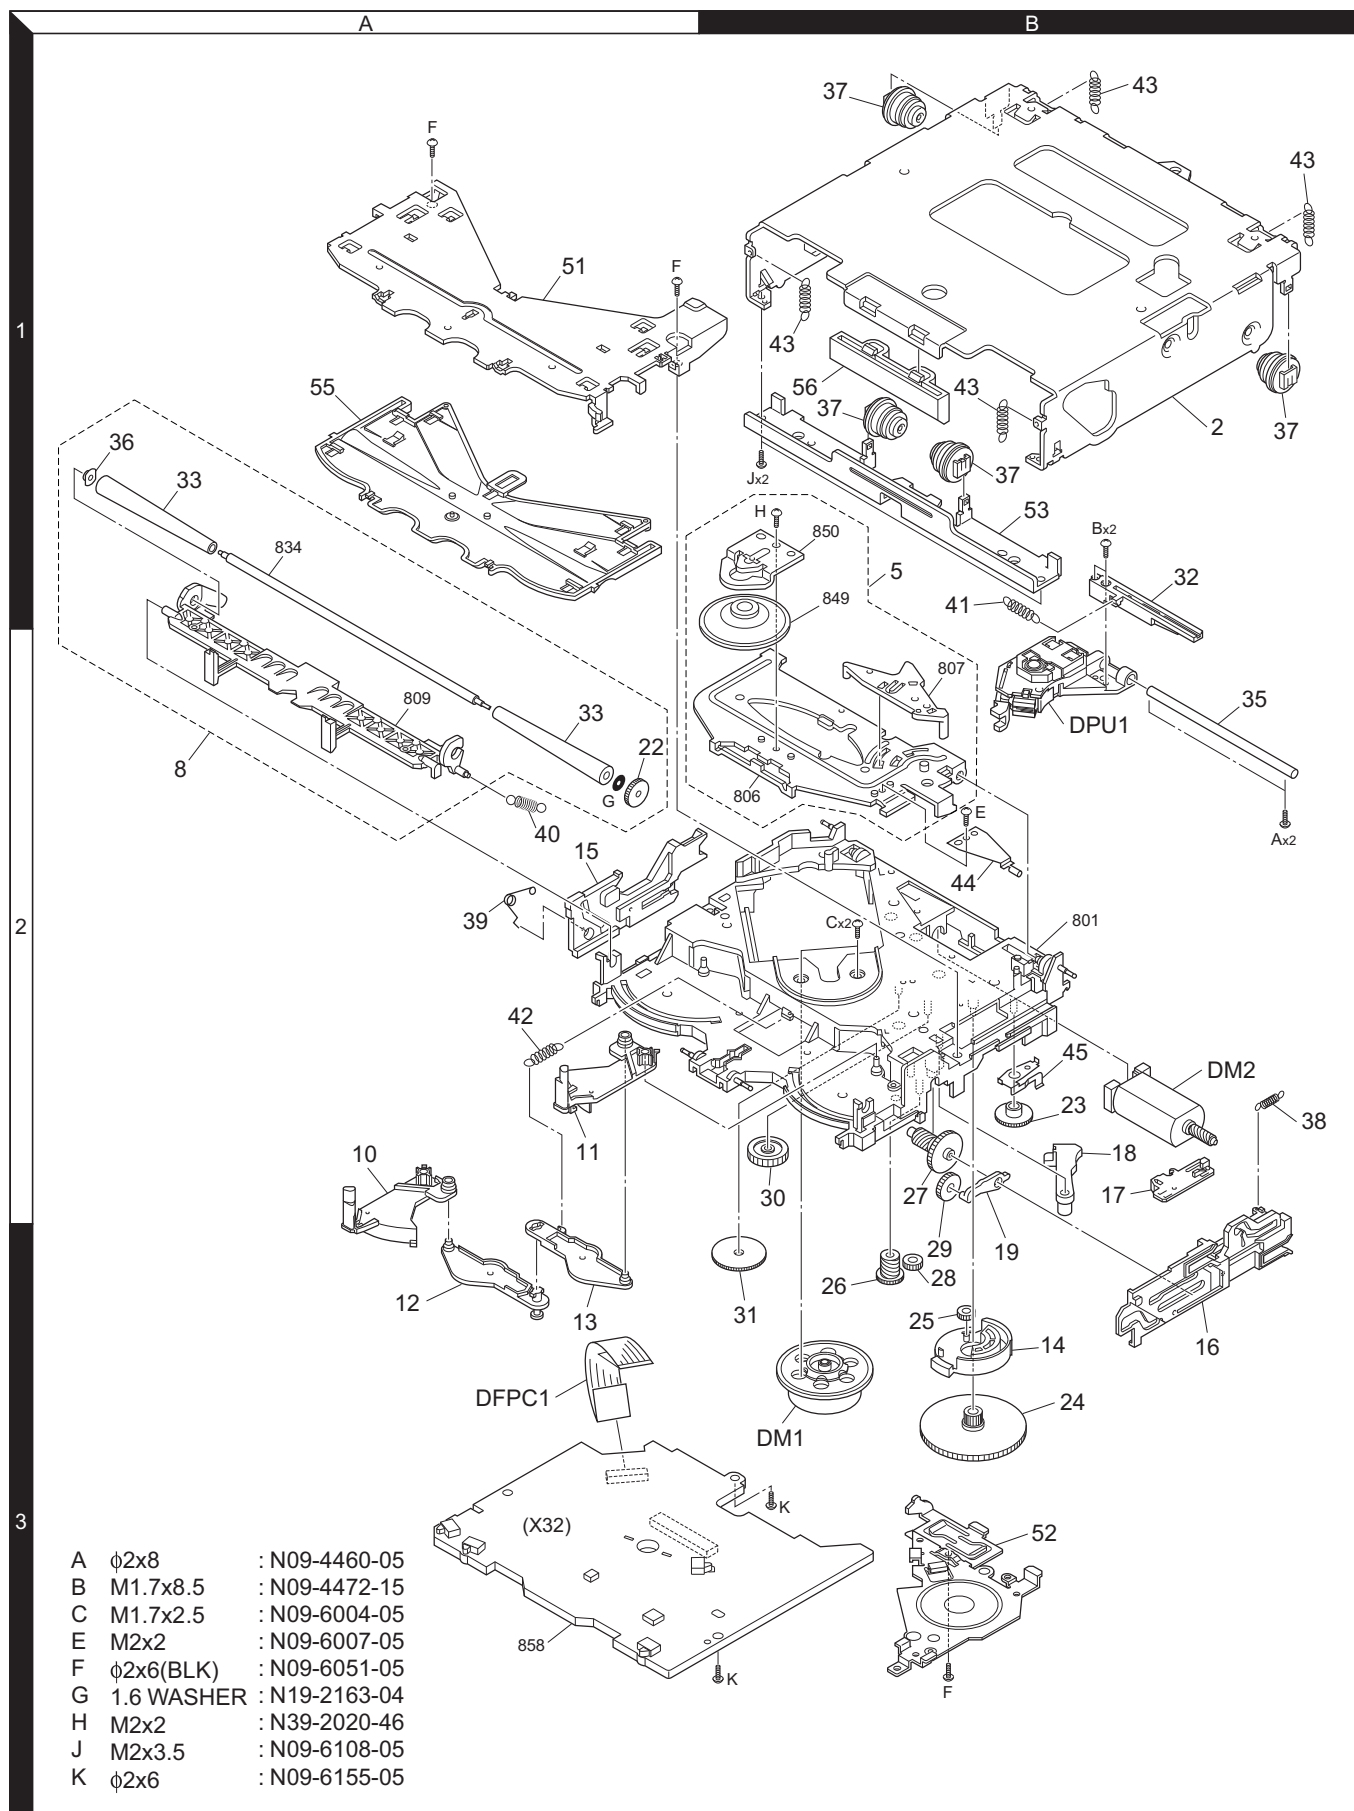

EXPLODED VIEW (UNIT)

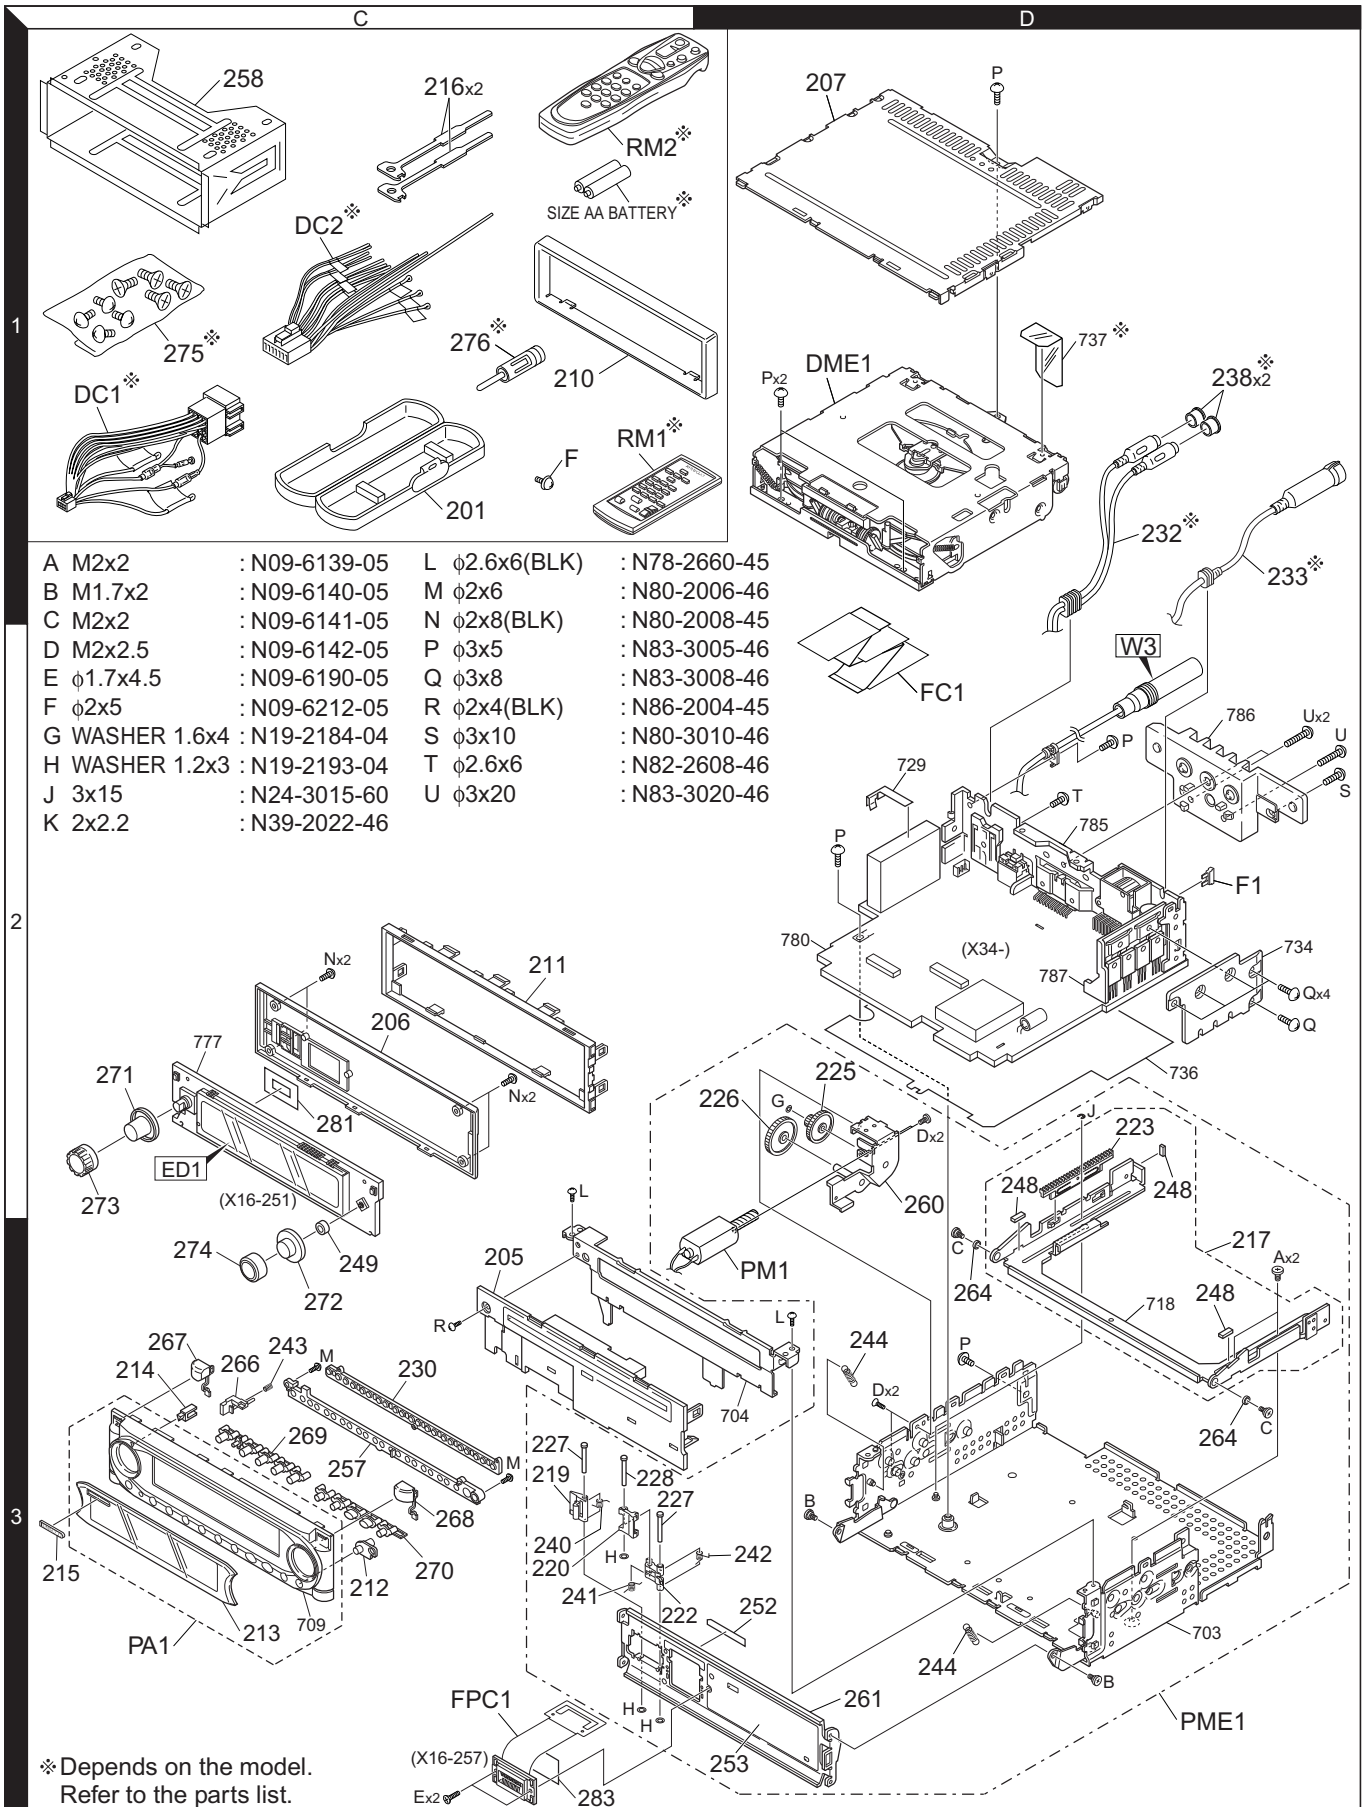

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
KDC-MP6025/MP625/MP858/W6527/W6527Y					
201	1C	*	A02-2732-03	PLASTIC CABINET ASSY	
205	3C	*	A22-3023-12	SUB PANEL ASSY	
206	2C	*	A46-1798-01	REAR COVER	
207	1D	*	A52-0845-12	TOP PLATE	
PA1	3C		A64-3213-02	PANEL ASSY	K2
PA1	3C		A64-3214-02	PANEL ASSY	K3
PA1	3C	*	A64-3215-02	PANEL ASSY	M1
PA1	3C	*	A64-3217-02	PANEL ASSY	E1E
PME1	3D	*	A10-5112-12	CHASSIS ASSY	
RM1	1C	*	A70-2055-05	REMOTE CONTROLLER ASSY (RC-420)	E1E
RM2	1C	*	A70-2059-05	REMOTE CONTROLLER ASSY (RC-505)	K2K3M1
-			B46-0100-50	WARRANTY CARD	E
-			B46-0100-50	WARRANTY CARD	K2K3M1
-			B46-0606-04	ID CARD	K2K3
-			B46-0612-14	ID CARD	M1E1E
-		*	B64-2759-00	INSTRUCTION MANUAL (RUS.POL.)	E1
-		*	B64-2760-00	INSTRUCTION MANUAL (CZE.HUN.)	E1
-		*	B64-2761-00	INSTRUCTION MANUAL (CRO.SLO.)	E1
-		*	B64-2762-00	INSTRUCTION MANUAL (SWE.FIN.)	E1
-		*	B64-2763-00	INSTRUCTION MANUAL (ENGLISH)	E1
-		*	B64-2764-00	INSTRUCTION MANUAL (ENGLISH)	K2K3
-		*	B64-2765-00	INSTRUCTION MANUAL (FRE.SPA.)	K2K3
-		*	B64-2767-00	INSTRUCTION MANUAL (ENG.T-CHI.)	M1
-		*	B64-2773-00	INSTRUCTION MANUAL (ENGLISH)	E
-		*	B64-2774-00	INSTRUCTION MANUAL (FRE.GER.)	E
-		*	B64-2775-00	INSTRUCTION MANUAL (DUT.ITA.)	E
-		*	B64-2776-00	INSTRUCTION MANUAL (SPA.POR.)	E
210	1C		B07-3083-02	ESCUTCHEON	E1E
210	1C		B07-3098-02	ESCUTCHEON	K2M1
210	1C		B07-3100-02	ESCUTCHEON	K3
211	2C	*	B07-3095-02	ESCUTCHEON	
212	3C	*	B10-4509-04	FRONT GLASS	
213	3C		B10-4503-01	FRONT GLASS	K2
213	3C		B10-4504-01	FRONT GLASS	K3
213	3C	*	B10-4505-01	FRONT GLASS	M1
213	3C	*	B10-4507-01	FRONT GLASS	E1E
214	3C	*	B19-2245-04	LIGHTING BOARD	
215	3C		B43-1518-04	BADGE	
216	1C		D10-4589-04	LEVER	
217	3D	*	D10-4799-13	SLIDER ASSY	
219	3C	*	D10-4805-03	LEVER	
220	3C	*	D10-4806-03	LEVER	
222	3C	*	D10-4807-13	LEVER	
223	2D	*	D13-2318-13	RACK (GEAR)	
225	2D	*	D13-2320-04	GEAR	
226	2D	*	D13-2321-04	GEAR	
227	3C	*	D21-2442-04	SHAFT	
228	3C	*	D21-2443-04	SHAFT	
230	3C	*	E29-1970-03	CONDUCTIVE RUBBER	
232	1D	*	E30-6291-05	CORD WITH PINPLUG	E
232	1D	*	E30-6291-05	CORD WITH PINPLUG	K3M1E1
233	1D	*	E30-6292-05	CORD WITH DIN CONNECTOR	E1E

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
DC1	1C	*	E30-6063-15	DC CORD	E1E
DC2	1C	*	E30-6294-05	DC CORD	M1
DC2	1C		E30-6295-05	DC CORD	K2K3
FC1	2D	*	E39-0617-05	FLAT CABLE (24P)	
238	1D		F29-0626-04	INSULATING COVER	E
238	1D		F29-0626-04	INSULATING COVER	K3M1E1
F1	2D		F52-0006-05	FUSE (MINI BLADE TYPE) 10A	
240	3C	*	G01-3210-04	TORSION COIL SPRING	
241	3C	*	G01-3211-04	TORSION COIL SPRING	
242	3C	*	G01-3212-04	TORSION COIL SPRING	
243	3C	*	G01-3213-04	COMPRESSION SPRING	
244	3D	*	G01-3215-04	EXTENSION SPRING	
248	3D	*	G11-3564-04	CUSHION	
249	3C	*	G11-3573-04	CUSHION	
252	3D	*	G16-1482-14	SHEET	
253	3D	*	G16-1483-04	SHEET	
-		*	H10-4890-02	POLYSTYRENE FOAMED FIXTURE	E1
-		*	H10-4890-02	POLYSTYRENE FOAMED FIXTURE	K2K3M1
-		*	H10-4891-02	POLYSTYRENE FOAMED FIXTURE	E
-			H25-0329-04	PROTECTION BAG (280X450X0.03)	
-			H25-0337-04	PROTECTION BAG (180X300X0.03)	
-			H54-3093-03	ITEM CARTON CASE	K2
-			H54-3094-03	ITEM CARTON CASE	K3
-		*	H54-3095-03	ITEM CARTON CASE	M1
-		*	H54-3097-03	ITEM CARTON CASE	E1
-		*	H54-3098-03	ITEM CARTON CASE	E
257	3C	*	J19-5273-02	HOLDER	
258	1C		J21-9716-03	MOUNTING HARDWARE ASSY	
260	3C	*	J22-0114-03	MOUNTING HARDWARE ASSY	
261	3D	*	J22-0117-02	MOUNTING HARDWARE	
264	3D	*	J31-1062-04	COLLAR	
266	3C	*	K24-4104-03	KNOB (RELEASE)	E1E
266	3C	*	K24-4172-03	KNOB (RELEASE)	K2M1
266	3C		K24-4173-03	KNOB (RELEASE)	K3
267	3C	*	K24-4128-03	KNOB (SRC)	E1E
267	3C	*	K24-4157-03	KNOB (SRC)	K2M1
267	3C		K24-4158-03	KNOB (SRC)	K3
268	3C	*	K24-4129-03	KNOB (EJECT)	E1E
268	3C	*	K24-4159-03	KNOB (EJECT)	K2M1
268	3C		K24-4160-03	KNOB (EJECT)	K3
269	3C	*	K25-1600-02	KNOB (1-4,AUTO)	
270	3C	*	K25-1640-02	KNOB (5-6,DISP)	
271	2C	*	K29-7084-03	KNOB BASE (VOL)	
272	3C	*	K29-7085-03	KNOB BASE (FM/AM)	
273	2C	*	K29-7086-03	KEY TOP (VOL)	
274	3C	*	K29-7087-03	KEY TOP (FM/AM)	
275	1C		N99-1723-05	SCREW SET	K2K3M1
A	3D	*	N09-6139-05	STEPPED SCREW (M2X2)	
B	3D	*	N09-6140-05	STEPPED SCREW (M1.7X2)	
C	3D	*	N09-6141-05	STEPPED SCREW (M2X2)	
D	3D	*	N09-6142-05	MACHINE SCREW (M2X2.5)	
E	3C	*	N09-6190-05	TAPPING SCREW (1.7X4.5)	
F	1C	*	N09-6212-05	TAPPING SCREW (2X5)	
G	2D	*	N19-2184-04	FLAT WASHER (1.6X4.0X0.25)	

E : KDC-W6527 **E1** : KDC-W6527Y **K2** : KDC-MP625
K3 : KDC-MP6025 **M1** : KDC-MP858

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

KDC-MP6025/MP625/MP858/W6527/W6527Y

Ref. No.	Add	New	Parts No.	Description	Destination	Ref. No.	Add	New	Parts No.	Description	Destination
H	3C	*	N19-2193-04	FLAT WASHER (1.2X3.0X0.25)		R13			RK73GB2A103J	CHIP R 10K J 1/10W	
J	2D		N24-3015-60	E TYPE RETAINING RING		R14			RK73GB2A473J	CHIP R 47K J 1/10W	
L	3C	*	N78-2660-45	PAN HEAD TAPTITE SCREW		R15			RK73GB2A471J	CHIP R 470 J 1/10W	
M	3C		N80-2006-46	PAN HEAD TAPTITE SCREW		R16			RK73GB2A103J	CHIP R 10K J 1/10W	
N	2C		N80-2008-45	PAN HEAD TAPTITE SCREW		R17			RK73GB2A471J	CHIP R 470 J 1/10W	
P	1D		N83-3005-46	PAN HEAD TAPTITE SCREW		R18			RK73GB2A473J	CHIP R 47K J 1/10W	
Q	2D		N83-3008-46	PAN HEAD TAPTITE SCREW		R19			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R	3C		N86-2004-45	BINDING HEAD TAPTITE SCREW		R20			RK73GB2A101J	CHIP R 100 J 1/10W	
276	1C		T90-0523-05	ANTENNA ADAPTOR	E1E	R21			RK73GB2A104J	CHIP R 100K J 1/10W	
PM1	3D	*	T42-1086-14	MOTOR ASSY		R23			RK73GB2A104J	CHIP R 100K J 1/10W	
DME1	1D		X92-4850-00	CD MECHANISM ASSY		R24-26			RK73GB2A102J	CHIP R 1.0K J 1/10W	
SUB-CIRCUIT UNIT (X16-2510-10/X16-2722-70)						R27,28		*	RK73EB2E160J	CHIP R 16 J 1/4W	
D1-12			B30-1605-05	LED (2COLOR PG/RED)		R29			RK73GB2A102J	CHIP R 1.0K J 1/10W	
D13-18		*	B30-1695-05	LED (1608 BLUE K,L)		R34			RK73GB2A104J	CHIP R 100K J 1/10W	
D19			B30-1566-05	LED (1608,RED)		R35,36			RK73GB2A472J	CHIP R 4.7K J 1/10W	
C1,2			CK73GB0J105K	CHIP C 1.0UF K		R37			RK73GB2A222J	CHIP R 2.2K J 1/10W	
C3			CK73GB1H103K	CHIP C 0.010UF K		R38			RK73GB2A220J	CHIP R 22 J 1/10W	
C4,5			CK73GB0J105K	CHIP C 1.0UF K		R39			RK73FB2B361J	CHIP R 360 J 1/8W	E
C6,7			CK73GB1H103K	CHIP C 0.010UF K		R39			RK73FB2B391J	CHIP R 390 J 1/8W	E1
C8			CK73GB0J105K	CHIP C 1.0UF K		R39			RK73FB2B391J	CHIP R 390 J 1/8W	K2K3M1
C9			CK73GB1H472K	CHIP C 4700PF K		R42			RK73FB2B361J	CHIP R 360 J 1/8W	E
C10			CK73GB1H103K	CHIP C 0.010UF K		R42			RK73FB2B391J	CHIP R 390 J 1/8W	E1
C11			CK73GB0J105K	CHIP C 1.0UF K		R43			RK73FB2B241J	CHIP R 240 J 1/8W	K2K3M1
C13-20			CK73GB1H103K	CHIP C 0.010UF K		R44			RK73FB2B361J	CHIP R 360 J 1/8W	E
C21			CK73GB1H104K	CHIP C 0.10UF K		R44			RK73FB2B391J	CHIP R 390 J 1/8W	E1
J1		*	E59-0839-05	RECTANGULAR PLUG		R44			RK73FB2B391J	CHIP R 390 J 1/8W	K2K3M1
281	2C	*	F20-2285-14	INSULATING SHEET		R46			RK73FB2B361J	CHIP R 360 J 1/8W	E
L1			L40-1005-68	SMALL FIXED INDUCTOR		R46			RK73FB2B391J	CHIP R 390 J 1/8W	E1
L2			L40-4795-68	SMALL FIXED INDUCTOR (4.7UH)		R46			RK73FB2B391J	CHIP R 390 J 1/8W	K2K3M1
X1			L78-0858-05	RESONATOR		R50			RK73FB2B271J	CHIP R 270 J 1/8W	
CP2			RK74HB1J473J	CHIP-COM 47K J 1/16W		R53,54			RK73FB2B271J	CHIP R 270 J 1/8W	
CP3			RK74HB1J101J	CHIP-COM 100 J 1/16W		R60			RK73GB2A473J	CHIP R 47K J 1/10W	
CP4			RK74HB1J473J	CHIP-COM 47K J 1/16W		R903			RK73GB2A472J	CHIP R 4.7K J 1/10W	
CP5			RK74HB1J102J	CHIP-COM 1.0K J 1/16W		R904,905			RK73GB2A103J	CHIP R 10K J 1/10W	
CP6			RK74GA1J473J	CHIP-COM 47K J 1/16W	E1	R906			RK73GB2A102J	CHIP R 1.0K J 1/10W	
CP6			RK74GA1J473J	CHIP-COM 47K J 1/16W	K2K3M1	S1,2			S70-0901-05	TACT SWITCH	
CP6			RK74HB1J473J	CHIP-COM 47K J 1/16W	E	S25		*	S70-0920-05	TACT SWITCH	
CP7			RK74GA1J101J	CHIP-COM 100 J 1/16W		S24		*	T99-0450-05	ROTARY ENCODER	
CP8		*	RK74GA1J471J	CHIP-COM 470 J 1/16W		D901			DA204U	DIODE	
CP9			RK74HB1J101J	CHIP-COM 100 J 1/16W		ED1		*	CN2100M	FLUORESCENT INDICATOR TUBE	
CP10,11			RK74HB1J102J	CHIP-COM 1.0K J 1/16W		IC1		*	30622MWP111GP	MICROCONTROLLER IC	
CP12			RK74HB1J473J	CHIP-COM 47K J 1/16W		IC2		*	TAR5S33-F	ANALOGUE IC	
CP14			RK74GA1J102J	CHIP-COM 1.0K J 1/16W		IC3		*	RS-171	ANALOGUE IC	
R1			RK73EB2E101J	CHIP R 100 J 1/4W		IC4			TC74HC4050AFT	MOS-IC	
R2			RK73EB2E102J	CHIP R 1.0K J 1/4W		Q1		*	2SC4667-F	TRANSISTOR	
R3-7			RK73EB2E101J	CHIP R 100 J 1/4W		Q2		*	2SC2713-F	TRANSISTOR	
R8			RK73GB2A471J	CHIP R 470 J 1/10W		Q3		*	2SA1163-F	TRANSISTOR	
R9			RK73GB2A473J	CHIP R 47K J 1/10W		Q4			DTA114EE	DIGITAL TRANSISTOR	
R10			RK73EB2E102J	CHIP R 1.0K J 1/4W		Q4		*	PDTA114EE	TRANSISTOR	
R11			RK73GB2A103J	CHIP R 10K J 1/10W		Q6			DTC1432UA	DIGITAL TRANSISTOR	
R12			RK73GB2A473J	CHIP R 47K J 1/10W		Q7,8			DTA144EE	DIGITAL TRANSISTOR	
						Q7,8		*	PDTA144EE	TRANSISTOR	

E : KDC-W6527 E1 : KDC-W6527Y K2 : KDC-MP625
K3 : KDC-MP6025 M1 : KDC-MP858

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

SUB-CIRCUIT UNIT (X16-2510-10/X16-2722-70)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
Q9,10 Q11 Q11 Q12		*	DTC143ZUA DTA144EE PDTA144EE DTC143ZUA	DIGITAL TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR	
SUB-CIRCUIT UNIT (X16-2570-10/X16-2732-70)					
283	3C	*	F20-2284-14	INSULATING SHEET	
FPC1	3C	*	J86-0003-05	FPC (LEAD FREE)	
CD PLAYER UNIT (X32-5500-00)					
C1,2 C3,4 C5 C6 C7-9			CK73GB1H222K CK73GB0J105K CK73GB1C104K CK73GB1H103K CK73GB0J105K	CHIP C 2200PF K CHIP C 1.0UF K CHIP C 0.10UF K CHIP C 0.010UF K CHIP C 1.0UF K	
C10-15 C16 C17 C18 C19			CK73GB1C104K CK73FB0J475K CK73FB0J106M CK73GB1C104K CK73FB0J475K	CHIP C 0.10UF K CHIP C 4.7UF K CHIP C 10UF M CHIP C 0.10UF K CHIP C 4.7UF K	
C20 C21 C22,23 C24-27 C28			CK73GB1C104K CK73GB1H102K CK73GB0J105K CK73GB1C104K CK73FB0J106M	CHIP C 0.10UF K CHIP C 1000PF K CHIP C 1.0UF K CHIP C 0.10UF K CHIP C 10UF M	
C29 C30 C31 C32,33 C34			CK73GB1C104K CK73GB1H152K CC73GCH1H470J CK73GB1C104K CC73GCH1H560J	CHIP C 0.10UF K CHIP C 1500PF K CHIP C 47PF J CHIP C 0.10UF K CHIP C 56PF J	
C35,36 C37 C38 C39 C41			CK73GB1C104K CK73GB1H102K CK73GB1H682K CK73GB1C104K CK73GB1A334K	CHIP C 0.10UF K CHIP C 1000PF K CHIP C 6800PF K CHIP C 0.10UF K CHIP C 0.33UF K	
C42-45 C46 C47 C48 C49			CK73GB1C104K CK73GB1H682K CK73GB1C104K CC73GCH1H040C CK73GB1H332K	CHIP C 0.10UF K CHIP C 6800PF K CHIP C 0.10UF K CHIP C 4.0PF C CHIP C 3300PF K	
C50 C51 C52 C53 C54,55			CK73GB1C104K CC73GCH1H330J CK73FB1A225K CK73GB0J105K CK73GB1H103K	CHIP C 0.10UF K CHIP C 33PF J CHIP C 2.2UF K CHIP C 1.0UF K CHIP C 0.010UF K	
C56,57 C58 C59-63 C64 C66			CK73GB1H331K CK73GB1H472K CK73GB1H152K CK73GB1C104K CC73GCH1H120J	CHIP C 330PF K CHIP C 4700PF K CHIP C 1500PF K CHIP C 0.10UF K CHIP C 12PF J	
C67 C68 C69 C70 C71			CC73GCH1H180J CK73GB1H103K CK73FB1A225K CK73FB1A105K CK73FB0J106M	CHIP C 18PF J CHIP C 0.010UF K CHIP C 2.2UF K CHIP C 1.0UF K CHIP C 10UF M	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
C72			CK73GB1H102K	CHIP C 1000PF K	
CN1 CN2 CN2		*	E41-2083-05 E41-2068-05 E41-2085-05	FLAT CABLE CONNECTOR FLAT CABLE CONNECTOR FLAT CABLE CONNECTOR	
L1,2 X1 X2		*	L92-0386-05 L77-2808-05 L78-0896-05	CHIP FERRITE CRYSTAL RESONATOR (16.897849MHZ) RESONATOR (16.00MHZ)	
CP1 CP2,3 CP4 CP5 CP6			RK74GA1J104J RK74GA1J101J RK74GA1J103J RK74GA1J102J RK74GA1J104J	CHIP-COM 100K J 1/16W CHIP-COM 100 J 1/16W CHIP-COM 10K J 1/16W CHIP-COM 1.0K J 1/16W CHIP-COM 100K J 1/16W	
CP7 CP8 CP9 CP10 CP11			RK74GB1J102J RK74GA1J102J RK74GB1J101J RK74GB1J103J RK74GB1J472J	CHIP-COM 1.0K J 1/16W CHIP-COM 1.0K J 1/16W CHIP-COM 100 J 1/16W CHIP-COM 10K J 1/16W CHIP-COM 4.7K J 1/16W	
CP12 CP13,14 CP15 CP16 R1		*	RK74GA1J104J RK74GB1J104J RK74GA1J104J RK74GB1J222J RK73GB2A100J	CHIP-COM 100K J 1/16W CHIP-COM 100K J 1/16W CHIP-COM 100K J 1/16W CHIP-COM 2.2K J 1/16W CHIP R 10 J 1/10W	
R2 R3,4 R5 R6 R7			R92-3494-05 RK73FB2B331J RK73GB2A101J RN73GH1J223D RK73GB2A104J	CHIP R 5.6 F 1/2W CHIP R 330 J 1/8W CHIP R 100 J 1/10W CHIP R 22K D 1/16W CHIP R 100K J 1/10W	
R8 R9 R10 R11,12 R13			RN73GH1J393D RK73GB2A104J RK73GB2A101J RK73GB2A104J RK73GB2A102J	CHIP R 39K D 1/16W CHIP R 100K J 1/10W CHIP R 100 J 1/10W CHIP R 100K J 1/10W CHIP R 1.0K J 1/10W	
R14-17 R18 R21-23 R24,25 R27			RK73GB2A104J RK73GB2A101J RK73GB2A103J RK73GB2A4R7J RK73GB2A104J	CHIP R 100K J 1/10W CHIP R 100 J 1/10W CHIP R 10K J 1/10W CHIP R 4.7 J 1/10W CHIP R 100K J 1/10W	
R28 R29 R31-33 R34 R35			RK73GB2A103J RK73GB2A102J RK73GB2A104J RK73GB2A472J RK73GB2A104J	CHIP R 10K J 1/10W CHIP R 1.0K J 1/10W CHIP R 100K J 1/10W CHIP R 4.7K J 1/10W CHIP R 100K J 1/10W	
R36 R37 R38 R39 R40			RK73FB2B4R7J RK73GB2A103J RK73GB2A221J RK73GB2A152J RK73GB2A274J	CHIP R 4.7 J 1/8W CHIP R 10K J 1/10W CHIP R 220 J 1/10W CHIP R 1.5K J 1/10W CHIP R 270K J 1/10W	
R42 R43 R44,45 R46 R47			RK73GB2A101J RK73GB2A393J RK73GB2A302J RK73GB2A105J RK73GB2A104J	CHIP R 100 J 1/10W CHIP R 39K J 1/10W CHIP R 3.0K J 1/10W CHIP R 1.0M J 1/10W CHIP R 100K J 1/10W	
R48,49			RK73GB2A331J	CHIP R 330 J 1/10W	

E : KDC-W6527 E1 : KDC-W6527Y K2 : KDC-MP625
K3 : KDC-MP6025 M1 : KDC-MP858

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

CD PLAYER UNIT (X32-5500-00)

Ref. No.	Add	New	Parts No.	Description	Destination	Ref. No.	Add	New	Parts No.	Description	Destination
R50			RK73GB2A101J	CHIP R 100 J 1/10W		C9			CD04AT1A221M	ELECTRO 220UF 10WV	
R51			RK73GB2A392J	CHIP R 3.9K J 1/10W		C10			CK73GB1A474K	CHIP C 0.47UF K	
R52			RK73GB2A163J	CHIP R 16K J 1/10W		C11			CD04AT1A101M	ELECTRO 100UF 10WV	
R53			RK73GB2A123J	CHIP R 12K J 1/10W		C12			CK73GB1A474K	CHIP C 0.47UF K	
R54			RK73GB2A333J	CHIP R 33K J 1/10W		C13			CD04AT1A101M	ELECTRO 100UF 10WV	
R55			RK73GB2A103J	CHIP R 10K J 1/10W		C14			CD04BF1E101M	ELECTRO 100UF 25WV	
R56			RK73GB2A123J	CHIP R 12K J 1/10W		C16	*		CD04BF1C101M	ELECTRO 100UF 16WV	
R57,58			RK73GB2A133J	CHIP R 13K J 1/10W		C17	*		C90-5680-05	ELECTRO 100UF 16WV	
R59			RK73GB2A472J	CHIP R 4.7K J 1/10W		C18			CK73FB1C334K	CHIP C 0.33UF K	
R60			RK73GB2A123J	CHIP R 12K J 1/10W		C19			CK73EB1C225K	CHIP C 2.2UF K	
R61			RK73GB2A183J	CHIP R 18K J 1/10W		C20			CK73GB1H103K	CHIP C 0.010UF K	
R62			RK73GB2A432J	CHIP R 4.3K J 1/10W		C21	*		C94-0151-05	ELECTRO 100UF 16WV	
R63			RK73GB2A133J	CHIP R 13K J 1/10W		C23	*		C90-5680-05	ELECTRO 100UF 16WV	
R64			RK73GB2A241J	CHIP R 240 J 1/10W		C112	*		CD04BA1H3R3M	ELECTRO 3.3UF 50WV	
R65			RK73GB2A104J	CHIP R 100K J 1/10W		C113			CK73GB0J105K	CHIP C 1.0UF K	
R66			RK73GB2A472J	CHIP R 4.7K J 1/10W		C114	*		CD04BA1H0R1M	ELECTRO 0.1UF 50WV	
R67			RK73GB2A222J	CHIP R 2.2K J 1/10W		C115			CK73GB1H103K	CHIP C 0.010UF K	
R68,69			RK73GB2A104J	CHIP R 100K J 1/10W		C116			CK73GB1E223K	CHIP C 0.022UF K	
R70			RK73GB2A102J	CHIP R 1.0K J 1/10W		C117			CK73FB1C105K	CHIP C 1.0UF K	
						C118			CK73GB1H103K	CHIP C 0.010UF K	
S1,2			S68-0863-05	PUSH SWITCH		C119			CK73GB1H102K	CHIP C 1000PF K	
S3			S68-0862-05	PUSH SWITCH		C120,121			CK73GB1H103K	CHIP C 0.010UF K	
D2	*		DA204UF	DIODE		C201			CC73GCH1H220J	CHIP C 22PF J	
D3			DAN202UF	DIODE		C202			CK73GB1H104K	CHIP C 0.10UF K	
IC1	*		91CW12AFG-4VF6	MICROCONTROLLER IC		C203			CC73GCH1H270J	CHIP C 27PF J	
IC2			UPD63712GC	MOS-IC		C204-206			CK73GB1H103K	CHIP C 0.010UF K	
IC3	*		TC94A20F-010	MOS-IC		C207			CD04AS0J470M	ELECTRO 47UF 6.3WV	E1
IC4			BA5824FP-F	ANALOGUE IC		C207			CD04AS0J470M	ELECTRO 47UF 6.3WV	K2K3M1
IC5			NJM2880U133	ANALOGUE IC		C208			CK73GB1H102K	CHIP C 1000PF K	
IC5			NJM2880U33	ANALOGUE IC		C209			CK73GB1H103K	CHIP C 0.010UF K	
IC6	*		S-1112B33MCG	ANALOGUE IC		C301,302			CK73GB1H103K	CHIP C 0.010UF K	
IC6	*		XC6219B332MR	ANALOGUE IC		C303			CK73FB1C105K	CHIP C 1.0UF K	
IC7	*		S-1112B25MCG	ANALOGUE IC		C308			CC73GCH1H331J	CHIP C 330PF J	E1E
IC7	*		XC6219B252MR	ANALOGUE IC		C309			CK73GB1H103K	CHIP C 0.010UF K	E1E
IC8			TC7SH08FU	MOS-IC		C310			CK73FB1A225K	CHIP C 2.2UF K	E1E
IC9	*		TAR5S33-F	ANALOGUE IC		C311			CD04AS1C100M	ELECTRO 10UF 16WV	E1E
Q1	*		2SK3018F	FET		C312,313			CC73GCH1H120J	CHIP C 12PF J	E1E
Q3			UMD9N	TRANSISTOR		C314-316			CK73GB1C104K	CHIP C 0.10UF K	
Q4	*		2SK3018F	FET		C317			CC73GCH1H220J	CHIP C 22PF J	
Q5			UMD9N	TRANSISTOR		C318			CK73FB1C105K	CHIP C 1.0UF K	
Q6			UMD12N	TRANSISTOR		C319			CD04AS1E4R7M	ELECTRO 4.7UF 25WV	
Q7	*		DTC124EUAF	DIGITAL TRANSISTOR		C320,321			CK73GB1H103K	CHIP C 0.010UF K	
Q8			2SB0970	TRANSISTOR		C402			CK73GB1C104K	CHIP C 0.10UF K	
Q9,10			DTC114YUAF	DIGITAL TRANSISTOR		C403,404			CD04AS1C220M	ELECTRO 22UF 16WV	
ELECTRIC UNIT (X34-301x-xx/X34-3222-70)						C405			CK73GB1C104K	CHIP C 0.10UF K	
D302			B30-1566-05	LED (1608,RED)		C407,408			CD04AS1C220M	ELECTRO 22UF 16WV	
C1	*		C90-5683-05	ELECTRO 3300UF 16WV		C410,411			CK73GB1C104K	CHIP C 0.10UF K	
C2			CK73GB1H103K	CHIP C 0.010UF K		C449	*		CD04AS1C470M	ELECTRO 47UF 16WV	
C3	*		C90-5692-05	ELECTRO 220UF 16WV		C450			CK73FB1C474K	CHIP C 0.47UF K	E
C4			CK73GB1H103K	CHIP C 0.010UF K		C450			CK73FB1C474K	CHIP C 0.47UF K	K3M1E1
C5	*		CE32CL1C100M	CHIP EL 10UF 16WV		C451			CD04AS0J470M	ELECTRO 47UF 6.3WV	E
C6			CD04AS0J101M	ELECTRO 100UF 6.3WV		C451			CD04AS0J470M	ELECTRO 47UF 6.3WV	K3M1E1
C7	*		CD04BE1J820M	ELECTRO 82UF 63WV		C452			CK73FB1C474K	CHIP C 0.47UF K	E
C8			CK73FB1C105K	CHIP C 1.0UF K		C452			CK73FB1C474K	CHIP C 0.47UF K	K3M1E1
						C453,454	*		CD04AS1H3R3M	ELECTRO 3.3UF 50WV	

E : KDC-W6527 E1 : KDC-W6527Y K2 : KDC-MP625
K3 : KDC-MP6025 M1 : KDC-MP858

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

ELECTRIC UNIT (X34-301x-xx/X34-3222-70)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
C455 C456 C457,458 C461 C462-465			CK73GB1A474K CC73GCH1H221J CK73GB1C104K CK73GB1H103K CK73FB1C105K	CHIP C 0.47UF K CHIP C 220PF J CHIP C 0.10UF K CHIP C 0.010UF K CHIP C 1.0UF K	E
C462-465 C462,463 C466-469 C466-469 C466,467			CK73FB1C105K CK73FB1C105K CK73FB1A225K CK73FB1A225K CK73FB1A225K	CHIP C 1.0UF K CHIP C 1.0UF K CHIP C 2.2UF K CHIP C 2.2UF K CHIP C 2.2UF K	K3M1E1 K2 E K3M1E1 K2
C478 C479,480 C483 C483-485 C483-485			CD04AS1H2R2M CD04AS1HR47M CK73FB1C105K CK73FB1C105K CK73FB1C105K	ELECTRO 2.2UF 50WV ELECTRO 0.47UF 50WV CHIP C 1.0UF K CHIP C 1.0UF K CHIP C 1.0UF K	E E1 K2K3M1
C501 C507 C507 C509 C510			CK73GB1H103K CK73GB1H103K CK73GB1H103K CK73GB1H103K CK73FB1C474K	CHIP C 0.010UF K CHIP C 0.010UF K CHIP C 0.010UF K CHIP C 0.010UF K CHIP C 0.47UF K	E K3M1E1
C511 C511 C512 C513 C514			CD04AS0J470M CD04AS0J470M CK73FB1C474K CK73GB1H103K CK73FB1C105K	ELECTRO 47UF 6.3WV ELECTRO 47UF 6.3WV CHIP C 0.47UF K CHIP C 0.010UF K CHIP C 1.0UF K	E1 K2K3M1
C515 C516-519 C520 C521,522		*	CD04AS1C330M C90-5620-05 CK73FB1C105K CD04BA1H010M	ELECTRO 33UF 16WV ELECTRO 0.47UF 50WV CHIP C 1.0UF K ELECTRO 1UF 50WV	E K3M1E1
CN1 CN3 CN5 CN6 CN6		*	E41-2083-05 E41-2101-05 E41-2123-05 E41-0956-05 E41-0956-05	FLAT CABLE CONNECTOR FLAT CABLE CONNECTOR PIN ASSY PIN ASSY PIN ASSY	E K3M1E1
CN7 CN7 J1 J2 J3		*	E41-0944-05 E41-0944-05 E58-0991-05 E56-0855-05 E63-0896-05	PIN ASSY PIN ASSY RECTANGULAR RECEPTACLE CYLINDRICAL RECEPTACLE PIN JACK	E K2K3E1
W3			E30-6218-05	CORD WITH PLUG	
L1 L2 L3 L4 L201		*	L33-1988-05 L33-1978-05 L33-1902-15 L33-1029-05 L40-4795-68	CHOKE COIL ASSY CHOKE COIL SMALL FIXED INDUCTOR SMALL FIXED INDUCTOR SMALL FIXED INDUCTOR (4.7UH)	E1E
L202 L301 L302-305 L306 L401		*	L92-0075-05 L33-1977-05 L40-1005-68 L40-4795-68 L40-4795-68	CHIP FERRITE CHOKE COIL SMALL FIXED INDUCTOR SMALL FIXED INDUCTOR (4.7UH) SMALL FIXED INDUCTOR (4.7UH)	E1E
X1 X2 X3		*	L77-2880-05 L78-0862-05 L77-2002-05	CRYSTAL RESONATOR RESONATOR (16.00MHZ) CRYSTAL RESONATOR	E1E

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
P S T U	2D 2D 2D 2D		N83-3005-46 N80-3010-46 N82-2608-46 N83-3020-46	PAN HEAD TAPTITE SCREW PAN HEAD TAPTITE SCREW BINDING HEAD TAPTITE SCREW PAN HEAD TAPTITE SCREW	
CP202 CP203 CP204 CP205 CP206		*	RK74GA1J101J RK74GB1J102J RK74GA1J103J RK74GA1J222J RK74GB1J102J	CHIP-COM 100 J 1/16W CHIP-COM 1.0K J 1/16W CHIP-COM 10K J 1/16W CHIP-COM 2.2K J 1/16W CHIP-COM 1.0K J 1/16W	E K2K3E1 M1
CP207-209 CP207-209 CP208,209 R1 R2			RK74GB1J101J RK74GB1J101J RK74GB1J101J RK73FB2B223J RK73GB2A101J	CHIP-COM 100 J 1/16W CHIP-COM 100 J 1/16W CHIP-COM 100 J 1/16W CHIP R 22K J 1/8W CHIP R 100 J 1/10W	
R3 R4 R5 R6 R7		*	RK73GB2A223J RK73GB2A222J RK73FB2B221J RK73GB2A153J RK73GH2A432D	CHIP R 22K J 1/10W CHIP R 2.2K J 1/10W CHIP R 220 J 1/8W CHIP R 15K J 1/10W CHIP R 4.3K D 1/10W	
R8 R9,10 R11 R12 R14		*	RK73GH2A243D RK73FB2B152J RK73GB2A102J RK73FB2B751J RK73GB2A473J	CHIP R 24K D 1/10W CHIP R 1.5K J 1/8W CHIP R 1.0K J 1/10W CHIP R 750 J 1/8W CHIP R 47K J 1/10W	
R15,16 R101 R101 R102,103 R115		*	RK73GB2A104J RK73EB2E102J RK73EB2E102J RK73EB2E103J RK73FB2B472J	CHIP R 100K J 1/10W CHIP R 1.0K J 1/4W CHIP R 1.0K J 1/4W CHIP R 10K J 1/4W CHIP R 4.7K J 1/8W	E K3M1E1
R116,117 R118 R119 R120 R121		*	R92-5024-05 RK73GB2A223J RK73FB2B472J R92-5024-05 RK73GB2A223J	CHIP R 1.0K J 3/4W CHIP R 22K J 1/10W CHIP R 4.7K J 1/8W CHIP R 1.0K J 3/4W CHIP R 22K J 1/10W	K2K3M1 K2K3M1
R122 R123 R124 R125 R126		*	R92-5024-05 RK73FB2B561J RK73GB2A223J RK73GB2A473J RK73GB2A104J	CHIP R 1.0K J 3/4W CHIP R 560 J 1/8W CHIP R 22K J 1/10W CHIP R 47K J 1/10W CHIP R 100K J 1/10W	M1E1E
R127 R128 R129 R130 R131			RK73GB2A103J RK73FB2B203J RK73GB2A104J RD14DB2H332J RK73EB2E473J	CHIP R 10K J 1/10W CHIP R 20K J 1/8W CHIP R 100K J 1/10W SMALL-RD 3.3K J 1/2W CHIP R 47K J 1/4W	
R132 R133,134 R135 R136 R137			RK73EB2E101J RK73GB2A103J RK73GB2A183J RK73GB2A104J RK73GB2A223J	CHIP R 100 J 1/4W CHIP R 10K J 1/10W CHIP R 18K J 1/10W CHIP R 100K J 1/10W CHIP R 22K J 1/10W	
R138 R139 R140 R141 R201		*	RK73FB2B683J RK73GB2A393J RK73GB2A333J RK73GB2A474J RK73GB2A104J	CHIP R 68K J 1/8W CHIP R 39K J 1/10W CHIP R 33K J 1/10W CHIP R 470K J 1/10W CHIP R 100K J 1/10W	

E : KDC-W6527
K3 : KDC-MP6025

E1 : KDC-W6527Y
M1 : KDC-MP858

K2 : KDC-MP625

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

ELECTRIC UNIT (X34-301x-xx/X34-3222-70)

Ref. No.	Add	New	Parts No.	Description	Destination	Ref. No.	Add	New	Parts No.	Description	Destination
R202			RK73GB2A222J	CHIP R 2.2K J 1/10W		R312			RK73GB2A124J	CHIP R 120K J 1/10W	E1
R203			RK73GB2A472J	CHIP R 4.7K J 1/10W		R312			RK73GB2A124J	CHIP R 120K J 1/10W	K2K3M1
R206			RK73GB2A104J	CHIP R 100K J 1/10W		R312			RK73GB2A224J	CHIP R 220K J 1/10W	E
R207			RK73GB2A102J	CHIP R 1.0K J 1/10W		R313			RK73GB2A104J	CHIP R 100K J 1/10W	
R208			RK73GB2A103J	CHIP R 10K J 1/10W		R314			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R210			RK73GB2A473J	CHIP R 47K J 1/10W	E1E	R315,316			RK73GB2A223J	CHIP R 22K J 1/10W	
R210,211			RK73GB2A473J	CHIP R 47K J 1/10W	K2K3M1	R317			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R212			RK73GB2A104J	CHIP R 100K J 1/10W		R318-320			RK73EB2E102J	CHIP R 1.0K J 1/4W	
R213-215			RK73GB2A102J	CHIP R 1.0K J 1/10W		R321-323			RK73EB2E101J	CHIP R 100 J 1/4W	
R216			RK73GB2A223J	CHIP R 22K J 1/10W		R324			RK73EB2E472J	CHIP R 4.7K J 1/4W	
R217,218			RK73GB2A473J	CHIP R 47K J 1/10W	K2K3M1	R325			RK73EB2E101J	CHIP R 100 J 1/4W	
R219,220			RK73GB2A472J	CHIP R 4.7K J 1/10W		R326,327			RK73GB2A104J	CHIP R 100K J 1/10W	
R221,222			RK73GB2A471J	CHIP R 470 J 1/10W		R328			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R223			RK73GB2A101J	CHIP R 100 J 1/10W		R329			RK73GB2A471J	CHIP R 470 J 1/10W	
R224			RK73GB2A472J	CHIP R 4.7K J 1/10W		R330			RK73GB2A104J	CHIP R 100K J 1/10W	
R225			RK73GB2A101J	CHIP R 100 J 1/10W		R332			RK73GB2A471J	CHIP R 470 J 1/10W	
R226			RK73GB2A473J	CHIP R 47K J 1/10W		R403			RK73GB2A333J	CHIP R 33K J 1/10W	
R227			RK73GB2A104J	CHIP R 100K J 1/10W		R407			RK73FB2B181J	CHIP R 180 J 1/8W	
R229			RK73GB2A471J	CHIP R 470 J 1/10W		R408,409			RK73GB2A223J	CHIP R 22K J 1/10W	
R230			RK73GB2A472J	CHIP R 4.7K J 1/10W		R410			RK73FB2B181J	CHIP R 180 J 1/8W	
R231			RK73GB2A471J	CHIP R 470 J 1/10W		R411,412			RK73FB2B361J	CHIP R 360 J 1/8W	
R232			RK73GB2A472J	CHIP R 4.7K J 1/10W		R415			RK73GB2A333J	CHIP R 33K J 1/10W	
R236			RK73GB2A473J	CHIP R 47K J 1/10W		R419			RK73FB2B181J	CHIP R 180 J 1/8W	
R239			RK73GB2A102J	CHIP R 1.0K J 1/10W		R420,421			RK73GB2A223J	CHIP R 22K J 1/10W	
R240			RK73GB2A473J	CHIP R 47K J 1/10W		R422			RK73FB2B181J	CHIP R 180 J 1/8W	
R241			RK73GB2A102J	CHIP R 1.0K J 1/10W		R423,424			RK73FB2B361J	CHIP R 360 J 1/8W	
R245			RK73GB2A473J	CHIP R 47K J 1/10W		R461			RK73GB2A103J	CHIP R 10K J 1/10W	
R247			RK73GB2A473J	CHIP R 47K J 1/10W		R462			RK73GB2A272J	CHIP R 2.7K J 1/10W	
R250,251			RK73GB2A222J	CHIP R 2.2K J 1/10W		R463,464			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R252			RK73GB2A101J	CHIP R 100 J 1/10W		R468			RK73FB2B361J	CHIP R 360 J 1/8W	
R253			RK73GB2A222J	CHIP R 2.2K J 1/10W		R469,470			RK73GB2A473J	CHIP R 47K J 1/10W	
R254			RK73GB2A473J	CHIP R 47K J 1/10W		R471			RK73FB2B361J	CHIP R 360 J 1/8W	K2
R257-259			RK73GB2A473J	CHIP R 47K J 1/10W	K2	R471,472			RK73FB2B361J	CHIP R 360 J 1/8W	E
R257-260			RK73GB2A473J	CHIP R 47K J 1/10W	E	R471,472			RK73FB2B361J	CHIP R 360 J 1/8W	K3M1E1
R257-260			RK73GB2A473J	CHIP R 47K J 1/10W	K3M1E1	R473,474			RK73GB2A473J	CHIP R 47K J 1/10W	E
R261			RK73GB2A473J	CHIP R 47K J 1/10W	K2	R473,474			RK73GB2A473J	CHIP R 47K J 1/10W	K3M1E1
R262			RK73GB2A473J	CHIP R 47K J 1/10W	M1	R475			RK73FB2B361J	CHIP R 360 J 1/8W	E
R263			RK73GB2A473J	CHIP R 47K J 1/10W	K2E1E	R475			RK73FB2B361J	CHIP R 360 J 1/8W	K3M1E1
R263,264			RK73GB2A473J	CHIP R 47K J 1/10W	K3	R480,481			RK73GB2A104J	CHIP R 100K J 1/10W	
R265			RK73GB2A473J	CHIP R 47K J 1/10W	E	R501			RK73EB2E100J	CHIP R 10 J 1/4W	E
R265			RK73GB2A473J	CHIP R 47K J 1/10W	K2M1E1	R501			RK73EB2E100J	CHIP R 10 J 1/4W	K3M1E1
R272-274			RK73GB2A222J	CHIP R 2.2K J 1/10W	M1E1E	R502			RK73EB2E4R7J	CHIP R 4.7 J 1/4W	E
R272,273			RK73GB2A222J	CHIP R 2.2K J 1/10W	K2K3	R502			RK73EB2E4R7J	CHIP R 4.7 J 1/4W	K3M1E1
R276-278			RK73GB2A473J	CHIP R 47K J 1/10W		R503			RK73EB2E100J	CHIP R 10 J 1/4W	E
R279			RK73GB2A104J	CHIP R 100K J 1/10W		R503			RK73EB2E100J	CHIP R 10 J 1/4W	K3M1E1
R280,281			RK73GB2A222J	CHIP R 2.2K J 1/10W		R504			RK73GB2A102J	CHIP R 1.0K J 1/10W	E
R282,283			RK73GB2A104J	CHIP R 100K J 1/10W		R504			RK73GB2A102J	CHIP R 1.0K J 1/10W	K3M1E1
R284,285			RK73GB2A101J	CHIP R 100 J 1/10W		R505			RK73EB2E102J	CHIP R 1.0K J 1/4W	E
R301			RK73FB2B102J	CHIP R 1.0K J 1/8W		R505			RK73EB2E102J	CHIP R 1.0K J 1/4W	K2K3E1
R302			RK73GB2A223J	CHIP R 22K J 1/10W		R506-508			RK73EB2E471J	CHIP R 470 J 1/4W	E
R303			RK73GB2A472J	CHIP R 4.7K J 1/10W	E1E	R506-508			RK73EB2E471J	CHIP R 470 J 1/4W	K2K3E1
R304-306			RK73GB2A222J	CHIP R 2.2K J 1/10W	E1E	R509			RK73EB2E472J	CHIP R 4.7K J 1/4W	
R307,308			RK73GB2A102J	CHIP R 1.0K J 1/10W		R510			RK73EB2E101J	CHIP R 100 J 1/4W	
R309			RK73GB2A241J	CHIP R 240 J 1/10W		R511			RK73EB2E472J	CHIP R 4.7K J 1/4W	
R310,311			RK73GB2A103J	CHIP R 10K J 1/10W		R512-516			RK73EB2E101J	CHIP R 100 J 1/4W	

E : KDC-W6527 E1 : KDC-W6527Y K2 : KDC-MP625
K3 : KDC-MP6025 M1 : KDC-MP858

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

ELECTRIC UNIT (X34-301x-xx/X34-3222-70)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
R517 R518 R519 R520 R521			RK73EB2E100J RK73EB2E4R7J RK73EB2E100J RK73GB2A102J RK73GB2A473J	CHIP R 10 J 1/4W CHIP R 4.7 J 1/4W CHIP R 10 J 1/4W CHIP R 1.0K J 1/10W CHIP R 47K J 1/10W	
R522 R523 R524 R525 R526,527			RK73GB2A752J RK73GB2A100J RK73GB2A432J RK73GB2A223J RK73GB2A221J	CHIP R 7.5K J 1/10W CHIP R 10 J 1/10W CHIP R 4.3K J 1/10W CHIP R 22K J 1/10W CHIP R 220 J 1/10W	
R528 R529 W2 W400 W401,402			RK73GB2A683J RK73GB2A103J R92-1252-05 R92-1252-05 R92-2052-05	CHIP R 68K J 1/10W CHIP R 10K J 1/10W CHIP R 0 OHM J 1/16W CHIP R 0 OHM J 1/16W CHIP R 0 OHM J 1/10W	E1E
W403 W404,405			R92-1252-05 R92-2052-05	CHIP R 0 OHM J 1/16W CHIP R 0 OHM J 1/10W	
S1,2		*	S68-0886-05	PUSH SWITCH	
D1 D2 D3 D4 D5		*	S2V60*A RB160L-40 UDZS5.6B UDZS8.2B	DIODE DIODE ZENER DIODE ZENER DIODE	
D6 D7 D103-107 D108 D109		*	HZU11(B1)-E HZU9.1(B1)-E 1SR154-400 UDZS5.6B UDZS4.7B	ZENER DIODE ZENER DIODE DIODE ZENER DIODE ZENER DIODE	M1E1E
D110,111 D112 D113,114 D115 D201			UDZS6.8B UDZS6.2B DAP202U DAN202U DAP202U	ZENER DIODE ZENER DIODE DIODE DIODE DIODE	
D300 D301 D303 D304 D305		*	DA204K IMSA-6801-E STZ6.2N DA204K STZ6.2N	DIODE SURGE ABSORBER ZENER DIODE DIODE ZENER DIODE	
D306 D307 D308,309 D310 D314		*	DA204K STZ6.2N DA204K DA204U STZ6.8N	DIODE ZENER DIODE DIODE DIODE ZENER DIODE	
D315 D401 D403,404 D403,404 D500		*	DA204U DA227 STZ6.8N STZ6.8N STZ6.2N	DIODE DIODE ZENER DIODE ZENER DIODE ZENER DIODE	E E K3M1E1 M1
D500-504 D500-504 D503,504 D505,506 D507-510		*	STZ6.2N STZ6.2N STZ6.2N STZ6.8N 1SR154-400	ZENER DIODE ZENER DIODE ZENER DIODE ZENER DIODE DIODE	E K2K3E1 M1

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
D511,512 D513-516 D518 D519 IC1		*	DAP222 1SR154-400 DAP222 DA204U 30624MGPA27GP	DIODE DIODE DIODE DIODE MICROCONTROLLER IC	
IC2 IC3 IC4 IC7 IC10		*	E-TDA7414 M5237ML E-TDA7560A SI-8050JDNF TC7W02FU-F	ANALOGUE IC ANALOGUE IC ANALOGUE IC ANALOGUE IC MOS-IC	
IC11 IC12 IC13 IC14 IC20		*	PST3436UL-E E-TDA7479AD LB1930M-E TA75S558F-F SI-3050KD	MOS-IC ANALOGUE IC ANALOGUE IC ANALOGUE IC ANALOGUE IC	E1E
Q1 Q2 Q3 Q4 Q4		*	2SB1565 2SC4081 2SA1576A DTC124EE PDTCT124EE	TRANSISTOR TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR	
Q5,6 Q7 Q8 Q9,10 Q11			UMC2N 2SB1188(R) 2SB1565 2SC4081 2SB1565	TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR	
Q12 Q13 Q15 Q16 Q25			DTC144EUA UMC2N 2SB1565 2SC4617 2SB1188(Q,R)	DIGITAL TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR	K2K3M1
Q26 Q27 Q28 Q29 Q30			DTC114YUA 2SB1188(Q,R) 2SA1576A DTA114EUA DTC114YE	DIGITAL TRANSISTOR TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR	K2K3M1
Q30 Q31 Q32 Q33 Q34		*	PDTCT114YE DTA123JK DTC144EUA 2SC4081 2SA1774	TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR TRANSISTOR	M1E1E
Q35 Q36 Q37-40 Q37-40 Q37,38		*	2SC4617 2SC4081 DTA124EUA DTA124EUA DTA124EUA	TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR	E K3M1E1 K2
Q40 Q41 Q42 Q43 Q44		*	DTA124EUA 2SA1576A DTC124EUA DTC143TUA DTC124EUA	DIGITAL TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR	K2 E1E
Q45 Q46 Q47-50 Q55-57 Q56,57		*	2SB1188(R) DTC124EUA DTC143TUA DTC143TE DTC143TE	TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR	E1E K2K3M1

E : KDC-W6527 E1 : KDC-W6527Y K2 : KDC-MP625
K3 : KDC-MP6025 M1 : KDC-MP858

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

ELECTRIC UNIT (X34-301x-xx/X34-3222-70)

Ref. No.	Add	New	Parts No.	Description	Destination	Ref. No.	Add	New	Parts No.	Description	Destination
Q58,59 Q58,59 Q60 TH1			DTC143TUA DTC143TUA DTC124EUA PRF21BD471QB2	DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR POSITIVE RESISTOR	E K3M1E1	C E F G H	2B 2B 1A 2A 1B		N09-6004-05 N09-6007-05 N09-6051-05 N19-2163-04 N39-2020-46	MACHINE SCREW (M1.7X2.5 IB-L) MACHINE SCREW (PAN M2X2) TAPTITE SCREW (BIND P 2X5) FLAT WASHER PAN HEAD MACHIN SCREW	
A1		*	W02-3439-05	ELECTRIC CIRCUIT MODULE		J K	1B 3B		N09-6108-05 N09-6155-05	MACHINE SCREW (M2*3.5TYPE3) SEMS (TAPTITE SCREW) (PT2X6)	
A2 A2 A2	2D 2D 2D	*	X86-3760-11 X86-3762-70 X86-3762-71	FRONT-END UNIT FRONT-END UNIT FRONT-END UNIT	K2K3M1 E1 E	DM1 DM2	3B 2B		T42-1066-04 T42-1067-04	DC MOTOR ASSY (SP) DC MOTOR ASSY (LO)	
CD MECHANISM ASSY (X92-4850-00)						DPU1	2B		X93-2010-00	OPTICAL PICKUP ASSY	
2	1B		A10-4827-32	CHASSIS							
5	1B	*	D10-4576-83	ARM ASSY							
8	2A		D10-4579-13	LEVER ASSY							
10	2A		D10-4581-13	ARM							
11	2A		D10-4582-13	ARM							
12	3A		D10-4583-03	ARM							
13	3A		D10-4584-03	ARM							
14	3B		D10-4585-03	ARM							
15	2A		D10-4586-13	SLIDER							
16	3B	*	D10-4587-42	SLIDER							
17	2B		D10-4588-13	SLIDER							
18	2B		D10-4595-04	ARM							
19	3B	*	D10-4596-24	ARM							
22	2A		D13-2151-04	GEAR							
23	2B		D13-2152-04	GEAR							
24	3B		D13-2153-04	GEAR							
25	3B		D13-2154-04	GEAR							
26	3B		D13-2155-04	WORM							
27	2B		D13-2156-14	GEAR							
28	3B		D13-2157-04	GEAR							
29	3B		D13-2158-04	GEAR							
30	2B		D13-2168-04	GEAR							
31	3B		D13-2171-04	GEAR							
32	2B	*	D13-2172-13	RACK (GEAR)							
33	2A		D14-0759-04	ROLLER							
35	2B		D21-2382-04	SHAFT							
36	1A		D23-0954-04	RETAINER							
37	1B		D39-0246-05	DAMPER							
38	2B		G01-3072-04	EXTENSION SPRING							
39	2A		G01-3073-04	TORSION COIL SPRING							
40	2A		G01-3074-04	EXTENSION SPRING							
41	1B		G01-3075-14	EXTENSION SPRING							
42	2A		G01-3076-04	EXTENSION SPRING							
43	1B		G01-3077-14	EXTENSION SPRING							
44	2B		G02-1399-04	FLAT SPRING							
45	2B		G02-1408-04	FLAT SPRING							
51	1A	*	J21-9676-32	MOUNTING HARDWARE							
52	3B		J21-9677-22	MOUNTING HARDWARE							
53	1B		J21-9678-13	MOUNTING HARDWARE							
55	1A		J90-1001-11	GUIDE							
56	1B		J90-1023-03	GUIDE							
A	2B		N09-4460-05	TAPTITE SCREW (OVAL P TAPTIT)							
B	1B		N09-4472-15	MACHINE SCREW (M1.7X8.0)							

E : KDC-W6527 E1 : KDC-W6527Y K2 : KDC-MP625
K3 : KDC-MP6025 M1 : KDC-MP858

△ Indicates safety critical components.