


pin 22 : NC	: - : Not in use.	pin 32 : CLOCK_OUT	: O : 32.768 kHz clock output, if selected by CLOCK_ENAB.
pin 23 : NC	: - : Not in use.	pin 33 : NC	: - : Not in use.
pin 24 : NC	: - : Not in use.	pin 34 : NC	: - : Not in use.
pin 25 : NC	: - : Not in use.	pin 35 : NC	: - : Not in use.
pin 26 : NC	: - : Not in use.	pin 36 : NC	: - : Not in use.
pin 27 : NC	: - : Not in use.	pin 37 : NC	: - : Not in use.
pin 28 : NC	: - : Not in use.	pin 38 : nRESET	: I : CP reset(active low).
pin 29 : NC	: - : Not in use.	pin 39 : VSS	: - : Supply voltage, negative terminal.
pin 30 : NC	: - : Not in use.	pin 40 : VCC	: - : Supply voltage positive terminal.
pin 31 : NC	: - : Not in use.		

EXPLODED VIEW / PARTS LIST


CD mechanism section: 929-5016-80

* The exploded view is on page 9

NO.	PART NO.	DESCRIPTION	Q'TY	NO.	PART NO.	DESCRIPTION	Q'TY
1	-----	SENSOR PWB	1	39	621-1750-20	POWER GEAR C	1
2	966-1743-21	DRIVE-PLT-ASSY	1	40	621-1751-20	POWER GEAR D	1
3	SMA-182-100	SPINDLE MOTOR-ASSY	1	41	621-1752-20	DISC STOPPER	1
4	SMA-197-100	SLED MOTOR-ASSY	1	42	621-1753-20	CLAMPER RING	1
5	345-5476-20	CUSHION RUBBER	1	43	621-1754-20	GEAR BASE	1
6	620-1023-23	CLAMPER PLATE	1	44	622-1571-21	ROLLER SHAFT	1
7	620-1026-21	SPRING PLATE	1	45	624-0020-00	LEAD SCREW	1
8	620-1596-23	CLAMPER LINK	1	46	629-0081-21	DAMPER F	2
9	620-1598-22	UPPER CHASSIS	1	47	629-0082-21	DAMPER R	1
10	620-1752-20	SENSOR ARM	1	48	716-1507-01	SCREW(M2x3)	1
11	620-1753-20	ID-LOCK PLATE	1	49	716-1670-01	SCREW(M2x4)	4
12	620-1766-20	LOWER CHASSIS	1	50	716-1733-01	SCREW(M1.7x2.3)	2
13	621-0608-21	SECOND GEAR	1	51	716-3469-01	SCREW(1.7x4)	2
14	621-0609-20	BASE GEAR	1	52	716-3473-01	SCREW(M2x3)	1
15	621-0610-20	IDLE GEAR A	1	53	716-3551-00	SCREW(M1.4x2.5)	2
16	621-0611-20	IDLE GEAR B	1	54	750-7865-20	SHIFT SPRING	1
17	621-0612-21	ROLLER GEAR A	1	55	750-7866-20	RACK SPRING	1
18	621-0620-20	THREAD GEAR A	1	56	750-7867-20	CLAMPER SPRING	1
19	621-0621-20	THREAD GEAR B	1	57	750-7868-20	ID-LOCK SPRING	1
20	621-0623-23	LS-HOLDER	1	58	750-7869-20	SENSOR SPRING	1
21	621-0624-22	GUIDE RAIL	1	59	750-7870-20	DR-SPRING F	2
22	621-0711-21	LOADING ROLLER	2	60	750-7871-20	DR-SPRING RA	1
23	621-0718-21	ROLLER GUIDE	1	61	750-7872-20	DR-SPRING RB	1
24	621-0719-20	ROLLER GEAR	1	62	750-7873-20	DR-SPRING C	1
25	621-0720-20	ROLLER GEAR C	1	63	750-6797-20	ROLLER SPRING L	1
26	621-0721-20	ROLLER GEAR D	1	64	750-6798-20	ROLLER SPRING R	1
27	621-0728-20	STOPPER LINK	1	65	714-2003-8B	SCREW(M2x3)	2
28	621-1719-20	IDLE CASE	1	66	780-2025-00	SCREW(M2x2.5)	3
29	621-1726-20	ROLLER SLEEVE	2	67	781-1730-00	SCREW(M1.7x3)	1
30	621-1729-20	SH-BASE	1	68	803-4906-60	VINYL-COAT-WIRE(ORG)	1
31	621-1742-20	UPPER GUIDE	1	69	969-0071-30	PICKUP-ASSY	1
32	621-1743-20	SHIFT LEVER	1	70	816-2590-00	SPECIAL LEAD(GRN)	1
33	621-1744-20	RACK	1	71	816-2591-00	SPECIAL LEAD(YEL)	1
34	621-1745-20	LOCK ARM L	1	72	816-2592-00	SPECIAL LEAD(BLUE)	1
35	621-1746-20	LOCK ARM R	1	73	816-2593-00	SPECIAL LEAD(PUR)	1
36	621-1747-20	GEAR COVER	1	74	966-1722-20	SH-RACK-ASSY	1
37	621-1748-20	POWER GEAR A	1	75	816-2624-50	FLAT WIRE	1
38	621-1749-20	POWER GEAR B	1				

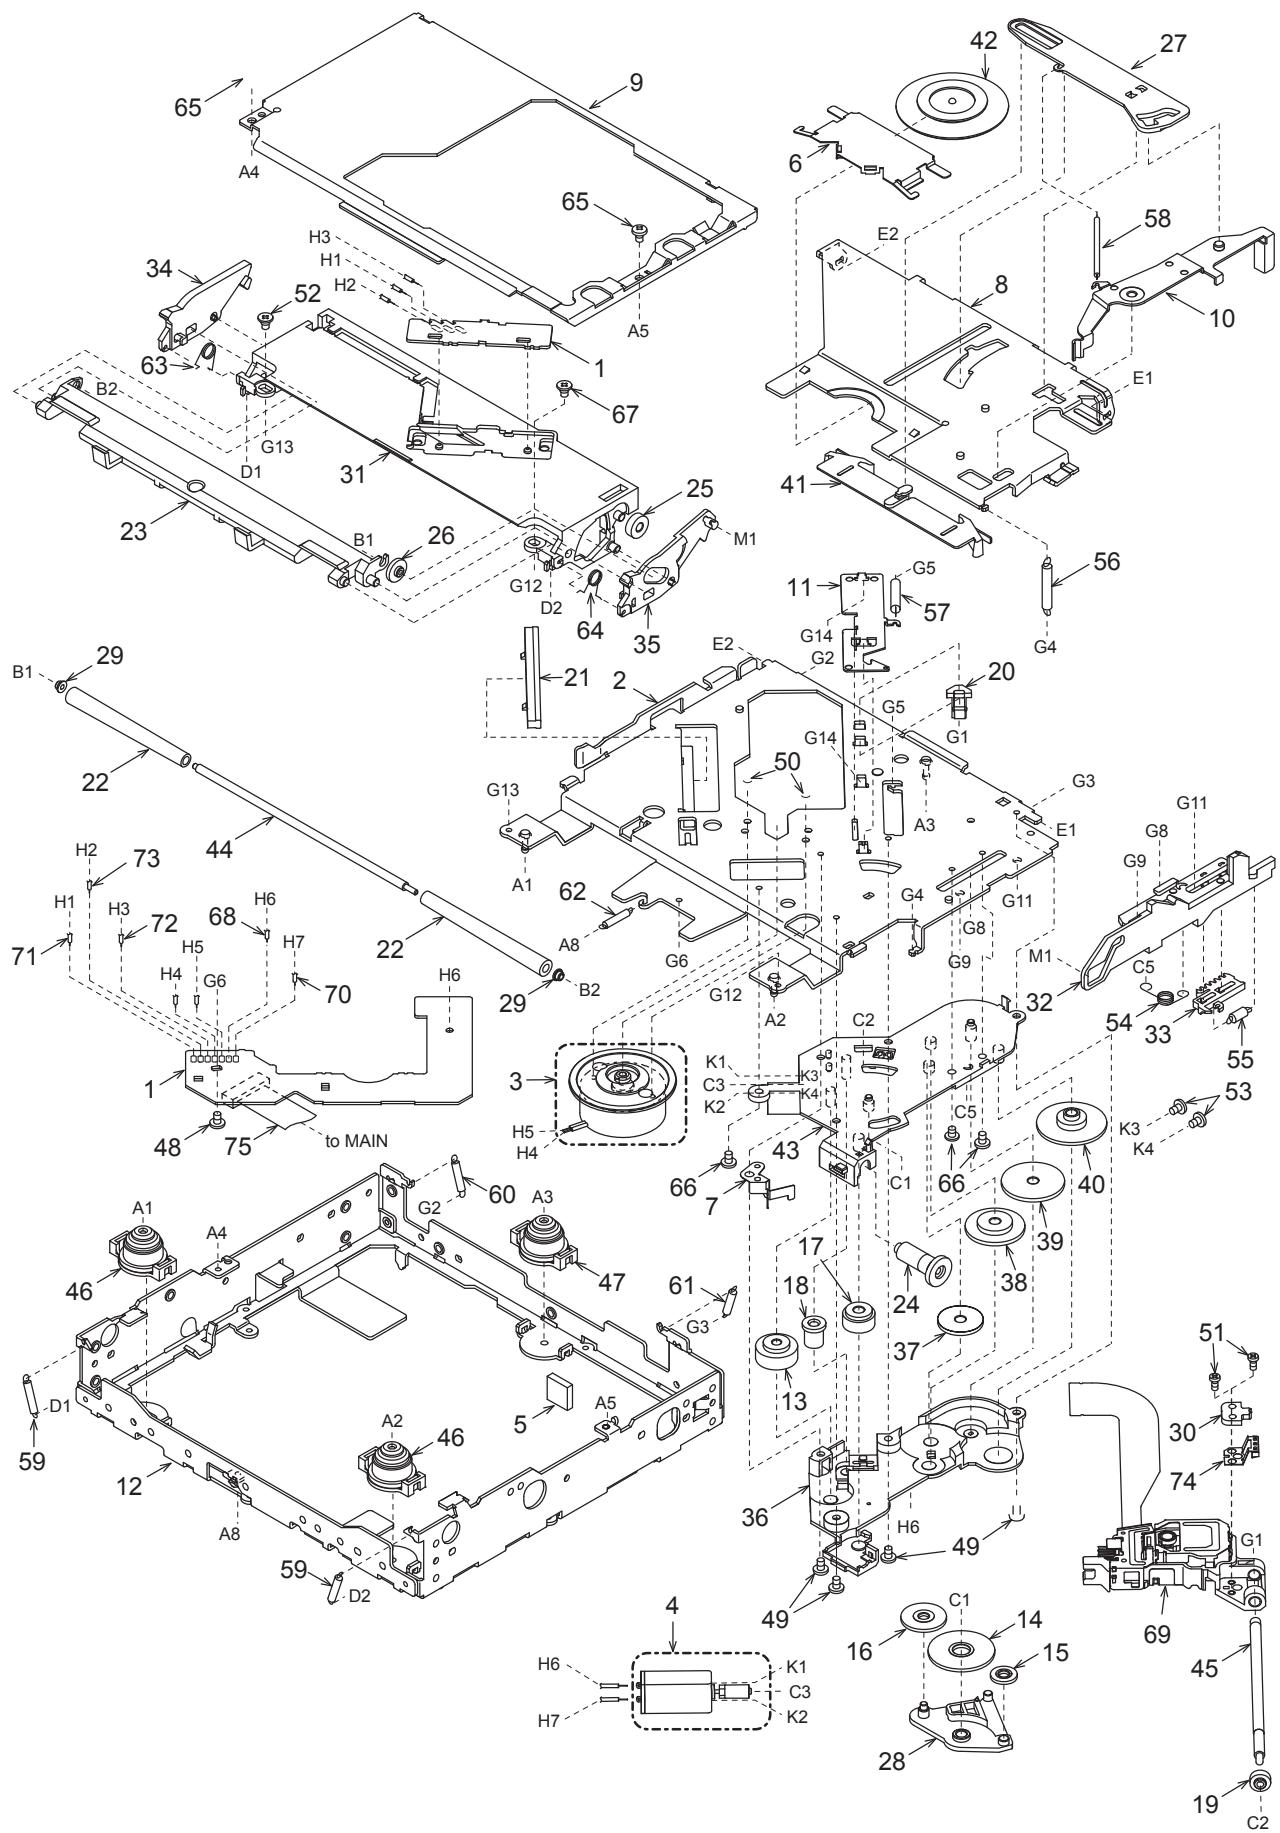

DCP section

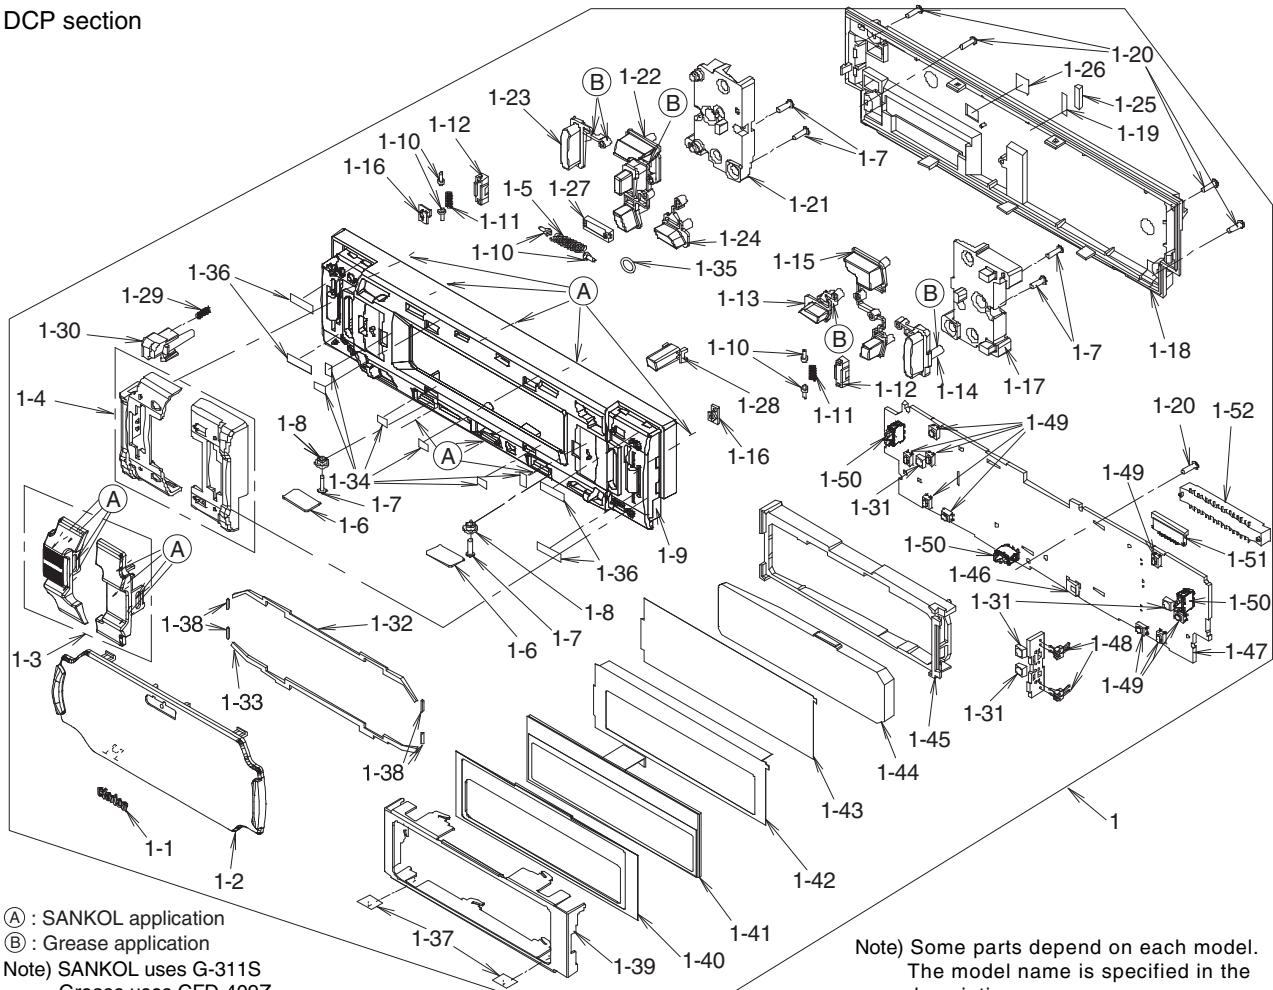

(A) : SANKOL application

(B) : Grease application

Note) SANKOL uses G-311S


Grease uses CFD-409Z

Note) Some parts depend on each model.
The model name is specified in the description.

NO.	PART NO.	DESCRIPTION	Q'TY
1	DCP-607-600	DCP ASSY(PE-3041B-A)	1
	DCP-629-800	DCP ASSY(PE-3041K-A/B)	1
1-1	335-7724-00	BRAND	1
1-2	373-1125-10	SEEK PLATE(PE-3041B-A)	1
	373-1125-24	SEEK PLATE(PE-3041K-A/B)	1
1-3	947-0738-00	VOLUME BARS	1
1-4	947-0737-00	SIDE PARTS ASSY	1
1-5	750-6856-00	SPRING	1
1-6	347-8210-00	TRIM CVR	2
1-7	716-0872-51	SCREW(M1.7x6)	6
1-8	335-8004-01	ROLLER	2
1-9	370-6260-14	ESCUOTCHEON(PE-3041B-A)	1
	370-6260-16	ESCUOTCHEON(PE-3041K-A/B)	1
1-10	335-7989-00	SPRING CAP	6
1-11	750-6825-00	SPRING	2
1-12	335-8005-00	SPRING CVR	2
1-13	382-8169-04	BUTTON(ISR)	1
1-14	382-8165-00	BUTTON(ENT)	1
1-15	382-8166-02	BUTTON(SOUND)	1
1-16	335-7985-00	INDICATOR-A	2
1-17	335-7987-00	ILLUMI PLATE(R)	1
1-18	335-6899-02	REAR CVR	1
1-19	347-6628-00	SPACER FILM	1
1-20	716-0872-62	SCREW(M1.7X6)	5
1-21	335-7986-01	ILLUMI PLATE(L)	1
1-22	382-8164-02	BUTTON(EJECT)	1
1-23	382-8163-00	BUTTON(SRC)	1
1-24	382-8168-02	BUTTON(TITLE)	1

NO.	PART NO.	DESCRIPTION	Q'TY
1-25	345-8647-00	CUSHION	1
1-26	347-6977-00	COVER FILM	1
1-27	335-7992-00	SPRING CVR	1
1-28	335-7984-00	IR FILTER	1
1-29	750-6720-00	SPRING (REL)	1
1-30	382-8167-00	RELEASE BUTTON	1
1-31	001-7088-90	DIODE	4
1-32	347-8245-00	LEATHER SHEET	1
1-33	347-8246-00	LEATHER SHEET	1
1-34	347-8251-00	FILM	6
1-35	347-7347-00	SPACER FILM	1
1-36	347-8249-00	DOUBLE FACE	4
1-37	347-8252-00	FILM	2
1-38	347-8208-00	LEATHER SHEET	4
1-39	331-4373-00	LCD COVER	1
1-40	347-8213-00	SHAFD	1
1-41	379-1381-81	INDICATOR(LCD)	1
1-42	347-8212-00	FILM	1
1-43	347-8211-00	FILM	1
1-44	335-7351-00	ILLUMI PLATE	1
1-45	335-7988-00	LCD HOLDER	1
1-46	060-4017-90	IR-RECIEVER	1
1-47	-----	SWITCH PWB	1
1-48	076-0708-02	PLUG	2
1-49	013-6524-50	TACT SWITCH	9
1-50	013-7419-00	SWITCH	3
1-51	074-2226-71	OUTLET SOCKET(21P)	1
1-52	076-0647-00	PLUG (16P)	1

Inner escutcheon section

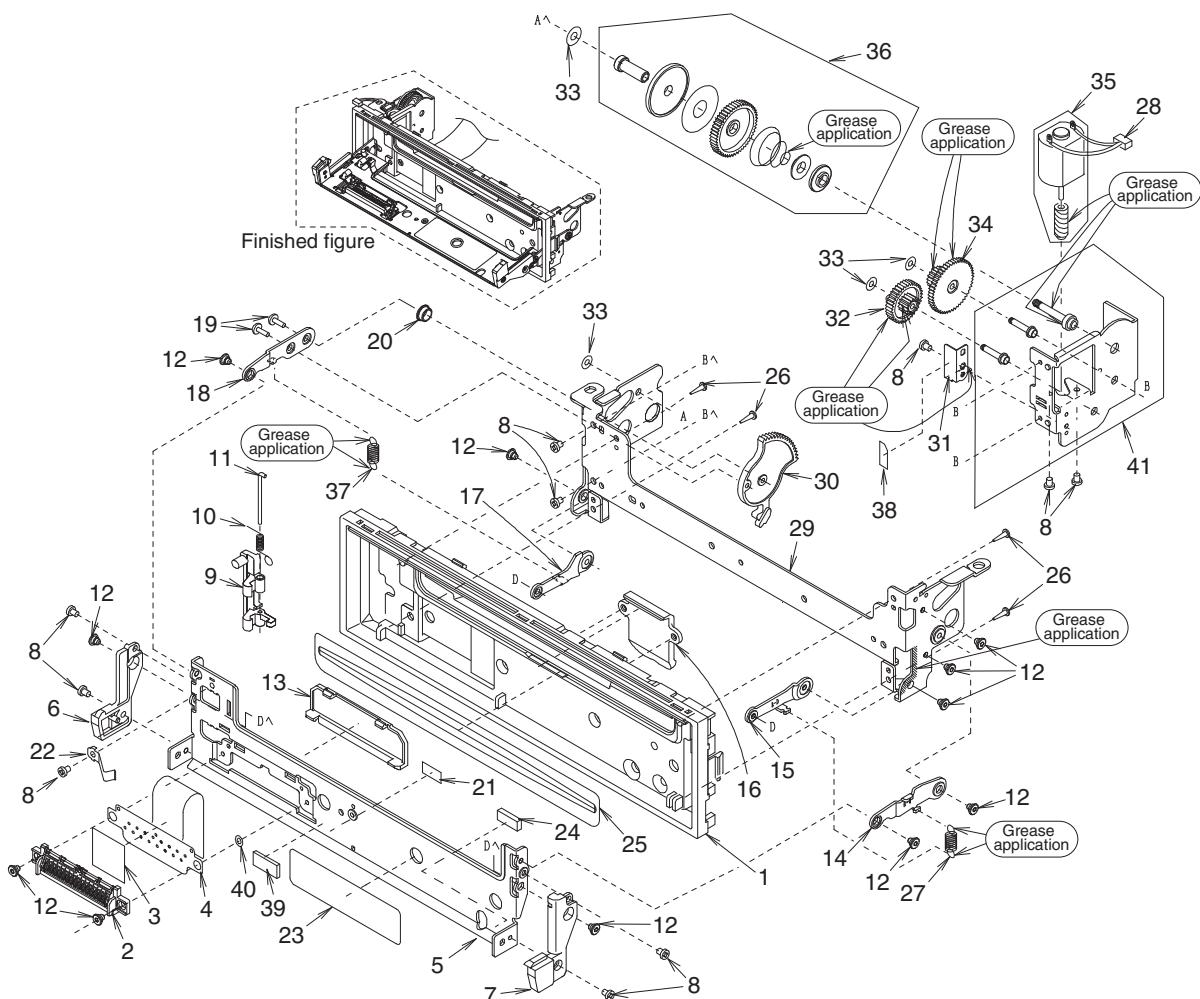


Note): Grease uses FLOIL 31SB

NO.	PART NO.	DESCRIPTION	Q'TY
1	370-5935-07	INNER ESCUTCHEON	1
2	074-1278-01	OUTLET SOCKET(16P)	1
3	347-6528-00	INSULATOR	1
4	039-2409-05	INNER ES FPC (WITHOUT COMPONENT)	1
5	331-3115-01	DCP HOLDER	1
6	335-6903-00	ARM-COVER(L)	1
7	335-6904-00	ARM-COVER(R)	1
8	716-1468-70	SCREW(M2x2.5)	10
9	335-7484-00	HOOK	1
10	750-3431-02	SPRING(HOOK)	1
11	341-1802-00	SHAFT	1
12	716-1715-52	DECOSCREW(M2)	11
13	335-6499-00	CN-CVR	1
14	331-3117-01	LEVER-UP(R)	1
15	331-3118-01	LEVER-LO(R)	1
16	335-6505-00	ILLUMI PLATE	1
17	331-3119-00	LEVER-LO(L)	1
18	331-3120-00	LEVER-UP(L)	1
19	716-1758-50	PAD SCREW(M2x5)	2
20	341-1740-00	ROLLER(ARM)	1

NO.	PART NO.	DESCRIPTION	Q'TY
21	347-6527-01	CUSHION	1
22	750-3457-00	SPRING	1
23	291-0102-02	STICKER	1
24	345-8627-01	CUSHION	1
25	346-0150-02	LEATHER SHEET	1
26	716-0872-50	PAD SCREW(M1.7x5)	4
27	750-3304-20	SPRING(GEAR)	1
28	854-4380-01	EXTENSION LEAD	1
29	309-0772-02	FRONT PLATE	1
30	613-0719-00	ARM GEAR	1
31	750-3432-00	SPRING(MOTO)	1
32	613-0733-00	HUS-GEAR	1
33	746-0768-70	SPECIAL WASHER	4
34	613-0717-00	INPUT GEAR	1
35	634-0024-00	MOTOR-ASSY	1
36	947-0513-04	T-LIM-GEAR-ASSY	1
37	750-3303-20	SPRING(ARM)	1
38	347-8262-00	FILM(FRONT)	1
39	345-5937-00	CUSHION	1
40	347-7347-00	SPACER	1
41	946-0079-01	GEAR-BOX ASSY	1

Main section

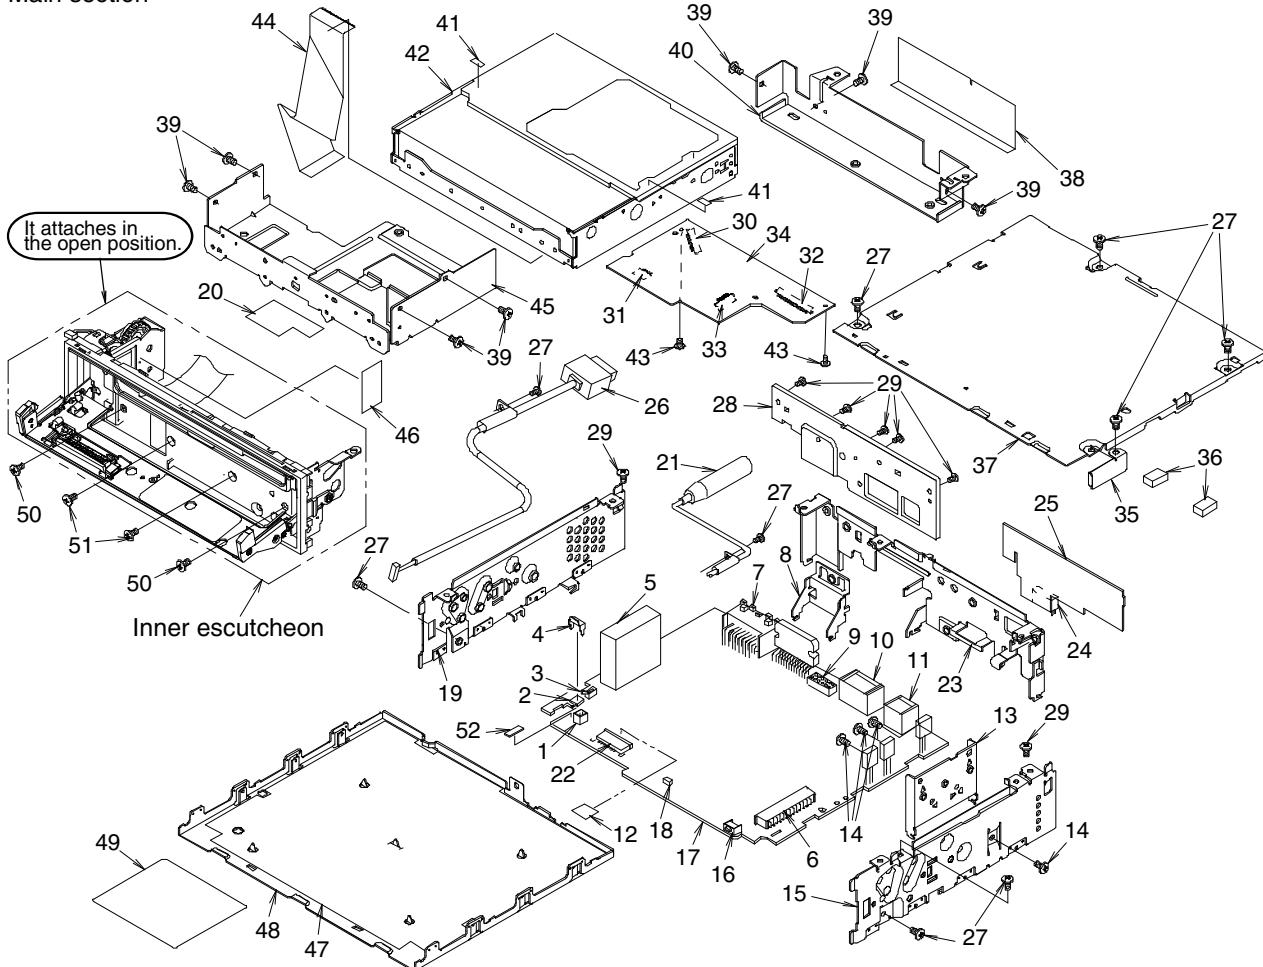

NO.	PART NO.	DESCRIPTION	Q'TY
1	076-0312-02	PLUG(2P)	1
2	013-7206-50	DETECTOR SWITCH	1
3	013-7106-00	DETECTOR SWITCH	1
4	331-3378-00	SW-HOLDER	1
5	880-2091E	TUNER	1
6	074-1138-79	OUTLET SOCKET(29P)	1
7	074-1214-50	OUTLET SOCKET(16P)	1
8	331-3954-00	IC-HOLDER	1
9	076-0368-16	PLUG(16P)	1
10	076-6003-18	PLUG(18P)	1
11	074-1194-00	OUTLET SOCKET(CeNET)	1
12	347-6215-00	SPACER-FILM	1
13	313-1924-00	HEAT SINK	1
14	714-3005-8B	MACHINE SCREW(M3x5)	4
15	305-0348-00	SIDE-CVR(R)	1
16	013-6100-00	TACT SWITCH	1
17	-----	MAIN PWB	1
18	001-7062-90	DIODE	1
19	305-0347-00	SIDE-CVR(L)	1
20	347-8250-00	DOUBLE FACE	1
21	092-2215-50	ANT-RECEPT	1
22	074-1198-68	OUTLET SOCKET(18P)	1
23	307-0723-01	REAR-CVR	1
24	074-0898-16	OUTLET SOCKET(16P)	1
25	-----	D/D PWB	1
26	855-0613-53	USB CABLE	1
27	731-3006-8B	TAPTTIGHT(M3x5)	9

NO.	PART NO.	DESCRIPTION	Q'TY
28	313-1923-00	HEAT SINK	1
29	714-3006-8B	MACHINE SCREW(M3x6)	7
30	074-1138-65	OUTLET SOCKET(15P)	1
31	076-0478-55	PLUG(5P)	1
32	074-1228-79	OUTLET SOCKET(29P)	1
33	074-1138-60	OUTLET SOCKET(10P)	1
34	-----	YAMATO PWB	1
35	331-2744-00	STOPPER	1
36	347-7581-10	CUSHION	2
37	303-0472-07	UPPER-CVR	1
38	347-7579-10	INSULATOR	1
39	714-2603-8B	MACHINE SCREW(M2.6x3)	7
40	331-3324-00	CD-SUB-BRKT(R)	1
41	347-8269-00	SPACER	2
42	929-5016-80	CD-MECH-MODULE	1
43	716-1670-01	SCREW(M2x4)	2
44	816-4026-50	FLAT WIRE	1
45	331-4367-00	MECH BRKT(F)	1
46	347-6536-00	PROTECT SHEET	1
47	347-7578-10	INSULATOR	1
48	304-0483-00	LOWER-CVR	1
49	276-0379-00	SETPLATE(PE-3041B-A)	1
	276-0413-00	SETPLATE(PE-3041K-A)	1
	276-0414-00	SETPLATE(PE-3041K-B)	1
50	716-0717-60	STEEL SCREW(M2.3x0.4P)	2
51	780-2005-50	SCREW(M2x5)	2
52	345-8701-00	CUSHION	1

