

2. EXPLODED VIEWS AND PARTS LIST


NOTES : • Parts marked by " * " are generally unavailable because they are not in our Master Spare Parts List.

• Screw adjacent to ▽ mark on the product are used for disassembly.

• For the applying amount of lubricants or glue, follow the instructions in this manual.

(In the case of no amount instructions, apply as you think it appropriate.)

2.1 PACKING(DEH-P860MP/XN/UC,DEH-P8600MP/XN/UC)

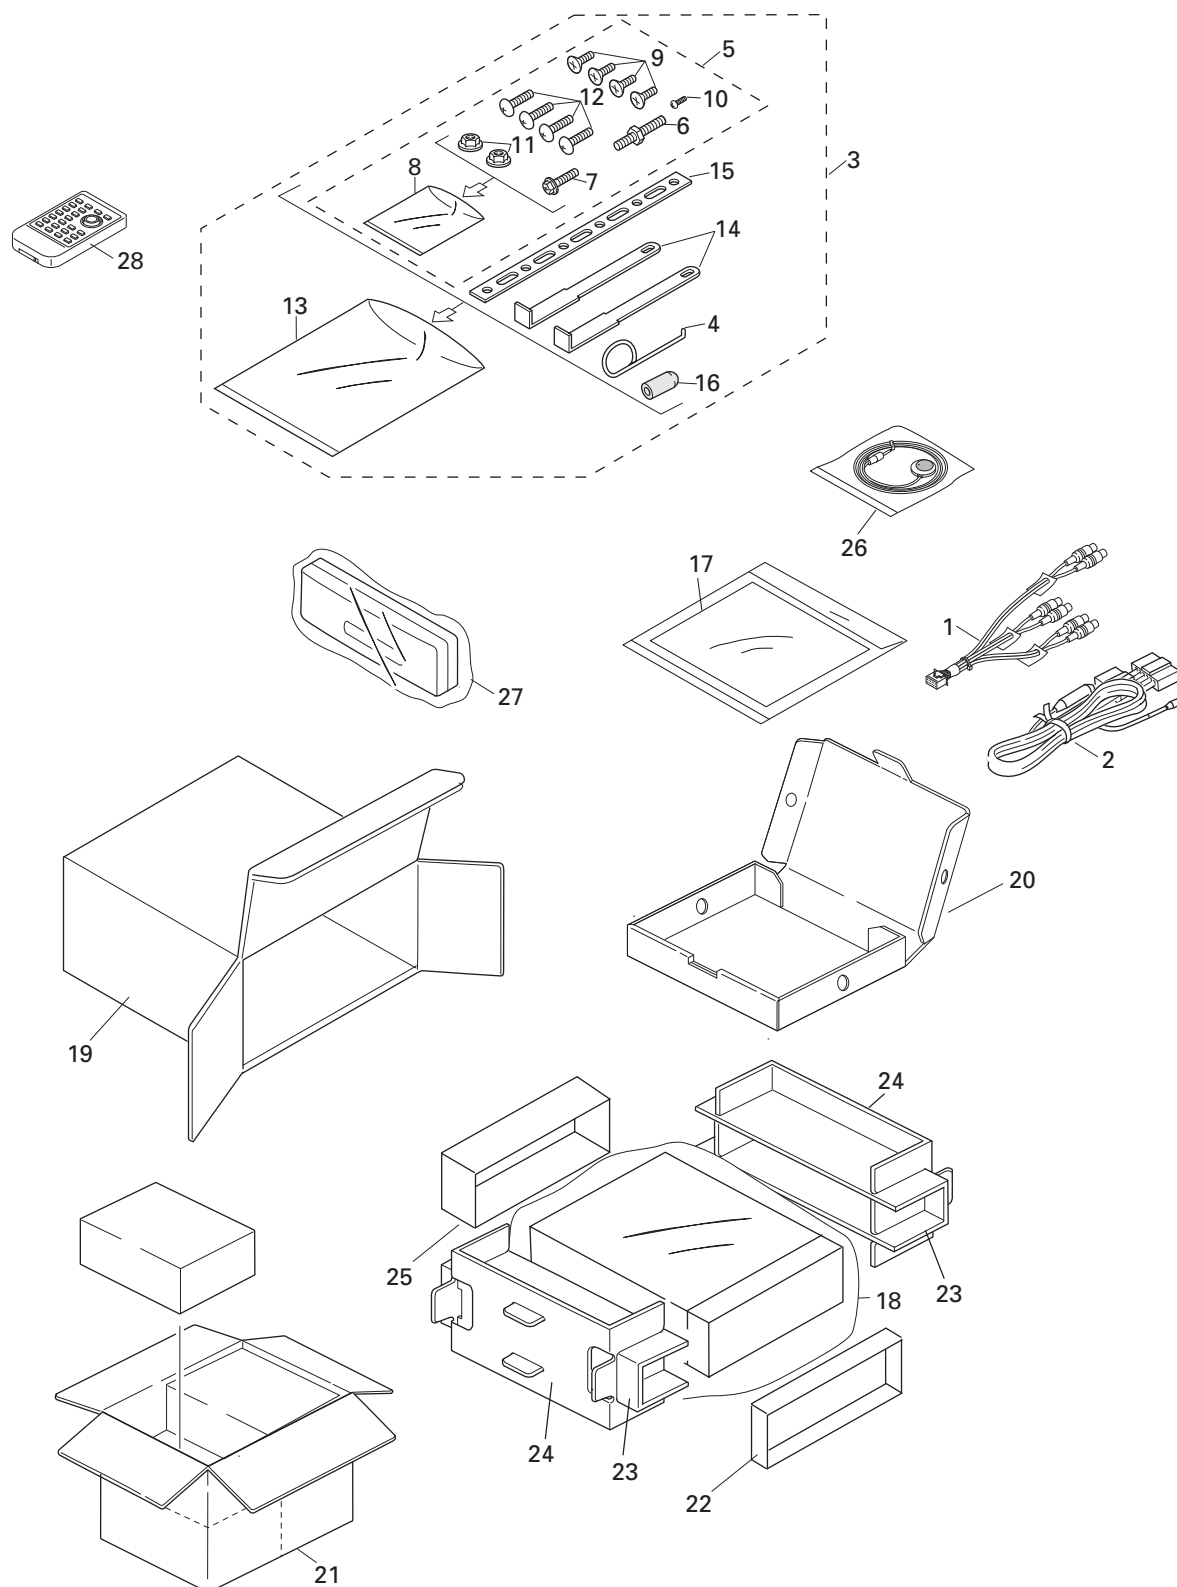

(1) PACKING(DEH-P860MP/XN/UC,DEH-P8600MP/XN/UC) SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.
1	Cord Assy	See Contrast table(2)	17-2	Owner's Manual	See Contrast table(2)
2	Cord Assy	CDE7701	17-3	Installation Manual	See Contrast table(2)
3	Accessory Assy	CEA4302	* 17-4	Causion Card	CRP1308
4	Spring	CBH1650			
5	Screw Assy	CEA4303	17-5	Causion Card	CRP1310
			* 17-6	Warranty Card	See Contrast table(2)
6	Screw	CBA1650	* 17-7	Card	See Contrast table(2)
7	Bolt(M5x16)	CBA1783	18	Polyethylene Bag	CEG1173
* 8	Polyethylene Bag	CEG-127	19	Carton	See Contrast table(2)
9	Screw	CRZ50P090FTC			
10	Screw	JPZ20P060FZK	20	Sub Carton	CHG5195
			21	Contain Box	See Contrast table(2)
11	Nut	NF50FTC	22	Protector	CHP2546
12	Screw	TRZ50P080FTC	23	Protector	CHP2797
* 13	Polyethylene Bag	CEG-158	24	Protector	CHP2798
14	Handle	CNC5395			
15	Strap	CNC5402	25	Protector	CHP2812
			26	Microphone Assy	CPM1054
16	Bush	CNV3930	27	Case Assy	CXB3520
17-1	Polyethylene Bag	CEG1116	28	Remote Control Unit	CXC2665

(2) CONTRAST TABLE


DEH-P860MP/XN/UC and DEH-P8600MP/XN/UC are constructed the same except for the following:

Mark	NO	Description	DEH-P860MP/XN/UC	DEH-P8600MP/XN/UC
	1	Cord Assy	CDE7436	CDE7437
	17-2	Owner's Manual	CRD3828	CRD3830
	17-3	Installation Manual	CRD3829	CRD3831
*	17-6	Warranty Card	CRY1070	Not used
*	17-7	Card	Not used	ARY1048
	19	Carton	CHG5194	CHG5193
	21	Contain Box	CHL5194	CHL5193

Owner's Manual,Installation Manual

Part No.	Language
CRD3828	English, French
CRD3829	English, French
CRD3830	English, French
CRD3831	English, French

2.2 PACKING(DEH-P8650MP/XN/ES)

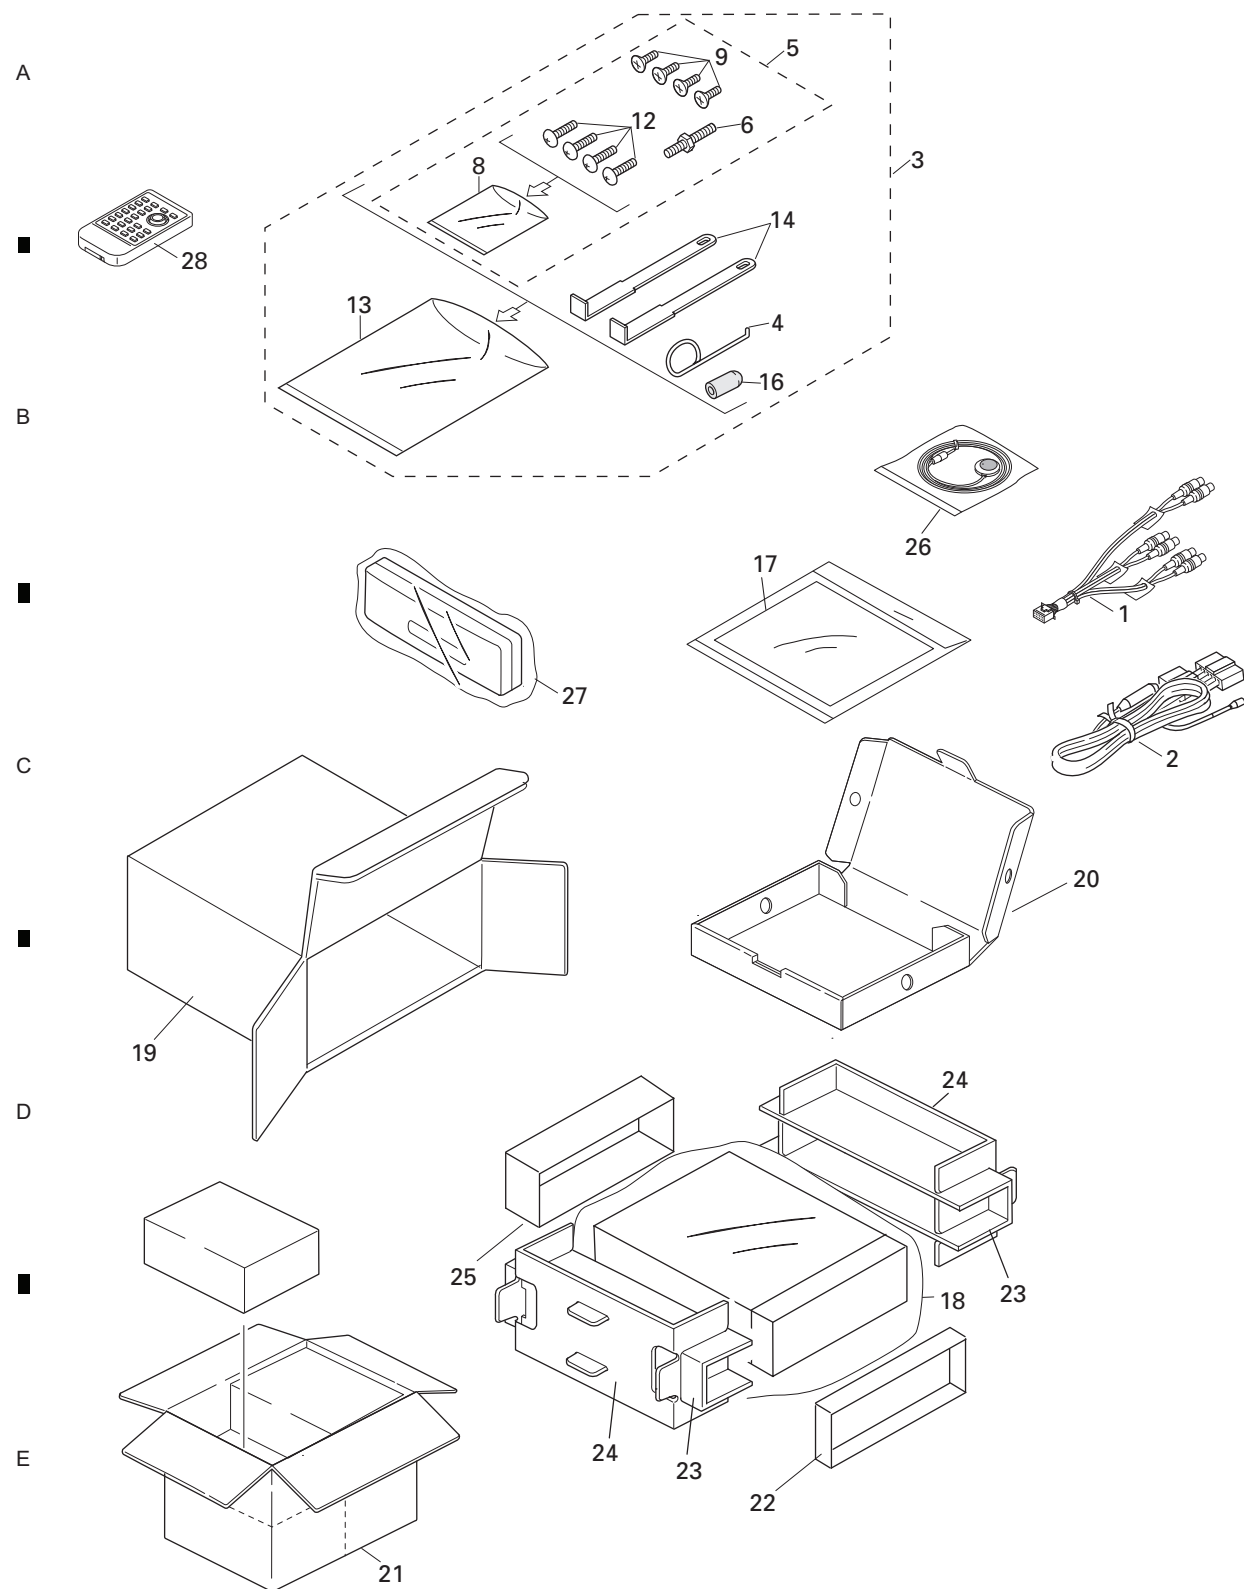

● PACKING(DEH-P8650MP/XN/ES) SECTION PARTS LIST


<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
1	Cord Assy	CDE7436	17-2	Owner's Manual	CRD3832
2	Cord Assy	CDE7701	17-3	Owner's Manual	CRD3833
3	Accessory Assy	CEA4301	17-4	Owner's Manual	CRB1902
4	Spring	CBH1650			
5	Screw Assy	CEA3849	17-5	Installation Manual	CRD3834
			*	17-6	Causion Card
6	Screw	CBA1650		17-7	Causion Card
7				18	Polyethylene Bag
* 8	Polyethylene Bag	CEG-127		19	Carton
9	Screw	CRZ50P090FTC			
10			20	Sub Carton	CHG5195
			21	Contain Box	CHL5192
11			22	Protector	CHP2546
12	Screw	TRZ50P080FTC	23	Protector	CHP2797
* 13	Polyethylene Bag	CEG-158	24	Protector	CHP2798
14	Handle	CNC5395			
15			25	Protector	CHP2812
			26	Microphone Assy	CPM1054
16	Bush	CNV3930	27	Case Assy	CXB3520
17-1	Polyethylene Bag	CEG1116	28	Remote Control Unit	CXC2665

● Owner's Manual,Installation Manual


<u>Part No.</u>	<u>Language</u>
CRD3832	English, Spanish
CRD3833	Portuguese(B), Traditional Chinese
CRB1902	Arabic
CRD3834	English, Spanish, Portuguese(B), Traditional Chinese, Arabic

2.3 EXTERIOR(1)

A

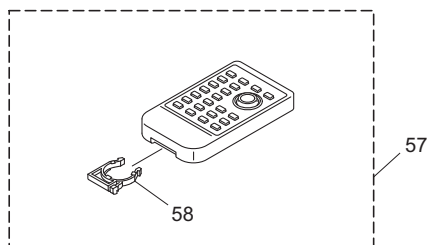

B

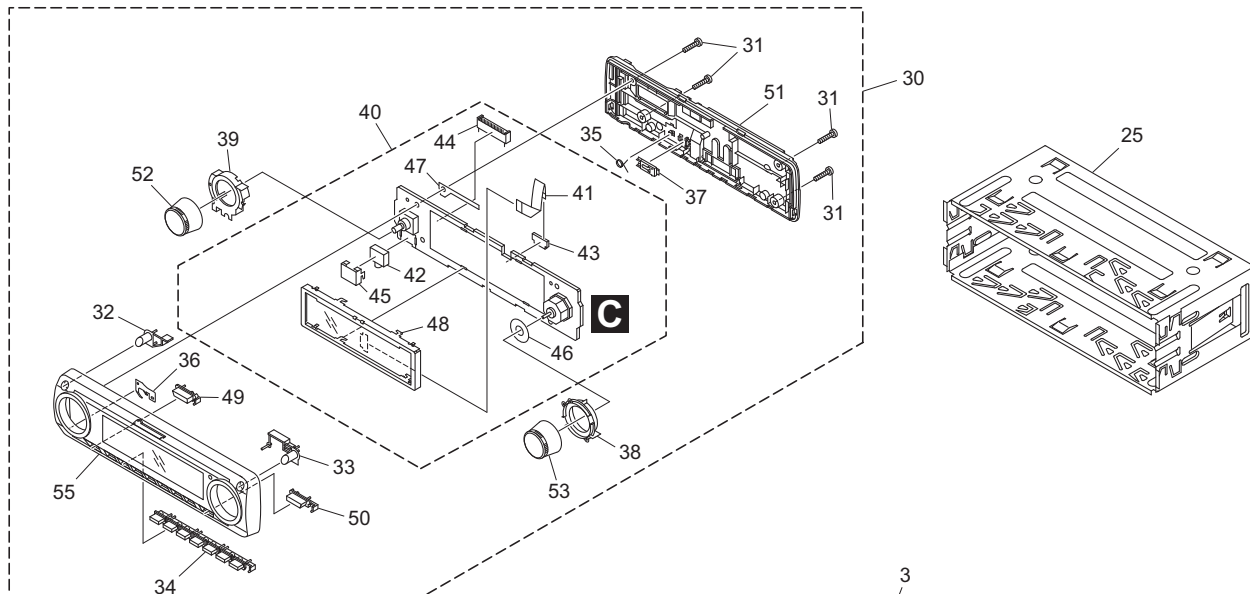


C

D

E

F

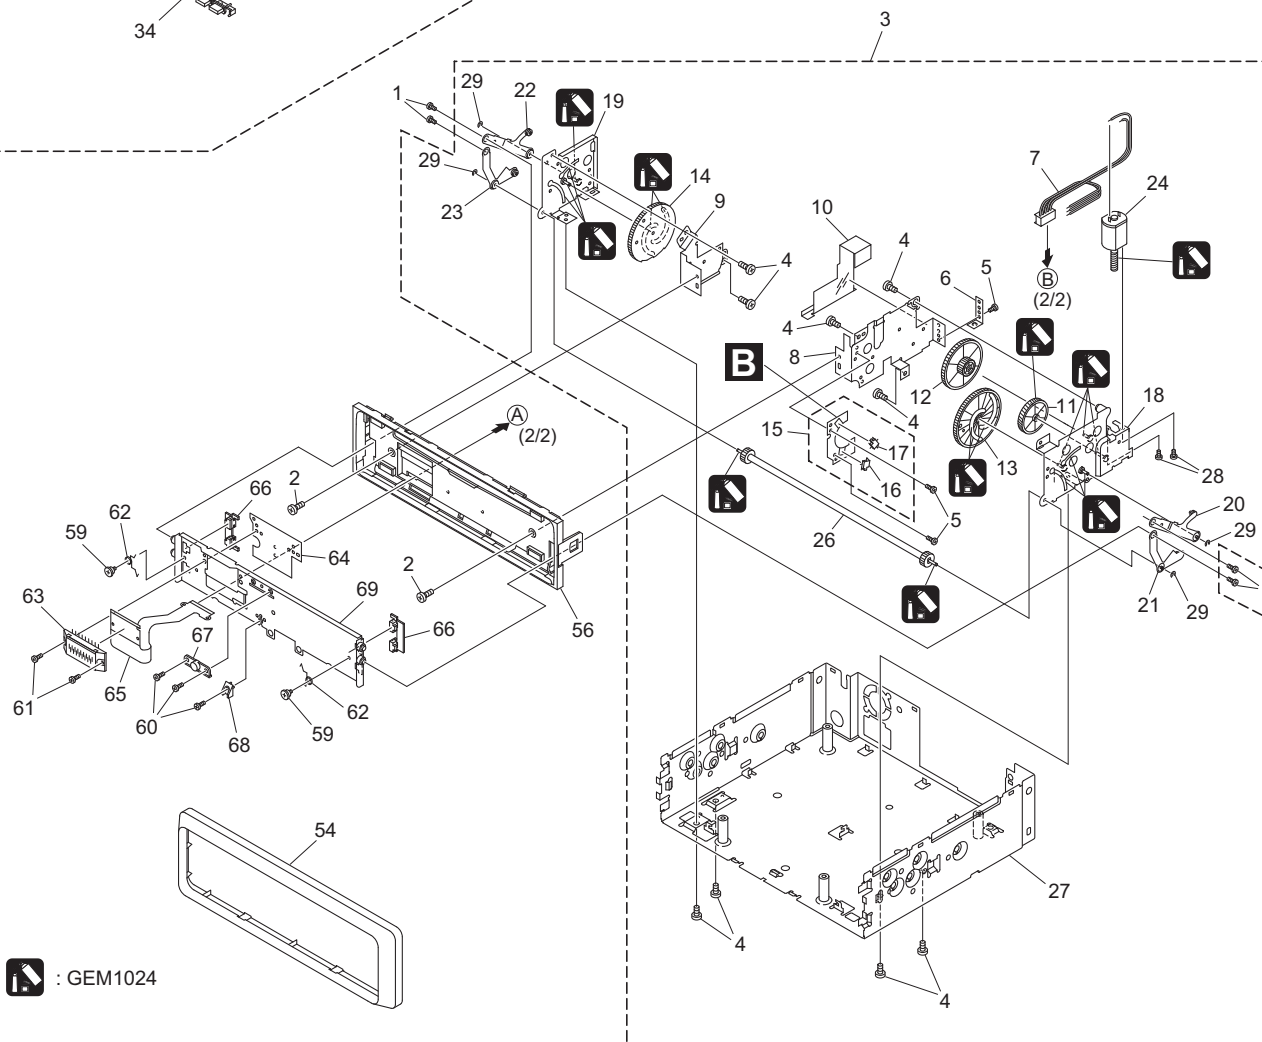

 : GEM1024

(1) EXTERIOR(1) SECTION PARTS LIST


Mark No.	Description	Part No.	Mark No.	Description	Part No.
1	Screw(M2x2.5)	CBA1641	36	Holder	CND2039
2	Screw(M2.6x4)	CBA1769	37	Arm	CNV6963
3	Drive Unit	See Contrast table(2)	38	Lighting Conductor	CNV7974
4	Screw	BMZ26P040FTC	39	Lighting Conductor	CNV7975
5	Screw	CBA1633	40	Keyboard Unit	CWM9270
6	Spring	CBL1632	41	Flat Cable	CDE7591
7	Cord	CDE7392	42	Jack(CN1902)	CKN1016
8	Holder	CND1848	43	Connector(CN1802)	CKS4792
9	Holder	CND1850	44	Connector(CN1903)	CKS4795
10	Insulator	CNM8797	45	Holder	CND1971
11	Gear	CNV7752	46	Sheet	CNM8658
12	Gear	CNV7753	47	Sheet	CNM9192
13	Gear	CNV7754	48	OEL Module	MXK8200
14	Gear	CNV7755	49	Button Unit(EQ)	CXC2684
15	Switch Unit	CWS1389	50	Button Unit(BAND/ESC)	CXC2685
16	Switch(S1)	CSN1051	51	Cover Unit	CXC2997
17	Spring Switch(S2)	CSN1052	52	Knob Unit	CXC3698
18	Holder Unit	CXC2196	53	Knob Unit	CXC3699
19	Holder Unit	CXC2197	54	Panel	CNS7795
20	Arm Unit	CXC2198	55	Sub Grille Assy	See Contrast table(2)
21	Arm Unit	CXC2199	56	Panel Unit	CXC2603
22	Arm Unit	CXC2200	57	Remote Control Unit	CXC2665
23	Arm Unit	CXC2201	58	Cover	CZN5357
24	Motor Unit(M571)	CXC2204	59	Screw(M2x2)	CBA1561
25	Holder	CNC8659	60	Screw(M2x2)	CBA1633
26	Gear Unit	CXC2205	61	Screw(M2x3.5)	CBA1754
27	Chassis Unit	See Contrast table(2)	62	Spring	CBH2530
28	Screw	JFZ20P025FTC	63	Connector	CKS4796
29	Washer	YE15FTC	64	Holder	CND2172
30	Detach Grille Assy	See Contrast table(2)	65	Flexible PCB	CNP7698
31	Screw	BPZ20P090FZK	66	Arm	CNV6962
32	Button(OPEN)	CAC8459	67	Guide	CNV6967
33	Button(RESET)	CAC8461	68	Guide	CNV8048
34	Button(1-6)	CAC8919	69	Case Unit	CXC2202
35	Spring	CBH2543			

(2) CONTRAST TABLE

DEH-P860MP/XN/UC DEH-P8600MP/XN/UC, and DEH-P8650MP/XN/ES are constructed the same except for the following:

Mark	NO	Description	DEH-P860MP/XN/UC	DEH-P8600MP/XN/UC	DEH-P8650MP/XN/ES
	3	Drive Unit	CXC3136	CXC3135	CXC3015
	27	Chassis Unit	CXC3134	CXC3133	CXC2998
	30	Detach Grille Assy	CXC2569	CXC2570	CXC2571
	55	Sub Grille Assy	CXC3738	CXC3737	CXC3736

2.4 EXTERIOR(2)

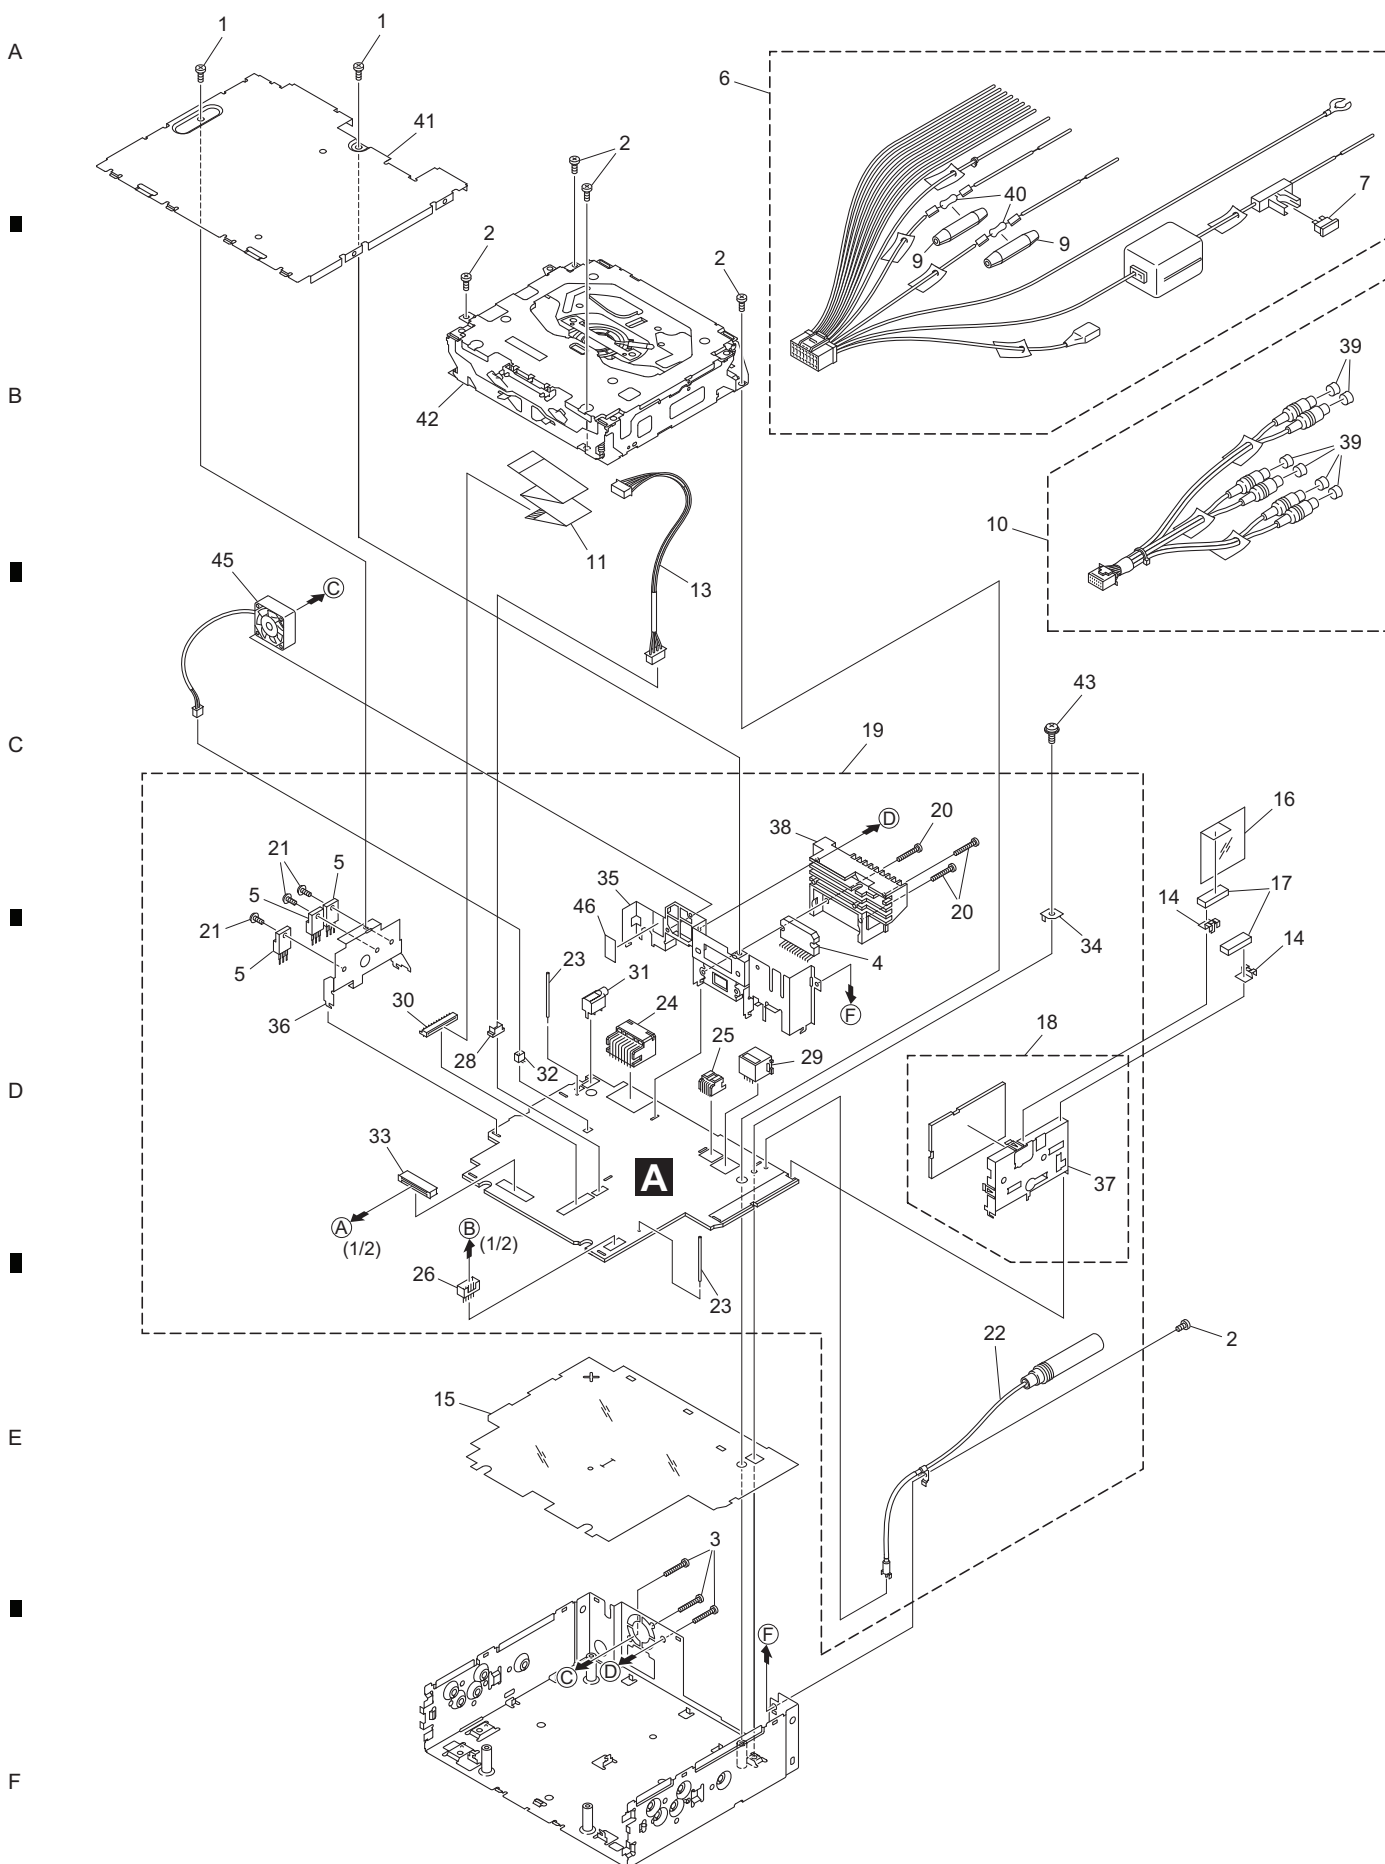

(1) EXTERIOR(2) SECTION PARTS LIST


Mark No.	Description	Part No.	Mark No.	Description	Part No.
1	Screw	BMZ26P060FZK	25	Connector(CN351)	CKM1389
2	Screw	BSZ26P060FTC	26	Plug(CN571)	CKS-786
3	Screw(M2.6x14)	CBA1632	27		
4	IC(IC301)	PAL007A	28	Connector(CN702)	CKS3126
5	Transistor(Q742,861,871)	2SD2396	29	Connector(CN101)	CKS3408
6	Cord Assy	CDE7701	30	Connector(CN701)	CKS3837
7	Fuse(10A)	CEK1136	31	Connector(CN931)	See Contrast table(2)
8			32	Connector(CN561)	CKS4571
9	Cap	CNS1472	33	Connector(CN801)	CKS4811
10	Cord Assy	See Contrast table(2)	34	Holder(CN401)	CNC5399
11	Flat Cable	CDE7468	35	Holder	CND2040
12			36	Holder	CND2041
13	Cord Assy	CDE7626	37	Holder	CND1054
14	Earth Plate	CND2171	38	Heat Sink	CNR1729
15	Insulator	CNM8659	39	Cap	CNV6727
16	Insulator	CNM8790	40	Resistor	RS1/2PMF102J
17	Cushion	CNM9126	41	Case Unit	CXC3476
18	FM/AM Tuner Unit	CWE1646	42	CD Mechanism Module(S10CODE)CXK5677	
19	Tuner Amp Unit	See Contrast table(2)	43	Screw	ISS26P055FTC
20	Screw	BMZ26P200FTC	44		
21	Screw	BSZ26P080FTC	45	Fan Motor(M561)	CXM1288
22	Antenna Cable(CN402)	CDH1336	46	Sheet	CNM8789
23	Clamper	CEF1033			
24	Plug(CN932)	CKM1278			

(2) CONTRAST TABLE

DEH-P860MP/XN/UC DEH-P8600MP/XN/UC, and DEH-P8650MP/XN/ES are constructed the same except for the following:

Mark	NO	Description	DEH-P860MP/XN/UC	DEH-P8600MP/XN/UC	DEH-P8650MP/XN/ES
	10	Cord Assy	CDE7436	CDE7437	CDE7436
	19	Tuner Amp Unit	CWM9266	CWM9267	CWM9268
	31	Connector(CN931)	CKS4124	CKS4124	Not used

2.5 CD MECHANISM MODULE

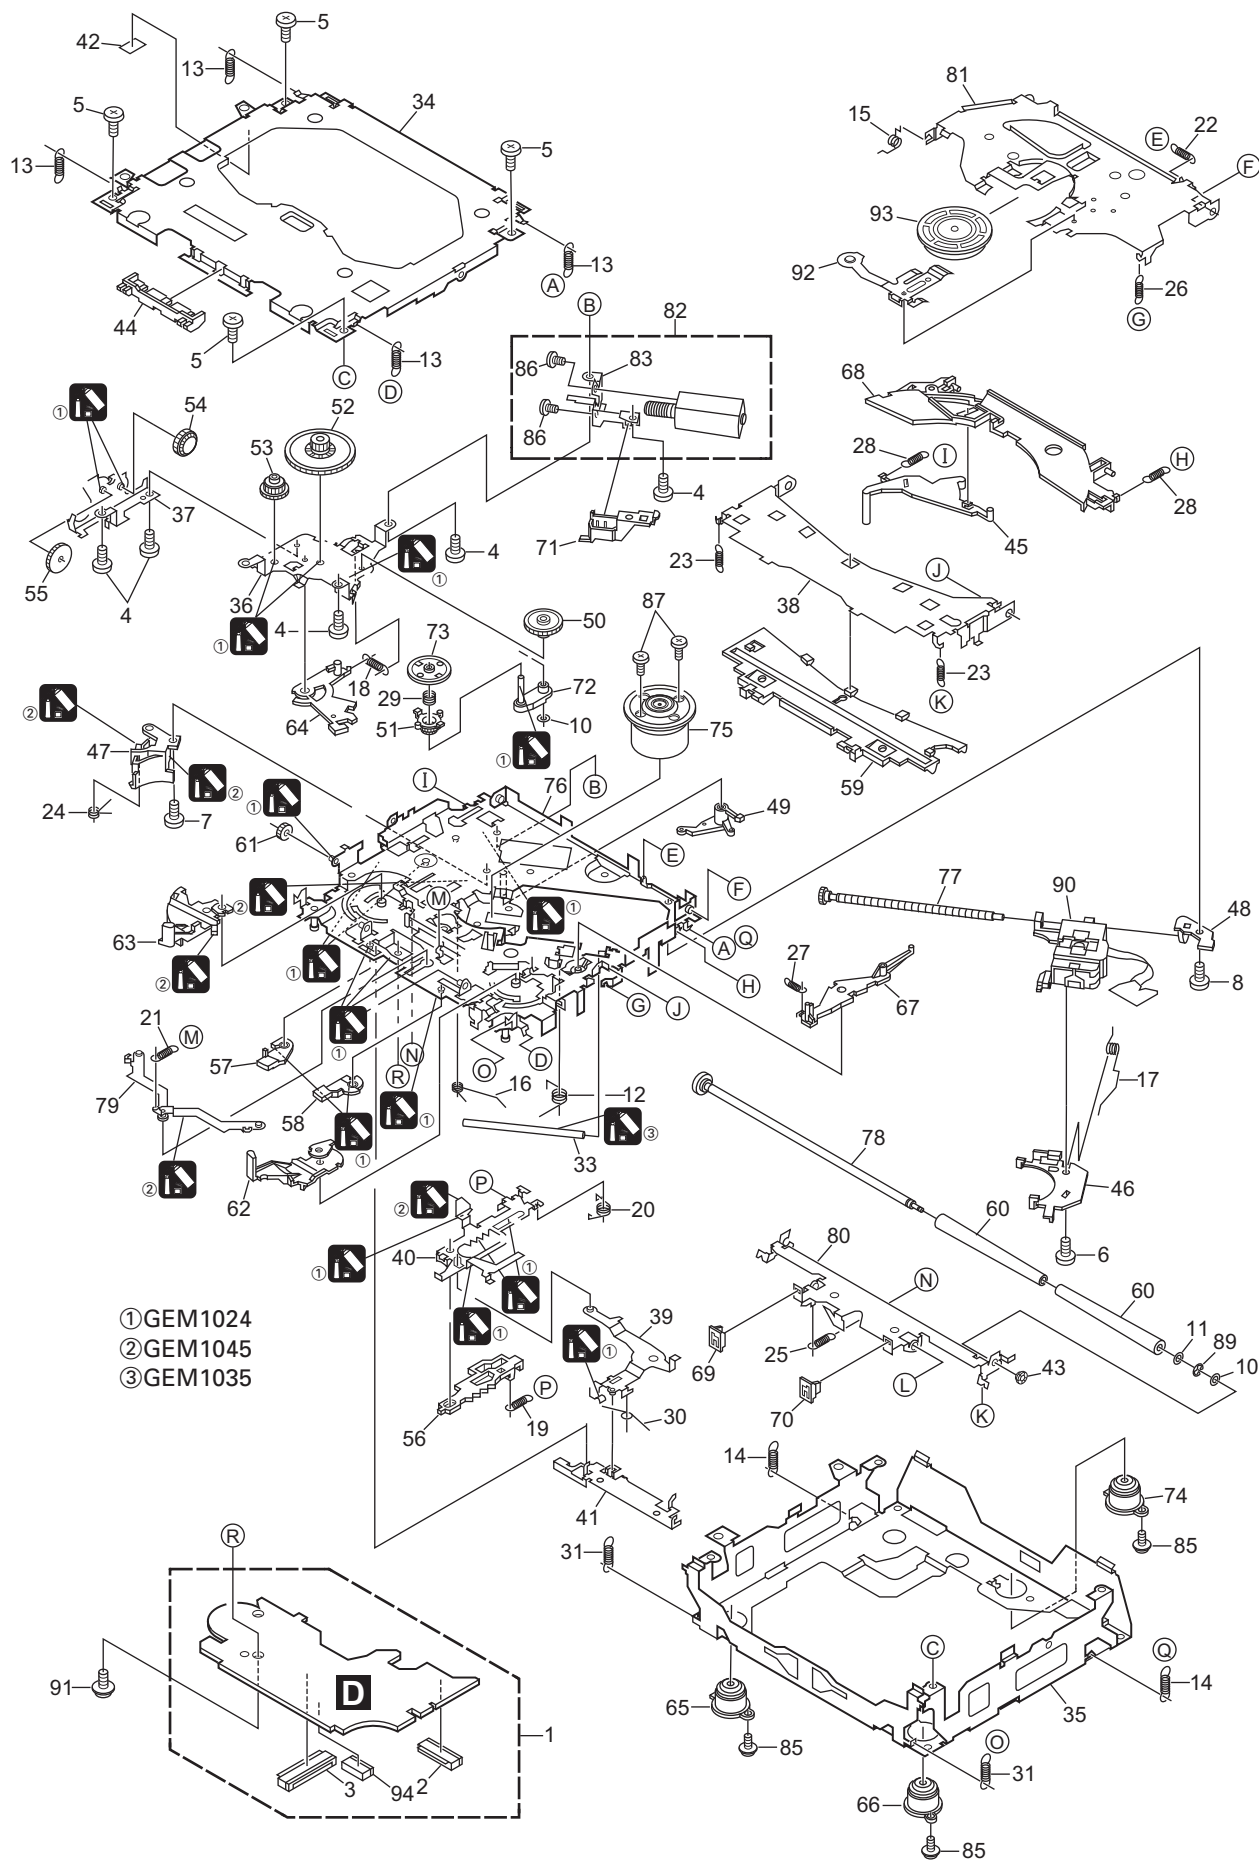

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	
1	CD Core Unit(S10WMA CODE2)	CWX2953				
2	Connector(CN101)	CKS4182	51	Gear	CNV7208	
3	Connector(CN901)	CKS4017	52	Gear	CNV7209	A
4	Screw	BMZ20P035FTC	53	Gear	CNV7210	
5	Screw	BSZ20P040FTC	54	Gear	CNV7211	
			55	Gear	CNV7212	
6	Screw(M2x4)	CBA1362				
7	Screw(M2x3)	CBA1511	56	Rack	CNV7214	
8	Screw(M2x3)	CBA1527	57	Arm	CNV7215	
9			58	Arm	CNV7216	
10	Washer	CBF1038	59	Guide	CNV7217	
			60	Roller	CNV7218	
11	Washer	CBF1060				
12	Spring	CBH2390	61	Gear	CNV7219	B
13	Spring	CBH2606	62	Arm	CNV7221	
14	Spring	CBH2607	63	Arm	CNV7220	
15	Spring	CBH2608	64	Arm	CNV7222	
			65	Damper	CNV7313	
16	Spring	CBH2609				
17	Spring	CBH2610	66	Damper	CNV7314	
18	Spring	CBH2735	67	Arm	CNV7341	
19	Spring	CBH2612	68	Arm	CNV7342	
20	Spring	CBH2613	69	Guide	CNV7360	
			70	Guide	CNV7361	C
21	Spring	CBH2614				
22	Spring	CBH2615	71	Holder	CNV7437	
23	Spring	CBH2616	72	Arm	CNV7805	
24	Spring	CBH2617	73	Gear	CNV7595	
25	Spring	CBH2620	74	Damper	CNV7618	
			75	Motor Unit(M1)	CXB6007	
26	Spring	CBH2621				
27	Spring	CBH2641	76	Chassis Unit	CXC2318	
28	Spring	CBH2642	77	Screw Unit	CXB8729	
29	Spring	CBH2643	78	Gear Unit	CXC2397	
30	Spring	CBH2659	79	Arm Unit	CXC2316	D
			80	Arm	CND1896	
31	Spring	CBH2688				
32			81	Arm	CND1894	
33	Shaft	CLA4441	82	Motor Unit(M2)	CXB8933	
34	Frame	CNC9962	83	Bracket	CNC9985	
35	Frame	CNC9963	84			
			85	Screw(M2x5)	EBA1028	
36	Bracket	CNC9966				
37	Bracket	CND1895	86	Screw	JFZ20P020FTC	
38	Arm	CNC9968	87	Screw	JGZ17P022FTC	
39	Arm	CND1909	88			E
40	Lever	CND2032	89	Washer	YE20FTC	
			90	Pickup Unit(P9.9MP3)(Service)	CXX1805	
41	Lever	CNC9984				
42	Sheet	CNM8134	91	Screw	IMS26P030FTC	
43	Collar	CNV7798	92	Spring	CBL1635	
44	Guide	CNV7799	93	Clamper	CNV7197	
45	Arm	CNV7800	94	Connector(CN902)	CKS2193	
46	Rack	CNV7199				
47	Holder	CNV7201				
48	Holder	CNV7202				F
49	Arm	CNV7203				
50	Gear	CNV7207				

5. ELECTRICAL PARTS LIST

NOTE:

- Parts whose parts numbers are omitted are subject to being not supplied.
- The part numbers shown below indicate chip components.

Chip Resistor

RS1/○○○○○J,RS1/○○S○○○○J

Chip Capacitor (except for CQS.....)

CKS....., CCS....., CSZS.....

- The $\triangle$ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.

Circuit Symbol and No.			Part No.	Circuit Symbol and No.			Part No.
A	Unit Number:CWM9266(P860MP)	Unit Number:CWM9267(P8600MP)	Unit Number:CWM9268(P8650MP)	Unit Name:Tuner Amp Unit	Q 561	Transistor	2SD1859
					Q 562	Transistor	IMD2A
					Q 571	Transistor	2SD1760F5
					Q 572	Transistor	IMD3A
					Q 651	Transistor	2SC3052-12
C	MISCELLANEOUS				Q 741	Transistor	IMD2A
					Q 742	Transistor	2SD2396
					Q 743	Transistor	2SD1767
					Q 744	Transistor	IMD2A
					Q 831	Transistor	2SB808
D					Q 832	Transistor	DTC114EU
					Q 841	Transistor	2SD1760F5
					Q 842	Transistor	IMD2A
					Q 851	Transistor	2SC3052-12
					Q 852	Transistor	2SD1767
E					Q 853	Transistor	IMD2A
					Q 861	Transistor	2SD2396
					Q 862	Transistor	IMD2A
					Q 871	Transistor	2SD2396
					Q 872	Transistor	2SB1243
F					Q 873	Transistor	RT1N141C-12
					Q 881	Transistor	2SD1760F5
					Q 882	Transistor	IMD2A
					Q 891	Transistor	DTC114EU
					Q 911	Transistor	IMX1
G					Q 921	Transistor	2SA1235A-12
					D 301	Diode	MPG06G-6415G50
					D 302	Diode	MPG06G-6415G50
					D 321	Diode (P860MP,P8650MP)	1SS396
						Diode (P8600MP)	DA204K
H					D 322	Diode (P860MP,P8650MP)	1SS396
					D 351	Diode	1SS133
					D 401	Diode	1SR154-400
					D 402	Diode	1SR154-400
					D 403	Diode	1SR154-400
I					D 451	Diode	DAN202U
					D 452	Diode	HZS9L(A2)
					D 501	Diode	HZU3R9(B1)
					D 502	Diode Network	DA204U
					D 521	Diode	UDZS3R9(B)
J					D 522	Diode	RB706F-40
					D 561	Diode	HZS11L(B2)
					D 571	Diode	1SS133
					D 572	Diode	1SS133
					D 573	Diode	HZS7L(B3)
K					D 651	Diode	MA111
L							
M							
N							
O							
P							
Q							
R							
S							
T							
U							
V							
W							
X							
Y							
Z							

<u>Circuit Symbol and No.</u>		<u>Part No.</u>	<u>Circuit Symbol and No.</u>		<u>Part No.</u>
D 741	Diode	HZS9L(B1)	BZ601	Buzzer	CPV1062
D 742	Diode	HZS6L(C1)	Y 401	FM/AM Tuner Unit	CWE1646
D 801	Diode Network	DA204U	RESISTORS		
D 802	Diode Network	DA204U			
D 803	Diode Network	DA204U	R 101		RS1/16S181J
D 804	Diode Network	DA204U	R 102		RS1/16S181J
D 805	Diode Network	DA204U	R 103		RS1/16S223J
D 806	Diode Network	DA204U	R 104		RS1/16S223J
D 807	Diode Network	DA204U	R 105		RS1/16S102J
D 841	Diode	HZS9L(C2)	R 106		RS1/16S102J
D 851	Diode	HZU10(B2)	R 107		RS1/16S222J
D 852	LED	SML310BA1T	R 108		RS1/16S150J
D 861	Diode	HZS9L(B3)	R 109		RS1/16S470J
D 862	Diode	DAN202U	R 110		RS1/16S101J
D 871	Diode	HZS9L(B2)	R 111		RS1/16S101J
D 881	Diode	HZS6L(B1)	R 112		RS1/16S102J
D 882	Diode	MPG06G-6415G50	R 113		RS1/16S562J
D 901	Diode	MPG06G-6415G50	R 114		RS1/16S332J
D 902	Diode	MPG06G-6415G50	R 115		RS1/16S472J
D 903	Diode	MPG06G-6415G50	R 121		RS1/16S101J
D 911	Diode	HZS7L(C3)	R 123		RAB4C101J
D 912	Diode	HZS7L(A1)	R 126		RAB4C101J
D 921	Diode	DAN202U	R 130		RAB4C681J
D 931	Diode (P860MP,P8600MP)	DAN202U	R 134		RS1/16S562J
D 932	Diode (P860MP,P8600MP)	DAP202U	R 135		RS1/16S472J
ZNR401	Surge Protector	RCCA-201Q31UA-PI	R 136		RS1/16S222J
L 101	Inductor	LCTC4R7K2125	R 141		RAB4C681J
L 121	Inductor	LCTA1R0J2520	R 181		RAB4C101J
L 122	Inductor	LCTA1R0J2520	R 184		RS1/16S101J
L 123	Inductor	CTF1379	R 185		RAB4C101J
L 124	Inductor	CTF1379	R 188		RAB4C101J
L 125	Inductor	CTF1389	R 191		RS1/16S101J
L 126	Inductor	CTF1379	R 192		RAB4C101J
L 181	Inductor	CTF1379	R 195		RAB4C101J
L 182	Inductor	CTF1379	R 198		RS1/16S101J
L 184	Inductor	CTF1379	R 199		RAB4C101J
L 185	Inductor	CTF1379	R 211		RN1/16SE1202D
L 186	Inductor	CTF1379	R 212		RN1/16SE1202D
L 187	Inductor	CTF1379	R 213		RN1/16SE3901D
L 281	Inductor	LCTA2R2J2520	R 214		RN1/16SE3901D
L 321	Ferri-Inductor	LAU101J	R 215		RN1/16SE1002D
L 401	Inductor	LCTA4R7J2520	R 216		RN1/16SE1002D
L 402	Inductor	LAYU1R0K	R 217		RN1/16SE1502D
L 403	Inductor	LAYU100K	R 218		RN1/16SE1502D
L 404	Inductor	LAYU1R0K	R 219		RN1/16SE1202D
L 602	Inductor	LAYU100K	R 220		RN1/16SE1202D
L 661	Inductor	LCTC4R7K1608	R 221		RN1/16SE3901D
L 662	Inductor	LCTC4R7K1608	R 222		RN1/16SE3901D
L 701	Inductor	LAYU100K	R 223		RN1/16SE1002D
L 801	Inductor	LCTC1R0K1608	R 224		RN1/16SE1002D
L 803	Inductor	CTF1379	R 225		RN1/16SE1502D
L 921	Inductor	CTF1530	R 226		RN1/16SE1502D
L 941	Inductor	LCTA1R0J2520	R 227		RN1/16SE1202D
L 942	Inductor	LCTA1R0J2520	R 228		RN1/16SE1202D
X 121	Radiator 16.934MHz	CSS1620	R 229		RN1/16SE3901D
X 601	Radiator 10.00MHz	CSS1475	R 230		RN1/16SE3901D
S 551	Slide Switch(DSP) (P860MP,P8650MP)	CSH1051	R 231		RN1/16SE1002D
VR521	Semi-fixed 10kΩ(B)	CCP1448	R 232		RN1/16SE1002D
FU351	Fuse 3A △	CEK1286	R 233		RN1/16SE1502D
MIC521	Microphone	CPM1011			

Circuit Symbol and No.**Part No.****Circuit Symbol and No.****Part No.**

R 234 RN1/16SE1502D
 R 261 RN1/16SE3300D
 R 262 RN1/16SE3300D
 R 263 RN1/16SE3300D
 R 264 RN1/16SE3300D

R 402 RS1/16S681J
 R 403 RS1/16S681J
 R 404 RS1/16S681J
 R 405 RS1/16S681J
 R 406 RS1/16S681J

R 265 RN1/16SE4702D
 R 266 RN1/16SE4702D
 R 267 RN1/16SE4702D
 R 268 RN1/16SE4702D
 R 269 RN1/16SE4702D

R 452 RS1/16S103J
 R 453 RS1/16S223J
 R 454 RS1/16S473J
 R 501 RS1/16S682J
 R 502 RS1/16S152J

R 270 RN1/16SE4702D
 R 271 RS1/16S563J
 R 272 RS1/16S473J
 R 273 RS1/16S473J
 R 274 RS1/16S473J

R 503 RS1/16S683J
 R 504 RS1/16S153J
 R 505 RS1/16S561J
 R 506 RS1/16S222J
 R 507 RS1/16S104J

R 275 RN1/16SE4702D
 R 276 RN1/16SE4702D
 R 282 RS1/16S682J
 R 283 RS1/16S0R0J
 R 284 RS1/16S0R0J

R 521 RS1/16S103J
 R 522 RS1/16S153J
 R 523 RS1/16S153J
 R 524 RS1/16S103J
 R 525 RS1/16S223J

R 285 RS1/16S0R0J
 R 286 RS1/16S0R0J
 R 287 RS1/16S0R0J
 R 288 RS1/16S0R0J
 R 289 RS1/16S103J

R 526 RS1/16S102J
 R 527 RS1/16S563J
 R 528 RS1/16S101J
 R 529 RS1/16S152J
 R 530 RS1/16S152J

R 290 RS1/16S222J
 R 291 RS1/16S332J
 R 301 RS1/16S103J
 R 302 RS1/16S103J
 R 303 RS1/16S103J

R 531 RS1/16S104J
 R 532 RS1/16S222J
 R 533 RS1/16S104J
 R 534 RS1/16S104J
 R 551 (P8600MP) RS1/16S473J

R 304 RS1/16S331J
 R 321 RS1/16S103J
 R 322 RS1/16S103J
 R 329 RS1/16S0R0J
 R 351 RS1/16S820J

R 552 (P860MP,P8650MP) RS1/16S0R0J
 R 553 (P860MP,P8650MP) RS1/16S473J
 R 561 RS1/16S1R0J
 R 562 RS1/16S391J
 R 571 RS1/16S102J

R 352 RS1/16S820J
 R 353 RS1/16S103J
 R 354 RS1/16S103J
 R 355 RS1/16S223J
 R 356 RS1/16S223J

R 572 RS1/16S102J
 R 573 RS1/16S102J
 R 574 RS1/16S102J
 R 575 RS1/16S471J
 R 576 RS1/16S471J

R 357 RS1/16S471J
 R 358 RS1/16S471J
 R 359 RS1/16S820J
 R 360 RS1/16S820J
 R 361 RS1/16S103J

R 601 RS1/16S104J
 R 602 RS1/16S472J
 R 603 RS1/16S104J
 R 604 RS1/16S104J
 R 605 RS1/16S104J

R 362 RS1/16S103J
 R 363 RS1/16S223J
 R 364 RS1/16S223J
 R 365 RS1/16S471J
 R 366 RS1/16S471J

R 606 RS1/16S223J
 R 607 RS1/16S104J
 R 608 RS1/16S473J
 R 609 RS1/16S0R0J
 R 612 RS1/16S104J

R 367 RS1/16S820J
 R 368 RS1/16S820J
 R 369 RS1/16S103J
 R 370 RS1/16S103J
 R 371 RS1/16S223J

R 613 RS1/16S104J
 R 614 RS1/16S681J
 R 615 RS1/16S681J
 R 616 RS1/16S681J
 R 617 RS1/16S473J

R 372 RS1/16S223J
 R 373 RS1/16S471J
 R 374 RS1/16S471J
 R 375 RS1/16S102J
 R 401 RS1/16S681J

R 618 (P8600MP) RS1/16S104J
 R 619 (P860MP,P8650MP) RS1/16S104J
 R 621 (P8650MP) RS1/16S104J
 R 622 RS1/16S102J
 R 626 (P860MP,P8600MP) RS1/16S104J

Circuit Symbol and No.**Part No.****Circuit Symbol and No.****Part No.**

C 193 CCSRCH102J50
 C 194 CKSYB106K6R3
 C 196 CCSRCH102J50
 C 197 CKSYB106K6R3
 C 199 CKSYB106K6R3

C 294
 C 301
 C 302
 C 303
 C 304

CKSRYB104K16
 CFTNA224J50
 CFTNA224J50
 CFTNA224J50
 CFTNA224J50

C 200 CCSRCH102J50
 C 201 CKSYB106K6R3
 C 202 CCSRCH101J50
 C 211 CEAL4R7M16
 C 212 CEAL4R7M16

C 305
 C 306
 C 307
 C 308
 C 309

3300μF/16V

CEHAR330M10
 CCH1486
 CKSRYB104K16
 CEHAR100M16
 CKSQYB225K10

C 213 CCSRCH181J50
 C 214 CCSRCH181J50
 C 215 CCSRCH821J50
 C 216 CCSRCH821J50
 C 217 CEALNP4R7M16

C 310
 C 321
 C 322
 C 323
 C 324

CKSQYB225K10
 CKSRYB105K10
 CKSRYB105K10
 CKSRYB105K10
 CKSRYB105K10

C 218 CEALNP4R7M16
 C 219 CEAL4R7M16
 C 220 CEAL4R7M16
 C 221 CCSRCH181J50
 C 222 CCSRCH181J50

C 325
 C 326
 C 327
 C 328
 C 329

CKSRYB105K10
 CKSRYB105K10
 CEJQ4R7M35
 CEJQ101M16
 CASAQ3R3M16

C 223 CCSRCH821J50
 C 224 CCSRCH821J50
 C 225 CEALNP4R7M16
 C 226 CEALNP4R7M16
 C 227 CEAL4R7M16

C 330
 C 331
 C 332
 C 333
 C 334

CEJQ100M16
 CKSYB684K16
 CEJQ220M16
 CKSRYB105K10
 CEJQ330M25

C 228 CEAL4R7M16
 C 229 CCSRCH181J50
 C 230 CCSRCH181J50
 C 231 CCSRCH821J50
 C 232 CCSRCH821J50

C 335
 C 336
 C 337
 C 351
 C 352

(P860MP,P8650MP)
(P860MP,P8650MP)

CEJQ330M25
 CEJQ330M25
 CEJQ330M25
 CEJQ100M50
 CEJQ100M50

C 233 CEALNP4R7M16
 C 234 CEALNP4R7M16
 C 235 CKSRYB104K16
 C 236 CKSRYB104K16
 C 237 CKSRYB104K16

C 353
 C 354
 C 355
 C 356
 C 357

CKSRYB222K50
 CKSRYB222K50
 CEJQ100M50
 CEJQ100M50
 CKSRYB222K50

C 261 CCSRCH102J50
 C 262 CCSRCH102J50
 C 263 CCSRCH470J50
 C 264 CCSRCH470J50
 C 265 CCSRCH470J50

C 358
 C 359
 C 360
 C 361
 C 362

CKSRYB222K50
 CEJQ100M50
 CEJQ100M50
 CKSRYB222K50
 CKSRYB222K50

C 266 CCSRCH470J50
 C 267 CKSQYB225K10
 C 268 CKSQYB225K10
 C 269 CKSRYB105K10
 C 270 CKSRYB104K16

C 363
 C 364
 C 401
 C 402
 C 403

CEJQ220M16
 CKSRYB473K50
 CKSYB475K10
 CKSRYB103K50
 CEJQ470M6R3

C 271 CSZS100M10
 C 272 CSZS100M10
 C 281 CKSRYB472K50
 C 282 CKSRYB472K50
 C 283 CSZS100M10

C 404
 C 405
 C 406
 C 407
 C 408

CKSRYB103K50
 CEJQ101M16
 CKSRYB103K50
 CEJQ220M6R3
 CCSRCH101J50

C 284 CKSRYB104K16
 C 285 CKSQYB225K10
 C 286 CKSRYB104K16
 C 287 CKSQYB225K10
 C 288 CKSQYB225K10

C 409
 C 410
 C 411
 C 501
 C 502

CKSRYB103K50
 CKSYB475K10
 CCSRCH102J50
 CKSQYB225K10
 CEJQ101M6R3

C 289 CSZS100M10
 C 290 CKSQYB225K10
 C 291 CKSRYB105K10
 C 292 CKSQYB225K10
 C 293 CKSRYB104K16

C 503
 C 521
 C 522
 C 523
 C 524

CCSRCH681J50
 CKSRYB105K10
 CEALNP4R7M16
 CEALNP4R7M16
 CKSRYB105K10

<u>Circuit Symbol and No.</u>		<u>Part No.</u>	<u>Circuit Symbol and No.</u>		<u>Part No.</u>
C 525		CKSRYB474K10	C 948		CKSRYB104K16
C 526		CKSRYB104K16	C 949		CKSYB475K10
C 527		CCSRCH101J50	C 961		CEAL470M6R3
C 528		CKSRYB105K10	C 962		CKSRYB104K16
C 529		CEAL100M16	C 964		CKSRYB104K16
C 530		CKSRYB105K10	C 965		CKSYB475K10
C 531		CKSRYB105K6R3	B Unit Number:CWS1389 Unit Name:Switch Unit		
C 532		CKSRYB105K6R3			
C 561		CEJQ100M16	S 1	Switch(CLOSE)	CSN1051
C 562		CKSRYB103K50	S 2	Switch(OPEN)	CSN1052
C 563		CKSRYB103K50	C Unit Number:CWM9270 Unit Name:Keyboard Unit		
C 571		CCSRCH101J50			
C 572		CCSRCH102J50	MISCELLANEOUS		
C 573		CEJQ220M16			
C 574		CCSRCH101J50	IC 1802	IC	S-818A33AUC-BGN
C 575		CKSRYB104K16	IC 1805	IC	PD5943A
C 576		CKSRYB224K10	IC 1806	IC	PD8124A
C 601		CCSRCH180J50	IC 1807	IC	PD6468A
C 602		CCSRCH220J50	IC 1808	IC	TC7WH32FK
C 604		CCSRCH470J50	IC 1901	IC	RS-140
C 605		CEJQ4R7M35	Q 1806	Transistor	UMD2N
C 606		CKSRYB103K50	Q 1906	Transistor	2SC3052-12
C 652		CKSRYB104K16	D 1803	Diode	1SS355
C 653		CKSRYB105K10	D 1901	LED	SML310BA1T
C 661		CKSRYB104K16	D 1902	LED	SML310BA1T
C 662		CKSRYB104K16	D 1903	LED	SML310BA1T
C 703	470μF/10V	CCH1438	D 1904	LED	SML310BA1T
C 741		CKSRYB473K25	D 1905	LED	SML310BA1T
C 742		CCSRCH102J50	D 1906	LED	SML310BA1T
C 743		CEJQ101M16	D 1907	LED	SML310BA1T
C 744		CKSRYB473K25	D 1908	LED	SML310BA1T
C 745		CEHAR101M10	D 1909	LED	SML310BA1T
C 801		CKSRYB473K25	D 1910	LED	SML310BA1T
C 802		CKSRYB103K50	D 1911	LED	SML310BA1T
C 803		CKSRYB102K50	D 1912	LED	SML310BA1T
C 805		CEJQ101M16	D 1913	LED	SML310BA1T
C 815		CKSRYB104K16	D 1914	LED	SML310BA1T
C 816		CKSRYB104K16	D 1915	LED	SML310BA1T
C 842		CKSRYB103K50	D 1916	LED	SML310BA1T
C 843		CEJQ330M16	D 1917	LED	SML310BA1T
C 844		CCSRCH101J50	L 1801	Inductor	CTF1530
C 851		CKSRYB473K25	L 1802	Inductor	CTF1484
C 861		CEJQ221M10	L 1803	Inductor	CTF1530
C 862		CKSRYB472K50	L 1804	Inductor	CTF1399
C 863		CEJQ2R2M50	X 1801	Radiator 10.0MHz	CSS1577
C 871		CEJQ221M10	S 1901	Push Switch	CSG1155
C 872		CKSRYB103K50	S 1902	Push Switch	CSG1155
C 873		CEJQ101M16	S 1903	Push Switch	CSG1155
C 881		CEAL470M6R3	S 1904	Push Switch	CSG1155
C 882		CKSRYB103K50	S 1905	Push Switch	CSG1155
C 883		CKSRYB472K50	S 1906	Push Switch	CSG1155
C 884	470μF/16V	CCH1331	S 1907	Push Switch	CSG1155
C 885	470μF/16V	CCH1331	S 1908	Push Switch	CSG1155
C 891		CKSRYB105K10			
C 911		CKSRYB104K16			
C 942		CCSRCH101J50			
C 943		CKSRYB102K50			
C 944		CEAL101M6R3			
C 945		CEAL220M6R3			
C 946		CKSRYB105K6R3			

Circuit Symbol and No.**Part No.**

S 1909	Push Switch	CSG1155
S 1910	Push Switch	CSG1155
S 1911	Push Switch	CSG1155
S 1912	Encoder(SOURCE/VOLUME)	CSD1104
S 1913	Switch(MULTI-CONTROL)	CSX1065
S 1914	Push Switch	CSG1155

Circuit Symbol and No.**Part No.**

R 1919	RS1/16S221J
R 1921	RS1/16S221J
R 1923	RS1/16S221J
R 1925	RS1/16S221J
R 1927	RS1/16S821J
R 1929	RS1/16S221J
R 1931	RS1/16S221J
R 1933	RS1/16S221J
R 1935	RS1/16S221J
R 1938	RS1/16SS222J
R 1939	RS1/16SS332J
R 1940	RS1/16SS822J
R 1941	RS1/16SS4702D
R 1942	RS1/16SS102J
R 1943	RS1/16SS102J
R 1945	RS1/16SS103J
R 1946	RS1/16SS221J

RESISTORS

R 1807	RS1/16SS222J
R 1808	RS1/16SS222J
R 1809	RS1/16SS101J
R 1810	RS1/16SS101J
R 1811	RS1/16SS473J
R 1812	RS1/16SS104J
R 1815	RS1/16SS101J
R 1816	RS1/16SS101J
R 1817	RS1/16SS101J
R 1818	RS1/16SS101J
R 1819	RAB4CQ101J
R 1820	RS1/16SS222J
R 1821	RS1/16SS154J
R 1822	RS1/16SS473J
R 1824	RS1/16SS473J
R 1825	RS1/16SS473J
R 1826	RS1/16SS473J
R 1827	RS1/16SS473J
R 1828	RS1/16SS473J
R 1829	RS1/16SS473J
R 1830	RS1/16SS473J
R 1831	RS1/16SS102J
R 1832	RS1/16SS0R0J
R 1834	RAB4CQ473J
R 1835	RAB4CQ101J
R 1836	RAB4CQ101J
R 1837	RAB4CQ101J
R 1838	RAB4CQ101J
R 1839	RAB4CQ101J
R 1840	RAB4CQ101J
R 1841	RAB4CQ101J
R 1842	RAB4CQ101J
R 1843	RAB4CQ101J
R 1844	RAB4CQ101J
R 1845	RS1/16SS473J
R 1846	RS1/16SS473J
R 1847	RS1/16SS473J
R 1849	RS1/16SS392J
R 1850	RS1/16SS682J
R 1851	RAB4CQ101J
R 1852	RS1/16SS101J
R 1853	RS1/16SS101J
R 1854	RS1/16SS0R0J
R 1903	RS1/16SS274J
R 1904	RS1/16SS103J
R 1905	RS1/16SS121J
R 1906	RS1/16SS2R2J
R 1916	RS1/16SS104J
R 1917	RS1/16SS223J
R 1918	RS1/16SS103J

CAPACITORS

C 1806	CSZSP4R7M10
C 1808	CKSRYB474K10
C 1809	CKSSYB103K16
C 1810	CKSSYB103K16
C 1814	CKSSYB473K10
C 1816	CKSSYB103K16
C 1817	CSZSP4R7M10
C 1822	CKSSYB103K16
C 1826	CKSSYB103K16
C 1827	CKSSYB103K16
C 1833	CCG1138
C 1901	CKSRYB104K16
C 1902	CKSRYB104K16
C 1903	CKSRYB104K16
C 1904	CKSRYB104K16
C 1905	CKSRYB104K16
C 1906	CKSRYB104K16
C 1907	CKSRYB104K16
C 1908	CKSRYB104K16
C 1909	CKSRYB104K16
C 1910	CKSRYB104K16
C 1911	CKSRYB104K16
C 1912	CKSRYB104K16
C 1913	CKSRYB104K16
C 1914	CKSRYB104K16
C 1915	CKSRYB104K16
C 1916	CKSRYB104K16
C 1917	CKSRYB104K16
C 1918	CKSSYB104K10
C 1919	CKSSYB104K10
C 1920	CSZSR100M16

D**Unit Number: CWX2953****Unit Name: CD CORE UNIT(S10WMA CODE2)****MISCELLANEOUS**

IC 201	IC	UPD63761GJ
IC 203	IC	NJM2391DL1-33

<u>Circuit Symbol and No.</u>		<u>Part No.</u>	<u>Circuit Symbol and No.</u>	<u>Part No.</u>
IC 301	IC	BA5835FM	R 261	RS1/16S0R0J
IC 501	IC	S-L2980A15MC-C6A	R 262	RS1/16S0R0J
IC 701	IC	PE5423A	R 263	RS1/16S0R0J
IC 703	IC	S-812C33AJA-C2N	R 264	RS1/16S0R0J
Q 101	Transistor	2SB1132	R 267	RS1/16S0R0J
Q 701	Transistor	UN2111	R 301	RS1/16SS183J
D 101	Diode	1SS355	R 302	RS1/16SS822J
L 203	Inductor	CTF1389	R 304	RS1/16SS183J
L 207	Inductor	CTF1389	R 305	RS1/16SS822J
L 209	Inductor	CTF1389	R 307	RS1/16SS183J
L 703	Inductor	CTF1389	R 308	RS1/16SS183J
L 902	Inductor	CTF1306	R 309	RS1/16SS183J
L 903	Inductor	CTF1306	R 310	RS1/16SS183J
L 904	Inductor	CTF1306	R 501	RS1/16SS0R0J
X 702	Resonator 4.00MHz	CSS1654	R 701	RS1/16S0R0J
S 901	Switch(HOME)	CSN1051	R 702	RS1/16SS0R0J
S 902	Switch(CLAMP)	CSN1051	R 703	RS1/16SS104J
S 903	Spring Switch(DSCSNS)	CSN1052	R 704	RS1/16SS104J
S 904	Switch(12EJ)	CSN1051	R 705	RS1/16SS221J
S 905	Switch(8EJ)	CSN1051	R 706	RS1/16SS221J
			R 707	RS1/16SS0R0J
			R 708	RS1/16SS221J
			R 709	RS1/16SS473J

RESISTORS

R 101	RS1/10S1R5J			
R 102	RS1/10S1R5J	R 710	RS1/16SS102J	
R 103	RS1/10S1R5J	R 711	RS1/16SS102J	
R 104	RS1/10S1R5J	R 712	RS1/16SS102J	
R 105	RS1/10S1R5J	R 713	RS1/16SS102J	
		R 714	RS1/16SS473J	
R 107	RS1/16SS0R0J			
R 201	RS1/16SS102J	R 715	RS1/16SS101J	
R 202	RS1/16SS333J	R 716	RS1/16SS472J	
R 205	RS1/16SS473J	R 717	RS1/16SS221J	
R 207	RS1/16SS473J	R 718	RS1/16SS221J	
		R 719	RS1/16SS221J	
R 209	RS1/16SS473J			
R 210	RS1/16SS0R0J	R 720	RS1/16SS471J	
R 214	RS1/16SS472J	R 721	RS1/16S0R0J	
R 216	RS1/16SS472J	R 724	RS1/16S473J	
R 218	RS1/16SS472J	R 725	RS1/16SS222J	
		R 726	RS1/16SS103J	
R 220	RS1/16SS472J			
R 221	RS1/16SS103J	R 727	RS1/16SS473J	
R 222	RS1/16SS103J	R 729	RS1/16SS223J	
R 223	RS1/16SS0R0J	R 730	RS1/16SS473J	
R 224	RS1/16SS0R0J	R 731	RS1/16SS104J	
		R 732	RS1/16SS104J	
R 225	RS1/16SS103J			
R 226	RS1/16SS393J	R 733	RS1/16SS104J	
R 227	RS1/16SS562J	R 735	RS1/16SS473J	
R 228	RS1/16SS122J	R 737	RS1/16SS104J	
R 229	RS1/16SS472J	R 740	RS1/16SS473J	
		R 743	RS1/16SS104J	
R 231	RS1/16SS0R0J			
R 232	RS1/16SS122J	R 745	RS1/16SS473J	
R 233	RS1/16SS0R0J	R 746	RS1/16SS104J	
R 237	RS1/16SS221J	R 747	RS1/16SS102J	
R 238	RS1/16SS221J	R 750	RS1/16SS473J	
		R 751	RS1/16SS102J	
R 239	RS1/16SS221J			
R 240	RS1/16SS0R0J	R 754	RS1/16SS102J	
R 241	RS1/16SS333J	R 755	RS1/16SS102J	
R 243	RS1/16SS333J	R 756	RS1/16SS104J	
R 245	RS1/16SS333J	R 765	RAB4CQ221J	
		R 769	RAB4CQ221J	
R 250	RS1/16SS0R0J			
R 256	RS1/16SS0R0J	R 773	RAB4CQ221J	
		R 777	RS1/16SS221J	

Circuit Symbol and No.**Part No.**

R 778	RS1/16SS221J
R 779	RS1/16SS221J
R 901	RAB4CQ221J
R 902	RS1/16S0R0J
R 905	RS1/16SS221J
R 906	RS1/16SS221J
R 909	RS1/16SS0R0J
R 911	RS1/16SS0R0J

CAPACITORS

C 101	CKSSYB104K10
C 102	CKSSYB104K10
C 103	100μF/16V
C 104	47μF/6.3V
C 105	CCH1504
	CCH1506
	CKSSYB104K10

C 106	CCSSCH101J50
C 107	CKSRYB224K16
C 108	CKSSYB104K10
C 110	CKSSYB104K10
C 201	CKSSYB471K50

C 202	CKSSYB104K10
C 203	CKSSYB104K10
C 205	CKSSYB104K10
C 207	220μF/4V
C 208	CCH1590
	CKSSYB104K10

C 209	CKSSYB104K10
C 216	CKSSYB332K50
C 217	CKSSYB104K10
C 218	CKSSYB223K16
C 219	CKSSYB104K10

C 220	CKSSYB103K16
C 221	CKSSYB104K10
C 222	CCSSCH560J50
C 223	CCSSCH5R0C50
C 224	CKSSYB104K10

C 225	CKSSYB103K16
C 226	CCSSCH680J50
C 227	CCSSCH470J50
C 228	CKSSYB682K25
C 230	CKSSYB104K10

C 232	CKSSYB104K10
C 233	10μF/6.3V
C 234	220μF/4V
C 235	CCH1470
C 237	CCH1590
	CKSRYB224K16
	CKSSYB104K10

C 239	CCSSCH330J50
C 242	CKSSYB104K10
C 246	CKSSYB104K10
C 249	CKSSYB221K50
C 250	CKSRYB102K50

C 251	CKSRYB102K50
C 260	CKSSYB104K10
C 301	CKSSYB221K50
C 302	CKSSYB221K50
C 303	CKSSYB472K25

C 304	CKSSYB103K16
C 305	100μF/16V
C 306	CCH1504
C 307	CKSSYB104K10
C 501	CKSSYB104K10
	CKSRYB224K16

Circuit Symbol and No.**Part No.**

C 505	CKSQYB475K6R3
C 701	CKSSYB104K10
C 702	CKSSYB471K50
C 703	CKSSYB103K16
C 704	4.7μF/25V
	CCH1592
C 706	CKSSYB104K10
C 707	CKSSYB104K10
C 712	CKSRYB224K16
C 713	CKSSYB104K10
C 714	CKSSYB104K10

C 716	CKSSYB103K16
C 717	CCSSCH180J50
C 718	CCSSCH180J50
C 720	CKSQYB225K10
C 722	CKSRYB105K10

C 903	CKSSYB471K50
C 906	CKSRYB224K16
C 910	CKSQYB225K10

Miscellaneous Parts List

M 1	Pickup Unit(P9.9MP3)(Service)	CXX1805
M 2	Motor Unit(SPINDE)	CXB6007
M 561	Motor Unit(LOADING/CARRIAGE)	CXB8933
M 571	Fan Motor	CXM1288
	Motor Unit(FLAP)	CXC2204