



EXPLODED VIEW (MECHANISM)

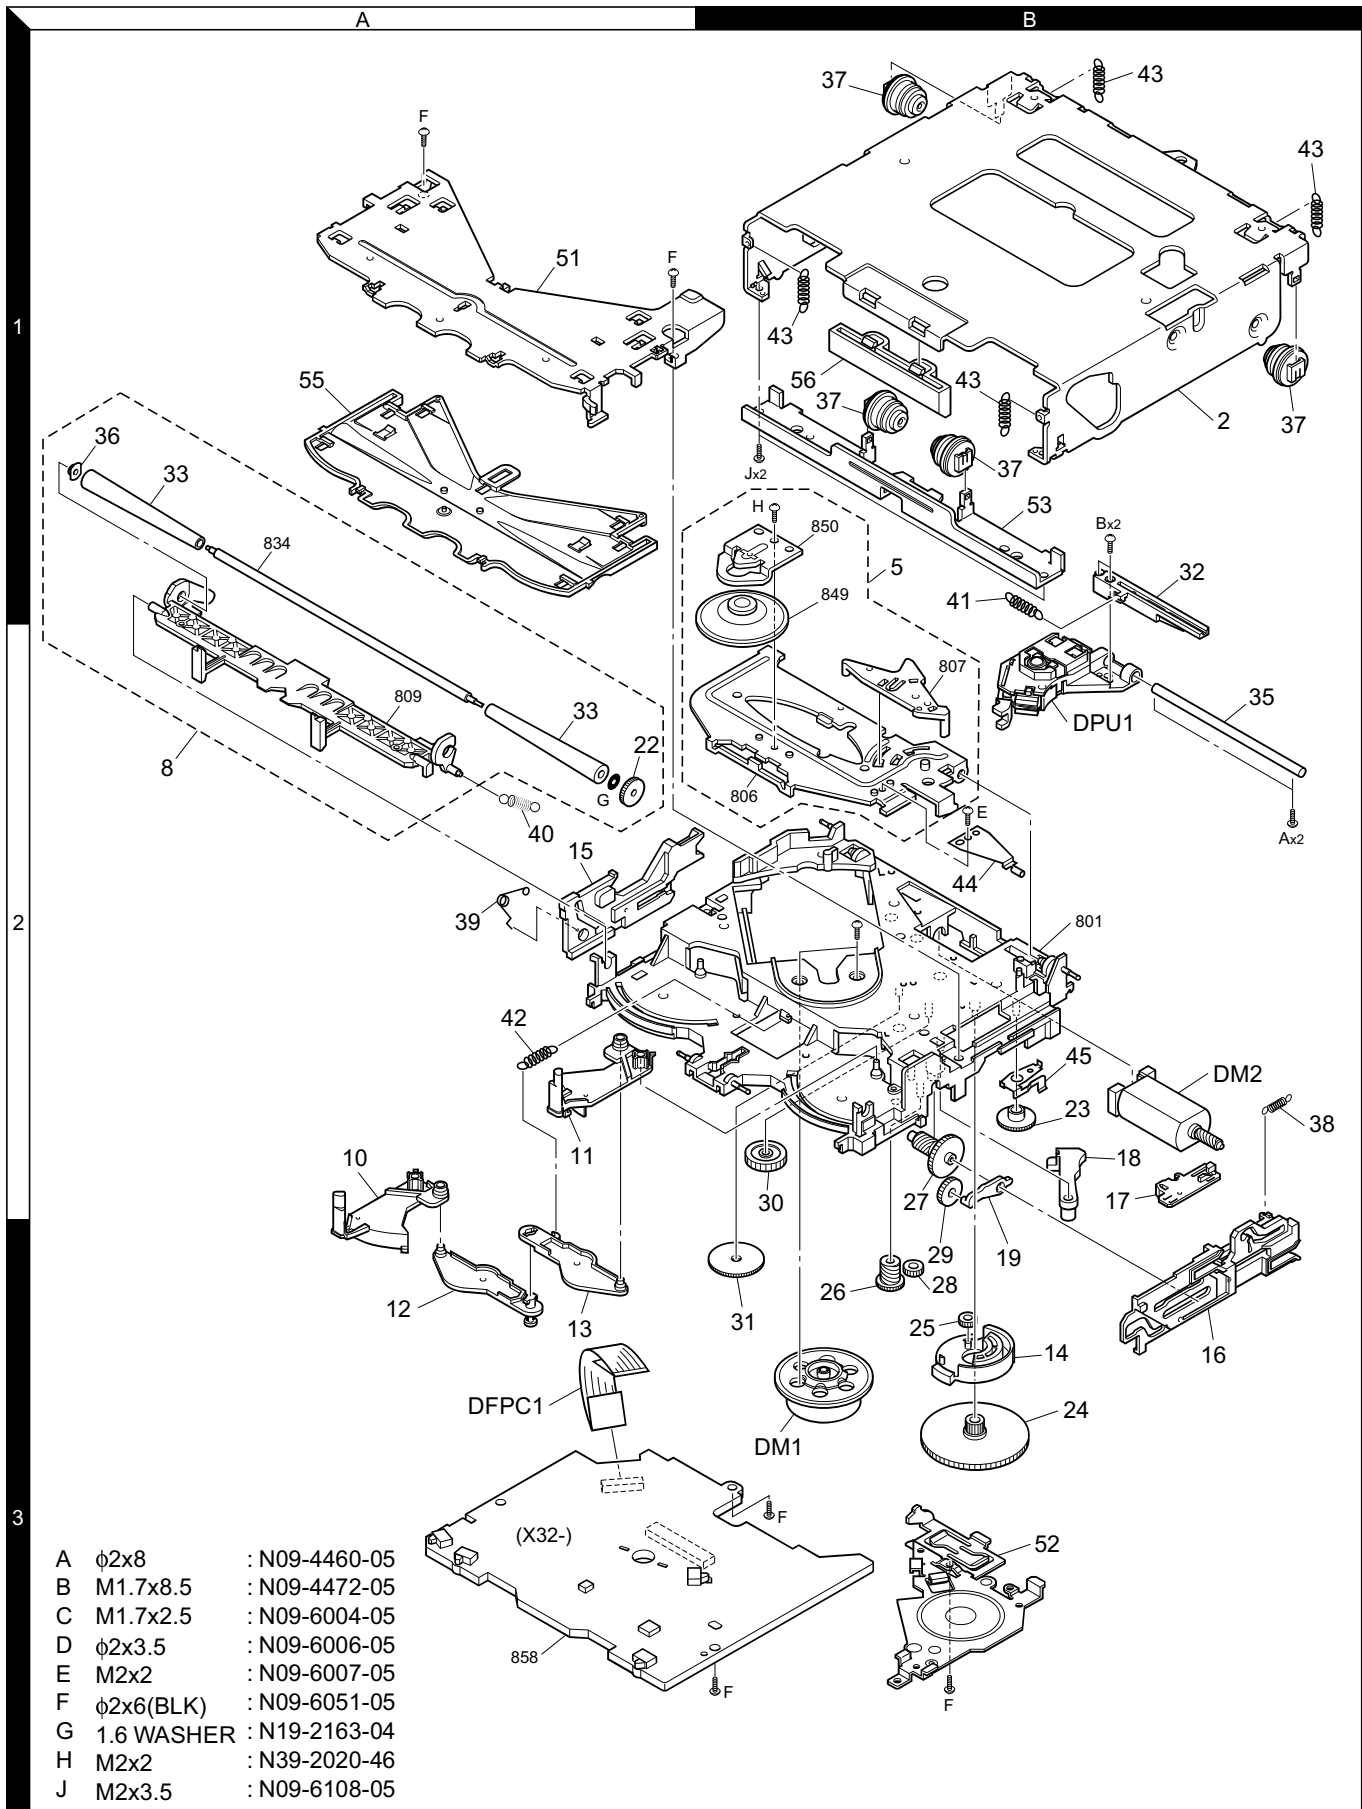

EXPLODED VIEW (UNIT)

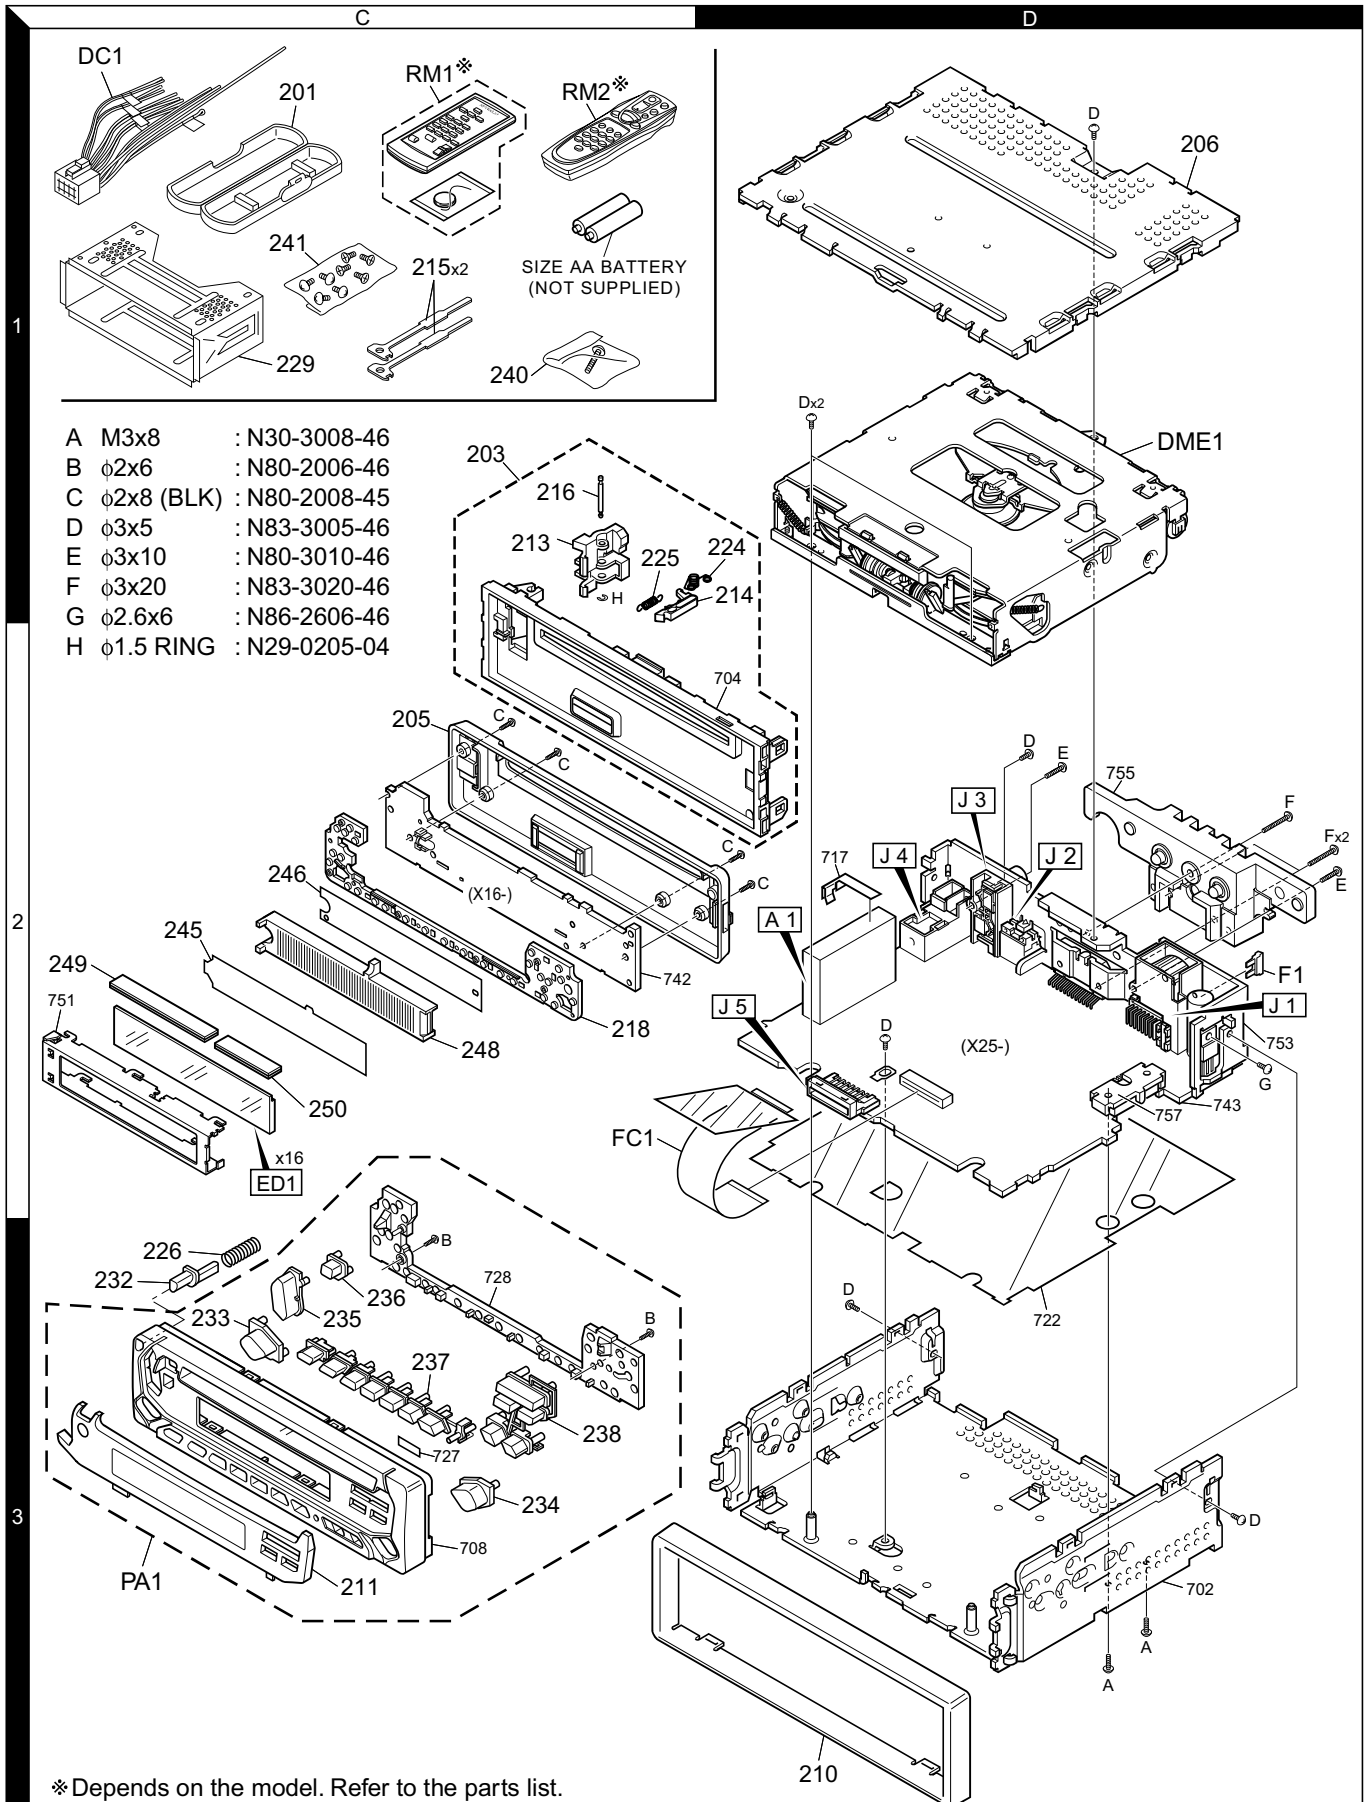

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
KDC-MP222/MP4023/MP4023G					
201	1C		A02-1486-13	PLASTIC CABINET ASSY	
203	1C		A22-2863-03	SUB PANEL ASSY	
205	2C		A46-1750-01	REAR COVER	
206	1D		A52-0804-02	TOP PLATE	
PA1	3C	*	A64-2863-02	PANEL ASSY	K
PA1	3C	*	A64-2874-02	PANEL ASSY	M1
PA1	3C	*	A64-2881-02	PANEL ASSY	M2
RM1	1C		A70-2025-05	REMOTE CONTROLLER ASSY (RC-410)	M1M2
RM2	1C		A70-2040-05	REMOTE CONTROLLER ASSY (RC-505)	K
-			B46-0100-50	WARRANTY CARD	
-			B46-0606-04	ID CARD	
-		*	B46-0653-03	USER CARD	K
-			B58-1365-04	CAUTION CARD	
-		*	B64-2493-00	INSTR.MANUAL (ENG.FRE.SPA.POR.)	K
-		*	B64-2494-00	INSTRUCTION MANUAL (ENG.T-CHI.)	M1M2
-		*	B64-2495-00	INSTRUCTION MANUAL (ARABIC)	M1M2
210	3D		B07-3003-02	ESCUTCHEON	M2
210	3D		B07-3022-02	ESCUTCHEON	KM1
211	3C	*	B10-4333-01	FRONT GLASS	K
211	3C	*	B10-4343-01	FRONT GLASS	M1
211	3C	*	B10-4349-01	FRONT GLASS	M2
213	1C		D10-4446-03	LEVER	
214	2C		D10-4447-03	LEVER	
215	1C		D10-4589-04	LEVER	
216	1C		D21-2329-04	SHAFT	
218	2C		E29-1872-02	CONDUCTIVE RUBBER	
△ DC1	1C		E30-4784-05	DC CORD	
FC1	2C		E39-0438-05	FLAT CABLE	
△ F1	2D		F52-0006-05	FUSE (MINI BLADE TYPE)10A	
224	1C		G01-2987-04	TORSION COIL SPRING	
225	1C		G01-3096-04	EXTENSION SPRING	
226	3C		G01-3149-04	COMPRESSION SPRING	
-			H10-4856-02	POLYSTYRENE FOAMED FIXTURE	
-			H25-0329-04	PROTECTION BAG (280X450X0.03)	
-			H25-0337-04	PROTECTION BAG (180X300X0.03)	
-		*	H54-2766-03	ITEM CARTON CASE	K
-		*	H54-2767-03	ITEM CARTON CASE	M1
-		*	H54-2768-03	ITEM CARTON CASE	M2
229	1C		J21-9716-03	MOUNTING HARDWARE ASSY	
232	3C		K24-3822-04	KNOB (RELEASE)	
233	3C		K24-3823-04	KNOB (SRC)	
234	3C		K24-3824-04	KNOB (AUD)	
235	3C		K24-3825-03	KNOB (VOL)	
236	3C		K24-3826-04	KNOB (EJECT)	
237	3C		K25-1396-03	KNOB (PRE1-6,ATT,RESET)	
238	3C		K25-1397-03	KNOB (SEEK,AM/FM)	
240	1C		N99-1610-15	SCREW SET	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
241	1C		N99-1719-05	SCREW SET	
A	3D		N30-3008-46	PAN HEAD MACHINE SCREW	
B	3C		N80-2006-46	PAN HEAD TAPTITE SCREW	
C	2C		N80-2008-45	PAN HEAD TAPTITE SCREW	
D	1D		N83-3005-46	PAN HEAD TAPTITE SCREW	
H	1C		N29-0205-04	RETAINING RING (1.5)	
DME1	1D		X92-4670-00	CD MECHANISM ASSY	
SWITCH UNIT (X16-2050-1x)					
245	2C		B11-1358-04	OPTICAL DIFFUSER	
246	2C		B11-1359-04	REFLECTION SHEET	
248	2C		B19-2130-03	LIGHTING BOARD	
D1			B30-1633-05	LED (WHITE)	
D7-20			B30-1533-05	LED (1608,PG)	M1M2
D7-20			B30-1567-05	LED (1608,RED)	K
D23,24			B30-1564-05	LED (1608,BLUE)	
ED1		*	B38-1110-05	LIQUID CRYSTAL	
C1			CK73FB1A225K	CHIP C 2.2UF K	
C2			CK73GB1H102K	CHIP C 1000PF K	
C3-5			CK73GB1A224K	CHIP C 0.22UF K	
C6			CK73FB1A225K	CHIP C 2.2UF K	
C7			CK73GB1H103K	CHIP C 0.010UF K	
C9			CK73GB1H103K	CHIP C 0.010UF K	
C10			CK73GB1C104K	CHIP C 0.10UF K	
C11			CK73GB1H103K	CHIP C 0.010UF K	
C12			CK73GB1H102K	CHIP C 1000PF K	
249	2C		E29-1887-04	CONDUCTIVE RUBBER	
250	2C		E29-1888-04	CONDUCTIVE RUBBER	
J1			E59-0828-05	RECTANGULAR PLUG	
-			J19-5130-04	HOLDER (LED)	
R1			RK73GB2A392J	CHIP R 3.9K J 1/10W	
R3			RK73GB2A303J	CHIP R 30K J 1/10W	
R14-17			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R18,19			RK73FB2B331J	CHIP R 330 J 1/8W	
R20,21			RK73FB2B511J	CHIP R 510 J 1/8W	
R22,23			RK73FB2B391J	CHIP R 390 J 1/8W	
R24,25			RK73FB2B221J	CHIP R 220 J 1/8W	
R26			RK73FB2B511J	CHIP R 510 J 1/8W	
R28			RK73GB2A391J	CHIP R 390 J 1/10W	
R30			RK73GB2A470J	CHIP R 47 J 1/10W	
R31,32			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R33-35			RK73GB2A471J	CHIP R 470 J 1/10W	
R36			RK73GB2A102J	CHIP R 1.0K J 1/10W	
D25			MA3082-H	ZENER DIODE	
D30			MA3062WA	ZENER DIODE	
D31,32			MA8062	ZENER DIODE	
IC1			LC75808W	MOS-IC	
IC2			PNA4S22M	ANALOGUE IC	
Q1			DTA114EUA	DIGITAL TRANSISTOR	
Q1			UN5111	DIGITAL TRANSISTOR	
ELECTRIC UNIT (X25-9620-xx)					
D402			B30-1567-05	LED (1608,RED)	

E : Europe K : North America
M : Other Areas W : Without EuropeK : KDC-MP222 M1 : KDC-MP4023
M2 : KDC-MP4023G

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

ELECTRIC UNIT (X25-9620-xx)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation	Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
C1			C90-5235-05	ELECTRO 2200UF 16WV		X1			L78-0821-05	RESONATOR	
C3			CK73GB1H102K	CHIP C 1000PF K		X2			L77-2738-05	CRYSTAL RESONATOR	
C4,5			CK73GB1H103K	CHIP C 0.010UF K							
C21			CE04NW1C470M	ELECTRO 47UF 16WV		D	2D		N83-3005-46	PAN HEAD TAPTITE SCREW	
C22,23			CE04NW1E100M	ELECTRO 10UF 25WV		E	2D		N80-3010-46	PAN HEAD TAPTITE SCREW	
						F	2D		N83-3020-46	PAN HEAD TAPTITE SCREW	
C24,25			CE04NW1C100M	ELECTRO 10UF 16WV		G	2D		N86-2606-46	BINDING HEAD TAPTITE SCREW	
C26			CE04NW1E100M	ELECTRO 10UF 25WV							
C27			CE04CW1H100M	ELECTRO 10UF 50WV		R1		*	RK73FB2B823J	CHIP R 82K J 1/8W	
C28			C90-2926-05	ELECTRO 220UF 16WV		R2			RK73GB2A363J	CHIP R 36K J 1/10W	
C29			CE04NW1C100M	ELECTRO 10UF 16WV		R3			RK73GB2A104J	CHIP R 100K J 1/10W	
						R4			RK73FB2B203J	CHIP R 20K J 1/8W	
C30			CK73FB1C105K	CHIP C 1.0UF K		R5,6			RK73GB2A103J	CHIP R 10K J 1/10W	
C41,42			C90-2963-05	ELECTRO 100UF 25WV							
C43,44			C90-5418-05	ELECTRO 220UF 16WV		R7			RK73GB2A104J	CHIP R 100K J 1/10W	
C45			CK73GB1A224K	CHIP C 0.22UF K		R8			RD14DB2H332J	SMALL-RD 3.3K J 1/2W	
C106			CK73GB1H103K	CHIP C 0.010UF K		R9			RD14BB2C333J	RD 33K J 1/6W	
						R10			RK73GB2A103J	CHIP R 10K J 1/10W	
C111			CK73GB1H102K	CHIP C 1000PF K		R11			RK73GB2A104J	CHIP R 100K J 1/10W	
C201,202			CE04NW1H2R2M	ELECTRO 2.2UF 50WV							
C203			CK73GB1E223K	CHIP C 0.022UF K		R12			RK73GB2A473J	CHIP R 47K J 1/10W	
C203			CK73GB1H223K	CHIP C 0.022UF K		R13			RD14BB2C562J	RD 5.6K J 1/6W	
C204			CK73GB1H103K	CHIP C 0.010UF K		R21			RK73FB2B152J	CHIP R 1.5K J 1/8W	
						R22			RD14BB2C472J	RD 4.7K J 1/6W	K
C205			CK73GB1A474K	CHIP C 0.47UF K		R22,23			RD14BB2C472J	RD 4.7K J 1/6W	M1M2
C206			CC73GCH1H151J	CHIP C 150PF J							
C210			CK73GB1H103K	CHIP C 0.010UF K		R24-28			RK73GB2A102J	CHIP R 1.0K J 1/10W	M1M2
C211			CE04NW1A470M	ELECTRO 47UF 10WV		R25-28			RK73GB2A102J	CHIP R 1.0K J 1/10W	K
C212,213			CK73GB1C104K	CHIP C 0.10UF K		R32			RK73GB2A104J	CHIP R 100K J 1/10W	
						R41-44			RK73GB2A473J	CHIP R 47K J 1/10W	
C212,213			CK73GB1H104K	CHIP C 0.10UF K		R51,52			RK73GB2A222J	CHIP R 2.2K J 1/10W	
C251-254			C90-5296-05	NP-ELECT 0.22UF 50WV							
C255			CE04NW1H010M	ELECTRO 1.0UF 50WV		R53-56			RK73GB2A102J	CHIP R 1.0K J 1/10W	
C256			CE04NW1A330M	ELECTRO 33UF 10WV		R58			RK73GB2A222J	CHIP R 2.2K J 1/10W	
C257			C90-2935-05	ELECTRO 1.0UF 50WV		R59			RK73GB2A101J	CHIP R 100 J 1/10W	
						R60			RK73GB2A222J	CHIP R 2.2K J 1/10W	
C258			CE04NW1H010M	ELECTRO 1.0UF 50WV		R61,62			RK73GB2A104J	CHIP R 100K J 1/10W	
C301,302			CE04NW1HR47M	ELECTRO 0.47UF 50WV							
C303			CE04NW1A470M	ELECTRO 47UF 10WV		R63			RK73GB2A222J	CHIP R 2.2K J 1/10W	
C304			CK73GB1H103K	CHIP C 0.010UF K		R64,65			RK73GB2A472J	CHIP R 4.7K J 1/10W	
C309			CE04NW1H2R2M	ELECTRO 2.2UF 50WV		R101			RK73GB2A102J	CHIP R 1.0K J 1/10W	
						R102			RK73GB2A471J	CHIP R 470 J 1/10W	
C351,352			CE04NW1C100M	ELECTRO 10UF 16WV		R103			RK73GB2A472J	CHIP R 4.7K J 1/10W	
C356			CK73FB1H104K	CHIP C 0.10UF K							
C405			CK73GB0J105K	CHIP C 1.0UF K		R104			RK73GB2A471J	CHIP R 470 J 1/10W	
C406			CK73GB1H103K	CHIP C 0.010UF K		R105			RK73GB2A472J	CHIP R 4.7K J 1/10W	
C407			CC73GCH1H220J	CHIP C 22PF J		R106			RK73GB2A222J	CHIP R 2.2K J 1/10W	
						R152-154			RK73GB2A471J	CHIP R 470 J 1/10W	
C408			CC73GCH1H270J	CHIP C 27PF J		R160			RK73GB2A222J	CHIP R 2.2K J 1/10W	
C409			CE04NW1C470M	ELECTRO 47UF 16WV							
C410			CK73GB1H103K	CHIP C 0.010UF K		R161			RK73GB2A225J	CHIP R 2.2M J 1/10W	
						R162			RK73GB2A104J	CHIP R 100K J 1/10W	
CN2			E41-0168-05	FLAT CABLE CONNECTOR		R171			RD14BB2C102J	RD 1.0K J 1/6W	
J1			E58-0863-15	RECTANGULAR RECEPTACLE		R172			RD14BB2C470J	RD 47 J 1/6W	
J2			E56-0834-05	CYLINDRICAL RECEPTACLE		R173			RD14BB2C471J	RD 470 J 1/6W	
J3			E63-0852-05	PIN JACK							
J4			E04-0312-05	RF COAXIAL CABLE RECEPTACLE							
J5			E58-0879-05	RECTANGULAR RECEPTACLE		R174			RD14BB2C101J	RD 100 J 1/6W	
						R175			RD14BB2C471J	RD 470 J 1/6W	
L1			L33-1170-05	CHOKE COIL ASSY		R176			RD14BB2C102J	RD 1.0K J 1/6W	
L3			L33-1123-05	LINE FILTER COIL		R180			RD14BB2C102J	RD 1.0K J 1/6W	
L5-8			L40-4795-91	SMALL FIXED INDUCTOR (4.7UH,J)		R181			RD14BB2C100J	RD 10 J 1/6W	
L10,11			L40-4795-91	SMALL FIXED INDUCTOR (4.7UH,J)							
L12			L33-1820-05	CHOKE COIL		R182,183			RD14BB2C102J	RD 1.0K J 1/6W	
						R201			RK73GB2A103J	CHIP R 10K J 1/10W	
						R202-204			RK73GB2A472J	CHIP R 4.7K J 1/10W	

E : Europe K : North America
M : Other Areas W : Without EuropeK : KDC-MP222 M1 : KDC-MP4023
M2 : KDC-MP4023G

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

ELECTRIC UNIT (X25-9620-xx)

Ref. No.	Ad	New	Parts No.	Description	Destination	Ref. No.	Ad	New	Parts No.	Description	Destination
R205			RK73GB2A222J	CHIP R 2.2K J 1/10W		D151			HZS6C1	ZENER DIODE	
R206-208			RK73GB2A102J	CHIP R 1.0K J 1/10W		D151			MA4062-L	ZENER DIODE	
R209,210			RK73GB2A103J	CHIP R 10K J 1/10W		D152-155			1SS133	DIODE	
R211			RK73GB2A102J	CHIP R 1.0K J 1/10W		D156			HZS12A2	ZENER DIODE	
R251			RK73GB2A333J	CHIP R 33K J 1/10W		D157-159			HZS6C1	ZENER DIODE	
R252			RK73GB2A473J	CHIP R 47K J 1/10W		D157-159			MA4062-L	ZENER DIODE	
R253			RK73GB2A432J	CHIP R 4.3K J 1/10W		D160,161			1SS133	DIODE	
R254			RK73GB2A100J	CHIP R 10 J 1/10W		D162			HZS6C1	ZENER DIODE	
R255			RK73GB2A221J	CHIP R 220 J 1/10W		D162			MA4062-L	ZENER DIODE	
R256			RK73GB2A223J	CHIP R 22K J 1/10W		D201,202			MA4068 (N)-M	ZENER DIODE	
R257			RK73GB2A432J	CHIP R 4.3K J 1/10W		D203			1SS133	DIODE	
R264			RK73GB2A104J	CHIP R 100K J 1/10W		D206			1SS133	DIODE	
R301,302			RD14BB2C100J	RD 10 J 1/6W		D251-255			AM01Z	DIODE	
R303			RD14BB2C101J	RD 100 J 1/6W		D251-255			DSM1SD2	DIODE	
R304			RD14BB2C100J	RD 10 J 1/6W		D251-255			ERA15-02	DIODE	
R305			RD14BB2C472J	RD 4.7K J 1/6W		D256-258			D1F60	DIODE	
R306			RD14BB2C4R7J	RD 4.7 J 1/6W		D256-258			S1J	DIODE	
R307-309			RD14BB2C472J	RD 4.7K J 1/6W		D269-271			1SS133	DIODE	
R310,311			RD14BB2C101J	RD 100 J 1/6W		D301-308			HZS6C1	ZENER DIODE	
R312-315			RK73GB2A104J	CHIP R 100K J 1/10W		D301-308			MA4062-L	ZENER DIODE	
R317			RK73GB2A472J	CHIP R 4.7K J 1/10W		D309,310			MA4068 (N)-M	ZENER DIODE	
R351,352			RD14BB2C271J	RD 270 J 1/6W		D311			HZS6C1	ZENER DIODE	
R355,356			RD14BB2C303J	RD 30K J 1/6W		D311			MA4062-L	ZENER DIODE	
R357,358			RD14BB2C101J	RD 100 J 1/6W		D401			1SS133	DIODE	
R401-406			RK73GB2A104J	CHIP R 100K J 1/10W		IC1	*		UPD703030GC011	MI-COM IC	
R407			RD14BB2C241J	RD 240 J 1/6W		IC2			TDA7407D	ANALOGUE IC	
R408			RK73GB2A104J	CHIP R 100K J 1/10W		IC3			BA4911-V4	ANALOGUE IC	
R409			RK73GB2A153J	CHIP R 15K J 1/10W		IC4			TDA7560	ANALOGUE IC	
R410			RK73GB2A104J	CHIP R 100K J 1/10W	K	IC6			HD74HC27FP	MOS-IC	
R410,411			RK73GB2A104J	CHIP R 100K J 1/10W	M1M2	IC8			PST3436UL	MOS-IC	
R412			RK73GB2A104J	CHIP R 100K J 1/10W	K	IC9			SI-8050JD	ANALOGUE IC	
R414,415			RK73GB2A104J	CHIP R 100K J 1/10W		Q1-3			2SC4081	TRANSISTOR	
R417			RK73GB2A104J	CHIP R 100K J 1/10W		Q1-3			2SD1819A	TRANSISTOR	
R419			RK73GB2A104J	CHIP R 100K J 1/10W		Q4			2SA1036K	TRANSISTOR	
R420			RK73GB2A103J	CHIP R 10K J 1/10W		Q21			2SD2375	TRANSISTOR	
W102			R92-2053-05	CHIP R 0 J 1/8W		Q21			2SD2396	TRANSISTOR	
D1			S2V20*A	DIODE		Q22			UMC2N	TRANSISTOR	
D1			1N5393G-M6	DIODE		Q22,23			UMC2N	TRANSISTOR	
D2-4			MA4068 (N)-M	ZENER DIODE		Q41			2SC4081	TRANSISTOR	
D21			HZS9A1L	ZENER DIODE		Q41			2SD1819A	TRANSISTOR	
D21			MA4082 (N)-L	ZENER DIODE		Q151			DTA114YUA	DIGITAL TRANSISTOR	
D22			AM01Z	DIODE	K	Q151			KRA307	DIGITAL TRANSISTOR	
D22			DSM1SD2	DIODE	K	Q151			UN5114	DIGITAL TRANSISTOR	
D22			ERA15-02	DIODE	K	Q201			2SC4081	TRANSISTOR	
D22,23			AM01Z	DIODE	M1M2	Q201			2SD1819A	TRANSISTOR	
D22,23			DSM1SD2	DIODE	M1M2	Q350			DTA124EUA	DIGITAL TRANSISTOR	
D22,23			ERA15-02	DIODE	M1M2	Q350			KRA303	DIGITAL TRANSISTOR	
D24			D1F60	DIODE	K	Q350			UN5112	DIGITAL TRANSISTOR	
D24,25			D1F60	DIODE	M1M2	Q351,352			DTC143TUA	DIGITAL TRANSISTOR	
D26			DAN202K	DIODE		Q351,352			KRC410	DIGITAL TRANSISTOR	
D26			KDS184	DIODE		Q351,352			UN5216	DIGITAL TRANSISTOR	
D26			MA152WK	DIODE		Q401			2SC4081	TRANSISTOR	
D41			SFPB-54V	DIODE		Q401			2SD1819A	TRANSISTOR	
D51,52			1SS133	DIODE		TH1			PTH9C42BE471Q	POSITIVE RESISTOR	

E : Europe K : North America
M : Other Areas W : Without EuropeK : KDC-MP222 M1 : KDC-MP4023
M2 : KDC-MP4023G

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

ELECTRIC UNIT (X25-9620-xx)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
A1		*	X86-3720-11	FRONT-END UNIT	
CD PLAYER UNIT (X32-5410-00)					
C1			C92-0628-05	CHIP-TAN 10UF 10WV	
C2			CK73FB1A105K	CHIP C 1.0UF K	
C3			CK73FB1A225K	CHIP C 2.2UF K	
C4			CK73GB1H103K	CHIP C 0.010UF K	
C5			CC73GCH1H680J	CHIP C 68PF J	
C6			CC73GCH1H681J	CHIP C 680PF J	
C7			CK73GB1H104K	CHIP C 0.10UF K	
C8			CK73GB1H222K	CHIP C 2200PF K	
C9,10			CK73GB1H104K	CHIP C 0.10UF K	
C11			CC73GCH1H681J	CHIP C 680PF J	
C12			CK73GB1H222K	CHIP C 2200PF K	
C13			CC73GCH1H680J	CHIP C 68PF J	
C15			CK73EB1A475K	CHIP C 4.7UF K	
C16			CK73GB1H104K	CHIP C 0.10UF K	
C17			CK73GB1H331K	CHIP C 330PF K	
C18			CK73GB1H472K	CHIP C 4700PF K	
C19,20			CK73GB1H104K	CHIP C 0.10UF K	
C21			CK73EB1A475K	CHIP C 4.7UF K	
C22			CK73GB0J105K	CHIP C 1.0UF K	
C23			CK73FB1A225K	CHIP C 2.2UF K	
C26			CK73GB1H104K	CHIP C 0.10UF K	
C27			C92-0712-05	CHIP-TAN 22UF 6.3WV	
C28			CK73GB1H102K	CHIP C 1000PF K	
C29			CK73GB1H331K	CHIP C 330PF K	
C30			CK73GB1H152K	CHIP C 1500PF K	
C31-35			CK73GB1H104K	CHIP C 0.10UF K	
C36			C92-0712-05	CHIP-TAN 22UF 6.3WV	
C41			CK73GB1H104K	CHIP C 0.10UF K	
C42			CK73EB1A475K	CHIP C 4.7UF K	
C45			CK73GB1H102K	CHIP C 1000PF K	
C47			C92-0628-05	CHIP-TAN 10UF 10WV	
C48			CK73GB1H104K	CHIP C 0.10UF K	
C50			CK73GB1H104K	CHIP C 0.10UF K	
C52			CK73GB1H152K	CHIP C 1500PF K	
C53			CK73GB1H104K	CHIP C 0.10UF K	
C55			CC73GCH1H470J	CHIP C 47PF J	
C56			CC73GCH1H680J	CHIP C 68PF J	
C57			CK73GB1H104K	CHIP C 0.10UF K	
C59			CK73GB1H104K	CHIP C 0.10UF K	
C61			CK73GB1H104K	CHIP C 0.10UF K	
C63			CC73GCH1H020C	CHIP C 2.0PF C	
C65			CK73GB1H104K	CHIP C 0.10UF K	
C67			CK73GB1H222K	CHIP C 2200PF K	
C68			CC73GCH1H060D	CHIP C 6.0PF D	
C70			CK73GB1H104K	CHIP C 0.10UF K	
C74			CK73GB1H682K	CHIP C 6800PF K	
C75			CK73GB1H332K	CHIP C 3300PF K	
C76			CK73GB1H103K	CHIP C 0.010UF K	
C77			CK73GB1H104K	CHIP C 0.10UF K	
C78			CK73EB1A475K	CHIP C 4.7UF K	
C79-82			CK73GB1H152K	CHIP C 1500PF K	
C83			CK73GB1H104K	CHIP C 0.10UF K	
C84			C92-0628-05	CHIP-TAN 10UF 10WV	
C85			CK73GB1H104K	CHIP C 0.10UF K	
C87			CK73EB1A475K	CHIP C 4.7UF K	
C88			CK73GB1H104K	CHIP C 0.10UF K	
CN1			E40-9527-05	FLAT CABLE CONNECTOR	
CN1			E41-0213-05	FLAT CABLE CONNECTOR	
CN2			E40-9536-05	FLAT CABLE CONNECTOR	
CN2			E41-0193-05	FLAT CABLE CONNECTOR	
L1			L92-0329-05	CHIP FERRITE	
L5			L92-0329-05	CHIP FERRITE	
X1			L78-0851-05	RESONATOR (16.93MHZ)	
X2			L78-0862-05	RESONATOR (16.00MHZ)	
CP1,2			R90-1019-05	MULTI-COMP 100 X2	
CP4			R90-0719-05	MULTI-COMP 4.7K X2	
CP5			R90-0737-05	MULTI-COMP 100K X2	
CP6			R90-1019-05	MULTI-COMP 100 X2	
CP7			R90-0737-05	MULTI-COMP 100K X2	
CP13			R90-0720-05	MULTI-COMP 100K X4	
CP15			R90-0718-05	MULTI-COMP 4.7K X4	
CP16-22			R90-1014-05	MULTI-COMP 100 X4	
CP23			R90-0714-05	MULTI-COMP 10K X4	
CP24			R90-0720-05	MULTI-COMP 100K X4	
R1			R92-3044-05	CHIP R 18K D 1/10W	
R2			R92-3041-05	CHIP R 11K D 1/10W	
R3			RK73FB2B303J	CHIP R 30K J 1/8W	
R4			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R5			RK73FB2B272J	CHIP R 2.7K J 1/8W	
R6			RK73FB2B331J	CHIP R 330 J 1/8W	
R7,8			RK73FB2B752J	CHIP R 7.5K J 1/8W	
R9			RK73FB2B272J	CHIP R 2.7K J 1/8W	
R10			RK73FB2B331J	CHIP R 330 J 1/8W	
R11			R92-3041-05	CHIP R 11K D 1/10W	
R12			RK73FB2B303J	CHIP R 30K J 1/8W	
R13			R92-3044-05	CHIP R 18K D 1/10W	
R14			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R16			RK73GB2A123J	CHIP R 12K J 1/10W	
R17			RK73GB2A133J	CHIP R 13K J 1/10W	
R18			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R19,20			RK73GB2A123J	CHIP R 12K J 1/10W	
R21			RK73GB2A432J	CHIP R 4.3K J 1/10W	
R22			RK73GB2A133J	CHIP R 13K J 1/10W	
R23,24			RK73GB2A104J	CHIP R 100K J 1/10W	
R25			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R26			RK73GB2A104J	CHIP R 100K J 1/10W	
R27			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R28			RK73GB2A103J	CHIP R 10K J 1/10W	
R29			RK73GB2A133J	CHIP R 13K J 1/10W	
R30			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R31			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R32			RK73GB2A103J	CHIP R 10K J 1/10W	
R33			RK73GB2A104J	CHIP R 100K J 1/10W	
R34			RK73GB2A183J	CHIP R 18K J 1/10W	
R35			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R36			RK73GB2A163J	CHIP R 16K J 1/10W	

E : Europe K : North America
M : Other Areas W : Without EuropeK : KDC-MP222 M1 : KDC-MP4023
M2 : KDC-MP4023G

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

CD PLAYER UNIT (X32-5410-00)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
R38 R39-41 R42,43 R46 R47			RK73GB2A104J RK73GB2A103J RK73GB2A104J RK73GB2A4R7J RK73GB2A104J	CHIP R 100K J 1/10W CHIP R 10K J 1/10W CHIP R 100K J 1/10W CHIP R 4.7 J 1/10W CHIP R 100K J 1/10W	
R49 R50 R51 R52 R53			RK73GB2A104J RK73GB2A102J RK73GB2A103J RK73GB2A104J RK73GB2A473J	CHIP R 100K J 1/10W CHIP R 1.0K J 1/10W CHIP R 10K J 1/10W CHIP R 100K J 1/10W CHIP R 47K J 1/10W	
R55 R57 R59 R62,63 R67			RK73GB2A103J RK73GB2A472J RK73GB2A274J RK73GB2A302J RK73GB2A682J	CHIP R 10K J 1/10W CHIP R 4.7K J 1/10W CHIP R 270K J 1/10W CHIP R 3.0K J 1/10W CHIP R 6.8K J 1/10W	
R69 R70 R71,72 R73 R75			RK73GB2A333J RK73GB2A103J RK73GB2A101J RK73GB2A241J RK73GB2A103J	CHIP R 33K J 1/10W CHIP R 10K J 1/10W CHIP R 100 J 1/10W CHIP R 240 J 1/10W CHIP R 10K J 1/10W	
R76 R77 R78 W1			RK73GB2A101J RK73GB2A102J RK73GB2A104J R92-1252-05	CHIP R 100 J 1/10W CHIP R 1.0K J 1/10W CHIP R 100K J 1/10W CHIP R 0 OHM J 1/16W	
S1,2 S3			S68-0863-05 S68-0862-05	PUSH SWITCH PUSH SWITCH	
D1 IC1 IC2 IC4 IC6			DAP202U TAR5S33 NJM4580V BA5824FP L88MS33T	DIODE ANALOGUE IC ANALOGUE IC ANALOGUE IC ANALOGUE IC	
IC7 IC8 IC11 IC13 IC13			703033BYGC-J02 TC74HCT7007AF UPD63760GJ IS41LV16257 MSM51V4265EP70	MI-COM IC MOS-IC MOS-IC MEMORY IC MOS-IC	
Q1 Q2,3 Q4 Q5			DTA143XUA DTC124EUA MCH6101 DTA143EUA	DIGITAL TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR	
CD MECHANISM ASSY (X92-4670-00)					
2	1B		A10-4827-12	CHASSIS	
5	1B		D10-4576-33	ARM ASSY	
8	2A		D10-4579-03	LEVER ASSY	
10	3A		D10-4581-13	ARM	
11	2A		D10-4582-13	ARM	
12	3A		D10-4583-03	ARM	
13	3A		D10-4584-03	ARM	
14	3B		D10-4585-03	ARM	
15	2A		D10-4586-13	SLIDER	
16	3B		D10-4587-22	SLIDER	
17	3B		D10-4588-03	SLIDER	
18	3B		D10-4595-04	ARM	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
19 22 23 24 25	3B 2A 2B 3B 3B		D10-4596-14 D13-2151-04 D13-2152-04 D13-2153-04 D13-2154-04	ARM GEAR GEAR GEAR GEAR	
26 27 28 29 30	3B 3B 3B 3B 3B		D13-2155-04 D13-2156-14 D13-2157-04 D13-2158-04 D13-2168-04	WORM GEAR GEAR GEAR GEAR	
31 32 33 35 36	3B 2B 2A 2B 1A		D13-2171-04 D13-2172-03 D14-0759-04 D21-2382-04 D23-0954-04	GEAR RACK (GEAR) ROLLER SHAFT RETAINER	
37	1B		D39-0246-05	DAMPER	
38 39 40 41 42	2B 2A 2A 1B 2A		G01-3072-04 G01-3073-04 G01-3074-04 G01-3075-04 G01-3076-04	EXTENSION SPRING TORSION COIL SPRING EXTENSION SPRING EXTENSION SPRING EXTENSION SPRING	
43 44 45	1B 2B 2B		G01-3077-04 G02-1399-04 G02-1408-04	EXTENSION SPRING FLAT SPRING FLAT SPRING	
51 52 53 55 56	1A 3B 1B 1A 1B		J21-9676-22 J21-9677-02 J21-9678-03 J90-1001-11 J90-1023-03	MOUNTING HARDWARE MOUNTING HARDWARE MOUNTING HARDWARE GUIDE GUIDE	
A B C E F	2B 1B 2B 2B 1A		N09-4460-05 N09-4472-05 N09-6004-05 N09-6007-05 N09-6051-05	TAPTITE SCREW (OVAL P TAPTIT) MACHINE SCREW (M1.7X8.5) MACHINE SCREW (M1.7X2.5 IB-L) MACHINE SCREW (PAN M2X2) TAPTITE SCREW (BIND P 2X5)	
G H J	2A 1B 1B		N19-2163-04 N39-2020-46 N09-6108-05	FLAT WASHER PAN HEAD MACHIN SCREW MACHINE SCREW (M2*3.5TYPE3)	
DM1 DM2	3B 2B		T42-1066-04 T42-1067-04	DC MOTOR ASSY (SP) DC MOTOR ASSY (LO)	
DPU1	2D		X93-2010-00	OPTICAL PICKUP ASSY	

E : Europe K : North America
M : Other Areas W : Without EuropeK : KDC-MP222 M1 : KDC-MP4023
M2 : KDC-MP4023G

△ Indicates safety critical components.