



EXPLODED VIEW (MECHANISM)

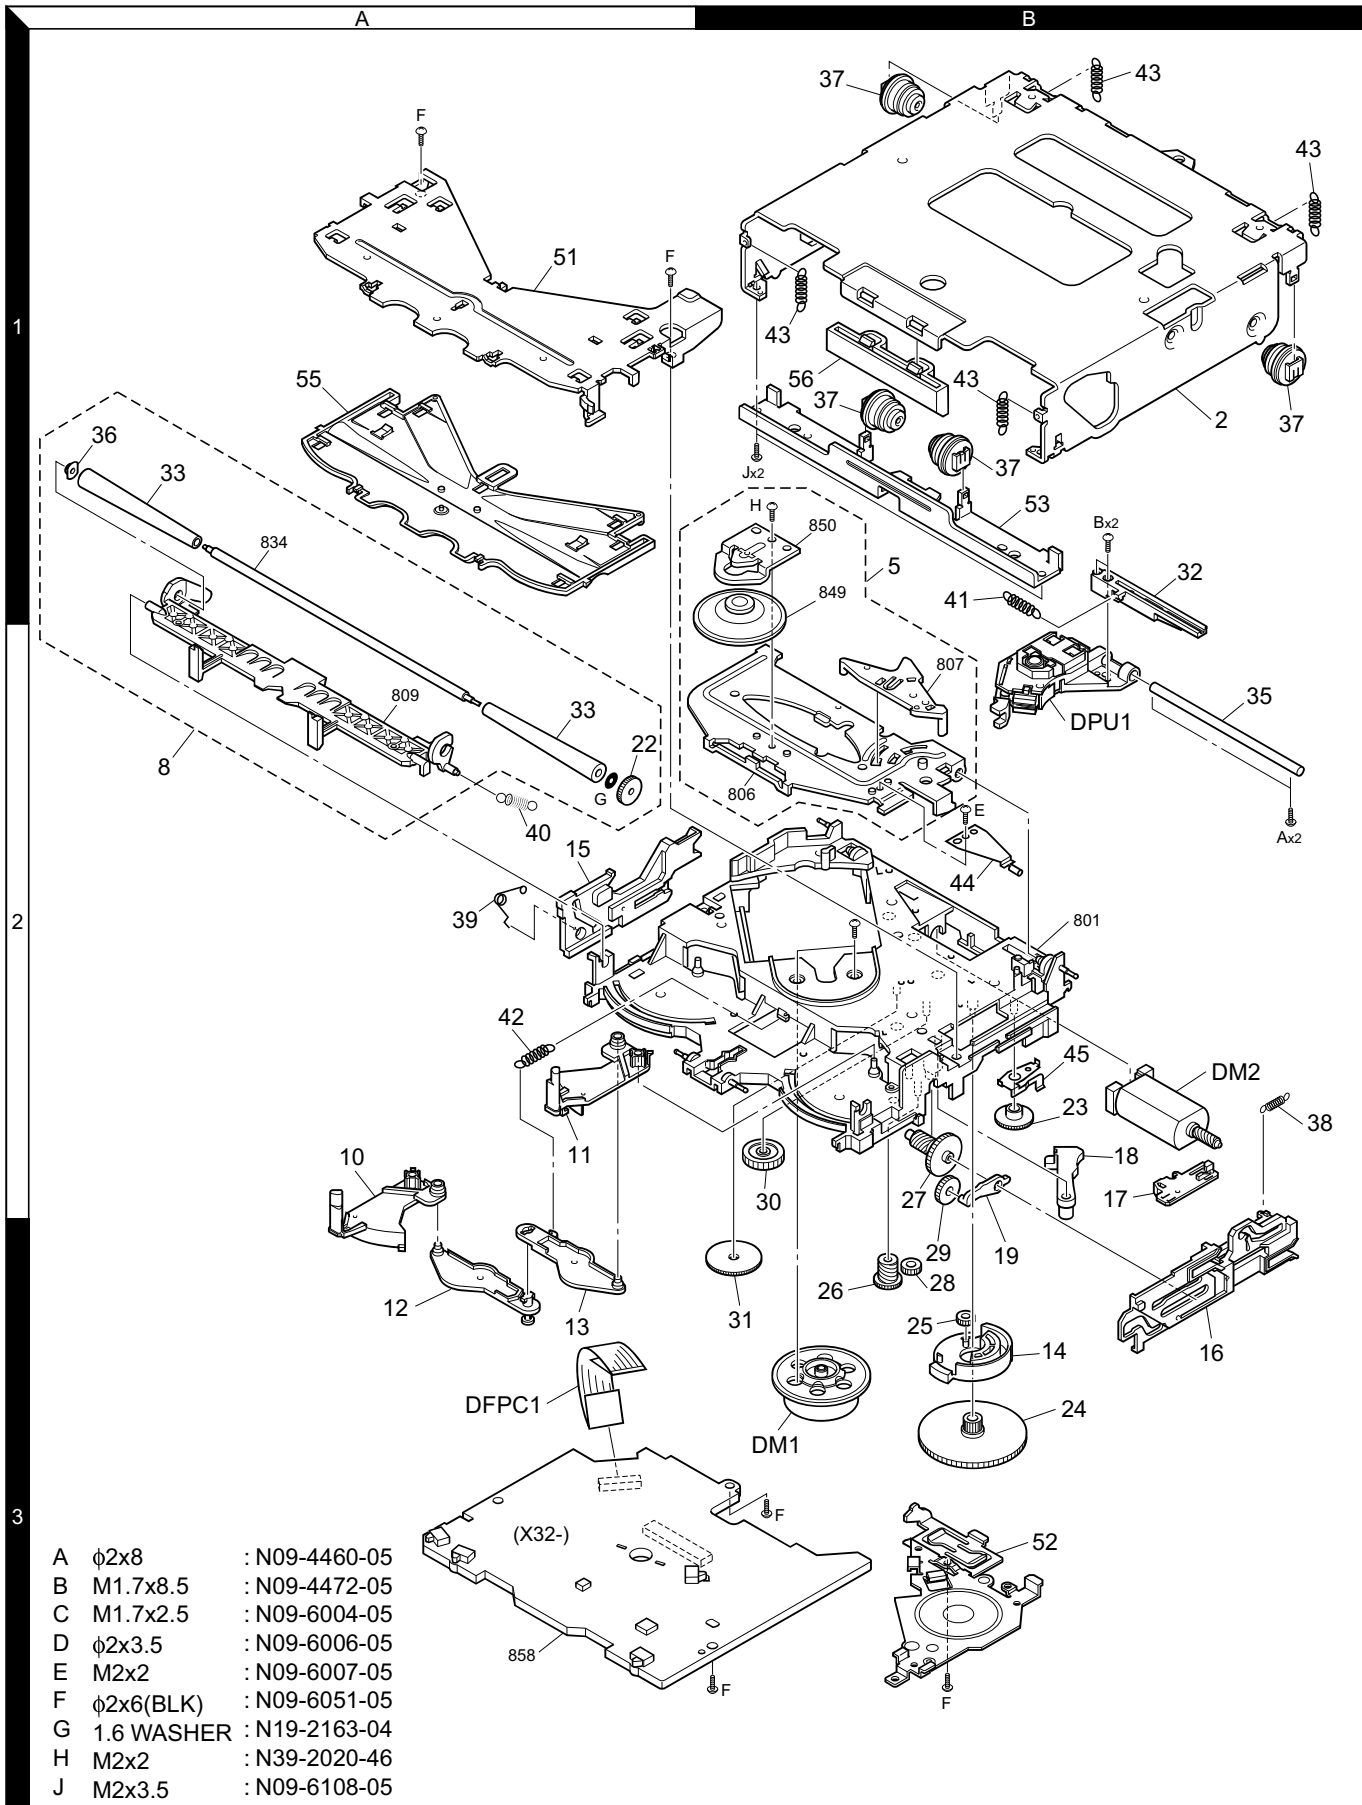

EXPLODED VIEW (UNIT)

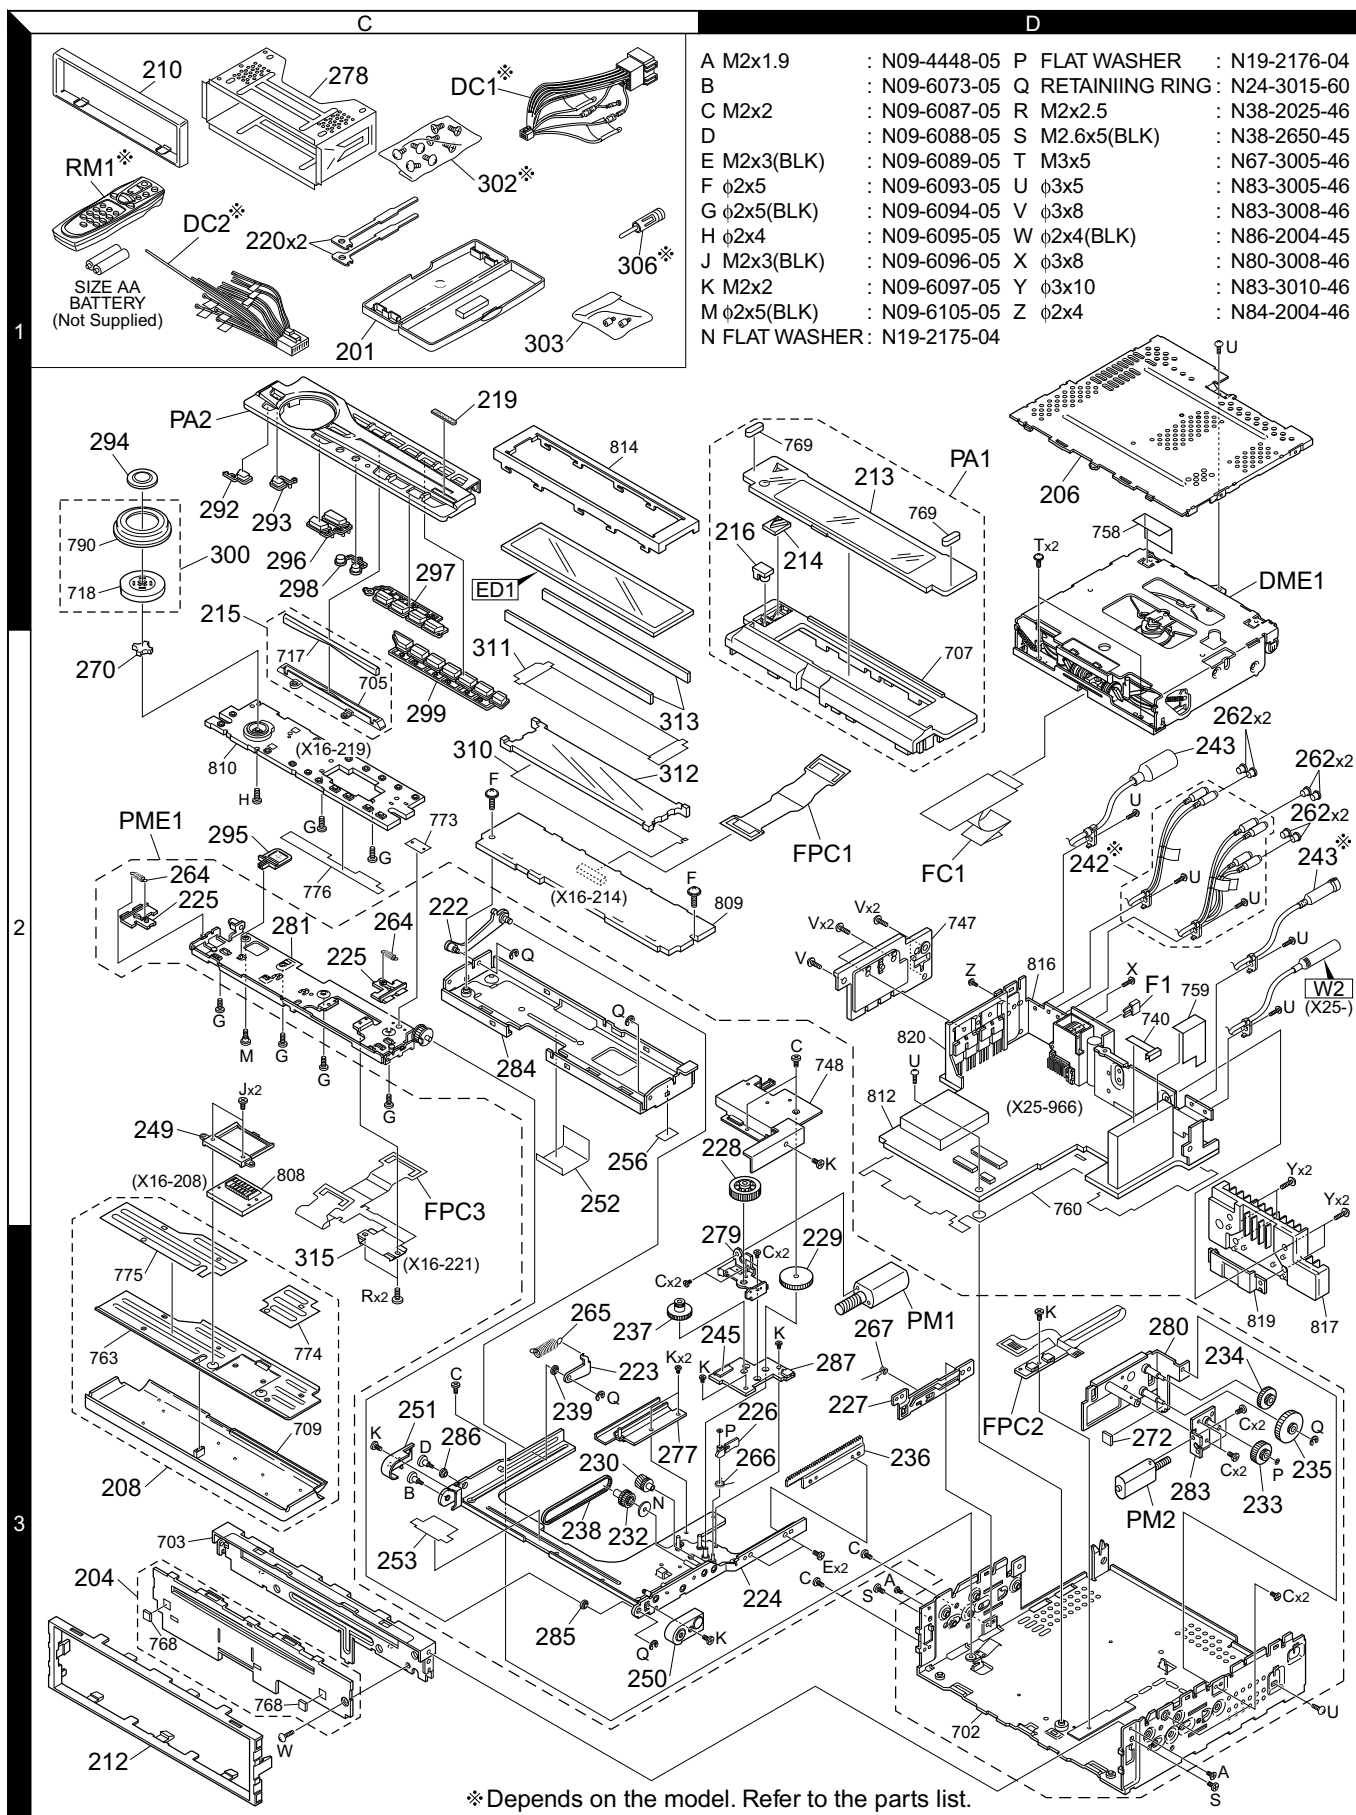

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
KDC-M7024/MP822					
201	1C	*	A02-2731-03	PLASTIC CABINET ASSY	
204	3C	*	A22-2988-03	SUB PANEL ASSY	
206	1D	*	A52-0831-02	TOP PLATE	
PA1	1D	*	A64-2978-01	PANEL ASSY	K3
PA1	1D	*	A64-2986-01	PANEL ASSY	E3
PA2	1C	*	A64-2995-02	PANEL ASSY	K3
PA2	1C	*	A64-3003-02	PANEL ASSY	E3
PME1	2C	*	A10-5029-11	CHASSIS ASSY	
RM1	1C		A70-2040-05	REMOTE CONTROLLER ASSY (RC-505)	K3
-			B46-0100-50	WARRANTY CARD	
-			B46-0606-04	ID CARD	K3
-			B46-0612-14	ID CARD	E3
-		*	B46-0653-03	USER CARD	K3
-		*	B64-2460-00	INSTRUCTION MANUAL (ENGLISH)	K3
-		*	B64-2461-10	INSTRUCTION MANUAL (FRE.SPA.)	K3
-		*	B64-2468-00	INSTRUCTION MANUAL (ENGLISH)	E3
-		*	B64-2469-00	INSTRUCT. MANUAL (FRE.GER.DUT.)	E3
-		*	B64-2470-00	INSTRUCT. MANUAL (ITA.SPA.PRO.)	E3
208	3C		B03-5015-03	DRESSING PLATE ASSY	
210	1C	*	B07-3078-01	ESCUTCHEON	
212	3C	*	B07-3080-02	ESCUTCHEON	
213	1D	*	B10-4385-01	FRONT GLASS	K3
213	1D	*	B10-4393-01	FRONT GLASS	E3
214	1C	*	B12-1221-04	INDICATOR	
215	1C	*	B12-1222-03	INDICATOR ASSY	
216	1C	*	B19-2201-04	LIGHTING BOARD	
219	1C	*	B43-1505-04	KENWOOD BADGE	
220	1C		D10-4674-04	LEVER	
222	2C	*	D10-4716-04	ARM ASSY	
223	3C	*	D10-4718-04	ARM ASSY	
224	3D	*	D10-4721-11	SLIDER ASSY	
225	2C	*	D10-4749-03	LEVER	
226	3D	*	D10-4750-04	LEVER	
227	3D	*	D12-0637-03	CAM	
228	2D	*	D13-2270-04	GEAR	
229	3D	*	D13-2272-04	GEAR	
230	3C	*	D13-2273-14	GEAR	
232	3C	*	D13-2274-14	GEAR	
233	3D	*	D13-2276-04	GEAR	
234	3D	*	D13-2277-04	GEAR	
235	3D	*	D13-2278-04	GEAR	
236	3D	*	D13-2289-03	RACK (GEAR)	
237	3C	*	D13-2290-04	GEAR ASSY	
238	3C	*	D16-0617-05	BELT	
239	3C	*	D23-0958-04	RETAINER	
242	2D	*	E30-6211-05	CORD WITH PINPLUG (3PR)	K3
242	2D	*	E30-6213-05	CORD WITH PINPLUG (2PR)	E3
243	2D	*	E30-6216-05	CORD WITH DIN CONNECTOR (CH)	K3
243	2D	*	E30-6217-05	CORD WITH DIN CONNECTOR (CH+DIS)	E3
245	3D	*	E41-0351-05	FLAT CABLE CONNECTOR	
△ DC1	1C		E30-4942-05	DC CORD (ISO)	E3
△ DC2	1C		E30-6106-05	DC CORD	K3
FC1	2D	*	E39-0565-05	FLAT CABLE	
249	2C	*	F07-1121-03	COVER	
250	3C	*	F07-1122-03	COVER	
251	3C	*	F07-1123-03	COVER	
252	2C	*	F09-1794-04	SHEET	
253	3C	*	F09-1798-04	SHEET	
256	2D	*	F09-1842-04	SHEET	
262	2D		F29-0049-05	INSULATING COVER	
△ F1	2D		F52-0006-05	FUSE (MINI BLADE TYPE)	
264	2C	*	G01-3162-04	EXTENSION SPRING	
265	3C	*	G01-3188-04	EXTENSION SPRING	
266	3C	*	G01-3189-04	TORSION COIL SPRING	
267	3D	*	G01-3199-04	TORSION COIL SPRING	
270	2C	*	G11-3539-04	CUSHION	
272	3D	*	G11-3559-04	CUSHION	
-		*	H10-4854-12	POLYSTYRENE FOAMED FIXTURE	
-		*	H21-1151-04	PROTECTION SHEET	
-			H25-0329-04	PROTECTION BAG (280X450X0.03)	K3
-			H25-0337-04	PROTECTION BAG (180X300X0.03)	E3
-			H25-1111-04	PROTECTION BAG (280X450X0.03)	
-		*	H54-2718-03	ITEM CARTON CASE	K3
-		*	H54-2726-03	ITEM CARTON CASE	E3
277	3C	*	J19-5220-03	HOLDER	
278	1C	*	J21-9823-03	MOUNTING HARDWARE ASSY	
279	3D	*	J21-9951-03	MOUNTING HARDWARE ASSY	
280	3D	*	J21-9954-02	MOUNTING HARDWARE ASSY	
281	2C	*	J21-9956-12	MOUNTING HARDWARE ASSY	
283	3D	*	J21-9997-03	MOUNTING HARDWARE ASSY	
284	2C	*	J21-9999-02	MOUNTING HARDWARE ASSY	
285	3C	*	J31-1055-04	COLLAR	
286	3C	*	J31-1056-04	COLLAR	
287	3D	*	J74-1444-04	RIGID PRINTED WIRING BOARD	
FPC1	2D	*	J84-0153-05	FLEXIBLE PRINTED WIRING BOARD	
FPC2	3D	*	J84-0156-04	FLEXIBLE PRINTED WIRING BOARD	
292	1C	*	K24-4004-04	KNOB (PLAY)	
293	1C	*	K24-4005-04	KNOB (EJECT)	
294	1C	*	K24-4006-04	KNOB (ATT)	
295	2C	*	K24-4007-04	KNOB (OPEN)	
296	1C	*	K25-1527-03	KNOB (SRC,Q)	
297	1C	*	K25-1529-03	KNOB (AM/FM)	
298	1C	*	K25-1530-04	KNOB (SCRL)	
299	2C	*	K25-1528-03	KNOB (1-6)	
300	1C	*	K29-7031-03	KNOB ASSY (VOL)	
302	1C		N99-1723-05	SCREW SET	K3
303	1C	*	N99-1734-05	SCREW SET	
A	3D	*	N09-4448-05	MACHINE SCREW	
B	3C	*	N09-6073-05	STEPPED SCREW	
C	3D	*	N09-6087-05	MACHINE SCREW	
D	3C	*	N09-6088-05	STEPPED SCREW	
E	3D	*	N09-6089-05	MACHINE SCREW	
F	2C	*	N09-6093-05	TAPTITE SCREW	
G	2C	*	N09-6094-05	MACHINE SCREW	

E : Europe K : North America
M : Other Areas W : Without Europe

K3 : KDC-MP822
E3 : KDC-M7024

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

KDC-M7024/MP822

Ref. No.	Add	New	Parts No.	Description	Destination
H	2C	*	N09-6095-05	MACHINE SCREW	E3
J	2C	*	N09-6096-05	MACHINE SCREW	
K	3C	*	N09-6097-05	MACHINE SCREW	
M	2C	*	N09-6105-05	STEPPED SCREW	
N	2C	*	N19-2175-04	FLAT WASHER	
P	3D	*	N19-2176-04	FLAT WASHER	
Q	2C		N24-3015-60	E TYPE RETAINING RING	
R	3C		N38-2025-46	PAN HEAD MACHIN SCREW	
S	3D	*	N38-2650-45	PAN HEAD MACHIN SCREW	
T	2D		N67-3005-46	PAN HEAD SEMS SCREW	
U	2D		N83-3005-46	PAN HEAD TAPTITE SCREW	
V	2D		N83-3008-46	PAN HEAD TAPTITE SCREW	
W	3C		N86-2004-45	BINDING HEAD TAPTITE SCREW	
RLED			RK73GB2A102J	CHIP R 1.0K J 1/10W	
RPH			RK73GB2A104J	CHIP R 100K J 1/10W	
SW1			S68-0871-05	PUSH SWITCH (PANEL MECHA)	
SW2-3			S68-0863-05	PUSH SWITCH (PANEL MECHA)	
SW4			S68-0864-05	PUSH SWITCH (PANEL MECHA)	
306	1C		T90-0552-05	ANTENNA ADAPTOR	
PH			T95-0212-05	OPTO ISOLATOR (PANEL MECHA)	
PM1	3D	*	T42-1076-14	MOTOR ASSY	
PM2	3D	*	T42-1077-04	MOTOR ASSY	
DME1	1D		X92-4670-01	CD MECHANISM ASSY	
SUB-CIRCUIT UNIT (X16-2080-10)					
J1			E59-0833-15	RECTANGULAR PLUG	
CP1			R90-1019-05	MULTI-COMP 100 X2	
IC1		*	BR24C01AFV-W	MEMORY IC	
SUB-CIRCUIT UNIT (X16-2140-10)					
310	2C	*	B11-1405-04	REFLECTION SHEET	
311	2C	*	B11-1406-04	OPTICAL DIFFUSER	
312	2C	*	B19-2204-02	LIGHTING BOARD	
D11			B30-1564-05	LED (1608, BLUE)	
D16-19			B30-1571-05	LED (WHITE)	
ED1		*	B38-1119-05	LIQUID CRYSTAL	
C1			CC73GCH1H681J	CHIP C 680PF J	
C2-5			CK73GB1C104K	CHIP C 0.10UF K	
C2-5			CK73GB1H104K	CHIP C 0.10UF K	
C6			CK73GB1H103K	CHIP C 0.010UF K	
C7			CK73FB1A225K	CHIP C 2.2UF K	
C11			CC73GCH1H681J	CHIP C 680PF J	
C12-14			CK73GB1C104K	CHIP C 0.10UF K	
C12-14			CK73GB1H104K	CHIP C 0.10UF K	
C15			CK73GB1H103K	CHIP C 0.010UF K	
C16			CK73GB1C104K	CHIP C 0.10UF K	
C16			CK73GB1H104K	CHIP C 0.10UF K	
C21			CK73GB1H103K	CHIP C 0.010UF K	
C26-29			CK73GB1H103K	CHIP C 0.010UF K	
313	2C	*	E29-1930-04	CONDUCTIVE RUBBER	
CN1			E40-9364-05	FLAT CABLE CONNECTOR	
CN2			E41-0166-05	FLAT CABLE CONNECTOR	

Ref. No.	Add	New	Parts No.	Description				Destination
CP1			R90-1016-05	MULTI-COMP	470	X4		
CP4,5			R90-0724-05	MULTI-COMP	1K	X4		
R1			RK73GB2A433J	CHIP R	43K	J	1/10W	
R2-5			RK73GB2A222J	CHIP R	2.2K	J	1/10W	
R6			RK73GB2A392J	CHIP R	3.9K	J	1/10W	
R7,8			RK73GB2A331J	CHIP R	330	J	1/10W	
R9			RK73GB2A101J	CHIP R	100	J	1/10W	
R10			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R11			RK73GB2A4R7J	CHIP R	4.7	J	1/10W	
R12			RK73GB2A751J	CHIP R	750	J	1/10W	
R13			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R14			RK73GB2A4R7J	CHIP R	4.7	J	1/10W	
R15			RK73GB2A104J	CHIP R	100K	J	1/10W	
R23			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R24			RK73GB2A473J	CHIP R	47K	J	1/10W	
R26			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R31			RK73GB2A433J	CHIP R	43K	J	1/10W	
R32-35			RK73GB2A222J	CHIP R	2.2K	J	1/10W	
R36			RK73GB2A4R7J	CHIP R	4.7	J	1/10W	
R41,42			RK73GB2A122J	CHIP R	1.2K	J	1/10W	
R51,52			RK73FB2B271J	CHIP R	270	J	1/8W	
R53,54			RK73GB2A472J	CHIP R	4.7K	J	1/10W	
R67,68			RK73GB2A331J	CHIP R	330	J	1/10W	
D1			MA3062-M	ZENER DIODE				
D2-5			DA204U	DIODE				
D21,22			FTZ6.8E	ZENER DIODE				
D26			MA3091-M	ZENER DIODE				
IC1			LC75808W	MOS-IC				
IC2			LC75878W	MOS-IC				
IC3			RS-171	ANALOGUE IC				
Q1			DTA114EUA	DIGITAL TRANSISTOR				
Q1			UN5111	DIGITAL TRANSISTOR				
Q5			2SC4081	TRANSISTOR				
Q6			DTA114EUA	DIGITAL TRANSISTOR				
Q6			UN5111	DIGITAL TRANSISTOR				
Q11			2SC4081	TRANSISTOR				
SWITCH UNIT (X16-2190-10)								
D1-11			B30-1605-05	LED (2COLOR PG/RED)				
D12			B30-1566-05	LED (1608, RED)				
D13			B30-1605-05	LED (2COLOR PG/RED)				
D14			B30-1566-05	LED (1608, RED)				
D15			B30-1605-05	LED (2COLOR PG/RED)				
D16			B30-1566-05	LED (1608, RED)				
D17			B30-1605-05	LED (2COLOR PG/RED)				
D18,19			B30-1566-05	LED (1608, RED)				
D21			B30-1566-05	LED (1608,RED)				
CN1		*	E41-0419-05	FLAT CABLE CONNECTOR				
R1,2			RK73FB2B511J	CHIP R	510	J	1/8W	
R3-5			RK73FB2B331J	CHIP R	330	J	1/8W	
R6-9			RK73FB2B511J	CHIP R	510	J	1/8W	
R10			RK73FB2B471J	CHIP R	470	J	1/8W	
R15			RK73GB2A241J	CHIP R	240	J	1/10W	
R16-19			RK73GB2A102J	CHIP R	1.0K	J	1/10W	

E : Europe K : North America
M : Other Areas W : Without Europe

K3 : KDC-MP822
E3 : KDC-M7024

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

SWITCH UNIT (X16-2190-10)

Ref. No.	Add	New	Parts No.	Description	Destination
S1		*	S70-0901-05	TACT SWITCH	
S2,3			S70-0864-05	TACT SWITCH	
S4			S70-0856-05	TACT SWITCH	
S5-8			S70-0864-05	TACT SWITCH	
S9			S70-0856-05	TACT SWITCH	
S10-13			S70-0864-05	TACT SWITCH	
S14			S70-0856-05	TACT SWITCH	
S15-18			S70-0864-05	TACT SWITCH	
S19			S70-0856-05	TACT SWITCH	
S20			S70-0864-05	TACT SWITCH	
S21		*	T99-0445-05	ROTARY ENCODER	
D20			DAP202U	DIODE	
D20			MA142WA	DIODE	
Q1			DTA114YUA	DIGITAL TRANSISTOR	
Q1			UN5114	DIGITAL TRANSISTOR	
Q2,3			2SC4081	TRANSISTOR	
SUB-CIRCUIT UNIT (X16-2210-10)					
315	2C	*	E58-0968-05	RECTANGULAR RECEPTACLE	
FPC3	2C	*	J84-0154-05	FLEXIBLE PRINTED WIRING BOARD	
ELECTRIC UNIT (X25-966x-xx)					
C1,2			CE04NW1HR47M	ELECTRO 0.47UF 50WV	
C3,4			CK73FB1C474K	CHIP C 0.47UF K	
C5			CE04NW0J470M	ELECTRO 47UF 6.3WV	
C9			CK73GB1A474K	CHIP C 0.47UF K	
C10			CC73GCH1H151J	CHIP C 150PF J	
C11			CK73GB1E223K	CHIP C 0.022UF K	
C11			CK73GB1H223K	CHIP C 0.022UF K	
C12			CK73GB1H103K	CHIP C 0.010UF K	
C13-16			CK73FB1H104K	CHIP C 0.10UF K	
C21-24			CK73FB1C105K	CHIP C 1.0UF K	E3
C21,22			CK73FB1C105K	CHIP C 1.0UF K	K3
C31-34			C90-5296-05	NP-ELECT 0.22UF 50WV	
C41,42			CE04NW1V3R3M	ELECTRO 3.3UF 35WV	
C45,46			CE04NW1V3R3M	ELECTRO 3.3UF 35WV	K3
C49,50			CE04NW1V3R3M	ELECTRO 3.3UF 35WV	
C67			CK73FB1H104K	CHIP C 0.10UF K	E3
C67-69			CK73FB1H104K	CHIP C 0.10UF K	K3
C69			CK73FB1H104K	CHIP C 0.10UF K	E3
C71			CK73GB1H103K	CHIP C 0.010UF K	
C100			C90-5235-05	ELECTRO 2200UF 16WV	K3
C100			C90-5484-05	ELECTRO 3900UF 16WV	E3
C101			CK73GB1H103K	CHIP C 0.010UF K	
C102			C90-2866-05	ELECTRO 220UF 16WV	
C103			CK73GB1H103K	CHIP C 0.010UF K	
C104			CE04NW1C100M	ELECTRO 10UF 16WV	
C105			CE04NW0J101M	ELECTRO 100UF 6.3WV	△
C106			CK73GB1A474K	CHIP C 0.47UF K	
C107			CK73FB1C105K	CHIP C 1.0UF K	
C108			CE04CW1A221M	ELECTRO 220UF 10WV	
C109			CE04CW1A101M	ELECTRO 100UF 10WV	
C110,111			C90-2963-05	ELECTRO 100UF 25WV	
C112,113			C90-5418-05	ELECTRO 220UF 16WV	
C114			CK73GB1A224K	CHIP C 0.22UF K	
C126			CE04NW1V3R3M	ELECTRO 3.3UF 35WV	
C127			CK73GB1C683K	CHIP C 0.068UF K	
C127			CK73GB1H683K	CHIP C 0.068UF K	
C128			CE04NW1H0R1M	ELECTRO 0.1UF 50WV	
C129			CK73GB1H103K	CHIP C 0.010UF K	E3
C130			CK73GB1E223K	CHIP C 0.022UF K	
C130			CK73GB1H223K	CHIP C 0.022UF K	
C131			CE04NW1H010M	ELECTRO 1.0UF 50WV	
C132			CK73GB1H102K	CHIP C 1000PF K	
C134,135			CK73GB1H103K	CHIP C 0.010UF K	
C200			CE04NW0J470M	ELECTRO 47UF 6.3WV	
C201			CK73GB1H103K	CHIP C 0.010UF K	
C202			CC73GCH1H220J	CHIP C 22PF J	
C203			CC73GCH1H270J	CHIP C 27PF J	
C204			CK73GB0J105K	CHIP C 1.0UF K	
C206			CK73GB0J105K	CHIP C 1.0UF K	
C207,208			CK73GB1H103K	CHIP C 0.010UF K	
C211			CK73GB1H102K	CHIP C 1000PF K	
C213			CK73GB1H103K	CHIP C 0.010UF K	
C250			CE04NW1C470M	ELECTRO 47UF 16WV	
C251			CK73GB1H103K	CHIP C 0.010UF K	
C252			CE04MW1H2R2M	ELECTRO 2.2UF 50WV	E3
C252			CE04NW1H2R2M	ELECTRO 2.2UF 50WV	K3
C253,254			CK73GB1C104K	CHIP C 0.10UF K	
C253,254			CK73GB1H104K	CHIP C 0.10UF K	
C255			CE04NW1H010M	ELECTRO 1.0UF 50WV	
C256			CE04NW1C330M	ELECTRO 33UF 16WV	
C257			C90-2935-05	ELECTRO 1.0UF 50WV	
C258			CE04NW1H010M	ELECTRO 1.0UF 50WV	
C259-262			CK73GB1A224K	CHIP C 0.22UF K	
C401			CK73GB1H103K	CHIP C 0.010UF K	
C403			CK73GB1H103K	CHIP C 0.010UF K	
C405			CK73GB1H103K	CHIP C 0.010UF K	
C407			CK73GB1H103K	CHIP C 0.010UF K	
C408			CK73FB1A225K	CHIP C 2.2UF K	E3
C409			CK73GB1H103K	CHIP C 0.010UF K	E3
C410			CE04NW1C100M	ELECTRO 10UF 16WV	E3
C411			CC73GCH1H331J	CHIP C 330PF J	E3
C412,413			CC73GCH1H100D	CHIP C 10PF D	E3
CN1			E41-0224-05	PIN ASSY	
CN2			E40-3237-05	PIN ASSY	
CN3		*	E41-0384-05	PIN ASSY	
CN4			E40-9527-05	FLAT CABLE CONNECTOR	
CN4			E41-0213-05	FLAT CABLE CONNECTOR	
CN5			E40-9368-05	FLAT CABLE CONNECTOR	
CN6		*	E41-0399-05	FLAT CABLE CONNECTOR	
CN7			E41-0009-05	PIN ASSY	
J1		*	E58-0863-15	RECTANGULAR RECEPTACLE	
W2		*	E30-6218-05	CORD WITH PLUG	
L1			L33-1170-05	CHOKE COIL ASSY	
L2		*	L33-1903-05	CHOKE COIL	
L4			L40-4795-91	SMALL FIXED INDUCTOR (4.7UH,J)	
L5			L92-0075-05	CHIP FERRITE	
L6			L40-4795-91	SMALL FIXED INDUCTOR (4.7UH,J)	

E : Europe K : North America
M : Other Areas W : Without Europe

K3 : KDC-MP822
E3 : KDC-M7024

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

ELECTRIC UNIT (X25-966x-xx)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
L7			L33-1039-05	LINE FILTER COIL	
L11-13			L40-4795-34	SMALL FIXED INDUCTOR	E3
L11-13			L40-4795-68	SMALL FIXED INDUCTOR (4.7UH)	E3
L11,12			L40-4795-34	SMALL FIXED INDUCTOR	K3
L11,12			L40-4795-68	SMALL FIXED INDUCTOR (4.7UH)	K3
X1			L78-0821-05	RESONATOR	
X2			L77-2738-05	CRYSTAL RESONATOR	
X3			L77-2002-05	CRYSTAL RESONATOR E3	
U	2D		N83-3005-46	PAN HEAD TAPTITE SCREW	
X	2D		N80-3008-46	PAN HEAD TAPTITE SCREW	
Y	2D		N83-3010-46	PAN HEAD TAPTITE SCREW	
Z	2D		N84-2004-46	PAN HEAD TAPTITE SCREW	
R1,2			RK73EB2E100J	CHIP R 10 J 1/4W	
R3			RK73EB2E4R7J	CHIP R 4.7 J 1/4W	
R7			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R8			RK73GB2A103J	CHIP R 10K J 1/10W	
R9,10			RK73FB2B333J	CHIP R 33K J 1/8W	
R21,22			RK73GB2A361J	CHIP R 360 J 1/10W	
R23,24			RK73GB2A223J	CHIP R 22K J 1/10W	
R31,32			RK73EB2E181J	CHIP R 180 J 1/4W	
R33,34			RK73GB2A361J	CHIP R 360 J 1/10W	K3
R35,36			RK73GB2A223J	CHIP R 22K J 1/10W	K3
R43,44			RK73EB2E181J	CHIP R 180 J 1/4W	K3
R45,46			RK73GB2A361J	CHIP R 360 J 1/10W	
R47,48			RK73GB2A223J	CHIP R 22K J 1/10W	
R55,56			RK73EB2E181J	CHIP R 180 J 1/4W	
R61			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R100			RK73FB2B223J	CHIP R 22K J 1/8W	
R101			RK73GB2A101J	CHIP R 100 J 1/10W	
R102			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R103			RK73GB2A223J	CHIP R 22K J 1/10W	
R104			RK73FB2B221J	CHIP R 220 J 1/8W	
R105			RK73GB2A153J	CHIP R 15K J 1/10W	
R106			R92-3047-05	CHIP R 24K D 1/10W	
R107			R92-3032-05	CHIP R 4.3K D 1/10W	
R108			RK73FB2B152J	CHIP R 1.5K J 1/8W	
R109-111			RK73GB2A473J	CHIP R 47K J 1/10W	
R112			RK73FB2B152J	CHIP R 1.5K J 1/8W	
R124			RK73FB2B472J	CHIP R 4.7K J 1/8W	
R125,126			RD14DB2H102J	SMALL-RD 1.0K J 1/2W	K3
R127			RK73GB2A223J	CHIP R 22K J 1/10W	K3
R128,129			RD14DB2H102J	SMALL-RD 1.0K J 1/2W	
R130			RK73GB2A223J	CHIP R 22K J 1/10W	
R131			RK73FB2B472J	CHIP R 4.7K J 1/8W	
R132			RK73FB2B561J	CHIP R 560 J 1/8W	E3
R133			RK73GB2A104J	CHIP R 100K J 1/10W	
R134			RK73GB2A473J	CHIP R 47K J 1/10W	E3
R135			RK73GB2A104J	CHIP R 100K J 1/10W	K3
R135			RK73GB2A223J	CHIP R 22K J 1/10W	E3
R138			RK73GB2A223J	CHIP R 22K J 1/10W	
R139			RK73FB2B103J	CHIP R 10K J 1/8W	
R140			RK73GB2A103J	CHIP R 10K J 1/10W	
R141			RK73GB2A822J	CHIP R 8.2K J 1/10W	
R142			RK73GB2A183J	CHIP R 18K J 1/10W	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
R143			RD14DB2H332J	SMALL-RD 3.3K J 1/2W	
R144			RK73EB2E473J	CHIP R 47K J 1/4W	
R145			RK73GB2A104J	CHIP R 100K J 1/10W	
R146			RK73EB2E102J	CHIP R 1.0K J 1/4W	E3
R147,148			RK73EB2E103J	CHIP R 10K J 1/4W	E3
R148			RK73EB2E103J	CHIP R 10K J 1/4W	K3
R200			RK73GB2A153J	CHIP R 15K J 1/10W	
R201			RK73GB2A103J	CHIP R 10K J 1/10W	
R202			RK73GB2A104J	CHIP R 100K J 1/10W	
R203			RK73GB2A103J	CHIP R 10K J 1/10W	E3
R205,206			RK73GB2A103J	CHIP R 10K J 1/10W	K3
R206			RK73GB2A103J	CHIP R 10K J 1/10W	E3
R207			RK73GB2A104J	CHIP R 100K J 1/10W	
R208,209			RK73GB2A103J	CHIP R 10K J 1/10W	
R212,213			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R214,215			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R216,217			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R218			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R219,220			RK73GB2A101J	CHIP R 100 J 1/10W	
R221-224			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R225-227			RK73GB2A101J	CHIP R 100 J 1/10W	E3
R228			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R229			RK73GB2A104J	CHIP R 100K J 1/10W	
R230			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R231			RK73GB2A104J	CHIP R 100K J 1/10W	
R232			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R233			RK73GB2A104J	CHIP R 100K J 1/10W	
R234-240			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R241			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R245,246			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R247			RK73GB2A104J	CHIP R 100K J 1/10W	
R248			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R250-253			RK73GB2A104J	CHIP R 100K J 1/10W	K3
R250,251			RK73GB2A104J	CHIP R 100K J 1/10W	E3
R254,255			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R256			RK73GB2A104J	CHIP R 100K J 1/10W	E3
R256,257			RK73GB2A104J	CHIP R 100K J 1/10W	K3
R259			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R260,261			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R262			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R264			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R265			RK73GB2A104J	CHIP R 100K J 1/10W	
R266			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R267			RK73GB2A473J	CHIP R 47K J 1/10W	
R268			RK73GB2A333J	CHIP R 33K J 1/10W	
R269			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R270,271			RK73GB2A471J	CHIP R 470 J 1/10W	
R272			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R273			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R274			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R275			RK73GB2A104J	CHIP R 100K J 1/10W	
R277,278			RK73GB2A471J	CHIP R 470 J 1/10W	
R279,280			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R281			RK73GB2A473J	CHIP R 47K J 1/10W	
R285			RK73GB2A102J	CHIP R 1.0K J 1/10W	

E : Europe K : North America
M : Other Areas W : Without EuropeK3 : KDC-MP822
E3 : KDC-M7024

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

ELECTRIC UNIT (X25-966x-xx)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation	Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
R300,301			RK73GB2A472J	CHIP R 4.7K J 1/10W		IC4			TDA7560	ANALOGUE IC	
R302			RK73GB2A221J	CHIP R 220 J 1/10W		IC5			SI-8050JD	ANALOGUE IC	
R303			RK73GB2A223J	CHIP R 22K J 1/10W		IC7			S-80837CNNB	MOS-IC	
R305			RK73GB2A432J	CHIP R 4.3K J 1/10W		IC8			TC74HC02AF	MOS-IC	
R306			RK73GB2A100J	CHIP R 10 J 1/10W		IC12			TDA7479D	ANALOGUE IC	E3
R307			RK73GB2A622J	CHIP R 6.2K J 1/10W		IC13,14			LB1930M	ANALOGUE IC	
R308			RK73EB2E102J	CHIP R 1.0K J 1/4W	E3	IC15			BR24C01AF-W	ROM IC	
R309-311			RK73EB2E471J	CHIP R 470 J 1/4W	E3	Q1			2SA2057	TRANSISTOR	
R312			RK73EB2E101J	CHIP R 100 J 1/4W		Q2			2SC4081	TRANSISTOR	
R313-317			RK73EB2E472J	CHIP R 4.7K J 1/4W		Q3			2SA1576A	TRANSISTOR	
R318,319			RK73EB2E101J	CHIP R 100 J 1/4W		Q4			DTA124EUA	DIGITAL TRANSISTOR	
R321-323			RK73GB2A222J	CHIP R 2.2K J 1/10W		Q4			UN5112	DIGITAL TRANSISTOR	
R324,325			RK73GB2A472J	CHIP R 4.7K J 1/10W		Q5			DTC124EUA	DIGITAL TRANSISTOR	
R326			RK73GB2A104J	CHIP R 100K J 1/10W		Q5			UN5212	DIGITAL TRANSISTOR	
R327,328			RK73GB2A472J	CHIP R 4.7K J 1/10W		Q6			DTC144EUA	DIGITAL TRANSISTOR	
R329			RK73EB2E472J	CHIP R 4.7K J 1/4W		Q6			UN5213	DIGITAL TRANSISTOR	
R330,331			RK73EB2E101J	CHIP R 100 J 1/4W		Q7			DTA124EUA	DIGITAL TRANSISTOR	
R332			RK73EB2E471J	CHIP R 470 J 1/4W		Q7			UN5112	DIGITAL TRANSISTOR	
R402			RK73FB2B102J	CHIP R 1.0K J 1/8W		Q8,9			2SA2057	TRANSISTOR	
R403			RK73GB2A223J	CHIP R 22K J 1/10W		Q10			2SC4081	TRANSISTOR	
R404			RK73GB2A472J	CHIP R 4.7K J 1/10W	E3	Q11			DTC124EUA	DIGITAL TRANSISTOR	
R405-407			RK73GB2A222J	CHIP R 2.2K J 1/10W	E3	Q11			UN5212	DIGITAL TRANSISTOR	
W1			R92-1252-05	CHIP R 0 OHM J 1/16W	E3	Q12			DTA124EUA	DIGITAL TRANSISTOR	
D1			1N5393G-M5	DIODE		Q12			UN5112	DIGITAL TRANSISTOR	
D2			RB160L-40	DIODE		Q13			2SA2057	TRANSISTOR	
D3			MA4056(N)-M	ZENER DIODE		Q14			2SC4081	TRANSISTOR	
D4			MA4082(N)-L	ZENER DIODE		Q23			DTC114YUA	DIGITAL TRANSISTOR	K3
D5			SFPB-54V	DIODE		Q23			UN5214	DIGITAL TRANSISTOR	K3
D6			MA4110-L	ZENER DIODE		Q24,25			2SB1240	TRANSISTOR	K3
D9-12			S1J	DIODE		Q25			2SB1240	TRANSISTOR	E3
D9-12			1SR154-400	DIODE		Q26			DTC114YUA	DIGITAL TRANSISTOR	
D13			1SS133	DIODE		Q26			UN5214	DIGITAL TRANSISTOR	
D14			MA4056-M	ZENER DIODE	E3	Q27			2SA1576A	TRANSISTOR	
D15			MA4047-M	ZENER DIODE	E3	Q28			DTA124EUA	DIGITAL TRANSISTOR	
D16			MA4068(N)-M	ZENER DIODE		Q28			UN5112	DIGITAL TRANSISTOR	
D17			MA4062(N)-M	ZENER DIODE		Q29			DTA123JK	DIGITAL TRANSISTOR	E3
D20			1SS133	DIODE		Q29			KRA105S	DIGITAL TRANSISTOR	E3
D23,24			DAP202U	DIODE		Q30			DTC144EUA	DIGITAL TRANSISTOR	
D23,24			MA142WA	DIODE		Q30			UN5213	DIGITAL TRANSISTOR	
D25,26			RD6.8M(B2)	ZENER DIODE		Q32-34			2SC4081	TRANSISTOR	
D29-31			1SS133	DIODE		Q51,52			DTA124EUA	DIGITAL TRANSISTOR	
D33-40			S1J	DIODE		Q51,52			UN5112	DIGITAL TRANSISTOR	
D33-40			1SR154-400	DIODE		Q53			DTC143TUA	DIGITAL TRANSISTOR	
D50			RD6.8M(B2)	ZENER DIODE		Q53			UN5216	DIGITAL TRANSISTOR	
D51			RD6.8MW	ZENER DIODE		Q54			DTC124EUA	DIGITAL TRANSISTOR	
D52-55			MA3062WA	ZENER DIODE	E3	Q54			UN5212	DIGITAL TRANSISTOR	
D52,53			MA3062WA	ZENER DIODE	K3	Q55-60			DTC143TUA	DIGITAL TRANSISTOR	K3
D60			MA3062WA	ZENER DIODE		Q55-60			UN5216	DIGITAL TRANSISTOR	K3
D62			MA3062WA	ZENER DIODE		Q55,56			DTC143TUA	DIGITAL TRANSISTOR	E3
D63-65			DA204U	DIODE		Q55,56			UN5216	DIGITAL TRANSISTOR	E3
D66			IMSA-6801	SURGE ABSORBER		Q59,60			DTC143TUA	DIGITAL TRANSISTOR	E3
IC1		*	UPD703030GC014	MI-COM IC		Q59,60			UN5216	DIGITAL TRANSISTOR	E3
IC2			TDA7411	ANALOGUE IC		Q63			DTA124EUA	DIGITAL TRANSISTOR	
IC3			M5237ML	ANALOGUE IC		Q63			UN5112	DIGITAL TRANSISTOR	
						Q102			DTC124EUA	DIGITAL TRANSISTOR	

E : Europe K : North America
M : Other Areas W : Without Europe

K3 : KDC-MP822
E3 : KDC-M7024

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

ELECTRIC UNIT (X25-966x-xx)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
Q102 Q103 Q104 Q104 TH1			UN5212 2SB1188(Q,R) DTC143TUA UN5216 PTH9C42BD471Q	DIGITAL TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR POSITIVE RESISTOR	E3 E3
A1 A1		*	X86-3730-11 X86-3732-70	FRONT-END UNIT FRONT-END UNIT	K3 E3
CD PLAYER UNIT (X32-5410-00)					
C1 C2 C3 C4 C5			C92-0628-05 CK73FB1A105K CK73FB1A225K CK73GB1H103K CC73GCH1H680J	CHIP-TAN 10UF 10WV CHIP C 1.0UF K CHIP C 2.2UF K CHIP C 0.010UF K CHIP C 68PF J	
C6 C7 C8 C9,10 C11			CC73GCH1H681J CK73GB1H104K CK73GB1H222K CK73GB1H104K CC73GCH1H681J	CHIP C 680PF J CHIP C 0.10UF K CHIP C 2200PF K CHIP C 0.10UF K CHIP C 680PF J	
C12 C13 C15 C16 C17			CK73GB1H222K CC73GCH1H680J CK73EB1A475K CK73GB1H104K CK73GB1H331K	CHIP C 2200PF K CHIP C 68PF J CHIP C 4.7UF K CHIP C 0.10UF K CHIP C 330PF K	
C18 C19,20 C21 C22 C23			CK73GB1H472K CK73GB1H104K CK73EB1A475K CK73GB0J105K CK73FB1A225K	CHIP C 4700PF K CHIP C 0.10UF K CHIP C 4.7UF K CHIP C 1.0UF K CHIP C 2.2UF K	
C26 C27 C28 C29 C30			CK73GB1H104K C92-0712-05 CK73GB1H102K CK73GB1H331K CK73GB1H152K	CHIP C 0.10UF K CHIP-TAN 22UF 6.3WV CHIP C 1000PF K CHIP C 330PF K CHIP C 1500PF K	
C31-35 C36 C41 C42 C45			CK73GB1H104K C92-0712-05 CK73GB1H104K CK73EB1A475K CK73GB1H102K	CHIP C 0.10UF K CHIP-TAN 22UF 6.3WV CHIP C 0.10UF K CHIP C 4.7UF K CHIP C 1000PF K	
C47 C48 C50 C52 C53			C92-0628-05 CK73GB1H104K CK73GB1H104K CK73GB1H152K CK73GB1H104K	CHIP-TAN 10UF 10WV CHIP C 0.10UF K CHIP C 0.10UF K CHIP C 1500PF K CHIP C 0.10UF K	
C55 C56 C57 C59 C61			CC73GCH1H470J CC73GCH1H820J CK73GB1H104K CK73GB1H104K CK73GB1H104K	CHIP C 47PF J CHIP C 82PF J CHIP C 0.10UF K CHIP C 0.10UF K CHIP C 0.10UF K	
C63 C65 C67 C68 C70			CC73GCH1H020C CK73GB1H104K CK73GB1H222K CC73GCH1H060D CK73GB1H104K	CHIP C 2.0PF C CHIP C 0.10UF K CHIP C 2200PF K CHIP C 6.0PF D CHIP C 0.10UF K	
C74			CK73GB1H682K	CHIP C 6800PF K	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
C75 C76 C77 C78 C79-82			CK73GB1H332K CK73GB1H103K CK73GB1H104K CK73EB1A475K CK73GB1H152K	CHIP C 3300PF K CHIP C 0.010UF K CHIP C 0.10UF K CHIP C 4.7UF K CHIP C 1500PF K	
C83 C84 C85 C87 C88			CK73GB1H104K C92-0628-05 CK73GB1H104K CK73EB1A475K CK73GB1H104K	CHIP C 0.10UF K CHIP-TAN 10UF 10WV CHIP C 0.10UF K CHIP C 4.7UF K CHIP C 0.10UF K	
CN1 CN2			E41-0213-05 E40-9536-05	FLAT CABLE CONNECTOR FLAT CABLE CONNECTOR	
L1 L5 X1 X2			L92-0329-05 L92-0329-05 L78-0851-05 L78-0862-05	CHIP FERRITE CHIP FERRITE RESONATOR (16.93MHZ) RESONATOR (16.00MHZ)	
CP1,2 CP4 CP5 CP6 CP7			R90-1019-05 R90-0719-05 R90-0737-05 R90-1019-05 R90-0737-05	MULTI-COMP 100 X2 MULTI-COMP 4.7K X2 MULTI-COMP 100K X2 MULTI-COMP 100 X2 MULTI-COMP 100K X2	
CP13 CP15 CP16-22 CP23 CP24			R90-0720-05 R90-0718-05 R90-1014-05 R90-0714-05 R90-0720-05	MULTI-COMP 100K X4 MULTI-COMP 4.7K X4 MULTI-COMP 100 X4 MULTI-COMP 10K X4 MULTI-COMP 100K X4	
R1 R2 R3 R4 R5			R92-3044-05 R92-3041-05 RK73FB2B303J RK73GB2A222J RK73FB2B272J	CHIP R 18K D 1/10W CHIP R 11K D 1/10W CHIP R 30K J 1/8W CHIP R 2.2K J 1/10W CHIP R 2.7K J 1/8W	
R6 R7,8 R9 R10 R11			RK73FB2B331J RK73FB2B752J RK73FB2B272J RK73FB2B331J R92-3041-05	CHIP R 330 J 1/8W CHIP R 7.5K J 1/8W CHIP R 2.7K J 1/8W CHIP R 330 J 1/8W CHIP R 11K D 1/10W	
R12 R13 R14 R16 R17			RK73FB2B303J R92-3044-05 RK73GB2A472J RK73GB2A123J RK73GB2A133J	CHIP R 30K J 1/8W CHIP R 18K D 1/10W CHIP R 4.7K J 1/10W CHIP R 12K J 1/10W CHIP R 13K J 1/10W	
R18 R19,20 R21 R22 R23,24			RK73GB2A472J RK73GB2A123J RK73GB2A432J RK73GB2A133J RK73GB2A104J	CHIP R 4.7K J 1/10W CHIP R 12K J 1/10W CHIP R 4.3K J 1/10W CHIP R 13K J 1/10W CHIP R 100K J 1/10W	
R25 R26 R27 R28 R29			RK73GB2A102J RK73GB2A104J RK73GB2A102J RK73GB2A103J RK73GB2A133J	CHIP R 1.0K J 1/10W CHIP R 100K J 1/10W CHIP R 1.0K J 1/10W CHIP R 10K J 1/10W CHIP R 13K J 1/10W	
R30 R31 R32			RK73GB2A102J RK73GB2A472J RK73GB2A103J	CHIP R 1.0K J 1/10W CHIP R 4.7K J 1/10W CHIP R 10K J 1/10W	

E : Europe K : North America
M : Other Areas W : Without Europe

K3 : KDC-MP822
E3 : KDC-M7024

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

CD PLAYER UNIT (X32-5410-00)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation	Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
R33			RK73GB2A104J	CHIP R 100K J 1/10W		15	2A		D10-4586-13	SLIDER	
R34			RK73GB2A183J	CHIP R 18K J 1/10W		16	3B		D10-4587-22	SLIDER	
R35			RK73GB2A102J	CHIP R 1.0K J 1/10W		17	3B		D10-4588-13	SLIDER	
R36			RK73GB2A163J	CHIP R 16K J 1/10W		18	3B		D10-4595-04	ARM	
R38			RK73GB2A104J	CHIP R 100K J 1/10W		19	3B		D10-4596-14	ARM	
R39-41			RK73GB2A103J	CHIP R 10K J 1/10W		22	2A		D13-2151-04	GEAR	
R42,43			RK73GB2A104J	CHIP R 100K J 1/10W		23	2B		D13-2152-04	GEAR	
R46			RK73GB2A4R7J	CHIP R 4.7 J 1/10W		24	3B		D13-2153-04	GEAR	
R47			RK73GB2A104J	CHIP R 100K J 1/10W		25	3B		D13-2154-04	GEAR	
R49			RK73GB2A104J	CHIP R 100K J 1/10W		26	3B		D13-2155-04	WORM	
R50			RK73GB2A102J	CHIP R 1.0K J 1/10W		27	3B		D13-2156-14	GEAR	
R51			RK73GB2A103J	CHIP R 10K J 1/10W		28	3B		D13-2157-04	GEAR	
R52			RK73GB2A104J	CHIP R 100K J 1/10W		29	3B		D13-2158-04	GEAR	
R53			RK73GB2A473J	CHIP R 47K J 1/10W		30	3B		D13-2168-04	GEAR	
R55			RK73GB2A103J	CHIP R 10K J 1/10W		31	3B		D13-2171-04	GEAR	
R57			RK73GB2A472J	CHIP R 4.7K J 1/10W		32	2B		D13-2172-03	RACK (GEAR)	
R59			RK73GB2A164J	CHIP R 160K J 1/10W		33	2A		D14-0759-04	ROLLER	
R62,63			RK73GB2A302J	CHIP R 3.0K J 1/10W		35	2B		D21-2382-04	SHAFT	
R67			RK73GB2A682J	CHIP R 6.8K J 1/10W		36	1A		D23-0954-04	RETAINER	
R69			RK73GB2A333J	CHIP R 33K J 1/10W		37	1B		D39-0246-05	DAMPER	
R70			RK73GB2A103J	CHIP R 10K J 1/10W		38	2B		G01-3072-04	EXTENSION SPRING	
R71,72			RK73GB2A101J	CHIP R 100 J 1/10W		39	2A		G01-3073-04	TORSION COIL SPRING	
R73			RK73GB2A241J	CHIP R 240 J 1/10W		40	2A		G01-3074-04	EXTENSION SPRING	
R75			RK73GB2A103J	CHIP R 10K J 1/10W		41	1B		G01-3075-04	EXTENSION SPRING	
R76			RK73GB2A101J	CHIP R 100 J 1/10W		42	2A		G01-3076-04	EXTENSION SPRING	
R77			RK73GB2A102J	CHIP R 1.0K J 1/10W		43	1B		G01-3077-04	EXTENSION SPRING	
R78			RK73GB2A104J	CHIP R 100K J 1/10W		44	2B		G02-1399-04	FLAT SPRING	
W1			R92-1252-05	CHIP R 0 OHM J 1/16W		45	2B		G02-1408-04	FLAT SPRING	
S1,2			S68-0863-05	PUSH SWITCH		51	1A		J21-9676-22	MOUNTING HARDWARE	
S3			S68-0862-05	PUSH SWITCH		52	3B		J21-9677-02	MOUNTING HARDWARE	
D1			DAP202U	DIODE		53	1B		J21-9678-03	MOUNTING HARDWARE	
IC1			TAR5S33	ANALOGUE IC		55	1A		J90-1001-11	GUIDE	
IC2			NJM4580V	ANALOGUE IC		56	1B		J90-1023-03	GUIDE	
IC4			BA5824FP	ANALOGUE IC		A	2B		N09-4460-05	TAPTITE SCREW (OVAL P TAPTIT)	
IC6			L88MS33T	ANALOGUE IC		B	1B		N09-4472-05	MACHINE SCREW (M1.7X8.5)	
IC7			703033BYGC-J02	MI-COM IC		C	2B		N09-6004-05	MACHINE SCREW (M1.7X2.5 IB-L)	
IC8			TC74HCT7007AF	MOS-IC		E	2B		N09-6007-05	MACHINE SCREW (PAN M2X2)	
IC11			UPD63760GJ	MOS-IC		F	1A		N09-6051-05	TAPTITE SCREW (BIND P 2X5)	
IC13			IS41LV16257	DRAM IC		G	2A		N19-2163-04	FLAT WASHER	
IC13			MSM51V4265EP70	DRAM IC		H	1B		N39-2020-46	PAN HEAD MACHIN SCREW	
Q1			DTA143XUA	DIGITAL TRANSISTOR		J	1B		N09-6108-05	MACHINE SCREW (M2*3.5TYPE3)	
Q2,3			DTC124EUA	DIGITAL TRANSISTOR		DM1	3B		T42-1066-04	DC MOTOR ASSY (SP)	
Q4			MCH6101	TRANSISTOR		DM2	2B		T42-1067-04	DC MOTOR ASSY (LO)	
Q5			DTA143EUA	DIGITAL TRANSISTOR		DPU1	2D		X93-2010-00	OPTICAL PICKUP ASSY	
CD MECHANISM ASSY (X92-4670-01)											
2	1B		A10-4827-12	CHASSIS							
5	1B		D10-4576-43	ARM ASSY							
8	2A		D10-4579-03	LEVER ASSY							
10	3A		D10-4581-13	ARM							
11	2A		D10-4582-13	ARM							
12	3A		D10-4583-03	ARM							
13	3A		D10-4584-03	ARM							
14	3B		D10-4585-03	ARM							

E : Europe K : North America
M : Other Areas W : Without Europe

K3 : KDC-MP822
E3 : KDC-M7024

△ Indicates safety critical components.