



EXPLODED VIEW (MECHANISM)

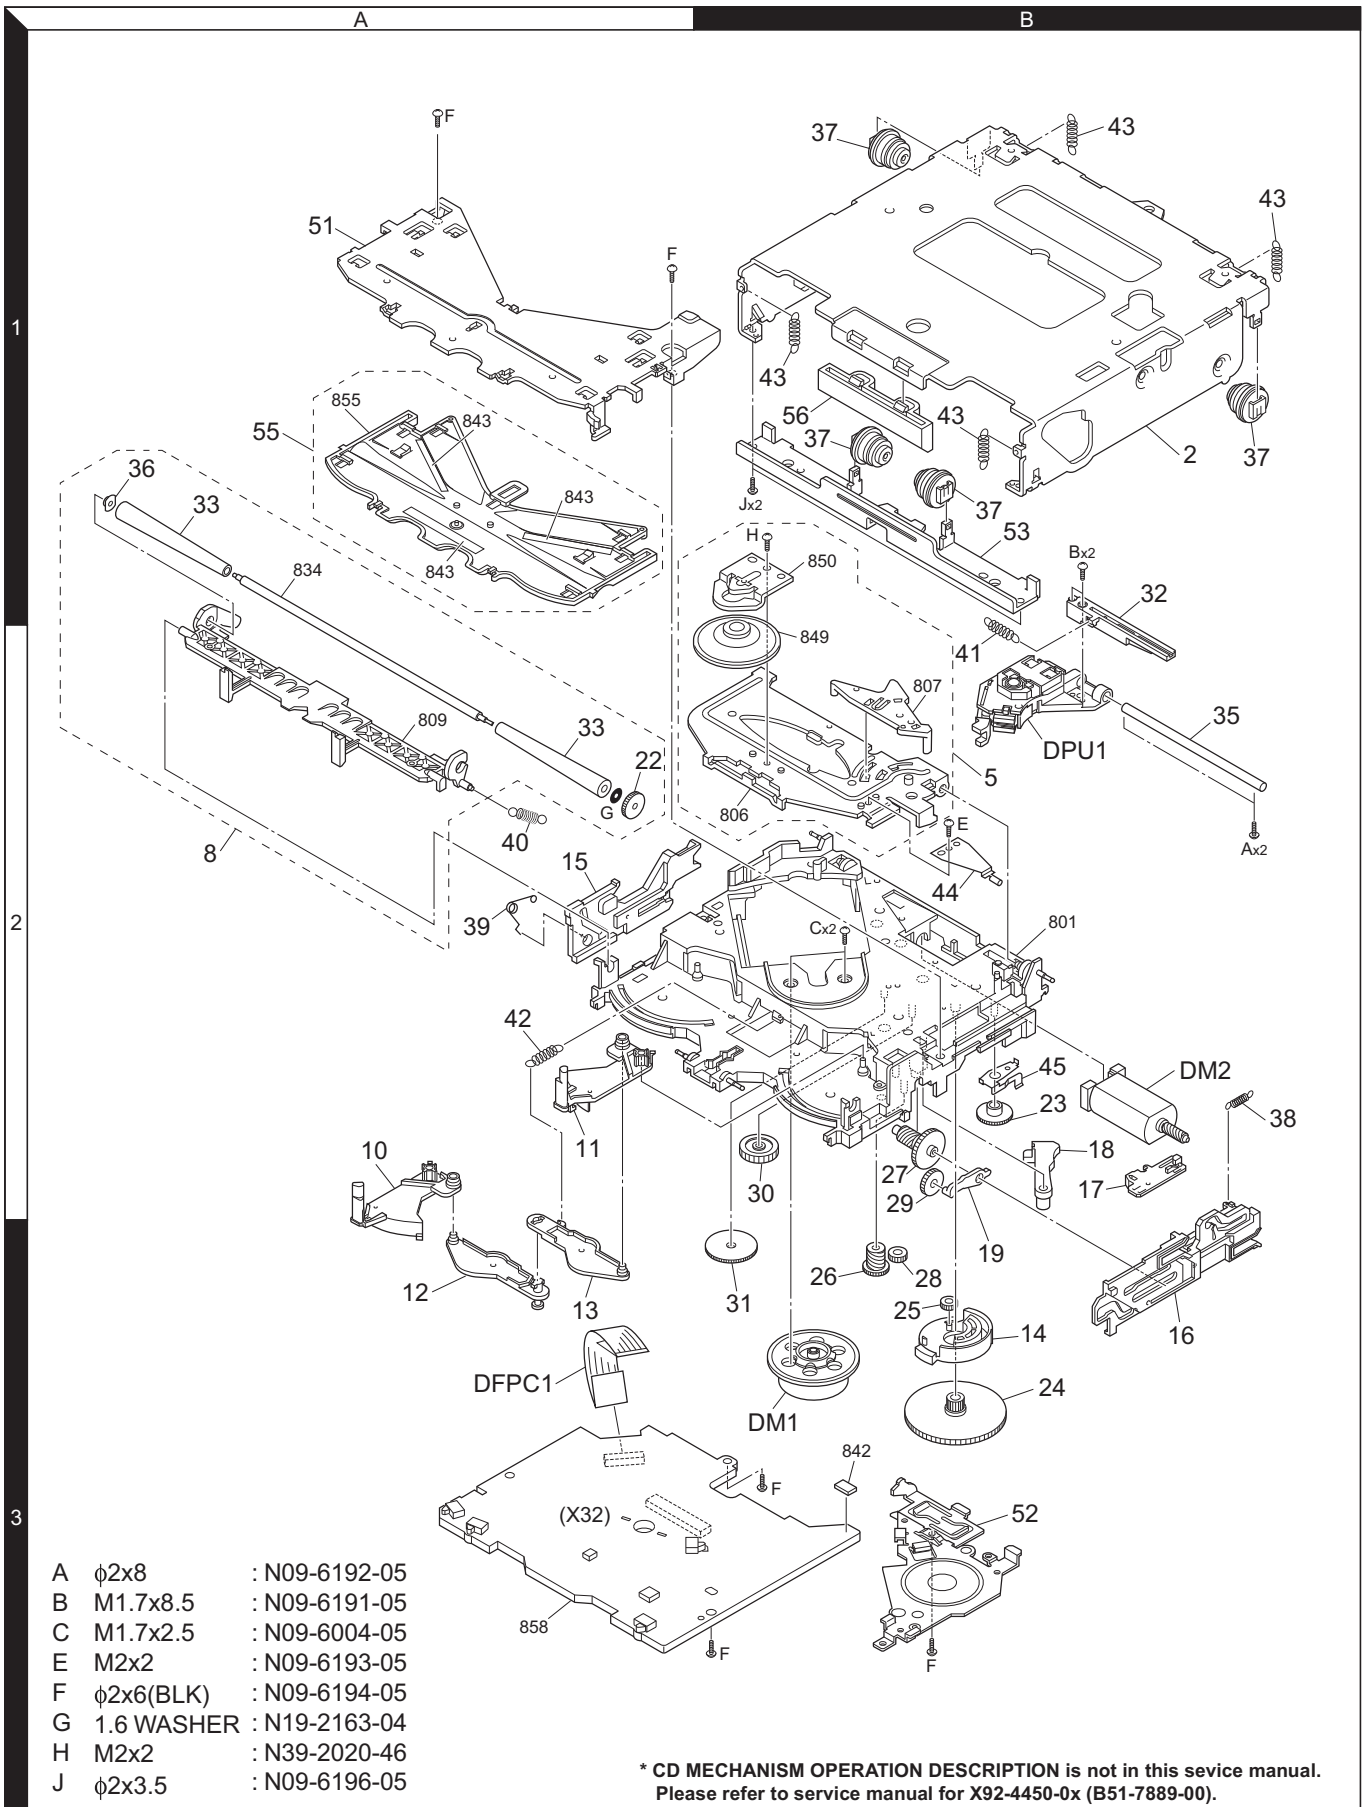

EXPLODED VIEW (UNIT)

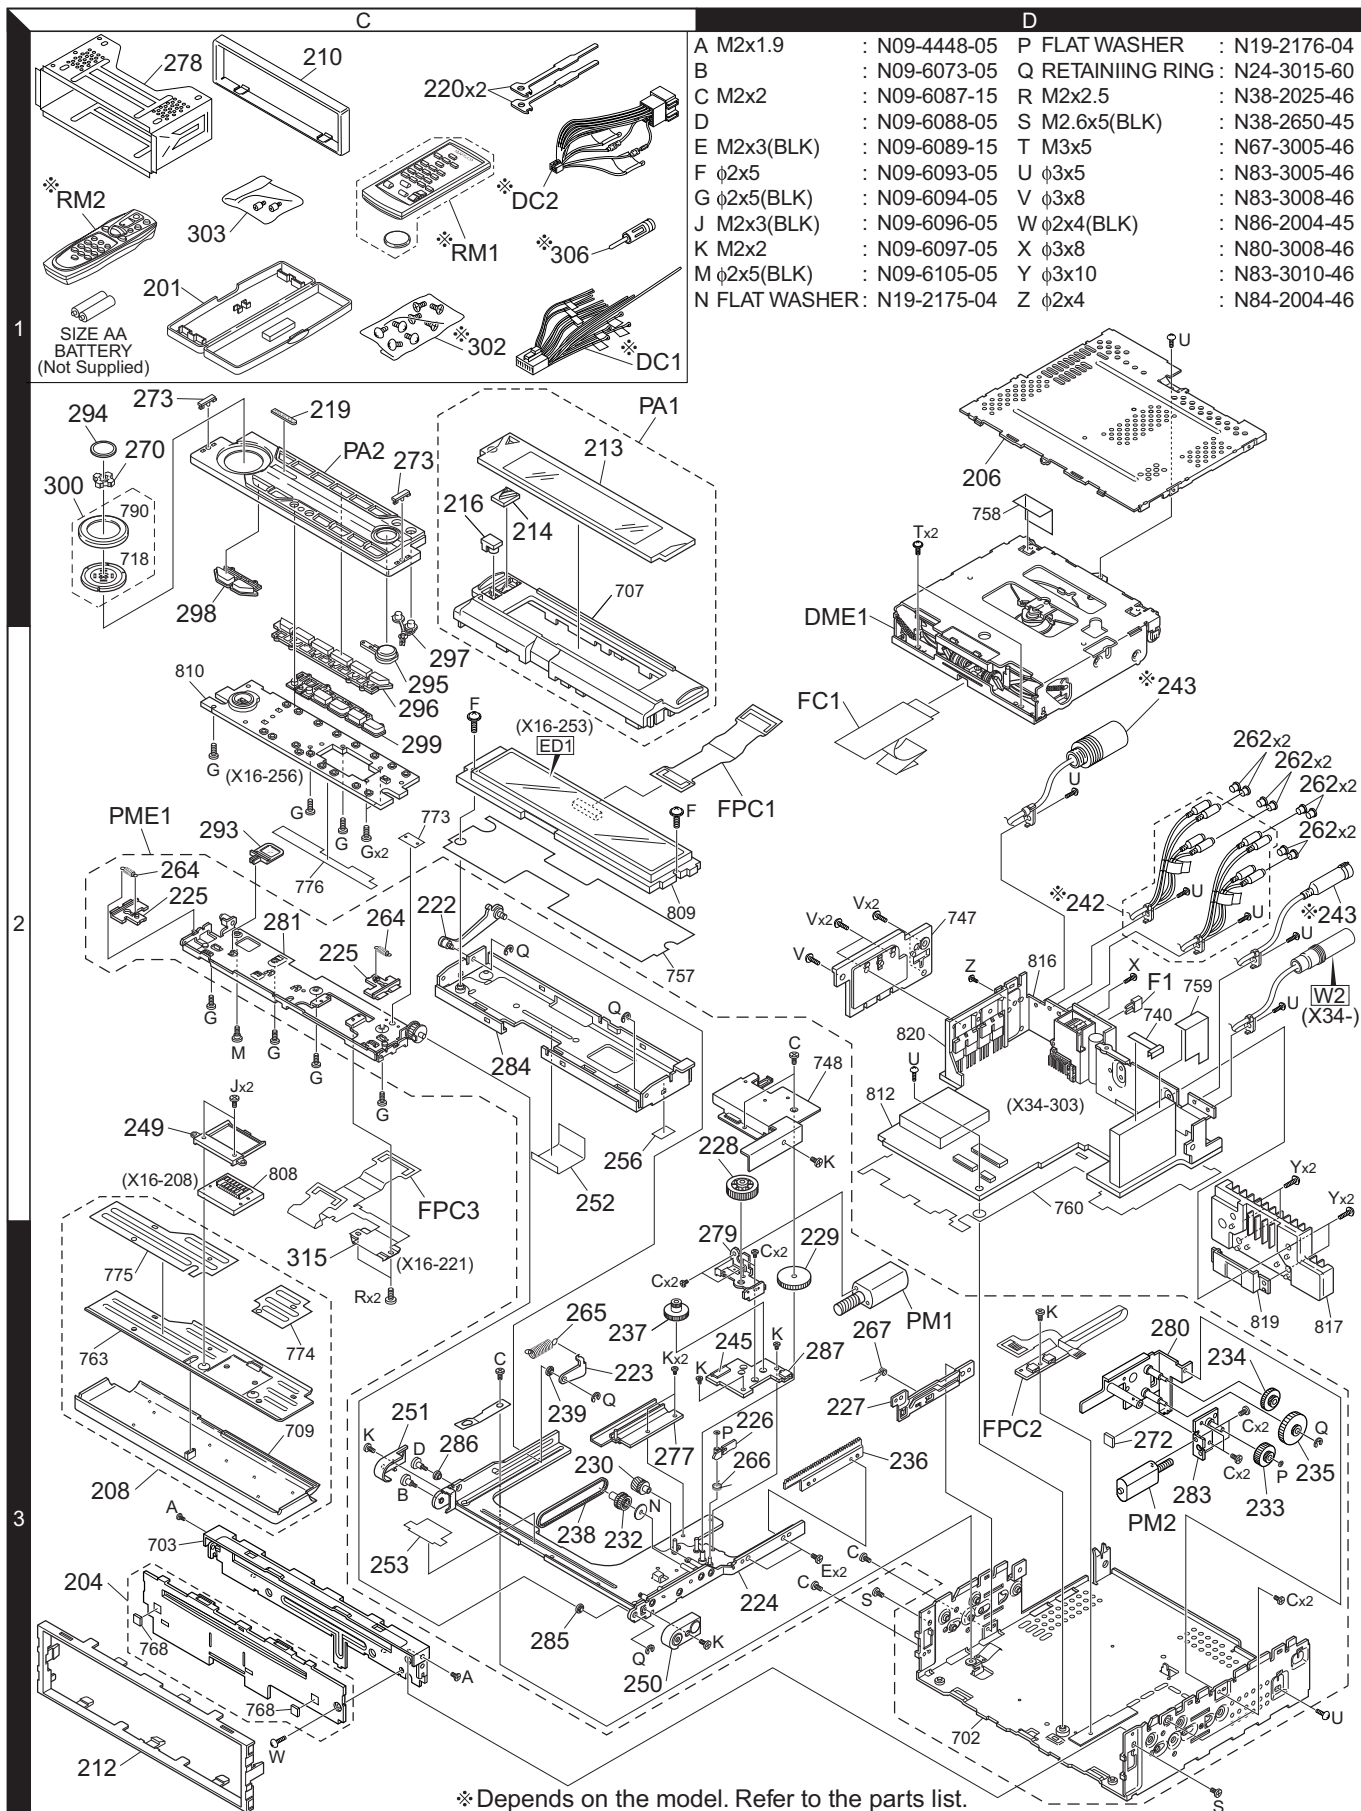

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
KDC-MP925/KDC-W8027					
201	1C		A02-2731-13	PLASTIC CABINET ASSY	
204	3C		A22-2988-03	SUB PANEL ASSY	
206	1D		A52-0831-02	TOP PLATE	
PA1	1D	*	A64-3226-01	PANEL ASSY	K1
PA1	1D	*	A64-3232-01	PANEL ASSY	E1
PA2	1C	*	A64-3248-02	PANEL ASSY	K1
PA2	1C	*	A64-3252-02	PANEL ASSY	E1
PME1	2C	*	A10-5123-01	CHASSIS ASSY	△
RM1	1C		A70-2026-05	REMOTE CONTROLLER ASSY (RC-420)	E1
RM2	1C		A70-2040-05	REMOTE CONTROLLER ASSY (RC-505)	K1
-			B46-0100-50	WARRANTY CARD	
-			B46-0606-04	ID CARD	K1
-			B46-0612-14	ID CARD	E1
-		*	B64-2741-00	INST. MANUAL (ENGLISH)	K1
-		*	B64-2742-00	INST. MANUAL (FRE, SPA)	K1
-		*	B64-2746-00	INST. MANUAL (ENGLISH)	E1
-		*	B64-2747-00	INST. MANUAL (FRE, GER)	E1
-		*	B64-2748-00	INST. MANUAL (DUT, ITA)	E1
-		*	B64-2749-00	INST. MANUAL (SPA, POR)	E1
208	3C		B03-5015-03	DRESSING PLATE ASSY	
210	1C		B07-3078-01	ESCUTCHEON	
212	3C		B07-3080-02	ESCUTCHEON	
213	1D	*	B10-4513-01	FRONT GLASS	K1
213	1D	*	B10-4519-01	FRONT GLASS	E1
214	1C	*	B12-1227-04	INDICATOR	
216	1C	*	B19-2248-04	LIGHTING BOARD	
219	1C		B43-1505-04	KENWOOD BADGE	
220	1C		D10-4674-04	LEVER	
222	2C		D10-4716-04	ARM ASSY	
223	3C		D10-4718-04	ARM ASSY	
224	3D		D10-4721-21	SLIDER ASSY	
225	2C		D10-4749-03	LEVER	
226	3D		D10-4750-04	LEVER	
227	3D		D12-0637-03	CAM	
228	2D		D13-2270-04	GEAR	
229	3D		D13-2272-04	GEAR	
230	3C		D13-2273-34	GEAR	
232	3C		D13-2274-24	GEAR	
233	3D		D13-2276-04	GEAR	
234	3D		D13-2277-04	GEAR	
235	3D		D13-2278-04	GEAR	
236	3D		D13-2289-03	RACK (GEAR)	
237	3C		D13-2290-04	GEAR ASSY	
238	3C		D16-0617-15	BELT	
239	3C		D23-0958-04	RETAINER	
242	2D	*	E30-6310-05	CORD WITH PINPLUG (2PR+1AUX)	E1
242	2D	*	E30-6311-05	CORD WITH PINPLUG (3PR+1AUX)	K1
243	2D		E30-6216-05	CORD WITH DIN CONNECTOR (CH)	K1
243	2D		E30-6217-05	CORD WITH DIN CONNECTOR (&REM)	E1
245	3D		E41-0351-05	FLAT CABLE CONNECTOR	
△ DC1	1C		E30-6295-05	DC CORD	K1
△ DC2	1C		E30-4942-05	DC CORD	E1
Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
FC1	2D		E39-0565-05	FLAT CABLE	
249	2C		F07-1121-03	COVER	
250	3C		F07-1122-03	COVER	
251	3C		F07-1123-03	COVER	
252	2C		F09-1794-04	SHEET	
253	3C		F09-1798-04	SHEET	
256	2D		F09-1842-04	SHEET	
262	2D		F29-0626-04	INSULATING COVER	
△ F1	2D		F52-0023-05	FUSE (MINI BLADE TYPE : 10A)	
264	2C	*	G01-3162-04	EXTENSION SPRING	
265	2C		G01-3221-04	EXTENSION SPRING	
266	3C		G01-3189-04	TORSION COIL SPRING	
267	3D		G01-3199-04	TORSION COIL SPRING	
270	2C		G11-3539-04	CUSHION	
272	3D		G11-3559-04	CUSHION	
273	1C		G11-3574-04	CUSHION (KEY)	K1
273	1C		G11-3575-04	CUSHION (KEY)	E1
-		*	H10-4854-22	POLYSTYRENE FOAMED FIXTURE	
-			H21-1151-04	PROTECTION SHEET	
-			H25-0329-04	PROTECTION BAG (280X450X0.03)	K1
-			H25-0337-04	PROTECTION BAG (180X300X0.03)	
-			H25-1111-04	PROTECTION BAG (280X450X0.03)	E1
-		*	H54-3029-03	ITEM CARTON CASE	K1
-		*	H54-3035-03	ITEM CARTON CASE	E1
277	3C		J19-5220-03	HOLDER	
278	1C		J21-9823-03	MOUNTING HARDWARE ASSY	
279	3D		J21-9951-03	MOUNTING HARDWARE ASSY	
280	3D		J21-9954-02	MOUNTING HARDWARE ASSY	
281	2C	*	J21-9996-32	MOUNTING HARDWARE ASSY	
283	3D		J21-9997-03	MOUNTING HARDWARE ASSY	
284	2C		J21-9999-02	MOUNTING HARDWARE ASSY	
285	3C		J31-1055-04	COLLAR	
286	3C		J31-1056-04	COLLAR	
287	3D		J74-1444-14	RIGID PRINTED WIRING BOARD	
FPC1	2D		J84-0153-05	FLEXIBLE PRINTED WIRING BOARD	
FPC2	3D		J84-0156-04	FLEXIBLE PRINTED WIRING BOARD	
293	2C		K24-4007-04	KNOB (OPEN)	
294	1C	*	K24-4106-03	KNOB (ATT)	
295	1C	*	K24-4167-03	KNOB (SRC)	
296	1C	*	K25-1605-02	KNOB (PRESET1-6)	K1
296	1C	*	K25-1632-02	KNOB (PRESET1-6)	E1
297	2C	*	K25-1607-03	KNOB (EJECT)	K1
297	2C	*	K25-1634-03	KNOB (EJECT)	E1
298	1C	*	K25-1609-03	KNOB (Q, PLAY)	K1
298	1C	*	K25-1610-03	KNOB (Q, PLAY)	E1
299	2C	*	K25-1612-02	KNOB (FM/AM, SKIP)	K1
299	2C	*	K25-1633-02	KNOB (FM/AM, SKIP)	E1
300	1C	*	K29-7082-03	KNOB ASSY (VOL.)	
302	1C		N99-1723-05	SCREW SET	
303	1C		N99-1734-05	SCREW SET	
A	3D		N09-4448-05	MACHINE SCREW	
B	3C		N09-6073-05	STEPPED SCREW	

K1 : KDC-MP925 E1 : KDC-W8027

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

KDC-MP925/KDC-W8027

Ref. No.	Added	New	Parts No.	Description	Destination
C	3D	*	N09-6087-15	MACHINE SCREW	E1
D	3C		N09-6088-05	STEPPED SCREW	
E	3D	*	N09-6089-15	MACHINE SCREW	
F	2C		N09-6093-05	TAPTITE SCREW	
G	2C		N09-6094-05	MACHINE SCREW	
J	2C		N09-6096-05	MACHINE SCREW	
K	3C		N09-6097-05	MACHINE SCREW	
M	2C		N09-6105-05	STEPPED SCREW	
N	2C		N19-2175-04	FLAT WASHER	
P	3D		N19-2176-04	FLAT WASHER	
Q	2C		N24-3015-60	E TYPE RETAINING RING	
R	3C		N38-2025-46	PAN HEAD MACHIN SCREW	
S	3D		N38-2650-45	PAN HEAD MACHIN SCREW	
T	2D		N67-3005-46	PAN HEAD SEMS SCREW	
U	2D		N83-3005-46	PAN HEAD TAPTITE SCREW	
V	2D		N83-3008-46	PAN HEAD TAPTITE SCREW	
W	3C		N86-2004-45	BINDING HEAD TAPTITE SCREW	
RLED			RK73GB2A102J	CHIP R 1.0K J 1/10W	
RPH			RK73GB2A104J	CHIP R 100K J 1/10W	
SW1			S68-0871-05	PUSH SWITCH (PANEL MECHA)	
SW2-3			S68-0863-05	PUSH SWITCH (PANEL MECHA)	
SW4			S68-0864-05	PUSH SWITCH (PANEL MECHA)	
306	1C		T90-0552-05	ANTENNA ADAPTOR	E1
PH			T95-0212-05	OPTO ISOLATOR (PANEL MECHA)	
PM1	3D		T42-1076-14	MOTOR ASSY	
PM2	3D	*	T42-1077-24	MOTOR ASSY	
DME1	2D	*	X92-4900-00	MECHANISM ASSY (DXM-6540V)	
SUB CIRCUIT UNIT (X16-2080-10)					
J1			E59-0833-15	RECTANGULAR PLUG	
CP1			R90-1019-05	MULTI-COMP 100 X2	
IC1			BR24C01AFV-W	MEMORY IC	
SUB CIRCUIT UNIT (X16-2210-10)					
315	3C		E58-0968-05	RECTANGULAR RECEPTACLE	
FPC3	2C		J84-0154-05	FLEXIBLE PRINTED WIRING BOARD	
DISPLAY UNIT (X16-2530-11)					
D14			B30-2233-05	LED (HR 1608)	
C1			CK73GB1C104K	CHIP C 0.10UF K	
C1			CK73GB1H104K	CHIP C 0.10UF K	
C2			C92-0628-05	CHIP-TAN 10UF 10WV	
C4			CK73GB1C104K	CHIP C 0.10UF K	
C4			CK73GB1H104K	CHIP C 0.10UF K	
C5			C92-0628-05	CHIP-TAN 10UF 10WV	
C7			CK73GB0J105K	CHIP C 1.0UF K	
C8-10			CK73GB1C104K	CHIP C 0.10UF K	
C8-10			CK73GB1H104K	CHIP C 0.10UF K	
C11			CK73GB1H103K	CHIP C 0.010UF K	
C12-18			CK73GB1C104K	CHIP C 0.10UF K	
C12-18			CK73GB1H104K	CHIP C 0.10UF K	
C19,20			CK73GB1H103K	CHIP C 0.010UF K	

Ref. No.	Added	New	Parts No.	Description	Destination
C21,22			CK73GB1C104K	CHIP C 0.10UF K	
C21,22			CK73GB1H104K	CHIP C 0.10UF K	
C23			CK73FB1A225K	CHIP C 2.2UF K	
C25			CK73FB1A225K	CHIP C 2.2UF K	
C26			C93-1174-05	CERAMIC 0.1UF 100WV	
C27			CK73GB1C104K	CHIP C 0.10UF K	
C27			CK73GB1H104K	CHIP C 0.10UF K	
C28			CK73EB0J106K	CHIP C 10UF K	
C29,30			CK73GB1H332K	CHIP C 3300PF K	
C31			CK73FB1A225K	CHIP C 2.2UF K	
C32-34			CK73FB0J475K	CHIP C 4.7UF K	
C35			C92-0628-05	CHIP-TAN 10UF 10WV	
C36			CK73GB1C104K	CHIP C 0.10UF K	
C36			CK73GB1H104K	CHIP C 0.10UF K	
C200			CK73GB1A224K	CHIP C 0.22UF K	
CN1			E40-9364-05	FLAT CABLE CONNECTOR (28PIN)	
CN2			E41-0166-05	FLAT CABLE CONNECTOR (32PIN)	
L1,2			L92-0321-05	CHIP FERRITE	
L3			L40-1005-34	SMALL FIXED INDUCTOR	
L3			L40-1005-68	SMALL FIXED INDUCTOR	
L4-8			L92-0332-05	CHIP FERRITE	
L9			L40-1005-34	SMALL FIXED INDUCTOR	
L9			L40-1005-68	SMALL FIXED INDUCTOR	
X1			L78-0868-05	RESONATOR (5.00MHZ)	
CP1			R90-1022-05	MULTI-COMP 470 X2	
CP2			RK74HB1J471J	CHIP-COM 470 J 1/16W	
CP3			R90-1022-05	MULTI-COMP 470 X2	
CP4		*	RK74HB1J223J	CHIP-COM 22K J 1/16W	
CP5,6			RK74HB1J102J	CHIP-COM 1.0K J 1/16W	
CP7			RK74HB1J221J	CHIP-COM 220 J 1/16W	
CP8			R90-1020-05	MULTI-COMP 22K X2	
CP9			RK74HB1J471J	CHIP-COM 470 J 1/16W	
CP10			RK74GA1J102J	CHIP-COM 1.0K J 1/16W	
CP11			RK74HB1J471J	CHIP-COM 470 J 1/16W	
CP12			R90-1022-05	MULTI-COMP 470 X2	
CP13-16			RK74HB1J471J	CHIP-COM 470 J 1/16W	
CP17			RK74HB1J221J	CHIP-COM 220 J 1/16W	
CP18		*	RK74HB1J223J	CHIP-COM 22K J 1/16W	
CP19			RK74HB1J221J	CHIP-COM 220 J 1/16W	
CP20		*	RK74HB1J223J	CHIP-COM 22K J 1/16W	
CP21			RK74HB1J221J	CHIP-COM 220 J 1/16W	
CP22		*	RK74HB1J223J	CHIP-COM 22K J 1/16W	
CP23			RK74HB1J221J	CHIP-COM 220 J 1/16W	
CP24		*	RK74HB1J223J	CHIP-COM 22K J 1/16W	
CP25,26			RK74HB1J102J	CHIP-COM 1.0K J 1/16W	
CP27,28			R90-1021-05	MULTI-COMP 3.3K X2	
CP30		*	RK74HB1J223J	CHIP-COM 22K J 1/16W	
CP31			RK74HB1J473J	CHIP-COM 47K J 1/16W	
CP32			R90-0723-05	MULTI-COMP 47K X2	
CP200			RK74GA1J102J	CHIP-COM 1.0K J 1/16W	
CP300		*	RK74HB1J223J	CHIP-COM 22K J 1/16W	
R1			RK73GB2A471J	CHIP R 470 J 1/10W	
R2			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R3			RK73GB2A4R7J	CHIP R 4.7 J 1/10W	

K1 : KDC-MP925 E1 : KDC-W8027

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

DISPLAY UNIT (X16-2530-11)

Ref. No.	Added	New	Parts No.	Description	Destination
R4			RK73GB2A223J	CHIP R 22K J 1/10W	
R5			RK73GB2A101J	CHIP R 100 J 1/10W	
R6			RK73GB2A223J	CHIP R 22K J 1/10W	
R7			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R8,9			RK73GB2A223J	CHIP R 22K J 1/10W	
R10			RK73GB2A101J	CHIP R 100 J 1/10W	
R11			RK73GB2A223J	CHIP R 22K J 1/10W	
R12			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R14			RK73GB2A101J	CHIP R 100 J 1/10W	
R16			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R17			RK73GB2A473J	CHIP R 47K J 1/10W	
R18			RK73GB2A393J	CHIP R 39K J 1/10W	
R19,20			RK73GB2A473J	CHIP R 47K J 1/10W	
R21			RK73GB2A103J	CHIP R 10K J 1/10W	
R22			RK73GB2A152J	CHIP R 1.5K J 1/10W	
R23			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R24			RK73GB2A104J	CHIP R 100K J 1/10W	
R25			RK73GB2A220J	CHIP R 22 J 1/10W	
R26,27			RK73GB2A103J	CHIP R 10K J 1/10W	
R28-30			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R31			RK73GB2A101J	CHIP R 100 J 1/10W	
R32			RK73GB2A104J	CHIP R 100K J 1/10W	
R33			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R34			RK73GB2A100J	CHIP R 10 J 1/10W	
R35			RK73GB2A153J	CHIP R 15K J 1/10W	
R36			RK73GB2A103J	CHIP R 10K J 1/10W	
R37,38			RK73GB2A274J	CHIP R 270K J 1/10W	
R39			RK73GB2A223J	CHIP R 22K J 1/10W	
R40			RK73GB2A333J	CHIP R 33K J 1/10W	
R44			RK73GB2A104J	CHIP R 100K J 1/10W	
R45			RK73GB2A181J	CHIP R 180 J 1/10W	
R46			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R47			RK73GB2A331J	CHIP R 330 J 1/10W	
R48			RK73GB2A104J	CHIP R 100K J 1/10W	
R49,50			RK73GB2A101J	CHIP R 100 J 1/10W	
R200		*	RK73EB2E3R3J	CHIP R 3.3 J 1/4W	
R201-203			RK73GB2A473J	CHIP R 47K J 1/10W	
R204			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R206			RK73GB2A223J	CHIP R 22K J 1/10W	
R300			RK73GB2A393J	CHIP R 39K J 1/10W	
D1-5			DA204U	DIODE	
ED1		*	MN19236A	FLUORESCENT INDICATOR TUBE	
IC1		*	703132GJ011-A	MICROCONTROLLER IC	
IC2		*	MX23L3213TG114	ROM IC	
IC4		*	S-816A34AMCT2G	ANALOGUE IC	
IC5		*	S-816A25AMCT2G	ANALOGUE IC	
IC6			TC74HC4050AFT	MOS-IC	
IC7			TC7WT126FU	MOS-IC	
IC8			RS-171	ANALOGUE IC	
IC9		*	TC7WH32FU-F	MOS-IC	
IC10			BA3830F	ANALOGUE IC	
Q1			2SB1188(Q,R)	TRANSISTOR	
Q2			2SB1132	TRANSISTOR	
Q3			2SC2713	TRANSISTOR	
Q4			2SA1163	TRANSISTOR	

Ref. No.	Added	New	Parts No.	Description	Destination
Q5,6			2SA1774	TRANSISTOR	
Q7			DTC114EE	DIGITAL TRANSISTOR	
Q8			2SA1774	TRANSISTOR	
Q9			2SC4667	TRANSISTOR	
Q11			UMX2N	TRANSISTOR	
Q200			2SC4617	TRANSISTOR	
SWITCH UNIT (X16-2560-10)					
D1-10			B30-1605-05	LED (2COLOR PG/RED)	
D11-15			B30-1564-05	LED (1608,BLUE)	
D17-22			B30-1564-05	LED (1608,BLUE)	
D24			B30-1566-05	LED (1608,RED)	
C1-5			CK73GB1H103K	CHIP C 0.010UF K	
C7-12			CK73GB1H103K	CHIP C 0.010UF K	
CN1			E41-0419-05	FLAT CABLE CONNECTOR (24PIN)	
R1,2			RK73FB2B471J	CHIP R 470 J 1/8W	
R3,4			RK73FB2B301J	CHIP R 300 J 1/8W	
R5			RK73FB2B471J	CHIP R 470 J 1/8W	
R6-10			RK73FB2B181J	CHIP R 180 J 1/8W	
R11			RK73GB2A241J	CHIP R 240 J 1/10W	
R12			RK73GB2A332J	CHIP R 3.3K J 1/10W	
R13			RK73GB2A103J	CHIP R 10K J 1/10W	
R14			RK73GB2A332J	CHIP R 3.3K J 1/10W	
R15			RK73GB2A103J	CHIP R 10K J 1/10W	
R16			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R17			RK73GB2A103J	CHIP R 10K J 1/10W	
S1			S70-0901-05	TACT SWITCH	
S2-9		*	S70-0912-05	TACT SWITCH	
S10			S70-0901-05	TACT SWITCH	
S11-20		*	S70-0912-05	TACT SWITCH	
S21			T99-0445-05	ROTARY ENCODER	
D25			DAN222	DIODE	
Q1			DTA114YUA	DIGITAL TRANSISTOR	
Q1			UN5114	DIGITAL TRANSISTOR	
Q2-4			2SD2114K	TRANSISTOR	
CD PLAYER UNIT (X32-5540-00)					
C1,2			CK73GB1H222K	CHIP C 2200PF K	
C3,4			CK73GB0J105K	CHIP C 1.0UF K	
C5			CK73GB1C104K	CHIP C 0.10UF K	
C6			CK73GB1H103K	CHIP C 0.010UF K	
C7-9			CK73GB0J105K	CHIP C 1.0UF K	
C10-15			CK73GB1C104K	CHIP C 0.10UF K	
C16			CK73FB0J475K	CHIP C 4.7UF K	
C17			CK73FB0J106M	CHIP C 10UF M	
C18			CK73GB1C104K	CHIP C 0.10UF K	
C19			CK73FB0J475K	CHIP C 4.7UF K	
C20			CK73GB1C104K	CHIP C 0.10UF K	
C21			CK73GB1H102K	CHIP C 1000PF K	
C22,23			CK73GB0J105K	CHIP C 1.0UF K	
C24-27			CK73GB1C104K	CHIP C 0.10UF K	
C28			CK73FB0J106M	CHIP C 10UF M	
C29			CK73GB1C104K	CHIP C 0.10UF K	

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

CD PLAYER UNIT (X32-5540-00)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
C30			CK73GB1H152K	CHIP C 1500PF K	
C31			CC73GCH1H470J	CHIP C 47PF J	
C32,33			CK73GB1C104K	CHIP C 0.10UF K	
C34			CC73GCH1H560J	CHIP C 56PF J	
C35,36			CK73GB1C104K	CHIP C 0.10UF K	
C37			CK73GB1H102K	CHIP C 1000PF K	
C38			CK73GB1H682K	CHIP C 6800PF K	
C39			CK73GB1C104K	CHIP C 0.10UF K	
C41			CK73GB1A334K	CHIP C 0.33UF K	
C42-45			CK73GB1C104K	CHIP C 0.10UF K	
C46			CK73GB1H682K	CHIP C 6800PF K	
C47			CK73GB1C104K	CHIP C 0.10UF K	
C48			CC73GCH1H040C	CHIP C 4.0PF C	
C49			CK73GB1H332K	CHIP C 3300PF K	
C50			CK73GB1C104K	CHIP C 0.10UF K	
C51			CC73GCH1H330J	CHIP C 33PF J	
C52			CK73FB1A225K	CHIP C 2.2UF K	
C53			CK73GB0J105K	CHIP C 1.0UF K	
C54,55			CK73GB1H103K	CHIP C 0.010UF K	
C56,57			CK73GB1H331K	CHIP C 330PF K	
C58			CK73GB1H472K	CHIP C 4700PF K	
C59-63			CK73GB1H152K	CHIP C 1500PF K	
C64			CK73GB1C104K	CHIP C 0.10UF K	
C66			CC73GCH1H120J	CHIP C 12PF J	
C67			CC73GCH1H180J	CHIP C 18PF J	
C68			CK73GB1H103K	CHIP C 0.010UF K	
C69			CK73FB1A225K	CHIP C 2.2UF K	
C70			CK73FB1A105K	CHIP C 1.0UF K	
C71			CK73FB0J106M	CHIP C 10UF M	
C72			CK73GB1H102K	CHIP C 1000PF K	
CN1			E41-2083-05	FLAT CABLE CONNECTOR (24PIN)	
CN2			E41-2068-05	FLAT CABLE CONNECTOR (16PIN)	
CN2			E41-2085-05	FLAT CABLE CONNECTOR (16PIN)	
L1,2			L92-0386-05	CHIP FERRITE	
X1			L77-2808-05	CRYSTAL RESONATOR (16.897849MHZ)	
X2			L78-0896-05	RESONATOR (16.00MHZ)	
CP1			RK74GA1J104J	CHIP-COM 100K J 1/16W	
CP2,3			RK74GA1J101J	CHIP-COM 100 J 1/16W	
CP4			RK74GA1J103J	CHIP-COM 10K J 1/16W	
CP5			RK74GA1J102J	CHIP-COM 1.0K J 1/16W	
CP6			RK74GA1J104J	CHIP-COM 100K J 1/16W	
CP7			RK74GB1J102J	CHIP-COM 1.0K J 1/16W	
CP8			RK74GA1J102J	CHIP-COM 1.0K J 1/16W	
CP9			RK74GB1J101J	CHIP-COM 100 J 1/16W	
CP10			RK74GB1J103J	CHIP-COM 10K J 1/16W	
CP11			RK74GB1J472J	CHIP-COM 4.7K J 1/16W	
CP12			RK74GA1J104J	CHIP-COM 100K J 1/16W	
CP13,14			RK74GB1J104J	CHIP-COM 100K J 1/16W	
CP15			RK74GA1J104J	CHIP-COM 100K J 1/16W	
CP16			RK74GB1J222J	CHIP-COM 2.2K J 1/16W	
R1			RK73GB2A100J	CHIP R 10 J 1/10W	
R2			R92-3494-05	CHIP R 5.6 J 1/2W	
R3,4			RK73FB2B331J	CHIP R 330 J 1/8W	
R5			RK73GB2A101J	CHIP R 100 J 1/10W	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
R6			RN73GH1J223D	CHIP R 22K D 1/16W	
R7			RK73GB2A104J	CHIP R 100K J 1/10W	
R8			RN73GH1J393D	CHIP R 39K D 1/16W	
R9			RK73GB2A104J	CHIP R 100K J 1/10W	
R10			RK73GB2A101J	CHIP R 100 J 1/10W	
R11,12			RK73GB2A104J	CHIP R 100K J 1/10W	
R13			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R14-17			RK73GB2A104J	CHIP R 100K J 1/10W	
R18			RK73GB2A101J	CHIP R 100 J 1/10W	
R21-23			RK73GB2A103J	CHIP R 10K J 1/10W	
R24,25			RK73GB2A4R7J	CHIP R 4.7 J 1/10W	
R27			RK73GB2A104J	CHIP R 100K J 1/10W	
R28			RK73GB2A103J	CHIP R 10K J 1/10W	
R29			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R31-33			RK73GB2A104J	CHIP R 100K J 1/10W	
R34			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R35			RK73GB2A104J	CHIP R 100K J 1/10W	
R36			RK73FB2B4R7J	CHIP R 4.7 J 1/8W	
R37			RK73GB2A103J	CHIP R 10K J 1/10W	
R38			RK73GB2A221J	CHIP R 220 J 1/10W	
R39			RK73GB2A152J	CHIP R 1.5K J 1/10W	
R40			RK73GB2A274J	CHIP R 270K J 1/10W	
R42			RK73GB2A101J	CHIP R 100 J 1/10W	
R43			RK73GB2A393J	CHIP R 39K J 1/10W	
R44,45			RK73GB2A302J	CHIP R 3.0K J 1/10W	
R46			RK73GB2A105J	CHIP R 1.0M J 1/10W	
R47			RK73GB2A104J	CHIP R 100K J 1/10W	
R48,49			RK73GB2A331J	CHIP R 330 J 1/10W	
R50			RK73GB2A101J	CHIP R 100 J 1/10W	
R51			RK73GB2A392J	CHIP R 3.9K J 1/10W	
R52			RK73GB2A163J	CHIP R 16K J 1/10W	
R53			RK73GB2A123J	CHIP R 12K J 1/10W	
R54			RK73GB2A333J	CHIP R 33K J 1/10W	
R55			RK73GB2A103J	CHIP R 10K J 1/10W	
R56			RK73GB2A123J	CHIP R 12K J 1/10W	
R57,58			RK73GB2A133J	CHIP R 13K J 1/10W	
R59			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R60			RK73GB2A123J	CHIP R 12K J 1/10W	
R61			RK73GB2A183J	CHIP R 18K J 1/10W	
R62			RK73GB2A432J	CHIP R 4.3K J 1/10W	
R63			RK73GB2A133J	CHIP R 13K J 1/10W	
R64			RK73GB2A241J	CHIP R 240 J 1/10W	
R65			RK73GB2A104J	CHIP R 100K J 1/10W	
R66			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R67			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R68,69			RK73GB2A104J	CHIP R 100K J 1/10W	
R70			RK73GB2A102J	CHIP R 1.0K J 1/10W	
S1,2			S68-0863-05	PUSH SWITCH	
S3			S68-0862-05	PUSH SWITCH	
D2			DA204U	DIODE	
D3			DAN202U	DIODE	
IC1			91CW12AFG-4VF6	MICROCONTROLLER IC	
IC2			UPD63712GC	MOS-IC	
IC3			TC94A20F-010	MOS-IC	

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

CD PLAYER UNIT (X32-5540-00)

Ref. No.	Added	New	Parts No.	Description	Destination	Ref. No.	Added	New	Parts No.	Description	Destination
IC4			BA5824FP	ANALOGUE IC		C100		*	C90-5624-05	ELECTRO 3900UF 16WV	K1
IC5			NJM2880U133	ANALOGUE IC		C100			C90-5626-05	ELECTRO 3900UF 16WV	E1
IC5			NJM2880U33	ANALOGUE IC		C101			C94-0032-05	ELECTRO 47UF 6.3WV	
IC6			S-1112B33MCG	ANALOGUE IC		C102			CC73GCH1H220J	CHIP C 22PF J	
IC6			XC6219B332MR	ANALOGUE IC		C103			CC73GCH1H270J	CHIP C 27PF J	
IC7			S-1112B25MCG	ANALOGUE IC		C104			CK73GB0J105K	CHIP C 1.0UF K	
IC7			XC6219B252MR	ANALOGUE IC		C106			CK73GB0J105K	CHIP C 1.0UF K	
IC8			TC7SH08FU	MOS-IC		C107			CK73GB1H103K	CHIP C 0.010UF K	
IC9			TAR5S33-F	ANALOGUE IC		C109			CK73GB1H102K	CHIP C 1000PF K	
Q1			2SK3018	FET		C110,111			CK73GB1H103K	CHIP C 0.010UF K	
Q3			UMD9N	TRANSISTOR		C199			CK73GB1C104K	CHIP C 0.10UF K	
Q4			2SK3018	FET		C199			CK73GB1H104K	CHIP C 0.10UF K	
Q5			UMD9N	TRANSISTOR		C201,202			C94-0161-05	ELECTRO 0.47UF 50WV	
Q6			UMD12N	TRANSISTOR		C203,204			CK73FB1C474K	CHIP C 0.47UF K	
Q7			DTC124EUA	DIGITAL TRANSISTOR		C205,206			C94-0032-05	ELECTRO 47UF 6.3WV	
Q8			2SB0970	TRANSISTOR		C207,208			CK73FB1C474K	CHIP C 0.47UF K	
Q9,10			DTC114YUA	DIGITAL TRANSISTOR		C209			CK73GB1E223K	CHIP C 0.022UF K	
ELECTRIC UNIT (X34-3030-10, X34-3032-71)						C209			CK73GB1H223K	CHIP C 0.022UF K	
C2			CK73GB1H103K	CHIP C 0.010UF K		C210			CK73GB1H103K	CHIP C 0.010UF K	
C3		*	C90-5619-05	ELECTRO 220UF 16WV		C211			CK73GB1A474K	CHIP C 0.47UF K	
C4			CK73GB1H103K	CHIP C 0.010UF K		C212			CC73GCH1H151J	CHIP C 150PF J	
C5			C94-0039-05	ELECTRO 10UF 16WV		C213			CK73GB1C104K	CHIP C 0.10UF K	
C6			C94-0033-05	ELECTRO 100UF 6.3WV		C213			CK73GB1H104K	CHIP C 0.10UF K	
C7			CK73FB1C105K	CHIP C 1.0UF K		C214			CK73GB1H103K	CHIP C 0.010UF K	
C8		*	C94-0188-05	ELECTRO 220UF 10WV		C215			C94-0042-05	ELECTRO 47UF 16WV	
C9		*	C94-0186-05	ELECTRO 100UF 10WV		C216-223			CK73FB1C105K	CHIP C 1.0UF K	
C10			CE32AZ1E221M	CHIP EL 220UF 25WV		C224			CK73GB1C104K	CHIP C 0.10UF K	
C11			CK73GB1H332K	CHIP C 3300PF K		C224			CK73GB1H104K	CHIP C 0.10UF K	
C12			CE32AZ1C221M	CHIP EL 220UF 16WV		C225			CK73GB1H103K	CHIP C 0.010UF K	
C13			CK73GB0J105K	CHIP C 1.0UF K		C226-231			CK73GB1E473K	CHIP C 0.047UF K	
C14			CK73EB1C225K	CHIP C 2.2UF K		C226-231			CK73GB1H473K	CHIP C 0.047UF K	
C15			CK73GB1H103K	CHIP C 0.010UF K		C232			CK73FB1C105K	CHIP C 1.0UF K	
C16			CE32AZ1C101M	CHIP EL 100UF 16WV		C233			C92-0667-05	ELECTRO 10UF 10WV	
C17			CK73GB1H103K	CHIP C 0.010UF K		C234			CK73GB1E333K	CHIP C 0.033UF K	
C18			CE32AZ1C101M	CHIP EL 100UF 16WV		C234			CK73GB1H333K	CHIP C 0.033UF K	
C21			CK73FB1A225K	CHIP C 2.2UF K		C235			CK73GB1H103K	CHIP C 0.010UF K	
C22			C93-1218-05	CHIP C 0.010UF K		C236			CK73GB1A334K	CHIP C 0.33UF K	
C23			C90-5375-05	ELECTRO 33UF 63WV		C237			CK73GB1A474K	CHIP C 0.47UF K	
C30			C94-0044-05	ELECTRO 4.7UF 25WV	K1	C238			CC73GCH1H221J	CHIP C 220PF J	
C31			C90-2962-05	ELECTRO 100UF 16WV	K1	C239			CK73GB1H103K	CHIP C 0.010UF K	
C32-35			CK73EB1C225K	CHIP C 2.2UF K	K1	C240,241			C92-0667-05	ELECTRO 10UF 10WV	E1
C36			C94-0040-05	ELECTRO 22UF 16WV	K1	C250			CE32AT1H2R2M	CHIP EL 2.2UF 50WV	K1
C37			CK73GB1E223K	CHIP C 0.022UF K	K1	C250			C92-0687-05	ELECTRO 2.2UF 50WV	
C37			CK73GB1H223K	CHIP C 0.022UF K	K1	C251			CK73FB1C334K	CHIP C 0.33UF K	
C38			CK73GB1H103K	CHIP C 0.010UF K	K1	C252			CK73GB1A334K	CHIP C 0.33UF K	
C39,40			CK73EB1C225K	CHIP C 2.2UF K	K1	C253			CK73FB1C334K	CHIP C 0.33UF K	
C41			CK73GB1H103K	CHIP C 0.010UF K		C254			CK73GB1A334K	CHIP C 0.33UF K	
C42			CK73GB1E223K	CHIP C 0.022UF K		C255			CK73FB1C334K	CHIP C 0.33UF K	
C42			CK73GB1H223K	CHIP C 0.022UF K		C256			CK73GB1A334K	CHIP C 0.33UF K	
C43			CK73FB1C105K	CHIP C 1.0UF K		C257			CK73FB1C334K	CHIP C 0.33UF K	
C44,45			CK73GB1H103K	CHIP C 0.010UF K		C258			CK73GB1A334K	CHIP C 0.33UF K	
C46			CK73GB1H102K	CHIP C 1000PF K		C259			CE32AT1H010M	CHIP EL 1.0UF 50WV	E1
C47			CK73FB1C105K	CHIP C 1.0UF K		C259			C92-0686-05	ELECTRO 1UF 50WV	K1
C48			CK73GB1H103K	CHIP C 0.010UF K		C260-263			CK73GB1C104K	CHIP C 0.10UF K	
						C260-263			CK73GB1H104K	CHIP C 0.10UF K	

K1 : KDC-MP925 E1 : KDC-W8027

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

ELECTRIC UNIT (X34-3030-10, X34-3032-71)

Ref. No.	Added	New	Parts No.	Description	Destination
C264,265 C264,265 C266,267 C268,269 C268,269			C94-0039-05 C94-0040-05 C94-0039-05 C94-0039-05 C94-0040-05	ELECTRO 10UF 16WV ELECTRO 22UF 16WV ELECTRO 10UF 16WV ELECTRO 10UF 16WV ELECTRO 22UF 16WV	E1 K1 K1 E1 K1
C270,271 C272-275 C276 C277 C278			C94-0039-05 C94-0179-05 CK73FB1C105K C94-0041-05 C90-5663-05	ELECTRO 10UF 16WV ELECTRO 0.22UF 50WV CHIP C 1.0UF K ELECTRO 33UF 16WV ELECTRO 1UF 50WV	K1
C279 C280-285 C286 C287-289 C290,291			C94-0051-05 CK73GB1H222K CK73GB1H103K CK73FB1H104K CK73GB1H103K	ELECTRO 1UF 50WV CHIP C 2200PF K CHIP C 0.010UF K CHIP C 0.10UF K CHIP C 0.010UF K	K1
C292-296 C297,298 C297,298 C299,300 C303-305			CK73EB1A475K C92-0671-05 C92-0672-05 C94-0039-05 CK73GB1H103K	CHIP C 4.7UF K ELECTRO 10UF 16WV ELECTRO 22UF 16WV ELECTRO 10UF 16WV CHIP C 0.010UF K	E1 K1 K1
C307 C309,310 C311 C312 C313			CK73GB1H103K CC73GCH1H100D CC73GCH1H331J CK73FB1A225K CK73GB1H103K	CHIP C 0.010UF K CHIP C 10PF D CHIP C 330PF J CHIP C 2.2UF K CHIP C 0.010UF K	
C314 C316-319 C501 C502-504 C601,602			C94-0039-05 CK73GB1A224K CK73FB1C105K CK73GB1H103K CK73GB1C104K	ELECTRO 10UF 16WV CHIP C 0.22UF K CHIP C 1.0UF K CHIP C 0.010UF K CHIP C 0.10UF K	E1
C601,602 C603 C701			CK73GB1H104K CK73GB1H103K CK73GB1A474K	CHIP C 0.10UF K CHIP C 0.010UF K CHIP C 0.47UF K	
CN1 CN2 CN3 CN4 CN4			E41-0224-05 E40-3237-05 E41-0384-05 E40-9527-05 E41-0213-05	PIN ASSY (12PIN) PIN ASSY (2PIN) PIN ASSY (16PIN) FLAT CABLE CONNECTOR (24PIN) FLAT CABLE CONNECTOR (24PIN)	
CN5 CN6 CN7 J1 P1			E40-9368-05 E41-0399-05 E41-0009-05 E58-0863-15 E23-0745-05	FLAT CABLE CONNECTOR (28PIN) FLAT CABLE CONNECTOR (15PIN) PIN ASSY (2PIN) RECTANGULAR RECEPTACLE (16PIN) TERMINAL	
W2			E30-6218-05	CORD WITH PLUG (ANT)	
L1 L2 L3 L4 L7			L33-1170-05 L33-1126-05 L33-1029-05 L40-2205-34 L33-1039-05	CHOKE COIL ASSY CHOKE COIL SMALL FIXED INDUCTOR SMALL FIXED INDUCTOR (22UH) LINE FILTER COIL	K1
L101 L101 L102 L201 L201			L40-4795-34 L40-4795-68 L92-0075-05 L40-4795-34 L40-4795-68	SMALL FIXED INDUCTOR SMALL FIXED INDUCTOR (4.7UH) CHIP FERRITE SMALL FIXED INDUCTOR SMALL FIXED INDUCTOR (4.7UH)	

Ref. No.	Added	New	Parts No.	Description	Destination
L303-307 L303-307 X1 X2 X3			L40-4795-34 L40-4795-68 L78-0821-05 L77-2738-05 L77-2002-05	SMALL FIXED INDUCTOR SMALL FIXED INDUCTOR (4.7UH) RESONATOR (20MHz) CRYSTAL RESONATOR (32.768KHz) CRYSTAL RESONATOR (4.332MHz)	
U X Y Z	2D 2D 2D 2D		N83-3005-46 N80-3008-46 N83-3010-46 N84-2004-46	PAN HEAD TAPTITE SCREW PAN HEAD TAPTITE SCREW PAN HEAD TAPTITE SCREW PAN HEAD TAPTITE SCREW	
R1 R2 R3 R4 R5			RK73FB2B223J RK73GB2A101J RK73GB2A223J RK73GB2A222J RK73FB2B221J	CHIP R 22K J 1/8W CHIP R 100 J 1/10W CHIP R 22K J 1/10W CHIP R 2.2K J 1/10W CHIP R 220 J 1/8W	
R6 R7 R8 R9 R10			RK73GB2A153J R92-3032-05 R92-3047-05 RK73FB2B152J R92-3022-05	CHIP R 15K J 1/10W CHIP R 4.3K D 1/10W CHIP R 24K D 1/10W CHIP R 1.5K J 1/8W METAL R 750 D 1/10W	
R11 R12 R13 R14 R15			R92-3028-05 RK73GB2A103J R92-2104-05 RK73FB2B751J RK73GB2A473J	CHIP R 2.2K D 1/10W CHIP R 10K J 1/10W CHIP R 2.2 J 1W CHIP R 750 J 1/8W CHIP R 47K J 1/10W	
R16 R17 R18 R19 R20			RK73FB2B103J RK73GB2A102J RK73GB2A750J RK73GB2A272J RK73GB2A470J	CHIP R 10K J 1/8W CHIP R 1.0K J 1/10W CHIP R 75 J 1/10W CHIP R 2.7K J 1/10W CHIP R 47 J 1/10W	K1 K1 K1 K1
R21 R22 R23 R24 R25			RK73GB2A752J RK73GB2A274J RK73GB2A563J RK73GB2A470J RK73GB2A103J	CHIP R 7.5K J 1/10W CHIP R 270K J 1/10W CHIP R 56K J 1/10W CHIP R 47 J 1/10W CHIP R 10K J 1/10W	K1 K1 K1 K1 K1
R26,27 R28 R29 R30 R31			RK73GB2A913J RK73FB2B472J RD14DB2H102J RK73GB2A223J RK73FB2B472J	CHIP R 91K J 1/10W CHIP R 4.7K J 1/8W SMALL-RD 1.0K J 1/2W CHIP R 22K J 1/10W CHIP R 4.7K J 1/8W	K1 K1 K1
R32 R33 R34 R35 R36			RK73FB2B561J RK73GB2A473J RK73GB2A223J RK73GB2A104J RK73FB2B103J	CHIP R 560 J 1/8W CHIP R 47K J 1/10W CHIP R 22K J 1/10W CHIP R 100K J 1/10W CHIP R 10K J 1/8W	E1
R37 R38 R41 R42 R43			RK73GB2A103J RK73GB2A822J RK73GB2A223J RD14DB2H332J RK73EB2E473J	CHIP R 10K J 1/10W CHIP R 8.2K J 1/10W CHIP R 22K J 1/10W SMALL-RD 3.3K J 1/2W CHIP R 47K J 1/4W	
R44 R45 R46,47 R48 R49			RK73GB2A183J RK73GB2A104J RK73EB2E103J RK73EB2E102J RD14DB2H102J	CHIP R 18K J 1/10W CHIP R 100K J 1/10W CHIP R 10K J 1/4W CHIP R 1.0K J 1/4W SMALL-RD 1.0K J 1/2W	E1 K1

K1 : KDC-MP925 E1 : KDC-W8027

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

ELECTRIC UNIT (X34-3030-10, X34-3032-71)

Ref. No.	Add	New	Parts No.	Description	Destination
R101			RK73GB2A103J	CHIP R 10K J 1/10W	K1 E1
R102			RK73GB2A153J	CHIP R 15K J 1/10W	
R103			RK73GB2A104J	CHIP R 100K J 1/10W	
R106			RK73GB2A103J	CHIP R 10K J 1/10W	
R108,109			RK73GB2A103J	CHIP R 10K J 1/10W	
R109			RK73GB2A103J	CHIP R 10K J 1/10W	K1
R110			RK73GB2A104J	CHIP R 100K J 1/10W	
R111,112			RK73GB2A103J	CHIP R 10K J 1/10W	
R115,116			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R117			RK73GB2A103J	CHIP R 10K J 1/10W	
R118-120			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R121			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R122-126			RK73GB2A101J	CHIP R 100 J 1/10W	
R127			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R128			RK73GB2A104J	CHIP R 100K J 1/10W	
R129			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R130			RK73GB2A104J	CHIP R 100K J 1/10W	
R131			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R132			RK73GB2A104J	CHIP R 100K J 1/10W	
R133-136			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R137			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R138-140			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R141			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R142,143			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R144			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R145,146			RK73GB2A473J	CHIP R 47K J 1/10W	
R150,151			RK73GB2A104J	CHIP R 100K J 1/10W	
R152,153			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R156			RK73GB2A104J	CHIP R 100K J 1/10W	
R158			RK73GB2A104J	CHIP R 100K J 1/10W	
R159,160			RK73GB2A471J	CHIP R 470 J 1/10W	
R161			RK73GB2A104J	CHIP R 100K J 1/10W	
R162			RK73GB2A103J	CHIP R 10K J 1/10W	
R163,164			RK73GB2A471J	CHIP R 470 J 1/10W	
R165,166			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R167			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R169			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R170			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R171,172			RK73GB2A471J	CHIP R 470 J 1/10W	
R173,174			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R175			RK73GB2A333J	CHIP R 33K J 1/10W	
R176			RK73GB2A473J	CHIP R 47K J 1/10W	
R177			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R178,179			RK73GB2A103J	CHIP R 10K J 1/10W	
R180			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R181			RK73GB2A473J	CHIP R 47K J 1/10W	K1 E1
R182			RK73GB2A104J	CHIP R 100K J 1/10W	
R183			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R183,184			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R186			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R201			RK73GB2A103J	CHIP R 10K J 1/10W	
R202-204			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R205			RK73GB2A134J	CHIP R 130K J 1/10W	
R206			RK73GB2A823J	CHIP R 82K J 1/10W	
R207			RK73GB2A473J	CHIP R 47K J 1/10W	
R208			RK73GB2A912J	CHIP R 9.1K J 1/10W	
R209			RK73GB2A363J	CHIP R 36K J 1/10W	
R210			RK73GB2A622J	CHIP R 6.2K J 1/10W	
R217			RK73GB2A682J	CHIP R 6.8K J 1/10W	
R218			RK73GB2A332J	CHIP R 3.3K J 1/10W	
R219			RK73GB2A392J	CHIP R 3.9K J 1/10W	K1 E1 K1
R220,221			RK73FB2B361J	CHIP R 360 J 1/8W	
R222,223			RK73FB2B222J	CHIP R 2.2K J 1/8W	
R222,223			RK73FB2B223J	CHIP R 22K J 1/8W	
R224,225			RK73FB2B103J	CHIP R 10K J 1/8W	
R226,227			RK73FB2B223J	CHIP R 22K J 1/8W	K1 K1 E1 K1
R228,229			RK73FB2B820J	CHIP R 82 J 1/8W	
R230,231			RK73EB2E181J	CHIP R 180 J 1/4W	
R232,233			RK73FB2B361J	CHIP R 360 J 1/8W	
R234,235			RK73FB2B222J	CHIP R 2.2K J 1/8W	
R234,235			RK73FB2B223J	CHIP R 22K J 1/8W	E1 K1 K1 K1 E1
R236,237			RK73FB2B103J	CHIP R 10K J 1/8W	
R238,239			RK73FB2B223J	CHIP R 22K J 1/8W	
R240,241			RK73FB2B820J	CHIP R 82 J 1/8W	
R242,243			RK73EB2E181J	CHIP R 180 J 1/4W	
R244,245			RK73FB2B361J	CHIP R 360 J 1/8W	K1 E1 K1 K1
R246,247			RK73FB2B222J	CHIP R 2.2K J 1/8W	
R246,247			RK73FB2B223J	CHIP R 22K J 1/8W	
R248,249			RK73FB2B103J	CHIP R 10K J 1/8W	
R250,251			RK73FB2B223J	CHIP R 22K J 1/8W	
R252,253			RK73FB2B820J	CHIP R 82 J 1/8W	K1 E1
R254,255			RK73EB2E181J	CHIP R 180 J 1/4W	
R256			RK73GB2A221J	CHIP R 220 J 1/10W	
R257			RK73GB2A223J	CHIP R 22K J 1/10W	
R259			RK73GB2A432J	CHIP R 4.3K J 1/10W	
R260			RK73GB2A100J	CHIP R 10 J 1/10W	
R261			RK73GB2A752J	CHIP R 7.5K J 1/10W	
R262			RK73EB2E4R7J	CHIP R 4.7 J 1/4W	
R263,264			RK73EB2E100J	CHIP R 10 J 1/4W	
R265,266			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R267			RK73EB2E100J	CHIP R 10 J 1/4W	
R268			RK73EB2E4R7J	CHIP R 4.7 J 1/4W	
R269			RK73EB2E100J	CHIP R 10 J 1/4W	
R270			RK73GB2A473J	CHIP R 47K J 1/10W	
R271			RK73GB2A821J	CHIP R 820 J 1/10W	
R272,273			RK73GB2A103J	CHIP R 10K J 1/10W	
R274			RK73GB2A104J	CHIP R 100K J 1/10W	
R275			RK73GB2A473J	CHIP R 47K J 1/10W	
R276			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R277			RK73GB2A473J	CHIP R 47K J 1/10W	
R278			RK73GB2A333J	CHIP R 33K J 1/10W	
R279,280			RK73GB2A334J	CHIP R 330K J 1/10W	
R303			RK73FB2B102J	CHIP R 1.0K J 1/8W	
R304			RK73GB2A223J	CHIP R 22K J 1/10W	
R305			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R306-308			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R501,502			RK73EB2E101J	CHIP R 100 J 1/4W	
R503-507			RK73EB2E472J	CHIP R 4.7K J 1/4W	
R508			RK73EB2E101J	CHIP R 100 J 1/4W	
R509-511			RK73EB2E471J	CHIP R 470 J 1/4W	

K1 : KDC-MP925 E1 : KDC-W8027

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

ELECTRIC UNIT (X34-3030-10, X34-3032-71)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
R512 R513 R514 R515,516 R517,518			RK73EB2E102J RK73GB2A223J RK73GB2A392J RK73GB2A472J RK73EB2E101J	CHIP R 1.0K J 1/4W CHIP R 22K J 1/10W CHIP R 3.9K J 1/10W CHIP R 4.7K J 1/10W CHIP R 100 J 1/4W	
R519 R520 R522-524 R525 R526,527			RK73EB2E471J RK73EB2E472J RK73GB2A222J RK73GB2A102J RK73GB2A473J	CHIP R 470 J 1/4W CHIP R 4.7K J 1/4W CHIP R 2.2K J 1/10W CHIP R 1.0K J 1/10W CHIP R 47K J 1/10W	
R601,602 R603 R604,605 R606 R607			RK73GB2A104J RK73GB2A222J RK73GB2A103J RK73GB2A222J RK73GB2A911J	CHIP R 100K J 1/10W CHIP R 2.2K J 1/10W CHIP R 10K J 1/10W CHIP R 2.2K J 1/10W CHIP R 910 J 1/10W	
R608,609 R610 R611,612 R613 R614			RK73GB2A104J RK73GB2A222J RK73GB2A103J RK73GB2A222J RK73GB2A911J	CHIP R 100K J 1/10W CHIP R 2.2K J 1/10W CHIP R 10K J 1/10W CHIP R 2.2K J 1/10W CHIP R 910 J 1/10W	
R615-618 R620 R621 R623,624 R625,626			RK73GB2A102J RK73EB2E102J RK73GB2A472J RK73GB2A332J RK73GB2A102J	CHIP R 1.0K J 1/10W CHIP R 1.0K J 1/4W CHIP R 4.7K J 1/10W CHIP R 3.3K J 1/10W CHIP R 1.0K J 1/10W	
R701 W3			RK73GB2A104J R92-1252-05	CHIP R 100K J 1/10W CHIP R 0 OHM J 1/16W	E1
D1 D2 D3 D4 D5			1N5393G-M5 RB160L-40 MA8056-M MA8082-L SFPB-54V	DIODE DIODE ZENER DIODE ZENER DIODE DIODE	
D6 D7 D8 D9 D16			MA8100-L MA4062(N)-L MA8110-M MA8056-M MA3056-M	ZENER DIODE ZENER DIODE ZENER DIODE ZENER DIODE ZENER DIODE	K1 K1 E1
D17 D18 D19 D20,21 D20,21			MA3047-M MA8068-M MA8062-M DAP202U LM1MA142WA-G	ZENER DIODE ZENER DIODE ZENER DIODE DIODE DIODE	
D20,21 D101 D101 D101 D201,202		*	MA142WA DAP202U LM1MA142WA-G MA142WA RD6.8M(B2)	DIODE DIODE DIODE DIODE ZENER DIODE	
D203 D204,205 D206 D207,208 D207,208			RD6.8MW RD6.8M(B2) RD6.8MW DAP202U LM1MA142WA-G	ZENER DIODE ZENER DIODE ZENER DIODE DIODE DIODE	
D207,208 D209-216		*	MA142WA S1J	DIODE DIODE	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
D209-216 D217 D301 D501-505 D503-505			1SR154-400 DA204K IMSA-6801 MA3062WA MA3062WA	DIODE DIODE SURGE ABSORBER ZENER DIODE ZENER DIODE	E1 K1
D506-509 D601 IC1 IC2 IC3		*	DA204K DA204K UPD703030GC041 TDA7411 M5237ML	DIODE DIODE MICROCONTROLLER IC ANALOGUE IC ANALOGUE IC	
IC4 IC5 IC6 IC7 IC8			TDA7560 TDA7401 NJM2195FJ1 ICL7660SIBA S-80837CNCNB	ANALOGUE IC ANALOGUE IC ANALOGUE IC ANALOGUE IC MOS-IC	K1
IC9 IC10 IC10-13 IC14 IC15,16			TC74HC02AF NJM4565M-TE2 NJM4565M-TE2 TDA7479D LB1930M	MOS-IC ANALOGUE IC ANALOGUE IC ANALOGUE IC ANALOGUE IC	E1 K1
IC18 IC19 IC20 Q1 Q2			L9820D013TR LM2672M-ADJ TC7W66FK 2SA2057 2SC4081	ANALOGUE IC ANALOGUE IC MOS-IC TRANSISTOR TRANSISTOR	
Q3 Q4 Q4 Q5 Q5			2SA1576A DTA124EUA UN5112 DTC124EUA UN5212	TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR	
Q6 Q6 Q7 Q7 Q8,9			DTC144EUA UN5213 DTA124EUA UN5112 2SA2057	DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR	
Q11 Q11 Q12 Q12 Q13			DTC124EUA UN5212 DTA124EUA UN5112 2SA2057	DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR	
Q14 Q15 Q16,17 Q18,19 Q20			2SC4081 2SB1443 2SC4081 2SA1576A 2SC4081	TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR	K1 K1 K1 K1
Q21 Q22 Q23 Q23 Q24			2SA1576A 2SC4081 DTC114YUA UN5214 2SB1240	TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR	K1 K1 K1 K1 K1
Q25 Q25 Q26 Q26 Q26 Q27			DTA123JK KRA105S DTC144EUA UN5213 2SC4081	DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR	E1 E1

K1 : KDC-MP925 E1 : KDC-W8027

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

ELECTRIC UNIT (X34-3030-10, X34-3032-71)

Ref. No.	Added	New	Parts No.	Description	Destination	Ref. No.	Added	New	Parts No.	Description	Destination
Q29			2SC4081	TRANSISTOR		31	3B	*	D13-2184-04	GEAR	
Q30,31			DTA124EUA	DIGITAL TRANSISTOR		32	2B	*	D13-2173-03	RACK (GEAR)	
Q30,31			UN5112	DIGITAL TRANSISTOR		33	2A	*	D14-0763-04	ROLLER	
Q201			DTC143TUA	DIGITAL TRANSISTOR		35	2B	*	D21-2389-04	SHAFT	
Q201			UN5216	DIGITAL TRANSISTOR		36	1A	*	D23-0955-04	RETAINER	
Q202			DTC124EUA	DIGITAL TRANSISTOR		37	1B	*	D39-0246-05	DAMPER	
Q202			UN5212	DIGITAL TRANSISTOR		38	2B	*	G01-3095-04	EXTENSION SPRING	
Q203-208			DTC143TUA	DIGITAL TRANSISTOR		39	2A	*	G01-3093-04	TORSION COIL SPRING	
Q203-208			UN5216	DIGITAL TRANSISTOR		40	2A	*	G01-3094-04	EXTENSION SPRING	
Q210			2SC4081	TRANSISTOR		41	1B	*	G01-3091-04	EXTENSION SPRING	
Q303			DTC124EUA	DIGITAL TRANSISTOR		42	2A	*	G01-3092-04	EXTENSION SPRING	
Q303			UN5212	DIGITAL TRANSISTOR		43	1B	*	G01-3090-04	EXTENSION SPRING	
Q304			2SB1188(Q,R)	TRANSISTOR		44	2B	*	G02-1413-04	FLAT SPRING	
Q305			DTC143TUA	DIGITAL TRANSISTOR		45	2B	*	G02-1414-04	FLAT SPRING	
Q305			UN5216	DIGITAL TRANSISTOR		51	1A	*	J21-9753-02	MOUNTING HARDWARE	
Q501			DTA124EUA	DIGITAL TRANSISTOR		52	3B	*	J21-9755-02	MOUNTING HARDWARE	
Q501			UN5112	DIGITAL TRANSISTOR		53	1B	*	J21-9752-03	MOUNTING HARDWARE	
Q502			2SB1427	TRANSISTOR		55	1A	*	J90-1014-01	GUIDE	
Q503			DTC124EUA	DIGITAL TRANSISTOR		56	1B	*	J90-1024-03	GUIDE	
Q503			UN5212	DIGITAL TRANSISTOR		DFPC1	3A		J84-0141-05	FLEXIBLE PRINTED WIRING BOARD	
Q601			DTC124EUA	DIGITAL TRANSISTOR		A	2B	*	N09-6192-05	TAPPING SCREW (P2X8COUNTERSU)	
Q601			UN5212	DIGITAL TRANSISTOR		B	1B	*	N09-6191-05	STEPPED SCREW (M1.7TOTAL8BON)	
Q602			2SC4081	TRANSISTOR		C	2B		N09-6004-05	MACHINE SCREW (M1.7X2.5 IB-L)	
Q603			DTC124EUA	DIGITAL TRANSISTOR		E	2B	*	N09-6193-05	MACHINE SCREW (M2X2PAN-HEAD#)	
Q603			UN5212	DIGITAL TRANSISTOR		F	1A	*	N09-6194-05	TAPPING SCREW (P2X5BINDING-H)	
TH1			PTH9C42BD471Q	POSITIVE RESISTOR		G	2A		N19-2163-04	FLAT WASHER	
A2			W02-3430-05	ELECTRIC CIRCUIT MODULE		H	1B		N39-2020-46	PAN HEAD MACHIN SCREW	
A1			X86-3730-11	FRONT-END UNIT	K1	J	1B	*	N09-6196-05	TAPTITE SCREW (S2X3.5PRECISI)	
A1			X86-3732-70	FRONT-END UNIT	E1	DM1	3B		T42-1066-04	DC MOTOR ASSY (SPINDOL)	
CD MECHANISM ASSY (X92-4900-00)						DM2	3B		T42-1067-04	DC MOTOR ASSY (LOADING)	
2	1B	*	A10-4884-02	CHASSIS		DPU1	2B		X93-2010-00	OPTICAL PICKUP ASSY	
5	1B	*	D10-4610-03	ARM ASSY							
8	2A	*	D10-4608-03	LEVER ASSY							
10	3A	*	D10-4602-03	ARM							
11	2A	*	D10-4603-03	ARM							
12	3A	*	D10-4604-03	ARM							
13	3A	*	D10-4605-03	ARM							
14	3B	*	D10-4613-03	ARM							
15	2A	*	D10-4615-03	SLIDER							
16	3B	*	D10-4617-02	SLIDER							
17	3B	*	D10-4618-03	SLIDER							
18	3B	*	D10-4614-04	ARM							
19	3B	*	D10-4606-04	ARM							
22	2A	*	D13-2174-04	GEAR							
23	2B	*	D13-2180-04	GEAR							
24	3B	*	D13-2181-04	GEAR							
25	3B	*	D13-2182-04	GEAR							
26	3B	*	D13-2175-04	WORM							
27	3B	*	D13-2176-04	GEAR							
28	3B	*	D13-2177-04	GEAR							
29	3B	*	D13-2178-04	GEAR							
30	3B	*	D13-2183-04	GEAR							

K1 : KDC-MP925 E1 : KDC-W8027

△ Indicates safety critical components.