

2. EXPLODED VIEWS AND PARTS LIST


NOTES : • Parts marked by " * " are generally unavailable because they are not in our Master Spare Parts List.

• Screw adjacent to ▽ mark on the product are used for disassembly.

• For the applying amount of lubricants or glue, follow the instructions in this manual.

(In the case of no amount instructions, apply as you think it appropriate.)

2.1 PACKING

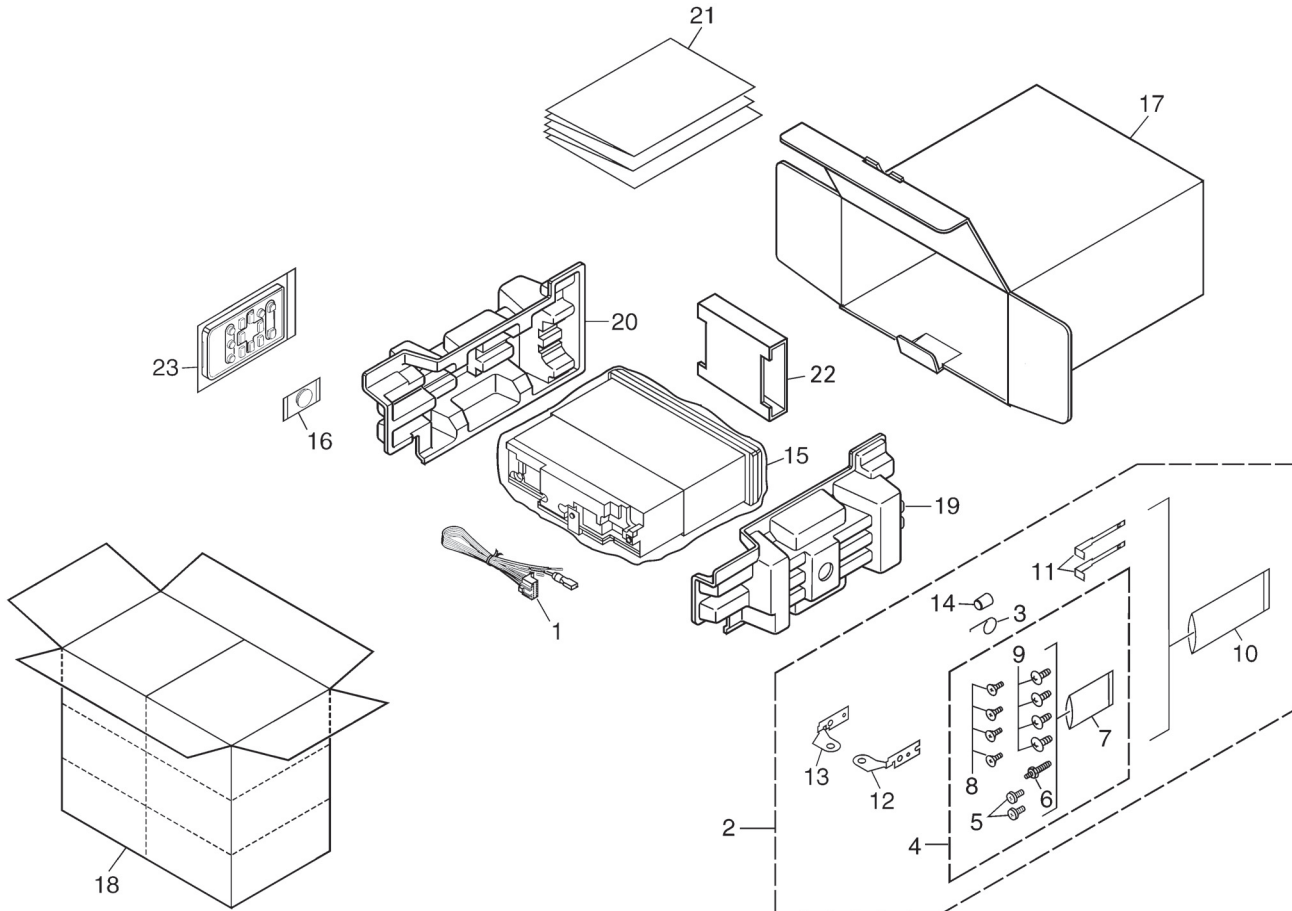

(1) PACKING SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.
1	Cord Assy	CDE7154	* 16	Battery	CEX1065
2	Accessory Assy	CEA3376	17	Carton	See Contrast table(2)
3	Spring	CBH1650	18	Contain Box	See Contrast table(2)
4	Screw Assy	CEA3848	19	Protector	CHP2663
5	Screw	BPZ20P060FZK	20	Protector	CHP2664
6	Screw	CBA1650	21-1	Owner's Manual	See Contrast table(2)
* 7	Polyethylene Bag	CEG-127	21-2	Installation Manual	See Contrast table(2)
8	Screw	CRZ50P090FTC	21-3	Warranty Card	See Contrast table(2)
9	Screw	TRZ50P080FTC	* 21-4	Card	See Contrast table(2)
* 10	Polyethylene Bag	CEG-158	* 21-5	Caution Card	See Contrast table(2)
11	Handle	CNC5395	22	Inner Box	XHW7001
12	Holder	CND1249	23	Remote Control Unit	CXC3173
13	Holder	CND1250			
14	Bush	CNV3930			
15	Polyethylene Bag	CEG1173			

(2) CONTRAST TABLE

DEH-P360/XM/UC, DEH-P360/XN/UC, DEH-P3600/XM/UC and DEH-P3600/XN/UC are constructed the same except for the following:


Mark No.	Symbol and Description	Parts No.	
		DEH-P360/XM/UC	DEH-P3600/XM/UC
17	Carton	XHG7006	XHG7005
18	Contain Box	XHL7006	XHL7005
21-1	Owner's Manual	XRD7012	XRD7010
21-2	Installation Maunal	XRD7013	XRD7011
* 21-3	Warranty Card	CRY1070	Not used
* 21-4	Card	Not used	ARY1048
* 21-5	Caution Card	Not used	CRP1294

Mark No.	Symbol and Description	Parts No.	
		DEH-P360/XN/UC	DEH-P3600/XN/UC
17	Carton	XHG7031	XHG7032
18	Contain Box	XHL7031	XHL7032
21-1	Owner's Manual	XRD7012	XRD7010
21-2	Installation Maunal	XRD7013	XRD7011
* 21-3	Warranty Card	CRY1070	Not used
* 21-4	Card	Not used	ARY1048
* 21-5	Caution Card	Not used	CRP1294

● Owner's Manual, Installation Manual

Model	Parts No.	Language
DEH-P360/XM/UC	XRD7012	English, French, Spanish
DEH-P360/XN/UC	XRD7013	
DEH-P3600/XM/UC	XRD7010	
DEH-P3600/XN/UC	XRD7011	

2.2 EXTERIOR

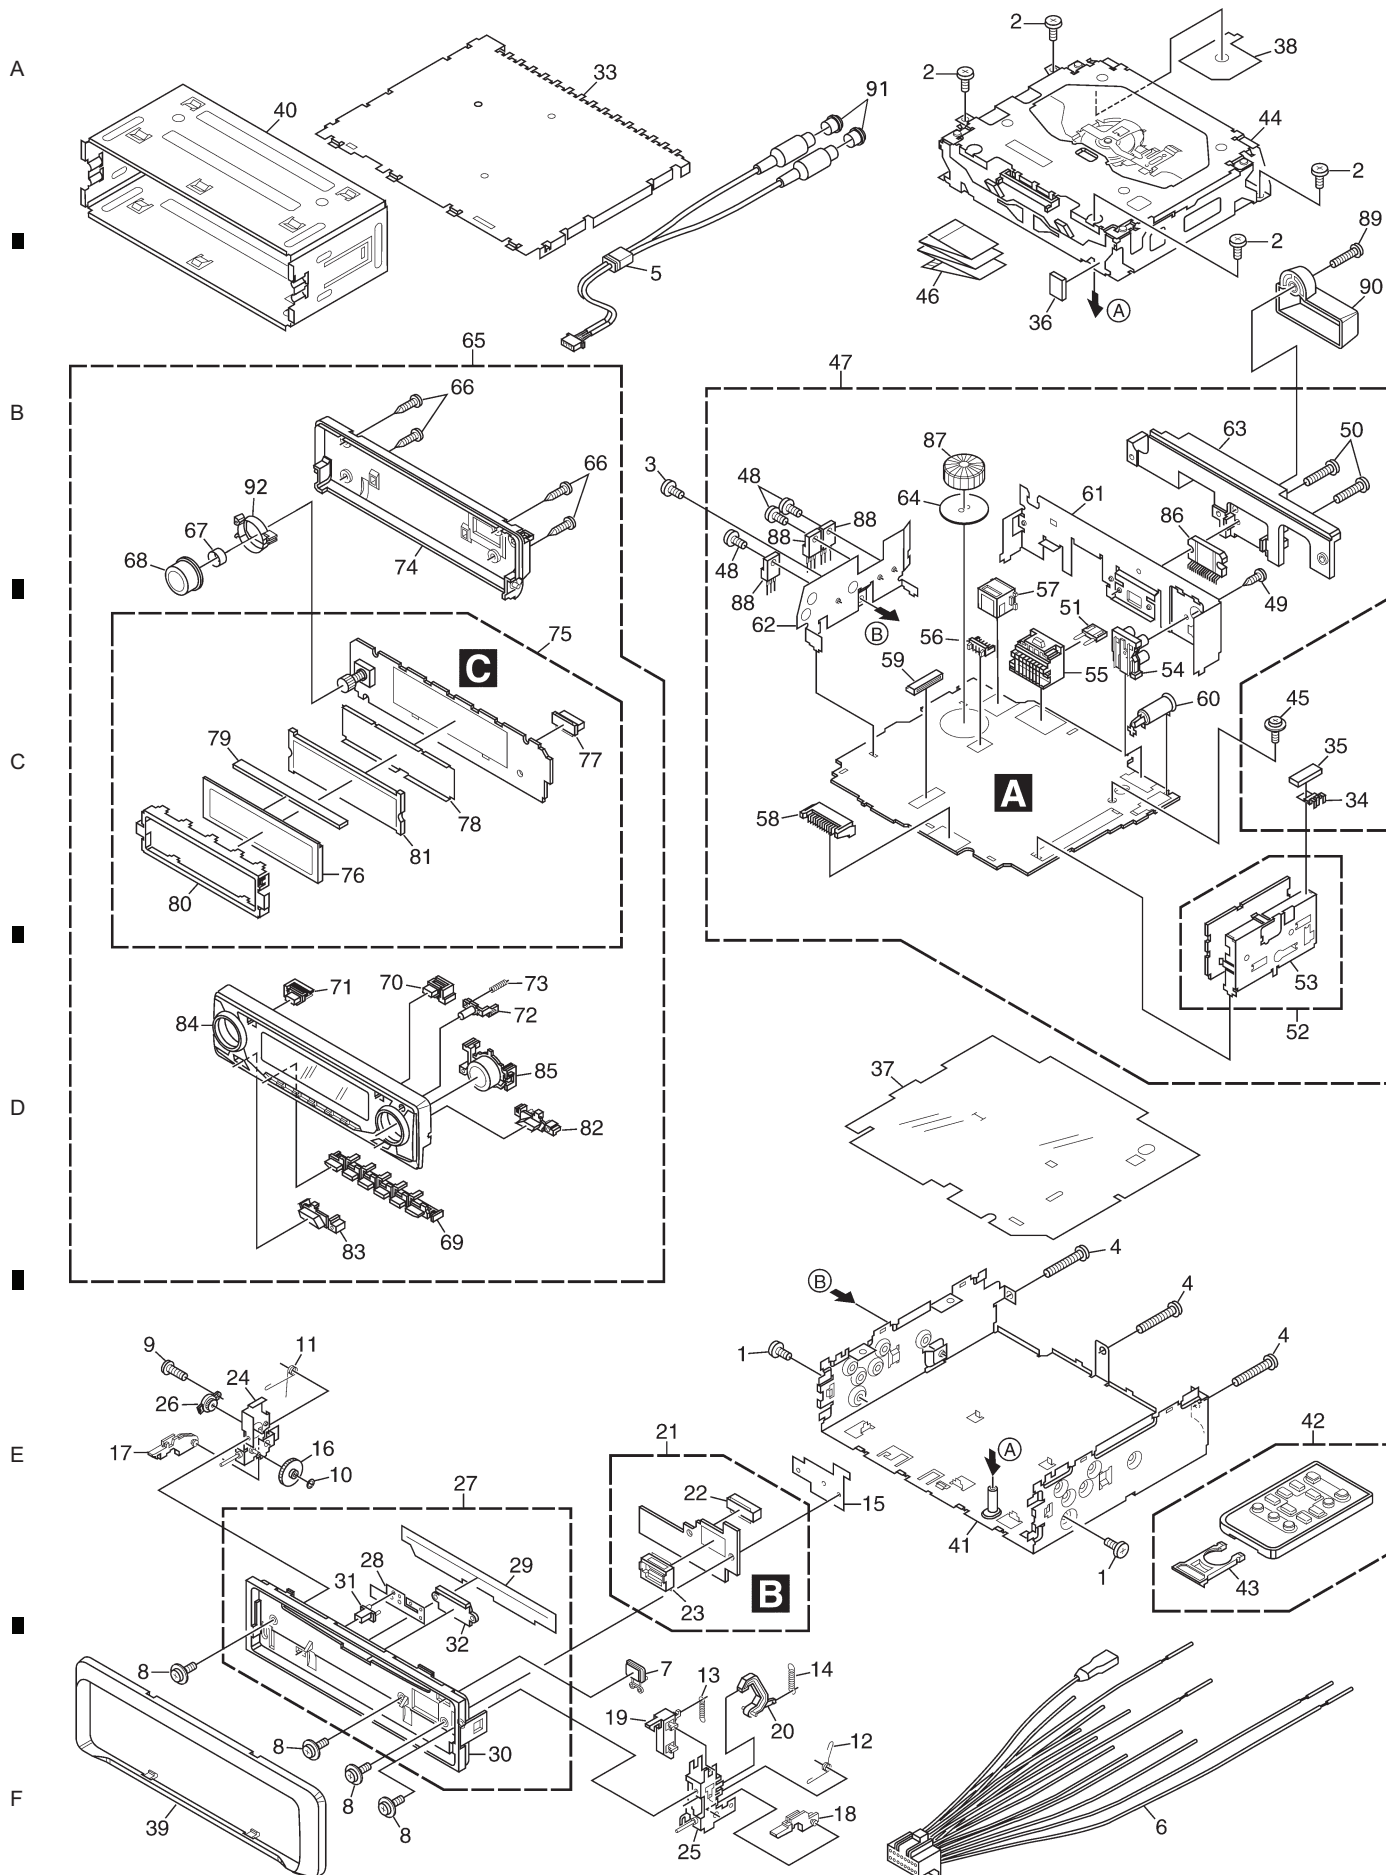

(1) EXTERIOR SECTION PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	
1	Screw	BMZ30P040FZK	51	Fuse(10A)	CEK1208	A
2	Screw	BSZ26P060FTC	52	FM/AM Tuner Unit	CWE1646	
3	Screw	BSZ30P060FTC	53	Holder	CND1054	
4	Screw	BSZ30P200FTC	54	Pin Jack(CN352)	CKB1051	
5	Cord Assy	See Contrast table(2)	55	Plug(CN901)	CKM1376	
6	Cord Assy	CDE7154	56	Plug(CN351)	See Contrast table(2)	
7	Button(EJECT)	CAC7752	57	Connector(CN101)	CKS3408	
8	Screw(M2x4.5)	CBA1647	58	Plug(CN801)	CKS3537	
9	Screw(M2x4)	CBA1649	59	Connector(CN651)	CKS3835	
10	Washer	CBF1038	60	Antenna Jack(CN401)	CKX1056	B
11	Spring	CBH2650	61	Holder	See Contrast table(2)	
12	Spring	CBH2651	62	Holder	CND1352	
13	Spring	CBH2652	63	Heat Sink	CNR1668	
14	Spring	CBH2653	64	Insulator	XNM7031	
15	Holder	CND1254	65	Detachable Assy	See Contrast table(2)	
16	Gear	CNV5997	66	Screw	BPZ20P100FZK	
17	Arm	CNV7400	67	Spring	CBL1470	
18	Arm	CNV7401	68	Knob	See Contrast table(2)	
19	Arm	CNV7402	69	Button(1-6)	XAC7005	C
20	Arm	CNV7403	70	Button(BAND)	XAC7007	
21	Panel Unit	CWM8758	71	Button(CLOCK)	XAC7014	
22	Socket(CN1950)	CKS3550	72	Button(OPEN)	See Contrast table(2)	
23	Connector(CN1951)	CKS4462	73	Spring	XBH7001	
24	Holder Unit	CXB9501	74	Cover	XNS7013	
25	Holder Unit	CXB9502	75	Keyboard Unit	XWM7040	
26	Damper Unit	CXB9503	76	LCD	CAW1755	
27	Service Panel Unit	CXX1691	77	Connector(CN1901)	CKS4524	
28	Spring	CBL1512	78	Sheet	CNM7921	D
29	Cover	CNM6854	79	Connector	CNV7365	
30	Panel	CNS7245	80	Holder	XNC7001	
31	Pin	CNV6486	81	Lighting Conductor	XNV7003	
32	Lighting Conductor	CNV6487	82	Button Unit(EQ-EX)	XXA7007	
33	Case	CNB2793	83	Button Unit(EQ)	XXA7008	
34	Earth Plate	CNC8915	84	Sub Grille Assy	See Contrast table(2)	
35	Cushion	CNM8890	85	Sub Button Assy(SELECT)	See Contrast table(2)	
36	Insulator	CNM7682	86	IC(IC301)	PAL007A	
37	Insulator	CNM7935	87	Choke Coil(L301)	CTH1280	E
38	Insulator	CNM8174	88	Transistor(Q651,911,921)	2SD2396	
39	Panel	See Contrast table(2)	89	Screw	See Contrast table(2)	
40	Holder Unit	See Contrast table(2)	90	Holder	See Contrast table(2)	
41	Chassis Unit	CXB9528	91	Cap	See Contrast table(2)	
42	Remote Control Unit	CXC3173	* 92	Lighting Conductor	XNV7012	
43	Cover	CNS7068				
44	CD Mechanism Module(S10)	CXK5602				
45	Screw	ISS26P055FTC				
46	Cable	XDE7003				
47	Tuner Amp Unit	See Contrast table(2)				F
48	Screw	ASZ26P060FTC				
49	Screw	BPZ26P080FTC				
50	Screw	BSZ26P160FTC				


(2) CONTRAST TABLE

DEH-P360/XM/UC, DEH-P360/XN/UC, DEH-P3600/XM/UC and DEH-P3600/XN/UC are constructed the same except for the following:

Mark No.	Symbol and Description	Parts No.	
		DEH-P360/XM/UC	DEH-P3600/XM/UC
5	Cord Assy	CDE7129	Not used
39	Panel	CNS6935	XNS7059
40	Holder Unit	CXB6681	CXB6681
47	Tuner Amp Unit	XWM7066	XWM7065
56	Plug(CN351)	CKS1238	Not used
61	Holder	CND1239	CND1477
65	Detachable Assy	XXA7083	XXA7084
68	Knob	XAA7009	XAA7003
72	Button(OPEN)	XAC7026	XAC7012
84	Sub Grille Assy	XXA7086	XXA7087
85	Sub Button Assy(SELECT)	XXA7229	XXA7228
89	Screw	Not used	BMZ40P140FTC
90	Holder	Not used	CNV7619
91	Cap	CNV6727	Not used

Mark No.	Symbol and Description	Parts No.	
		DEH-P360/XN/UC	DEH-P3600/XN/UC
5	Cord Assy	CDE7129	Not used
39	Panel	CNS6935	XNS7059
40	Holder Unit	CNC8659(Holder)	CNC8659(Holder)
47	Tuner Amp Unit	XWM7066	XWM7065
56	Plug(CN351)	CKS1238	Not used
61	Holder	CND1239	CND1477
65	Detachable Assy	XXA7083	XXA7084
68	Knob	XAA7009	XAA7003
72	Button(OPEN)	XAC7026	XAC7012
84	Sub Grille Assy	XXA7086	XXA7087
85	Sub Button Assy(SELECT)	XXA7229	XXA7228
89	Screw	Not used	BMZ40P140FTC
90	Holder	Not used	CNV7619
91	Cap	CNV6727	Not used

2.3 CD MECHANISM MODULE

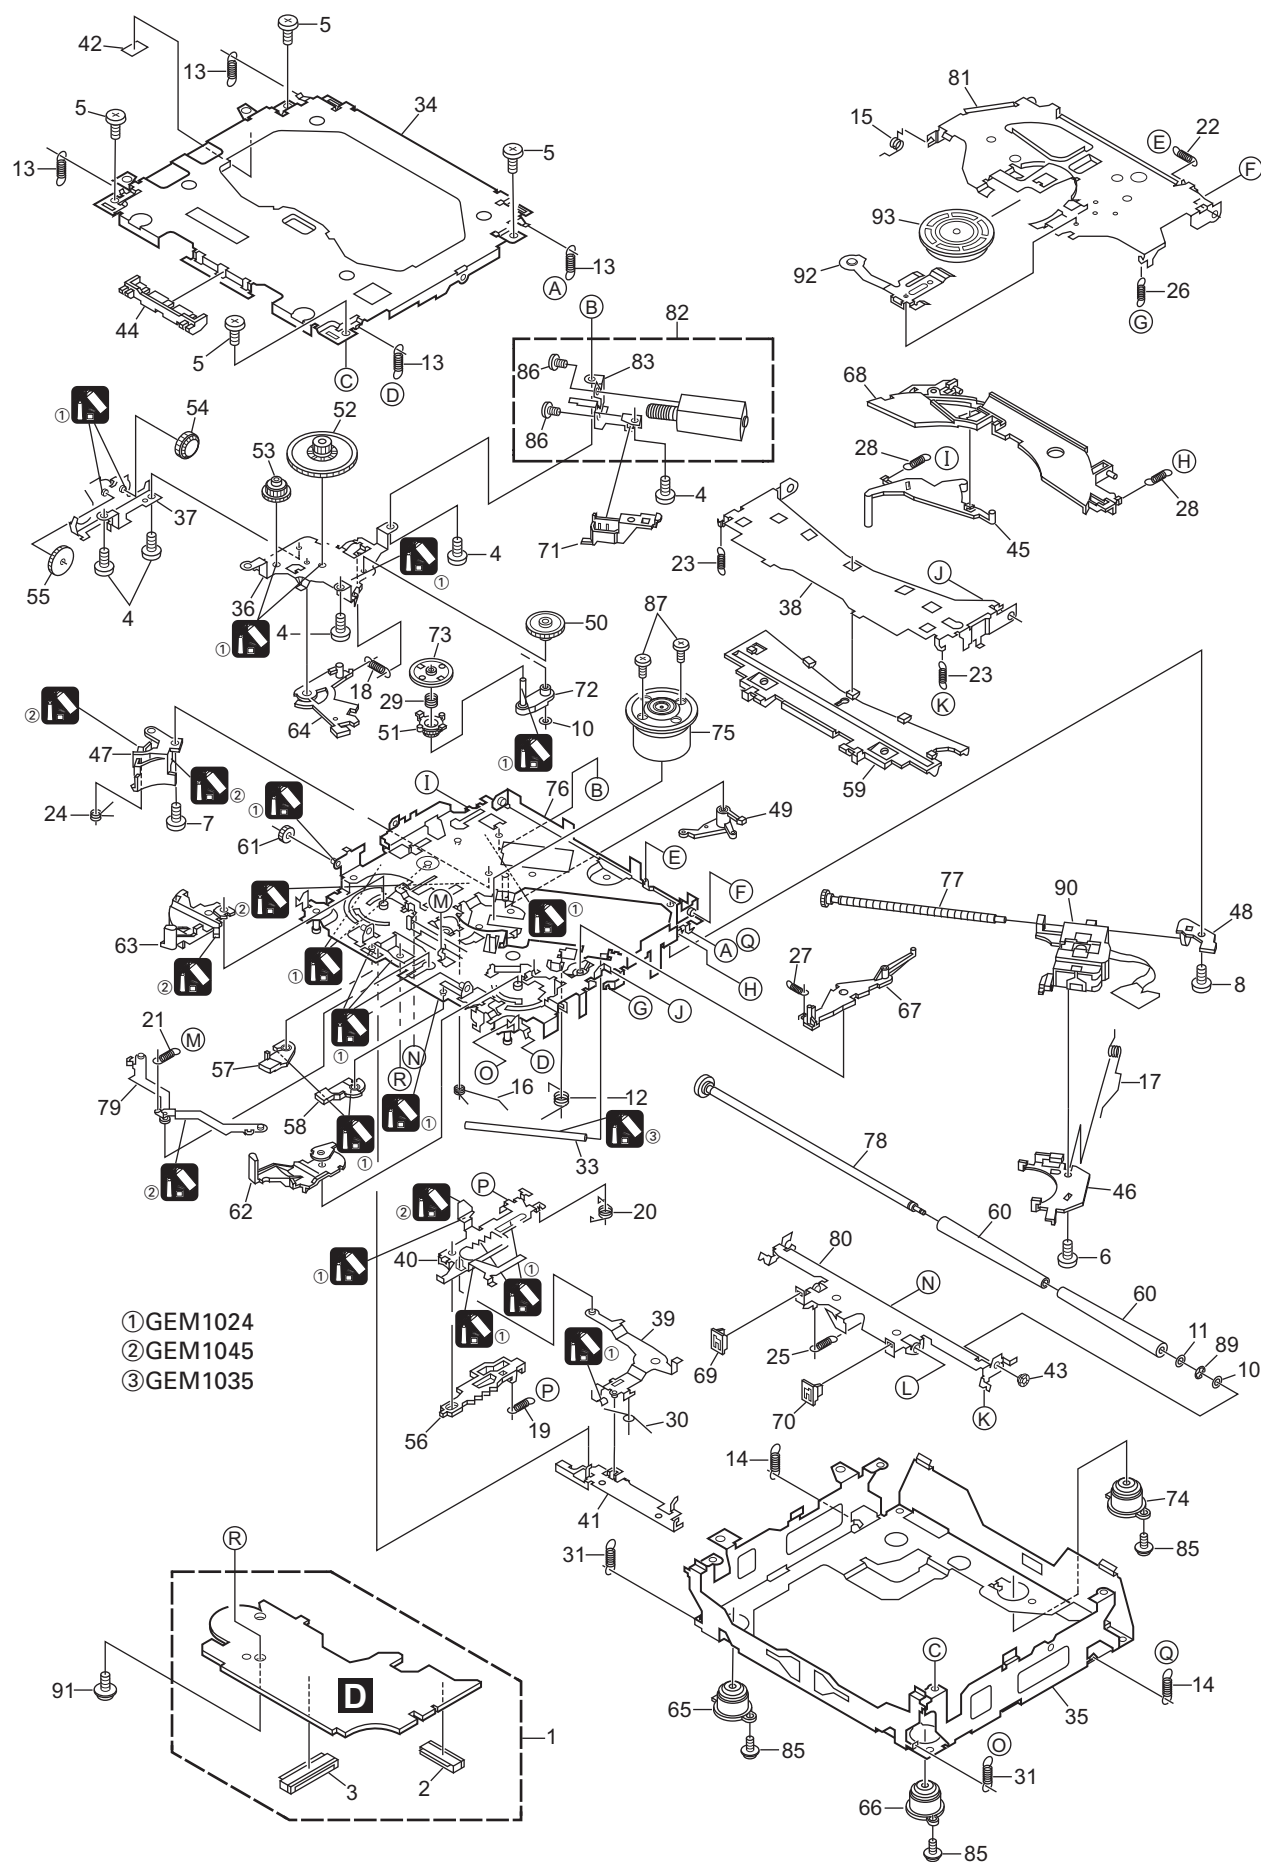

CD MECHANISM MODULE SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.	
1	CD Core Unit(S10)	CWX2947	51	Gear	CNV7208	A
2	Connector(CN101)	CKS4182	52	Gear	CNV7209	
3	Connector(CN701)	CKS4188	53	Gear	CNV7210	
4	Screw	BMZ20P035FTC	54	Gear	CNV7211	
5	Screw	BSZ20P040FTC	55	Gear	CNV7212	
6	Screw(M2x4)	CBA1362	56	Rack	CNV7214	
7	Screw(M2x3)	CBA1511	57	Arm	CNV7215	
8	Screw(M2x3)	CBA1527	58	Arm	CNV7216	
9			59	Guide	CNV7217	
10	Washer	CBF1038	60	Roller	CNV7218	B
11	Washer	CBF1060	61	Gear	CNV7219	
12	Spring	CBH2390	62	Arm	CNV7221	
13	Spring	CBH2606	63	Arm	CNV7220	
14	Spring	CBH2607	64	Arm	CNV7222	
15	Spring	CBH2608	65	Damper	CNV7888	
16	Spring	CBH2609	66	Damper	CNV7887	
17	Spring	CBH2610	67	Arm	CNV7341	
18	Spring	CBH2735	68	Arm	CNV7342	
19	Spring	CBH2612	69	Guide	CNV7360	
20	Spring	CBH2613	70	Guide	CNV7361	C
21	Spring	CBH2614	71	Holder	CNV7437	
22	Spring	CBH2615	72	Arm	CNV7805	
23	Spring	CBH2616	73	Gear	CNV7595	
24	Spring	CBH2617	74	Damper	CNV7889	
25	Spring	CBH2620	75	Motor Unit(M1)	CXB6007	
26	Spring	CBH2621	76	Chassis Unit	CXC2318	
27	Spring	CBH2641	77	Screw Unit	CXB8729	
28	Spring	CBH2642	78	Gear Unit	CXC2397	
29	Spring	CBH2643	79	Arm Unit	CXC2316	D
30	Spring	CBH2659	80	Arm	CND1896	
31	Spring	CBH2688	81	Arm	CND1894	
32			82	Motor Unit(M2)	CXB8933	
33	Shaft	CLA4441	83	Bracket	CNC9985	
34	Frame	CNC9962	84			
35	Frame	CNC9963	85	Screw(M2x5)	EBA1028	
36	Bracket	CNC9966	86	Screw	JFZ20P020FTC	
37	Bracket	CND1895	87	Screw	JGZ17P022FTC	E
38	Arm	CNC9968	88			
39	Arm	CND1909	89	Washer	YE20FTC	
40	Lever	CND2032	90	Pickup Unit(P10)(Service)	CXX1641	
41	Lever	CNC9984	91	Screw	IMS26P030FTC	
42	Sheet	CNM8134	92	Spring	CBL1635	
43	Collar	CNV7798	93	Clamper	CNV7197	
44	Guide	CNV7799				
45	Arm	CNV7800				
46	Rack	CNV7199				
47	Holder	CNV7201				F
48	Holder	CNV7202				
49	Arm	CNV7203				
50	Gear	CNV7207				

5. ELECTRICAL PARTS LIST

NOTE:

- Parts whose parts numbers are omitted are subject to being not supplied.
- The part numbers shown below indicate chip components.

Chip Resistor

RS1/○S○○○○J,RS1/○○S○○○○J

Chip Capacitor (except for CQS.....)

CKS....., CCS....., CSZS.....

Circuit Symbol and No.

Part No.

Circuit Symbol and No.

Part No.

A

**Unit Number:XWM7066(DEH-P360)
:XWM7065(DEH-P3600)**

Unit Name:Tuner Amp Unit

MISCELLANEOUS

IC 101	IC	HA12187FP
IC 131	IC	NJM4558MD
IC 201	IC	PML009A
IC 301	IC	PAL007A
IC 401	IC	NJM2391DL1-33
IC 601	IC	PD5965A
IC 602	IC	S-80835CNUA-B8U
IC 652	IC	TC7SET08FU
IC 653	IC	TC7SET08FU
Q 101	Transistor	2SA1037K
Q 102	Transistor	DTC114EU
Q 301	Transistor	DTC124EU
Q 351	Transistor (DEH-P360)	IMH3A
Q 352	Transistor	IMH3A
Q 353	Transistor	IMH3A
Q 651	Transistor	2SD2396
Q 652	Transistor	IMD2A
Q 803	Transistor	2SD1767
Q 804	Transistor	IMD2A
Q 805	Transistor	DTC143EU
Q 806	Transistor	IMD14
Q 807	Transistor	2SA1037K
Q 808	Transistor	DTC114EU
Q 911	Transistor	2SD2396
Q 913	Transistor	IMD2A
Q 921	Transistor	2SD2396
Q 922	Transistor	DTC114EU
Q 923	Transistor	2SB1243
Q 931	Transistor	IMX1
Q 932	Transistor	DTC114EU
Q 951	Transistor	2SA1037K
Q 981	Transistor	2SC2412K
Q 982	Transistor	IMD2A
D 131	Diode Network	DA204U
D 132	Diode Network	DA204U

D 304	Diode	S5688G
D 401	Diode	S5688G
D 402	Diode	S5688G
D 403	Diode	S5688G
D 651	Diode	HZS9L(B1)
D 803	Diode Network	DA204U
D 804	Diode	DAN202U
D 805	Diode	DAP202U
D 806	Diode	DAN202U
D 807	Diode	DAP202U
D 808	Diode	HZS11L(A1)
D 911	Diode	S5688G
D 912	Diode	HZS6L(B1)
D 921	Diode	HZS9L(B3)
D 931	Diode	HZS7L(A1)
D 932	Diode	HZS7L(C3)
D 937	Diode	MA111
D 951	Diode	DAN202U
D 981	Diode	DAN202U
D 982	Diode	HZS9L(A2)
L 101	Inductor	LAU2R2K
L 201	Ferri-Inductor	LAU4R7K
L 301	Choke Coil 600μH	CTH1280
L 401	Ferri-Inductor	LAU4R7K
L 403	Inductor	LAU1R0K
L 404	Inductor	LAU1R0K
L 406	Inductor	CTF1385
L 601	Ferri-Inductor	LAU100K
L 651	Inductor	CTF1382
L 801	Inductor	LAU2R2K
L 951	Inductor	LAU2R2K
X 601	Radiator 10.00MHz	CSS1599
S 802	Switch(DSENS)	CSN1039
FU351	Fuse 2A (DEH-P360)	CEK1284
FU353	Fuse 2A	CEK1284
BZ641	Buzzer	CPV1062
AR401		DSP-201M-S00B
	FM/AM Tuner Unit	CWE1646
	Fuse 10A	CEK1208

RESISTORS

R 101	RS1/16S101J
R 102	RS1/16S620J
R 103	RS1/16S101J
R 104	RS1/16S222J
R 105	RS1/16S103J
R 106	RS1/16S472J
R 107	RS1/16S223J

<u>Circuit Symbol and No.</u>		<u>Part No.</u>	<u>Circuit Symbol and No.</u>		<u>Part No.</u>
R 108		RS1/16S472J	R 649		RS1/16S221J
R 109		RS1/16S821J	R 651		RD1/4PU221J
R 110		RS1/16S821J	R 652		RD1/4PU221J
R 111		RS1/16S223J	R 653		RS1/16S472J
R 112		RS1/16S223J	R 654		RS1/16S222J
R 113		RS1/16S102J	R 655		RS1/16S102J
R 114		RS1/16S102J	R 656		RS1/16S0R0J
R 133		RS1/16S563J	R 657		RS1/16S0R0J
R 134		RS1/16S104J	R 658		RS1/16S102J
R 139		RS1/16S563J	R 659		RS1/16S221J
R 140		RS1/16S104J	R 660		RS1/16S221J
R 147		RS1/16S474J	R 661		RS1/16S221J
R 148		RS1/16S474J	R 662		RS1/16S221J
R 201		RAB4C102J	R 663		RS1/16S102J
R 241		RS1/16S0R0J	R 664		RS1/16S221J
R 242		RS1/16S0R0J	R 665		RD1/4PU0R0J
R 247		RS1/16S101J	R 667		RS1/16S221J
R 248		RS1/16S101J	R 668		RS1/16S222J
R 249		RS1/16S101J	R 670		RS1/16S221J
R 250		RS1/16S101J	R 673		RS1/16S104J
R 301		RS1/16S103J	R 677		RS1/16S104J
R 302		RS1/16S103J	R 682		RS1/16S221J
R 303		RS1/16S153J	R 684		RS1/16S0R0J
R 304		RS1/16S331J	R 689		RS1/16S0R0J
R 351	(DEH-P360)	RS1/16S821J	R 802		RS1/16S222J
R 352	(DEH-P360)	RS1/16S821J	R 803		RS1/16S472J
R 353		RS1/16S821J	R 804		RS1/16S1R0J
R 354		RS1/16S821J	R 805		RS1/16S391J
R 355		RS1/16S821J	R 806		RS1/16S391J
R 356		RS1/16S821J	R 807		RS1/16S473J
R 357	(DEH-P360)	RS1/16S223J	R 808		RS1/16S473J
R 358	(DEH-P360)	RS1/16S223J	R 809		RS1/16S102J
R 359		RS1/16S223J	R 810		RS1/16S222J
R 360		RS1/16S223J	R 811		RS1/16S222J
R 361		RS1/16S223J	R 812		RS1/16S222J
R 362		RS1/16S223J	R 813		RS1/16S222J
R 403		RS1/16S681J	R 814		RS1/16S222J
R 404		RS1/16S0R0J	R 815		RS1/16S473J
R 405		RS1/16S681J	R 816		RS1/16S104J
R 406		RS1/16S681J	R 817		RD1/4PU391J
R 407		RS1/16S681J	R 818		RS1/16S104J
R 408		RS1/16S681J	R 819		RS1/16S222J
R 410		RS1/16S681J	R 820		RS1/16S222J
R 413		RS1/16S0R0J	R 821		RS1/16S472J
R 416		RS1/16S681J	R 822		RS1/16S0R0J
R 417		RS1/16S681J	R 823		RS1/16S102J
R 419		RS1/16S681J	R 824		RS1/16S473J
R 421		RS1/16S681J	R 825		RS1/16S102J
R 423		RD1/4PU0R0J	R 826		RS1/16S102J
R 602		RS1/16S104J	R 827		RS1/16S102J
R 606		RS1/16S104J	R 828		RS1/16S102J
R 607		RS1/16S822J	R 903		RS1/16S223J
R 615		RS1/16S0R0J	R 912		RS1/16S222J
R 616		RS1/16S473J	R 913		RS1/16S223J
R 617		RS1/16S102J	R 914		RS1/16S104J
R 618		RS1/16S104J	R 915		RS1/16S104J
R 630		RS1/16S104J	R 916		RS1/16S104J
R 632		RS1/16S104J	R 923		RS1/16S103J
R 641		RS1/16S102J	R 924		RD1/4PU122J
R 648		RS1/16S221J	R 925		RS1/16S182J

Circuit Symbol and No.**Part No.****Circuit Symbol and No.****Part No.**

R 931 RS1/16S472J
R 932 RS1/16S473J
R 933 RS1/16S103J

C 318
C 319
C 320

CKSRYB474K10
CKSRYB474K10
CKSRYB474K10

R 934 RS1/16S473J
R 935 RS1/16S104J
R 936 RS1/16S103J
R 938 RD1/4PU102J
R 939 RD1/4PU102J

C 321
C 322
C 323
C 324
C 325

CKSRYB474K10
CKSRYB474K10
CKSRYB474K10
CKSRYB474K10
CKSQYB225K10

R 951 RD1/4PU153J
R 952 RS1/16S472J
R 953 RS1/16S472J
R 954 RS1/16S102J
R 983 RS1/16S223J

C 326
C 351 (DEH-P360)
C 352 (DEH-P360)
C 353
C 354

CKSQYB225K10
CEJQ4R7M35
CEJQ4R7M35
CEJQ4R7M35
CEJQ4R7M35

R 984 RS1/16S473J
R 985 RS1/16S102J

C 355
C 356
C 401
C 402
C 403

CEJQ4R7M35
CEJQ4R7M35
CKSRYB103K50
CEJQ101M10
CKSQYB105K16

CAPACITORS

C 101 CKSRYB104K16
C 102 CKSRYB473K25
C 131 CKSRYB104K16
C 132 CKSRYB104K16
C 141 CKSRYB104K16

C 404
C 406
C 408
C 409
C 411

CKSYB475K10
CEJQ470M10
CKSYB475K10
CEJQ1R0M50
CCSRCH101J50

C 142 CKSRYB103K50
C 143 CKSRYB474K10
C 144 CKSRYB474K10
C 145 CCSRCH101J50
C 146 CCSRCH101J50

C 412
C 601
C 602
C 603
C 604

CCSRCH470J50
CEJQ4R7M35
CKSQYB105K16
CEJQ2R2M50
CCSRCH200J50

C 147 CKSRYB104K16
C 201 CEJQ1R0M50
C 202 CEJQ1R0M50
C 203 CKSRYB104K16
C 204 CKSRYB104K16

C 605
C 609
C 651
C 652
C 653

CCSRCH200J50
CCSRCH101J50
CEJQ101M10
CKSRYB473K25
CKSRYB473K25

C 205 CKSRYB104K16
C 206 CEJQ470M16
C 207 CEJQ1R0M50
C 208 CEJQ1R0M50
C 209 CEJQ1R0M50

C 656
C 657
C 755
C 806
C 807

CKSRYB473K25
CCSRCH470J50
CKSRYB104K16
CKSRYB473K25
CKSRYB473K25

C 210 CEJQ1R0M50
C 211 CEJQ4R7M35
C 212 CEJQ4R7M35
C 213 CEJQ4R7M35
C 214 CEJQ4R7M35

C 811
C 854
C 911
C 912
C 913

470μF/16V

CKSQYB105K16
CKSRYB473K25
CCH1331
CKSRYB472K50
CKSRYB103K50

C 215 CEJQ4R7M35
C 216 CEJQ4R7M35
C 217 CEJQ4R7M35
C 218 CEJQ4R7M35
C 219 CCSRCH120J50

C 914
C 921
C 922
C 923
C 931

CEJQ470M10
CEJQ221M10
CKSRYB103K50
CEJQ101M16
CEJQ1R0M50

C 220 CCSRCH120J50
C 221 CCSRCH120J50
C 222 CCSRCH120J50
C 225 CEJQ100M16
C 301 CKSRYB104K16

C 932

CKSRYB104K16

C 306 CEJQ330M10
C 307 CCH1486
C 309 CKSRYB104K16
C 310 CEJQ100M16
C 311 CKSYB475K16

C 312 CKSYB475K16
C 317 CKSRYB474K10

IC 1900 IC
IC 1901 IC
Q 1910 Transistor
D 1909 LED

PD6294A
RS-140
DTC114EU
NSCW505C-3388

C**Unit Number:XWM7040****Unit Name:Keyboard Unit****MISCELLANEOUS**

<u>Circuit Symbol and No.</u>		<u>Part No.</u>
D 1914	LED	NSCW505C-3388
D 1930	LED	CL-195PG-CD
D 1931	LED	CL-195PG-CD
D 1932	LED	CL-195PG-CD
D 1935	LED	CL-195PG-CD
D 1936	LED	CL-195PG-CD
D 1937	LED	CL-195PG-CD
D 1942	LED	CL-195PG-CD
D 1943	LED	CL-195PG-CD
D 1946	LED	CL-195PG-CD
X 1900	Ceramic Resonator 5.00MHz	CSG1107
S 1901	Switch	CSG1107
S 1902	Push Switch	CSG1112
S 1903	Push Switch	CSG1112
S 1904	Switch	CSG1107
S 1905	Switch	CSG1107
S 1906	Switch	CSG1107
S 1907	Switch	CSG1107
S 1908	Switch	CSG1107
S 1909	Switch	CSG1107
S 1910	Push Switch	CSG1112
S 1911	Switch	CSG1107
S 1912	Switch	CSG1107
S 1913	Switch	CSG1107
S 1914	Switch	CSG1107
S 1915	Switch	CSG1107
S 1916	Push Switch	CSG1112
S 1917	Switch	CSG1110
S 1918	Switch	CSG1110
S 1950	Encoder LCD	XSD7001 CAW1755

RESISTORS

R 1900	RS1/16S222J
R 1901	RS1/16S222J
R 1902	RS1/16S121J
R 1903	RS1/16S2R2J
R 1909	RS1/16S181J
R 1910	RS1/16S181J
R 1914	RS1/16S181J
R 1915	RS1/16S181J
R 1919	RS1/16S101J
R 1930	RS1/16S470J
R 1931	RS1/16S470J
R 1932	RS1/16S470J
R 1933	RS1/16S121J
R 1934	RS1/16S470J
R 1938	RS1/16S151J
R 1939	RS1/16S151J
R 1940	RS1/16S470J
R 1941	RS1/16S470J
R 1950	RS1/16S472J
R 1960	RS1/16S473J

CAPACITORS

C 1900	CKSRYB104K16
C 1901	CKSYF106Z10
C 1902	CKSRYB104K16
C 1903	CKSRYB104K16

<u>Circuit Symbol and No.</u>	<u>Part No.</u>
C 1904	CKSRYB104K16

B

Unit Number:CWM8758

Unit Name:Panel Unit

MISCELLANEOUS

D 1970	LED	CL220PGC
S 1970	Push Switch(EJECT)	CSG1112

RESISTORS

R 1970	RS1/16S101J
R 1971	RS1/16S101J
R 1972	RS1/16S0R0J

CAPACITORS

C 1970	CKSRYB104K16
--------	--------------

D

Unit Number:CWX2947

Unit Name:CD CORE UNIT(S10)

MISCELLANEOUS

IC 201	IC	UPD63712AGC
IC 301	IC	BA5835FP
IC 701	IC	NJM2391DL1-33
Q 101	Transistor	2SB1132
D 101	Diode	1SS355

D 701	Diode	1SR154-400
X 201	Ceramic Resonator 16.934MHz	CSG1603
S 901	Switch(HOME)	CSN1051
S 902	Switch(CLAMP)	CSN1051
S 903	Spring Switch(DSCSNS)	CSN1052

S 904	Switch(12EJ)	CSN1051
S 905	Switch(8EJ)	CSN1051

RESISTORS

R 101	RS1/10S1R5J
R 102	RS1/10S1R5J
R 103	RS1/10S1R5J
R 104	RS1/10S1R5J
R 105	RS1/10S1R5J

R 201	RS1/16S102J
R 202	RS1/16S1002D
R 203	RS1/16S1002D
R 204	RS1/16S1002D
R 205	RS1/16S1002D

R 206	RS1/16S1002D
R 207	RS1/16S1002D
R 208	RS1/16S1002D
R 209	RS1/16S1002D
R 214	RS1/16S103J

R 215	RS1/16S393J
R 216	RS1/16S122J
R 217	RS1/16S562J
R 218	RS1/16S472J
R 234	RS1/16S0R0J

Circuit Symbol and No.**Part No.****Circuit Symbol and No.****Part No.**

C 305		CKSRYB103K25
C 306		CKSRYB104K16
C 501		CKSRYB103K25
C 502		CKSRYB103K25
C 702	100μF/16V	CCH1504
C 703		CKSRYB104K16
C 705	10μF/6.3V	CCH1470

Miscellaneous Parts List

M 1	Pickup Unit(P10)(Service)	CXX1641
M 2	Motor Unit(SPINDLE)	CXB6007
	Motor Unit(LOADING/CARRIAGE)	CXB8933

CAPACITORS

C 101		CKSRYB104K16
C 102		CKSRYB104K16
C 103	100μF/16V	CCH1504
C 104	47μF/6.3V	CCH1506
C 108		CKSRYB104K16
C 109		CKSRYB104K16
C 201		CKSRYB104K16
C 202		CKSRYB471K50
C 205	22μF/6.3V	CCH1507
C 206		CKSRYB103K25
C 207		CKSRYB104K16
C 209		CKSRYB104K16
C 210		CKSRYB104K16
C 211		CKSRYB104K16
C 212		CKSRYB104K16
C 213		CKSRYB332K50
C 214		CKSRYB473K25
C 215		CKSRYB104K16
C 216		CKSRYB103K25
C 217		CCSRCH560J50
C 218		CCSRCH5R0C50
C 219		CKSRYB104K16
C 220		CKSRYB104K16
C 221		CKSRYB104K16
C 222		CKSRYB103K25
C 223		CCSRCH680J50
C 224		CCSRCH470J50
C 225		CKSRYB682K50
C 231		CKSRYB102K50
C 232		CKSRYB102K50
C 301	100μF/16V	CCH1504
C 302		CCSRCH221J50
C 303		CCSRCH221J50
C 304		CKSRYB472K50