




EXPLODED VIEW

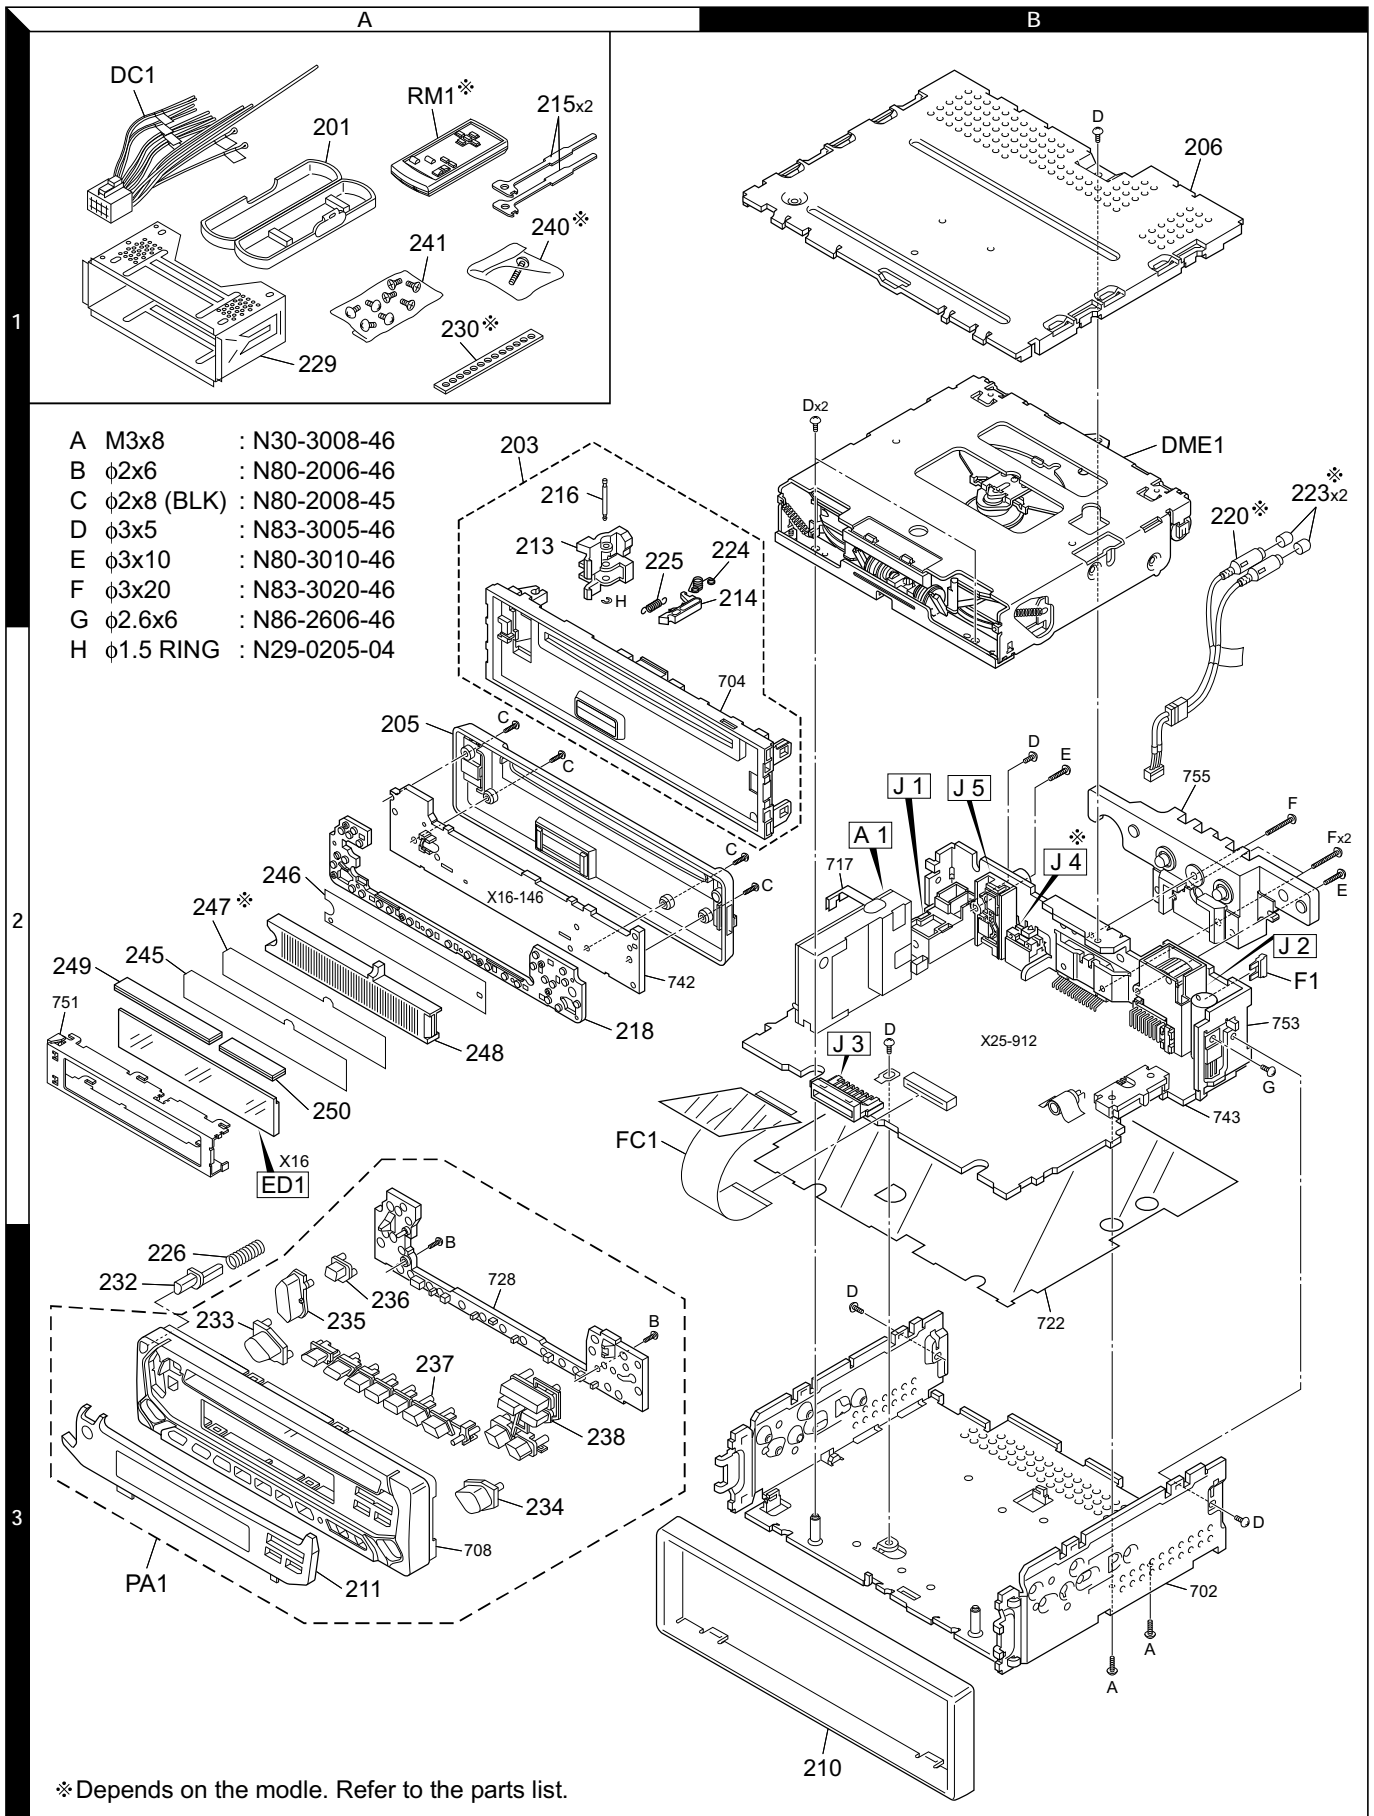

✱ Depends on the mode. Refer to the parts list.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
KDC-2019/2019V/2020/217/217S/219/29MR/3020/4020					
201	1A		A02-1486-13	PLASTIC CABINET ASSY	
203	1A		A22-2863-03	SUB PANEL ASSY	
205	2A	*	A46-1750-01	REAR COVER	
206	1B	*	A52-0804-02	TOP PLATE	
PA1	3A	*	A64-2544-02	PANEL ASSY	K
PA1	3A	*	A64-2545-02	PANEL ASSY	K2
PA1	3A	*	A64-2546-02	PANEL ASSY	K3
PA1	3A	*	A64-2547-02	PANEL ASSY	M
PA1	3A	*	A64-2548-02	PANEL ASSY	M1
PA1	3A	*	A64-2566-02	PANEL ASSY	K4
PA1	3A	*	A64-2680-02	PANEL ASSY	M3
PA1	3A	*	A64-2695-02	PANEL ASSY	K5
PA1	3A	*	A64-2711-02	PANEL ASSY	K1
RM1	1A		A70-2024-05	REMOTE CONTROLLER ASSY (RC-400)	KK1K2
RM1	1A		A70-2024-05	REMOTE CONTROLLER ASSY (RC-400)	M1
210	3B		B07-3054-02	ESCUTCHEON (GRAY)	KK1K2
210	3B		B07-3054-02	ESCUTCHEON (GRAY)	K4K5M
210	3B		B07-3055-02	ESCUTCHEON (SILVER)	K3M1M3
211	3A	*	B10-4132-01	FRONT GLASS	K
211	3A	*	B10-4133-01	FRONT GLASS	K2
211	3A	*	B10-4134-01	FRONT GLASS	K3
211	3A	*	B10-4135-01	FRONT GLASS	M
211	3A	*	B10-4136-01	FRONT GLASS	M1
211	3A	*	B10-4143-01	FRONT GLASS	K1
211	3A	*	B10-4231-01	FRONT GLASS	K5
211	3A	*	B10-4234-01	FRONT GLASS	M3
211	3A	*	B10-4244-01	FRONT GLASS	K4
-			B46-0100-50	WARRANTY CARD	
-			B46-0606-04	ID CARD	
-			B58-1344-04	CAUTION CARD	KK1K2
-			B58-1344-04	CAUTION CARD	K4K5
-			B58-1365-04	CAUTION CARD	
-		*	B64-2114-00	INST.MANUAL (ENG.FRE.SPA.POR.)	KK1K2
-		*	B64-2114-00	INST.MANUAL (ENG.FRE.SPA.POR.)	K3K4K5
-		*	B64-2115-00	INST.MANUAL (ENGLISH,T-CHINESE)	MM1M3
-		*	B64-2116-00	INSTRUCTION MANUAL (ARABIC)	MM1M3
213	1A		D10-4446-03	LEVER	
214	2A		D10-4447-03	LEVER	
215	1A		D10-4589-04	LEVER	
216	1A		D21-2329-04	SHAFT	
218	2A	*	E29-1872-02	CONDUCTIVE RUBBER	
220	2B		E30-4801-05	CORD WITH PINPLUG	K1K2M1
△ DC1	1A		E30-4783-05	DC CORD	KK1K2
△ DC1	1A		E30-4783-05	DC CORD	K3K4K5
△ DC1	1A		E30-4784-05	DC CORD	MM1M3
FC1	2A		E39-0343-05	FLAT CABLE	
223	1B		F29-0049-05	INSULATING COVER	K1K2M1
△ F1	2B		F52-0006-05	FUSE (MINI BLADE TYPE) 10A	
224	1A		G01-2987-04	TORSION COIL SPRING	
225	1A		G01-3096-04	EXTENSION SPRING	
226	3A	*	G01-3149-04	COMPRESSION SPRING	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
-		*	H10-4801-02	POLYSTYRENE FOAMED FIXTURE	
-			H25-0329-04	PROTECTION BAG (280X450X0.03)	
-			H25-0337-04	PROTECTION BAG (180X300X0.03)	
-		*	H54-2271-03	ITEM CARTON CASE	K
-		*	H54-2272-03	ITEM CARTON CASE	K1
-		*	H54-2273-03	ITEM CARTON CASE	K2
-		*	H54-2274-03	ITEM CARTON CASE	K3
-		*	H54-2275-03	ITEM CARTON CASE	M
-		*	H54-2276-03	ITEM CARTON CASE	M1
-		*	H54-2314-03	ITEM CARTON CASE	K5
-		*	H54-2381-03	ITEM CARTON CASE	M3
-		*	H54-2396-03	ITEM CARTON CASE	K4
229	1A		J21-9641-13	MOUNTING HARDWARE ASSY	
230	1A		J54-0606-04	STAY	MM1M3
232	3A	*	K24-3822-04	KNOB (RELEASE)	
233	3A	*	K24-3823-04	KNOB (SRC)	
234	3A	*	K24-3824-04	KNOB (AUD)	
235	3A	*	K24-3825-03	KNOB (VOL)	
236	3A	*	K24-3826-04	KNOB (EJECT)	
237	3A	*	K25-1396-03	KNOB (PRE1-6,ATT,RESET)	
238	3A	*	K25-1397-03	KNOB (AUTO,CLK,FM,AM)	
240	1A		N99-1610-15	SCREW SET	KK1K2
240	1A		N99-1610-15	SCREW SET	K4K5M
240	1A		N99-1610-15	SCREW SET	M1M3
241	1A		N99-1719-05	SCREW SET	
A	3B		N30-3008-46	PAN HEAD MACHINE SCREW	
B	3A		N80-2006-46	PAN HEAD TAPTITE SCREW	
C	2A		N80-2008-45	PAN HEAD TAPTITE SCREW	
D	1B		N83-3005-46	PAN HEAD TAPTITE SCREW	
H	1A		N29-0205-04	RETAINING RING (1.5ceŸ)	
DME1	1B	*	X92-4030-00	MECHANISM ASSY	
SWITCH UNIT (X16-1460-xx)					
245	2A	*	B11-1358-04	OPTICAL DIFFUSER	KK2K4
245	2A	*	B11-1358-04	OPTICAL DIFFUSER	K5MM1
245	2A	*	B11-1372-04	OPTICAL DIFFUSER	K1K3M3
246	2A	*	B11-1359-04	REFLECTION SHEET	
247	2A	*	B11-1360-04	COLOR FILTER	K3
247	2A	*	B11-1361-04	COLOR FILTER	K1
248	2A	*	B19-2130-03	LIGHTING BOARD	
D1-13			B30-1533-05	LED (1608,PG)	KK2K3
D1-13			B30-1533-05	LED (1608,PG)	K4K5M
D1-13			B30-1533-05	LED (1608,PG)	M1
D1-13			B30-1567-05	LED (1608,RED)	K1M3
D17,18			B30-1533-05	LED (1608,PG)	K3K4K5
D17,18			B30-1533-05	LED (1608,PG)	M
D17,18			B30-1567-05	LED (1608,RED)	M3
D17,18		*	B30-1642-05	LED	KK1K2
D17,18		*	B30-1642-05	LED	M1
D19			B30-1633-05	LED (WHITE)	KK1K2
D19			B30-1633-05	LED (WHITE)	K3K4K5
D19			B30-1633-05	LED (WHITE)	MM1
D19			B30-1641-05	LED	M3

△ Indicates safety critical components.

K : KDC-219 **K3** : KDC-29MR **M** : KDC-2020
K1 : KDC-2019V **K4** : KDC-217 **M1** : KDC-4020
K2 : KDC-2019 **K5** : KDC-217S **M3** : KDC-3020

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

SWITCH UNIT (X16-1460-xx)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation	Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
D20			B30-1533-05	LED (1608,PG)	KK2K3	C50			CE04NW1E100M	ELECTRO 10UF 25WV	KK1K2
D20			B30-1533-05	LED (1608,PG)	K4K5M	C50			CE04NW1E100M	ELECTRO 10UF 25WV	K3K4K5
D20			B30-1533-05	LED (1608,PG)	M1	C50,51			CE04NW1E100M	ELECTRO 10UF 25WV	MM1M3
D20			B30-1567-05	LED (1608,RED)	K1M3	C52-54			CE04NW1C100M	ELECTRO 10UF 16WV	
ED1		*	B38-1080-05	LIQUID CRYSTAL	KK2K4	C55			CE04NW1E100M	ELECTRO 10UF 25WV	
ED1		*	B38-1080-05	LIQUID CRYSTAL	K5MM1	C56			CE04CW1H100M	ELECTRO 10UF 50WV	
ED1		*	B38-1081-05	LIQUID CRYSTAL	K1K3M3	C57			C90-2980-05	ELECTRO 220UF 16WV	
C1			CK73GB1H102K	CHIP C 1000PF K		C58			C90-2962-05	ELECTRO 100UF 16WV	
C2,3			CK73GB1E473K	CHIP C 0.047UF K		C63			CE04NW1C220M	ELECTRO 22UF 16WV	
C2,3			CK73GB1H473K	CHIP C 0.047UF K		C101			CE04NW0J101M	ELECTRO 100UF 6.3WV	
C4			CK73GB1H103K	CHIP C 0.010UF K		C102			CK73GB1H103K	CHIP C 0.010UF K	
C5			CK73FB1A225K	CHIP C 2.2UF K	KK1K2	C103			CK73GB1C104K	CHIP C 0.10UF K	
C5			CK73FB1A225K	CHIP C 2.2UF K	K3MM1	C103			CK73GB1H104K	CHIP C 0.10UF K	
C5			CK73FB1A225K	CHIP C 2.2UF K	M3	C104,105			CC73GCH1H150J	CHIP C 15PF J	
C6,7			CK73GB1H103K	CHIP C 0.010UF K	KK1K2	C106			CK73GB1H472K	CHIP C 4700PF K	
C6,7			CK73GB1H103K	CHIP C 0.010UF K	M1	C142			CK73GB1C104K	CHIP C 0.10UF K	
C9			CK73GB1H103K	CHIP C 0.010UF K		C142			CK73GB1H104K	CHIP C 0.10UF K	
249	2A		E29-1829-04	CONDUCTIVE RUBBER		C201			CE04NW1A470M	ELECTRO 47UF 10WV	
250	2A		E29-1834-04	CONDUCTIVE RUBBER		C202			CK73GB1H103K	CHIP C 0.010UF K	
J1			E59-0828-05	RECTANGULAR PLUG		C203-205			CE04NW1H2R2M	ELECTRO 2.2UF 50WV	
-			J19-5130-04	HOLDER (LED)		C206			CK73GB1H153K	CHIP C 0.015UF K	
R2-4			RK73GB2A471J	CHIP R 470 J 1/10W		C207			CK73GB1A474K	CHIP C 0.47UF K	
R5			RK73GB2A102J	CHIP R 1.0K J 1/10W		C208,209			CK73GB1C104K	CHIP C 0.10UF K	
R7			RK73GB2A472J	CHIP R 4.7K J 1/10W		C208,209			CK73GB1H104K	CHIP C 0.10UF K	
R8			RK73GB2A563J	CHIP R 56K J 1/10W		C210			CK73GB1E333K	CHIP C 0.033UF K	
R10			RK73GB2A4R7J	CHIP R 4.7 J 1/10W		C210			CK73GB1H333K	CHIP C 0.033UF K	
R12			RK73GB2A102J	CHIP R 1.0K J 1/10W	KK1K2	C211			CC73GCH1H151J	CHIP C 150PF J	K1K2M1
R12			RK73GB2A102J	CHIP R 1.0K J 1/10W	K3MM1	C221-224			C90-2597-05	ELECTRO 10UF 16WV	KK3K4
R12			RK73GB2A102J	CHIP R 1.0K J 1/10W	M3	C223,224			C90-2597-05	ELECTRO 10UF 16WV	K5MM3
R13		*	RK73FB2B470J	CHIP R 47 J 1/8W	KK1K2	C225			CK73GB1H103K	CHIP C 0.010UF K	KK3K4
R13		*	RK73FB2B470J	CHIP R 47 J 1/8W	K3MM1	C225			CK73GB1H103K	CHIP C 0.010UF K	K5MM3
R13		*	RK73FB2B470J	CHIP R 47 J 1/8W	M3	C225,226			CK73GB1H103K	CHIP C 0.010UF K	K1K2M1
R14,15			RK73FB2B331J	CHIP R 330 J 1/8W		C251-254			C90-5296-05	NP-ELECT 0.22UF 50WV	
R16-18			RK73FB2B511J	CHIP R 510 J 1/8W	KK1K2	C255			CE04NW1H010M	ELECTRO 1.0UF 50WV	
R16-18			RK73FB2B511J	CHIP R 510 J 1/8W	M1						
R16-20			RK73FB2B511J	CHIP R 510 J 1/8W	K3K4K5	C256			CE04NW1A101M	ELECTRO 100UF 10WV	K3K4K5
R16-20			RK73FB2B511J	CHIP R 510 J 1/8W	MM3	C256			CE04NW1A330M	ELECTRO 33UF 10WV	KK1K2M
R16-20			RK73FB2B511J	CHIP R 510 J 1/8W	M1	C256			CE04NW1A330M	ELECTRO 33UF 10WV	M1M3
R16-20			RK73FB2B511J	CHIP R 510 J 1/8W	MM3	C257			CE04NW1H010M	ELECTRO 1.0UF 50WV	
R19,20		*	RK73FB2B391J	CHIP R 390 J 1/8W	KK1K2	C258			C90-2935-05	ELECTRO 1.0UF 50WV	
R19,20		*	RK73FB2B391J	CHIP R 390 J 1/8W	M1						
R21,22			RK73FB2B221J	CHIP R 220 J 1/8W							
D22			MA3062WA	ZENER DIODE		C301			CE04NW1A101M	ELECTRO 100UF 10WV	
IC1			LC75853NE	MOS-IC		C302,303			CK73GB1H103K	CHIP C 0.010UF K	
IC2			RS-171	ANALOGUE IC	KK1K2	C304			CE04CW1A101M	ELECTRO 100UF 10WV	
IC2			RS-171	ANALOGUE IC	K3MM1	C305			CK73GB1H103K	CHIP C 0.010UF K	
IC2			RS-171	ANALOGUE IC	M3	C306			C90-2594-05	ELECTRO 10UF 10WV	
Q1			DTA114EUA	DIGITAL TRANSISTOR		C307			CK73GB1H103K	CHIP C 0.010UF K	
Q1			UN5111	DIGITAL TRANSISTOR		C309			CK73GB1H103K	CHIP C 0.010UF K	
ELECTRIC UNIT (X25-9120-xx)						C401,402			C90-2608-05	ELECTRO 1.0UF 50WV	KK1K2
D102			B30-1567-05	LED (1608,RED)		C401,402			C90-2608-05	ELECTRO 1.0UF 50WV	K3MM1
C1			C90-5242-05	ELECTRO 3300UF 16WV		C401,402			C90-2608-05	ELECTRO 1.0UF 50WV	M3
C21			CK73GB1H103K	CHIP C 0.010UF K							
C40			CK73GB1H103K	CHIP C 0.010UF K		C403			CE04CW1A101M	ELECTRO 100UF 10WV	KK1K2
						C403			CE04CW1A101M	ELECTRO 100UF 10WV	K3MM1
						C403			CE04CW1A101M	ELECTRO 100UF 10WV	M3
						C404			CK73GB1H103K	CHIP C 0.010UF K	KK1K2
						C404			CK73GB1H103K	CHIP C 0.010UF K	K3MM1

K : KDC-219 K3 : KDC-29MR M : KDC-2020
 K1 : KDC-2019V K4 : KDC-217 M1 : KDC-4020
 K2 : KDC-2019 K5 : KDC-217S M3 : KDC-3020

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

ELECTRIC UNIT (X25-9120-xx)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
C404			CK73GB1H103K	CHIP C 0.010UF K	M3
CN1			E40-9550-05	FLAT CABLE CONNECTOR	K1K2M1 K3
CN2			E40-3238-05	PIN ASSY	
CN3			E40-3246-05	PIN ASSY	
J1			E04-0312-05	RF COAXIAL CABLE RECEPTACLE	
J2			E58-0863-15	RECTANGULAR RECEPTACLE	KK1K2 K3MM1 M3
J3			E58-0879-05	RECTANGULAR RECEPTACLE	
J4			E56-0834-05	CYLINDRICAL RECEPTACLE	
J4			E56-0834-05	CYLINDRICAL RECEPTACLE	
J4			E56-0834-05	CYLINDRICAL RECEPTACLE	
J5			E63-0852-05	PIN JACK	
L1			L33-1170-05	CHOKE COIL ASSY	MM1M3 KK1K2 K3K4K5 MM1M3
L2			L33-1807-05	CHOKE COIL	
L4			L33-1123-05	LINE FILTER COIL	
L101			L40-4795-91	SMALL FIXED INDUCTOR (4.7UH,J)	
L201			L40-4795-91	SMALL FIXED INDUCTOR (4.7UH,J)	
L303-306 X1			L40-4795-91 L77-1167-05	SMALL FIXED INDUCTOR (4.7UH,J) CRYSTAL RESONATOR (4.19M)	
D	2B		N83-3005-46	PAN HEAD TAPTITE SCREW	K5MM3 K3K4K5 K3K4K5
E	2B		N80-3010-46	PAN HEAD TAPTITE SCREW	
F	2B		N83-3020-46	PAN HEAD TAPTITE SCREW	
G	2B		N86-2606-46	BINDING HEAD TAPTITE SCREW	
CP1			R90-1056-05	MULTIPLE RESISTOR	K3K4K5 KK1K2M M1M3 K3K4K5
CP2			R90-1047-05	MULTIPLE RESISTOR	
CP3			R90-1046-05	MULTIPLE RESISTOR	
R10			RK73FB2B303J	CHIP R 30K J 1/8W	
R11			RK73GB2A103J	CHIP R 10K J 1/10W	K3K4K5 KK1K2M M1M3 K3K4K5
R12			RK73GB2A104J	CHIP R 100K J 1/10W	
R20			RD14DB2H332J	SMALL-RD 3.3K J 1/2W	
R22			RK73GB2A103J	CHIP R 10K J 1/10W	
R23			RK73GB2A104J	CHIP R 100K J 1/10W	
R51			RK73GB2A473J	CHIP R 47K J 1/10W	
R57		*	RK73FB2B152J	CHIP R 1.5K J 1/8W	M1M3 KK1K2 K3K4K5 KK1K2M
R58			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R67			RK73GB2A103J	CHIP R 10K J 1/10W	
R71			RK73GB2A823J	CHIP R 82K J 1/10W	
R72		*	RK73GB2A363J	CHIP R 36K J 1/10W	
R73			RK73GB2A104J	CHIP R 100K J 1/10W	K4K5 K3
R103,104			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R105			RK73GB2A471J	CHIP R 470 J 1/10W	
R106			RK73GB2A104J	CHIP R 100K J 1/10W	
R107,108			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R110			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R113,114			RK73GB2A473J	CHIP R 47K J 1/10W	KK1K2 K3MM1 M3
R115			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R116			RK73GB2A103J	CHIP R 10K J 1/10W	
R117			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R118			RK73GB2A103J	CHIP R 10K J 1/10W	
R119			RK73GB2A473J	CHIP R 47K J 1/10W	
R121			RK73GB2A222J	CHIP R 2.2K J 1/10W	KK1K2M M1M3
R122			RK73GB2A101J	CHIP R 100 J 1/10W	
R123			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R125			RK73GB2A102J	CHIP R 1.0K J 1/10W	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
R126			RK73GB2A104J	CHIP R 100K J 1/10W	K4K5 KK1K2 K3
R127			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R128			RK73GB2A225J	CHIP R 2.2M J 1/10W	
R129,130			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R131			RK73GB2A682J	CHIP R 6.8K J 1/10W	
R132			RK73GB2A223J	CHIP R 22K J 1/10W	
R133			RK73GB2A164J	CHIP R 160K J 1/10W	MM1M3 KK1K2 K3K4K5 MM1M3
R135			RK73GB2A473J	CHIP R 47K J 1/10W	
R136			RK73GB2A473J	CHIP R 47K J 1/10W	
R136			RK73GB2A473J	CHIP R 47K J 1/10W	
R136,137			RK73GB2A473J	CHIP R 47K J 1/10W	MM1M3 KK1K2 K3K4K5 MM1M3
R138,139			RK73GB2A473J	CHIP R 47K J 1/10W	
R138,139			RK73GB2A473J	CHIP R 47K J 1/10W	
R139			RK73GB2A473J	CHIP R 47K J 1/10W	
R143			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R144			RK73GB2A104J	CHIP R 100K J 1/10W	K1K2M1 KK3K4
R201			RK73GB2A272J	CHIP R 2.7K J 1/10W	
R202,203			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R221-224			RK73FB2B271J	CHIP R 270 J 1/8W	
R223,224			RK73FB2B271J	CHIP R 270 J 1/8W	
R223,224			RK73FB2B271J	CHIP R 270 J 1/8W	
R251			RK73GB2A472J	CHIP R 4.7K J 1/10W	K5MM3 K3K4K5 K3K4K5
R254			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R255			RK73GB2A333J	CHIP R 33K J 1/10W	
R256			RK73FB2B102J	CHIP R 1.0K J 1/8W	
R257			RK73GB2A362J	CHIP R 3.6K J 1/10W	
R258			RK73GB2A101J	CHIP R 100 J 1/10W	
R258	*		RK73GB2A221J	CHIP R 220 J 1/10W	K3K4K5 KK1K2M M1M3 K3K4K5
R258	*		RK73GB2A221J	CHIP R 220 J 1/10W	
R260			RK73GB2A751J	CHIP R 750 J 1/10W	
R261			RK73GB2A100J	CHIP R 10 J 1/10W	
R261	*		RK73GB2A100J	CHIP R 10 J 1/10W	
R261	*		RK73GB2A431J	CHIP R 430 J 1/10W	
R263			RK73GB2A184J	CHIP R 180K J 1/10W	M1M3 KK1K2 K3K4K5 KK1K2M
R263			RK73GB2A432J	CHIP R 4.3K J 1/10W	
R263			RK73GB2A432J	CHIP R 4.3K J 1/10W	
R264			RK73GB2A473J	CHIP R 47K J 1/10W	
R412-415			RK73GB2A104J	CHIP R 100K J 1/10W	
R412-415			RK73GB2A104J	CHIP R 100K J 1/10W	
R415			RK73GB2A104J	CHIP R 100K J 1/10W	K4K5 K3
W150			R92-1252-05	CHIP R 0 OHM J 1/16W	
W151			R92-2053-05	CHIP R 0 J 1/8W	
W152			R92-1252-05	CHIP R 0 OHM J 1/16W	
W155			R92-1252-05	CHIP R 0 OHM J 1/16W	
W156,157			R92-2053-05	CHIP R 0 J 1/8W	KK1K2M M1M3
W158,159			R92-1252-05	CHIP R 0 OHM J 1/16W	
W160-165			R92-2053-05	CHIP R 0 J 1/8W	
W167-169			R92-1252-05	CHIP R 0 OHM J 1/16W	
W171-174			R92-1252-05	CHIP R 0 OHM J 1/16W	
W176-178			R92-1252-05	CHIP R 0 OHM J 1/16W	
W176-178			R92-1252-05	CHIP R 0 OHM J 1/16W	KK1K2M M1M3
W179			R92-2052-05	CHIP R 0 OHM J 1/10W	
D1			S2V20*A	DIODE	

K : KDC-219 K3 : KDC-29MR M : KDC-2020
K1 : KDC-2019V K4 : KDC-217 M1 : KDC-4020
K2 : KDC-2019 K5 : KDC-217S M3 : KDC-3020

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

ELECTRIC UNIT (X25-9120-xx)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation	Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
D1			1N5393G-M6	DIODE		D407			MA4062-L	ZENER DIODE	KK1K2
D10			MA4068(N)-M	ZENER DIODE		D407			MA4062-L	ZENER DIODE	K3MM1
D11			D1F60	DIODE	MM1M3	D407			MA4062-L	ZENER DIODE	M3
D12			AM01Z	DIODE	MM1M3	D409-411			HZS6C1	ZENER DIODE	KK1K2
D12			DSM1SD2	DIODE	MM1M3	D409-411			HZS6C1	ZENER DIODE	K3MM1
D12			ERA15-02	DIODE	MM1M3	D409-411			HZS6C1	ZENER DIODE	M3
D13			D1F60	DIODE		D409-411			MA4062-L	ZENER DIODE	KK1K2
D14			AM01Z	DIODE		D409-411			MA4062-L	ZENER DIODE	K3MM1
D14			DSM1SD2	DIODE		D409-411			MA4062-L	ZENER DIODE	M3
D14			ERA15-02	DIODE		IC1	*		UPD780058GC429	MI-COM IC	KK1K2
D20			MA4068(N)-M	ZENER DIODE		IC1	*		UPD780058GC429	MI-COM IC	K4K5M
D40			1SS133	DIODE		IC1	*		UPD780058GC429	MI-COM IC	M1M3
D50			1SS133	DIODE		IC1	*		UPD780058GC430	MI-COM IC	K3
D51			HZS9A1L	ZENER DIODE		IC2			TDA7407D	ANALOGUE IC	
D51			MA4082(N)-L	ZENER DIODE		IC4			TDA7386	ANALOGUE IC	K3K4K5
D70			MA4068(N)-M	ZENER DIODE		IC4	*		TDA7560	ANALOGUE IC	KK1K2M
D101			1SS133	DIODE		IC4	*		TDA7560	ANALOGUE IC	M1M3
D103,104			1SS133	DIODE		IC7			BA4911-V4	ANALOGUE IC	
D106-108			HZS6C1	ZENER DIODE		IC8			HD74HC27FP	MOS-IC	
D106-108			MA4062-L	ZENER DIODE		IC11			S-80835ANNP	MOS-IC	
D110		*	HZS12A2	ZENER DIODE		IC12			BR24C01AF	MEMORY IC	
D201,202			MA4068(N)-M	ZENER DIODE		IC12			BR24C01AF-W	MEMORY IC	
D251-253			1SS133	DIODE		IC12			M24C01-WMN6T	MEMORY IC	
D261-263			AM01Z	DIODE	KK1K2M	IC12			S-24C01B	MEMORY IC	
D261-263			AM01Z	DIODE	M1M3	Q10			2SC4081	TRANSISTOR	
D261-263			DSM1SD2	DIODE	KK1K2M	Q10			2SD1819A	TRANSISTOR	
D261-263			DSM1SD2	DIODE	M1M3	Q20			2SC4081	TRANSISTOR	
D261-263			ERA15-02	DIODE	KK1K2M	Q20			2SD1819A	TRANSISTOR	
D261-263			ERA15-02	DIODE	M1M3	Q40			DTA124EUA	DIGITAL TRANSISTOR	
D264			D1F60	DIODE	KK1K2M	Q40			UN5112	DIGITAL TRANSISTOR	
D264			D1F60	DIODE	M1M3	Q50			2SA1036K	TRANSISTOR	
D264		*	S1J	DIODE	KK1K2M	Q51			UMC2N	TRANSISTOR	MM1M3
D264		*	S1J	DIODE	M1M3	Q53			UMC2N	TRANSISTOR	
D265,266			AM01Z	DIODE	KK1K2M	Q55			2SD2375	TRANSISTOR	
D265,266			AM01Z	DIODE	M1M3	Q55			2SD2396	TRANSISTOR	
D265,266			DSM1SD2	DIODE	KK1K2M	Q70			2SC4081	TRANSISTOR	
D265,266			DSM1SD2	DIODE	M1M3	Q70			2SD1819A	TRANSISTOR	
D265,266			ERA15-02	DIODE	KK1K2M	Q101			2SC4081	TRANSISTOR	
D265,266			ERA15-02	DIODE	M1M3	Q101			2SD1819A	TRANSISTOR	
D267,268			D1F60	DIODE	KK1K2M	Q102			DTA114YUA	DIGITAL TRANSISTOR	
D267,268			D1F60	DIODE	M1M3	Q102			UN5114	DIGITAL TRANSISTOR	
D267,268		*	S1J	DIODE	KK1K2M	Q221-224			DTC143TUA	DIGITAL TRANSISTOR	K1K2M1
D267,268		*	S1J	DIODE	M1M3	Q221-224			UN5216	DIGITAL TRANSISTOR	K1K2M1
D401,402			MA4068(N)-M	ZENER DIODE	KK1K2	Q223,224			DTC143TUA	DIGITAL TRANSISTOR	KK3K4
D401,402			MA4068(N)-M	ZENER DIODE	K3MM1	Q223,224			DTC143TUA	DIGITAL TRANSISTOR	K5MM3
D401,402			MA4068(N)-M	ZENER DIODE	M3	Q223,224			UN5216	DIGITAL TRANSISTOR	KK3K4
D403,404			HZS6C1	ZENER DIODE	KK1K2	Q223,224			UN5216	DIGITAL TRANSISTOR	K5MM3
D403,404			HZS6C1	ZENER DIODE	K3MM1	Q251			DTC114YUA	DIGITAL TRANSISTOR	
D403,404			HZS6C1	ZENER DIODE	M3	Q251			UN5214	DIGITAL TRANSISTOR	
D403,404			MA4062-L	ZENER DIODE	KK1K2	TH1			PTH9C42BE471Q	POSITIVE RESISTOR	
D403,404			MA4062-L	ZENER DIODE	K3MM1	A1	*		X86-3510-11	FRONT-END UNIT	
D403,404			MA4062-L	ZENER DIODE	M3						
D407			HZS6C1	ZENER DIODE	KK1K2						
D407			HZS6C1	ZENER DIODE	K3MM1						
D407			HZS6C1	ZENER DIODE	M3						

K : KDC-219

K3 : KDC-29MR

M : KDC-2020

K1 : KDC-2019V

K4 : KDC-217

M1 : KDC-4020

K2 : KDC-2019

K5 : KDC-217S

M3 : KDC-3020

△ Indicates safety critical components.

X92-4030-0x
X92-4440-0x

PARTS LIST

*New Parts
Parts without **Parts No.** are not supplied.
Les articles non mentionnes dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

Ref. No.	A d d	N e w	Parts No.	Description	D e s t i n a t i o n
CD PLAYER UNIT (X32-5170-0x, X32-5190-0x)					
C1,2 C3 C4 C5 C6			CK73GB0J105K CK73FB1A225K C92-0566-05 CC73GCH1H150J CC73GCH1H020C	CHIP C 1.0UF K CHIP C 2.2UF K CHIP-TAN 10UF 6.3WV CHIP C 15PF J CHIP C 2.0PF C	
C7 C8 C10 C11 C12			CK73GB1C104K CK73GB0J105K CK73GB1H472K CK73GB1H682K CK73GB1H332K	CHIP C 0.10UF K CHIP C 1.0UF K CHIP C 4700PF K CHIP C 6800PF K CHIP C 3300PF K	
C13 C14 C15 C16 C17			CK73GB1C333K CK73GB1H472K CK73GB1E473K CC73GCH1H151J CK73GB1H472K	CHIP C 0.033UF K CHIP C 4700PF K CHIP C 0.047UF K CHIP C 150PF J CHIP C 4700PF K	
C18 C19,20 C21 C23 C24			CC73GCH1H221J CK73GB1C104K CK73FB1A225K CK73GB1H102K CK73GB1E223K	CHIP C 220PF J CHIP C 0.10UF K CHIP C 2.2UF K CHIP C 1000PF K CHIP C 0.022UF K	
C25 C26 C28 C29 C33			CK73GB1H153K CK73GB0J105K CK73GB0J105K CK73GB1C104K CK73GB1C104K	CHIP C 0.015UF K CHIP C 1.0UF K CHIP C 1.0UF K CHIP C 0.10UF K CHIP C 0.10UF K	
C35 C39 C40 C41 C42			CK73GB1C104K CK73GB1H152K CK73GB1H103K CK73EB1C225K CK73GB1H152K	CHIP C 0.10UF K CHIP C 1500PF K CHIP C 0.010UF K CHIP C 2.2UF K CHIP C 1500PF K	
C44 C46 C51 C55 C67,68			CK73GB1H103K CK73GB1E473K CK73GB1C104K CK73GB1C104K CK73GB1C104K	CHIP C 0.010UF K CHIP C 0.047UF K CHIP C 0.10UF K CHIP C 0.10UF K CHIP C 0.10UF K	
C71,72 C77,78 C79,80 C85 C89			CK73GB1H471K CC73GCH1H680J CK73GB1H222K CK73GB1C104K CK73GB1H222K	CHIP C 470PF K CHIP C 68PF J CHIP C 2200PF K CHIP C 0.10UF K CHIP C 2200PF K	
CN1 CN1 CN2 CN2		*	E40-9536-05 E41-0193-05 E40-9339-05 E41-0129-05	FLAT CABLE CONNECTOR (16p) FLAT CABLE CONNECTOR (16p) FLAT CABLE CONNECTOR (22P) FLAT CABLE CONNECTOR	
X1			L78-0572-05	RESONATOR 16.93MHZ	
CP1 CP2 R3 R5 R6		*	R90-1019-05 R90-1014-05 RK73GB2A272J RK73GB2A361J RK73GB2A272J	MULTI-COMP 100 X2 MULTI-COMP 100 X4 CHIP R 2.7K J 1/10W CHIP R 360 J 1/10W CHIP R 2.7K J 1/10W	
R9 R10,11			RK73FB2B100J RK73GB2A103J	CHIP R 10 J 1/8W CHIP R 10K J 1/10W	

A0 : X92-4030-00 (DXM-6000W) A3 : X92-4030-03 (DXM-6003W)
A1 : X92-4030-01 (DXM-6001W) A4 : X92-4030-04 (DXM-6004W)
A2 : X92-4030-02 (DXM-6002W) A5 : X92-4030-05 (DXM-6005W)

Ref. No.	A d d	N e w	Parts No.	Description	D e s t i n a t i o n
R12 R15 R16 R17 R18		*	RK73GB2A912J RK73GB2A824J RK73GB2A223J RK73GB2A433J RK73GB2A392J	CHIP R 9.1K J 1/10W CHIP R 820K J 1/10W CHIP R 22K J 1/10W CHIP R 43K J 1/10W CHIP R 3.9K J 1/10W	
R19 R20 R21 R32 R34		*	RK73GB2A513J RK73GB2A104J RK73GB2A244J RK73GB2A683J RK73GB2A363J	CHIP R 51K J 1/10W CHIP R 100K J 1/10W CHIP R 240K J 1/10W CHIP R 68K J 1/10W CHIP R 36K J 1/10W	
R36 R37 R38 R40 R46		*	RK73GB2A151J RK73GB2A471J RK73GB2A224J RK73GB2A133J RK73GB2A102J	CHIP R 150 J 1/10W CHIP R 470 J 1/10W CHIP R 220K J 1/10W CHIP R 13K J 1/10W CHIP R 1.0K J 1/10W	
R47 R49 R52 R54 R70			RK73GB2A103J RK73GB2A472J RK73GB2A104J RK73GB2A104J RK73GB2A103J	CHIP R 10K J 1/10W CHIP R 4.7K J 1/10W CHIP R 100K J 1/10W CHIP R 100K J 1/10W CHIP R 10K J 1/10W	
R71 R73 R74 R75 R76		*	RK73GB2A113J RK73GB2A473J RK73GB2A123J RK73GB2A333J RK73GB2A103J	CHIP R 11K J 1/10W CHIP R 47K J 1/10W CHIP R 12K J 1/10W CHIP R 33K J 1/10W CHIP R 10K J 1/10W	
R79,80 R81 R82 R84 R101,102		*	RK73GB2A103J RK73GB2A333J RK73GB2A133J RK73GB2A103J RK73GB2A332J	CHIP R 10K J 1/10W CHIP R 33K J 1/10W CHIP R 13K J 1/10W CHIP R 10K J 1/10W CHIP R 3.3K J 1/10W	
R103,104 R107,108 R110 R117,118 R121,122		*	RK73GB2A562J RK73FB2B331J RK73FB2B201J RK73FB2B203J RK73FB2B203J	CHIP R 5.6K J 1/10W CHIP R 330 J 1/8W CHIP R 200 J 1/8W CHIP R 20K J 1/8W CHIP R 20K J 1/8W	
R125,126 R202 R214 R218 R233		*	RK73FB2B203J RK73GB2A104J RK73GB2A104J RK73GB2A473J RK73GB2A622J	CHIP R 20K J 1/8W CHIP R 100K J 1/10W CHIP R 100K J 1/10W CHIP R 47K J 1/10W CHIP R 6.2K J 1/10W	
R234			RK73GB2A103J	CHIP R 10K J 1/10W	
S1,2 S3 S4 S4		*	S68-0863-05 S68-0862-05 S68-0864-05 S68-0864-05	PUSH SWITCH PUSH SWITCH PUSH SWITCH PUSH SWITCH	A2A3 B2B3
D1 D2 D3 D4 IC1			DAN202U MA8051-L DA204U DAN202U AN22000AA	DIODE ZENER DIODE DIODE DIODE ANALOGUE IC	
IC2 IC2 IC2 IC2		*	MN662773KH2 MN662773KH2 MN662774KJ2 MN662774KJ2	MOS-IC MOS-IC MOS-IC MOS-IC	B0B1B2 B3B4B5 A0A1A2 A3A4A5

B0 : X92-4440-00 (DXM-6100W) B3 : X92-4440-03 (DXM-6103W)
B1 : X92-4440-01 (DXM-6101W) B4 : X92-4440-04 (DXM-6104W)
B2 : X92-4440-02 (DXM-6102W) B5 : X92-4440-05 (DXM-6105W)

PARTS LIST

* New Parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnes dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

Ref. No.	A d d	N e w	Parts No.	Description	P e s t i n a t i o n
IC4		*	BA5824FP	ANALOGUE IC	
IC6		*	NJM4580M1	ANALOGUE IC	
Q1			MCH6101	TRANSISTOR	
Q2			DTC124EUA	DIGITAL TRANSISTOR	
Q3			DTA143XUA	DIGITAL TRANSISTOR	
Q4			2SA1362(Y)	TRANSISTOR	
Q5			DTC124EUA	DIGITAL TRANSISTOR	
CD MECHANISM ASSY (X92-4030-0x, X92-4440-0x)					
2	1B	*	A10-4827-12	CHASSIS OUTER	
5	2B	*	D10-4576-23	ARM ASSY CLAMP	
8	2A	*	D10-4579-03	LEVER ASSY ROLLER	
10	3A	*	D10-4581-13	ARM DISC-L	
11	2A	*	D10-4582-13	ARM DISC-R	
12	3A	*	D10-4583-03	ARM JOINT-L	
13	3A	*	D10-4584-03	ARM JOINT-R	
14	3B	*	D10-4585-03	ARM CARRIER	
15	2A	*	D10-4586-03	SLIDER L	
16	3B	*	D10-4587-02	SLIDER R	
17	3B	*	D10-4588-03	SLIDER TRIG	
18	3B	*	D10-4595-04	ARM LOCK	
19	3B	*	D10-4596-04	ARM ROLLER	
22	2A	*	D13-2151-04	GEAR ROLLER	
23	2B	*	D13-2152-04	GEAR HELICAL-1	
24	3B	*	D13-2153-04	GEAR SUN	
25	3B	*	D13-2154-04	GEAR PLANET	
26	3B	*	D13-2155-04	WORM 2	
27	3B	*	D13-2156-04	GEAR HELICAL-2	
28	3B	*	D13-2157-04	GEAR LOAD-1	
29	3B	*	D13-2158-04	GEAR LOAD-2	
30	3B	*	D13-2168-04	GEAR PICK-1	
31	3B	*	D13-2171-04	GEAR PICK-2	
32	2B	*	D13-2172-03	RACK (GEAR)	
33	2A	*	D14-0759-04	ROLLER N100X3DIES	
35	2B	*	D21-2382-04	SHAFT PICK	
36	1A	*	D23-0954-04	RETAINER	
37	1B	*	D39-0246-05	DAMPER	
38	2B	*	G01-3072-04	EXTENSION SPRING TRIGGER	
39	2A	*	G01-3073-04	TORSION COIL SPRING ROLLER-L	
40	2A	*	G01-3074-04	EXTENSION SPRING ROLLER-R	
41	2B	*	G01-3075-04	EXTENSION SPRING PICKUP	
42	2A	*	G01-3076-04	EXTENSION SPRING JOINT-SP	
43	1B	*	G01-3077-04	EXTENSION SPRING FLOATING	
44	2B	*	G02-1399-04	FLAT SPRING CLAMP	
45	2B	*	G02-1408-04	FLAT SPRING WORM	
51	1A	*	J21-9676-12	MOUNTING HARDWARE GUIDE-BKT	
52	3B	*	J21-9677-02	MOUNTING HARDWARE GEAR-BKT	
53	1B	*	J21-9678-03	MOUNTING HARDWARE DAMPER-BKT	
55	1A	*	J90-1001-11	GUIDE 1	
56	1B	*	J90-1023-03	GUIDE 2	
DFPC1	3A	*	J84-0128-15	FLEXIBLE P.W.B. PICK-FPC	
A	2B	*	N09-4460-05	TAPTITE SCREW PT2X8-SARA	
B	1B	*	N09-4472-05	MACHINE SCREW PICK-RACK	

Ref. No.	A d d	N e w	Parts No.	Description	P e s t i n a t i o n
C	2B	*	N09-6004-05	MACHINE SCREW M1.7X2.5	
D	1B	*	N09-6006-05	TAPTITE SCREW ST-2X3.5	
E	2B	*	N09-6007-05	MACHINE SCREW M2X2	
F	1A	*	N09-6051-05	TAPTITE SCREW PT2X6-BIND	
G	2A	*	N19-2163-04	FLAT WASHER 1.6X0.25	
H	1B	*	N39-2020-46	MACHIN SCREW M2X2	
DM1	3B	*	T42-1066-04	DC MOTOR ASSY SP	
DM2	2B	*	T42-1067-04	DC MOTOR ASSY LO	
DPU1	2B	*	T25-0223-05	OPTICAL PICKUP HEAD	

A0 : X92-4030-00 (DXM-6000W) A3 : X92-4030-03 (DXM-6003W)
A1 : X92-4030-01 (DXM-6001W) A4 : X92-4030-04 (DXM-6004W)
A2 : X92-4030-02 (DXM-6002W) A5 : X92-4030-05 (DXM-6005W)

B0 : X92-4440-00 (DXM-6100W) B3 : X92-4440-03 (DXM-6103W)
B1 : X92-4440-01 (DXM-6101W) B4 : X92-4440-04 (DXM-6104W)
B2 : X92-4440-02 (DXM-6102W) B5 : X92-4440-05 (DXM-6105W)