



# EXPLODED VIEW (MECHANISM)

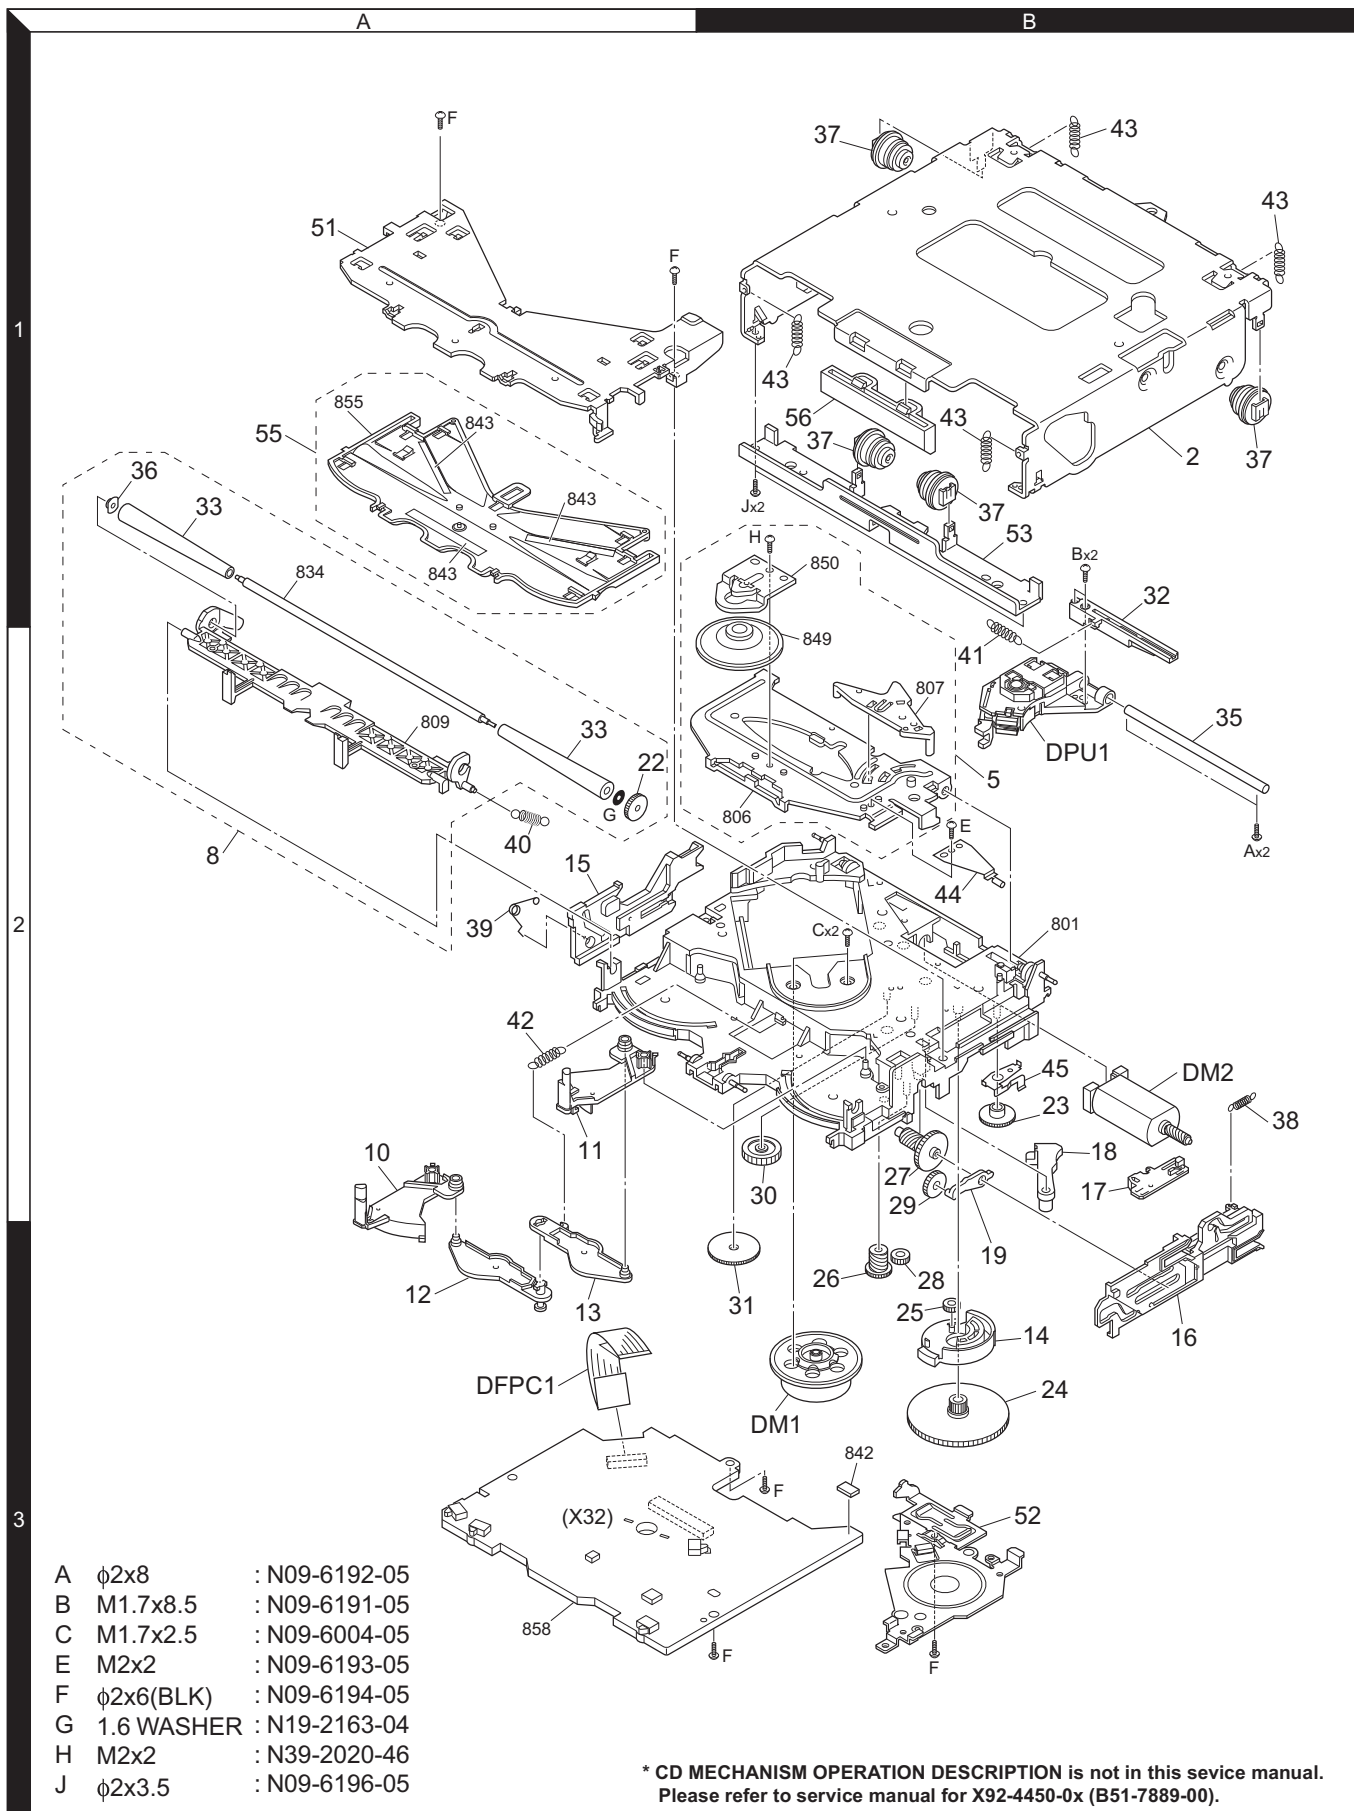

# EXPLODED VIEW (UNIT)

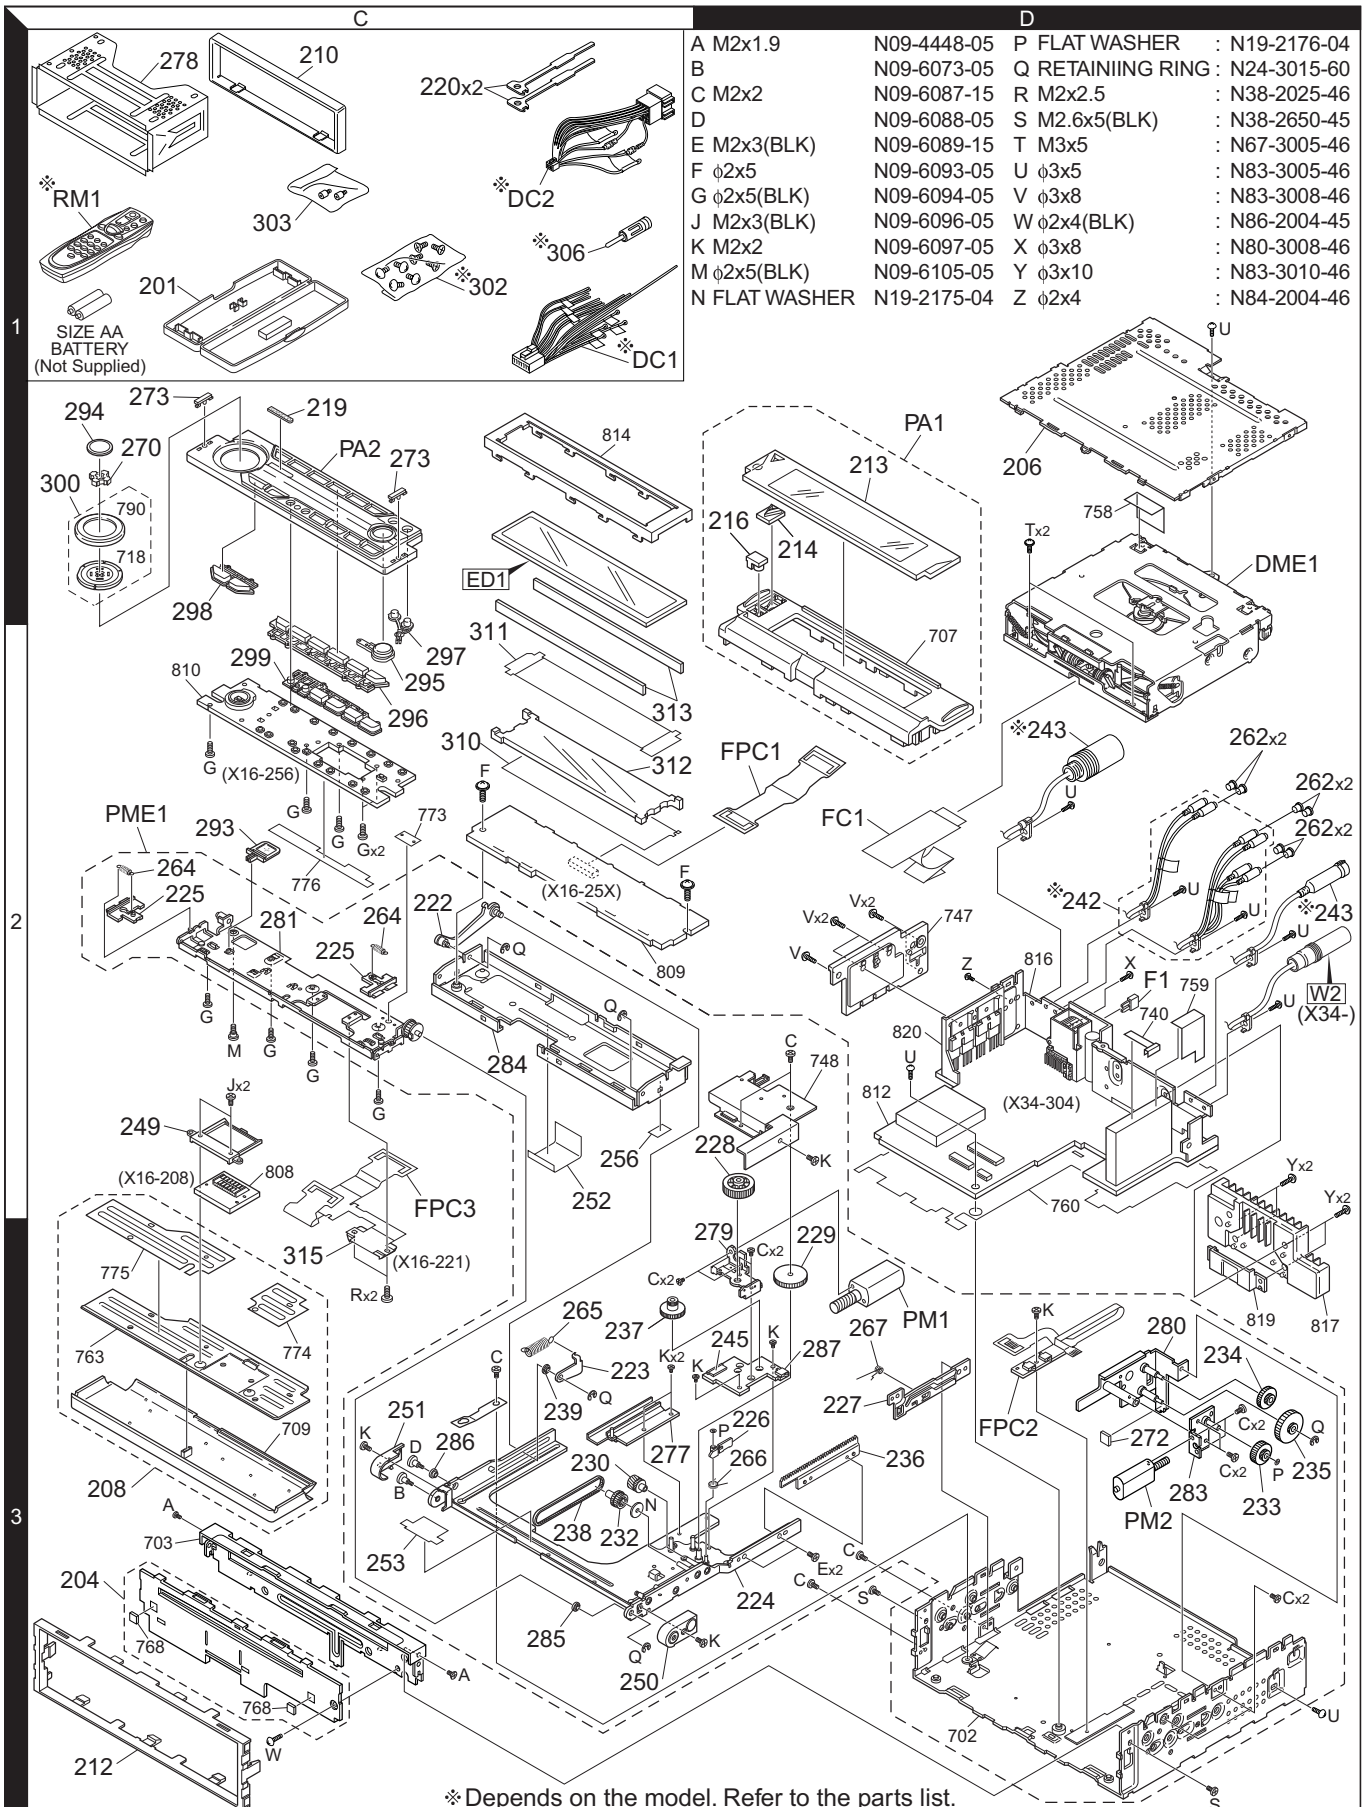

Parts with the exploded numbers larger than 700 are not supplied.

## PARTS LIST

\* New parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

| Ref. No.                                           | A<br>d<br>d | N<br>e<br>w | Parts No.   | Description                     | Desti-<br>nation |
|----------------------------------------------------|-------------|-------------|-------------|---------------------------------|------------------|
| <b>KDC-8026, KDC-MP825, KDC-MPV8025, KDC-W7027</b> |             |             |             |                                 |                  |
| 201                                                | 1C          |             | A02-2731-13 | PLASTIC CABINET ASSY            |                  |
| 204                                                | 3C          |             | A22-2988-03 | SUB PANEL ASSY                  |                  |
| 206                                                | 1D          |             | A52-0831-02 | TOP PLATE                       |                  |
| PA1                                                | 1D          | *           | A64-3228-01 | PANEL ASSY                      | K3               |
| PA1                                                | 1D          | *           | A64-3229-01 | PANEL ASSY                      | K4               |
| PA1                                                | 1D          | *           | A64-3231-01 | PANEL ASSY                      | M1               |
| PA1                                                | 1D          | *           | A64-3233-01 | PANEL ASSY                      | E2               |
| PA2                                                | 1C          | *           | A64-3250-02 | PANEL ASSY                      | K3K4M1           |
| PA2                                                | 1C          | *           | A64-3253-02 | PANEL ASSY                      | E2               |
| PME1                                               | 2C          | *           | A10-5123-01 | CHASSIS ASSY                    |                  |
| RM1                                                | 1C          |             | A70-2040-05 | REMOTE CONTROLLER ASSY (RC-505) | K3K4M1           |
| -                                                  |             |             | B46-0100-50 | WARRANTY CARD                   |                  |
| -                                                  |             |             | B46-0606-04 | ID CARD                         | K3K4             |
| -                                                  |             |             | B46-0612-14 | ID CARD                         | M1E2             |
| -                                                  |             | *           | B64-2743-00 | INST. MANUAL (ENGLISH)          | K3K4             |
| -                                                  |             | *           | B64-2744-00 | INST. MANUAL (FRE, SPA)         | K3K4             |
| -                                                  |             | *           | B64-2745-00 | INST. MANUAL (ENG, T-CHI)       | M1               |
| -                                                  |             | *           | B64-2750-00 | INST. MANUAL (ENGLISH)          | E2               |
| -                                                  |             | *           | B64-2751-00 | INST. MANUAL (FRE, GER)         | E2               |
| -                                                  |             | *           | B64-2752-00 | INST. MANUAL (DUT, ITA)         | E2               |
| -                                                  |             | *           | B64-2753-00 | INST. MANUAL (SPA, POR)         | E2               |
| 208                                                | 3C          |             | B03-5015-03 | DRESSING PLATE ASSY             |                  |
| 210                                                | 1C          |             | B07-3078-01 | ESCUTCHEON                      |                  |
| 212                                                | 3C          |             | B07-3080-02 | ESCUTCHEON                      |                  |
| 213                                                | 1D          | *           | B10-4515-01 | FRONT GLASS                     | K3               |
| 213                                                | 1D          | *           | B10-4516-01 | FRONT GLASS                     | K4               |
| 213                                                | 1D          | *           | B10-4518-01 | FRONT GLASS                     | M1               |
| 213                                                | 1D          | *           | B10-4520-01 | FRONT GLASS                     | E2               |
| 214                                                | 1C          | *           | B12-1227-04 | INDICATOR                       |                  |
| 216                                                | 1C          | *           | B19-2248-04 | LIGHTING BOARD                  |                  |
| 219                                                | 1C          |             | B43-1505-04 | KENWOOD BADGE                   |                  |
| 220                                                | 1C          |             | D10-4674-04 | LEVER                           |                  |
| 222                                                | 2C          |             | D10-4716-04 | ARM ASSY                        |                  |
| 223                                                | 3C          |             | D10-4718-04 | ARM ASSY                        |                  |
| 224                                                | 3D          |             | D10-4721-21 | SLIDER ASSY                     |                  |
| 225                                                | 2C          |             | D10-4749-03 | LEVER                           |                  |
| 226                                                | 3D          |             | D10-4750-04 | LEVER                           |                  |
| 227                                                | 3D          |             | D12-0637-03 | CAM                             |                  |
| 228                                                | 2D          |             | D13-2270-04 | GEAR                            |                  |
| 229                                                | 3D          |             | D13-2272-04 | GEAR                            |                  |
| 230                                                | 3C          |             | D13-2273-34 | GEAR                            |                  |
| 232                                                | 3C          |             | D13-2274-24 | GEAR                            |                  |
| 233                                                | 3D          |             | D13-2276-04 | GEAR                            |                  |
| 234                                                | 3D          |             | D13-2277-04 | GEAR                            |                  |
| 235                                                | 3D          |             | D13-2278-04 | GEAR                            |                  |
| 236                                                | 3D          |             | D13-2289-03 | RACK (GEAR)                     |                  |
| 237                                                | 3C          |             | D13-2290-04 | GEAR ASSY                       |                  |
| 238                                                | 3C          |             | D16-0617-15 | BELT                            |                  |
| 239                                                | 3C          |             | D23-0958-04 | RETAINER                        |                  |
| 242                                                | 2D          | *           | E30-6312-05 | CORD WITH PINPLUG (2PRE+1AUX)   | K3M1E2           |
| 242                                                | 1D          | *           | E30-6314-05 | CORD WITH PINPLUG (2PRE)        | K4               |
| 243                                                | 2D          |             | E30-6216-05 | CORD WITH DIN CONNECTOR         | K3K4M1           |

| Ref. No. | A<br>d<br>d | N<br>e<br>w | Parts No.   | Description                     | Desti-<br>nation |
|----------|-------------|-------------|-------------|---------------------------------|------------------|
| 243      | 2D          |             | E30-6217-05 | CORD WITH DIN CONNECTOR (&REM.) | E2               |
| 245      | 3D          |             | E41-0351-05 | FLAT CABLE CONNECTOR            |                  |
| DC1      | 1C          |             | E30-6294-05 | DC CORD                         | M1               |
| DC1      | 1C          |             | E30-6295-05 | DC CORD                         | K3K4             |
| DC2      | 1C          |             | E30-4942-05 | DC CORD                         | E2               |
| FC1      | 2D          |             | E39-0565-05 | FLAT CABLE                      |                  |
| 249      | 2C          |             | F07-1121-03 | COVER                           |                  |
| 250      | 3C          |             | F07-1122-03 | COVER                           |                  |
| 251      | 3C          |             | F07-1123-03 | COVER                           |                  |
| 252      | 2C          |             | F09-1794-04 | SHEET                           |                  |
| 253      | 3C          |             | F09-1798-04 | SHEET                           |                  |
| 256      | 2D          |             | F09-1842-04 | SHEET                           |                  |
| 262      | 2D          |             | F29-0626-04 | INSULATING COVER                |                  |
| F1       | 2D          |             | F52-0023-05 | FUSE (MINI BLADE TYPE : 10A)    |                  |
| 264      | 2C          | *           | G01-3162-04 | EXTENSION SPRING                |                  |
| 265      | 2C          | *           | G01-3221-04 | EXTENSION SPRING                |                  |
| 266      | 3C          |             | G01-3189-04 | TORSION COIL SPRING             |                  |
| 267      | 3D          |             | G01-3199-04 | TORSION COIL SPRING             |                  |
| 270      | 2C          |             | G11-3539-04 | CUSHION                         |                  |
| 272      | 3D          |             | G11-3559-04 | CUSHION                         |                  |
| 273      | 1C          |             | G11-3574-04 | CUSHION (KEY)                   |                  |
| -        |             | *           | H10-4854-22 | POLYSTYRENE FOAMED FIXTURE      |                  |
| -        |             |             | H21-1151-04 | PROTECTION SHEET                |                  |
| -        |             |             | H25-0329-04 | PROTECTION BAG (280X450X0.03)   | K3K4M1           |
| -        |             |             | H25-0337-04 | PROTECTION BAG (180X300X0.03)   |                  |
| -        |             |             | H25-1111-04 | PROTECTION BAG (280X450X0.03)   | E2               |
| -        |             | *           | H54-3031-03 | ITEM CARTON CASE                | K3               |
| -        |             | *           | H54-3032-03 | ITEM CARTON CASE                | K4               |
| -        |             | *           | H54-3034-03 | ITEM CARTON CASE                | M1               |
| -        |             | *           | H54-3036-03 | ITEM CARTON CASE                | E2               |
| 277      | 3C          |             | J19-5220-03 | HOLDER                          |                  |
| 278      | 1C          |             | J21-9823-03 | MOUNTING HARDWARE ASSY          |                  |
| 279      | 3D          |             | J21-9951-03 | MOUNTING HARDWARE ASSY          |                  |
| 280      | 3D          |             | J21-9954-02 | MOUNTING HARDWARE ASSY          |                  |
| 281      | 2C          | *           | J21-9996-32 | MOUNTING HARDWARE ASSY          |                  |
| 283      | 3D          |             | J21-9997-03 | MOUNTING HARDWARE ASSY          |                  |
| 284      | 2C          |             | J21-9999-02 | MOUNTING HARDWARE ASSY          |                  |
| 285      | 3C          |             | J31-1055-04 | COLLAR                          |                  |
| 286      | 3C          |             | J31-1056-04 | COLLAR                          |                  |
| 287      | 3D          |             | J74-1444-14 | RIGID PRINTED WIRING BOARD      |                  |
| FPC1     | 2D          |             | J84-0153-05 | FLEXIBLE PRINTED WIRING BOARD   |                  |
| FPC2     | 3D          |             | J84-0156-04 | FLEXIBLE PRINTED WIRING BOARD   |                  |
| 293      | 2C          |             | K24-4007-04 | KNOB (OPEN)                     |                  |
| 294      | 1C          | *           | K24-4106-03 | KNOB (ATT)                      |                  |
| 295      | 1C          | *           | K24-4167-03 | KNOB (SRC)                      |                  |
| 296      | 1C          | *           | K25-1605-02 | KNOB (PRESET1-6)                |                  |
| 297      | 2C          | *           | K25-1607-03 | KNOB (EJECT)                    |                  |
| 298      | 1C          | *           | K25-1609-03 | KNOB (Q,PLAY)                   |                  |
| 299      | 2C          | *           | K25-1612-02 | KNOB (FM/AM,SKIP)               |                  |
| 300      | 1C          | *           | K29-7082-03 | KNOB ASSY (VOL.)                |                  |
| 302      | 1C          |             | N99-1723-05 | SCREW SET                       | K3K4M1           |
| 303      | 1C          |             | N99-1734-05 | SCREW SET                       |                  |

**K3** : KDC-MPV8025   **K4** : KDC-MP825   **E2** : KDC-W7027   **M1** : KDC-8026

△ Indicates safety critical components.

## PARTS LIST

\* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

## KDC-8026, KDC-MP825, KDC-MPV8025, KDC-W7027

| Ref. No.                              | Add | New | Parts No.     | Description                   | Destination |
|---------------------------------------|-----|-----|---------------|-------------------------------|-------------|
| A                                     | 3D  |     | N09-4448-05   | MACHINE SCREW                 |             |
| B                                     | 3C  |     | N09-6073-05   | STEPPED SCREW                 |             |
| C                                     | 3D  | *   | N09-6087-15   | MACHINE SCREW                 |             |
| D                                     | 3C  |     | N09-6088-05   | STEPPED SCREW                 |             |
| E                                     | 3D  | *   | N09-6089-15   | MACHINE SCREW                 |             |
| F                                     | 2C  |     | N09-6093-05   | TAPTITE SCREW                 |             |
| G                                     | 2C  |     | N09-6094-05   | MACHINE SCREW                 |             |
| J                                     | 2C  |     | N09-6096-05   | MACHINE SCREW                 |             |
| K                                     | 3C  |     | N09-6097-05   | MACHINE SCREW                 |             |
| M                                     | 2C  |     | N09-6105-05   | STEPPED SCREW                 |             |
| N                                     | 2C  |     | N19-2175-04   | FLAT WASHER                   |             |
| P                                     | 3D  |     | N19-2176-04   | FLAT WASHER                   |             |
| Q                                     | 2C  |     | N24-3015-60   | E TYPE RETAINING RING         |             |
| R                                     | 3C  |     | N38-2025-46   | PAN HEAD MACHIN SCREW         |             |
| S                                     | 3D  |     | N38-2650-45   | PAN HEAD MACHIN SCREW         |             |
| T                                     | 2D  |     | N67-3005-46   | PAN HEAD SEMS SCREW           |             |
| U                                     | 2D  |     | N83-3005-46   | PAN HEAD TAPTITE SCREW        |             |
| V                                     | 2D  |     | N83-3008-46   | PAN HEAD TAPTITE SCREW        |             |
| W                                     | 3C  |     | N86-2004-45   | BINDING HEAD TAPTITE SCREW    |             |
| RLED                                  |     |     | RK73GB2A102J  | CHIP R 1.0K J 1/10W           |             |
| RPH                                   |     |     | RK73GB2A104J  | CHIP R 100K J 1/10W           |             |
| SW1                                   |     |     | S68-0871-05   | PUSH SWITCH (PANEL MECHA)     |             |
| SW2-3                                 |     |     | S68-0863-05   | PUSH SWITCH (PANEL MECHA)     |             |
| SW4                                   |     |     | S68-0864-05   | PUSH SWITCH (PANEL MECHA)     |             |
| 306                                   | 1C  |     | T90-0552-05   | ANTENNA ADAPTOR               |             |
| PH                                    |     |     | T95-0212-05   | OPTO ISOLATOR (PANEL MECHA)   |             |
| PM1                                   | 3D  |     | T42-1076-14   | MOTOR ASSY                    |             |
| PM2                                   | 3D  | *   | T42-1077-24   | MOTOR ASSY                    |             |
| DME1                                  | 2D  | *   | X92-4900-00   | MECHANISM ASSY (DXM-6540V)    |             |
| <b>SUB CIRCUIT UNIT (X16-2080-10)</b> |     |     |               |                               |             |
| J1                                    |     |     | E59-0833-15   | RECTANGULAR PLUG              |             |
| CP1                                   |     |     | R90-1019-05   | MULTI-COMP 100 X2             |             |
| IC1                                   |     |     | BR24C01AFV-W  | MEMORY IC                     |             |
| <b>SUB CIRCUIT UNIT (X16-2210-10)</b> |     |     |               |                               |             |
| 315                                   | 3C  |     | E58-0968-05   | RECTANGULAR RECEPTACLE        |             |
| FPC3                                  | 2C  |     | J84-0154-05   | FLEXIBLE PRINTED WIRING BOARD |             |
| <b>DISPLAY UNIT (X16-2540-10)</b>     |     |     |               |                               |             |
| 310                                   | 2C  |     | B11-1405-04   | REFLECTION SHEET              | K4M1E2      |
| 311                                   | 2C  |     | B11-1406-04   | OPTICAL DIFFUSER              | K4M1E2      |
| 312                                   | 2C  |     | B19-2204-02   | LIGHTING BOARD                | K4M1E2      |
| D11                                   |     |     | B30-2233-05   | LED (HR 1608)                 | K4M1E2      |
| D16-19                                |     |     | B30-1571-05   | LED (WHITE)                   | K4M1E2      |
| ED1                                   |     | *   | B38-1143-05   | LIQUID CRYSTAL                | K4M1E2      |
| C1                                    |     |     | CC73GCH1H681J | CHIP C 680PF J                | K4M1E2      |
| C2-5                                  |     |     | CK73GB1C104K  | CHIP C 0.10UF K               | K4M1E2      |
| C2-5                                  |     |     | CK73GB1H104K  | CHIP C 0.10UF K               | K4M1E2      |
| C6                                    |     |     | CK73GB1H103K  | CHIP C 0.010UF K              | K4M1E2      |
| C7                                    |     |     | CK73FB1A225K  | CHIP C 2.2UF K                | K4M1E2      |
| C11                                   |     |     | CC73GCH1H681J | CHIP C 680PF J                | K4M1E2      |

| Ref. No.                          | Add | New | Parts No.    | Description          | Destination |
|-----------------------------------|-----|-----|--------------|----------------------|-------------|
| C12-14                            |     |     | CK73GB1C104K | CHIP C 0.10UF K      | K4M1E2      |
| C12-14                            |     |     | CK73GB1H104K | CHIP C 0.10UF K      | K4M1E2      |
| C15                               |     |     | CK73GB1H103K | CHIP C 0.010UF K     | K4M1E2      |
| C16                               |     |     | CK73GB1C104K | CHIP C 0.10UF K      | K4M1E2      |
| C16                               |     |     | CK73GB1H104K | CHIP C 0.10UF K      | K4M1E2      |
| C17-19                            |     |     | CK73FB0J475K | CHIP C 4.7UF K       | K4M1E2      |
| C26-29                            |     |     | CK73GB1H103K | CHIP C 0.010UF K     | K4M1E2      |
| 313                               | 2C  |     | E29-1930-04  | CONDUCTIVE RUBBER    | K4M1E2      |
| CN1                               |     |     | E40-9364-05  | FLAT CABLE CONNECTOR | K4M1E2      |
| CN2                               |     |     | E41-0166-05  | FLAT CABLE CONNECTOR | K4M1E2      |
| CP1                               |     |     | R90-1016-05  | MULTI-COMP 470 X4    | K4M1E2      |
| CP4,5                             |     |     | R90-0724-05  | MULTI-COMP 1K X4     | K4M1E2      |
| R1                                |     |     | RK73GB2A433J | CHIP R 43K J 1/10W   | K4M1E2      |
| R2-5                              |     |     | RK73GB2A222J | CHIP R 2.2K J 1/10W  | K4M1E2      |
| R6                                |     |     | RK73GB2A392J | CHIP R 3.9K J 1/10W  | K4M1E2      |
| R7,8                              |     |     | RK73GB2A331J | CHIP R 330 J 1/10W   | K4M1E2      |
| R9                                |     |     | RK73GB2A101J | CHIP R 100 J 1/10W   | K4M1E2      |
| R10                               |     |     | RK73GB2A102J | CHIP R 1.0K J 1/10W  | K4M1E2      |
| R11                               |     |     | RK73GB2A4R7J | CHIP R 4.7 J 1/10W   | K4M1E2      |
| R12                               |     |     | RK73GB2A751J | CHIP R 750 J 1/10W   | K4M1E2      |
| R13                               |     |     | RK73GB2A102J | CHIP R 1.0K J 1/10W  | K4M1E2      |
| R14                               |     |     | RK73GB2A4R7J | CHIP R 4.7 J 1/10W   | K4M1E2      |
| R15                               |     |     | RK73GB2A104J | CHIP R 100K J 1/10W  | K4M1E2      |
| R16                               |     |     | RK73GB2A271J | CHIP R 270 J 1/10W   | K4M1E2      |
| R17                               |     |     | RK73GB2A104J | CHIP R 100K J 1/10W  | K4M1E2      |
| R18                               |     |     | RK73GB2A331J | CHIP R 330 J 1/10W   | K4M1E2      |
| R19                               |     |     | RK73GB2A472J | CHIP R 4.7K J 1/10W  | K4M1E2      |
| R20                               |     |     | RK73GB2A104J | CHIP R 100K J 1/10W  | K4M1E2      |
| R23                               |     |     | RK73GB2A102J | CHIP R 1.0K J 1/10W  | K4M1E2      |
| R24                               |     |     | RK73GB2A473J | CHIP R 47K J 1/10W   | K4M1E2      |
| R26                               |     |     | RK73GB2A102J | CHIP R 1.0K J 1/10W  | K4M1E2      |
| R31                               |     |     | RK73GB2A433J | CHIP R 43K J 1/10W   | K4M1E2      |
| R32-35                            |     |     | RK73GB2A222J | CHIP R 2.2K J 1/10W  | K4M1E2      |
| R36                               |     |     | RK73GB2A4R7J | CHIP R 4.7 J 1/10W   | K4M1E2      |
| R51,52                            |     |     | RK73FB2B271J | CHIP R 270 J 1/8W    | K4M1E2      |
| R53,54                            |     |     | RK73GB2A472J | CHIP R 4.7K J 1/10W  | K4M1E2      |
| R67,68                            |     |     | RK73GB2A272J | CHIP R 2.7K J 1/10W  | K4M1E2      |
| D1                                |     |     | MA3062-M     | ZENER DIODE          | K4M1E2      |
| D2-5                              |     |     | DA204U       | DIODE                | K4M1E2      |
| D26                               |     |     | MA3091-M     | ZENER DIODE          | K4M1E2      |
| IC1                               |     |     | LC75808W     | MOS-IC               | K4M1E2      |
| IC2                               |     |     | LC75878W     | MOS-IC               | K4M1E2      |
| IC3                               |     |     | PNA4S22M     | ANALOGUE IC          | K4M1E2      |
| Q1                                |     |     | DTA114EE     | DIGITAL TRANSISTOR   | K4M1E2      |
| Q2                                |     |     | UMX2N        | TRANSISTOR           | K4M1E2      |
| Q5                                |     |     | 2SC4617      | TRANSISTOR           | K4M1E2      |
| Q6                                |     |     | DTA114EE     | DIGITAL TRANSISTOR   | K4M1E2      |
| Q11                               |     |     | 2SC4617      | TRANSISTOR           | K4M1E2      |
| <b>DISPLAY UNIT (X16-2550-10)</b> |     |     |              |                      |             |
| 310                               | 2C  |     | B11-1405-04  | REFLECTION SHEET     | K3          |
| 311                               | 2C  |     | B11-1408-04  | OPTICAL DIFFUSER     | K3          |
| 312                               | 2C  |     | B19-2204-02  | LIGHTING BOARD       | K3          |
| D11                               |     |     | B30-2233-05  | LED (HR 1608)        | K3          |

K3 : KDC-MPV8025 K4 : KDC-MP825 E2 : KDC-W7027 M1 : KDC-8026

△ Indicates safety critical components.



## PARTS LIST

\* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

## DISPLAY UNIT (X16-2550-10)

| Ref. No.      | A<br>d<br>d | N<br>e<br>w | Parts No.                  | Description                         | Desti-<br>nation |
|---------------|-------------|-------------|----------------------------|-------------------------------------|------------------|
| D50-53<br>ED1 |             | *           | B30-1599-05<br>B38-1142-05 | LED (NICHIA FULL)<br>LIQUID CRYSTAL | K3<br>K3         |
| C1            |             |             | CC73GCH1H681J              | CHIP C 680PF J                      | K3               |
| C2-5          |             |             | CK73GB1C104K               | CHIP C 0.10UF K                     | K3               |
| C2-5          |             |             | CK73GB1H104K               | CHIP C 0.10UF K                     | K3               |
| C6            |             |             | CK73GB1H103K               | CHIP C 0.010UF K                    | K3               |
| C7            |             |             | CK73FB1A225K               | CHIP C 2.2UF K                      | K3               |
| C11           |             |             | CC73GCH1H681J              | CHIP C 680PF J                      | K3               |
| C12-14        |             |             | CK73GB1C104K               | CHIP C 0.10UF K                     | K3               |
| C12-14        |             |             | CK73GB1H104K               | CHIP C 0.10UF K                     | K3               |
| C15           |             |             | CK73GB1H103K               | CHIP C 0.010UF K                    | K3               |
| C16           |             |             | CK73GB1C104K               | CHIP C 0.10UF K                     | K3               |
| C16           |             |             | CK73GB1H104K               | CHIP C 0.10UF K                     | K3               |
| C17-19        |             |             | CK73FB0J475K               | CHIP C 4.7UF K                      | K3               |
| C50-61        |             |             | CK73GB1H103K               | CHIP C 0.010UF K                    | K3               |
| C65-67        |             |             | CK73FB0J475K               | CHIP C 4.7UF K                      | K3               |
| C68           |             |             | CK73GB0J105K               | CHIP C 1.0UF K                      | K3               |
| 313           | 2C          |             | E29-1930-04                | CONDUCTIVE RUBBER                   | K3               |
| CN1           |             |             | E40-9364-05                | FLAT CABLE CONNECTOR                | K3               |
| CN2           |             |             | E41-0166-05                | FLAT CABLE CONNECTOR                | K3               |
| CP1           |             |             | R90-1016-05                | MULTI-COMP 470 X4                   | K3               |
| CP4,5         |             |             | R90-0724-05                | MULTI-COMP 1K X4                    | K3               |
| CP50-53       |             |             | R90-1022-05                | MULTI-COMP 470 X2                   | K3               |
| CP54,55       |             |             | R90-0720-05                | MULTI-COMP 100K X4                  | K3               |
| CP56          |             |             | R90-1022-05                | MULTI-COMP 470 X2                   | K3               |
| R1            |             |             | RK73GB2A433J               | CHIP R 43K J 1/10W                  | K3               |
| R2-5          |             |             | RK73GB2A222J               | CHIP R 2.2K J 1/10W                 | K3               |
| R6            |             |             | RK73GB2A392J               | CHIP R 3.9K J 1/10W                 | K3               |
| R7,8          |             |             | RK73GB2A331J               | CHIP R 330 J 1/10W                  | K3               |
| R9            |             |             | RK73GB2A101J               | CHIP R 100 J 1/10W                  | K3               |
| R10           |             |             | RK73GB2A102J               | CHIP R 1.0K J 1/10W                 | K3               |
| R11           |             |             | RK73GB2A4R7J               | CHIP R 4.7 J 1/10W                  | K3               |
| R12           |             |             | RK73GB2A751J               | CHIP R 750 J 1/10W                  | K3               |
| R13           |             |             | RK73GB2A102J               | CHIP R 1.0K J 1/10W                 | K3               |
| R14           |             |             | RK73GB2A4R7J               | CHIP R 4.7 J 1/10W                  | K3               |
| R15           |             |             | RK73GB2A104J               | CHIP R 100K J 1/10W                 | K3               |
| R16           |             |             | RK73GB2A271J               | CHIP R 270 J 1/10W                  | K3               |
| R17           |             |             | RK73GB2A104J               | CHIP R 100K J 1/10W                 | K3               |
| R18           |             |             | RK73GB2A331J               | CHIP R 330 J 1/10W                  | K3               |
| R19           |             |             | RK73GB2A472J               | CHIP R 4.7K J 1/10W                 | K3               |
| R20           |             |             | RK73GB2A104J               | CHIP R 100K J 1/10W                 | K3               |
| R23           |             |             | RK73GB2A102J               | CHIP R 1.0K J 1/10W                 | K3               |
| R24           |             |             | RK73GB2A473J               | CHIP R 47K J 1/10W                  | K3               |
| R26           |             |             | RK73GB2A102J               | CHIP R 1.0K J 1/10W                 | K3               |
| R27-29        |             |             | RK73GB2A472J               | CHIP R 4.7K J 1/10W                 | K3               |
| R31           |             |             | RK73GB2A433J               | CHIP R 43K J 1/10W                  | K3               |
| R32-35        |             |             | RK73GB2A222J               | CHIP R 2.2K J 1/10W                 | K3               |
| R36           |             |             | RK73GB2A4R7J               | CHIP R 4.7 J 1/10W                  | K3               |
| R50,51        |             |             | RK73GB2A151J               | CHIP R 150 J 1/10W                  | K3               |
| R52           |             |             | RK73GB2A221J               | CHIP R 220 J 1/10W                  | K3               |
| R53,54        |             |             | RK73GB2A151J               | CHIP R 150 J 1/10W                  | K3               |
| R55           |             |             | RK73GB2A221J               | CHIP R 220 J 1/10W                  | K3               |
| R56,57        |             |             | RK73GB2A151J               | CHIP R 150 J 1/10W                  | K3               |
| R58           |             |             | RK73GB2A221J               | CHIP R 220 J 1/10W                  | K3               |

| Ref. No.                     | A<br>d<br>d | N<br>e<br>w | Parts No.    | Description          | Desti-<br>nation |
|------------------------------|-------------|-------------|--------------|----------------------|------------------|
| R59,60                       |             |             | RK73GB2A151J | CHIP R 150 J 1/10W   | K3               |
| R61                          |             |             | RK73GB2A221J | CHIP R 220 J 1/10W   | K3               |
| R62-65                       |             |             | RK73GB2A271J | CHIP R 270 J 1/10W   | K3               |
| R66                          |             |             | RK73GB2A4R7J | CHIP R 4.7 J 1/10W   | K3               |
| R67,68                       |             |             | RK73GB2A272J | CHIP R 2.7K J 1/10W  | K3               |
| D1                           |             |             | MA3062-M     | ZENER DIODE          | K3               |
| D2-5                         |             |             | DA204U       | DIODE                | K3               |
| D26                          |             |             | MA3082-L     | ZENER DIODE          | K3               |
| IC1                          |             |             | LC75808W     | MOS-IC               | K3               |
| IC2                          |             |             | LC75878W     | MOS-IC               | K3               |
| IC3                          |             |             | PNA4S22M     | ANALOGUE IC          | K3               |
| IC4                          |             |             | M62333FP     | MOS-IC               | K3               |
| Q1                           |             |             | DTA114EUA    | DIGITAL TRANSISTOR   | K3               |
| Q1                           |             |             | UN5111       | DIGITAL TRANSISTOR   | K3               |
| Q2                           |             |             | UMX2N        | TRANSISTOR           | K3               |
| Q5                           |             |             | 2SC4617      | TRANSISTOR           | K3               |
| Q6                           |             |             | DTA114EUA    | DIGITAL TRANSISTOR   | K3               |
| Q6                           |             |             | UN5111       | DIGITAL TRANSISTOR   | K3               |
| Q11-16                       |             |             | UMX2N        | TRANSISTOR           | K3               |
| Q62-64                       |             |             | 2SC4617      | TRANSISTOR           | K3               |
| SWITCH UNIT (X16-2560-11)    |             |             |              |                      |                  |
| D1-10                        |             |             | B30-1605-05  | LED (2COLOR PG/RED)  |                  |
| D11-15                       |             |             | B30-1566-05  | LED (1608,RED)       |                  |
| D17-22                       |             |             | B30-1566-05  | LED (1608,RED)       |                  |
| D24                          |             |             | B30-1566-05  | LED (1608,RED)       |                  |
| CN1                          |             |             | E41-0419-05  | FLAT CABLE CONNECTOR |                  |
| R1,2                         |             |             | RK73FB2B561J | CHIP R 560 J 1/8W    |                  |
| R3,4                         |             |             | RK73FB2B391J | CHIP R 390 J 1/8W    |                  |
| R5                           |             |             | RK73FB2B751J | CHIP R 750 J 1/8W    |                  |
| R6-10                        |             |             | RK73FB2B561J | CHIP R 560 J 1/8W    |                  |
| R11                          |             |             | RK73GB2A241J | CHIP R 240 J 1/10W   |                  |
| R12                          |             |             | RK73GB2A332J | CHIP R 3.3K J 1/10W  |                  |
| R13                          |             |             | RK73GB2A103J | CHIP R 10K J 1/10W   |                  |
| R14                          |             |             | RK73GB2A332J | CHIP R 3.3K J 1/10W  |                  |
| R15                          |             |             | RK73GB2A103J | CHIP R 10K J 1/10W   |                  |
| R16                          |             |             | RK73GB2A222J | CHIP R 2.2K J 1/10W  |                  |
| R17                          |             |             | RK73GB2A103J | CHIP R 10K J 1/10W   |                  |
| S1                           |             |             | S70-0901-05  | TACT SWITCH          |                  |
| S2-9                         | *           |             | S70-0912-05  | TACT SWITCH          |                  |
| S10                          |             |             | S70-0901-05  | TACT SWITCH          |                  |
| S11-20                       | *           |             | S70-0912-05  | TACT SWITCH          |                  |
| S21                          |             |             | T99-0445-05  | ROTARY ENCODER       |                  |
| D25                          |             |             | DAN222       | DIODE                |                  |
| Q1                           |             |             | DTA114YUA    | DIGITAL TRANSISTOR   |                  |
| Q1                           |             |             | UN5114       | DIGITAL TRANSISTOR   |                  |
| Q2-4                         |             |             | 2SD2114K     | TRANSISTOR           |                  |
| CD PLAYER UNIT (X32-5540-00) |             |             |              |                      |                  |
| C1,2                         |             |             | CK73GB1H222K | CHIP C 2200PF K      |                  |
| C3,4                         |             |             | CK73GB0J105K | CHIP C 1.0UF K       |                  |
| C5                           |             |             | CK73GB1C104K | CHIP C 0.10UF K      |                  |
| C6                           |             |             | CK73GB1H103K | CHIP C 0.010UF K     |                  |
| C7-9                         |             |             | CK73GB0J105K | CHIP C 1.0UF K       |                  |

K3 : KDC-MPV8025 K4 : KDC-MP825 E2 : KDC-W7027 M1 : KDC-8026

△ Indicates safety critical components.

## PARTS LIST

\* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

## CD PLAYER UNIT (X32-5540-00)

| Ref. No. | A<br>d<br>d | N<br>e<br>w | Parts No.     | Description                      | Desti-<br>nation | Ref. No. | A<br>d<br>d | N<br>e<br>w | Parts No.    | Description           | Desti-<br>nation |
|----------|-------------|-------------|---------------|----------------------------------|------------------|----------|-------------|-------------|--------------|-----------------------|------------------|
| C10-15   |             |             | CK73GB1C104K  | CHIP C 0.10UF K                  |                  | CP8      |             |             | RK74GA1J102J | CHIP-COM 1.0K J 1/16W |                  |
| C16      |             |             | CK73FB0J475K  | CHIP C 4.7UF K                   |                  | CP9      |             |             | RK74GB1J101J | CHIP-COM 100 J 1/16W  |                  |
| C17      |             |             | CK73FB0J106M  | CHIP C 10UF M                    |                  | CP10     |             |             | RK74GB1J103J | CHIP-COM 10K J 1/16W  |                  |
| C18      |             |             | CK73GB1C104K  | CHIP C 0.10UF K                  |                  | CP11     |             |             | RK74GB1J472J | CHIP-COM 4.7K J 1/16W |                  |
| C19      |             |             | CK73FB0J475K  | CHIP C 4.7UF K                   |                  | CP12     |             |             | RK74GA1J104J | CHIP-COM 100K J 1/16W |                  |
| C20      |             |             | CK73GB1C104K  | CHIP C 0.10UF K                  |                  | CP13,14  |             |             | RK74GB1J104J | CHIP-COM 100K J 1/16W |                  |
| C21      |             |             | CK73GB1H102K  | CHIP C 1000PF K                  |                  | CP15     |             |             | RK74GA1J104J | CHIP-COM 100K J 1/16W |                  |
| C22,23   |             |             | CK73GB0J105K  | CHIP C 1.0UF K                   |                  | CP16     |             |             | RK74GB1J222J | CHIP-COM 2.2K J 1/16W |                  |
| C24-27   |             |             | CK73GB1C104K  | CHIP C 0.10UF K                  |                  | R1       |             |             | RK73GB2A100J | CHIP R 10 J 1/10W     |                  |
| C28      |             |             | CK73FB0J106M  | CHIP C 10UF M                    |                  | R2       |             |             | R92-3494-05  | CHIP R 5.6 J 1/2W     |                  |
| C29      |             |             | CK73GB1C104K  | CHIP C 0.10UF K                  |                  | R3,4     |             |             | RK73FB2B331J | CHIP R 330 J 1/8W     |                  |
| C30      |             |             | CK73GB1H152K  | CHIP C 1500PF K                  |                  | R5       |             |             | RK73GB2A101J | CHIP R 100 J 1/10W    |                  |
| C31      |             |             | CC73GCH1H470J | CHIP C 47PF J                    |                  | R6       |             |             | RN73GH1J223D | CHIP R 22K D 1/16W    |                  |
| C32,33   |             |             | CK73GB1C104K  | CHIP C 0.10UF K                  |                  | R7       |             |             | RK73GB2A104J | CHIP R 100K J 1/10W   |                  |
| C34      |             |             | CC73GCH1H560J | CHIP C 56PF J                    |                  | R8       |             |             | RN73GH1J393D | CHIP R 39K D 1/16W    |                  |
| C35,36   |             |             | CK73GB1C104K  | CHIP C 0.10UF K                  |                  | R9       |             |             | RK73GB2A104J | CHIP R 100K J 1/10W   |                  |
| C37      |             |             | CK73GB1H102K  | CHIP C 1000PF K                  |                  | R10      |             |             | RK73GB2A101J | CHIP R 100 J 1/10W    |                  |
| C38      |             |             | CK73GB1H682K  | CHIP C 6800PF K                  |                  | R11,12   |             |             | RK73GB2A104J | CHIP R 100K J 1/10W   |                  |
| C39      |             |             | CK73GB1C104K  | CHIP C 0.10UF K                  |                  | R13      |             |             | RK73GB2A102J | CHIP R 1.0K J 1/10W   |                  |
| C41      |             |             | CK73GB1A334K  | CHIP C 0.33UF K                  |                  | R14-17   |             |             | RK73GB2A104J | CHIP R 100K J 1/10W   |                  |
| C42-45   |             |             | CK73GB1C104K  | CHIP C 0.10UF K                  |                  | R18      |             |             | RK73GB2A101J | CHIP R 100 J 1/10W    |                  |
| C46      |             |             | CK73GB1H682K  | CHIP C 6800PF K                  |                  | R21-23   |             |             | RK73GB2A103J | CHIP R 10K J 1/10W    |                  |
| C47      |             |             | CK73GB1C104K  | CHIP C 0.10UF K                  |                  | R24,25   |             |             | RK73GB2A4R7J | CHIP R 4.7 J 1/10W    |                  |
| C48      |             |             | CC73GCH1H040C | CHIP C 4.0PF C                   |                  | R27      |             |             | RK73GB2A104J | CHIP R 100K J 1/10W   |                  |
| C49      |             |             | CK73GB1H332K  | CHIP C 3300PF K                  |                  | R28      |             |             | RK73GB2A103J | CHIP R 10K J 1/10W    |                  |
| C50      |             |             | CK73GB1C104K  | CHIP C 0.10UF K                  |                  | R29      |             |             | RK73GB2A102J | CHIP R 1.0K J 1/10W   |                  |
| C51      |             |             | CC73GCH1H330J | CHIP C 33PF J                    |                  | R31-33   |             |             | RK73GB2A104J | CHIP R 100K J 1/10W   |                  |
| C52      |             |             | CK73FB1A225K  | CHIP C 2.2UF K                   |                  | R34      |             |             | RK73GB2A472J | CHIP R 4.7K J 1/10W   |                  |
| C53      |             |             | CK73GB0J105K  | CHIP C 1.0UF K                   |                  | R35      |             |             | RK73GB2A104J | CHIP R 100K J 1/10W   |                  |
| C54,55   |             |             | CK73GB1H103K  | CHIP C 0.010UF K                 |                  | R36      |             |             | RK73FB2B4R7J | CHIP R 4.7 J 1/8W     |                  |
| C56,57   |             |             | CK73GB1H331K  | CHIP C 330PF K                   |                  | R37      |             |             | RK73GB2A103J | CHIP R 10K J 1/10W    |                  |
| C58      |             |             | CK73GB1H472K  | CHIP C 4700PF K                  |                  | R38      |             |             | RK73GB2A221J | CHIP R 220 J 1/10W    |                  |
| C59-63   |             |             | CK73GB1H152K  | CHIP C 1500PF K                  |                  | R39      |             |             | RK73GB2A152J | CHIP R 1.5K J 1/10W   |                  |
| C64      |             |             | CK73GB1C104K  | CHIP C 0.10UF K                  |                  | R40      |             |             | RK73GB2A274J | CHIP R 270K J 1/10W   |                  |
| C66      |             |             | CC73GCH1H120J | CHIP C 12PF J                    |                  | R42      |             |             | RK73GB2A101J | CHIP R 100 J 1/10W    |                  |
| C67      |             |             | CC73GCH1H180J | CHIP C 18PF J                    |                  | R43      |             |             | RK73GB2A393J | CHIP R 39K J 1/10W    |                  |
| C68      |             |             | CK73GB1H103K  | CHIP C 0.010UF K                 |                  | R44,45   |             |             | RK73GB2A302J | CHIP R 3.0K J 1/10W   |                  |
| C69      |             |             | CK73FB1A225K  | CHIP C 2.2UF K                   |                  | R46      |             |             | RK73GB2A105J | CHIP R 1.0M J 1/10W   |                  |
| C70      |             |             | CK73FB1A105K  | CHIP C 1.0UF K                   |                  | R47      |             |             | RK73GB2A104J | CHIP R 100K J 1/10W   |                  |
| C71      |             |             | CK73FB0J106M  | CHIP C 10UF M                    |                  | R48,49   |             |             | RK73GB2A331J | CHIP R 330 J 1/10W    |                  |
| C72      |             |             | CK73GB1H102K  | CHIP C 1000PF K                  |                  | R50      |             |             | RK73GB2A101J | CHIP R 100 J 1/10W    |                  |
| CN1      |             |             | E41-2083-05   | FLAT CABLE CONNECTOR (24PIN)     |                  | R51      |             |             | RK73GB2A392J | CHIP R 3.9K J 1/10W   |                  |
| CN2      |             |             | E41-2068-05   | FLAT CABLE CONNECTOR (16PIN)     |                  | R52      |             |             | RK73GB2A163J | CHIP R 16K J 1/10W    |                  |
| CN2      |             |             | E41-2085-05   | FLAT CABLE CONNECTOR (16PIN)     |                  | R53      |             |             | RK73GB2A123J | CHIP R 12K J 1/10W    |                  |
| L1,2     |             |             | L92-0386-05   | CHIP FERRITE                     |                  | R54      |             |             | RK73GB2A333J | CHIP R 33K J 1/10W    |                  |
| X1       |             |             | L77-2808-05   | CRYSTAL RESONATOR (16.897849MHZ) |                  | R55      |             |             | RK73GB2A103J | CHIP R 10K J 1/10W    |                  |
| X2       |             |             | L78-0896-05   | RESONATOR (16.00MHZ)             |                  | R56      |             |             | RK73GB2A123J | CHIP R 12K J 1/10W    |                  |
| CP1      |             |             | RK74GA1J104J  | CHIP-COM 100K J 1/16W            |                  | R57,58   |             |             | RK73GB2A133J | CHIP R 13K J 1/10W    |                  |
| CP2,3    |             |             | RK74GA1J101J  | CHIP-COM 100 J 1/16W             |                  | R59      |             |             | RK73GB2A472J | CHIP R 4.7K J 1/10W   |                  |
| CP4      |             |             | RK74GA1J103J  | CHIP-COM 10K J 1/16W             |                  | R60      |             |             | RK73GB2A123J | CHIP R 12K J 1/10W    |                  |
| CP5      |             |             | RK74GA1J102J  | CHIP-COM 1.0K J 1/16W            |                  | R61      |             |             | RK73GB2A183J | CHIP R 18K J 1/10W    |                  |
| CP6      |             |             | RK74GA1J104J  | CHIP-COM 100K J 1/16W            |                  | R62      |             |             | RK73GB2A432J | CHIP R 4.3K J 1/10W   |                  |
| CP7      |             |             | RK74GB1J102J  | CHIP-COM 1.0K J 1/16W            |                  | R63      |             |             | RK73GB2A133J | CHIP R 13K J 1/10W    |                  |
|          |             |             |               |                                  |                  | R64      |             |             | RK73GB2A241J | CHIP R 240 J 1/10W    |                  |
|          |             |             |               |                                  |                  | R65      |             |             | RK73GB2A104J | CHIP R 100K J 1/10W   |                  |

K3 : KDC-MPV8025 K4 : KDC-MP825 E2 : KDC-W7027 M1 : KDC-8026

△ Indicates safety critical components.

# PARTS LIST

\* New parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

## CD PLAYER UNIT (X32-5540-00)

| Ref. No.                                              | A<br>d<br>d | N<br>e<br>w | Parts No.                                                                     | Description                                                                                              | Desti-<br>nation       |
|-------------------------------------------------------|-------------|-------------|-------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------|------------------------|
| R66<br>R67<br>R68,69<br>R70                           |             |             | RK73GB2A472J<br>RK73GB2A222J<br>RK73GB2A104J<br>RK73GB2A102J                  | CHIP R 4.7K J 1/10W<br>CHIP R 2.2K J 1/10W<br>CHIP R 100K J 1/10W<br>CHIP R 1.0K J 1/10W                 |                        |
| S1,2<br>S3                                            |             |             | S68-0863-05<br>S68-0862-05                                                    | PUSH SWITCH<br>PUSH SWITCH                                                                               |                        |
| D2<br>D3<br>IC1<br>IC2<br>IC3                         |             |             | DA204U<br>DAN202U<br>91CW12AFG-4VF6<br>UPD63712GC<br>TC94A20F-010             | DIODE<br>DIODE<br>MICROCONTROLLER IC<br>MOS-IC<br>MOS-IC                                                 |                        |
| IC4<br>IC5<br>IC5<br>IC6<br>IC6                       |             |             | BA5824FP<br>NJM2880U133<br>NJM2880U33<br>S-1112B33MCG<br>XC6219B332MR         | ANALOGUE IC<br>ANALOGUE IC<br>ANALOGUE IC<br>ANALOGUE IC<br>ANALOGUE IC                                  |                        |
| IC7<br>IC7<br>IC8<br>IC9<br>Q1                        |             |             | S-1112B25MCG<br>XC6219B252MR<br>TC7SH08FU<br>TAR5S33-F<br>2SK3018             | ANALOGUE IC<br>ANALOGUE IC<br>MOS-IC<br>ANALOGUE IC<br>FET                                               |                        |
| Q3<br>Q4<br>Q5<br>Q6<br>Q7                            |             |             | UMD9N<br>2SK3018<br>UMD9N<br>UMD12N<br>DTC124EUA                              | TRANSISTOR<br>FET<br>TRANSISTOR<br>TRANSISTOR<br>DIGITAL TRANSISTOR                                      |                        |
| Q8<br>Q9,10                                           |             |             | 2SB0970<br>DTC114YUA                                                          | TRANSISTOR<br>DIGITAL TRANSISTOR                                                                         |                        |
| <b>ELECTRIC UNIT (X34-3040-10/11/21, X34-3042-71)</b> |             |             |                                                                               |                                                                                                          |                        |
| C1,2<br>C3,4<br>C5<br>C5,6<br>C7,8                    |             |             | C94-0161-05<br>CK73FB1C474K<br>C94-0032-05<br>C94-0032-05<br>CK73FB1C474K     | ELECTRO 0.47UF 50WV<br>CHIP C 0.47UF K<br>ELECTRO 47UF 6.3WV<br>ELECTRO 47UF 6.3WV<br>CHIP C 0.47UF K    | K4<br>K3M1E2<br>K3M1E2 |
| C9<br>C10<br>C11<br>C11<br>C12                        |             |             | CK73GB1A474K<br>CC73GCH1H151J<br>CK73GB1E223K<br>CK73GB1H223K<br>CK73GB1H103K | CHIP C 0.47UF K<br>CHIP C 150PF J<br>CHIP C 0.022UF K<br>CHIP C 0.022UF K<br>CHIP C 0.010UF K            |                        |
| C13-16<br>C21-24<br>C21,22<br>C31-34<br>C41,42        |             |             | CK73FB1H104K<br>CK73FB1C105K<br>CK73FB1C105K<br>C94-0179-05<br>C94-0046-05    | CHIP C 0.10UF K<br>CHIP C 1.0UF K<br>CHIP C 1.0UF K<br>ELECTRO 0.22UF 50WV<br>ELECTRO 3.3UF 35WV         | K3M1E2<br>K4           |
| C49,50<br>C67<br>C69<br>C70,71<br>C71                 |             | *           | C94-0046-05<br>CK73FB1H104K<br>CK73FB1H104K<br>CK73GB1H103K<br>CK73GB1H103K   | ELECTRO 3.3UF 35WV<br>CHIP C 0.10UF K<br>CHIP C 0.10UF K<br>CHIP C 0.010UF K<br>CHIP C 0.010UF K         | K3M1E2<br>K4           |
| C100<br>C100<br>C101<br>C102<br>C103                  |             | *           | C90-5626-05<br>C94-0213-05<br>CK73GB1H103K<br>C90-5619-05<br>CK73GB1H103K     | ELECTRO 3900UF 16WV<br>ELECTRO 2200UF 16WV<br>CHIP C 0.010UF K<br>ELECTRO 220UF 16WV<br>CHIP C 0.010UF K | E2<br>K3K4M1           |

| Ref. No.                                     | A<br>d<br>d | N<br>e<br>w | Parts No.                                                                      | Description                                                                                                             | Desti-<br>nation     |
|----------------------------------------------|-------------|-------------|--------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------|----------------------|
| C104<br>C105<br>C106<br>C107<br>C108         |             | *           | C94-0039-05<br>C94-0033-05<br>CK73GB1A474K<br>CK73FB1C105K<br>C94-0188-05      | ELECTRO 10UF 16WV<br>ELECTRO 100UF 6.3WV<br>CHIP C 0.47UF K<br>CHIP C 1.0UF K<br>ELECTRO 220UF 10WV                     |                      |
| C109<br>C110,111<br>C112,113<br>C114<br>C126 |             | *           | C94-0186-05<br>C90-2963-05<br>C90-5418-05<br>CK73GB1A224K<br>C94-0046-05       | ELECTRO 100UF 10WV<br>ELECTRO 100UF 25WV<br>ELECTRO 220UF 16WV<br>CHIP C 0.22UF K<br>ELECTRO 3.3UF 35WV                 |                      |
| C127<br>C128<br>C129<br>C130<br>C130         |             | *           | CK73GB0J105K<br>C94-0047-05<br>CK73GB1H103K<br>CK73GB1E223K<br>CK73GB1H223K    | CHIP C 1.0UF K<br>ELECTRO 0.1UF 50WV<br>CHIP C 0.010UF K<br>CHIP C 0.022UF K<br>CHIP C 0.022UF K                        |                      |
| C131<br>C132<br>C134,135<br>C200<br>C201     |             |             | C94-0051-05<br>CK73GB1H102K<br>CK73GB1H103K<br>C94-0032-05<br>CK73GB1H103K     | ELECTRO 1UF 50WV<br>CHIP C 1000PF K<br>CHIP C 0.010UF K<br>ELECTRO 47UF 6.3WV<br>CHIP C 0.010UF K                       |                      |
| C202<br>C203<br>C204<br>C206<br>C207,208     |             |             | CC73GCH1H220J<br>CC73GCH1H270J<br>CK73GB0J105K<br>CK73GB0J105K<br>CK73GB1H103K | CHIP C 22PF J<br>CHIP C 27PF J<br>CHIP C 1.0UF K<br>CHIP C 1.0UF K<br>CHIP C 0.010UF K                                  |                      |
| C211<br>C213<br>C250<br>C251<br>C252         |             |             | CK73GB1H102K<br>CK73GB1H103K<br>C94-0042-05<br>CK73GB1H103K<br>C90-5540-05     | CHIP C 1000PF K<br>CHIP C 0.010UF K<br>ELECTRO 47UF 16WV<br>CHIP C 0.010UF K<br>ELECTRO 2.2UF 50WV                      | E2                   |
| C252<br>C253,254<br>C253,254<br>C255<br>C256 |             |             | C94-0052-05<br>CK73GB1C104K<br>CK73GB1H104K<br>C94-0051-05<br>C94-0041-05      | ELECTRO 2.2UF 50WV<br>CHIP C 0.10UF K<br>CHIP C 0.10UF K<br>ELECTRO 1UF 50WV<br>ELECTRO 33UF 16WV                       | K3K4M1               |
| C257<br>C258<br>C259-262<br>C401<br>C403     |             |             | C90-5663-05<br>C94-0051-05<br>CK73GB1A224K<br>CK73GB1H103K<br>CK73GB1H103K     | ELECTRO 1UF 50WV<br>ELECTRO 1UF 50WV<br>CHIP C 0.22UF K<br>CHIP C 0.010UF K<br>CHIP C 0.010UF K                         |                      |
| C405<br>C407<br>C408<br>C409<br>C410         |             |             | CK73GB1H103K<br>CK73GB1H103K<br>CK73FB1A225K<br>CK73GB1H103K<br>C94-0039-05    | CHIP C 0.010UF K<br>CHIP C 0.010UF K<br>CHIP C 2.2UF K<br>CHIP C 0.010UF K<br>ELECTRO 10UF 16WV                         | E2<br>E2<br>E2<br>E2 |
| C411<br>C412,413                             |             |             | CC73GCH1H331J<br>CC73GCH1H100D                                                 | CHIP C 330PF J<br>CHIP C 10PF D                                                                                         | E2<br>E2             |
| CN1<br>CN2<br>CN3<br>CN4<br>CN4              |             |             | E41-0224-05<br>E40-3237-05<br>E41-0384-05<br>E40-9527-05<br>E41-0213-05        | PIN ASSY (12PIN)<br>PIN ASSY (2PIN)<br>PIN ASSY (16PIN)<br>FLAT CABLE CONNECTOR (24PIN)<br>FLAT CABLE CONNECTOR (24PIN) |                      |
| CN5<br>CN6                                   |             |             | E40-9368-05<br>E41-0399-05                                                     | FLAT CABLE CONNECTOR (28PIN)<br>FLAT CABLE CONNECTOR (15PIN)                                                            |                      |

**K3** : KDC-MPV8025 **K4** : KDC-MP825 **E2** : KDC-W7027 **M1** : KDC-8026

△ Indicates safety critical components.

# PARTS LIST

\* New parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

## ELECTRIC UNIT (X34-3040-10/11/21, X34-3042-71)

| Ref. No. | Add | New | Parts No.    | Description                    | Destination | Ref. No. | Add | New | Parts No.    | Description          | Destination |
|----------|-----|-----|--------------|--------------------------------|-------------|----------|-----|-----|--------------|----------------------|-------------|
| △ CN7    |     |     | E41-0009-05  | PIN ASSY (2PIN)                |             | R133     |     |     | RK73GB2A104J | CHIP R 100K J 1/10W  |             |
| J1       |     |     | E58-0863-15  | RECTANGULAR RECEPTACLE (16PIN) |             | R134     |     |     | RK73GB2A473J | CHIP R 47K J 1/10W   |             |
| P1       |     |     | E23-0745-05  | TERMINAL                       |             | R135     |     |     | RK73GB2A223J | CHIP R 22K J 1/10W   |             |
| W2       |     |     | E30-6218-05  | CORD WITH PLUG (ANT)           |             | R138     |     |     | RK73GB2A223J | CHIP R 22K J 1/10W   |             |
|          |     |     |              |                                |             | R139     |     |     | RK73FB2B103J | CHIP R 10K J 1/8W    |             |
| L1       |     |     | L33-1170-05  | CHOKE COIL ASSY                |             | R140     |     |     | RK73GB2A103J | CHIP R 10K J 1/10W   |             |
| L2       |     |     | L33-1903-05  | CHOKE COIL                     |             | R141     |     |     | RK73GB2A822J | CHIP R 8.2K J 1/10W  |             |
| L4       |     |     | L40-4795-91  | SMALL FIXED INDUCTOR (4.7UH,J) |             | R142     |     |     | RK73GB2A183J | CHIP R 18K J 1/10W   |             |
| L5       |     |     | L92-0075-05  | CHIP FERRITE                   |             | R143     |     |     | RD14DB2H332J | SMALL-RD 3.3K J 1/2W |             |
| L6       |     |     | L40-4795-91  | SMALL FIXED INDUCTOR (4.7UH,J) |             | R144     |     |     | RK73EB2E473J | CHIP R 47K J 1/4W    |             |
| L7       |     |     | L33-1039-05  | LINE FILTER COIL               |             | R145     |     |     | RK73GB2A104J | CHIP R 100K J 1/10W  |             |
| L11-13   |     |     | L40-4795-34  | SMALL FIXED INDUCTOR           | E2          | R146     |     |     | RK73EB2E102J | CHIP R 1.0K J 1/4W   | M1E2        |
| L11-13   |     |     | L40-4795-68  | SMALL FIXED INDUCTOR (4.7UH)   | E2          | R147,148 |     |     | RK73EB2E103J | CHIP R 10K J 1/4W    |             |
| L11,12   |     |     | L40-4795-34  | SMALL FIXED INDUCTOR           | K3K4M1      | R200     |     |     | RK73GB2A153J | CHIP R 15K J 1/10W   |             |
| L11,12   |     |     | L40-4795-68  | SMALL FIXED INDUCTOR (4.7UH)   | K3K4M1      | R201     |     |     | RK73GB2A103J | CHIP R 10K J 1/10W   |             |
| X1       |     |     | L78-0821-05  | RESONATOR (20MHz)              |             | R202     |     |     | RK73GB2A104J | CHIP R 100K J 1/10W  |             |
| X2       |     |     | L77-2738-05  | CRYSTAL RESONATOR (32.768KHz)  |             | R203     |     |     | RK73GB2A103J | CHIP R 10K J 1/10W   | E2          |
| X3       |     |     | L77-2002-05  | CRYSTAL RESONATOR (4.332MHz)   | E2          | R203,204 |     |     | RK73GB2A103J | CHIP R 10K J 1/10W   | K3          |
| U        | 2D  |     | N83-3005-46  | PAN HEAD TAPTITE SCREW         |             | R204,205 |     |     | RK73GB2A103J | CHIP R 10K J 1/10W   | M1          |
| X        | 2D  |     | N80-3008-46  | PAN HEAD TAPTITE SCREW         |             | R205,206 |     |     | RK73GB2A103J | CHIP R 10K J 1/10W   | K4          |
| Y        | 2D  |     | N83-3010-46  | PAN HEAD TAPTITE SCREW         |             |          |     |     |              |                      |             |
| Z        | 2D  |     | N84-2004-46  | PAN HEAD TAPTITE SCREW         |             |          |     |     |              |                      | E2          |
| R1,2     |     |     | RK73EB2E100J | CHIP R 10 J 1/4W               |             | R206     |     |     | RK73GB2A103J | CHIP R 10K J 1/10W   |             |
| R3       |     |     | RK73EB2E4R7J | CHIP R 4.7 J 1/4W              | K4          | R207     |     |     | RK73GB2A104J | CHIP R 100K J 1/10W  |             |
| R3,4     |     |     | RK73EB2E4R7J | CHIP R 4.7 J 1/4W              | K3M1E2      | R208,209 |     |     | RK73GB2A103J | CHIP R 10K J 1/10W   |             |
| R5,6     |     |     | RK73EB2E100J | CHIP R 10 J 1/4W               | K3M1E2      | R212,213 |     |     | RK73GB2A102J | CHIP R 1.0K J 1/10W  |             |
| R7       |     |     | RK73GB2A472J | CHIP R 4.7K J 1/10W            |             | R214,215 |     |     | RK73GB2A472J | CHIP R 4.7K J 1/10W  |             |
| R8       |     |     | RK73GB2A103J | CHIP R 10K J 1/10W             |             | R216,217 |     |     | RK73GB2A102J | CHIP R 1.0K J 1/10W  |             |
| R9,10    |     |     | RK73FB2B333J | CHIP R 33K J 1/8W              |             | R218     |     |     | RK73GB2A222J | CHIP R 2.2K J 1/10W  |             |
| R21,22   |     |     | RK73GB2A361J | CHIP R 360 J 1/10W             |             | R219,220 |     |     | RK73GB2A101J | CHIP R 100 J 1/10W   |             |
| R23,24   |     |     | RK73GB2A223J | CHIP R 22K J 1/10W             |             | R221-224 |     |     | RK73GB2A102J | CHIP R 1.0K J 1/10W  |             |
| R31,32   |     |     | RK73EB2E181J | CHIP R 180 J 1/4W              |             | R225-227 |     |     | RK73GB2A101J | CHIP R 100 J 1/10W   | K3K4E2      |
| R45,46   |     |     | RK73GB2A361J | CHIP R 360 J 1/10W             |             | R228     |     |     | RK73GB2A102J | CHIP R 1.0K J 1/10W  |             |
| R47,48   |     |     | RK73GB2A223J | CHIP R 22K J 1/10W             |             | R229     |     |     | RK73GB2A104J | CHIP R 100K J 1/10W  |             |
| R55,56   |     |     | RK73EB2E181J | CHIP R 180 J 1/4W              |             | R230     |     |     | RK73GB2A102J | CHIP R 1.0K J 1/10W  |             |
| R60,61   |     |     | RK73GB2A102J | CHIP R 1.0K J 1/10W            | K3M1E2      | R231     |     |     | RK73GB2A104J | CHIP R 100K J 1/10W  |             |
| R61      |     |     | RK73GB2A102J | CHIP R 1.0K J 1/10W            | K4          | R232     |     |     | RK73GB2A102J | CHIP R 1.0K J 1/10W  |             |
| R100     |     |     | RK73FB2B223J | CHIP R 22K J 1/8W              |             | R233     |     |     | RK73GB2A104J | CHIP R 100K J 1/10W  |             |
| R101     |     |     | RK73GB2A101J | CHIP R 100 J 1/10W             |             | R234-240 |     |     | RK73GB2A222J | CHIP R 2.2K J 1/10W  |             |
| R102     |     |     | RK73GB2A222J | CHIP R 2.2K J 1/10W            |             | R241     |     |     | RK73GB2A102J | CHIP R 1.0K J 1/10W  |             |
| R103     |     |     | RK73GB2A223J | CHIP R 22K J 1/10W             |             | R245,246 |     |     | RK73GB2A102J | CHIP R 1.0K J 1/10W  |             |
| R104     |     |     | RK73FB2B221J | CHIP R 220 J 1/8W              |             | R247     |     |     | RK73GB2A104J | CHIP R 100K J 1/10W  |             |
| R105     |     |     | RK73GB2A153J | CHIP R 15K J 1/10W             |             | R248     |     |     | RK73GB2A102J | CHIP R 1.0K J 1/10W  |             |
| R106     |     |     | R92-3047-05  | CHIP R 24K D 1/10W             |             | R250-253 |     |     | RK73GB2A104J | CHIP R 100K J 1/10W  | K3K4M1      |
| R107     |     |     | R92-3032-05  | CHIP R 4.3K D 1/10W            |             | R250,251 |     |     | RK73GB2A104J | CHIP R 100K J 1/10W  | E2          |
| R108     |     |     | RK73FB2B152J | CHIP R 1.5K J 1/8W             |             | R254,255 |     |     | RK73GB2A222J | CHIP R 2.2K J 1/10W  |             |
| R109-111 |     |     | RK73GB2A473J | CHIP R 47K J 1/10W             |             | R256     |     |     | RK73GB2A104J | CHIP R 100K J 1/10W  | E2          |
| R112     |     |     | RK73FB2B152J | CHIP R 1.5K J 1/8W             |             | R256,257 |     |     | RK73GB2A104J | CHIP R 100K J 1/10W  | K3K4M1      |
| R124     |     |     | RK73FB2B472J | CHIP R 4.7K J 1/8W             |             | R259     |     |     | RK73GB2A102J | CHIP R 1.0K J 1/10W  |             |
| R125,126 |     |     | RD14DB2H102J | SMALL-RD 1.0K J 1/2W           | K3K4M1      | R260,261 |     |     | RK73GB2A222J | CHIP R 2.2K J 1/10W  |             |
| R127     |     |     | RK73GB2A223J | CHIP R 22K J 1/10W             | K3K4M1      | R262     |     |     | RK73GB2A102J | CHIP R 1.0K J 1/10W  |             |
| R128,129 |     |     | RD14DB2H102J | SMALL-RD 1.0K J 1/2W           |             | R264     |     |     | RK73GB2A222J | CHIP R 2.2K J 1/10W  |             |
| R130     |     |     | RK73GB2A223J | CHIP R 22K J 1/10W             |             | R265     |     |     | RK73GB2A104J | CHIP R 100K J 1/10W  |             |
| R131     |     |     | RK73FB2B472J | CHIP R 4.7K J 1/8W             |             | R266     |     |     | RK73GB2A102J | CHIP R 1.0K J 1/10W  |             |
| R132     |     |     | RK73FB2B561J | CHIP R 560 J 1/8W              | M1E2        | R267     |     |     | RK73GB2A473J | CHIP R 47K J 1/10W   |             |
|          |     |     |              |                                |             | R268     |     |     | RK73GB2A333J | CHIP R 33K J 1/10W   |             |
|          |     |     |              |                                |             | R269     |     |     | RK73GB2A472J | CHIP R 4.7K J 1/10W  |             |

K3 : KDC-MPV8025 K4 : KDC-MP825 E2 : KDC-W7027 M1 : KDC-8026

△ Indicates safety critical components.



## PARTS LIST

\* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

## ELECTRIC UNIT (X34-3040-10/11/21, X34-3042-71)

| Ref. No.                                         | A<br>d<br>d | N<br>e<br>w | Parts No.                                                                    | Description                                                                                                    | Desti-<br>nation       |
|--------------------------------------------------|-------------|-------------|------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------|------------------------|
| R270,271<br>R272<br>R273<br>R274<br>R275         |             |             | RK73GB2A471J<br>RK73GB2A472J<br>RK73GB2A222J<br>RK73GB2A102J<br>RK73GB2A104J | CHIP R 470 J 1/10W<br>CHIP R 4.7K J 1/10W<br>CHIP R 2.2K J 1/10W<br>CHIP R 1.0K J 1/10W<br>CHIP R 100K J 1/10W |                        |
| R277,278<br>R279,280<br>R281<br>R285<br>R300,301 |             |             | RK73GB2A471J<br>RK73GB2A472J<br>RK73GB2A473J<br>RK73GB2A102J<br>RK73GB2A472J | CHIP R 470 J 1/10W<br>CHIP R 4.7K J 1/10W<br>CHIP R 47K J 1/10W<br>CHIP R 1.0K J 1/10W<br>CHIP R 4.7K J 1/10W  |                        |
| R302<br>R303<br>R305<br>R306<br>R307             |             |             | RK73GB2A221J<br>RK73GB2A223J<br>RK73GB2A432J<br>RK73GB2A100J<br>RK73GB2A752J | CHIP R 220 J 1/10W<br>CHIP R 22K J 1/10W<br>CHIP R 4.3K J 1/10W<br>CHIP R 10 J 1/10W<br>CHIP R 7.5K J 1/10W    |                        |
| R308<br>R309-311<br>R312<br>R313-317<br>R318,319 |             |             | RK73EB2E102J<br>RK73EB2E471J<br>RK73EB2E101J<br>RK73EB2E472J<br>RK73EB2E101J | CHIP R 1.0K J 1/4W<br>CHIP R 470 J 1/4W<br>CHIP R 100 J 1/4W<br>CHIP R 4.7K J 1/4W<br>CHIP R 100 J 1/4W        | K3K4E2<br>K3K4E2       |
| R321-323<br>R324,325<br>R326<br>R327,328<br>R329 |             |             | RK73GB2A222J<br>RK73GB2A472J<br>RK73GB2A104J<br>RK73GB2A472J<br>RK73EB2E472J | CHIP R 2.2K J 1/10W<br>CHIP R 4.7K J 1/10W<br>CHIP R 100K J 1/10W<br>CHIP R 4.7K J 1/10W<br>CHIP R 4.7K J 1/4W |                        |
| R330,331<br>R332<br>R402<br>R403<br>R404         |             |             | RK73EB2E101J<br>RK73EB2E471J<br>RK73FB2B102J<br>RK73GB2A223J<br>RK73GB2A472J | CHIP R 100 J 1/4W<br>CHIP R 470 J 1/4W<br>CHIP R 1.0K J 1/8W<br>CHIP R 22K J 1/10W<br>CHIP R 4.7K J 1/10W      | E2                     |
| R405-407<br>W1                                   |             |             | RK73GB2A222J<br>R92-1252-05                                                  | CHIP R 2.2K J 1/10W<br>CHIP R 0 OHM J 1/16W                                                                    | E2<br>E2               |
| D1<br>D2<br>D3<br>D4<br>D5                       |             |             | 1N5393G-M5<br>RB160L-40<br>MA4056(N)-M<br>MA4082(N)-L<br>SFPB-54V            | DIODE<br>DIODE<br>ZENER DIODE<br>ZENER DIODE<br>DIODE                                                          |                        |
| D6<br>D9-12<br>D9-12<br>D13<br>D14               |             |             | MA4110-L<br>S1J<br>1SR154-400<br>1SS133<br>MA4056-M                          | ZENER DIODE<br>DIODE<br>DIODE<br>DIODE<br>ZENER DIODE                                                          | M1E2                   |
| D15<br>D16<br>D17<br>D20<br>D23,24               |             |             | MA4047-M<br>MA4068(N)-M<br>MA4062(N)-M<br>1SS133<br>DAP202U                  | ZENER DIODE<br>ZENER DIODE<br>ZENER DIODE<br>DIODE<br>DIODE                                                    |                        |
| D23,24<br>D23,24<br>D25-27<br>D25,26<br>D28      |             | *           | LM1MA142WA-G<br>MA142WA<br>RD6.8M(B2)<br>RD6.8M(B2)<br>RD6.8MW               | DIODE<br>DIODE<br>ZENER DIODE<br>ZENER DIODE<br>ZENER DIODE                                                    | K3M1E2<br>K4<br>K3M1E2 |
| D29-31<br>D33-40                                 |             |             | 1SS133<br>S1J                                                                | DIODE<br>DIODE                                                                                                 |                        |

| Ref. No.                                 | A<br>d<br>d | N<br>e<br>w | Parts No.                                                     | Description                                                                                                | Desti-<br>nation           |
|------------------------------------------|-------------|-------------|---------------------------------------------------------------|------------------------------------------------------------------------------------------------------------|----------------------------|
| D33-40<br>D50<br>D51<br>D52-55<br>D52,53 |             |             | 1SR154-400<br>RD6.8M(B2)<br>RD6.8MW<br>MA3062WA<br>MA3062WA   | DIODE<br>ZENER DIODE<br>ZENER DIODE<br>ZENER DIODE<br>ZENER DIODE                                          | E2<br>K3K4M1               |
| D60<br>D62<br>D63-65<br>D66<br>IC1       |             | *           | MA3062WA<br>MA3062WA<br>DA204U<br>IMSA-6801<br>UPD703030GC042 | ZENER DIODE<br>ZENER DIODE<br>DIODE<br>SURGE ABSORBER<br>MICROCONTROLLER IC                                |                            |
| IC2<br>IC3<br>IC4<br>IC5<br>IC7          |             |             | TDA7411<br>M5237ML<br>TDA7560<br>SI-8050JD<br>S-80837CNNB     | ANALOGUE IC<br>ANALOGUE IC<br>ANALOGUE IC<br>ANALOGUE IC<br>MOS-IC                                         |                            |
| IC8<br>IC12<br>IC13,14<br>Q1<br>Q2       |             |             | TC74HC02AF<br>TDA7479D<br>LB1930M<br>2SA2057<br>2SC4081       | MOS-IC<br>ANALOGUE IC<br>ANALOGUE IC<br>TRANSISTOR<br>TRANSISTOR                                           | E2                         |
| Q3<br>Q4<br>Q4<br>Q5<br>Q5               |             |             | 2SA1576A<br>DTA124EUA<br>UN5112<br>DTC124EUA<br>UN5212        | TRANSISTOR<br>DIGITAL TRANSISTOR<br>DIGITAL TRANSISTOR<br>DIGITAL TRANSISTOR<br>DIGITAL TRANSISTOR         |                            |
| Q6<br>Q6<br>Q7<br>Q7<br>Q8,9             |             |             | DTC144EUA<br>UN5213<br>DTA124EUA<br>UN5112<br>2SA2057         | DIGITAL TRANSISTOR<br>DIGITAL TRANSISTOR<br>DIGITAL TRANSISTOR<br>DIGITAL TRANSISTOR<br>TRANSISTOR         |                            |
| Q10<br>Q11<br>Q11<br>Q12<br>Q12          |             |             | 2SC4081<br>DTC124EUA<br>UN5212<br>DTA124EUA<br>UN5112         | TRANSISTOR<br>DIGITAL TRANSISTOR<br>DIGITAL TRANSISTOR<br>DIGITAL TRANSISTOR<br>DIGITAL TRANSISTOR         |                            |
| Q13<br>Q14<br>Q23<br>Q23<br>Q24,25       |             |             | 2SA2057<br>2SC4081<br>DTC114YUA<br>UN5214<br>2SB1240          | TRANSISTOR<br>TRANSISTOR<br>DIGITAL TRANSISTOR<br>DIGITAL TRANSISTOR<br>TRANSISTOR                         | K3K4M1<br>K3K4M1<br>K3K4M1 |
| Q25<br>Q26<br>Q26<br>Q27<br>Q28          |             |             | 2SB1240<br>DTC114YUA<br>UN5214<br>2SA1576A<br>DTA114EUA       | TRANSISTOR<br>DIGITAL TRANSISTOR<br>DIGITAL TRANSISTOR<br>TRANSISTOR<br>DIGITAL TRANSISTOR                 | E2                         |
| Q28<br>Q29<br>Q29<br>Q30<br>Q30          |             |             | UN5111<br>DTA123JK<br>KRA105S<br>DTC144EUA<br>UN5213          | DIGITAL TRANSISTOR<br>DIGITAL TRANSISTOR<br>DIGITAL TRANSISTOR<br>DIGITAL TRANSISTOR<br>DIGITAL TRANSISTOR | M1E2<br>M1E2               |
| Q32-34<br>Q51,52<br>Q51,52<br>Q53<br>Q53 |             |             | 2SC4081<br>DTA124EUA<br>UN5112<br>DTC143TUA<br>UN5216         | TRANSISTOR<br>DIGITAL TRANSISTOR<br>DIGITAL TRANSISTOR<br>DIGITAL TRANSISTOR<br>DIGITAL TRANSISTOR         |                            |

K3 : KDC-MPV8025 K4 : KDC-MP825 E2 : KDC-W7027 M1 : KDC-8026

△ Indicates safety critical components.

## PARTS LIST

\* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

## ELECTRIC UNIT (X34-3040-10/11/21, X34-3042-71)

| Ref. No.                               | A<br>d<br>d | N<br>e<br>w | Parts No.     | Description         | Desti-<br>nation |
|----------------------------------------|-------------|-------------|---------------|---------------------|------------------|
| Q54                                    |             |             | DTC124EUA     | DIGITAL TRANSISTOR  |                  |
| Q54                                    |             |             | UN5212        | DIGITAL TRANSISTOR  |                  |
| Q55,56                                 |             |             | DTC143TUA     | DIGITAL TRANSISTOR  |                  |
| Q55,56                                 |             |             | UN5216        | DIGITAL TRANSISTOR  |                  |
| Q59,60                                 |             |             | DTC143TUA     | DIGITAL TRANSISTOR  |                  |
| Q59,60                                 |             |             | UN5216        | DIGITAL TRANSISTOR  |                  |
| Q63                                    |             |             | DTA124EUA     | DIGITAL TRANSISTOR  |                  |
| Q63                                    |             |             | UN5112        | DIGITAL TRANSISTOR  |                  |
| Q102                                   |             |             | DTC124EUA     | DIGITAL TRANSISTOR  |                  |
| Q102                                   |             |             | UN5212        | DIGITAL TRANSISTOR  |                  |
| Q103                                   |             |             | 2SB1188(Q,R)  | TRANSISTOR          |                  |
| Q104                                   |             |             | DTC143TUA     | DIGITAL TRANSISTOR  | E2               |
| Q104                                   |             |             | UN5216        | DIGITAL TRANSISTOR  | E2               |
| TH1                                    |             |             | PTH9C42BD471Q | POSITIVE RESISTOR   |                  |
| A1                                     |             |             | X86-3730-11   | FRONT-END UNIT      | K3K4M1           |
| A1                                     |             |             | X86-3732-70   | FRONT-END UNIT      | E2               |
| <b>CD MECHANISM ASSY (X92-4900-00)</b> |             |             |               |                     |                  |
| 2                                      | 1B          | *           | A10-4884-02   | CHASSIS             |                  |
| 5                                      | 1B          | *           | D10-4610-03   | ARM ASSY            |                  |
| 8                                      | 2A          | *           | D10-4608-03   | LEVER ASSY          |                  |
| 10                                     | 3A          | *           | D10-4602-03   | ARM                 |                  |
| 11                                     | 2A          | *           | D10-4603-03   | ARM                 |                  |
| 12                                     | 3A          | *           | D10-4604-03   | ARM                 |                  |
| 13                                     | 3A          | *           | D10-4605-03   | ARM                 |                  |
| 14                                     | 3B          | *           | D10-4613-03   | ARM                 |                  |
| 15                                     | 2A          | *           | D10-4615-03   | SLIDER              |                  |
| 16                                     | 3B          | *           | D10-4617-02   | SLIDER              |                  |
| 17                                     | 3B          | *           | D10-4618-03   | SLIDER              |                  |
| 18                                     | 3B          | *           | D10-4614-04   | ARM                 |                  |
| 19                                     | 3B          | *           | D10-4606-04   | ARM                 |                  |
| 22                                     | 2A          | *           | D13-2174-04   | GEAR                |                  |
| 23                                     | 2B          | *           | D13-2180-04   | GEAR                |                  |
| 24                                     | 3B          | *           | D13-2181-04   | GEAR                |                  |
| 25                                     | 3B          | *           | D13-2182-04   | GEAR                |                  |
| 26                                     | 3B          | *           | D13-2175-04   | WORM                |                  |
| 27                                     | 3B          | *           | D13-2176-04   | GEAR                |                  |
| 28                                     | 3B          | *           | D13-2177-04   | GEAR                |                  |
| 29                                     | 3B          | *           | D13-2178-04   | GEAR                |                  |
| 30                                     | 3B          | *           | D13-2183-04   | GEAR                |                  |
| 31                                     | 3B          | *           | D13-2184-04   | GEAR                |                  |
| 32                                     | 2B          | *           | D13-2173-03   | RACK (GEAR)         |                  |
| 33                                     | 2A          | *           | D14-0763-04   | ROLLER              |                  |
| 35                                     | 2B          | *           | D21-2389-04   | SHAFT               |                  |
| 36                                     | 1A          | *           | D23-0955-04   | RETAINER            |                  |
| 37                                     | 1B          | *           | D39-0246-05   | DAMPER              |                  |
| 38                                     | 2B          | *           | G01-3095-04   | EXTENSION SPRING    |                  |
| 39                                     | 2A          | *           | G01-3093-04   | TORSION COIL SPRING |                  |
| 40                                     | 2A          | *           | G01-3094-04   | EXTENSION SPRING    |                  |
| 41                                     | 1B          | *           | G01-3091-04   | EXTENSION SPRING    |                  |
| 42                                     | 2A          | *           | G01-3092-04   | EXTENSION SPRING    |                  |
| 43                                     | 1B          | *           | G01-3090-04   | EXTENSION SPRING    |                  |
| 44                                     | 2B          | *           | G02-1413-04   | FLAT SPRING         |                  |
| 45                                     | 2B          | *           | G02-1414-04   | FLAT SPRING         |                  |

| Ref. No. | A<br>d<br>d | N<br>e<br>w | Parts No.   | Description                   | Desti-<br>nation |
|----------|-------------|-------------|-------------|-------------------------------|------------------|
| 51       | 1A          | *           | J21-9753-02 | MOUNTING HARDWARE             |                  |
| 52       | 3B          | *           | J21-9755-02 | MOUNTING HARDWARE             |                  |
| 53       | 1B          | *           | J21-9752-03 | MOUNTING HARDWARE             |                  |
| 55       | 1A          | *           | J90-1014-01 | GUIDE                         |                  |
| 56       | 1B          | *           | J90-1024-03 | GUIDE                         |                  |
| DFPC1    | 3A          |             | J84-0141-05 | FLEXIBLE PRINTED WIRING BOARD |                  |
| A        | 2B          | *           | N09-6192-05 | TAPPING SCREW (P2X8COUNTERSU) |                  |
| B        | 1B          | *           | N09-6191-05 | STEPPED SCREW (M1.7TOTAL8BON) |                  |
| C        | 2B          | *           | N09-6004-05 | MACHINE SCREW (M1.7X2.5 IB-L) |                  |
| E        | 2B          | *           | N09-6193-05 | MACHINE SCREW (M2X2PAN-HEAD#) |                  |
| F        | 1A          | *           | N09-6194-05 | TAPPING SCREW (P2X5BINDING-H) |                  |
| G        | 2A          |             | N19-2163-04 | FLAT WASHER                   |                  |
| H        | 1B          |             | N39-2020-46 | PAN HEAD MACHIN SCREW         |                  |
| J        | 1B          | *           | N09-6196-05 | TAPTITE SCREW (S2X3.5PRECISI) |                  |
| DM1      | 3B          |             | T42-1066-04 | DC MOTOR ASSY (SPINDLE)       |                  |
| DM2      | 3B          |             | T42-1067-04 | DC MOTOR ASSY (LOADING)       |                  |
| DPU1     | 2B          |             | X93-2010-00 | OPTICAL PICKUP ASSY           |                  |

K3 : KDC-MPV8025 K4 : KDC-MP825 E2 : KDC-W7027 M1 : KDC-8026

△ Indicates safety critical components.