




Exploded View (Cabinet) (1/3)

NOTE : The place of the connection of (A) as shown in (),
is mentioned in the "Exploded View (Cabinet) (2/3)".

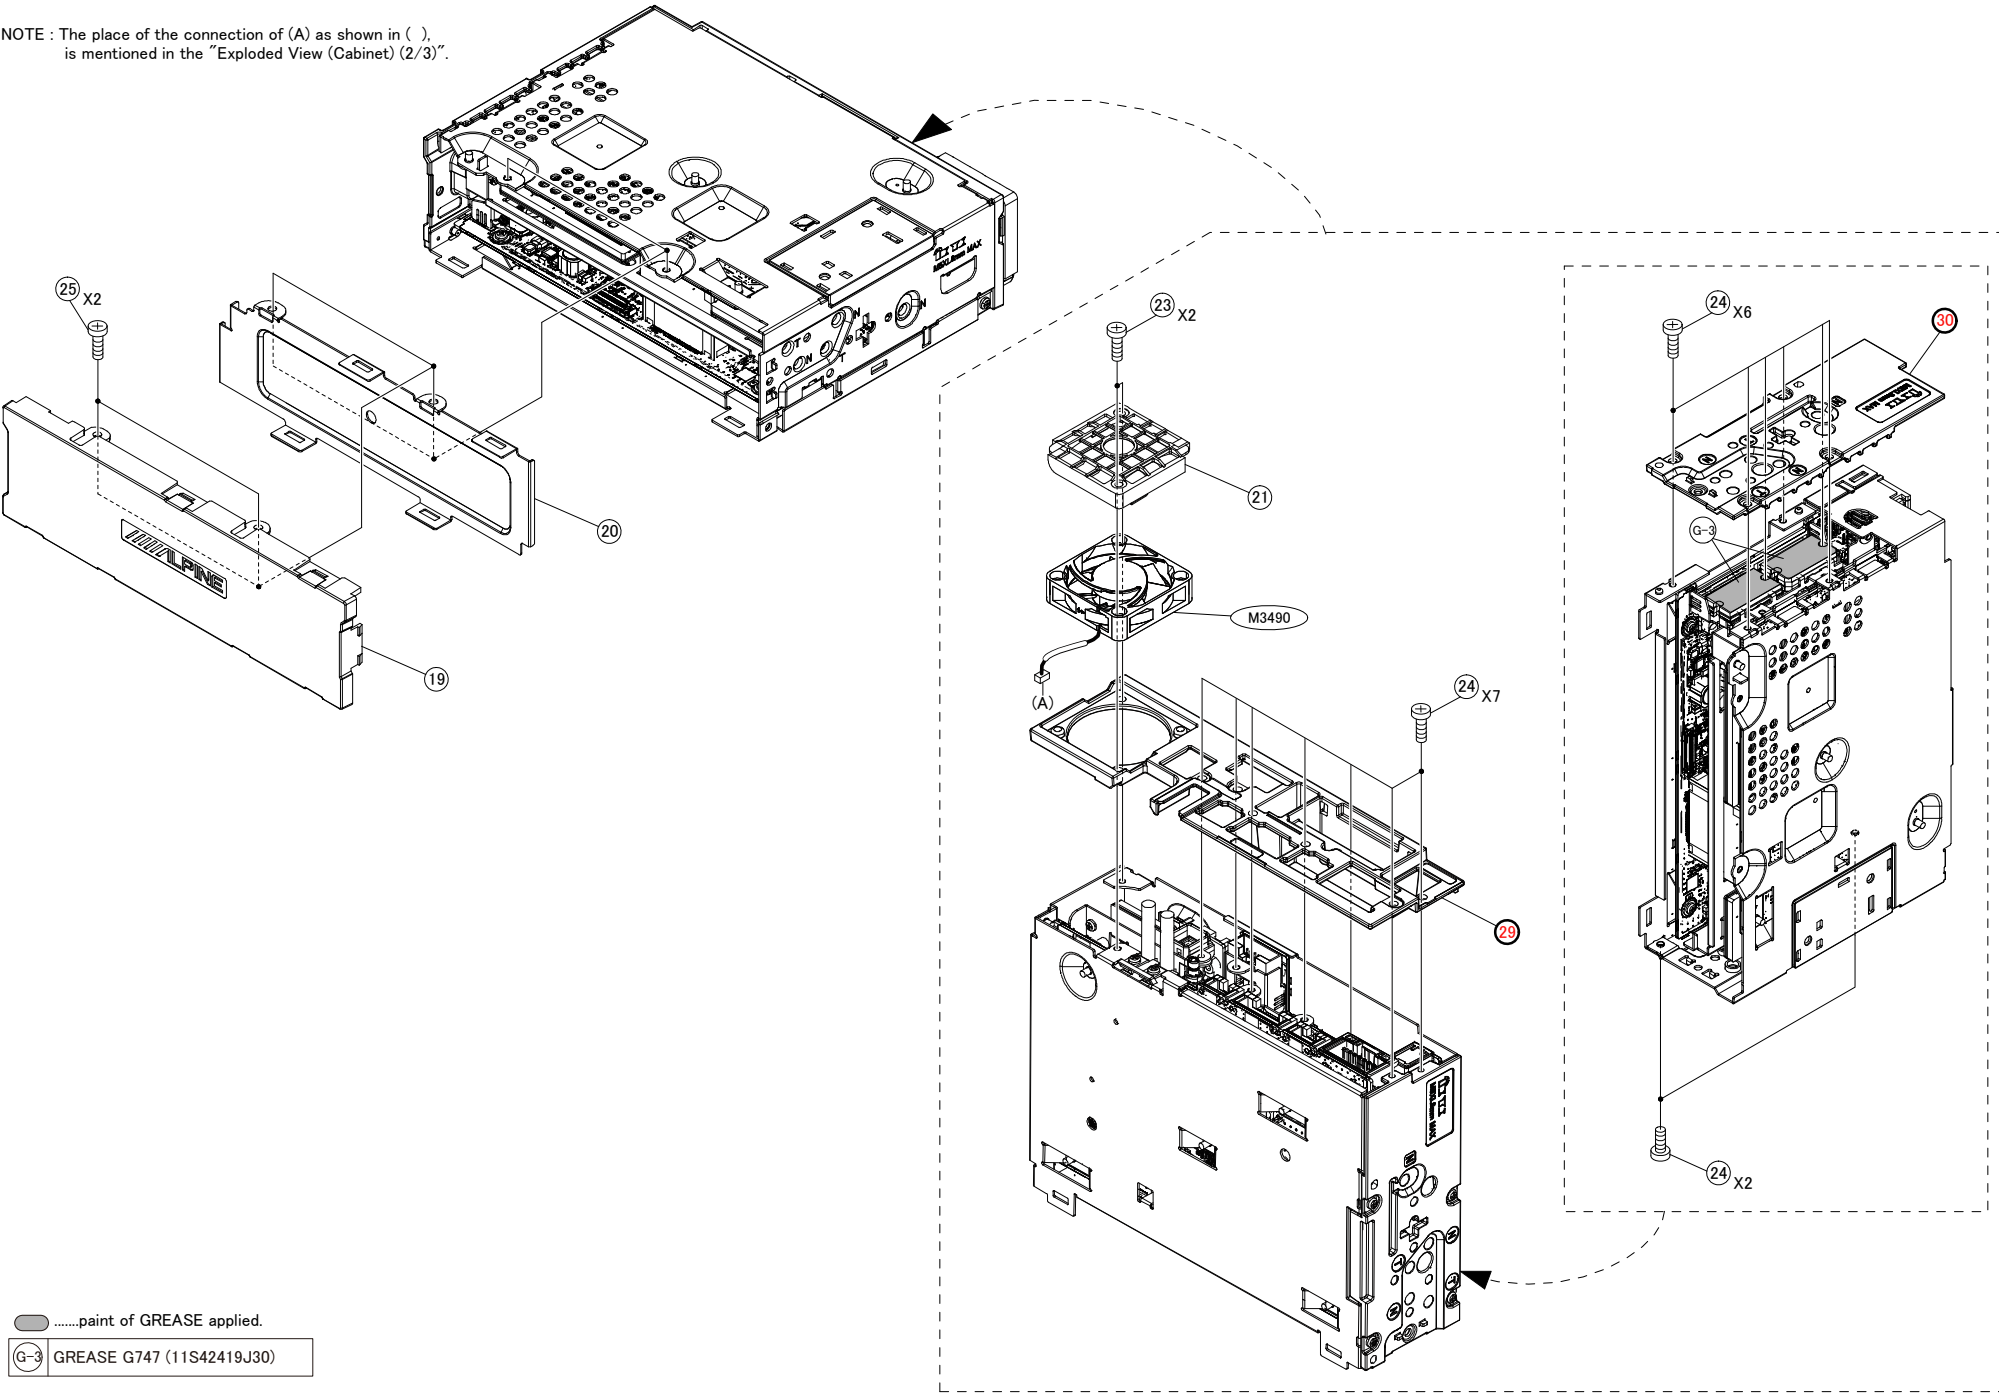


Exploded View (Cabinet) (2/3)

NOTE : The place of the connection of (A) as shown in (),
is mentioned in the "Exploded View (Cabinet) (1/3)".

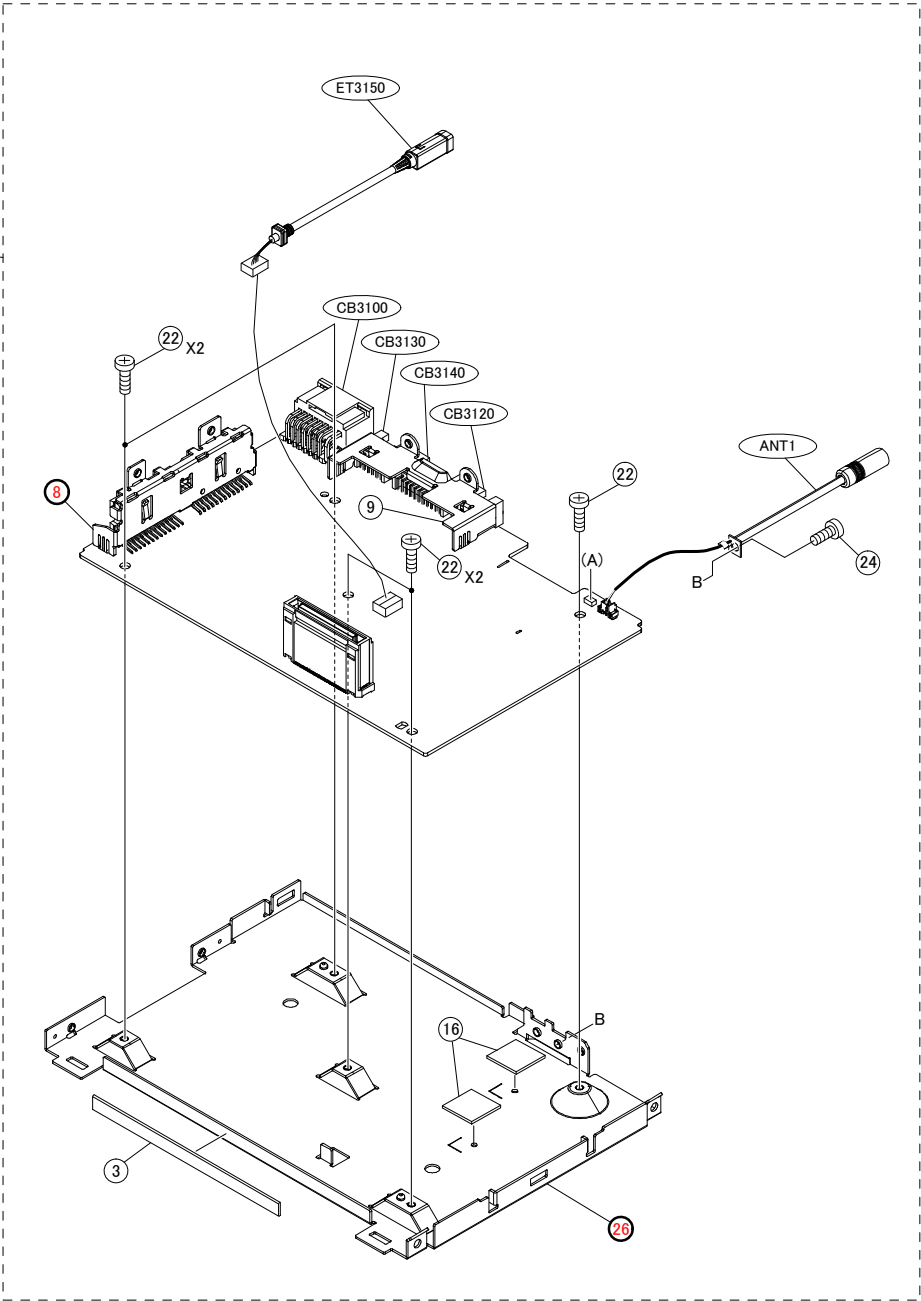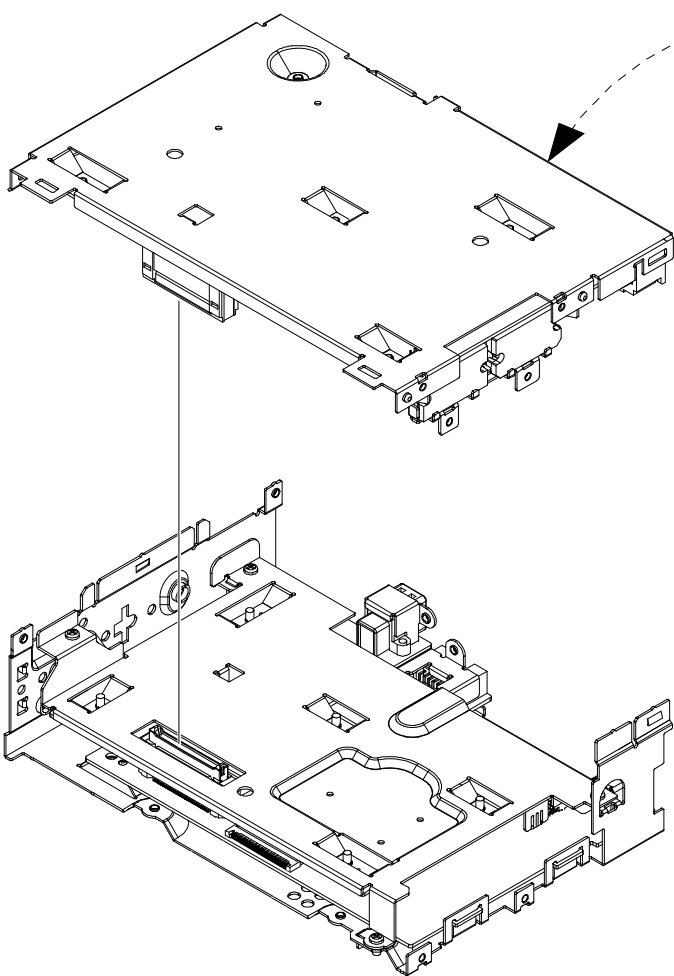


Exploded View (Cabinet) (3/3)

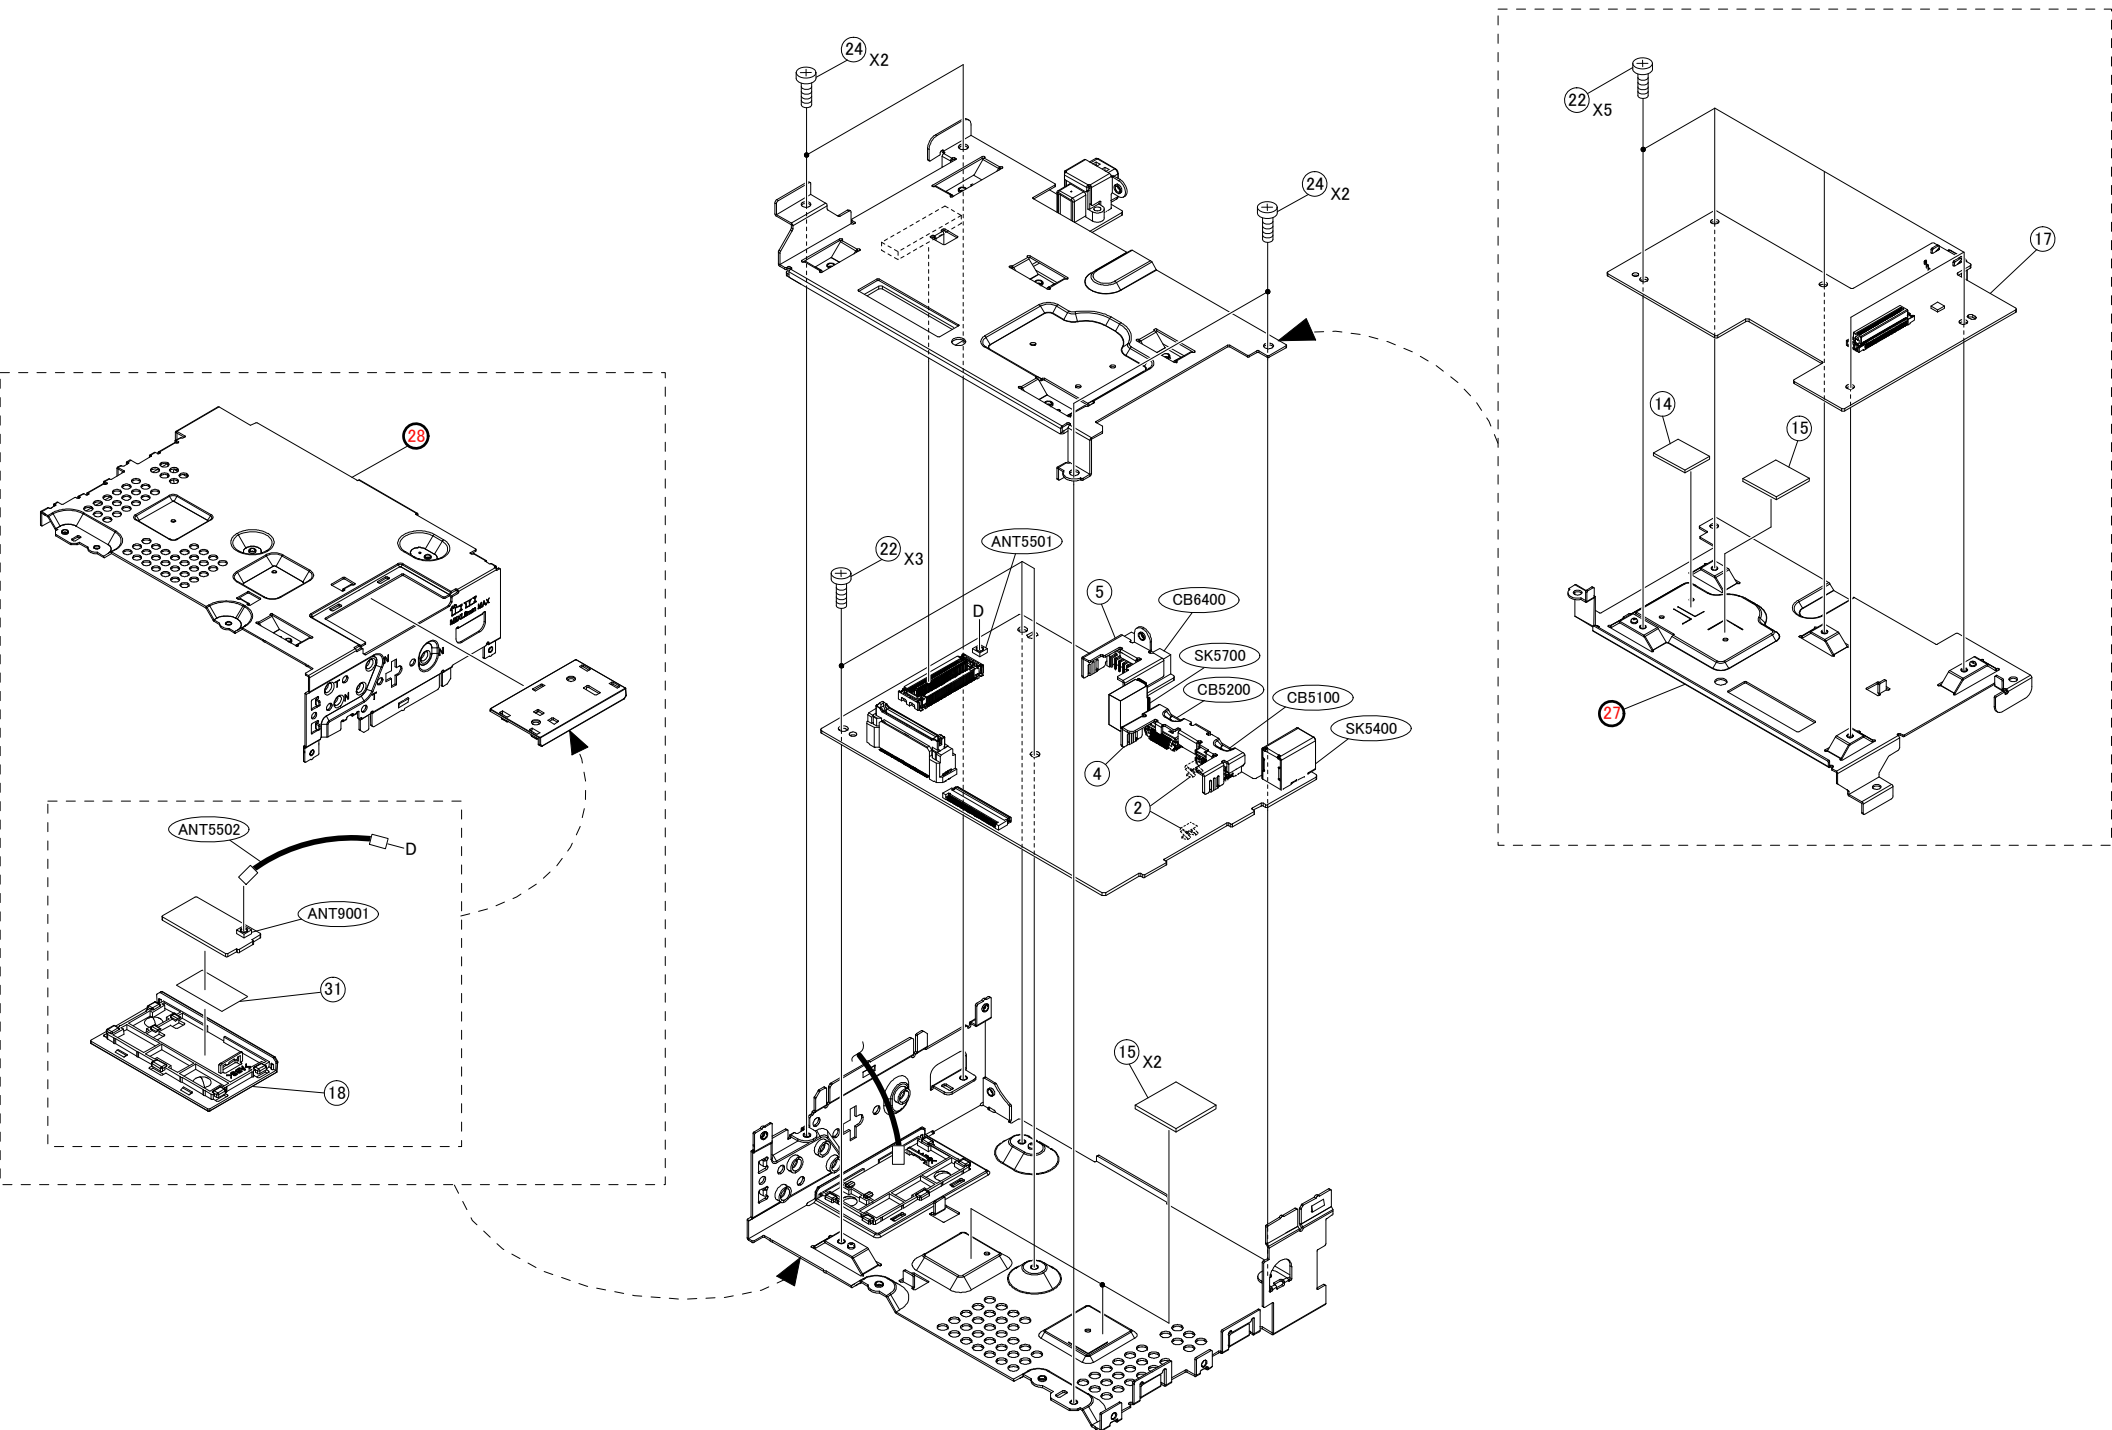


MODEL	Symbol No.	Parts No.	Description
2	29-22483Z02	OG-453065 -E5	
	3	14-19217Z19	INS,CVR 104X4XT0.15
	4	07-30182Z01	BKT,CONN HDMI
	5	07-30183Z01	BKT,CONN CAN
	8	-----	BKT,IC
	9	07-30184Z01	BKT,CONN PREOUT
	14	75-31381Z01	5580H-1.5-19-15
	15	75-31381Z02	5580H-1.5-20-20
	16	75-31381Z03	5580H-5.5-12-12
	17	84-30004Z01	ASSY,NAVI,LIMO_US
	18	15-29982Z01	COVER,PLATE TOP
	19	15-30180Z01	COVER,FRONT
	20	26-30398Z01	SHIELD,FRONT
	21	15-12877Z01	COVER,FAN
	22	03-12686Z01	SCR,S-T 2.6X6 ZN ATP
	23	03S60822Y31	SCR,S-T 2.6X18 ZN A
	24	03S60822Y10	SCR,S-T 2.6X5 ZN A
	25	03-00340Z01	SCR,S-T 2.6X6 ZB A
	26	-----	CHAS,BASE
	27	-----	SHIELD,MIDDLE
	28	-----	COVER,TOP
	29	-----	BKT,REAR
	30	-----	HEAT,SINK
	31	14-28478Z77	INS,CVR 24X14XT0.15
	ANT1	09-17241Z06	ASSY,ANID-0116-06A
	ANT5501	09-07494Z01	U.FL-R-SMT-1(80)-E2
	ANT5502	09-24492Z04	ASSY,U.FL-2LP-066N1
	ANT9001	09-07494Z01	U.FL-R-SMT-1(80)-E2
	CB3100	09T35473Y16	WTB,F169B001-16 -DB
	CB3120	09-25106Z01	WTB,S10B-PUDSS-1 -DB
	CB3130	09-25106Z02	WTB,S12B-PUDSS-1 -DB
	CB3140	09-25106Z07	WTB,S22B-PUDSS-1 -DB
	CB5100	09-25213Z01	WTB,TCX3400-011187-T
	CB5200	09-25213Z01	WTB,TCX3400-011187-T
	CB6400	09-25106Z05	WTB,S18B-PUDSS-1 -DB
	ET3150	09-19615Z02	ASSY,ANID-0139-02A
	M3490	59-14185Z03	MOTOR,ASB0412MA-9D11
	SK5400	09-30387Z01	SKT,GT17HNF-4DP-2-DB
	SK5700	09-31283Z01	SKT,UBAL-4R-D14-4SD


Exploded View (Cabinet) (1/3)

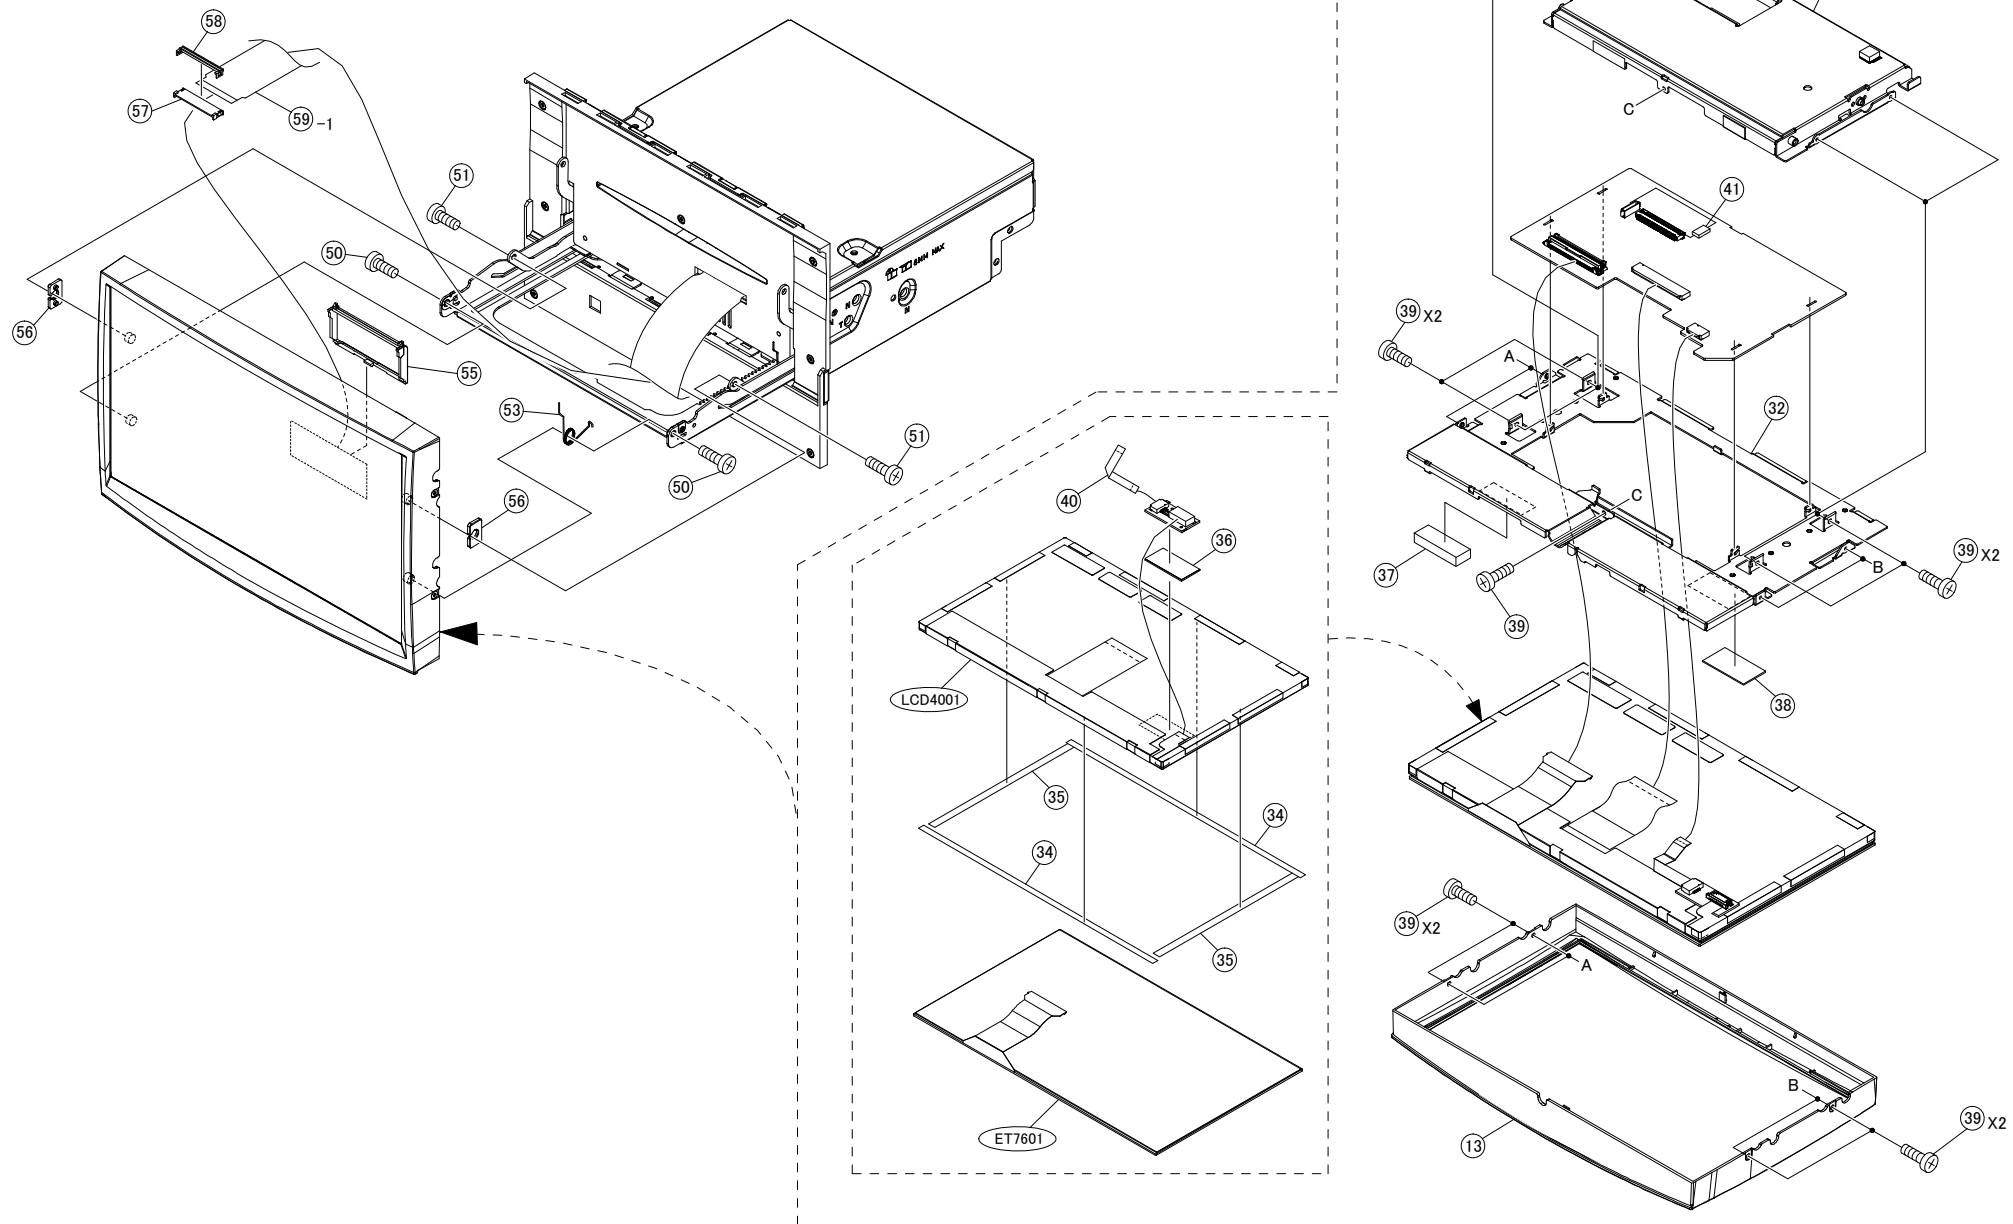

Exploded View (Cabinet) (2/3)

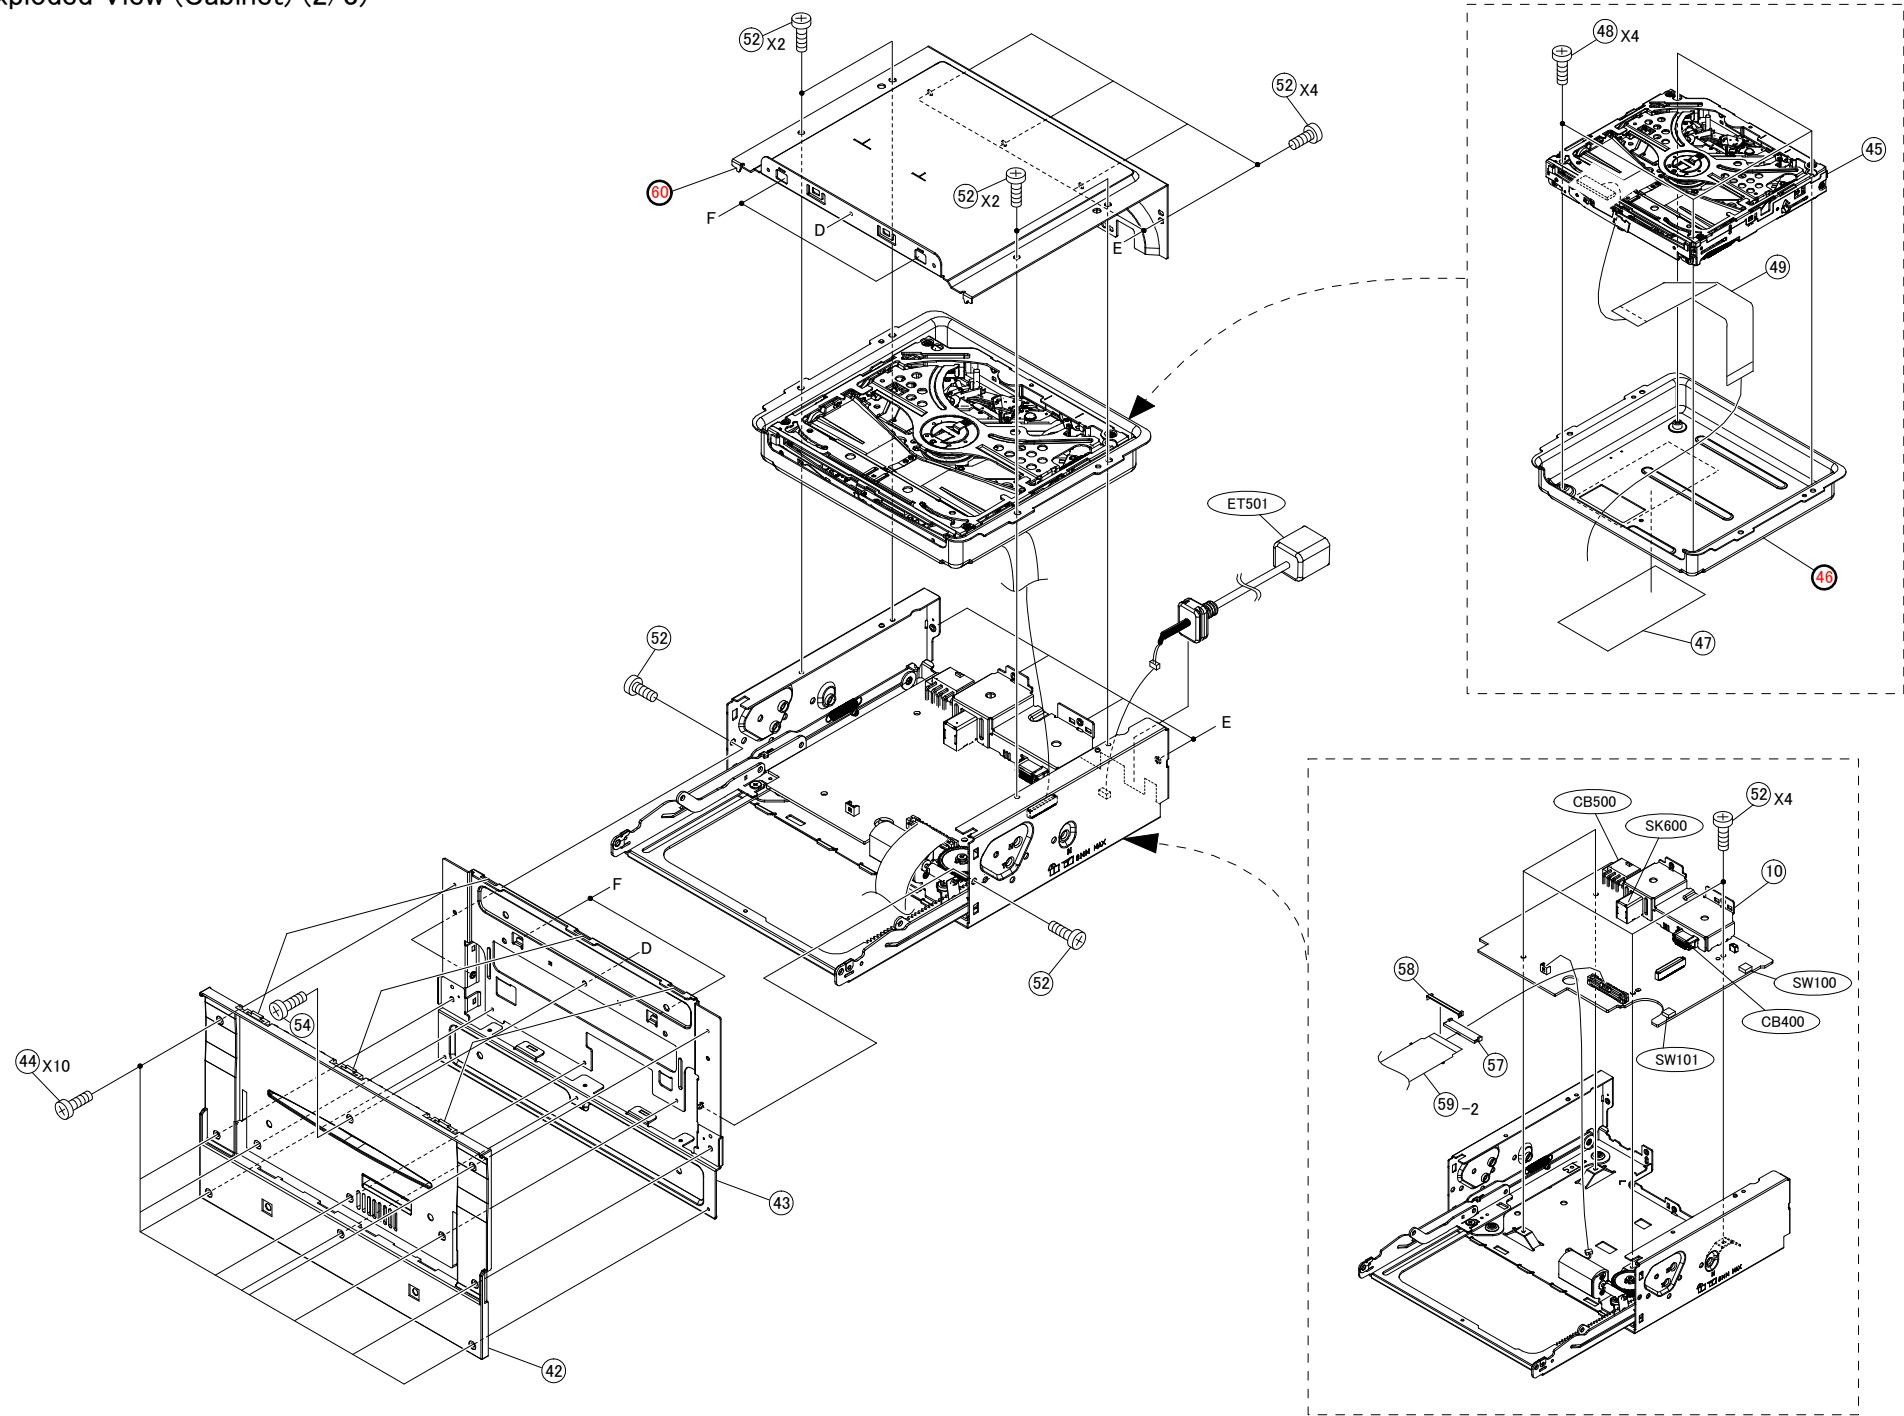

Exploded View (Cabinet) (3/3)

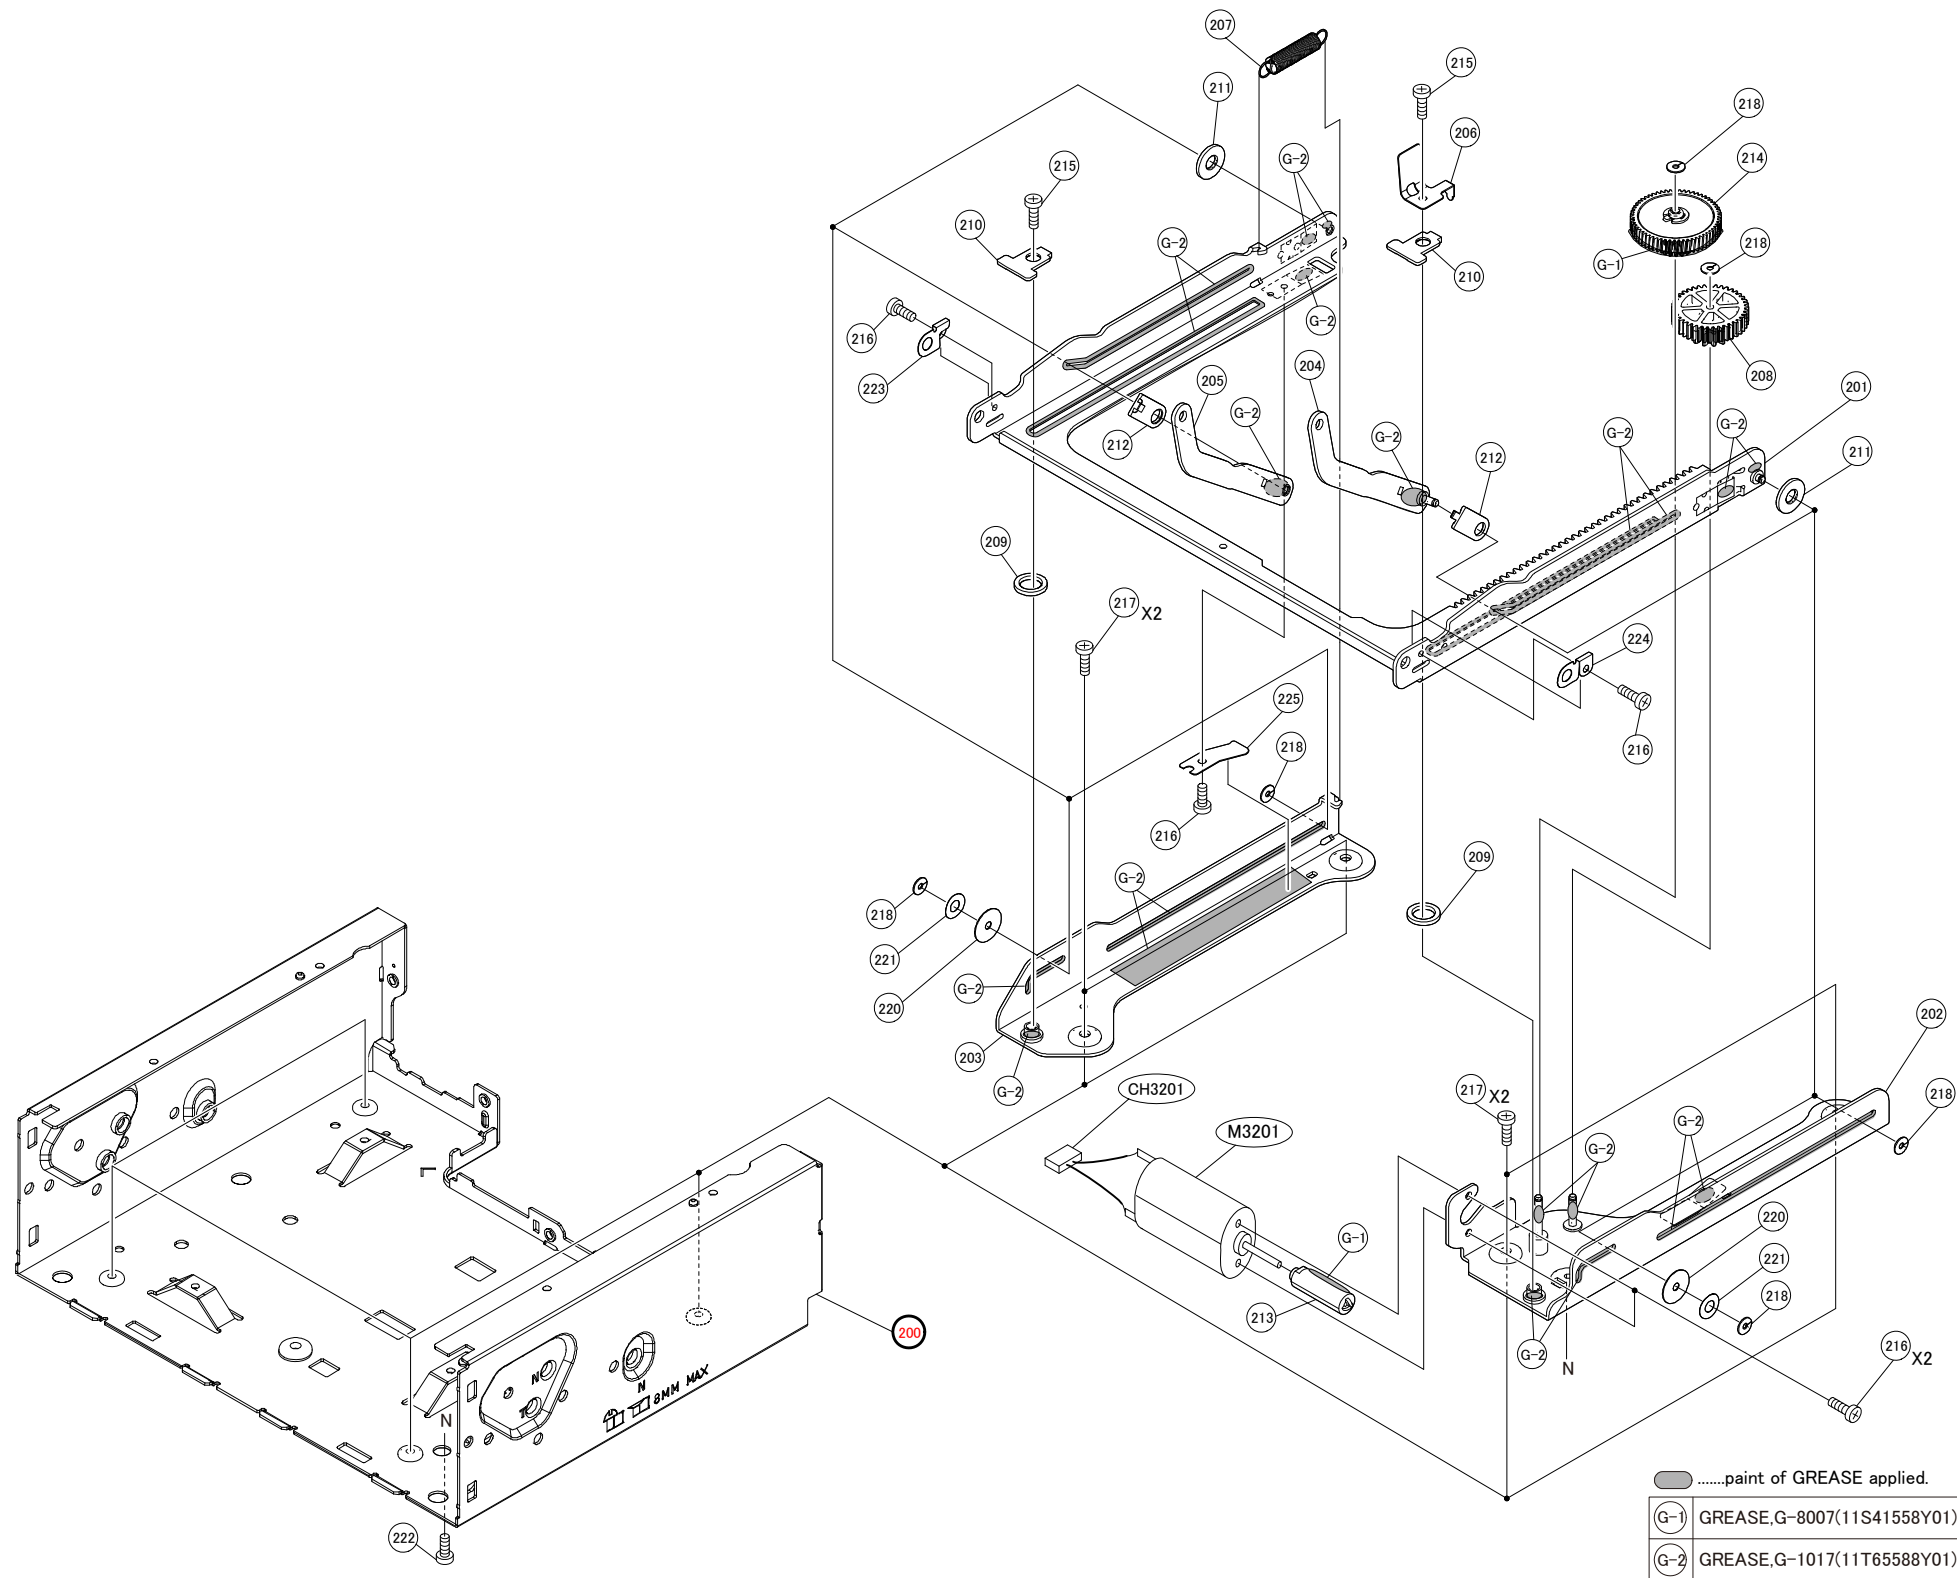


MODEL	Symbol No.	Parts No.	Description
10	07-32806Z01	BKT,CONN WL0000A4	
	13	EN-32903Z01	NOSE,MONITOR ASSY
	32	07-25643Z01	BKT,MONI SUB X009EXV
	33	-----	BKT,MONITOR ASSY
	34	14-24373Z41	INS,CVR 205X2XT1
	35	14-24373Z42	INS,CVR 112X2XT1
	36	14-19217Z95	INS,CVR 29X11.5XT0.9
	37	75-15882Z93	CUS,RUB 30X10XT6
	38	14-19217Z94	INS,CVR 32X16XT1
	39	03-00712Z74	SCR,MCH 2X5 ZBEA
	40	30-15488Z08	SML2CD-10X54.0-ADX6
	41	75-15882Z95	CUS,RUB 8X4.8XT4
	42	EN-33308Z01	ESC,FRONT ASSY
	43	07-32917Z01	BKT,ESC ASSY
	44	03-00712Z74	SCR,MCH 2X5 ZBEA
	45	DV-29855Z01	DV39M12A
	46	-----	CHAS,MID BASE ASSY
	47	14-28478Z81	INS,CVR 48X83.2XT0.1
	48	03S60822Y06	SCR,S-T 2.6X4 ZN A
	49	30-26200Z09	MPCP0.5-45P_T1X185
	50	03-10059Z01	SCR,MCH 2X3.5 ZNCA
	51	03S60820Y84	SCR,MCH 2X3.5 ZNEA
	52	03S60822Y13	SCR,S-T 2.6X6 ZN A
	53	41-12155Z01	SPRING,NOSE
	54	03-00712Z74	SCR,MCH 2X5 ZBEA
	55	15-13048Z02	COVER,FPC
	56	43-05906Z01	BUSH,MONITOR
	57	15-17985Z01	COVER,501783-5009
	58	15-17986Z01	COVER,501784-5009
	59	84-33263Z01	FPC,X209D MIAN-DISP
	60	-----	COVER,TOP
	200	-----	CHAS,BASE
	201	07-09019Z04	ASSY,RIV BKT SLIDER
	202	07-09020Z02	ASSY,RIV BASE R
	203	07-09071Z01	ASSY,RIV BASE L
	204	07-09022Z03	ASSY,RIV ARM R
	205	07-09021Z03	ASSY,RIV ARM L
	206	41-05899Z01	SPRING,WORM
	207	41-08834Z02	SPRING,SLIDER
	208	44-05901Z01	GEAR,DRIVE
	209	43-05902Z01	BUSH,SLIDER LOW
	210	43-09194Z02	BUSH,SLIDER UP
	211	43-05904Z01	BUSH,SLIDER REAR
	212	43-05905Z01	BUSH,ARM
	213	44-02799Z04	GEAR,WORM
	214	44-11960Z02	GEAR,CLUTCH ASSY

MODEL	Symbol No.	Parts No.	Description
-------	------------	-----------	-------------

	215	03S60820Y18	SCR,MCH 2X3.5 ZNSA
	216	03S60827Y13	SCR,P-L 2X2.2 ZN A
	217	03S94385F13	SCR,NYLOK M2.6X3
	218	04B41345P23	WASH,1.7X5X0.35
	220	04B41345P72	WAS,LOC 2.3X10X0.25
	221	04A10161Y09	WAS,SPR 3.4X7.4X0.06
	222	03-00712Z31	SCR,MCH 2X2 ZBNA
	223	41-12842Z01	SPRING,MONITOR GND L
	224	41-12843Z01	SPRING,MONITOR GND R
	225	41-31507Z01	SPRING,CHAS
	CB400	09-25213Z01	WTB,TCX3400-011187-T
	CB500	09T13515W08	WTB,5569-08A1 -DB
	CH3201	09-07002Z01	ASSY,ANIA-0001-01A
	ET501	09-28037Z01	ASSY,ANID-0191-01A
	ET7601	40-32976Z01	ASSY,HCDSP0A026A
	LCD4001	65-24027Z01	ASSY,CLAA090LC41CW
	M3201	59-02037Z01	MOTOR,FF-180SH-13260
	SK600	09-30387Z01	SKT,GT17HNF-4DP-2-DB
	SW100	40-24933Z02	SW,DETCT SPVT2102-E6
	SW101	40-24933Z01	SW,DETCT SPVT1102-E6

Exploded View (DVD Deck Mechanism) (DV39M12A)

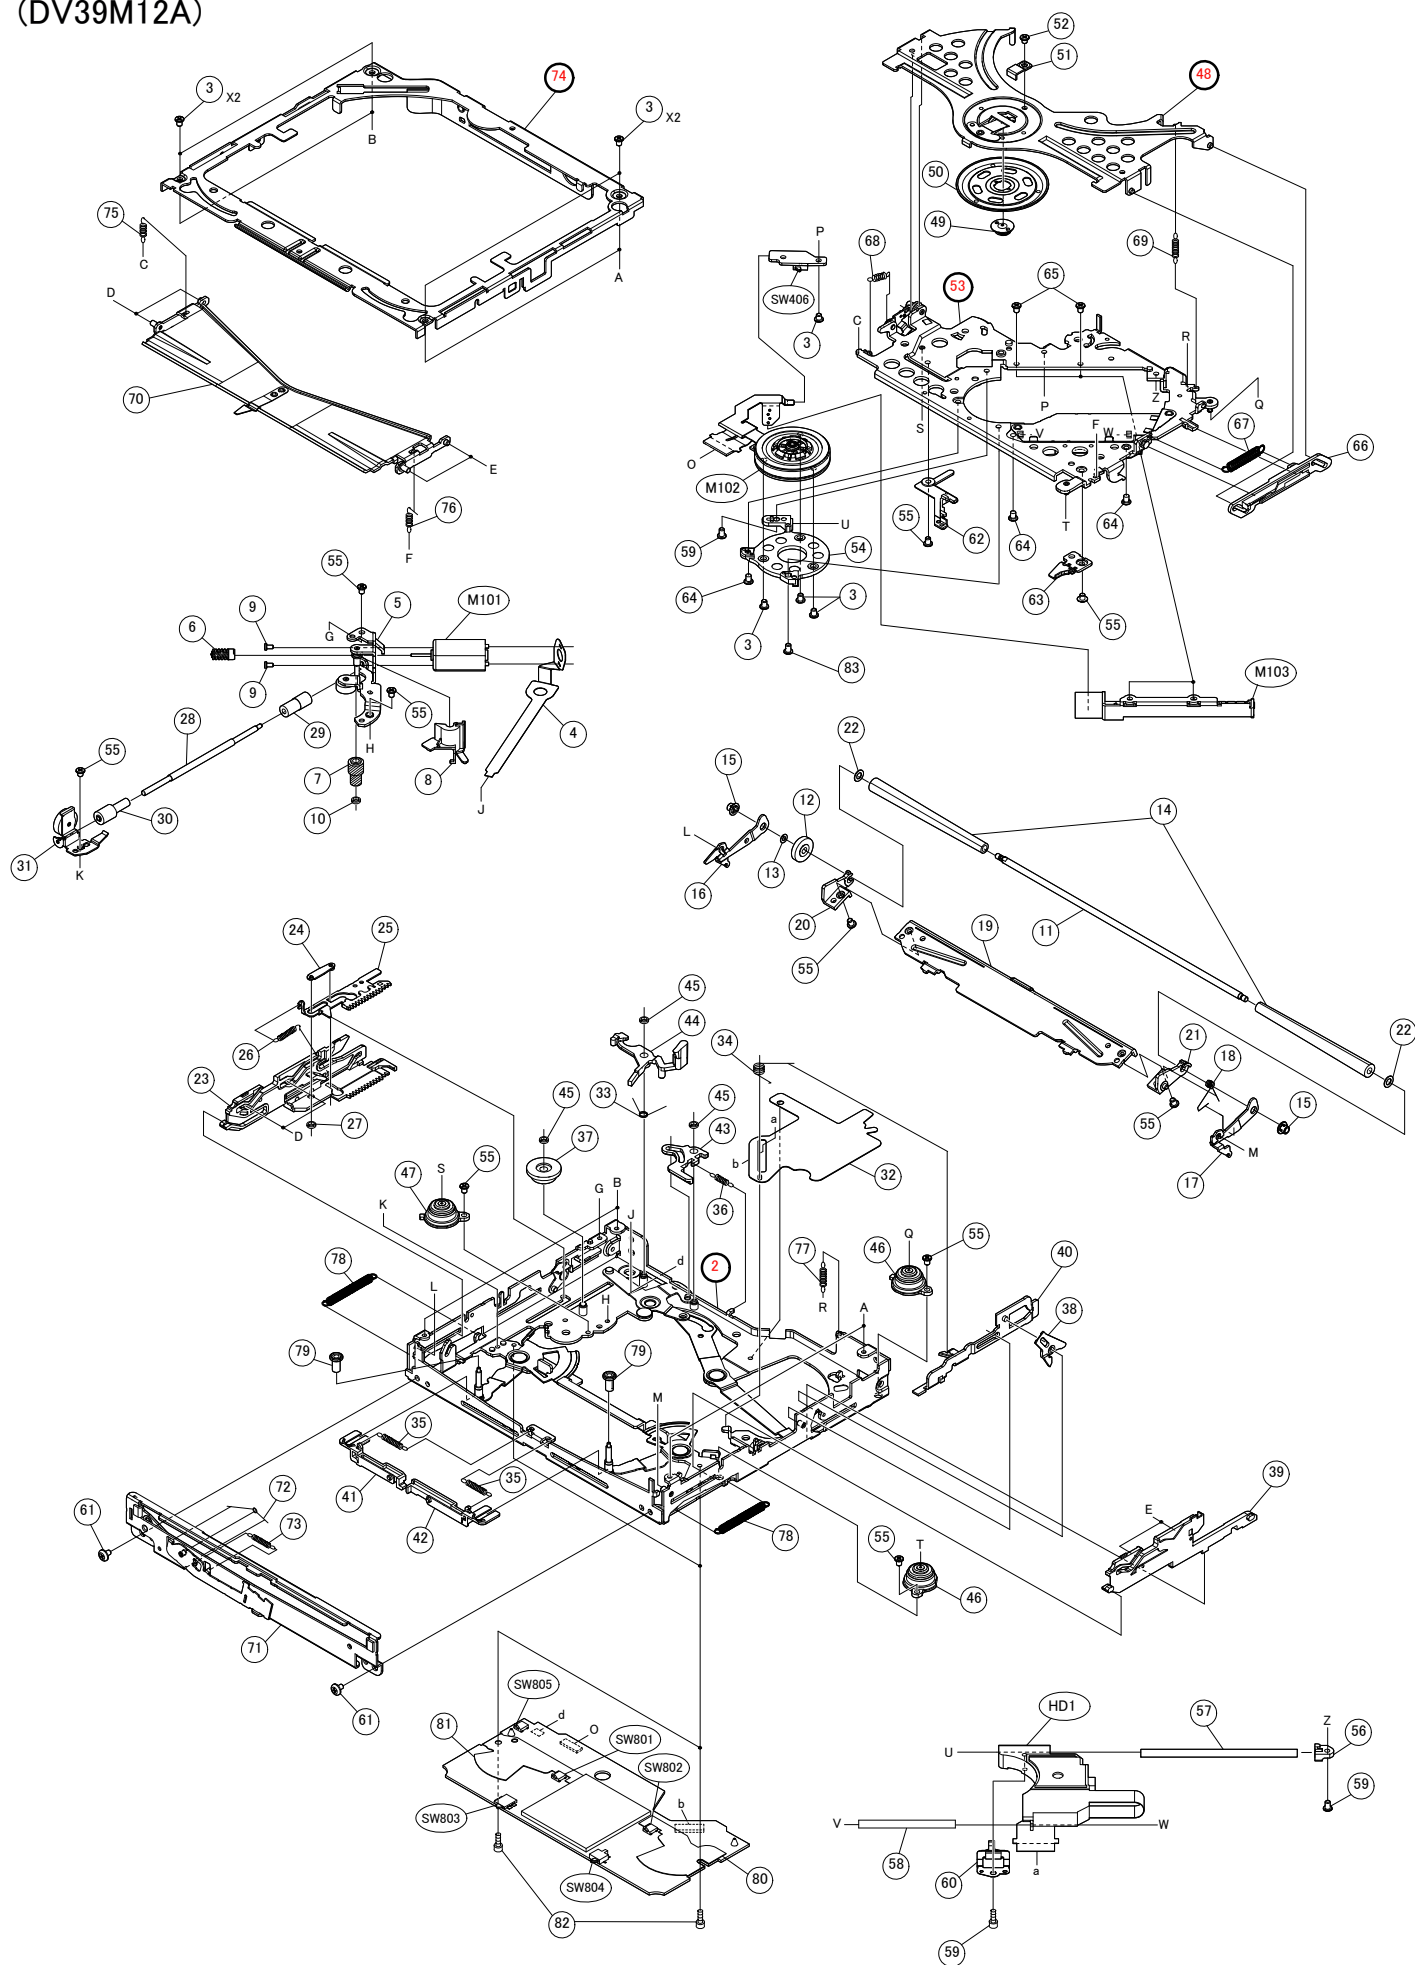

MODEL	Symbol No.	Parts No.	Description
-------	------------	-----------	-------------


2	-----	ASY,RIV CHAS BASE 39	
	3	03S94385F07	SCR,NYLOK M2X2
	4	84-01207Z02	FPC,LOAD
	5	07-13150Z02	ASY,RIV BKT LD(R) 39
	6	44-13654Z01	GEAR,LOAD(A) 39
	7	44A50826Y11	GEAR,LOAD(B)
	8	07-13163Z01	BKT,SHAFT LOAD 39
	9	03S30688Y17	SCR,MCH M1.4X2
	10	04B41345P11	WASH,1.2X2.5X0.25
	11	47-13183Z01	SHAFT,ROLLER 39
	12	44-14875Z01	GEAR,ROLLER-39
	13	04B41345P02	WASH,1.7X3.5X0.25
	14	49-13192Z01	ROLLER,DV-TM 39
	15	43-13164Z01	BUSH,ARM GUIDE 39
	16	45-06962Z01	LEVER,ROLLER(L)3
	17	45-02723Z03	LEVER,ROLLER(R)2
	18	41A60360Y01	SPRING,ARM GUIDE
	19	45-13167Z02	ARM,DISC GUIDE 39
	20	45-13217Z01	ARM,DISC GUIDE-L 39
	21	45-13218Z01	ARM,DISC GUIDE-R 39
	22	04S40075G09	WASH,2.6X4.7X0.25
	23	45-13169Z01	SLIDER,LOCK(L) 39-2
	24	01A51491Y11	ASSY,RIV LEV ASST
	25	44-13170Z01	ASY,SLIDER TRGR 39
	26	41-08516Z01	SPRING,SLD TRIGER
	27	04B41345P15	WASH,1.2X3.5X0.35
	28	47-14068Z01	SHAFT,LOAD-2 39
	29	44A50827Y11	GEAR,LOAD(C)
	30	44-13357Z01	GEAR,LOAD(F) 39
	31	07-01606Z03	ASSY,RIV BKT LD-F-3
	32	14A51712Y01	INSULATOR,FPC
	33	41-14190Z01	SPG,LEV TRGR MAIN 39
	34	41A51396Y02	SPRING,SLD LOCK(R2)
	35	41-02948Z01	SPRING,LEV DISC
	36	41A60343Y01	SPRING,LEV LOCK-RC
	37	44-02002Z03	GEAR,LOAD(E2)
	38	45A50833Y11	LEVER,LINK SLDR(R)
	39	45-13155Z01	SLIDER,LOCK(R1) 39-2
	40	45-05049Z04	SLIDER,LOCK(R2)
	41	45-01051Z04	SLIDER,DISC SW(L)
	42	45-01052Z04	SLIDER,DISC SW(R)
	43	45B50838Y11	LEVER,LOCK(RC)
	44	45-13157Z01	LEVER,TRGR MAIN 39-2
	45	04B41345P14	WASH,LOCK 2.1X4X0.25
	46	75-04666Z07	DAMPER,DZ-G
	47	75-04666Z08	DAMPER,DZ-G
	48	-----	ASSY,RIV ARM CLAMP

MODEL	Symbol No.	Parts No.	Description
-------	------------	-----------	-------------


	49	43-01054Z03	STOPPER,CLAMP
	50	43-01049Z05	TABLE,CLAMPER
	51	07-08317Z02	BKT,STOPPER CLAMP
	52	03S60820Y78	SCR,MCH 2X2 ZNEA
	53	-----	ASY,RIV CHAS PICK 39
	54	07-13171Z01	BKT,SPDL ADJUST 39
	55	03S94385F19	SCR,NYLOK M2X2.5
	56	07-13172Z01	BKT,SHAFT PICK UP 39
	57	47A51347Y01	SHAFT,PICKUP MAIN
	58	47-13173Z01	SHAFT,PICK UP SUB 39
	59	03S94385F09	SCR,NYLOK M2X3 P2
	60	41-13174Z01	SPRING,NUT 39
	61	03S60822Y92	SCR,S-T 2.6X3 ZN A
	62	07A60069Y11	BKT,SLIDER 8CM
	63	15B61279Y11	SPACER,DAMPER
	64	03-13141Z01	SCR,CUS ADJ HEXA 39
	65	03S94385F98	SCR,NYLOK M2X2.5
	66	45B51235Y11	SLIDER,ARM LIFT(R)
	67	41A60336Y01	SPRING,CLAMP-R
	68	41A60335Y01	SPRING,CLAMP-L
	69	41A60337Y01	SPRING,CLAMP-RTL
	70	01A51490Y11	ASSY,RIV GUIDE TOP
	71	07-13147Z02	ASSY,RIV SHUTTER 39
	72	41-09633Z01	SPRING,LEVER LINK
	73	41-09634Z01	SPRING,SHUTTER
	74	-----	CHASSIS,TOP
	75	41A60338Y01	SPRING,DRIVE F-L
	76	41A60339Y01	SPRING,DRIVE F-R
	77	41A60340Y01	SPRING,DRIVE R
	78	41A60344Y01	SPRING,LEV ROLL-L
	79	43-03093Z03	ROLLER,DISC PIN
	80	14-14402Z01	INSULATOR,FPC R DV3
	81	14-14403Z01	INSULATOR,FPC L DV3
	82	03-01599Z13	SCR,MCH 2X2.2NN TRUS
	83	03S94385F18	SCR,NYLOK M2X3.5
	HD1	EP-15524Z01	ED21A57L-E
	M101	59-03798Z02	MOTOR,M1N10RB95GH1
	M102	59-09841Z04	MOTOR,25C030D060
	M103	59T65142Y01	MOTOR,MSDV020L01
	SW406	40-24933Z02	SW,DETCT SPVT2102-E6
	SW801	40T55230Y01	SW,DETCT ESE13V01CE5
	SW802	40T55230Y01	SW,DETCT ESE13V01CE5
	SW803	40T55043Y02	SW,DETCT SPVL12 -E5
	SW804	40-24933Z02	SW,DETCT SPVT2102-E6
	SW805	40T55230Y01	SW,DETCT ESE13V01CE5

Parts Identification

(1) Main unit

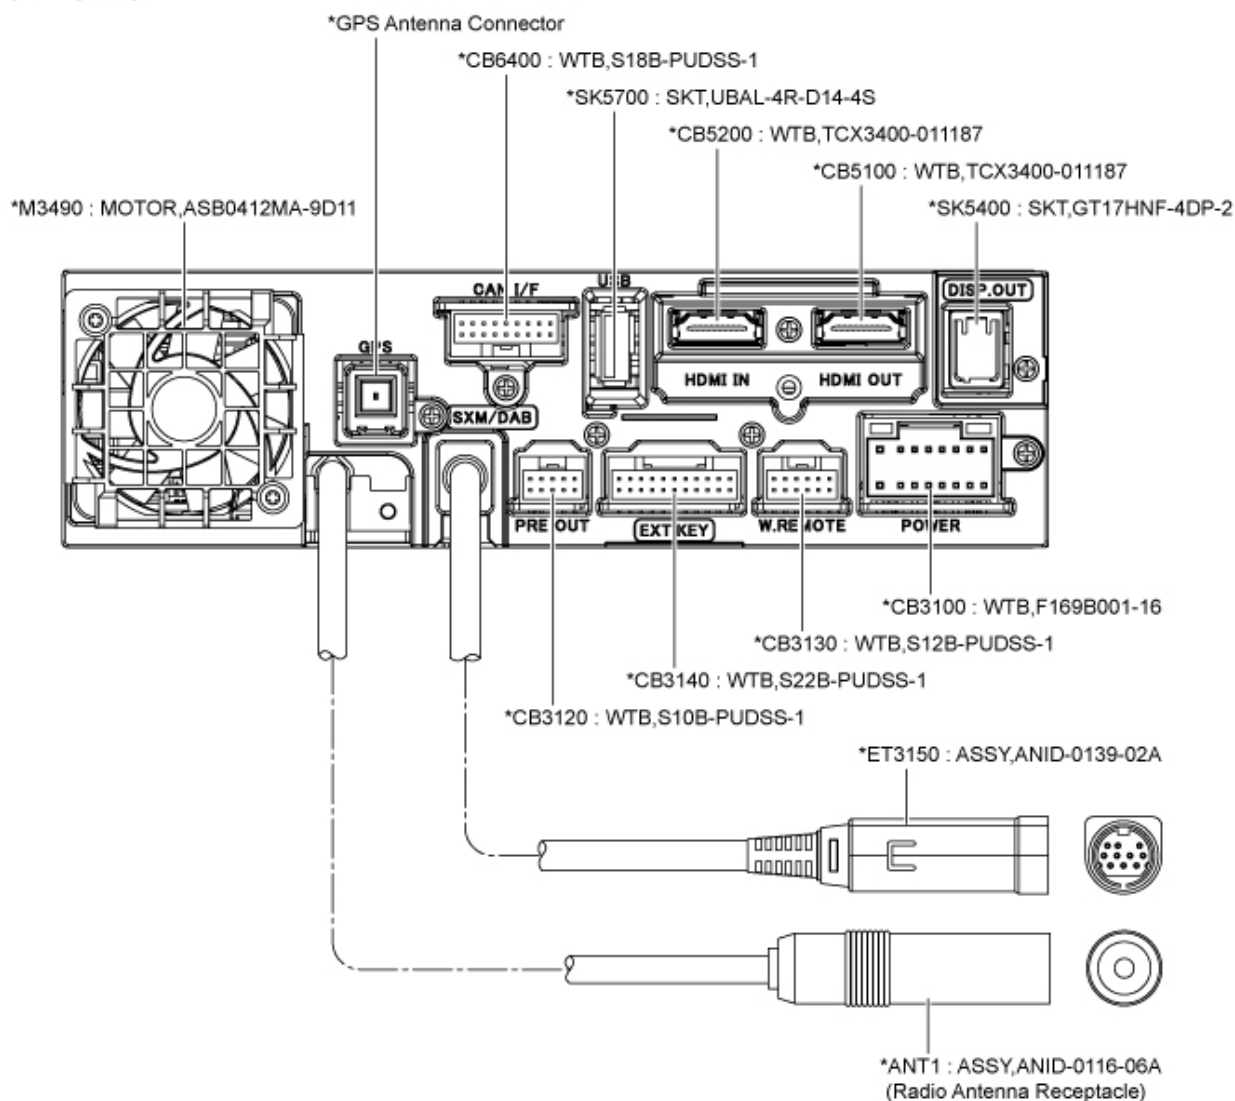


*ET3150 : ASSY,ANID-0139-02A

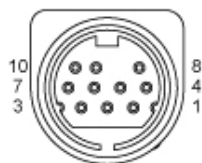


①	AUDIO_L	⑥	SXM_RX
②	SXM_TX	⑦	NC
③	NC	⑧	GND_D
④	AUDIO_R	⑨	POWER
⑤	GND_A	⑩	PWR_EN

*CB3100 : WTB,F169B001-16

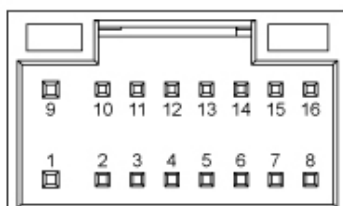

①	GND	⑨	BATT
②	FL-	⑩	RL-
③	FL+	⑪	RL+
④	FR-	⑫	RR-
⑤	FR+	⑬	RR+
⑥	NC (E PARKING)	⑭	PARKING

*CB3120 : WTB,S10B-PUDSS-1




①	GND	⑥	RR
②	SWL	⑦	GND
③	GND	⑧	FL
④	SWR	⑨	FR
⑤	RL	⑩	NC

*CB3130 : WTB,S12B-PUDSS-1




①	ST_REMIN	⑦	REAR_REM_OUT
②	ST_REM5V	⑧	HDMI_ST_IN
③	GND	⑨	NC
④	REAR_REM_IN	⑩	NC
⑤	AUX_REM_OUT	⑪	HFT_MIC+
⑥	HDMI_REM_OUT	⑫	HFT_MIC-

*CB3140 : WTB,S22B-PUDSS-1




①	EXT_LED_8.5V	⑫	REMOCON_EYE
②	LED_GND	⑬	DG_3.3V
③	NC	⑭	EXT_KEY_AD2
④	LED_GND	⑮	EXT_KEY_AD1
⑤	HARD_KEY_PWM	⑯	EXT_KEY_GND
⑥	EXT_DISP_GND	⑰	MIC_GND
⑦	DIMMER	⑱	EXT_MIC+
⑧	EXT_DISP_WDOG	⑲	RESET_SW
⑨	DIMMER_GND	⑳	EXT_MIC-
⑩	EXT_DISP_EN	㉑	ENC_1
⑪	EXT_KEY_AD3	㉒	ENC_2

*CB5100 : WTB,TCX3400-011187




①	TMDS Data2+	⑪	TMDS Clock Shield
②	TMDS Data2 Shield	⑫	TMDS Clock-
③	TMDS Data2-	⑬	NC (CEC)
④	TMDS Data1+	⑭	NC (Utility)
⑤	TMDS Data1 Shield	⑮	SCL
⑥	TMDS Data1-	⑯	SDA
⑦	TMDS Data0+	⑰	DDC/CEC Ground
⑧	TMDS Data0 Shield	⑱	+5V Power
⑨	TMDS Data0-		Hot Plug Detect
⑩	TMDS Clock+		

*CB5200 : WTB,TCX3400-011187




①	TMDS Data2+	⑪	TMDS Clock Shield
②	TMDS Data2 Shield	⑫	TMDS Clock-
③	TMDS Data2-	⑬	NC (CEC)
④	TMDS Data1+	⑭	NC (Utility)

(2) DVD&Display unit

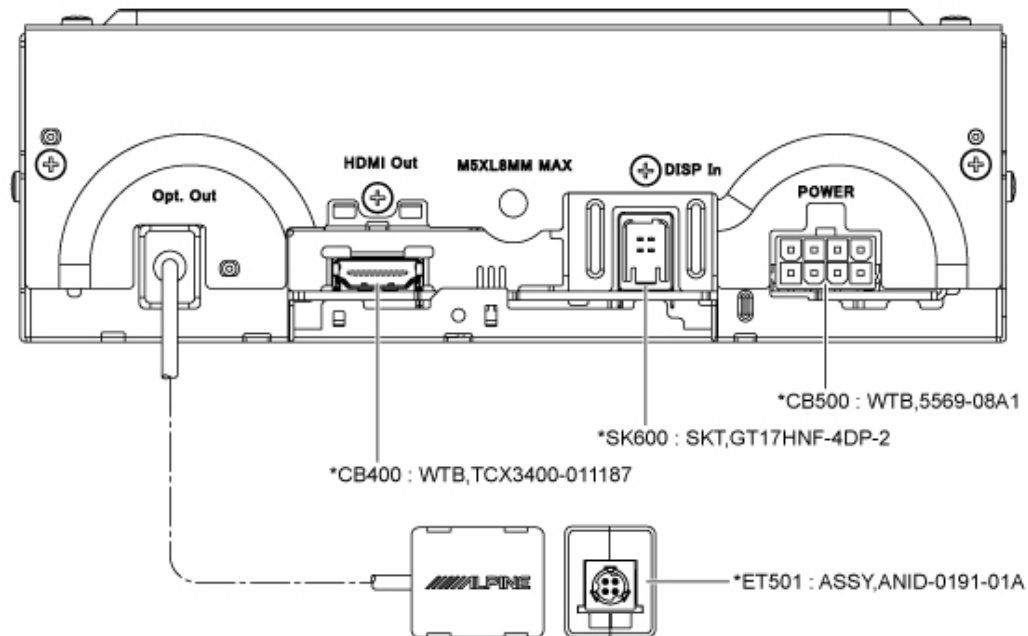


*CB400 : WTB,TCX3400-011187



①	TMDS Data2+	⑪	TMDS Clock Shield
②	TMDS Data2 Shield	⑫	TMDS Clock-
③	TMDS Data2-	⑬	NC (CEC)
④	TMDS Data1+	⑭	NC (Utility)
⑤	TMDS Data1 Shield	⑮	SCL
⑥	TMDS Data1-	⑯	SDA
⑦	TMDS Data0+	⑰	DDC/CEC Ground
⑧	TMDS Data0 Shield	⑱	+5V Power
⑨	TMDS Data0-		Hot Plug Detect
⑩	TMDS Clock+		

*CB500 : WTB,5569-08A1

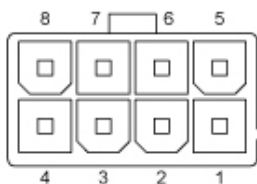


①	REM-OUT	⑤	ACC
②	WDOG	⑥	REM-IN
③	GND	⑦	GND
④	DISP_EN	⑧	BATT

*ET501 : ASSY,ANID-0191-01A








①	NC
②	GND
③	NC
④	D-OUT

*SK600 : SKT,GT17HNF-4DP-2

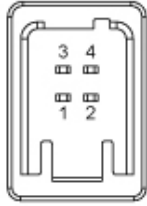





①	FPD-Link3_P
②	Shield GND_P
③	Shield GND_N
④	FPD-Link3_N

Tools Required

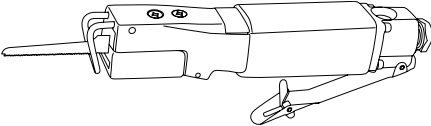Panel Removing Tool	7mm Sockets	#2 Phillips Screwdriver
		
10mm Sockets	Extension	Ratchet
		
	Air Saw	Wire Cutters
		











Accessory List

Installation Kit Parts (G-KTX-X109D-WRA)

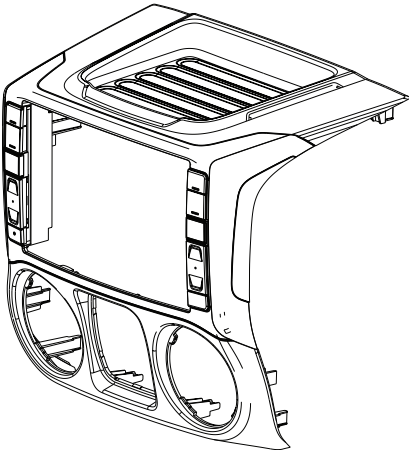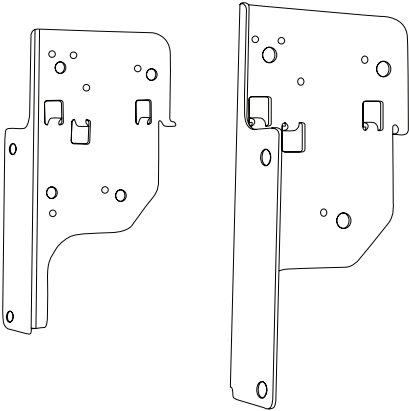
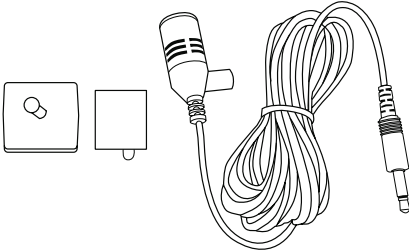
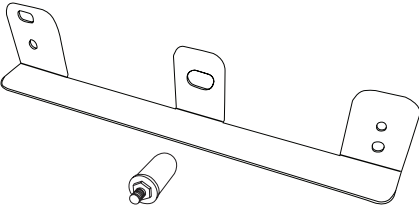
X109-WRA Radio Dash Bezel	Key Harness	Side Mounting Brackets
		
Microphone	GPS Antenna Bracket	Rear Support Bracket
		

Accessory List


Head Unit Box Parts (X109D)

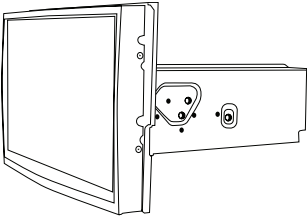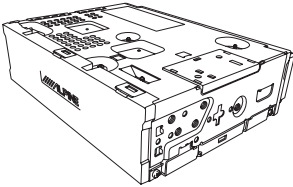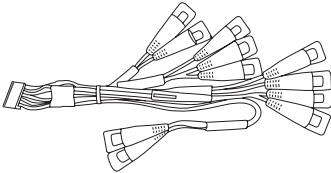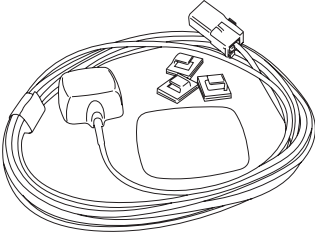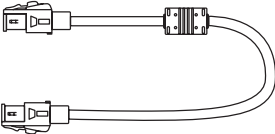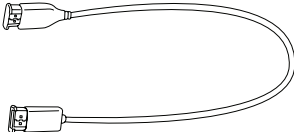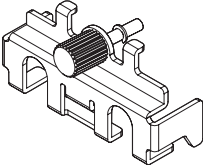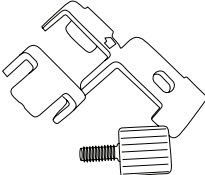X109D DVD/Display Unit	X109D Source Unit	USB Extension Cable
		
AUX/Pre Out Harness	GPS Antenna	Documents
		   Alpine Registration Card QRG Navigation
Direct Camera Adapter	Display Cable	HDMI Cable
		
Source Unit HDMI Bracket	DVD/Display HDMI Bracket	(8) 8mm Screws
		


iDataLink Maestro Box Parts (ALP-MRR2/ALP-HRN-WRA2)

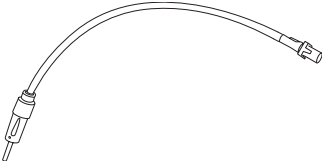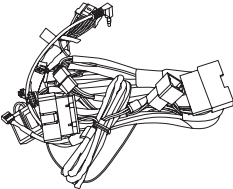Maestro Flashing Cable	Antenna Adapter	iDataLink Maestro Module
		
Main Harness	SAT Radio Antenna Adapter	OEM USB Adapter
		


Exploded-View Diagram

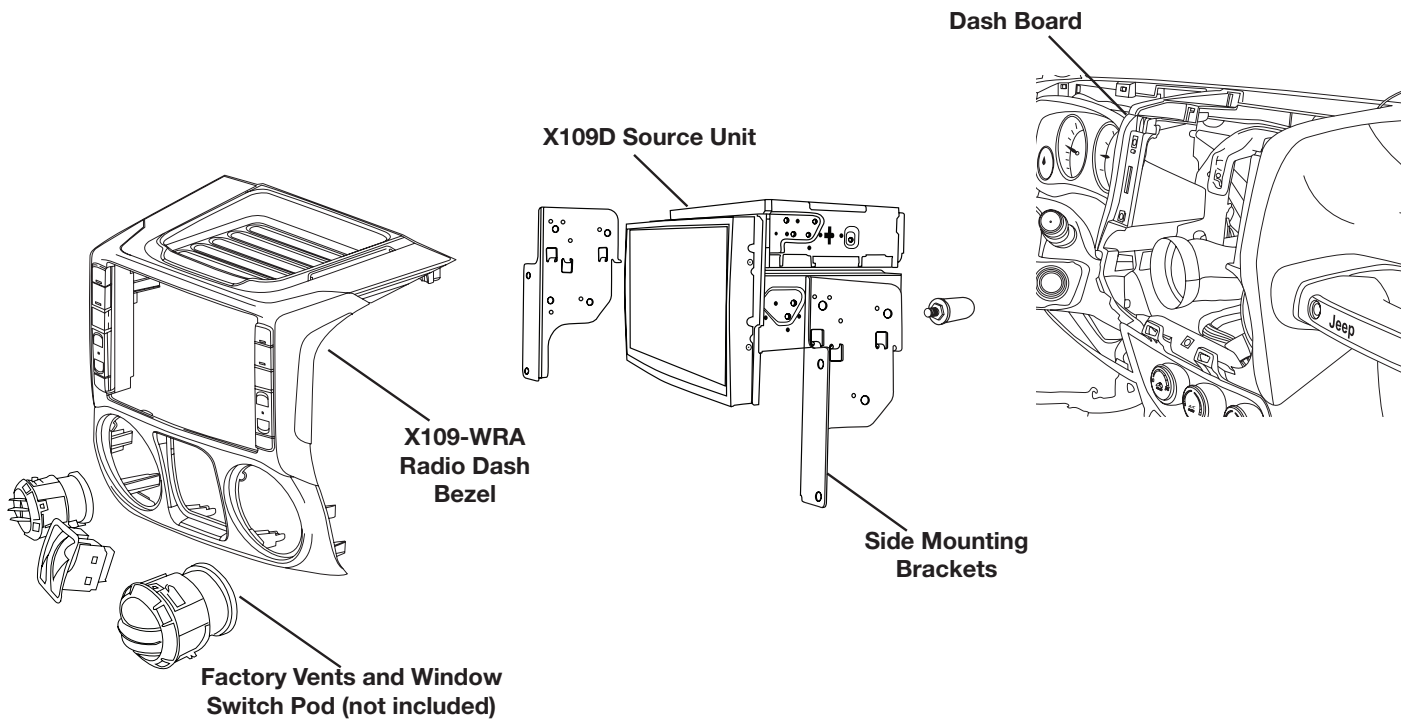

Bezel Wiring Diagram

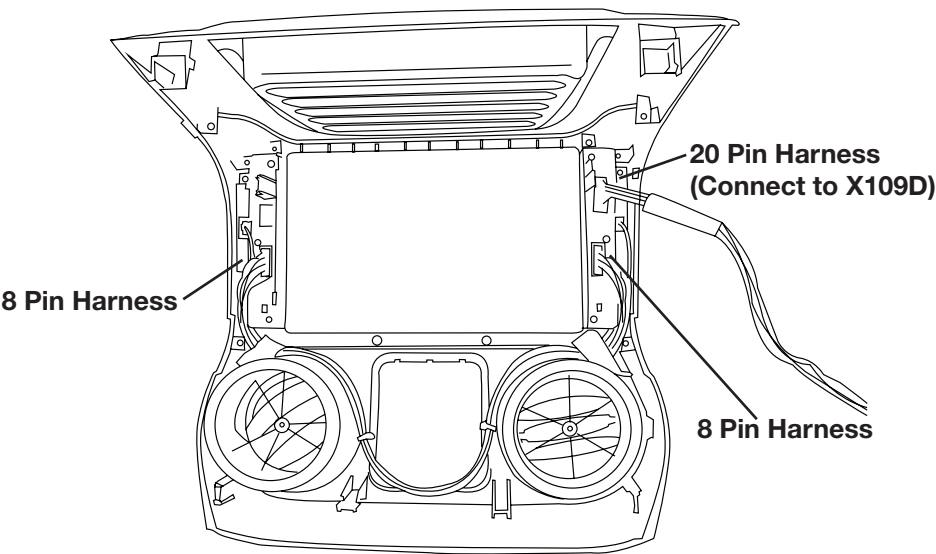

X109-WRA Wiring Diagram

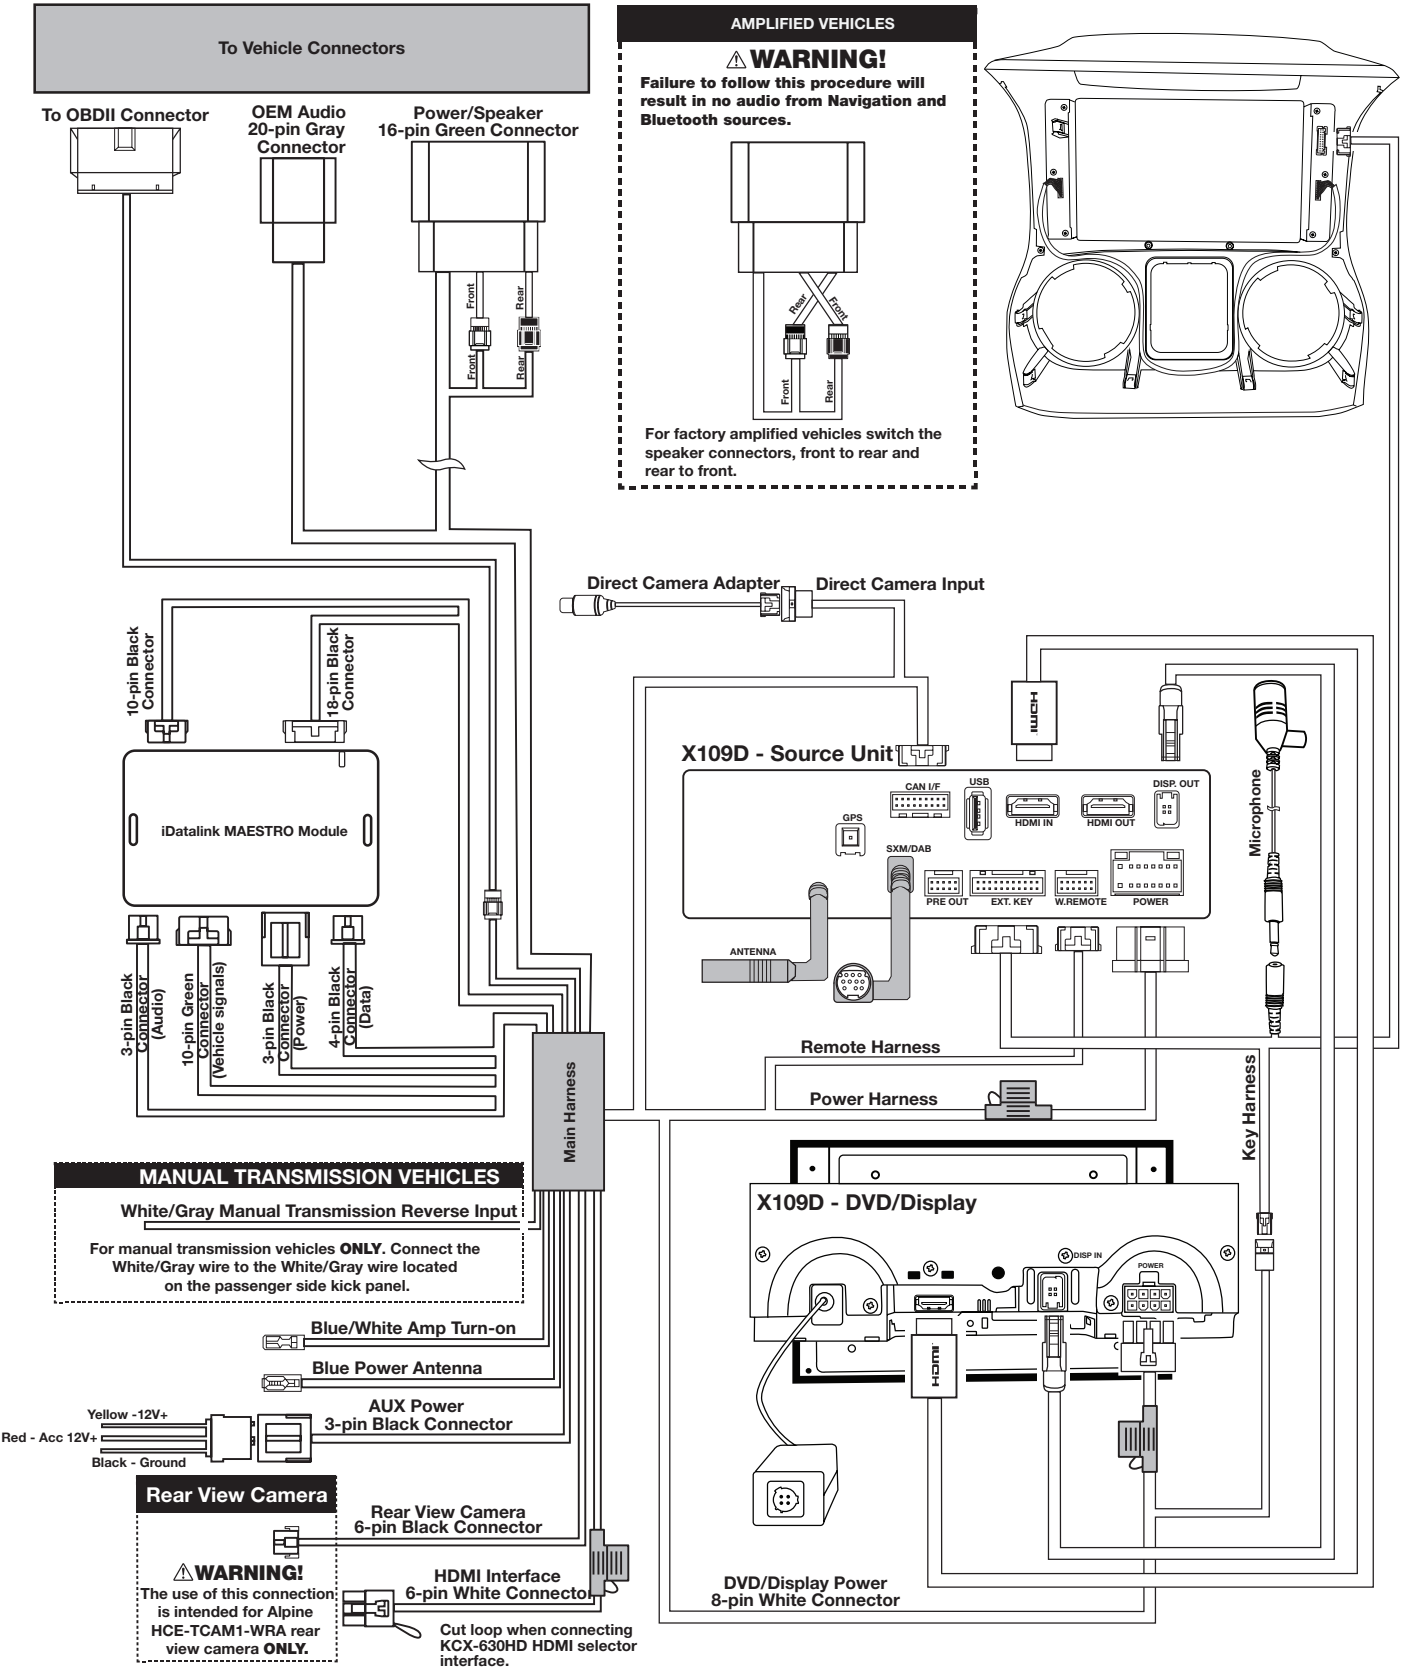

MODEL	Symbol No.	Parts No.	Description
	101	03S60820Y16	SCR,MCH 5X8 ZN A
	102	03S60820Y17	SCR,MCH 5X8 ZN A
	103	07-33126Z01	BKT,HDMI ASSY
	104	07-30181Z01	BKT,HDMI ASSY
	105	09-22649Z02	ASSY,ANID-0179-02A
	106	09-18014Z01	ASSY,ANID-0125-01A
	107	97-30883Z01	ASSY,RUE-5300
	108	09-30388Z04	ASSY,AD0118-04A
	109	09-31165Z04	ASSY,ANID-0208-04A
	110	85-11368Z05	ASSY,YOP-5245AL08
	111	68-30368Z45	C/N-QRG AOAM AOIW

NOTE:The part that has not PART NUMBER will not be supplied.

IC2000(*) :51-23912Z01(MTP,D70F3479AGJAQ-QT)

IC2202(*) :51-18520Z01(MX25L8035EM21-10G-ST)

IC3001(*) :51-30259Z02(S25FL116K0XMFA040-ST)

IC4300(*) :51-27465Z01(S29GL256S90TFI010-ST)

IC4400(*) :51-29432Z01(H26M41103HPR -BT)

IC102(*) :51-12505Z01(MTP,R5F3640MDFB -QT)

IC1002(*) :51-12505Z01(MTP,R5F3640MDFB -QT)

IC7601(*) :51-25191Z01(CY8CTMA616AA-12 -QT)

DV39M12A:IC701(*) :51-03566Z01(S29JL032H70TFI210-ST)

Software is not written in to the part indicated with (*).

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
-----------	-----	-------	------	-----------	------------

AUDIO-P.W.Board(Main-unit)		ANT1	09-17241Z06	ASSY,ANID-0116-06A
AUDIO-P.W.Board(Main-unit)		C2000	08S45231Y17	CAP,CER 22RJ-CH1H-CP
AUDIO-P.W.Board(Main-unit)		C2001	08S45231Y17	CAP,CER 22RJ-CH1H-CP
AUDIO-P.W.Board(Main-unit)		C2004	08S45232Y05	CAP,CER 102K-B1H -CP
AUDIO-P.W.Board(Main-unit)		C2005	08S45232Y05	CAP,CER 102K-B1H -CP
AUDIO-P.W.Board(Main-unit)		C2006	08S45232Y05	CAP,CER 102K-B1H -CP
AUDIO-P.W.Board(Main-unit)		C2008	08S45232Y21	CAP,CER 104K-B1A-CP
AUDIO-P.W.Board(Main-unit)		C2009	08S65669Y03	CAP,CER 224KX7R1H-CP
AUDIO-P.W.Board(Main-unit)		C2010	08S45676W93	CAP,CER 224K-B1A -CP
AUDIO-P.W.Board(Main-unit)		C2011	08S45676W93	CAP,CER 224K-B1A -CP
AUDIO-P.W.Board(Main-unit)		C2012	08S45676W93	CAP,CER 224K-B1A -CP
AUDIO-P.W.Board(Main-unit)		C2013	08S45676W93	CAP,CER 224K-B1A -CP
AUDIO-P.W.Board(Main-unit)		C2014	08S45676W93	CAP,CER 224K-B1A -CP
AUDIO-P.W.Board(Main-unit)		C2015	08-15113Z03	CAP,CER 475KX7R1C-CP
AUDIO-P.W.Board(Main-unit)		C2016	08S45232Y21	CAP,CER 104K-B1A-CP
AUDIO-P.W.Board(Main-unit)		C2017	08S45232Y21	CAP,CER 104K-B1A-CP
AUDIO-P.W.Board(Main-unit)		C2018	08S45232Y21	CAP,CER 104K-B1A-CP
AUDIO-P.W.Board(Main-unit)		C2019	08S45232Y21	CAP,CER 104K-B1A-CP
AUDIO-P.W.Board(Main-unit)		C2020	08S45232Y21	CAP,CER 104K-B1A-CP
AUDIO-P.W.Board(Main-unit)		C2021	08S45232Y21	CAP,CER 104K-B1A-CP
AUDIO-P.W.Board(Main-unit)		C2022	08S45232Y21	CAP,CER 104K-B1A-CP
AUDIO-P.W.Board(Main-unit)		C2023	08S45232Y21	CAP,CER 104K-B1A-CP
AUDIO-P.W.Board(Main-unit)		C2050	08S45231Y31	CAP,CER 331J-CH1H-CP
AUDIO-P.W.Board(Main-unit)		C2180	08-23325Z19	CAP,CER 224KX7R1C-CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)		C2190	08S45232Y21	CAP,CER 104K-B1A-CP	
AUDIO-P.W.Board(Main-unit)		C2192	08S45232Y21	CAP,CER 104K-B1A-CP	
AUDIO-P.W.Board(Main-unit)		C2200	08S65668Y05	CAP,CER 224KX5R1A-CP	
AUDIO-P.W.Board(Main-unit)		C2201	08S65668Y05	CAP,CER 224KX5R1A-CP	
AUDIO-P.W.Board(Main-unit)		C2206	08-23326Z06	CAP,CER 225KX7R0J-CP	
AUDIO-P.W.Board(Main-unit)		C2207	08-23326Z06	CAP,CER 225KX7R0J-CP	
AUDIO-P.W.Board(Main-unit)		C2208	08-15113Z01	CAP,CER 225KX7R1C-CP	
AUDIO-P.W.Board(Main-unit)		C2209	08-15113Z01	CAP,CER 225KX7R1C-CP	
AUDIO-P.W.Board(Main-unit)		C2210	08-15113Z01	CAP,CER 225KX7R1C-CP	
AUDIO-P.W.Board(Main-unit)		C2211	08-15113Z01	CAP,CER 225KX7R1C-CP	
AUDIO-P.W.Board(Main-unit)		C2212	08S45231Y38	CAP,CER 102J-CH1H-CP	
AUDIO-P.W.Board(Main-unit)		C2213	08-23326Z03	CAP,CER 224KX7R1A-CP	
AUDIO-P.W.Board(Main-unit)		C2214	08-23325Z04	CAP,CER 332KX7R1H-CP	
AUDIO-P.W.Board(Main-unit)		C2215	08S45232Y21	CAP,CER 104K-B1A-CP	
AUDIO-P.W.Board(Main-unit)		C2216	08S65669Y05	CAP,CER 106KX7R0J-CP	
AUDIO-P.W.Board(Main-unit)		C2217	08S45232Y21	CAP,CER 104K-B1A-CP	
AUDIO-P.W.Board(Main-unit)		C2218	08S45232Y21	CAP,CER 104K-B1A-CP	
AUDIO-P.W.Board(Main-unit)		C2219	08S45232Y21	CAP,CER 104K-B1A-CP	
AUDIO-P.W.Board(Main-unit)		C2220	08S45232Y21	CAP,CER 104K-B1A-CP	
AUDIO-P.W.Board(Main-unit)		C2221	08S45231Y38	CAP,CER 102J-CH1H-CP	
AUDIO-P.W.Board(Main-unit)		C2222	08-23325Z07	CAP,CER 103KX7R1C-CP	
AUDIO-P.W.Board(Main-unit)		C2223	08S45677W69	CAP,CER 222J-CH1H-CP	
AUDIO-P.W.Board(Main-unit)		C2224	08-23325Z07	CAP,CER 103KX7R1C-CP	
AUDIO-P.W.Board(Main-unit)		C2225	08S45232Y21	CAP,CER 104K-B1A-CP	
AUDIO-P.W.Board(Main-unit)		C2226	08S45232Y21	CAP,CER 104K-B1A-CP	

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)		C2227	08-23325Z04	CAP,CER 332KX7R1H-CP	
AUDIO-P.W.Board(Main-unit)		C2228	08S45232Y21	CAP,CER 104K-B1A-CP	
AUDIO-P.W.Board(Main-unit)		C2229	08S45231Y13	CAP,CER 10RD-CH1H-CP	
AUDIO-P.W.Board(Main-unit)		C2230	08S45232Y21	CAP,CER 104K-B1A-CP	
AUDIO-P.W.Board(Main-unit)		C2231	08S45231Y13	CAP,CER 10RD-CH1H-CP	
AUDIO-P.W.Board(Main-unit)		C2232	08S45231Y38	CAP,CER 102J-CH1H-CP	
AUDIO-P.W.Board(Main-unit)		C2234	08S45232Y21	CAP,CER 104K-B1A-CP	
AUDIO-P.W.Board(Main-unit)		C2235	08S45232Y21	CAP,CER 104K-B1A-CP	
AUDIO-P.W.Board(Main-unit)		C2236	08S45232Y21	CAP,CER 104K-B1A-CP	
AUDIO-P.W.Board(Main-unit)		C2237	08S45232Y21	CAP,CER 104K-B1A-CP	
AUDIO-P.W.Board(Main-unit)		C2238	08S45232Y21	CAP,CER 104K-B1A-CP	
AUDIO-P.W.Board(Main-unit)		C2239	08S65676Y05	CAP,CER 105KX7R1E-CP	
AUDIO-P.W.Board(Main-unit)		C2240	08S65676Y02	CAP,CER 475KX7R1A-CP	
AUDIO-P.W.Board(Main-unit)		C2241	08-23325Z04	CAP,CER 332KX7R1H-CP	
AUDIO-P.W.Board(Main-unit)		C2242	08-23325Z04	CAP,CER 332KX7R1H-CP	
AUDIO-P.W.Board(Main-unit)		C2243	08S45232Y21	CAP,CER 104K-B1A-CP	
AUDIO-P.W.Board(Main-unit)		C2244	08-23325Z04	CAP,CER 332KX7R1H-CP	
AUDIO-P.W.Board(Main-unit)		C2245	08-23325Z04	CAP,CER 332KX7R1H-CP	
AUDIO-P.W.Board(Main-unit)		C2246	08S45232Y21	CAP,CER 104K-B1A-CP	
AUDIO-P.W.Board(Main-unit)		C2247	08S45232Y21	CAP,CER 104K-B1A-CP	
AUDIO-P.W.Board(Main-unit)		C2248	08S45232Y21	CAP,CER 104K-B1A-CP	
AUDIO-P.W.Board(Main-unit)		C2249	08S45232Y21	CAP,CER 104K-B1A-CP	
AUDIO-P.W.Board(Main-unit)		C2250	08S45232Y21	CAP,CER 104K-B1A-CP	
AUDIO-P.W.Board(Main-unit)		C2251	08S45232Y21	CAP,CER 104K-B1A-CP	
AUDIO-P.W.Board(Main-unit)		C2252	08S45232Y21	CAP,CER 104K-B1A-CP	

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)		C2253	08S45232Y21	CAP,CER 104K-B1A-CP	
AUDIO-P.W.Board(Main-unit)		C2254	08-23325Z04	CAP,CER 332KX7R1H-CP	
AUDIO-P.W.Board(Main-unit)		C2255	08-23325Z04	CAP,CER 332KX7R1H-CP	
AUDIO-P.W.Board(Main-unit)		C2256	08S45232Y21	CAP,CER 104K-B1A-CP	
AUDIO-P.W.Board(Main-unit)		C2257	08S45231Y31	CAP,CER 331J-CH1H-CP	
AUDIO-P.W.Board(Main-unit)		C2258	08S45231Y31	CAP,CER 331J-CH1H-CP	
AUDIO-P.W.Board(Main-unit)		C2259	08S45232Y21	CAP,CER 104K-B1A-CP	
AUDIO-P.W.Board(Main-unit)		C2400	08S65669Y03	CAP,CER 224KX7R1H-CP	
AUDIO-P.W.Board(Main-unit)		C2401	08-30898Z01	CAP,TF 155K-1C -CP	
AUDIO-P.W.Board(Main-unit)		C2402	08-30898Z01	CAP,TF 155K-1C -CP	
AUDIO-P.W.Board(Main-unit)		C2403	08-30898Z01	CAP,TF 155K-1C -CP	
AUDIO-P.W.Board(Main-unit)		C2404	08-30898Z01	CAP,TF 155K-1C -CP	
AUDIO-P.W.Board(Main-unit)		C2405	08-15113Z02	CAP,CER 335KX7R1C-CP	
AUDIO-P.W.Board(Main-unit)		C2406	08-15113Z02	CAP,CER 335KX7R1C-CP	
AUDIO-P.W.Board(Main-unit)		C2407	08S65667Y07	CAP,CER 225KX5R1A-CP	
AUDIO-P.W.Board(Main-unit)		C2408	08S65669Y03	CAP,CER 224KX7R1H-CP	
AUDIO-P.W.Board(Main-unit)		C2409	08S65669Y03	CAP,CER 224KX7R1H-CP	
AUDIO-P.W.Board(Main-unit)		C2410	08S65669Y03	CAP,CER 224KX7R1H-CP	
AUDIO-P.W.Board(Main-unit)		C2411	08S65669Y03	CAP,CER 224KX7R1H-CP	
AUDIO-P.W.Board(Main-unit)		C2412	08S65669Y03	CAP,CER 224KX7R1H-CP	
AUDIO-P.W.Board(Main-unit)		C2413	08S65669Y03	CAP,CER 224KX7R1H-CP	
AUDIO-P.W.Board(Main-unit)		C2414	08S65669Y03	CAP,CER 224KX7R1H-CP	
AUDIO-P.W.Board(Main-unit)		C2416	08S65669Y03	CAP,CER 224KX7R1H-CP	
AUDIO-P.W.Board(Main-unit)		C2417	08S65669Y03	CAP,CER 224KX7R1H-CP	
AUDIO-P.W.Board(Main-unit)		C2418	08S45232Y08	CAP,CER 332K-B1H -CP	

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)		C2419	08S45232Y21	CAP,CER 104K-B1A-CP	
AUDIO-P.W.Board(Main-unit)		C2420	08-30898Z01	CAP,TF 155K-1C -CP	
AUDIO-P.W.Board(Main-unit)		C2421	08-30898Z01	CAP,TF 155K-1C -CP	
AUDIO-P.W.Board(Main-unit)		C2422	08-30898Z01	CAP,TF 155K-1C -CP	
AUDIO-P.W.Board(Main-unit)		C2423	08-30898Z01	CAP,TF 155K-1C -CP	
AUDIO-P.W.Board(Main-unit)		C2424	08-15113Z03	CAP,CER 475KX7R1C-CP	
AUDIO-P.W.Board(Main-unit)		C2425	08-15113Z03	CAP,CER 475KX7R1C-CP	
AUDIO-P.W.Board(Main-unit)		C2426	08S45231Y13	CAP,CER 10RD-CH1H-CP	
AUDIO-P.W.Board(Main-unit)		C2427	08S45231Y13	CAP,CER 10RD-CH1H-CP	
AUDIO-P.W.Board(Main-unit)		C2428	08S65670Y03	CAP,CER 335KX5R1E-CP	
AUDIO-P.W.Board(Main-unit)		C2429	08S65670Y03	CAP,CER 335KX5R1E-CP	
AUDIO-P.W.Board(Main-unit)		C2430	08S45231Y13	CAP,CER 10RD-CH1H-CP	
AUDIO-P.W.Board(Main-unit)		C2431	08S45231Y13	CAP,CER 10RD-CH1H-CP	
AUDIO-P.W.Board(Main-unit)		C2432	08S45231Y13	CAP,CER 10RD-CH1H-CP	
AUDIO-P.W.Board(Main-unit)		C2433	08S45231Y13	CAP,CER 10RD-CH1H-CP	
AUDIO-P.W.Board(Main-unit)		C2434	08S65670Y03	CAP,CER 335KX5R1E-CP	
AUDIO-P.W.Board(Main-unit)		C2435	08S65670Y03	CAP,CER 335KX5R1E-CP	
AUDIO-P.W.Board(Main-unit)		C2440	08S65677Y06	CAP,CER 226MX7R1C-CP	
AUDIO-P.W.Board(Main-unit)		C2441	08S65677Y06	CAP,CER 226MX7R1C-CP	
AUDIO-P.W.Board(Main-unit)		C2442	08S65676Y05	CAP,CER 105KX7R1E-CP	
AUDIO-P.W.Board(Main-unit)		C2443	08S65676Y05	CAP,CER 105KX7R1E-CP	
AUDIO-P.W.Board(Main-unit)		C2444	08S65677Y06	CAP,CER 226MX7R1C-CP	
AUDIO-P.W.Board(Main-unit)		C2445	08S45232Y21	CAP,CER 104K-B1A-CP	
AUDIO-P.W.Board(Main-unit)		C2446	08S65669Y03	CAP,CER 224KX7R1H-CP	
AUDIO-P.W.Board(Main-unit)		C2447	08S65676Y10	CAP,CER 106KX7R1C-CP	

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)		C2451	08S45676W85	CAP,CER 104K-B1C -CP	
AUDIO-P.W.Board(Main-unit)		C2460	08S65670Y03	CAP,CER 335KX5R1E-CP	
AUDIO-P.W.Board(Main-unit)		C2461	08S65670Y03	CAP,CER 335KX5R1E-CP	
AUDIO-P.W.Board(Main-unit)		C2462	08S65670Y03	CAP,CER 335KX5R1E-CP	
AUDIO-P.W.Board(Main-unit)		C2463	08S65670Y03	CAP,CER 335KX5R1E-CP	
AUDIO-P.W.Board(Main-unit)		C2470	08S65676Y10	CAP,CER 106KX7R1C-CP	
AUDIO-P.W.Board(Main-unit)		C2500	08-23325Z19	CAP,CER 224KX7R1C-CP	
AUDIO-P.W.Board(Main-unit)		C2501	08S45231Y10	CAP,CER 7R0D-CH1H-CP	
AUDIO-P.W.Board(Main-unit)		C2502	08S45231Y11	CAP,CER 8R0D-CH1H-CP	
AUDIO-P.W.Board(Main-unit)		C2503	08S65669Y05	CAP,CER 106KX7R0J-CP	
AUDIO-P.W.Board(Main-unit)		C2504	08S45232Y21	CAP,CER 104K-B1A-CP	
AUDIO-P.W.Board(Main-unit)		C2505	08-23325Z07	CAP,CER 103KX7R1C-CP	
AUDIO-P.W.Board(Main-unit)		C2506	08S45232Y21	CAP,CER 104K-B1A-CP	
AUDIO-P.W.Board(Main-unit)		C2507	08S45232Y21	CAP,CER 104K-B1A-CP	
AUDIO-P.W.Board(Main-unit)		C2508	08S45232Y21	CAP,CER 104K-B1A-CP	
AUDIO-P.W.Board(Main-unit)		C2509	08-23326Z05	CAP,CER 105KX7R1A-CP	
AUDIO-P.W.Board(Main-unit)		C2510	08S45232Y21	CAP,CER 104K-B1A-CP	
AUDIO-P.W.Board(Main-unit)		C2600	08-30898Z02	CAP,TF 105K-1E -CP	
AUDIO-P.W.Board(Main-unit)		C2601	08-30898Z02	CAP,TF 105K-1E -CP	
AUDIO-P.W.Board(Main-unit)		C2602	08-30898Z02	CAP,TF 105K-1E -CP	
AUDIO-P.W.Board(Main-unit)		C2603	08-30898Z02	CAP,TF 105K-1E -CP	
AUDIO-P.W.Board(Main-unit)		C2604	08-30898Z02	CAP,TF 105K-1E -CP	
AUDIO-P.W.Board(Main-unit)		C2605	08-30898Z02	CAP,TF 105K-1E -CP	
AUDIO-P.W.Board(Main-unit)		C2606	08-30898Z02	CAP,TF 105K-1E -CP	
AUDIO-P.W.Board(Main-unit)		C2607	08S65676Y03	CAP,CER 225KX7R1C-CP	

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)		C2611	08-30898Z02	CAP,TF 105K-1E -CP	
AUDIO-P.W.Board(Main-unit)		C2612	08-23326Z05	CAP,CER 105KX7R1A-CP	
AUDIO-P.W.Board(Main-unit)		C2613	08S65669Y03	CAP,CER 224KX7R1H-CP	
AUDIO-P.W.Board(Main-unit)		C2650	08-23326Z05	CAP,CER 105KX7R1A-CP	
AUDIO-P.W.Board(Main-unit)		C2800	08S45232Y21	CAP,CER 104K-B1A-CP	
AUDIO-P.W.Board(Main-unit)		C2850	08S45231Y17	CAP,CER 22RJ-CH1H-CP	
AUDIO-P.W.Board(Main-unit)		C2851	08S45231Y38	CAP,CER 102J-CH1H-CP	
AUDIO-P.W.Board(Main-unit)		C2852	08S45231Y17	CAP,CER 22RJ-CH1H-CP	
AUDIO-P.W.Board(Main-unit)		C2853	08S45676W93	CAP,CER 224K-B1A -CP	
AUDIO-P.W.Board(Main-unit)		C2854	08S45232Y21	CAP,CER 104K-B1A-CP	
AUDIO-P.W.Board(Main-unit)		C2855	08S65677Y06	CAP,CER 226MX7R1C-CP	
AUDIO-P.W.Board(Main-unit)		C2901	08S65669Y06	CAP,CER 103KX7R1H-CP	
AUDIO-P.W.Board(Main-unit)		C2903	08S45677W16	CAP,CER.15RJ-CH1H-CP	
AUDIO-P.W.Board(Main-unit)		C2905	08S45677W60	CAP,CER 102J-CH1H-CP	
AUDIO-P.W.Board(Main-unit)		C2906	08S45231Y06	CAP,CER 3R0C-CJ1H-CP	
AUDIO-P.W.Board(Main-unit)		C2907	08S45231Y15	CAP,CER 15RJ-CH1H-CP	
AUDIO-P.W.Board(Main-unit)		C2908	08S45231Y21	CAP,CER 47RJ-CH1H-CP	
AUDIO-P.W.Board(Main-unit)		C2912	08S45231Y04	CAP,CER 1R5C-CK1H-CP	
AUDIO-P.W.Board(Main-unit)		C2913	08S45231Y16	CAP,CER 18RJ-CH1H-CP	
AUDIO-P.W.Board(Main-unit)		C2914	08S45231Y38	CAP,CER 102J-CH1H-CP	
AUDIO-P.W.Board(Main-unit)		C2918	08S45231Y24	CAP,CER 82RJ-CH1H-CP	
AUDIO-P.W.Board(Main-unit)		C2950	08S45677W60	CAP,CER 102J-CH1H-CP	
AUDIO-P.W.Board(Main-unit)		C2955	08-19311Z01	CAP,CER 104KX7R1H-CP	
AUDIO-P.W.Board(Main-unit)		C2960	08S45231Y13	CAP,CER 10RD-CH1H-CP	
AUDIO-P.W.Board(Main-unit)		C2962	08S45231Y21	CAP,CER 47RJ-CH1H-CP	

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)		C2963	08S35350Y04	CAP,CER 105K-B1C -CP	
AUDIO-P.W.Board(Main-unit)		C2964	08-19311Z01	CAP,CER 104KX7R1H-CP	
AUDIO-P.W.Board(Main-unit)		C2965	08S45677W60	CAP,CER 102J-CH1H-CP	
AUDIO-P.W.Board(Main-unit)		C2966	08S65676Y08	CAP,CER 106K-X7R1ACP	
AUDIO-P.W.Board(Main-unit)		C3002	08S45231Y14	CAP,CER 12RJ-CH1H-CP	
AUDIO-P.W.Board(Main-unit)		C3017	08S45232Y21	CAP,CER 104K-B1A-CP	
AUDIO-P.W.Board(Main-unit)		C3018	08S45232Y21	CAP,CER 104K-B1A-CP	
AUDIO-P.W.Board(Main-unit)		C3019	08S45232Y21	CAP,CER 104K-B1A-CP	
AUDIO-P.W.Board(Main-unit)		C3020	08S45232Y21	CAP,CER 104K-B1A-CP	
AUDIO-P.W.Board(Main-unit)		C3021	08S45232Y21	CAP,CER 104K-B1A-CP	
AUDIO-P.W.Board(Main-unit)		C3022	08S45232Y21	CAP,CER 104K-B1A-CP	
AUDIO-P.W.Board(Main-unit)		C3026	08S45232Y21	CAP,CER 104K-B1A-CP	
AUDIO-P.W.Board(Main-unit)		C3029	08-23325Z19	CAP,CER 224KX7R1C-CP	
AUDIO-P.W.Board(Main-unit)		C3030	08S65676Y08	CAP,CER 106K-X7R1ACP	
AUDIO-P.W.Board(Main-unit)		C3031	08S65676Y08	CAP,CER 106K-X7R1ACP	
AUDIO-P.W.Board(Main-unit)		C3032	08S65676Y08	CAP,CER 106K-X7R1ACP	
AUDIO-P.W.Board(Main-unit)		C3047	08S45231Y14	CAP,CER 12RJ-CH1H-CP	
AUDIO-P.W.Board(Main-unit)		C3101	08S45539Y01	CAP,CER 102KX7R2J-CP	
AUDIO-P.W.Board(Main-unit)		C3103	08-26091Z01	CAP,CER 102KX7R2J-CP	
AUDIO-P.W.Board(Main-unit)		C3104	08-26091Z05	CAP,CER 103KX7R2J-CP	
AUDIO-P.W.Board(Main-unit)		C3130	08S45231Y38	CAP,CER 102J-CH1H-CP	
AUDIO-P.W.Board(Main-unit)		C3131	08S45231Y38	CAP,CER 102J-CH1H-CP	
AUDIO-P.W.Board(Main-unit)		C3132	08S45231Y38	CAP,CER 102J-CH1H-CP	
AUDIO-P.W.Board(Main-unit)		C3133	08S45231Y38	CAP,CER 102J-CH1H-CP	
AUDIO-P.W.Board(Main-unit)		C3134	08S45231Y38	CAP,CER 102J-CH1H-CP	

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)		C3135	08S45231Y38	CAP,CER 102J-CH1H-CP	
AUDIO-P.W.Board(Main-unit)		C3136	08S45231Y38	CAP,CER 102J-CH1H-CP	
AUDIO-P.W.Board(Main-unit)		C3140	08S35349Y08	CAP,CER 102K-B1H -CP	
AUDIO-P.W.Board(Main-unit)		C3142	08S35349Y08	CAP,CER 102K-B1H -CP	
AUDIO-P.W.Board(Main-unit)		C3143	08S35349Y08	CAP,CER 102K-B1H -CP	
AUDIO-P.W.Board(Main-unit)		C3146	08-19311Z03	CAP,CER 103KX7R1H-CP	
AUDIO-P.W.Board(Main-unit)		C3147	08S35349Y08	CAP,CER 102K-B1H -CP	
AUDIO-P.W.Board(Main-unit)		C3148	08S35349Y08	CAP,CER 102K-B1H -CP	
AUDIO-P.W.Board(Main-unit)		C3150	08S45677W44	CAP,CER.221J-CH1H-CP	
AUDIO-P.W.Board(Main-unit)		C3151	08S45677W44	CAP,CER.221J-CH1H-CP	
AUDIO-P.W.Board(Main-unit)		C3152	08S45677W44	CAP,CER.221J-CH1H-CP	
AUDIO-P.W.Board(Main-unit)		C3153	08S65669Y03	CAP,CER 224KX7R1H-CP	
AUDIO-P.W.Board(Main-unit)		C3155	08S35349Y08	CAP,CER 102K-B1H -CP	
AUDIO-P.W.Board(Main-unit)		C3156	08S35349Y08	CAP,CER 102K-B1H -CP	
AUDIO-P.W.Board(Main-unit)		C3159	08S35349Y08	CAP,CER 102K-B1H -CP	
AUDIO-P.W.Board(Main-unit)		C3160	08S35349Y08	CAP,CER 102K-B1H -CP	
AUDIO-P.W.Board(Main-unit)		C3161	08-19311Z03	CAP,CER 103KX7R1H-CP	
AUDIO-P.W.Board(Main-unit)		C3163	08S35349Y08	CAP,CER 102K-B1H -CP	
AUDIO-P.W.Board(Main-unit)		C3203	08S45231Y25	CAP,CER 101J-CH1H-CP	
AUDIO-P.W.Board(Main-unit)		C3204	08S45231Y38	CAP,CER 102J-CH1H-CP	
AUDIO-P.W.Board(Main-unit)		C3205	08-19311Z01	CAP,CER 104KX7R1H-CP	
AUDIO-P.W.Board(Main-unit)		C3206	08-19311Z01	CAP,CER 104KX7R1H-CP	
AUDIO-P.W.Board(Main-unit)		C3210	08S65676Y10	CAP,CER 106KX7R1C-CP	
AUDIO-P.W.Board(Main-unit)		C3221	08S65669Y03	CAP,CER 224KX7R1H-CP	
AUDIO-P.W.Board(Main-unit)		C3222	08-19311Z03	CAP,CER 103KX7R1H-CP	

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)		C3223	08S65669Y03	CAP,CER 224KX7R1H-CP	
AUDIO-P.W.Board(Main-unit)		C3224	08S65669Y03	CAP,CER 224KX7R1H-CP	
AUDIO-P.W.Board(Main-unit)		C3225	08S65669Y03	CAP,CER 224KX7R1H-CP	
AUDIO-P.W.Board(Main-unit)		C3226	08S65669Y03	CAP,CER 224KX7R1H-CP	
AUDIO-P.W.Board(Main-unit)		C3227	08S65669Y03	CAP,CER 224KX7R1H-CP	
AUDIO-P.W.Board(Main-unit)		C3230	08S65669Y03	CAP,CER 224KX7R1H-CP	
AUDIO-P.W.Board(Main-unit)		C3233	08-15113Z01	CAP,CER 225KX7R1C-CP	
AUDIO-P.W.Board(Main-unit)		C3236	08S45231Y31	CAP,CER 331J-CH1H-CP	
AUDIO-P.W.Board(Main-unit)		C3238	08S65669Y03	CAP,CER 224KX7R1H-CP	
AUDIO-P.W.Board(Main-unit)		C3239	08-23326Z08	CAP,CER 473KX7R1H-CP	
AUDIO-P.W.Board(Main-unit)		C3240	08S45231Y31	CAP,CER 331J-CH1H-CP	
AUDIO-P.W.Board(Main-unit)		C3350	08-19311Z01	CAP,CER 104KX7R1H-CP	
AUDIO-P.W.Board(Main-unit)		C3351	08-19311Z01	CAP,CER 104KX7R1H-CP	
AUDIO-P.W.Board(Main-unit)		C3352	08S45232Y21	CAP,CER 104K-B1A-CP	
AUDIO-P.W.Board(Main-unit)		C3353	08S45232Y21	CAP,CER 104K-B1A-CP	
AUDIO-P.W.Board(Main-unit)		C3354	08S45232Y21	CAP,CER 104K-B1A-CP	
AUDIO-P.W.Board(Main-unit)		C3400	08S65669Y03	CAP,CER 224KX7R1H-CP	
AUDIO-P.W.Board(Main-unit)		C3401	08S65669Y03	CAP,CER 224KX7R1H-CP	
AUDIO-P.W.Board(Main-unit)		C3402	08S65669Y03	CAP,CER 224KX7R1H-CP	
AUDIO-P.W.Board(Main-unit)		C3403	08S65669Y03	CAP,CER 224KX7R1H-CP	
AUDIO-P.W.Board(Main-unit)		C3404	08-19311Z03	CAP,CER 103KX7R1H-CP	
AUDIO-P.W.Board(Main-unit)		C3405	08-19311Z01	CAP,CER 104KX7R1H-CP	
AUDIO-P.W.Board(Main-unit)		C3406	08-19311Z01	CAP,CER 104KX7R1H-CP	
AUDIO-P.W.Board(Main-unit)		C3407	08-23326Z05	CAP,CER 105KX7R1A-CP	
AUDIO-P.W.Board(Main-unit)		C3408	08S65669Y03	CAP,CER 224KX7R1H-CP	

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)		C3410	08S65677Y06	CAP,CER 226MX7R1C-CP	
AUDIO-P.W.Board(Main-unit)		C3411	08S65677Y06	CAP,CER 226MX7R1C-CP	
AUDIO-P.W.Board(Main-unit)		C3412	08S65677Y06	CAP,CER 226MX7R1C-CP	
AUDIO-P.W.Board(Main-unit)		C3430	08S65670Y08	CAP,CER 225KX5R1H-CP	
AUDIO-P.W.Board(Main-unit)		C3431	08S65669Y03	CAP,CER 224KX7R1H-CP	
AUDIO-P.W.Board(Main-unit)		C3432	08S65669Y03	CAP,CER 224KX7R1H-CP	
AUDIO-P.W.Board(Main-unit)		C3440	08S65669Y03	CAP,CER 224KX7R1H-CP	
AUDIO-P.W.Board(Main-unit)		C3441	08S65676Y08	CAP,CER 106K-X7R1ACP	
AUDIO-P.W.Board(Main-unit)		C3442	08S65669Y03	CAP,CER 224KX7R1H-CP	
AUDIO-P.W.Board(Main-unit)		C3460	08S65669Y03	CAP,CER 224KX7R1H-CP	
AUDIO-P.W.Board(Main-unit)		C3461	08-15113Z01	CAP,CER 225KX7R1C-CP	
AUDIO-P.W.Board(Main-unit)		C3462	08S65669Y05	CAP,CER 106KX7R0J-CP	
AUDIO-P.W.Board(Main-unit)		C3464	08S65669Y03	CAP,CER 224KX7R1H-CP	
AUDIO-P.W.Board(Main-unit)		C3470	08S65669Y03	CAP,CER 224KX7R1H-CP	
AUDIO-P.W.Board(Main-unit)		C3471	08S65669Y03	CAP,CER 224KX7R1H-CP	
AUDIO-P.W.Board(Main-unit)		C3480	08S65669Y03	CAP,CER 224KX7R1H-CP	
AUDIO-P.W.Board(Main-unit)		C3481	08S65676Y08	CAP,CER 106K-X7R1ACP	
AUDIO-P.W.Board(Main-unit)		C3482	08S65669Y03	CAP,CER 224KX7R1H-CP	
AUDIO-P.W.Board(Main-unit)		C3490	08S65676Y02	CAP,CER 475KX7R1A-CP	
AUDIO-P.W.Board(Main-unit)		C3492	08S45232Y21	CAP,CER 104K-B1A-CP	
AUDIO-P.W.Board(Main-unit)		C3493	08S45232Y21	CAP,CER 104K-B1A-CP	
AUDIO-P.W.Board(Main-unit)		C3494	08S45232Y21	CAP,CER 104K-B1A-CP	
AUDIO-P.W.Board(Main-unit)		C3495	08S45232Y21	CAP,CER 104K-B1A-CP	
AUDIO-P.W.Board(Main-unit)		C3496	08-15113Z03	CAP,CER 475KX7R1C-CP	
AUDIO-P.W.Board(Main-unit)		C3499	08-23326Z05	CAP,CER 105KX7R1A-CP	

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)		C3502	08-15113Z01	CAP,CER 225KX7R1C-CP	
AUDIO-P.W.Board(Main-unit)		C3510	08-23325Z07	CAP,CER 103KX7R1C-CP	
AUDIO-P.W.Board(Main-unit)		C3512	08S65669Y03	CAP,CER 224KX7R1H-CP	
AUDIO-P.W.Board(Main-unit)		C3550	08S45232Y21	CAP,CER 104K-B1A-CP	
AUDIO-P.W.Board(Main-unit)		C3551	08S45232Y21	CAP,CER 104K-B1A-CP	
AUDIO-P.W.Board(Main-unit)		C3552	08S45232Y21	CAP,CER 104K-B1A-CP	
AUDIO-P.W.Board(Main-unit)		C3602	08-23325Z04	CAP,CER 332KX7R1H-CP	
AUDIO-P.W.Board(Main-unit)		C3603	08S65669Y03	CAP,CER 224KX7R1H-CP	
AUDIO-P.W.Board(Main-unit)		C3604	08S65677Y06	CAP,CER 226MX7R1C-CP	
AUDIO-P.W.Board(Main-unit)		C3605	08S65676Y10	CAP,CER 106KX7R1C-CP	
AUDIO-P.W.Board(Main-unit)		C3607	08S45231Y25	CAP,CER 101J-CH1H-CP	
AUDIO-P.W.Board(Main-unit)		C3608	08S65676Y09	CAP,CER 475KX7R1H-CP	
AUDIO-P.W.Board(Main-unit)		C3610	08-23325Z04	CAP,CER 332KX7R1H-CP	
AUDIO-P.W.Board(Main-unit)		C3611	08S65669Y03	CAP,CER 224KX7R1H-CP	
AUDIO-P.W.Board(Main-unit)		C3612	08S65669Y03	CAP,CER 224KX7R1H-CP	
AUDIO-P.W.Board(Main-unit)		C3613	08S65677Y06	CAP,CER 226MX7R1C-CP	
AUDIO-P.W.Board(Main-unit)		C3615	08S45231Y25	CAP,CER 101J-CH1H-CP	
AUDIO-P.W.Board(Main-unit)		C3616	08S65676Y09	CAP,CER 475KX7R1H-CP	
AUDIO-P.W.Board(Main-unit)		C3617	08S65669Y03	CAP,CER 224KX7R1H-CP	
AUDIO-P.W.Board(Main-unit)		CB2000	09-14451Z06	FFC,502790-3091 -ED	
AUDIO-P.W.Board(Main-unit)		CB3100	09T35473Y16	WTB,F169B001-16 -DB	
AUDIO-P.W.Board(Main-unit)		CB3120	09-25106Z01	WTB,S10B-PUDSS-1 -DB	
AUDIO-P.W.Board(Main-unit)		CB3130	09-25106Z02	WTB,S12B-PUDSS-1 -DB	
AUDIO-P.W.Board(Main-unit)		CB3140	09-25106Z07	WTB,S22B-PUDSS-1 -DB	
AUDIO-P.W.Board(Main-unit)		CB3150	09-16961Z09	WTB,A1257WV0-10PS-ED	

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)		CB3490	09T85454W03	WTB,53398-0371 -E6	
AUDIO-P.W.Board(Main-unit)		CH3300	09-29653Z01	BTB,FX23-100S-0.5S-T	
AUDIO-P.W.Board(Main-unit)		D2460	48-17624Z01	DIO,DA3J102D0L -CP	
AUDIO-P.W.Board(Main-unit)		D2461	48-17624Z01	DIO,DA3J102D0L -CP	
AUDIO-P.W.Board(Main-unit)		D2462	48-17624Z01	DIO,DA3J102D0L -CP	
AUDIO-P.W.Board(Main-unit)		D2650	48-05965Z01	DIO,1SS361-L -CP	
AUDIO-P.W.Board(Main-unit)		D2901	48-17547Z01	DIO,DA3J101F0L -CP	
AUDIO-P.W.Board(Main-unit)		D3200	48-05965Z01	DIO,1SS361-L -CP	
AUDIO-P.W.Board(Main-unit)		D3201	48-05164Z01	DIO,1SS352-TPH3 -CP	
AUDIO-P.W.Board(Main-unit)		D3202	48-05965Z01	DIO,1SS361-L -CP	
AUDIO-P.W.Board(Main-unit)		D3204	48-05965Z01	DIO,1SS361-L -CP	
AUDIO-P.W.Board(Main-unit)		D3205	48-05164Z01	DIO,1SS352-TPH3 -CP	
AUDIO-P.W.Board(Main-unit)		D3400	48T75527Y01	DIO,1SR154-400 -E1	
AUDIO-P.W.Board(Main-unit)		E2404	23-31100Z12	CAP,MAK 101-1C -E6	
AUDIO-P.W.Board(Main-unit)		E2405	23-31100Z07	CAP,MAK 101-1A -E6	
AUDIO-P.W.Board(Main-unit)		E2420	23-31100Z10	CAP,MAK 22R-1C -E3	
AUDIO-P.W.Board(Main-unit)		E2421	23-31100Z10	CAP,MAK 22R-1C -E3	
AUDIO-P.W.Board(Main-unit)		E2440	23S75244Y19	CAP,ELY 101-1C -E6	
AUDIO-P.W.Board(Main-unit)		E2441	23S75244Y17	CAP,ELY 22R-1C -E2	
AUDIO-P.W.Board(Main-unit)		E2442	23S75244Y17	CAP,ELY 22R-1C -E2	
AUDIO-P.W.Board(Main-unit)		E2460	23-31100Z26	CAP,MAK 3R3-1H -E2	
AUDIO-P.W.Board(Main-unit)		E2461	23-31100Z26	CAP,MAK 3R3-1H -E2	
AUDIO-P.W.Board(Main-unit)		E2600	23-31100Z17	CAP,MAK 10R-1E -E3	
AUDIO-P.W.Board(Main-unit)		E2601	23-31100Z17	CAP,MAK 10R-1E -E3	
AUDIO-P.W.Board(Main-unit)		E2650	23S75244Y19	CAP,ELY 101-1C -E6	

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)		E3100	23-19876Z04	CAP,CST 472-1E +	
AUDIO-P.W.Board(Main-unit)		E3200	23-31100Z17	CAP,MAK 10R-1E -E3	
AUDIO-P.W.Board(Main-unit)		E3300	23S75244Y31	CAP,ELY 471-1E -EA	
AUDIO-P.W.Board(Main-unit)		E3301	23S75244Y22	CAP,ELY 471-1C -EA	
AUDIO-P.W.Board(Main-unit)		E3400	23S75244Y19	CAP,ELY 101-1C -E6	
AUDIO-P.W.Board(Main-unit)		E3404	23S75244Y24	CAP,ELY 10R-1E -E2	
AUDIO-P.W.Board(Main-unit)		E3405	23S75244Y25	CAP,ELY 22R-1E -E3	
AUDIO-P.W.Board(Main-unit)		E3406	23S75244Y14	CAP,ELY 681-1A -EA	
AUDIO-P.W.Board(Main-unit)		E3430	23S75244Y25	CAP,ELY 22R-1E -E3	
AUDIO-P.W.Board(Main-unit)		E3440	23S75244Y01	CAP,ELY 22R-0J -E2	
AUDIO-P.W.Board(Main-unit)		E3470	23S75244Y01	CAP,ELY 22R-0J -E2	
AUDIO-P.W.Board(Main-unit)		E3471	23-31100Z11	CAP,MAK 47R-1C -E6	
AUDIO-P.W.Board(Main-unit)		E3480	23S75244Y01	CAP,ELY 22R-0J -E2	
AUDIO-P.W.Board(Main-unit)		E3510	23S75244Y01	CAP,ELY 22R-0J -E2	
AUDIO-P.W.Board(Main-unit)		E3511	23-31100Z06	CAP,MAK 33R-1A -E3	
AUDIO-P.W.Board(Main-unit)		E3600	23S75244Y05	CAP,ELY 331-0J -E6	
AUDIO-P.W.Board(Main-unit)		E3601	23S75244Y24	CAP,ELY 10R-1E -E2	
AUDIO-P.W.Board(Main-unit)		E3602	23S75244Y24	CAP,ELY 10R-1E -E2	
AUDIO-P.W.Board(Main-unit)		IC2000	83-32412Z43	16LIMO_BU_Audio_IC2000_Software	
AUDIO-P.W.Board(Main-unit)		IC2000	51-23912Z01	MTP,D70F3479AGJ AQ-QT	
AUDIO-P.W.Board(Main-unit)		IC2001	51T15185Y03	TC7SH08FU,LJ -CP	
AUDIO-P.W.Board(Main-unit)		IC2180	51-24805Z01	BR24T16F-WGE2 -SE2	
AUDIO-P.W.Board(Main-unit)		IC2190	51-04315Z22	BU4229G-TR -CP	
AUDIO-P.W.Board(Main-unit)		IC2200	51-30382Z02	SAF7754HV/N205 -QT	
AUDIO-P.W.Board(Main-unit)		IC2201	51-29083Z01	SN74AHCU04QPWRG4-SE2	

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)		IC2202	83-31628Z34	V1.100_LIMO_DiRaNA3	
AUDIO-P.W.Board(Main-unit)		IC2202	51-18520Z01	MX25L8035EM21-10G-ST	
AUDIO-P.W.Board(Main-unit)		IC2203	51-29083Z01	SN74AHCU04QPWRG4-SE2	
AUDIO-P.W.Board(Main-unit)		IC2400	51-16740Z01	BD3461FS-E2 -SE6	
AUDIO-P.W.Board(Main-unit)		IC2420	51T25576W07	NJM4580V-TE2 -SE2	
AUDIO-P.W.Board(Main-unit)		IC2421	51T25576W07	NJM4580V-TE2 -SE2	
AUDIO-P.W.Board(Main-unit)		IC2422	51T25576W07	NJM4580V-TE2 -SE2	
AUDIO-P.W.Board(Main-unit)		IC2440	51-20907Z01	TPS60402QDBVRQ1 -CP	
AUDIO-P.W.Board(Main-unit)		IC2441	51-16845Z04	TAR5S50U-TE85L -CP	
AUDIO-P.W.Board(Main-unit)		IC2501	51-27602Z01	AK7736AVQ -QE6	
AUDIO-P.W.Board(Main-unit)		IC2600	51-30375Z01	STPA003OD-4WX -ZS	
AUDIO-P.W.Board(Main-unit)		IC2850	51T25141Y03	TC7SHU04FU,LJ -CP	
AUDIO-P.W.Board(Main-unit)		IC2851	51-27637Z01	SI4749-C10-AMR -LE2	
AUDIO-P.W.Board(Main-unit)		IC3000	51-29945Z01	SAF3600EL/V1040A-BEA	
AUDIO-P.W.Board(Main-unit)		IC3001	83-31628Z35	VC0004.004R1_LIMOUS_Saturn	
AUDIO-P.W.Board(Main-unit)		IC3001	51-30259Z02	S25FL116K0XMFA040-ST	
AUDIO-P.W.Board(Main-unit)		IC3150	51T15194Y03	74VHCT08AFT-EL -SE2	
AUDIO-P.W.Board(Main-unit)		IC3200	51T65016Y26	S-80937CNMC-T2 -CP	
AUDIO-P.W.Board(Main-unit)		IC3206	51-02032Z02	TC7SET02FU,LJ -CP	
AUDIO-P.W.Board(Main-unit)		IC3207	51T15614Y01	TC74HC4051AFT-EL-SE5	
AUDIO-P.W.Board(Main-unit)		IC3208	51T15614Y01	TC74HC4051AFT-EL-SE5	
AUDIO-P.W.Board(Main-unit)		IC3209	51T35360Y01	TC7WH08FU-L -SE1	
AUDIO-P.W.Board(Main-unit)		IC3210	51T15194Y03	74VHCT08AFT-EL -SE2	
AUDIO-P.W.Board(Main-unit)		IC3211	51T15647Y01	NJM4558V-TE2 -SE2	
AUDIO-P.W.Board(Main-unit)		IC3400	51-13711Z02	TB2920AHQ -ZS	

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)		IC3430	51-28614Z01	BD00FC0EEFJ-ME2 -SE2	
AUDIO-P.W.Board(Main-unit)		IC3440	51-23593Z02	BD00IC0WEFJ-ME2 -SE2	
AUDIO-P.W.Board(Main-unit)		IC3460	51-23593Z02	BD00IC0WEFJ-ME2 -SE2	
AUDIO-P.W.Board(Main-unit)		IC3470	51-23593Z05	BD00IA5EEFJ-ME2 -SE2	
AUDIO-P.W.Board(Main-unit)		IC3480	51-23593Z02	BD00IC0WEFJ-ME2 -SE2	
AUDIO-P.W.Board(Main-unit)		IC3510	51-07902Z02	NJM2871BF33-TE1 -CP	
AUDIO-P.W.Board(Main-unit)		IC3601	51-28779Z02	BD90640EFJ-CE2 -SE2	
AUDIO-P.W.Board(Main-unit)		IC3602	51-28779Z01	BD90620EFJ-CE2 -SE2	
AUDIO-P.W.Board(Main-unit)		L2200	24-24463Z01	FBI,BLM15HD601SH1-CP	
AUDIO-P.W.Board(Main-unit)		L2201	24-24463Z01	FBI,BLM15HD601SH1-CP	
AUDIO-P.W.Board(Main-unit)		L2202	24-24463Z01	FBI,BLM15HD601SH1-CP	
AUDIO-P.W.Board(Main-unit)		L2203	24-17733Z06	IND,NLCV32T 47RK -CP	
AUDIO-P.W.Board(Main-unit)		L2204	24-17733Z06	IND,NLCV32T 47RK -CP	
AUDIO-P.W.Board(Main-unit)		L2205	24-24463Z01	FBI,BLM15HD601SH1-CP	
AUDIO-P.W.Board(Main-unit)		L2206	24-24463Z01	FBI,BLM15HD601SH1-CP	
AUDIO-P.W.Board(Main-unit)		L2210	24-24463Z01	FBI,BLM15HD601SH1-CP	
AUDIO-P.W.Board(Main-unit)		L2440	24T95202W25	IND,CDRH64B 102M -E6	
AUDIO-P.W.Board(Main-unit)		L2441	24T95202W25	IND,CDRH64B 102M -E6	
AUDIO-P.W.Board(Main-unit)		L2501	24-06212Z05	FBI,BLM15BB121SH1-CP	
AUDIO-P.W.Board(Main-unit)		L2502	24-06212Z05	FBI,BLM15BB121SH1-CP	
AUDIO-P.W.Board(Main-unit)		L2503	24-06212Z05	FBI,BLM15BB121SH1-CP	
AUDIO-P.W.Board(Main-unit)		L2850	24-06212Z01	FBI,BLM15AG601SH1-CP	
AUDIO-P.W.Board(Main-unit)		L2851	24-09036Z10	IND,LQW18AN R18J -CP	
AUDIO-P.W.Board(Main-unit)		L2852	24-06212Z01	FBI,BLM15AG601SH1-CP	
AUDIO-P.W.Board(Main-unit)		L2902	24-30185Z23	IND,LQW2BAS R22J -CP	

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)		L2904	24T25164Y12	IND,FSLM2520 R82J-CP	
AUDIO-P.W.Board(Main-unit)		L2905	24-09036Z11	IND,LQW18AN R27J -CP	
AUDIO-P.W.Board(Main-unit)		L2906	24T25164Y19	IND,FSLM2520 3R3J-CP	
AUDIO-P.W.Board(Main-unit)		L2950	24T25164Y21	IND,FSLM2520 4R7J-CP	
AUDIO-P.W.Board(Main-unit)		L2951	24T25164Y05	IND,FSLM2520 R22J-CP	
AUDIO-P.W.Board(Main-unit)		L2952	24T15278Y03	IND,BM-7A -DB	
AUDIO-P.W.Board(Main-unit)		L2953	24T95456W27	FBI,BLM18PG181SH1-CP	
AUDIO-P.W.Board(Main-unit)		L3150	24-06212Z08	FBI,BLM15BD102SH1-CP	
AUDIO-P.W.Board(Main-unit)		L3490	24T95456W27	FBI,BLM18PG181SH1-CP	
AUDIO-P.W.Board(Main-unit)		L3492	24T95456W27	FBI,BLM18PG181SH1-CP	
AUDIO-P.W.Board(Main-unit)		L3493	24T95456W27	FBI,BLM18PG181SH1-CP	
AUDIO-P.W.Board(Main-unit)		L3494	24T95456W27	FBI,BLM18PG181SH1-CP	
AUDIO-P.W.Board(Main-unit)		L3495	24-28869Z04	FBI,BKP1608HS121 -CP	
AUDIO-P.W.Board(Main-unit)		L3601	24-17581Z02	IND,NRS5020T 1R5N-E2	
AUDIO-P.W.Board(Main-unit)		L3602	24-08610Z03	IND,DS106C2 10RM -EA	
AUDIO-P.W.Board(Main-unit)		L3603	24-22371Z01	IND,NRS4018T 2R2M-E2	
AUDIO-P.W.Board(Main-unit)		L3604	24-08610Z05	IND,DS106C2 33RM -EA	
AUDIO-P.W.Board(Main-unit)		PS3101	48-16589Z01	POLY,SW SMDC075F -E2	
AUDIO-P.W.Board(Main-unit)		PS3150	48-16589Z03	POLY,SW SMDC150F -E2	
AUDIO-P.W.Board(Main-unit)		Q2000	48T25737Y02	TR,UMD3N-TR -CP	
AUDIO-P.W.Board(Main-unit)		Q2001	48T25737Y02	TR,UMD3N-TR -CP	
AUDIO-P.W.Board(Main-unit)		Q2460	48T75180Y04	TR,IMH23-T110 -CP	
AUDIO-P.W.Board(Main-unit)		Q2461	48T75180Y04	TR,IMH23-T110 -CP	
AUDIO-P.W.Board(Main-unit)		Q2462	48T75180Y04	TR,IMH23-T110 -CP	
AUDIO-P.W.Board(Main-unit)		Q2650	48T25737Y02	TR,UMD3N-TR -CP	

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)		Q2651	48-20093Z01	TR,DMC561010R -CP	
AUDIO-P.W.Board(Main-unit)		Q2652	48T25737Y01	TR,UMD2N-TR -CP	
AUDIO-P.W.Board(Main-unit)		Q2950	48-29875Z01	TR,2SC5084-O -CP	
AUDIO-P.W.Board(Main-unit)		Q3200	48-12999Z01	TR,LTA114EUBFS8-TLCP	
AUDIO-P.W.Board(Main-unit)		Q3202	48-13000Z05	TR,LTC124EUBFS8-TLCP	
AUDIO-P.W.Board(Main-unit)		Q3203	48T25737Y01	TR,UMD2N-TR -CP	
AUDIO-P.W.Board(Main-unit)		Q3204	48-13000Z01	TR,LTC114EUBFS8-TLCP	
AUDIO-P.W.Board(Main-unit)		Q3205	48T25737Y01	TR,UMD2N-TR -CP	
AUDIO-P.W.Board(Main-unit)		Q3207	48-13000Z01	TR,LTC114EUBFS8-TLCP	
AUDIO-P.W.Board(Main-unit)		Q3208	48-17548Z01	TR,DSA500100L -CP	
AUDIO-P.W.Board(Main-unit)		R2001	06S15616Y23	RES,RK JUMPER1/16-CP	
AUDIO-P.W.Board(Main-unit)		R2005	06S15615Y25	RES,RK 101J 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2006	06S15615Y25	RES,RK 101J 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2007	06S15615Y25	RES,RK 101J 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2008	06S65415Y30	RES,RK 272F 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2009	06S65415Y30	RES,RK 272F 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2010	06S65415Y41	RES,RK 223F 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2011	06S65415Y29	RES,RK 222F 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2012	06S65415Y29	RES,RK 222F 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2014	06S15615Y25	RES,RK 101J 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2015	06S15616Y23	RES,RK JUMPER1/16-CP	
AUDIO-P.W.Board(Main-unit)		R2016	06S65415Y37	RES,RK 103F 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2017	06S65415Y37	RES,RK 103F 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2018	06S65415Y37	RES,RK 103F 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2019	06S65415Y41	RES,RK 223F 1/16 -CP	

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)		R2023	06S65415Y37	RES,RK 103F 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2024	06S15616Y23	RES,RK JUMPER1/16-CP	
AUDIO-P.W.Board(Main-unit)		R2025	06S65415Y41	RES,RK 223F 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2026	06S65415Y41	RES,RK 223F 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2027	06S65415Y41	RES,RK 223F 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2028	06S65415Y41	RES,RK 223F 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2030	06S65415Y37	RES,RK 103F 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2031	06S15616Y23	RES,RK JUMPER1/16-CP	
AUDIO-P.W.Board(Main-unit)		R2032	06S65415Y37	RES,RK 103F 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2033	06S65415Y41	RES,RK 223F 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2034	06S65415Y41	RES,RK 223F 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2036	06S65415Y41	RES,RK 223F 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2039	06S65415Y41	RES,RK 223F 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2040	06S65415Y41	RES,RK 223F 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2042	06S65415Y37	RES,RK 103F 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2043	06S65415Y37	RES,RK 103F 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2044	06S65415Y37	RES,RK 103F 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2045	06S65415Y37	RES,RK 103F 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2046	06S65415Y29	RES,RK 222F 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2047	06S65415Y37	RES,RK 103F 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2048	06S65415Y37	RES,RK 103F 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2060	06S15615Y25	RES,RK 101J 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2061	06S15615Y49	RES,RK 102J 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2062	06S45674W33	RES,RK 101J 1/10 -CP	
AUDIO-P.W.Board(Main-unit)		R2063	06S15615Y25	RES,RK 101J 1/16 -CP	

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)		R2064	06S15615Y41	RES,RK 471J 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2070	06S15615Y25	RES,RK 101J 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2071	06S15615Y25	RES,RK 101J 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2072	06S15615Y25	RES,RK 101J 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2073	06S15615Y25	RES,RK 101J 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2074	06S15615Y25	RES,RK 101J 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2076	06S15615Y25	RES,RK 101J 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2077	06S15615Y25	RES,RK 101J 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2078	06S15615Y25	RES,RK 101J 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2083	06S15615Y25	RES,RK 101J 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2089	06S15615Y25	RES,RK 101J 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2092	06S15615Y25	RES,RK 101J 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2093	06S15615Y25	RES,RK 101J 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2100	06S15615Y25	RES,RK 101J 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2101	06S15615Y25	RES,RK 101J 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2103	06S15615Y49	RES,RK 102J 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2104	06S15615Y49	RES,RK 102J 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2105	06S15615Y49	RES,RK 102J 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2108	06S15616Y23	RES,RK JUMPER1/16-CP	
AUDIO-P.W.Board(Main-unit)		R2109	06S15616Y23	RES,RK JUMPER1/16-CP	
AUDIO-P.W.Board(Main-unit)		R2110	06S15616Y23	RES,RK JUMPER1/16-CP	
AUDIO-P.W.Board(Main-unit)		R2111	06S15616Y23	RES,RK JUMPER1/16-CP	
AUDIO-P.W.Board(Main-unit)		R2170	06S15616Y23	RES,RK JUMPER1/16-CP	
AUDIO-P.W.Board(Main-unit)		R2171	06S15616Y23	RES,RK JUMPER1/16-CP	
AUDIO-P.W.Board(Main-unit)		R2180	06S65415Y33	RES,RK 472F 1/16 -CP	

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)		R2181	06S65415Y33	RES,RK 472F 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2190	06S45674W81	RES,RK 103J 1/10 -CP	
AUDIO-P.W.Board(Main-unit)		R2191	06S45674W57	RES,RK 102J 1/10 -CP	
AUDIO-P.W.Board(Main-unit)		R2192	06S15615Y25	RES,RK 101J 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2204	06S65415Y37	RES,RK 103F 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2207	06S65415Y37	RES,RK 103F 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2211	06S65415Y35	RES,RK 682F 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2212	06S65415Y35	RES,RK 682F 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2213	06S65415Y35	RES,RK 682F 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2214	06S65415Y35	RES,RK 682F 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2215	06S15616Y23	RES,RK JUMPER1/16-CP	
AUDIO-P.W.Board(Main-unit)		R2216	06S15616Y23	RES,RK JUMPER1/16-CP	
AUDIO-P.W.Board(Main-unit)		R2217	06S15616Y23	RES,RK JUMPER1/16-CP	
AUDIO-P.W.Board(Main-unit)		R2218	06S15616Y23	RES,RK JUMPER1/16-CP	
AUDIO-P.W.Board(Main-unit)		R2219	06S15616Y23	RES,RK JUMPER1/16-CP	
AUDIO-P.W.Board(Main-unit)		R2220	06S15616Y23	RES,RK JUMPER1/16-CP	
AUDIO-P.W.Board(Main-unit)		R2221	06S15616Y23	RES,RK JUMPER1/16-CP	
AUDIO-P.W.Board(Main-unit)		R2222	06S15616Y23	RES,RK JUMPER1/16-CP	
AUDIO-P.W.Board(Main-unit)		R2224	06S15615Y25	RES,RK 101J 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2225	06S15615Y25	RES,RK 101J 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2226	06S15616Y23	RES,RK JUMPER1/16-CP	
AUDIO-P.W.Board(Main-unit)		R2227	06S15615Y25	RES,RK 101J 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2228	06S15616Y23	RES,RK JUMPER1/16-CP	
AUDIO-P.W.Board(Main-unit)		R2229	06S15616Y23	RES,RK JUMPER1/16-CP	
AUDIO-P.W.Board(Main-unit)		R2230	06S15616Y23	RES,RK JUMPER1/16-CP	

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)		R2231	06S15616Y23	RES,RK JUMPER1/16-CP	
AUDIO-P.W.Board(Main-unit)		R2232	06S15616Y23	RES,RK JUMPER1/16-CP	
AUDIO-P.W.Board(Main-unit)		R2233	06S15616Y23	RES,RK JUMPER1/16-CP	
AUDIO-P.W.Board(Main-unit)		R2249	06S65415Y37	RES,RK 103F 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2250	06S15616Y23	RES,RK JUMPER1/16-CP	
AUDIO-P.W.Board(Main-unit)		R2251	06S15616Y23	RES,RK JUMPER1/16-CP	
AUDIO-P.W.Board(Main-unit)		R2253	06S15615Y09	RES,RK 22RJ 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2254	06S15615Y09	RES,RK 22RJ 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2255	06S15616Y23	RES,RK JUMPER1/16-CP	
AUDIO-P.W.Board(Main-unit)		R2256	06S15615Y09	RES,RK 22RJ 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2258	06S65415Y37	RES,RK 103F 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2260	06S15616Y23	RES,RK JUMPER1/16-CP	
AUDIO-P.W.Board(Main-unit)		R2262	06S15616Y23	RES,RK JUMPER1/16-CP	
AUDIO-P.W.Board(Main-unit)		R2263	06S15616Y23	RES,RK JUMPER1/16-CP	
AUDIO-P.W.Board(Main-unit)		R2265	06S65415Y35	RES,RK 682F 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2268	06S65415Y35	RES,RK 682F 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2270	06S15615Y25	RES,RK 101J 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2273	06S15616Y23	RES,RK JUMPER1/16-CP	
AUDIO-P.W.Board(Main-unit)		R2274	06S15616Y23	RES,RK JUMPER1/16-CP	
AUDIO-P.W.Board(Main-unit)		R2400	06S65415Y34	RES,RK 562F 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2401	06-25919Z12	RES,RK 623F 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2402	06S15615Y57	RES,RK 222J 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2404	06S65415Y35	RES,RK 682F 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2405	06S65415Y48	RES,RK 823F 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2406	06S65415Y35	RES,RK 682F 1/16 -CP	

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)		R2407	06S65415Y48	RES,RK 823F 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2408	06S15616Y23	RES,RK JUMPER1/16-CP	
AUDIO-P.W.Board(Main-unit)		R2409	06S15616Y23	RES,RK JUMPER1/16-CP	
AUDIO-P.W.Board(Main-unit)		R2420	06S65415Y49	RES,RK 104F 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2421	06S15593Y81	RES,RK 223F 1/10 -CP	
AUDIO-P.W.Board(Main-unit)		R2422	06S15593Y81	RES,RK 223F 1/10 -CP	
AUDIO-P.W.Board(Main-unit)		R2423	06S65415Y49	RES,RK 104F 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2424	06S15593Y81	RES,RK 223F 1/10 -CP	
AUDIO-P.W.Board(Main-unit)		R2425	06S15593Y81	RES,RK 223F 1/10 -CP	
AUDIO-P.W.Board(Main-unit)		R2426	06S65415Y49	RES,RK 104F 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2427	06S15593Y81	RES,RK 223F 1/10 -CP	
AUDIO-P.W.Board(Main-unit)		R2428	06S15593Y81	RES,RK 223F 1/10 -CP	
AUDIO-P.W.Board(Main-unit)		R2429	06S65415Y49	RES,RK 104F 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2430	06S65415Y49	RES,RK 104F 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2431	06S15593Y81	RES,RK 223F 1/10 -CP	
AUDIO-P.W.Board(Main-unit)		R2432	06S15593Y81	RES,RK 223F 1/10 -CP	
AUDIO-P.W.Board(Main-unit)		R2433	06S15593Y81	RES,RK 223F 1/10 -CP	
AUDIO-P.W.Board(Main-unit)		R2434	06S15593Y81	RES,RK 223F 1/10 -CP	
AUDIO-P.W.Board(Main-unit)		R2435	06S65415Y49	RES,RK 104F 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2436	06S15593Y81	RES,RK 223F 1/10 -CP	
AUDIO-P.W.Board(Main-unit)		R2437	06S15593Y81	RES,RK 223F 1/10 -CP	
AUDIO-P.W.Board(Main-unit)		R2460	06S15615Y94	RES,RK 753J 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2461	06S15615Y94	RES,RK 753J 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2462	06S15615Y94	RES,RK 753J 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2463	06S15615Y94	RES,RK 753J 1/16 -CP	

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)		R2464	06S15615Y94	RES,RK 753J 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2465	06S15615Y94	RES,RK 753J 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2466	06S70072F29	RES,CP .101-J-1/4-CP	
AUDIO-P.W.Board(Main-unit)		R2467	06S70072F29	RES,CP .101-J-1/4-CP	
AUDIO-P.W.Board(Main-unit)		R2468	06S70072F29	RES,CP .101-J-1/4-CP	
AUDIO-P.W.Board(Main-unit)		R2469	06S70072F29	RES,CP .101-J-1/4-CP	
AUDIO-P.W.Board(Main-unit)		R2470	06S70072F29	RES,CP .101-J-1/4-CP	
AUDIO-P.W.Board(Main-unit)		R2471	06S70072F29	RES,CP .101-J-1/4-CP	
AUDIO-P.W.Board(Main-unit)		R2472	06S70072F37	RES,CP .221-J-1/4-CP	
AUDIO-P.W.Board(Main-unit)		R2473	06S70072F37	RES,CP .221-J-1/4-CP	
AUDIO-P.W.Board(Main-unit)		R2474	06S70072F37	RES,CP .221-J-1/4-CP	
AUDIO-P.W.Board(Main-unit)		R2475	06S70072F37	RES,CP .221-J-1/4-CP	
AUDIO-P.W.Board(Main-unit)		R2476	06S70072F37	RES,CP .221-J-1/4-CP	
AUDIO-P.W.Board(Main-unit)		R2477	06S70072F37	RES,CP .221-J-1/4-CP	
AUDIO-P.W.Board(Main-unit)		R2501	06S15615Y41	RES,RK 471J 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2502	06S15615Y41	RES,RK 471J 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2503	06S15615Y41	RES,RK 471J 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2504	06S65415Y37	RES,RK 103F 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2505	06S65415Y37	RES,RK 103F 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2507	06S45675W43	RES,RK JUMPER1/10-CP	
AUDIO-P.W.Board(Main-unit)		R2508	06S15615Y61	RES,RK 332J 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2510	06S65415Y37	RES,RK 103F 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2517	06S65415Y37	RES,RK 103F 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2518	06S65415Y37	RES,RK 103F 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2521	06S15616Y23	RES,RK JUMPER1/16-CP	

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)		R2527	06S65415Y37	RES,RK 103F 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2604	06S65415Y37	RES,RK 103F 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2605	06S65415Y41	RES,RK 223F 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2650	06S15615Y25	RES,RK 101J 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2651	06S15615Y49	RES,RK 102J 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2652	06S15615Y47	RES,RK 821J 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2653	06S15615Y89	RES,RK 473J 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2654	06S45674W41	RES,RK 221J 1/10 -CP	
AUDIO-P.W.Board(Main-unit)		R2655	06S15616Y23	RES,RK JUMPER1/16-CP	
AUDIO-P.W.Board(Main-unit)		R2850	06S15616Y23	RES,RK JUMPER1/16-CP	
AUDIO-P.W.Board(Main-unit)		R2851	06S15616Y23	RES,RK JUMPER1/16-CP	
AUDIO-P.W.Board(Main-unit)		R2852	06S15615Y89	RES,RK 473J 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2853	06S15615Y89	RES,RK 473J 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2854	06S65415Y59	RES,RK 684F 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2855	06S15616Y43	RES,RK 106J 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2856	06S65415Y33	RES,RK 472F 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2857	06S15615Y25	RES,RK 101J 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2858	06S15615Y25	RES,RK 101J 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2859	06S15615Y25	RES,RK 101J 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2860	06S15616Y23	RES,RK JUMPER1/16-CP	
AUDIO-P.W.Board(Main-unit)		R2864	06S45675W43	RES,RK JUMPER1/10-CP	
AUDIO-P.W.Board(Main-unit)		R2866	06S65415Y29	RES,RK 222F 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2902	06S15594Y14	RES,RK 474F 1/10 -CP	
AUDIO-P.W.Board(Main-unit)		R2903	06S15594Y14	RES,RK 474F 1/10 -CP	
AUDIO-P.W.Board(Main-unit)		R2904	06S65415Y11	RES,RK 68RF 1/16 -CP	

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)		R2905	06S45675W43	RES,RK JUMPER1/10-CP	
AUDIO-P.W.Board(Main-unit)		R2906	06S45675W43	RES,RK JUMPER1/10-CP	
AUDIO-P.W.Board(Main-unit)		R2950	06S65415Y41	RES,RK 223F 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2963	06S65415Y35	RES,RK 682F 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2965	06S65415Y05	RES,RK 22RF 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2966	06S65415Y10	RES,RK 56RF 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R2967	06S35083Y19	RES,RK 331F 1/4 -CP	
AUDIO-P.W.Board(Main-unit)		R3000	06S15616Y14	RES,RK 474J 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R3007	06S65415Y37	RES,RK 103F 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R3008	06S65415Y37	RES,RK 103F 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R3009	06S65415Y37	RES,RK 103F 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R3010	06S15616Y23	RES,RK JUMPER1/16-CP	
AUDIO-P.W.Board(Main-unit)		R3011	06S15616Y23	RES,RK JUMPER1/16-CP	
AUDIO-P.W.Board(Main-unit)		R3012	06S15616Y23	RES,RK JUMPER1/16-CP	
AUDIO-P.W.Board(Main-unit)		R3014	06S15615Y19	RES,RK 56RJ 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R3015	06S65415Y37	RES,RK 103F 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R3016	06S15615Y25	RES,RK 101J 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R3019	06S15616Y23	RES,RK JUMPER1/16-CP	
AUDIO-P.W.Board(Main-unit)		R3023	06S65415Y37	RES,RK 103F 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R3025	06S65415Y37	RES,RK 103F 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R3100	06S45674W81	RES,RK 103J 1/10 -CP	
AUDIO-P.W.Board(Main-unit)		R3102	06S45674W81	RES,RK 103J 1/10 -CP	
AUDIO-P.W.Board(Main-unit)		R3103	06S45674W33	RES,RK 101J 1/10 -CP	
AUDIO-P.W.Board(Main-unit)		R3104	06S45674W33	RES,RK 101J 1/10 -CP	
AUDIO-P.W.Board(Main-unit)		R3130	06S45674W57	RES,RK 102J 1/10 -CP	

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)		R3131	06S45674W57	RES,RK 102J 1/10 -CP	
AUDIO-P.W.Board(Main-unit)		R3132	06S45674W57	RES,RK 102J 1/10 -CP	
AUDIO-P.W.Board(Main-unit)		R3133	06S45674W57	RES,RK 102J 1/10 -CP	
AUDIO-P.W.Board(Main-unit)		R3134	06S45674W57	RES,RK 102J 1/10 -CP	
AUDIO-P.W.Board(Main-unit)		R3135	06S45674W57	RES,RK 102J 1/10 -CP	
AUDIO-P.W.Board(Main-unit)		R3140	06S45674W33	RES,RK 101J 1/10 -CP	
AUDIO-P.W.Board(Main-unit)		R3141	06S45674W57	RES,RK 102J 1/10 -CP	
AUDIO-P.W.Board(Main-unit)		R3142	06S15616Y23	RES,RK JUMPER1/16-CP	
AUDIO-P.W.Board(Main-unit)		R3143	06S15616Y23	RES,RK JUMPER1/16-CP	
AUDIO-P.W.Board(Main-unit)		R3144	06S15616Y23	RES,RK JUMPER1/16-CP	
AUDIO-P.W.Board(Main-unit)		R3145	06S15616Y23	RES,RK JUMPER1/16-CP	
AUDIO-P.W.Board(Main-unit)		R3146	06S15616Y23	RES,RK JUMPER1/16-CP	
AUDIO-P.W.Board(Main-unit)		R3147	06S15616Y23	RES,RK JUMPER1/16-CP	
AUDIO-P.W.Board(Main-unit)		R3148	06S15616Y23	RES,RK JUMPER1/16-CP	
AUDIO-P.W.Board(Main-unit)		R3149	06S15616Y23	RES,RK JUMPER1/16-CP	
AUDIO-P.W.Board(Main-unit)		R3150	06S45675W43	RES,RK JUMPER1/10-CP	
AUDIO-P.W.Board(Main-unit)		R3151	06S45675W43	RES,RK JUMPER1/10-CP	
AUDIO-P.W.Board(Main-unit)		R3152	06S45675W43	RES,RK JUMPER1/10-CP	
AUDIO-P.W.Board(Main-unit)		R3153	06S70072F51	RES,CP .821-J-1/4-CP	
AUDIO-P.W.Board(Main-unit)		R3154	06S70072F53	RES,CP .102-J-1/4-CP	
AUDIO-P.W.Board(Main-unit)		R3155	06S70072F53	RES,CP .102-J-1/4-CP	
AUDIO-P.W.Board(Main-unit)		R3156	06S70072F98	RES,RK 223J 1/4 -CP	
AUDIO-P.W.Board(Main-unit)		R3158	06S65415Y41	RES,RK 223F 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R3159	06S15615Y41	RES,RK 471J 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R3160	06S45674W33	RES,RK 101J 1/10 -CP	

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)		R3161	06S45674W33	RES,RK 101J 1/10 -CP	
AUDIO-P.W.Board(Main-unit)		R3162	06S45674W33	RES,RK 101J 1/10 -CP	
AUDIO-P.W.Board(Main-unit)		R3163	06S45674W33	RES,RK 101J 1/10 -CP	
AUDIO-P.W.Board(Main-unit)		R3164	06S45674W33	RES,RK 101J 1/10 -CP	
AUDIO-P.W.Board(Main-unit)		R3165	06S45674W33	RES,RK 101J 1/10 -CP	
AUDIO-P.W.Board(Main-unit)		R3200	06S65415Y41	RES,RK 223F 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R3202	06S15616Y14	RES,RK 474J 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R3203	06S35083Y39	RES,RK 153F 1/4 -CP	
AUDIO-P.W.Board(Main-unit)		R3204	06S15593Y86	RES,RK 363F 1/10 -CP	
AUDIO-P.W.Board(Main-unit)		R3205	06S65415Y30	RES,RK 272F 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R3206	06S65415Y41	RES,RK 223F 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R3207	06S35083Y43	RES,RK 333F 1/4 -CP	
AUDIO-P.W.Board(Main-unit)		R3208	06S35083Y40	RES,RK 183F 1/4 -CP	
AUDIO-P.W.Board(Main-unit)		R3209	06S70072F69	RES,CP .472-J-1/4-CP	
AUDIO-P.W.Board(Main-unit)		R3210	06S70072F69	RES,CP .472-J-1/4-CP	
AUDIO-P.W.Board(Main-unit)		R3211	06S15615Y89	RES,RK 473J 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R3213	06S15616Y23	RES,RK JUMPER1/16-CP	
AUDIO-P.W.Board(Main-unit)		R3217	06S15616Y23	RES,RK JUMPER1/16-CP	
AUDIO-P.W.Board(Main-unit)		R3218	06S65415Y41	RES,RK 223F 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R3219	06S65415Y41	RES,RK 223F 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R3234	06S15593Y81	RES,RK 223F 1/10 -CP	
AUDIO-P.W.Board(Main-unit)		R3235	06S15593Y61	RES,RK 332F 1/10 -CP	
AUDIO-P.W.Board(Main-unit)		R3236	06S45674W65	RES,RK 222J 1/10 -CP	
AUDIO-P.W.Board(Main-unit)		R3237	06S15593Y81	RES,RK 223F 1/10 -CP	
AUDIO-P.W.Board(Main-unit)		R3239	06S15615Y33	RES,RK 221J 1/16 -CP	

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)		R3246	06S65415Y29	RES,RK 222F 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R3249	06S45674W57	RES,RK 102J 1/10 -CP	
AUDIO-P.W.Board(Main-unit)		R3250	06S65415Y50	RES,RK 124F 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R3251	06S65415Y29	RES,RK 222F 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R3252	06S45674W57	RES,RK 102J 1/10 -CP	
AUDIO-P.W.Board(Main-unit)		R3254	06S65415Y50	RES,RK 124F 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R3400	06S15594Y01	RES,RK 134F 1/10 -CP	
AUDIO-P.W.Board(Main-unit)		R3401	06S15594Y08	RES,RK 274F 1/10 -CP	
AUDIO-P.W.Board(Main-unit)		R3402	06S15593Y91	RES,RK 563F 1/10 -CP	
AUDIO-P.W.Board(Main-unit)		R3403	06S15593Y93	RES,RK 683F 1/10 -CP	
AUDIO-P.W.Board(Main-unit)		R3404	06S15593Y67	RES,RK 562F 1/10 -CP	
AUDIO-P.W.Board(Main-unit)		R3405	06S15594Y14	RES,RK 474F 1/10 -CP	
AUDIO-P.W.Board(Main-unit)		R3406	06S15593Y94	RES,RK 753F 1/10 -CP	
AUDIO-P.W.Board(Main-unit)		R3407	06S70072F63	RES,CP .272-J-1/4-CP	
AUDIO-P.W.Board(Main-unit)		R3408	06S65415Y32	RES,RK 392F 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R3409	06S65415Y35	RES,RK 682F 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R3410	06S70072F77	RES,CP .103-J-1/4-CP	
AUDIO-P.W.Board(Main-unit)		R3411	06S65415Y35	RES,RK 682F 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R3412	06S65415Y35	RES,RK 682F 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R3413	06S65415Y43	RES,RK 333F 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R3414	06S65415Y41	RES,RK 223F 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R3415	06S15593Y66	RES,RK 512F 1/10 -CP	
AUDIO-P.W.Board(Main-unit)		R3430	06S65415Y47	RES,RK 683F 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R3431	06S65415Y30	RES,RK 272F 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R3432	06S65415Y35	RES,RK 682F 1/16 -CP	

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)		R3433	06S15594Y19	RES,RK 754F 1/10 -CP	
AUDIO-P.W.Board(Main-unit)		R3440	06S15593Y99	RES,RK 124F 1/10 -CP	
AUDIO-P.W.Board(Main-unit)		R3442	06S65415Y38	RES,RK 123F 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R3443	06S65415Y30	RES,RK 272F 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R3444	06S65415Y33	RES,RK 472F 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R3445	06S15593Y66	RES,RK 512F 1/10 -CP	
AUDIO-P.W.Board(Main-unit)		R3461	06S65415Y29	RES,RK 222F 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R3462	06S65415Y18	RES,RK 271F 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R3463	06S65415Y33	RES,RK 472F 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R3464	06S15593Y67	RES,RK 562F 1/10 -CP	
AUDIO-P.W.Board(Main-unit)		R3465	06S15593Y91	RES,RK 563F 1/10 -CP	
AUDIO-P.W.Board(Main-unit)		R3471	06S65415Y29	RES,RK 222F 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R3472	06S65415Y21	RES,RK 471F 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R3473	06S65415Y33	RES,RK 472F 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R3474	06S15593Y71	RES,RK 822F 1/10 -CP	
AUDIO-P.W.Board(Main-unit)		R3475	06S15594Y19	RES,RK 754F 1/10 -CP	
AUDIO-P.W.Board(Main-unit)		R3480	06S15593Y67	RES,RK 562F 1/10 -CP	
AUDIO-P.W.Board(Main-unit)		R3482	06S65415Y38	RES,RK 123F 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R3483	06S65415Y30	RES,RK 272F 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R3484	06S65415Y33	RES,RK 472F 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R3485	06S15593Y92	RES,RK 623F 1/10 -CP	
AUDIO-P.W.Board(Main-unit)		R3492	06S35083Y64	RES,RK 3R3F 1/4 -CP	
AUDIO-P.W.Board(Main-unit)		R3493	06S45675W43	RES,RK JUMPER1/10-CP	
AUDIO-P.W.Board(Main-unit)		R3510	06S65415Y37	RES,RK 103F 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R3511	06S15593Y66	RES,RK 512F 1/10 -CP	

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)		R3512	06S15594Y01	RES,RK 134F 1/10 -CP	
AUDIO-P.W.Board(Main-unit)		R3601	06S65415Y38	RES,RK 123F 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R3603	06S65415Y31	RES,RK 332F 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R3604	06S65415Y42	RES,RK 273F 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R3606	06S65415Y27	RES,RK 152F 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R3609	06S15615Y69	RES,RK 682J 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R3610	06S15615Y25	RES,RK 101J 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R3611	06S65415Y38	RES,RK 123F 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R3613	06S65415Y31	RES,RK 332F 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R3614	06S65415Y42	RES,RK 273F 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R3616	06S65415Y29	RES,RK 222F 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R3619	06S15615Y79	RES,RK 183J 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R3620	06S15615Y25	RES,RK 101J 1/16 -CP	
AUDIO-P.W.Board(Main-unit)		R3630	06S70072F31	RES,CP .121-J-1/4-CP	
AUDIO-P.W.Board(Main-unit)		R3631	06S45674W45	RES,RK 331J 1/10 -CP	
AUDIO-P.W.Board(Main-unit)		SA2901	08-19391Z01	VST,IMSA-6803-01Y-CP	
AUDIO-P.W.Board(Main-unit)		SD2440	48-22179Z01	DIO,SHT DB3X313F0LCP	
AUDIO-P.W.Board(Main-unit)		SD2441	48T35138Y01	DIO,SHT RB160L-40-E1	
AUDIO-P.W.Board(Main-unit)		SD3601	48-19296Z01	DIO,SHT RB056L-40-E1	
AUDIO-P.W.Board(Main-unit)		SD3602	48-19296Z01	DIO,SHT RB056L-40-E1	
AUDIO-P.W.Board(Main-unit)		T3100	25-12466Z01	CHOKE,GLI-UB3442 -DB	
AUDIO-P.W.Board(Main-unit)		TH2000	48T75219Y02	TMT,NCP18WB473F1S-CP	
AUDIO-P.W.Board(Main-unit)		VT2901	24-29820Z01	COIL,RF FM M5-N/R-E5	
AUDIO-P.W.Board(Main-unit)		XL2000	91-16024Z01	XTL,AT-41CD2 3.98-E9	
AUDIO-P.W.Board(Main-unit)		XL2200	91-26661Z31	XTL,NX3225SAAG55.4CP	

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
AUDIO-P.W.Board(Main-unit)		XL2501	91-26661Z02	XTL,NX3225SAAG12.2CP	
AUDIO-P.W.Board(Main-unit)		XL2850	91-26198Z03	XTL,NX3215 32.7NS-E1	
AUDIO-P.W.Board(Main-unit)		XL3001	91-26661Z31	XTL,NX3225SAAG55.4CP	
AUDIO-P.W.Board(Main-unit)		ZD3100	48-23921Z01	DIO,ZEN ZSH5MAZ27-ED	
AUDIO-P.W.Board(Main-unit)		ZD3130	48-21149Z23	DIO,ZEN DZ2J056M0LCP	
AUDIO-P.W.Board(Main-unit)		ZD3150	48-21149Z23	DIO,ZEN DZ2J056M0LCP	
AUDIO-P.W.Board(Main-unit)		ZD3151	48-21149Z23	DIO,ZEN DZ2J056M0LCP	
AUDIO-P.W.Board(Main-unit)		ZD3152	48-21149Z23	DIO,ZEN DZ2J056M0LCP	
AUDIO-P.W.Board(Main-unit)		ZD3200	48-16145Z36	DIO,ZEN PZU9.1B1 -CP	
AUDIO-P.W.Board(Main-unit)		ZD3201	48-21149Z23	DIO,ZEN DZ2J056M0LCP	
AUDIO-P.W.Board(Main-unit)		ZD3202	48-01607Z08	DIO,ZEN LUDZ3.9B -CP	
I.MX-P.W.Board(Main-unit)		ANT5501	09-07494Z01	U.FL-R-SMT-1(80)-E2	
I.MX-P.W.Board(Main-unit)		C4000	08S45231Y05	CAP,CER 2R0C-CK1H-CP	
I.MX-P.W.Board(Main-unit)		C4001	08S45231Y05	CAP,CER 2R0C-CK1H-CP	
I.MX-P.W.Board(Main-unit)		C4002	08S45231Y10	CAP,CER 7R0D-CH1H-CP	
I.MX-P.W.Board(Main-unit)		C4003	08S45231Y10	CAP,CER 7R0D-CH1H-CP	
I.MX-P.W.Board(Main-unit)		C4007	08-12461Z01	CAP,CER 104M-C80J-CP	
I.MX-P.W.Board(Main-unit)		C4008	08-12461Z01	CAP,CER 104M-C80J-CP	
I.MX-P.W.Board(Main-unit)		C4009	08S45232Y05	CAP,CER 102K-B1H -CP	
I.MX-P.W.Board(Main-unit)		C4010	08S45232Y05	CAP,CER 102K-B1H -CP	
I.MX-P.W.Board(Main-unit)		C4014	08-12461Z01	CAP,CER 104M-C80J-CP	
I.MX-P.W.Board(Main-unit)		C4015	08-12461Z01	CAP,CER 104M-C80J-CP	
I.MX-P.W.Board(Main-unit)		C4016	08-12461Z01	CAP,CER 104M-C80J-CP	
I.MX-P.W.Board(Main-unit)		C4017	08-12461Z01	CAP,CER 104M-C80J-CP	
I.MX-P.W.Board(Main-unit)		C4018	08-12461Z01	CAP,CER 104M-C80J-CP	

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
I.MX-P.W.Board(Main-unit)			C4024	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board(Main-unit)			C4025	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board(Main-unit)			C4026	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board(Main-unit)			C4027	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board(Main-unit)			C4028	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board(Main-unit)			C4029	08S35374W12	CAP,CER 106K-B0J -CP
I.MX-P.W.Board(Main-unit)			C4030	08S65668Y05	CAP,CER 224KX5R1A-CP
I.MX-P.W.Board(Main-unit)			C4031	08S65668Y05	CAP,CER 224KX5R1A-CP
I.MX-P.W.Board(Main-unit)			C4032	08S65670Y06	CAP,CER 226KX5R1A-CP
I.MX-P.W.Board(Main-unit)			C4033	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board(Main-unit)			C4034	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board(Main-unit)			C4035	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board(Main-unit)			C4036	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board(Main-unit)			C4037	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board(Main-unit)			C4038	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board(Main-unit)			C4039	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board(Main-unit)			C4040	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board(Main-unit)			C4041	08S35374W12	CAP,CER 106K-B0J -CP
I.MX-P.W.Board(Main-unit)			C4042	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board(Main-unit)			C4043	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board(Main-unit)			C4044	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board(Main-unit)			C4045	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board(Main-unit)			C4046	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board(Main-unit)			C4047	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board(Main-unit)			C4048	08S45232Y17	CAP,CER 104K-B0J -CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
I.MX-P.W.Board(Main-unit)			C4049	08S35349Y12	CAP,CER 105K-B0J -CP
I.MX-P.W.Board(Main-unit)			C4050	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board(Main-unit)			C4051	08S35374W11	CAP,CER 475K-B0J -CP
I.MX-P.W.Board(Main-unit)			C4052	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board(Main-unit)			C4053	08S65669Y03	CAP,CER 224KX7R1H-CP
I.MX-P.W.Board(Main-unit)			C4054	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board(Main-unit)			C4055	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board(Main-unit)			C4056	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board(Main-unit)			C4057	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board(Main-unit)			C4058	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board(Main-unit)			C4061	08S65670Y06	CAP,CER 226KX5R1A-CP
I.MX-P.W.Board(Main-unit)			C4063	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board(Main-unit)			C4064	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board(Main-unit)			C4065	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board(Main-unit)			C4066	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board(Main-unit)			C4067	08S65670Y06	CAP,CER 226KX5R1A-CP
I.MX-P.W.Board(Main-unit)			C4068	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board(Main-unit)			C4069	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board(Main-unit)			C4070	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board(Main-unit)			C4071	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board(Main-unit)			C4072	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board(Main-unit)			C4073	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board(Main-unit)			C4074	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board(Main-unit)			C4075	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board(Main-unit)			C4076	08S35374W11	CAP,CER 475K-B0J -CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
I.MX-P.W.Board(Main-unit)			C4077	08S65668Y05	CAP,CER 224KX5R1A-CP
I.MX-P.W.Board(Main-unit)			C4078	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board(Main-unit)			C4079	08S35374W12	CAP,CER 106K-B0J -CP
I.MX-P.W.Board(Main-unit)			C4080	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board(Main-unit)			C4081	08S65670Y06	CAP,CER 226KX5R1A-CP
I.MX-P.W.Board(Main-unit)			C4082	08S35374W12	CAP,CER 106K-B0J -CP
I.MX-P.W.Board(Main-unit)			C4083	08S65670Y06	CAP,CER 226KX5R1A-CP
I.MX-P.W.Board(Main-unit)			C4200	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board(Main-unit)			C4201	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board(Main-unit)			C4202	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board(Main-unit)			C4203	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board(Main-unit)			C4204	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board(Main-unit)			C4205	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board(Main-unit)			C4206	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board(Main-unit)			C4207	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board(Main-unit)			C4208	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board(Main-unit)			C4209	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board(Main-unit)			C4210	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board(Main-unit)			C4211	08S45232Y05	CAP,CER 102K-B1H -CP
I.MX-P.W.Board(Main-unit)			C4212	08S45232Y05	CAP,CER 102K-B1H -CP
I.MX-P.W.Board(Main-unit)			C4213	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board(Main-unit)			C4214	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board(Main-unit)			C4215	08S45232Y05	CAP,CER 102K-B1H -CP
I.MX-P.W.Board(Main-unit)			C4216	08S45232Y05	CAP,CER 102K-B1H -CP
I.MX-P.W.Board(Main-unit)			C4217	08-12461Z01	CAP,CER 104M-C80J-CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
I.MX-P.W.Board(Main-unit)			C4218	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board(Main-unit)			C4219	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board(Main-unit)			C4220	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board(Main-unit)			C4221	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board(Main-unit)			C4222	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board(Main-unit)			C4223	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board(Main-unit)			C4224	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board(Main-unit)			C4225	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board(Main-unit)			C4226	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board(Main-unit)			C4227	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board(Main-unit)			C4228	08S45232Y05	CAP,CER 102K-B1H -CP
I.MX-P.W.Board(Main-unit)			C4229	08S45232Y05	CAP,CER 102K-B1H -CP
I.MX-P.W.Board(Main-unit)			C4230	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board(Main-unit)			C4231	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board(Main-unit)			C4232	08S45232Y05	CAP,CER 102K-B1H -CP
I.MX-P.W.Board(Main-unit)			C4233	08S45232Y05	CAP,CER 102K-B1H -CP
I.MX-P.W.Board(Main-unit)			C4234	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board(Main-unit)			C4235	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board(Main-unit)			C4236	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board(Main-unit)			C4237	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board(Main-unit)			C4238	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board(Main-unit)			C4239	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board(Main-unit)			C4240	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board(Main-unit)			C4241	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board(Main-unit)			C4242	08S45232Y17	CAP,CER 104K-B0J -CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
I.MX-P.W.Board(Main-unit)			C4243	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board(Main-unit)			C4244	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board(Main-unit)			C4245	08S45232Y05	CAP,CER 102K-B1H -CP
I.MX-P.W.Board(Main-unit)			C4246	08S45232Y05	CAP,CER 102K-B1H -CP
I.MX-P.W.Board(Main-unit)			C4247	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board(Main-unit)			C4248	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board(Main-unit)			C4249	08S45232Y05	CAP,CER 102K-B1H -CP
I.MX-P.W.Board(Main-unit)			C4250	08S45232Y05	CAP,CER 102K-B1H -CP
I.MX-P.W.Board(Main-unit)			C4251	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board(Main-unit)			C4252	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board(Main-unit)			C4253	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board(Main-unit)			C4254	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board(Main-unit)			C4255	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board(Main-unit)			C4256	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board(Main-unit)			C4257	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board(Main-unit)			C4258	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board(Main-unit)			C4259	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board(Main-unit)			C4260	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board(Main-unit)			C4261	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board(Main-unit)			C4262	08S45232Y05	CAP,CER 102K-B1H -CP
I.MX-P.W.Board(Main-unit)			C4263	08S45232Y05	CAP,CER 102K-B1H -CP
I.MX-P.W.Board(Main-unit)			C4264	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board(Main-unit)			C4265	08-12461Z01	CAP,CER 104M-C80J-CP
I.MX-P.W.Board(Main-unit)			C4266	08S45232Y05	CAP,CER 102K-B1H -CP
I.MX-P.W.Board(Main-unit)			C4267	08S45232Y05	CAP,CER 102K-B1H -CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
I.MX-P.W.Board(Main-unit)		C4268	08-13830Z01	CAP,CER 476MX6S0G-CP	
I.MX-P.W.Board(Main-unit)		C4269	08S45232Y17	CAP,CER 104K-B0J -CP	
I.MX-P.W.Board(Main-unit)		C4270	08-13830Z01	CAP,CER 476MX6S0G-CP	
I.MX-P.W.Board(Main-unit)		C4271	08S45232Y17	CAP,CER 104K-B0J -CP	
I.MX-P.W.Board(Main-unit)		C4300	08S35349Y12	CAP,CER 105K-B0J -CP	
I.MX-P.W.Board(Main-unit)		C4301	08S45232Y17	CAP,CER 104K-B0J -CP	
I.MX-P.W.Board(Main-unit)		C4302	08S45232Y17	CAP,CER 104K-B0J -CP	
I.MX-P.W.Board(Main-unit)		C4400	08S65668Y05	CAP,CER 224KX5R1A-CP	
I.MX-P.W.Board(Main-unit)		C4401	08S65668Y05	CAP,CER 224KX5R1A-CP	
I.MX-P.W.Board(Main-unit)		C4402	08S65668Y05	CAP,CER 224KX5R1A-CP	
I.MX-P.W.Board(Main-unit)		C4403	08S45232Y17	CAP,CER 104K-B0J -CP	
I.MX-P.W.Board(Main-unit)		C4404	08S35374W11	CAP,CER 475K-B0J -CP	
I.MX-P.W.Board(Main-unit)		C4500	08S65668Y05	CAP,CER 224KX5R1A-CP	
I.MX-P.W.Board(Main-unit)		C4600	08S65668Y05	CAP,CER 224KX5R1A-CP	
I.MX-P.W.Board(Main-unit)		C4601	08S45232Y17	CAP,CER 104K-B0J -CP	
I.MX-P.W.Board(Main-unit)		C4602	08S45232Y17	CAP,CER 104K-B0J -CP	
I.MX-P.W.Board(Main-unit)		C4603	08S65668Y07	CAP,CER 103KX5R1H-CP	
I.MX-P.W.Board(Main-unit)		C4700	08S65668Y05	CAP,CER 224KX5R1A-CP	
I.MX-P.W.Board(Main-unit)		C5000	08S35374W12	CAP,CER 106K-B0J -CP	
I.MX-P.W.Board(Main-unit)		C5001	08S45232Y17	CAP,CER 104K-B0J -CP	
I.MX-P.W.Board(Main-unit)		C5002	08S45232Y11	CAP,CER 103K-B1C -CP	
I.MX-P.W.Board(Main-unit)		C5003	08S45232Y17	CAP,CER 104K-B0J -CP	
I.MX-P.W.Board(Main-unit)		C5004	08S45232Y11	CAP,CER 103K-B1C -CP	
I.MX-P.W.Board(Main-unit)		C5005	08S45232Y17	CAP,CER 104K-B0J -CP	
I.MX-P.W.Board(Main-unit)		C5006	08S45232Y11	CAP,CER 103K-B1C -CP	

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
I.MX-P.W.Board(Main-unit)			C5007	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board(Main-unit)			C5008	08S45232Y11	CAP,CER 103K-B1C -CP
I.MX-P.W.Board(Main-unit)			C5009	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board(Main-unit)			C5010	08S45232Y11	CAP,CER 103K-B1C -CP
I.MX-P.W.Board(Main-unit)			C5011	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board(Main-unit)			C5012	08S45232Y11	CAP,CER 103K-B1C -CP
I.MX-P.W.Board(Main-unit)			C5100	08S35374W12	CAP,CER 106K-B0J -CP
I.MX-P.W.Board(Main-unit)			C5101	08S35374W12	CAP,CER 106K-B0J -CP
I.MX-P.W.Board(Main-unit)			C5102	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board(Main-unit)			C5103	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board(Main-unit)			C5104	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board(Main-unit)			C5105	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board(Main-unit)			C5106	08S35374W12	CAP,CER 106K-B0J -CP
I.MX-P.W.Board(Main-unit)			C5107	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board(Main-unit)			C5108	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board(Main-unit)			C5109	08S35374W12	CAP,CER 106K-B0J -CP
I.MX-P.W.Board(Main-unit)			C5110	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board(Main-unit)			C5111	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board(Main-unit)			C5112	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board(Main-unit)			C5113	08S35374W12	CAP,CER 106K-B0J -CP
I.MX-P.W.Board(Main-unit)			C5114	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board(Main-unit)			C5115	08S45232Y05	CAP,CER 102K-B1H -CP
I.MX-P.W.Board(Main-unit)			C5200	08S65670Y06	CAP,CER 226KX5R1A-CP
I.MX-P.W.Board(Main-unit)			C5201	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board(Main-unit)			C5202	08S45232Y17	CAP,CER 104K-B0J -CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
I.MX-P.W.Board(Main-unit)		C5203	08S45232Y11	CAP,CER 103K-B1C -CP	
I.MX-P.W.Board(Main-unit)		C5204	08S45232Y17	CAP,CER 104K-B0J -CP	
I.MX-P.W.Board(Main-unit)		C5205	08S45232Y11	CAP,CER 103K-B1C -CP	
I.MX-P.W.Board(Main-unit)		C5206	08S45232Y17	CAP,CER 104K-B0J -CP	
I.MX-P.W.Board(Main-unit)		C5207	08S45232Y11	CAP,CER 103K-B1C -CP	
I.MX-P.W.Board(Main-unit)		C5208	08S45232Y17	CAP,CER 104K-B0J -CP	
I.MX-P.W.Board(Main-unit)		C5209	08S45232Y11	CAP,CER 103K-B1C -CP	
I.MX-P.W.Board(Main-unit)		C5210	08S45232Y17	CAP,CER 104K-B0J -CP	
I.MX-P.W.Board(Main-unit)		C5211	08S45232Y11	CAP,CER 103K-B1C -CP	
I.MX-P.W.Board(Main-unit)		C5212	08S45232Y17	CAP,CER 104K-B0J -CP	
I.MX-P.W.Board(Main-unit)		C5213	08S45232Y11	CAP,CER 103K-B1C -CP	
I.MX-P.W.Board(Main-unit)		C5214	08S45232Y17	CAP,CER 104K-B0J -CP	
I.MX-P.W.Board(Main-unit)		C5215	08S45232Y11	CAP,CER 103K-B1C -CP	
I.MX-P.W.Board(Main-unit)		C5216	08S45232Y17	CAP,CER 104K-B0J -CP	
I.MX-P.W.Board(Main-unit)		C5217	08S45232Y11	CAP,CER 103K-B1C -CP	
I.MX-P.W.Board(Main-unit)		C5218	08S35374W10	CAP,CER 225K-B1A -CP	
I.MX-P.W.Board(Main-unit)		C5219	08S45232Y17	CAP,CER 104K-B0J -CP	
I.MX-P.W.Board(Main-unit)		C5220	08S45232Y17	CAP,CER 104K-B0J -CP	
I.MX-P.W.Board(Main-unit)		C5221	08S45232Y11	CAP,CER 103K-B1C -CP	
I.MX-P.W.Board(Main-unit)		C5222	08S45232Y17	CAP,CER 104K-B0J -CP	
I.MX-P.W.Board(Main-unit)		C5223	08S45232Y11	CAP,CER 103K-B1C -CP	
I.MX-P.W.Board(Main-unit)		C5224	08-26091Z01	CAP,CER 102KX7R2J-CP	
I.MX-P.W.Board(Main-unit)		C5225	08S65669Y03	CAP,CER 224KX7R1H-CP	
I.MX-P.W.Board(Main-unit)		C5226	08-26091Z01	CAP,CER 102KX7R2J-CP	
I.MX-P.W.Board(Main-unit)		C5227	08S45231Y15	CAP,CER 15RJ-CH1H-CP	

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
I.MX-P.W.Board(Main-unit)			C5228	08S45231Y15	CAP,CER 15RJ-CH1H-CP
I.MX-P.W.Board(Main-unit)			C5300	08S35374W12	CAP,CER 106K-B0J -CP
I.MX-P.W.Board(Main-unit)			C5301	08S35349Y12	CAP,CER 105K-B0J -CP
I.MX-P.W.Board(Main-unit)			C5302	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board(Main-unit)			C5303	08S35349Y12	CAP,CER 105K-B0J -CP
I.MX-P.W.Board(Main-unit)			C5304	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board(Main-unit)			C5305	08S35349Y12	CAP,CER 105K-B0J -CP
I.MX-P.W.Board(Main-unit)			C5306	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board(Main-unit)			C5307	08S45232Y11	CAP,CER 103K-B1C -CP
I.MX-P.W.Board(Main-unit)			C5308	08S45232Y05	CAP,CER 102K-B1H -CP
I.MX-P.W.Board(Main-unit)			C5309	08S45232Y11	CAP,CER 103K-B1C -CP
I.MX-P.W.Board(Main-unit)			C5310	08S45232Y05	CAP,CER 102K-B1H -CP
I.MX-P.W.Board(Main-unit)			C5311	08S35374W12	CAP,CER 106K-B0J -CP
I.MX-P.W.Board(Main-unit)			C5312	08S35349Y12	CAP,CER 105K-B0J -CP
I.MX-P.W.Board(Main-unit)			C5313	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board(Main-unit)			C5314	08S35349Y12	CAP,CER 105K-B0J -CP
I.MX-P.W.Board(Main-unit)			C5315	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board(Main-unit)			C5316	08S35349Y12	CAP,CER 105K-B0J -CP
I.MX-P.W.Board(Main-unit)			C5317	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board(Main-unit)			C5318	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board(Main-unit)			C5319	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board(Main-unit)			C5320	08S35349Y16	CAP,CER 105K-B1A -CP
I.MX-P.W.Board(Main-unit)			C5321	08S35349Y16	CAP,CER 105K-B1A -CP
I.MX-P.W.Board(Main-unit)			C5322	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board(Main-unit)			C5323	08S45232Y17	CAP,CER 104K-B0J -CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
I.MX-P.W.Board(Main-unit)			C5324	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board(Main-unit)			C5325	08S45232Y11	CAP,CER 103K-B1C -CP
I.MX-P.W.Board(Main-unit)			C5326	08S45231Y09	CAP,CER 6R0D-CH1H-CP
I.MX-P.W.Board(Main-unit)			C5327	08S45231Y09	CAP,CER 6R0D-CH1H-CP
I.MX-P.W.Board(Main-unit)			C5400	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board(Main-unit)			C5401	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board(Main-unit)			C5402	08S35349Y17	CAP,CER 225K-B0J -CP
I.MX-P.W.Board(Main-unit)			C5403	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board(Main-unit)			C5404	08S35349Y17	CAP,CER 225K-B0J -CP
I.MX-P.W.Board(Main-unit)			C5405	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board(Main-unit)			C5406	08S35374W11	CAP,CER 475K-B0J -CP
I.MX-P.W.Board(Main-unit)			C5407	08S35374W11	CAP,CER 475K-B0J -CP
I.MX-P.W.Board(Main-unit)			C5408	08S35374W11	CAP,CER 475K-B0J -CP
I.MX-P.W.Board(Main-unit)			C5409	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board(Main-unit)			C5410	08S35374W11	CAP,CER 475K-B0J -CP
I.MX-P.W.Board(Main-unit)			C5411	08S35374W11	CAP,CER 475K-B0J -CP
I.MX-P.W.Board(Main-unit)			C5412	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board(Main-unit)			C5413	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board(Main-unit)			C5500	08S65668Y05	CAP,CER 224KX5R1A-CP
I.MX-P.W.Board(Main-unit)			C5501	08S65668Y05	CAP,CER 224KX5R1A-CP
I.MX-P.W.Board(Main-unit)			C5502	08S65668Y05	CAP,CER 224KX5R1A-CP
I.MX-P.W.Board(Main-unit)			C5503	08S65668Y05	CAP,CER 224KX5R1A-CP
I.MX-P.W.Board(Main-unit)			C5504	08S65668Y05	CAP,CER 224KX5R1A-CP
I.MX-P.W.Board(Main-unit)			C5505	08S65668Y05	CAP,CER 224KX5R1A-CP
I.MX-P.W.Board(Main-unit)			C5506	08S65668Y05	CAP,CER 224KX5R1A-CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
I.MX-P.W.Board(Main-unit)			C5509	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board(Main-unit)			C5510	08S35349Y12	CAP,CER 105K-B0J -CP
I.MX-P.W.Board(Main-unit)			C5511	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board(Main-unit)			C5512	08S35374W11	CAP,CER 475K-B0J -CP
I.MX-P.W.Board(Main-unit)			C5513	08S35374W11	CAP,CER 475K-B0J -CP
I.MX-P.W.Board(Main-unit)			C5514	08S35374W12	CAP,CER 106K-B0J -CP
I.MX-P.W.Board(Main-unit)			C5515	08S35349Y12	CAP,CER 105K-B0J -CP
I.MX-P.W.Board(Main-unit)			C5516	08S35374W12	CAP,CER 106K-B0J -CP
I.MX-P.W.Board(Main-unit)			C5517	08S35374W12	CAP,CER 106K-B0J -CP
I.MX-P.W.Board(Main-unit)			C5518	08S35349Y12	CAP,CER 105K-B0J -CP
I.MX-P.W.Board(Main-unit)			C5519	08S35374W12	CAP,CER 106K-B0J -CP
I.MX-P.W.Board(Main-unit)			C5600	08S45232Y17	CAP,CER 104K-B0J -CP
I.MX-P.W.Board(Main-unit)			C5601	08S65670Y06	CAP,CER 226KX5R1A-CP
I.MX-P.W.Board(Main-unit)			C5602	08S65670Y06	CAP,CER 226KX5R1A-CP
I.MX-P.W.Board(Main-unit)			C5603	08S35349Y16	CAP,CER 105K-B1A -CP
I.MX-P.W.Board(Main-unit)			C5604	08S35349Y16	CAP,CER 105K-B1A -CP
I.MX-P.W.Board(Main-unit)			C5605	08S35349Y16	CAP,CER 105K-B1A -CP
I.MX-P.W.Board(Main-unit)			C5606	08S35349Y16	CAP,CER 105K-B1A -CP
I.MX-P.W.Board(Main-unit)			C5607	08S45231Y25	CAP,CER 101J-CH1H-CP
I.MX-P.W.Board(Main-unit)			C5608	08S65670Y06	CAP,CER 226KX5R1A-CP
I.MX-P.W.Board(Main-unit)			C5609	08S65670Y06	CAP,CER 226KX5R1A-CP
I.MX-P.W.Board(Main-unit)			C5610	08S45676W93	CAP,CER 224K-B1A -CP
I.MX-P.W.Board(Main-unit)			C5611	08S45231Y25	CAP,CER 101J-CH1H-CP
I.MX-P.W.Board(Main-unit)			C5612	08S65670Y06	CAP,CER 226KX5R1A-CP
I.MX-P.W.Board(Main-unit)			C5613	08S65670Y06	CAP,CER 226KX5R1A-CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
I.MX-P.W.Board(Main-unit)			C5614	08S45676W93	CAP,CER 224K-B1A -CP
I.MX-P.W.Board(Main-unit)			C5615	08S45231Y25	CAP,CER 101J-CH1H-CP
I.MX-P.W.Board(Main-unit)			C5616	08S65670Y06	CAP,CER 226KX5R1A-CP
I.MX-P.W.Board(Main-unit)			C5617	08S65670Y06	CAP,CER 226KX5R1A-CP
I.MX-P.W.Board(Main-unit)			C5618	08S45676W93	CAP,CER 224K-B1A -CP
I.MX-P.W.Board(Main-unit)			C5619	08S45231Y25	CAP,CER 101J-CH1H-CP
I.MX-P.W.Board(Main-unit)			C5620	08S65670Y06	CAP,CER 226KX5R1A-CP
I.MX-P.W.Board(Main-unit)			C5621	08S65670Y06	CAP,CER 226KX5R1A-CP
I.MX-P.W.Board(Main-unit)			C5622	08S45676W93	CAP,CER 224K-B1A -CP
I.MX-P.W.Board(Main-unit)			C5623	08S35349Y16	CAP,CER 105K-B1A -CP
I.MX-P.W.Board(Main-unit)			C5624	08S45676W93	CAP,CER 224K-B1A -CP
I.MX-P.W.Board(Main-unit)			C5625	08S35349Y16	CAP,CER 105K-B1A -CP
I.MX-P.W.Board(Main-unit)			C5626	08S35349Y16	CAP,CER 105K-B1A -CP
I.MX-P.W.Board(Main-unit)			C5627	08S45676W93	CAP,CER 224K-B1A -CP
I.MX-P.W.Board(Main-unit)			C5628	08S35349Y16	CAP,CER 105K-B1A -CP
I.MX-P.W.Board(Main-unit)			C5629	08S35349Y16	CAP,CER 105K-B1A -CP
I.MX-P.W.Board(Main-unit)			C5630	08S45676W93	CAP,CER 224K-B1A -CP
I.MX-P.W.Board(Main-unit)			C5631	08S35349Y16	CAP,CER 105K-B1A -CP
I.MX-P.W.Board(Main-unit)			C5632	08S35349Y16	CAP,CER 105K-B1A -CP
I.MX-P.W.Board(Main-unit)			C5633	08S45676W93	CAP,CER 224K-B1A -CP
I.MX-P.W.Board(Main-unit)			C5650	08S65671Y04	CAP,CER 106KX5R1H-CP
I.MX-P.W.Board(Main-unit)			C5651	08S45232Y08	CAP,CER 332K-B1H -CP
I.MX-P.W.Board(Main-unit)			C5652	08S45231Y33	CAP,CER 471J-CH1H-CP
I.MX-P.W.Board(Main-unit)			C5653	08S45231Y25	CAP,CER 101J-CH1H-CP
I.MX-P.W.Board(Main-unit)			C5655	08-14627Z01	CAP,CER 107MX5R0J-CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
I.MX-P.W.Board(Main-unit)		C5657	08S65669Y03	CAP,CER 224KX7R1H-CP	
I.MX-P.W.Board(Main-unit)		C5659	08S65669Y03	CAP,CER 224KX7R1H-CP	
I.MX-P.W.Board(Main-unit)		C5680	08S65669Y03	CAP,CER 224KX7R1H-CP	
I.MX-P.W.Board(Main-unit)		C5700	08S45231Y05	CAP,CER 2R0C-CK1H-CP	
I.MX-P.W.Board(Main-unit)		C5701	08S45231Y05	CAP,CER 2R0C-CK1H-CP	
I.MX-P.W.Board(Main-unit)		C5702	08S35349Y16	CAP,CER 105K-B1A -CP	
I.MX-P.W.Board(Main-unit)		C5703	08S65671Y04	CAP,CER 106KX5R1H-CP	
I.MX-P.W.Board(Main-unit)		C5704	08S65671Y04	CAP,CER 106KX5R1H-CP	
I.MX-P.W.Board(Main-unit)		C5705	08S65676Y09	CAP,CER 475KX7R1H-CP	
I.MX-P.W.Board(Main-unit)		C5706	08S35349Y21	CAP,CER 104K-B1H -CP	
I.MX-P.W.Board(Main-unit)		C5707	08S65670Y06	CAP,CER 226KX5R1A-CP	
I.MX-P.W.Board(Main-unit)		C5708	08S65669Y03	CAP,CER 224KX7R1H-CP	
I.MX-P.W.Board(Main-unit)		C5709	08S65676Y09	CAP,CER 475KX7R1H-CP	
I.MX-P.W.Board(Main-unit)		C5710	08S35349Y16	CAP,CER 105K-B1A -CP	
I.MX-P.W.Board(Main-unit)		C5711	08S45232Y05	CAP,CER 102K-B1H -CP	
I.MX-P.W.Board(Main-unit)		C5712	08S45231Y13	CAP,CER 10RD-CH1H-CP	
I.MX-P.W.Board(Main-unit)		C5713	08S45232Y05	CAP,CER 102K-B1H -CP	
I.MX-P.W.Board(Main-unit)		C5714	08S65668Y05	CAP,CER 224KX5R1A-CP	
I.MX-P.W.Board(Main-unit)		C5715	08S45231Y11	CAP,CER 8R0D-CH1H-CP	
I.MX-P.W.Board(Main-unit)		C5716	08S45231Y11	CAP,CER 8R0D-CH1H-CP	
I.MX-P.W.Board(Main-unit)		C5800	08S65676Y09	CAP,CER 475KX7R1H-CP	
I.MX-P.W.Board(Main-unit)		C5801	08S35374W10	CAP,CER 225K-B1A -CP	
I.MX-P.W.Board(Main-unit)		C5802	08S65669Y03	CAP,CER 224KX7R1H-CP	
I.MX-P.W.Board(Main-unit)		C5803	08S45676W73	CAP,CER.103K-B1H -CP	
I.MX-P.W.Board(Main-unit)		C5804	08S45232Y11	CAP,CER 103K-B1C -CP	

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
I.MX-P.W.Board(Main-unit)			C5806	08S35374W11	CAP,CER 475K-B0J -CP
I.MX-P.W.Board(Main-unit)			C5807	08S65669Y03	CAP,CER 224KX7R1H-CP
I.MX-P.W.Board(Main-unit)			C5808	08S65669Y03	CAP,CER 224KX7R1H-CP
I.MX-P.W.Board(Main-unit)			C6000	08S65676Y10	CAP,CER 106KX7R1C-CP
I.MX-P.W.Board(Main-unit)			C6001	08S45232Y08	CAP,CER 332K-B1H -CP
I.MX-P.W.Board(Main-unit)			C6002	08S45232Y08	CAP,CER 332K-B1H -CP
I.MX-P.W.Board(Main-unit)			C6003	08S45231Y25	CAP,CER 101J-CH1H-CP
I.MX-P.W.Board(Main-unit)			C6005	08-14627Z01	CAP,CER 107MX5R0J-CP
I.MX-P.W.Board(Main-unit)			C6006	08S65669Y03	CAP,CER 224KX7R1H-CP
I.MX-P.W.Board(Main-unit)			C6007	08-15113Z03	CAP,CER 475KX7R1C-CP
I.MX-P.W.Board(Main-unit)			C6008	08S65669Y03	CAP,CER 224KX7R1H-CP
I.MX-P.W.Board(Main-unit)			C6009	08S35374W10	CAP,CER 225K-B1A -CP
I.MX-P.W.Board(Main-unit)			C6010	08-15113Z03	CAP,CER 475KX7R1C-CP
I.MX-P.W.Board(Main-unit)			C6011	08S35374W10	CAP,CER 225K-B1A -CP
I.MX-P.W.Board(Main-unit)			C6012	08S65669Y03	CAP,CER 224KX7R1H-CP
I.MX-P.W.Board(Main-unit)			C6013	08S65669Y03	CAP,CER 224KX7R1H-CP
I.MX-P.W.Board(Main-unit)			C6014	08S65668Y05	CAP,CER 224KX5R1A-CP
I.MX-P.W.Board(Main-unit)			C6015	08S65668Y05	CAP,CER 224KX5R1A-CP
I.MX-P.W.Board(Main-unit)			C6300	08S65668Y07	CAP,CER 103KX5R1H-CP
I.MX-P.W.Board(Main-unit)			C6301	08S65668Y07	CAP,CER 103KX5R1H-CP
I.MX-P.W.Board(Main-unit)			C6302	08S65668Y07	CAP,CER 103KX5R1H-CP
I.MX-P.W.Board(Main-unit)			C6310	08S65669Y03	CAP,CER 224KX7R1H-CP
I.MX-P.W.Board(Main-unit)			C6311	08S65669Y03	CAP,CER 224KX7R1H-CP
I.MX-P.W.Board(Main-unit)			C6312	08S65669Y03	CAP,CER 224KX7R1H-CP
I.MX-P.W.Board(Main-unit)			C6313	08S65669Y03	CAP,CER 224KX7R1H-CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
I.MX-P.W.Board(Main-unit)		C6314	08S65669Y03	CAP,CER 224KX7R1H-CP	
I.MX-P.W.Board(Main-unit)		C6315	08S65669Y03	CAP,CER 224KX7R1H-CP	
I.MX-P.W.Board(Main-unit)		C6320	08S45231Y38	CAP,CER 102J-CH1H-CP	
I.MX-P.W.Board(Main-unit)		C6400	08S45676W83	CAP,CER 473K-B1C -CP	
I.MX-P.W.Board(Main-unit)		C6401	08S65670Y04	CAP,CER 475KX5R1E-CP	
I.MX-P.W.Board(Main-unit)		C6402	08S65670Y04	CAP,CER 475KX5R1E-CP	
I.MX-P.W.Board(Main-unit)		C6403	08S65668Y05	CAP,CER 224KX5R1A-CP	
I.MX-P.W.Board(Main-unit)		C6404	08S45676W83	CAP,CER 473K-B1C -CP	
I.MX-P.W.Board(Main-unit)		C6405	08S65670Y04	CAP,CER 475KX5R1E-CP	
I.MX-P.W.Board(Main-unit)		C6406	08S65670Y04	CAP,CER 475KX5R1E-CP	
I.MX-P.W.Board(Main-unit)		C6407	08S65668Y05	CAP,CER 224KX5R1A-CP	
I.MX-P.W.Board(Main-unit)		C6408	08S65669Y03	CAP,CER 224KX7R1H-CP	
I.MX-P.W.Board(Main-unit)		C6409	08S45231Y31	CAP,CER 331J-CH1H-CP	
I.MX-P.W.Board(Main-unit)		C6410	08S45231Y31	CAP,CER 331J-CH1H-CP	
I.MX-P.W.Board(Main-unit)		C6411	08S45231Y25	CAP,CER 101J-CH1H-CP	
I.MX-P.W.Board(Main-unit)		C6412	08S65668Y05	CAP,CER 224KX5R1A-CP	
I.MX-P.W.Board(Main-unit)		C6413	08S65668Y05	CAP,CER 224KX5R1A-CP	
I.MX-P.W.Board(Main-unit)		C6414	08S65676Y08	CAP,CER 106K-X7R1ACP	
I.MX-P.W.Board(Main-unit)		C6415	08S65676Y08	CAP,CER 106K-X7R1ACP	
I.MX-P.W.Board(Main-unit)		C6416	08S45676W73	CAP,CER.103K-B1H -CP	
I.MX-P.W.Board(Main-unit)		C6417	08S65676Y08	CAP,CER 106K-X7R1ACP	
I.MX-P.W.Board(Main-unit)		C6418	08S45231Y31	CAP,CER 331J-CH1H-CP	
I.MX-P.W.Board(Main-unit)		C6419	08S45231Y25	CAP,CER 101J-CH1H-CP	
I.MX-P.W.Board(Main-unit)		C6420	08S65676Y08	CAP,CER 106K-X7R1ACP	
I.MX-P.W.Board(Main-unit)		C6421	08S65676Y08	CAP,CER 106K-X7R1ACP	

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
I.MX-P.W.Board(Main-unit)		C6422	08S45231Y25	CAP,CER 101J-CH1H-CP	
I.MX-P.W.Board(Main-unit)		C6423	08-26091Z01	CAP,CER 102KX7R2J-CP	
I.MX-P.W.Board(Main-unit)		C6424	08S65669Y05	CAP,CER 106KX7R0J-CP	
I.MX-P.W.Board(Main-unit)		C6425	08S65668Y05	CAP,CER 224KX5R1A-CP	
I.MX-P.W.Board(Main-unit)		C6426	08S65668Y05	CAP,CER 224KX5R1A-CP	
I.MX-P.W.Board(Main-unit)		C6427	08S45231Y17	CAP,CER 22RJ-CH1H-CP	
I.MX-P.W.Board(Main-unit)		C6428	08S35350Y03	CAP,CER 224K-B1C -CP	
I.MX-P.W.Board(Main-unit)		C6429	08S45231Y17	CAP,CER 22RJ-CH1H-CP	
I.MX-P.W.Board(Main-unit)		C6430	08S65669Y05	CAP,CER 106KX7R0J-CP	
I.MX-P.W.Board(Main-unit)		C6431	08S65676Y08	CAP,CER 106K-X7R1ACP	
I.MX-P.W.Board(Main-unit)		C6432	08S45231Y25	CAP,CER 101J-CH1H-CP	
I.MX-P.W.Board(Main-unit)		C6433	08S45231Y25	CAP,CER 101J-CH1H-CP	
I.MX-P.W.Board(Main-unit)		CB4001	09-14451Z06	FFC,502790-3091 -ED	
I.MX-P.W.Board(Main-unit)		CB5100	09-25213Z01	WTB,TCX3400-011187-T	
I.MX-P.W.Board(Main-unit)		CB5200	09-25213Z01	WTB,TCX3400-011187-T	
I.MX-P.W.Board(Main-unit)		CB6100	09-19907Z03	BTB,IMSA9984B-100YEZ	
I.MX-P.W.Board(Main-unit)		CB6300	09-29652Z01	BTB,FX23-100P-0.5S-T	
I.MX-P.W.Board(Main-unit)		CB6400	09-25106Z05	WTB,S18B-PUDSS-1 -DB	
I.MX-P.W.Board(Main-unit)		D5101	48-08988Z01	VST,EZJZ0V800AA -CP	
I.MX-P.W.Board(Main-unit)		D5102	48-08988Z01	VST,EZJZ0V800AA -CP	
I.MX-P.W.Board(Main-unit)		D5104	48-08988Z01	VST,EZJZ0V800AA -CP	
I.MX-P.W.Board(Main-unit)		D5204	48-05164Z01	DIO,1SS352-TPH3 -CP	
I.MX-P.W.Board(Main-unit)		D5701	48-08988Z01	VST,EZJZ0V800AA -CP	
I.MX-P.W.Board(Main-unit)		D5702	48-08988Z01	VST,EZJZ0V800AA -CP	
I.MX-P.W.Board(Main-unit)		D6400	48-19711Z01	DIO,BAV99W -CP	

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
I.MX-P.W.Board(Main-unit)		D6401	48T75527Y01	DIO,1SR154-400 -E1	
I.MX-P.W.Board(Main-unit)		E4000	23-22657Z06	CAP,CX 221-0G -E2	
I.MX-P.W.Board(Main-unit)		E4001	23-22657Z06	CAP,CX 221-0G -E2	
I.MX-P.W.Board(Main-unit)		E5700	23S75244Y19	CAP,ELY 101-1C -E6	
I.MX-P.W.Board(Main-unit)		E5701	23-31100Z19	CAP,MAK 33R-1E -E6	
I.MX-P.W.Board(Main-unit)		E6310	23-31100Z19	CAP,MAK 33R-1E -E6	
I.MX-P.W.Board(Main-unit)		F6200	65-10745Z09	FUSE,TF16AT 2.00A-CP	
I.MX-P.W.Board(Main-unit)		IC4000	51-29541Z01	MCIMX6D6AVT08AD -BT	
I.MX-P.W.Board(Main-unit)		IC4200	51-27163Z02	H5TQ4G63CFR-RDC -BT	
I.MX-P.W.Board(Main-unit)		IC4201	51-27163Z02	H5TQ4G63CFR-RDC -BT	
I.MX-P.W.Board(Main-unit)		IC4202	51-27163Z02	H5TQ4G63CFR-RDC -BT	
I.MX-P.W.Board(Main-unit)		IC4203	51-27163Z02	H5TQ4G63CFR-RDC -BT	
I.MX-P.W.Board(Main-unit)		IC4300	83-32412Z42	16LIMO_NorFlash_iMAX_IC4300_Software	
I.MX-P.W.Board(Main-unit)		IC4300	51-27465Z01	S29GL256S90TFI010-ST	
I.MX-P.W.Board(Main-unit)		IC4400	83-32412Z41	16LIMO_eMMC_iMAX_IC4400_Software	
I.MX-P.W.Board(Main-unit)		IC4400	51-29432Z01	H26M41103HPR -BT	
I.MX-P.W.Board(Main-unit)		IC4500	51-26850Z01	MFI337S3959 -CP	
I.MX-P.W.Board(Main-unit)		IC4600	51T15185Y03	TC7SH08FU,LJ -CP	
I.MX-P.W.Board(Main-unit)		IC4601	51T65003Y03	TC7SZ05FU,LJ -CP	
I.MX-P.W.Board(Main-unit)		IC4602	51T65003Y03	TC7SZ05FU,LJ -CP	
I.MX-P.W.Board(Main-unit)		IC4700	51T35220Y01	TC7WH126FU-TE12L-SE1	
I.MX-P.W.Board(Main-unit)		IC5000	51-19098Z01	BU16002KVT-E2 -QEA	
I.MX-P.W.Board(Main-unit)		IC5100	51-27798Z01	ADV7511WBSWZ-RL -QEA	
I.MX-P.W.Board(Main-unit)		IC5200	51-29819Z01	ADV7480WBBCZ -BT	
I.MX-P.W.Board(Main-unit)		IC5300	51-29818Z01	ML86V8201 -QT	

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
I.MX-P.W.Board(Main-unit)		IC5400	51-29313Z01	DS90UH927QSQ -LE6	
I.MX-P.W.Board(Main-unit)		IC5500	51-29718Z01	UGKZ4D6009A -NE9	
I.MX-P.W.Board(Main-unit)		IC5501	51-13971Z01	TC74VCX08FT-EL -SE5	
I.MX-P.W.Board(Main-unit)		IC5502	51-15608Z01	TC7WPN3125FK-TE85LCP	
I.MX-P.W.Board(Main-unit)		IC5503	51-15608Z01	TC7WPN3125FK-TE85LCP	
I.MX-P.W.Board(Main-unit)		IC5504	51-15608Z01	TC7WPN3125FK-TE85LCP	
I.MX-P.W.Board(Main-unit)		IC5600	51-29896Z01	LTC3676HUJ#TRA1 -LE6	
I.MX-P.W.Board(Main-unit)		IC5650	51-28779Z02	BD90640EFJ-CE2 -SE2	
I.MX-P.W.Board(Main-unit)		IC5700	51-28538Z02	MAX16984RATI/V+ -LE2	
I.MX-P.W.Board(Main-unit)		IC5701	51-21632Z01	BD11600NUX-E2 -CE1	
I.MX-P.W.Board(Main-unit)		IC5800	51-28614Z01	BD00FC0EEFJ-ME2 -SE2	
I.MX-P.W.Board(Main-unit)		IC5801	51-28341Z01	S-1323B52-N4BB30 -CP	
I.MX-P.W.Board(Main-unit)		IC6000	51-28779Z01	BD90620EFJ-CE2 -SE2	
I.MX-P.W.Board(Main-unit)		IC6001	51-23593Z02	BD00IC0WEFJ-ME2 -SE2	
I.MX-P.W.Board(Main-unit)		IC6002	51-23593Z05	BD00IA5EEFJ-ME2 -SE2	
I.MX-P.W.Board(Main-unit)		IC6400	51-12745Z01	BH7073G-TR -CP	
I.MX-P.W.Board(Main-unit)		IC6401	51-12745Z01	BH7073G-TR -CP	
I.MX-P.W.Board(Main-unit)		IC6402	51T15192Y02	TC74VHC14FT,K-EL-SE5	
I.MX-P.W.Board(Main-unit)		IC6403	51T25183Y04	TC7SET08FU,LJ -CP	
I.MX-P.W.Board(Main-unit)		IC6404	51T15185Y03	TC7SH08FU,LJ -CP	
I.MX-P.W.Board(Main-unit)		IC6405	51-31236Z01	ML22331 -ST	
I.MX-P.W.Board(Main-unit)		L5100	24-22766Z02	IND,LBC3225 10RM -CP	
I.MX-P.W.Board(Main-unit)		L5101	24-22766Z02	IND,LBC3225 10RM -CP	
I.MX-P.W.Board(Main-unit)		L5102	24-22766Z02	IND,LBC3225 10RM -CP	
I.MX-P.W.Board(Main-unit)		L5103	24-22766Z02	IND,LBC3225 10RM -CP	

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
I.MX-P.W.Board(Main-unit)		L5400	24T95456W27	FBI,BLM18PG181SH1-CP	
I.MX-P.W.Board(Main-unit)		L5502	24-22766Z01	IND,LBC3225 2R2M -CP	
I.MX-P.W.Board(Main-unit)		L5503	24-22766Z03	IND,LBC3225 1R0M -CP	
I.MX-P.W.Board(Main-unit)		L5504	24T25164Y09	IND,FSLM2520 R47J-CP	
I.MX-P.W.Board(Main-unit)		L5600	24-22372Z05	IND,NRS6045T 2R3N-E2	
I.MX-P.W.Board(Main-unit)		L5601	24-22372Z05	IND,NRS6045T 2R3N-E2	
I.MX-P.W.Board(Main-unit)		L5602	24-22372Z05	IND,NRS6045T 2R3N-E2	
I.MX-P.W.Board(Main-unit)		L5603	24-22372Z05	IND,NRS6045T 2R3N-E2	
I.MX-P.W.Board(Main-unit)		L5650	24-22372Z05	IND,NRS6045T 2R3N-E2	
I.MX-P.W.Board(Main-unit)		L5651	24-08610Z03	IND,DS106C2 10RM -EA	
I.MX-P.W.Board(Main-unit)		L5700	24-23871Z01	IND,NRS8040T 10RM-E6	
I.MX-P.W.Board(Main-unit)		L5701	24T95458W06	FBI,BLM31PG121SH1-CP	
I.MX-P.W.Board(Main-unit)		L5704	24T75143Y17	IND,HK1005 R022J -CP	
I.MX-P.W.Board(Main-unit)		L5705	24T75143Y17	IND,HK1005 R022J -CP	
I.MX-P.W.Board(Main-unit)		L6000	24-13301Z07	IND,DS75LC 10RM -E6	
I.MX-P.W.Board(Main-unit)		L6030	24-22766Z03	IND,LBC3225 1R0M -CP	
I.MX-P.W.Board(Main-unit)		L6400	24T65067Y02	FBI,MMZ1005S601AT-CP	
I.MX-P.W.Board(Main-unit)		L6401	24T65067Y02	FBI,MMZ1005S601AT-CP	
I.MX-P.W.Board(Main-unit)		PS6400	48-27319Z01	POLY,SW1812L150/24E2	
I.MX-P.W.Board(Main-unit)		Q4000	48-17548Z01	TR,DSA500100L -CP	
I.MX-P.W.Board(Main-unit)		Q4001	48-13000Z05	TR,LTC124EUBFS8-TLCP	
I.MX-P.W.Board(Main-unit)		Q5200	48T25737Y02	TR,UMD3N-TR -CP	
I.MX-P.W.Board(Main-unit)		Q5800	48T25737Y02	TR,UMD3N-TR -CP	
I.MX-P.W.Board(Main-unit)		Q6400	48T63417F03	TR,C2412K-BR-96 -CP	
I.MX-P.W.Board(Main-unit)		R4000	06S15616Y36	RES,RK 225J 1/16 -CP	

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
I.MX-P.W.Board(Main-unit)			R4001	06S15616Y23	RES,RK JUMPER1/16-CP
I.MX-P.W.Board(Main-unit)			R4003	06S15616Y22	RES,RK 105J 1/16 -CP
I.MX-P.W.Board(Main-unit)			R4005	06S15615Y09	RES,RK 22RJ 1/16 -CP
I.MX-P.W.Board(Main-unit)			R4006	06S15615Y49	RES,RK 102J 1/16 -CP
I.MX-P.W.Board(Main-unit)			R4007	06S15615Y57	RES,RK 222J 1/16 -CP
I.MX-P.W.Board(Main-unit)			R4008	06S15615Y57	RES,RK 222J 1/16 -CP
I.MX-P.W.Board(Main-unit)			R4009	06S15615Y57	RES,RK 222J 1/16 -CP
I.MX-P.W.Board(Main-unit)			R4010	06S15615Y57	RES,RK 222J 1/16 -CP
I.MX-P.W.Board(Main-unit)			R4011	06S15616Y23	RES,RK JUMPER1/16-CP
I.MX-P.W.Board(Main-unit)			R4012	06S15615Y25	RES,RK 101J 1/16 -CP
I.MX-P.W.Board(Main-unit)			R4013	06S15615Y25	RES,RK 101J 1/16 -CP
I.MX-P.W.Board(Main-unit)			R4014	06S15615Y25	RES,RK 101J 1/16 -CP
I.MX-P.W.Board(Main-unit)			R4015	06S15615Y25	RES,RK 101J 1/16 -CP
I.MX-P.W.Board(Main-unit)			R4016	06S15615Y25	RES,RK 101J 1/16 -CP
I.MX-P.W.Board(Main-unit)			R4017	06S15615Y09	RES,RK 22RJ 1/16 -CP
I.MX-P.W.Board(Main-unit)			R4018	06S15615Y09	RES,RK 22RJ 1/16 -CP
I.MX-P.W.Board(Main-unit)			R4020	06S15615Y25	RES,RK 101J 1/16 -CP
I.MX-P.W.Board(Main-unit)			R4021	06S15616Y23	RES,RK JUMPER1/16-CP
I.MX-P.W.Board(Main-unit)			R4022	06S15616Y23	RES,RK JUMPER1/16-CP
I.MX-P.W.Board(Main-unit)			R4023	06S15615Y25	RES,RK 101J 1/16 -CP
I.MX-P.W.Board(Main-unit)			R4024	06S15615Y25	RES,RK 101J 1/16 -CP
I.MX-P.W.Board(Main-unit)			R4025	06S15615Y25	RES,RK 101J 1/16 -CP
I.MX-P.W.Board(Main-unit)			R4026	06S15615Y25	RES,RK 101J 1/16 -CP
I.MX-P.W.Board(Main-unit)			R4027	06S15615Y25	RES,RK 101J 1/16 -CP
I.MX-P.W.Board(Main-unit)			R4028	06S15615Y25	RES,RK 101J 1/16 -CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
I.MX-P.W.Board(Main-unit)		R4029	06S15615Y25	RES,RK 101J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R4030	06S15615Y25	RES,RK 101J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R4031	06S15615Y25	RES,RK 101J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R4033	06S15615Y09	RES,RK 22RJ 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R4034	06S15616Y23	RES,RK JUMPER1/16-CP	
I.MX-P.W.Board(Main-unit)		R4035	06S15616Y23	RES,RK JUMPER1/16-CP	
I.MX-P.W.Board(Main-unit)		R4036	06S15616Y23	RES,RK JUMPER1/16-CP	
I.MX-P.W.Board(Main-unit)		R4037	06S15616Y23	RES,RK JUMPER1/16-CP	
I.MX-P.W.Board(Main-unit)		R4038	06S15616Y23	RES,RK JUMPER1/16-CP	
I.MX-P.W.Board(Main-unit)		R4044	06S15615Y25	RES,RK 101J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R4045	06S15615Y25	RES,RK 101J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R4046	06S15615Y25	RES,RK 101J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R4047	06S15615Y25	RES,RK 101J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R4048	06S15615Y25	RES,RK 101J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R4049	06S15615Y25	RES,RK 101J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R4050	06S15615Y57	RES,RK 222J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R4051	06S15615Y57	RES,RK 222J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R4052	06S15615Y21	RES,RK 68RJ 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R4053	06S15615Y25	RES,RK 101J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R4054	06S15615Y25	RES,RK 101J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R4055	06S15615Y25	RES,RK 101J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R4056	06S65415Y85	RES,RK 241F 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R4058	06S15615Y73	RES,RK 103J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R4059	06-02713Z04	RES,RK 102D 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R4060	06-02713Z04	RES,RK 102D 1/16 -CP	

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
I.MX-P.W.Board(Main-unit)		R4061	06S15615Y25	RES,RK 101J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R4062	06S15615Y25	RES,RK 101J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R4064	06S45675W43	RES,RK JUMPER1/10-CP	
I.MX-P.W.Board(Main-unit)		R4068	06S15616Y23	RES,RK JUMPER1/16-CP	
I.MX-P.W.Board(Main-unit)		R4069	06-25919Z07	RES,RK 243F 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R4070	06S65415Y55	RES,RK 334F 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R4071	06S65415Y34	RES,RK 562F 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R4073	06S45675W43	RES,RK JUMPER1/10-CP	
I.MX-P.W.Board(Main-unit)		R4074	06S65415Y63	RES,RK 6041F 1/16-CP	
I.MX-P.W.Board(Main-unit)		R4076	06S15615Y73	RES,RK 103J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R4077	06S15615Y73	RES,RK 103J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R4079	06S65415Y48	RES,RK 823F 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R4080	06S65415Y99	RES,RK 512F 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R4200	06S65415Y84	RES,RK 201F 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R4201	06S65415Y25	RES,RK 102F 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R4202	06S65415Y25	RES,RK 102F 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R4203	06S65415Y25	RES,RK 102F 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R4204	06S65415Y25	RES,RK 102F 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R4205	06S65415Y85	RES,RK 241F 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R4206	06S65415Y84	RES,RK 201F 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R4207	06S65415Y25	RES,RK 102F 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R4208	06S65415Y25	RES,RK 102F 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R4209	06S65415Y25	RES,RK 102F 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R4210	06S65415Y25	RES,RK 102F 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R4211	06S65415Y85	RES,RK 241F 1/16 -CP	

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
I.MX-P.W.Board(Main-unit)		R4212	06S65415Y84	RES,RK 201F 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R4213	06S65415Y25	RES,RK 102F 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R4214	06S65415Y25	RES,RK 102F 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R4215	06S65415Y25	RES,RK 102F 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R4216	06S65415Y25	RES,RK 102F 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R4217	06S65415Y85	RES,RK 241F 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R4218	06S65415Y84	RES,RK 201F 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R4219	06S65415Y25	RES,RK 102F 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R4220	06S65415Y25	RES,RK 102F 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R4221	06S65415Y25	RES,RK 102F 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R4222	06S65415Y25	RES,RK 102F 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R4223	06S65415Y85	RES,RK 241F 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R4300	06S15615Y73	RES,RK 103J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R4303	06S15615Y73	RES,RK 103J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R4304	06S15615Y73	RES,RK 103J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R4305	06S15615Y73	RES,RK 103J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R4306	06S15615Y73	RES,RK 103J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R4307	06S15615Y73	RES,RK 103J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R4308	06S15615Y73	RES,RK 103J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R4309	06S15615Y73	RES,RK 103J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R4310	06S15615Y73	RES,RK 103J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R4311	06S15615Y73	RES,RK 103J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R4312	06S15615Y73	RES,RK 103J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R4314	06S15615Y73	RES,RK 103J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R4315	06S15615Y73	RES,RK 103J 1/16 -CP	

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
I.MX-P.W.Board(Main-unit)		R4316	06S15615Y73	RES,RK 103J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R4317	06S15615Y73	RES,RK 103J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R4318	06S15615Y73	RES,RK 103J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R4319	06S15615Y73	RES,RK 103J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R4320	06S15615Y73	RES,RK 103J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R4321	06S15615Y73	RES,RK 103J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R4322	06S15615Y73	RES,RK 103J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R4323	06S15615Y73	RES,RK 103J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R4324	06S15615Y73	RES,RK 103J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R4325	06S15615Y73	RES,RK 103J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R4326	06S15615Y73	RES,RK 103J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R4327	06S15615Y73	RES,RK 103J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R4328	06S15615Y73	RES,RK 103J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R4329	06S15615Y73	RES,RK 103J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R4332	06S15615Y73	RES,RK 103J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R4333	06S15615Y73	RES,RK 103J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R4336	06S15615Y73	RES,RK 103J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R4338	06S45674W81	RES,RK 103J 1/10 -CP	
I.MX-P.W.Board(Main-unit)		R4339	06S45674W81	RES,RK 103J 1/10 -CP	
I.MX-P.W.Board(Main-unit)		R4341	06S45674W81	RES,RK 103J 1/10 -CP	
I.MX-P.W.Board(Main-unit)		R4400	06S15615Y25	RES,RK 101J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R4401	06S15615Y25	RES,RK 101J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R4402	06S15615Y25	RES,RK 101J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R4403	06S15615Y25	RES,RK 101J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R4404	06S15615Y25	RES,RK 101J 1/16 -CP	

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
I.MX-P.W.Board(Main-unit)		R4405	06S15615Y25	RES,RK 101J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R4406	06S15615Y25	RES,RK 101J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R4407	06S15615Y25	RES,RK 101J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R4408	06S15615Y25	RES,RK 101J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R4409	06S15615Y73	RES,RK 103J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R4410	06S15615Y73	RES,RK 103J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R4411	06S45675W43	RES,RK JUMPER1/10-CP	
I.MX-P.W.Board(Main-unit)		R4500	06S15615Y25	RES,RK 101J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R4501	06S15615Y73	RES,RK 103J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R4601	06S15616Y23	RES,RK JUMPER1/16-CP	
I.MX-P.W.Board(Main-unit)		R4602	06S15615Y73	RES,RK 103J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R4603	06S15615Y73	RES,RK 103J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R4604	06S15615Y09	RES,RK 22RJ 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R4700	06S15615Y73	RES,RK 103J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R4701	06S15615Y73	RES,RK 103J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5000	06S45675W43	RES,RK JUMPER1/10-CP	
I.MX-P.W.Board(Main-unit)		R5001	06S15615Y25	RES,RK 101J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5002	06S15615Y25	RES,RK 101J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5003	06S15615Y25	RES,RK 101J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5004	06S15615Y25	RES,RK 101J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5005	06S15615Y25	RES,RK 101J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5006	06S15616Y23	RES,RK JUMPER1/16-CP	
I.MX-P.W.Board(Main-unit)		R5007	06S15616Y23	RES,RK JUMPER1/16-CP	
I.MX-P.W.Board(Main-unit)		R5008	06S15616Y23	RES,RK JUMPER1/16-CP	
I.MX-P.W.Board(Main-unit)		R5009	06S15615Y21	RES,RK 68RJ 1/16 -CP	

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
I.MX-P.W.Board(Main-unit)		R5100	06S15615Y81	RES,RK 223J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5101	06S15615Y81	RES,RK 223J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5102	06S15615Y73	RES,RK 103J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5103	06S15615Y81	RES,RK 223J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5104	06S65415Y87	RES,RK 431F 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5105	06S65415Y87	RES,RK 431F 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5106	06S65415Y06	RES,RK 27RF 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5107	06S15615Y25	RES,RK 101J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5108	06S70072F59	RES,CP .182-J-1/4-CP	
I.MX-P.W.Board(Main-unit)		R5109	06S70072F59	RES,CP .182-J-1/4-CP	
I.MX-P.W.Board(Main-unit)		R5110	06S15616Y23	RES,RK JUMPER1/16-CP	
I.MX-P.W.Board(Main-unit)		R5111	06S15616Y23	RES,RK JUMPER1/16-CP	
I.MX-P.W.Board(Main-unit)		R5112	06S15615Y57	RES,RK 222J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5115	06S15615Y73	RES,RK 103J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5116	06S70072F29	RES,CP .101-J-1/4-CP	
I.MX-P.W.Board(Main-unit)		R5117	06S70072F29	RES,CP .101-J-1/4-CP	
I.MX-P.W.Board(Main-unit)		R5119	06S70072F77	RES,CP .103-J-1/4-CP	
I.MX-P.W.Board(Main-unit)		R5120	06S70072F29	RES,CP .101-J-1/4-CP	
I.MX-P.W.Board(Main-unit)		R5122	06S15616Y23	RES,RK JUMPER1/16-CP	
I.MX-P.W.Board(Main-unit)		R5200	06S45675W43	RES,RK JUMPER1/10-CP	
I.MX-P.W.Board(Main-unit)		R5201	06S45675W43	RES,RK JUMPER1/10-CP	
I.MX-P.W.Board(Main-unit)		R5202	06S45675W43	RES,RK JUMPER1/10-CP	
I.MX-P.W.Board(Main-unit)		R5203	06S45675W43	RES,RK JUMPER1/10-CP	
I.MX-P.W.Board(Main-unit)		R5204	06S45675W43	RES,RK JUMPER1/10-CP	
I.MX-P.W.Board(Main-unit)		R5205	06S45675W43	RES,RK JUMPER1/10-CP	

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
I.MX-P.W.Board(Main-unit)			R5206	06S70072F53	RES,CP .102-J-1/4-CP
I.MX-P.W.Board(Main-unit)			R5207	06S70072F29	RES,CP .101-J-1/4-CP
I.MX-P.W.Board(Main-unit)			R5208	06S70072F29	RES,CP .101-J-1/4-CP
I.MX-P.W.Board(Main-unit)			R5209	06S70072F29	RES,CP .101-J-1/4-CP
I.MX-P.W.Board(Main-unit)			R5210	06S15615Y89	RES,RK 473J 1/16 -CP
I.MX-P.W.Board(Main-unit)			R5212	06S45675W43	RES,RK JUMPER1/10-CP
I.MX-P.W.Board(Main-unit)			R5213	06S65415Y41	RES,RK 223F 1/16 -CP
I.MX-P.W.Board(Main-unit)			R5214	06S15615Y83	RES,RK 273J 1/16 -CP
I.MX-P.W.Board(Main-unit)			R5216	06S15615Y41	RES,RK 471J 1/16 -CP
I.MX-P.W.Board(Main-unit)			R5217	06S15615Y97	RES,RK 104J 1/16 -CP
I.MX-P.W.Board(Main-unit)			R5218	06S15615Y89	RES,RK 473J 1/16 -CP
I.MX-P.W.Board(Main-unit)			R5219	06S15616Y23	RES,RK JUMPER1/16-CP
I.MX-P.W.Board(Main-unit)			R5220	06S15616Y23	RES,RK JUMPER1/16-CP
I.MX-P.W.Board(Main-unit)			R5221	06S15616Y23	RES,RK JUMPER1/16-CP
I.MX-P.W.Board(Main-unit)			R5222	06S15616Y23	RES,RK JUMPER1/16-CP
I.MX-P.W.Board(Main-unit)			R5223	06S15616Y23	RES,RK JUMPER1/16-CP
I.MX-P.W.Board(Main-unit)			R5224	06S15616Y23	RES,RK JUMPER1/16-CP
I.MX-P.W.Board(Main-unit)			R5225	06S15616Y23	RES,RK JUMPER1/16-CP
I.MX-P.W.Board(Main-unit)			R5226	06S15616Y23	RES,RK JUMPER1/16-CP
I.MX-P.W.Board(Main-unit)			R5227	06S65415Y33	RES,RK 472F 1/16 -CP
I.MX-P.W.Board(Main-unit)			R5228	06S65415Y33	RES,RK 472F 1/16 -CP
I.MX-P.W.Board(Main-unit)			R5230	06S15615Y73	RES,RK 103J 1/16 -CP
I.MX-P.W.Board(Main-unit)			R5232	06S15615Y73	RES,RK 103J 1/16 -CP
I.MX-P.W.Board(Main-unit)			R5233	06S15615Y25	RES,RK 101J 1/16 -CP
I.MX-P.W.Board(Main-unit)			R5234	06S15615Y25	RES,RK 101J 1/16 -CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
I.MX-P.W.Board(Main-unit)		R5235	06S15615Y25	RES,RK 101J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5236	06S15615Y25	RES,RK 101J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5300	06S45675W43	RES,RK JUMPER1/10-CP	
I.MX-P.W.Board(Main-unit)		R5301	06S45675W43	RES,RK JUMPER1/10-CP	
I.MX-P.W.Board(Main-unit)		R5302	06S45675W43	RES,RK JUMPER1/10-CP	
I.MX-P.W.Board(Main-unit)		R5303	06S45675W43	RES,RK JUMPER1/10-CP	
I.MX-P.W.Board(Main-unit)		R5304	06S45675W43	RES,RK JUMPER1/10-CP	
I.MX-P.W.Board(Main-unit)		R5305	06S15615Y73	RES,RK 103J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5306	06S15615Y25	RES,RK 101J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5308	06S15615Y73	RES,RK 103J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5309	06S15615Y73	RES,RK 103J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5312	06S15615Y73	RES,RK 103J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5313	06S15616Y22	RES,RK 105J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5314	06S15615Y53	RES,RK 152J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5315	06S15615Y13	RES,RK 33RJ 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5401	06S15615Y25	RES,RK 101J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5402	06S15615Y25	RES,RK 101J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5403	06S15615Y25	RES,RK 101J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5404	06S15615Y25	RES,RK 101J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5405	06S15615Y25	RES,RK 101J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5406	06S15615Y73	RES,RK 103J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5407	06S15615Y73	RES,RK 103J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5408	06S15615Y73	RES,RK 103J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5411	06S15615Y65	RES,RK 472J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5413	06S15615Y73	RES,RK 103J 1/16 -CP	

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
I.MX-P.W.Board(Main-unit)		R5416	06S15615Y25	RES,RK 101J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5418	06S15615Y73	RES,RK 103J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5500	06S15615Y09	RES,RK 22RJ 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5501	06S15615Y09	RES,RK 22RJ 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5502	06S15615Y09	RES,RK 22RJ 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5503	06S15615Y09	RES,RK 22RJ 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5504	06S15615Y25	RES,RK 101J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5505	06S15615Y25	RES,RK 101J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5506	06S15615Y25	RES,RK 101J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5507	06S15615Y09	RES,RK 22RJ 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5508	06S15615Y09	RES,RK 22RJ 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5509	06S15615Y09	RES,RK 22RJ 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5510	06S15615Y09	RES,RK 22RJ 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5511	06S15615Y09	RES,RK 22RJ 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5512	06S15615Y09	RES,RK 22RJ 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5513	06S15615Y25	RES,RK 101J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5514	06S15615Y09	RES,RK 22RJ 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5520	06S45675W43	RES,RK JUMPER1/10-CP	
I.MX-P.W.Board(Main-unit)		R5521	06S45675W43	RES,RK JUMPER1/10-CP	
I.MX-P.W.Board(Main-unit)		R5522	06S15615Y09	RES,RK 22RJ 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5523	06S15615Y09	RES,RK 22RJ 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5524	06S15615Y09	RES,RK 22RJ 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5525	06S15615Y09	RES,RK 22RJ 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5526	06S15615Y09	RES,RK 22RJ 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5527	06S15616Y23	RES,RK JUMPER1/16-CP	

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
I.MX-P.W.Board(Main-unit)		R5528	06S15615Y65	RES,RK 472J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5600	06S15615Y73	RES,RK 103J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5601	06S15615Y73	RES,RK 103J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5602	06S15615Y73	RES,RK 103J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5603	06S15615Y73	RES,RK 103J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5604	06S15615Y25	RES,RK 101J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5605	06S65415Y47	RES,RK 683F 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5606	06S65415Y29	RES,RK 222F 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5607	06S65415Y47	RES,RK 683F 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5608	06S65415Y33	RES,RK 472F 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5609	06S65415Y99	RES,RK 512F 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5610	06-25919Z17	RES,RK 164F 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5611	06S65415Y47	RES,RK 683F 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5612	06S65415Y37	RES,RK 103F 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5613	06S65415Y41	RES,RK 223F 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5614	06S15615Y41	RES,RK 471J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5615	06S65415Y52	RES,RK 184F 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5616	06S65415Y34	RES,RK 562F 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5617	06S65415Y47	RES,RK 683F 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5618	06S65415Y29	RES,RK 222F 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5619	06S65415Y47	RES,RK 683F 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5620	06S65415Y33	RES,RK 472F 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5621	06-25919Z22	RES,RK 434F 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5622	06-25919Z13	RES,RK 753F 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5623	06S65415Y47	RES,RK 683F 1/16 -CP	

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
I.MX-P.W.Board(Main-unit)		R5624	06S65415Y33	RES,RK 472F 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5625	06S65415Y47	RES,RK 683F 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5627	06-25919Z17	RES,RK 164F 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5628	06S65415Y99	RES,RK 512F 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5629	06S65415Y41	RES,RK 223F 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5630	06S65415Y37	RES,RK 103F 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5631	06S65415Y37	RES,RK 103F 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5632	06S15615Y41	RES,RK 471J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5633	06S65415Y47	RES,RK 683F 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5634	06S65415Y30	RES,RK 272F 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5635	06S65415Y41	RES,RK 223F 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5636	06S15615Y41	RES,RK 471J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5637	06-25919Z12	RES,RK 623F 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5638	06S65415Y66	RES,RK 622F 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5639	06S65415Y47	RES,RK 683F 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5640	06S15615Y41	RES,RK 471J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5641	06S65415Y35	RES,RK 682F 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5642	06S65415Y44	RES,RK 393F 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5643	06-25919Z18	RES,RK 204F 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5644	06-25919Z13	RES,RK 753F 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5645	06S15615Y41	RES,RK 471J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5646	06S15615Y41	RES,RK 471J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5647	06S15615Y41	RES,RK 471J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5648	06S15616Y23	RES,RK JUMPER1/16-CP	
I.MX-P.W.Board(Main-unit)		R5650	06S15615Y25	RES,RK 101J 1/16 -CP	

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
I.MX-P.W.Board(Main-unit)		R5651	06S15615Y67	RES,RK 562J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5652	06S65415Y31	RES,RK 332F 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5653	06S65415Y26	RES,RK 122F 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5654	06S65415Y38	RES,RK 123F 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5655	06S65415Y42	RES,RK 273F 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5657	06S15616Y23	RES,RK JUMPER1/16-CP	
I.MX-P.W.Board(Main-unit)		R5658	06S65415Y59	RES,RK 684F 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5659	06S65415Y34	RES,RK 562F 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5700	06S15615Y73	RES,RK 103J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5704	06S15615Y73	RES,RK 103J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5706	06S15615Y73	RES,RK 103J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5707	06S15615Y73	RES,RK 103J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5708	06S65415Y46	RES,RK 563F 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5710	06S15616Y23	RES,RK JUMPER1/16-CP	
I.MX-P.W.Board(Main-unit)		R5713	06-12176Z01	RES,RK R10F 1/5 -CP	
I.MX-P.W.Board(Main-unit)		R5714	06-12176Z01	RES,RK R10F 1/5 -CP	
I.MX-P.W.Board(Main-unit)		R5715	06S65415Y30	RES,RK 272F 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5716	06S65415Y17	RES,RK 221F 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5717	06S65415Y32	RES,RK 392F 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5718	06S65415Y17	RES,RK 221F 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5724	06S15615Y73	RES,RK 103J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5800	06S15615Y73	RES,RK 103J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5801	06S65415Y43	RES,RK 333F 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5802	06S65415Y39	RES,RK 153F 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R5803	06S65415Y35	RES,RK 682F 1/16 -CP	

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
I.MX-P.W.Board(Main-unit)		R5804	06S15594Y12	RES,RK 394F 1/10 -CP	
I.MX-P.W.Board(Main-unit)		R5805	06S15593Y92	RES,RK 623F 1/10 -CP	
I.MX-P.W.Board(Main-unit)		R5807	06S45674W81	RES,RK 103J 1/10 -CP	
I.MX-P.W.Board(Main-unit)		R5808	06S70072F77	RES,CP .103-J-1/4-CP	
I.MX-P.W.Board(Main-unit)		R5810	06S15593Y67	RES,RK 562F 1/10 -CP	
I.MX-P.W.Board(Main-unit)		R5811	06S15593Y94	RES,RK 753F 1/10 -CP	
I.MX-P.W.Board(Main-unit)		R6001	06S15615Y25	RES,RK 101J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R6002	06S15615Y73	RES,RK 103J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R6003	06S65415Y32	RES,RK 392F 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R6004	06S65415Y20	RES,RK 391F 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R6005	06S65415Y29	RES,RK 222F 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R6006	06S65415Y42	RES,RK 273F 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R6009	06-25919Z13	RES,RK 753F 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R6010	06S65415Y58	RES,RK 564F 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R6012	06S65415Y38	RES,RK 123F 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R6013	06S65415Y30	RES,RK 272F 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R6014	06S65415Y33	RES,RK 472F 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R6015	06S15593Y93	RES,RK 683F 1/10 -CP	
I.MX-P.W.Board(Main-unit)		R6016	06S15594Y07	RES,RK 244F 1/10 -CP	
I.MX-P.W.Board(Main-unit)		R6019	06S65415Y30	RES,RK 272F 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R6020	06S65415Y29	RES,RK 222F 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R6021	06S65415Y32	RES,RK 392F 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R6022	06S15593Y92	RES,RK 623F 1/10 -CP	
I.MX-P.W.Board(Main-unit)		R6023	06S15593Y67	RES,RK 562F 1/10 -CP	
I.MX-P.W.Board(Main-unit)		R6030	06S45674W45	RES,RK 331J 1/10 -CP	

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
I.MX-P.W.Board(Main-unit)			R6102	06S15615Y57	RES,RK 222J 1/16 -CP
I.MX-P.W.Board(Main-unit)			R6103	06S15615Y57	RES,RK 222J 1/16 -CP
I.MX-P.W.Board(Main-unit)			R6104	06S15615Y57	RES,RK 222J 1/16 -CP
I.MX-P.W.Board(Main-unit)			R6106	06S15615Y13	RES,RK 33RJ 1/16 -CP
I.MX-P.W.Board(Main-unit)			R6107	06S15615Y13	RES,RK 33RJ 1/16 -CP
I.MX-P.W.Board(Main-unit)			R6108	06S15615Y13	RES,RK 33RJ 1/16 -CP
I.MX-P.W.Board(Main-unit)			R6109	06S15615Y13	RES,RK 33RJ 1/16 -CP
I.MX-P.W.Board(Main-unit)			R6110	06S15615Y13	RES,RK 33RJ 1/16 -CP
I.MX-P.W.Board(Main-unit)			R6113	06S15616Y23	RES,RK JUMPER1/16-CP
I.MX-P.W.Board(Main-unit)			R6114	06S15616Y23	RES,RK JUMPER1/16-CP
I.MX-P.W.Board(Main-unit)			R6115	06S15615Y25	RES,RK 101J 1/16 -CP
I.MX-P.W.Board(Main-unit)			R6119	06S15616Y23	RES,RK JUMPER1/16-CP
I.MX-P.W.Board(Main-unit)			R6120	06S15616Y23	RES,RK JUMPER1/16-CP
I.MX-P.W.Board(Main-unit)			R6121	06S15616Y23	RES,RK JUMPER1/16-CP
I.MX-P.W.Board(Main-unit)			R6122	06S15616Y23	RES,RK JUMPER1/16-CP
I.MX-P.W.Board(Main-unit)			R6123	06S15615Y57	RES,RK 222J 1/16 -CP
I.MX-P.W.Board(Main-unit)			R6210	06S15616Y23	RES,RK JUMPER1/16-CP
I.MX-P.W.Board(Main-unit)			R6211	06S15616Y23	RES,RK JUMPER1/16-CP
I.MX-P.W.Board(Main-unit)			R6212	06S15616Y23	RES,RK JUMPER1/16-CP
I.MX-P.W.Board(Main-unit)			R6213	06S15616Y23	RES,RK JUMPER1/16-CP
I.MX-P.W.Board(Main-unit)			R6214	06S15616Y23	RES,RK JUMPER1/16-CP
I.MX-P.W.Board(Main-unit)			R6215	06S15616Y23	RES,RK JUMPER1/16-CP
I.MX-P.W.Board(Main-unit)			R6216	06S15616Y23	RES,RK JUMPER1/16-CP
I.MX-P.W.Board(Main-unit)			R6217	06S15616Y23	RES,RK JUMPER1/16-CP
I.MX-P.W.Board(Main-unit)			R6218	06S15616Y23	RES,RK JUMPER1/16-CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
I.MX-P.W.Board(Main-unit)		R6219	06S15616Y23	RES,RK JUMPER1/16-CP	
I.MX-P.W.Board(Main-unit)		R6220	06S15616Y23	RES,RK JUMPER1/16-CP	
I.MX-P.W.Board(Main-unit)		R6221	06S15616Y23	RES,RK JUMPER1/16-CP	
I.MX-P.W.Board(Main-unit)		R6222	06S15615Y73	RES,RK 103J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R6303	06S15615Y65	RES,RK 472J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R6304	06S15615Y09	RES,RK 22RJ 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R6305	06S15615Y09	RES,RK 22RJ 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R6307	06S15616Y23	RES,RK JUMPER1/16-CP	
I.MX-P.W.Board(Main-unit)		R6309	06S15615Y09	RES,RK 22RJ 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R6401	06S70072F41	RES,CP .331-J-1/4-CP	
I.MX-P.W.Board(Main-unit)		R6402	06S35083Y86	RES,RK 75RF 1/4 -CP	
I.MX-P.W.Board(Main-unit)		R6403	06S45674W57	RES,RK 102J 1/10 -CP	
I.MX-P.W.Board(Main-unit)		R6404	06S45674W57	RES,RK 102J 1/10 -CP	
I.MX-P.W.Board(Main-unit)		R6406	06S70072F41	RES,CP .331-J-1/4-CP	
I.MX-P.W.Board(Main-unit)		R6407	06S35083Y86	RES,RK 75RF 1/4 -CP	
I.MX-P.W.Board(Main-unit)		R6408	06S45674W57	RES,RK 102J 1/10 -CP	
I.MX-P.W.Board(Main-unit)		R6409	06S45674W57	RES,RK 102J 1/10 -CP	
I.MX-P.W.Board(Main-unit)		R6410	06S15615Y25	RES,RK 101J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R6411	06S45674W81	RES,RK 103J 1/10 -CP	
I.MX-P.W.Board(Main-unit)		R6412	06S45674W73	RES,RK 472J 1/10 -CP	
I.MX-P.W.Board(Main-unit)		R6413	06S45674W93	RES,RK 333J 1/10 -CP	
I.MX-P.W.Board(Main-unit)		R6414	06S15615Y09	RES,RK 22RJ 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R6415	06S15615Y81	RES,RK 223J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R6416	06S15615Y73	RES,RK 103J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R6418	06S45674W33	RES,RK 101J 1/10 -CP	

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
I.MX-P.W.Board(Main-unit)		R6419	06S70072F69	RES,CP .472-J-1/4-CP	
I.MX-P.W.Board(Main-unit)		R6420	06S45674W57	RES,RK 102J 1/10 -CP	
I.MX-P.W.Board(Main-unit)		R6421	06S70072F53	RES,CP .102-J-1/4-CP	
I.MX-P.W.Board(Main-unit)		R6422	06S70072F53	RES,CP .102-J-1/4-CP	
I.MX-P.W.Board(Main-unit)		R6423	06S70072F29	RES,CP .101-J-1/4-CP	
I.MX-P.W.Board(Main-unit)		R6424	06S70072F53	RES,CP .102-J-1/4-CP	
I.MX-P.W.Board(Main-unit)		R6425	06S70072F53	RES,CP .102-J-1/4-CP	
I.MX-P.W.Board(Main-unit)		R6426	06S70072F53	RES,CP .102-J-1/4-CP	
I.MX-P.W.Board(Main-unit)		R6427	06S70072F53	RES,CP .102-J-1/4-CP	
I.MX-P.W.Board(Main-unit)		R6428	06S15615Y73	RES,RK 103J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R6431	06S15616Y23	RES,RK JUMPER1/16-CP	
I.MX-P.W.Board(Main-unit)		R6432	06S15615Y25	RES,RK 101J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R6433	06S15615Y25	RES,RK 101J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R6434	06S15615Y77	RES,RK 153J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		R6439	06S15615Y61	RES,RK 332J 1/16 -CP	
I.MX-P.W.Board(Main-unit)		RA4000	06S15771Y13	RES,ARYEXB28V101J-CP	
I.MX-P.W.Board(Main-unit)		RA4001	06S15771Y13	RES,ARYEXB28V101J-CP	
I.MX-P.W.Board(Main-unit)		RA4002	06S15771Y13	RES,ARYEXB28V101J-CP	
I.MX-P.W.Board(Main-unit)		RA4003	06S15771Y13	RES,ARYEXB28V101J-CP	
I.MX-P.W.Board(Main-unit)		RA4004	06S15771Y13	RES,ARYEXB28V101J-CP	
I.MX-P.W.Board(Main-unit)		RA4005	06S15771Y13	RES,ARYEXB28V101J-CP	
I.MX-P.W.Board(Main-unit)		RA4006	06S15771Y13	RES,ARYEXB28V101J-CP	
I.MX-P.W.Board(Main-unit)		RA4007	06S15771Y13	RES,ARYEXB28V101J-CP	
I.MX-P.W.Board(Main-unit)		RA4008	06S15771Y13	RES,ARYEXB28V101J-CP	
I.MX-P.W.Board(Main-unit)		RA4009	06S15771Y13	RES,ARYEXB28V101J-CP	

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
I.MX-P.W.Board(Main-unit)		RA5300	06S15771Y07	RES,ARYEXB28V33RJ-CP	
I.MX-P.W.Board(Main-unit)		RA5301	06S15771Y07	RES,ARYEXB28V33RJ-CP	
I.MX-P.W.Board(Main-unit)		RA6100	06S15771Y07	RES,ARYEXB28V33RJ-CP	
I.MX-P.W.Board(Main-unit)		RA6101	06S15771Y07	RES,ARYEXB28V33RJ-CP	
I.MX-P.W.Board(Main-unit)		RA6102	06S15771Y07	RES,ARYEXB28V33RJ-CP	
I.MX-P.W.Board(Main-unit)		RA6103	06S15771Y07	RES,ARYEXB28V33RJ-CP	
I.MX-P.W.Board(Main-unit)		SD5650	48-19296Z01	DIO,SHT RB056L-40-E1	
I.MX-P.W.Board(Main-unit)		SD5700	48-19296Z01	DIO,SHT RB056L-40-E1	
I.MX-P.W.Board(Main-unit)		SD5801	48-06526Z01	DIO,SHT RSX051VA30CP	
I.MX-P.W.Board(Main-unit)		SD6000	48-19296Z01	DIO,SHT RB056L-40-E1	
I.MX-P.W.Board(Main-unit)		SK5400	09-30387Z01	SKT,GT17HNF-4DP-2-DB	
I.MX-P.W.Board(Main-unit)		SK5700	09-31283Z01	SKT,UBAL-4R-D14-4SDB	
I.MX-P.W.Board(Main-unit)		TML5400	29-22483Z02	OG-453065 -E5	
I.MX-P.W.Board(Main-unit)		TML6300	29-22483Z02	OG-453065 -E5	
I.MX-P.W.Board(Main-unit)		XL4000	91-26661Z36	XTL,NX3225SAAG24.0CP	
I.MX-P.W.Board(Main-unit)		XL4001	91-26198Z03	XTL,NX3215 32.7NS-E1	
I.MX-P.W.Board(Main-unit)		XL5200	91-26661Z32	XTL,NX3225SAAG28.6CP	
I.MX-P.W.Board(Main-unit)		XL5300	91-26661Z24	XTL,NX3225SAAG25.0CP	
I.MX-P.W.Board(Main-unit)		XL6401	91-16024Z01	XTL,AT-41CD2 3.98-E9	
I.MX-P.W.Board(Main-unit)		ZD5100	48-28494Z01	DIO,ZEN ECMF04-4H-CP	
I.MX-P.W.Board(Main-unit)		ZD5101	48-28494Z01	DIO,ZEN ECMF04-4H-CP	
I.MX-P.W.Board(Main-unit)		ZD5200	48-28494Z01	DIO,ZEN ECMF04-4H-CP	
I.MX-P.W.Board(Main-unit)		ZD5201	48-28494Z01	DIO,ZEN ECMF04-4H-CP	
I.MX-P.W.Board(Main-unit)		ZD5202	48-16145Z20	DIO,ZEN PZU5.1B3 -CP	
I.MX-P.W.Board(Main-unit)		ZD5203	48-25907Z01	DIO,ZEN PESD5V0F1-CP	

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
I.MX-P.W.Board(Main-unit)		ZD5204	48-25907Z01	DIO,ZEN PESD5V0F1-CP	
I.MX-P.W.Board(Main-unit)		ZD5205	48-25907Z01	DIO,ZEN PESD5V0F1-CP	
I.MX-P.W.Board(Main-unit)		ZD5206	48-25907Z01	DIO,ZEN PESD5V0F1-CP	
I.MX-P.W.Board(Main-unit)		ZD6402	48-16145Z22	DIO,ZEN PZU5.6B2 -CP	
I.MX-P.W.Board(Main-unit)		ZD6403	48-16145Z22	DIO,ZEN PZU5.6B2 -CP	
WIFI.ANT-P.W.Board(Main-unit)		ANT9001	09-07494Z01	U.FL-R-SMT-1(80)-E2	
WIFI.ANT-P.W.Board(Main-unit)		C9003	08S45231Y40	CAP,CER 3R9C-CH1H-CP	
Miscellaneous		ANT5502	09-24492Z04	ASSY,U.FL-2LP-066N1	
Miscellaneous		ET3150	09-19615Z02	ASSY,ANID-0139-02A	
Miscellaneous		M3490	59-14185Z03	MOTOR,ASB0412MA-9D11	
MAIN-P.W.Board(DVD&Display-unit)		C100	08S65669Y03	CAP,CER 224KX7R1H-CP	
MAIN-P.W.Board(DVD&Display-unit)		C101	08S45676W73	CAP,CER.103K-B1H -CP	
MAIN-P.W.Board(DVD&Display-unit)		C104	08S65669Y03	CAP,CER 224KX7R1H-CP	
MAIN-P.W.Board(DVD&Display-unit)		C106	08S45232Y21	CAP,CER 104K-B1A-CP	
MAIN-P.W.Board(DVD&Display-unit)		C107	08S45232Y21	CAP,CER 104K-B1A-CP	
MAIN-P.W.Board(DVD&Display-unit)		C108	08S45232Y05	CAP,CER 102K-B1H -CP	
MAIN-P.W.Board(DVD&Display-unit)		C109	08S45232Y05	CAP,CER 102K-B1H -CP	
MAIN-P.W.Board(DVD&Display-unit)		C110	08S45232Y05	CAP,CER 102K-B1H -CP	
MAIN-P.W.Board(DVD&Display-unit)		C111	08S45232Y21	CAP,CER 104K-B1A-CP	
MAIN-P.W.Board(DVD&Display-unit)		C131	08S45232Y21	CAP,CER 104K-B1A-CP	
MAIN-P.W.Board(DVD&Display-unit)		C132	08S45231Y14	CAP,CER 12RJ-CH1H-CP	

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
MAIN-P.W.Board(DVD&Display-unit)		C133	08S45231Y14	CAP,CER 12RJ-CH1H-CP	
MAIN-P.W.Board(DVD&Display-unit)		C134	08S45232Y21	CAP,CER 104K-B1A-CP	
MAIN-P.W.Board(DVD&Display-unit)		C135	08S45232Y21	CAP,CER 104K-B1A-CP	
MAIN-P.W.Board(DVD&Display-unit)		C200	08S35349Y16	CAP,CER 105K-B1A -CP	
MAIN-P.W.Board(DVD&Display-unit)		C201	08S45676W65	CAP,CER.222K-B1H -CP	
MAIN-P.W.Board(DVD&Display-unit)		C202	08S45676W65	CAP,CER.222K-B1H -CP	
MAIN-P.W.Board(DVD&Display-unit)		C203	08S45676W65	CAP,CER.222K-B1H -CP	
MAIN-P.W.Board(DVD&Display-unit)		C204	08S45676W65	CAP,CER.222K-B1H -CP	
MAIN-P.W.Board(DVD&Display-unit)		C205	08S45231Y25	CAP,CER 101J-CH1H-CP	
MAIN-P.W.Board(DVD&Display-unit)		C206	08S65667Y01	CAP,CER 224KX5R1C-CP	
MAIN-P.W.Board(DVD&Display-unit)		C207	08S65667Y01	CAP,CER 224KX5R1C-CP	
MAIN-P.W.Board(DVD&Display-unit)		C208	08S65669Y03	CAP,CER 224KX7R1H-CP	
MAIN-P.W.Board(DVD&Display-unit)		C209	08S65669Y03	CAP,CER 224KX7R1H-CP	
MAIN-P.W.Board(DVD&Display-unit)		C210	08S45677W60	CAP,CER 102J-CH1H-CP	
MAIN-P.W.Board(DVD&Display-unit)		C211	08S45231Y25	CAP,CER 101J-CH1H-CP	
MAIN-P.W.Board(DVD&Display-unit)		C212	08S65669Y03	CAP,CER 224KX7R1H-CP	
MAIN-P.W.Board(DVD&Display-unit)		C213	08S65669Y03	CAP,CER 224KX7R1H-CP	

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
-----------	-----	-------	------	-----------	------------

MAIN-P.W.Board(DVD&Display-unit)		C214	08S65669Y03	CAP,CER 224KX7R1H-CP
MAIN-P.W.Board(DVD&Display-unit)		C217	08S45231Y25	CAP,CER 101J-CH1H-CP
MAIN-P.W.Board(DVD&Display-unit)		C218	08S65667Y01	CAP,CER 224KX5R1C-CP
MAIN-P.W.Board(DVD&Display-unit)		C300	08S45232Y21	CAP,CER 104K-B1A-CP
MAIN-P.W.Board(DVD&Display-unit)		C301	08S45232Y12	CAP,CER 153K-B1C -CP
MAIN-P.W.Board(DVD&Display-unit)		C302	08S45676W74	CAP,CER 123K-B1H -CP
MAIN-P.W.Board(DVD&Display-unit)		C303	08S45231Y31	CAP,CER 331J-CH1H-CP
MAIN-P.W.Board(DVD&Display-unit)		C304	08S45232Y07	CAP,CER 222K-B1H -CP
MAIN-P.W.Board(DVD&Display-unit)		C305	08S45232Y21	CAP,CER 104K-B1A-CP
MAIN-P.W.Board(DVD&Display-unit)		C306	08S35349Y16	CAP,CER 105K-B1A -CP
MAIN-P.W.Board(DVD&Display-unit)		C307	08S35349Y11	CAP,CER 223K-B1H -CP
MAIN-P.W.Board(DVD&Display-unit)		C308	08S45232Y12	CAP,CER 153K-B1C -CP
MAIN-P.W.Board(DVD&Display-unit)		C309	08S45676W74	CAP,CER 123K-B1H -CP
MAIN-P.W.Board(DVD&Display-unit)		C310	08S45231Y31	CAP,CER 331J-CH1H-CP
MAIN-P.W.Board(DVD&Display-unit)		C311	08S45232Y07	CAP,CER 222K-B1H -CP
MAIN-P.W.Board(DVD&Display-unit)		C312	08S35349Y16	CAP,CER 105K-B1A -CP
MAIN-P.W.Board(DVD&Display-unit)		C313	08S35349Y16	CAP,CER 105K-B1A -CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
MAIN-P.W.Board(DVD&Display-unit)		C316	08S65670Y07	CAP,CER 105KX5R1H-CP	
MAIN-P.W.Board(DVD&Display-unit)		C317	08S65670Y07	CAP,CER 105KX5R1H-CP	
MAIN-P.W.Board(DVD&Display-unit)		C318	08S45231Y25	CAP,CER 101J-CH1H-CP	
MAIN-P.W.Board(DVD&Display-unit)		C319	08S45231Y25	CAP,CER 101J-CH1H-CP	
MAIN-P.W.Board(DVD&Display-unit)		C320	08S65670Y08	CAP,CER 225KX5R1H-CP	
MAIN-P.W.Board(DVD&Display-unit)		C321	08S65670Y08	CAP,CER 225KX5R1H-CP	
MAIN-P.W.Board(DVD&Display-unit)		C322	08S45676W84	CAP,CER 683K-B1C -CP	
MAIN-P.W.Board(DVD&Display-unit)		C323	08S65667Y01	CAP,CER 224KX5R1C-CP	
MAIN-P.W.Board(DVD&Display-unit)		C324	08S65667Y01	CAP,CER 224KX5R1C-CP	
MAIN-P.W.Board(DVD&Display-unit)		C325	08S45232Y21	CAP,CER 104K-B1A-CP	
MAIN-P.W.Board(DVD&Display-unit)		C326	08S35374W11	CAP,CER 475K-B0J -CP	
MAIN-P.W.Board(DVD&Display-unit)		C327	08S65667Y01	CAP,CER 224KX5R1C-CP	
MAIN-P.W.Board(DVD&Display-unit)		C328	08S65669Y03	CAP,CER 224KX7R1H-CP	
MAIN-P.W.Board(DVD&Display-unit)		C329	08S65669Y03	CAP,CER 224KX7R1H-CP	
MAIN-P.W.Board(DVD&Display-unit)		C330	08S35349Y21	CAP,CER 104K-B1H -CP	
MAIN-P.W.Board(DVD&Display-unit)		C331	08S65667Y01	CAP,CER 224KX5R1C-CP	
MAIN-P.W.Board(DVD&Display-unit)		C332	08S35374W11	CAP,CER 475K-B0J -CP	

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
MAIN-P.W.Board(DVD&Display-unit)		C333	08S65670Y01	CAP,CER 106KX5R1C-CP	
MAIN-P.W.Board(DVD&Display-unit)		C334	08S45676W93	CAP,CER 224K-B1A -CP	
MAIN-P.W.Board(DVD&Display-unit)		C335	08S45676W93	CAP,CER 224K-B1A -CP	
MAIN-P.W.Board(DVD&Display-unit)		C336	08S45676W93	CAP,CER 224K-B1A -CP	
MAIN-P.W.Board(DVD&Display-unit)		C337	08S65667Y01	CAP,CER 224KX5R1C-CP	
MAIN-P.W.Board(DVD&Display-unit)		C338	08S65669Y03	CAP,CER 224KX7R1H-CP	
MAIN-P.W.Board(DVD&Display-unit)		C339	08S65669Y03	CAP,CER 224KX7R1H-CP	
MAIN-P.W.Board(DVD&Display-unit)		C340	08S45676W93	CAP,CER 224K-B1A -CP	
MAIN-P.W.Board(DVD&Display-unit)		C341	08S65669Y03	CAP,CER 224KX7R1H-CP	
MAIN-P.W.Board(DVD&Display-unit)		C342	08S65669Y03	CAP,CER 224KX7R1H-CP	
MAIN-P.W.Board(DVD&Display-unit)		C343	08S65669Y03	CAP,CER 224KX7R1H-CP	
MAIN-P.W.Board(DVD&Display-unit)		C400	08S65669Y03	CAP,CER 224KX7R1H-CP	
MAIN-P.W.Board(DVD&Display-unit)		C401	08S35374W10	CAP,CER 225K-B1A -CP	
MAIN-P.W.Board(DVD&Display-unit)		C402	08S65667Y01	CAP,CER 224KX5R1C-CP	
MAIN-P.W.Board(DVD&Display-unit)		C403	08S45231Y09	CAP,CER 6R0D-CH1H-CP	
MAIN-P.W.Board(DVD&Display-unit)		C404	08S45232Y05	CAP,CER 102K-B1H -CP	
MAIN-P.W.Board(DVD&Display-unit)		C405	08S35374W12	CAP,CER 106K-B0J -CP	

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
MAIN-P.W.Board(DVD&Display-unit)		C407	08S45232Y21	CAP,CER 104K-B1A-CP	
MAIN-P.W.Board(DVD&Display-unit)		C408	08S45232Y21	CAP,CER 104K-B1A-CP	
MAIN-P.W.Board(DVD&Display-unit)		C409	08S45232Y21	CAP,CER 104K-B1A-CP	
MAIN-P.W.Board(DVD&Display-unit)		C410	08S45232Y21	CAP,CER 104K-B1A-CP	
MAIN-P.W.Board(DVD&Display-unit)		C411	08S45232Y21	CAP,CER 104K-B1A-CP	
MAIN-P.W.Board(DVD&Display-unit)		C412	08S45232Y21	CAP,CER 104K-B1A-CP	
MAIN-P.W.Board(DVD&Display-unit)		C413	08S45232Y21	CAP,CER 104K-B1A-CP	
MAIN-P.W.Board(DVD&Display-unit)		C414	08S45232Y21	CAP,CER 104K-B1A-CP	
MAIN-P.W.Board(DVD&Display-unit)		C415	08S45232Y21	CAP,CER 104K-B1A-CP	
MAIN-P.W.Board(DVD&Display-unit)		C416	08S45232Y11	CAP,CER 103K-B1C -CP	
MAIN-P.W.Board(DVD&Display-unit)		C417	08S35374W12	CAP,CER 106K-B0J -CP	
MAIN-P.W.Board(DVD&Display-unit)		C418	08S35374W12	CAP,CER 106K-B0J -CP	
MAIN-P.W.Board(DVD&Display-unit)		C419	08S35374W12	CAP,CER 106K-B0J -CP	
MAIN-P.W.Board(DVD&Display-unit)		C420	08S45232Y21	CAP,CER 104K-B1A-CP	
MAIN-P.W.Board(DVD&Display-unit)		C421	08S45231Y09	CAP,CER 6R0D-CH1H-CP	
MAIN-P.W.Board(DVD&Display-unit)		C422	08S45232Y21	CAP,CER 104K-B1A-CP	
MAIN-P.W.Board(DVD&Display-unit)		C423	08S45232Y21	CAP,CER 104K-B1A-CP	

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
MAIN-P.W.Board(DVD&Display-unit)		C424	08S45232Y21	CAP,CER 104K-B1A-CP	
MAIN-P.W.Board(DVD&Display-unit)		C425	08S45232Y21	CAP,CER 104K-B1A-CP	
MAIN-P.W.Board(DVD&Display-unit)		C426	08S45232Y21	CAP,CER 104K-B1A-CP	
MAIN-P.W.Board(DVD&Display-unit)		C427	08S45232Y21	CAP,CER 104K-B1A-CP	
MAIN-P.W.Board(DVD&Display-unit)		C428	08S45232Y21	CAP,CER 104K-B1A-CP	
MAIN-P.W.Board(DVD&Display-unit)		C429	08S45232Y21	CAP,CER 104K-B1A-CP	
MAIN-P.W.Board(DVD&Display-unit)		C430	08S45232Y21	CAP,CER 104K-B1A-CP	
MAIN-P.W.Board(DVD&Display-unit)		C431	08S45232Y21	CAP,CER 104K-B1A-CP	
MAIN-P.W.Board(DVD&Display-unit)		C432	08S45232Y21	CAP,CER 104K-B1A-CP	
MAIN-P.W.Board(DVD&Display-unit)		C433	08S45232Y21	CAP,CER 104K-B1A-CP	
MAIN-P.W.Board(DVD&Display-unit)		C435	08S45231Y14	CAP,CER 12RJ-CH1H-CP	
MAIN-P.W.Board(DVD&Display-unit)		C436	08S45232Y21	CAP,CER 104K-B1A-CP	
MAIN-P.W.Board(DVD&Display-unit)		C437	08S45232Y21	CAP,CER 104K-B1A-CP	
MAIN-P.W.Board(DVD&Display-unit)		C438	08S45539Y01	CAP,CER 102KX7R2J-CP	
MAIN-P.W.Board(DVD&Display-unit)		C439	08S45676W65	CAP,CER.222K-B1H -CP	
MAIN-P.W.Board(DVD&Display-unit)		C440	08S65669Y03	CAP,CER 224KX7R1H-CP	
MAIN-P.W.Board(DVD&Display-unit)		C441	08S45232Y13	CAP,CER 223K-B1C -CP	

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
MAIN-P.W.Board(DVD&Display-unit)		C444	08S45232Y21	CAP,CER 104K-B1A-CP	
MAIN-P.W.Board(DVD&Display-unit)		C445	08S45231Y17	CAP,CER 22RJ-CH1H-CP	
MAIN-P.W.Board(DVD&Display-unit)		C446	08S45232Y07	CAP,CER 222K-B1H -CP	
MAIN-P.W.Board(DVD&Display-unit)		C447	08S45232Y05	CAP,CER 102K-B1H -CP	
MAIN-P.W.Board(DVD&Display-unit)		C448	08S65669Y03	CAP,CER 224KX7R1H-CP	
MAIN-P.W.Board(DVD&Display-unit)		C449	08S65669Y03	CAP,CER 224KX7R1H-CP	
MAIN-P.W.Board(DVD&Display-unit)		C450	08S65669Y03	CAP,CER 224KX7R1H-CP	
MAIN-P.W.Board(DVD&Display-unit)		C500	08S45676W65	CAP,CER.222K-B1H -CP	
MAIN-P.W.Board(DVD&Display-unit)		C501	08S65669Y03	CAP,CER 224KX7R1H-CP	
MAIN-P.W.Board(DVD&Display-unit)		C502	08S65670Y01	CAP,CER 106KX5R1C-CP	
MAIN-P.W.Board(DVD&Display-unit)		C503	08S45232Y05	CAP,CER 102K-B1H -CP	
MAIN-P.W.Board(DVD&Display-unit)		C504	08S45677W36	CAP,CER.101J-CH1H-CP	
MAIN-P.W.Board(DVD&Display-unit)		C505	08S65128F88	CAP,CER 104K-B1H -CP	
MAIN-P.W.Board(DVD&Display-unit)		C507	08S65128F88	CAP,CER 104K-B1H -CP	
MAIN-P.W.Board(DVD&Display-unit)		C508	08S65667Y01	CAP,CER 224KX5R1C-CP	
MAIN-P.W.Board(DVD&Display-unit)		C509	08S45676W93	CAP,CER 224K-B1A -CP	
MAIN-P.W.Board(DVD&Display-unit)		C510	08S65669Y03	CAP,CER 224KX7R1H-CP	

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
-----------	-----	-------	------	-----------	------------

MAIN-P.W.Board(DVD&Display-unit)		C512	08S45539Y04	CAP,CER 103KX7R2J-CP
MAIN-P.W.Board(DVD&Display-unit)		C513	08S45232Y05	CAP,CER 102K-B1H -CP
MAIN-P.W.Board(DVD&Display-unit)		C514	08S45677W36	CAP,CER.101J-CH1H-CP
MAIN-P.W.Board(DVD&Display-unit)		C515	08S35349Y21	CAP,CER 104K-B1H -CP
MAIN-P.W.Board(DVD&Display-unit)		C517	08S45232Y13	CAP,CER 223K-B1C -CP
MAIN-P.W.Board(DVD&Display-unit)		C518	08S35349Y21	CAP,CER 104K-B1H -CP
MAIN-P.W.Board(DVD&Display-unit)		C600	08S45676W73	CAP,CER.103K-B1H -CP
MAIN-P.W.Board(DVD&Display-unit)		C601	08S65128F88	CAP,CER 104K-B1H -CP
MAIN-P.W.Board(DVD&Display-unit)		C602	08S65128F88	CAP,CER 104K-B1H -CP
MAIN-P.W.Board(DVD&Display-unit)		C603	08S35374W11	CAP,CER 475K-B0J -CP
MAIN-P.W.Board(DVD&Display-unit)		C604	08S35374W11	CAP,CER 475K-B0J -CP
MAIN-P.W.Board(DVD&Display-unit)		C605	08S35374W11	CAP,CER 475K-B0J -CP
MAIN-P.W.Board(DVD&Display-unit)		C606	08S35374W11	CAP,CER 475K-B0J -CP
MAIN-P.W.Board(DVD&Display-unit)		C607	08S35374W11	CAP,CER 475K-B0J -CP
MAIN-P.W.Board(DVD&Display-unit)		C608	08S35374W11	CAP,CER 475K-B0J -CP
MAIN-P.W.Board(DVD&Display-unit)		C609	08S35374W11	CAP,CER 475K-B0J -CP
MAIN-P.W.Board(DVD&Display-unit)		C610	08S45232Y21	CAP,CER 104K-B1A-CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
MAIN-P.W.Board(DVD&Display-unit)		C612	08S35374W11	CAP,CER 475K-B0J -CP	
MAIN-P.W.Board(DVD&Display-unit)		C613	08S35374W11	CAP,CER 475K-B0J -CP	
MAIN-P.W.Board(DVD&Display-unit)		C615	08S35374W11	CAP,CER 475K-B0J -CP	
MAIN-P.W.Board(DVD&Display-unit)		C617	08S35374W11	CAP,CER 475K-B0J -CP	
MAIN-P.W.Board(DVD&Display-unit)		C619	08S45232Y21	CAP,CER 104K-B1A-CP	
MAIN-P.W.Board(DVD&Display-unit)		C620	08S45232Y21	CAP,CER 104K-B1A-CP	
MAIN-P.W.Board(DVD&Display-unit)		C621	08S65669Y03	CAP,CER 224KX7R1H-CP	
MAIN-P.W.Board(DVD&Display-unit)		CB101	09T25286Y10	WTB,BM(10)B-SRSS -E9	
MAIN-P.W.Board(DVD&Display-unit)		CB200	09-16162Z04	FFC,FH40-45S-0.5SVEQ	
MAIN-P.W.Board(DVD&Display-unit)		CB201	09-09767Z01	FFC,501786-5090 -EZ	
MAIN-P.W.Board(DVD&Display-unit)		CB400	09-25213Z01	WTB,TCX3400-011187-T	
MAIN-P.W.Board(DVD&Display-unit)		CB500	09T13515W08	WTB,5569-08A1 -DB	
MAIN-P.W.Board(DVD&Display-unit)		CB501	09T25286Y03	WTB,BM(03)B-SRSS -E3	
MAIN-P.W.Board(DVD&Display-unit)		CB600	09T25436Y02	WTB,53253-0270 -DB	
MAIN-P.W.Board(DVD&Display-unit)		D302	48-09688Z01	DIO,S3G -E5	
MAIN-P.W.Board(DVD&Display-unit)		D400	48-08988Z01	VST,EZJZ0V800AA -CP	
MAIN-P.W.Board(DVD&Display-unit)		D401	48-08988Z01	VST,EZJZ0V800AA -CP	

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
MAIN-P.W.Board(DVD&Display-unit)		D402	48-08988Z01	VST,EZJZ0V800AA -CP	
MAIN-P.W.Board(DVD&Display-unit)		D500	48-07015Z01	DIO,KDS160-RTK -CP	
MAIN-P.W.Board(DVD&Display-unit)		D501	48-05965Z01	DIO,1SS361-L -CP	
MAIN-P.W.Board(DVD&Display-unit)		D504	48-07015Z01	DIO,KDS160-RTK -CP	
MAIN-P.W.Board(DVD&Display-unit)		E100	23S65134W53	CAP,ELY 4R7-1V(4)-E2	
MAIN-P.W.Board(DVD&Display-unit)		E201	23S75244Y29	CAP,ELY 221-1E -EA	
MAIN-P.W.Board(DVD&Display-unit)		E300	23-12290Z30	CAP,FP 331-1E-F -EA	
MAIN-P.W.Board(DVD&Display-unit)		E301	23S75244Y09	CAP,ELY 22R-1A -E2	
MAIN-P.W.Board(DVD&Display-unit)		E302	23S75244Y11	CAP,ELY 221-1A -E6	
MAIN-P.W.Board(DVD&Display-unit)		E303	23S75244Y26	CAP,ELY 33R-1E -E3	
MAIN-P.W.Board(DVD&Display-unit)		E304	23S75244Y26	CAP,ELY 33R-1E -E3	
MAIN-P.W.Board(DVD&Display-unit)		E306	23S75244Y03	CAP,ELY 101-0J -E3	
MAIN-P.W.Board(DVD&Display-unit)		E307	23S75244Y18	CAP,ELY 47R-1C -E3	
MAIN-P.W.Board(DVD&Display-unit)		E308	23S75244Y09	CAP,ELY 22R-1A -E2	
MAIN-P.W.Board(DVD&Display-unit)		E309	23S75244Y03	CAP,ELY 101-0J -E3	
MAIN-P.W.Board(DVD&Display-unit)		E310	23S75244Y18	CAP,ELY 47R-1C -E3	
MAIN-P.W.Board(DVD&Display-unit)		E311	23S75244Y29	CAP,ELY 221-1E -EA	

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
MAIN-P.W.Board(DVD&Display-unit)		E312	23S75244Y27	CAP,ELY 47R-1E -E6	
MAIN-P.W.Board(DVD&Display-unit)		E313	23S75244Y19	CAP,ELY 101-1C -E6	
MAIN-P.W.Board(DVD&Display-unit)		E400	23S75244Y16	CAP,ELY 10R-1C -E2	
MAIN-P.W.Board(DVD&Display-unit)		E401	23S75244Y16	CAP,ELY 10R-1C -E2	
MAIN-P.W.Board(DVD&Display-unit)		E402	23S75244Y16	CAP,ELY 10R-1C -E2	
MAIN-P.W.Board(DVD&Display-unit)		E501	23-28540Z24	CAP,MZR 821-1E -EA	
MAIN-P.W.Board(DVD&Display-unit)		E600	23S65134W45	CAP,ELY 33R-1E(6)-E6	
MAIN-P.W.Board(DVD&Display-unit)		IC100	51-22802Z01	M24C64-WMN6TP -SE2	
MAIN-P.W.Board(DVD&Display-unit)		IC101	51T75063Y07	BD5229G-TR -CP	
MAIN-P.W.Board(DVD&Display-unit)		IC102	83-32412Z39	16LIMO_DVD_Main_IC102_Software	
MAIN-P.W.Board(DVD&Display-unit)		IC102	51-12505Z01	MTP,R5F3640MDFB -QT	
MAIN-P.W.Board(DVD&Display-unit)		IC300	51-20097Z02	AN33012UB-VB -SE6	
MAIN-P.W.Board(DVD&Display-unit)		IC301	51-22826Z01	NJM2884U2-05-TE2-NE2	
MAIN-P.W.Board(DVD&Display-unit)		IC302	51-21895Z01	NJM2842DL3-012TE2NE5	
MAIN-P.W.Board(DVD&Display-unit)		IC303	51T55517Y02	NJU7223DL1-33TE1-NE5	
MAIN-P.W.Board(DVD&Display-unit)		IC304	51-22986Z01	NJW4184DL1-05BTE2NE5	
MAIN-P.W.Board(DVD&Display-unit)		IC305	51-16620Z03	NJM2819ADL3-18TE1NE5	

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
MAIN- P.W.Board(DVD&Display-unit)		IC306	51T25259Y03	BA00ASFP-E2 -NE5	
MAIN- P.W.Board(DVD&Display-unit)		IC400	51-27798Z01	ADV7511WBSWZ-RL -QEA	
MAIN- P.W.Board(DVD&Display-unit)		IC401	51-30951Z01	TW9912AT-NA3-GR -LT	
MAIN- P.W.Board(DVD&Display-unit)		IC402	51T25183Y03	TC7SET08FU,JF-L -CP	
MAIN- P.W.Board(DVD&Display-unit)		IC500	51-20765Z36	S-1009N42H-M5T2U -CP	
MAIN- P.W.Board(DVD&Display-unit)		IC501	51T25183Y03	TC7SET08FU,JF-L -CP	
MAIN- P.W.Board(DVD&Display-unit)		IC502	51-20765Z36	S-1009N42H-M5T2U -CP	
MAIN- P.W.Board(DVD&Display-unit)		IC503	51T15185Y02	TC7SH08FU,JF-L -CP	
MAIN- P.W.Board(DVD&Display-unit)		IC504	51T25183Y03	TC7SET08FU,JF-L -CP	
MAIN- P.W.Board(DVD&Display-unit)		IC600	51-27405Z01	DS90UH928QSQ -LE6	
MAIN- P.W.Board(DVD&Display-unit)		IC601	51-14227Z01	BD6221HFP-TR -NE9	
MAIN- P.W.Board(DVD&Display-unit)		L200	24T65689Y01	FBI,FBMJ2125HS420-CP	
MAIN- P.W.Board(DVD&Display-unit)		L201	24T65689Y01	FBI,FBMJ2125HS420-CP	
MAIN- P.W.Board(DVD&Display-unit)		L202	24T65689Y01	FBI,FBMJ2125HS420-CP	
MAIN- P.W.Board(DVD&Display-unit)		L203	24T65689Y01	FBI,FBMJ2125HS420-CP	
MAIN- P.W.Board(DVD&Display-unit)		L205	24-06212Z02	FBI,BLM15AG102SH1-CP	
MAIN- P.W.Board(DVD&Display-unit)		L206	24-06212Z02	FBI,BLM15AG102SH1-CP	

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
MAIN-P.W.Board(DVD&Display-unit)		L207	91T75196Y01	EMI,BK1005HM102 -CP	
MAIN-P.W.Board(DVD&Display-unit)		L208	91T75196Y01	EMI,BK1005HM102 -CP	
MAIN-P.W.Board(DVD&Display-unit)		L209	24-06212Z02	FBI,BLM15AG102SH1-CP	
MAIN-P.W.Board(DVD&Display-unit)		L210	91T75196Y01	EMI,BK1005HM102 -CP	
MAIN-P.W.Board(DVD&Display-unit)		L236	24T45464Y04	FBI,BLM18HD102SH1-CP	
MAIN-P.W.Board(DVD&Display-unit)		L300	24-25206Z01	IND,SFCB1280T33RM-EA	
MAIN-P.W.Board(DVD&Display-unit)		L301	24-25206Z01	IND,SFCB1280T33RM-EA	
MAIN-P.W.Board(DVD&Display-unit)		L400	24-22766Z02	IND,LBC3225 10RM -CP	
MAIN-P.W.Board(DVD&Display-unit)		L401	24-22766Z02	IND,LBC3225 10RM -CP	
MAIN-P.W.Board(DVD&Display-unit)		L402	24-22766Z02	IND,LBC3225 10RM -CP	
MAIN-P.W.Board(DVD&Display-unit)		L403	24-22766Z02	IND,LBC3225 10RM -CP	
MAIN-P.W.Board(DVD&Display-unit)		L404	24-06212Z07	FBI,BLM15BD601SH1-CP	
MAIN-P.W.Board(DVD&Display-unit)		L405	24-06212Z07	FBI,BLM15BD601SH1-CP	
MAIN-P.W.Board(DVD&Display-unit)		L406	24-06212Z07	FBI,BLM15BD601SH1-CP	
MAIN-P.W.Board(DVD&Display-unit)		L407	24-06212Z07	FBI,BLM15BD601SH1-CP	
MAIN-P.W.Board(DVD&Display-unit)		L408	24-06212Z07	FBI,BLM15BD601SH1-CP	
MAIN-P.W.Board(DVD&Display-unit)		L500	24-06212Z02	FBI,BLM15AG102SH1-CP	

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
-----------	-----	-------	------	-----------	------------

MAIN-P.W.Board(DVD&Display-unit)		L501	24-06212Z02	FBI,BLM15AG102SH1-CP
MAIN-P.W.Board(DVD&Display-unit)		L502	24T45464Y04	FBI,BLM18HD102SH1-CP
MAIN-P.W.Board(DVD&Display-unit)		L600	24T95456W31	FBI,BLM18PG471SH1-CP
MAIN-P.W.Board(DVD&Display-unit)		L601	24T95456W31	FBI,BLM18PG471SH1-CP
MAIN-P.W.Board(DVD&Display-unit)		PS200	48-27319Z01	POLY,SW1812L150/24E2
MAIN-P.W.Board(DVD&Display-unit)		Q200	48-17548Z01	TR,DSA500100L -CP
MAIN-P.W.Board(DVD&Display-unit)		Q201	48-17548Z01	TR,DSA500100L -CP
MAIN-P.W.Board(DVD&Display-unit)		Q202	48-17548Z01	TR,DSA500100L -CP
MAIN-P.W.Board(DVD&Display-unit)		Q300	48-20288Z01	FET,MTM981400BBF -E2
MAIN-P.W.Board(DVD&Display-unit)		Q301	48-20288Z01	FET,MTM981400BBF -E2
MAIN-P.W.Board(DVD&Display-unit)		Q303	48T25737Y02	TR,UMD3N-TR -CP
MAIN-P.W.Board(DVD&Display-unit)		Q304	48-09581Z04	TR,KTA1505S-GRRTK-CP
MAIN-P.W.Board(DVD&Display-unit)		Q305	48-19949Z01	TR,DRC5143X -CP
MAIN-P.W.Board(DVD&Display-unit)		Q400	48-04929Z15	TR,KRC116S-RTK -CP
MAIN-P.W.Board(DVD&Display-unit)		Q401	48T25737Y02	TR,UMD3N-TR -CP
MAIN-P.W.Board(DVD&Display-unit)		Q403	48-09581Z04	TR,KTA1505S-GRRTK-CP
MAIN-P.W.Board(DVD&Display-unit)		Q500	48T25737Y01	TR,UMD2N-TR -CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
-----------	-----	-------	------	-----------	------------

MAIN-P.W.Board(DVD&Display-unit)		Q501	48-04929Z03	TR,KRC103S-RTK -CP
MAIN-P.W.Board(DVD&Display-unit)		Q502	48T25737Y01	TR,UMD2N-TR -CP
MAIN-P.W.Board(DVD&Display-unit)		Q504	48T25737Y01	TR,UMD2N-TR -CP
MAIN-P.W.Board(DVD&Display-unit)		R100	06S45674W97	RES,RK 473J 1/10 -CP
MAIN-P.W.Board(DVD&Display-unit)		R101	06S15615Y25	RES,RK 101J 1/16 -CP
MAIN-P.W.Board(DVD&Display-unit)		R103	06S15615Y25	RES,RK 101J 1/16 -CP
MAIN-P.W.Board(DVD&Display-unit)		R104	06S15615Y25	RES,RK 101J 1/16 -CP
MAIN-P.W.Board(DVD&Display-unit)		R105	06S15615Y25	RES,RK 101J 1/16 -CP
MAIN-P.W.Board(DVD&Display-unit)		R106	06S15615Y25	RES,RK 101J 1/16 -CP
MAIN-P.W.Board(DVD&Display-unit)		R107	06S15615Y25	RES,RK 101J 1/16 -CP
MAIN-P.W.Board(DVD&Display-unit)		R108	06S45674W77	RES,RK 682J 1/10 -CP
MAIN-P.W.Board(DVD&Display-unit)		R109	06S45674W77	RES,RK 682J 1/10 -CP
MAIN-P.W.Board(DVD&Display-unit)		R110	06S15615Y25	RES,RK 101J 1/16 -CP
MAIN-P.W.Board(DVD&Display-unit)		R111	06S15615Y25	RES,RK 101J 1/16 -CP
MAIN-P.W.Board(DVD&Display-unit)		R112	06S15615Y25	RES,RK 101J 1/16 -CP
MAIN-P.W.Board(DVD&Display-unit)		R113	06S15615Y25	RES,RK 101J 1/16 -CP
MAIN-P.W.Board(DVD&Display-unit)		R114	06S15615Y25	RES,RK 101J 1/16 -CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
-----------	-----	-------	------	-----------	------------

MAIN-P.W.Board(DVD&Display-unit)		R115	06S15615Y25	RES,RK 101J 1/16 -CP
MAIN-P.W.Board(DVD&Display-unit)		R116	06S15615Y25	RES,RK 101J 1/16 -CP
MAIN-P.W.Board(DVD&Display-unit)		R117	06S15615Y25	RES,RK 101J 1/16 -CP
MAIN-P.W.Board(DVD&Display-unit)		R118	06S15616Y23	RES,RK JUMPER1/16-CP
MAIN-P.W.Board(DVD&Display-unit)		R119	06S15616Y23	RES,RK JUMPER1/16-CP
MAIN-P.W.Board(DVD&Display-unit)		R120	06S15615Y25	RES,RK 101J 1/16 -CP
MAIN-P.W.Board(DVD&Display-unit)		R121	06S15615Y25	RES,RK 101J 1/16 -CP
MAIN-P.W.Board(DVD&Display-unit)		R122	06S15615Y89	RES,RK 473J 1/16 -CP
MAIN-P.W.Board(DVD&Display-unit)		R123	06S15615Y25	RES,RK 101J 1/16 -CP
MAIN-P.W.Board(DVD&Display-unit)		R125	06S15615Y25	RES,RK 101J 1/16 -CP
MAIN-P.W.Board(DVD&Display-unit)		R126	06S15615Y25	RES,RK 101J 1/16 -CP
MAIN-P.W.Board(DVD&Display-unit)		R127	06S45675W43	RES,RK JUMPER1/10-CP
MAIN-P.W.Board(DVD&Display-unit)		R128	06S15615Y25	RES,RK 101J 1/16 -CP
MAIN-P.W.Board(DVD&Display-unit)		R129	06S15615Y25	RES,RK 101J 1/16 -CP
MAIN-P.W.Board(DVD&Display-unit)		R130	06S15615Y25	RES,RK 101J 1/16 -CP
MAIN-P.W.Board(DVD&Display-unit)		R131	06S15615Y25	RES,RK 101J 1/16 -CP
MAIN-P.W.Board(DVD&Display-unit)		R132	06S15615Y25	RES,RK 101J 1/16 -CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
-----------	-----	-------	------	-----------	------------

MAIN-P.W.Board(DVD&Display-unit)		R133	06S15615Y25	RES,RK 101J 1/16 -CP
MAIN-P.W.Board(DVD&Display-unit)		R134	06S15615Y25	RES,RK 101J 1/16 -CP
MAIN-P.W.Board(DVD&Display-unit)		R136	06S45674W97	RES,RK 473J 1/10 -CP
MAIN-P.W.Board(DVD&Display-unit)		R137	06S15615Y25	RES,RK 101J 1/16 -CP
MAIN-P.W.Board(DVD&Display-unit)		R138	06S15615Y25	RES,RK 101J 1/16 -CP
MAIN-P.W.Board(DVD&Display-unit)		R139	06S15615Y25	RES,RK 101J 1/16 -CP
MAIN-P.W.Board(DVD&Display-unit)		R140	06S15615Y89	RES,RK 473J 1/16 -CP
MAIN-P.W.Board(DVD&Display-unit)		R141	06S45674W97	RES,RK 473J 1/10 -CP
MAIN-P.W.Board(DVD&Display-unit)		R142	06S15615Y25	RES,RK 101J 1/16 -CP
MAIN-P.W.Board(DVD&Display-unit)		R143	06S45675W43	RES,RK JUMPER1/10-CP
MAIN-P.W.Board(DVD&Display-unit)		R144	06S15615Y89	RES,RK 473J 1/16 -CP
MAIN-P.W.Board(DVD&Display-unit)		R145	06S45674W41	RES,RK 221J 1/10 -CP
MAIN-P.W.Board(DVD&Display-unit)		R146	06S15615Y25	RES,RK 101J 1/16 -CP
MAIN-P.W.Board(DVD&Display-unit)		R147	06S15615Y89	RES,RK 473J 1/16 -CP
MAIN-P.W.Board(DVD&Display-unit)		R148	06S65415Y41	RES,RK 223F 1/16 -CP
MAIN-P.W.Board(DVD&Display-unit)		R149	06S45674W97	RES,RK 473J 1/10 -CP
MAIN-P.W.Board(DVD&Display-unit)		R150	06S15593Y81	RES,RK 223F 1/10 -CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
-----------	-----	-------	------	-----------	------------

MAIN-P.W.Board(DVD&Display-unit)		R151	06S15593Y81	RES,RK 223F 1/10 -CP
MAIN-P.W.Board(DVD&Display-unit)		R152	06S15615Y25	RES,RK 101J 1/16 -CP
MAIN-P.W.Board(DVD&Display-unit)		R154	06S15615Y25	RES,RK 101J 1/16 -CP
MAIN-P.W.Board(DVD&Display-unit)		R155	06S15615Y25	RES,RK 101J 1/16 -CP
MAIN-P.W.Board(DVD&Display-unit)		R156	06S15615Y25	RES,RK 101J 1/16 -CP
MAIN-P.W.Board(DVD&Display-unit)		R157	06S15615Y25	RES,RK 101J 1/16 -CP
MAIN-P.W.Board(DVD&Display-unit)		R158	06S15616Y23	RES,RK JUMPER1/16-CP
MAIN-P.W.Board(DVD&Display-unit)		R164	06S15615Y25	RES,RK 101J 1/16 -CP
MAIN-P.W.Board(DVD&Display-unit)		R165	06S15615Y25	RES,RK 101J 1/16 -CP
MAIN-P.W.Board(DVD&Display-unit)		R168	06S45674W99	RES,RK 563J 1/10 -CP
MAIN-P.W.Board(DVD&Display-unit)		R169	06S45674W49	RES,RK 471J 1/10 -CP
MAIN-P.W.Board(DVD&Display-unit)		R170	06S15615Y25	RES,RK 101J 1/16 -CP
MAIN-P.W.Board(DVD&Display-unit)		R174	06S15615Y25	RES,RK 101J 1/16 -CP
MAIN-P.W.Board(DVD&Display-unit)		R175	06S65415Y41	RES,RK 223F 1/16 -CP
MAIN-P.W.Board(DVD&Display-unit)		R176	06S15615Y89	RES,RK 473J 1/16 -CP
MAIN-P.W.Board(DVD&Display-unit)		R177	06S15615Y25	RES,RK 101J 1/16 -CP
MAIN-P.W.Board(DVD&Display-unit)		R178	06S45674W89	RES,RK 223J 1/10 -CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
-----------	-----	-------	------	-----------	------------

MAIN-P.W.Board(DVD&Display-unit)		R179	06S45674W89	RES,RK 223J 1/10 -CP
MAIN-P.W.Board(DVD&Display-unit)		R180	06S45674W89	RES,RK 223J 1/10 -CP
MAIN-P.W.Board(DVD&Display-unit)		R181	06S45674W81	RES,RK 103J 1/10 -CP
MAIN-P.W.Board(DVD&Display-unit)		R183	06S65415Y17	RES,RK 221F 1/16 -CP
MAIN-P.W.Board(DVD&Display-unit)		R184	06S65415Y17	RES,RK 221F 1/16 -CP
MAIN-P.W.Board(DVD&Display-unit)		R185	06S65415Y17	RES,RK 221F 1/16 -CP
MAIN-P.W.Board(DVD&Display-unit)		R186	06S65415Y17	RES,RK 221F 1/16 -CP
MAIN-P.W.Board(DVD&Display-unit)		R187	06S65415Y17	RES,RK 221F 1/16 -CP
MAIN-P.W.Board(DVD&Display-unit)		R188	06S65415Y17	RES,RK 221F 1/16 -CP
MAIN-P.W.Board(DVD&Display-unit)		R189	06S65415Y17	RES,RK 221F 1/16 -CP
MAIN-P.W.Board(DVD&Display-unit)		R190	06S65415Y17	RES,RK 221F 1/16 -CP
MAIN-P.W.Board(DVD&Display-unit)		R191	06S45675W43	RES,RK JUMPER1/10-CP
MAIN-P.W.Board(DVD&Display-unit)		R192	06S15615Y89	RES,RK 473J 1/16 -CP
MAIN-P.W.Board(DVD&Display-unit)		R207	06S45675W43	RES,RK JUMPER1/10-CP
MAIN-P.W.Board(DVD&Display-unit)		R227	06S15615Y13	RES,RK 33RJ 1/16 -CP
MAIN-P.W.Board(DVD&Display-unit)		R228	06S15615Y13	RES,RK 33RJ 1/16 -CP
MAIN-P.W.Board(DVD&Display-unit)		R229	06S15615Y13	RES,RK 33RJ 1/16 -CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
-----------	-----	-------	------	-----------	------------

MAIN-P.W.Board(DVD&Display-unit)		R230	06S15615Y13	RES,RK 33RJ 1/16 -CP
MAIN-P.W.Board(DVD&Display-unit)		R231	06S15615Y13	RES,RK 33RJ 1/16 -CP
MAIN-P.W.Board(DVD&Display-unit)		R232	06S15615Y13	RES,RK 33RJ 1/16 -CP
MAIN-P.W.Board(DVD&Display-unit)		R233	06S15615Y13	RES,RK 33RJ 1/16 -CP
MAIN-P.W.Board(DVD&Display-unit)		R234	06S15615Y13	RES,RK 33RJ 1/16 -CP
MAIN-P.W.Board(DVD&Display-unit)		R235	06S15615Y13	RES,RK 33RJ 1/16 -CP
MAIN-P.W.Board(DVD&Display-unit)		R238	06S15615Y09	RES,RK 22RJ 1/16 -CP
MAIN-P.W.Board(DVD&Display-unit)		R239	06S15615Y09	RES,RK 22RJ 1/16 -CP
MAIN-P.W.Board(DVD&Display-unit)		R240	06S45674W45	RES,RK 331J 1/10 -CP
MAIN-P.W.Board(DVD&Display-unit)		R241	06S45674W45	RES,RK 331J 1/10 -CP
MAIN-P.W.Board(DVD&Display-unit)		R244	06S15616Y23	RES,RK JUMPER1/16-CP
MAIN-P.W.Board(DVD&Display-unit)		R245	06S15616Y23	RES,RK JUMPER1/16-CP
MAIN-P.W.Board(DVD&Display-unit)		R246	06S15615Y09	RES,RK 22RJ 1/16 -CP
MAIN-P.W.Board(DVD&Display-unit)		R247	06S45674W45	RES,RK 331J 1/10 -CP
MAIN-P.W.Board(DVD&Display-unit)		R248	06S15616Y23	RES,RK JUMPER1/16-CP
MAIN-P.W.Board(DVD&Display-unit)		R300	06S45674W74	RES,RK 512J 1/10 -CP
MAIN-P.W.Board(DVD&Display-unit)		R301	06S45674W73	RES,RK 472J 1/10 -CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
-----------	-----	-------	------	-----------	------------

MAIN-P.W.Board(DVD&Display-unit)		R303	06S65415Y43	RES,RK 333F 1/16 -CP
MAIN-P.W.Board(DVD&Display-unit)		R304	06-12372Z02	RES,RK R015F 1/5 -CP
MAIN-P.W.Board(DVD&Display-unit)		R306	06-25919Z16	RES,RK 134F 1/16 -CP
MAIN-P.W.Board(DVD&Display-unit)		R307	06S15615Y99	RES,RK 124J 1/16 -CP
MAIN-P.W.Board(DVD&Display-unit)		R308	06S65415Y31	RES,RK 332F 1/16 -CP
MAIN-P.W.Board(DVD&Display-unit)		R309	06S65415Y29	RES,RK 222F 1/16 -CP
MAIN-P.W.Board(DVD&Display-unit)		R310	06S15615Y49	RES,RK 102J 1/16 -CP
MAIN-P.W.Board(DVD&Display-unit)		R311	06S15615Y49	RES,RK 102J 1/16 -CP
MAIN-P.W.Board(DVD&Display-unit)		R312	06S45674W99	RES,RK 563J 1/10 -CP
MAIN-P.W.Board(DVD&Display-unit)		R313	06S65415Y43	RES,RK 333F 1/16 -CP
MAIN-P.W.Board(DVD&Display-unit)		R314	06S65415Y27	RES,RK 152F 1/16 -CP
MAIN-P.W.Board(DVD&Display-unit)		R316	06S65415Y39	RES,RK 153F 1/16 -CP
MAIN-P.W.Board(DVD&Display-unit)		R317	06-12372Z02	RES,RK R015F 1/5 -CP
MAIN-P.W.Board(DVD&Display-unit)		R318	06S45675W06	RES,RK 104J 1/10 -CP
MAIN-P.W.Board(DVD&Display-unit)		R319	06S45674W75	RES,RK 562J 1/10 -CP
MAIN-P.W.Board(DVD&Display-unit)		R320	06S15615Y37	RES,RK 331J 1/16 -CP
MAIN-P.W.Board(DVD&Display-unit)		R321	06S15615Y37	RES,RK 331J 1/16 -CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
-----------	-----	-------	------	-----------	------------

MAIN-P.W.Board(DVD&Display-unit)		R322	06-12372Z02	RES,RK R015F 1/5 -CP
MAIN-P.W.Board(DVD&Display-unit)		R323	06-12372Z02	RES,RK R015F 1/5 -CP
MAIN-P.W.Board(DVD&Display-unit)		R324	06S15616Y23	RES,RK JUMPER1/16-CP
MAIN-P.W.Board(DVD&Display-unit)		R325	06S15616Y23	RES,RK JUMPER1/16-CP
MAIN-P.W.Board(DVD&Display-unit)		R327	06S45674W75	RES,RK 562J 1/10 -CP
MAIN-P.W.Board(DVD&Display-unit)		R328	06S15616Y23	RES,RK JUMPER1/16-CP
MAIN-P.W.Board(DVD&Display-unit)		R329	06S45674W75	RES,RK 562J 1/10 -CP
MAIN-P.W.Board(DVD&Display-unit)		R330	06S45675W02	RES,RK 683J 1/10 -CP
MAIN-P.W.Board(DVD&Display-unit)		R331	06S45675W19	RES,RK 364J 1/10 -CP
MAIN-P.W.Board(DVD&Display-unit)		R332	06S15616Y23	RES,RK JUMPER1/16-CP
MAIN-P.W.Board(DVD&Display-unit)		R333	06S15616Y23	RES,RK JUMPER1/16-CP
MAIN-P.W.Board(DVD&Display-unit)		R334	06S45674W90	RES,RK 243J 1/10 -CP
MAIN-P.W.Board(DVD&Display-unit)		R335	06S15616Y23	RES,RK JUMPER1/16-CP
MAIN-P.W.Board(DVD&Display-unit)		R336	06S15616Y23	RES,RK JUMPER1/16-CP
MAIN-P.W.Board(DVD&Display-unit)		R337	06S15594Y12	RES,RK 394F 1/10 -CP
MAIN-P.W.Board(DVD&Display-unit)		R338	06S45674W81	RES,RK 103J 1/10 -CP
MAIN-P.W.Board(DVD&Display-unit)		R339	06S45675W01	RES,RK 623J 1/10 -CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
MAIN-P.W.Board(DVD&Display-unit)		R340	06S15615Y99	RES,RK 124J 1/16 -CP	
MAIN-P.W.Board(DVD&Display-unit)		R341	06S15593Y92	RES,RK 623F 1/10 -CP	
MAIN-P.W.Board(DVD&Display-unit)		R342	06S15593Y92	RES,RK 623F 1/10 -CP	
MAIN-P.W.Board(DVD&Display-unit)		R343	06S45674W57	RES,RK 102J 1/10 -CP	
MAIN-P.W.Board(DVD&Display-unit)		R344	06S15593Y77	RES,RK 153F 1/10 -CP	
MAIN-P.W.Board(DVD&Display-unit)		R345	06S15593Y89	RES,RK 473F 1/10 -CP	
MAIN-P.W.Board(DVD&Display-unit)		R346	06S35083Y19	RES,RK 331F 1/4 -CP	
MAIN-P.W.Board(DVD&Display-unit)		R347	06S35083Y19	RES,RK 331F 1/4 -CP	
MAIN-P.W.Board(DVD&Display-unit)		R348	06S35083Y19	RES,RK 331F 1/4 -CP	
MAIN-P.W.Board(DVD&Display-unit)		R350	06S45674W93	RES,RK 333J 1/10 -CP	
MAIN-P.W.Board(DVD&Display-unit)		R351	06S45675W07	RES,RK 114J 1/10 -CP	
MAIN-P.W.Board(DVD&Display-unit)		R355	06S45675W02	RES,RK 683J 1/10 -CP	
MAIN-P.W.Board(DVD&Display-unit)		R400	06S15615Y13	RES,RK 33RJ 1/16 -CP	
MAIN-P.W.Board(DVD&Display-unit)		R401	06S15593Y93	RES,RK 683F 1/10 -CP	
MAIN-P.W.Board(DVD&Display-unit)		R402	06S15594Y17	RES,RK 624F 1/10 -CP	
MAIN-P.W.Board(DVD&Display-unit)		R403	06S15615Y09	RES,RK 22RJ 1/16 -CP	
MAIN-P.W.Board(DVD&Display-unit)		R407	06S15615Y73	RES,RK 103J 1/16 -CP	

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
MAIN-P.W.Board(DVD&Display-unit)		R408	06S15615Y09	RES,RK 22RJ 1/16 -CP	
MAIN-P.W.Board(DVD&Display-unit)		R409	06S15615Y09	RES,RK 22RJ 1/16 -CP	
MAIN-P.W.Board(DVD&Display-unit)		R412	06S70072F59	RES,CP .182-J-1/4-CP	
MAIN-P.W.Board(DVD&Display-unit)		R413	06S70072F59	RES,CP .182-J-1/4-CP	
MAIN-P.W.Board(DVD&Display-unit)		R414	06S15615Y65	RES,RK 472J 1/16 -CP	
MAIN-P.W.Board(DVD&Display-unit)		R415	06S15615Y65	RES,RK 472J 1/16 -CP	
MAIN-P.W.Board(DVD&Display-unit)		R416	06S15615Y57	RES,RK 222J 1/16 -CP	
MAIN-P.W.Board(DVD&Display-unit)		R417	06S15616Y23	RES,RK JUMPER1/16-CP	
MAIN-P.W.Board(DVD&Display-unit)		R419	06S15615Y09	RES,RK 22RJ 1/16 -CP	
MAIN-P.W.Board(DVD&Display-unit)		R420	06S70072F29	RES,CP .101-J-1/4-CP	
MAIN-P.W.Board(DVD&Display-unit)		R421	06S70072F29	RES,CP .101-J-1/4-CP	
MAIN-P.W.Board(DVD&Display-unit)		R422	06S70072F29	RES,CP .101-J-1/4-CP	
MAIN-P.W.Board(DVD&Display-unit)		R423	06S15615Y09	RES,RK 22RJ 1/16 -CP	
MAIN-P.W.Board(DVD&Display-unit)		R424	06S45675W43	RES,RK JUMPER1/10-CP	
MAIN-P.W.Board(DVD&Display-unit)		R425	06S15615Y57	RES,RK 222J 1/16 -CP	
MAIN-P.W.Board(DVD&Display-unit)		R426	06S65415Y87	RES,RK 431F 1/16 -CP	
MAIN-P.W.Board(DVD&Display-unit)		R427	06S65415Y87	RES,RK 431F 1/16 -CP	

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
MAIN-P.W.Board(DVD&Display-unit)		R428	06S65415Y06	RES,RK 27RF 1/16 -CP	
MAIN-P.W.Board(DVD&Display-unit)		R429	06S70072F77	RES,CP .103-J-1/4-CP	
MAIN-P.W.Board(DVD&Display-unit)		R431	06-25919Z07	RES,RK 243F 1/16 -CP	
MAIN-P.W.Board(DVD&Display-unit)		R432	06S15593Y54	RES,RK 162F 1/10 -CP	
MAIN-P.W.Board(DVD&Display-unit)		R433	06S15615Y25	RES,RK 101J 1/16 -CP	
MAIN-P.W.Board(DVD&Display-unit)		R434	06S15616Y23	RES,RK JUMPER1/16-CP	
MAIN-P.W.Board(DVD&Display-unit)		R435	06S15615Y25	RES,RK 101J 1/16 -CP	
MAIN-P.W.Board(DVD&Display-unit)		R436	06S15615Y25	RES,RK 101J 1/16 -CP	
MAIN-P.W.Board(DVD&Display-unit)		R437	06S15615Y25	RES,RK 101J 1/16 -CP	
MAIN-P.W.Board(DVD&Display-unit)		R438	06S15615Y25	RES,RK 101J 1/16 -CP	
MAIN-P.W.Board(DVD&Display-unit)		R439	06S15615Y25	RES,RK 101J 1/16 -CP	
MAIN-P.W.Board(DVD&Display-unit)		R440	06S15615Y25	RES,RK 101J 1/16 -CP	
MAIN-P.W.Board(DVD&Display-unit)		R442	06S15615Y25	RES,RK 101J 1/16 -CP	
MAIN-P.W.Board(DVD&Display-unit)		R443	06S15615Y25	RES,RK 101J 1/16 -CP	
MAIN-P.W.Board(DVD&Display-unit)		R444	06S15615Y65	RES,RK 472J 1/16 -CP	
MAIN-P.W.Board(DVD&Display-unit)		R445	06S45675W43	RES,RK JUMPER1/10-CP	
MAIN-P.W.Board(DVD&Display-unit)		R446	06S15615Y49	RES,RK 102J 1/16 -CP	

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
-----------	-----	-------	------	-----------	------------

MAIN-P.W.Board(DVD&Display-unit)		R447	06S65415Y31	RES,RK 332F 1/16 -CP
MAIN-P.W.Board(DVD&Display-unit)		R449	06S15616Y22	RES,RK 105J 1/16 -CP
MAIN-P.W.Board(DVD&Display-unit)		R450	06S15615Y25	RES,RK 101J 1/16 -CP
MAIN-P.W.Board(DVD&Display-unit)		R451	06S15615Y65	RES,RK 472J 1/16 -CP
MAIN-P.W.Board(DVD&Display-unit)		R452	06S15615Y65	RES,RK 472J 1/16 -CP
MAIN-P.W.Board(DVD&Display-unit)		R454	06S45675W43	RES,RK JUMPER1/10-CP
MAIN-P.W.Board(DVD&Display-unit)		R456	06S45675W43	RES,RK JUMPER1/10-CP
MAIN-P.W.Board(DVD&Display-unit)		R457	06S45675W43	RES,RK JUMPER1/10-CP
MAIN-P.W.Board(DVD&Display-unit)		R458	06S15615Y13	RES,RK 33RJ 1/16 -CP
MAIN-P.W.Board(DVD&Display-unit)		R459	06S45675W43	RES,RK JUMPER1/10-CP
MAIN-P.W.Board(DVD&Display-unit)		R461	06-25919Z44	RES,RK 5R1F 1/16 -CP
MAIN-P.W.Board(DVD&Display-unit)		R462	06-25919Z44	RES,RK 5R1F 1/16 -CP
MAIN-P.W.Board(DVD&Display-unit)		R463	06-25919Z44	RES,RK 5R1F 1/16 -CP
MAIN-P.W.Board(DVD&Display-unit)		R464	06-25919Z44	RES,RK 5R1F 1/16 -CP
MAIN-P.W.Board(DVD&Display-unit)		R465	06-25919Z44	RES,RK 5R1F 1/16 -CP
MAIN-P.W.Board(DVD&Display-unit)		R466	06-25919Z44	RES,RK 5R1F 1/16 -CP
MAIN-P.W.Board(DVD&Display-unit)		R467	06-25919Z44	RES,RK 5R1F 1/16 -CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
MAIN-P.W.Board(DVD&Display-unit)		R468	06-25919Z44	RES,RK 5R1F 1/16 -CP	
MAIN-P.W.Board(DVD&Display-unit)		R469	06S15616Y23	RES,RK JUMPER1/16-CP	
MAIN-P.W.Board(DVD&Display-unit)		R470	06S15616Y23	RES,RK JUMPER1/16-CP	
MAIN-P.W.Board(DVD&Display-unit)		R471	06S15616Y23	RES,RK JUMPER1/16-CP	
MAIN-P.W.Board(DVD&Display-unit)		R472	06S15616Y23	RES,RK JUMPER1/16-CP	
MAIN-P.W.Board(DVD&Display-unit)		R473	06S15616Y23	RES,RK JUMPER1/16-CP	
MAIN-P.W.Board(DVD&Display-unit)		R474	06S45675W43	RES,RK JUMPER1/10-CP	
MAIN-P.W.Board(DVD&Display-unit)		R475	06S15616Y23	RES,RK JUMPER1/16-CP	
MAIN-P.W.Board(DVD&Display-unit)		R476	06S45675W43	RES,RK JUMPER1/10-CP	
MAIN-P.W.Board(DVD&Display-unit)		R479	06S45675W07	RES,RK 114J 1/10 -CP	
MAIN-P.W.Board(DVD&Display-unit)		R500	06S35083Y37	RES,RK 103F 1/4 -CP	
MAIN-P.W.Board(DVD&Display-unit)		R501	06S45675W43	RES,RK JUMPER1/10-CP	
MAIN-P.W.Board(DVD&Display-unit)		R502	06S15615Y59	RES,RK 272J 1/16 -CP	
MAIN-P.W.Board(DVD&Display-unit)		R503	06S35083Y41	RES,RK 223F 1/4 -CP	
MAIN-P.W.Board(DVD&Display-unit)		R504	06S35083Y44	RES,RK 393F 1/4 -CP	
MAIN-P.W.Board(DVD&Display-unit)		R505	06S15593Y95	RES,RK 823F 1/10 -CP	
MAIN-P.W.Board(DVD&Display-unit)		R506	06S70072F69	RES,CP .472-J-1/4-CP	

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
-----------	-----	-------	------	-----------	------------

MAIN-P.W.Board(DVD&Display-unit)		R507	06S35095Y03	RES,RK 473J 1/4 -CP
MAIN-P.W.Board(DVD&Display-unit)		R508	06S15615Y13	RES,RK 33RJ 1/16 -CP
MAIN-P.W.Board(DVD&Display-unit)		R509	06S70072F29	RES,CP .101-J-1/4-CP
MAIN-P.W.Board(DVD&Display-unit)		R510	06S45675W23	RES,RK 514J 1/10 -CP
MAIN-P.W.Board(DVD&Display-unit)		R511	06S45674W97	RES,RK 473J 1/10 -CP
MAIN-P.W.Board(DVD&Display-unit)		R512	06S15615Y89	RES,RK 473J 1/16 -CP
MAIN-P.W.Board(DVD&Display-unit)		R513	06S35083Y41	RES,RK 223F 1/4 -CP
MAIN-P.W.Board(DVD&Display-unit)		R514	06S15615Y59	RES,RK 272J 1/16 -CP
MAIN-P.W.Board(DVD&Display-unit)		R515	06S70072F53	RES,CP .102-J-1/4-CP
MAIN-P.W.Board(DVD&Display-unit)		R516	06S70072F53	RES,CP .102-J-1/4-CP
MAIN-P.W.Board(DVD&Display-unit)		R517	06S35095Y08	RES,RK JUMPER 1/4-CP
MAIN-P.W.Board(DVD&Display-unit)		R518	06S35083Y41	RES,RK 223F 1/4 -CP
MAIN-P.W.Board(DVD&Display-unit)		R519	06S70072F53	RES,CP .102-J-1/4-CP
MAIN-P.W.Board(DVD&Display-unit)		R520	06S70072F53	RES,CP .102-J-1/4-CP
MAIN-P.W.Board(DVD&Display-unit)		R521	06S45674W97	RES,RK 473J 1/10 -CP
MAIN-P.W.Board(DVD&Display-unit)		R524	06S35083Y41	RES,RK 223F 1/4 -CP
MAIN-P.W.Board(DVD&Display-unit)		R601	06S15615Y73	RES,RK 103J 1/16 -CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
-----------	-----	-------	------	-----------	------------

MAIN-P.W.Board(DVD&Display-unit)		R602	06S15615Y73	RES,RK 103J 1/16 -CP
MAIN-P.W.Board(DVD&Display-unit)		R604	06S15615Y97	RES,RK 104J 1/16 -CP
MAIN-P.W.Board(DVD&Display-unit)		R605	06S15615Y97	RES,RK 104J 1/16 -CP
MAIN-P.W.Board(DVD&Display-unit)		R606	06S15615Y25	RES,RK 101J 1/16 -CP
MAIN-P.W.Board(DVD&Display-unit)		R607	06S15615Y73	RES,RK 103J 1/16 -CP
MAIN-P.W.Board(DVD&Display-unit)		R608	06S15615Y49	RES,RK 102J 1/16 -CP
MAIN-P.W.Board(DVD&Display-unit)		R609	06S15615Y25	RES,RK 101J 1/16 -CP
MAIN-P.W.Board(DVD&Display-unit)		R610	06S15615Y25	RES,RK 101J 1/16 -CP
MAIN-P.W.Board(DVD&Display-unit)		R611	06S15615Y25	RES,RK 101J 1/16 -CP
MAIN-P.W.Board(DVD&Display-unit)		R612	06S15615Y25	RES,RK 101J 1/16 -CP
MAIN-P.W.Board(DVD&Display-unit)		R614	06S45675W43	RES,RK JUMPER1/10-CP
MAIN-P.W.Board(DVD&Display-unit)		SD300	48T45286Y01	DIO,SHT RB050L-40-E1
MAIN-P.W.Board(DVD&Display-unit)		SD301	48T45286Y01	DIO,SHT RB050L-40-E1
MAIN-P.W.Board(DVD&Display-unit)		SD302	48-19296Z01	DIO,SHT RB056L-40-E1
MAIN-P.W.Board(DVD&Display-unit)		SK600	09-30387Z01	SKT,GT17HNF-4DP-2-DB
MAIN-P.W.Board(DVD&Display-unit)		SW100	40-24933Z02	SW,DETCT SPVT2102-E6
MAIN-P.W.Board(DVD&Display-unit)		SW101	40-24933Z01	SW,DETCT SPVT1102-E6

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
-----------	-----	-------	------	-----------	------------

MAIN-P.W.Board(DVD&Display-unit)		T500	25-06113Z01	CHOKE,OLD-UB0993 +
MAIN-P.W.Board(DVD&Display-unit)		XL100	91-10720Z04	XTL,NX8045GB 6.0M-E5
MAIN-P.W.Board(DVD&Display-unit)		XL401	91-26661Z12	XTL,NX3225SAAG27.0CP
MAIN-P.W.Board(DVD&Display-unit)		Z400	91-24457Z01	EMI,EXC24CG900U -CP
MAIN-P.W.Board(DVD&Display-unit)		Z401	91-24457Z01	EMI,EXC24CG900U -CP
MAIN-P.W.Board(DVD&Display-unit)		Z402	91-24457Z01	EMI,EXC24CG900U -CP
MAIN-P.W.Board(DVD&Display-unit)		Z403	91-24457Z01	EMI,EXC24CG900U -CP
MAIN-P.W.Board(DVD&Display-unit)		Z600	91T65123Y02	EMI,DLW21SN900SQ2-CP
MAIN-P.W.Board(DVD&Display-unit)		ZD400	48-25907Z01	DIO,ZEN PESD5V0F1-CP
MAIN-P.W.Board(DVD&Display-unit)		ZD403	48-25907Z01	DIO,ZEN PESD5V0F1-CP
MAIN-P.W.Board(DVD&Display-unit)		ZD404	48-25907Z01	DIO,ZEN PESD5V0F1-CP
MAIN-P.W.Board(DVD&Display-unit)		ZD405	48-25907Z01	DIO,ZEN PESD5V0F1-CP
MAIN-P.W.Board(DVD&Display-unit)		ZD406	48-25907Z01	DIO,ZEN PESD5V0F1-CP
MAIN-P.W.Board(DVD&Display-unit)		ZD407	48-25907Z01	DIO,ZEN PESD5V0F1-CP
MAIN-P.W.Board(DVD&Display-unit)		ZD408	48-25907Z01	DIO,ZEN PESD5V0F1-CP
MAIN-P.W.Board(DVD&Display-unit)		ZD409	48-25907Z01	DIO,ZEN PESD5V0F1-CP
MAIN-P.W.Board(DVD&Display-unit)		ZD410	48-25907Z01	DIO,ZEN PESD5V0F1-CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
MAIN- P.W.Board(DVD&Display-unit)		ZD411	48-25907Z01	DIO,ZEN PESD5V0F1-CP	
MAIN- P.W.Board(DVD&Display-unit)		ZD412	48-25907Z01	DIO,ZEN PESD5V0F1-CP	
MAIN- P.W.Board(DVD&Display-unit)		ZD500	48-07043Z37	DIO,ZEN KDZ11V -CP	
MAIN- P.W.Board(DVD&Display-unit)		ZD501	48-21149Z26	DIO,ZEN DZ2J062M0LCP	
MAIN- P.W.Board(DVD&Display-unit)		ZD502	48-01607Z08	DIO,ZEN LUDZ3.9B -CP	
MAIN- P.W.Board(DVD&Display-unit)		ZD503	48-07043Z37	DIO,ZEN KDZ11V -CP	
MAIN- P.W.Board(DVD&Display-unit)		ZD504	48-21149Z09	DIO,ZEN DZ2J036L0LCP	
MAIN- P.W.Board(DVD&Display-unit)		ZD505	48-16145Z22	DIO,ZEN PZU5.6B2 -CP	
MAIN- P.W.Board(DVD&Display-unit)		ZD506	48-16145Z22	DIO,ZEN PZU5.6B2 -CP	
MAIN- P.W.Board(DVD&Display-unit)		ZD507	48-21149Z09	DIO,ZEN DZ2J036L0LCP	
MAIN- P.W.Board(DVD&Display-unit)		ZD508	48-23921Z01	DIO,ZEN ZSH5MAZ27-ED	
DISPLAY- P.W.Board(DVD&Display-unit)		C1000	08S45232Y05	CAP,CER 102K-B1H -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C1003	08S45676W65	CAP,CER.222K-B1H -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C1004	08S35374W12	CAP,CER 106K-B0J -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C1005	08S35374W01	CAP,CER 104K-B1E-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C1006	08S45231Y11	CAP,CER 8R0D-CH1H-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C1007	08S45231Y13	CAP,CER 10RD-CH1H-CP	

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
DISPLAY- P.W.Board(DVD&Display-unit)		C1008	08S35374W01	CAP,CER 104K-B1E-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C1009	08S35374W01	CAP,CER 104K-B1E-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C1014	08S45232Y05	CAP,CER 102K-B1H -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C3002	08S35349Y21	CAP,CER 104K-B1H -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C3003	08S65669Y03	CAP,CER 224KX7R1H-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C3004	08S65670Y08	CAP,CER 225KX5R1H-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C3005	08S65669Y03	CAP,CER 224KX7R1H-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C3006	08S45231Y24	CAP,CER 82RJ-CH1H-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C3007	08S65676Y03	CAP,CER 225KX7R1C-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C3008	08S45232Y08	CAP,CER 332K-B1H -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C3009	08S65669Y03	CAP,CER 224KX7R1H-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C3010	08S65669Y03	CAP,CER 224KX7R1H-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C3011	08S35349Y21	CAP,CER 104K-B1H -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C3012	08S45676W83	CAP,CER 473K-B1C -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C3013	08S65669Y03	CAP,CER 224KX7R1H-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C3015	08S65670Y09	CAP,CER 106KX5R1E-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C3016	08S65670Y09	CAP,CER 106KX5R1E-CP	

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
DISPLAY- P.W.Board(DVD&Display-unit)		C3017	08S65670Y09	CAP,CER 106KX5R1E-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C3018	08S65669Y03	CAP,CER 224KX7R1H-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C3019	08S65670Y01	CAP,CER 106KX5R1C-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C3021	08S65676Y03	CAP,CER 225KX7R1C-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C3022	08S65670Y07	CAP,CER 105KX5R1H-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C3023	08S65670Y07	CAP,CER 105KX5R1H-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C3024	08S45232Y08	CAP,CER 332K-B1H -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C3025	08S65669Y03	CAP,CER 224KX7R1H-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C3027	08S45231Y25	CAP,CER 101J-CH1H-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C3028	08S45231Y26	CAP,CER 121J-CH1H-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C3029	08S65676Y09	CAP,CER 475KX7R1H-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C3030	08S65670Y06	CAP,CER 226KX5R1A-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C3031	08S65669Y03	CAP,CER 224KX7R1H-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C3032	08S35374W10	CAP,CER 225K-B1A -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C3033	08S65669Y03	CAP,CER 224KX7R1H-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C3034	08S35374W10	CAP,CER 225K-B1A -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C3035	08S65671Y04	CAP,CER 106KX5R1H-CP	

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
DISPLAY- P.W.Board(DVD&Display-unit)		C3036	08S65676Y03	CAP,CER 225KX7R1C-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C3037	08S65669Y03	CAP,CER 224KX7R1H-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C3038	08S65676Y03	CAP,CER 225KX7R1C-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C3039	08S65669Y03	CAP,CER 224KX7R1H-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C3040	08S35374W10	CAP,CER 225K-B1A -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C3041	08S65670Y09	CAP,CER 106KX5R1E-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C3042	08S65670Y02	CAP,CER 225KX5R1E-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C3043	08S45232Y11	CAP,CER 103K-B1C -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C3044	08S65670Y07	CAP,CER 105KX5R1H-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C3045	08S65670Y07	CAP,CER 105KX5R1H-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C3046	08S65671Y04	CAP,CER 106KX5R1H-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C3047	08S65676Y09	CAP,CER 475KX7R1H-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C3048	08S65670Y08	CAP,CER 225KX5R1H-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C3049	08S35374W08	CAP,CER 474K-B1C -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C3050	08S45231Y31	CAP,CER 331J-CH1H-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C3051	08S45232Y05	CAP,CER 102K-B1H -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C3052	08S45232Y07	CAP,CER 222K-B1H -CP	

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
DISPLAY- P.W.Board(DVD&Display-unit)		C3053	08S45232Y07	CAP,CER 222K-B1H -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C3054	08S65670Y07	CAP,CER 105KX5R1H-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C3055	08S45232Y05	CAP,CER 102K-B1H -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C3056	08S65670Y09	CAP,CER 106KX5R1E-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C3057	08S65669Y03	CAP,CER 224KX7R1H-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C3061	08S65670Y08	CAP,CER 225KX5R1H-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C3062	08S45232Y05	CAP,CER 102K-B1H -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C3063	08S65669Y03	CAP,CER 224KX7R1H-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C3064	08S65669Y03	CAP,CER 224KX7R1H-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C3065	08S65671Y04	CAP,CER 106KX5R1H-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C3066	08S65670Y09	CAP,CER 106KX5R1E-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C3067	08S65669Y03	CAP,CER 224KX7R1H-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C3068	08S65671Y04	CAP,CER 106KX5R1H-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C3069	08S65669Y03	CAP,CER 224KX7R1H-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C3070	08S65669Y03	CAP,CER 224KX7R1H-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C4000	08S65669Y03	CAP,CER 224KX7R1H-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C4003	08S65669Y03	CAP,CER 224KX7R1H-CP	

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
DISPLAY- P.W.Board(DVD&Display-unit)		C4004	08S45676W85	CAP,CER 104K-B1C -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C4005	08S45676W85	CAP,CER 104K-B1C -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C4006	08S45676W85	CAP,CER 104K-B1C -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C4007	08S45676W85	CAP,CER 104K-B1C -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C4008	08S65669Y03	CAP,CER 224KX7R1H-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C4009	08S65669Y03	CAP,CER 224KX7R1H-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C4010	08S65669Y03	CAP,CER 224KX7R1H-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C4011	08S65669Y03	CAP,CER 224KX7R1H-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C4012	08S65669Y03	CAP,CER 224KX7R1H-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C4013	08S35349Y12	CAP,CER 105K-B0J -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C4014	08S65669Y03	CAP,CER 224KX7R1H-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C4025	08S45676W85	CAP,CER 104K-B1C -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C4026	08S45676W85	CAP,CER 104K-B1C -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C4027	08S45676W85	CAP,CER 104K-B1C -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C4028	08S45676W85	CAP,CER 104K-B1C -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C4029	08S45676W85	CAP,CER 104K-B1C -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C4030	08S45676W85	CAP,CER 104K-B1C -CP	

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
DISPLAY- P.W.Board(DVD&Display-unit)		C5028	08S45232Y17	CAP,CER 104K-B0J -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C5029	08S45232Y17	CAP,CER 104K-B0J -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C7400	08S65669Y03	CAP,CER 224KX7R1H-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C7401	08S45231Y17	CAP,CER 22RJ-CH1H-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C7402	08S45231Y17	CAP,CER 22RJ-CH1H-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C7403	08S45232Y17	CAP,CER 104K-B0J -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C7404	08S35374W12	CAP,CER 106K-B0J -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C7405	08S45232Y17	CAP,CER 104K-B0J -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C7406	08S35374W12	CAP,CER 106K-B0J -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C7407	08S45232Y17	CAP,CER 104K-B0J -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C7408	08S45232Y17	CAP,CER 104K-B0J -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C7409	08S45232Y17	CAP,CER 104K-B0J -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C7410	08S45232Y17	CAP,CER 104K-B0J -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C7411	08S45232Y17	CAP,CER 104K-B0J -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C7418	08S45231Y11	CAP,CER 8R0D-CH1H-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C7419	08S45231Y10	CAP,CER 7R0D-CH1H-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C7420	08S45232Y17	CAP,CER 104K-B0J -CP	

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
DISPLAY- P.W.Board(DVD&Display-unit)		C7421	08S45232Y17	CAP,CER 104K-B0J -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C7422	08S45232Y17	CAP,CER 104K-B0J -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C7423	08S45232Y17	CAP,CER 104K-B0J -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C7424	08S45232Y17	CAP,CER 104K-B0J -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C7434	08S35374W12	CAP,CER 106K-B0J -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C7435	08S35374W12	CAP,CER 106K-B0J -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C7436	08S45232Y05	CAP,CER 102K-B1H -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C7600	08S45231Y20	CAP,CER 39RJ-CH1H-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C7601	08S45676W85	CAP,CER 104K-B1C -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C7602	08S45676W85	CAP,CER 104K-B1C -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C7603	08S45676W85	CAP,CER 104K-B1C -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C7604	08S35374W12	CAP,CER 106K-B0J -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C7605	08S45676W85	CAP,CER 104K-B1C -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C7606	08S45676W85	CAP,CER 104K-B1C -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C7607	08S65667Y05	CAP,CER 105KX5R1A-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C7608	08S45231Y20	CAP,CER 39RJ-CH1H-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C7609	08S45676W85	CAP,CER 104K-B1C -CP	

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
DISPLAY- P.W.Board(DVD&Display-unit)		C7610	08S45676W85	CAP,CER 104K-B1C -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C7611	08S45676W85	CAP,CER 104K-B1C -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C7612	08S45231Y20	CAP,CER 39RJ-CH1H-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C7613	08S45231Y20	CAP,CER 39RJ-CH1H-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C7614	08S45676W85	CAP,CER 104K-B1C -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C7615	08S65667Y05	CAP,CER 105KX5R1A-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C7616	08S45232Y11	CAP,CER 103K-B1C -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		C7618	08S65667Y05	CAP,CER 105KX5R1A-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		CB1001	09T25286Y10	WTB,BM(10)B-SRSS -E9	
DISPLAY- P.W.Board(DVD&Display-unit)		CB3000	09-16224Z01	FFC,FH28-10S-0.5SHE9	
DISPLAY- P.W.Board(DVD&Display-unit)		CB4000	09-10492Z02	FFC,501864-5090 -EZ	
DISPLAY- P.W.Board(DVD&Display-unit)		CB4001	09-16224Z03	FFC,FH28-60S-0.5SHEZ	
DISPLAY- P.W.Board(DVD&Display-unit)		CB7600	09T15548Y07	WTB,SM07B-SRSS-TB-E5	
DISPLAY- P.W.Board(DVD&Display-unit)		CB7601	09-14574Z06	FFC,60FHH-SM1-GAN-EZ	
DISPLAY- P.W.Board(DVD&Display-unit)		D3000	48-19711Z01	DIO,BAV99W -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		E2003	23T35612Y03	CAP,WX 101-1E -E6	
DISPLAY- P.W.Board(DVD&Display-unit)		E3000	23T35612Y03	CAP,WX 101-1E -E6	

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
DISPLAY- P.W.Board(DVD&Display-unit)		E3001	23S65134W13	CAP,ELY 101-0J(6)-E6	
DISPLAY- P.W.Board(DVD&Display-unit)		E3003	23-31100Z07	CAP,MAK 101-1A -E6	
DISPLAY- P.W.Board(DVD&Display-unit)		E3004	23T75543Y13	CAP,MVA 22R-1EE55-E3	
DISPLAY- P.W.Board(DVD&Display-unit)		E3005	23S65134W44	CAP,ELY 22R-1E(6)-E6	
DISPLAY- P.W.Board(DVD&Display-unit)		E3006	23S65134W44	CAP,ELY 22R-1E(6)-E6	
DISPLAY- P.W.Board(DVD&Display-unit)		E4000	23T35735Y17	CAP,MVY 47R-1E-F55E6	
DISPLAY- P.W.Board(DVD&Display-unit)		IC1002	83-32412Z40	16LIMO_Display_Front_IC1002_Software	
DISPLAY- P.W.Board(DVD&Display-unit)		IC1002	51-12505Z01	MTP,R5F3640MDFB -QT	
DISPLAY- P.W.Board(DVD&Display-unit)		IC3000	51-05314Z01	BA4560RFVM-TR -SE1	
DISPLAY- P.W.Board(DVD&Display-unit)		IC3001	51-25969Z01	MAX16813ATP/V+T -LE2	
DISPLAY- P.W.Board(DVD&Display-unit)		IC3002	51-14365Z01	LT1946AEMS8E -SE2	
DISPLAY- P.W.Board(DVD&Display-unit)		IC3003	51-23593Z02	BD00IC0WEFJ-ME2 -SE2	
DISPLAY- P.W.Board(DVD&Display-unit)		IC3004	51-28614Z01	BD00FC0EEFJ-ME2 -SE2	
DISPLAY- P.W.Board(DVD&Display-unit)		IC3005	51-28779Z01	BD90620EFJ-CE2 -SE2	
DISPLAY- P.W.Board(DVD&Display-unit)		IC3006	51-23593Z02	BD00IC0WEFJ-ME2 -SE2	
DISPLAY- P.W.Board(DVD&Display-unit)		IC3007	51-23593Z02	BD00IC0WEFJ-ME2 -SE2	
DISPLAY- P.W.Board(DVD&Display-unit)		IC5001	51T85276W02	TC7WH74FK-TE85L -CP	

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
DISPLAY- P.W.Board(DVD&Display-unit)		IC5002	51T55336Y02	TC7SH04FU,JF-L -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		IC7400	51-29348Z01	TW8834AT-TA2-GR -QT	
DISPLAY- P.W.Board(DVD&Display-unit)		IC7401	51-01932Z02	TC7SZ08FU-TE85LJF-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		IC7600	51T15456Y01	TC74HC4066AFT-EL-SE5	
DISPLAY- P.W.Board(DVD&Display-unit)		IC7601	83-32412Z44	16LIMO_TP_Front_IC7601_Software	
DISPLAY- P.W.Board(DVD&Display-unit)		IC7601	51-25191Z01	CY8CTMA616AA-12 -QT	
DISPLAY- P.W.Board(DVD&Display-unit)		L3001	24T95456W27	FBI,BLM18PG181SH1-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		L3002	24T45379Y06	IND,D53LC 10RM -E2	
DISPLAY- P.W.Board(DVD&Display-unit)		L3003	24-22371Z01	IND,NRS4018T 2R2M-E2	
DISPLAY- P.W.Board(DVD&Display-unit)		L3004	24-22372Z08	IND,NRS6045T 22RM-E2	
DISPLAY- P.W.Board(DVD&Display-unit)		L3005	24-05547Z06	IND,SLF10145-H22RMEA	
DISPLAY- P.W.Board(DVD&Display-unit)		L3007	24-22372Z06	IND,NRS6045T 47RM-E2	
DISPLAY- P.W.Board(DVD&Display-unit)		L7400	24-06212Z06	FBI,BLM15BB221SH1-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		L7401	24-06212Z06	FBI,BLM15BB221SH1-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		L7402	24-06212Z06	FBI,BLM15BB221SH1-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		L7403	24-06212Z06	FBI,BLM15BB221SH1-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		L7404	24-06212Z06	FBI,BLM15BB221SH1-CP	

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
DISPLAY- P.W.Board(DVD&Display-unit)		L7405	24-06212Z06	FBI,BLM15BB221SH1-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		L7406	24-06212Z06	FBI,BLM15BB221SH1-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		L7407	24-06212Z01	FBI,BLM15AG601SH1-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		L7408	24-06212Z06	FBI,BLM15BB221SH1-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		L7409	24-06212Z06	FBI,BLM15BB221SH1-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		L7410	24-06212Z06	FBI,BLM15BB221SH1-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		L7411	24-06212Z06	FBI,BLM15BB221SH1-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		L7412	24-06212Z06	FBI,BLM15BB221SH1-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		L7413	24-06212Z06	FBI,BLM15BB221SH1-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		L7414	24-06212Z05	FBI,BLM15BB121SH1-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		L7415	24-06212Z09	FBI,BLM15BB470SH1-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		L7416	24-06212Z06	FBI,BLM15BB221SH1-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		L7417	24-06212Z06	FBI,BLM15BB221SH1-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		L7418	24-06212Z06	FBI,BLM15BB221SH1-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		L7420	24T95456W27	FBI,BLM18PG181SH1-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		L7421	24T95456W27	FBI,BLM18PG181SH1-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		L7424	24-06212Z06	FBI,BLM15BB221SH1-CP	

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
DISPLAY- P.W.Board(DVD&Display-unit)		L7425	24-06212Z06	FBI,BLM15BB221SH1-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		Q1000	48T25737Y02	TR,UMD3N-TR -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		Q1001	48T25737Y02	TR,UMD3N-TR -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		Q3001	48-13000Z05	TR,LTC124EUBFS8-TLCP	
DISPLAY- P.W.Board(DVD&Display-unit)		Q3002	48T75205Y01	TR,FMC2A-T148 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		Q3003	48T63417F03	TR,C2412K-BR-96 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		Q3004	48T94581F01	TR,2SA1576A-T106 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		Q3005	48T45388Y01	TR,2SA1797-T100 -E2	
DISPLAY- P.W.Board(DVD&Display-unit)		Q3006	48-24943Z02	FET,RSH065N06-TB -E2	
DISPLAY- P.W.Board(DVD&Display-unit)		R1000	06S15615Y49	RES,RK 102J 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R1001	06S15615Y25	RES,RK 101J 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R1004	06S15615Y25	RES,RK 101J 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R1005	06S15616Y23	RES,RK JUMPER1/16-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R1006	06S15615Y49	RES,RK 102J 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R1007	06S15615Y25	RES,RK 101J 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R1008	06S15615Y25	RES,RK 101J 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R1009	06S15615Y25	RES,RK 101J 1/16 -CP	

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
DISPLAY- P.W.Board(DVD&Display-unit)		R1010	06S15615Y25	RES,RK 101J 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R1011	06S15615Y25	RES,RK 101J 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R1012	06S15615Y25	RES,RK 101J 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R1013	06S15615Y25	RES,RK 101J 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R1014	06S45674W89	RES,RK 223J 1/10 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R1015	06S15615Y25	RES,RK 101J 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R1016	06S15615Y25	RES,RK 101J 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R1017	06S45675W43	RES,RK JUMPER1/10-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R1018	06S15615Y25	RES,RK 101J 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R1019	06S15615Y25	RES,RK 101J 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R1020	06S15615Y25	RES,RK 101J 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R1021	06S15615Y25	RES,RK 101J 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R1022	06S15615Y81	RES,RK 223J 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R1023	06S15615Y89	RES,RK 473J 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R1024	06S15615Y81	RES,RK 223J 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R1025	06S15615Y73	RES,RK 103J 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R1026	06S15616Y23	RES,RK JUMPER1/16-CP	

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
DISPLAY- P.W.Board(DVD&Display-unit)		R1028	06S15615Y89	RES,RK 473J 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R1043	06S15615Y81	RES,RK 223J 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R1044	06S15615Y81	RES,RK 223J 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R1047	06S15615Y89	RES,RK 473J 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R1048	06S15615Y89	RES,RK 473J 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R1049	06S15615Y89	RES,RK 473J 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R3000	06S15593Y75	RES,RK 123F 1/10 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R3002	06S70072F33	RES,CP .151-J-1/4-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R3003	06S15593Y46	RES,RK 751F 1/10 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R3004	06S35095Y08	RES,RK JUMPER 1/4-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R3005	06S15593Y77	RES,RK 153F 1/10 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R3006	06S45675W43	RES,RK JUMPER1/10-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R3007	06S15593Y27	RES,RK 121F 1/10 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R3009	06S15593Y52	RES,RK 132F 1/10 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R3010	06S65415Y17	RES,RK 221F 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R3011	06S65415Y32	RES,RK 392F 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R3012	06S65415Y22	RES,RK 561F 1/16 -CP	

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
DISPLAY- P.W.Board(DVD&Display-unit)		R3013	06S65415Y53	RES,RK 224F 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R3014	06S65415Y37	RES,RK 103F 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R3015	06S65415Y39	RES,RK 153F 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R3016	06S65415Y66	RES,RK 622F 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R3017	06S65415Y41	RES,RK 223F 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R3018	06S65415Y45	RES,RK 473F 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R3019	06S15593Y82	RES,RK 243F 1/10 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R3020	06S45675W43	RES,RK JUMPER1/10-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R3021	06S45675W43	RES,RK JUMPER1/10-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R3022	06S65522Y09	RES,RK R47F 1/4 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R3023	06S65522Y09	RES,RK R47F 1/4 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R3024	06S65415Y25	RES,RK 102F 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R3025	06S65415Y35	RES,RK 682F 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R3026	06S15615Y82	RES,RK 243J 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R3027	06S45675W03	RES,RK 753J 1/10 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R3028	06S70072F33	RES,CP .151-J-1/4-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R3029	06S65415Y36	RES,RK 822F 1/16 -CP	

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
DISPLAY- P.W.Board(DVD&Display-unit)		R3030	06S45674W75	RES,RK 562J 1/10 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R3031	06S70072F62	RES,CP .242-J-1/4-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R3032	06S70072F62	RES,CP .242-J-1/4-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R3033	06S65415Y35	RES,RK 682F 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R3034	06-02713Z16	RES,RK 103D 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R3035	06S45675W43	RES,RK JUMPER1/10-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R3036	06S15615Y89	RES,RK 473J 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R3037	06S45674W73	RES,RK 472J 1/10 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R3038	06S45674W73	RES,RK 472J 1/10 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R3039	06S15615Y81	RES,RK 223J 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R3040	06S70072F21	RES,CP .47R-J-1/4-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R3041	06S70072F29	RES,CP .101-J-1/4-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R3042	06S15615Y97	RES,RK 104J 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R3043	06S70072F50	RES,CP .751-J-1/4-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R3045	06S45675W43	RES,RK JUMPER1/10-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R3047	06-02713Z27	RES,RK 104D 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R3048	06S65415Y56	RES,RK 394F 1/16 -CP	

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
DISPLAY- P.W.Board(DVD&Display-unit)		R3049	06S65415Y44	RES,RK 393F 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R3050	06S15615Y82	RES,RK 243J 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R3051	06S15615Y71	RES,RK 822J 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R3052	06S45675W43	RES,RK JUMPER1/10-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R3053	06S15615Y77	RES,RK 153J 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R3054	06S15615Y65	RES,RK 472J 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R3055	06S65415Y39	RES,RK 153F 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R3056	06S15615Y83	RES,RK 273J 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R3058	06S65415Y31	RES,RK 332F 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R3059	06S45674W75	RES,RK 562J 1/10 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R3060	06S45675W04	RES,RK 823J 1/10 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R3061	06S15594Y23	RES,RK JUMPER1/10-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R3062	06S15593Y43	RES,RK 561F 1/10 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R3063	06S45675W43	RES,RK JUMPER1/10-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R3064	06S65415Y38	RES,RK 123F 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R3065	06S65415Y30	RES,RK 272F 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R3066	06S65415Y33	RES,RK 472F 1/16 -CP	

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
DISPLAY- P.W.Board(DVD&Display-unit)		R3067	06S15593Y43	RES,RK 561F 1/10 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R3068	06S45675W02	RES,RK 683J 1/10 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R3069	06S45675W43	RES,RK JUMPER1/10-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R3070	06S65415Y30	RES,RK 272F 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R3071	06S65415Y29	RES,RK 222F 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R3072	06S65415Y32	RES,RK 392F 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R3073	06S45675W27	RES,RK 754J 1/10 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R3074	06S15593Y89	RES,RK 473F 1/10 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R3075	06S15593Y52	RES,RK 132F 1/10 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R3077	06S15616Y23	RES,RK JUMPER1/16-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R3078	06S15593Y57	RES,RK 222F 1/10 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R3079	06S15615Y49	RES,RK 102J 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R3081	06S15615Y73	RES,RK 103J 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R3082	06S65415Y38	RES,RK 123F 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R3083	06S65415Y30	RES,RK 272F 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R3084	06S65415Y33	RES,RK 472F 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R3085	06S45674W77	RES,RK 682J 1/10 -CP	

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
DISPLAY- P.W.Board(DVD&Display-unit)		R3086	06S45675W03	RES,RK 753J 1/10 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R3087	06S45675W43	RES,RK JUMPER1/10-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R3088	06S15594Y10	RES,RK 334F 1/10 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R3089	06-25919Z14	RES,RK 913F 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R3090	06S65415Y33	RES,RK 472F 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R3091	06S65415Y25	RES,RK 102F 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R3092	06S70072F21	RES,CP .47R-J-1/4-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R3093	06S15616Y23	RES,RK JUMPER1/16-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R4000	06S65415Y12	RES,RK 82RF 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R4001	06S65415Y10	RES,RK 56RF 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R4002	06S65415Y13	RES,RK 101F 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R4003	06S65415Y19	RES,RK 331F 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R4010	06S45675W43	RES,RK JUMPER1/10-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R4013	06S65415Y18	RES,RK 271F 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R4014	06S65415Y19	RES,RK 331F 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R4015	06S65415Y12	RES,RK 82RF 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R4016	06S65415Y18	RES,RK 271F 1/16 -CP	

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
DISPLAY- P.W.Board(DVD&Display-unit)		R4017	06S65415Y12	RES,RK 82RF 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R4018	06S65415Y18	RES,RK 271F 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R4019	06S65415Y21	RES,RK 471F 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R4022	06S15616Y23	RES,RK JUMPER1/16-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R4024	06S65415Y14	RES,RK 121F 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R4025	06S65415Y10	RES,RK 56RF 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R4026	06S65415Y13	RES,RK 101F 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R4027	06S65415Y08	RES,RK 39RF 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R4028	06S65415Y12	RES,RK 82RF 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R4029	06S65415Y14	RES,RK 121F 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R4030	06S65415Y17	RES,RK 221F 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R4031	06S65415Y15	RES,RK 151F 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R4032	06S65415Y16	RES,RK 181F 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R4033	06S65415Y18	RES,RK 271F 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R4034	06S65415Y23	RES,RK 681F 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R4035	06S45675W43	RES,RK JUMPER1/10-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R4036	06S45675W43	RES,RK JUMPER1/10-CP	

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
DISPLAY- P.W.Board(DVD&Display-unit)		R4037	06S45675W43	RES,RK JUMPER1/10-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R4038	06S45675W43	RES,RK JUMPER1/10-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R4040	06S45675W43	RES,RK JUMPER1/10-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R4041	06S15615Y73	RES,RK 103J 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R4042	06S15615Y73	RES,RK 103J 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R5049	06S15615Y73	RES,RK 103J 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R5050	06S15616Y23	RES,RK JUMPER1/16-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R5051	06S15615Y73	RES,RK 103J 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R5052	06S15616Y23	RES,RK JUMPER1/16-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R5053	06S15615Y25	RES,RK 101J 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R5054	06S15615Y49	RES,RK 102J 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R5055	06S15616Y23	RES,RK JUMPER1/16-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R7400	06S65415Y17	RES,RK 221F 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R7401	06S65415Y07	RES,RK 33RF 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R7402	06S65415Y07	RES,RK 33RF 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R7406	06S15615Y09	RES,RK 22RJ 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R7409	06S45675W43	RES,RK JUMPER1/10-CP	

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
DISPLAY- P.W.Board(DVD&Display-unit)		R7410	06S45675W43	RES,RK JUMPER1/10-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R7411	06S15615Y13	RES,RK 33RJ 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R7413	06S15615Y13	RES,RK 33RJ 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R7414	06S15615Y13	RES,RK 33RJ 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R7415	06S15615Y13	RES,RK 33RJ 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R7416	06S15615Y13	RES,RK 33RJ 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R7417	06S15615Y13	RES,RK 33RJ 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R7418	06S15615Y09	RES,RK 22RJ 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R7420	06S15615Y23	RES,RK 82RJ 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R7421	06S15615Y23	RES,RK 82RJ 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R7423	06S65415Y17	RES,RK 221F 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R7426	06S65415Y17	RES,RK 221F 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R7434	06S15615Y53	RES,RK 152J 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R7435	06S15615Y25	RES,RK 101J 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R7436	06S15615Y25	RES,RK 101J 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R7437	06S15615Y55	RES,RK 182J 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R7438	06S15615Y55	RES,RK 182J 1/16 -CP	

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
DISPLAY- P.W.Board(DVD&Display-unit)		R7440	06S15615Y49	RES,RK 102J 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R7441	06S15616Y23	RES,RK JUMPER1/16-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R7443	06S15615Y73	RES,RK 103J 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R7450	06S15615Y25	RES,RK 101J 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R7451	06S15615Y25	RES,RK 101J 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R7452	06S15615Y25	RES,RK 101J 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R7453	06S15615Y25	RES,RK 101J 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R7454	06S15615Y25	RES,RK 101J 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R7460	06S15615Y23	RES,RK 82RJ 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R7461	06S15615Y23	RES,RK 82RJ 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R7462	06S15615Y23	RES,RK 82RJ 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R7463	06S15615Y23	RES,RK 82RJ 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R7464	06S15615Y23	RES,RK 82RJ 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R7465	06S15615Y23	RES,RK 82RJ 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R7475	06S15615Y23	RES,RK 82RJ 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R7476	06S15615Y23	RES,RK 82RJ 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R7477	06S15615Y23	RES,RK 82RJ 1/16 -CP	

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
-----------	-----	-------	------	-----------	------------

DISPLAY- P.W.Board(DVD&Display-unit)		R7478	06S15615Y23	RES,RK 82RJ 1/16 -CP
DISPLAY- P.W.Board(DVD&Display-unit)		R7480	06S15615Y09	RES,RK 22RJ 1/16 -CP
DISPLAY- P.W.Board(DVD&Display-unit)		R7482	06S65415Y17	RES,RK 221F 1/16 -CP
DISPLAY- P.W.Board(DVD&Display-unit)		R7483	06S65415Y17	RES,RK 221F 1/16 -CP
DISPLAY- P.W.Board(DVD&Display-unit)		R7484	06S65415Y17	RES,RK 221F 1/16 -CP
DISPLAY- P.W.Board(DVD&Display-unit)		R7485	06S15616Y22	RES,RK 105J 1/16 -CP
DISPLAY- P.W.Board(DVD&Display-unit)		R7486	06S15616Y23	RES,RK JUMPER1/16-CP
DISPLAY- P.W.Board(DVD&Display-unit)		R7487	06S15616Y23	RES,RK JUMPER1/16-CP
DISPLAY- P.W.Board(DVD&Display-unit)		R7488	06S15616Y23	RES,RK JUMPER1/16-CP
DISPLAY- P.W.Board(DVD&Display-unit)		R7489	06S15616Y23	RES,RK JUMPER1/16-CP
DISPLAY- P.W.Board(DVD&Display-unit)		R7490	06S15616Y23	RES,RK JUMPER1/16-CP
DISPLAY- P.W.Board(DVD&Display-unit)		R7491	06S15616Y23	RES,RK JUMPER1/16-CP
DISPLAY- P.W.Board(DVD&Display-unit)		R7492	06S15616Y23	RES,RK JUMPER1/16-CP
DISPLAY- P.W.Board(DVD&Display-unit)		R7493	06S15616Y23	RES,RK JUMPER1/16-CP
DISPLAY- P.W.Board(DVD&Display-unit)		R7494	06S15616Y23	RES,RK JUMPER1/16-CP
DISPLAY- P.W.Board(DVD&Display-unit)		R7495	06S15616Y23	RES,RK JUMPER1/16-CP
DISPLAY- P.W.Board(DVD&Display-unit)		R7600	06S15615Y41	RES,RK 471J 1/16 -CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
-----------	-----	-------	------	-----------	------------

DISPLAY- P.W.Board(DVD&Display-unit)		R7601	06S15615Y41	RES,RK 471J 1/16 -CP
DISPLAY- P.W.Board(DVD&Display-unit)		R7602	06S15615Y41	RES,RK 471J 1/16 -CP
DISPLAY- P.W.Board(DVD&Display-unit)		R7603	06S15615Y41	RES,RK 471J 1/16 -CP
DISPLAY- P.W.Board(DVD&Display-unit)		R7604	06S15615Y41	RES,RK 471J 1/16 -CP
DISPLAY- P.W.Board(DVD&Display-unit)		R7605	06S15615Y41	RES,RK 471J 1/16 -CP
DISPLAY- P.W.Board(DVD&Display-unit)		R7606	06S15615Y41	RES,RK 471J 1/16 -CP
DISPLAY- P.W.Board(DVD&Display-unit)		R7607	06S15615Y41	RES,RK 471J 1/16 -CP
DISPLAY- P.W.Board(DVD&Display-unit)		R7608	06S15615Y41	RES,RK 471J 1/16 -CP
DISPLAY- P.W.Board(DVD&Display-unit)		R7609	06S15615Y41	RES,RK 471J 1/16 -CP
DISPLAY- P.W.Board(DVD&Display-unit)		R7610	06S15615Y41	RES,RK 471J 1/16 -CP
DISPLAY- P.W.Board(DVD&Display-unit)		R7611	06S15615Y41	RES,RK 471J 1/16 -CP
DISPLAY- P.W.Board(DVD&Display-unit)		R7612	06S15615Y41	RES,RK 471J 1/16 -CP
DISPLAY- P.W.Board(DVD&Display-unit)		R7613	06S15615Y41	RES,RK 471J 1/16 -CP
DISPLAY- P.W.Board(DVD&Display-unit)		R7614	06S15615Y41	RES,RK 471J 1/16 -CP
DISPLAY- P.W.Board(DVD&Display-unit)		R7615	06S15615Y41	RES,RK 471J 1/16 -CP
DISPLAY- P.W.Board(DVD&Display-unit)		R7616	06S15615Y41	RES,RK 471J 1/16 -CP
DISPLAY- P.W.Board(DVD&Display-unit)		R7617	06S15615Y41	RES,RK 471J 1/16 -CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
-----------	-----	-------	------	-----------	------------

DISPLAY- P.W.Board(DVD&Display-unit)		R7618	06S15615Y41	RES,RK 471J 1/16 -CP
DISPLAY- P.W.Board(DVD&Display-unit)		R7619	06S15616Y23	RES,RK JUMPER1/16-CP
DISPLAY- P.W.Board(DVD&Display-unit)		R7620	06S15616Y23	RES,RK JUMPER1/16-CP
DISPLAY- P.W.Board(DVD&Display-unit)		R7621	06S15616Y23	RES,RK JUMPER1/16-CP
DISPLAY- P.W.Board(DVD&Display-unit)		R7622	06S15616Y23	RES,RK JUMPER1/16-CP
DISPLAY- P.W.Board(DVD&Display-unit)		R7623	06S15616Y23	RES,RK JUMPER1/16-CP
DISPLAY- P.W.Board(DVD&Display-unit)		R7624	06S15616Y23	RES,RK JUMPER1/16-CP
DISPLAY- P.W.Board(DVD&Display-unit)		R7625	06S15616Y23	RES,RK JUMPER1/16-CP
DISPLAY- P.W.Board(DVD&Display-unit)		R7626	06S15616Y23	RES,RK JUMPER1/16-CP
DISPLAY- P.W.Board(DVD&Display-unit)		R7627	06S15616Y23	RES,RK JUMPER1/16-CP
DISPLAY- P.W.Board(DVD&Display-unit)		R7628	06S15616Y23	RES,RK JUMPER1/16-CP
DISPLAY- P.W.Board(DVD&Display-unit)		R7629	06S15616Y23	RES,RK JUMPER1/16-CP
DISPLAY- P.W.Board(DVD&Display-unit)		R7630	06S15616Y23	RES,RK JUMPER1/16-CP
DISPLAY- P.W.Board(DVD&Display-unit)		R7631	06S15616Y23	RES,RK JUMPER1/16-CP
DISPLAY- P.W.Board(DVD&Display-unit)		R7632	06S15616Y23	RES,RK JUMPER1/16-CP
DISPLAY- P.W.Board(DVD&Display-unit)		R7633	06S15616Y23	RES,RK JUMPER1/16-CP
DISPLAY- P.W.Board(DVD&Display-unit)		R7634	06S15616Y23	RES,RK JUMPER1/16-CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
DISPLAY- P.W.Board(DVD&Display-unit)			R7635	06S15616Y23	RES,RK JUMPER1/16-CP
DISPLAY- P.W.Board(DVD&Display-unit)			R7636	06S15616Y23	RES,RK JUMPER1/16-CP
DISPLAY- P.W.Board(DVD&Display-unit)			R7637	06S15616Y23	RES,RK JUMPER1/16-CP
DISPLAY- P.W.Board(DVD&Display-unit)			R7638	06S15616Y23	RES,RK JUMPER1/16-CP
DISPLAY- P.W.Board(DVD&Display-unit)			R7639	06S15616Y23	RES,RK JUMPER1/16-CP
DISPLAY- P.W.Board(DVD&Display-unit)			R7640	06S15616Y23	RES,RK JUMPER1/16-CP
DISPLAY- P.W.Board(DVD&Display-unit)			R7641	06S15616Y23	RES,RK JUMPER1/16-CP
DISPLAY- P.W.Board(DVD&Display-unit)			R7642	06S15616Y23	RES,RK JUMPER1/16-CP
DISPLAY- P.W.Board(DVD&Display-unit)			R7643	06S15616Y23	RES,RK JUMPER1/16-CP
DISPLAY- P.W.Board(DVD&Display-unit)			R7644	06S15616Y23	RES,RK JUMPER1/16-CP
DISPLAY- P.W.Board(DVD&Display-unit)			R7645	06S15616Y23	RES,RK JUMPER1/16-CP
DISPLAY- P.W.Board(DVD&Display-unit)			R7646	06S15616Y23	RES,RK JUMPER1/16-CP
DISPLAY- P.W.Board(DVD&Display-unit)			R7647	06S15616Y23	RES,RK JUMPER1/16-CP
DISPLAY- P.W.Board(DVD&Display-unit)			R7648	06S15616Y23	RES,RK JUMPER1/16-CP
DISPLAY- P.W.Board(DVD&Display-unit)			R7649	06S15616Y23	RES,RK JUMPER1/16-CP
DISPLAY- P.W.Board(DVD&Display-unit)			R7650	06S15615Y25	RES,RK 101J 1/16 -CP
DISPLAY- P.W.Board(DVD&Display-unit)			R7651	06S15615Y25	RES,RK 101J 1/16 -CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
DISPLAY- P.W.Board(DVD&Display-unit)		R7652	06S15615Y73	RES,RK 103J 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R7653	06S15615Y25	RES,RK 101J 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R7654	06S15615Y25	RES,RK 101J 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R7657	06S15615Y65	RES,RK 472J 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		R7660	06S15615Y25	RES,RK 101J 1/16 -CP	
DISPLAY- P.W.Board(DVD&Display-unit)		SD3000	48T75527Y01	DIO,1SR154-400 -E1	
DISPLAY- P.W.Board(DVD&Display-unit)		SD3001	48-20962Z01	DIO,SHT DB2440400LE1	
DISPLAY- P.W.Board(DVD&Display-unit)		SD3002	48-19296Z01	DIO,SHT RB056L-40-E1	
DISPLAY- P.W.Board(DVD&Display-unit)		SD3003	48-17988Z01	DIO,SHT RB060M-60-CP	
DISPLAY- P.W.Board(DVD&Display-unit)		XL1001	91-10720Z04	XTL,NX8045GB 6.0M-E5	
DISPLAY- P.W.Board(DVD&Display-unit)		XL7400	91-26661Z12	XTL,NX3225SAAG27.0CP	
DISPLAY- P.W.Board(DVD&Display-unit)		ZD3000	48-06525Z13	DIO,ZEN UDZS 6.8B-CP	
FRONT- P.W.Board(DVD&Display-unit)		CB4800	09-05209Z05	FFC,IMSA9617S-08Y-E9	
FRONT- P.W.Board(DVD&Display-unit)		CB4801	09-16224Z01	FFC,FH28-10S-0.5SHE9	
Miscellaneous		CH3201	09-07002Z01	ASSY,ANIA-0001-01A	
Miscellaneous		ET501	09-28037Z01	ASSY,ANID-0191-01A	
Miscellaneous		ET7601	40-32976Z01	ASSY,HCDSP0A026A	
Miscellaneous		LCD4001	65-24027Z01	ASSY,CLAA090LC41CW	
Miscellaneous		M3201	59-02037Z01	MOTOR,FF-180SH-13260	
MAIN(DV39M12A)- P.W.Board		C502	08S65670Y01	CAP,CER 106KX5R1C-CP	
MAIN(DV39M12A)- P.W.Board		C503	08S45676W93	CAP,CER 224K-B1A -CP	

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
MAIN(DV39M12A)- P.W.Board			C505	08S45231Y29	CAP,CER 221J-CH1H-CP
MAIN(DV39M12A)- P.W.Board			C506	08S65670Y01	CAP,CER 106KX5R1C-CP
MAIN(DV39M12A)- P.W.Board			C507	08S45232Y05	CAP,CER 102K-B1H -CP
MAIN(DV39M12A)- P.W.Board			C508	08S45231Y29	CAP,CER 221J-CH1H-CP
MAIN(DV39M12A)- P.W.Board			C514	08S45232Y05	CAP,CER 102K-B1H -CP
MAIN(DV39M12A)- P.W.Board			C540	08S45231Y33	CAP,CER 471J-CH1H-CP
MAIN(DV39M12A)- P.W.Board			C541	08S45231Y36	CAP,CER 681J-CH1H-CP
MAIN(DV39M12A)- P.W.Board			C601	08S45232Y05	CAP,CER 102K-B1H -CP
MAIN(DV39M12A)- P.W.Board			C602	08S45232Y05	CAP,CER 102K-B1H -CP
MAIN(DV39M12A)- P.W.Board			C603	08S45232Y17	CAP,CER 104K-B0J -CP
MAIN(DV39M12A)- P.W.Board			C604	08S45232Y05	CAP,CER 102K-B1H -CP
MAIN(DV39M12A)- P.W.Board			C605	08S45232Y05	CAP,CER 102K-B1H -CP
MAIN(DV39M12A)- P.W.Board			C606	08S45232Y17	CAP,CER 104K-B0J -CP
MAIN(DV39M12A)- P.W.Board			C607	08S45232Y05	CAP,CER 102K-B1H -CP
MAIN(DV39M12A)- P.W.Board			C608	08S45232Y05	CAP,CER 102K-B1H -CP
MAIN(DV39M12A)- P.W.Board			C609	08S45232Y17	CAP,CER 104K-B0J -CP
MAIN(DV39M12A)- P.W.Board			C610	08S45232Y05	CAP,CER 102K-B1H -CP
MAIN(DV39M12A)- P.W.Board			C611	08S45232Y05	CAP,CER 102K-B1H -CP
MAIN(DV39M12A)- P.W.Board			C612	08S45232Y17	CAP,CER 104K-B0J -CP
MAIN(DV39M12A)- P.W.Board			C613	08S45232Y17	CAP,CER 104K-B0J -CP
MAIN(DV39M12A)- P.W.Board			C614	08S45232Y05	CAP,CER 102K-B1H -CP
MAIN(DV39M12A)- P.W.Board			C615	08S45232Y17	CAP,CER 104K-B0J -CP
MAIN(DV39M12A)- P.W.Board			C616	08S45232Y05	CAP,CER 102K-B1H -CP
MAIN(DV39M12A)- P.W.Board			C617	08S45232Y05	CAP,CER 102K-B1H -CP
MAIN(DV39M12A)- P.W.Board			C618	08S45232Y17	CAP,CER 104K-B0J -CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
MAIN(DV39M12A)- P.W.Board			C619	08S45232Y05	CAP,CER 102K-B1H -CP
MAIN(DV39M12A)- P.W.Board			C620	08S45232Y05	CAP,CER 102K-B1H -CP
MAIN(DV39M12A)- P.W.Board			C621	08S45232Y05	CAP,CER 102K-B1H -CP
MAIN(DV39M12A)- P.W.Board			C622	08S45232Y05	CAP,CER 102K-B1H -CP
MAIN(DV39M12A)- P.W.Board			C623	08S45232Y17	CAP,CER 104K-B0J -CP
MAIN(DV39M12A)- P.W.Board			C624	08S45232Y05	CAP,CER 102K-B1H -CP
MAIN(DV39M12A)- P.W.Board			C625	08S45232Y17	CAP,CER 104K-B0J -CP
MAIN(DV39M12A)- P.W.Board			C626	08S45232Y17	CAP,CER 104K-B0J -CP
MAIN(DV39M12A)- P.W.Board			C627	08S45232Y17	CAP,CER 104K-B0J -CP
MAIN(DV39M12A)- P.W.Board			C632	08S45232Y17	CAP,CER 104K-B0J -CP
MAIN(DV39M12A)- P.W.Board			C633	08S45232Y05	CAP,CER 102K-B1H -CP
MAIN(DV39M12A)- P.W.Board			C652	08T81833F12	CAP,CER 106K-B1A -CP
MAIN(DV39M12A)- P.W.Board			C675	08S45231Y23	CAP,CER 68RJ-CH1H-CP
MAIN(DV39M12A)- P.W.Board			C676	08S45231Y21	CAP,CER 47RJ-CH1H-CP
MAIN(DV39M12A)- P.W.Board			C677	08S45231Y15	CAP,CER 15RJ-CH1H-CP
MAIN(DV39M12A)- P.W.Board			C678	08S45231Y19	CAP,CER 33RJ-CH1H-CP
MAIN(DV39M12A)- P.W.Board			C679	08S45231Y22	CAP,CER 56RJ-CH1H-CP
MAIN(DV39M12A)- P.W.Board			C702	08S45232Y17	CAP,CER 104K-B0J -CP
MAIN(DV39M12A)- P.W.Board			C703	08S45232Y17	CAP,CER 104K-B0J -CP
MAIN(DV39M12A)- P.W.Board			C740	08S35349Y12	CAP,CER 105K-B0J -CP
MAIN(DV39M12A)- P.W.Board			C741	08S45232Y11	CAP,CER 103K-B1C -CP
MAIN(DV39M12A)- P.W.Board			C781	08S65670Y01	CAP,CER 106KX5R1C-CP
MAIN(DV39M12A)- P.W.Board			C783	08S45232Y17	CAP,CER 104K-B0J -CP
MAIN(DV39M12A)- P.W.Board			C784	08S45232Y05	CAP,CER 102K-B1H -CP
MAIN(DV39M12A)- P.W.Board			C785	08S45232Y05	CAP,CER 102K-B1H -CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
MAIN(DV39M12A)- P.W.Board			C786	08S45232Y17	CAP,CER 104K-B0J -CP
MAIN(DV39M12A)- P.W.Board			C787	08S45232Y17	CAP,CER 104K-B0J -CP
MAIN(DV39M12A)- P.W.Board			C788	08S45232Y05	CAP,CER 102K-B1H -CP
MAIN(DV39M12A)- P.W.Board			C789	08S45232Y05	CAP,CER 102K-B1H -CP
MAIN(DV39M12A)- P.W.Board			C800	08S45232Y11	CAP,CER 103K-B1C -CP
MAIN(DV39M12A)- P.W.Board			C801	08S45232Y17	CAP,CER 104K-B0J -CP
MAIN(DV39M12A)- P.W.Board			C806	08S45232Y05	CAP,CER 102K-B1H -CP
MAIN(DV39M12A)- P.W.Board			C807	08S45676W87	CAP,CER 333K-B1E -CP
MAIN(DV39M12A)- P.W.Board			C808	08S45232Y17	CAP,CER 104K-B0J -CP
MAIN(DV39M12A)- P.W.Board			C809	08S45232Y17	CAP,CER 104K-B0J -CP
MAIN(DV39M12A)- P.W.Board			C810	08S45232Y17	CAP,CER 104K-B0J -CP
MAIN(DV39M12A)- P.W.Board			C811	08S45676W70	CAP,CER 562K-B1H -CP
MAIN(DV39M12A)- P.W.Board			C812	08S45676W79	CAP,CER 183K-B1E -CP
MAIN(DV39M12A)- P.W.Board			C813	08S45232Y17	CAP,CER 104K-B0J -CP
MAIN(DV39M12A)- P.W.Board			C814	08S45232Y17	CAP,CER 104K-B0J -CP
MAIN(DV39M12A)- P.W.Board			C815	08S45232Y17	CAP,CER 104K-B0J -CP
MAIN(DV39M12A)- P.W.Board			C816	08S45232Y17	CAP,CER 104K-B0J -CP
MAIN(DV39M12A)- P.W.Board			C817	08S35349Y16	CAP,CER 105K-B1A -CP
MAIN(DV39M12A)- P.W.Board			C818	08S35349Y16	CAP,CER 105K-B1A -CP
MAIN(DV39M12A)- P.W.Board			C819	08S45232Y17	CAP,CER 104K-B0J -CP
MAIN(DV39M12A)- P.W.Board			C820	08S35374W12	CAP,CER 106K-B0J -CP
MAIN(DV39M12A)- P.W.Board			C821	08S45232Y17	CAP,CER 104K-B0J -CP
MAIN(DV39M12A)- P.W.Board			C822	08S45232Y17	CAP,CER 104K-B0J -CP
MAIN(DV39M12A)- P.W.Board			C823	08S45232Y17	CAP,CER 104K-B0J -CP
MAIN(DV39M12A)- P.W.Board			C824	08S45232Y17	CAP,CER 104K-B0J -CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
MAIN(DV39M12A)- P.W.Board			C825	08S45232Y17	CAP,CER 104K-B0J -CP
MAIN(DV39M12A)- P.W.Board			C826	08S45232Y17	CAP,CER 104K-B0J -CP
MAIN(DV39M12A)- P.W.Board			C827	08S45232Y17	CAP,CER 104K-B0J -CP
MAIN(DV39M12A)- P.W.Board			C828	08S45232Y14	CAP,CER 333K-B1C -CP
MAIN(DV39M12A)- P.W.Board			C829	08S45232Y14	CAP,CER 333K-B1C -CP
MAIN(DV39M12A)- P.W.Board			C830	08S45232Y08	CAP,CER 332K-B1H -CP
MAIN(DV39M12A)- P.W.Board			C831	08S45232Y08	CAP,CER 332K-B1H -CP
MAIN(DV39M12A)- P.W.Board			C832	08S45232Y08	CAP,CER 332K-B1H -CP
MAIN(DV39M12A)- P.W.Board			C833	08S45232Y08	CAP,CER 332K-B1H -CP
MAIN(DV39M12A)- P.W.Board			C835	08S45232Y07	CAP,CER 222K-B1H -CP
MAIN(DV39M12A)- P.W.Board			C836	08S45232Y07	CAP,CER 222K-B1H -CP
MAIN(DV39M12A)- P.W.Board			C837	08S45231Y25	CAP,CER 101J-CH1H-CP
MAIN(DV39M12A)- P.W.Board			C838	08S45231Y27	CAP,CER 151J-CH1H-CP
MAIN(DV39M12A)- P.W.Board			C839	08S45231Y27	CAP,CER 151J-CH1H-CP
MAIN(DV39M12A)- P.W.Board			C840	08S45231Y25	CAP,CER 101J-CH1H-CP
MAIN(DV39M12A)- P.W.Board			C841	08S45231Y27	CAP,CER 151J-CH1H-CP
MAIN(DV39M12A)- P.W.Board			C842	08S45231Y27	CAP,CER 151J-CH1H-CP
MAIN(DV39M12A)- P.W.Board			C843	08S45676W85	CAP,CER 104K-B1C -CP
MAIN(DV39M12A)- P.W.Board			C844	08T81833F13	CAP,CER 106K-B1C -CP
MAIN(DV39M12A)- P.W.Board			C845	08T81833F13	CAP,CER 106K-B1C -CP
MAIN(DV39M12A)- P.W.Board			C846	08S45676W85	CAP,CER 104K-B1C -CP
MAIN(DV39M12A)- P.W.Board			C850	08T81833F13	CAP,CER 106K-B1C -CP
MAIN(DV39M12A)- P.W.Board			C851	08S45232Y07	CAP,CER 222K-B1H -CP
MAIN(DV39M12A)- P.W.Board			C852	08S45676W85	CAP,CER 104K-B1C -CP
MAIN(DV39M12A)- P.W.Board			C858	08S35374W10	CAP,CER 225K-B1A -CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
MAIN(DV39M12A)- P.W.Board			C859	08S35374W10	CAP,CER 225K-B1A -CP
MAIN(DV39M12A)- P.W.Board			C860	08S65668Y04	CAP,CER 104KX5R1A-CP
MAIN(DV39M12A)- P.W.Board			C861	08S45676W85	CAP,CER 104K-B1C -CP
MAIN(DV39M12A)- P.W.Board			C862	08S45676W85	CAP,CER 104K-B1C -CP
MAIN(DV39M12A)- P.W.Board			C863	08S45676W85	CAP,CER 104K-B1C -CP
MAIN(DV39M12A)- P.W.Board			C864	08S45676W85	CAP,CER 104K-B1C -CP
MAIN(DV39M12A)- P.W.Board			C865	08S45676W85	CAP,CER 104K-B1C -CP
MAIN(DV39M12A)- P.W.Board			C866	08S35349Y16	CAP,CER 105K-B1A -CP
MAIN(DV39M12A)- P.W.Board			C867	08S35349Y16	CAP,CER 105K-B1A -CP
MAIN(DV39M12A)- P.W.Board			C870	08T81833F13	CAP,CER 106K-B1C -CP
MAIN(DV39M12A)- P.W.Board			C871	08S45232Y17	CAP,CER 104K-B0J -CP
MAIN(DV39M12A)- P.W.Board			C872	08S45232Y17	CAP,CER 104K-B0J -CP
MAIN(DV39M12A)- P.W.Board			C873	08S65670Y06	CAP,CER 226KX5R1A-CP
MAIN(DV39M12A)- P.W.Board			C874	08S65670Y06	CAP,CER 226KX5R1A-CP
MAIN(DV39M12A)- P.W.Board			C876	08S45232Y17	CAP,CER 104K-B0J -CP
MAIN(DV39M12A)- P.W.Board			C877	08S45232Y13	CAP,CER 223K-B1C -CP
MAIN(DV39M12A)- P.W.Board			C880	08T81833F13	CAP,CER 106K-B1C -CP
MAIN(DV39M12A)- P.W.Board			C881	08S65670Y06	CAP,CER 226KX5R1A-CP
MAIN(DV39M12A)- P.W.Board			C882	08S65670Y06	CAP,CER 226KX5R1A-CP
MAIN(DV39M12A)- P.W.Board			C883	08S35349Y12	CAP,CER 105K-B0J -CP
MAIN(DV39M12A)- P.W.Board			C884	08S45676W80	CAP,CER 223K-B1E -CP
MAIN(DV39M12A)- P.W.Board			C885	08S45676W85	CAP,CER 104K-B1C -CP
MAIN(DV39M12A)- P.W.Board			C886	08S45676W85	CAP,CER 104K-B1C -CP
MAIN(DV39M12A)- P.W.Board			C887	08S45676W85	CAP,CER 104K-B1C -CP
MAIN(DV39M12A)- P.W.Board			C889	08S45676W85	CAP,CER 104K-B1C -CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
MAIN(DV39M12A)- P.W.Board		C891	08S65670Y06	CAP,CER 226KX5R1A-CP	
MAIN(DV39M12A)- P.W.Board		C892	08S65670Y06	CAP,CER 226KX5R1A-CP	
MAIN(DV39M12A)- P.W.Board		C893	08S35349Y12	CAP,CER 105K-B0J -CP	
MAIN(DV39M12A)- P.W.Board		C894	08S45676W80	CAP,CER 223K-B1E -CP	
MAIN(DV39M12A)- P.W.Board		C899	08S45232Y13	CAP,CER 223K-B1C -CP	
MAIN(DV39M12A)- P.W.Board		C901	08S65667Y05	CAP,CER 105KX5R1A-CP	
MAIN(DV39M12A)- P.W.Board		C902	08S65667Y05	CAP,CER 105KX5R1A-CP	
MAIN(DV39M12A)- P.W.Board		C903	08S35374W12	CAP,CER 106K-B0J -CP	
MAIN(DV39M12A)- P.W.Board		C904	08S65667Y05	CAP,CER 105KX5R1A-CP	
MAIN(DV39M12A)- P.W.Board		C905	08S45232Y11	CAP,CER 103K-B1C -CP	
MAIN(DV39M12A)- P.W.Board		C906	08S45232Y17	CAP,CER 104K-B0J -CP	
MAIN(DV39M12A)- P.W.Board		CB101	09-28657Z03	FFC,IMSA9685S-45Y-EQ	
MAIN(DV39M12A)- P.W.Board		CB801	09-05385Z08	FFC,52435-2871 -ED	
MAIN(DV39M12A)- P.W.Board		CB802	09-05385Z04	FFC,52435-2471 -ED	
MAIN(DV39M12A)- P.W.Board		D1	48-27129Z01	DIO,DA2710100L -CP	
MAIN(DV39M12A)- P.W.Board		D2	48-27129Z01	DIO,DA2710100L -CP	
MAIN(DV39M12A)- P.W.Board		IC601	51-29325Z01	MN2DS0026SAUB -QT	
MAIN(DV39M12A)- P.W.Board		IC701	83-30949Z28	V1.002DV39M12A	
MAIN(DV39M12A)- P.W.Board		IC701	51-03566Z01	S29JL032H70TFI210-ST	
MAIN(DV39M12A)- P.W.Board		IC702	51-24465Z01	FM28V020-T28G -ST	
MAIN(DV39M12A)- P.W.Board		IC781	51-27409Z01	IS45S16800F-6TLA1-ST	
MAIN(DV39M12A)- P.W.Board		IC806	51-08553Z01	BU4309G-TR -CP	
MAIN(DV39M12A)- P.W.Board		IC851	51-12473Z01	BD8216EFV-E2 -SED	
MAIN(DV39M12A)- P.W.Board		L501	24T65689Y01	FBI,FBMJ2125HS420-CP	
MAIN(DV39M12A)- P.W.Board		L502	24T65689Y01	FBI,FBMJ2125HS420-CP	

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
MAIN(DV39M12A)- P.W.Board		L503	24T65689Y01	FBI,FBMJ2125HS420-CP	
MAIN(DV39M12A)- P.W.Board		L504	24T65689Y01	FBI,FBMJ2125HS420-CP	
MAIN(DV39M12A)- P.W.Board		L820	24T95456W27	FBI,BLM18PG181SH1-CP	
MAIN(DV39M12A)- P.W.Board		Q540	48-17546Z02	TR,DRA5124E0L -CP	
MAIN(DV39M12A)- P.W.Board		Q541	48T15656Y01	TR,2SC4617-TL -CP	
MAIN(DV39M12A)- P.W.Board		Q872	48-22257Z02	TR,DRC9124E0L -CP	
MAIN(DV39M12A)- P.W.Board		Q873	48-23817Z01	TR,DRC9143T0L -CP	
MAIN(DV39M12A)- P.W.Board		Q874	48-23817Z01	TR,DRC9143T0L -CP	
MAIN(DV39M12A)- P.W.Board		Q881	48T75011W01	TR,2SD1782K-PQR-6-CP	
MAIN(DV39M12A)- P.W.Board		Q882	48T55462Y01	TR,2SB1132-QR-100-E2	
MAIN(DV39M12A)- P.W.Board		Q891	48T75011W01	TR,2SD1782K-PQR-6-CP	
MAIN(DV39M12A)- P.W.Board		Q892	48T55462Y01	TR,2SB1132-QR-100-E2	
MAIN(DV39M12A)- P.W.Board		R1	06S15615Y81	RES,RK 223J 1/16 -CP	
MAIN(DV39M12A)- P.W.Board		R2	06S15615Y81	RES,RK 223J 1/16 -CP	
MAIN(DV39M12A)- P.W.Board		R3	06S15615Y81	RES,RK 223J 1/16 -CP	
MAIN(DV39M12A)- P.W.Board		R4	06S15615Y81	RES,RK 223J 1/16 -CP	
MAIN(DV39M12A)- P.W.Board		R500	06S15615Y81	RES,RK 223J 1/16 -CP	
MAIN(DV39M12A)- P.W.Board		R501	06S45675W16	RES,RK 274J 1/10 -CP	
MAIN(DV39M12A)- P.W.Board		R502	06S45674W79	RES,RK 822J 1/10 -CP	
MAIN(DV39M12A)- P.W.Board		R503	06S45674W77	RES,RK 682J 1/10 -CP	
MAIN(DV39M12A)- P.W.Board		R514	06S15615Y81	RES,RK 223J 1/16 -CP	
MAIN(DV39M12A)- P.W.Board		R515	06S15615Y81	RES,RK 223J 1/16 -CP	
MAIN(DV39M12A)- P.W.Board		R516	06S15615Y81	RES,RK 223J 1/16 -CP	
MAIN(DV39M12A)- P.W.Board		R519	06S15615Y81	RES,RK 223J 1/16 -CP	
MAIN(DV39M12A)- P.W.Board		R521	06S15615Y13	RES,RK 33RJ 1/16 -CP	

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
MAIN(DV39M12A)- P.W.Board			R522	06S15615Y13	RES,RK 33RJ 1/16 -CP
MAIN(DV39M12A)- P.W.Board			R523	06S15615Y13	RES,RK 33RJ 1/16 -CP
MAIN(DV39M12A)- P.W.Board			R524	06S15615Y49	RES,RK 102J 1/16 -CP
MAIN(DV39M12A)- P.W.Board			R525	06S15615Y49	RES,RK 102J 1/16 -CP
MAIN(DV39M12A)- P.W.Board			R526	06S15615Y65	RES,RK 472J 1/16 -CP
MAIN(DV39M12A)- P.W.Board			R533	06S15615Y25	RES,RK 101J 1/16 -CP
MAIN(DV39M12A)- P.W.Board			R534	06S15615Y25	RES,RK 101J 1/16 -CP
MAIN(DV39M12A)- P.W.Board			R535	06S15615Y81	RES,RK 223J 1/16 -CP
MAIN(DV39M12A)- P.W.Board			R536	06S15615Y81	RES,RK 223J 1/16 -CP
MAIN(DV39M12A)- P.W.Board			R537	06S15615Y17	RES,RK 47RJ 1/16 -CP
MAIN(DV39M12A)- P.W.Board			R538	06S15615Y25	RES,RK 101J 1/16 -CP
MAIN(DV39M12A)- P.W.Board			R539	06S15615Y25	RES,RK 101J 1/16 -CP
MAIN(DV39M12A)- P.W.Board			R540	06S15615Y25	RES,RK 101J 1/16 -CP
MAIN(DV39M12A)- P.W.Board			R541	06S15615Y17	RES,RK 47RJ 1/16 -CP
MAIN(DV39M12A)- P.W.Board			R542	06S15615Y21	RES,RK 68RJ 1/16 -CP
MAIN(DV39M12A)- P.W.Board			R545	06S15615Y25	RES,RK 101J 1/16 -CP
MAIN(DV39M12A)- P.W.Board			R551	06S15615Y81	RES,RK 223J 1/16 -CP
MAIN(DV39M12A)- P.W.Board			R556	06S15615Y25	RES,RK 101J 1/16 -CP
MAIN(DV39M12A)- P.W.Board			R557	06S15615Y25	RES,RK 101J 1/16 -CP
MAIN(DV39M12A)- P.W.Board			R558	06S15615Y25	RES,RK 101J 1/16 -CP
MAIN(DV39M12A)- P.W.Board			R559	06S15615Y25	RES,RK 101J 1/16 -CP
MAIN(DV39M12A)- P.W.Board			R560	06S15615Y25	RES,RK 101J 1/16 -CP
MAIN(DV39M12A)- P.W.Board			R577	06S15615Y17	RES,RK 47RJ 1/16 -CP
MAIN(DV39M12A)- P.W.Board			R578	06S15615Y23	RES,RK 82RJ 1/16 -CP
MAIN(DV39M12A)- P.W.Board			R579	06S15615Y23	RES,RK 82RJ 1/16 -CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
MAIN(DV39M12A)- P.W.Board			R580	06S15615Y17	RES,RK 47RJ 1/16 -CP
MAIN(DV39M12A)- P.W.Board			R581	06S15615Y23	RES,RK 82RJ 1/16 -CP
MAIN(DV39M12A)- P.W.Board			R582	06S15615Y17	RES,RK 47RJ 1/16 -CP
MAIN(DV39M12A)- P.W.Board			R585	06S15615Y23	RES,RK 82RJ 1/16 -CP
MAIN(DV39M12A)- P.W.Board			R588	06S15615Y23	RES,RK 82RJ 1/16 -CP
MAIN(DV39M12A)- P.W.Board			R589	06S15615Y23	RES,RK 82RJ 1/16 -CP
MAIN(DV39M12A)- P.W.Board			R590	06S15615Y67	RES,RK 562J 1/16 -CP
MAIN(DV39M12A)- P.W.Board			R591	06S15615Y73	RES,RK 103J 1/16 -CP
MAIN(DV39M12A)- P.W.Board			R602	06S15615Y81	RES,RK 223J 1/16 -CP
MAIN(DV39M12A)- P.W.Board			R607	06S15615Y81	RES,RK 223J 1/16 -CP
MAIN(DV39M12A)- P.W.Board			R608	06S15615Y81	RES,RK 223J 1/16 -CP
MAIN(DV39M12A)- P.W.Board			R609	06S15615Y81	RES,RK 223J 1/16 -CP
MAIN(DV39M12A)- P.W.Board			R610	06S15615Y81	RES,RK 223J 1/16 -CP
MAIN(DV39M12A)- P.W.Board			R611	06S15615Y81	RES,RK 223J 1/16 -CP
MAIN(DV39M12A)- P.W.Board			R612	06S65415Y37	RES,RK 103F 1/16 -CP
MAIN(DV39M12A)- P.W.Board			R613	06S65415Y37	RES,RK 103F 1/16 -CP
MAIN(DV39M12A)- P.W.Board			R614	06S15615Y81	RES,RK 223J 1/16 -CP
MAIN(DV39M12A)- P.W.Board			R621	06S15615Y65	RES,RK 472J 1/16 -CP
MAIN(DV39M12A)- P.W.Board			R671	06S15615Y21	RES,RK 68RJ 1/16 -CP
MAIN(DV39M12A)- P.W.Board			R672	06S15615Y31	RES,RK 181J 1/16 -CP
MAIN(DV39M12A)- P.W.Board			R673	06S15615Y31	RES,RK 181J 1/16 -CP
MAIN(DV39M12A)- P.W.Board			R674	06S15615Y31	RES,RK 181J 1/16 -CP
MAIN(DV39M12A)- P.W.Board			R675	06S15615Y21	RES,RK 68RJ 1/16 -CP
MAIN(DV39M12A)- P.W.Board			R676	06S15615Y31	RES,RK 181J 1/16 -CP
MAIN(DV39M12A)- P.W.Board			R677	06S15615Y19	RES,RK 56RJ 1/16 -CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
MAIN(DV39M12A)- P.W.Board			R678	06S15615Y33	RES,RK 221J 1/16 -CP
MAIN(DV39M12A)- P.W.Board			R679	06S15615Y81	RES,RK 223J 1/16 -CP
MAIN(DV39M12A)- P.W.Board			R7	06S15615Y81	RES,RK 223J 1/16 -CP
MAIN(DV39M12A)- P.W.Board			R701	06S15615Y81	RES,RK 223J 1/16 -CP
MAIN(DV39M12A)- P.W.Board			R703	06S15615Y81	RES,RK 223J 1/16 -CP
MAIN(DV39M12A)- P.W.Board			R704	06S15615Y17	RES,RK 47RJ 1/16 -CP
MAIN(DV39M12A)- P.W.Board			R740	06S65415Y41	RES,RK 223F 1/16 -CP
MAIN(DV39M12A)- P.W.Board			R742	06S65415Y24	RES,RK 821F 1/16 -CP
MAIN(DV39M12A)- P.W.Board			R743	06S65415Y43	RES,RK 333F 1/16 -CP
MAIN(DV39M12A)- P.W.Board			R752	06S15615Y17	RES,RK 47RJ 1/16 -CP
MAIN(DV39M12A)- P.W.Board			R753	06S15615Y21	RES,RK 68RJ 1/16 -CP
MAIN(DV39M12A)- P.W.Board			R754	06S15615Y21	RES,RK 68RJ 1/16 -CP
MAIN(DV39M12A)- P.W.Board			R759	06S15615Y21	RES,RK 68RJ 1/16 -CP
MAIN(DV39M12A)- P.W.Board			R760	06S15615Y21	RES,RK 68RJ 1/16 -CP
MAIN(DV39M12A)- P.W.Board			R780	06S15615Y25	RES,RK 101J 1/16 -CP
MAIN(DV39M12A)- P.W.Board			R781	06S15615Y25	RES,RK 101J 1/16 -CP
MAIN(DV39M12A)- P.W.Board			R782	06S15615Y25	RES,RK 101J 1/16 -CP
MAIN(DV39M12A)- P.W.Board			R783	06S15615Y25	RES,RK 101J 1/16 -CP
MAIN(DV39M12A)- P.W.Board			R784	06S15615Y25	RES,RK 101J 1/16 -CP
MAIN(DV39M12A)- P.W.Board			R785	06S15615Y25	RES,RK 101J 1/16 -CP
MAIN(DV39M12A)- P.W.Board			R786	06S15615Y25	RES,RK 101J 1/16 -CP
MAIN(DV39M12A)- P.W.Board			R787	06S15615Y25	RES,RK 101J 1/16 -CP
MAIN(DV39M12A)- P.W.Board			R788	06S15615Y25	RES,RK 101J 1/16 -CP
MAIN(DV39M12A)- P.W.Board			R789	06S15615Y25	RES,RK 101J 1/16 -CP
MAIN(DV39M12A)- P.W.Board			R790	06S15615Y25	RES,RK 101J 1/16 -CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
MAIN(DV39M12A)- P.W.Board		R791	06S15615Y25	RES,RK 101J 1/16 -CP	
MAIN(DV39M12A)- P.W.Board		R792	06S15615Y25	RES,RK 101J 1/16 -CP	
MAIN(DV39M12A)- P.W.Board		R793	06S15615Y25	RES,RK 101J 1/16 -CP	
MAIN(DV39M12A)- P.W.Board		R794	06S15615Y25	RES,RK 101J 1/16 -CP	
MAIN(DV39M12A)- P.W.Board		R795	06S15615Y25	RES,RK 101J 1/16 -CP	
MAIN(DV39M12A)- P.W.Board		R801	06S15615Y25	RES,RK 101J 1/16 -CP	
MAIN(DV39M12A)- P.W.Board		R802	06S15615Y25	RES,RK 101J 1/16 -CP	
MAIN(DV39M12A)- P.W.Board		R803	06S15615Y81	RES,RK 223J 1/16 -CP	
MAIN(DV39M12A)- P.W.Board		R804	06S15615Y81	RES,RK 223J 1/16 -CP	
MAIN(DV39M12A)- P.W.Board		R805	06S15615Y81	RES,RK 223J 1/16 -CP	
MAIN(DV39M12A)- P.W.Board		R806	06S15615Y81	RES,RK 223J 1/16 -CP	
MAIN(DV39M12A)- P.W.Board		R807	06S15615Y25	RES,RK 101J 1/16 -CP	
MAIN(DV39M12A)- P.W.Board		R808	06S15615Y25	RES,RK 101J 1/16 -CP	
MAIN(DV39M12A)- P.W.Board		R809	06S15615Y25	RES,RK 101J 1/16 -CP	
MAIN(DV39M12A)- P.W.Board		R810	06S15615Y61	RES,RK 332J 1/16 -CP	
MAIN(DV39M12A)- P.W.Board		R811	06S15615Y61	RES,RK 332J 1/16 -CP	
MAIN(DV39M12A)- P.W.Board		R812	06S15615Y73	RES,RK 103J 1/16 -CP	
MAIN(DV39M12A)- P.W.Board		R813	06S15615Y73	RES,RK 103J 1/16 -CP	
MAIN(DV39M12A)- P.W.Board		R814	06S15615Y73	RES,RK 103J 1/16 -CP	
MAIN(DV39M12A)- P.W.Board		R815	06S15615Y73	RES,RK 103J 1/16 -CP	
MAIN(DV39M12A)- P.W.Board		R816	06S65415Y31	RES,RK 332F 1/16 -CP	
MAIN(DV39M12A)- P.W.Board		R819	06S65415Y45	RES,RK 473F 1/16 -CP	
MAIN(DV39M12A)- P.W.Board		R820	06S15615Y73	RES,RK 103J 1/16 -CP	
MAIN(DV39M12A)- P.W.Board		R821	06S15615Y81	RES,RK 223J 1/16 -CP	
MAIN(DV39M12A)- P.W.Board		R822	06S15615Y73	RES,RK 103J 1/16 -CP	

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
MAIN(DV39M12A)- P.W.Board			R823	06S15615Y81	RES,RK 223J 1/16 -CP
MAIN(DV39M12A)- P.W.Board			R824	06S15615Y25	RES,RK 101J 1/16 -CP
MAIN(DV39M12A)- P.W.Board			R825	06S15615Y25	RES,RK 101J 1/16 -CP
MAIN(DV39M12A)- P.W.Board			R828	06S65415Y34	RES,RK 562F 1/16 -CP
MAIN(DV39M12A)- P.W.Board			R829	06S65415Y34	RES,RK 562F 1/16 -CP
MAIN(DV39M12A)- P.W.Board			R831	06S65522Y12	RES,RK R82F 1/4 -CP
MAIN(DV39M12A)- P.W.Board			R832	06S65522Y12	RES,RK R82F 1/4 -CP
MAIN(DV39M12A)- P.W.Board			R833	06S65522Y12	RES,RK R82F 1/4 -CP
MAIN(DV39M12A)- P.W.Board			R834	06S65522Y12	RES,RK R82F 1/4 -CP
MAIN(DV39M12A)- P.W.Board			R839	06S15615Y81	RES,RK 223J 1/16 -CP
MAIN(DV39M12A)- P.W.Board			R840	06S15615Y75	RES,RK 123J 1/16 -CP
MAIN(DV39M12A)- P.W.Board			R841	06S15615Y75	RES,RK 123J 1/16 -CP
MAIN(DV39M12A)- P.W.Board			R842	06S15615Y89	RES,RK 473J 1/16 -CP
MAIN(DV39M12A)- P.W.Board			R843	06S15615Y89	RES,RK 473J 1/16 -CP
MAIN(DV39M12A)- P.W.Board			R844	06S15615Y93	RES,RK 683J 1/16 -CP
MAIN(DV39M12A)- P.W.Board			R845	06S15615Y93	RES,RK 683J 1/16 -CP
MAIN(DV39M12A)- P.W.Board			R846	06S15615Y75	RES,RK 123J 1/16 -CP
MAIN(DV39M12A)- P.W.Board			R847	06S15615Y75	RES,RK 123J 1/16 -CP
MAIN(DV39M12A)- P.W.Board			R851	06S64996F43	RES,RK 1R5J 1/8 -CP
MAIN(DV39M12A)- P.W.Board			R852	06S64996F43	RES,RK 1R5J 1/8 -CP
MAIN(DV39M12A)- P.W.Board			R853	06S64996F43	RES,RK 1R5J 1/8 -CP
MAIN(DV39M12A)- P.W.Board			R854	06S64996F43	RES,RK 1R5J 1/8 -CP
MAIN(DV39M12A)- P.W.Board			R855	06S64996F43	RES,RK 1R5J 1/8 -CP
MAIN(DV39M12A)- P.W.Board			R856	06S64996F43	RES,RK 1R5J 1/8 -CP
MAIN(DV39M12A)- P.W.Board			R857	06S15615Y33	RES,RK 221J 1/16 -CP

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
MAIN(DV39M12A)- P.W.Board		R858	06S15615Y27	RES,RK 121J 1/16 -CP	
MAIN(DV39M12A)- P.W.Board		R860	06S35083Y60	RES,RK 2R2F 1/4 -CP	
MAIN(DV39M12A)- P.W.Board		R861	06S35083Y60	RES,RK 2R2F 1/4 -CP	
MAIN(DV39M12A)- P.W.Board		R862	06S35083Y60	RES,RK 2R2F 1/4 -CP	
MAIN(DV39M12A)- P.W.Board		R863	06S35083Y60	RES,RK 2R2F 1/4 -CP	
MAIN(DV39M12A)- P.W.Board		R864	06S35083Y60	RES,RK 2R2F 1/4 -CP	
MAIN(DV39M12A)- P.W.Board		R865	06S35083Y60	RES,RK 2R2F 1/4 -CP	
MAIN(DV39M12A)- P.W.Board		R866	06S35083Y60	RES,RK 2R2F 1/4 -CP	
MAIN(DV39M12A)- P.W.Board		R867	06S35083Y60	RES,RK 2R2F 1/4 -CP	
MAIN(DV39M12A)- P.W.Board		R868	06S65415Y41	RES,RK 223F 1/16 -CP	
MAIN(DV39M12A)- P.W.Board		R870	06S15615Y89	RES,RK 473J 1/16 -CP	
MAIN(DV39M12A)- P.W.Board		R871	06S15615Y49	RES,RK 102J 1/16 -CP	
MAIN(DV39M12A)- P.W.Board		R872	06S15615Y23	RES,RK 82RJ 1/16 -CP	
MAIN(DV39M12A)- P.W.Board		R873	06S15615Y23	RES,RK 82RJ 1/16 -CP	
MAIN(DV39M12A)- P.W.Board		R874	06S15615Y25	RES,RK 101J 1/16 -CP	
MAIN(DV39M12A)- P.W.Board		R879	06S15615Y81	RES,RK 223J 1/16 -CP	
MAIN(DV39M12A)- P.W.Board		R881	06S15615Y35	RES,RK 271J 1/16 -CP	
MAIN(DV39M12A)- P.W.Board		R882	06S15615Y41	RES,RK 471J 1/16 -CP	
MAIN(DV39M12A)- P.W.Board		R883	06S15615Y09	RES,RK 22RJ 1/16 -CP	
MAIN(DV39M12A)- P.W.Board		R885	06S45675W06	RES,RK 104J 1/10 -CP	
MAIN(DV39M12A)- P.W.Board		R886	06S65522Y19	RES,RK 3R3F 1/4 -CP	
MAIN(DV39M12A)- P.W.Board		R888	06S15615Y81	RES,RK 223J 1/16 -CP	
MAIN(DV39M12A)- P.W.Board		R890	06S15615Y81	RES,RK 223J 1/16 -CP	
MAIN(DV39M12A)- P.W.Board		R891	06S15615Y35	RES,RK 271J 1/16 -CP	
MAIN(DV39M12A)- P.W.Board		R892	06S15615Y41	RES,RK 471J 1/16 -CP	

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
MAIN(DV39M12A)- P.W.Board		R893	06S15615Y09	RES,RK 22RJ 1/16 -CP	
MAIN(DV39M12A)- P.W.Board		R895	06S45675W06	RES,RK 104J 1/10 -CP	
MAIN(DV39M12A)- P.W.Board		R896	06S65522Y19	RES,RK 3R3F 1/4 -CP	
MAIN(DV39M12A)- P.W.Board		R898	06S65522Y24	RES,RK 8R2F 1/4 -CP	
MAIN(DV39M12A)- P.W.Board		R899	06S35083Y52	RES,RK 1R0F 1/4 -CP	
MAIN(DV39M12A)- P.W.Board		R901	06S65415Y41	RES,RK 223F 1/16 -CP	
MAIN(DV39M12A)- P.W.Board		R902	06S65415Y33	RES,RK 472F 1/16 -CP	
MAIN(DV39M12A)- P.W.Board		R903	06S65415Y37	RES,RK 103F 1/16 -CP	
MAIN(DV39M12A)- P.W.Board		R905	06S65415Y38	RES,RK 123F 1/16 -CP	
MAIN(DV39M12A)- P.W.Board		R911	06S65415Y19	RES,RK 331F 1/16 -CP	
MAIN(DV39M12A)- P.W.Board		R912	06S65415Y19	RES,RK 331F 1/16 -CP	
MAIN(DV39M12A)- P.W.Board		R921	06S65415Y19	RES,RK 331F 1/16 -CP	
MAIN(DV39M12A)- P.W.Board		R922	06S65415Y19	RES,RK 331F 1/16 -CP	
MAIN(DV39M12A)- P.W.Board		R931	06S65415Y19	RES,RK 331F 1/16 -CP	
MAIN(DV39M12A)- P.W.Board		R932	06S65415Y19	RES,RK 331F 1/16 -CP	
MAIN(DV39M12A)- P.W.Board		R951	06S15615Y33	RES,RK 221J 1/16 -CP	
MAIN(DV39M12A)- P.W.Board		R952	06S15615Y81	RES,RK 223J 1/16 -CP	
MAIN(DV39M12A)- P.W.Board		RA500	06S15771Y41	RES,ARYEXB28V223J-CP	
MAIN(DV39M12A)- P.W.Board		RA501	06S15771Y41	RES,ARYEXB28V223J-CP	
MAIN(DV39M12A)- P.W.Board		RA502	06S15771Y41	RES,ARYEXB28V223J-CP	
MAIN(DV39M12A)- P.W.Board		RA503	06S15771Y41	RES,ARYEXB28V223J-CP	
MAIN(DV39M12A)- P.W.Board		RA504	06S15771Y41	RES,ARYEXB28V223J-CP	
MAIN(DV39M12A)- P.W.Board		RA505	06S15771Y41	RES,ARYEXB28V223J-CP	
MAIN(DV39M12A)- P.W.Board		RA506	06S15771Y41	RES,ARYEXB28V223J-CP	
MAIN(DV39M12A)- P.W.Board		RA510	06S15771Y12	RES,ARYEXB28V82RJ-CP	

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
MAIN(DV39M12A)- P.W.Board		RA511	06S15771Y12	RES,ARYEXB28V82RJ-CP	
MAIN(DV39M12A)- P.W.Board		RA512	06S15771Y12	RES,ARYEXB28V82RJ-CP	
MAIN(DV39M12A)- P.W.Board		RA513	06S15771Y12	RES,ARYEXB28V82RJ-CP	
MAIN(DV39M12A)- P.W.Board		RA514	06S15771Y12	RES,ARYEXB28V82RJ-CP	
MAIN(DV39M12A)- P.W.Board		RA700	06S15771Y41	RES,ARYEXB28V223J-CP	
MAIN(DV39M12A)- P.W.Board		RA701	06S15771Y41	RES,ARYEXB28V223J-CP	
MAIN(DV39M12A)- P.W.Board		RA702	06S15771Y41	RES,ARYEXB28V223J-CP	
MAIN(DV39M12A)- P.W.Board		RA703	06S15771Y41	RES,ARYEXB28V223J-CP	
MAIN(DV39M12A)- P.W.Board		RA704	06S15771Y41	RES,ARYEXB28V223J-CP	
MAIN(DV39M12A)- P.W.Board		RA705	06S15771Y11	RES,ARYEXB28V68RJ-CP	
MAIN(DV39M12A)- P.W.Board		RA706	06S15771Y11	RES,ARYEXB28V68RJ-CP	
MAIN(DV39M12A)- P.W.Board		RA707	06S15771Y11	RES,ARYEXB28V68RJ-CP	
MAIN(DV39M12A)- P.W.Board		RA708	06S15771Y11	RES,ARYEXB28V68RJ-CP	
MAIN(DV39M12A)- P.W.Board		SW801	40T55230Y01	SW,DETCT ESE13V01CE5	
MAIN(DV39M12A)- P.W.Board		SW802	40T55230Y01	SW,DETCT ESE13V01CE5	
MAIN(DV39M12A)- P.W.Board		SW803	40T55043Y02	SW,DETCT SPVL12 -E5	
MAIN(DV39M12A)- P.W.Board		SW804	40-24933Z02	SW,DETCT SPVT2102-E6	
MAIN(DV39M12A)- P.W.Board		SW805	40T55230Y01	SW,DETCT ESE13V01CE5	
MAIN(DV39M12A)- P.W.Board		TH801	48T75201Y03	TMT,NCP15XH103F0S-CP	
MAIN(DV39M12A)- P.W.Board		TH802	48T75201Y03	TMT,NCP15XH103F0S-CP	
MAIN(DV39M12A)- P.W.Board		VR901	18-26193Z04	VAR,EVM3GSX50 472-CP	
MAIN(DV39M12A)- P.W.Board		XL601	91T75115Y01	XTL,FXO-64FL2 27M-E2	
MAIN(DV39M12A)- P.W.Board		Z550	91T75196Y23	EMI,BK1005LL181 -CP	
MAIN(DV39M12A)- P.W.Board		Z551	91T75196Y23	EMI,BK1005LL181 -CP	
MAIN(DV39M12A)- P.W.Board		Z552	91T75196Y23	EMI,BK1005LL181 -CP	

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
MAIN(DV39M12A)- P.W.Board		Z553	91T75196Y23	EMI,BK1005LL181 -CP	
MAIN(DV39M12A)- P.W.Board		Z554	91T75196Y23	EMI,BK1005LL181 -CP	
MAIN(DV39M12A)- P.W.Board		Z671	91T75196Y23	EMI,BK1005LL181 -CP	
MAIN(DV39M12A)- P.W.Board		Z672	91T75196Y01	EMI,BK1005HM102 -CP	
MAIN(DV39M12A)- P.W.Board		Z673	91T75196Y01	EMI,BK1005HM102 -CP	
MAIN(DV39M12A)- P.W.Board		Z674	91T75196Y01	EMI,BK1005HM102 -CP	
MAIN(DV39M12A)- P.W.Board		Z675	91T75196Y15	EMI,BK1005HM121 -CP	
MAIN(DV39M12A)- P.W.Board		Z676	91T75196Y15	EMI,BK1005HM121 -CP	
MAIN(DV39M12A)- P.W.Board		Z677	91T75196Y23	EMI,BK1005LL181 -CP	
MAIN(DV39M12A)- P.W.Board		Z678	91T75196Y01	EMI,BK1005HM102 -CP	
MAIN(DV39M12A)- P.W.Board		Z679	91T75196Y01	EMI,BK1005HM102 -CP	
MAIN(DV39M12A)- P.W.Board		Z902	91T75196Y01	EMI,BK1005HM102 -CP	
MAIN(DV39M12A)- P.W.Board		Z903	91T75196Y01	EMI,BK1005HM102 -CP	
MAIN(DV39M12A)- P.W.Board		Z904	91T75196Y01	EMI,BK1005HM102 -CP	
MAIN(DV39M12A)- P.W.Board		Z951	91T75196Y19	EMI,BK1005LL220 -CP	
LIMIT(DV39M12A)- P.W.Board		SW406	40-24933Z02	SW,DETCT SPVT2102-E6	
Miscellaneous		HD1	EP-15524Z01	ED21A57L-E	
Miscellaneous		M101	59-03798Z02	MOTOR,M1N10RB95GH1	
Miscellaneous		M102	59-09841Z04	MOTOR,25C030D060	
Miscellaneous		M103	59T65142Y01	MOTOR,MSDV020L01	

P.W.Board	MIS	MODEL	Ref.	Parts No.	Parts Name
-----------	-----	-------	------	-----------	------------