


2. EXPLODED VIEWS AND PARTS LIST

NOTES : • Parts marked by " * " are generally unavailable because they are not in our Master Spare Parts List.
• The  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
• Screw adjacent to  mark on the product are used for disassembly.
• For the applying amount of lubricants or glue, follow the instructions in this manual.
(In the case of no amount instructions, apply as you think it appropriate.)

2.1 PACKING

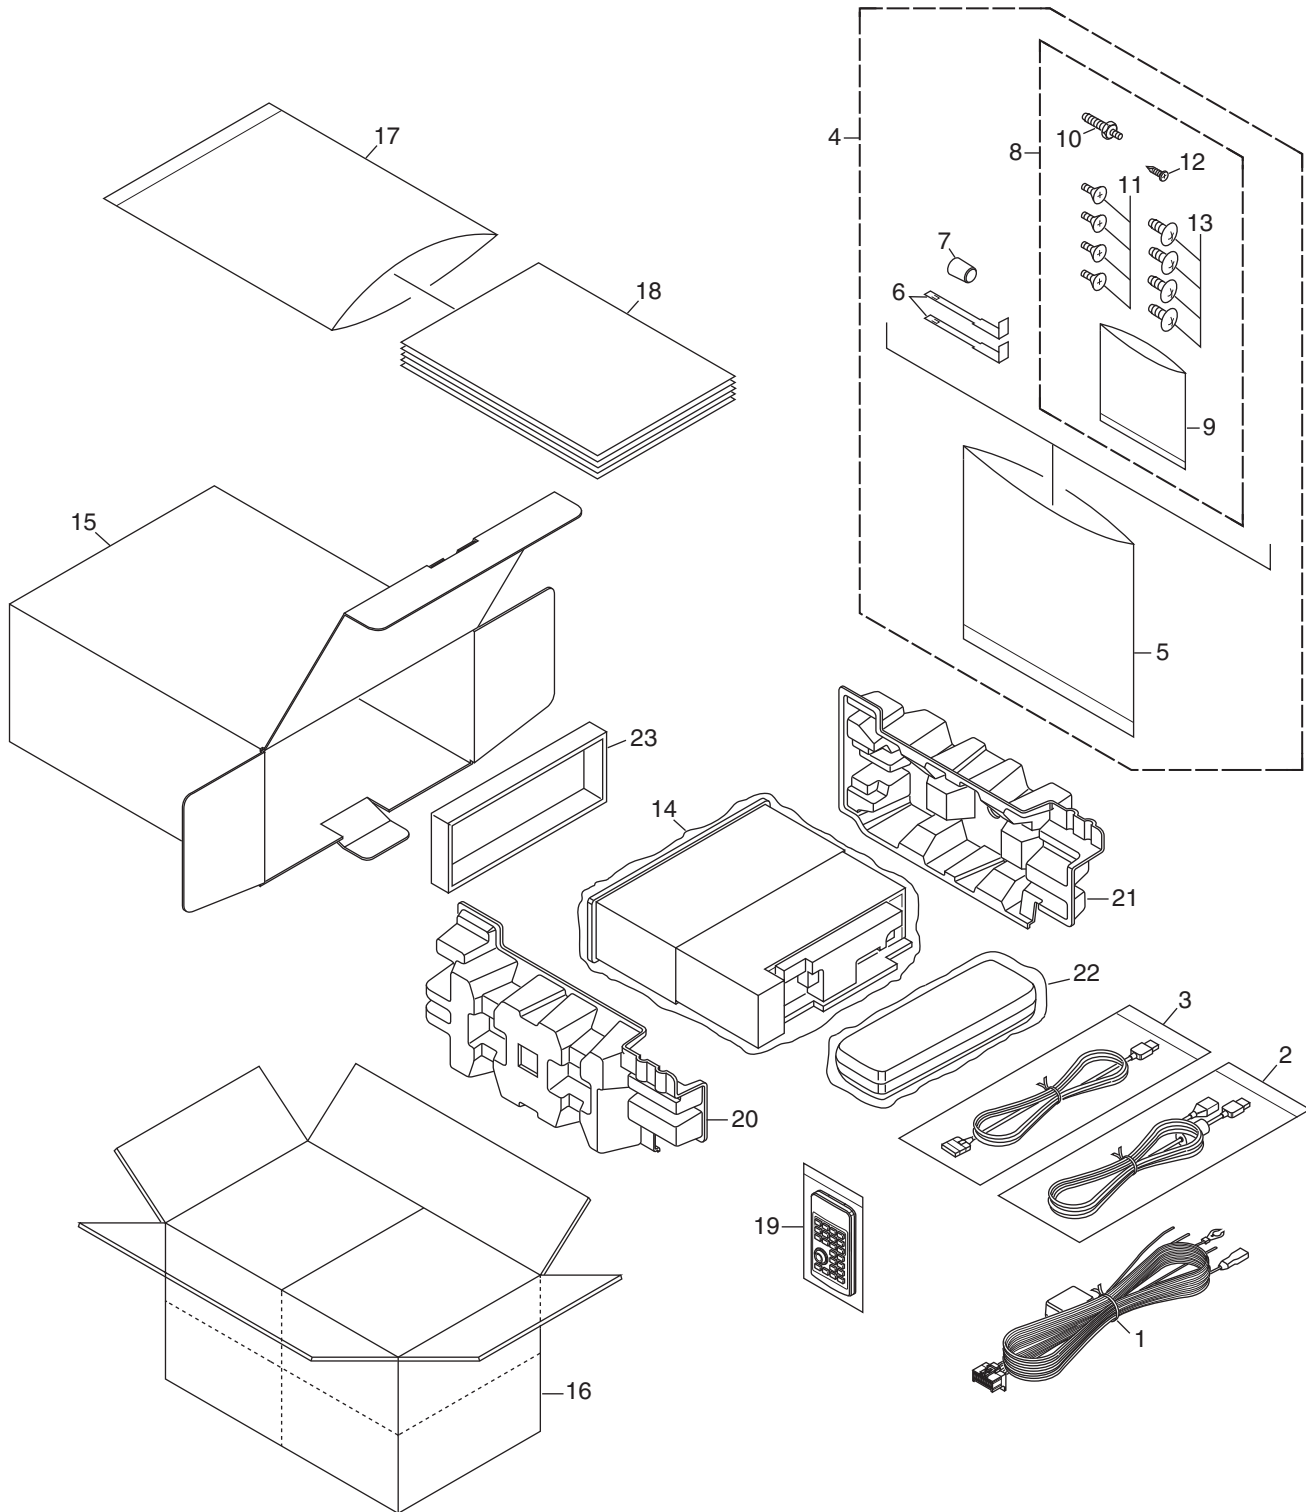

(1) PACKING SECTION PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
1	Cord Assy	CDP1009	16	Contain Box	See Contrast table(2)
2	Cord Assy	CDP1040	17	Polyethylene Bag	CEG1116
3	Cord Assy	See Contrast table(2)	18-1	Owner's Manual	See Contrast table(2)
* 4	Accessory Assy	See Contrast table(2)	18-2	Owner's Manual	See Contrast table(2)
5	Polyethylene Bag	CEG1160	18-3	Owner's Manual	See Contrast table(2)
6	Handle	CND3707	18-4	Installation Manual	See Contrast table(2)
7	Bush	CNV3930	* 18-5	Caution Card	XRP7002
8	Screw Assy	See Contrast table(2)	* 18-6	Caution Card	See Contrast table(2)
* 9	Polyethylene Bag	CEG-127	18-7	Caution Card	CRP1310
10	Screw	CBA1650	* 18-8	Warranty Card	See Contrast table(2)
			* 18-9	Caution Card	CRP1355
11	Screw	CRZ50P090FTC	19	Remote Control Unit	CXC5717
12	Screw	See Contrast table(2)	20	Protector	CHP3373
13	Screw	TRZ50P080FTC	21	Protector	CHP3374
14	Polyethylene Bag	See Contrast table(2)	22	Case Assy	XXA7417
15	Carton	See Contrast table(2)	23	Protector	CHP3375

(2) CONTRAST TABLE


DEH-P690UB/XN/UC , DEH-P6900UB/XN/UC and DEH-P7950UB/XN/ES are constructed the same except for the following:

<u>Mark</u>	<u>No.</u>	<u>Description</u>	<u>DEH-P690UB/XN/UC</u>	<u>DEH-P6900UB/XN/UC</u>	<u>DEH-P7950UB/XN/ES</u>
*	3	Cord Assy	CDP1041	Not used	Not used
	4	Accessory Assy	CEA7316	CEA7316	CEA7317
	8	Screw Assy	CEA5322	CEA5322	CEA3849
	12	Scew	JPZ20P060FTB	JPZ20P060FTB	Not used
	14	Polyethylene Bag	CEG1173	CEG1173	CEG-162
	15	Carton	CHG6077	CHG6079	CHG6078
	16	Contain Box	CHL6077	CHL6079	CHL6078
	18-1	Owner's Manual	CRD4160	CRD4162	CRD4164
	18-2	Owner's Manual	Not used	Not used	CRD4165
	18-3	Owner's Manual	Not used	Not used	CRB2320
	18-4	Installation Manual	CRD4161	CRD4163	CRD4166
*	18-6	Caution Card	Not used	CRP1294	Not used
*	18-8	Warranty Card	CRY1070	CRY1246	Not used

Owner's Manual,Installation Manual

<u>Part No.</u>	<u>Language</u>
CRD4160, CRD4161, CRD4162, CRT4163	English, French
CRD4164	English, Spanish
CRD4165	Portuguese(B), Traditional Chinese
CRB2320	Arabic
CRD4166	English, Spanish, Portuguese(B), Traditional Chinese, Arabic

2.2 EXTERIOR(1)

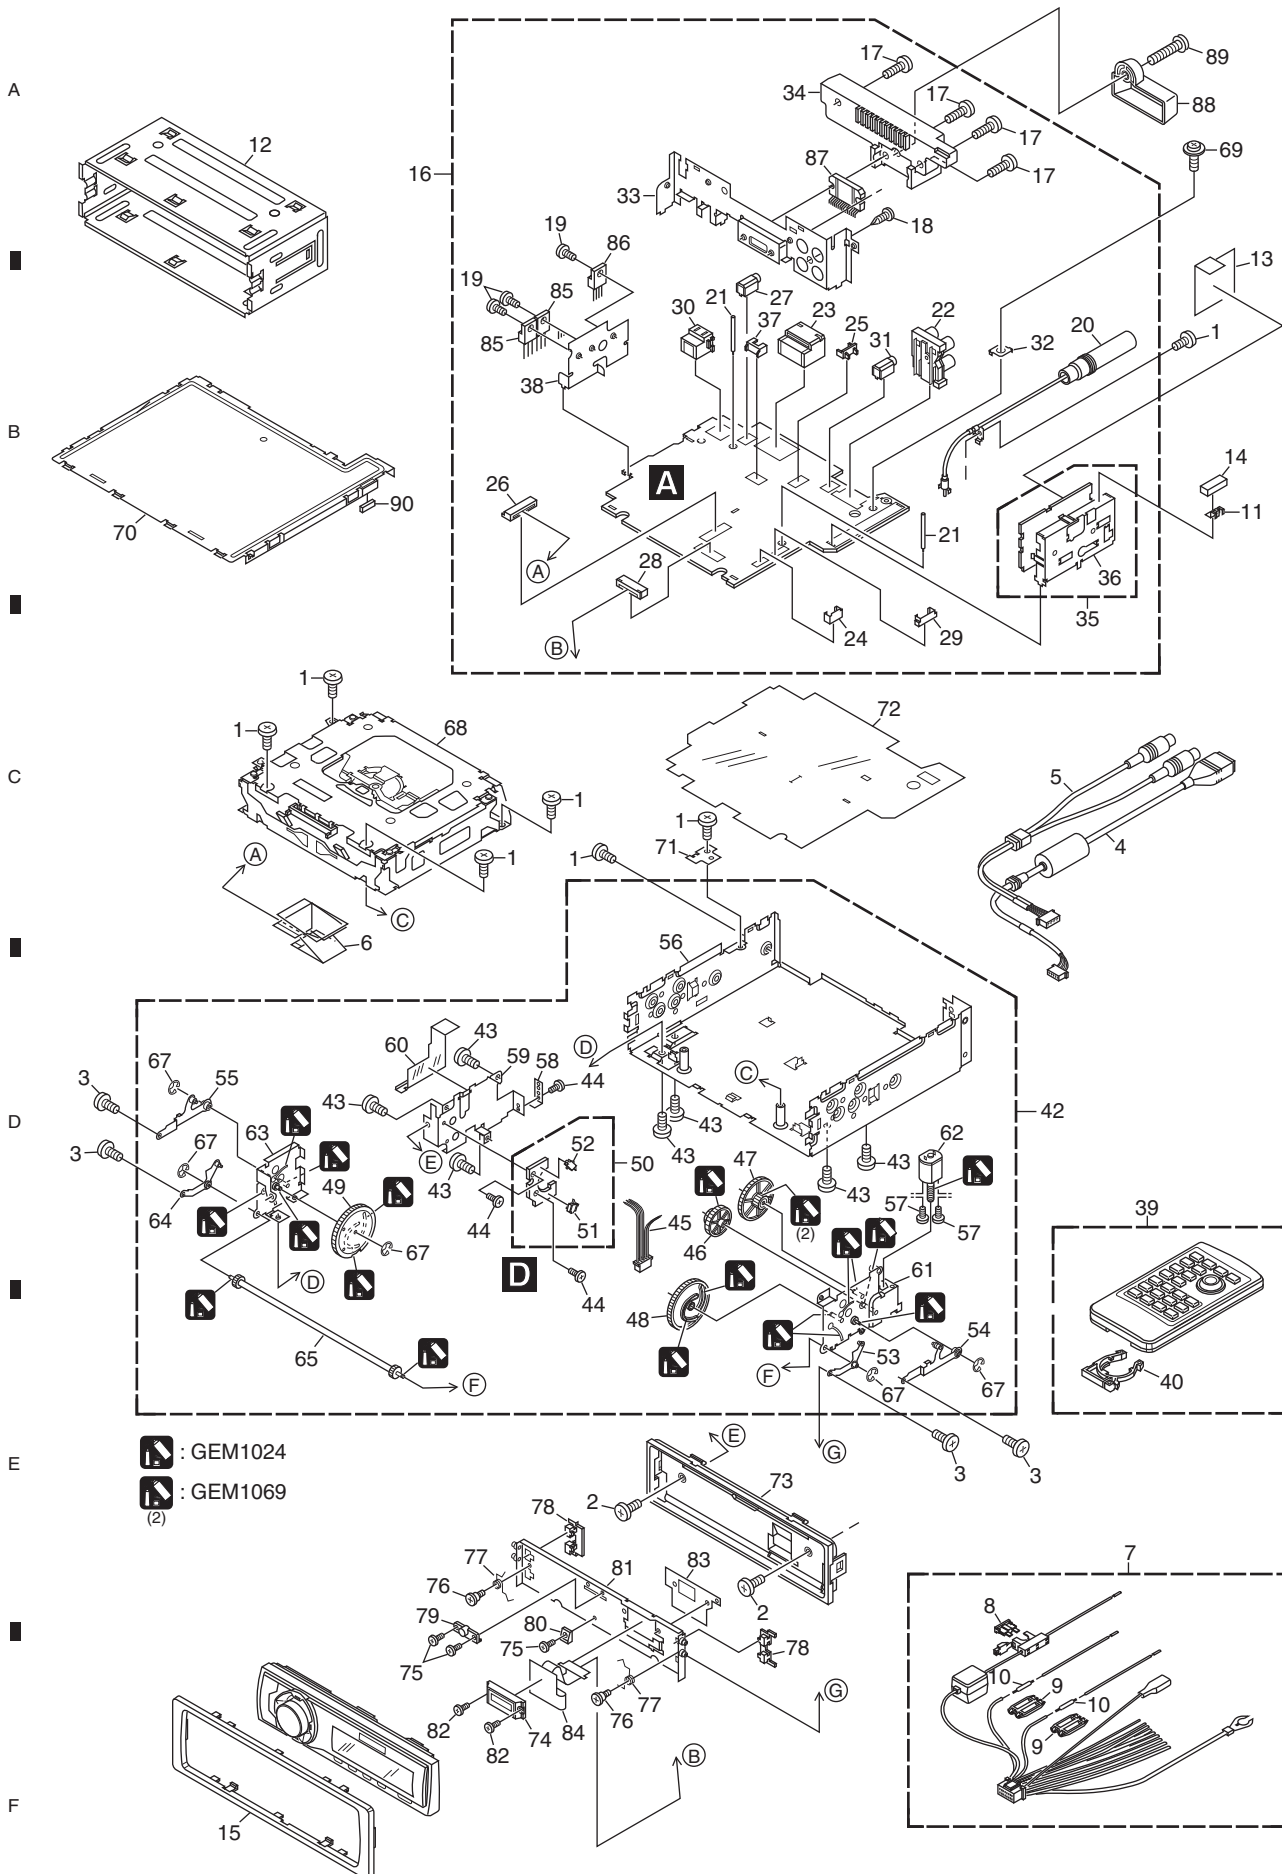

(1) EXTERIOR(1) SECTION PARTS LIST


Mark No.	Description	Part No.	Mark No.	Description	Part No.	
1	Screw	BSZ26P060FTC	46	Gear	CNV7752	
2	Screw(M2.6 x 4)	CBA1828	47	Gear	CNV7753	A
3	Screw(M2 x 2.5)	CBA1924	48	Gear	CNV7754	
4	Cord Assy	CDE8351	49	Gear	CNV7755	
5	Cord Assy	CDE8352	50	Switch Unit	CWS1389	
6	Cable	CDE8355	51	Switch	CSN1051	
7	Cord Assy	CDP1009	52	Spring Switch	CSN1052	
⚠ 8	Fuse(10 A)	CEK1136	53	Arm Unit	CXC2199	
9	Cap	CNS1472	54	Arm Unit	CXC6623	
10	Resistor	RS1/2PMF102J	55	Arm Unit	CXC6624	
11	Earth Plate	CND2171	* 56	Chassis Unit	CXC8071	B
12	Holder	CND3598	57	Screw	JFZ20P020FTC	
13	Insulator	CNM8790	58	Spring	XBL7003	
14	Cushion	CNM9126	59	Holder	XNC7017	
15	Panel	See Contrast table(2)	60	Insulator	XNM7119	
16	Tuner Amp Unit	See Contrast table(2)	61	Holder Unit	XXA7399	
17	Screw	BMZ26P160FTC	62	Motor Unit(M3)	XXA7400	
18	Screw	BPZ26P070FTC	63	Holder Unit	XXA7401	
19	Screw	BSZ26P060FTC	64	Arm Unit	XXA7403	
20	Antenna Cable(CN402)	CDH1336	65	Gear Unit	XXA7424	C
21	Clamper	CEF1048	66	*****		
22	Pin Jack(CN301)	CKB1051	67	Washer	YE15FTC	
23	Plug(CN991)	CKM1278	68	CD Mechanism Module(S10.5)	CXK5763	
24	Plug(CN871)	CKS-786	69	Screw	ISS26P055FTC	
25	Plug(CN302)	CKS1238	70	Case	XNB7005	
26	Connector(CN701)	CKS3829	71	Holder	XNC7014	
27	Connector(CN661)	See Contrast table(2)	72	Insulator	XNM7114	
28	Connector(CN801)	CKS4811	73	Panel Unit	See Contrast table(2)	
29	Connector(CN992)	CKS4830	74	Connector	CKS5273	
30	Connector(CN101)	CKS5271	75	Screw(M2 x 2)	CBA1871	D
31	Connector(CN271)	CKS5523	76	Screw	CBA1935	
32	Holder(CN401)	CNC5399	77	Spring	CBH2530	
33	Holder	See Contrast table(2)	78	Arm	CNV6962	
34	Heat Sink	CNR1894	79	Guide	CNV6967	
35	FM/AM Tuner Unit	CWE1952	80	Guide	CNV8048	
36	Holder	CND1054	81	Case Unit	CXC6483	
37	Plug(CN151)	KM200NA5L	82	Screw(M2 x 3.5)	XBA7002	
38	Holder	XNC7011	83	Holder	XNC7019	
39	Remote Control Unit	CXC5717	84	Flexible PCB	XNP7026	E
40	Cover	CZN5357	85	Transistor(Q751,901)	2SD2396	
41	*****		86	IC(IC911)	NJM2388F84	
42	Drive Unit	CXC8072	87	IC(IC351)	PAL007C	
43	Screw	BMZ26P040FTC	88	Holder	See Contrast table(2)	
44	Screw(M2 x 2)	CBA1871	89	Screw	See Contrast table(2)	
45	Cord	CDE7392	90	Cushion	CNN1405	

(2) CONTRAST TABLE

DEH-P690UB/XN/UC , DEH-P6900UB/XN/UC and DEH-P7950UB/XN/ES are constructed the same except for the following:

Mark	No.	Description	DEH-P690UB/XN/UC	DEH-P6900UB/XN/UC	DEH-P7950UB/XN/ES
	15	Panel	CNS8914	CNS8915	CNS8915
	16	Tuner Amp Unit	CWN2152	CWN2152	CWN2154
	27	Connector(CN661)	CKS4124	CKS4124	Not used
	33	Holder	CND3782	CND3782	CND3783
	73	Panel Unit	XXA7408	XXA7407	XXA7407
	88	Holder	Not used	CNV7619	Not used
	89	Screw	Not used	BMZ40P140FTC	Not used

2.3 EXTERIOR(2)

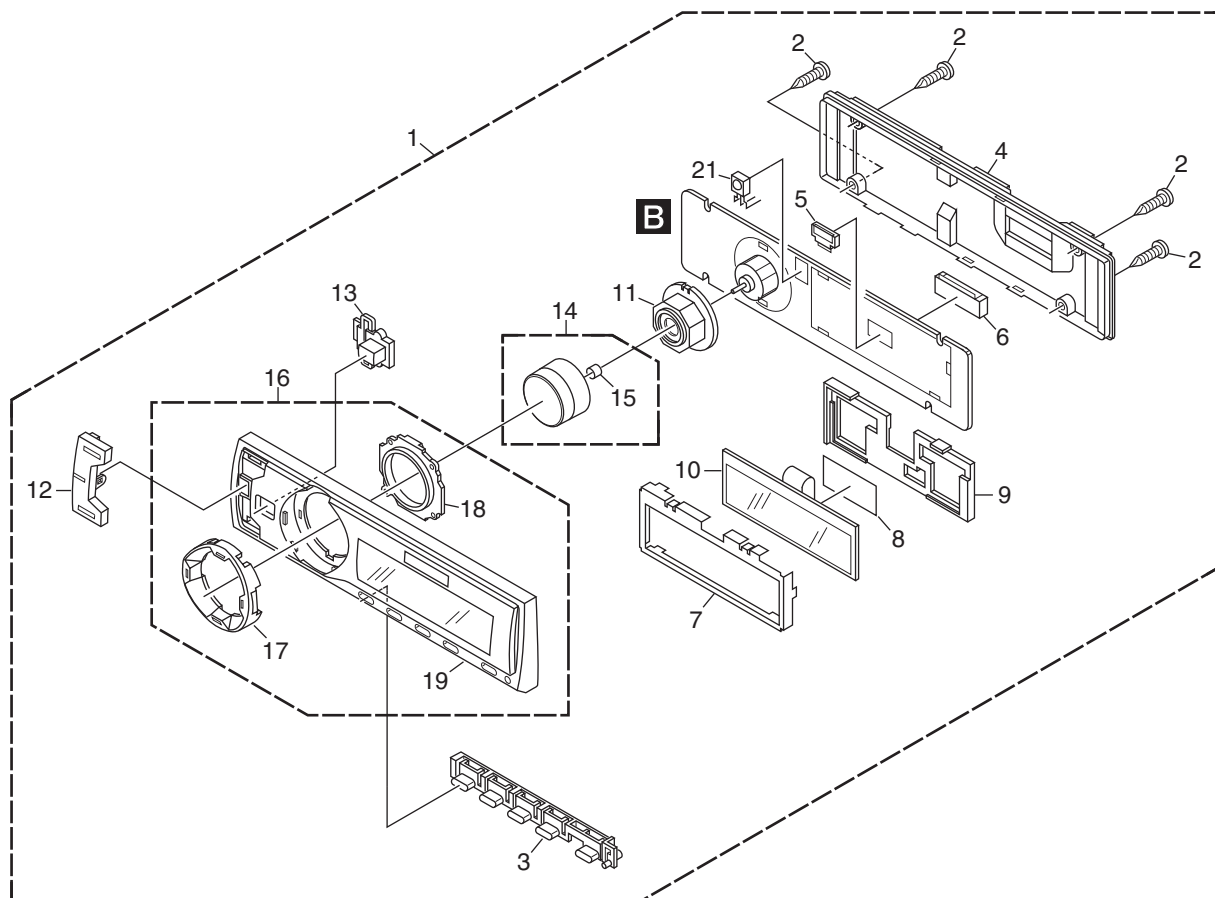

(1) EXTERIOR(2) SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.
1	Detach Grille Assy	See Contrast table(2)	12	Button Unit(SRC/BAND)	CXC7257
2	Screw	BPZ20P080FTB	13	Button Unit(LIST)	CXC7264
3	Button	See Contrast table(2)	14	Knob Unit	CXC7271
4	Cover	CNS8491	15	Spring	XBL7005
5	Connector(CN1961)	CKS5545	16	Sub Grille Assy	See Contrast table(2)
6	Connector(CN1801)	CKS5662	17	Plate	CNS8854
7	Holder	CND3781	18	Lighting Conductor	CNV9427
8	Double Sided Tape	CNM8673	19	Grille Unit	See Contrast table(2)
9	Holder	CNV9435	20		
10	OEL Unit	MXS8231	21	IC(IC1931)	GP1UX31RK
11	Holder	CNV9676			

(2) CONTRAST TABLE

DEH-P690UB/XN/UC , DEH-P6900UB/XN/UC and DEH-P7950UB/XN/ES are constructed the same except for the following:

Mark	No.	Description	DEH-P690UB/XN/UC	DEH-P6900UB/XN/UC	DEH-P7950UB/XN/ES
	1	Detach Grille Assy	CXC7125	CXC7126	CXC7127
	3	Button	CAI1120	CAI1142	CAI1142
	16	Sub Grille Assy	CXC7275	CXC7276	CXC7277
	19	Grille Unit	CXC7251	CXC7252	CXC7253

4



CD MECHANISM MODULE SECTION PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	
1	CD Core Unit(S10.5COMP2)	CWX3514	50	Rack	CNV8342	
2	Connector(CN101)	CKS4182				A
3	Connector(CN701)	CKS4808	51	Roller	CNV8343	
4	Screw	BMZ20P025FTC	52	Holder	CNV8344	
5	Screw	BSZ20P040FTC	53	Arm	CNV8345	
			54	Guide	CNV8347	
6	Screw(M2 x 3)	CBA1511	55	Arm	CNV8348	
7	Screw(M2 x 4)	CBA1835				
8	Washer	CBF1038	56	Arm	CNV8349	
9	*****		57	Arm	CNV8350	
10	Spring	CBH2609	58	Clamper	CNV8365	
			59	Arm	CNV8386	
11	Spring	CBH2612	60	Guide	CNV8396	B
12	Spring	CBH2614				
13	Spring	CBH2616	61	Arm	CNV8413	
14	Spring	CBH2617	62	Collar	CNV8938	
15	Spring	CBH2620	63	Motor Unit(M2)	CXC4026	
			64	Arm Unit	CXC4027	
16	Spring	CBH2855	65	Chassis Unit	CXC4028	
17	Spring	CBH2937				
18	Spring	CBH2735	66	Gear Unit	CXC4029	
19	Spring	CBH2854	67	Frame Unit	CXC4031	
20	Spring	CBH2642	68	Motor Unit(M1)	CXC7134	
			69	Screw Unit	CXC6359	C
21	Spring	CBH2856	70	Screw	JFZ20P020FTC	
22	Spring	CBH2857				
23	Spring	CBH2860	71	Screw	JGZ17P022FTC	
24	Spring	CBH2861	72	Washer	YE20FTC	
25	Spring	CBL1686	73	Pickup Unit(P10.5)(Service)	CXX1942	
			74	Screw	IMS26P030FTC	
26	Arm	CND1909				
27	Frame	CND2582				
28	Bracket	CND2583				
29	Arm	CND2584				
30	Lever	CND2585				D
31	Arm	CND2586				
32	Bracket	CND2587				
33	Arm	CND2588				
34	Lever	CND2589				
35	Holder	CNV7201				
36	Gear	CNV7207				
37	Gear	CNV7208				
38	Gear	CNV7209				
39	Gear	CNV7210				E
40	Gear	CNV7211				
41	Gear	CNV7212				
42	Rack	CNV7214				
43	Arm	CNV7216				
44	Roller	CNV7218				
45	Gear	CNV7219				
46	Guide	CNV7361				
47	Gear	CNV7595				F
48	Guide	CNV7799				
49	Arm	CNV7805				

5. ELECTRICAL PARTS LIST

NOTE:

- Parts whose parts numbers are omitted are subject to being not supplied.
- The part numbers shown below indicate chip components.

Chip Resistor

RS1/○S○○○○J,RS1/○○S○○○○J

Chip Capacitor (except for CQS.....)

CKS....., CCS....., CSZS.....

- The  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- Meaning of the figures and others in the parentheses in the parts list.

Example) IC 301 is on the point (face A, 91 of x-axis, and 111 of y-axis) of the corresponding PC board.

IC 301 (A, 91, 111) IC NJM2068V

Circuit Symbol and No.		Part No.	Circuit Symbol and No.		Part No.
Unit Number : CWN2152(UC)			IC 581	(A,94,76) IC	341S2025
Unit Number : CWN2154(ES)			IC 583	(A,98,57) L-MOS AND Gate	TC7SET08FUS1
Unit Name : Tuner Amp Unit			IC 601	(A,129,54) IC	PEG301A
Unit Number :			IC 651	(A,139,36) IC	S-80835CNNB-B8U
Unit Name : Keyboard Unit			IC 781	(B,31,71) IC	NJM2885DL1-33
Unit Number : CWX3514			IC 851	(A,25,27) IC	NJM2360M
Unit Name : CD Core			IC 871	(A,148,17) IC	BA6288FS
Unit(S10.5COMP2)			IC 911	(A,12,93) IC	NJM2388F84
Unit Number : CWS1389			IC 912	(A,44,52) IC	NJM2130F3
Unit Name : Switch Unit			Q 101	(A,29,126) Transistor	UMF23N
			Q 241	(B,134,26) Transistor	2SD1767
			Q 242	(A,144,24) Transistor	UMD2N
			Q 291	(A,137,89) Transistor	UMD2N
			Q 301	(B,140,121) Transistor	IMH23
			Q 302	(B,118,109) Transistor	IMH23
			Q 303	(B,140,126) Transistor	IMH23
			Q 321	(A,118,109) Transistor	UMD2N
			Q 351	(A,114,109) Transistor	DTC124EUA
			Q 352	(A,134,35) Transistor	UMD2N
			Q 381	(B,32,102) Transistor	2SC4081
			Q 501	(B,61,75) Transistor	DTC114EUA
			Q 651	(A,134,31) Transistor	2SC4081
			Q 751	(A,12,56) Transistor	2SD2396
			Q 752	(A,18,60) Transistor	UMD2N
			Q 821	(A,91,15) Transistor	2SD1767
			Q 822	(A,98,15) Transistor	UMD2N
			Q 831	(A,86,12) Transistor	DTC114EUA
			Q 841	(A,136,22) Transistor	UMF23N
			Q 851	(A,21,43) Transistor	2SD1760F5
			Q 852	(A,21,34) Transistor	UMD2N
			Q 871	(A,61,13) Transistor	2SD1760F5
			Q 872	(A,49,6) Transistor	UMD2N
			Q 901	(A,12,69) Transistor	2SD2396
			Q 902	(A,12,77) Transistor	UMD2N
			Q 921	(A,67,108) Transistor	UMX1N
			Q 931	(A,78,117) Transistor	DTC114EUA
			Q 951	(B,99,109) Transistor	2SA1576A
			D 151	(B,74,98) Diode	MALS068X
			D 152	(B,74,96) Diode	MALS068X
			D 161	(A,50,96) Diode	1SS355
			D 162	(A,50,102) Diode	RB160L-40
			D 163	(A,46,107) Diode	1SR154-400

MISCELLANEOUS

IC 101	(A,12,115) IC	HA12241FP
IC 151	(A,66,94) IC	R5523N001B
IC 161	(A,44,96) IC	LT1766EFE-5
IC 171	(A,90,100) IC	NJM2885DL1-33
IC 181	(A,87,94) IC	NJM2872BF18
IC 201	(A,121,84) IC	PML016B
IC 271	(A,116,124) IC	NJM4558MD
IC 291	(A,141,88) IC	TC4066BFT
IC 351	(A,90,135) IC	PAL007C
IC 401	(A,155,94) IC	NJM062M
IC 431	(B,156,84) IC	NJM2885DL1-33
IC 501	(A,68,72) USB Media Control IC	TCC8600-00X-EA-AG
IC 541	(A,76,41) IC	PEH084A
IC 551	(A,60,41) SD-RAM(64M)	HY57V641620ETP-H
IC 561	(A,52,77) IC	AK4388VT
IC 562	(A,42,83) IC	NJM2872BF05
IC 563	(A,42,73) IC	NJM4558MD

5			6			7			8		
<u>Circuit Symbol and No.</u>			<u>Part No.</u>			<u>Circuit Symbol and No.</u>			<u>Part No.</u>		
D 241	(A,142,28)	Diode	HZS12L(B1)			L 951	(A,84,119)	Inductor	CTF1617		
D 261	(B,112,73)	Diode Network	DA204U			X 502	(A,83,77)	Crystal 12.000 MHz	CSS1723		
D 271	(B,120,134)	Diode	MALS068X			X 581	(A,94,86)	Crystal 32.768 kHz	CSS1735		A
D 272	(B,112,134)	Diode	MALS068X			X 601	(A,115,54)	Crystal Resonator 15.000 MHz	CSS1653		
D 321	(A,111,116)	Diode	1SS133			△FU301	(A,122,127)	Fuse 3 A	CEK1286		
D 381	(B,27,100)	Diode	HZU8R2(B2)			△FU302	(A,109,99)	Fuse 3 A	CEK1286		
D 382	(B,112,111)	Diode	DAN202U			BZ601	(A,148,68)	Buzzer	CPV1062		
D 431	(A,154,85)	Diode	1SR154-400			RESISTORS					
D 432	(A,154,81)	Diode	1SR154-400			R 101	(A,12,121)		RS1/16S620J		
D 433	(A,151,76)	Diode	1SR154-400			R 103	(A,9,121)		RS1/16S101J		
D 661	(B,26,128)	Diode(UC)	DAN202U			R 104	(A,15,121)		RS1/16S101J		
D 662	(B,26,132)	Diode(UC)	DAP202U			R 105	(A,11,110)		RS1/16S102J		B
D 751	(A,23,58)	Diode	HZS7L(C3)			R 106	(A,27,125)		RS1/16S222J		
D 801	(B,103,16)	Diode	MALS068X			R 107	(A,29,123)		RS1/16S332J		
D 802	(B,103,14)	Diode	MALS068X			R 108	(A,31,123)		RS1/16S562J		
D 803	(B,109,12)	Diode	MALS068X			R 109	(B,27,120)		RS1/16S181J		
D 804	(B,103,12)	Diode	MALS068X			R 110	(B,24,123)		RS1/16S181J		
D 805	(B,125,16)	Diode	MALS068X			R 111	(B,30,119)		RS1/16S223J		
D 806	(B,125,14)	Diode	MALS068X			R 112	(B,26,123)		RS1/16S223J		
D 821	(A,95,15)	Diode	HZU10(B1)			R 113	(B,32,119)		RS1/16S102J		
D 831	(A,89,9)	LED	CL-197HB1-D(CDE)			R 114	(B,28,123)		RS1/16S102J		
D 851	(B,29,29)	Diode	RB411D			R 151	(A,80,97)		RS1/16S0R0J		
D 852	(A,18,27)	Diode	HZS11L(A1)			R 152	(A,72,96)		RS1/16S0R0J		C
D 871	(A,150,26)	Diode	1SS133			R 155	(A,77,95)		RS1/16S153J		
D 872	(A,150,23)	Diode	1SS133			R 156	(A,74,95)		RS1/16S153J		
D 873	(A,53,7)	Diode	HZS7L(A3)			R 157	(B,111,66)		RS1/16S103J		
D 901	(A,22,70)	Diode	HZS6L(B1)			R 161	(A,50,94)		RS1/16S0R0J		
D 902	(A,27,113)	Diode	MPG06G-6415G50			R 163	(A,43,90)		RS1/16S332J		
D 921	(A,42,128)	Diode	HZS7L(C3)			R 201	(A,116,73)		RAB4C102J		
D 922	(A,60,116)	Diode	HZU6R8(B2)			R 202	(A,112,74)		RS1/16S101J		
D 931	(A,66,115)	Diode	1SR154-400			R 203	(A,113,74)		RS1/16S101J		
D 941	(A,104,124)	Diode	MPG06G-6415G50			R 204	(A,129,93)		RS1/16S0R0J		
D 942	(A,107,125)	Diode	MPG06G-6415G50			R 205	(A,129,92)		RS1/16S0R0J		
D 951	(B,78,113)	Diode	DAN202U			R 241	(A,142,22)		RS1/16S182J		D
D 991	(A,35,121)	Diode	MPG06G-6415G50			R 271	(B,121,127)		RS1/16S473J		
D 992	(A,42,131)	Diode	MPG06G-6415G50			R 272	(B,116,127)		RS1/16S473J		
ZNR401	(A,159,142)	Surge Protector	IMSA-6801-01Y901			R 273	(B,119,122)		RS1/16S223J		
L 101	(A,8,111)	Inductor	LCTC2R2K1608			R 274	(B,113,122)		RS1/16S223J		
L 151	(A,75,96)	Inductor	CTF1713			R 275	(B,123,122)		RS1/16S223J		
L 162	(A,57,98)	Inductor	CTH1255			R 276	(B,117,122)		RS1/16S223J		
L 201	(A,121,74)	Inductor	LCTAW2R2J2520			R 277	(B,120,125)		RS1/16S223J		
L 401	(B,170,145)	Inductor	LCTAW220J2520			R 278	(B,115,125)		RS1/16S223J		
L 402	(A,159,108)	Inductor	LCTAW1R0J3225			R 279	(A,123,123)		RS1/16S223J		
L 403	(B,159,100)	Inductor	LCTAW1R0J3225			R 280	(A,110,123)		RS1/16S223J		
L 404	(A,151,100)	Inductor	LCTC1R0K1608			R 291	(A,139,94)		RS1/16S103J		E
L 501	(A,80,94)	Inductor	CTF1389			R 292	(A,135,89)		RS1/16S472J		
L 502	(A,80,93)	Inductor	CTF1389			R 301	(B,130,124)		RS1/16S390J		
L 503	(A,70,84)	Inductor	LCTC2R2K1608			R 302	(B,132,124)		RS1/16S390J		
L 504	(A,78,84)	Inductor	CTF1389			R 303	(B,129,136)		RS1/16S223J		
L 506	(A,78,71)	Inductor	CTF1384			R 304	(B,130,136)		RS1/16S223J		
L 541	(A,79,29)	Inductor	CTF1389			R 305	(B,114,108)		RS1/16S390J		
L 551	(A,67,28)	Inductor	CTF1389			R 306	(B,109,104)		RS1/16S390J		
L 561	(A,54,71)	Inductor	CTF1379			R 307	(B,103,110)		RS1/16S223J		
L 581	(A,100,78)	Chip Coil	LCTAW100J2520			R 308	(B,103,105)		RS1/16S223J		
L 583	(A,95,58)	Inductor	CTF1379			R 309	(A,140,125)		RS1/16S390J		F
L 603	(A,97,54)	Ferri-Inductor	LAU470K			R 310	(A,150,127)		RS1/16S390J		
L 841	(A,131,24)	Chip Coil	LCTAW100J2520			R 311	(B,142,136)		RS1/16S223J		
L 851	(A,47,17)	Chip Coil	LCTAW4R7J2520			R 312	(B,144,136)		RS1/16S223J		
L 852	(A,31,18)	Inductor	CTF1660								
L 871	(A,142,17)	Ferri-Inductor	LAU4R7K								

Circuit Symbol and No.**Part No.****Circuit Symbol and No.****Part No.**

A	R 321	(A,120,109)	RS1/16S102J	R 539	(A,78,79)	RS1/16S225J
	R 351	(A,90,118)	RS1/16S182J	R 541	(B,79,54)	RS1/16S0R0J
	R 352	(A,88,118)	RS1/16S182J	R 542	(A,62,83)	RS1/16S101J
	R 353	(A,93,118)	RS1/16S182J	R 543	(A,63,83)	RS1/16S101J
	R 354	(A,95,118)	RS1/16S182J	R 544	(B,59,68)	RS1/16S101J
	R 355	(B,89,113)	RS1/16S272J	R 550	(A,56,69)	RS1/16S472J
	R 356	(B,87,113)	RS1/16S272J	R 551	(B,60,83)	RS1/16S223J
	R 357	(B,93,113)	RS1/16S272J	R 552	(B,57,71)	RS1/16S223J
	R 358	(B,97,113)	RS1/16S272J	R 553	(B,57,74)	RS1/16S223J
	R 359	(B,147,121)	RS1/16S472J	R 554	(B,61,71)	RS1/16S473J
B	R 360	(B,142,116)	RS1/16S472J	R 555	(A,52,46)	RS1/16S222J
	R 362	(A,111,108)	RS1/16S103J	R 556	(A,52,43)	RS1/16S222J
	R 363	(B,103,118)	RS1/16S103J	R 561	(A,50,62)	RS1/16S473J
	R 364	(B,102,118)	RS1/16S331J	R 562	(A,49,62)	RS1/16S473J
	R 365	(B,99,124)	RS1/16S101J	R 563	(A,43,66)	RS1/16S103J
	R 366	(A,100,122)	RS1/16S103J	R 564	(B,42,72)	RS1/16S103J
	R 381	(B,28,103)	RS1/16S473J	R 565	(A,41,67)	RS1/16S103J
	R 382	(A,135,80)	RS1/16S473J	R 566	(B,44,76)	RS1/16S103J
	R 383	(B,32,100)	RS1/16S104J	R 567	(A,57,74)	RS1/16S101J
	R 384	(A,111,110)	RS1/16S473J	R 568	(B,42,68)	RS1/16S822J
	R 403	(B,156,91)	RS1/16S104J	R 569	(B,48,64)	RS1/16S822J
	R 404	(B,154,96)	RS1/16S104J	R 582	(B,97,82)	RS1/16S103J
	R 405	(B,166,114)	RS1/16S681J	R 583	(A,88,76)	RS1/16S103J
	R 407	(B,165,119)	RS1/16S681J	R 584	(A,88,73)	RS1/16S1003F
	R 408	(B,165,128)	RS1/16S681J	R 585	(A,80,86)	RS1/16S332J
C	R 409	(B,163,128)	RS1/16S681J	R 586	(B,54,60)	RS1/16S332J
	R 410	(B,161,129)	RS1/16S681J	R 587	(A,83,86)	RS1/16S182J
	R 501	(B,63,81)	RS1/16S471J	R 588	(B,52,60)	RS1/16S182J
	R 502	(A,73,84)	RS1/16S0R0J	R 590	(A,100,59)	RS1/16S101J
	R 504	(B,54,64)	RS1/16S101J	R 591	(A,92,82)	RS1/16S104J
	R 505	(A,56,64)	RAB4CQ101J	R 592	(A,91,82)	RS1/16S104J
	R 507	(A,56,84)	RS1/16S101J	R 593	(A,89,82)	RS1/16S104J
	R 508	(A,57,84)	RS1/16S101J	R 594	(B,97,57)	RS1/16S332J
	R 510	(A,55,59)	RAB4CQ101J	R 595	(B,98,58)	RS1/16S182J
	R 511	(A,60,55)	RS1/16S101J	R 596	(A,88,79)	RS1/16S104J
D	R 512	(B,57,76)	RS1/16S471J	R 597	(A,97,82)	RS1/16S0R0J
	R 513	(B,59,78)	RS1/16S471J	R 600	(A,96,85)	RS1/16S0R0J
	R 514	(A,61,56)	RS1/16S101J	R 601	(B,112,59)	RS1/16S104J
	R 515	(B,63,79)	RS1/16S471J	R 602	(B,118,58)	RS1/16S0R0J
	R 516	(A,66,85)	RS1/16S390J	R 603	(B,136,63)	RS1/16S104J
	R 517	(A,66,58)	RAB4CQ101J	R 604	(B,127,50)	RS1/16S104J
	R 518	(A,67,88)	RS1/16S390J	R 605	(B,96,62)	RS1/16S472J
	R 519	(A,68,56)	RAB4CQ101J	R 606	(B,118,41)	RS1/16S472J
	R 520	(B,68,85)	RS1/16S104J	R 607	(B,130,62)	RS1/16S104J
	R 522	(A,71,58)	RAB4CQ101J	R 608	(B,134,63) (ES)	RS1/16S0R0J
E	R 523	(A,74,55)	RS1/16S101J	R 609	(B,128,62) (UC)	RS1/16S0R0J
	R 524	(A,77,59)	RAB4CQ101J	R 610	(B,105,65)	RS1/16S102J
	R 525	(A,80,59)	RAB4CQ101J	R 612	(B,138,48)	RS1/16S681J
	R 526	(A,78,82)	RS1/16S472J	R 613	(A,141,41)	RS1/16S104J
	R 527	(A,85,70)	RS1/16S101J	R 615	(B,121,59)	RS1/16S104J
	R 528	(A,81,70)	RS1/16S473J	R 616	(A,139,41)	RS1/16S104J
	R 529	(A,82,70)	RS1/16S101J	R 617	(B,118,43)	RS1/16S222J
	R 530	(A,84,70)	RS1/16S471J	R 618	(B,100,62)	RS1/16S104J
	R 531	(A,84,66)	RS1/16S101J	R 619	(B,98,62)	RS1/16S104J
	R 532	(A,82,67)	RS1/16S101J	R 620	(A,144,45)	RS1/16S102J
F	R 533	(A,80,66)	RS1/16S101J	R 621	(B,147,56)	RS1/16S104J
	R 535	(A,78,75)	RS1/16S102J	R 622	(B,132,43)	RS1/16S104J
	R 536	(A,57,55)	RAB4CQ101J	R 623	(B,118,39)	RS1/16S472J
	R 537	(A,81,63)	RAB4CQ101J	R 624	(A,142,57)	RS1/16S472J
	R 538	(A,57,73)	RS1/16S101J	R 625	(B,139,77)	RS1/16S103J

Circuit Symbol and No.		Part No.	Circuit Symbol and No.		Part No.
R 626	(B,136,43)	RS1/16S104J	R 923	(A,65,111)	RS1/16S473J
R 627	(B,94,60)	RS1/16S104J	R 924	(A,66,111)	RS1/16S223J
R 628	(A,141,39)	RS1/16S104J	R 925	(B,65,122)	RS1/16S472J
R 629	(B,140,53)	RS1/16S104J	R 931	(A,67,113)	RS1/16S103J
R 643	(A,138,73)	RS1/16S104J	R 951	(B,100,106)	RS1/16S102J
R 651	(A,115,23)	RS1/16S222J	R 952	(B,96,109)	RS1/16S472J
R 652	(A,136,35)	RS1/16S102J	R 953	(B,92,109)	RS1/16S472J
R 653	(A,132,28)	RS1/16S473J	R 954	(B,82,111)	RS1/16S153J
R 654	(A,139,33)	RS1/16S183J	CAPACITORS		
R 661	(B,30,132) (UC)	RS1/16S102J	C 101	(B,17,131)	CKSRYB104K16
R 662	(B,29,127) (UC)	RS1/16S102J	C 102	(A,15,119)	CKSRYB102K50
R 701	(B,103,45)	RS1/16S104J	C 103	(A,12,119)	CKSRYB102K50
R 702	(B,110,37)	RS1/16S473J	C 151	(A,69,95)	CKSRYB104K16
R 703	(B,105,31)	RS1/16S682J	C 152	(A,63,93)	CKSRYB104K16
R 704	(B,110,35)	RS1/16S682J	C 161	(A,37,103) 470 μ F/16 V	CCH1331
R 705	(B,110,43)	RS1/16S221J	C 162	(A,44,103)	CKSYB225K16
R 706	(B,110,39)	RS1/16S102J	C 163	(A,49,97)	CKSRYB334K10
R 707	(B,110,33)	RS1/16S221J	C 164	(A,42,90)	CKSRYB472K50
R 708	(B,110,31)	RS1/16S221J	C 165	(A,66,100)	CEHAZA101M6R3
R 709	(B,105,29)	RS1/16S221J	C 166	(A,44,88)	CKSRYB473K25
R 710	(B,103,43)	RS1/16S102J	C 171	(B,93,90)	CKSRYB103K50
R 711	(B,110,29)	RS1/16S104J	C 172	(A,93,93)	CEAL220M16
R 712	(B,110,41)	RS1/16S104J	C 173	(A,86,104)	CKSRYB474K10
R 751	(A,23,61)	RD1/4PU102J	C 181	(A,84,95)	CKSRYB104K16
R 801	(B,105,18)	RS1/16S222J	C 182	(A,82,95)	CKSYB106K6R3
R 802	(B,109,14)	RS1/16S222J	C 183	(A,89,90)	CKSRYB104K16
R 803	(B,113,14)	RS1/16S222J	C 202	(A,128,73)	CEAL470M10
R 804	(B,117,14)	RS1/16S222J	C 203	(B,128,75)	CKSRYB104K16
R 805	(B,121,14)	RS1/16S222J	C 205	(B,121,74)	CKSRYB474K10
R 806	(B,117,12)	RS1/16S104J	C 207	(A,131,80)	CKSYB106K10
R 807	(B,122,34)	RS1/16S104J	C 208	(B,103,85)	CKSQYB225K10
R 809	(B,124,35)	RS1/16S223J	C 209	(B,107,82)	CKSQYB225K10
R 821	(A,101,17)	RS1/16S473J	C 210	(A,95,44)	CKSQYB225K10
R 822	(A,101,18)	RS1/16S1R0J	C 211	(A,91,44)	CKSQYB225K10
R 823	(A,94,12)	RS1/16S221J	C 212	(A,133,82)	CKSQYB225K10
R 824	(A,97,12)	RS1/16S221J	C 213	(A,133,84)	CKSQYB225K10
R 831	(A,85,14)	RS1/16S181J	C 214	(B,110,93)	CKSQYB225K10
R 842	(A,134,21)	RS1/16S472J	C 215	(B,105,92)	CKSQYB225K10
R 843	(A,135,26)	RS1/16S472J	C 216	(B,110,97)	CKSQYB225K10
R 844	(A,137,25)	RS1/16S103J	C 217	(B,105,95)	CKSQYB225K10
R 851	(A,36,27)	RD1/4PU272J	C 218	(A,130,85)	CKSQYB475K10
R 852	(B,32,32)	RS1/16S101J	C 219	(A,112,85)	CKSQYB475K10
R 854	(A,21,23)	RS1/16S391J	C 220	(A,132,87)	CKSQYB475K10
R 855	(A,24,23)	RS1/16S1R0J	C 221	(A,110,87)	CKSQYB475K10
R 856	(A,22,36)	RS1/16S331J	C 222	(A,130,89)	CKSQYB475K10
R 857	(A,21,31)	RS1/16S331J	C 223	(A,112,89)	CKSQYB475K10
R 858	(A,33,27)	RD1/4PU272J	C 224	(A,116,92)	CKSYB106K10
R 871	(A,50,10)	RS1/16S471J	C 241	(A,145,33)	CEAL470M16
R 872	(A,48,10)	RS1/16S471J	C 242	(B,145,31)	CKSRYB104K16
R 873	(A,153,15)	RS1/16S103J	C 243	(A,141,24)	CKSRYB224K16
R 874	(A,153,18)	RS1/16S563J	C 255	(B,128,78)	CKSRYB104K16
R 875	(A,147,39)	RAB4C102J	C 261	(B,109,73)	CCSRCH470J50
R 901	(A,17,71)	RS1/16S223J	C 271	(B,125,123)	CKSQYB225K10
R 902	(A,18,78)	RS1/16S472J	C 272	(B,115,122)	CKSQYB225K10
R 911	(A,17,83)	RS1/16S102J	C 273	(B,121,122)	CKSQYB225K10
R 912	(A,17,86)	RS1/16S473J	C 274	(B,111,123)	CKSQYB225K10
R 913	(B,41,61)	RS1/16S103J	C 275	(A,121,123)	CCSRCH101J50
R 914	(B,40,68)	RS1/16S103J	C 276	(A,111,123)	CCSRCH101J50
R 921	(A,65,108)	RS1/16S103J	C 277	(A,117,120)	CKSRYB105K10
R 922	(A,68,111)	RS1/16S103J			

Circuit Symbol and No.**Part No.****Circuit Symbol and No.****Part No.**

A	C 291	(A,137,94)	CKSRYB104K16	C 527	(B,57,80)	CCSRCH100D50
	C 301	(A,127,124)	CEAL100M25	C 528	(B,58,83)	CCSRCH100D50
	C 302	(A,134,124)	CEAL100M25	C 529	(B,72,68)	CKSRYB104K16
	C 305	(A,115,104)	CEVW100M10	C 530	(B,76,77)	CKSRYB104K16
	C 306	(A,122,104)	CEVW100M10	C 531	(A,70,26)	CKSYB106K6R3
	C 309	(A,146,124)	CEAL100M25	C 532	(B,41,55)	CKSRYB103K50
	C 310	(A,146,117)	CEAL100M25	C 533	(A,49,85)	CKSRYB102K50
	C 321	(A,116,114)	CEAL220M16	C 541	(A,82,29)	CKSRYB104K16
	C 351	(B,90,122)	CKSQYB474K16	C 542	(A,76,29)	CKSRYB104K16
	C 352	(B,88,122)	CKSQYB474K16	C 544	(A,82,90)	CKSYB106K6R3
B	C 353	(B,93,122)	CKSQYB474K16	C 551	(A,68,31)	CKSRYB104K16
	C 354	(B,95,122)	CKSQYB474K16	C 552	(A,68,33)	CKSRYB104K16
	C 355	(B,90,126)	CKSRYB474K16	C 553	(A,68,37)	CKSRYB104K16
	C 356	(B,88,126)	CKSRYB474K16	C 554	(A,68,41)	CKSRYB104K16
	C 357	(B,93,126)	CKSRYB474K16	C 555	(A,68,52)	CKSRYB104K16
	C 358	(B,95,126)	CKSRYB474K16	C 556	(A,52,33)	CKSRYB104K16
	C 364	(A,99,118)	CEHAR330M10	C 557	(A,52,38)	CKSRYB104K16
	C 365	(B,97,126)	CKSQYB225K10	C 559	(A,74,26)	CKSRYB102K50
	C 366	(B,100,127)	CKSQYB225K10	C 561	(A,53,68)	CKSRYB104K16
	C 368	(A,106,117)	CEHAS100M35	C 564	(A,51,69)	CKSYB106K6R3
C	C 369	(B,69,130)	CKSRYB104K16	C 566	(A,43,80)	CKSRYB103K50
	C 370	(A,69,123) 3 300 μ F/16 V	CCH1486	C 567	(A,52,71)	CKSRYB103K50
	C 401	(B,161,92)	CKSRYB104K16	C 568	(A,45,85)	CKSRYB105K10
	C 402	(B,161,96)	CKSRYB104K16	C 569	(A,52,66)	CKSYB106K6R3
	C 403	(B,164,105)	CKSYB475K10	C 570	(A,50,68)	CKSRYB104K16
	C 406	(B,162,106)	CKSRYB103K50	C 571	(A,43,85)	CKSRYB104K16
	C 407	(B,164,111)	CKSRYB103K50	C 572	(A,45,82)	CKSRYB104K16
	C 408	(B,164,140)	CKSRYB103K50	C 573	(B,51,68)	CKSYB475K10
	C 409	(A,158,104)	CEJQ470M10	C 574	(B,46,68)	CKSYB475K10
	C 410	(A,151,105)	CEAL470M6R3	C 575	(A,43,68)	CCSRCH151J50
D	C 411	(A,157,114)	CEJQ101M16	C 576	(B,46,76)	CCSRCH151J50
	C 420	(A,151,94)	CKSRYB104K16	C 577	(A,39,69)	CCSRCH331J50
	C 431	(A,160,79)	CEJQ220M16	C 578	(B,42,76)	CCSRCH331J50
	C 432	(B,164,80)	CKSRYB103K50	C 579	(A,38,75)	CKSRYB105K10
	C 433	(B,164,85)	CKSYB475K10	C 581	(B,97,80)	CKSRYB104K16
	C 501	(B,71,85)	CKSRYB104K16	C 582	(A,91,88)	CCSRCH5R0C50
	C 502	(B,75,85)	CKSRYB104K16	C 583	(A,91,85)	CCSRCH5R0C50
	C 503	(A,71,88)	CSZSR100M16	C 585	(A,100,57)	CKSRYB104K16
	C 504	(A,76,89)	CSZSR100M16	C 602	(B,112,55)	CCSRCH220J50
	C 505	(A,55,67)	CKSRYB104K16	C 603	(B,112,52)	CCSRCH180J50
E	C 506	(B,61,72)	CKSRYB104K16	C 604	(B,123,50)	CKSRYB104K16
	C 507	(A,57,67)	CKSRYB104K16	C 606	(A,141,54)	CKSRYB104K16
	C 508	(A,66,82)	CKSRYB104K16	C 607	(A,97,49)	CEAL4R7M35
	C 509	(B,63,83)	CCSRCH100D50	C 608	(B,102,48)	CKSRYB103K50
	C 510	(A,62,60)	CKSRYB104K16	C 609	(B,93,50)	CKSYB106K6R3
	C 511	(A,62,59)	CKSRYB104K16	C 651	(A,132,27)	CKSRYB104K16
	C 512	(B,66,75)	CKSRYB104K16	C 652	(A,137,35)	CKSRYB105K10
	C 513	(B,69,80)	CCSRCH331J50	C 701	(A,95,33)	CKSQYB475K6R3
	C 515	(A,75,84)	CKSRYB102K50	C 751	(A,21,52)	CEHAR101M10
	C 516	(A,74,58)	CKSRYB104K16	C 752	(B,25,51)	CKSRYB102K50
F	C 517	(A,74,82)	CKSYB475K10	C 753	(B,23,57)	CKSRYB473K25
	C 518	(B,71,80)	CKSRYB122K50	C 781	(A,37,64)	CEJQ220M25
	C 519	(A,74,60)	CKSRYB104K16	C 782	(B,40,76)	CKSRYB103K50
	C 520	(A,76,84)	CKSRYB102K50	C 783	(B,38,76)	CKSRYB474K10
	C 521	(B,75,73)	CKSRYB104K16	C 821	(A,96,15)	CKSRYB473K25
	C 522	(A,80,67)	CKSRYB104K16	C 831	(A,89,11)	CKSRYF104Z50
	C 523	(A,80,79)	CCSRCH5R0C50	C 841	(A,130,21)	CKSRYB473K25
	C 524	(A,80,75)	CCSRCH150J50	C 842	(A,132,21)	CCSRCH101J50
	C 525	(A,68,85)	CKSRYB103K50	C 851	(A,132,17) 4.7 μ F	CCG1111
	C 526	(B,57,72)	CCSRCH100D50	C 852	(A,36,37)	CEJQ470M25

Circuit Symbol and No.		Part No.	Circuit Symbol and No.		Part No.
C 854	(B,36,32)	CKSRYB103K50	TH1961	(B,117,19) Thermistor	CCX1037
C 855	(A,30,28)	CCSRCH331J50	X 1901	(B,85,19) Ceramic Resonator	16.000 MHz CSS1616
C 856	(B,37,44)	CKSRYB104K16	S 1801	(A,162,7) Push Switch	CSG1155
C 857	(A,34,44)	CEJQ101M16	S 1811	(A,49,23) Switch	CSX1120
C 858	(A,28,43)	CEJQ470M16	S 1831	(A,10,40) Push Switch	CSG1155
C 859	(A,19,33)	CKSRYB104K16	S 1832	(A,10,7) Push Switch	CSG1155
C 860	(A,27,35) 22 µF	CCG1183	S 1834	(A,25,23) Push Switch	CSG1155
C 871	(B,150,28)	CCSRCH101J50	S 1835	(A,110,6) Push Switch	CSG1155
C 872	(B,149,31)	CKSRYB102K50	S 1836	(A,125,6) Push Switch	CSG1155
C 873	(B,150,21)	CCSRCH101J50	S 1837	(A,95,6) Push Switch	CSG1155
C 874	(A,71,7)	CEAL101M10	S 1838	(A,79,6) Push Switch	CSG1155
C 875	(A,66,5)	CKSRYB104K16	S 1839	(A,155,6) Push Switch	CSG1155
C 876	(B,144,19)	CKSRYB105K10	RESISTORS		
C 877	(A,62,5)	CKSRYB103K50			
C 878	(A,154,18)	CKSRYB103K50			
C 901	(A,21,66)	CEHAR220M16			
C 902	(A,17,65)	CKSRYB104K16	R 1801	(B,101,37)	RS1/16S222J
C 903	(B,16,72)	CKSRYB103K50	R 1802	(B,101,39)	RS1/16S222J
C 904	(A,31,90) 1 500 µF/16 V	CCH1201	R 1803	(B,159,16)	RS1/16S333J
C 911	(A,22,95)	CEJQ221M16	R 1811	(B,53,28)	RS1/16S103J
C 912	(A,17,89)	CKSRYB103K50	R 1812	(B,47,21)	RS1/16S333J
C 913	(A,22,104)	CEJQ101M16	R 1813	(B,47,24)	RS1/16S103J
C 914	(A,43,61)	CEJQ100M50	R 1814	(B,55,29)	RS1/16S102J
C 915	(A,44,55)	CKSRYB105K10	R 1815	(B,49,24)	RS1/16S332J
C 921	(B,64,124)	CKSRYB104K16	R 1816	(B,44,37)	RS1/16S102J
C 931	(A,81,118)	CKSQYB105K16	R 1818	(B,52,12)	RS1/16S103J
C 932	(B,64,126)	CKSRYB473K25	R 1819	(B,49,21)	RS1/16S222J
C 941	(B,64,128)	CKSRYB473K25	R 1831	(B,55,7)	RS1/16S821J
C 951	(B,82,113)	CKSRYB104K16	R 1832	(B,58,9)	RS1/16S271J
			R 1833	(B,55,9)	RS1/16S0R0J
			R 1834	(B,95,6)	RS1/16S821J
			R 1835	(B,18,33)	RS1/16S271J
			R 1836	(B,58,7)	RS1/16S821J
			R 1837	(B,20,33)	RS1/16S0R0J
			R 1838	(B,30,35)	RS1/16S821J
			R 1841	(B,10,31)	RS1/16S821J
			R 1843	(B,31,32)	RS1/16S821J
			R 1901	(B,83,34)	RS1/16S103J
			R 1902	(B,79,25)	RS1/16S473J
			R 1903	(B,80,20)	RS1/16S154J
			R 1904	(B,84,29)	RAB4CQ102J
			R 1905	(B,74,8)	RS1/16S104J
			R 1906	(B,93,35)	RAB4CQ473J
			R 1907	(B,70,19)	RAB4CQ102J
			R 1908	(B,52,10)	RS1/16S221J
			R 1909	(B,97,35)	RAB4CQ473J
			R 1910	(B,96,11)	RAB4CQ101J
			R 1911	(B,101,12)	RAB4CQ101J
			R 1912	(B,105,12)	RAB4CQ101J
			R 1913	(B,140,28)	RS1/16S101J
			R 1914	(B,100,35)	RS1/16S101J
			R 1915	(B,149,28)	RAB4CQ101J
			R 1916	(A,99,15)	RAB4CQ101J
			R 1917	(A,102,17)	RAB4CQ101J
			R 1918	(A,105,18)	RAB4CQ101J
			R 1919	(B,144,25)	RAB4CQ101J
			R 1920	(B,104,34)	RAB4CQ101J
			R 1931	(B,67,25)	RS1/16S101J
			R 1932	(B,69,27)	RS1/16S103J
			R 1933	(B,70,21)	RS1/16S2R2J
			R 1951	(B,127,10)	RS1/16S222J

B
Unit Number :
Unit Name : Keyboard Unit

MISCELLANEOUS

IC 1901	(B,97,23) IC	PEG312A8
IC 1921	(A,144,23) IC(P690UB)	PD8174A
	IC(P6900UB,P7950UB)	PD8173A
IC 1931	(A,72,32) IC	GP1UX31RK
IC 1951	(B,112,13) IC	S-818A33AUC-BGN
Q 1961	(B,131,15) Transistor	2SC4617
Q 1962	(A,127,18) Transistor	2SD1664
Q 1963	(B,58,14) Transistor	DTC123JU
Q 1964	(B,27,28) Transistor	DTC123JU
D 1831	(A,32,23) LED	CL-197HB1-D(CDE)
D 1832	(A,49,5) LED	CL-197HB1-D(CDE)
D 1833	(A,49,41) LED	CL-197HB1-D(CDE)
D 1834	(A,99,5) LED	CL-197HB1-D(CDE)
D 1835	(A,11,37) LED	CL-197HB1-D(CDE)
D 1836	(A,11,10) LED	CL-197HB1-D(CDE)
D 1837	(A,20,23) LED	CL-197HB1-D(CDE)
D 1838	(A,83,5) LED	CL-197HB1-D(CDE)
D 1839	(A,114,5) LED	CL-197HB1-D(CDE)
D 1840	(A,151,5) LED	CL-197HB1-D(CDE)
D 1841	(A,129,5) LED	CL-197HB1-D(CDE)
D 1842	(A,67,23) LED	CL-197HB1-D(CDE)
D 1901	(B,82,20) Diode	1SS355
L 1951	(B,117,14) Inductor	CTF1617
L 1961	(B,145,22) Inductor	CTF1617

Circuit Symbol and No.**Part No.****Circuit Symbol and No.****Part No.**

R 1961	(B,121,19)	RS1/16S333J
R 1962	(B,131,13)	RS1/16S183J
R 1963	(B,119,19)	RS1/16S563J
R 1964	(B,121,17)	RS1/16S392J
R 1965	(A,102,30)	RAB4CQ101J
R 1966	(A,129,22)	RS1/16S0R0J
R 1967	(B,130,10)	RS1/16S5101D

R 203	(B,42,45)	RS1/16S473J
R 204	(A,25,61)	RS1/16SS221J
R 206	(B,26,53)	RS1/16SS104J
R 210	(B,13,32)	RS1/16SS102J
R 214	(B,36,34)	RS1/16SS472J
R 216	(B,47,49)	RS1/16SS472J
R 221	(B,36,32)	RS1/16SS103J

CAPACITORS

C 1831	(A,30,23)	CKSRYF104Z50
C 1832	(A,38,6)	CKSRYF104Z50
C 1833	(A,39,39)	CKSRYF104Z50
C 1834	(A,100,5)	CKSRYF104Z50
C 1835	(A,11,35)	CKSRYF104Z50

R 222	(B,35,32)	RS1/16SS103J
R 225	(A,49,49)	RS1/16SS103J
R 226	(A,49,50)	RS1/16SS393J
R 227	(B,45,51)	RS1/16SS562J
R 228	(B,42,53)	RS1/16SS122J

C 1836	(A,8,12)	CKSRYF104Z50
C 1837	(A,20,25)	CKSRYF104Z50
C 1838	(A,85,5)	CKSRYF104Z50
C 1839	(A,115,5)	CKSRYF104Z50
C 1840	(A,149,5)	CKSRYF104Z50

R 229	(B,44,53)	RS1/16SS472J
R 230	(B,21,28)	RS1/16SS0R0J
R 232	(B,43,51)	RS1/16SS122J
R 233	(B,29,52)	RS1/16SS103J
R 234	(B,30,61)	RS1/16SS473J

C 1841	(A,131,5)	CKSRYF104Z50
C 1842	(A,69,23)	CKSRYF104Z50
C 1901	(B,84,27)	CKSRYB103K50
C 1902	(B,79,17)	CKSRYF104Z50
C 1903	(B,108,19)	CKSRYB103K50

R 235	(A,25,63)	RS1/16SS473J
R 239	(B,26,48)	RS1/16SS473J
R 240	(B,10,31)	RS1/16SS473J
R 241	(B,9,32)	RS1/16SS103J

C 1921	(B,146,28)	CKSRYB103K50
C 1931	(B,73,26)	CSZSR100M16
C 1951	(B,111,17)	CSZSR4R7M16
C 1952	(B,128,14)	CSZSR4R7M16
C 1953	(B,115,17)	CKSRYB103K50

R 244	(A,20,52)	RS1/16SS473J
R 255	(A,27,63)	RAB4CQ104J
R 307	(A,34,19)	RS1/16SS183J
R 308	(A,38,20)	RS1/16SS183J
R 309	(A,35,21)	RS1/16SS183J

C 1954	(B,122,14)	CSZSR4R7M10
C 1963	(A,106,28)	CKSRYB104K25
C 1964	(A,116,20)	CKSRYB104K25
C 1965	(A,128,22)	CKSRYB104K25
C 1966	(A,119,21)	CKSRYB104K25

R 310	(A,38,21)	RS1/16SS183J
R 601	(B,28,38)	RS1/16SS0R0J
R 602	(B,27,41)	RS1/16SS0R0J
R 606	(B,23,41)	RS1/16SS0R0J
R 701	(B,16,35)	RS1/16SS221J

R 702	(A,23,55)	RS1/16SS221J
-------	-----------	--------------

CAPACITORS

C
Unit Number: CWX3514
Unit Name : CD Core
Unit(S10.5COMP2)

C 106	(B,56,69)	CKSQYB475K6R3
C 202	(A,27,57)	CKSSYB104K10
C 204	(A,24,63)	CKSSYB103K16
C 205	(B,23,43)	CKSQYB475K6R3

MISCELLANEOUS

IC 201	(A,34,46) IC	PE5547A
IC 301	(A,27,14) IC	BA5839FP
Q 101	(B,56,72) Transistor	2SA1577
Q 102	(B,47,57) Transistor	2SB1689
X 201	(A,23,35) Ceramic Resonator	16.934 MHz CSS1603
S 901	(A,53,37) Switch(HOME)	CSN1067
S 903	(B,19,58) Switch(DSCSNS)	CSN1067
S 904	(B,38,67) Switch(12EJ)	CSN1068
S 905	(B,24,68) Switch(8EJ)	CSN1068

C 206	(A,22,39)	CKSSYB104K10
C 207	(A,24,37)	CKSRYB104K16
C 209	(B,33,40)	CEVW220M6R3
C 210	(B,29,42)	CKSSYB104K10
C 211	(A,27,34)	CKSSYB104K10

RESISTORS

R 101	(B,60,73)	RS1/10SR2R4J
R 102	(B,59,71)	RS1/10SR2R4J
R 103	(B,60,71)	RS1/10SR2R7J
R 104	(B,52,69)	RS1/16SS222J
R 105	(B,41,57)	RS1/16SS102J
R 107	(B,41,59)	RS1/16SS105J
R 202	(B,32,62)	RS1/16SS473J

C 212	(B,29,32)	CKSRYB104K16
C 213	(A,44,37)	CKSSYB104K10
C 214	(A,28,33)	CKSSYB104K10
C 216	(A,50,51)	CKSSYB332K50
C 217	(A,46,51)	CKSSYB104K10

C 218	(A,49,51)	CKSSYB473K10
C 219	(A,45,53)	CKSSYB104K10
C 220	(A,46,53)	CKSSYB182K50
C 221	(A,44,53)	CKSSYB104K10
C 222	(B,43,53)	CCSSCH560J50

C 223	(B,45,53)	CCSSCH4R0C50
C 224	(A,43,55)	CKSSYB104K10
C 226	(A,40,58)	CCSSCH680J50
C 227	(A,40,60)	CCSSCH470J50
C 228	(A,39,62)	CKSSYB103K16

	5		6		7		8	
	<u>Circuit Symbol and No.</u>		<u>Part No.</u>					
C 229	(B,49,59)		CKSSYB104K10					
C 236	(A,42,61)		CKSSYB104K10					
C 239	(B,44,51)		CCSSCH220J50					
C 240	(A,35,61)		CKSSYB104K10					A
C 250	(B,36,30)		CKSSYB102K50					
C 251	(B,33,29)		CKSSYB102K50					
C 303	(A,35,19)		CKSSYB472K25					
C 304	(A,34,21)		CKSSYB223K16					
C 307	(B,25,9)		CKSRYB104K16					
C 308	(B,10,27)		CKSRYB105K10					
C 703	(B,11,37)		CCSSCH101J50					
C 704	(B,8,36)		CKSSYB102K50					
C 711	(A,25,26)		CKSSYB104K10					

D

Unit Number : CWS1389

Unit Name : Switch Unit

S 1	(B,7,14) Switch(OPEN)	CSN1051
S 2	(B,29,12) Spring Switch(CLOSE)	CSN1052

Miscellaneous Parts List

	Pickup Unit(P10.5)(Service)	CXX1942
M 1	Motor Unit(SPINDLE)	CXC7134
M 2	Motor Unit(LOADING/CARRIAGE)	CXC4026
M 3	Motor Unit(FLAP)	XXA7400