


1 2 3 4

# 9. EXPLODED VIEWS AND PARTS LIST

NOTES: ● Parts marked by “NSP” are generally unavailable because they are not in our Master Spare Parts List.  
● The  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.  
● Screws adjacent to ▼ mark on product are used for disassembly.  
● For the applying amount of lubricants or glue, follow the instructions in this manual.  
(In the case of no amount instructions, apply as you think it appropriate.)

## 9.1 PACKING SECTION

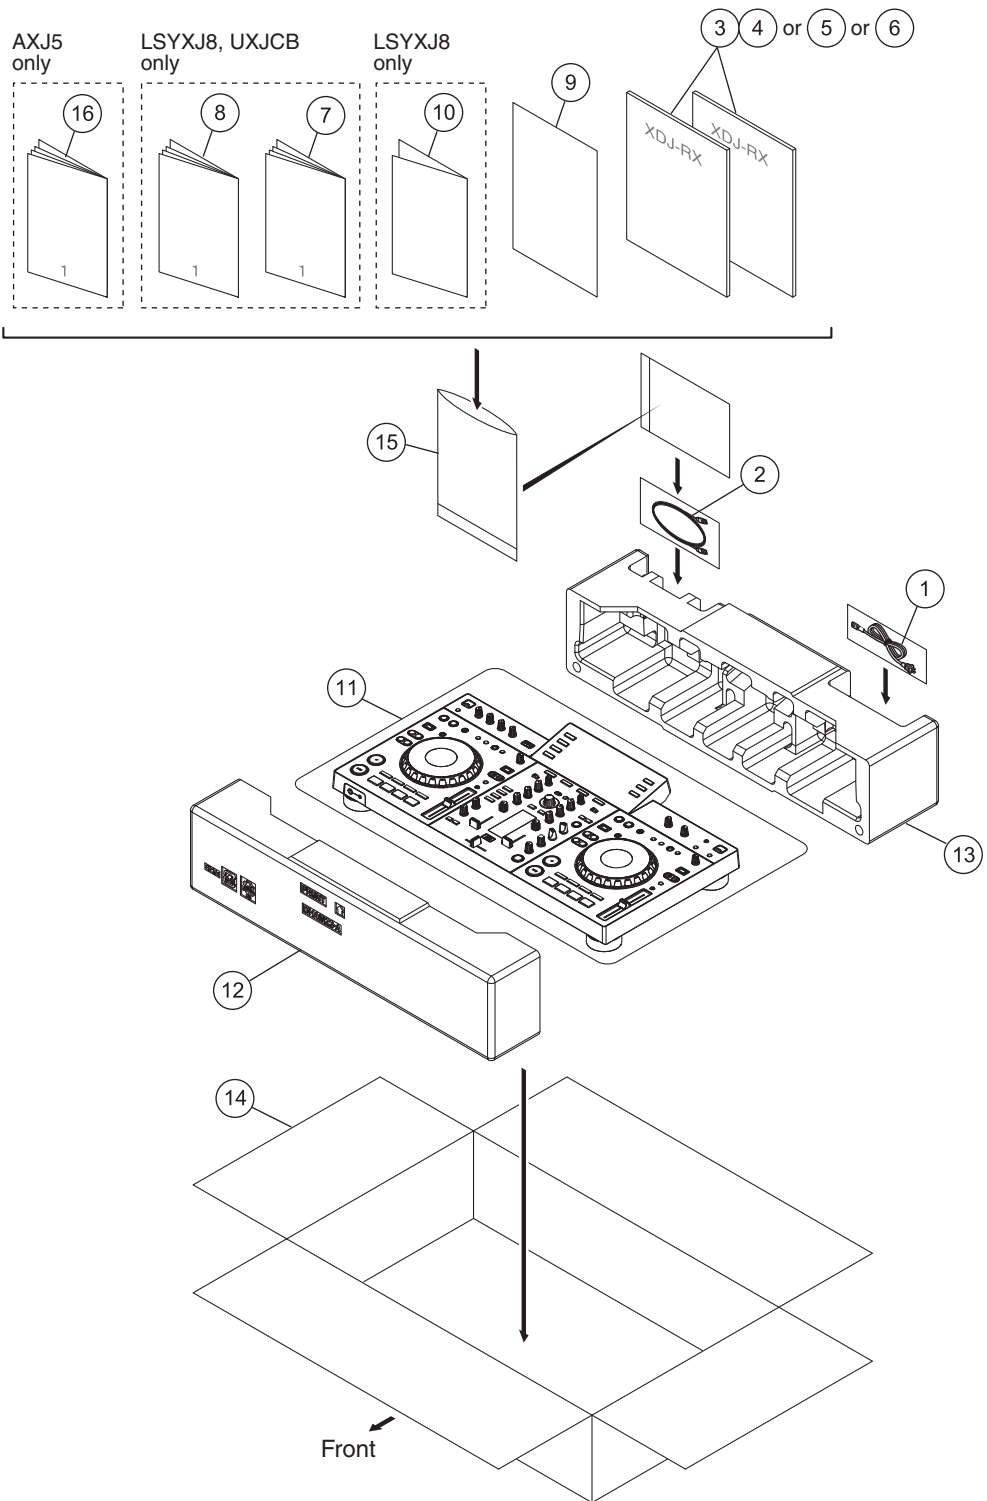

## (1) PACKING SECTION PARTS LIST


| <u>Mark No.</u> | <u>Description</u>                           | <u>Part No.</u>        |
|-----------------|----------------------------------------------|------------------------|
| ⚠               | 1 Power Cord                                 | See Contrast table (2) |
|                 | 2 LAN Cable                                  | DDE1141                |
|                 | 3 Operating Instructions (Quick Start Guide) | See Contrast table (2) |
|                 | 4 Operating Instructions (Quick Start Guide) | See Contrast table (2) |
|                 | 5 Operating Instructions (Quick Start Guide) | See Contrast table (2) |
|                 | 6 Operating Instructions (Quick Start Guide) | See Contrast table (2) |
|                 | 7 Sub Manual/LI1                             | See Contrast table (2) |
| NSP             | 8 Sub Manual/LI2                             | See Contrast table (2) |
|                 | 9 Software Information                       | DRH1305                |
|                 | 10 Warranty                                  | See Contrast table (2) |
| NSP             | 11 Mirror Mat (1200*1000)                    | DHL1169                |
|                 | 12 Pad                                       | DHA1922                |
| NSP             | 13 Pad                                       | DHA1923                |
|                 | 14 Packing Case                              | See Contrast table (2) |
|                 | 15 Polyethylene Bag                          | AHG7117                |
|                 | 16 Sub Manual/LIC                            | See Contrast table (2) |

## (2) CONTRAST TABLE

XDJ-RX/LSYXJ8, UXJCB and AXJ5 are constructed the same except for the following:

| Mark | No. | Symbol and Description                                     | XDJ-RX/LSYXJ8 | XDJ-RX/UXJCB | XDJ-RX/AXJ5 |
|------|-----|------------------------------------------------------------|---------------|--------------|-------------|
| ⚠    | 1   | Power Cord                                                 | ADG1244       | DDG1108      | DDG1114     |
|      | 3   | Operating Instructions (Quick Start Guide)(En, Fr, De, It) | DRH1293       | Not used     | Not used    |
|      | 4   | Operating Instructions (Quick Start Guide)(NI, Es, Pt, Rs) | DRH1294       | Not used     | Not used    |
|      | 5   | Operating Instructions (Quick Start Guide)(En)             | Not used      | DRH1292      | Not used    |
|      | 6   | Operating Instructions (Quick Start Guide)(Zhc)            | Not used      | Not used     | DRH1296     |
|      | 7   | Sub Manual/LI1                                             | DRH1285       | DRH1285      | Not used    |
|      | 8   | Sub Manual/LI2                                             | DRH1286       | DRH1285      | Not used    |
|      | 10  | Warranty                                                   | ARY7158       | Not used     | Not used    |
|      | 14  | Packing Case                                               | DHG3382       | DHG3391      | DHG3393     |
|      | 16  | Sub Manual/LIC                                             | Not used      | Not used     | DRH1299     |

## 9.2 BOTTOM SECTION

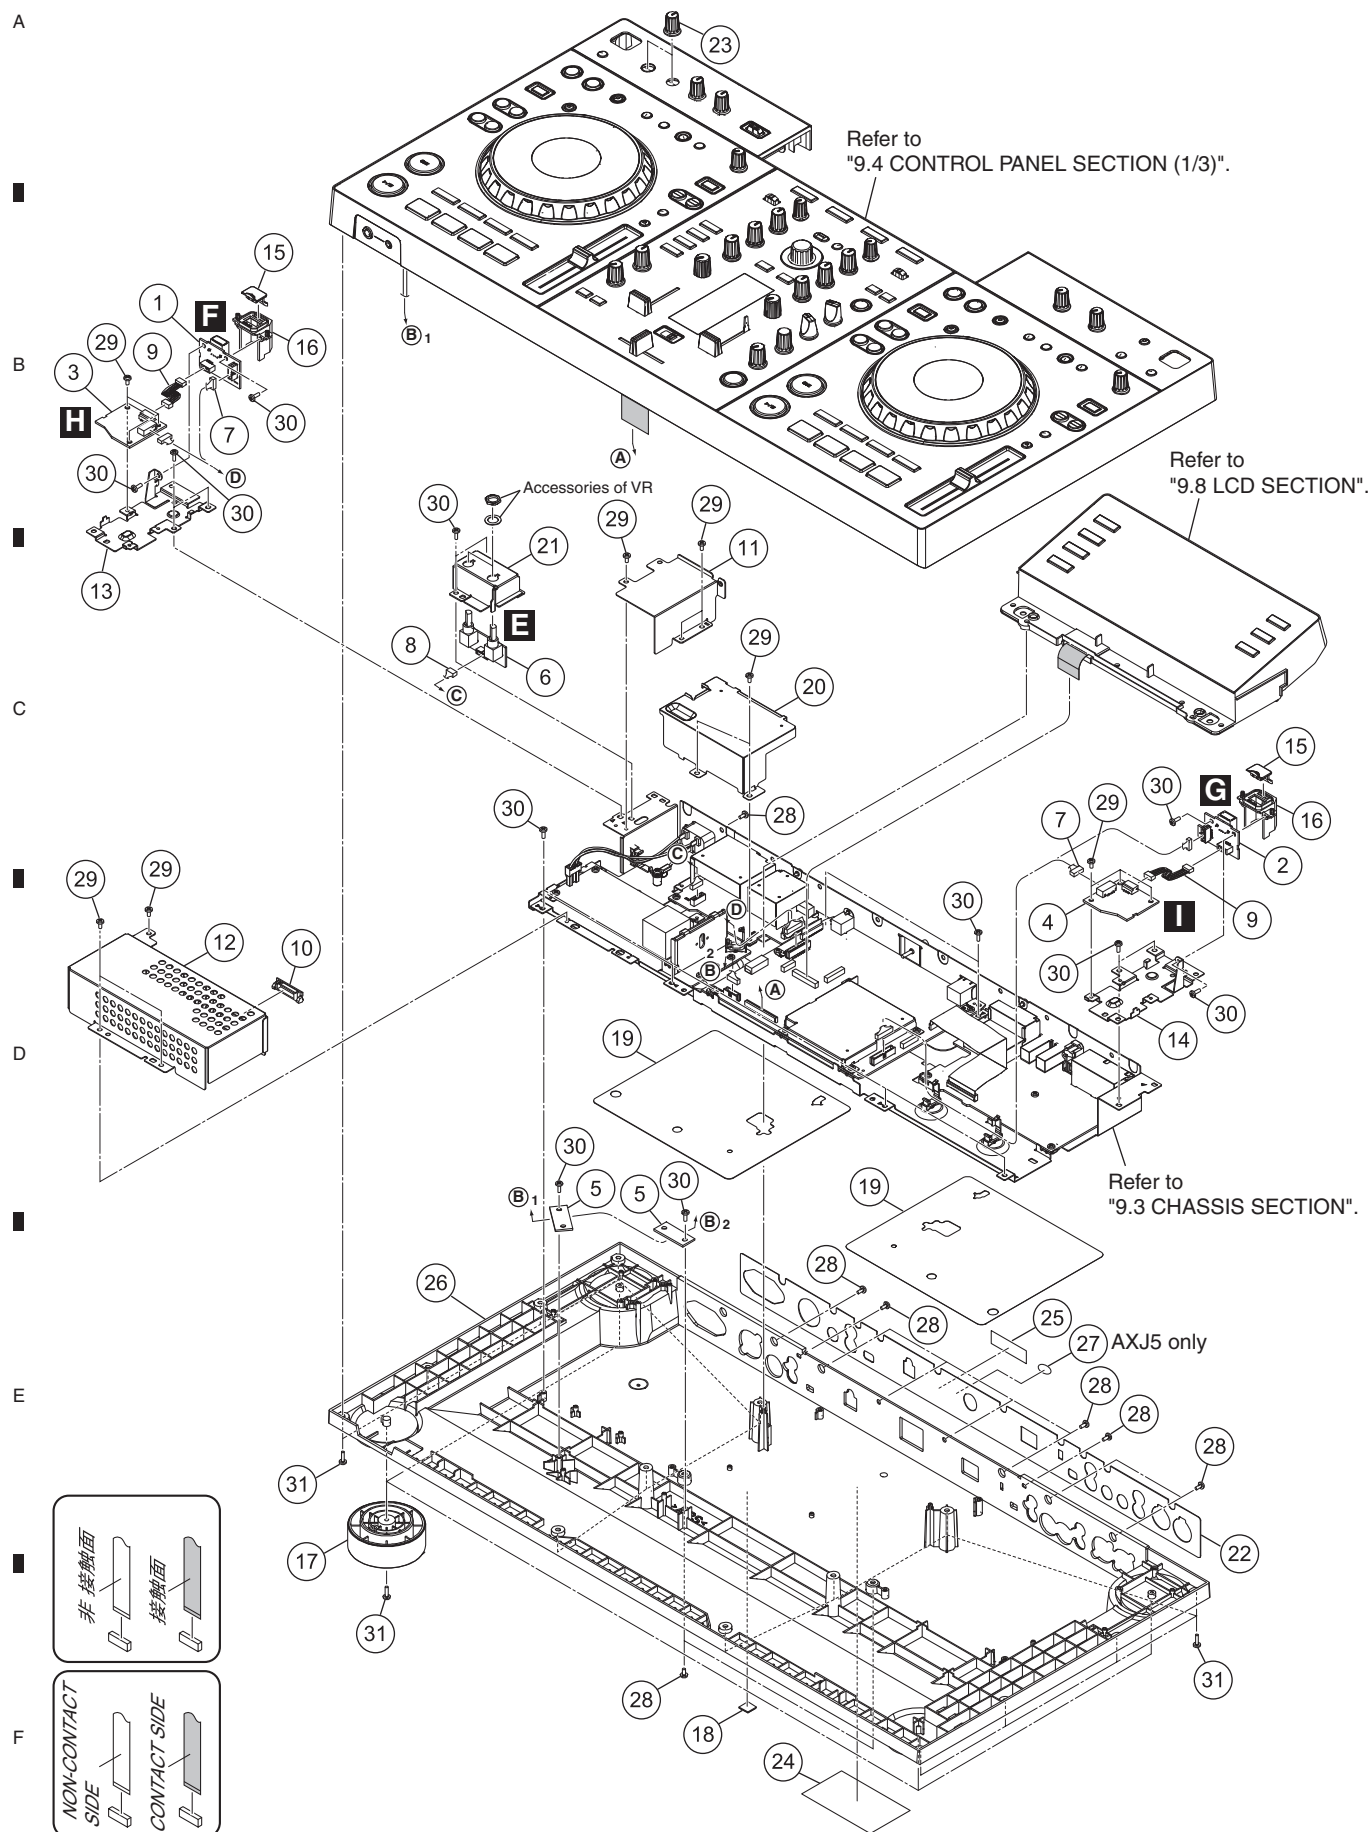

## (1) BOTTOM SECTION PARTS LIST

| Mark No. | Description           | Part No.              |   |
|----------|-----------------------|-----------------------|---|
| 1        | USB1 Assy             | DWX3620               |   |
| 2        | USB2 Assy             | DWX3621               | A |
| 3        | USBP1 Assy            | DWX3636               |   |
| 4        | USBP2 Assy            | DWX3637               |   |
| 5        | HLD3 Assy             | DWX3647               |   |
| 6        | MICT Assy             | DWX3623               |   |
| 7        | Shielded Conn-Cable   | DDA1050               |   |
| 8        | Shielded Conn-Cable   | DDA1051               |   |
| 9        | Connector Assy        | PF04PP-C05            |   |
| 10       | Guard/EDG             | DEC3580               |   |
| 11       | Shield Case/AC        | DNH3184               | B |
| 12       | Shield Case           | DNH3202               |   |
| 13       | Stay/US1              | DNH3192               |   |
| 14       | Stay/US2              | DNH3194               |   |
| 15       | Cover/USB             | DNK6041               |   |
| 16       | Holder/USB            | DNK6390               |   |
| 17       | Insulator Assy        | DXB2131               |   |
| 18       | Rubber Foot           | VEB1349               |   |
| 19       | Shield Plate          | DNH3204               |   |
| 20       | Shield Case           | DNH3203               | C |
| 21       | Stay                  | DNH3205               |   |
| 22       | Rear Panel            | See Contast table (2) |   |
| 23       | Knob/LBK              | DAA1284               |   |
| NSP      | 24 Label/SY           | DRW2637               |   |
| NSP      | 25 Serial Label (UPC) | DRW2311               |   |
| 26       | Chassis               | DNK6387               |   |
| NSP      | 27 CCC S&E Label      | See Contast table (2) |   |
| 28       | Screw                 | BBZ30P060FTB          |   |
| 29       | Screw                 | BBZ30P060FTC          | D |
| 30       | Screw                 | BPZ30P080FNI          |   |
| 31       | Screw                 | BPZ30P100FTB          |   |

## (2) CONTRAST TABLE

XDJ-RX/LSYXJ8, UXJCB and AXJ5 are constructed the same except for the following:

| Mark | No. | Symbol and Description | XDJ-RX/LSYXJ8 | XDJ-RX/UXJCB | XDJ-RX/AXJ5 |   |
|------|-----|------------------------|---------------|--------------|-------------|---|
|      | 22  | Rear Panel             | DAH3030       | DAH3030      | DAH3027     | E |
| NSP  | 27  | CCC S&E Label          | Not used      | Not used     | DRW2310     |   |

## 4

A




B

C

D

E

F

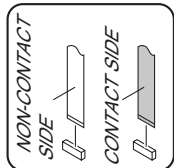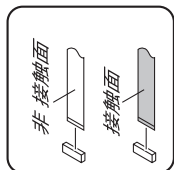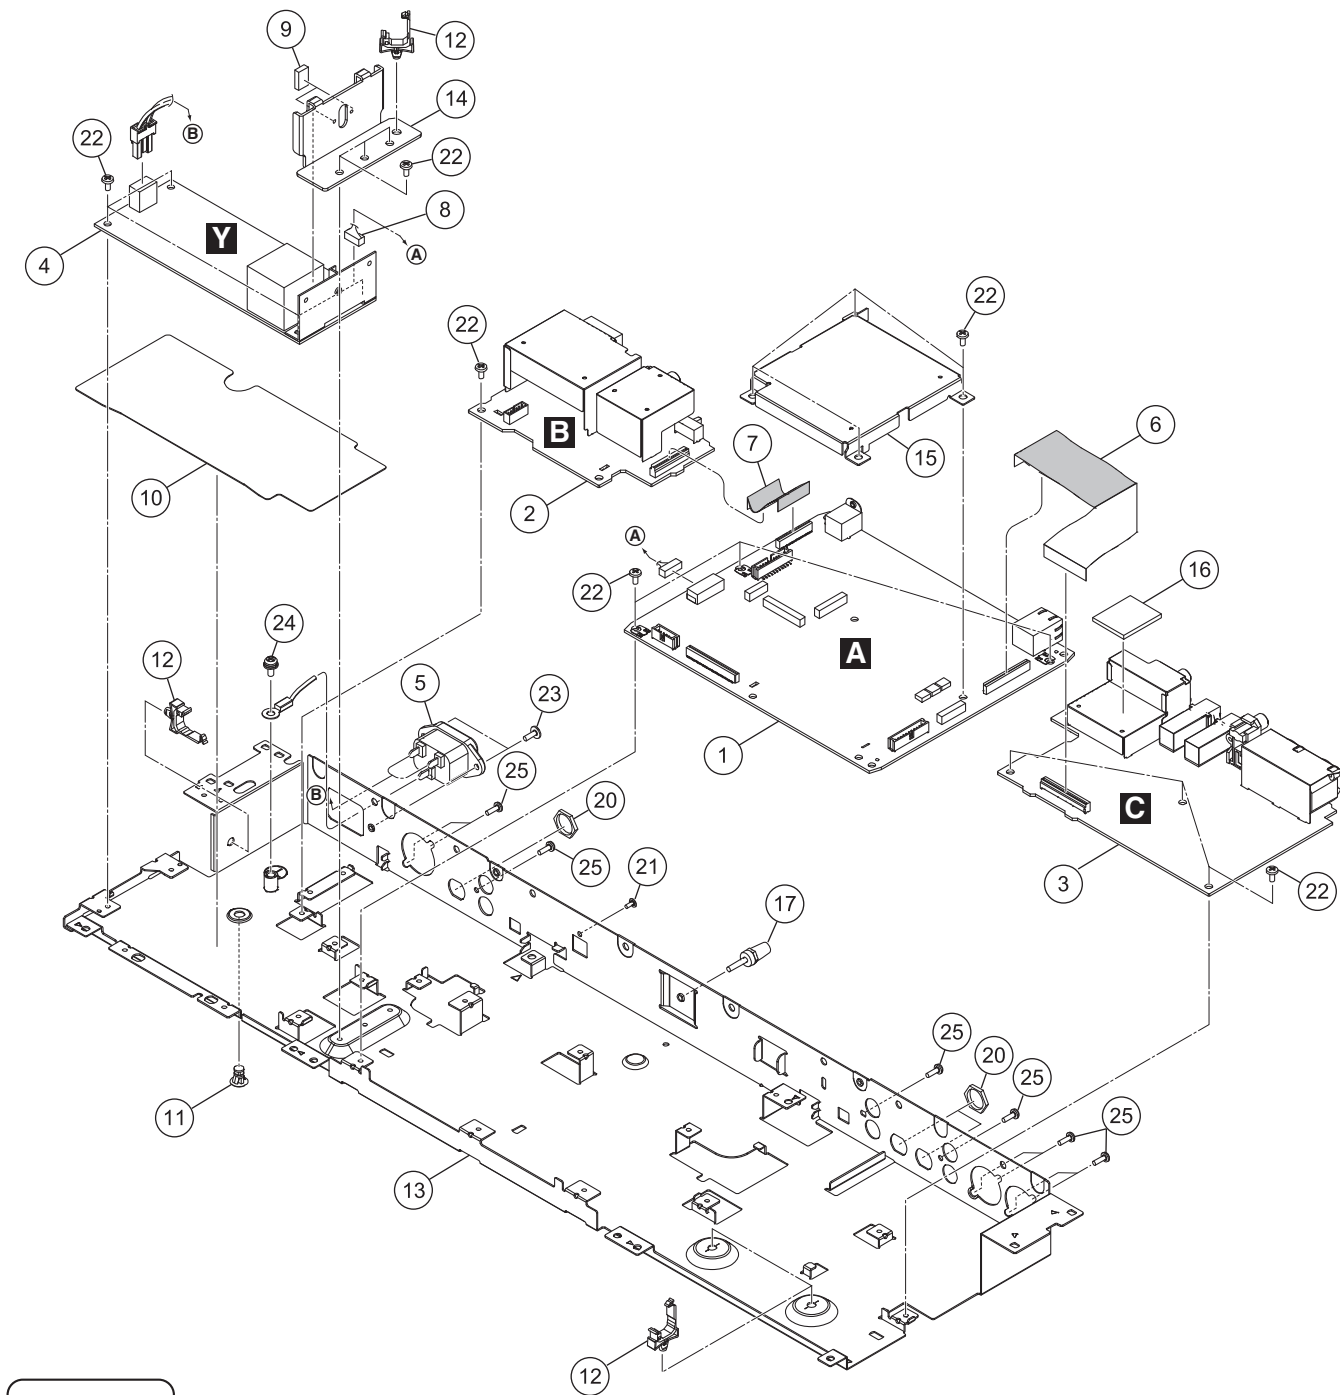

CHASSIS SECTION PARTS LIST

| Mark No. | Description          | Part No.     |   |
|----------|----------------------|--------------|---|
|          | 1 MAIN Assy          | DWX3590      |   |
|          | 2 JACK1 Assy         | DWX3615      | A |
|          | 3 JACK2 Assy         | DWX3616      |   |
| ⚠        | 4 POWER SUPPLY Assy  | DWR1463      |   |
| ⚠        | 5 AC Inlet/3P        | DKP3961      |   |
|          | 6 FFC/31P            | DDD1685      | ■ |
|          | 7 FFC                | DDD1694      |   |
|          | 8 Crimp Connector/6P | DKP3963      |   |
|          | 9 Heat Cond Sheet    | DEB2001      |   |
|          | 10 Sheet             | DEC3591      |   |
|          | 11 Spacer/PCB        | DEC3574      | B |
|          | 12 Cord Clamper      | DEC3579      |   |
|          | 13 Stay/PCB          | DNH3183      |   |
|          | 14 Heat Sink/AL      | DNH3195      |   |
|          | 15 Shield Case/MAI   | DNH3181      | ■ |
|          | 16 Cushion           | DEC3592      |   |
|          | 17 Terminal Screw    | AKE-031      |   |
|          | 18 ●●●●●             |              |   |
|          | 19 ●●●●●             |              |   |
|          | 20 Nut (M12)         | NKX2FNI      | C |
|          | 21 Screw (M3*5)      | DBA1340      |   |
|          | 22 Screw             | BBZ30P060FTC |   |
|          | 23 Screw             | IBZ30P080FTB |   |
|          | 24 Screw             | PMH40P080FTC | ■ |
|          | 25 Screw             | PPZ30P080FTB |   |

D

E

F

## 9.4 CONTROL PANEL SECTION (1/3)

A


B

C

D

E

F

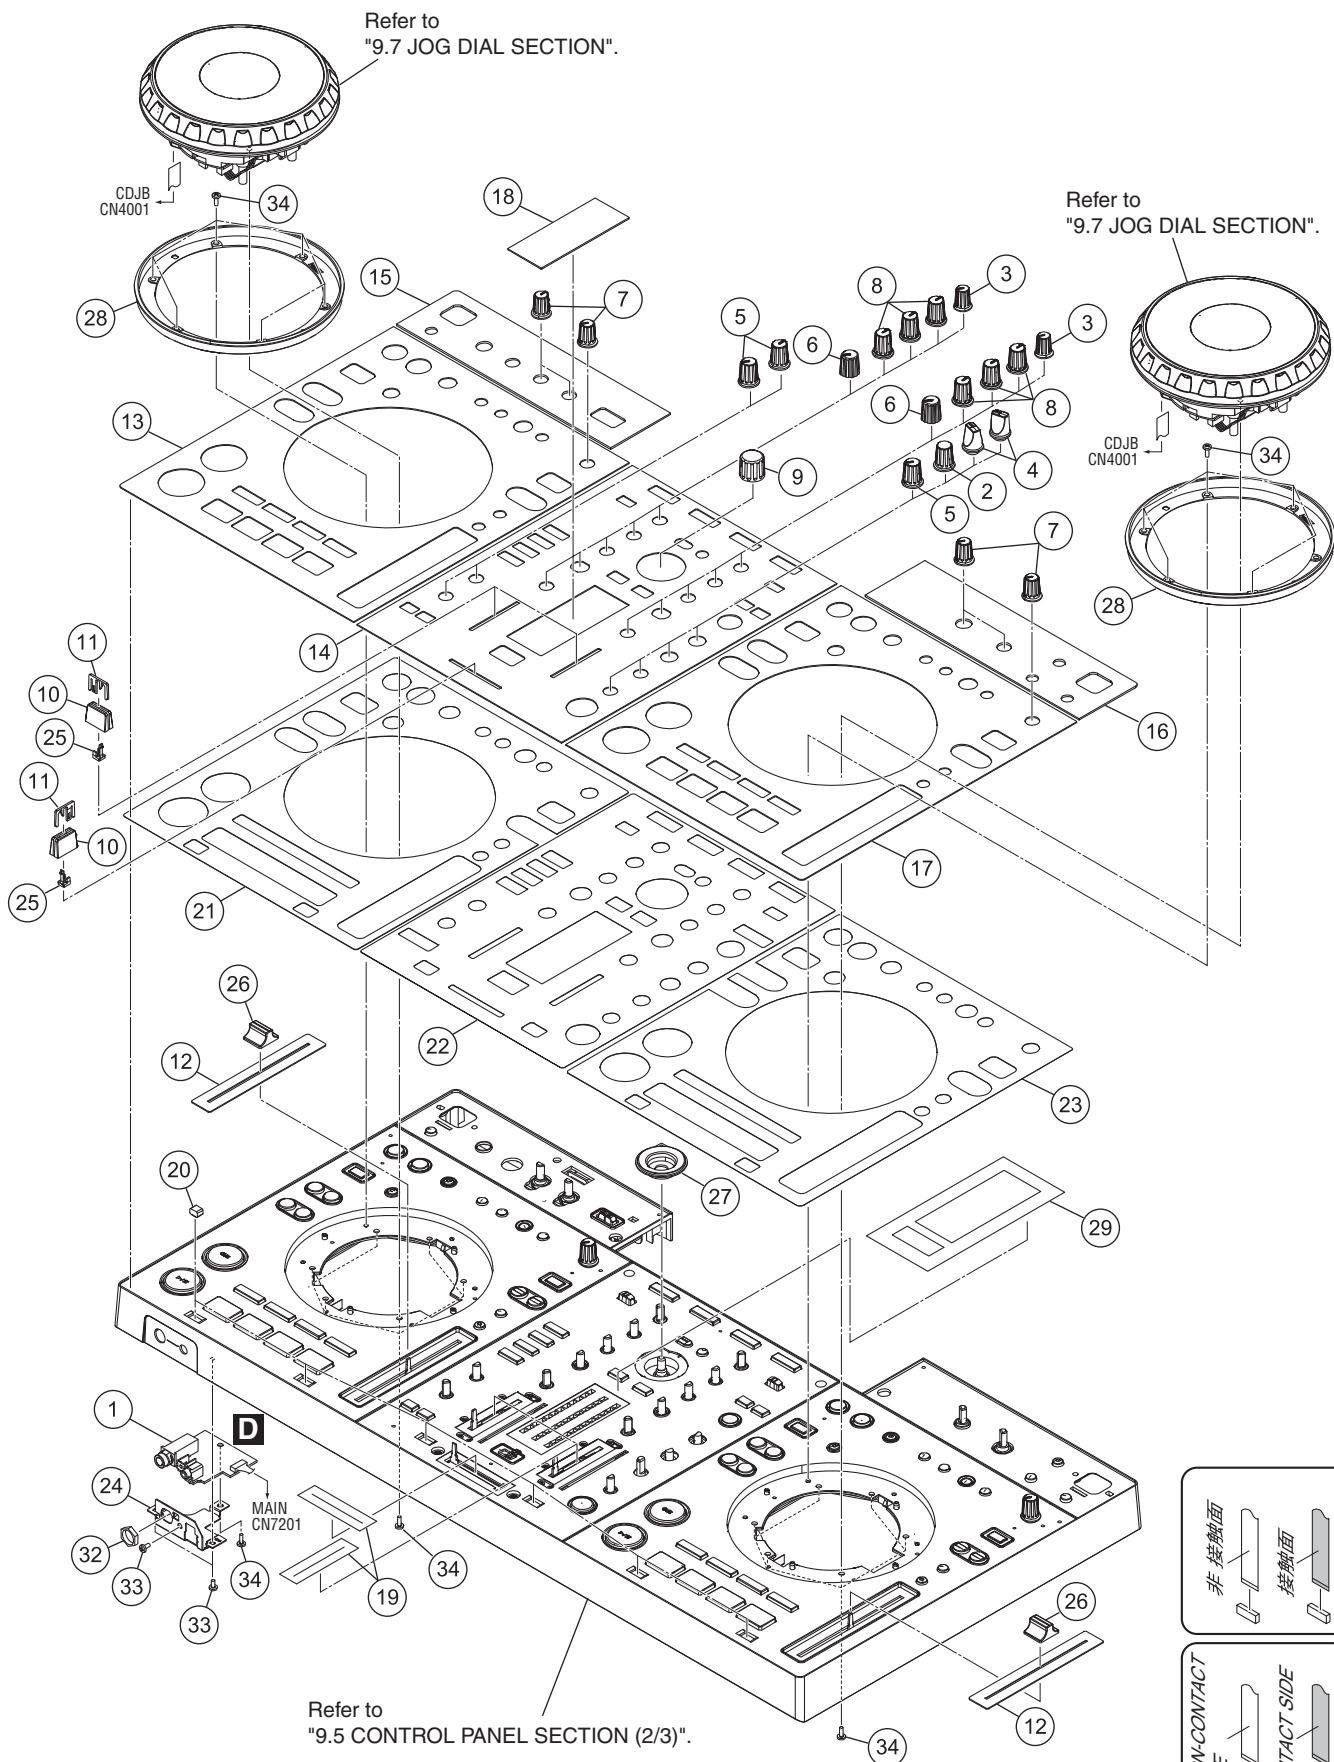

CONTROL PANEL SECTION (1/3) SECTION PARTS LIST


| Mark No. | Description          | Part No.     |   |
|----------|----------------------|--------------|---|
| 1        | HPJB Assy            | DWX3633      |   |
| 2        | Rotary SW Knob (C)   | DAA1180      | A |
| 3        | Rotary SW Knob S (C) | DAA1204      |   |
| 4        | FX SEL Knob          | DAA1213      |   |
| 5        | Rotary Knob (BN)     | DAA1220      |   |
| 6        | Knob/CL              | DAA1320      | ■ |
| 7        | Knob/LBK             | DAA1284      |   |
| 8        | Knob/RSW             | DAA1305      |   |
| 9        | Knob/BRS             | DAA1342      |   |
| 10       | Slider Knob 1        | DAC2684      |   |
| 11       | Slider Knob 2        | DAC2685      | B |
| 12       | Slide Sheet 1C       | DAH2404      |   |
| 13       | Plate/DC1            | DAH3009      |   |
| 14       | Plate/MIX            | DAH3010      |   |
| 15       | Panel/PM1            | DAH3011      | ■ |
| 16       | Panel/PM2            | DAH3012      |   |
| 17       | Plate/DC2            | DAH3014      |   |
| 18       | Panel/LVL            | DAH3016      |   |
| 19       | Fader Packing        | DEC3355      |   |
| 20       | Gasket/JOG           | DEC3562      | C |
| 21       | DS Tape/DC1          | DEH1061      |   |
| 22       | DS Tape/MIX          | DEH1062      |   |
| 23       | DS Tape/DC2          | DEH1063      |   |
| 24       | Stay/HP              | DNH3182      |   |
| 25       | Slider Knob Stopper  | DNK5888      | ■ |
| 26       | Knob/SLD             | DNK5981      |   |
| 27       | Ring/BRS             | DNK6312      |   |
| 28       | Ring/JOG             | DNK6396      |   |
| 29       | DS Tape              | DEH1066      | D |
| 30       | .....                |              |   |
| 31       | .....                |              |   |
| 32       | Nut M12              | DBN1018      |   |
| 33       | Screw                | BBZ30P060FTC | ■ |
| 34       | Screw                | BPZ30P080FNI |   |


E

F

## 9.5 CONTROL PANEL SECTION (2/3)

A • Bottom view

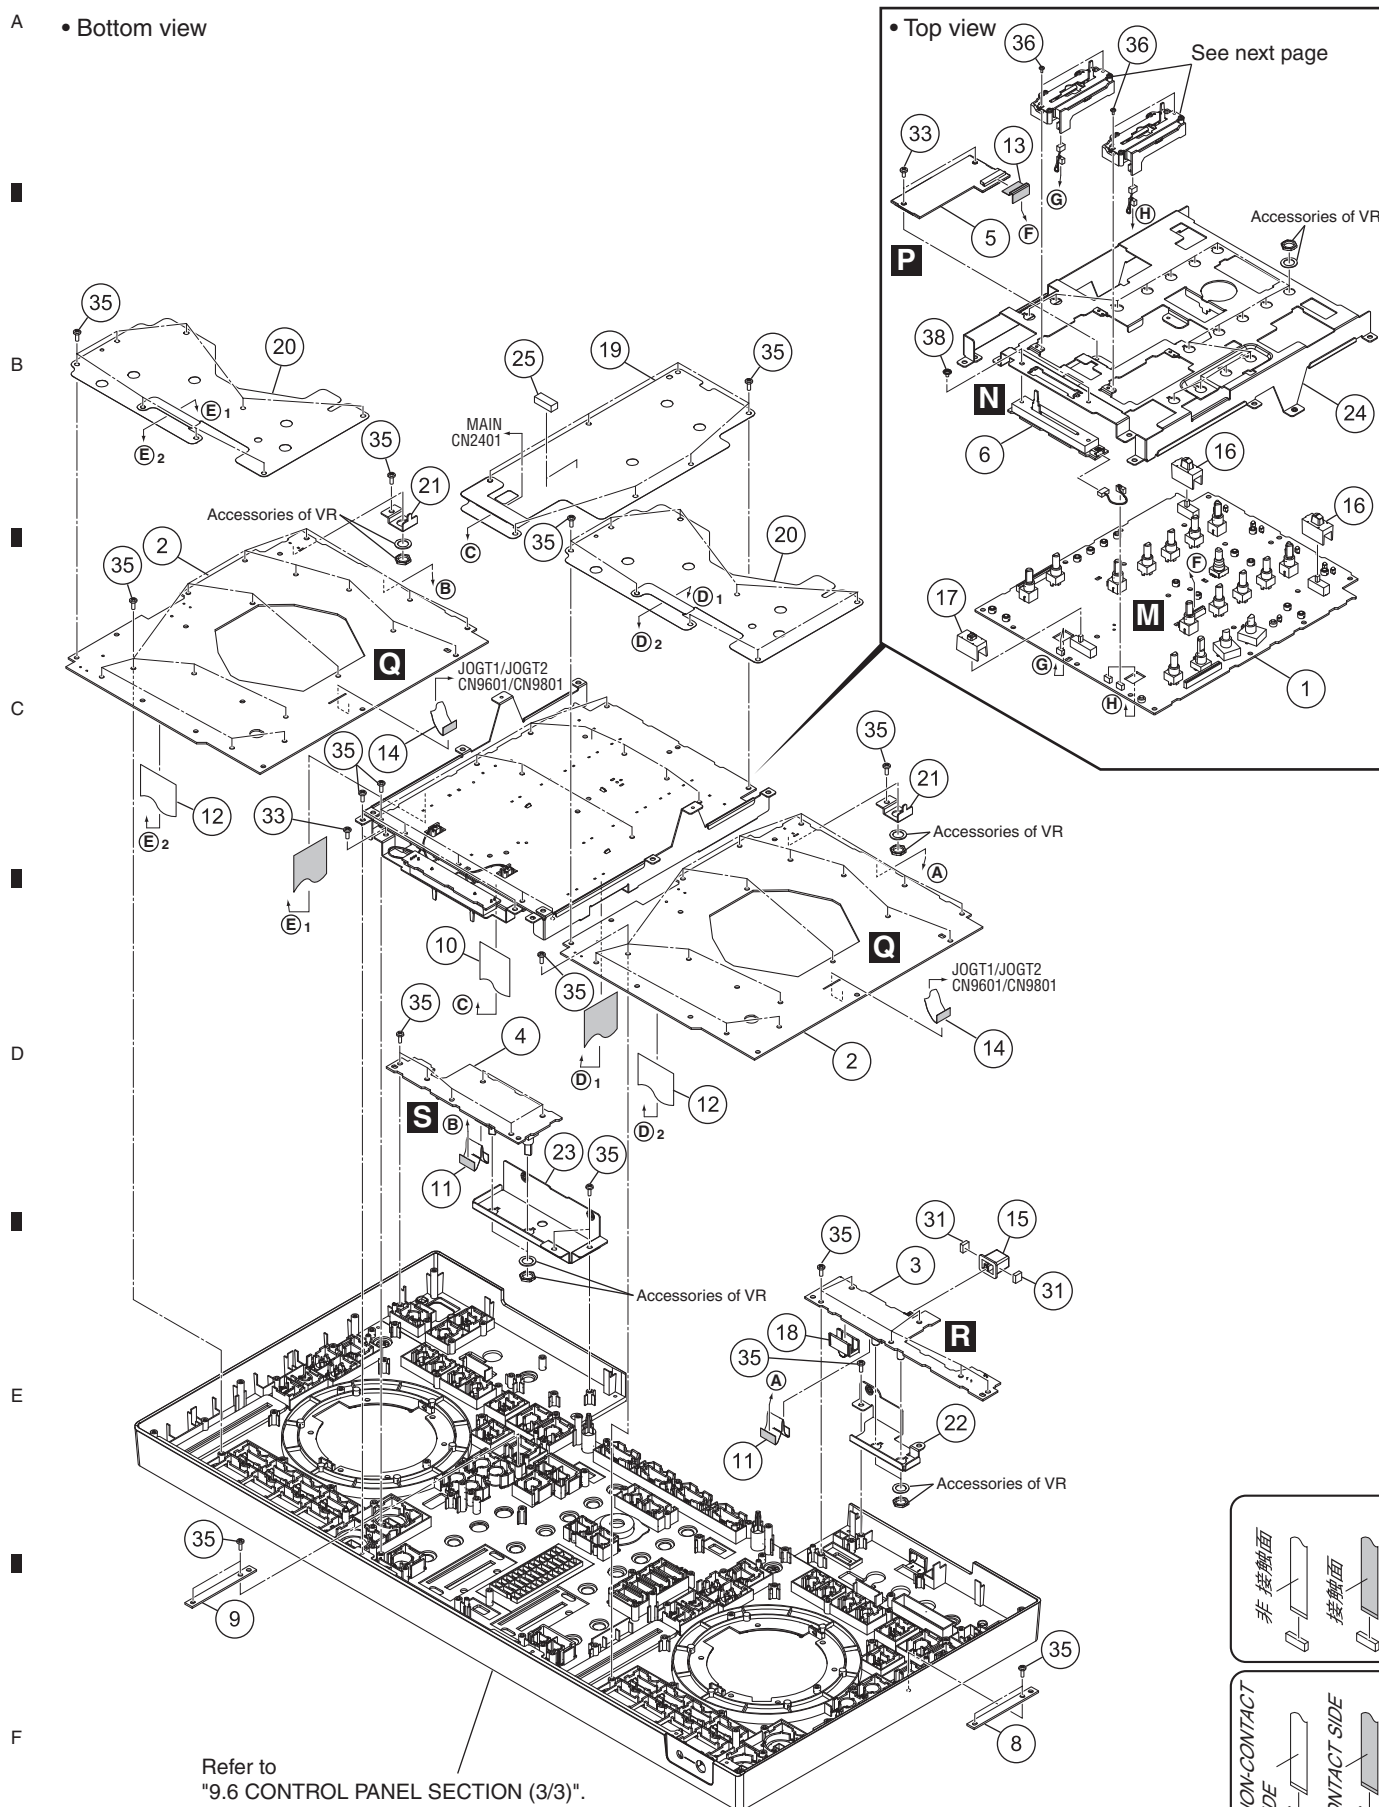


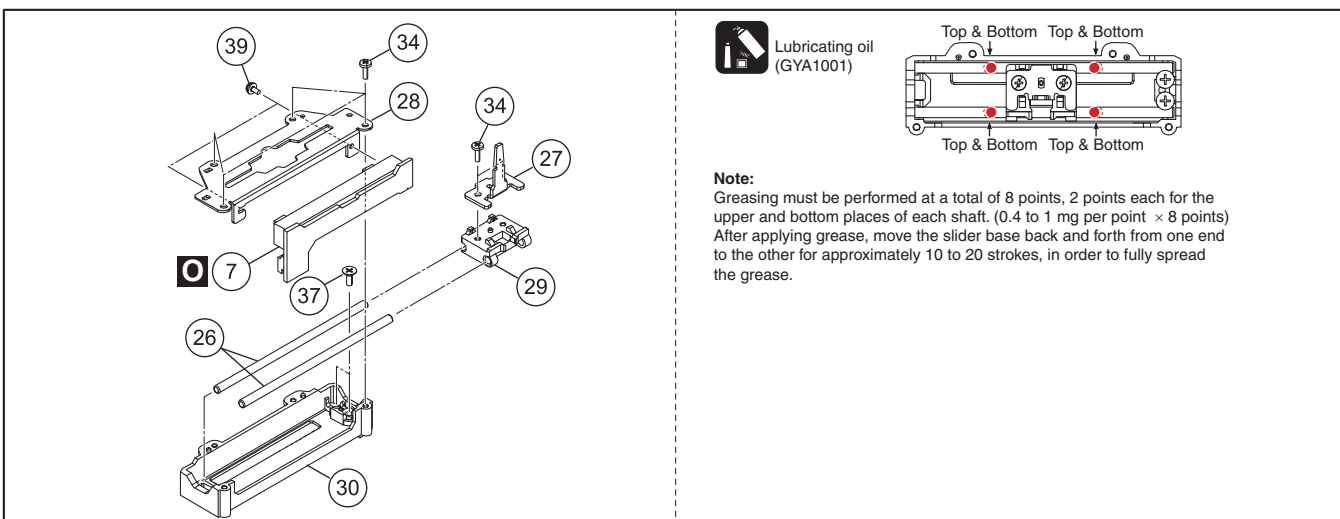

## CONTROL PANEL SECTION (2/3) SECTION PARTS LIST

| Mark No. | Description      | Part No. | Mark No. | Description      | Part No.     |
|----------|------------------|----------|----------|------------------|--------------|
| 1        | MIXB Assy        | DWX3613  | NSP 26   | Guide Shaft (S)  | DLA1918      |
| 2        | CDJB Assy        | DWX3614  | 27       | Lever Plate      | DNH2954      |
| 3        | PNL1 Assy        | DWX3628  | 28       | VR Stay          | DNH2955      |
| 4        | PNL2 Assy        | DWX3629  | 29       | Slider Base      | DNK5851      |
| 5        | LLED Assy        | DWX3638  | 30       | Shaft Holder     | DNK5852      |
| 6        | CRFB Assy        | DWX3626  | 31       | Insulation Sheet | DEC3594      |
| 7        | CHF1 Assy        | DWX3624  | 32       | •••••            |              |
| 8        | HLD1 Assy        | DWX3645  | 33       | Screw            | BBZ30P060FTC |
| 9        | HLD2 Assy        | DWX3646  | 34       | Screw            | BPZ20P060FTC |
| 10       | FFC/35P          | DDD1683  | 35       | Screw            | BPZ30P080FNI |
| 11       | FFC/17P          | DDD1684  | 36       | Screw            | BSZ20P040FTB |
| 12       | FFC/39P          | DDD1687  | 37       | Screw            | CPZ26P080FTC |
| 13       | FFC/19P          | DDD1689  | 38       | Screw            | IMZ30P040FTC |
| 14       | FFC/15P          | DDD1691  | 39       | Screw            | PMH20P040FTC |
| 15       | Power Knob       | DAC2306  |          |                  |              |
| 16       | Slide SW Cap     | DAC2400  |          |                  |              |
| 17       | Slide SW Cap (W) | DAC2401  |          |                  |              |
| 18       | SW Cap           | DAC2753  |          |                  |              |
| 19       | Barrier/1        | DEC3563  |          |                  |              |
| 20       | Barrier/2        | DEC3572  |          |                  |              |
| 21       | VR Stay S        | DNH2964  |          |                  |              |
| 22       | Stay/MC2         | DNH3189  |          |                  |              |
| 23       | Stay/MST         | DNH3190  |          |                  |              |
| 24       | Stay/VR          | DNH3191  |          |                  |              |
| 25       | FFC Cushion      | DEC3248  |          |                  |              |

## 9.6 CONTROL PANEL SECTION (3/3)

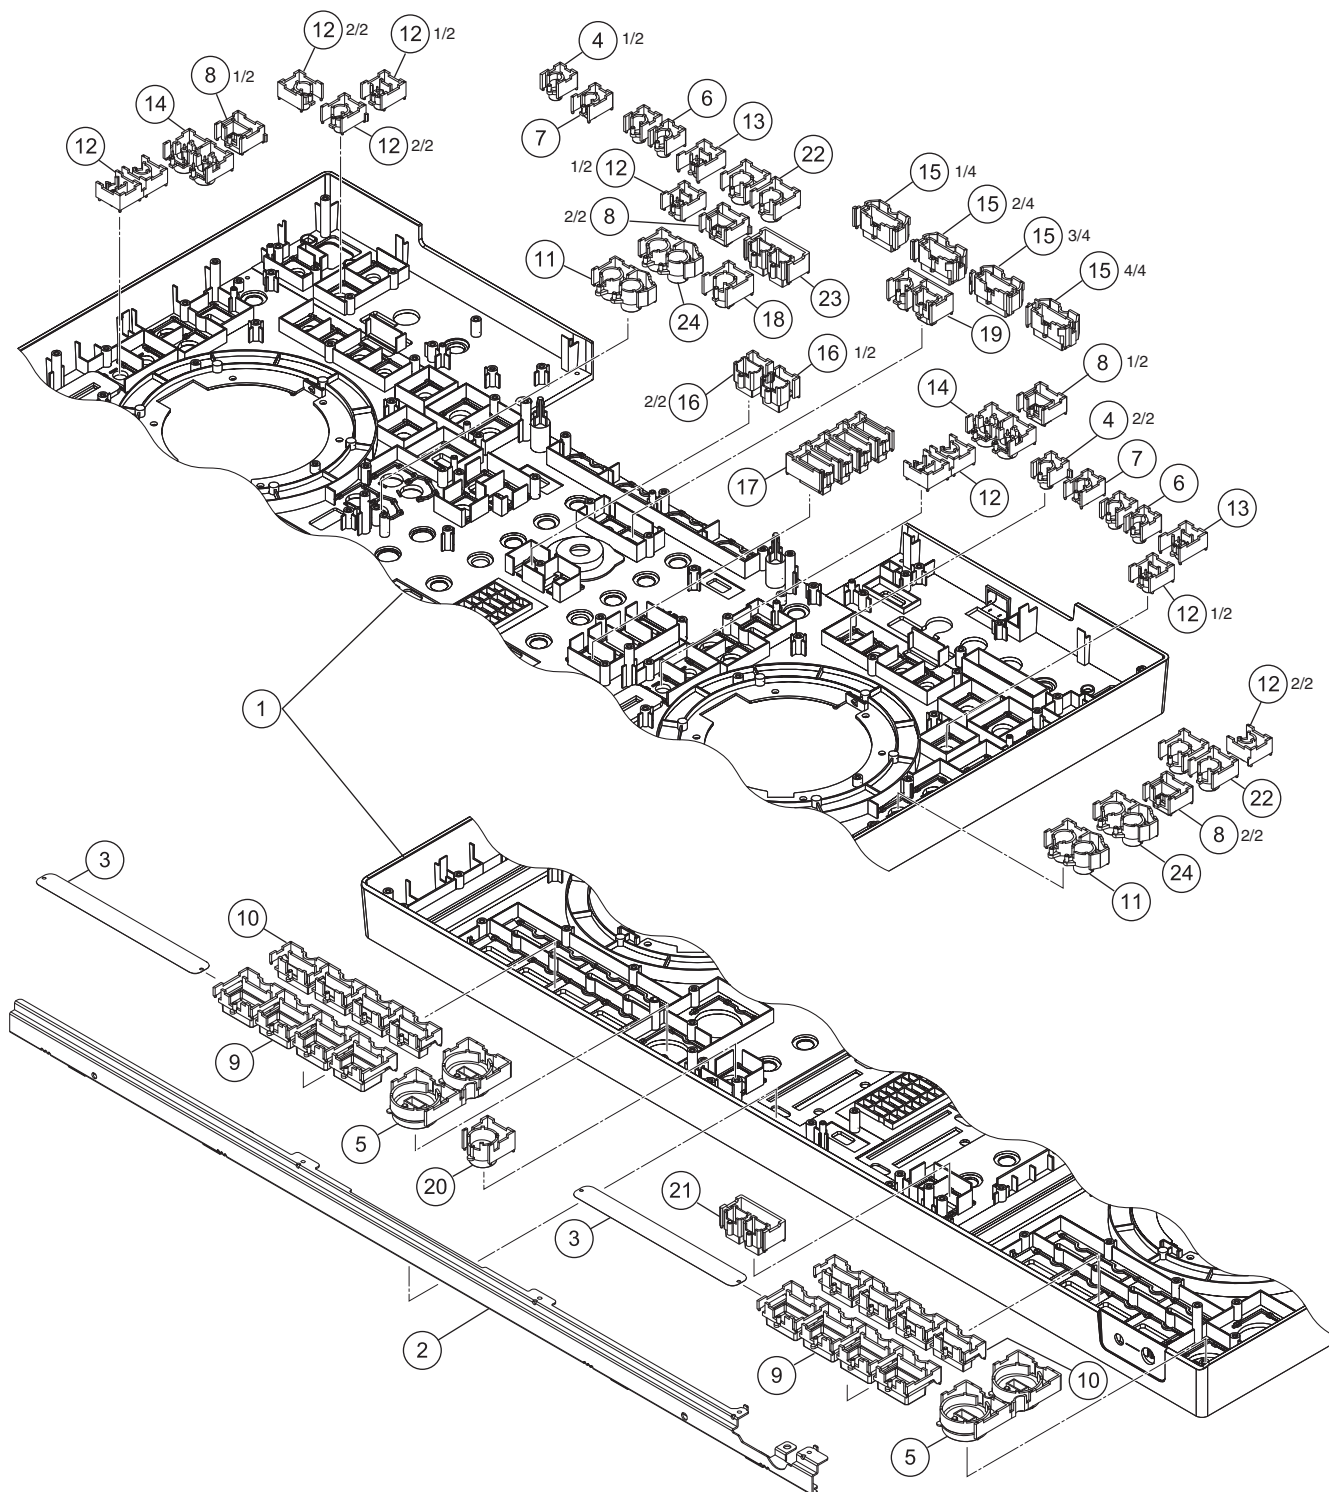


# CONTROL PANEL SECTION (3/3) SECTION PARTS LIST

| Mark No. | Description   | Part No. |   |
|----------|---------------|----------|---|
| 1        | Control Panel | DNK6393  |   |
| 2        | Frame/FRT     | DNH3187  | A |
| 3        | Diffuser/BTN  | DEC3582  |   |
| 4        | Button/TMP    | DAC2845  |   |
| 5        | Button/PLY    | DAC3018  |   |
| 6        | Button/CAL    | DAC3020  |   |
| 7        | Button/DLT    | DAC3021  |   |
| 8        | Button/RVL    | DAC3023  |   |
| 9        | Button/HC     | DAC3026  |   |
| 10       | Button/SEL    | DAC3027  |   |
| 11       | Button/SRC    | DAC3028  | B |
| 12       | Button/MT     | DAC3029  |   |
| 13       | Button/REL    | DAC3030  |   |
| 14       | Button/SYN    | DAC3032  |   |
| 15       | Button/MOD    | DAC3035  |   |
| 16       | Button/LOD    | DAC3036  |   |
| 17       | Button/COL    | DAC3037  |   |
| 18       | Button/TAP    | DAC3038  |   |
| 19       | Button/BAC    | DAC3039  |   |
| 20       | Button/EF     | DAC3040  | C |
| 21       | Button/HPC    | DAC3073  |   |
| 22       | Button/LOP    | DAC3074  |   |
| 23       | Button/BEF    | DAC3075  |   |
| 24       | Button/TSR    | DAC3076  |   |
|          |               |          | D |
|          |               |          |   |
|          |               |          | E |
|          |               |          |   |
|          |               |          | F |

△

E

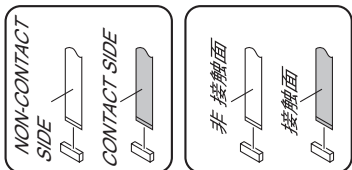

This exploded view diagram illustrates the assembly of a circular mechanical component, likely a fan or a light fixture. The parts are numbered as follows:

- 8**: Top circular cover plate.
- 16**: Middle circular ring or frame.
- 9**: Small circular disc or gasket.
- 14**: Small rectangular component, possibly a switch or sensor.
- 20**: Large circular base with a flange and mounting holes.
- 10**: Circular disc or gasket.
- 15**: Circular disc or gasket.
- 30**: Small screw or fastener.
- 12**: L-shaped bracket or support arm.
- 21**: Central hub or motor assembly.
- 28**: Small circular component, possibly a bearing or seal.
- 13**: Thick circular ring or frame.
- 18**: Thin circular ring or frame.
- 6**: Circular disc or gasket.
- 3 or 4**: Small circular component, possibly a bearing or seal.
- 22**: Central hub or motor assembly.
- 23**: Circular disc or gasket.
- W or X**: Label indicating a choice between two configurations for the central hub/motor assembly.

The diagram shows the relative positions and assembly sequence of these components, with dashed lines indicating the alignment and fit of the parts.



JOG DIAL SECTION PARTS LIST

| Mark No. | Description     | Part No.      |   |
|----------|-----------------|---------------|---|
| 1        | JOGT1 Assy      | DWX3618       |   |
| 2        | JOGT2 Assy      | DWX3631       | A |
| 3        | JLED1 Assy      | DWX3617       |   |
| 4        | JLED2 Assy      | DWX3630       |   |
| 5        | JOGR1 Assy      | DWX3619       |   |
| 6        | FFC/6P          | DDD1690       | ■ |
| 7        | Earth Lead Unit | DE005VC0      |   |
| 8        | Plate/JOG       | DAH3002       |   |
| 9        | Window/JOG      | DAH3003       |   |
| 10       | Window          | DAH3004       |   |
| 11       | Leaf Spring/1   | DBK1383       | B |
| 12       | Leaf Spring/2   | DBK1384       |   |
| 13       | Slit/JOG        | DEC3515       |   |
| 14       | Gasket/JOG      | DEC3562       |   |
| 15       | Diffuser/LED    | DEC3575       | ■ |
| 16       | DS Tape/JOG     | DEH1058       |   |
| 17       | Stay/LED        | DNH3167       |   |
| 18       | Bracket/SLT     | DNH3168       |   |
| 19       | Holder/JOG      | DNK6371       |   |
| 20       | JOG Dial/OUT    | DNK6372       | C |
| 21       | JOG Dial/IN     | DNK6373       |   |
| 22       | Holder/LED      | DNK6374       |   |
| 23       | Spacer/LED      | DNK6375       |   |
| 24       | .....           |               | ■ |
| 25       | .....           |               |   |
| 26       | Nut             | NA80FTC       |   |
| 27       | Spring Washer   | WN80FTC       |   |
| 28       | Washer          | WA154D225D050 |   |
| 29       | Washer          | YC150FAC      | D |
| 30       | Screw           | BPZ20P060FTC  |   |
| 31       | Screw           | BPZ30P080FNI  | ■ |

1 2 3 4

# 9.8 LCD SECTION

A • Bottom view

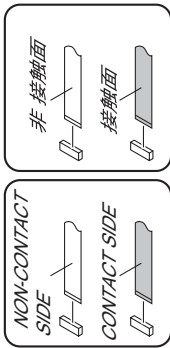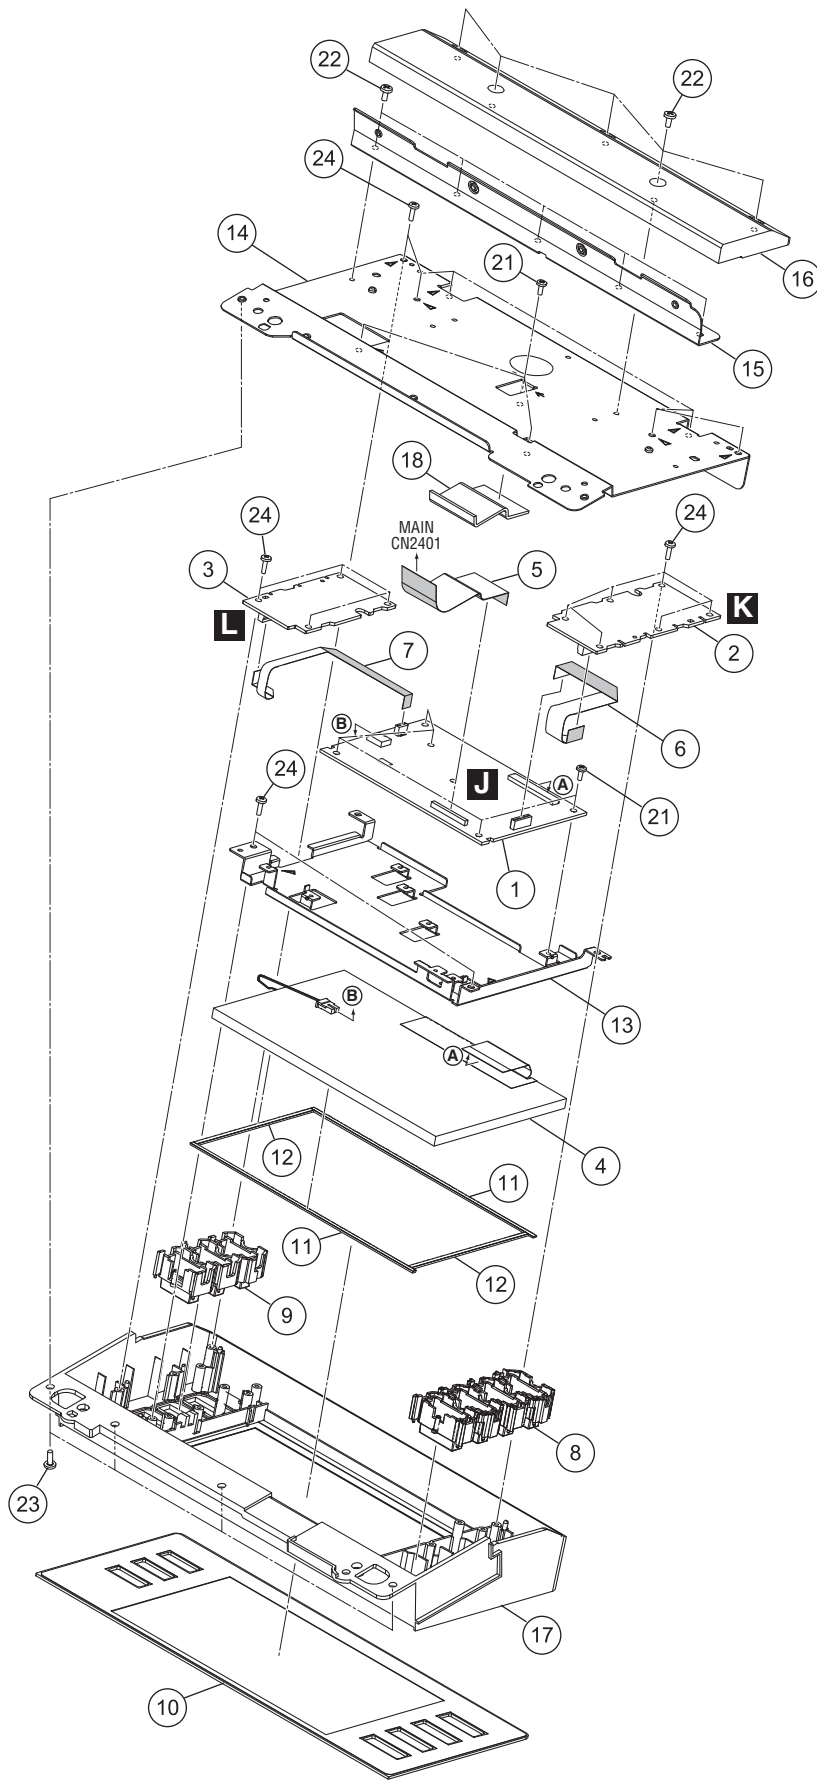

LCD SECTION PARTS LIST

| Mark No. | Description          | Part No.     |
|----------|----------------------|--------------|
| 1        | EXTB Assy            | DWX3622      |
| 2        | DPNL1 Assy           | DWX3634      |
| 3        | DPNL2 Assy           | DWX3635      |
| 4        | TFT LCD              | CWX4352      |
| 5        | FFC/50P              | DDD1686      |
| 6        | FFC/11P              | DDD1692      |
| 7        | FFC/5P               | DDD1693      |
| 8        | Button/DIV           | DAC3041      |
| 9        | Button/TIM           | DAC3042      |
| 10       | Window/LCD           | DAH3008      |
| 11       | Packing/L            | DEC3568      |
| 12       | Packing/S            | DEC3569      |
| 13       | Stay/LCD             | DND1282      |
| 14       | Bracket/LCD          | DND1283      |
| 15       | Angle/LCD            | DNH3186      |
| 16       | Panel/BTM            | DNK6388      |
| 17       | Panel/LCD            | DNK6389      |
| 18       | Insulating Sheet/LCD | DEC3583      |
| 19       | .....                |              |
| 20       | .....                |              |
| 21       | Screw                | BBZ26P060FTB |
| 22       | Screw                | BBZ30P060FTB |
| 23       | Screw                | BBZ30P080FTC |
| 24       | Screw                | BPZ26P080FTC |

A

B

C

D

E

F

# 12. PCB PARTS LIST

- NOTES: ● Parts marked by “NSP” are generally unavailable because they are not in our Master Spare Parts List.  
 ● The  $\triangle$  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.  
 ● When ordering resistors, first convert resistance values into code form as shown in the following examples.

Ex.1 When there are 2 effective digits (any digit apart from 0), such as 560 ohm and 47 k ohm (tolerance is shown by J = 5%, and K = 10%).

560  $\Omega$   $\rightarrow$   $56 \times 10^1$   $\rightarrow$  561 ..... RD1/4PU  $\begin{bmatrix} 5 \\ 6 \end{bmatrix} \begin{bmatrix} 1 \\ 0 \end{bmatrix} J$   
 47 k $\Omega$   $\rightarrow$   $47 \times 10^3$   $\rightarrow$  473 ..... RD1/4PU  $\begin{bmatrix} 4 \\ 7 \end{bmatrix} \begin{bmatrix} 3 \\ 0 \end{bmatrix} J$   
 0.5  $\Omega$   $\rightarrow$  R50 ..... RN2H  $\begin{bmatrix} R \\ 5 \end{bmatrix} \begin{bmatrix} 0 \\ 0 \end{bmatrix} K$   
 1  $\Omega$   $\rightarrow$  1R0 ..... RSIP  $\begin{bmatrix} 1 \\ R \end{bmatrix} \begin{bmatrix} 0 \\ 0 \end{bmatrix} K$

Ex.2 When there are 3 effective digits (such as in high precision metal film resistors).

5.62 k $\Omega$   $\rightarrow$   $562 \times 10^1$   $\rightarrow$  5621 ..... RN1/4PC  $\begin{bmatrix} 5 \\ 6 \end{bmatrix} \begin{bmatrix} 2 \\ 1 \end{bmatrix} F$

Mark No. Description Part No.

## LIST OF ASSEMBLIES

|             |                      |         |
|-------------|----------------------|---------|
| NSP         | 1..EXTA ASSY         | DWM2548 |
|             | 2..JLED1 ASSY        | DWX3617 |
|             | 2..JOGT1 ASSY        | DWX3618 |
|             | 2..USB1 ASSY         | DWX3620 |
|             | 2..USB2 ASSY         | DWX3621 |
|             | 2..EXTB ASSY         | DWX3622 |
|             | 2..JLED2 ASSY        | DWX3630 |
|             | 2..JOGT2 ASSY        | DWX3631 |
|             | 2..USBP1 ASSY        | DWX3636 |
|             | 2..USBP2 ASSY        | DWX3637 |
|             | 2..LLED ASSY         | DWX3638 |
|             | 2..HLD1 ASSY         | DWX3645 |
|             | 2..HLD2 ASSY         | DWX3646 |
| NSP         | 1..CDJA ASSY         | DWM2549 |
|             | 2..CDJB ASSY         | DWX3614 |
|             | 2..JOGR1 ASSY        | DWX3619 |
|             | 2..CHF1 ASSY         | DWX3624 |
|             | 2..HLD3 ASSY         | DWX3647 |
| NSP         | 1..MIXA ASSY         | DWM2550 |
|             | 2..MIXB ASSY         | DWX3613 |
|             | 2..MICT ASSY         | DWX3623 |
|             | 2..CRFB ASSY         | DWX3626 |
| NSP         | 1..TRMA ASSY         | DWM2551 |
|             | 2..JACK1 ASSY        | DWX3615 |
|             | 2..JACK2 ASSY        | DWX3616 |
|             | 2..PNL1 ASSY         | DWX3628 |
|             | 2..PNL2 ASSY         | DWX3629 |
|             | 2..HPJB ASSY         | DWX3633 |
|             | 2..DPNL1 ASSY        | DWX3634 |
|             | 2..DPNL2 ASSY        | DWX3635 |
|             | 1..MAIN ASSY         | DWX3590 |
| $\triangle$ | 1..POWER SUPPLY ASSY | DWR1463 |

Mark No. Description Part No.

|             |                        |                  |
|-------------|------------------------|------------------|
| $\triangle$ | IC 602                 | MMPF0100F0AEP    |
|             | IC 1001                | MCIMX6U6AVM08AC  |
|             | IC 1201,1301           | K4B1G1646G-BCK0  |
|             | IC 1401                | LAN8720A-CP      |
| NSP         | IC 1501                | DYW1864 (*)      |
| Note (*)    | first release          |                  |
|             | IC 1551                | H337S3959        |
|             | IC 1801                | USB2512B-AEZG-TR |
|             | IC 2201                | TC7SZU04FUS1     |
|             | IC 2202                | TC7WHU04FK       |
|             | IC 2203                | TC7SZ08FUS1      |
|             | IC 7001                | AK4382AVT        |
|             | IC 7002-7004,7702      | NJM4580MD        |
|             | IC 7201,7701           | AK4387ET         |
|             | IC 7202,7401,7402,7601 | NJM4565MD        |
|             | IC 7405,7406,7602      | AK5358AET        |
|             | Q 103,1701,1702        | LTC024EEB        |
|             | Q 301-305,307,309      | LSAR523UB        |
|             | Q 306,308              | LSC4081UB        |
|             | Q 310                  | LTC124EUB        |
|             | Q 401                  | RSR020P05        |
|             | Q 402                  | RTQ045N03        |
|             | Q 403,404              | RSQ030P03        |
|             | Q 1601                 | RT3T22M          |
|             | Q 7001,7002            | LTA114EUB        |
|             | Q 7003-7010            | INC2002AC1       |
|             | Q 7019,7020            | LSCR523UB        |
|             | Q 7022                 | LSAR523UB        |
|             | Q 7201,7206            | IMX25            |
|             | Q 7202,7204            | 2SD1767          |
|             | Q 7203,7205            | 2SB1189          |
|             | D 401-405              | DB2J41100        |
|             | D 409,410              | RB501VM-40       |
|             | D 601                  | RB160M-60        |
|             | D 7201,7202            | DA2J101          |
|             | D 7401-7404,7601,7602  | DAN217UM         |

## MISCELLANEOUS

|               |                     |         |
|---------------|---------------------|---------|
| L 101         | SMD SPL INDUCTOR    | CTH1524 |
| L 106         | INDUCTOR            | CTH1253 |
| L 401,402,405 | POWER INDUCTOR      | ATH7011 |
| L 403,404     | CHIP SOLID INDUCTOR | XTL3010 |
| L 406         | POWER INDUCTOR      | ATH7011 |
| L 407,408     | CHIP SOLID INDUCTOR | XTL3010 |
| L 601-608     | SMD SPL INDUCTOR    | CTH1530 |
| L 1501        | INDUCTOR            | CTF1629 |

Mark No. Description Part No.

## A MAIN ASSY SEMICONDUCTORS

|             |            |               |
|-------------|------------|---------------|
| $\triangle$ | IC 102,105 | BD9328EFJ     |
| $\triangle$ | IC 401,402 | BD9851EFV     |
| $\triangle$ | IC 403     | NJM2886DL3-05 |

**Mark No. Description****Part No.****Mark No. Description****Part No.**

L 1601 INDUCTOR  
F 1401 EMI FILTER  
F 1402 EMI FILTER  
JA 1401 RJ45 CONNECTOR  
JA 1601 USB CONNECTOR  
KN 401-403 WRAPPING TERMINAL  
X 1801,2203 RESONATOR (24 MHz)

CTF1713  
CCG1352  
DTL1106  
AKN7115  
DKN1237  
CKF1089  
CSS1808

R 611,614  
R 618,633,634,1007  
R 631,632,7243,7254  
R 1008,1205,1302  
R 1203,1204,7217,7218

RS1/16SS6802F  
RS1/10SR0R0J  
RS1/4SA0R0J  
RS1/16SS2400F  
RS1/10SR102J

X 2201 RESONATOR (32.768 kHz)  
X 2202 CRYSTAL(22.579 2MHz)  
CN 101 XH CONNECTOR (6P)  
CN 1801,1802 CONNECTOR  
CN 2401 FFC/FPC CONNECTOR

CSS1807  
DSS1202  
DKN1599  
AKM1282  
DKP3953

R 1206,1303  
R 1414,1422  
R 1443  
R 1444  
R 1445-1448

RS1/16SS1000D  
RAB4CQ680J  
RS1/16SS1002D  
RS1/16SS1501F  
RS1/10SR49R9F

CN 2402 35P CONNECTOR  
CN 2403 31P CONNECTOR  
CN 2404 23P CONNECTOR  
CN 7201 CONNECTOR

VKN1439  
VKN1435  
VKN1427  
AKM1277

R 1449-1456,1551,1615  
R 1503,1504  
R 1622-1624,1821,1822  
R 1715,1716  
R 1818

RS1/10SR0R0J  
RAB4CQ220J  
RS1/10SR0R0J  
RAB4CQ470J  
RS1/16SS1202F

⚠ P 101 PROTECTOR (0.500 A)

DEK1120

R 1824,1826  
R 1825,1827,1828,1830  
R 2026-2029  
R 2031,2036,2041,2046  
R 2209,2212,7017,7094

RS1/8SQ0R0J  
RS1/10SR0R0J  
RAB4CQ472J  
RAB4CQ103J  
RS1/10SR0R0J

VA 1601,1602 SMD VARISTOR

EZJZ0V80010

**RESISTORS**

R 101,103,423,424  
R 113,114  
R 115  
R 117  
R 128,411,413

RS1/4SA0R0J  
RS1/16SS1502D  
RS1/16SS8201D  
RS1/4SA561J  
RS1/10SR220J

R 7009,7010,7421-7424  
R 7011,7012  
R 7013,7014  
R 7015,7016  
R 7018,7019,7028,7029

RS1/10SR1001D  
RS1/10SR1202D  
RN1/16SE2702D  
RS1/10SR1500D  
RS1/10SR513J

R 129,402,406,418  
R 130  
R 131  
R 133  
R 135,412,436

RS1/10SR1002D  
RS1/10SR4702D  
RS1/10SR8200D  
RS1/10SR683J  
RS1/10SR472J

R 7020-7027,7215,7216  
R 7030-7037,7046-7053  
R 7062-7069,7074-7081  
R 7082-7085  
R 7086-7089

RS1/10SR6801D  
RN1/16SE6802D  
RS1/8SQ1800F  
RS1/10SR223J  
RS1/8SQ2200F

R 307,7070-7073  
R 308,440  
R 311,316  
R 312,317,1809,1816  
R 313,318,321

RS1/10SR223J  
RS1/10SR103J  
RS1/10SR333J  
RS1/10SR473J  
RS1/10SR332J

R 7090-7093  
R 7095,7122,7127,7129  
R 7130,7135,7248-7250  
R 7207,7208  
R 7209,7210,7401-7404

RS1/10SR1002D  
RS1/10SR0R0J  
RS1/10SR0R0J  
RS1/10SR104J  
RS1/10SR3301D

R 319  
R 323  
R 324  
R 325,450,607,615  
R 401,410,425

RS1/10SR562J  
RS1/10SR272J  
RS1/10SR682J  
RS1/10SR0R0J  
RS1/10SR1502D

R 7211,7212,7417-7420  
R 7213,7214  
R 7224,7228  
R 7405-7408  
R 7427,7428,7445-7448

RS1/10SR4701D  
RS1/10SR2201D  
RS1/8SQ680J  
RS1/10SR3601D  
RS1/10SR0R0J

R 403,414,427,438  
R 404,417,428,441  
R 405  
R 407,421,7714,7715  
R 415,439

RS1/10SR3002D  
RS1/10SR6802D  
RS1/10SR1503D  
RS1/10SR5101D  
RS1/10SR105J

R 7453-7456,7609,7610  
R 7601,7602  
R 7603,7604  
R 7605,7606  
R 7607,7608

RS1/10SR0R0J  
RS1/10SR1003D  
RS1/10SR3900D  
RN1/16SE1001D  
RS1/10SR2200D

R 416,7038-7045  
R 420  
R 422  
R 426,434,443  
R 429

RS1/10SR6201D  
RS1/10SR1203D  
RS1/10SR2002D  
RS1/10SR1002D  
RS1/10SR5102D

R 7614,7620-7623  
R 7711  
R 7712,7713,7716,7717  
R 7718,7719  
R 7752-7754

RS1/10SR0R0J  
RS1/10SR5601D  
RN1/16SE7502D  
RS1/10SR4701D  
RS1/10SR0R0J

R 430,7054-7061,7710  
R 433  
R 435,437,7205,7709  
R 444  
R 446,448,449,456

RS1/10SR5601D  
RS1/10SR123J  
RS1/10SR100J  
RS1/10SR6202D  
RS1/4SA0R0J

Other Resistors

RS1/16SS###J

**CAPACITORS**

R 447  
R 451-454,1810,1820  
R 457,606,623-628  
R 605,617  
R 609,610,1801,1802

RS1/10SR3001D  
RS1/8SQ0R0J  
RS1/4SA0R0J  
RS1/16SS1002F  
RS1/10SR470J

C 101,120  
C 102,422,426  
C 103,121  
C 104,301-303,305  
C 106,304,307,421  
C 108,408,413,439

CFHXSP104J16  
CCG1236  
CFHXSQ103J16  
CKSSYB104K16  
CKSRYB104K25  
DCH1263

**B** JACK1 ASSY  
SEMICONDUCTORS

## MISCELLANEOUS

| Mark | No.                    | Description     | Part No.    |
|------|------------------------|-----------------|-------------|
| A    | JA 5001                | CANON CONNECTOR | DKB1108     |
|      | JA 5002                | 6.5 DIA JACK    | DKN1653     |
|      | JA 5101                | JACK            | XKB3062     |
|      | S 5101                 | SLIDE SWITCH    | DSH1025     |
|      | CN5001                 | PLUG (6P)       | KM200NA6    |
|      | CN5101                 | 23P CONNECTOR   | VKN1254     |
|      | VA 5001,5002,5101,5102 | VARISTORS       | EZJZ1V270RM |
|      | 1002                   | MIC SHIELD      | DNF1849     |
|      | 1003-1005              | PHONE SHIELD    | DNF1875     |
|      | 1006                   | SHIELD CASE/MIC | DNH3200     |
|      | 1007                   | SHIELD CASE/PH1 | DNH3196     |

### RESISTORS

|   |                       |               |
|---|-----------------------|---------------|
| B | R 5001-5003           | RN1/16SE2200D |
|   | R 5009,5010,5024      | RN1/16SE1002D |
|   | R 5012,5023           | RN1/16SE3301D |
|   | R 5014,5019           | RN1/16SE6801D |
|   | R 5015,5018           | RN1/16SE1501D |
|   | R 5016                | RN1/16SE8200D |
| C | R 5017                | RN1/16SE9101D |
|   | R 5020                | RS1/10SR1500D |
|   | R 5021                | RN1/16SE1003D |
|   | R 5022                | RS1/10SR1201D |
|   | R 5025,5026,5106,5108 | RS1/10SR1003D |
|   | R 5101,5102           | RS1/10SR2701D |
| D | R 5104,5105           | RS1/10SR1000D |
|   | R 5109,5110           | RS1/10SR9102D |
|   | R 5114,5115           | RS1/10SR5100D |
|   | R 5117,5118           | RS1/10SR2703D |
|   | R 5120,5121           | RS1/10SR2202D |
|   | Other Resistors       | RS1/10SR###J  |

### CAPACITORS

|   |                       |              |
|---|-----------------------|--------------|
| D | C 5001,5002,5030,5034 | CCSRCH221J50 |
|   | C 5003,5004           | CCSRCH561J50 |
|   | C 5007,5008,5016,5103 | CKSRYB103K50 |
|   | C 5011                | CKSRYB471K50 |
|   | C 5012,5014,5019,5020 | CCSRCH471J50 |
|   | C 5013                | CCSRCH222J50 |
| E | C 5015,5025,5026,5108 | CEAT101M16   |
|   | C 5017,5113,5115      | CCSRCH331J50 |
|   | C 5018                | CKSRYB331K50 |
|   | C 5021,5024           | CEAT101M25   |
|   | C 5022,5023,5031-5033 | CKSRYB104K25 |
|   | C 5035,5037           | CCSRCH221J50 |
| F | C 5036,5038-5040,5127 | CKSRYB104K25 |
|   | C 5101,5102           | ACE7125      |
|   | C 5104-5107,5141      | CCSRCH102J50 |
|   | C 5109                | CEAT101M16   |
|   | C 5110,5111           | CEAL101M16   |
|   | C 5124,5125           | DCG1049      |
| G | C 5128,5140,5142,5143 | CKSRYB104K25 |
|   | C 5129,5130           | CEAL101M25   |

## C JACK2 ASSY

### SEMICONDUCTORS

|   |                       |            |
|---|-----------------------|------------|
| F | IC 5201,5202          | NJM2121MD  |
|   | IC 5301,5302          | NJM4580D   |
|   | IC 5401,5402          | NJM4580MD  |
|   | Q 5201                | RT1N241M   |
|   | Q 5301-5312,5401-5404 | INC2002AC1 |

| Mark                 | No.                 | Description     | Part No.   |
|----------------------|---------------------|-----------------|------------|
| Q                    | 5405-5408           |                 | 2SK209     |
|                      | 5409-5416           |                 | INC2002AC1 |
|                      | 5301-5304,5402-5405 |                 | DZ2S180C   |
|                      | 5401                |                 | DA2J101    |
| <b>MISCELLANEOUS</b> |                     |                 |            |
| L                    | 5306                | INDUCTOR        | CTF1389    |
| JA                   | 5201                | JACK            | XKB3062    |
| JA                   | 5301,5302           | CANON CONNECTOR | DKB1093    |
| JA                   | 5303                | JACK            | DKB1103    |
| JA                   | 5401,5402           | 6.5 DIA JACK    | DKN1653    |

|    |           |                 |             |
|----|-----------|-----------------|-------------|
| S  | 5201      | SLIDE SWITCH    | DSH1025     |
| CN | 5201      | 31P CONNECTOR   | VKN1262     |
| P  | 5301,5302 | PROTECTOR (1 A) | AEK1073     |
| VA | 5202,5203 | VARISTORS       | EZJZ1V270RM |
|    | 1001      | CANON SHIELD    | DNF1789     |
|    | 1003-1005 | PHONE SHIELD    | DNF1875     |
|    | 1008      | SHIELD CASE     | DNH3206     |

### RESISTORS

|   |                     |               |
|---|---------------------|---------------|
| R | 5202,5203           | RS1/10SR2701D |
| R | 5204,5205           | RS1/10SR1000D |
| R | 5206,5207           | RS1/10SR1003D |
| R | 5208,5209           | RS1/10SR9102D |
| R | 5214,5215           | RS1/10SR5100D |
| R | 5217,5218           | RS1/10SR2703D |
| R | 5220,5221           | RS1/10SR2202D |
| R | 5307-5310           | RD1/2VM100J   |
| R | 5313-5320           | RS1/10SR5601D |
| R | 5321-5328           | RN1/16SE6801D |
| R | 5329-5332           | RD1/2VM221J   |
| R | 5333-5336           | RS1/10SR2201D |
| R | 5341,5342,5345,5346 | RD1/2VM330J   |
| R | 5349,5350           | RS1/10SR1500D |
| R | 5402-5409           | RS1/10SR3301D |
| R | 5414-5421           | RN1/16SE1102D |
| R | 5422-5425           | RS1/4SA221J   |
| R | 5426-5429           | RS1/10SR1001D |
| R | 5440,5441,5444,5445 | RS1/4SA560J   |
|   | Other Resistors     | RS1/10SR###J  |

### CAPACITORS

|   |                     |              |
|---|---------------------|--------------|
| C | 5201                | CKSRYB103K50 |
| C | 5202,5203           | ACE7125      |
| C | 5204-5207,5232      | CCSRCH102J50 |
| C | 5208,5209,5307,5308 | CEAT101M16   |
| C | 5210,5211           | CEAL101M16   |
| C | 5213,5215           | CCSRCH331J50 |
| C | 5224,5225           | DCG1049      |
| C | 5227,5228,5231,5234 | CKSRYB104K25 |
| C | 5229,5230           | CEAL101M25   |
| C | 5235,5237,5238,5331 | CKSRYB104K25 |
| C | 5301-5304           | DCE1018      |
| C | 5305,5306,5428-5431 | DCE1017      |
| C | 5313,5314,5320,5321 | CCSRCH101J50 |
| C | 5315,5322,5432,5433 | CEHAZL101M25 |
| C | 5323-5326,5340,5341 | CCSRCH101J50 |

|   |                |              |
|---|----------------|--------------|
| C | 5327-5330      | ACH1480      |
| C | 5332,5434,5435 | CKSRYB104K25 |
| C | 5333-5336      | CCSRCH222J50 |
| C | 5337           | CKSQYB105K25 |
| C | 5402-5405      | CCSRCH471J50 |

| 5                                                                                                                                                                                  | 6                                                                         | 7                                                                                                                                             | 8                                                                                                                                     |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------|
| Mark No. Description                                                                                                                                                               | Part No.                                                                  | Mark No. Description                                                                                                                          | Part No.                                                                                                                              |
| C 5406-5409,5414-5417<br>C 5418-5421                                                                                                                                               | CCSRCH330J50<br>CEAT101M16                                                | <b>CAPACITORS</b><br>C 8201<br>C 8203                                                                                                         | CKSSYB103K16<br>CCSSCH102J50                                                                                                          |
| <b>D</b> <b>HPJB ASSY</b><br><b>SEMICONDUCTORS</b><br>Q 5901,5902                                                                                                                  | INC2002AC1                                                                | <b>H</b> <b>USBP1 ASSY</b><br><b>SEMICONDUCTORS</b><br>IC 8101<br>IC 8102<br>Q 8101                                                           | BD9328EFJ<br>TPS2557DRB<br>RN1903                                                                                                     |
| <b>MISCELLANEOUS</b><br>L 5902,5903 INDUCTOR<br>JA 5901 HEADPHONE JACK<br>JA 5902 STEREO MINI JACK<br>KN 5902 SCREW PLATE<br>JP 5901 CONNECTOR ASS'Y<br><br>VA 5901,5902 VARISTORS | CTF1629<br>DKN1622<br>XKN3017<br>VNE1948<br>PF06PG-S42<br><br>EZJZ1V270RM | <b>MISCELLANEOUS</b><br>L 8101 INDUCTOR<br>CN8101 CONNECTOR<br>CN8102 CONNECTOR                                                               | CTH1253<br>AKM1292<br>AKM1290                                                                                                         |
| <b>RESISTORS</b><br>R 5901-5904,5909,5910<br>Other Resistors                                                                                                                       | RS1/4SA101J<br>RS1/10SR###J                                               | <b>RESISTORS</b><br>R 8107<br>R 8111<br>R 8115<br>R 8116<br>R 8118<br><br>R 8119<br>R 8120<br>Other Resistors                                 | RS1/16SS8202F<br>RS1/10SR4702D<br>RS1/10SR1100D<br>RS1/16SS2001F<br>RS1/10SR1002D<br><br>RS1/16SS101J<br>RS1/16SS103J<br>RS1/10SR###J |
| <b>CAPACITORS</b><br>C 5901-5904<br>C 5907,5908<br>C 5909,5910                                                                                                                     | CKSRYB104K50<br>CKSRYB103K50<br>DCH1344                                   | <b>CAPACITORS</b><br>C 8101,8103<br>C 8102,8104<br>C 8105,8106,8109,8110<br>C 8107<br>C 8108<br><br>C 8111<br>C 8113,8114<br>C 8115<br>C 8116 | CCH1565<br>CKSSYB104K10<br>CCG1221<br>CEVW331M6R3<br>DCH1201<br><br>CKSRYB103K50<br>CKSRYB104K50<br>CKSRYB104K16<br>CCSRCH102J50      |
| <b>E</b> <b>MICT ASSY</b><br><b>MISCELLANEOUS</b><br>CN5081 PLUG (6P)                                                                                                              | KM200NA6                                                                  | <b>I</b> <b>USBP2 ASSY</b><br><b>SEMICONDUCTORS</b><br>IC 8301<br>IC 8302<br>Q 8301                                                           | BD9328EFJ<br>TPS2557DRB<br>RN1903                                                                                                     |
| <b>RESISTORS</b><br>VR 5081,5082 ROTARY VR                                                                                                                                         | DCS1071                                                                   | <b>MISCELLANEOUS</b><br>L 8301 INDUCTOR<br>CN8301 CONNECTOR<br>CN8302 CONNECTOR                                                               | CTH1253<br>AKM1292<br>AKM1290                                                                                                         |
| <b>F</b> <b>USB1 ASSY</b><br><b>MISCELLANEOUS</b><br>L 8001 INDUCTOR<br>JA 8001 USB JACK<br>CN8001 CONNECTOR<br>CN8002 CONNECTOR<br>VA 8001-8004 SMD VARISTOR                      | CTF1713<br>DKN1658<br>AKM1276<br>AKM1275<br>EZJZ1V80010                   | <b>RESISTORS</b><br>R 8305<br>R 8309<br>R 8313<br>R 8314<br>R 8316<br><br>R 8317<br>R 8318<br>Other Resistors                                 | RS1/16SS8202F<br>RS1/10SR4702D<br>RS1/10SR1100D<br>RS1/16SS2001F<br>RS1/10SR1002D<br><br>RS1/16SS101J<br>RS1/16SS103J<br>RS1/10SR###J |
| <b>RESISTORS</b><br>R 8001-8003<br>Other Resistors                                                                                                                                 | RS1/10SR0R0J<br>RS1/8SQ###J                                               | <b>CAPACITORS</b><br>C 8301,8303<br>C 8302,8316<br>C 8304,8305,8308,8309<br>C 8306<br>C 8307                                                  | CKSSYB104K10<br>CCH1565<br>CCG1221<br>CEVW331M6R3<br>DCH1201                                                                          |
| <b>CAPACITORS</b><br>C 8001<br>C 8003                                                                                                                                              | CKSSYB103K16<br>CCSSCH102J50                                              |                                                                                                                                               |                                                                                                                                       |
| <b>G</b> <b>USB2 ASSY</b><br><b>MISCELLANEOUS</b><br>L 8201 COIL<br>JA 8201 USB JACK<br>CN8201 CONNECTOR<br>CN8202 CONNECTOR<br>VA 8201-8204 SMD VARISTOR                          | ATH7015<br>DKN1658<br>AKM1276<br>AKM1275<br>EZJZ1V80010                   |                                                                                                                                               |                                                                                                                                       |
| <b>RESISTORS</b><br>R 8201-8203<br>Other Resistors                                                                                                                                 | RS1/10SR0R0J<br>RS1/8SQ###J                                               |                                                                                                                                               |                                                                                                                                       |

| Mark | No. | Description | Part No.     |
|------|-----|-------------|--------------|
| A    | C   | 8310        | CKSRYB103K50 |
|      | C   | 8312,8313   | CKSRYB104K50 |
|      | C   | 8314        | CKSRYB104K16 |
|      | C   | 8315        | CCSRCH102J50 |

| Mark | No.             | Description | Part No.      |
|------|-----------------|-------------|---------------|
|      | R               | 8820        | RS1/16SS56R0D |
|      | R               | 8821        | RS1/16SS1800D |
|      | R               | 8823        | RS1/16SS1001D |
|      | R               | 8825        | RS1/16SS8200D |
|      | R               | 8889-8897   | RS1/10SR0R0J  |
|      | R               | 8898-8903   | RS1/10SR1R0J  |
|      | Other Resistors |             | RS1/16SS###J  |
|      |                 |             |               |
|      |                 |             |               |
|      |                 |             |               |

## J EXTB ASSY

### SEMICONDUCTORS

|    |           |              |
|----|-----------|--------------|
| IC | 8401      | BU90R104     |
| IC | 8601      | R1290K103A   |
| IC | 8701      | BD81A04EFV-M |
| IC | 8801-8803 | TC74LCX541FK |
| Q  | 8601      | 2SA1577      |

|   |           |           |
|---|-----------|-----------|
| Q | 8701      | LTC024EEB |
| Q | 8702      | LTA024EEB |
| D | 8601-8603 | DB3S308F0 |
| D | 8604      | DB2J41100 |
| D | 8701      | RB060M-30 |

### MISCELLANEOUS

|   |                |                      |               |
|---|----------------|----------------------|---------------|
| L | 8401,8805      | CHIP BEEDS FILTER    | BTX1042       |
| L | 8402           | CHIP BEEDS FILTER    | BTX1047       |
| L | 8403,8404      | CHIP SOLID INDUCTOR  | XTL3010       |
| L | 8422,8806,8807 | CHIP BEADS           | VTL1126       |
| L | 8602           | CHOKE COIL           | CTH1426       |
|   |                |                      |               |
| L | 8702           | INDUCTOR             | CTF1545       |
| L | 8703           | POWER INDUCTOR       | ATH7068       |
| L | 8801           | INDUCTOR             | CTF1635       |
| L | 8802,8804      | CHIP INDUCTOR (10 U) | DTL1105       |
| L | 8803           | INDUCTOR             | LCTAW101J2520 |

|    |           |                   |         |
|----|-----------|-------------------|---------|
| L  | 8809-8826 | CHIP BEADS        | VTL1126 |
| CN | 8401      | FFC/FPC CONNECTOR | DKP3953 |
| CN | 8402      | 11P CONNECTOR     | VKN1415 |
| CN | 8403      | 5P CONNECTOR      | VKN1374 |
| CN | 8701      | CONNECTOR         | CKS4428 |

|    |      |                   |         |
|----|------|-------------------|---------|
| CN | 8801 | FFC/FPC CONNECTOR | CKS6646 |
|----|------|-------------------|---------|

### RESISTORS

|   |           |               |
|---|-----------|---------------|
| R | 8401-8405 | RS1/16SS1000D |
| R | 8603      | RS1/16SS3603D |
| R | 8604      | RS1/16SS6802D |
| R | 8605      | RS1/16SS3901D |
| R | 8610,8616 | RS1/16SS1502D |

|   |                     |               |
|---|---------------------|---------------|
| R | 8612                | RS1/16SS1103D |
| R | 8613                | RS1/16SS1002D |
| R | 8615                | RS1/16SS8201D |
| R | 8618,8829,8865-8867 | RS1/10SR0R0J  |
| R | 8619                | RS1/16SS3303D |

|   |      |               |
|---|------|---------------|
| R | 8620 | RS1/16SS5601D |
| R | 8621 | RS1/16SS3902D |
| R | 8709 | RS1/16SS5100F |
| R | 8712 | RS1/16SS3302D |
| R | 8713 | RS1/16SS2202D |

|   |           |               |
|---|-----------|---------------|
| R | 8717      | RS1/16SS1203D |
| R | 8718      | RS1/16SS1602D |
| R | 8801,8815 | RS1/16SS39R0D |
| R | 8803,8819 | RS1/16SS47R0D |
| R | 8807,8816 | RS1/16SS75R0F |

|   |           |               |
|---|-----------|---------------|
| R | 8813,8817 | RS1/16SS1300D |
| R | 8814      | RS1/16SS51R0D |
| R | 8818,8822 | RS1/16SS82R0D |

### CAPACITORS

|   |                     |               |
|---|---------------------|---------------|
| C | 8401                | DCH1201       |
| C | 8403,8405,8406,8409 | CKSSYB103K16  |
| C | 8404,8407,8408,8412 | CKSSYB104K10  |
| C | 8410                | CKSRYB225K6R3 |
| C | 8411,8414,8416,8620 | CKSSYB103K16  |

|   |                     |               |
|---|---------------------|---------------|
| C | 8413,8415,8704,8706 | CKSSYB104K10  |
| C | 8602,8618,8625,8823 | CKSSYB102K50  |
| C | 8603                | CKSRYB105K16  |
| C | 8604,8614,8844      | CKSSYB105K6R3 |
| C | 8606,8607           | CKSQYB105K25  |

|   |                     |               |
|---|---------------------|---------------|
| C | 8608                | CKSQYB475K6R3 |
| C | 8610,8841           | CKSRYB104K50  |
| C | 8611,8612           | CKSQYB474K25  |
| C | 8613,8622,8812-8814 | CKSSYB104K16  |
| C | 8616                | CKSSYB224K6R3 |

|   |                     |              |
|---|---------------------|--------------|
| C | 8617,8811           | CKSYB475K16  |
| C | 8619                | CKSSYB561K50 |
| C | 8621,8712           | CKSSYB332K50 |
| C | 8623,8624,8702,8708 | CCG1236      |
| C | 8701                | CKSRYB224K16 |

|   |                     |              |
|---|---------------------|--------------|
| C | 8705,8707           | CCH2090      |
| C | 8709                | CCG1218      |
| C | 8710,8711,8713,8714 | CCG1236      |
| C | 8715,8718,8719      | CCG1254      |
| C | 8815,8816           | CKSRYB105K10 |

|   |                |              |
|---|----------------|--------------|
| C | 8817-8819,8828 | CKSSYB104K10 |
| C | 8820           | DCH1246      |
| C | 8824,8833      | CCG1236      |
| C | 8825           | CCG1234      |
| C | 8827,8839,8840 | CKSSYB104K16 |

|   |           |              |
|---|-----------|--------------|
| C | 8830,8831 | CKSSYB102K50 |
| C | 8834      | CKSQYB225K16 |
| C | 8835      | CKSSYB103K25 |
| C | 8837      | CCG1201      |
| C | 8838      | CKSQYB334K50 |

|   |                     |              |
|---|---------------------|--------------|
| C | 8845-8849,8851,8854 | CCSSCH102J50 |
| C | 8855-8857           | CKSSYB104K16 |

## K DPNL1 ASSY

### SEMICONDUCTORS

|   |                     |             |
|---|---------------------|-------------|
| Q | 5601,5603,5604,5606 | LSAR523UB   |
| Q | 5602,5605,5608,5611 | LTC123JUB   |
| Q | 5607,5609,5610,5612 | LSAR523UB   |
| D | 5601,5602           | SLR343WBC7T |
| D | 5603,5604           | SLI-343YYW  |

|   |           |            |
|---|-----------|------------|
| D | 5605-5608 | SLI-343M8G |
|---|-----------|------------|

### MISCELLANEOUS

|    |           |               |         |
|----|-----------|---------------|---------|
| S  | 5601-5604 | TACT SWITCH   | DSG1089 |
| CN | 5601      | 11P CONNECTOR | VKN1242 |

| 5                                 | 6               | 7                                | 8             |
|-----------------------------------|-----------------|----------------------------------|---------------|
| Mark No. Description              | Part No.        | Mark No. Description             | Part No.      |
| <b>RESISTORS</b>                  |                 | JP 3201,3203 CONNECTOR ASSY      | PF03PG-Q07    |
| All Resistors                     | RS1/10SR###J    | JP 3202 CONNECTOR ASS'Y          | PF04PG-Q05    |
| <b>CAPACITORS</b>                 |                 | <b>RESISTORS</b>                 | A             |
| C 5605                            | CEAT101M16      | VR 3201,3202,3206 ROTARY VR      | DCS1104       |
| C 5606                            | CKSRYB104K16    | VR 3203-3205,3207-3211 ROTARY VR | DCS1078       |
|                                   |                 | VR 3212,3213 ROTARY VR           | DCS1126       |
|                                   |                 | R 3697                           | RS1/4SA1R0J   |
|                                   |                 | R 3698                           | RS1/10SR3301D |
|                                   |                 | R 3699                           | RS1/10SR3302D |
|                                   |                 | R 3700                           | RS1/10SR2202D |
|                                   |                 | Other Resistors                  | RS1/10SR###J  |
| <b>DPNL2 ASSY</b>                 |                 | <b>CAPACITORS</b>                |               |
| <b>MISCELLANEOUS</b>              |                 | C 3005,3006,3208,3209            | CKSRYB104K16  |
| S 5801-5803 TACT SWITCH           | DSG1089         | C 3010,3011                      | CCSRCH471J50  |
| CN5801 5P CONNECTOR               | VKN1236         | C 3013-3016,3641                 | CCSRCH221J50  |
|                                   |                 | C 3201-3207,3214-3219            | CKSRYB471K50  |
|                                   |                 | C 3220-3231,3236-3240            | CKSRYB104K16  |
| <b>RESISTORS</b>                  |                 | C 3401,3403,3405,3407            | CEJQ101M16    |
| All Resistors                     | RS1/10SR###J    | C 3402,3404,3406,3408            | CKSRYB104K16  |
|                                   |                 | C 3409,3411,3414,3416            | CEJQ101M16    |
|                                   |                 | C 3410,3412,3413,3415            | CKSRYB104K16  |
|                                   |                 | C 3601,3602                      | CEJQ470M16    |
| <b>MIXB ASSY</b>                  |                 | C 3604,3639,3642                 | CEJQ101M16    |
| <b>SEMICONDUCTORS</b>             |                 | C 3605,3612,3625,3629            | CKSRYB104K16  |
| IC 3001                           | TC74VHC164F     | C 3606-3611,3613                 | CKSRYB471K50  |
| IC 3002                           | TC74VHC595F     | C 3614,3627,3646,3647            | CCSRCH470J50  |
| IC 3201,3202                      | TC74HC4052AF    | C 3615-3617,3619,3620            | CKSRYB471K50  |
| IC 3601                           | DYW1857         | C 3621,3637                      | CKSRYB103K16  |
| IC 3602                           | S-80927CNMC-G8X | C 3622-3624,3628,3630            | CKSRYB471K50  |
|                                   |                 | C 3631                           | CKSRYB104K16  |
|                                   |                 | C 3632-3635,3645,3648            | CKSRYB471K50  |
|                                   |                 | C 3636                           | CKSRYB222K50  |
| IC 3603                           | NJM2392M        | C 3638                           | DCH1165       |
| Q 3001,3005,3011,3017             | LTC124EUB       | C 3640                           | CCSRCH560J50  |
| Q 3002,3006,3012,3022             | 2SA1577         | C 3643,3644                      | DCH1201       |
| Q 3003,3004,3007-3010             | LSAR523UB       | C 3650,3651,3659,3660            | CKSRYB471K50  |
| Q 3013-3016,3019,3020             | LSAR523UB       | C 3666                           | CKSRYB471K50  |
| Q 3018,3029                       | ISA1602AM1      |                                  |               |
| Q 3021,3025-3028,3030             | LTC124EUB       |                                  |               |
| Q 3023,3024                       | 2SC4154-11      |                                  |               |
| Q 3031                            | 2SA1577         |                                  |               |
| Q 3601                            | RT1N431M        |                                  |               |
| D 3001-3003,3007,3009             | SLI-343M8G      |                                  |               |
| D 3004,3010,3018,3029             | SLR343BD2T      |                                  |               |
| D 3005,3008,3012-3014             | DA2J101         |                                  |               |
| D 3006,3015,3025,3030             | SLI-343YYW      |                                  |               |
| D 3011,3019                       | SLR343WBC7T     |                                  |               |
| D 3016,3017,3026,3028             | SLI-343M8G      |                                  |               |
| D 3020-3024,3027                  | DA2J101         |                                  |               |
| D 3031-3038,3040,3041             | DA2J101         |                                  |               |
| D 3201-3204                       | DA2J101         |                                  |               |
| D 3601                            | EP05Q06         |                                  |               |
| <b>MISCELLANEOUS</b>              |                 | <b>N CRFB ASSY</b>               |               |
| L 3601 CHIP COIL                  | LCTAW330J2520   | <b>MISCELLANEOUS</b>             |               |
| L 3602 RAD SPL INDUCTOR           | DTH1212         | CN 3801 L-PLUG (4P)              | KM200NA4L     |
| L 3603 INDUCTOR                   | CTF1629         |                                  |               |
| S 3001 12MM GS ENCODER            | DSX1064         | <b>RESISTORS</b>                 |               |
| S 3002 ENCODER SW                 | DSX1080         | VR 3801 VARIABLE RESISTOR        | DCV1023       |
| S 3003,3010 SLIDE SWITCH          | DSH1066         | <b>CAPACITORS</b>                |               |
| S 3004-3009,3013-3020 TACT SWITCH | DSG1089         | C 3801                           | CKSRYB104K50  |
| S 3011 SLIDE SWITCH               | DSH1058         | C 3802                           | CKSRYB103K50  |
| S 3012,3021 TACT SWITCH           | DSG1079         |                                  |               |
| S 3022,3023 TACT SWITCH           | DSG1089         |                                  |               |
| S 3201 ROTARY SWITCH              | DSG1098         | <b>O CHF1 ASSY</b>               |               |
| S 3202 ROTARY SWITCH              | DSG1131         | <b>MISCELLANEOUS</b>             |               |
| X 3601 CERAMIC RESONATOR          | DSS1147         | CN 3601 L-PLUG (3P)              | KM200NA3L     |
| CN 3401,3402 39P CONNECTOR        | VKN2097         |                                  |               |
| CN 3403 35P CONNECTOR             | VKN2025         | <b>RESISTORS</b>                 |               |
| CN 3404 19P CONNECTOR             | VKN1250         | VR 3601 SLIDE VR                 | DCV1027       |

**Mark No. Description Part No.**

## P LLED ASSY

### SEMICONDUCTORS

|                       |                |
|-----------------------|----------------|
| IC 3501               | 74VHC164FT     |
| IC 3502               | 74VHC595FT     |
| Q 3501,3506,3515      | RN1903         |
| Q 3502,3505           | LTC124EUB      |
| Q 3503,3504,3507,3509 | 2SA1577        |
| Q 3516-3518,3520-3524 | LSCR523UB      |
| Q 3519                | 2SA1577        |
| D 3501-3503           | SML-D12V8W     |
| D 3504,3506,3508      | SML-D12Y8W     |
| D 3505,3507,3509      | SML-D12M8W(NP) |
| D 3510-3512,3519-3524 | SML-D12Y8W     |
| D 3513-3518,3525-3536 | SML-D12M8W(NP) |

### MISCELLANEOUS

|                   |         |
|-------------------|---------|
| CN 3501 CONNECTOR | CKS5854 |
|-------------------|---------|

### RESISTORS

|                       |              |
|-----------------------|--------------|
| R 3503,3505,3517,3523 | RS1/16SS103J |
| R 3506,3524,3560      | RS1/16SS563J |
| R 3531-3533,3537-3540 | RS1/16SS101J |
| R 3544,3572,3578-3586 | RS1/16SS101J |
| R 3545,3587           | RS1/16SS472J |
| R 3559                | RS1/16SS103J |
| R 3588-3591           | RS1/16SS101J |
| R 3592,3593           | RS1/16SS0R0J |
| Other Resistors       | RS1/10SR###J |

### CAPACITORS

|             |              |
|-------------|--------------|
| C 3501,3502 | CKSSYB104K16 |
| C 3503      | CCSSCH102J50 |
| C 3504-3506 | CCSSCH221J50 |
| C 3507,3508 | CCSSCH471J16 |

## Q CDJB ASSY

### SEMICONDUCTORS

|                       |              |
|-----------------------|--------------|
| IC 4001               | TC74HC4052AF |
| IC 4002               | TC74VHC164F  |
| Q 4001-4004,4006,4008 | LTC124EUB    |
| Q 4005,4007,4009,4011 | 2SA1577      |
| Q 4010,4012,4027,4029 | LTC124EUB    |

|                       |            |
|-----------------------|------------|
| Q 4013-4024,4037,4039 | LSAR523UB  |
| Q 4025,4034,4035      | 2SC4154-11 |
| Q 4026,4028,4030,4032 | 2SA1577    |
| Q 4031,4033           | LTC124EUB  |
| Q 4041,4043-4045,4047 | LSAR523UB  |

|                       |            |
|-----------------------|------------|
| D 4001-4022           | DA2J101    |
| D 4023-4025,4027,4030 | SLI-343M8G |
| D 4026,4031,4033,4035 | SLI-343YYW |
| D 4028,4032,4037-4039 | SLR343BD2T |
| D 4029,4034,4043      | SLI-343U8R |

|                       |             |
|-----------------------|-------------|
| D 4036                | SLI-343YYW  |
| D 4040,4041,4045      | SLI-343M8G  |
| D 4042                | SLR343WBC7T |
| D 4044,4046-4049,4053 | SLR343BD2T  |

### MISCELLANEOUS

|                                   |         |
|-----------------------------------|---------|
| KN 4001 EARTH TERMINAL            | AKF7002 |
| S 4001-4016,4018,4028 TACT SWITCH | DSG1089 |
| S 4017,4023-4025 TACT SWITCH      | DSG1079 |
| S 4019-4022,4026,4027 TACT SWITCH | DSG1117 |

**Mark No. Description Part No.**

|                        |             |
|------------------------|-------------|
| CN 4001 15P CONNECTOR  | VKN1246     |
| CN 4002 39P CONNECTOR  | VKN2097     |
| CN 4003 17P CONNECTOR  | VKN1248     |
| VA 4001-4007 VARISTORS | EZJZ1V270RM |

### RESISTORS

|                   |              |
|-------------------|--------------|
| VR 4001 ROTARY VR | DCS1104      |
| VR 4002 SLIDE VR  | DCV1033      |
| R 4017            | RS1/4SA0R0J  |
| Other Resistors   | RS1/10SR###J |

### CAPACITORS

|                       |              |
|-----------------------|--------------|
| C 4003,4004           | CKSRYB392K50 |
| C 4006,4011,4014,4017 | CKSRYB104K16 |
| C 4008-4010           | CKSRYB471K50 |
| C 4015,4016,4018,4020 | CEJQ101M16   |
| C 4019,4021,4022,4024 | CKSRYB104K16 |
| C 4023                | CEJQ101M16   |
| C 4025,4026           | CCSRCH471J50 |

## R PNL1 ASSY

### SEMICONDUCTORS

|                  |            |
|------------------|------------|
| Q 5501,5503,5505 | LTC124EUB  |
| Q 5502,5504      | LSAR523UB  |
| Q 5506           | LSCR523UB  |
| D 5501,5503      | DA2J101    |
| D 5502,5504      | SLI-343U8R |

### MISCELLANEOUS

|                       |         |
|-----------------------|---------|
| S 5501 TACT SWITCH    | DSG1089 |
| S 5502 SLIDE SWITCH   | DSH1058 |
| S 5503 PUSH SW        | ASG1102 |
| CN 5501 17P CONNECTOR | VKN1248 |

### RESISTORS

|                        |              |
|------------------------|--------------|
| VR 5501,5502 ROTARY VR | DCS1078      |
| Other Resistors        | RS1/10SR###J |

### CAPACITORS

|                  |              |
|------------------|--------------|
| C 5501,5502      | CKSRYB471K50 |
| C 5503,5504,5506 | CKSRYB104K16 |
| C 5505           | CEAT101M16   |
| C 5507,5508      | CKSRYB105K16 |

## S PNL2 ASSY

### SEMICONDUCTORS

|             |            |
|-------------|------------|
| Q 5701,5705 | LTC124EUB  |
| Q 5702      | LSAR523UB  |
| Q 5706      | LSCR523UB  |
| D 5701,5704 | DA2J101    |
| D 5703,5705 | SLI-343U8R |

### MISCELLANEOUS

|                         |         |
|-------------------------|---------|
| S 5701-5703 TACT SWITCH | DSG1089 |
| CN 5701 17P CONNECTOR   | VKN1248 |

### RESISTORS

|                        |              |
|------------------------|--------------|
| VR 5701,5702 ROTARY VR | DCS1104      |
| Other Resistors        | RS1/10SR###J |

### CAPACITORS

|                  |              |
|------------------|--------------|
| C 5701,5702      | CKSRYB471K50 |
| C 5703,5708,5710 | CKSRYB104K16 |
| C 5709           | CEAT101M16   |

| Mark | No. | Description | Part No.     |
|------|-----|-------------|--------------|
|      | C   | 5711.5712   | CKSRYB105K16 |

**T** JOGT1 ASSY  
SEMICONDUCTORS

|         |                |
|---------|----------------|
| IC 9601 | PIC10F206-I/OT |
| IC 9602 | 74VHCT126AFT   |
| D 9601  | BB520G-30      |

## MISCELLANEOUS

|                                |         |
|--------------------------------|---------|
| L 9601,9602,9604 INDUCTOR      | CTF1786 |
| KN 9601,9602 WRAPPING TERMINAL | CKF1089 |
| CN 9601 15P CONNECTOR          | VKN1419 |
| CN 9602 FFC/FPC CONNECTOR      | CKS6634 |
| CN 9604 CONNECTOR              | AKM1275 |

|                           |             |
|---------------------------|-------------|
| VA 9601,9604 SMD VARISTOR | EZJZ1V80010 |
| VA 9605 VARISTORS         | EZJZ1V270RM |

## RESISTORS

|                       |               |
|-----------------------|---------------|
| R 9601.9613           | DCN1187       |
| R 9602                | RS1/10SR221J  |
| R 9604,9623,9624,9651 | RS1/10SR0R0J  |
| R 9609                | RS1/10SR2202D |
| Other Resistors       | RS1/16SS###J  |

## CAPACITORS

|                  |              |
|------------------|--------------|
| C 9602           | CCSRCH221J50 |
| C 9603,9605,9607 | CKSSYB104K10 |
| C 9604           | DCH1201      |
| C 9606           | CEHVW101M6B3 |



|         |                |
|---------|----------------|
| IC 9801 | PIC10F206-I/OT |
| IC 9802 | 74VHCT126AFT   |
| D 9801  | RB520G-30      |

## MISCELLANEOUS

|                                |         |
|--------------------------------|---------|
| L 9801,9802,9804 INDUCTOR      | CTF1786 |
| KN 9801,9802 WRAPPING TERMINAL | CKF1089 |
| CN 9801 15P CONNECTOR          | VKN1419 |
| CN 9802 FFC/FPC CONNECTOR      | CKS6634 |
| CN 9804 CONNECTOR              | AKM1275 |

|                           |             |
|---------------------------|-------------|
| VA 9801,9804 SMD VARISTOR | EZJZ1V80010 |
| VA 9805 VARISTORS         | EZJZ1V270BM |

## RESISTORS

|                       |               |
|-----------------------|---------------|
| R 9801,9813           | DCN1187       |
| R 9802                | RS1/10SR221J  |
| R 9804,9823,9824,9851 | RS1/10SR0R0J  |
| R 9809                | RS1/10SR2202D |
| Other Resistors       | RS1/16SS###J  |

## CAPACITORS

|                  |              |
|------------------|--------------|
| C 9802           | CCSRCH221J50 |
| C 9803,9805,9807 | CKSSYB104K10 |
| C 9804           | DCH1201      |
| C 9806           | CEHVW101M6B3 |

**V JOGR1 ASSY**  
**MISCELLANEOUS**

|         |                   |            |
|---------|-------------------|------------|
| JP 9001 | CONNECTOR ASS'Y   | PF04PG-Q07 |
| PC 9001 | PHOTO INTERRUPTER | KE-2K18-15 |

| Mark No. | Description | Part No. |
|----------|-------------|----------|
|----------|-------------|----------|

## RESISTORS

All Resistors RS1/10SB###I

## CAPACITORS

|             |              |
|-------------|--------------|
| C 9001      | CKSRYB105K10 |
| C 9002,9003 | CKSRYB103K50 |

**W JLED1 ASSY**  
**SEMICONDUCTORS**

|              |                 |
|--------------|-----------------|
| IC 9201-9205 | 74VHC595FT      |
| D 9201-9236  | NHSW157B-A13072 |
| D 9237-9244  | FM-3528BK-470M  |

## MISCELLANEOUS

CN9201 FFC/FPC CONNECTOR CKS6634

## RESISTORS

|                 |              |
|-----------------|--------------|
| R 9250          | RS1/8SQ0R0J  |
| Other Resistors | RS1/16SS###J |

## CAPACITORS

|             |              |
|-------------|--------------|
| C 9201-9205 | CKSRYB104K16 |
| C 9206      | DCH1201      |
| C 9207-9210 | CCSSCH221J50 |
| C 9211-9214 | CCSSCH102J50 |

**X JLED2 ASSY**  
**SEMICONDUCTORS**

|              |                 |
|--------------|-----------------|
| IC 9401-9405 | 74VHC595FT      |
| D 9401-9436  | NHSW157B-A13072 |
| D 9437-9444  | FM-3528BK-470M  |

## MISCELLANEOUS

CN9401 FFC/FPC CONNECTOR CKS6634

## RESISTORS

|                 |              |
|-----------------|--------------|
| R 9450          | RS1/8SQ0R0J  |
| Other Resistors | RS1/16SS###J |

## CAPACITORS

|             |              |
|-------------|--------------|
| C 9401-9405 | CKSRYB104K16 |
| C 9406      | DCH1201      |
| C 9407-9410 | CCSSCH221J50 |
| C 9411-9414 | CCSSCH102J50 |

**Y SW POWER SUPPLY**  
There is no service parts.