



KDC-X579

EXPLODED VIEW (CD MECHANISM)

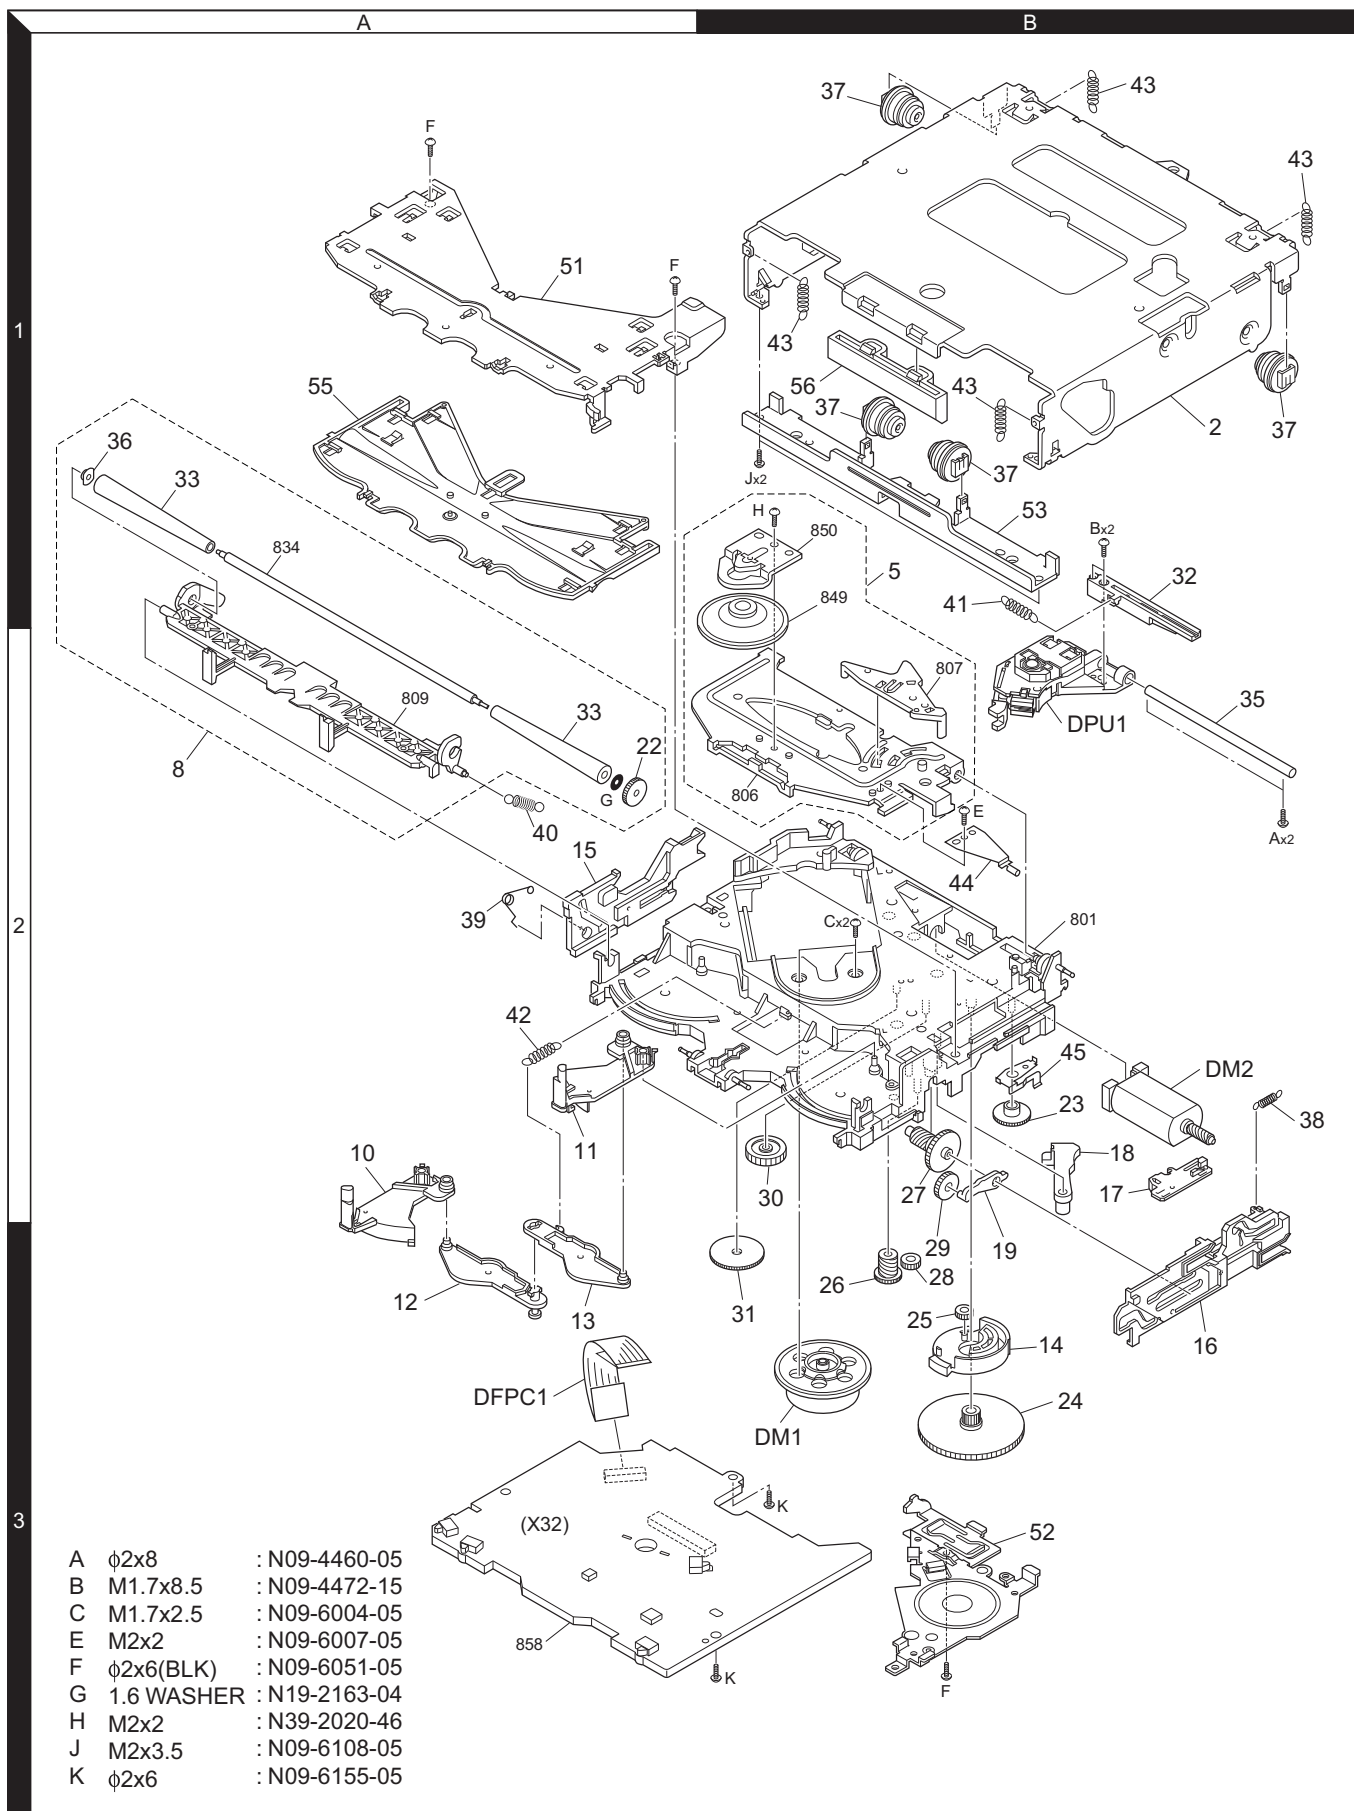

EXPLODED VIEW (UNIT)

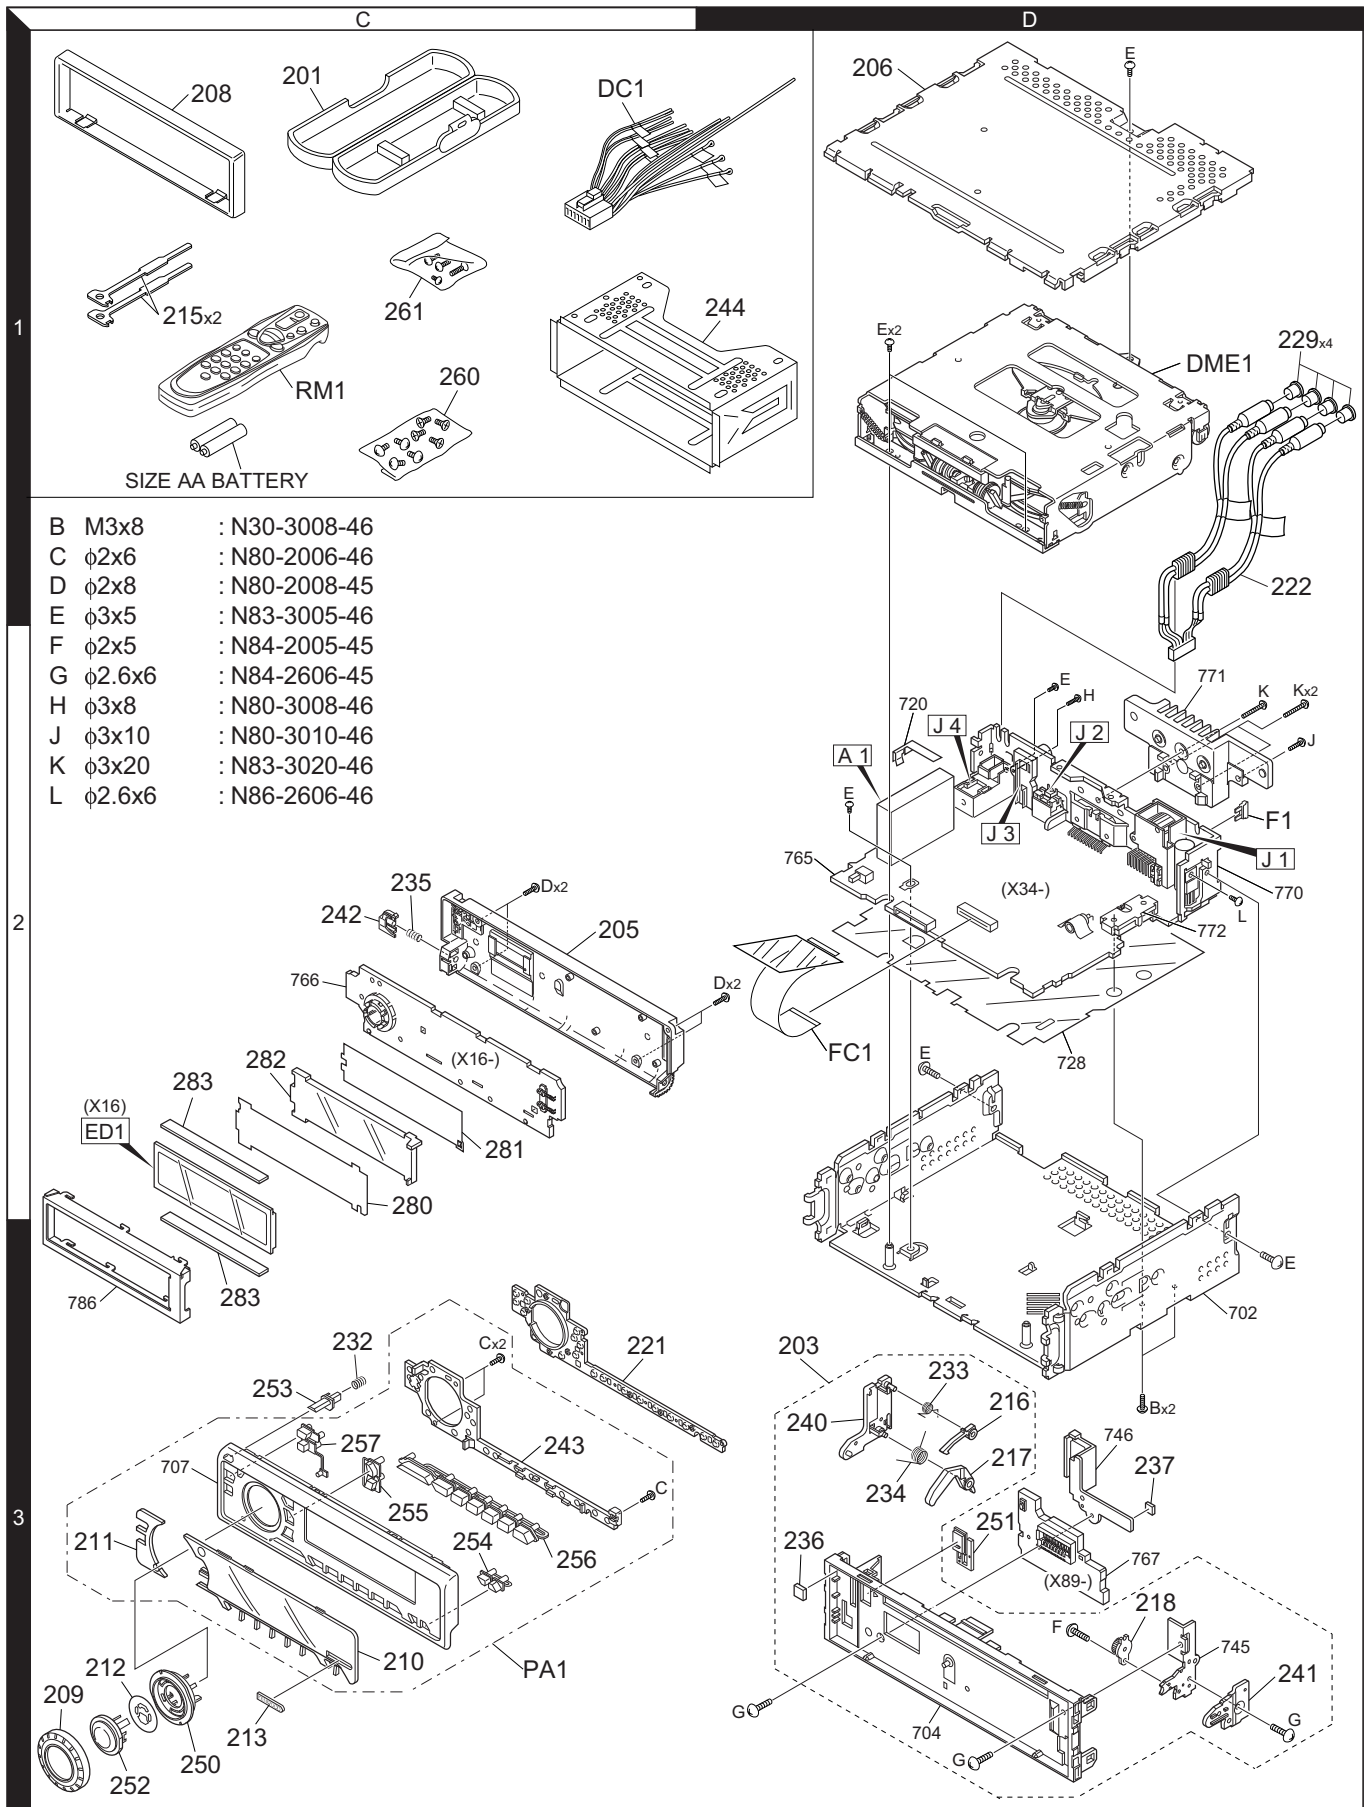

PARTS LIST

Teile ohne **Parts No.** werden nicht geliefert.

Ref. No.	Add	New	Parts No.	Description	Destination
257	3C		K25-1642-03	KNOB (FM/AM)	
260	1C		N99-1719-05	SCREW SET	
261	1C		N99-1730-15	SCREW SET	
B	3D		N30-3008-46	PAN HEAD MACHINE SCREW (M3X 8)	
C	3C		N80-2006-46	PAN HEAD TAPTITE SCREW (2X 6)	
D	2C		N80-2008-45	PAN HEAD TAPTITE SCREW (2X 8)	
E	1D		N83-3005-46	PAN HEAD TAPTITE SCREW (3X 5)	
F	3D		N84-2005-45	PAN HEAD TAPTITE SCREW	
G	3D		N84-2606-45	PAN HEAD TAPTITE SCREW (2.6X6)	
DME1	1D		X92-4910-00	CD MECHANISM ASSY (DXM-6550W)	
SWITCH UNIT (X16-2490-10)					
280	2D		B11-1439-04	OPTICAL DIFFUSER	
281	2D		B11-1441-04	REFLECTION SHEET	
282	2D		B19-2243-02	LIGHTING BOARD	
D1			B30-1564-05	LED (1608,BLUE)	
D2			B30-1566-05	LED (1608,RED)	
D3			B30-1692-05	LED (HR/YG)	
D4-13			B30-1605-05	LED (2COLOR PG/RED)	
D31,32			B30-1571-05	LED (WHITE)	
ED1		*	B38-1134-05	LIQUID CRYSTAL	
C1			CK73GB1H102K	CHIP C 1000PF	K
C2-4			CK73GB1C104K	CHIP C 0.10UF	K
C6			CK73GB1H103K	CHIP C 0.010UF	K
C7			CK73FB1A225K	CHIP C 2.2UF	K
C8			CK73GB1H103K	CHIP C 0.010UF	K
C10-13			CK73GB1H103K	CHIP C 0.010UF	K
283	2D		E29-1968-04	CONDUCTIVE RUBBER	
J1			E59-0829-05	RECTANGULAR PLUG	
CP1			R90-0714-05	MULTI-COMP 10K X4	
CP2			R90-1016-05	MULTI-COMP 470 X4	
R1			RK73GB2A303J	CHIP R 30K	J 1/10W
R2-5			RK73GB2A222J	CHIP R 2.2K	J 1/10W
R6			RK73GB2A473J	CHIP R 47K	J 1/10W
R7			RK73GB2A102J	CHIP R 1.0K	J 1/10W
R8			RK73GB2A4R7J	CHIP R 4.7	J 1/10W
R9			RK73GB2A471J	CHIP R 470	J 1/10W
R10			RK73GB2A101J	CHIP R 100	J 1/10W
R11			RK73GB2A102J	CHIP R 1.0K	J 1/10W
R12			RK73GB2A222J	CHIP R 2.2K	J 1/10W
R14			RK73GB2A222J	CHIP R 2.2K	J 1/10W
R21			RK73FB2B561J	CHIP R 560	J 1/8W
R22-25			RK73FB2B331J	CHIP R 330	J 1/8W
R31			RK73FB2B271J	CHIP R 270	J 1/8W
R32,33			RK73GB2A472J	CHIP R 4.7K	J 1/10W
S2			S70-0814-05	TACT SWITCH	
S1			T99-0449-05	ROTARY ENCODER	
D21			MA3082-M	ZENER DIODE	
IC1			LC75808W	MOS-IC	
IC2			PNA4S22M	ANALOGUE IC	
Q2			DTA114EE	DIGITAL TRANSISTOR	

^ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

SWITCH UNIT (X16-2490-10)

Ref. No.	Add	New	Parts No.	Description	Destination
Q3-5			2SC4617	TRANSISTOR	
CD PLAYER UNIT (X32-5560-00)					
C5			CK73GB1C104K	CHIP C 0.10UF K	
C6			CK73GB1H103K	CHIP C 0.010UF K	
C7			CK73FB1A225K	CHIP C 2.2UF K	
C10-15			CK73GB1C104K	CHIP C 0.10UF K	
C16			CK73FB1A225K	CHIP C 2.2UF K	
C17,18			CK73GB1C104K	CHIP C 0.10UF K	
C19			CK73FB1A225K	CHIP C 2.2UF K	
C20			CK73GB1C104K	CHIP C 0.10UF K	
C21			CK73GB1H102K	CHIP C 1000PF K	
C25-27			CK73GB1C104K	CHIP C 0.10UF K	
C28			CK73FB0J106M	CHIP C 10UF M	
C29			CK73GB1C104K	CHIP C 0.10UF K	
C30			CK73GB1H152K	CHIP C 1500PF K	
C31			CC73GCH1H470J	CHIP C 47PF J	
C33			CK73GB1C104K	CHIP C 0.10UF K	
C34			CC73GCH1H560J	CHIP C 56PF J	
C35			CK73GB1C104K	CHIP C 0.10UF K	
C37			CK73GB1H102K	CHIP C 1000PF K	
C38			CK73GB1H682K	CHIP C 6800PF K	
C39			CK73GB1C104K	CHIP C 0.10UF K	
C41			CK73GB1A334K	CHIP C 0.33UF K	
C42-44			CK73GB1C104K	CHIP C 0.10UF K	
C46			CK73GB1H682K	CHIP C 6800PF K	
C47			CK73GB1C104K	CHIP C 0.10UF K	
C48			CC73GCH1H040C	CHIP C 4.0PF C	
C49			CK73GB1H332K	CHIP C 3300PF K	
C50			CK73GB1C104K	CHIP C 0.10UF K	
C51			CC73GCH1H330J	CHIP C 33PF J	
C52,53			CK73FB1A225K	CHIP C 2.2UF K	
C54,55			CK73GB1H103K	CHIP C 0.010UF K	
C56,57			CK73GB1H331K	CHIP C 330PF K	
C58			CK73GB1H472K	CHIP C 4700PF K	
C59-63			CK73GB1H152K	CHIP C 1500PF K	
C64			CK73GB1C104K	CHIP C 0.10UF K	
C66,67			CC73GCH1H100D	CHIP C 10PF D	
C68			CK73GB0J105K	CHIP C 1.0UF K	
C69-71			CK73GB1C104K	CHIP C 0.10UF K	
C72			CK73FB1A225K	CHIP C 2.2UF K	
C74			CK73FB0J475K	CHIP C 4.7UF K	
C75			CC73GCH1H221J	CHIP C 220PF J	
C78-80			CC73GCH1H221J	CHIP C 220PF J	
C81-84			CC73GCH1H102J	CHIP C 1000PF J	
C86			CK73GB1A105K	CHIP C 1.0UF K	
C87			CK73FB0J475K	CHIP C 4.7UF K	
C89			CK73GB1H103K	CHIP C 0.010UF K	
C90			CK73GB1H102K	CHIP C 1000PF K	
C91			CC73GCH1H102J	CHIP C 1000PF J	
C92			CK73FB0J475K	CHIP C 4.7UF K	
C93,94			CK73GB1H103K	CHIP C 0.010UF K	
C95,96			CK73GB1C104K	CHIP C 0.10UF K	
C97			CK73GB0J105K	CHIP C 1.0UF K	
C98			CK73FB1A225K	CHIP C 2.2UF K	
Ref. No.	Add	New	Parts No.	Description	Destination
C99			CC73GCH1H121J	CHIP C 120PF J	
C100			CC73GCH1H050C	CHIP C 5.0PF C	
C101			CK73GB1H102K	CHIP C 1000PF K	
CN1			E41-2083-05	FLAT CABLE CONNECTOR	
CN2			E41-2068-05	FLAT CABLE CONNECTOR	
CN2			E41-2085-05	FLAT CABLE CONNECTOR	
X1			L77-2863-05	CRYSTAL RESONATOR (16.899M)	
X2			L78-0896-05	RESONATOR (16.00MHZ)	
CP1			RK74GA1J104J	CHIP-COM 100K J 1/16W	
CP2,3			RK74GA1J101J	CHIP-COM 100 J 1/16W	
CP4			RK74GA1J103J	CHIP-COM 10K J 1/16W	
CP5			RK74GA1J102J	CHIP-COM 1.0K J 1/16W	
CP7			RK74GB1J102J	CHIP-COM 1.0K J 1/16W	
CP10			RK74GB1J103J	CHIP-COM 10K J 1/16W	
CP11			RK74GB1J472J	CHIP-COM 4.7K J 1/16W	
CP12			RK74GA1J104J	CHIP-COM 100K J 1/16W	
CP13,14			RK74GB1J104J	CHIP-COM 100K J 1/16W	
CP15			RK74GA1J104J	CHIP-COM 100K J 1/16W	
CP16			RK74GB1J222J	CHIP-COM 2.2K J 1/16W	
CP17			RK74GA1J102J	CHIP-COM 1.0K J 1/16W	
CP18			RK74GA1J104J	CHIP-COM 100K J 1/16W	
CP19,20			RK74GB1J104J	CHIP-COM 100K J 1/16W	
R2			R92-3494-05	METAL GLAZE RESISTOR	
R5			RK73GB2A101J	CHIP R 100 J 1/10W	
R6			RK73GH2A223D	CHIP R 22K D 1/10W	
R8			RK73GH2A393D	CHIP R 39K D 1/10W	
R9			RK73GB2A104J	CHIP R 100K J 1/10W	
R10			RK73GB2A101J	CHIP R 100 J 1/10W	
R11,12			RK73GB2A104J	CHIP R 100K J 1/10W	
R13			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R18			RK73GB2A101J	CHIP R 100 J 1/10W	
R21,22			RK73GB2A103J	CHIP R 10K J 1/10W	
R27			RK73GB2A104J	CHIP R 100K J 1/10W	
R28			RK73GB2A103J	CHIP R 10K J 1/10W	
R29			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R34			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R35			RK73GB2A104J	CHIP R 100K J 1/10W	
R36			RK73FB2B4R7J	CHIP R 4.7 J 1/8W	
R37			RK73GB2A103J	CHIP R 10K J 1/10W	
R40			RK73GB2A274J	CHIP R 270K J 1/10W	
R42			RK73GB2A101J	CHIP R 100 J 1/10W	
R43			RK73GB2A393J	CHIP R 39K J 1/10W	
R44,45			RK73GB2A302J	CHIP R 3.0K J 1/10W	
R46			RK73GB2A105J	CHIP R 1.0M J 1/10W	
R47			RK73GB2A104J	CHIP R 100K J 1/10W	
R48,49			RK73GB2A331J	CHIP R 330 J 1/10W	
R50			RK73GB2A101J	CHIP R 100 J 1/10W	
R51			RK73GB2A392J	CHIP R 3.9K J 1/10W	
R52			RK73GB2A163J	CHIP R 16K J 1/10W	
R53			RK73GB2A123J	CHIP R 12K J 1/10W	
R54			RK73GB2A333J	CHIP R 33K J 1/10W	
R55			RK73GB2A103J	CHIP R 10K J 1/10W	
R56			RK73GB2A123J	CHIP R 12K J 1/10W	

K : North America

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

CD PLAYER UNIT (X32-5560-00)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
R57,58 R59 R60 R61 R62			RK73GB2A133J RK73GB2A472J RK73GB2A123J RK73GB2A183J RK73GB2A432J	CHIP R 13K J 1/10W CHIP R 4.7K J 1/10W CHIP R 12K J 1/10W CHIP R 18K J 1/10W CHIP R 4.3K J 1/10W	
R63 R64 R65 R68 R70			RK73GB2A133J RK73GB2A241J RK73GB2A104J RK73GB2A104J RK73GB2A102J	CHIP R 13K J 1/10W CHIP R 240 J 1/10W CHIP R 100K J 1/10W CHIP R 100K J 1/10W CHIP R 1.0K J 1/10W	
R71-73 R108-110 R111,112 R113 R114			RK73GB2A101J RK73GH2A392D RK73GH2A562D RK73GH2A392D RK73GH2A562D	CHIP R 100 J 1/10W CHIP R 3.9K D 1/10W CHIP R 5.6K D 1/10W CHIP R 3.9K D 1/10W CHIP R 5.6K D 1/10W	
R115 R116 R117 R118,119 R120,121			RK73GH2A392D RK73GH2A562D RK73GH2A392D RK73GH2A100D RK73GH2A392D	CHIP R 3.9K D 1/10W CHIP R 5.6K D 1/10W CHIP R 3.9K D 1/10W CHIP R 10 D 1/10W CHIP R 3.9K D 1/10W	
R122 R123 R124 R128,129 R130			RK73GH2A202D RK73GH2A681D RK73GB2A680J RK73GB2A101J RK73GB2A221J	CHIP R 2.0K D 1/10W CHIP R 680 D 1/10W CHIP R 68 J 1/10W CHIP R 100 J 1/10W CHIP R 220 J 1/10W	
R132,133 R134 R135 R136 R137			RK73GB2A102J RK73GH2A202D RK73GH2A681D RK73EB2E220J RK73GB2A680J	CHIP R 1.0K J 1/10W CHIP R 2.0K D 1/10W CHIP R 680 D 1/10W CHIP R 22 J 1/4W CHIP R 68 J 1/10W	
R138 R139-141 R142 R143 R144			RK73GB2A470J RK73GH2A151D RK73GB2A2R2J RK73GB2A104J RK73GB2A103J	CHIP R 47 J 1/10W CHIP R 150 D 1/10W CHIP R 2.2 J 1/10W CHIP R 100K J 1/10W CHIP R 10K J 1/10W	
R145 R146,147 R148 R149 R151			RK73GH2A330D RK73GB2A101J RK73GB2A562J RK73GB2A104J RK73GB2A104J	CHIP R 33 D 1/10W CHIP R 100 J 1/10W CHIP R 5.6K J 1/10W CHIP R 100K J 1/10W CHIP R 100K J 1/10W	
R152 W10			RK73GB2A472J R92-1252-05	CHIP R 4.7K J 1/10W CHIP R 0 OHM J 1/16W	
S1,2 S3			S68-0863-05 S68-0862-05	PUSH SWITCH PUSH SWITCH	
D2 D3 D4,5 IC1 IC2			DA204UF DAN202UF MAZS0510L 91CW12AFG-4VF6 UPD63712GC	DIODE DIODE ZENER DIODE MICROCONTROLLER IC MOS-IC	
IC3 IC4 IC5 IC5 IC10			TC94A20F-010 BA5824FP-F NJM2880U133 NJM2880U33 PCM1793DB	MOS-IC ANALOGUE IC ANALOGUE IC ANALOGUE IC MOS-IC	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
IC13 IC14 IC15 Q1 Q3			NJM4580V-LF TAR5S50-F NJM2890R3325 2SK3018F UMD9N	ANALOGUE IC ANALOGUE IC ANALOGUE IC FET TRANSISTOR	
Q4 Q5 Q6 Q7 Q8			2SK3018F UMD9N UMD12N DTC124EUF 2SB0970	FET TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR	
Q9,10 Q11,12			DTC114YUAF 2SB0970	DIGITAL TRANSISTOR TRANSISTOR	
ELECTRIC UNIT (X34-3080-10)					
C1 C2 C3 C4-6 C21			C90-5626-05 CK73GB1H103K CK73GB1H102K CK73GB1H103K CD04AS1A101M	ELECTRO 3900UF 16WV CHIP C 0.010UF K CHIP C 1000PF K CHIP C 0.010UF K ELECTRO 100UF 10WV	
C22,23 C24,25 C26 C27 C28			CD04AS1E100M CD04AS1C100M CD04AS1E100M CD04AT1H100M C90-5635-05	ELECTRO 10UF 25WV ELECTRO 10UF 16WV ELECTRO 10UF 25WV ELECTRO 10UF 50WV ELECTRO 220UF 16WV	
C29 C31 C32 C33 C41,42			CD04AS1C100M CK73GB1H103K CK73GB1E223K CD04AS1H010M CD04BF1E101M	ELECTRO 10UF 16WV CHIP C 0.010UF K CHIP C 0.022UF K ELECTRO 1UF 50WV ELECTRO 100UF 25WV	
C43,44 C45 C51,52 C111 C119			CD04BF1C221M CK73GB1A224K CK73GB1H103K CK73GB1H102K CK73GB1H103K	ELECTRO 220UF 16WV CHIP C 0.22UF K CHIP C 0.010UF K CHIP C 1000PF K CHIP C 0.010UF K	
C163 C201,202 C203 C204 C205			CK73GB1H103K CD04AS1HR47M CK73GB1H223K CK73GB1H103K CK73GB1A474K	CHIP C 0.010UF K ELECTRO 0.47UF 50WV CHIP C 0.022UF K CHIP C 0.010UF K CHIP C 0.47UF K	
C206 C207,208 C209 C210 C211		*	CC73GCH1H151J CD04AS1H010M C90-5540-05 CK73GB1H103K CD04AS1A470M	CHIP C 150PF J ELECTRO 1UF 50WV ELECTRO 2.2UF 50WV CHIP C 0.010UF K ELECTRO 47UF 10WV	
C212,213 C214,215 C216,217 C218-221 C222-225			CK73GB1C104K CK73GB1H103K CD04AS1H010M CD04AS1H0R1M CK73GB1C104K	CHIP C 0.10UF K CHIP C 0.010UF K ELECTRO 1UF 50WV ELECTRO 0.1UF 50WV CHIP C 0.10UF K	
C226,227 C251-254 C255 C256 C257			CK73FB1A105K C94-0179-05 CD04AS1H010M CD04AS1C220M CK73GB1A105K	CHIP C 1.0UF K ELECTRO 0.22UF 50WV ELECTRO 1UF 50WV ELECTRO 22UF 16WV CHIP C 1.0UF K	
C258			C94-0048-05	ELECTRO 0.22UF 50WV	

K : North America

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

ELECTRIC UNIT (X34-3080-10)

Ref. No.	Added	New	Parts No.	Description	Destination	Ref. No.	Added	New	Parts No.	Description	Destination
C301,302			CD04AS1HR47M	ELECTRO 0.47UF 50WV		R33			RK73GB2A473J	CHIP R 47K J 1/10W	
C303			CD04AS1A470M	ELECTRO 47UF 10WV		R34			RK73EB2E103J	CHIP R 10K J 1/4W	
C304			CK73GB1H103K	CHIP C 0.010UF K		R35			RK73GB2A104J	CHIP R 100K J 1/10W	
C351-354			CD04AS1C100M	ELECTRO 10UF 16WV		R36			RK73GB2A222J	CHIP R 2.2K J 1/10W	
C356,357			CK73GB1H103K	CHIP C 0.010UF K		R37			RK73EB2E102J	CHIP R 1.0K J 1/4W	
C358,359			CD04AS1C100M	ELECTRO 10UF 16WV		R38			RK73GB2A561J	CHIP R 560 J 1/10W	
C360			CK73GB1H103K	CHIP C 0.010UF K		R41-44			RK73GB2A473J	CHIP R 47K J 1/10W	
C401-404			CK73GB1H103K	CHIP C 0.010UF K		R51,52			RK73GB2A222J	CHIP R 2.2K J 1/10W	
C405			CK73GB0J105K	CHIP C 1.0UF K		R53-56			RK73GB2A102J	CHIP R 1.0K J 1/10W	
C406			CK73GB1C104K	CHIP C 0.10UF K		R58			RK73GB2A222J	CHIP R 2.2K J 1/10W	
C407			CC73GCH1H220J	CHIP C 22PF J		R59			RK73GB2A101J	CHIP R 100 J 1/10W	
C408			CC73GCH1H270J	CHIP C 27PF J		R60			RK73GB2A222J	CHIP R 2.2K J 1/10W	
C409			CD04AT0J470M	ELECTRO 47UF 6.3WV		R61,62			RK73GB2A104J	CHIP R 100K J 1/10W	
C500			CK73FB1A225K	CHIP C 2.2UF K		R63			RK73GB2A222J	CHIP R 2.2K J 1/10W	
C501,502			CK73GB1H103K	CHIP C 0.010UF K		R64,65			RK73GB2A104J	CHIP R 100K J 1/10W	
C503			CK73GB1H472K	CHIP C 4700PF K		R67,68			RK73GB2A471J	CHIP R 470 J 1/10W	
CN1			E41-0167-05	PIN ASSY		R101			RK73GB2A102J	CHIP R 1.0K J 1/10W	
CN2			E41-0168-05	FLAT CABLE CONNECTOR		R102			RK73GB2A471J	CHIP R 470 J 1/10W	
CN4			E40-3241-05	PIN ASSY		R103			RK73GB2A472J	CHIP R 4.7K J 1/10W	
CN5			E40-3260-05	PIN ASSY		R104			RK73GB2A471J	CHIP R 470 J 1/10W	
CN6			E40-3261-05	PIN ASSY		R105			RK73GB2A472J	CHIP R 4.7K J 1/10W	
△ J1			E58-0863-15	RECTANGULAR RECEPTACLE		R106			RK73GB2A222J	CHIP R 2.2K J 1/10W	
J2			E56-0834-05	CYLINDRICAL RECEPTACLE		R152			RK73GB2A102J	CHIP R 1.0K J 1/10W	
J3			E63-0887-05	PIN JACK		R153			RK73GB2A471J	CHIP R 470 J 1/10W	
J4			E04-0312-05	RF COAXIAL CABLE RECEPTACLE		R154			RK73GB2A102J	CHIP R 1.0K J 1/10W	
L1			L33-1170-05	CHOKE COIL ASSY		R155			RK73GB2A222J	CHIP R 2.2K J 1/10W	
L3			L33-1123-05	LINE FILTER COIL		R157,158			RK73GB2A471J	CHIP R 470 J 1/10W	
L6-8			L40-4795-91	SMALL FIXED INDUCTOR (4.7UH,J)		R159			RK73GB2A102J	CHIP R 1.0K J 1/10W	
L10,11			L40-4795-91	SMALL FIXED INDUCTOR (4.7UH,J)		R160			RK73GB2A222J	CHIP R 2.2K J 1/10W	
L12			L33-1925-05	CHOKE COIL		R161			RK73GB2A225J	CHIP R 2.2M J 1/10W	
X1			L78-0821-05	RESONATOR		R162,163			RK73GB2A104J	CHIP R 100K J 1/10W	
X2			L77-2738-05	CRYSTAL RESONATOR		R164,165			RK73GB2A473J	CHIP R 47K J 1/10W	
E	2D		N83-3005-46	PAN HEAD TAPTITE SCREW		R166			RK73GB2A472J	CHIP R 4.7K J 1/10W	
H	2D		N80-3008-46	PAN HEAD TAPTITE SCREW		R167			RK73GB2A474J	CHIP R 470K J 1/10W	
J	2D		N80-3010-46	PAN HEAD TAPTITE SCREW		R168,169			RK73GB2A102J	CHIP R 1.0K J 1/10W	
K	2D		N83-3020-46	PAN HEAD TAPTITE SCREW		R185,186			RK73GB2A474J	CHIP R 470K J 1/10W	
L	2D		N86-2606-46	BINDING HEAD TAPTITE SCREW		R187			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R1			RK73GB2A823J	CHIP R 82K J 1/10W		R188			RK73GB2A473J	CHIP R 47K J 1/10W	
R2			RK73GB2A363J	CHIP R 36K J 1/10W		R201			RK73GB2A103J	CHIP R 10K J 1/10W	
R3			RK73GB2A104J	CHIP R 100K J 1/10W		R202-204			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R4			RK73FB2B203J	CHIP R 20K J 1/8W		R205			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R5,6			RK73GB2A103J	CHIP R 10K J 1/10W		R207,208			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R7			RK73GB2A223J	CHIP R 22K J 1/10W		R209,210			RK73GB2A103J	CHIP R 10K J 1/10W	
R8			RD14DB2H332J	SMALL-RD 3.3K J 1/2W		R211-216			RK73GB2A333J	CHIP R 33K J 1/10W	
R9			RD14BB2C333J	RD 33K J 1/6W		R251			RK73GB2A473J	CHIP R 47K J 1/10W	
R10,11			RK73GB2A223J	CHIP R 22K J 1/10W		R253			RK73GB2A432J	CHIP R 4.3K J 1/10W	
R12			RK73GB2A473J	CHIP R 47K J 1/10W		R254			RK73GB2A100J	CHIP R 10 J 1/10W	
R13			RK73GB2A562J	CHIP R 5.6K J 1/10W		R255			RK73GB2A331J	CHIP R 330 J 1/10W	
R21			RK73FB2B152J	CHIP R 1.5K J 1/8W		R256			RK73GB2A334J	CHIP R 330K J 1/10W	
R22,23			RD14BB2C472J	RD 4.7K J 1/6W		R257			RK73GB2A153J	CHIP R 15K J 1/10W	
R24-28			RK73GB2A103J	CHIP R 10K J 1/10W		R301,302			RK73EB2E100J	CHIP R 10 J 1/4W	
R31			RK73EB2E103J	CHIP R 10K J 1/4W		R303			RK73EB2E101J	CHIP R 100 J 1/4W	
R32			RK73GB2A223J	CHIP R 22K J 1/10W		R304,305			RK73EB2E472J	CHIP R 4.7K J 1/4W	
						R306			RK73EB2E4R7J	CHIP R 4.7 J 1/4W	
						R307-309			RK73EB2E472J	CHIP R 4.7K J 1/4W	

K : North America

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

ELECTRIC UNIT (X34-3080-10)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
R310,311 R312-315 R351,352 R355,356 R357,358			RK73EB2E101J RK73GB2A104J RK73GB2A361J RK73GB2A223J RK73EB2E181J	CHIP R 100 J 1/4W CHIP R 100K J 1/10W CHIP R 360 J 1/10W CHIP R 22K J 1/10W CHIP R 180 J 1/4W	
R359,360 R361,362 R363,364 R366-368 R369			RK73GB2A361J RK73GB2A223J RK73EB2E181J RK73FB2B471J RK73EB2E471J	CHIP R 360 J 1/10W CHIP R 22K J 1/10W CHIP R 180 J 1/4W CHIP R 470 J 1/8W CHIP R 470 J 1/4W	
R370-372 R374,375 R376,377 R378,379 R401-406			RK73GB2A101J RK73GB2A361J RK73GB2A223J RK73FB2B181J RK73GB2A104J	CHIP R 100 J 1/10W CHIP R 360 J 1/10W CHIP R 22K J 1/10W CHIP R 180 J 1/8W CHIP R 100K J 1/10W	
R407 R408 R409 R410 R412			RK73GB2A223J RK73GB2A104J RK73GB2A153J RK73GB2A104J RK73GB2A223J	CHIP R 22K J 1/10W CHIP R 100K J 1/10W CHIP R 15K J 1/10W CHIP R 100K J 1/10W CHIP R 22K J 1/10W	
R415 R417 R419 R421 R422			RK73GB2A223J RK73GB2A223J RK73GB2A223J RK73GB2A223J RK73GB2A103J	CHIP R 22K J 1/10W CHIP R 22K J 1/10W CHIP R 22K J 1/10W CHIP R 22K J 1/10W CHIP R 10K J 1/10W	
W101,102 W103,104 W109 W201-204			R92-2052-05 R92-1252-05 R92-1252-05 R92-1252-05	CHIP R 0 OHM J 1/10W CHIP R 0 OHM J 1/16W CHIP R 0 OHM J 1/16W CHIP R 0 OHM J 1/16W	
S1			S74-0821-05	MICRO SWITCH	
D1 D2-4 D21 D22-25 D26			1N5393G-M6 MA4068(N)-M MA4082(N)-L AM01ZNF DAN202U	DIODE ZENER DIODE ZENER DIODE DIODE DIODE	
D31 D32 D41 D151-155 D157-162			HZS5B1 MA4056-M SFPB-54V DA204K DA204K	ZENER DIODE ZENER DIODE DIODE DIODE DIODE	
D163 D164 D165 D166 D203-205			MA4062-L MA4120-L MA4062-L DA204U DAP202U	ZENER DIODE ZENER DIODE ZENER DIODE DIODE DIODE	
D269 D271 D301 D303,304 D307,308			1SS133 1SS133 MA4062-L MA4062-L MA4062-L	DIODE DIODE ZENER DIODE ZENER DIODE ZENER DIODE	
D309-311 D401 IC1 IC2			MA4068(N)-M 1SS133 UPD703030GC044 TDA7411	ZENER DIODE DIODE MICROCONTROLLER IC ANALOGUE IC	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
IC3 IC4 IC6 IC8 IC9			BA4911-V4 TB2903H HD74HC27FP-E PST3436UL SI-8050JD	ANALOGUE IC ANALOGUE IC MOS-IC MOS-IC ANALOGUE IC	
Q1-3 Q4 Q21 Q22,23 Q31			2SC4081 2SA1036K 2SD2375 UMC2N DTC144EUA	TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR	
Q32 Q41 Q151 Q152 Q153			DTA123JK 2SC4081 DTA114YUA 2SA1576A DTC144EUA	DIGITAL TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR	
Q154 Q201 Q350 Q351,352 Q354			2SA1577 DTC143TUA DTA124EUA DTC143TUA DTA124EUA	TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR	
Q355-358 TH1			DTC143TUA PRF21BE471QB2	DIGITAL TRANSISTOR POSITIVE RESISTOR	
A1			X86-3720-11	FRONT-END UNIT	
DAUGHTER UNIT (X89-2570-10)					
C1 CN1 J1			CK73GB1H103K E41-0169-05 E58-0865-05	CHIP C 0.010UF K SOCKET FOR PIN ASSY RECTANGULAR RECEPTACLE	
R1 R2-5 R6,7 R8 R9,10			RK73EB2E102J RK73EB2E471J RK73EB2E102J RK73EB2E241J RK73EB2E471J	CHIP R 1.0K J 1/4W CHIP R 470 J 1/4W CHIP R 1.0K J 1/4W CHIP R 240 J 1/4W CHIP R 470 J 1/4W	
R11-13			RK73EB2E102J	CHIP R 1.0K J 1/4W	
S1			S70-0871-05	TACT SWITCH	
CD MECHANISM ASSY (X92-4910-00)					
2	1B		A10-4827-32	CHASSIS	
5	1B	*	D10-4576-73	ARM ASSY	
8	2A		D10-4579-13	LEVER ASSY	
10	2A		D10-4581-13	ARM	
11	2A		D10-4582-13	ARM	
12	3A		D10-4583-03	ARM	
13	3A		D10-4584-03	ARM	
14	3B		D10-4585-03	ARM	
15	2A		D10-4586-13	SLIDER	
16	3B		D10-4587-32	SLIDER	
17	2B		D10-4588-13	SLIDER	
18	2B		D10-4595-04	ARM	
19	3B		D10-4596-14	ARM	
22	2A		D13-2151-04	GEAR	
23	2B		D13-2152-04	GEAR	
24	3B		D13-2153-04	GEAR	

K : North America

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

CD MECHANISM ASSY (X92-4910-00)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation	Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
25	3B		D13-2154-04	GEAR							
26	3B		D13-2155-04	WORM							
27	2B		D13-2156-14	GEAR							
28	3B		D13-2157-04	GEAR							
29	3B		D13-2158-04	GEAR							
30	2B		D13-2168-04	GEAR							
31	3B		D13-2171-04	GEAR							
32	2B		D13-2172-03	RACK (GEAR)							
33	2A		D14-0759-04	ROLLER							
35	2B		D21-2382-04	SHAFT							
36	1A		D23-0954-04	RETAINER							
37	1B		D39-0246-05	DAMPER							
38	2B		G01-3072-04	EXTENSION SPRING							
39	2A		G01-3073-04	TORSION COIL SPRING							
40	2A		G01-3074-04	EXTENSION SPRING							
41	1B		G01-3075-14	EXTENSION SPRING							
42	2A		G01-3076-04	EXTENSION SPRING							
43	1B		G01-3077-14	EXTENSION SPRING							
44	2B		G02-1399-04	FLAT SPRING							
45	2B		G02-1408-04	FLAT SPRING							
-			H25-1103-04	PROTECTION BAG (200X250X0.05)							
51	1A		J21-9676-22	MOUNTING HARDWARE							
52	3B		J21-9677-22	MOUNTING HARDWARE							
53	1B		J21-9678-13	MOUNTING HARDWARE							
55	1A		J90-1001-11	GUIDE							
56	1B		J90-1023-03	GUIDE							
A	2B		N09-4460-05	TAPTITE SCREW (OVAL P TAPTIT)							
B	1B		N09-4472-15	MACHINE SCREW (M1.7X8.0)							
C	2B		N09-6004-05	MACHINE SCREW (M1.7X2.5 IB-L)							
E	2B		N09-6007-05	MACHINE SCREW (PAN M2X2)							
F	1A		N09-6051-05	TAPTITE SCREW (BIND P 2X5)							
G	2A		N19-2163-04	FLAT WASHER							
H	1B		N39-2020-46	PAN HEAD MACHIN SCREW							
J	1B		N09-6108-05	MACHINE SCREW (M2*3.5TYPE3)							
K	3B		N09-6155-05	SEMS (TAPTITE SCREW)(PT2X6)							
DM1	3B		T42-1066-04	DC MOTOR ASSY (SP)							
DM2	2B		T42-1067-04	DC MOTOR ASSY (LO)							
DPU1	2B		X93-2010-00	OPTICAL PICKUP ASSY							

K : North America

△ Indicates safety critical components.