


9. EXPLODED VIEWS AND PARTS LIST

- NOTES :
- Parts marked by " * " are generally unavailable because they are not in our Master Spare Parts List.
 - The  mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
 - Screw adjacent to  mark on the product are used for disassembly.
 - For the applying amount of lubricants or glue, follow the instructions in this manual.
(In the case of no amount instructions, apply as you think it appropriate.)

9.1 PACKING

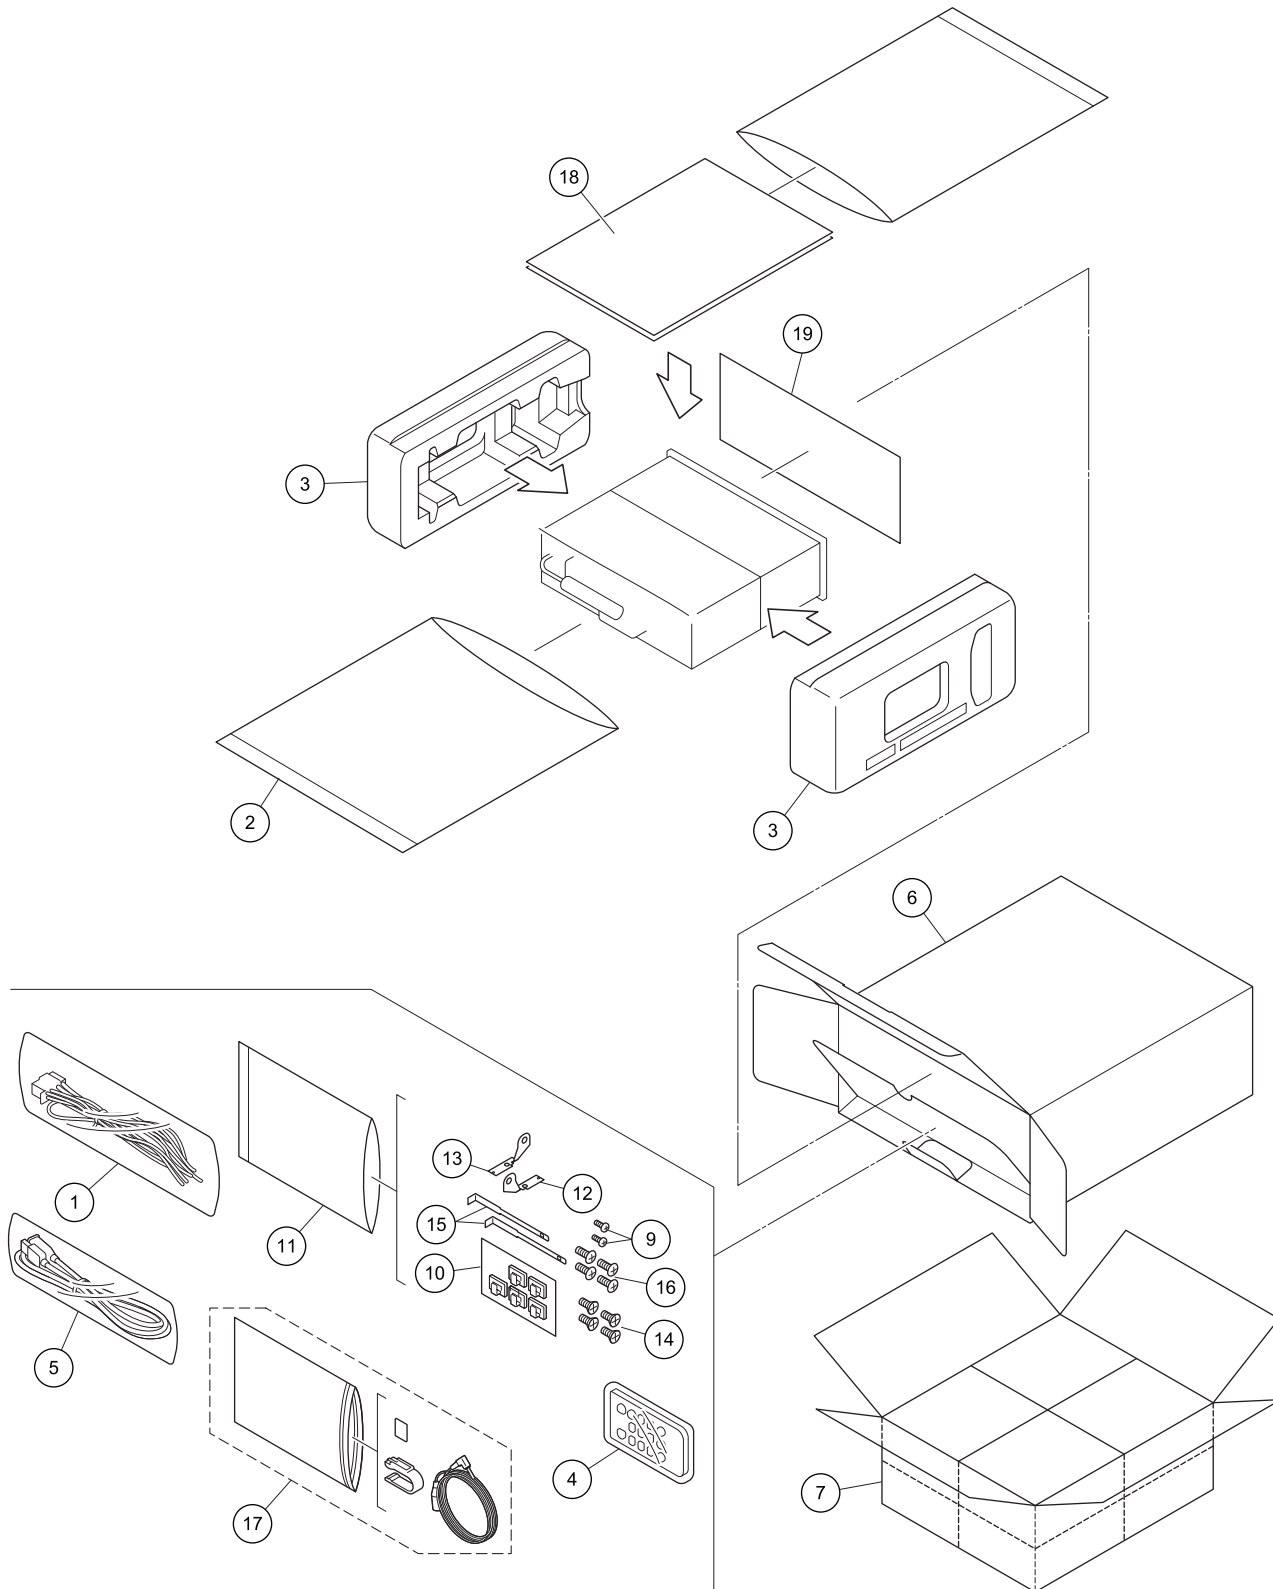

5

6

7

8


PACKING SECTION PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
1	Cord Assy	CDP1484	12	Holder	CND1249
2	Polyethylene Bag	CEG1173	13	Holder	CND1250
3	Protector	QHP3016	14	Screw	CRZ50P090FTC
4	Card Remote Control Unit	QXE1044	15	Handle	QNC3021
5	USB Cable	YDP5047			
6	Unit Box	YHG5666	16	Screw	TRZ50P080FTC
7	Contain Box	YHL5666	17	Microphone Assy	YPM5003
8	*****		* 18-1	Warranty Card	QRY3001
9	Screw	BPZ20P060FTC	18-2	Owner's Manual	YRD5357
10	Cord Clamper Assy	CEA4636	18-3	Caution Card	YRP5030
11	Polyethylene Bag	CEG1160	19	Cover	YEG5008

Owner's Manual,Installation Manual

Part No.	Language
YRD5357	English, French, Spanish(Espanol)

9.2 EXTERIOR

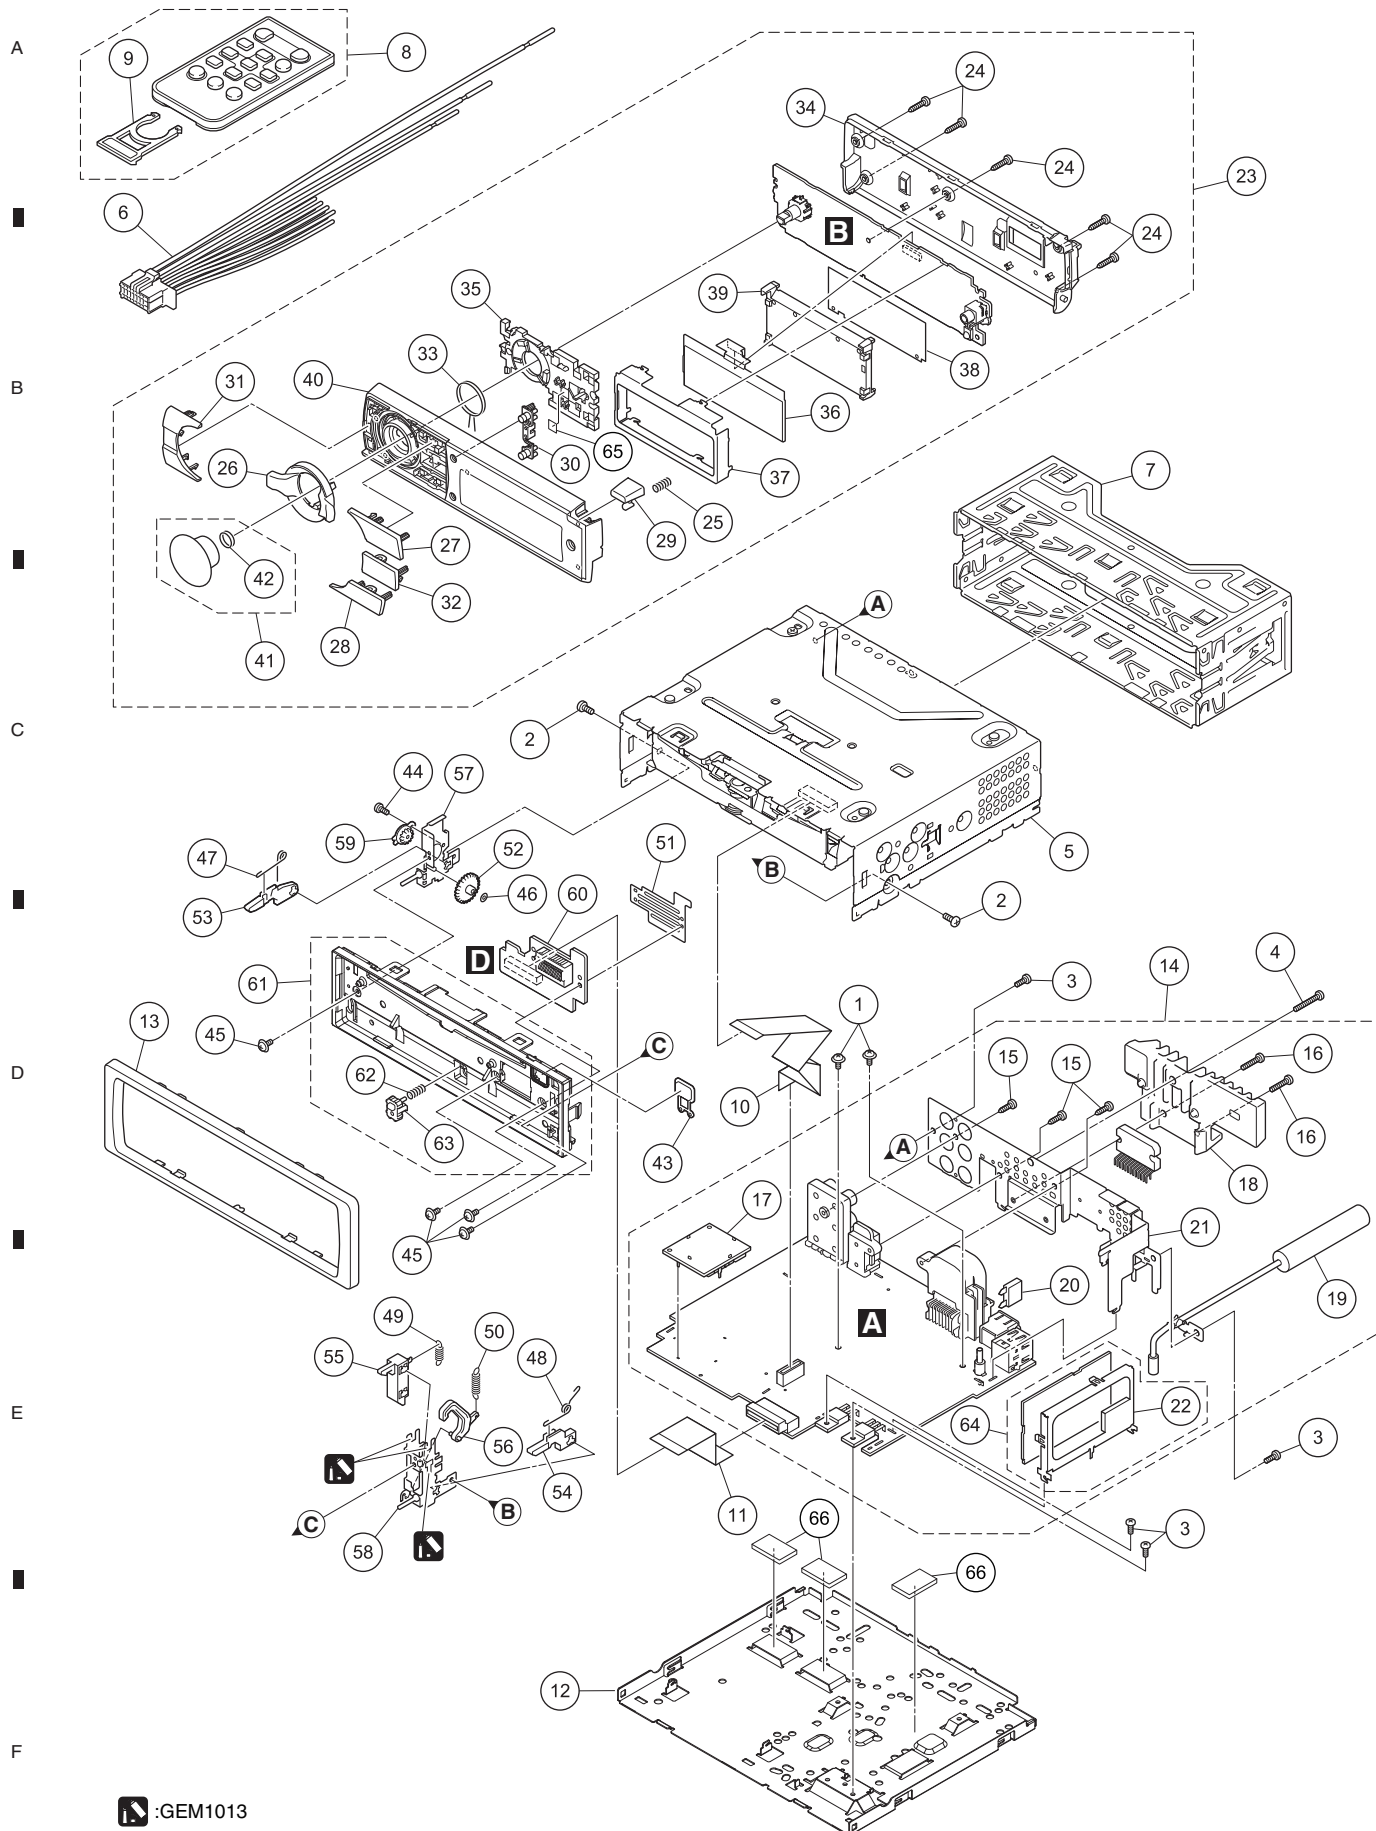

GEM1013


DEH-P9400BH/XSUC

EXTERIOR SECTION PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>
1	Screw	ASZ26P050FTC	50	Spring	CBH2653
2	Screw	BMZ30P040FTC	51	Holder	CND1254
3	Screw	BSZ26P060FTC	52	Gear	CNV5997
4	Screw	BSZ26P120FTC	53	Arm	CNV7400
5	CD Mechanism Module (S11.6)	CXK5804	54	Arm	CNV7401
6	Cord Assy	CDP1484	55	Arm	CNV7402
7	Holder	QNC3020	56	Arm	CNV7403
8	Card Remote Control Unit	QXE1044	57	Holder Unit	CXB9501
9	Cover	CNS7068	58	Holder Unit	CXB9502
10	FFC	YDE5096	59	Damper Unit	CXB9503
11	FFC	YDE5097	60	Panel Unit	YWM5577
12	Case	YNB5080	61	Panel Unit	YXA5858
13	Panel	YNS5687	62	Spring	YBH5013
14	Tuner Amp Unit	YWM5556	63	Button	YAC5395
15	Screw	BPZ26P080FTC	64	WWR Core Tuner Unit	CWE2328
16	Screw	BSZ26P120FTC	65	Sheet	YNM5195
17	BT Module	CWX4188	66	Sheet	YNM5198
18	Heat Sink	QNR3002			
19	Antenna Attached Cable	YDH5001			
20	Fuse (10 A)	YEK5001			
21	Holder	YNC5098			
22	Holder	CND5830			
23	Detachable Grille Assy	YXA5819			
24	Screw	BPZ20P100FTC			
25	Spring	XBH7001			
26	Lever	YAA5084			
27	Button (BACK/DISP, LIST)	YAC5443			
28	Button (SRC/OFF, BAND)	YAC5445			
29	Button (OPEN)	YAC5447			
30	Button (UP, DOWN)	YAC5448			
31	Button (PHONE)	YAC5467			
32	Button (CLOCK/DISP OFF)	YAC5471			
33	Spring	YBH5016			
34	Cover	YNS5657			
35	Lighting Conductor	YNV5226			
36	STN LCD	YAW5113			
37	Holder	YNC5097			
38	Sheet	YNM5174			
39	Plate Unit	YXA5834			
40	Grille Unit	YXA5854			
41	Knob Unit	YXC5156			
42	Spring	YBL5010			
43	Button (EJECT)	CAC7752			
44	Screw (M2 x 4)	CBA1649			
45	Screw (M2 x 4.5)	CBA1925			
46	Washer	CBF1038			
47	Spring	CBH2650			
48	Spring	CBH2651			
49	Spring	CBH2652			



9.3 CD MECHANISM MODULE

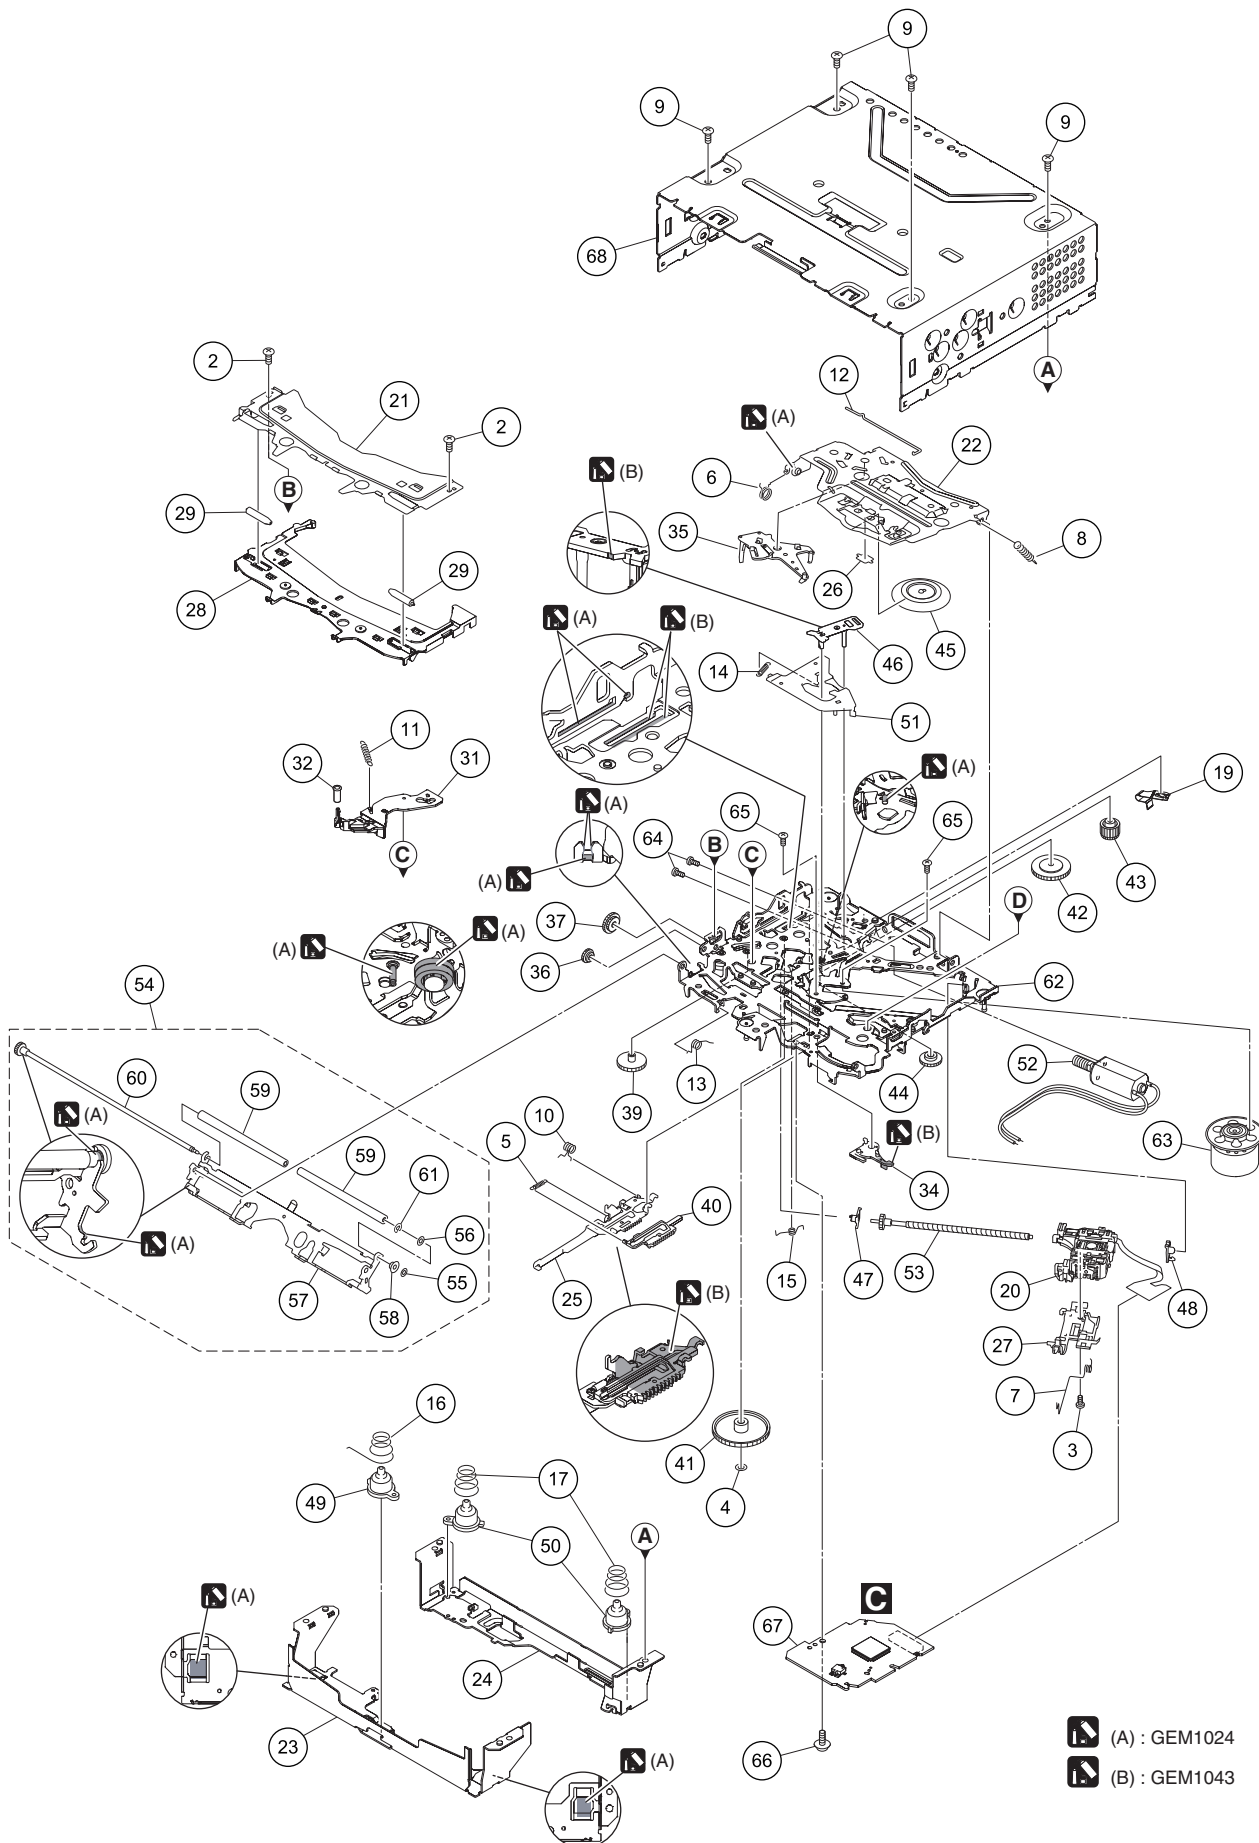

DEH-P9400BH/XSUC

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	
1			50	Damper	CNW1198	
2	Screw	BSZ20P040FTC	51	Arm	CNW1726	A
3	Screw(M2 x 4)	CBA1835	52	Motor Unit(M2)(LOAD/CRG)	CXC4026	
4	Washer	CBF1038	53	Screw Unit	CXC8894	
5	Spring	CBH3010	54	Arm Assy	CXE4840	
6	Spring	CBH2855	55	Washer	CBF1037	
7	Spring	CBH2856				
8	Spring	CBH2860	56	Washer	CBF1038	
9	Screw	BSZ26P060FTC	57	Arm	CND6242	
10	Spring	CBH3011	58	Collar	CNV6906	
11	Coil Spring	CBH3095	59	Roller	CNW1196	
12	Spring	CBH3014	60	Gear Unit	CXC8893	B
13	Spring	CBH3015	61	Washer	YE15FTC	
14	Spring	CBH3016	62	Chassis Unit	CXE4528	
15	Spring	CBH3017	63	Motor Unit(M1)(SPDL)	CXE2273	
16	Spring	CBH3086	64	Screw	JFZ20P025FTC	
17	Spring	CBH3019	65	Screw	JGZ17P022FTC	
18			66	Screw	EBA1028	
19	Leaf Spring	CBL1824	67	CD Core Unit (S11.6STD)	CWX4023	
20	Pickup Unit(P10.6)(Service)	CXX3556	68	Chassis	CNA3181	C
21	Bracket	CND4553				
22	Arm	CND6406				
23	Bracket	CND6127				
24	Bracket	CND5710				
25	Lever	CND5398				
26	Sheet	CNN3678				
27	Rack	CNV8342				
28	Guide	CNW2240				
29	Roller	CNW1172				D
30						
31	Arm	CNW2241				
32	Roller	CNW1175				
33						
34	Arm	CNW1177				
35	Arm	CNW1178				
36	Gear	CNW1180				
37	Gear	CNW1181				
38						E
39	Gear	CNW1183				
40	Rack	CNW1184				
41	Gear	CNW1185				
42	Gear	CNW1186				
43	Gear	CNW1187				
44	Gear	CNW2287				
45	Clamper	CNW1190				
46	Arm	CNW1192				
47	Holder	CNW1193				F
48	Holder	CNW1194				
49	Damper	CNW1197				

12. ELECTRICAL PARTS LIST

NOTE:

- Parts whose parts numbers are omitted are subject to being not supplied.
- The part numbers shown below indicate chip components.

Chip Resistor

RS1/○S○○○○J, RS1/○○S○○○○J

Chip Capacitor (except for CQS.....)

CKS....., CCS....., CSZS.....

- The $\triangle$ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- Meaning of the figures and others in the parentheses in the parts list.

Example) IC 301 is on the point (face A, 91 of x-axis, and 111 of y-axis) of the corresponding PC board.

IC 301 (A, 91, 111) IC NJM2068V

- The expression of the unit in this manual is shown by μ instead of μ . Please do not make a mistake.

<u>Circuit Symbol and No.</u>	<u>Part No.</u>	<u>Circuit Symbol and No.</u>	<u>Part No.</u>
Unit Number : YWM5556		IC 882 (A,35,47) IC	S-1172B33-E6
Unit Name : Tuner Amp Unit		IC 902 (A,145,44) IC	S-1206B33-U3
Unit Number :		IC 911 (A,37,112) IC	NJM2386ADL3-08
Unit Name : Keyboard Unit		IC 1021 (A,22,96) IC	OZ529IGN
Unit Number : CWX4023		IC 1041 (A,60,99) IC	OZ529IGN
Unit Name : CD Core Unit (S11.6STD)		IC 1061 (A,118,105) IC	TC7MB3257FK
Unit Number : YWM5577		Q 101 (A,140,133) Transistor	UMF23N
Unit Name : Panel Unit		Q 151 (B,20,114) Transistor	LSC4081UB
		Q 301 (A,10,130) Transistor	IMH23
		Q 302 (A,18,130) Transistor	IMH23
		Q 303 (A,26,129) Transistor	IMH23
		Q 361 (A,54,133) Transistor	LTC114EUB
		Q 381 (A,59,129) Transistor	LSC4081UB
		Q 382 (A,41,129) Chip Transistor	RN4983
		Q 591 (A,75,65) Transistor	LSA1576UB
		Q 671 (A,25,77) Transistor	LSA1576UB
		Q 751 (A,136,41) Transistor	2SD2396
		Q 752 (A,129,43) Chip Transistor	RN4983
		Q 821 (A,113,24) Transistor	2SA1577
		Q 822 (A,115,29) Transistor	RT1N141M-11
		Q 831 (A,119,26) Transistor	LSA1576UB
		Q 832 (A,119,30) Transistor	LTC114EUB
		Q 841 (A,103,23) Transistor	LSA1576UB
		Q 842 (A,102,27) Transistor	LTC114EUB
		Q 901 (A,155,41) Transistor	2SD2396
		Q 902 (A,154,46) Chip Transistor	RN4983
		Q 921 (A,107,128) Chip Transistor	HN1C01FU
		Q 931 (A,90,118) Transistor	LTC114EUB
		D 151 (B,25,115) Diode	UDZS15(B)
		D 161 (A,88,60) Diode	1SS301
		D 271 (B,139,71) Diode	CRG03
		D 272 (B,139,74) Diode	CRG03
		D 273 (B,139,77) Diode	CRG03
		D 274 (B,143,57) Diode	CRG03
		D 281 (B,134,48) Diode	CRG03
		D 282 (B,134,51) Diode	CRG03
		D 283 (A,133,64) Diode	RB160L-40
		D 381 (A,53,128) Diode	RKZ8.2KG(B2)
		D 382 (A,58,126) Diode	1SS301
		D 383 (A,51,128) Diode	1SS352
IC 101 (A,149,129) IC	HA12241FP		
IC 161 (A,88,66) IC	S-1155B50-U5		
IC 181 (A,74,83) IC	WM8761BGED		
IC 201 (A,72,120) IC	PM9012A		
IC 271 (B,148,72) IC	S-1172B11-E6		
IC 272 (B,148,61) IC	S-1155B33-U5		
IC 281 (A,127,63) IC	BD9008F		
IC 351 (A,81,142) IC	PA2030A		
IC 461 (A,80,67) IC	MX25L4006EM2I-12G		
IC 501 (A,57,66) IC	R5S7262ZD144FPU		
IC 571 (A,33,73) IC	PEH331A8		
IC 581 (A,85,46) IC	S-1172B33-E6		
IC 582 (B,87,50) IC	S-1155B12-U5		
IC 591 (A,81,58) IC	341S2162		
IC 601 (A,110,77) IC	PEG862A8		
IC 651 (A,102,91) IC	S-80827CNMC-B8M		
IC 671 (A,17,73) IC	IS42S16400F-7TL		
IC 851 (A,16,119) IC	NJM2360AM		
IC 861 (A,111,47) IC	BD9008F		
IC 881 (A,27,47) IC	NJM2872BF18		

A

Unit Number : YWM5556

Unit Name : Tuner Amp Unit

MISCELLANEOUS

	1	2	3	4
	<u>Circuit Symbol and No.</u>	<u>Part No.</u>	<u>Circuit Symbol and No.</u>	<u>Part No.</u>
A	D 581 (A,99,46) Diode	1SS352	VA803 (B,118,22) Varistor	EZJZ1V270RM
	D 582 (A,101,46) Diode	CRG03	VA804 (B,116,22) Varistor	EZJZ1V270RM
	D 601 (A,104,64) Diode	RB551V-30	VA805 (B,115,22) Varistor	EZJZ1V270RM
	D 602 (A,107,90) Diode	RB751S-40	VA806 (B,120,22) Varistor	EZJZ1V270RM
	D 651 (A,101,87) Diode	1SS352	VA807 (B,121,22) Varistor	EZJZ1V270RM
■	D 751 (A,139,46) Diode	RKZ8.2KG(B2)	VA808 (A,125,21) Varistor	EZJZ1V270RM
	D 851 (A,8,115) Diode	RB551V-30	VA809 (B,108,22) Diode	DZ2S068C
	D 861 (B,112,34) Diode	CRG03	VA810 (B,105,22) Diode	DZ2S068C
	D 862 (B,112,37) Diode	CRG03	VA811 (B,107,22) Diode	DZ2S068C
	D 863 (A,119,47) Diode	RB160L-40	VA921 (B,161,136) Varistor	EZJZ1V800AM
B	D 901 (B,145,42) Diode	CRG03	VA922 (B,166,136) Varistor	EZJZ1V800AM
	D 902 (A,156,48) Diode	RKZ5.6KG(B2)	VA941 (B,161,134) Varistor	EZJZ1V800AM
	D 921 (A,126,127) Diode	HZU7L(C3)	VA942 (B,166,134) Varistor	EZJZ1V800AM
	D 922 (A,113,129) Diode	HZU7L(A1)	VA1001 (A,45,48) Diode	DZ2S068C
	D 931 (A,87,119) Diode	CRG03	VA1002 (A,50,45) Diode	DZ2S068C
■	D 941 (A,99,129) Diode	CRG03	VA1003 (A,50,47) Diode	DZ2S068C
	D 942 (A,103,129) Diode	CRG03	U 251 (A,163,77) WWR C-TUN Unit	CWE2328
	D 981 (A,126,122) Diode	1SR154-400	CN701 (A,94,38) Connector	VKN1192
	D 982 (A,129,122) Diode	1SR154-400		
	D 1021 (B,32,109) Diode	CRG03	CN801 (A,112,15) Connector	CKS3836
C	D 1022 (B,32,106) Diode	CRG03	CN1001 (A,48,34) Connector	CKS6346
	D 1023 (A,29,95) Diode	DB2X41400	JA 101 (A,144,144) Connector	CKS5271
	D 1041 (B,32,112) Diode	CRG03	JA 141 (A,45,141) Jack	YKS5035
	D 1042 (B,32,114) Diode	CRG03	JA301 (A,21,141) Pin Jack	YKB5016
	D 1043 (A,67,96) Diode	DB2X41400	JA981 (A,116,141) Plug	CKM1586
■	D 1061 (B,119,110) Diode	RKZ5.1KG(B2)	JA1041 (A,163,135) Connector	YKS5043
	L 151 (B,35,118) Inductor	LCTAW6R8J2520	RESISTORS	
	L 181 (A,67,82) Chip Ferrite Bead	DTL1107	R 101 (A,147,132)	RS1/16SS101J
	L 251 (A,147,79) Chip Coil	LCTAW1R0J2520	R 102 (A,147,133)	RS1/16SS150J
	L 281 (A,139,65) Coil	CTH1475	R 103 (A,148,134)	RS1/16SS470J
D	L 501 (A,78,46) Chip Ferrite Bead	DTL1107	R 104 (A,149,134)	RS1/16SS101J
	L 602 (A,94,76) Inductor	CTF1786	R 105 (A,142,134)	RS1/16SS181J
	L 671 (A,25,79) Chip Ferrite Bead	DTL1107		
	L 672 (A,41,60) Inductor	CTF1743	R 106 (A,147,134)	RS1/16SS181J
	L 851 (A,9,109) Inductor	CTF1660	R 107 (A,145,134)	RS1/16SS102J
■	L 861 (A,115,40) Coil	CTH1475	R 108 (A,144,134)	RS1/16SS102J
	L 911 (B,50,113) Inductor	LCTAW6R8J2520	R 109 (A,143,134)	RS1/16SS223J
	L 921 (A,127,104) Inductor	CTF1713	R 110 (A,146,134)	RS1/16SS223J
	L 941 (A,125,106) Inductor	CTF1713		
	L 981 (A,114,141) Choke Coil 600 uH	CTH1432	R 111 (A,140,135)	RS1/16SS222J
E	L 1003 (A,45,46) Inductor	CTF1389	R 112 (A,144,130)	RS1/16SS101J
	L 1004 (A,13,35) Inductor	CTF1389	R 113 (A,151,132)	RS1/16SS102J
	L 1005 (A,13,33) Inductor	CTF1786	R 114 (A,138,135)	RS1/16SS332J
	L 1021 (A,9,95) Choke Coil 33 uH	CTH1417	R 115 (A,137,133)	RS1/16SS562J
	L 1022 (A,26,102) Inductor	CTF1793		
■	L 1041 (A,47,100) Choke Coil 33 uH	CTH1417	R 141 (B,46,128)	RS1/10SR102J
	L 1042 (A,64,104) Inductor	CTF1793	R 142 (B,41,130)	RS1/10SR102J
	X 501 (A,56,48) Oscillator 48.000 MHz	CSS1760	R 143 (A,39,133)	RS1/16SS0R0J
	X 502 (A,74,72) Oscillator 16.93 MHz	CSS1794	R 151 (B,20,116)	RS1/10SR101J
	X 601 (A,96,79) Oscillator 20.000 MHz	CSS1795	R 152 (A,30,107)	RS1/10SR0R0J
F	S 801 (A,92,15) Switch(DSENS)	CSN1039	R 162 (A,83,86)	RS1/10SR0R0J
	P 301 (A,29,119) Poly Switch	MINISMDC075F/24-2	R 163 (A,84,86)	RS1/10SR0R0J
	P 401 (B,155,113) Surge Protector	IMSA-6802-01Y900	R 191 (A,83,95)	RS1/16SS821J
	BZ601 (A,10,43) Buzzer	CPV1062	R 192 (A,83,98)	RS1/16SS821J
	VA141 (A,38,133) Varistor	VR105C5R0AAA	R 201 (A,66,125)	RAB4CQ102J
■	VA142 (A,40,132) Varistor	VR105C5R0AAA	R 202 (A,76,96)	RS1/16SS223J
	VA143 (A,39,131) Varistor	VR105C5R0AAA		
	VA144 (A,37,131) Varistor	VR105C5R0AAA	R 203 (A,78,96)	RS1/16SS223J
	VA801 (B,104,22) Varistor	EZJZ1V270RM	R 204 (A,77,96)	RS1/16SS331J
	VA802 (B,112,22) Varistor	EZJZ1V270RM	R 251 (A,146,76)	RS1/16SS821J
			R 252 (A,146,73)	RS1/16SS821J
			R 253 (A,146,74)	RS1/16SS103J

5		6		7		8	
<u>Circuit Symbol and No.</u>		<u>Part No.</u>		<u>Circuit Symbol and No.</u>		<u>Part No.</u>	
R 254	(A,146,75)	RS1/16SS103J		R 521	(A,74,60)	RS1/16SS473J	
R 255	(B,121,69)	RS1/10SR473J		R 522	(A,75,63)	RS1/16SS473J	
R 257	(A,145,71)	RS1/10SR680J		R 525	(A,75,79)	RS1/16SS221J	
R 258	(A,145,65)	RS1/10SR680J		R 527	(A,72,73)	RS1/16SS332J	
R 259	(A,145,68)	RS1/10SR680J		R 530	(A,66,82)	RS1/16SS221J	A
R 261	(B,137,95)	RS1/4SA0R0J		R 531	(A,65,82)	RS1/16SS101J	
R 281	(A,127,57)	RS1/16SS513J		R 532	(A,64,82)	RS1/16SS101J	
R 283	(A,127,68)	RS1/16SS183J		R 533	(A,63,82)	RS1/16SS221J	
R 285	(A,124,66)	RS1/16SS1002D		R 534	(A,40,77)	RS1/16SS472J	
R 286	(A,123,64)	RS1/16SS4702F		R 536	(A,41,77)	RS1/16SS0R0J	
R 287	(A,123,63)	RS1/16SS103J		R 537	(B,54,34)	RS1/10SR221J	
R 288	(A,139,70)	RS1/10SR471J		R 538	(B,51,37)	RS1/10SR221J	
R 301	(A,6,130)	RS1/16SS820J		R 539	(B,54,30)	RS1/10SR221J	
R 302	(A,13,129)	RS1/16SS820J		R 540	(A,66,49)	RS1/16SS473J	
R 303	(A,15,129)	RS1/16SS820J		R 541	(A,83,41)	RS1/16SS0R0J	B
R 304	(A,33,131)	RS1/16SS820J		R 542	(B,87,91)	RS1/4SA0R0J	
R 305	(A,23,129)	RS1/16SS820J		R 572	(B,41,77)	RS1/10SR472J	
R 306	(A,29,128)	RS1/16SS820J		R 574	(B,37,77)	RS1/10SR472J	
R 307	(A,6,131)	RS1/16SS223J		R 575	(A,29,86)	RAB4CQ221J	
R 308	(A,13,130)	RS1/16SS223J		R 576	(A,31,86)	RAB4CQ221J	
R 309	(A,15,130)	RS1/16SS223J		R 577	(A,34,86)	RAB4CQ221J	
R 310	(A,31,129)	RS1/16SS223J		R 578	(A,37,86)	RAB4CQ221J	
R 311	(A,23,130)	RS1/16SS223J		R 591	(A,74,63)	RS1/16SS472J	
R 312	(A,29,129)	RS1/16SS223J		R 592	(A,85,70)	RS1/16SS101J	
R 361	(A,58,134)	RS1/16SS103J		R 593	(A,86,57)	RS1/16SS103J	
R 362	(A,56,133)	RS1/16SS103J		R 594	(A,85,62)	RS1/16SS101J	C
R 363	(A,57,133)	RS1/16SS331J		R 595	(A,86,59)	RS1/16SS103J	
R 365	(A,65,134)	RS1/16SS103J		R 596	(A,77,60)	RS1/16SS473J	
R 366	(A,66,134)	RS1/16SS103J		R 599	(A,78,57)	RS1/16SS272J	
R 367	(A,66,130)	RS1/10SR562J		R 600	(A,77,58)	RS1/16SS472J	
R 371	(A,71,129)	RS1/16SS362J		R 601	(A,98,85)	RS1/16SS102J	
R 372	(A,70,129)	RS1/16SS362J		R 602	(A,94,84)	RS1/10SR154J	
R 375	(A,76,129)	RS1/16SS362J		R 603	(A,98,78)	RS1/16SS105J	
R 376	(A,76,128)	RS1/16SS362J		R 604	(A,99,82)	RS1/16SS104J	
R 377	(A,79,128)	RS1/16SS562J		R 605	(A,99,80)	RS1/16SS101J	
R 378	(A,78,129)	RS1/16SS562J		R 606	(A,94,74)	RS1/16SS104J	D
R 379	(A,72,131)	RS1/16SS562J		R 607	(A,100,71)	RS1/16SS222J	
R 380	(A,72,133)	RS1/16SS562J		R 608	(B,96,59)	RS1/10SR104J	
R 381	(A,55,130)	RS1/10SR473J		R 609	(B,98,77)	RS1/10SR104J	
R 382	(A,56,130)	RS1/10SR104J		R 610	(A,95,73)	RS1/16SS104J	
R 383	(A,118,69)	RS1/16SS473J		R 611	(A,96,74)	RS1/16SS104J	
R 384	(A,55,127)	RS1/10SR473J		R 612	(A,94,72)	RS1/16SS104J	
R 385	(A,50,132)	RS1/16SS102J		R 613	(A,106,65)	RS1/16SS104J	
R 463	(A,84,67)	RS1/10SR0R0J		R 614	(A,107,65)	RS1/16SS104J	
R 464	(A,77,75)	RS1/16SS101J		R 615	(A,103,64)	RS1/16SS104J	
R 465	(A,78,78)	RS1/16SS101J		R 616	(A,102,69)	RS1/16SS472J	
R 466	(A,82,73)	RS1/16SS101J		R 617	(A,102,68)	RS1/16SS472J	E
R 467	(A,78,75)	RS1/10SR101J		R 618	(A,109,65)	RS1/16SS472J	
R 468	(A,80,76)	RS1/10SR473J		R 619	(A,110,65)	RS1/16SS104J	
R 501	(A,42,53)	RS1/16SS473J		R 620	(A,112,65)	RS1/16SS104J	
R 502	(A,39,52)	RS1/16SS101J		R 621	(A,113,65)	RS1/16SS104J	
R 503	(B,44,52)	RS1/10SR473J		R 623	(A,114,65)	RS1/16SS104J	
R 504	(B,44,54)	RS1/10SR473J		R 624	(A,115,65)	RS1/16SS104J	
R 505	(B,52,53)	RS1/10SR473J		R 626	(A,122,74)	RS1/16SS104J	
R 506	(B,52,52)	RS1/10SR473J		R 627	(A,121,80)	RS1/16SS104J	
R 510	(A,56,51)	RS1/16SS102J		R 629	(A,110,87)	RS1/16SS104J	
R 512	(B,55,57)	RS1/10SR101J		R 630	(A,107,89)	RS1/16SS103J	F
R 513	(B,55,59)	RS1/10SR103J		R 643	(A,119,71)	RS1/16SS104J	
R 516	(A,63,49)	RS1/16SS5601F		R 651	(A,102,88)	RS1/16SS104J	
R 517	(A,65,51)	RS1/16SS473J		R 652	(A,100,88)	RS1/16SS152J	

1

2

3

4

Circuit Symbol and No.**Part No.****Circuit Symbol and No.****Part No.**

R 671 (A,9,71) RAB4CQ220J
 R 672 (A,9,68) RAB4CQ220J
 R 673 (A,9,65) RAB4CQ220J
 A R 674 (A,30,61) RAB4CQ220J
 R 675 (A,36,61) RAB4CQ220J

R 843 (A,103,25)
 R 844 (A,101,25)
 R 851 (A,22,121)
 R 852 (A,18,115)

RS1/16SS102J
 RS1/16SS103J
 RS1/10SR821J
 RS1/10SR153J

R 679 (A,40,73) RS1/16SS472J
 R 682 (A,25,71) RS1/16SS220J
 R 684 (A,25,73) RS1/16SS472J
 R 685 (A,25,74) RS1/10SR103J
 R 687 (A,42,78) RS1/16SS0R0J

R 853 (A,19,115)
 R 854 (A,21,115)
 R 861 (A,106,48)
 R 863 (A,117,48)
 R 865 (A,114,52)

RS1/10SR222J
 RS1/10SR332J
 RS1/16SS513J
 RS1/16SS183J
 RS1/16SS1002D

R 688 (A,41,75) RS1/16SS0R0J
 R 689 (A,41,59) RS1/16SS101J
 R 701 (A,97,43) RS1/16SS472J
 R 702 (A,91,40) RS1/16SS473J
 B R 703 (A,97,41) RS1/16SS472J

R 866 (A,109,51)
 R 867 (A,111,51)
 R 868 (A,104,44)
 R 901 (A,152,45)
 R 902 (A,152,46)

RS1/16SS4702F
 RS1/16SS103J
 RS1/10SR471J
 RS1/16SS332J
 RS1/16SS223J

R 704 (A,97,39) RS1/16SS472J
 R 705 (A,90,42) RS1/10SR221J
 R 706 (A,87,39) RS1/16SS221J
 R 707 (A,91,38) RS1/16SS101J
 R 708 (A,91,37) RS1/16SS221J

R 911 (A,44,109)
 R 921 (A,121,129)
 R 922 (A,110,129)
 R 923 (A,124,128)
 R 924 (A,110,127)

RS1/16SS102J
 RS1/16SS104J
 RS1/16SS103J
 RS1/16SS473J
 RS1/16SS473J

R 709 (A,91,36) RS1/16SS101J
 R 710 (A,88,36) RS1/16SS102J
 R 711 (A,91,34) RS1/16SS151J
 R 712 (A,91,33) RS1/16SS151J
 R 713 (A,91,32) RS1/16SS151J

R 925 (A,112,127)
 R 926 (A,117,129)
 R 931 (A,91,116)
 R 932 (A,87,124)
 R 1001 (A,51,39)

RS1/16SS472J
 RS1/4SA102J
 RS1/16SS103J
 RS1/4SA102J
 RS1/16SS102J

C R 714 (A,91,31) RS1/16SS221J
 R 715 (A,87,38) RS1/16SS104J
 R 716 (A,85,32) RS1/16SS104J
 R 717 (A,91,35) RS1/16SS104J
 R 751 (B,132,45) RS1/10SR821J

R 1002 (A,52,39)
 R 1004 (A,46,46)
 R 1005 (A,48,46)
 R 1006 (A,51,44)
 R 1007 (A,15,33)

RS1/16SS102J
 RS1/10SR0R0J
 RS1/16SS0R0J
 RS1/16SS0R0J
 RS1/10SR0R0J

R 753 (A,126,41) RS1/16SS473J
 R 754 (A,127,41) RS1/16SS103J
 R 792 (A,56,39) RAB4CQ473J
 R 793 (A,64,40) RAB4CQ473J
 R 795 (A,53,39) RS1/16SS0R0J

R 1008 (A,15,37)
 R 1021 (A,20,102)
 R 1022 (A,19,101)
 R 1023 (A,17,102)
 R 1024 (A,25,92)

RS1/16SS102J
 RS1/16SS3902D
 RS1/16SS1201D
 RS1/16SS1002D
 RS1/16SS104J

D R 801 (A,105,21) RS1/10SR222J
 R 802 (A,120,21) RS1/10SR222J
 R 803 (A,118,21) RS1/10SR222J
 R 804 (A,111,21) RS1/10SR222J
 R 805 (A,123,27) RS1/10SR102J

R 1026 (A,21,91)
 R 1028 (A,19,91)
 R 1031 (A,14,100)
 R 1032 (A,16,100)
 R 1037 (B,39,98)

RS1/16SS103J
 RS1/16SS393J
 RS1/16SS102J
 RS1/16SS102J
 RS1/10SR103J

R 806 (A,106,24) RS1/10SR104J
 R 807 (B,108,54) RS1/10SR104J
 R 808 (B,124,44) RS1/10SR104J
 R 809 (A,117,21) RS1/10SR222J
 R 810 (A,116,21) RS1/10SR222J

R 1038 (B,21,100)
 R 1039 (B,19,100)
 R 1041 (A,58,106)
 R 1042 (A,56,106)
 R 1043 (A,55,105)

RS1/10SR471J
 RS1/10SR471J
 RS1/16SS3902D
 RS1/16SS1201D
 RS1/16SS1002D

E R 811 (A,114,21) RS1/10SR222J
 R 812 (A,109,21) RS1/10SR101J
 R 813 (A,107,21) RS1/10SR101J
 R 814 (A,121,21) RS1/10SR222J
 R 815 (B,124,41) RS1/10SR104J

R 1044 (A,63,94)
 R 1046 (A,58,94)
 R 1048 (A,57,94)
 R 1051 (A,53,102)
 R 1052 (A,54,102)

RS1/16SS104J
 RS1/16SS103J
 RS1/16SS393J
 RS1/16SS102J
 RS1/16SS102J

R 816 (A,110,21) RS1/10SR222J
 R 817 (B,109,52) RS1/10SR104J
 R 821 (A,99,20) RS1/10SR1R0J
 R 822 (A,111,30) RS1/4SA222J
 R 823 (A,111,27) RS1/10SR103J

R 1053 (B,66,105)
 R 1056 (B,70,103)
 R 1057 (B,70,101)
 R 1061 (A,113,107)
 R 1062 (A,113,105)

RS1/10SR103J
 RS1/10SR471J
 RS1/10SR471J
 RS1/16SS102J
 RS1/16SS5R6J

R 824 (A,115,26) RS1/10SR472J
 F R 832 (A,121,27) RS1/16SS473J
 R 833 (A,121,30) RS1/16SS103J
 R 834 (A,123,23) RS1/10SR272J

R 1063 (A,113,103)
 R 1064 (A,115,87)
 R 1065 (A,117,102)
 R 1066 (A,116,102)
 R 1067 (A,119,102)

RS1/16SS5R6J
 RS1/16SS102J
 RS1/16SS7502D
 RS1/16SS3302D
 RS1/16SS1002D

R 842 (A,101,22) RS1/16SS472J

R 1068 (A,124,102)

RS1/10SR1003D

1

2

3

4

5		6		7		8	
Circuit Symbol and No.		Part No.		Circuit Symbol and No.		Part No.	
R 1069	(A,125,102)	RS1/10SR1003D		C 285	(A,130,73) Capacitor	CEVW221M10	
R 1070	(A,121,102)	RS1/16SS1003D		C 287	(A,131,65)	CKSRYB105K16	
R 1071	(A,120,102)	RS1/16SS1003D					
R 1072	(B,121,108)	RS1/10SR102J		C 301	(A,8,128) 10 uF	CCG1192	
				C 302	(A,14,127) 10 uF	CCG1192	
				C 303	(A,18,127) 10 uF	CCG1192	
				C 304	(A,34,130) 10 uF	CCG1192	
				C 305	(A,24,127) 10 uF	CCG1192	
CAPACITORS							
C 101	(A,153,135)	CKSRYB104K16		C 306	(A,34,128) 10 uF	CCG1192	
C 106	(A,144,127)	CKSSYB104K10		C 313	(B,36,130)	CKSRYB102K50	
C 151	(A,28,112) Capacitor	CEVW470M16		C 314	(A,64,138)	CCSRCH100D50	
C 152	(B,21,111)	CKSRYB104K16					
C 153	(B,27,115)	CKSRYB104K16		C 317	(B,26,143)	CCSRCH470J50	
C 161	(A,87,70)	CKSSYB104K16		C 351	(A,75,132)	CKSRYB474K10	
C 162	(A,89,70)	CKSSYB104K16		C 352	(A,75,133)	CKSRYB474K10	
C 163	(A,89,71) 10 uF	CCG1192		C 353	(A,82,130)	CKSRYB474K10	
C 181	(A,71,88) 10 uF	CCG1192		C 354	(A,83,130)	CKSRYB474K10	
C 182	(A,67,84)	CKSSYB103K16					
				C 355	(A,77,132)	CKSRYB474K10	
C 183	(A,69,84) 10 uF	CCG1192		C 356	(A,77,133)	CKSRYB474K10	
C 185	(A,87,73) 10 uF	CCG1192		C 357	(A,82,133)	CKSRYB474K10	
C 186	(A,80,86)	CCSRCH220J50		C 358	(A,83,133)	CKSRYB474K10	
C 187	(A,78,88)	CCSRCH220J50		C 361	(A,123,122) 3 300 uF/16 V	CCH1486	
C 188	(A,74,88)	CCSRCH220J50					
				C 362	(B,88,143)	CKSRYB104K16	
C 190	(A,81,86)	CKSSYB102K50		C 363	(B,61,134) 2.2 uF	CCG1205	
C 191	(A,81,97)	CCSRCH182J50		C 364	(B,64,134) 2.2 uF	CCG1205	
C 192	(A,81,99)	CCSRCH182J50		C 365	(B,64,139) 10 uF	CCG1236	
C 201	(A,66,116)	CKSRYB105K10		C 367	(A,59,132) 10 uF	CCG1192	
C 202	(A,79,117)	CKSRYB105K10					
				C 368	(B,72,143)	CCSRCH100D50	
C 203	(A,66,118)	CKSRYB105K10		C 381	(A,47,129) Capacitor	CEVW220M16	
C 204	(A,79,118)	CKSRYB105K10		C 461	(A,77,67)	CKSRYB104K16	
C 207	(A,82,116)	CKSRYB105K10		C 475	(A,158,84)	CKSSYB102K50	
C 208	(A,79,114)	CKSRYB105K10		C 501	(A,77,48) 10 uF	CCG1192	
C 209	(A,82,114)	CKSRYB105K10					
				C 503	(A,77,45) 10 uF	CCG1192	
C 210	(A,79,115)	CKSRYB105K10		C 506	(A,81,43) 10 uF	CCG1192	
C 211	(A,75,99)	CKSRYB105K10		C 507	(A,43,73)	CKSSYB104K10	
C 212	(A,78,99)	CKSRYB105K10		C 508	(A,42,73)	CKSSYB104K10	
C 213	(A,77,99)	CKSQYB225K10		C 509	(A,41,67)	CKSSYB104K10	
C 215	(A,66,120)	CKSRYB105K10					
				C 510	(A,42,66)	CKSSYB104K10	
C 216	(A,79,119)	CKSRYB105K10		C 511	(A,42,62)	CKSSYB104K10	
C 220	(B,78,122) 10 uF	CCG1192		C 512	(A,42,60)	CKSRYB104K16	
C 221	(A,81,122) 10 uF	CCG1192		C 513	(A,43,57)	CKSSYB104K10	
C 222	(A,79,123)	CKSSYB104K10		C 514	(A,42,55)	CKSSYB104K10	
C 223	(B,78,119) 10 uF	CCG1192					
				C 515	(A,39,55)	CKSSYB103K16	
C 224	(A,80,127)	CKSSYB104K10		C 516	(A,45,53)	CKSSYB104K10	
C 225	(A,80,125) 10 uF	CCG1192		C 517	(A,50,50)	CKSSYB104K10	
C 251	(B,156,107)	CCSRCK2R0C50		C 518	(A,52,50)	CKSSYB102K50	
C 252	(A,153,76)	CEVW101M16		C 519	(A,54,51)	CKSSYB104K10	
C 253	(B,163,102)	CKSRYB104K16					
				C 520	(A,55,51)	CKSSYB104K10	
C 255	(B,157,70) 10 uF	CCG1192		C 521	(A,59,51)	CKSSYB104K10	
C 257	(B,158,60) 10 uF	CCG1192		C 522	(A,55,46)	CCSSCH100D50	
C 260	(B,166,84)	CKSRYB102K50		C 523	(A,57,46)	CCSSCH100D50	
C 261	(B,164,87)	CKSRYB104K16		C 524	(A,63,48)	CKSSYB104K10	
C 271	(B,146,76) 10 uF	CCG1192					
				C 525	(A,60,51)	CKSSYB105K6R3	
C 272	(B,150,76) 10 uF	CCG1192		C 526	(A,62,51)	CKSSYB104K10	
C 273	(B,143,59)	CKSQYB475K6R3		C 527	(A,63,51)	CKSSYB104K10	
C 274	(B,143,61)	CKSRYB102K50		C 528	(A,64,49)	CKSSYB104K10	
C 275	(B,143,64)	CKSQYB475K6R3		C 529	(A,68,51)	CKSSYB104K10	
C 281	(A,138,56) Capacitor	CEHVW221M16					
				C 530	(A,69,51)	CKSSYB104K10	
C 282	(A,132,59)	CKSRYB105K16		C 531	(A,75,60)	CKSSYB104K10	
C 283	(A,126,67)	CCSSCH220J50		C 532	(A,72,60)	CKSSYB104K10	
C 284	(A,125,68)	CKSSYB153K16		C 533	(A,74,67)	CKSSYB104K10	
				C 534	(A,73,68)	CKSSYB104K10	

	1		2	3		4
	<u>Circuit Symbol and No.</u>		<u>Part No.</u>	<u>Circuit Symbol and No.</u>		<u>Part No.</u>
A	C 535	(B,75,66)	CKSRYB104K16	C 886	(A,31,48) 10 uF	CCG1192
	C 536	(A,72,71)	CKSRYB104K16	C 887	(A,40,47) 10 uF	CCG1192
	C 537	(A,72,75)	CKSSYB104K10	C 901	(A,150,53) 1 000 uF/16 V	XCH3021
	C 538	(A,72,77)	CKSSYB104K10	C 902	(A,156,47)	CKSSYB103K16
	C 539	(A,77,73)	CCSSCH120J50	C 904	(B,150,45) 10 uF	CCG1192
■	C 540	(A,77,71)	CCSSCH120J50	C 905	(A,148,46)	CKSQYB475K6R3
	C 544	(A,62,81)	CKSSYB104K10	C 907	(A,145,48)	CKSQYB475K6R3
	C 545	(A,60,81)	CKSSYB104K10	C 911	(A,44,108)	CKSSYB473K16
	C 546	(A,58,81)	CKSSYB104K10	C 912	(A,45,111)	CKSSYB104K16
	C 551	(A,54,81)	CKSSYB104K10	C 913	(A,45,114) 10 uF	CCG1192
B	C 552	(A,50,81)	CKSSYB104K10	C 915	(A,49,111)	CEVW101M16
	C 553	(A,48,80)	CKSSYB104K10	C 921	(A,114,127)	CKSSYB104K16
	C 571	(A,25,84) 10 uF	CCG1192	C 931	(A,90,121)	CKSRYB105K10
	C 572	(A,25,81)	CKSSYB104K10	C 941	(A,103,127)	CKSRYB473K50
	C 574	(A,40,55)	CKSSYB103K16	C 1001	(A,12,55) Capacitor	CEVW471M10
■	C 581	(A,91,48) 10 uF	CCG1192	C 1002	(A,24,54)	CEVW101M16
	C 583	(A,80,46) 10 uF	CCG1192	C 1003	(A,21,48)	CKSSYB104K16
	C 585	(B,92,49) 10 uF	CCG1192	C 1004	(A,34,54)	CEVW101M16
	C 588	(B,86,43) 10 uF	CCG1192	C 1005	(A,38,50)	CKSSYB104K16
	C 591	(A,77,61)	CKSSYB104K10	C 1006	(A,46,49)	CKSRYB104K16
C	C 592	(A,77,59)	CKSSYB104K10	C 1007	(A,15,34)	CKSRYB105K10
	C 604	(A,95,82)	CCSSCH100D50	C 1008	(A,15,36)	CKSRYB105K10
	C 605	(A,95,77)	CCSSCH120J50	C 1009	(B,54,32)	CCSRCH120J50
	C 606	(A,97,89)	CKSSYB104K10	C 1010	(B,52,35)	CCSRCH120J50
	C 607	(A,99,77)	CKSSYB105K6R3	C 1011	(B,51,39)	CCSRCH120J50
■	C 609	(A,121,74)	CKSRYB105K10	C 1021	(A,29,101) 10 uF	CCG1236
	C 651	(A,100,90)	CKSRYB105K10	C 1023	(A,27,101)	CKSSYB103K16
	C 671	(A,25,80)	CKSSYB102K50	C 1024	(B,12,99) 10 uF	CCG1236
	C 672	(A,9,84)	CKSSYB104K10	C 1025	(A,20,101)	CKSSYB681K50
	C 673	(A,9,81)	CKSSYB104K10	C 1026	(A,41,102) 47 uF	CCG1256
D	C 674	(A,9,77)	CKSSYB104K10	C 1027	(A,15,96) 47 uF	CCG1256
	C 675	(A,9,74)	CKSSYB104K10	C 1028	(A,27,91) 2.2 uF	CCG1205
	C 676	(A,9,63)	CKSSYB104K10	C 1029	(A,23,92)	CKSSYB103K16
	C 677	(A,24,80)	CKSSYB104K10	C 1030	(A,22,91)	CKSSYB104K16
	C 678	(A,24,73)	CKSSYB104K10	C 1032	(A,35,100) Capacitor	CEHVW221M16
■	C 680	(A,40,57)	CCSSCH100D50	C 1042	(A,67,102) 10 uF	CCG1236
	C 703	(A,85,34)	CCSSCH220J50	C 1043	(A,65,103)	CKSSYB103K16
	C 704	(A,87,34)	CCSRCH100D50	C 1044	(B,48,102) 10 uF	CCG1236
	C 705	(A,89,34)	CCSSCH220J50	C 1045	(A,58,105)	CKSSYB681K50
	C 706	(A,88,38)	CKSSYB103K16	C 1046	(A,71,103) 47 uF	CCG1256
E	C 751	(A,134,47) 10 uF	CCG1192	C 1047	(A,53,98) 47 uF	CCG1256
	C 754	(A,137,47)	CKSSYB473K16	C 1048	(A,64,93) 2.2 uF	CCG1205
	C 801	(A,103,20)	CKSRYB104K16	C 1049	(A,61,94)	CKSSYB103K16
	C 802	(B,113,22)	CKSRYB105K16	C 1050	(A,60,93)	CKSSYB104K16
	C 821	(A,117,27)	CKSQYB105K16	C 1061	(A,121,108)	CKSSYB104K10
■	C 851	(A,23,117) 10 uF	CCG1192	C 1062	(B,119,112)	CKSRYB104K16
	C 852	(A,23,119)	CKSRYB104K16			
	C 853	(A,11,116)	CCSRCH271J50			
	C 854	(A,16,115)	CCSRCH681J50			
	C 856	(A,8,122)	CEVW101M16			
F	C 857	(B,10,113) 10 uF	CCG1236			
	C 861	(A,102,53) Capacitor	CEHVW221M16			
	C 862	(A,115,44)	CKSRYB105K16			
	C 863	(A,116,49)	CCSSCH220J50			
	C 864	(A,117,49)	CKSSYB153K16			
■	C 865	(A,106,39) Capacitor	CEVW221M10			
	C 881	(A,25,49)	CKSSYB104K16			
	C 882	(A,29,49)	CKSSYB104K10			
	C 883	(A,27,44)	CKSSYB104K10			
	C 884	(A,23,48) 10 uF	CCG1192			

B

Unit Number :

Unit Name : Keyboard Unit

MISCELLANEOUS

IC 1821	(A,130,22) IC	BH2228FV
IC 1901	(A,98,20) IC	PEG868A8
IC 1902	(B,82,20) IC	PEH365A8
IC 1931	(A,159,15) IC	PNJ4833M
Q 1831	(B,59,10) Transistor	LSC4081UB

5				6				7				8			
<u>Circuit Symbol and No.</u>				<u>Part No.</u>				<u>Circuit Symbol and No.</u>				<u>Part No.</u>			
Q 1832	(B,55,10)	Transistor		LSC4081UB				R 1842	(B,44,37)			RS1/10SR181J			
Q 1833	(B,52,10)	Transistor		LSC4081UB				R 1843	(B,46,37)			RS1/10SR181J			
Q 1834	(B,39,32)	Chip Transistor		HN1C01FU				R 1844	(B,46,7)			RS1/10SR181J			A
Q 1835	(B,47,32)	Chip Transistor		HN1C01FU				R 1845	(B,48,7)			RS1/10SR181J			
Q 1836	(B,46,11)	Chip Transistor		HN1C01FU				R 1861	(A,132,26)			RS1/16SS102J			
								R 1862	(A,133,26)			RS1/16SS102J			
Q 1861	(A,144,23)	Transistor		LSC4081UB				R 1863	(A,132,25)			RS1/16SS102J			
Q 1862	(A,144,18)	Transistor		LSC4081UB											
Q 1863	(A,144,13)	Transistor		LSC4081UB				R 1870	(A,81,33)			RS1/16SS101J			
Q 1864	(B,75,38)	Chip Transistor		HN1C01FU				R 1871	(A,129,28)			RS1/16SS101J			
Q 1865	(B,80,34)	Chip Transistor		HN1C01FU				R 1872	(A,79,32)			RS1/16SS101J			
								R 1873	(A,131,28)			RS1/16SS101J			
Q 1866	(A,130,30)	Chip Transistor		HN1C01FU				R 1874	(A,82,33)			RS1/16SS101J			
D 1803	(A,136,32)	Diode		CRG03											
D 1831	(A,10,26)	LED		SMLV56RGB1U1(Q)				R 1875	(A,83,33)			RS1/16SS101J			
D 1832	(A,52,34)	LED		SMLV56RGB1U1(Q)				R 1876	(B,72,39)			RS1/10SR181J			B
D 1833	(A,52,20)	LED		SMLV56RGB1U1(Q)				R 1877	(B,79,39)			RS1/10SR181J			
								R 1878	(B,82,37)			RS1/10SR181J			
D 1834	(A,68,26)	LED		SMLV56RGB1U1(Q)				R 1879	(B,81,37)			RS1/10SR181J			
D 1861	(A,88,38)	LED		SMLV56RGB1U1(Q)											
D 1862	(A,106,38)	LED		SMLV56RGB1U1(Q)				R 1880	(B,119,38)			RS1/10SR181J			
D 1863	(A,124,38)	LED		SMLV56RGB1U1(Q)				R 1881	(B,136,38)			RS1/10SR181J			
D 1864	(A,142,38)	LED		SMLV56RGB1U1(Q)				R 1901	(A,110,16)			RS1/16SS472J			
								R 1902	(B,94,18)			RS1/16SS102J			
D 1901	(A,112,19)	Diode		1SS352				R 1903	(A,114,19)			RS1/16SS154J			
L 1981	(B,151,18)	Inductor		CTF1389											
L 1982	(B,151,21)	Inductor		CTF1389				R 1904	(A,108,22)			RS1/16SS473J			
L 1983	(B,150,15)	Inductor		CTF1389				R 1905	(A,108,23)			RS1/16SS103J			
TH1901	(A,98,9)	Thermistor		CCX1079				R 1906	(B,95,22)			RAB4CQ102J			C
X 1901	(A,109,19)	Ceramic Resonator 16.000 MHz	CSS1616					R 1907	(A,108,24)			RS1/16SS103J			
S 1811	(A,26,26)	Encoder(MULTI CONTROL)	CSD1168					R 1908	(A,111,26)			RAB4CQ103J			
S 1931	(A,9,40)	Push Switch	CSG1155												
								R 1909	(A,102,31)			RS1/16SS103J			
S 1932	(A,63,27)	Push Switch	CSG1155					R 1910	(A,99,31)			RAB4CQ473J			
S 1933	(A,62,16)	Push Switch	CSG1155					R 1911	(A,96,31)			RS1/16SS473J			
S 1935	(A,41,41)	Push Switch	CSG1155					R 1912	(A,95,31)			RS1/16SS473J			
S 1937	(A,68,13)	Push Switch	CSG1155					R 1914	(A,81,30)			RS1/16SS101J			
S 1938	(A,60,40)	Push Switch	CSG1155												
								R 1915	(A,93,30)			RAB4CQ101J			
S 1939	(A,41,12)	Push Switch	CSG1155					R 1916	(A,87,26)			RS1/16SS101J			
S 1940	(A,30,10)	Spring Switch	CSN1080					R 1917	(A,87,24)			RAB4CQ101J			
S 1941	(A,22,10)	Spring Switch	CSN1081					R 1918	(A,84,22)			RAB4CQ101J			D
S 1942	(A,68,39)	Push Switch	CSG1155					R 1919	(B,94,16)			RAB4CQ101J			
CN1801	(B,131,26)	Connector	CKS6038												
								R 1920	(B,94,13)			RAB4CQ101J			
CN1951	(B,105,38)	Connector	CKS6228					R 1921	(A,87,16)			RAB4CQ101J			
JA1981	(A,160,27)	Jack	YKN5006					R 1922	(B,80,12)			RAB4CQ101J			
								R 1923	(B,85,12)			RAB4CQ101J			
								R 1924	(A,79,13)			RAB4CQ101J			
RESISTORS															
R 1801	(B,124,14)			RS1/10SR222J				R 1925	(A,101,9)			RAB4CQ102J			
R 1802	(B,125,14)			RS1/10SR222J				R 1926	(A,115,15)			RS1/16SS104J			
R 1803	(A,121,29)			RS1/10SR104J				R 1931	(B,148,19)			RS1/16SS470J			
R 1811	(B,54,24)			RS1/16SS103J				R 1953	(B,108,31)			RAB4CQ473J			
R 1821	(A,133,17)			RS1/10SR272J				R 1954	(A,108,28)			RS1/16SS473J			E
R 1822	(A,131,17)			RS1/10SR272J				R 1955	(A,115,26)			RAB4CQ101J			
R 1823	(A,132,17)			RS1/10SR272J				R 1957	(A,98,10)			RS1/16SS2202F			
R 1831	(A,124,19)			RS1/16SS102J				CAPACITORS							
R 1832	(A,124,21)			RS1/16SS102J											
R 1833	(A,125,19)			RS1/16SS102J				C 1821	(A,135,20)			CKSSYB103K16			
								C 1822	(A,136,19)			CKSRYB105K10			
R 1834	(B,42,30)			RS1/16SS101J				C 1903	(A,115,19)			CKSSYB104K10			
R 1835	(B,46,14)			RS1/16SS101J				C 1904	(A,108,21)			CKSSYB103K16			
R 1836	(B,41,30)			RS1/16SS101J				C 1905	(A,88,20)			CKSSYB103K16			
R 1837	(B,48,12)			RS1/16SS101J											
R 1838	(B,47,30)			RS1/16SS101J				C 1906	(B,70,17)			CKSSYB103K16			F
								C 1931	(B,150,19)	10 uF		CCG1192			
R 1839	(B,46,30)			RS1/16SS101J				C 1951	(A,97,35)			CKSQYB334K50			
R 1840	(B,39,37)			RS1/10SR181J											
R 1841	(B,41,37)			RS1/10SR181J											

1

2

3

4

Circuit Symbol and No.**Part No.****Circuit Symbol and No.****Part No.**

C 1952 (B,100,31) 4.7 uF
C 1953 (B,100,32) 4.7 uF

CCG1212
CCG1212

R 307 (A,25,9)

RS1/16SS102J

C 1954 (B,102,32) 4.7 uF
C 1955 (B,104,32) 4.7 uF
C 1957 (B,101,27)
C 1981 (B,147,30)
C 1982 (B,148,30)

CCG1212
CCG1212
CKSSYB105K6R3
CKSRYB472K50
CKSRYB472K50

R 308 (A,25,11)
R 309 (A,35,6)
R 310 (B,30,9)
R 311 (B,30,10)
R 312 (B,30,11)

R 313 (B,30,12)
R 701 (A,21,38)
R 702 (A,23,38)
R 706 (A,32,42)
R 708 (B,28,26)

R 709 (B,29,28)

RS1/16SS472J
RS1/16SS473J
RS1/16SS472J
RS1/16SS472J
RS1/16SS472J

RS1/16SS472J
RS1/16SS101J
RS1/16SS101J
RS1/16SS221J
RS1/16SS0R0J

RS1/16SS0R0J

C**Unit Number : CWX4023****Unit Name : CD Core Unit (S11.6STD)****CAPACITORS**

IC 201 (B,23,37) IC PE5791A
IC 301 (A,37,11) IC BD8223EFV
Q 101 (B,11,53) Transistor 2SA1577
Q 102 (B,15,54) Chip Digital Transistor LTA123JUB
X 201 (B,25,49) Ceramic Resonator 16.934 MHz CSS1603

C 104 (B,12,57) CKSQYB475K6R3
C 203 (B,22,47) CKSSYB104K10
C 209 (B,28,47) CKSRYB104K16
C 210 (B,33,43) CKSSYB104K10
C 211 (B,33,41) CKSSYB104K10

C 212 (B,22,28) CKSSYB104K10
C 213 (B,18,26) CKSSYB332K50
C 214 (B,17,26) CKSSYB473K16
C 215 (B,19,28) CKSSYB104K10
C 216 (B,12,33) CKSSYB182K50

S 901 (A,42,53) Spring Switch(HOME) CSN1080
S 903 (B,21,12) Spring Switch(DSCSNS) CSN1081
CN101 (A,16,58) Connector CKS4808
CN701 (A,25,29) Connector CKS6146

C 217 (B,10,34) CCSSCH560J50
C 218 (B,10,36) CCSSCH4R0C50
C 219 (B,14,34) CKSSYB104K10
C 220 (A,18,38) CKSSYB104K10
C 221 (B,14,32) CKSSYB104K10

C 222 (B,13,37) CKSSYB104K10
C 223 (B,12,42) CCSSCH680J50
C 224 (B,13,45) CCSSCH470J50
C 225 (B,13,46) CKSSYB103K16
C 228 (B,10,33) CCSSCH270J50

C 229 (B,9,40) CKSSYB104K10
C 233 (B,32,46) CKSSYB103K16
C 236 (B,8,40) CKSSYB104K10
C 238 (A,25,44) CKSRYB104K16
C 299 (A,26,41) CKSSYB104K10

C 302 (B,28,12) CKSSYB102K50
C 303 (B,29,12) CKSSYB102K50
C 304 (B,27,12) CKSSYB223K16
C 305 (B,26,12) CKSSYB104K10
C 306 (A,31,7) CKSSYB104K10

C 307 (A,41,19) CKSRYB105K10
C 308 (A,31,15) CKSRYB105K10
C 710 (A,34,42) CKSSYB102K50

RESISTORS

R 101 (B,6,57) RS1/10SR2R4J
R 102 (B,8,57) RS1/10SR2R4J
R 103 (B,9,57) RS1/10SR2R7J
R 108 (B,18,55) RS1/16SS105J
R 109 (B,12,50) RS1/16SS222J

R 201 (A,24,11) RS1/16SS0R0J
R 202 (A,23,9) RS1/16SS0R0J
R 214 (B,18,28) RS1/16SS103J
R 215 (B,17,28) RS1/16SS393J
R 216 (B,12,35) RS1/16SS122J

R 217 (B,10,32) RS1/16SS562J
R 218 (B,10,35) RS1/16SS472J
R 229 (B,12,34) RS1/16SS471J
R 232 (A,31,54) RS1/16SS0R0J
R 237 (B,33,45) RS1/16SS221J

R 240 (B,34,40) RS1/16SS473J
R 245 (A,34,46) RS1/16SS104J
R 254 (A,37,56) RS1/16SS104J
R 260 (B,30,27) RS1/16SS103J
R 264 (A,22,9) RS1/16SS102J

R 281 (B,33,38) RS1/16SS560J
R 282 (B,33,39) RS1/16SS560J
R 283 (B,35,38) RS1/16SS0R0J
R 291 (B,33,34) RS1/16SS560J
R 292 (B,33,36) RS1/16SS0R0J

R 293 (B,35,39) RS1/16SS0R0J
R 294 (B,27,48) RS1/16SS471J
R 296 (B,34,43) RS1/16SS0R0J
R 301 (A,27,9) RS1/16SS0R0J
R 302 (A,28,9) RS1/16SS0R0J

R 303 (A,27,11) RS1/16SS123J
R 304 (A,28,11) RS1/16SS123J
R 305 (A,26,9) RS1/16SS102J
R 306 (A,26,11) RS1/16SS472J

C 302 (B,28,12) CKSSYB102K50
C 303 (B,29,12) CKSSYB102K50
C 304 (B,27,12) CKSSYB223K16
C 305 (B,26,12) CKSSYB104K10
C 306 (A,31,7) CKSSYB104K10

C 307 (A,41,19) CKSRYB105K10
C 308 (A,31,15) CKSRYB105K10
C 710 (A,34,42) CKSSYB102K50

D**Unit Number : YWM5577****Unit Name : Panel Unit****MISCELLANEOUS**

D 1 (A,4,17) LED(Red) SML-D12V8W(PQ)
D 2 (A,55,37) LED(Red) SML-D12V8W(PQ)
S 1 (A,59,37) Push Switch CSG1155
CN1 (A,39,24) Connector CKS6037
CN2 (B,17,10) Connector CKS3863

DEH-P9400BH/XSUC

Miscellaneous Parts List

	Pickup Unit(P10.6)(Service)	CXX3556
M 1	Motor Unit(SPDL)	CXE2273
M 2	Motor Unit(LOAD/CRG)	CXC4026