


2. EXPLODED VIEWS AND PARTS LIST

NOTES : • Parts marked by " * " are generally unavailable because they are not in our Master Spare Parts List.
 • The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
 • Screw adjacent to ▽ mark on the product are used for disassembly.
 • For the applying amount of lubricants or glue, follow the instructions in this manual.
 (In the case of no amount instructions, apply as you think it appropriate.)

2.1 PACKING

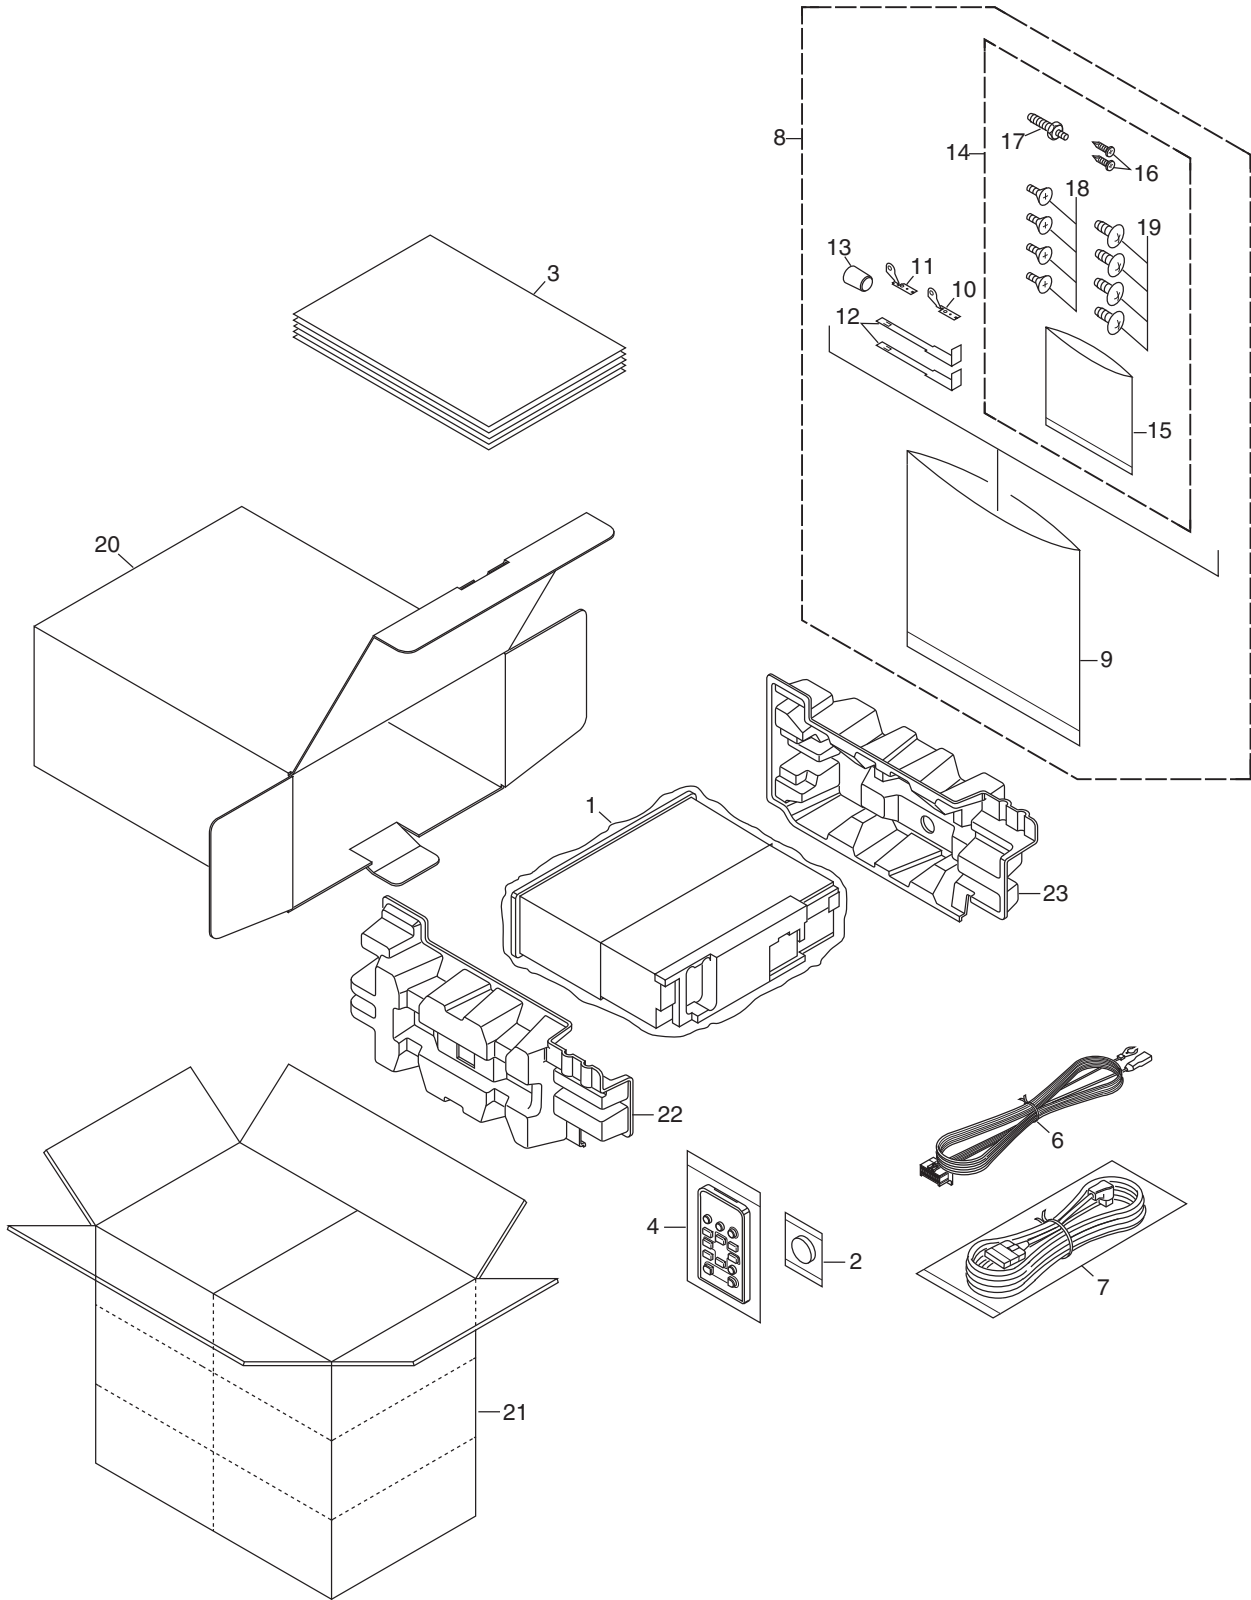

(1) PACKING SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.
	1 Polyethylene Bag	CEG1173			
*	2 Battery	CEX1065	11	Holder	CND1250
	3-1 Caution Card	CRP1310	12	Handle	CND3707
*	3-2 Caution Card	See Contrast table(2)	13	Bush	CNV3930
*	3-3 Warranty Card	See Contrast table(2)	14	Screw Assy	CEA5317
			*	15 Polyethylene Bag	CEG-127
	3-4 Owner's Manual	See Contrast table(2)			
	3-5 Installation Manual	See Contrast table(2)	16	Screw	BPZ20P060FTB
*	3-6 Caution Card	XRP7008	17	Screw	CBA1650
	4 Remote Control Assy	CXC5719	18	Screw	CRZ50P090FTC
5			19	Screw	TRZ50P080FTC
			20	Unit Box	See Contrast table(2)
6	Cord Assy	XDP7001			
7	Cord Assy	See Contrast table(2)	21	Contain Box	See Contrast table(2)
8	Accessory Assy	XEA7011	22	Protector	XHP7016
9	Polyethylene Bag	CEG1160	23	Protector	XHP7017
10	Holder	CND1249			

(2) CONTRAST TABLE


DEH-P490IB/XN/UC and DEH-P4900IB/XN/UC are constructed the same except for the following:

Mark	No.	Description	DEH-P490IB/XN/UC	DEH-P4900IB/XN/UC
*	3-2	Caution Card	Not used	CRP1294
*	3-3	Warranty Card	CRY1070	CRY1246
	3-4	Owner's Manual	XRD7129	XRD7127
	3-5	Installation Manual	XRD7130	XRD7128
	7	Cord Assy	XDP7005	Not used
	20	Unit Box	XHG7126	XHG7125
	21	Contain Box	XHL7126	XHL7125

Owner's Manual,Installation Manual

Part No.	Language
XRD7127, XRD7128, XRD7129, XRD7130	English, French, Spanish

2.2 EXTERIOR

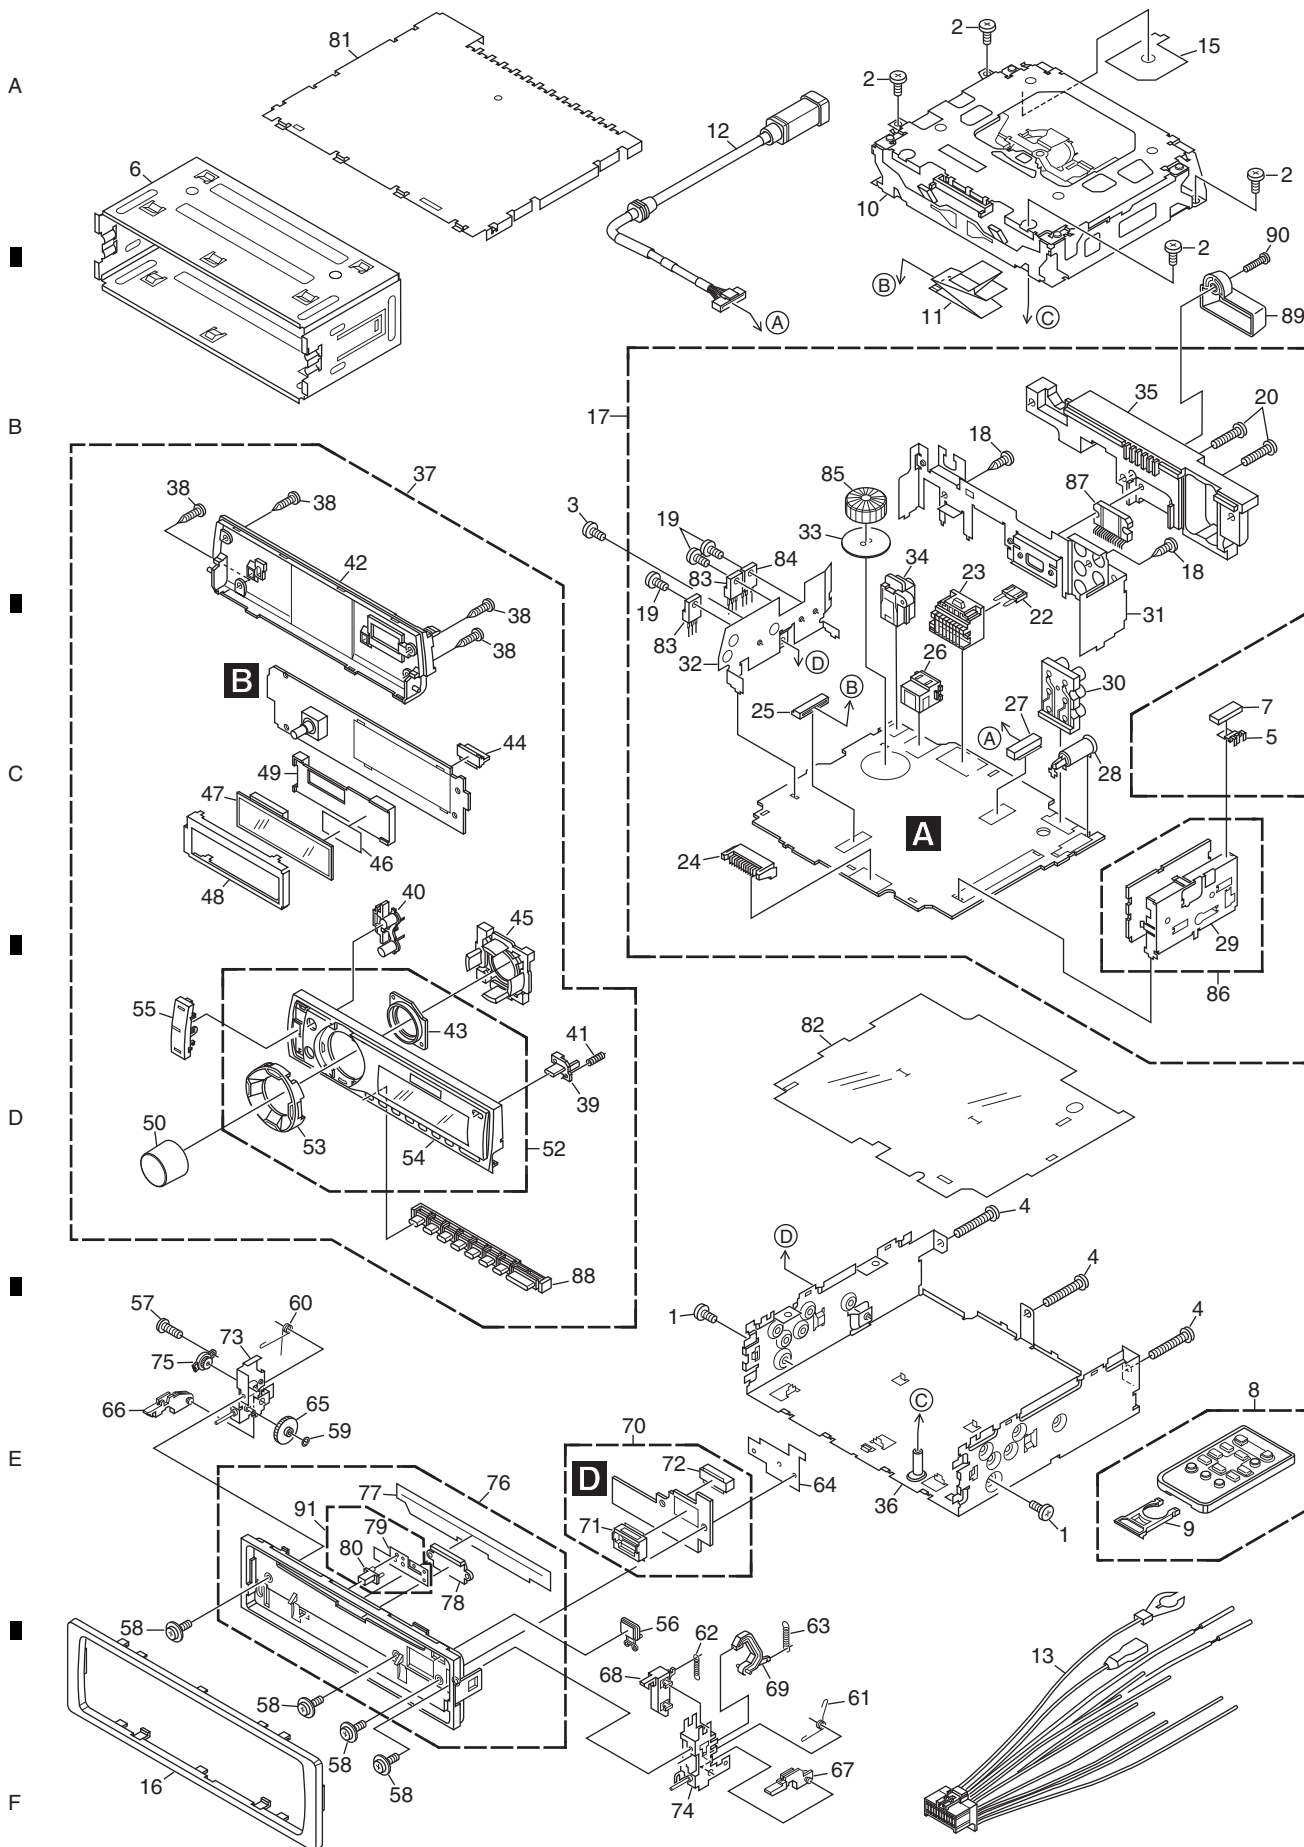

EXTERIOR SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.	
1	Screw	BMZ30P040FTB	50	Knob Assy	XXA7472	
2	Screw	BSZ26P060FTC				A
3	Screw	BSZ30P060FTC	51	*****		
4	Screw	BSZ30P200FTC	52	Sub Grille Assy	See Contrast table(2)	
5	Earth Plate	CNC8915	53	Plate	XNS7184	
			54	Grille Unit	See Contrast table(2)	
6	Holder	CND3598	55	Button Unit(AUDIO,FUNC)	XXA7491	
7	Cushion	CNM8890				
8	Remote Control Assy	CXC5719	56	Button	CAC7752	
9	Cover	CZN7068	57	Screw(M2 x 4)	CBA1649	
10	CD Mechanism Module(S10.5)	CXK5763	58	Screw(M2 x 4.5)	CBA1925	
			59	Washer	CBF1038	
11	Cable	XDE7022	60	Spring	CBH2650	B
12	Cord Assy	XDE7026				
13	Cord Assy	XDP7001	61	Spring	CBH2651	
14	*****		62	Spring	CBH2652	
15	Insulator	XNM7106	63	Spring	CBH2653	
			64	Holder	CND1254	
16	Panel	See Contrast table(2)	65	Gear	CNV5997	
17	Tuner Amp Unit	See Contrast table(2)				
18	Screw	BPZ26P070FTC	66	Arm	CNV7400	
19	Screw	BSZ26P060FTC	67	Arm	CNV7401	
20	Screw	BSZ26P200FTC	68	Arm	CNV7402	
			69	Arm	CNV7403	C
21	*****		70	Panel Unit	CWM8758	
⚠ 22	Fuse(10 A)	CEK1208				
23	Plug(CN901)	CKM1376	71	Connector(CN1951)	CKS4806	
24	Plug(CN801)	CKS3537	72	Connector(CN1950)	CKS5192	
25	Connector(CN651)	CKS3829	73	Holder Unit	CXB9501	
			74	Holder Unit	CXB9502	
26	Connector(CN101)	CKS5271	75	Damper Unit	CXB9503	
27	Connector(CN701)	CKS5691				
28	Antenna Jack(CN401)	CKX1056	76	Sub Panel Assy	XXA7511	
29	Holder	CND1054	77	Cover	CNM6854	
30	Pin Jack(CN352)	XKB7001	78	Lighting Conductor	CNV6487	D
			79	Spring	CBL1512	
31	Holder	XNC7026	80	Pin	CNV6486	
32	Holder	XNC7030				
33	Insulator	XNM7031	81	Case	YNB5014	
34	Jack(CN171)	XKS7005	82	Insulator	YNM5062	
35	Heat Sink	YNR5031	83	Transistor(Q650,911)	2SD2396	
			84	IC(IC901)	NJM2388F84	
36	Chassis Unit	XXA7474	85	Choke Coil(L901)	CTH1280	
37	Detachable Assy	See Contrast table(2)				
38	Screw	BPZ20P080FTB	86	FM/AM Tuner Unit	CWE1952	E
39	Button	XAC7149	87	IC(IC301)	PAL007C	
40	Button(BAND,DISP)	XAC7146	88	Button(1-6,SW,EQ)	See Contrast table(2)	
			89	Holder	See Contrast table(2)	
41	Spring	XBH7001	90	Screw	See Contrast table(2)	
42	Cover	XNS7180				
43	Lighting Conductor	XNV7033	91	Sub Spring Assy	XXA7363	
44	Connector(CN1901)	CKS5207				
45	Button(UP,DOWN,L,R)	See Contrast table(2)				
46	Double side Tape	CNM8673				
47	OLED Unit	MXS8233				F
48	Holder	XNC7028				
49	Holder	XNV7034				

(2) CONTRAST TABLE

DEH-P490IB/XN/UC and DEH-P4900IB/XN/UC are constructed the same except for the following:

Mark	No.	Description	DEH-P490IB/XN/UC	DEH-P4900IB/XN/UC
A	16	Panel	XNS7182	XNS7181
	17	Tuner Amp Unit	XWM7175	XWM7176
	37	Detachable Assy	XXA7476	XXA7475
	45	Button(UP,DOWN.L,R)	XAC7150	XAC7147
	52	Sub Grille Assy	XXA7483	XXA7482
	54	Grille Unit	XXA7464	XXA7463
	88	Button(1-6,SW,EQ)	XAC7151	XAC7148
	89	Holder	Not used	CNV7619
	90	Screw	Not used	BMZ40P140FTC

B


C

D

E

F

2.3 CD MECHANISM MODULE

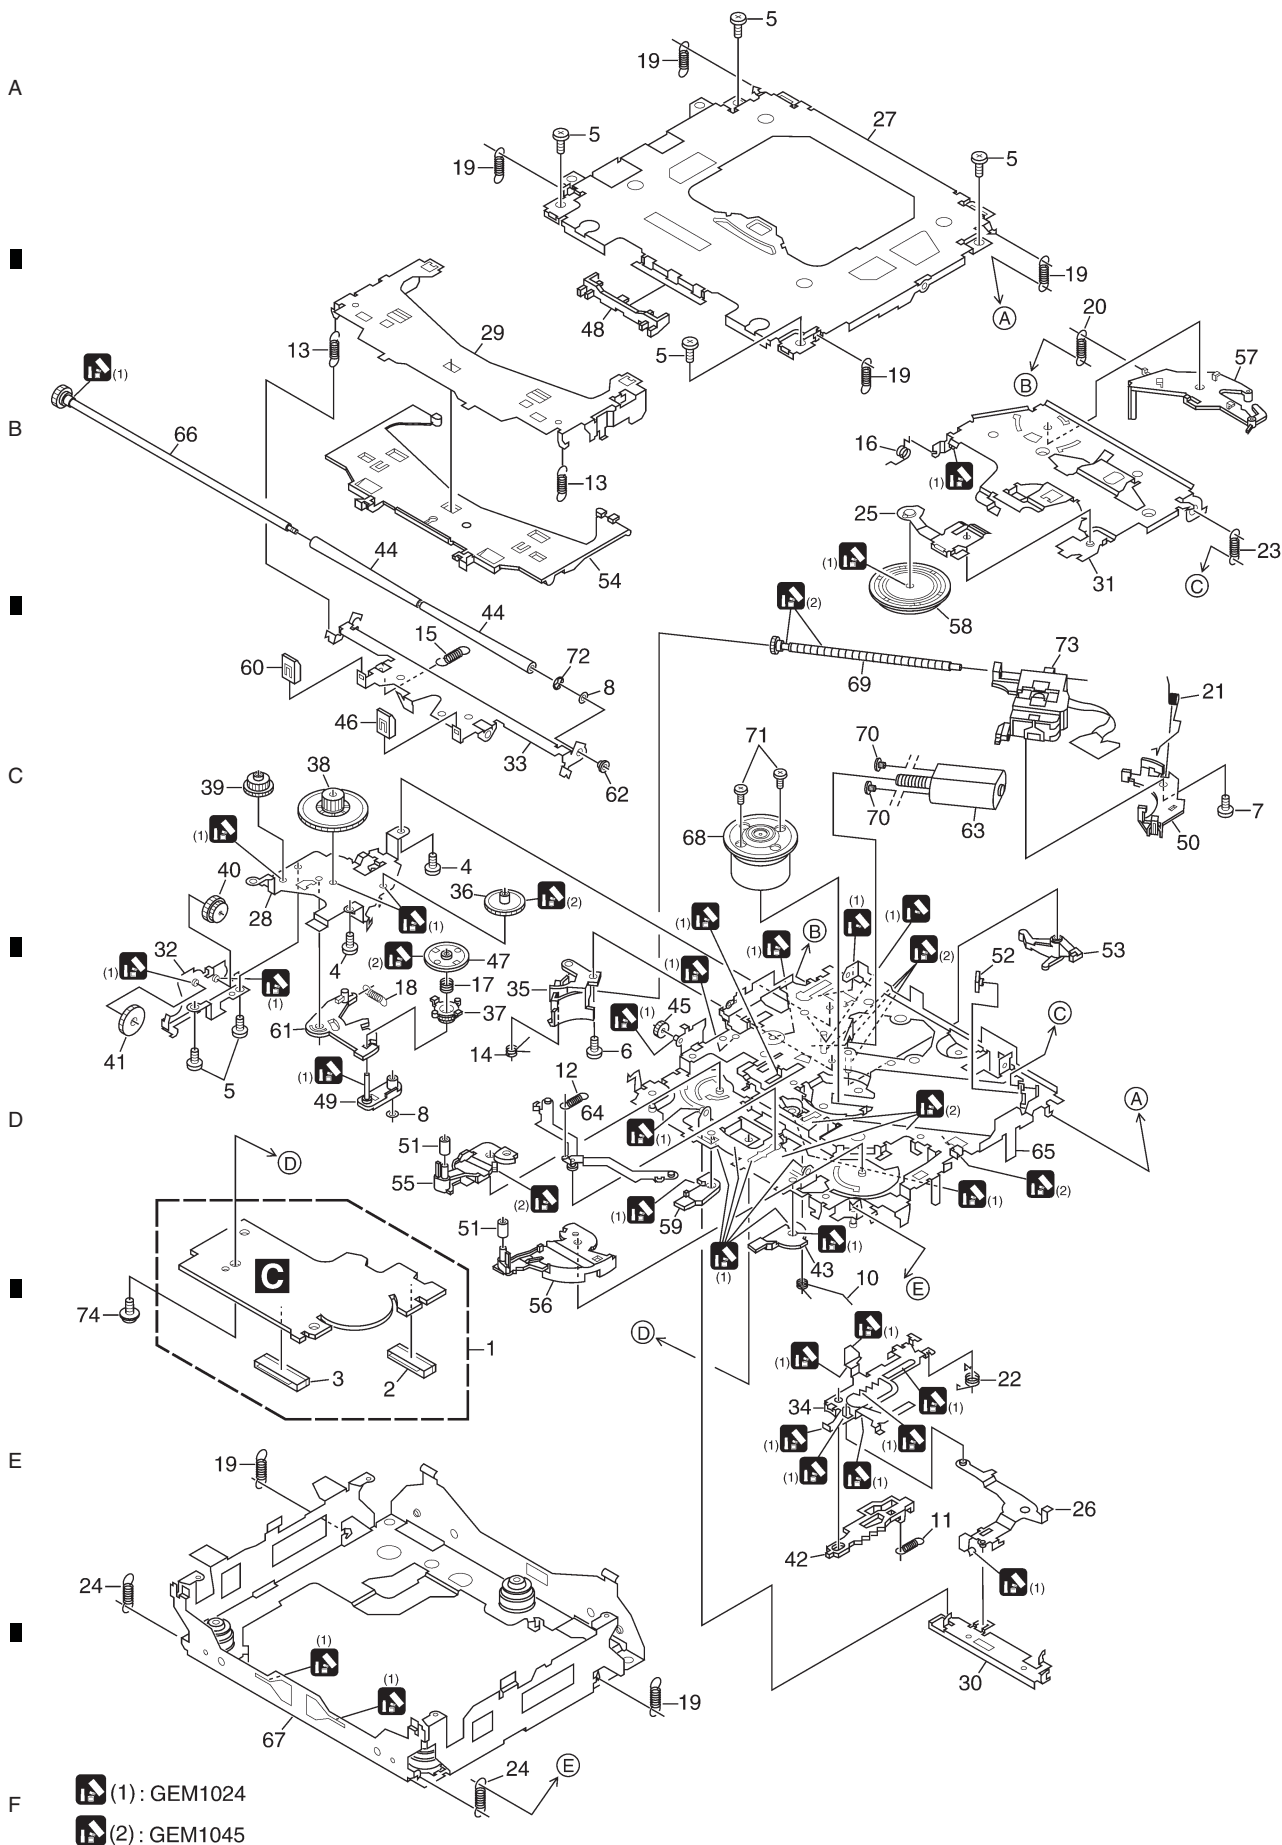

CD MECHANISM MODULE SECTION PARTS LIST

Mark No.	Description	Part No.	Mark No.	Description	Part No.	
1	CD Core Unit(S10.5COMP2)	CWX3514	50	Rack	CNV8342	
2	Connector(CN101)	CKS4182				A
3	Connector(CN701)	CKS4808	51	Roller	CNV8343	
4	Screw	BMZ20P025FTC	52	Holder	CNV8344	
5	Screw	BSZ20P040FTC	53	Arm	CNV8345	
			54	Guide	CNV8347	
6	Screw(M2 x 3)	CBA1511	55	Arm	CNV8348	
7	Screw(M2 x 4)	CBA1835				
8	Washer	CBF1038	56	Arm	CNV8349	
9	*****		57	Arm	CNV8350	
10	Spring	CBH2609	58	Clamper	CNV8365	
			59	Arm	CNV8386	
11	Spring	CBH2612	60	Guide	CNV8396	B
12	Spring	CBH2614				
13	Spring	CBH2616	61	Arm	CNV8413	
14	Spring	CBH2617	62	Collar	CNV8938	
15	Spring	CBH2620	63	Motor Unit(M2)	CXC4026	
			64	Arm Unit	CXC4027	
16	Spring	CBH2855	65	Chassis Unit	CXC4028	
17	Spring	CBH2937				
18	Spring	CBH2735	66	Gear Unit	CXC4029	
19	Spring	CBH2854	67	Frame Unit	CXC4031	
20	Spring	CBH2642	68	Motor Unit(M1)	CXC7134	
			69	Screw Unit	CXC6359	C
21	Spring	CBH2856	70	Screw	JFZ20P020FTC	
22	Spring	CBH2857				
23	Spring	CBH2860	71	Screw	JGZ17P022FTC	
24	Spring	CBH2861	72	Washer	YE20FTC	
25	Spring	CBL1686	73	Pickup Unit(P10.5)(Service)	CXX1942	
			74	Screw	IMS26P030FTC	
26	Arm	CND1909				
27	Frame	CND2582				
28	Bracket	CND2583				
29	Arm	CND2584				
30	Lever	CND2585				D
31	Arm	CND2586				
32	Bracket	CND2587				
33	Arm	CND2588				
34	Lever	CND2589				
35	Holder	CNV7201				
36	Gear	CNV7207				
37	Gear	CNV7208				
38	Gear	CNV7209				E
39	Gear	CNV7210				
40	Gear	CNV7211				
41	Gear	CNV7212				
42	Rack	CNV7214				
43	Arm	CNV7216				
44	Roller	CNV7218				
45	Gear	CNV7219				
46	Guide	CNV7361				
47	Gear	CNV7595				F
48	Guide	CNV7799				
49	Arm	CNV7805				

5. ELECTRICAL PARTS LIST

NOTE:

- Parts whose parts numbers are omitted are subject to being not supplied.
- The part numbers shown below indicate chip components.

Chip Resistor

RS1/○S○○○○J,RS1/○○S○○○○J

Chip Capacitor (except for CQS.....)

CKS....., CCS....., CSZS.....

- The $\triangle$ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
- Meaning of the figures and others in the parentheses in the parts list.

Example) IC 301 is on the point (face A, 91 of x-axis, and 111 of y-axis) of the corresponding PC board.

IC 301 (A, 91, 111) IC NJM2068V

	Circuit Symbol and No.	Part No.		Circuit Symbol and No.	Part No.
■	Unit Number: XWM7175(P490IB)		Q 101	(B,42,105) Transistor	2SA1576A
	Unit Number: XWM7176(P4900IB)		Q 102	(A,33,87) Transistor	DTC114EUA
	Unit Name : Tuner Amp Unit		Q 201	(A,36,50) Transistor	2SC4081
	Unit Number: (P490)		Q 202	(A,43,46) Transistor	RT3T22M
C	Unit Name : Keyboard Unit		Q 301	(A,142,100) Transistor	DTC124EUA
	Unit Number:(P4900IB)		Q 351	(A,132,127) Transistor	RT3C99M
	Unit Name : Keyboard Unit		Q 352	(B,137,126) Transistor	RT3C99M
	Unit Number:(P4900IB)		Q 353	(B,161,128) Transistor	RT3C99M
	Unit Name : Keyboard Unit		Q 650	(A,5,67) Transistor	2SD2396
■	Unit Number: CWX3514		Q 651	(B,22,57) Transistor	RT3T22M
	Unit Name : CD Core		Q 701	(A,120,118) Transistor	2SA2060
	Unit(S10.5COMP2)		Q 702	(A,127,118) Transistor	2SA1162
	Unit Number: CWM8758		Q 703	(A,120,126) Transistor	2SA2060
D	Unit Name : Panel Unit		Q 705	(A,108,90) Transistor	2SC4081
			Q 706	(A,132,93) Transistor	DTC124EUA
			Q 707	(B,128,118) Transistor	DTC124EUA
			Q 801	(A,101,27) Transistor	RT1N431M
			Q 819	(A,111,23) Transistor	2SA1576A
			Q 820	(A,114,27) Transistor	DTC114EUA
			Q 821	(A,34,38) Transistor	2SA1366
			Q 822	(B,71,17) Transistor	DTC114EUA
■	Unit Number: XWM7175(P490IB)		Q 831	(B,96,27) Transistor	2SA1576A
	Unit Number: XWM7176(P4900IB)		Q 832	(B,91,20) Transistor	DTC114EUA
	Unit Name : Tuner Amp Unit		Q 851	(A,16,32) Transistor	2SD1760F5
			Q 852	(B,31,33) Transistor	RT3T22M
			Q 911	(A,5,101) Transistor	2SD2396
			Q 912	(B,28,79) Transistor	RT3T22M
			Q 931	(B,49,98) Transistor	RT3CLLM
			Q 941	(A,115,68) Transistor	DTC114EUA
			Q 981	(B,24,91) Transistor	2SC4081
			Q 982	(A,137,99) Transistor	RT3T22M
			D 171	(B,13,129) Diode	HZM6R2ZMWA
			D 172	(A,12,128) Diode	HZM6R2ZMWA
			D 201	(A,49,50) Diode	HZS12L(B1)
			D 301	(A,91,98) Diode	MPG06G-6415G3
			D 302	(A,94,98) Diode	MPG06G-6415G3
			D 602	(A,100,72) Diode	MC2850-11
			D 650	(A,16,69) Diode	MTZJA8R2(B)
			D 801	(B,102,30) Diode	MC2850-11
			D 802	(B,112,29) Diode	MC2848-11
			D 803	(B,124,32) Diode	MC2846-11
E	IC 101 (A,42,88) IC	HA12241FP			
	IC 171 (A,102,84) IC	NJM2794V			
	IC 201 (B,78,83) IC	PML015B			
	IC 301 (A,91,133) IC	PAL007C			
	IC 420 (A,150,26) IC	NJM2885DL1-33			
■	IC 601 (A,108,54) IC	PEG270A			
	IC 602 (A,82,62) IC	S-80835CNMC-B8U			
	IC 641 (A,52,33) IC	NJM2885DL1-33			
	IC 701 (A,133,75) IC	TC7SET08FUS1			
	IC 702 (A,132,85) IC	TC7SH08FUS1			
F	IC 703 (A,123,76) IC	TC4066BFT			
	IC 704 (A,125,59) IC	NJM2794V			
	IC 851 (B,38,18) IC	NJM2360M			
	IC 901 (A,5,120) IC	NJM2388F84			

5			6			7			8		
<u>Circuit Symbol and No.</u>			<u>Part No.</u>			<u>Circuit Symbol and No.</u>			<u>Part No.</u>		
D 804	(B,120,32)	Diode	MC2848-11			R 203	(A,86,83)		RS1/16S102J		
D 805	(B,108,29)	Diode	MC2846-11			R 212	(A,41,48)		RS1/16S391J		
D 852	(B,48,16)	Diode	RB411D			R 213	(B,51,90)		RS1/16S0R0J		A
D 853	(A,22,27)	Diode	MTZJA10(B)			R 214	(B,66,81)		RS1/16S0R0J		
D 854	(A,90,37)	Diode	MC2848-11			R 215	(B,88,82)		RS1/16S0R0J		
D 901	(A,71,110)	Diode	MPG06G-6415G3			R 216	(B,90,85)		RS1/16S0R0J		
D 902	(A,74,110)	Diode	MPG06G-6415G3			R 217	(A,79,88)		RS1/16S0R0J		
D 911	(A,13,86)	Diode	MPG06G-6415G3			R 218	(B,79,94)		RS1/16S0R0J		
D 912	(A,18,82)	Diode	HZS6L(B1)			R 301	(A,145,84)		RS1/16S103J		
D 931	(A,56,109)	Diode	HZS7L(A1)			R 302	(A,131,99)		RS1/16S331J		
D 932	(A,57,100)	Diode	HZS7L(C3)			R 303	(A,134,99)		RS1/16S103J		
D 942	(A,137,73)	Diode	1SS133			R 304	(A,133,119)		RS1/16S153J		
D 981	(A,18,90)	Diode	HZS9L(A2)			R 305	(B,121,93)		RS1/16S682J		
D 982	(A,95,71)	Diode	MC2848-11			R 306	(B,110,94)		RS1/16S682J		B
D 984	(A,137,76)	Diode	1SS133			R 307	(B,93,83)		RS1/16S682J		
L 101	(A,13,78)	Inductor	LAU2R2K			R 308	(B,97,91)		RS1/16S682J		
L 201	(A,53,81)	Ferri-Inductor	LAU100K			R 309	(B,121,95)		RS1/16S123J		
L 202	(A,40,29)	Ferri-Inductor	LAU100K			R 310	(B,97,85)		RS1/16S123J		
L 241	(A,61,94)	Ferri-Inductor	LAU100K			R 311	(B,101,94)		RS1/16S123J		
L 401	(A,151,49)	Inductor	LAU1R0K			R 312	(B,93,91)		RS1/16S123J		
L 402	(A,147,91)	Inductor	LAU1R0K			R 350	(B,144,131)		RS1/16S0R0J		
L 403	(B,154,95)	Chip Coil	LCTAW4R7J2520			R 351	(A,137,124)		RS1/16S390J		
L 601	(A,77,54)	Ferri-Inductor	LAU100K			R 352	(A,135,124)		RS1/16S472J		
L 701	(A,132,78)	Inductor	CTF1382			R 353	(A,128,125)		RS1/16S472J		
L 831	(A,101,22)	Ferri-Inductor	LAU100K			R 354	(A,143,120)		RS1/16S223J		C
L 851	(A,37,15)	Inductor	CTF1660			R 355	(A,138,128)		RS1/16S223J		
L 901	(A,30,107)	Choke Coil 600 µH	CTH1280			R 358	(A,131,125)		RS1/16S390J		
X 601	(A,92,56)	Crystal 20 MHz	VSS1167			R 359	(A,139,123)		RS1/16S390J		
S 802	(A,21,9)	Switch(DETACH)	CSN1039			R 360	(B,140,122)		RS1/16S472J		
△FU352	(B,126,134)	Fuse 3 A	CEK1286			R 361	(A,141,123)		RS1/16S223J		
TU401	(A,161,101)	FM/AM Tuner Unit	CWE1952			R 362	(B,136,129)		RS1/16S0R0J		
BZ621	(A,135,23)	Buzzer	CPV1062			R 363	(B,132,128)		RS1/16S472J		
AR401	(B,163,113)	Surge Protector	IMSA-6801-01Y901			R 364	(B,126,131)		RS1/16S223J		
△	Fuse 10 A		CEK1208			R 366	(B,130,126)		RS1/16S390J		
RESISTORS						R 367	(A,156,122)		RS1/16S390J		
R 101	(B,36,135)		RS1/16S101J			R 368	(B,166,127)		RS1/16S472J		D
R 102	(B,36,133)		RS1/16S620J			R 369	(A,156,125)		RS1/16S223J		
R 103	(B,37,128)		RS1/16S101J			R 371	(B,147,114)		RS1/16S390J		
R 104	(A,37,85)		RS1/16S102J			R 372	(B,164,123)		RS1/16S472J		
R 105	(A,48,87)		RS1/16S472J			R 373	(B,161,133)		RS1/16S223J		
R 106	(A,49,89)		RS1/16S472J			R 401	(B,151,64)		RS1/16S0R0J		
R 107	(B,26,133)		RS1/16S181J			R 403	(B,158,70)		RS1/16S681J		
R 108	(B,25,130)		RS1/16S223J			R 404	(B,113,45)		RS1/16S681J		
R 109	(B,39,105)		RS1/16S222J			R 406	(B,155,80)		RS1/16S681J		
R 110	(B,29,120)		RS1/16S181J			R 407	(B,113,47)		RS1/16S681J		
R 111	(B,27,120)		RS1/16S223J			R 408	(B,155,83)		RS1/16S681J		E
R 112	(B,25,120)		RS1/16S102J			R 409	(B,155,85)		RS1/16S681J		
R 113	(B,27,136)		RS1/16S102J			R 411	(B,156,87)		RS1/16S681J		
R 114	(B,43,107)		RS1/16S223J			R 413	(B,156,89)		RS1/16S681J		
R 115	(B,37,106)		RS1/16S472J			R 424	(B,116,49)		RS1/16S681J		
R 161	(A,72,56)		RS1/16S102J			R 601	(B,111,61) (P490IB)		RS1/16S104J		
R 162	(A,72,62)		RS1/16S102J			R 602	(B,103,63) (P4900IB)		RS1/16S104J		
R 163	(A,72,55)		RS1/16S103J			R 603	(B,111,62)		RS1/16S104J		
R 164	(A,74,62)		RS1/16S103J			R 605	(A,103,68)		RS1/16S104J		
R 172	(A,69,99)		RS1/16S223J			R 606	(A,87,65)		RS1/16S104J		
R 175	(A,66,99)		RS1/16S223J			R 607	(A,81,56)		RS1/16S822J		
R 201	(A,82,87)		RS1/16S102J			R 608	(B,103,44)		RS1/16S102J		F
R 202	(A,90,85)		RS1/16S102J			R 609	(A,93,38)		RS1/16S102J		
						R 610	(A,89,60)		RS1/16S471J		
						R 611	(A,93,45)		RS1/16S473J		

Circuit Symbol and No.**Part No.****Circuit Symbol and No.****Part No.**

R 613 (A,99,35) RS1/16S473J
R 616 (B,98,59) RS1/16S0R0J

R 813 (A,77,15) RS1/16S1R0J
R 814 (B,109,24) RS1/16S222J

A R 621 (B,135,28) RS1/16S102J
R 631 (A,130,42) RS1/16S104J
R 640 (A,72,33) RS1/16S104J
R 642 (A,75,41) RS1/16S682J
R 643 (B,101,52) RS1/16S221J

R 815 (B,97,38) RS1/16S473J
R 816 (B,111,24) RS1/16S473J
R 817 (B,102,28) RS1/16S473J
R 818 (B,131,25) RS1/16S104J
R 819 (A,108,23) RS1/16S473J

R 645 (B,87,37) RS1/16S221J
R 646 (B,70,34) RS1/16S221J
R 647 (A,69,33) RS1/16S221J
R 649 (B,70,32) RS1/16S104J
R 651 (A,16,60) RD1/4PU561J

R 820 (A,110,26) RS1/16S682J
R 821 (A,40,44) RD1/4PU391J
R 822 (B,32,43) RS1/16S103J
R 823 (A,43,38) RD1/4PU222J
R 824 (A,81,16) RS1/16S472J

B R 653 (A,70,28) RS1/16S221J
R 654 (A,72,30) RS1/16S104J
R 666 (B,81,39) RS1/16S104J
R 667 (B,81,24) RS1/16S102J
R 668 (B,84,29) RS1/16S102J

R 831 (B,93,27) RS1/16S473J
R 832 (B,94,24) RS1/16S102J
R 833 (B,100,20) RS1/16S222J
R 850 (A,26,35) RD1/4PU681J
R 852 (A,29,16) RS1/16S1R0J

R 673 (B,83,38) RS1/16S682J
R 701 (B,109,41) RS1/16S102J
R 702 (A,133,87) RS1/16S102J
R 703 (A,134,80) RS1/16S123J
R 704 (A,135,85) RS1/16S223J

R 857 (B,30,15) RS1/16S102J
R 858 (A,35,23) RD1/4PU472J
R 859 (B,32,15) RS1/16S821J
R 860 (B,32,21) RS1/16S391J
R 901 (A,33,82) RS1/16S102J

C R 705 (A,124,120) RS1/16S103J
R 706 (A,124,117) RS1/16S102J
R 707 (A,125,106) RS2PMFR47J
R 708 (A,123,123) RS1/16S103J
R 709 (A,103,98) RD1/4PU271J

R 902 (A,32,85) RS1/16S103J
R 912 (B,33,79) RS1/16S222J
R 913 (B,11,82) RS1/16S223J
R 914 (B,47,94) RS1/16S104J
R 915 (B,46,99) RS1/16S104J

R 710 (A,106,103) RD1/4PU271J
R 711 (A,134,90) RS1/16S104J
R 712 (B,122,122) RS1/16S514J
R 713 (B,122,120) RS1/16S393J
R 714 (A,129,94) RS1/16S104J

R 916 (A,109,69) RS1/16S104J
R 918 (B,9,105) RS1/16S391J
R 931 (A,51,112) RD1/4PU102J
R 932 (B,51,104) RS1/16S472J
R 933 (B,67,101) RS1/16S473J

D R 716 (A,139,90) RS1/16S102J
R 717 (A,121,110) RS1/16S472J
R 718 (A,142,87) RS1/16S472J
R 720 (A,128,85) RS1/16S102J
R 721 (A,132,80) RS1/16S102J

R 934 (B,67,99) RS1/16S103J
R 935 (B,47,106) RS1/16S473J
R 936 (B,44,100) RS1/16S104J
R 941 (A,63,100) RD1/4PU102J
R 942 (B,132,75) RS1/16S103J

R 722 (A,127,87) RS1/16S104J
R 723 (A,97,98) RD1/4PU271J
R 724 (A,114,128) RS1/16S103J
R 725 (A,100,103) RD1/4PU271J
R 726 (A,113,100) RS1/16S103J

R 981 (B,24,93) RS1/16S683J
R 982 (B,21,91) RS1/16S683J
R 983 (B,23,87) RS1/16S223J
R 984 (A,145,103) RS1/16S102J

CAPACITORS

R 728 (A,108,93) RS1/16S103J
R 731 (A,134,68) RS1/16S223J
R 732 (A,132,68) RS1/16S0R0J
R 734 (A,129,69) RS1/16S223J
R 735 (A,127,69) RS1/16S0R0J

C 101 (B,32,137) CKSRYB104K16
C 102 (A,39,84) CKSRYB104K16
C 103 (A,40,93) CCSRCH101J50
C 104 (A,42,84) CCSRCH101J50
C 171 (A,69,101) CKSRYB472K50

R 736 (A,102,96) RS1/16S682J
R 737 (A,102,94) RS1/16S152J
R 802 (A,16,25) RS1/16S104J
R 803 (B,71,12) RS1/16S102J
R 804 (A,124,23) RD1/4PU222J

C 172 (B,13,139) CKSRYB104K16
C 173 (A,66,101) CKSRYB472K50
C 181 (A,112,82) CEJQ2R2M50
C 182 (A,99,90) CKSRYB105K10
C 183 (A,90,91) CKSRYB105K10

R 805 (A,127,23) RD1/4PU222J
R 806 (A,120,23) RD1/4PU222J
R 807 (A,117,23) RD1/4PU222J
R 808 (B,113,24) RS1/16S222J
R 809 (A,104,21) RD1/4PU222J

C 184 (A,120,82) CEJQ330M10
C 185 (A,97,90) CKSRYB105K10
C 186 (A,94,91) CKSRYB105K10
C 201 (B,66,72) CKSRYB105K10
C 202 (A,73,73) CKSRYB105K10

R 810 (B,129,26) RS1/16S102J
R 811 (B,112,33) RS1/16S102J
R 812 (B,107,32) RS1/16S102J

C 203 (B,66,74) CKSRYB104K16

Circuit Symbol and No.		Part No.	Circuit Symbol and No.		Part No.
C 204	(A,85,81)	CKSRYB104K16	C 662	(A,48,25)	CEJQ470M6R3
C 205	(B,66,76)	CKSRYB105K10	C 663	(A,70,44)	CEJQ4R7M35
C 206	(A,89,94)	CKSRYB105K10	C 666	(B,55,67)	CKSRYB105K10
C 207	(B,66,77)	CKSRYB105K10			
C 208	(B,88,77)	CKSRYB105K10	C 701	(A,131,73)	CKSRYB105K10
C 209	(B,66,79)	CKSRYB105K10	C 702	(A,130,87)	CKSRYB104K16
C 210	(B,88,79)	CKSRYB105K10	C 703	(A,115,124)	CKSYB475K16
C 211	(B,67,90)	CKSRYB153K50	C 705	(A,131,64)	CKSRYB105K10
C 212	(B,88,92)	CKSRYB153K50	C 706	(A,132,64)	CKSRYB105K10
C 217	(B,66,87)	CKSRYB104K16	C 708	(A,141,92)	CKSRYB103K50
C 218	(A,76,94)	CEJQ100M25	C 709	(A,129,64)	CKSRYB105K10
C 219	(A,83,94)	CEJQ100M25	C 710	(A,122,65)	CKSRYB105K10
C 220	(A,56,90)	CEJQ470M16	C 716	(A,120,72)	CKSRYB473K50
C 232	(B,44,52)	CKSRYB473K50	C 717	(A,133,60)	CEJQ2R2M50
C 233	(B,37,54)	CKSRYB104K16	C 718	(A,139,60)	CEJQ330M10
C 234	(A,35,57)	CEJQ470M16	C 822	(A,81,14)	CKSRYB473K50
C 242	(B,66,95)	CKSRYB104K16	C 833	(B,99,25)	CKSRYB105K10
C 243	(A,69,93)	CEJQ470M16	C 852	(B,37,25)	CKSRYB223K50
C 309	(A,132,116)	CEJQ330M10	C 854	(B,45,12)	CCSRCH331J50
C 311	(B,123,130)	CKSQYB225K10	C 855	(B,34,28)	CKSRYB104K16
C 312	(B,124,126)	CKSQYB225K10	C 856	(B,19,32)	CKSRYB104K16
C 313	(A,134,110)	CEJQ100M25	C 858	(A,53,16)	CEJQ470M25
C 314	(B,118,116)	CKSRYB474K10	C 859	(A,30,28)	CEJQ101M16
C 315	(B,115,115)	CKSRYB474K10	C 860	(A,25,22)	CEJQ470M16
C 316	(B,118,121)	CKSQYB474K25	C 901	(A,49,122)	CCH1486
C 317	(B,115,120)	CKSQYB474K25	C 902	(B,59,120)	CKSRYB104K16
C 318	(B,120,126)	CKSRYB474K10	C 912	(B,22,82)	CKSRYB472K50
C 319	(B,113,114)	CKSRYB474K10	C 913	(B,35,68)	CKSRYB103K50
C 320	(B,120,130)	CKSQYB474K25	C 914	(A,37,66)	CEJQ470M16
C 321	(B,113,119)	CKSQYB474K25	C 915	(A,27,74)	CEAT102M16
C 359	(A,139,108)	CEJQ100M25	C 922	(B,10,120)	CKSRYB103K50
C 360	(A,134,104)	CEJQ100M25	C 923	(A,13,96)	CEJQ101M16
C 361	(A,144,114)	CEJQ100M25	C 924	(B,19,101)	CKSRYB103K50
C 362	(A,139,114)	CEJQ100M25	C 925	(A,26,83)	CEJQ221M16
C 363	(A,153,118)	CEJQ100M25	C 931	(B,49,104)	CKSRYB104K16
C 364	(A,144,108)	CEJQ100M25	C 941	(A,138,69)	CEJQ1R0M50
C 402	(B,152,51)	CKSRYB103K50	C 984	(A,139,80)	CEJQ220M16
C 405	(B,146,94)	CKSRYB103K50			
C 406	(A,148,97)	CEJQ101M16			
C 408	(B,152,66)	CKSRYB103K50			
C 413	(B,112,50)	CCSRCH470J50			
C 415	(A,154,54)	CEJQ470M6R3			
C 420	(A,149,38)	CEJQ470M6R3			
C 422	(A,139,35)	CEJQ1R0M50	IC 1902	(A,13,67) Remote IC	GP1UX51RK
C 601	(B,74,47)	CKSRYB105K10	IC 1921	(B,23,91) IC	PEG268A
C 602	(A,86,51)	CEJQ4R7M35	Q 2011	(B,16,76) Transistor	2SC4617
C 603	(B,93,60)	CCSRCH101J50	Q 2012	(B,21,75) Transistor	2SC2411K
C 604	(A,81,53)	CEJQ2R2M50	D 1901	(B,13,114) Diode	MC2846-11
C 605	(B,90,56)	CCSRCH100D50	D 1902	(B,13,118) Diode	MC2848-11
C 606	(B,94,52)	CCSRCH100D50	D 1921	(B,33,93) Diode	1SS355
C 607	(B,83,58)	CKSRYB105K10	D 1941	(A,8,10) LED	SML412BC5T(NP)
C 609	(B,83,50)	CKSRYB105K10	D 1942	(A,11,19) LED	SML412BC5T(NP)
C 618	(A,103,67)	CKSRYB102K50	D 1943	(A,34,10) LED	SML412BC5T(NP)
C 650	(B,13,66)	CKSRYB473K50	D 1944	(A,31,19) LED	SML412BC5T(NP)
C 651	(B,53,42)	CKSRYB104K16	D 1945	(A,40,67) LED	SML412BC5T(NP)
C 652	(B,85,25)	CKSRYB152K50	D 1946	(A,40,78) LED	SML412BC5T(NP)
C 653	(B,87,30)	CKSRYB152K50	D 1947	(A,40,89) LED	SML412BC5T(NP)
C 659	(A,48,41)	CEJQ101M16	D 1948	(A,40,100) LED	SML412BC5T(NP)
C 660	(B,67,45)	CKSRYB105K10	D 1949	(A,40,110) LED	SML412BC5T(NP)
C 661	(B,54,23)	CKSRYB103K50	D 1950	(A,40,121) LED	SML412BC5T(NP)

B
Unit Number : (P490IB)
Unit Name : Keyboard Unit

MISCELLANEOUS

Circuit Symbol and No.**Part No.****Circuit Symbol and No.****Part No.**

D 1951 (A,40,132) LED SML412BC5T(NP)
 D 1952 (A,40,146) LED SML412BC5T(NP)
 D 1953 (A,6,158) LED SML412BC5T(NP)

R 1960 (B,36,43)
 R 1961 (B,33,35)

RS1/16S391J
 RS1/16S391J

A

D 1954 (A,40,154) LED SML412BC5T(NP)
 D 1955 (A,4,45) LED SML412BC5T(NP)
 D 1956 (A,21,62) LED SML412BC5T(NP)
 D 1957 (A,21,27) LED SML412BC5T(NP)
 D 1958 (A,38,45) LED SML412BC5T(NP)

R 1962 (B,36,33)
 R 1963 (B,36,45)
 R 1965 (B,27,157)
 R 1975 (B,9,36)
 R 1976 (B,12,31)

RS1/16S181J
 RS1/16S181J
 RS1/16S0R0J
 RS1/16S822J
 RS1/16S223J

L 1901 (B,21,70) Inductor CTF1617
 TH2011 (B,17,82) Thermistor CCX1037
 X 1921 (B,23,85) Radiator 10.000 MHz CSS1577
 S 1971 (A,27,28) Push Switch CSG1155
 S 1972 (A,27,61) Push Switch CSG1155

R 1977 (B,32,62)
 R 1978 (B,32,58)
 R 1979 (B,32,54)
 R 1980 (B,29,21)
 R 1981 (B,26,19)

RS1/16S821J
 RS1/16S182J
 RS1/16S332J
 RS1/16S472J
 RS1/16S822J

B

S 1973 (A,37,38) Push Switch CSG1155
 S 1974 (A,5,38) Push Switch CSG1155
 S 1975 (A,7,20) Push Switch CSG1155
 S 1976 (A,40,71) Push Switch CSG1155
 S 1977 (A,40,82) Push Switch CSG1155

R 1982 (B,17,18)
 R 1983 (B,33,116)
 R 1984 (B,33,117)
 R 1985 (B,33,120)
 R 1986 (B,35,122)

RS1/16S223J
 RS1/16S821J
 RS1/16S182J
 RS1/16S332J
 RS1/16S472J

S 1978 (A,40,103) Push Switch CSG1155
 S 1979 (A,35,20) Push Switch CSG1155
 S 1980 (A,37,9) Push Switch CSG1155
 S 1981 (A,5,9) Push Switch CSG1155
 S 1982 (A,40,92) Push Switch CSG1155

R 1987 (B,32,135)
 R 1988 (B,32,139)
 R 1989 (B,29,99)
 R 1990 (B,29,98)
 R 1991 (B,29,96)

RS1/16S822J
 RS1/16S223J
 RS1/16S103J
 RS1/16S103J
 RS1/16S103J

C

S 1983 (A,40,114) Push Switch CSG1155
 S 1984 (A,40,125) Push Switch CSG1155
 S 1985 (A,40,136) Push Switch CSG1155
 S 1986 (A,40,142) Push Switch CSG1155
 S 1987 (A,40,157) Push Switch CSG1155

R 1992 (B,9,39)
 R 1993 (B,10,35)
 R 1994 (B,12,35)
 R 1995 (B,14,37)
 R 2011 (B,14,77)

RS1/16S472J
 RS1/16S332J
 RS1/16S182J
 RS1/16S821J
 RS1/16S273J

S 1988 (A,21,45) Rotary Encoder YSD5009

R 2012 (B,26,80)
 R 2013 (B,17,80)
 R 2014 (B,26,78)
 R 2015 (B,9,99)
 R 2016 (A,24,97)

RS1/16S473J
 RS1/16S683J
 RS1/16S392J
 RS1/16S2202D
 RS1/16S101J

RESISTORS

R 1902 (B,5,135) RS1/16S222J
 R 1903 (B,6,135) RS1/16S222J
 R 1905 (B,8,123) RS1/16S103J
 R 1906 (B,21,63) RS1/16S101J
 R 1907 (B,16,60) RS1/16S103J

R 2017 (A,27,103)
 R 2018 (A,26,109)
 R 2019 (B,22,100)
 R 2020 (B,30,92)
 R 2022 (A,25,101)

RS1/16S102J
 RAB4C101J
 RS1/16S473J
 RS1/16S473J
 RS1/16S102J

R 1908 (B,14,81) RS1/16S2R2J
 R 1910 (B,15,119) RS1/16S103J
 R 1911 (B,33,126) RS1/16S473J
 R 1922 (B,32,92) RS1/16S154J
 R 1923 (B,10,87) RS1/16S473J

R 2023 (B,10,103)

RS1/16S3002D

CAPACITORS

R 1925 (B,8,87) RS1/16S473J
 R 1941 (B,32,19) RS1/16S121J
 R 1942 (B,31,120) RS1/16S121J
 R 1943 (B,36,127) RS1/16S121J
 R 1944 (B,36,142) RS1/16S121J

C 1904 (B,18,61)
 C 1907 (B,31,127)
 C 1922 (B,26,85)
 C 1923 (B,30,103)
 C 1941 (A,11,10)

CKSYF106Z10
 CKSRYB104K16
 CKSRYB104K16
 CKSRYB103K50
 CKSRYF104Z50

E

R 1945 (B,25,158) RS1/16S181J
 R 1946 (B,32,23) RS1/16S181J
 R 1947 (B,31,123) RS1/16S181J
 R 1948 (B,36,128) RS1/16S181J
 R 1949 (B,36,139) RS1/16S181J

C 1942 (A,16,19)
 C 1943 (A,31,9)
 C 1944 (A,26,19)
 C 1945 (A,39,65)
 C 1946 (A,39,76)

CKSRYF104Z50
 CKSRYF104Z50
 CKSRYF104Z50
 CKSRYF104Z50
 CKSRYF104Z50

R 1950 (B,25,155) RS1/16S391J
 R 1951 (B,30,24) RS1/16S331J
 R 1952 (B,33,124) RS1/16S331J
 R 1953 (B,36,131) RS1/16S331J
 R 1954 (B,36,136) RS1/16S331J

C 1947 (A,39,87)
 C 1948 (A,39,98)
 C 1949 (A,39,109)
 C 1950 (A,39,119)
 C 1951 (A,39,130)

CKSRYF104Z50
 CKSRYF104Z50
 CKSRYF104Z50
 CKSRYF104Z50
 CKSRYF104Z50

F

R 1955 (B,27,154) RS1/16S391J
 R 1957 (B,28,33) RS1/16S391J
 R 1958 (B,32,33) RS1/16S391J

C 1952 (A,40,147)
 C 1953 (A,18,154)
 C 1954 (A,40,152)
 C 1955 (A,6,45)

CKSRYF104Z50
 CKSRYF104Z50
 CKSRYF104Z50
 CKSRYF104Z50

5			6	7			8
<u>Circuit Symbol and No.</u>			<u>Part No.</u>	<u>Circuit Symbol and No.</u>			<u>Part No.</u>
C 1956	(A,21,60)		CKSRYF104Z50	S 1988	(A,21,45) Rotary Encoder		YSD5009
C 1957	(A,21,29)		CKSRYF104Z50	RESISTORS			
C 1958	(A,37,45)		CKSRYF104Z50	R 1902	(B,5,135)		RS1/16S222J
C 2011	(A,24,84)		CKSRYB104K16	R 1903	(B,6,135)		RS1/16S222J
C 2012	(B,13,94)		CKSRYB105K10	R 1905	(B,8,123)		RS1/16S103J
C 2013	(A,24,88)		CKSRYB224K16	R 1906	(B,21,63)		RS1/16S101J
C 2014	(A,24,93)		CKSRYB104K16	R 1907	(B,16,60)		RS1/16S103J
B				R 1908	(B,14,81)		RS1/16S2R2J
Unit Number :(P4900IB)				R 1910	(B,15,119)		RS1/16S103J
Unit Name : Keyboard Unit				R 1911	(B,33,126)		RS1/16S473J
MISCELLANEOUS				R 1922	(B,32,92)		RS1/16S154J
IC 1902	(A,13,67) Remote IC		GP1UX51RK	R 1923	(B,10,87)		RS1/16S473J
IC 1921	(B,23,91) IC		PEG268A	R 1925	(B,8,87)		RS1/16S473J
Q 2011	(B,16,76) Transistor		2SC4617	R 1941	(B,32,19)		RS1/16S181J
Q 2012	(B,21,75) Transistor		2SC2411K	R 1942	(B,31,120)		RS1/16S181J
D 1901	(B,13,114) Diode		MC2846-11	R 1943	(B,36,127)		RS1/16S181J
D 1902	(B,13,118) Diode		MC2848-11	R 1944	(B,36,142)		RS1/16S181J
D 1921	(B,33,93) Diode		1SS355	R 1945	(B,25,158)		RS1/16S151J
D 1941	(A,8,10) LED		CL-195PG-CD	R 1946	(B,32,23)		RS1/16S181J
D 1942	(A,11,19) LED		CL-195PG-CD	R 1947	(B,31,123)		RS1/16S181J
D 1943	(A,34,10) LED		CL-195PG-CD	R 1948	(B,36,128)		RS1/16S181J
D 1944	(A,31,19) LED		CL-195PG-CD	R 1949	(B,36,139)		RS1/16S181J
D 1945	(A,40,67) LED		CL-195PG-CD	R 1950	(B,25,155)		RS1/16S181J
D 1946	(A,40,78) LED		CL-195PG-CD	R 1951	(B,30,24)		RS1/16S181J
D 1947	(A,40,89) LED		CL-195PG-CD	R 1952	(B,33,124)		RS1/16S181J
D 1948	(A,40,100) LED		CL-195PG-CD	R 1953	(B,36,131)		RS1/16S181J
D 1949	(A,40,110) LED		CL-195PG-CD	R 1954	(B,36,136)		RS1/16S181J
D 1950	(A,40,121) LED		CL-195PG-CD	R 1955	(B,27,154)		RS1/16S181J
D 1951	(A,40,132) LED		CL-195PG-CD	R 1957	(B,28,33)		RS1/16S391J
D 1952	(A,40,146) LED		CL-195PG-CD	R 1958	(B,32,33)		RS1/16S391J
D 1953	(A,6,158) LED		CL-195PG-CD	R 1960	(B,36,43)		RS1/16S391J
D 1954	(A,40,154) LED		CL-195PG-CD	R 1961	(B,33,35)		RS1/16S391J
D 1955	(A,4,45) LED		SML412BC5T(NP)	R 1962	(B,36,33)		RS1/16S181J
D 1956	(A,21,62) LED		SML412BC5T(NP)	R 1963	(B,36,45)		RS1/16S181J
D 1957	(A,21,27) LED		SML412BC5T(NP)	R 1965	(B,27,157)		RS1/16S181J
D 1958	(A,38,45) LED		SML412BC5T(NP)	R 1975	(B,9,36)		RS1/16S822J
L 1901	(B,21,70) Inductor		CTF1617	R 1976	(B,12,31)		RS1/16S223J
TH2011	(B,17,82) Thermistor		CCX1037	R 1977	(B,32,62)		RS1/16S821J
X 1921	(B,23,85) Radiator 10.0 MHz		CSS1577	R 1978	(B,32,58)		RS1/16S182J
S 1971	(A,27,28) Push Switch		CSG1155	R 1979	(B,32,54)		RS1/16S332J
S 1972	(A,27,61) Push Switch		CSG1155	R 1980	(B,29,21)		RS1/16S472J
S 1973	(A,37,38) Push Switch		CSG1155	R 1981	(B,26,19)		RS1/16S822J
S 1974	(A,5,38) Push Switch		CSG1155	R 1982	(B,17,18)		RS1/16S223J
S 1975	(A,7,20) Push Switch		CSG1155	R 1983	(B,33,116)		RS1/16S821J
S 1976	(A,40,71) Push Switch		CSG1155	R 1984	(B,33,117)		RS1/16S182J
S 1977	(A,40,82) Push Switch		CSG1155	R 1985	(B,33,120)		RS1/16S332J
S 1978	(A,40,103) Push Switch		CSG1155	R 1986	(B,35,122)		RS1/16S472J
S 1979	(A,35,20) Push Switch		CSG1155	R 1987	(B,32,135)		RS1/16S822J
S 1980	(A,37,9) Push Switch		CSG1155	R 1988	(B,32,139)		RS1/16S223J
S 1981	(A,5,9) Push Switch		CSG1155	R 1989	(B,29,99)		RS1/16S103J
S 1982	(A,40,92) Push Switch		CSG1155	R 1990	(B,29,98)		RS1/16S103J
S 1983	(A,40,114) Push Switch		CSG1155	R 1991	(B,29,96)		RS1/16S103J
S 1984	(A,40,125) Push Switch		CSG1155	R 1992	(B,9,39)		RS1/16S472J
S 1985	(A,40,136) Push Switch		CSG1155	R 1993	(B,10,35)		RS1/16S332J
S 1986	(A,40,142) Push Switch		CSG1155	R 1994	(B,12,35)		RS1/16S182J
S 1987	(A,40,157) Push Switch		CSG1155	R 1995	(B,14,37)		RS1/16S821J
				R 2011	(B,14,77)		RS1/16S273J
				R 2012	(B,26,80)		RS1/16S473J

Circuit Symbol and No.**Part No.****Circuit Symbol and No.****Part No.**

R 2013	(B,17,80)	RS1/16S683J
R 2014	(B,26,78)	RS1/16S392J
R 2015	(B,9,99)	RS1/16S2202D
R 2016	(A,24,97)	RS1/16S101J
R 2017	(A,27,103)	RS1/16S102J
R 2018	(A,26,109)	RAB4C101J
R 2019	(B,22,100)	RS1/16S473J
R 2020	(B,30,92)	RS1/16S473J
R 2022	(A,25,101)	RS1/16S102J
R 2023	(B,10,103)	RS1/16S3002D

CAPACITORS

C 1904	(B,18,61)	CKSYF106Z10
C 1907	(B,31,127)	CKSRYB104K16
C 1922	(B,26,85)	CKSRYB104K16
C 1923	(B,30,103)	CKSRYB103K50
C 1955	(A,6,45)	CKSRYF104Z50
C 1956	(A,21,60)	CKSRYF104Z50
C 1957	(A,21,29)	CKSRYF104Z50
C 1958	(A,37,45)	CKSRYF104Z50
C 2011	(A,24,84)	CKSRYB104K16
C 2012	(B,13,94)	CKSRYB105K10
C 2013	(A,24,88)	CKSRYB224K16
C 2014	(A,24,93)	CKSRYB104K16

**Unit Number: CWX3514****Unit Name : CD Core****Unit(S10.5COMP2)****MISCELLANEOUS**

IC 201	(A,34,46)	IC	PE5547A
IC 301	(A,27,14)	IC	BA5839FP
Q 101	(B,56,72)	Transistor	2SA1577
Q 102	(B,47,57)	Transistor	2SB1689
X 201	(A,23,35)	Ceramic Resonator	16.934 MHz CSS1603
S 901	(A,53,37)	Switch(HOME)	CSN1067
S 903	(B,19,58)	Switch(DSCSNS)	CSN1067
S 904	(B,38,67)	Switch(12EJ)	CSN1068
S 905	(B,24,68)	Switch(8EJ)	CSN1068

RESISTORS

R 101	(B,60,73)	RS1/10SR2R4J
R 102	(B,59,71)	RS1/10SR2R4J
R 103	(B,60,71)	RS1/10SR2R7J
R 104	(B,52,69)	RS1/16SS222J
R 105	(B,41,57)	RS1/16SS102J
R 107	(B,41,59)	RS1/16SS105J
R 202	(B,32,62)	RS1/16SS473J
R 203	(B,42,45)	RS1/16S473J
R 204	(A,25,61)	RS1/16SS221J
R 206	(B,26,53)	RS1/16SS104J
R 210	(B,13,32)	RS1/16SS102J
R 214	(B,36,34)	RS1/16SS472J
R 216	(B,47,49)	RS1/16SS472J
R 221	(B,36,32)	RS1/16SS103J
R 222	(B,35,32)	RS1/16SS103J
R 225	(A,49,49)	RS1/16SS103J

R 226	(A,49,50)	RS1/16SS393J
R 227	(B,45,51)	RS1/16SS562J
R 228	(B,42,53)	RS1/16SS122J
R 229	(B,44,53)	RS1/16SS472J
R 230	(B,21,28)	RS1/16SS0R0J
R 232	(B,43,51)	RS1/16SS122J
R 233	(B,29,52)	RS1/16SS103J
R 234	(B,30,61)	RS1/16SS473J
R 235	(A,25,63)	RS1/16SS473J
R 239	(B,26,48)	RS1/16SS473J
R 240	(B,10,31)	RS1/16SS473J
R 241	(B,9,32)	RS1/16SS103J

R 244	(A,20,52)	RS1/16SS473J
R 255	(A,27,63)	RAB4CQ104J
R 307	(A,34,19)	RS1/16SS183J
R 308	(A,38,20)	RS1/16SS183J
R 309	(A,35,21)	RS1/16SS183J
R 310	(A,38,21)	RS1/16SS183J
R 601	(B,28,38)	RS1/16SS0R0J
R 602	(B,27,41)	RS1/16SS0R0J
R 606	(B,23,41)	RS1/16SS0R0J
R 701	(B,16,35)	RS1/16SS221J

R 702	(A,23,55)	RS1/16SS221J
-------	-----------	--------------

CAPACITORS

C 106	(B,56,69)	CKSQYB475K6R3
C 202	(A,27,57)	CKSSYB104K10
C 204	(A,24,63)	CKSSYB103K16
C 205	(B,23,43)	CKSQYB475K6R3
C 206	(A,22,39)	CKSSYB104K10
C 207	(A,24,37)	CKSRYB104K16
C 209	(B,33,40)	CEVW220M6R3
C 210	(B,29,42)	CKSSYB104K10
C 211	(A,27,34)	CKSSYB104K10
C 212	(B,29,32)	CKSRYB104K16
C 213	(A,44,37)	CKSSYB104K10
C 214	(A,28,33)	CKSSYB104K10
C 216	(A,50,51)	CKSSYB332K50
C 217	(A,46,51)	CKSSYB104K10
C 218	(A,49,51)	CKSSYB473K10
C 219	(A,45,53)	CKSSYB104K10
C 220	(A,46,53)	CKSSYB182K50
C 221	(A,44,53)	CKSSYB104K10
C 222	(B,43,53)	CCSSCH560J50
C 223	(B,45,53)	CCSSCH4R0C50
C 224	(A,43,55)	CKSSYB104K10
C 226	(A,40,58)	CCSSCH680J50
C 227	(A,40,60)	CCSSCH470J50
C 228	(A,39,62)	CKSSYB103K16
C 229	(B,49,59)	CKSSYB104K10
C 236	(A,42,61)	CKSSYB104K10
C 239	(B,44,51)	CCSSCH220J50
C 240	(A,35,61)	CKSSYB104K10
C 250	(B,36,30)	CKSSYB102K50
C 251	(B,33,29)	CKSSYB102K50
C 303	(A,35,19)	CKSSYB472K25
C 304	(A,34,21)	CKSSYB223K16
C 307	(B,25,9)	CKSRYB104K16
C 308	(B,10,27)	CKSRYB105K10

5

6

7

8

<u>Circuit Symbol and No.</u>	<u>Part No.</u>
-------------------------------	-----------------

C 703	(B,11,37)	CCSSCH101J50
C 704	(B,8,36)	CKSSYB102K50
C 711	(A,25,26)	CKSSYB104K10

D

Unit Number : CWM8758
Unit Name : Panel Unit

MISCELLANEOUS

D 1970	LED	CL220PGC
S 1970	Push Switch	CSG1112

RESISTORS

R 1970	RS1/16S101J
R 1971	RS1/16S101J
R 1972	RS1/16S0R0J

CAPACITORS

C 1970	CKSRYB104K16
--------	--------------

Miscellaneous Parts List

	Pickup Unit(P10.5)(Service)	CXX1942
M 1	Motor Unit(SPINDLE)	CXC7134
M 2	Motor Unit(LOADING/CARRIAGE)	CXC4026