



EXPLODED VIEW (CD MECHANISM)

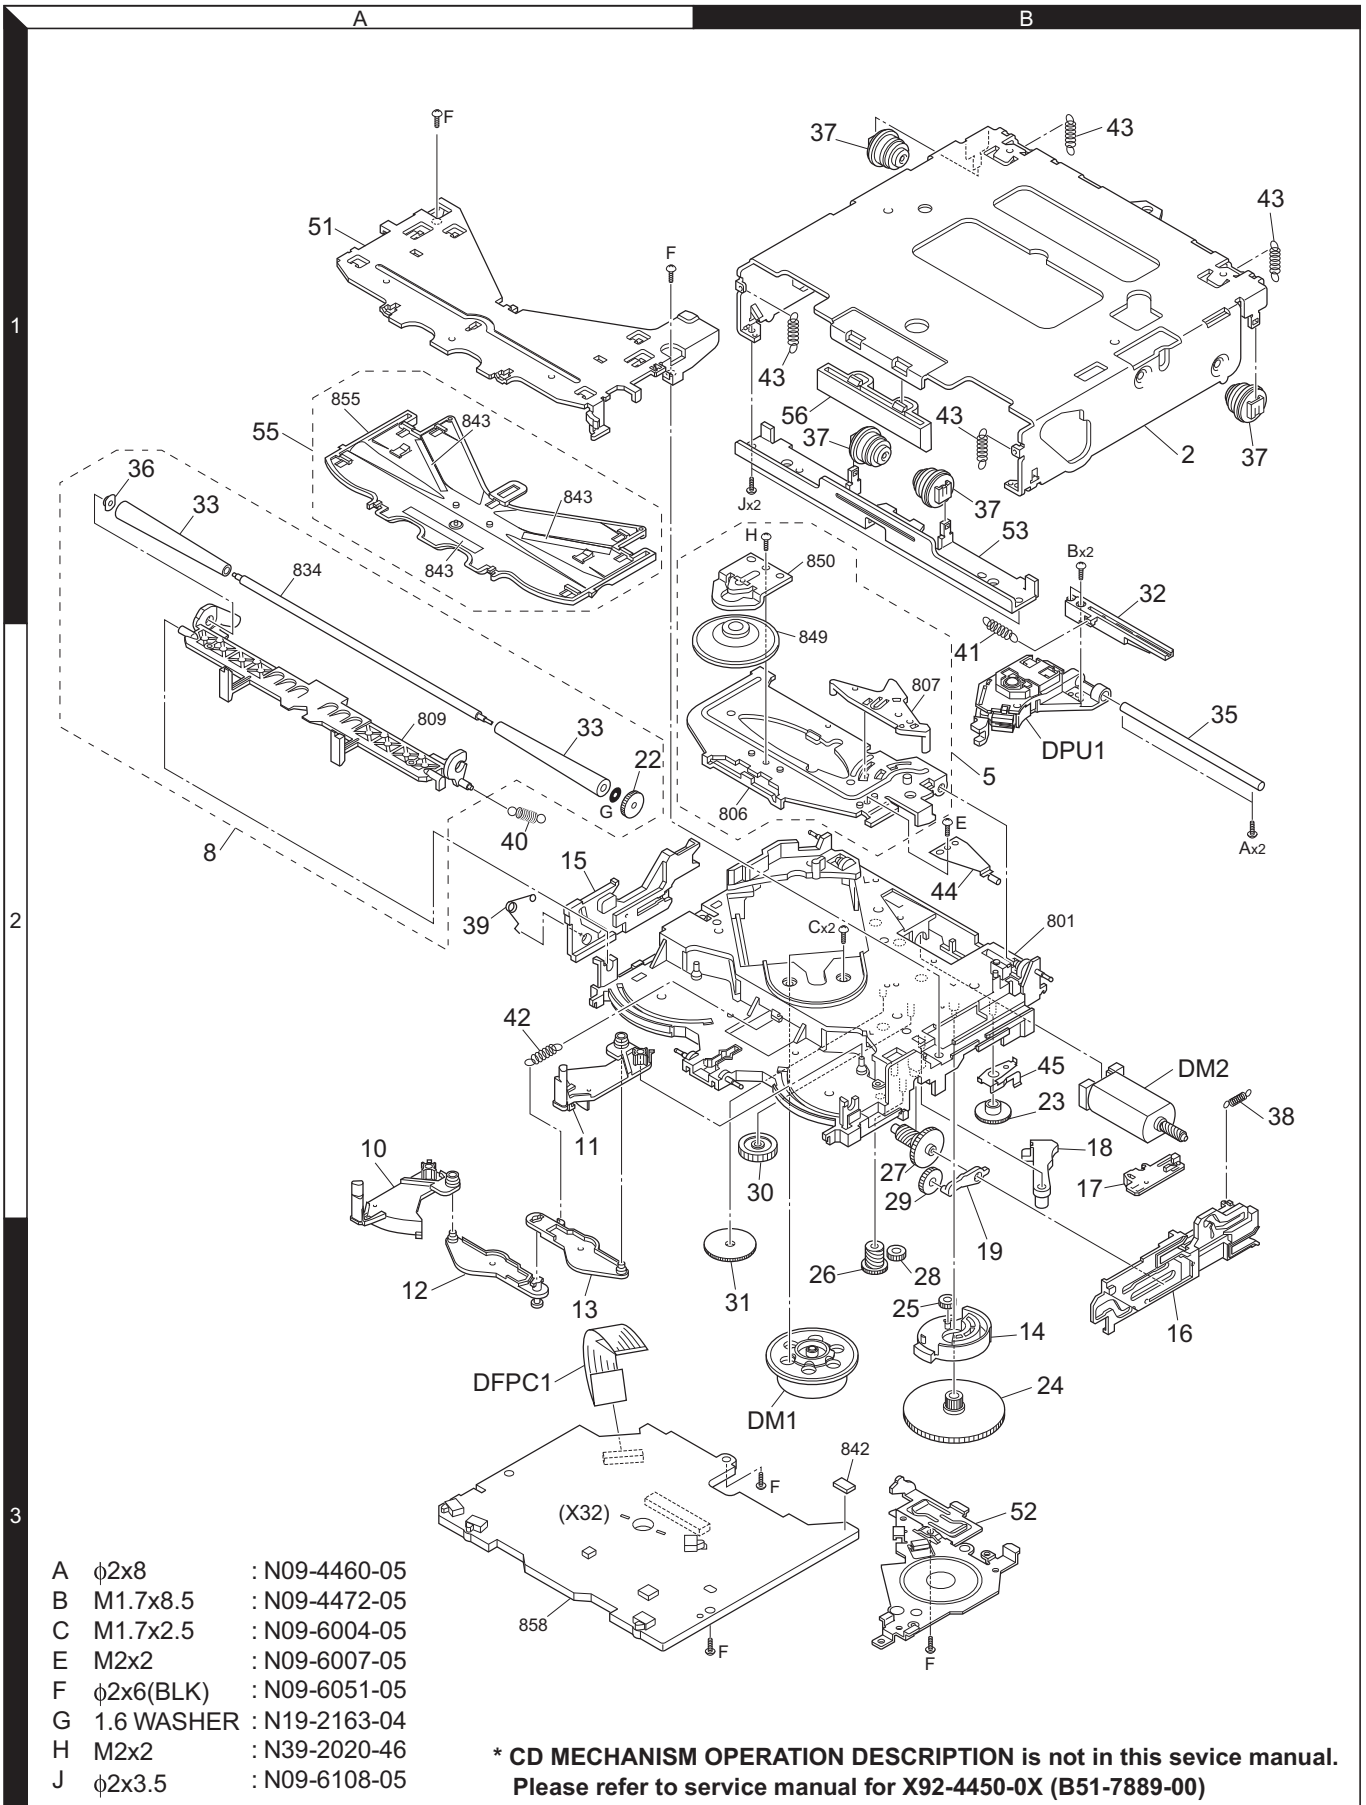

EXPLODED VIEW (UNIT)

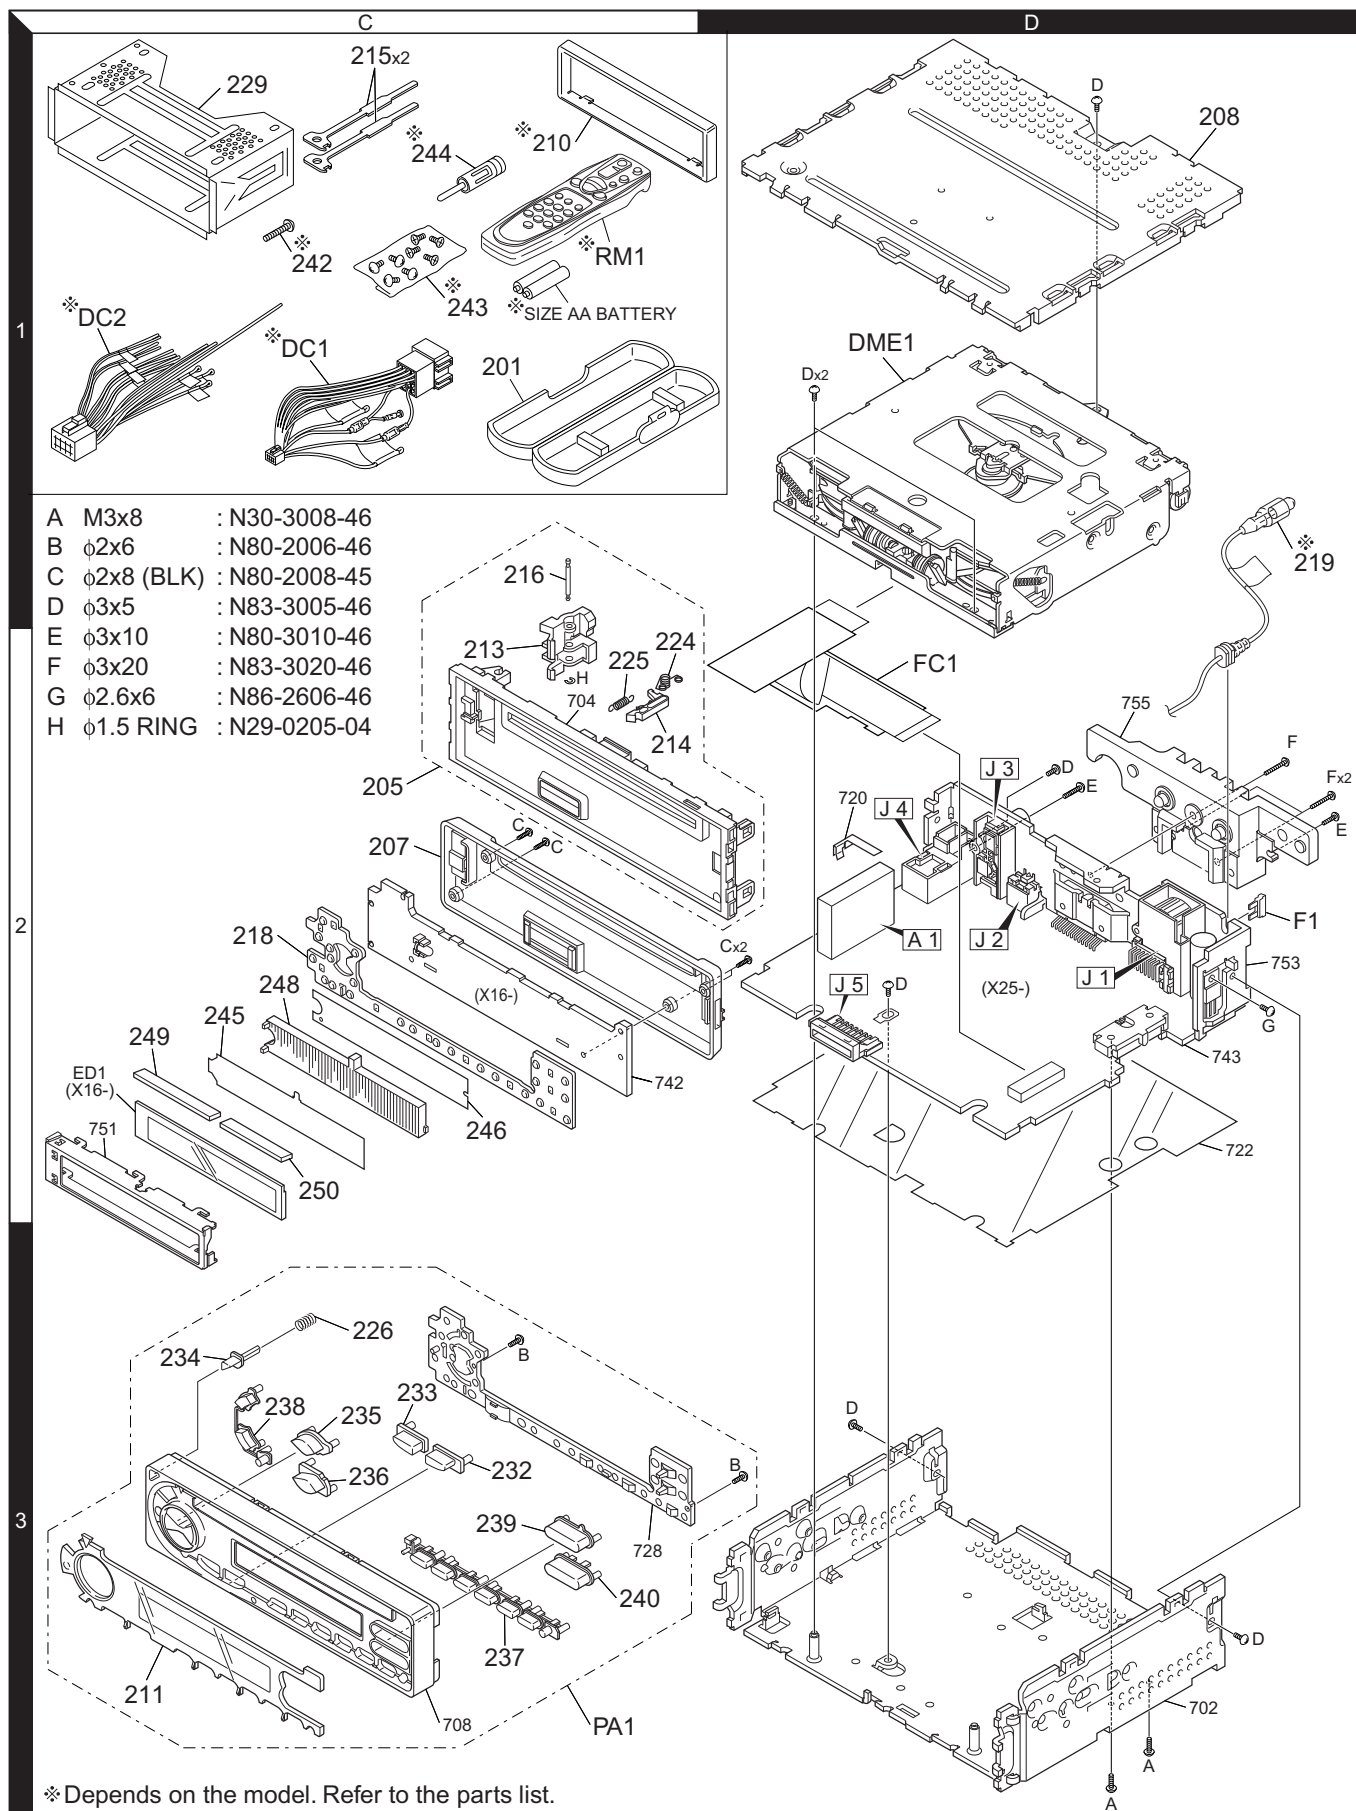

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
KDC-MP225, MP4026/G, W4527/G/GY/Y, W427Y					
201	1C		A02-1486-13	PLASTIC CABINET ASSY	
205	2C		A22-2863-03	SUB PANEL ASSY	
207	2C		A46-1796-01	REAR COVER	
208	1D		A52-0804-02	TOP PLATE	
PA1	3C	*	A64-3170-02	PANEL ASSY	K
PA1	3C	*	A64-3172-02	PANEL ASSY	EE3
PA1	3C	*	A64-3173-02	PANEL ASSY	E1E4
PA1	3C	*	A64-3174-02	PANEL ASSY	M
PA1	3C	*	A64-3175-02	PANEL ASSY	M1
PA1	3C	*	A64-3336-02	PANEL ASSY	E2
RM1	1C		A70-2040-05	REMOTE CONTROLLER ASSY (RC-505)	KMM1
-			B46-0100-50	WARRANTY CARD	E3E4KM
-			B46-0100-50	WARRANTY CARD	M1
-			B46-0182-14	ID CARD	E3E4
-			B46-0606-04	ID CARD	EE1E2K
-			B46-0606-04	ID CARD	MM1
-			B46-0653-03	USER CARD	K
-			B58-1365-04	CAUTION CARD	
-		*	B64-2681-00	INST. MANUAL (ENG,FRE,SPA)	K
-		*	B64-2682-00	INST. MANUAL (ENG,RUS,POL)	EE1E2
-		*	B64-2683-00	INST. MANUAL (CZE,HUN,SLO)	EE1E2
-		*	B64-2684-00	INST. MANUAL (CRO,SWE,FIN)	EE1E2
-		*	B64-2685-00	INST. MANUAL (ENG,T-CHI)	MM1
-		*	B64-2686-00	INST. MANUAL (ARABIC)	MM1
-		*	B64-2691-00	INST. MANUAL (ENGLISH)	E3E4
-		*	B64-2692-00	INST. MANUAL (FRE,GER,DUT)	E3E4
-		*	B64-2693-00	INST. MANUAL (ITA,SPA,POR)	E3E4
210	1C		B07-3001-02	ESCUTCHEON	EE1E2
210	1C		B07-3001-02	ESCUTCHEON	E3E4M1
210	1C		B07-3098-02	ESCUTCHEON	KM
211	3C	*	B10-4464-01	FRONT GLASS	K
211	3C	*	B10-4466-01	FRONT GLASS	EE3
211	3C	*	B10-4467-01	FRONT GLASS	E1E4
211	3C	*	B10-4468-01	FRONT GLASS	M
211	3C	*	B10-4469-01	FRONT GLASS	M1
211	3C	*	B10-4555-01	FRONT GLASS	E2
213	1C		D10-4446-03	LEVER	
214	1C		D10-4447-03	LEVER	
215	1C		D10-4589-04	LEVER	
216	1C		D21-2329-04	SHAFT	
218	1C		E29-1964-02	CONDUCTIVE RUBBER	
219	2D		E30-6224-15	CORD WITH CONNECTOR	EE1E3
219	2D		E30-6224-15	CORD WITH CONNECTOR	E4
△ DC1	1C		E30-6132-15	DC CORD	EE1E2
△ DC1	1C		E30-6132-15	DC CORD	E3E4
△ DC1	1C		E30-6286-05	DC CORD	EE1E2
△ DC1	1C		E30-6286-05	DC CORD	E3E4
DC2	1C		E30-6322-05	DC CORD	KMM1
DC2	1C		E30-6323-05	DC CORD	KMM1
FC1	2D	*	E39-0622-05	FLAT CABLE (24PIN)	
△ F1	2D		F52-0006-05	FUSE (MINI BLADE TYPE 10A)	
△ F1	2D		F52-0023-05	FUSE (MINI BLADE TYPE 10A)	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
224	1C		G01-2987-04	TORSION COIL SPRING	
225	1C		G01-3096-04	EXTENSION SPRING	
226	3C		G01-3149-04	COMPRESSION SPRING	
-			H10-4856-12	POLYSTYRENE FOAMED FIXTURE	EE1E2K
-			H10-4856-12	POLYSTYRENE FOAMED FIXTURE	MM1
-			H10-4857-12	POLYSTYRENE FOAMED FIXTURE	E3E4
-			H25-0329-04	PROTECTION BAG (280X450X0.03)	EE1E2K
-			H25-0329-04	PROTECTION BAG (280X450X0.03)	MM1
-			H25-0337-04	PROTECTION BAG (180X300X0.03)	
-			H25-1111-04	PROTECTION BAG (280X450X0.03)	E3E4
-		*	H54-2993-03	ITEM CARTON CASE	K
-		*	H54-2996-03	ITEM CARTON CASE	E
-		*	H54-2998-03	ITEM CARTON CASE	E1
-		*	H54-2999-03	ITEM CARTON CASE	M
-		*	H54-3000-03	ITEM CARTON CASE	M1
-		*	H54-3068-03	ITEM CARTON CASE	E3
-		*	H54-3069-03	ITEM CARTON CASE	E4
-		*	H54-3141-03	ITEM CARTON CASE	E2
229	1C		J21-9716-03	MOUNTING HARDWARE ASSY	
232	3C		K24-4098-04	KNOB (SRC)	
233	3C		K24-4099-04	KNOB (Q-AUDIO)	
234	3C		K24-4101-04	KNOB (RELEASE)	
235	3C		K24-4096-04	KNOB (VOL. UP)	KMM1
235	3C		K24-4124-04	KNOB (VOL. UP)	EE1E2
235	3C		K24-4124-04	KNOB (VOL. UP)	E3E4
236	3C		K24-4097-04	KNOB (VOL. DOWN)	KMM1
236	3C		K24-4125-04	KNOB (VOL. DOWN)	EE1E2
236	3C		K24-4125-04	KNOB (VOL. DOWN)	E3E4
237	3C		K25-1589-03	KNOB (PRESET1-6)	
238	3C		K25-1590-03	KNOB (EJECT/ATT)	
239	3C		K25-1613-03	KNOB (FM/AM)	
240	3C		K25-1614-03	KNOB (SEEK)	
242	1C		N84-4016-46	PAN HEAD TAPTITE SCREW	KMM1
243	1C		N99-1719-05	SCREW SET	KMM1
A	3D		N30-3008-46	PAN HEAD MACHINE SCREW	
B	3C		N80-2006-46	PAN HEAD TAPTITE SCREW	
C	2C		N80-2008-45	PAN HEAD TAPTITE SCREW	
D	1D		N83-3005-46	PAN HEAD TAPTITE SCREW	
H	2C		N29-0205-04	RETAINING RING	
244	1C		T90-0523-05	ANTENNA ADAPTOR	EE1E2
244	1C		T90-0523-05	ANTENNA ADAPTOR	E3E4
DME1	1D	*	X92-4850-00	MECHANISM ASSY (DXM-6540W)	EE1E2K
DME1	1D	*	X92-4850-00	MECHANISM ASSY (DXM-6540W)	MM1
DME1	1D	*	X92-4850-01	MECHANISM ASSY (DXM-6541W)	E3E4
SWITCH UNIT (X16-2640-xx, 2642-xx, 2652-xx)					
245	2C		B11-1435-04	OPTICAL DIFFUSER	E1E4M
245	2C		B11-1435-04	OPTICAL DIFFUSER	M1
245	2C		B11-1436-04	OPTICAL DIFFUSER	EE2E3K
246	2C		B11-1437-04	REFLECTION SHEET	E1E4M
246	2C		B11-1437-04	REFLECTION SHEET	M1
246	2C	*	B11-1442-04	REFLECTION SHEET	EE2E3K
248	2C		B19-2242-03	LIGHTING BOARD	

K : KDC-MP225 **M** : KDC-MP4026 **M1** : KDC-MP4026G **E** : KDC-W4527Y
E1 : KDC-W4527GY **E2** : KDC-W427Y **E3** : KDC-W4527 **E4** : KDC-W4527G

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

SWITCH UNIT (X16-2640-xx, 2642-xx, 2652-xx)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
D1			B30-1633-05	LED (WHITE)	
D2			B30-1566-05	LED (1608,RED)	
D3,4			B30-1564-05	LED (1608,BLUE)	KMM1
D4			B30-1564-05	LED (1608,BLUE)	EE1E2
D4			B30-1564-05	LED (1608,BLUE)	E3E4
D7,8			B30-1566-05	LED (1608,RED)	EE1E2
D7,8			B30-1566-05	LED (1608,RED)	E3E4
D9,10			B30-1565-05	LED (1608,PG)	EE1E2
D9,10			B30-1565-05	LED (1608,PG)	E3E4
D11-19			B30-1566-05	LED (1608,RED)	EE1E2
D11-19			B30-1566-05	LED (1608,RED)	E3E4
D21-29			B30-1565-05	LED (1608,PG)	EE1E2
D21-29			B30-1565-05	LED (1608,PG)	E3E4M
D21-29			B30-1565-05	LED (1608,PG)	M1
D21-29			B30-1566-05	LED (1608,RED)	K
ED1	2C	*	B38-1136-05	LIQUID CRYSTAL	MM1
ED1	2C		B38-1137-05	LIQUID CRYSTAL	E2
ED1	2C		B38-1144-05	LIQUID CRYSTAL	E1E4
ED1	2C		B38-1145-05	LIQUID CRYSTAL	EE3K
C1			CK73GB1H102K	CHIP C 1000PF K	
C2			CK73GB1H103K	CHIP C 0.010UF K	
C3,4			CK73GB1E473K	CHIP C 0.047UF K	
C5			CK73FB1A225K	CHIP C 2.2UF K	EE1E3
C5			CK73FB1A225K	CHIP C 2.2UF K	E4KMM1
C11			CK73GB1H103K	CHIP C 0.010UF K	EE1E2
C11			CK73GB1H103K	CHIP C 0.010UF K	E3E4
C11-13			CK73GB1H103K	CHIP C 0.010UF K	KMM1
C13			CK73GB1H103K	CHIP C 0.010UF K	EE1E2
C13			CK73GB1H103K	CHIP C 0.010UF K	E3E4
249	2C		E29-1965-04	CONDUCTIVE RUBBER	E1E2E4
249	2C		E29-1965-04	CONDUCTIVE RUBBER	MM1
249	2C		E29-1993-04	CONDUCTIVE RUBBER	EE3K
250	2C		E29-1966-04	CONDUCTIVE RUBBER	E1E2E4
250	2C		E29-1966-04	CONDUCTIVE RUBBER	MM1
250	2C		E29-1994-04	CONDUCTIVE RUBBER	EE3K
J1			E59-0828-05	RECTANGULAR PLUG	
R1			RK73GB2A563J	CHIP R 56K J 1/10W	
R2			RK73GB2A4R7J	CHIP R 4.7 J 1/10W	
R3			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R4			RK73GB2A473J	CHIP R 47K J 1/10W	
R5			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R6-8			RK73GB2A471J	CHIP R 470 J 1/10W	
R9			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R10			RK73GB2A470J	CHIP R 47 J 1/10W	EE1E3
R10			RK73GB2A470J	CHIP R 47 J 1/10W	E4KMM1
R11			RK73GB2A102J	CHIP R 1.0K J 1/10W	EE1E3
R11			RK73GB2A102J	CHIP R 1.0K J 1/10W	E4KMM1
R12,13			RK73GB2A222J	CHIP R 2.2K J 1/10W	EE1E2
R12,13			RK73GB2A222J	CHIP R 2.2K J 1/10W	E3E4
R21,22			RK73FB2B221J	CHIP R 220 J 1/8W	
R23			RK73FB2B431J	CHIP R 430 J 1/8W	
R24,25			RK73FB2B271J	CHIP R 270 J 1/8W	
R29			RK73GB2A221J	CHIP R 220 J 1/10W	EE1E2
R29			RK73GB2A221J	CHIP R 220 J 1/10W	E3E4

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
R31-33			RK73FB2B331J	CHIP R 330 J 1/8W	EE1E2
R31-33			RK73FB2B331J	CHIP R 330 J 1/8W	E3E4M
R31-33			RK73FB2B331J	CHIP R 330 J 1/8W	M1
R31-33			RK73FB2B391J	CHIP R 390 J 1/8W	K
R41,42			RK73FB2B271J	CHIP R 270 J 1/8W	EE1E2
R41,42			RK73FB2B271J	CHIP R 270 J 1/8W	E3E4
W1			R92-1252-05	CHIP R 0 OHM J 1/16W	EE1E2
W1			R92-1252-05	CHIP R 0 OHM J 1/16W	E3E4
W1,2			R92-1252-05	CHIP R 0 OHM J 1/16W	KMM1
D31-35			UDZS5.6B	ZENER DIODE	
IC1			LC75883E-E	MOS-IC	
IC2			RS-171	ANALOGUE IC	EE1E3
IC2			RS-171	ANALOGUE IC	E4KMM1
Q1			DTA114EE	DIGITAL TRANSISTOR	
Q2,3			2SC4617	TRANSISTOR	EE1E2
Q2,3			2SC4617	TRANSISTOR	E3E4

ELECTRIC UNIT (X25-9980-xx, 9982-xx, X34-3172-70)

C1		*	C90-5682-05	ELECTRO 2200UF 16WV	EE1E2K
C1		*	C90-5682-05	ELECTRO 2200UF 16WV	MM1
C1			C94-0213-05	ELECTRO 2200UF 16WV	E3E4
C3			CK73GB1H102K	CHIP C 1000PF K	
C4-6			CK73GB1H103K	CHIP C 0.010UF K	
C19			CK73GB1A474K	CHIP C 0.47UF K	
C21			CD04AS1C470M	ELECTRO 47UF 16WV	
C22			CD04AS1E100M	ELECTRO 10UF 25WV	EE1E2
C22			CD04AS1E100M	ELECTRO 10UF 25WV	E3E4K
C22,23			CD04AS1E100M	ELECTRO 10UF 25WV	MM1
C24,25			CD04AS1C100M	ELECTRO 10UF 16WV	
C26			CD04AS1E100M	ELECTRO 10UF 25WV	
C27			CD04AT1H100M	ELECTRO 10UF 50WV	
C28			C90-5635-05	ELECTRO 220UF 16WV	
C29			CD04AS1C100M	ELECTRO 10UF 16WV	
C30		*	CD04AS1C101M	ELECTRO 100UF 16WV	
C31,32			CK73GB1H103K	CHIP C 0.010UF K	EE1E2
C31,32			CK73GB1H103K	CHIP C 0.010UF K	E3E4M
C31,32			CK73GB1H103K	CHIP C 0.010UF K	M1
C32			CK73GB1H103K	CHIP C 0.010UF K	K
C41,42			CD04BF1E101M	ELECTRO 100UF 25WV	
C43			CD04BF1C221M	ELECTRO 220UF 16WV	
C45			CK73GB1A224K	CHIP C 0.22UF K	
C104-106			CK73GB1H103K	CHIP C 0.010UF K	
C108			CK73GB1H103K	CHIP C 0.010UF K	
C111			CK73GB1H102K	CHIP C 1000PF K	
C112,113			CC73GCH1H100D	CHIP C 10PF D	EE1E3
C112,113			CC73GCH1H100D	CHIP C 10PF D	E4
C114			CK73GB1H103K	CHIP C 0.010UF K	EE1E3
C114			CK73GB1H103K	CHIP C 0.010UF K	E4
C115			CD04AS1C100M	ELECTRO 10UF 16WV	EE1E3
C115			CD04AS1C100M	ELECTRO 10UF 16WV	E4
C116			CC73GCH1H331J	CHIP C 330PF J	EE1E3
C116			CC73GCH1H331J	CHIP C 330PF J	E4
C117			CD04AS1H2R2M	ELECTRO 2.2UF 50WV	EE1E3
C117			CD04AS1H2R2M	ELECTRO 2.2UF 50WV	E4
C201,202			CD04AS1HR47M	ELECTRO 0.47UF 50WV	

K : KDC-MP225 M : KDC-MP4026 M1 : KDC-MP4026G E : KDC-W4527Y
E1 : KDC-W4527GY E2 : KDC-W427Y E3 : KDC-W4527 E4 : KDC-W4527G

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

ELECTRIC UNIT (X25-9980-xx, 9982-xx, X34-3172-70)

Ref. No.	Add	New	Parts No.	Description	Destination	Ref. No.	Add	New	Parts No.	Description	Destination
C203			CK73GB1E223K	CHIP C 0.022UF K		R1			RK73FB2B683J	CHIP R 68K J 1/8W	
C203			CK73GB1H223K	CHIP C 0.022UF K		R2			RK73GB2A393J	CHIP R 39K J 1/10W	
C204			CK73GB1H103K	CHIP C 0.010UF K		R3			RK73GB2A104J	CHIP R 100K J 1/10W	
C205			CK73GB1A474K	CHIP C 0.47UF K		R4			RK73FB2B203J	CHIP R 20K J 1/8W	
C206			CC73GCH1H151J	CHIP C 150PF J		R5,6			RK73GB2A103J	CHIP R 10K J 1/10W	
C209			CD04AS1H2R2M	ELECTRO 2.2UF 50WV		R7			RK73GB2A104J	CHIP R 100K J 1/10W	
C210			CK73GB1H103K	CHIP C 0.010UF K		R8			RD14DB2H332J	SMALL-RD 3.3K J 1/2W	
C211			CD04AS1A470M	ELECTRO 47UF 10WV		R9			RD14BB2C333J	RD 33K J 1/6W	
C212,213			CK73GB1C104K	CHIP C 0.10UF K		R10			RK73GB2A103J	CHIP R 10K J 1/10W	
C212,213			CK73GB1H104K	CHIP C 0.10UF K		R11			RK73GB2A223J	CHIP R 22K J 1/10W	
C251-254		*	CD04AX1HR22M	ELECTRO 0.22UF 50WV		R12			RK73GB2A473J	CHIP R 47K J 1/10W	
C251-254		*	C90-5684-05	ELECTRO 0.22UF 50WV		R13			RK73GB2A562J	CHIP R 5.6K J 1/10W	
C255			CD04AS1H010M	ELECTRO 1UF 50WV		R21			RD14BB2C152J	RD 1.5K J 1/6W	
C256			CD04AS1A330M	ELECTRO 33UF 10WV		R22			RD14BB2C472J	RD 4.7K J 1/6W	K
C257			CD04AT1H010M	ELECTRO 1UF 50WV		R22,23			RD14BB2C472J	RD 4.7K J 1/6W	EE1E2
C258			CD04AS1H010M	ELECTRO 1UF 50WV		R22,23			RD14BB2C472J	RD 4.7K J 1/6W	E3E4M
C301,302			CK73FB1C474K	CHIP C 0.47UF K	EE1E3	R22,23			RD14BB2C472J	RD 4.7K J 1/6W	M1
C301,302			CK73FB1C474K	CHIP C 0.47UF K	E4KMM1	R24-28			RK73GB2A102J	CHIP R 1.0K J 1/10W	MM1
C303			CD04AS1A470M	ELECTRO 47UF 10WV	EE1E3	R25-28			RK73GB2A102J	CHIP R 1.0K J 1/10W	EE1E2
C303			CD04AS1A470M	ELECTRO 47UF 10WV	E4KMM1	R25-28			RK73GB2A102J	CHIP R 1.0K J 1/10W	E3E4K
C351,352			CD04AS1C100M	ELECTRO 10UF 16WV		R31			RD14BB2C103J	RD 10K J 1/6W	EE1E2
C356			CK73FB1H104K	CHIP C 0.10UF K		R31			RD14BB2C103J	RD 10K J 1/6W	E3E4M
C406			CK73GB1A224K	CHIP C 0.22UF K		R31			RD14BB2C103J	RD 10K J 1/6W	M1
C407,408			CC73GCH1H220J	CHIP C 22PF J		R32			RK73GB2A223J	CHIP R 22K J 1/10W	
C409			CD04AS0J470M	ELECTRO 47UF 6.3WV		R33			RK73GB2A473J	CHIP R 47K J 1/10W	
C410			CK73GB1H103K	CHIP C 0.010UF K		R41-44			RK73GB2A473J	CHIP R 47K J 1/10W	
CN2			E41-0168-05	FLAT CABLE CONNECTOR		R51,52			RK73GB2A222J	CHIP R 2.2K J 1/10W	
CN3		*	E41-0927-05	PIN ASSY	K	R53-56			RK73GB2A102J	CHIP R 1.0K J 1/10W	
CN4		*	E41-0941-05	PIN ASSY	EE1E3	R58			RK73GB2A222J	CHIP R 2.2K J 1/10W	
CN4		*	E41-0941-05	PIN ASSY	E4	R59			RK73GB2A101J	CHIP R 100 J 1/10W	
△ J1			E58-0863-15	RECTANGULAR RECEPTACLE		R60			RK73GB2A222J	CHIP R 2.2K J 1/10W	
J2			E56-0855-05	CYLINDRICAL RECEPTACLE	EE1E3	R61,62			RK73GB2A104J	CHIP R 100K J 1/10W	
J2			E56-0855-05	CYLINDRICAL RECEPTACLE	E4KMM1	R63			RD14BB2C222J	RD 2.2K J 1/6W	
J3		*	E63-0898-05	PIN JACK		R65			RK73EB2E472J	CHIP R 4.7K J 1/4W	
J4		*	E04-0326-05	RF COAXIAL CABLE RECEPTACLE		R66			RK73GB2A472J	CHIP R 4.7K J 1/10W	
J5			E58-0879-05	RECTANGULAR RECEPTACLE		R101			RK73GB2A102J	CHIP R 1.0K J 1/10W	
P1			E23-0745-05	TERMINAL		R102			RK73GB2A471J	CHIP R 470 J 1/10W	
L1			L33-1988-05	CHOKE COIL ASSY		R103			RK73GB2A472J	CHIP R 4.7K J 1/10W	
L3			L33-1977-05	CHOKE COIL		R104			RK73GB2A471J	CHIP R 470 J 1/10W	
L6-11			L40-4795-91	SMALL FIXED INDUCTOR (4.7UH,J)	EE1E3	R105			RK73GB2A472J	CHIP R 4.7K J 1/10W	
L6-11			L40-4795-91	SMALL FIXED INDUCTOR (4.7UH,J)	E4	R106			RK73GB2A222J	CHIP R 2.2K J 1/10W	EE1E3
L6-8			L40-4795-91	SMALL FIXED INDUCTOR (4.7UH,J)	E2KMM1	R111			RK73GB2A472J	CHIP R 4.7K J 1/10W	E4
L10,11			L40-4795-91	SMALL FIXED INDUCTOR (4.7UH,J)	E2KMM1	R111			RK73GB2A222J	CHIP R 2.2K J 1/10W	EE1E3
L12			L33-1925-05	CHOKE COIL		R112-114			RK73GB2A222J	CHIP R 2.2K J 1/10W	E4
X1			L78-0879-05	RESONATOR (10.0MHZ)		R152-154			RK73GB2A471J	CHIP R 470 J 1/10W	
X2			L77-2793-05	CRYSTAL RESONATOR (32.768KHZ)		R160			RK73GB2A222J	CHIP R 2.2K J 1/10W	
X3			L77-2002-05	CRYSTAL RESONATOR (4.332MHZ)	EE1E3	R161			RK73GB2A225J	CHIP R 2.2M J 1/10W	
X3			L77-2002-05	CRYSTAL RESONATOR (4.332MHZ)	E4	R162			RK73GB2A104J	CHIP R 100K J 1/10W	
D	2D		N83-3005-46	PAN HEAD TAPTITE SCREW		R171			RD14BB2C102J	RD 1.0K J 1/6W	
E	2D		N80-3010-46	PAN HEAD TAPTITE SCREW		R172			RD14BB2C470J	RD 47 J 1/6W	EE1E3
F	2D		N83-3020-46	PAN HEAD TAPTITE SCREW		R172			RD14BB2C470J	RD 47 J 1/6W	E4KMM1
G	2D		N86-2606-46	BINDING HEAD TAPTITE SCREW		R173			RD14BB2C471J	RD 470 J 1/6W	
						R174			RD14BB2C101J	RD 100 J 1/6W	
						R175			RD14BB2C471J	RD 470 J 1/6W	

K : KDC-MP225 M : KDC-MP4026 M1: KDC-MP4026G E : KDC-W4527Y
E1 : KDC-W4527GY E2 : KDC-W427Y E3 : KDC-W4527 E4 : KDC-W4527G

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

ELECTRIC UNIT (X25-9980-xx, 9982-xx, X34-3172-70)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
R176 R180 R181 R182 R182,183			RD14BB2C102J RD14BB2C102J RD14BB2C100J RD14BB2C102J RD14BB2C102J	RD 1.0K J 1/6W RD 1.0K J 1/6W RD 10 J 1/6W RD 1.0K J 1/6W RD 1.0K J 1/6W	E2 EE1E3
R182,183 R201 R202-204 R205 R206			RD14BB2C102J RK73GB2A103J RK73GB2A472J RK73GB2A222J RD14BB2C102J	RD 1.0K J 1/6W CHIP R 10K J 1/10W CHIP R 4.7K J 1/10W CHIP R 2.2K J 1/10W RD 1.0K J 1/6W	E4KMM1 EE1E3
R206 R207,208 R209,210 R251 R252			RD14BB2C102J RK73GB2A471J RK73GB2A472J RK73GB2A333J RK73GB2A473J	RD 1.0K J 1/6W CHIP R 470 J 1/10W CHIP R 4.7K J 1/10W CHIP R 33K J 1/10W CHIP R 47K J 1/10W	E4
R253 R254 R255 R256 R257			RK73GB2A432J RK73GB2A100J RK73GB2A221J RK73GB2A223J RK73GB2A432J	CHIP R 4.3K J 1/10W CHIP R 10 J 1/10W CHIP R 220 J 1/10W CHIP R 22K J 1/10W CHIP R 4.3K J 1/10W	
R271 R272 R273 R301,302 R301,302			RK73GB2A101J RK73GB2A103J RK73GB2A474J RD14BB2C100J RD14BB2C100J	CHIP R 100 J 1/10W CHIP R 10K J 1/10W CHIP R 470K J 1/10W RD 10 J 1/6W RD 10 J 1/6W	EE1E3 E4KMM1
R303 R303 R304,305 R304,305 R306			RD14BB2C101J RD14BB2C101J RD14BB2C472J RD14BB2C472J RD14BB2C4R7J	RD 100 J 1/6W RD 100 J 1/6W RD 4.7K J 1/6W RD 4.7K J 1/6W RD 4.7 J 1/6W	EE1E3 E4KMM1 EE1E3 E4KMM1 EE1E3
R306 R307-309 R307-309 R310,311 R310,311		*	RD14BB2C4R7J RD14BB2C472J RD14BB2C472J RD14BB2C101J RD14BB2C101J	RD 4.7 J 1/6W RD 4.7K J 1/6W RD 4.7K J 1/6W RD 100 J 1/6W RD 100 J 1/6W	E4KMM1 EE1E3 E4KMM1 EE1E3 E4KMM1
R312-315 R351,352 R355,356 R357,358 R374			RK73GB2A104J RK73GB2A271J RK73GB2A303J RD14BB2C101J RD14BB2C102J	CHIP R 100K J 1/10W CHIP R 270 J 1/10W CHIP R 30K J 1/10W RD 100 J 1/6W RD 1.0K J 1/6W	EE1E3
R374 R407 R410 R411 R412			RD14BB2C102J RK73GB2A241J RK73GB2A473J RK73GB2A223J RK73GB2A223J	RD 1.0K J 1/6W CHIP R 240 J 1/10W CHIP R 47K J 1/10W CHIP R 22K J 1/10W CHIP R 22K J 1/10W	E4K MM1 EE1E2
R412 R415 R415,416 R415,416 R417			RK73GB2A223J RK73GB2A223J RK73GB2A223J RK73GB2A223J RK73GB2A223J	CHIP R 22K J 1/10W CHIP R 22K J 1/10W CHIP R 22K J 1/10W CHIP R 22K J 1/10W CHIP R 22K J 1/10W	E3E4K E2KMM1 EE1E3 E4 E2KMM1
R419 R420 R421 R422 R422			RK73GB2A223J RK73GB2A103J RK73GB2A223J RK73GB2A223J RK73GB2A223J	CHIP R 22K J 1/10W CHIP R 10K J 1/10W CHIP R 22K J 1/10W CHIP R 22K J 1/10W CHIP R 22K J 1/10W	E2 EE1E3 E4KMM1

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
R425 R430,431 R432 W1-3 W1-3			RK73GB2A102J RK73GB2A473J RK73GB2A4R7J R92-2053-05 R92-2053-05	CHIP R 1.0K J 1/10W CHIP R 47K J 1/10W CHIP R 4.7 J 1/10W CHIP R 0 J 1/8W CHIP R 0 J 1/8W	EE1E3 E4
W9-12 W13,14 W15 W15-20 W15-20			R92-2053-05 R92-1252-05 R92-2053-05 R92-2053-05 R92-2053-05	CHIP R 0 J 1/8W CHIP R 0 OHM J 1/16W CHIP R 0 J 1/8W CHIP R 0 J 1/8W CHIP R 0 J 1/8W	E2 EE1E3 E4KMM1
W18-20 W22 W22-24 W22-24 W24			R92-2053-05 R92-1252-05 R92-1252-05 R92-1252-05 R92-1252-05	CHIP R 0 J 1/8W CHIP R 0 OHM J 1/16W CHIP R 0 OHM J 1/16W CHIP R 0 OHM J 1/16W CHIP R 0 OHM J 1/16W	E2 E2KMM1 EE1E3 E4 E2KMM1
W25 W27 W28,29 W30 W31-33			R92-2053-05 R92-1252-05 R92-2053-05 R92-1252-05 R92-2053-05	CHIP R 0 J 1/8W CHIP R 0 OHM J 1/16W CHIP R 0 J 1/8W CHIP R 0 OHM J 1/16W CHIP R 0 J 1/8W	MM1
W32,33 W32,33 W34,35 W34,35 W35			R92-2053-05 R92-2053-05 R92-1252-05 R92-1252-05 R92-1252-05	CHIP R 0 J 1/8W CHIP R 0 J 1/8W CHIP R 0 OHM J 1/16W CHIP R 0 OHM J 1/16W CHIP R 0 OHM J 1/16W	EE1E2 E3E4K EE1E2 E3E4 KMM1
W37 W38 W40,41			R92-1252-05 R92-2053-05 R92-2053-05	CHIP R 0 OHM J 1/16W CHIP R 0 J 1/8W CHIP R 0 J 1/8W	
D1 D2-4 D5 D21 D22		*	S2V60*A MAZ4068N-M 1SS133 MAZ4082N-L D1F60-5063	DIODE ZENER DIODE DIODE ZENER DIODE DIODE	
D23,24 D23,24 D23,24 D24 D25		*	AM01ZNF AM01ZNF AM01ZNF AM01ZNF D1F60-5063	DIODE DIODE DIODE DIODE DIODE	EE1E2 E3E4M M1 K EE1E2
D25 D25 D26 D31 D31		*	D1F60-5063 D1F60-5063 DAN202U MAZ4047-M MAZ4047-M	DIODE DIODE DIODE ZENER DIODE ZENER DIODE	E3E4M M1 EE1E2 E3E4M
D31 D41 D151 D151 D156		*	MAZ4047-M SFPB-54VNF MAZ4062-L MAZ4062-L MAZ4120-L	ZENER DIODE DIODE ZENER DIODE ZENER DIODE ZENER DIODE	M1 EE1E3 E4KMM1
D157-159 D157-159 D157,158 D162 D203		*	MAZ4062-L MAZ4062-L MAZ4062-L MAZ4062-L DAN202U	ZENER DIODE ZENER DIODE ZENER DIODE ZENER DIODE DIODE	EE1E3 E4KMM1 E2
D251		*	D1F60-5063	DIODE	

K : KDC-MP225 M : KDC-MP4026 M1: KDC-MP4026G E : KDC-W4527Y
E1 : KDC-W4527GY E2 : KDC-W427Y E3 : KDC-W4527 E4 : KDC-W4527G

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.Teile ohne **Parts No.** werden nicht geliefert.

ELECTRIC UNIT (X25-9980-xx, 9982-xx, X34-3172-70)

Ref. No.	Add	New	Parts No.	Description	Destination	Ref. No.	Add	New	Parts No.	Description	Destination
D252			AM01ZNF	DIODE		C20			CK73GB1C104K	CHIP C 0.10UF K	
D253		*	D1F60-5063	DIODE		C21			CK73GB1H102K	CHIP C 1000PF K	
D254			AM01ZNF	DIODE		C22,23			CK73GB0J105K	CHIP C 1.0UF K	
D255-258		*	D1F60-5063	DIODE		C24-27			CK73GB1C104K	CHIP C 0.10UF K	
D269-271			1SS133	DIODE		C28			CK73FB0J106M	CHIP C 10UF M	
D301		*	MAZ4062-L	ZENER DIODE	EE1E3	C29			CK73GB1C104K	CHIP C 0.10UF K	
D301		*	MAZ4062-L	ZENER DIODE	E4KMM1	C30			CK73GB1H152K	CHIP C 1500PF K	
D307,308		*	MAZ4062-L	ZENER DIODE	EE1E3	C31			CC73GCH1H470J	CHIP C 47PF J	
D307,308		*	MAZ4062-L	ZENER DIODE	E4KMM1	C32,33			CK73GB1C104K	CHIP C 0.10UF K	
D309,310		*	MAZ4068N-M	ZENER DIODE	EE1E3	C34			CC73GCH1H560J	CHIP C 56PF J	
D309,310		*	MAZ4068N-M	ZENER DIODE	E4KMM1	C35,36			CK73GB1C104K	CHIP C 0.10UF K	
D311		*	MAZ4062-L	ZENER DIODE	EE1E3	C37			CK73GB1H102K	CHIP C 1000PF K	
D311		*	MAZ4062-L	ZENER DIODE	E4KMM1	C38			CK73GB1H682K	CHIP C 6800PF K	
D401			DAN202U	DIODE		C39			CK73GB1C104K	CHIP C 0.10UF K	
IC1			784225GC231A	MICROCONTROLLER IC		C41			CK73GB1A334K	CHIP C 0.33UF K	
IC2		*	E-TDA7407D	ANALOGUE IC		C42-45			CK73GB1C104K	CHIP C 0.10UF K	
IC3			BA4911-V4	ANALOGUE IC		C46			CK73GB1H682K	CHIP C 6800PF K	
IC4		*	E-TDA7560	ANALOGUE IC		C47			CK73GB1C104K	CHIP C 0.10UF K	
IC6		*	SN74HC02NSR	MOS-IC		C48			CC73GCH1H040C	CHIP C 4.0PF C	
IC7			E-TDA7479AD	ANALOGUE IC	EE1E3	C49			CK73GB1H332K	CHIP C 3300PF K	
IC7			E-TDA7479AD	ANALOGUE IC	E4	C50			CK73GB1C104K	CHIP C 0.10UF K	
IC8			PST3436UL-E	MOS-IC		C51			CC73GCH1H330J	CHIP C 33PF J	
IC9		*	SI-8050JF3NF	ANALOGUE IC		C52			CK73FB1A225K	CHIP C 2.2UF K	
Q1-3			2SC4081	TRANSISTOR		C53			CK73GB0J105K	CHIP C 1.0UF K	
Q4			2SA1036K	TRANSISTOR		C54,55			CK73GB1H103K	CHIP C 0.010UF K	
Q21			2SB1565(E,F)	TRANSISTOR		C56,57			CK73GB1H331K	CHIP C 330PF K	
Q22			UMC2N	TRANSISTOR	EE1E2	C58			CK73GB1H472K	CHIP C 4700PF K	
Q22			UMC2N	TRANSISTOR	E3E4K	C59-63			CK73GB1H152K	CHIP C 1500PF K	
Q22,23			UMC2N	TRANSISTOR	MM1	C64			CK73GB1C104K	CHIP C 0.10UF K	
Q24			2SD1858	TRANSISTOR		C66			CC73GCH1H120J	CHIP C 12PF J	
Q41			2SC4081	TRANSISTOR		C67			CC73GCH1H180J	CHIP C 18PF J	
Q101			DTC143TUA	DIGITAL TRANSISTOR	EE1E3	C68			CK73GB1H103K	CHIP C 0.010UF K	
Q101			DTC143TUA	DIGITAL TRANSISTOR	E4	C69			CK73FB1A225K	CHIP C 2.2UF K	
Q151			DTA114YUA	DIGITAL TRANSISTOR		C70			CK73FB1A105K	CHIP C 1.0UF K	
Q201			DTC143TUA	DIGITAL TRANSISTOR		C71			CK73FB0J106M	CHIP C 10UF M	
Q252			2SA1576A	TRANSISTOR		C72			CK73GB1H102K	CHIP C 1000PF K	
Q350			DTA124EUA	DIGITAL TRANSISTOR		CN1			E41-2083-05	FLAT CABLE CONNECTOR	
Q351,352			DTC143TUA	DIGITAL TRANSISTOR		CN2			E41-2068-05	FLAT CABLE CONNECTOR	
Q401			2SC4081	TRANSISTOR		CN2			E41-2085-05	FLAT CABLE CONNECTOR	
TH1			PRF21BE471QB2	POSITIVE RESISTOR		L1,2			L92-0386-05	CHIP FERRITE	
A1			X86-3760-11	FRONT-END UNIT	KMM1	X1			L77-2808-05	CRYSTAL RESONATOR (16.897849MHZ)	
A1			X86-3762-70	FRONT-END UNIT	EE1E2	X2			L78-0896-05	RESONATOR (16.00MHZ)	
A1		*	X86-3762-71	FRONT-END UNIT	E3E4						
CD PLAYER UNIT (X32-5500-00)						CP1			RK74GA1J104J	CHIP-COM 100K J 1/16W	
C1,2			CK73GB1H222K	CHIP C 2200PF K		CP2,3			RK74GA1J101J	CHIP-COM 100 J 1/16W	
C3,4			CK73GB0J105K	CHIP C 1.0UF K		CP4			RK74GA1J103J	CHIP-COM 10K J 1/16W	
C5			CK73GB1C104K	CHIP C 0.10UF K		CP5			RK74GA1J102J	CHIP-COM 1.0K J 1/16W	
C6			CK73GB1H103K	CHIP C 0.010UF K		CP6			RK74GA1J104J	CHIP-COM 100K J 1/16W	
C7-9			CK73GB0J105K	CHIP C 1.0UF K		CP7			RK74GB1J102J	CHIP-COM 1.0K J 1/16W	
C10-15			CK73GB1C104K	CHIP C 0.10UF K		CP8			RK74GA1J102J	CHIP-COM 1.0K J 1/16W	
C16			CK73FB0J475K	CHIP C 4.7UF K		CP9			RK74GB1J101J	CHIP-COM 100 J 1/16W	
C17			CK73FB0J106M	CHIP C 10UF M		CP10			RK74GB1J103J	CHIP-COM 10K J 1/16W	
C18			CK73GB1C104K	CHIP C 0.10UF K		CP11			RK74GB1J472J	CHIP-COM 4.7K J 1/16W	
C19			CK73FB0J475K	CHIP C 4.7UF K		CP12			RK74GA1J104J	CHIP-COM 100K J 1/16W	

K : KDC-MP225 M : KDC-MP4026 M1: KDC-MP4026G E : KDC-W4527Y
E1 : KDC-W4527GY E2 : KDC-W427Y E3 : KDC-W4527 E4 : KDC-W4527G

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

CD PLAYER UNIT (X32-5500-00)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
CP13,14 CP15 CP16 R1 R2			RK74GB1J104J RK74GA1J104J RK74GB1J222J RK73GB2A100J R92-3494-05	CHIP-COM 100K J 1/16W CHIP-COM 100K J 1/16W CHIP-COM 2.2K J 1/16W CHIP R 10 J 1/10W CHIP R 5.6 J 1/2W	
R3,4 R5 R6 R7 R8			RK73FB2B331J RK73GB2A101J RN73GH1J223D RK73GB2A104J RN73GH1J393D	CHIP R 330 J 1/8W CHIP R 100 J 1/10W CHIP R 22K D 1/16W CHIP R 100K J 1/10W CHIP R 39K D 1/16W	
R9 R10 R11,12 R13 R14-17			RK73GB2A104J RK73GB2A101J RK73GB2A104J RK73GB2A102J RK73GB2A104J	CHIP R 100K J 1/10W CHIP R 100 J 1/10W CHIP R 100K J 1/10W CHIP R 1.0K J 1/10W CHIP R 100K J 1/10W	
R18 R21-23 R24,25 R27 R28			RK73GB2A101J RK73GB2A103J RK73GB2A4R7J RK73GB2A104J RK73GB2A103J	CHIP R 100 J 1/10W CHIP R 10K J 1/10W CHIP R 4.7 J 1/10W CHIP R 100K J 1/10W CHIP R 10K J 1/10W	
R29 R31-33 R34 R35 R36			RK73GB2A102J RK73GB2A104J RK73GB2A472J RK73GB2A104J RK73FB2B4R7J	CHIP R 1.0K J 1/10W CHIP R 100K J 1/10W CHIP R 4.7K J 1/10W CHIP R 100K J 1/10W CHIP R 4.7 J 1/8W	
R37 R38 R39 R40 R42			RK73GB2A103J RK73GB2A221J RK73GB2A152J RK73GB2A274J RK73GB2A101J	CHIP R 10K J 1/10W CHIP R 220 J 1/10W CHIP R 1.5K J 1/10W CHIP R 270K J 1/10W CHIP R 100 J 1/10W	
R43 R44,45 R46 R47 R48,49			RK73GB2A393J RK73GB2A302J RK73GB2A105J RK73GB2A104J RK73GB2A331J	CHIP R 39K J 1/10W CHIP R 3.0K J 1/10W CHIP R 1.0M J 1/10W CHIP R 100K J 1/10W CHIP R 330 J 1/10W	
R50 R51 R52 R53 R54			RK73GB2A101J RK73GB2A392J RK73GB2A163J RK73GB2A123J RK73GB2A333J	CHIP R 100 J 1/10W CHIP R 3.9K J 1/10W CHIP R 16K J 1/10W CHIP R 12K J 1/10W CHIP R 33K J 1/10W	
R55 R56 R57,58 R59 R60			RK73GB2A103J RK73GB2A123J RK73GB2A133J RK73GB2A472J RK73GB2A123J	CHIP R 10K J 1/10W CHIP R 12K J 1/10W CHIP R 13K J 1/10W CHIP R 4.7K J 1/10W CHIP R 12K J 1/10W	
R61 R62 R63 R64 R65			RK73GB2A183J RK73GB2A432J RK73GB2A133J RK73GB2A241J RK73GB2A104J	CHIP R 18K J 1/10W CHIP R 4.3K J 1/10W CHIP R 13K J 1/10W CHIP R 240 J 1/10W CHIP R 100K J 1/10W	
R66 R67 R68,69 R70			RK73GB2A472J RK73GB2A222J RK73GB2A104J RK73GB2A102J	CHIP R 4.7K J 1/10W CHIP R 2.2K J 1/10W CHIP R 100K J 1/10W CHIP R 1.0K J 1/10W	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
S1,2 S3			S68-0863-05 S68-0862-05	PUSH SWITCH PUSH SWITCH	
D2 D3 IC1 IC2 IC3		*	DA204UF DAN202UF 91CW12AFG-4VF6 UPD63712GC TC94A20F-010	DIODE DIODE MICROCONTROLLER IC MOS-IC MOS-IC	
IC4 IC5 IC5 IC6 IC6			BA5824FP-F NJM2880U133 NJM2880U33 S-1112B33MCG XC6219B332MR	ANALOGUE IC ANALOGUE IC ANALOGUE IC ANALOGUE IC ANALOGUE IC	
IC7 IC7 IC8 IC9 Q1			S-1112B25MCG XC6219B252MR TC7SH08FU TAR5S33-F 2SK3018F	ANALOGUE IC ANALOGUE IC MOS-IC ANALOGUE IC FET	
Q3 Q4 Q5 Q6 Q7		*	UMD9N 2SK3018F UMD9N UMD12N DTC124EUAF	TRANSISTOR FET TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR	
Q8 Q9,10		*	2SB0970 DTC114YUAF	TRANSISTOR DIGITAL TRANSISTOR	
MECHANISM ASSY (X92-4850-00/01)					
2	1B		A10-4827-22	CHASSIS	
5 8 10 11 12	1B 2A 3A 2A 3A	*	D10-4576-63 D10-4579-13 D10-4581-13 D10-4582-13 D10-4583-03	ARM ASS'Y LEVER ASS'Y ARM ARM ARM	
13 14 15 16 17	3A 3B 2A 3B 3B		D10-4584-03 D10-4585-03 D10-4586-13 D10-4587-32 D10-4588-13	ARM ARM SLIDER SLIDER SLIDER	
18 19 22 23 24	3B 3B 2A 2B 3B		D10-4595-04 D10-4596-14 D13-2151-04 D13-2152-04 D13-2153-04	ARM ARM GEAR GEAR GEAR	
25 26 27 28 29	3B 3B 3B 3B 3B		D13-2154-04 D13-2155-04 D13-2156-14 D13-2157-04 D13-2158-04	GEAR WORM GEAR GEAR GEAR	
30 31 32 33 35	3B 3B 2B 2A 2B		D13-2168-04 D13-2171-04 D13-2172-03 D14-0759-04 D21-2382-04	GEAR GEAR RACK (GEAR) ROLLER SHAFT	
36 37	1A 1B		D23-0954-04 D39-0246-05	RETAINER DAMPER	

K : KDC-MP225 **M** : KDC-MP4026 **M1**: KDC-MP4026G **E** : KDC-W4527Y
E1 : KDC-W4527GY **E2** : KDC-W427Y **E3** : KDC-W4527 **E4** : KDC-W4527G

△ Indicates safety critical components.

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

MECHANISM ASSY (X92-4850-00/01)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation	Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
38	2B		G01-3072-04	EXTENSION SPRING							
39	2A		G01-3073-04	TORSION COIL SPRING							
40	2A		G01-3074-04	EXTENSION SPRING							
41	1B		G01-3075-14	EXTENSION SPRING							
42	2A		G01-3076-04	EXTENSION SPRING							
43	1B		G01-3077-14	EXTENSION SPRING							
44	2B		G02-1399-04	FLAT SPRING							
45	2B		G02-1408-04	FLAT SPRING							
51	1A		J21-9676-22	MOUNTING HARDWARE							
52	3B		J21-9677-12	MOUNTING HARDWARE							
53	1B		J21-9678-13	MOUNTING HARDWARE							
55	1A		J90-1001-11	GUIDE							
56	1B		J90-1023-03	GUIDE							
DFPC1	3A		J84-0141-05	FLEXIBLE PRINTED WIRING BOARD							
A	2B		N09-4460-05	TAPTITE SCREW							
B	1B		N09-4472-15	MACHINE SCREW							
C	2B		N09-6004-05	MACHINE SCREW							
E	2B		N09-6007-05	MACHINE SCREW							
F	1A		N09-6051-05	TAPTITE SCREW							
G	2A		N19-2163-04	FLAT WASHER							
H	1B		N39-2020-46	PAN HEAD MACHIN SCREW							
J	1B		N09-6108-05	MACHINE SCREW							
DM1	3B		T42-1066-04	DC MOTOR ASSY (SPINDLE)							
DM2	3B		T42-1067-04	DC MOTOR ASSY (LOADING)							
DPU1	2B		X93-2010-00	OPTICAL PICKUP ASS'Y							

K : KDC-MP225 M : KDC-MP4026 M1: KDC-MP4026G E : KDC-W4527Y
E1: KDC-W4527GY E2: KDC-W427Y E3: KDC-W4527 E4: KDC-W4527G

△ Indicates safety critical components.