


9. EXPLODED VIEWS AND PARTS LIST

- NOTES :
- Parts marked by " * " are generally unavailable because they are not in our Master Spare Parts List.
 - The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
 - Screw adjacent to ▽ mark on the product are used for disassembly.
 - For the applying amount of lubricants or glue, follow the instructions in this manual.
(In the case of no amount instructions, apply as you think it appropriate.)

9.1 PACKING

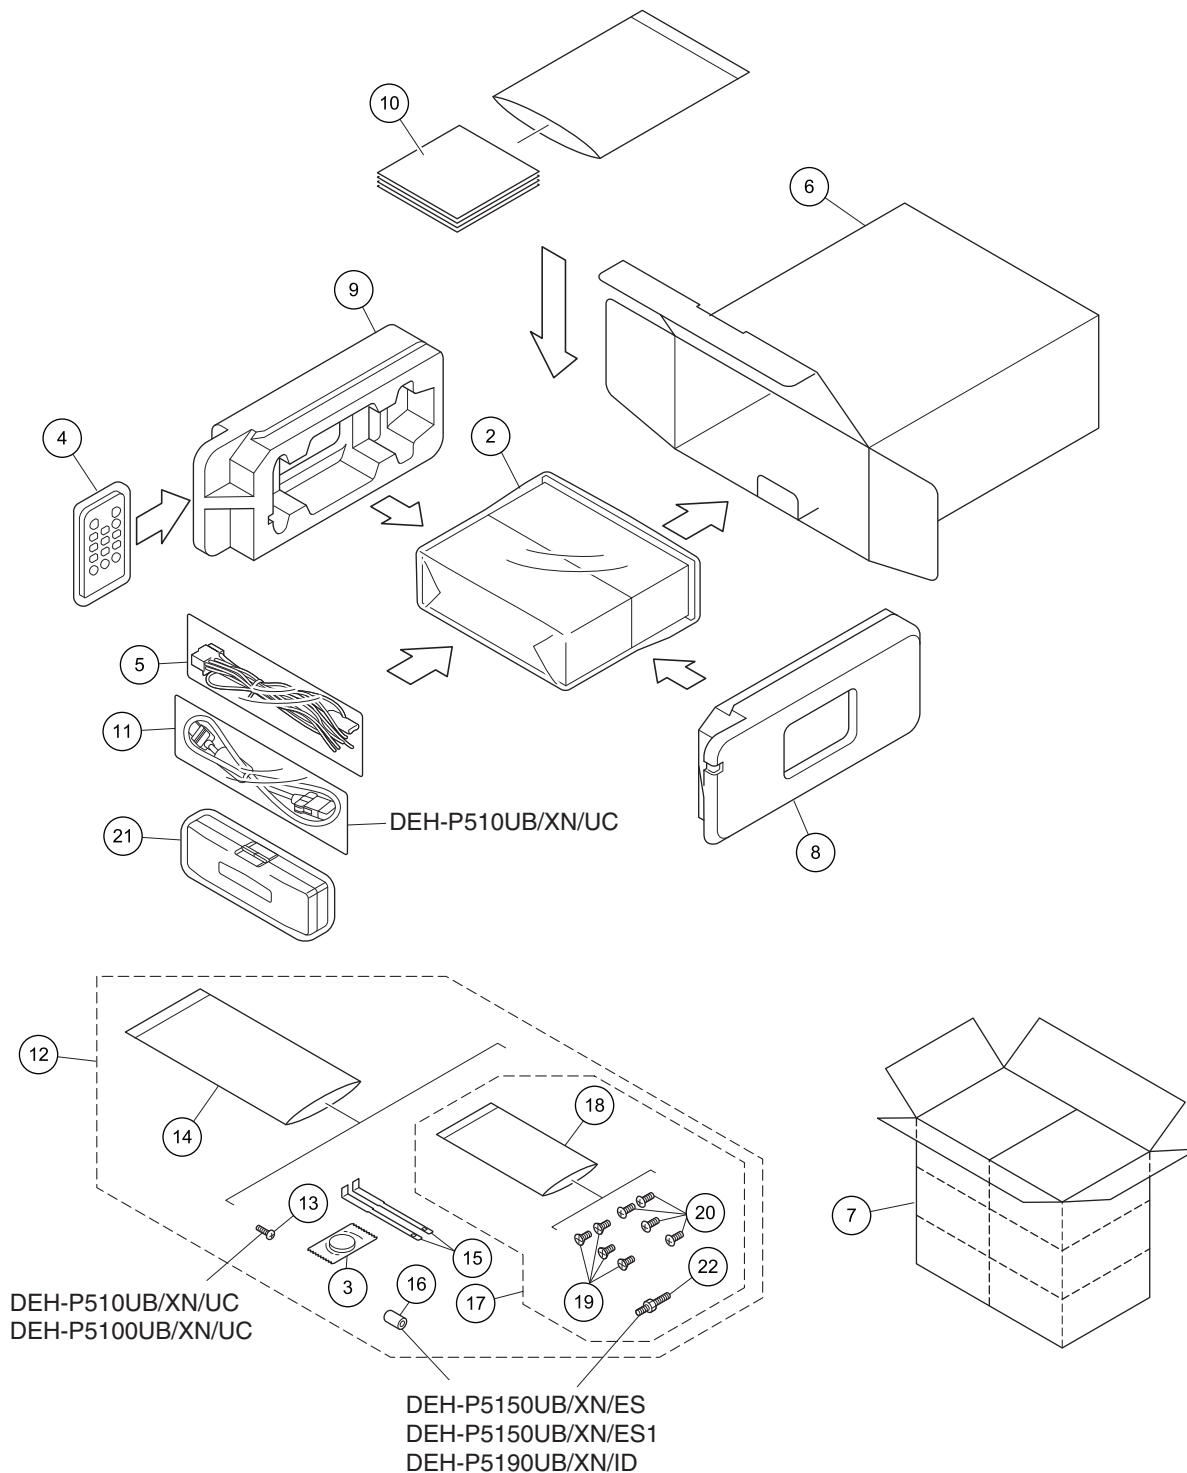

Mark	No.	Description	Part No.	Mark	No.	Description	Part No.
	1	*****					
	2	Polyethylene Bag	See Contrast table (2)	*	10-7	Warranty Card	See Contrast table (2)
*	3	Battery	CEX1065		11	Cord Assy	See Contrast table (2)
	4	Remote Control Assy	CXC8885		12	Accessory Assy	See Contrast table (2)
	5	Cord Assy	See Contrast table (2)		13	Screw	See Contrast table (2)
					14	Polyethylene Bag	CEG1160
	6	Unit Box	See Contrast table (2)				
	7	Contain Box	See Contrast table (2)		15	Handle	CND3707
	8	Protector	QHP3002		16	Bush	See Contrast table (2)
	9	Protector	QHP3003		17	Screw Assy	See Contrast table (2)
	10-1	Owner's Manual	See Contrast table (2)	*	18	Polyethylene Bag	CEG-127
					19	Screw	CRZ50P090FTC
	10-2	Owner's Manual	See Contrast table (2)				
	10-3	Installation Manual	See Contrast table (2)		20	Screw	TRZ50P080FTC
*	10-4	Service Network	See Contrast table (2)		21	Case Assy	QXA3129
	10-5	Caution Card	CRP1387		22	Screw	See Contrast table (2)
*	10-6	Caution Card	See Contrast table (2)				

(2) CONTRAST TABLE
 DEH-P510UB/XN/UC, DEH-P5100UB/XN/UC, DEH-P5150UB/XN/ES, DEH-P5150UB/XN/ES1 and DEH-P5190UB/XN/ID are constructed the same except for the following:

Mark	No.	Description	DEH-P510UB/XN/UC	DEH-P5100UB/XN/UC	DEH-P5150UB/XN/ES	DEH-P5150UB/XN/ES1	DEH-P5190UB/XN/ID
	2	Polyethylene Bag	CEG1173	CEG1173	QEG3001	QEG3001	QEG3001
	5	Cord Assy	QDP3003	QDP3003	QDP3004	QDP3004	QDP3004
	6	Unit Box	QHG3033	QHG3034	QHG3035	QHG3039	QHG3036
	7	Contain Box	QHL3033	QHL3034	QHL3035	QHL3039	QHL3036
	10-1	Owner's Manual	QRD3026	QRD3027	QRD3028	QRD3028	QRB3025
	10-2	Owner's Manual	Not used	Not used	QRD3029	QRD3029	Not used
	10-3	Installation Manual	QRD3030	QRD3031	QRD3032	QRD3032	Not used
*	10-4	Service Network	Not used	Not used	Not used	CRY1251	Not used
*	10-6	Caution Card	Not used	CRP1386	Not used	Not used	Not used
*	10-7	Warranty Card	CRY1280	CRY1276	Not used	CRY1250	Not used
	11	Cord Assy	YDP5026	Not used	Not used	Not used	Not used
	12	Accessory Assy	*QEA3004	*QEA3004	CEA9954	CEA9954	CEA9954
	13	Screw	BPZ20P060FTC	BPZ20P060FTC	Not used	Not used	Not used
	16	Bush	Not used	Not used	CNV3930	CNV3930	CNV3930
	17	Screw Assy	YEA5072	YEA5072	CEA3849	CEA3849	CEA3849
	22	Screw	Not used	Not used	CBA1650	CBA1650	CBA1650

Owner's Manual,Installation Manual

Part No.	Language
QRD3026	English, French, Spanish(Espanol)
QRD3030	English, French, Spanish(Espanol)
QRD3027	English, French, Spanish(Espanol)
QRD3031	English, French, Spanish(Espanol)
QRD3028	English, Spanish(Espanol), Portuguese(B)
QRD3029	Traditional Chinese, Arabic
QRD3032	English, Spanish(Espanol), Portuguese(B), Traditional Chinese, Arabic
QRB3025	English

4



(1) EXTERIOR(1) SECTION PARTS LIST					
Mark No.	Description	Part No.	Mark No.	Description	Part No.
1	Screw	BSZ26P060FTC	23	L-Plug(5P)(CN591)	See Contrast table (2)
2	Screw	BSZ30P060FTC	24	Holder	See Contrast table (2)
3	Screw	BSZ30P200FTC	25	Heat Sink	QNR3001
4	Earth Plate	CNC8915			
5	Cushion	CNM8890	26	Pin Jack(CN302)	XKB7001
			27	Holder	XNC7030
6	CD Mechanism Module(S10.5)	CXK5777	28	Fuse(10 A)	YEK5001
7	Cable	QDE3006	29	Chassis Unit	QXA3109
8	Insulator	QNM3013	30	Button	CAC4836
9	Cord Assy	See Contrast table (2)			
10	Tuner Amp Assy	See Contrast table (2)	31	Spring	CBH2367
			32	Spring(Silver)	CBH2961
11	Screw	BPZ26P070FTC	33	Spring(Black)	CBH2962
12	Screw	BSZ26P060FTC	34	Cover	CNN1665
13	Screw	BSZ26P200FTC	35	Arm	CNV9311
14	Plug(CN981)	CKM1376			
15	Connector(CN701)	CKS3833	36	Arm	CNV9312
			37	Panel	QNS3072
16	Connector(CN151)	CKS4124	38	IC(IC351)	PA2030A
17	Connector(CN101)	CKS5271	39	IC(IC911)	NJM2388F84
18	Connector(CN801)	CKS6050	40	Transistor(Q751, Q901)	2SD2396
19	Antenna Jack(CN401)	CKX1070			
20	Insulator	CNN2753	41	Choke Coil(L981)	CTH1280
			42	Screw	See Contrast table (2)
21	FM/AM Tuner Unit(Y401)	CWE2098	43	Holder	See Contrast table (2)
22	Holder	CND4324	44	Sheet	See Contrast table (2)


(2) CONTRAST TABLE

DEH-P510UB/XN/UC, DEH-P5100UB/XN/UC, DEH-P5150UB/XN/ES, DEH-P5150UB/XN/ES1 and DEH-P5190UB/XN/ID are constructed the same except for the following:

Mark	No.	Description	DEH-P510UB/XN/UC	DEH-P5100UB/XN/UC	DEH-P5150UB/XN/ES	DEH-P5150UB/XN/ES1	DEH-P5190UB/XN/ID
	9	Cord Assy	YDE5047	YDE5047	Not used	Not used	Not used
	10	Tuner Amp Assy	QWM3065	QWM3064	QWM3066	QWM3066	QWM3066
	23	L-Plug(5P)(CN591)	KM200NA5L	KM200NA5L	Not used	Not used	Not used
	24	Holder	QNC3007	QNC3007	QNC3006	QNC3006	QNC3006
	42	Screw	Not used	BMZ40P140FTC	Not used	Not used	Not used
	43	Holder	Not used	CNV7619	Not used	Not used	Not used
	44	Sheet	Not used	Not used	Not used	Not used	CNM9404

* Sheet (No.44: CNM9404) is NOT reusable. If you remove it, please replace it with the new one.

9.3 EXTERIOR(2)

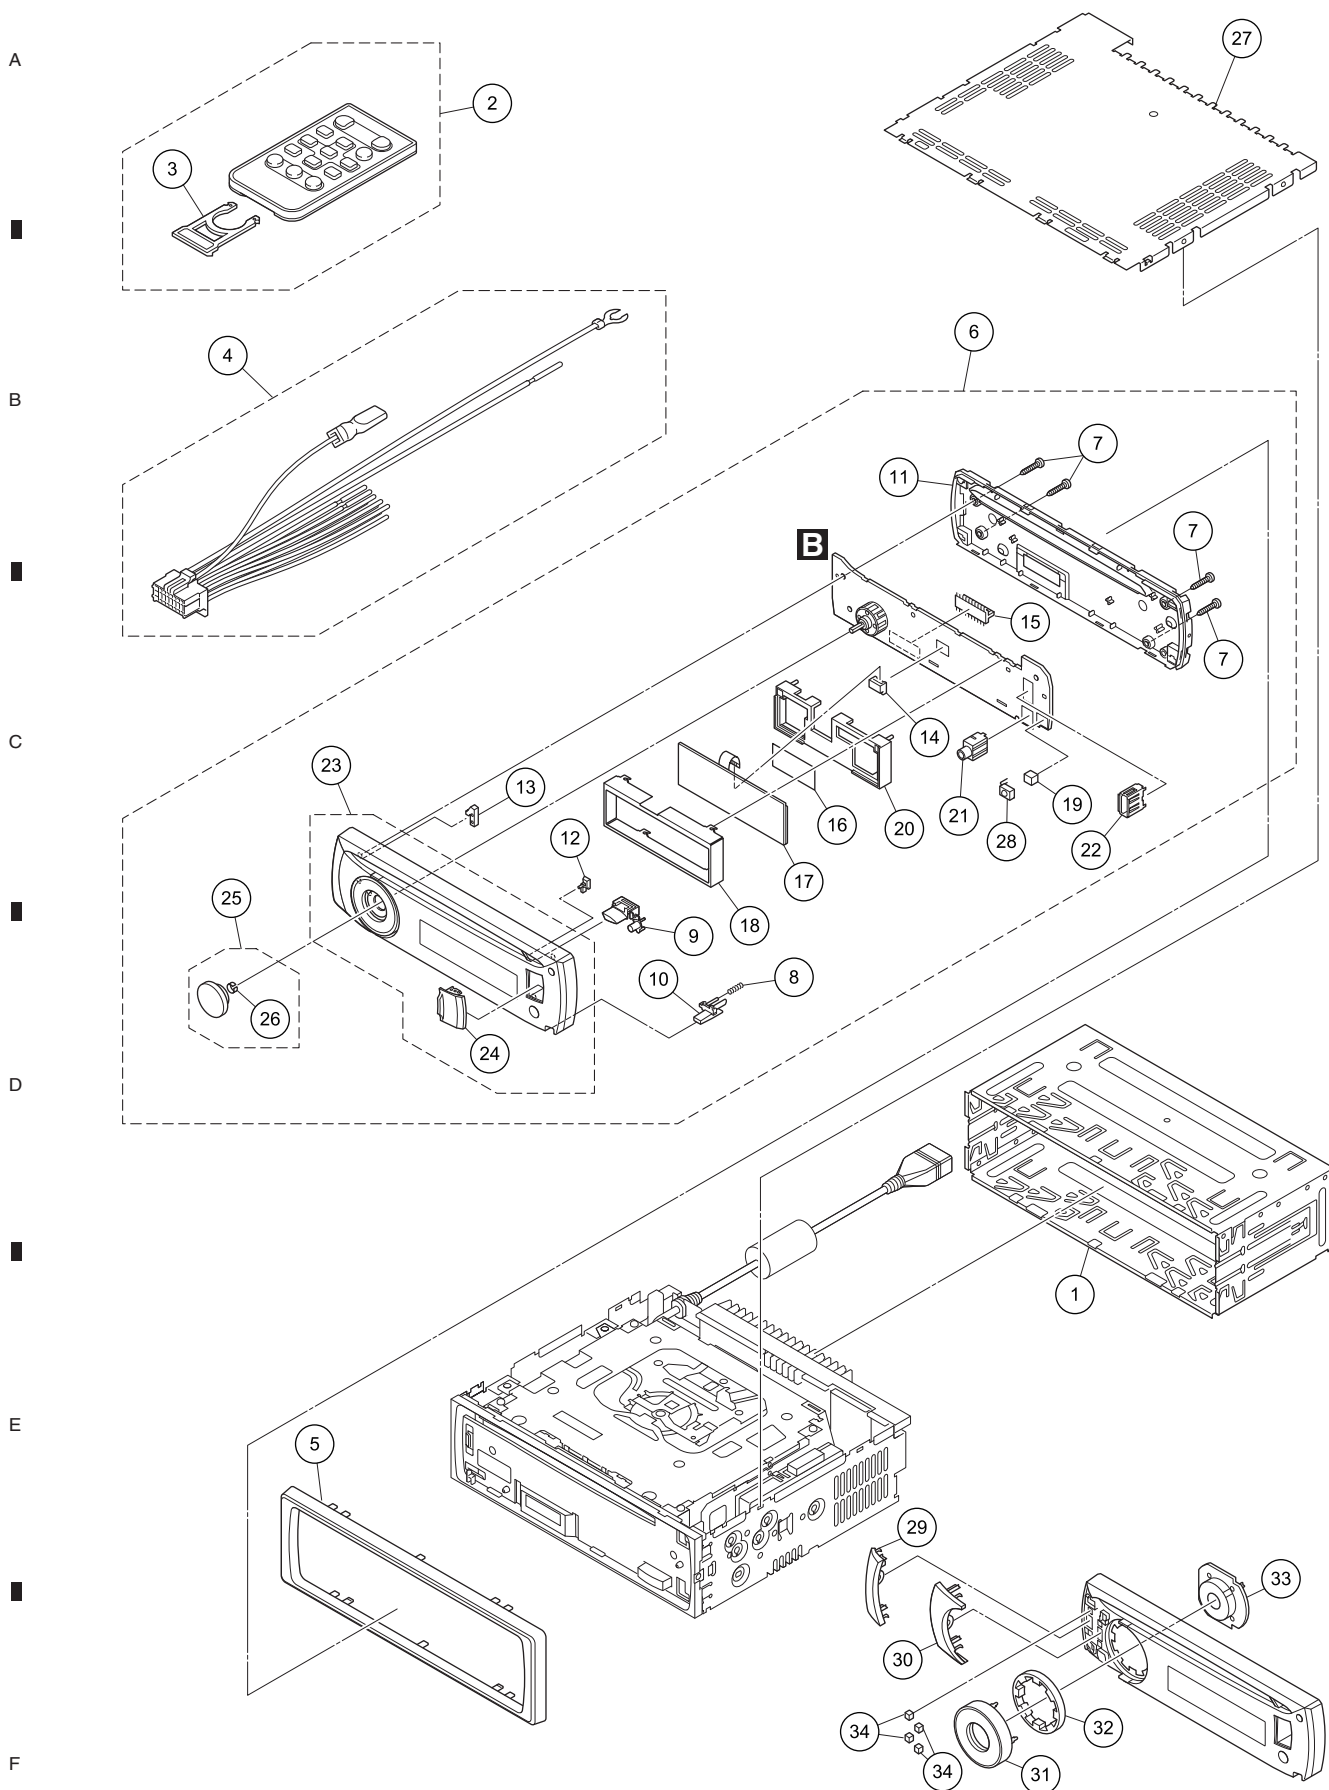

Mark No.	Description	Part No.	Mark No.	Description	Part No.	
1	Holder	CND3598	18	Holder	QNC3005	
2	Remote Control Assy	CXC8885	19	Spacer	QNM3017	A
3	Cover	CNS7068	20	Holder	QNV3013	
4	Cord Assy	See Contrast table (2)				
5	Panel	QNS3073	21	Jack(CN1821)	YKN5006	
			22	Connector(CN1851)	YKS5032	
6	Detachable Assy	See Contrast table (2)	23	Grille Unit	See Contrast table (2)	
7	Screw	BPZ20P100FTC	* 24	Door(USB)	QAT3001	
8	Spring	CBH2210	25	Knob Unit	See Contrast table (2)	
9	Button(EJECT)	QAC3024				
10	Button(DETACH)	QAC3025	26	Spring	XBL7005	
			27	Case	YNB5014	
11	Cover	QNS3071	28	Remoto IC(IC1931)	GP1UXC14RK	B
12	Lighting Conductor	QNV3010	29	Button(SRC, BAND)	QAC3026	
13	Lighting Conductor	QNV3011	30	Button(LIST, DISP)	QAC3027	
14	Connector(CN1961)	CKS6036				
15	Connector(CN1801)	CKS6049	* 31	Plate Unit(S.Rtrv, SW, iPod, LOC)	QXA3101	
			* 32	Cushion	QNM3011	
16	Double Sided Tape	CNM8673	* 33	Lighting Conductor	QNV3009	
17	OEL Module	MXS8281	* 34	Cushion	QNM3019	

(2) CONTRAST TABLE

DEH-P510UB/XN/UC, DEH-P5100UB/XN/UC, DEH-P5150UB/XN/ES, DEH-P5150UB/XN/ES1 and DEH-P5190UB/XN/ID are constructed the same except for the following:

Mark	No.	Description	DEH-P510UB/XN/UC	DEH-P5100UB/XN/UC	DEH-P5150UB/XN/ES	DEH-P5150UB/XN/ES1	DEH-P5190UB/XN/ID
	4	Cord Assy	QDP3003	QDP3003	QDP3004	QDP3004	QDP3004
	6	Detachable Assy	QXA3116	QXA3115	QXA3117	QXA3117	QXA3120
	23	Grille Unit	QXA3093	QXA3094	QXA3095	QXA3095	QXA3096
	25	Knob Unit	QXA3105	QXA3104	QXA3104	QXA3104	QXA3104

4



 (2): GEM1045

Mark No.	Description	Part No.	Mark No.	Description	Part No.	
1	CD Core Unit(S10.5iPod-Code3)	CWX3678	50	Rack	CNV8342	
2	Connector(CN101)	CKS4808				
3	Connector(CN701)	CKS5854	51	Roller	CNV8343	A
4	Screw	BMZ20P025FTC	52	Holder	CNV8344	
5	Screw	BSZ20P040FTC	53	Arm	CNV8345	
			54	Guide	CNV9498	
6	Screw(M2 x 3)	CBA1511	55	Arm	CNV8348	
7	Screw(M2 x 4)	CBA1835				
8	Washer	CBF1038	56	Arm	CNV8349	
9	Roller	CNV9499	57	Arm	CNV8350	
10	Spring	CBH2609	58	Clamper	CNV8365	
			59	Arm	CNV8386	
11	Spring	CBH2612	60	Guide	CNV8396	B
12	Spring	CBH2614				
13	Spring	CBH2616	61	Arm	CNV8413	
14	Spring	CBH2617	62	Collar	CNV8938	
15	Spring	CBH2620	63	Motor Unit(M2)	CXC4026	
			64	Arm Unit	CXC4027	
16	Spring	CBH2855	65	Chassis Unit	CXC4028	
17	Spring	CBH2937				
18	Spring	CBH2735	66	Gear Unit	CXC4029	
19	Spring	CBH2854	67	Frame Unit	CXC4031	
20	Spring	CBH2642	68	Motor Unit(M1)	CXC7134	
			69	Screw Unit	CXC6359	C
21	Spring	CBH2856	70	Screw	JFZ20P020FTC	
22	Spring	CBH2857				
23	Spring	CBH2860	71	Screw	JGZ17P022FTC	
24	Spring	CBH2861	72	Washer	YE20FTC	
25	Spring	CBL1686	73	Pickup Unit(P10.5)(Service)	CXX1942	
			74	Screw	IMS26P030FTC	
26	Arm	CND1909				
27	Frame	CND2582				
28	Bracket	CND2583				
29	Arm	CND3831				
30	Lever	CND2585				D
31	Arm	CND2586				
32	Bracket	CND2587				
33	Arm	CND2588				
34	Lever	CND2589				
35	Holder	CNV7201				
36	Gear	CNV7207				
37	Gear	CNV7208				
38	Gear	CNV7209				E
39	Gear	CNV7210				
40	Gear	CNV7211				
41	Gear	CNV7212				
42	Rack	CNV7214				
43	Arm	CNV7216				
44	Roller	CNV7218				
45	Gear	CNV7219				
46	Guide	CNV7361				
47	Gear	CNV7595				F
48	Guide	CNV7799				
49	Arm	CNV7805				

5			6			7			8		
<u>Circuit Symbol and No.</u>			<u>Part No.</u>			<u>Circuit Symbol and No.</u>			<u>Part No.</u>		
D 301	(A,122,128)	Diode	1SS355								
D 381	(A,88,108)	Diode	HZU8R2(B2)			R 181	(A,99,12)		RS1/16S181J		
D 382	(A,92,113)	Diode	MC2848-11			R 182	(A,99,10)		RS1/16S181J		
D 383	(A,88,113)	Diode(A)	MC2848-11			R 183	(A,108,11)		RS1/16SS223J		A
						R 184	(A,103,11)		RS1/16SS223J		
						R 201	(A,114,84)		RAB4C102J		
D 501	(A,28,59)	Diode	RB060L-40								
D 502	(A,43,73)	Diode	1SR139-400								
D 751	(A,14,79)	Diode	HZU7R5(B3)			R 202	(A,110,85)		RS1/16SS101J		
D 801	(A,73,15)	Varistor	EZJZ1V800AM			R 203	(A,111,85)		RS1/16SS101J		
D 802	(A,77,15)	Varistor	EZJZ1V800AM			R 242	(A,90,97)		RS1/16SS152J		
						R 301	(A,143,112)		RS1/16SS390J		
						R 302	(A,132,112)		RS1/16SS390J		
D 805	(A,83,10)	Diode	MC2850-11								
D 806	(A,70,18)	Diode	MC2848-11			R 303	(A,144,124)		RS1/16SS390J		
D 807	(A,74,18)	Diode	MC2846-11			R 304	(A,136,124)		RS1/16SS390J		
D 808	(A,66,18)	Diode	MC2848-11			R 305	(A,138,125)		RS1/16SS390J		
D 809	(A,62,18)	Diode	MC2846-11			R 306	(A,130,125)		RS1/16SS390J		B
						R 307	(A,123,122)		RS1/16SS102J		
D 821	(A,50,23)	Diode	HZU10(B1)								
D 851	(A,32,14)	Diode	RB551V-30								
D 852	(A,22,30)	Diode	HZU10(B1)			R 308	(A,140,112)		RS1/16SS223J		
D 901	(A,13,107)	Diode	UDZS5R6(B)			R 309	(A,134,112)		RS1/16SS223J		
D 902	(A,36,89)	Diode	1SR139-400			R 310	(A,144,126)		RS1/16SS223J		
						R 311	(A,135,126)		RS1/16SS223J		
						R 312	(A,138,126)		RS1/16SS223J		
D 921	(A,53,94)	Diode	UDZS7R5(B)								
D 922	(A,62,94)	Diode	HZU6R8(B2)			R 313	(A,130,126)		RS1/16SS223J		
D 931	(A,93,122)	Diode	1SS355			R 314	(A,133,129)		RS1/16SS0R0J		
D 941	(A,81,102)	Diode	1SR139-400			R 316	(A,144,129)		RS1/16SS0R0J		
D 942	(A,77,102)	Diode	1SR139-400			R 319	(A,146,112)		RS1/16SS472J		
						R 320	(A,144,112)		RS1/16SS472J		C
D 961	(A,68,92)	Diode	MC2848-11								
D 981	(A,44,129)	Diode	1SR154-400			R 321	(A,141,129)		RS1/16SS472J		
D 982	(A,48,129)	Diode	1SR154-400			R 322	(A,141,124)		RS1/16SS472J		
ZNR401	(A,161,112)	Surge Protector	IMSA-6801-01Y901			R 323	(A,132,129)		RS1/16SS472J		
L 201	(A,106,80)	Inductor	LAU2R2K			R 324	(A,134,123)		RS1/16SS472J		
						R 351	(A,122,102)		RS1/16SS472J		
L 401	(A,155,100)	Inductor	LCTAW220J2520								
L 402	(A,145,89)	Inductor	LAU1R0K								
L 403	(A,151,50)	Inductor	LAU2R2K			R 352	(A,114,102)		RS1/16SS472J		
L 501	(A,20,57)	Inductor	ATH7048			R 353	(A,114,112)		RS1/16SS182J		
L 591	(A,56,58)	Inductor(A,B)	CTF1713			R 354	(A,114,114)		RS1/16SS272J		
						R 355	(A,118,112)		RS1/16SS182J		
						R 356	(A,118,114)		RS1/16SS272J		D
L 601	(A,83,61)	Ferri-Inductor	LAU100K								
L 761	(A,31,37)	Ferri-Inductor(A,B)	LAU100K			R 357	(A,94,109)		RS1/16SS472J		
L 852	(A,29,21)	Inductor	CTF1660			R 358	(A,113,112)		RS1/16SS182J		
L 961	(A,72,102)	Inductor	LAU2R2K			R 359	(A,113,114)		RS1/16SS272J		
L 981	(A,33,109)	Choke Coil 600 uH	CTH1280			R 360	(A,119,112)		RS1/16SS182J		
						R 361	(A,119,114)		RS1/16SS272J		
X 601	(A,105,55)	Crystal Resonator 15.000 MHz	CSS1774								
P 301	(A,127,127)	Poly Switch	RXEF075P								
SP601	(A,140,40)	Buzzer	CPV1062			R 362	(A,100,111)		RS1/16SS103J		
Y 401	(A,162,103)	FM/AM Tuner Unit	CWE2098			R 363	(A,103,110)		RS1/16SS103J		
						R 364	(A,98,111)		RS1/16SS331J		
						R 365	(A,97,109)		RS1/16SS101J		
						R 366	(A,98,121)		RS1/16SS103J		
RESISTORS											
R 101	(A,42,124)		RS1/16SS620J								
R 102	(A,41,124)		RS1/16SS101J			R 381	(A,89,104)		RS1/16SS473J		E
R 103	(A,44,124)		RS1/16SS101J			R 382	(A,87,101)		RS1/16SS223J		
R 104	(A,80,95)		RS1/16SS222J			R 383	(A,89,107)		RS1/16SS104J		
R 105	(A,26,125)		RS1/16SS181J			R 384	(A,97,116) (B,C,D,E)		RS1/16SS0R0J		
						R 401	(A,155,64)		RS1/16SS681J		
R 106	(A,40,125)		RS1/16SS181J								
R 107	(A,38,125)		RS1/16SS223J			R 403	(A,155,77)		RS1/16SS681J		
R 108	(A,27,125)		RS1/16SS223J			R 405	(A,155,80)		RS1/16SS681J		
R 113	(A,37,125)		RS1/16SS102J			R 406	(A,155,82)		RS1/16SS681J		
R 114	(A,28,125)		RS1/16SS102J			R 407	(A,155,83)		RS1/16SS681J		
						R 501	(A,38,46)		RS1/10SR471J		
R 115	(A,80,92)		RS1/16SS472J								
R 116	(A,74,97)		RS1/16SS102J			R 502	(A,31,47)		RS1/16SS8201F		F
R 117	(A,85,92)		RS1/16SS223J			R 503	(A,30,50)		RS1/16SS3302F		
R 151	(A,18,134)		RS1/16S102J			R 504	(A,30,48)		RS1/16SS102J		
R 152	(A,18,130)		RS1/16S102J			R 505	(A,26,50)		RS1/16SS0R0J		
						R 506	(A,28,52)		RS1/16SS303J		

1

2

3

4

Circuit Symbol and No.**Part No.****Circuit Symbol and No.****Part No.**

A R 507 (A,30,55) RS1/16SS8202F
 R 508 (A,28,55) RS1/16SS123J
 R 601 (A,121,41) RS1/16SS104J
 R 602 (A,129,41) RS1/16SS104J
 R 603 (A,127,41) RS1/16SS102J

R 775 (A,39,42) (A,B)
 R 776 (A,39,41) (A,B)
 R 777 (A,39,39) (A,B)
 R 778 (A,47,34) (A,B)
 R 780 (A,41,43) (A,B)

RS1/16SS3302F
 RS1/16SS1302F
 RS1/16SS3901F
 RS1/16SS102J
 RS1/16SS7502F

R 604 (A,130,44) RS1/16SS681J
 R 605 (A,115,42) RS1/16SS472J
 R 606 (A,114,43) RS1/16SS472J
 R 607 (A,124,41) RS1/16SS102J
 R 608 (A,122,41) RS1/16SS104J

R 781 (A,41,42) (A,B)
 R 782 (A,41,41) (A,B)
 R 783 (A,41,39) (A,B)
 R 801 (A,82,7)
 R 803 (A,69,14)

RS1/16SS3302F
 RS1/16SS1302F
 RS1/16SS3901F
 RS1/16SS222J
 RS1/16S222J

R 609 (A,106,45) RS1/16SS222J
 R 610 (A,110,52) RS1/16SS473J
 R 611 (A,110,56) RS1/16SS0R0J
 R 612 (A,133,55) RS1/16SS472J
 R 613 (A,110,57) RS1/16SS473J

R 805 (A,67,14)
 R 806 (A,65,14)
 R 807 (A,63,14)
 R 809 (A,71,14)
 R 811 (A,70,20)

RS1/16S222J
 RS1/16S222J
 RS1/16S222J
 RS1/16SS104J
 RS1/16SS104J

R 614 (A,110,58) RS1/16SS102J
 R 615 (A,111,61) RS1/16SS102J
 R 616 (A,109,61) RS1/16SS104J
 R 617 (A,134,58) RS1/16SS104J
 R 618 (A,109,43) RS1/16SS102J

R 821 (A,54,21)
 R 822 (A,55,23)
 R 824 (A,49,27)
 R 825 (A,47,27)
 R 842 (A,63,32)

RS1/16SS473J
 RS1/16S1R0J
 RS1/10SR121J
 RS1/10SR121J
 RS1/16SS102J

R 619 (A,134,60) RS1/16SS104J
 R 620 (A,120,68) RS1/16SS103J
 R 621 (A,123,67) RS1/16SS473J
 R 622 (A,118,68) RS1/16SS223J
 C R 623 (A,128,67) RS1/16SS104J

R 843 (A,63,37)
 R 852 (A,43,24)
 R 854 (A,43,26)
 R 855 (A,37,27)
 R 856 (A,39,28)

RS1/16SS473J
 RS1/16SS1502F
 RS1/16SS1301F
 RS1/10SR102J
 RS1/16SS1R0J

R 624 (A,127,67) (C,D,E) RS1/16SS104J
 R 625 (A,125,67) (A,B) RS1/16SS0R0J
 R 626 (A,129,67) (B) RS1/16SS104J
 R 627 (A,124,67) (A,C,D,E) RS1/16SS0R0J
 R 628 (A,126,41) RS1/16SS104J

R 858 (A,14,30)
 R 901 (A,13,105)
 R 902 (A,13,104)
 R 903 (A,13,102)
 R 911 (A,12,111)

RS1/4SA181J
 RS1/16SS223J
 RS1/16SS681J
 RS1/16SS681J
 RS1/16SS473J

R 629 (A,136,47) RS1/16SS104J
 R 630 (A,121,68) RS1/16SS104J
 R 631 (A,106,48) RS1/16SS104J
 R 641 (A,134,64) RS1/16SS104J
 R 651 (A,108,67) RS1/16SS183J

R 921 (A,54,90)
 R 922 (A,62,90)
 R 923 (A,56,90)
 R 924 (A,60,90)
 R 925 (A,58,90)

RS1/16SS104J
 RS1/16SS103J
 RS1/16SS473J
 RS1/16SS223J
 RS1/16SS472J

R 652 (A,106,63) RS1/16SS102J
 R 701 (A,72,47) RS1/16SS473J
 R 702 (A,71,42) RAB4C472J
 R 703 (A,74,47) RS1/16SS104J
 R 704 (A,80,47) RS1/16SS221J

R 931 (A,96,121)
 R 961 (A,66,93)
 R 962 (A,70,95)
 R 964 (A,71,95)
 R 983 (A,58,93)

RS1/16SS103J
 RS1/16SS102J
 RS1/16SS472J
 RS1/16SS153J
 RS1/4SA102J

R 705 (A,78,47) RS1/16SS221J
 R 706 (A,81,47) RS1/16SS221J
 R 707 (A,77,47) RS1/16SS221J
 R 708 (A,83,47) RS1/16SS221J
 R 709 (A,75,47) RS1/16SS102J

R 984 (A,93,124)

RS1/4SA102J

CAPACITORS

E R 751 (A,17,76) RS1/4SA561J
 R 761 (A,54,35) (A,B) RS1/16SS7502F
 R 762 (A,54,36) (A,B) RS1/16SS3302F
 R 763 (A,54,37) (A,B) RS1/16SS1302F
 R 764 (A,54,39) (A,B) RS1/16SS3901F

C 101 (A,25,125)
 C 102 (A,79,97)
 C 103 (A,81,96)
 C 181 (A,86,16)
 C 182 (A,106,11)

CKSSYB104K16
 CKSSYB102K50
 CKSSYB102K50
 CKSSYB104K16
 CKSSYB472K50

R 765 (A,57,35) RS1/16SS5R6J
 R 766 (A,51,43) RS1/16SS5R6J
 R 767 (A,52,35) (A,B) RS1/16SS7502F
 R 768 (A,52,36) (A,B) RS1/16SS3302F
 R 769 (A,52,37) (A,B) RS1/16SS1302F

C 183 (A,102,11)
 C 184 (A,107,13)
 C 185 (A,105,13)
 C 186 (A,103,13)
 C 187 (A,102,13)

CKSSYB472K50
 CKSRYB105K10
 CKSRYB105K10
 CKSRYB105K10
 CKSRYB105K10

F R 770 (A,52,39) (A,B) RS1/16SS3901F
 R 771 (A,57,33) (C,D,E) RS1/16SS5R6J
 R 772 (A,51,42) (C,D,E) RS1/16SS5R6J
 R 773 (A,44,35) (A,B) RS1/16SS0R0J
 R 774 (A,39,43) (A,B) RS1/16SS7502F

C 188 (A,104,24)
 C 189 (A,110,19)
 C 201 (A,119,80)
 C 202 (A,117,84)
 C 203 (A,127,70)

CKSSYB102K50
 CEJQ220M16
 CEJQ470M16
 CKSSYB104K16
 CCSSCH470J50

1

2

3

4

1

2

3

4

Circuit Symbol and No.**Part No.****Circuit Symbol and No.****Part No.**

D 1838	(A,18,7) LED	SMLE12BC7T(NP)
D 1839	(A,29,9) LED	SMLE12BC7T(NP)
D 1840	(A,46,28) LED	SMLE12BC7T(NP)
D 1851	(B,136,20) Varistor	EZJZ1V800AM
D 1852	(B,137,20) Varistor	EZJZ1V800AM
D 1901	(A,68,22) Diode	1SS355
L 1851	(B,136,24) Inductor	CTF1713
L 1951	(B,50,31) Inductor	CTF1617
L 1961	(A,108,16) Inductor	CTF1617
X 1901	(B,69,21) Ceramic Resonator 16.000 MHz	CSS1616
S 1811	(A,37,19) Switch(ROTARY COMMANDER)	CSX1120
S 1831	(A,145,37) Push Switch	CSG1155
S 1832	(A,6,37) Push Switch	CSG1155
S 1833	(A,19,34) Push Switch	CSG1155
S 1834	(A,157,35) Push Switch	CSG1155
S 1835	(A,8,5) Push Switch	CSG1155
S 1836	(A,26,30) Push Switch	CSG1155
S 1837	(A,51,9) Push Switch	CSG1155
S 1838	(A,19,5) Push Switch	CSG1155
S 1839	(A,26,7) Push Switch	CSG1155
S 1840	(A,49,31) Push Switch	CSG1155

RESISTORS

R 1801	(B,53,18)	RS1/16S222J
R 1802	(B,51,26)	RS1/16S222J
R 1803	(B,74,4)	RS1/16S333J
R 1811	(B,20,28)	RS1/16S103J
R 1812	(B,21,20)	RS1/16S333J
R 1813	(B,21,21)	RS1/16S103J
R 1814	(B,24,27)	RS1/16S102J
R 1815	(B,21,23)	RS1/16S332J
R 1816	(B,24,26)	RS1/16S102J
R 1818	(A,76,12)	RS1/16S103J
R 1819	(B,21,24)	RS1/16S222J
R 1834	(B,22,15)	RS1/16S152J
R 1835	(B,19,15)	RS1/16S152J
R 1840	(B,8,9)	RS1/16S271J
R 1841	(B,8,16)	RS1/16S332J
R 1842	(B,9,16)	RS1/16S681J
R 1843	(B,11,16)	RS1/16S152J
R 1844	(B,12,16)	RS1/16S681J
R 1845	(B,14,16)	RS1/16S152J
R 1901	(B,46,27)	RS1/16S103J
R 1902	(A,67,24)	RS1/16S473J
R 1903	(A,70,21)	RS1/16S154J
R 1904	(B,69,25)	RAB4C102J
R 1905	(B,64,27)	RS1/16S104J
R 1906	(A,75,30)	RS1/16S473J
R 1907	(A,63,16)	RAB4C102J
R 1908	(A,81,12)	RS1/16S221J
R 1909	(A,81,29)	RAB4C473J
R 1910	(B,85,6)	RAB4C101J
R 1911	(B,89,10)	RAB4C101J
R 1912	(B,118,15)	RAB4C101J
R 1913	(A,114,30)	RS1/16S101J
R 1914	(B,114,29)	RS1/16S101J
R 1915	(B,114,15)	RAB4C101J
R 1916	(B,93,18)	RAB4C101J
R 1917	(A,112,11)	RAB4C101J

R 1918	(A,112,27)	RAB4C101J
R 1919	(B,115,26)	RAB4C101J
R 1920	(A,109,23)	RAB4C101J
R 1921	(A,96,15)	RS1/16S103J
R 1922	(A,121,30)	RS1/16S103J
R 1923	(A,72,25)	RAB4C103J
R 1926	(B,65,20)	RS1/16S102J
R 1927	(A,74,28)	RS1/16S103J
R 1931	(B,156,18)	RS1/16S101J
R 1932	(B,155,18)	RS1/16S103J
R 1933	(B,152,18)	RS1/16S2R2J
R 1951	(B,40,32)	RS1/16S222J
R 1965	(A,92,16)	RAB4C101J
R 1966	(A,78,28)	RS1/16S101J
R 1967	(A,94,16)	RS1/16S101J

CAPACITORS

C 1851	(A,155,30)	CKSRYB104K16
C 1901	(A,64,26)	CKSRYB103K50
C 1902	(A,66,19)	CKSRYF104Z25
C 1903	(B,92,22)	CKSRYB103K50
C 1931	(B,155,15)	CKSYB106K6R3
C 1951	(B,44,27)	CKSRYB104K16
C 1952	(B,39,32)	CKSRYB104K16
C 1953	(B,46,31)	CKSRYB104K16
C 1963	(A,99,26)	CKSRYB105K16
C 1964	(A,99,23)	CKSQYB105K25
C 1965	(B,99,22)	CKSRYB105K16
C 1966	(A,88,17)	CKSRYB104K16
C 1981	(A,124,28)	CKSRYB103K50

**Unit Number : CWX3678****Unit Name : CD Core Unit(\$10.5iPod-Code3)****MISCELLANEOUS**

IC 201	(A,35,46) IC	PE5661A
IC 205	(B,24,49) IC	341S2162
IC 301	(A,28,15) IC	BA5839FP
Q 101	(B,58,69) Transistor	2SA1577
Q 102	(B,48,58) Chip Transistor	2SB1689
Q 201	(B,27,54) Transistor	2SA1577
X 201	(A,22,37) Ceramic Resonator 16.934 MHz	CSS1603
X 205	(B,33,63) Oscillator 48.000 MHz	CSS1753
S 901	(A,55,37) Switch(HOME)	CSN1067
S 903	(B,19,58) Switch(DSCSNS)	CSN1067
S 904	(B,40,68) Switch(12EJ)	CSN1068
S 905	(B,25,69) Switch(8EJ)	CSN1068

RESISTORS

R 101	(B,61,74)	RS1/10SR2R4J
R 102	(B,61,72)	RS1/10SR2R4J
R 103	(B,61,71)	RS1/10SR2R7J
R 104	(B,53,66)	RS1/16SS222J
R 105	(B,44,57)	RS1/16SS102J
R 107	(B,52,60)	RS1/16SS105J
R 202	(A,27,32)	RS1/16SS473J
R 203	(A,51,44)	RS1/16S473J

5		6		7		8		
Circuit Symbol and No.		Part No.		Circuit Symbol and No.		Part No.		
R 204	(A,23,58)	RS1/16SS221J		C 204	(A,23,59)	CKSSYB103K16		
R 206	(B,10,26)	RS1/16SS104J		C 205	(B,27,41)	CKSQYB475K10		
				C 206	(A,23,40)	CKSSYB104K10		
R 209	(B,18,52)	RS1/16SS103J						
R 210	(B,10,23)	RS1/16SS102J		C 207	(A,24,37)	CKSRYB104K16		
R 214	(B,49,50)	RS1/16SS472J		C 209	(B,35,34)	CEVW220M6R3		
R 216	(B,48,49)	RS1/16SS472J		C 210	(B,29,37)	CKSSYB104K10		
R 221	(A,51,48)	RS1/16SS103J		C 211	(A,28,35)	CKSSYB104K10		
				C 212	(A,28,30)	CKSRYB104K16		
R 222	(A,51,46)	RS1/16SS103J						
R 223	(B,13,43)	RS1/16SS473J		C 213	(A,46,39)	CKSSYB104K10		
R 225	(A,50,50)	RS1/16SS103J		C 214	(A,29,33)	CKSSYB104K10		
R 226	(A,50,51)	RS1/16SS393J		C 216	(A,51,52)	CKSSYB332K50		
R 227	(B,47,51)	RS1/16SS562J		C 217	(A,48,51)	CKSSYB104K10		
				C 218	(A,50,52)	CKSSYB473K10		
R 228	(B,44,51)	RS1/16SS122J						
R 229	(B,46,53)	RS1/16SS472J		C 219	(A,47,53)	CKSSYB104K10		
R 230	(B,21,25)	RS1/16SS0R0J		C 220	(A,48,53)	CKSSYB182K50		
R 232	(B,45,51)	RS1/16SS122J		C 221	(A,46,54)	CKSSYB104K10		
R 233	(B,26,59)	RS1/16SS103J		C 222	(B,45,53)	CCSSCH560J50		
				C 223	(B,47,53)	CCSSCH4R0C50		
R 234	(B,22,26)	RS1/16SS473J						
R 235	(A,26,59)	RS1/16SS473J		C 224	(A,44,55)	CKSSYB104K10		
R 237	(A,24,35)	RS1/16SS151J		C 226	(A,42,59)	CCSSCH680J50		
R 240	(B,14,26)	RS1/16S473J		C 227	(A,42,61)	CCSSCH470J50		
R 241	(B,13,25)	RS1/16SS103J		C 228	(B,41,61)	CKSSYB103K16		
				C 229	(B,48,60)	CKSSYB104K10		
R 244	(B,22,55)	RS1/16SS473J						
R 249	(B,14,50)	RS1/16SS103J		C 236	(A,49,58)	CKSSYB104K10		
R 250	(B,19,50)	RS1/16SS101J		C 239	(B,46,51)	CCSSCH220J50		
R 252	(B,18,47)	RS1/16SS101J		C 240	(A,38,61)	CKSSYB104K10		
R 254	(A,25,64)	RS1/16SS104J		C 243	(B,22,41)	CKSQYB475K10		
				C 250	(A,52,48)	CKSSYB102K50		
R 255	(A,26,63)	RS1/16SS104J						
R 256	(A,25,62)	RS1/16SS104J		C 251	(A,52,46)	CKSSYB102K50		
R 259	(A,27,66)	RS1/16SS0R0J		C 260	(A,28,61)	CKSSYB104K10		
R 261	(A,26,65)	RS1/16SS104J		C 261	(B,33,66)	CCSSCH8R0D50		
R 262	(A,29,59)	RS1/16SS0R0J		C 262	(B,31,66)	CCSSCH8R0D50		
				C 290	(B,26,45)	CKSSYB104K10		
R 263	(A,27,63)	RS1/16SS0R0J						
R 273	(B,18,48)	RS1/16SS103J		C 293	(B,43,61)	CKSSYB102K50		
R 277	(B,18,50)	RS1/16SS103J		C 294	(B,24,41)	CKSSYB104K10		
R 282	(A,30,61)	RS1/16SS120J		C 303	(A,36,19)	CKSSYB472K25		
R 283	(A,29,61)	RS1/16SS120J		C 304	(A,36,21)	CKSSYB223K16		
				C 307	(A,22,11)	CKSRYB104K16		
R 284	(B,29,63)	RS1/16SS153J						
R 285	(B,28,63)	RS1/16SS153J		C 308	(B,11,18)	CKSRYB105K10		
R 291	(B,42,62)	RS1/16SS272J		C 703	(B,14,35)	CCSSCH101J50		
R 292	(B,24,43)	RS1/16SS272J		C 704	(B,11,36)	CKSSYB102K50		
R 293	(B,27,52)	RS1/16SS472J		C 711	(A,31,25)	CKSSYB104K10		
R 294	(A,31,62)	RS1/16SS471J		Miscellaneous Parts List				
R 307	(A,35,19)	RS1/16SS183J						
R 308	(A,37,19)	RS1/16SS183J						
R 309	(A,35,21)	RS1/16SS183J						
R 310	(A,37,22)	RS1/16SS183J		M 1	Pickup Unit(P10.5)(Service)	CXX1942		
				M 2	Motor Unit(SPINDLE)	CXC7134		
					Motor Unit(LOADING/CARRIAGE)	CXC4026		
R 601	(B,30,31)	RS1/16SS0R0J						
R 602	(B,27,31)	RS1/16SS0R0J						
R 606	(B,28,23)	RS1/16S0R0J						
R 701	(B,11,37)	RS1/16SS221J						
R 702	(A,23,56)	RS1/16SS221J						
R 708	(B,15,37)	RS1/16S0R0J						
R 712	(B,14,54)	RS1/16SS0R0J						
R 713	(B,14,53)	RS1/16SS0R0J						

CAPACITORS

C 106	(B,56,67)	CKSQYB475K10
C 202	(A,28,57)	CKSSYB104K10