



EXPLODED VIEW (DVD MECHANISM)

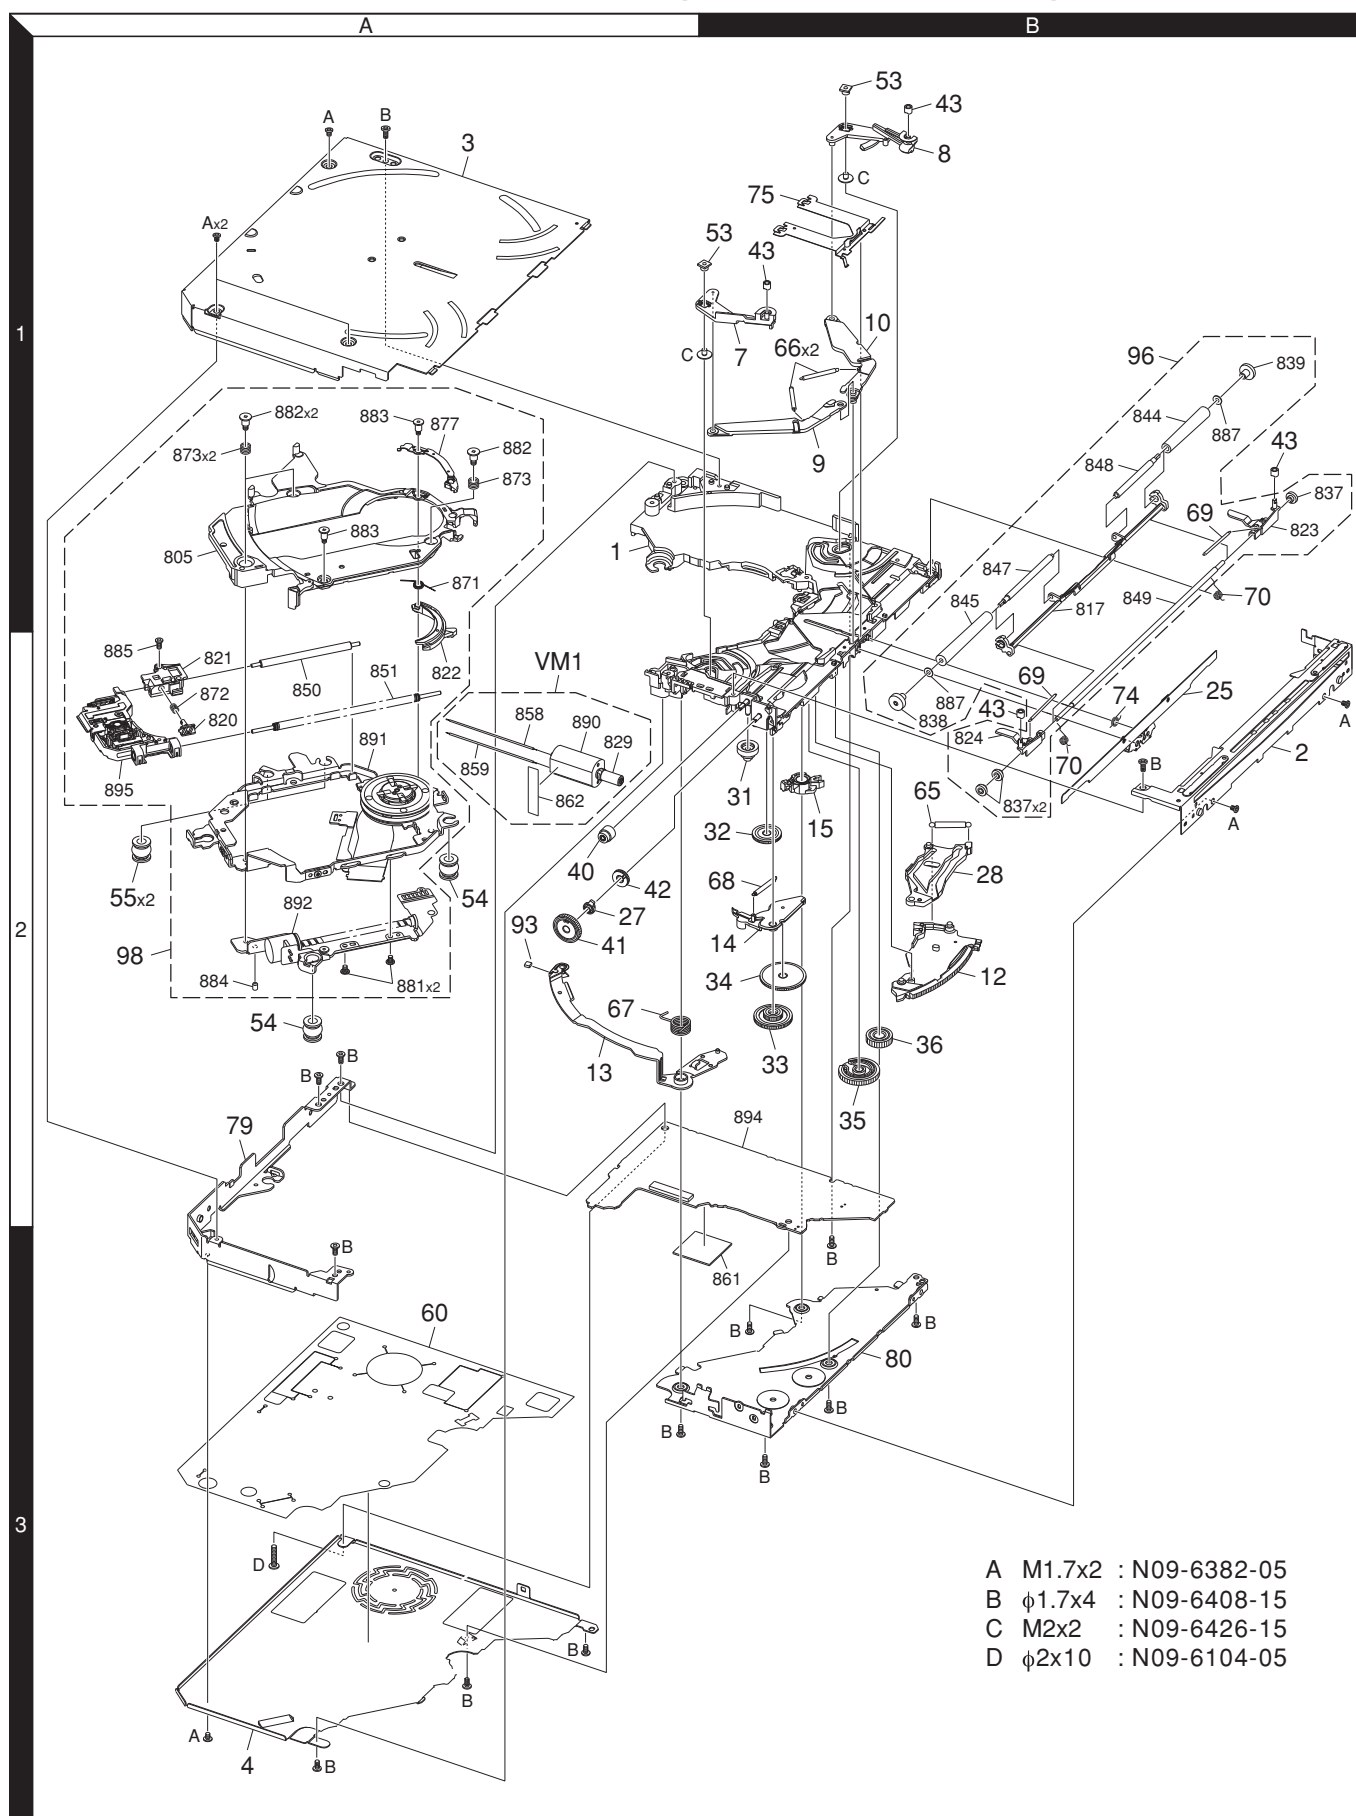

- A M1.7x2 : N09-6382-05
B ϕ 1.7x4 : N09-6408-15
C M2x2 : N09-6426-15
D ϕ 2x10 : N09-6104-05


EXPLODED VIEW (UNIT)

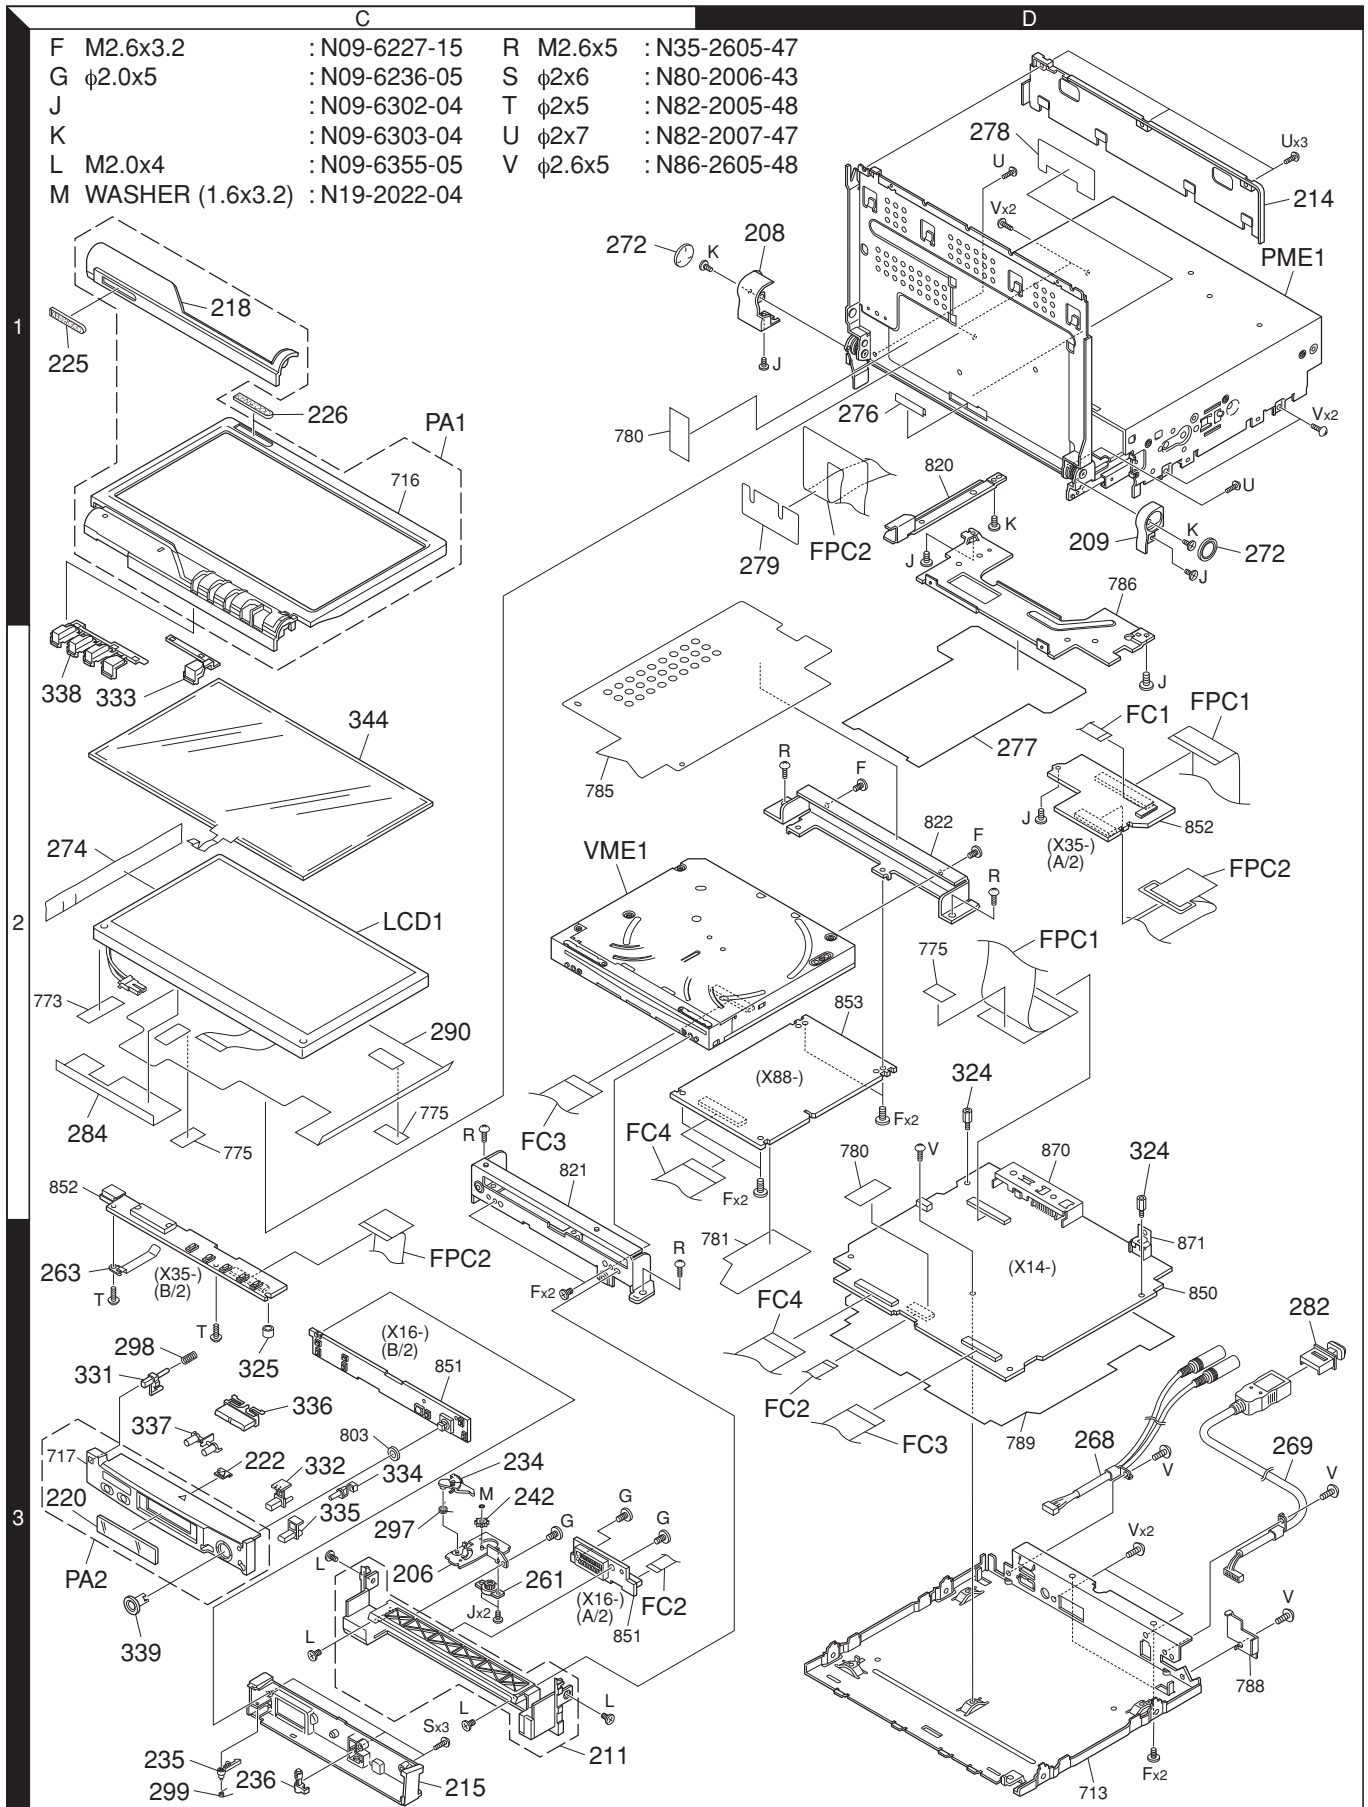

Parts with the exploded numbers larger than 700 are not supplied.


EXPLODED VIEW (DRIVE MECHANISM)

A	: N09-6205-05
B M2x2.2	: N09-6206-05
C M2x3.5	: N09-6207-05
D	: N09-6211-05
E	: N09-6255-05
H M1.7x2.2	: N09-6270-05
N WASHER (1.6x4)	: N19-2195-04
P WASHER	: N19-2303-04
Q RETAINING RING	: N29-0538-04

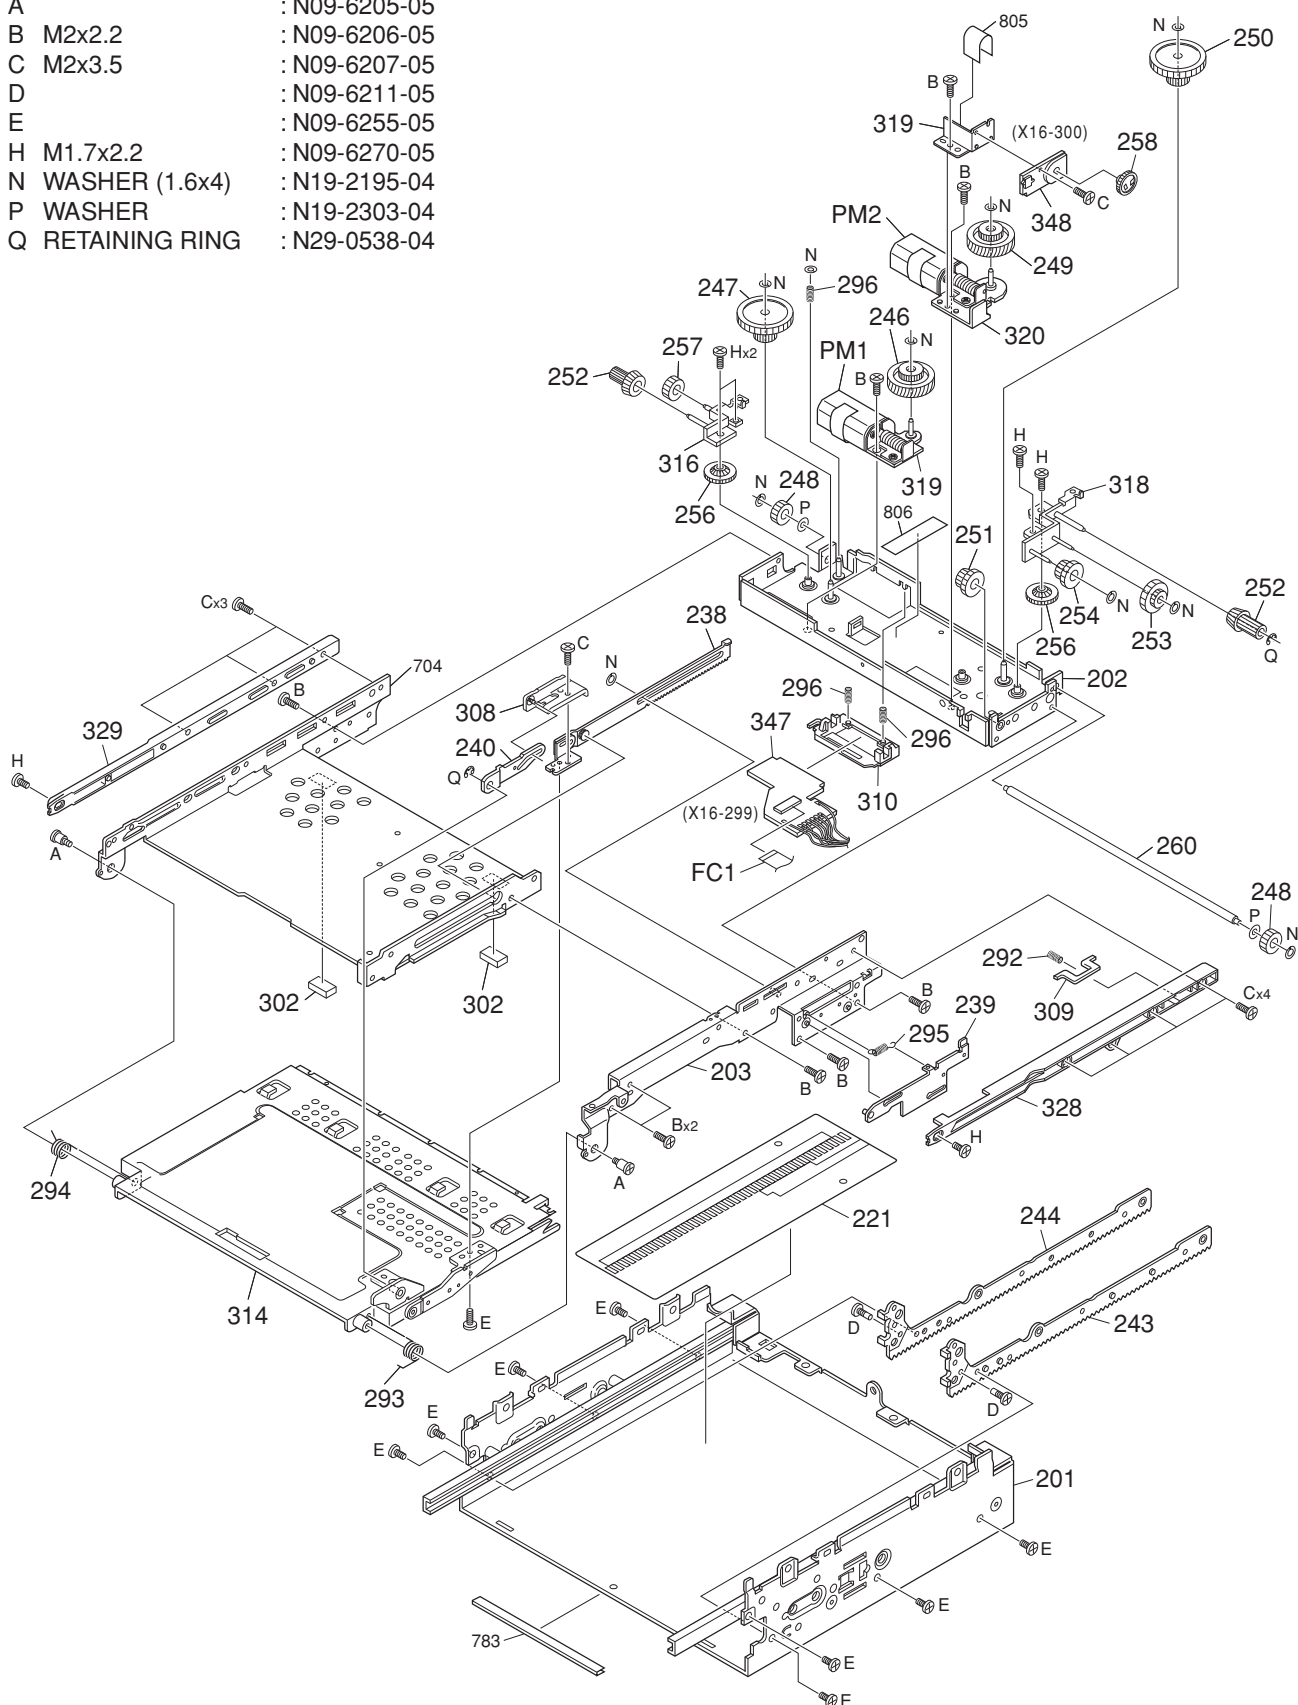

Parts with the exploded numbers larger than 700 are not supplied.

EXPLODED VIEW (TUNER BOX & ACCESSORIES)

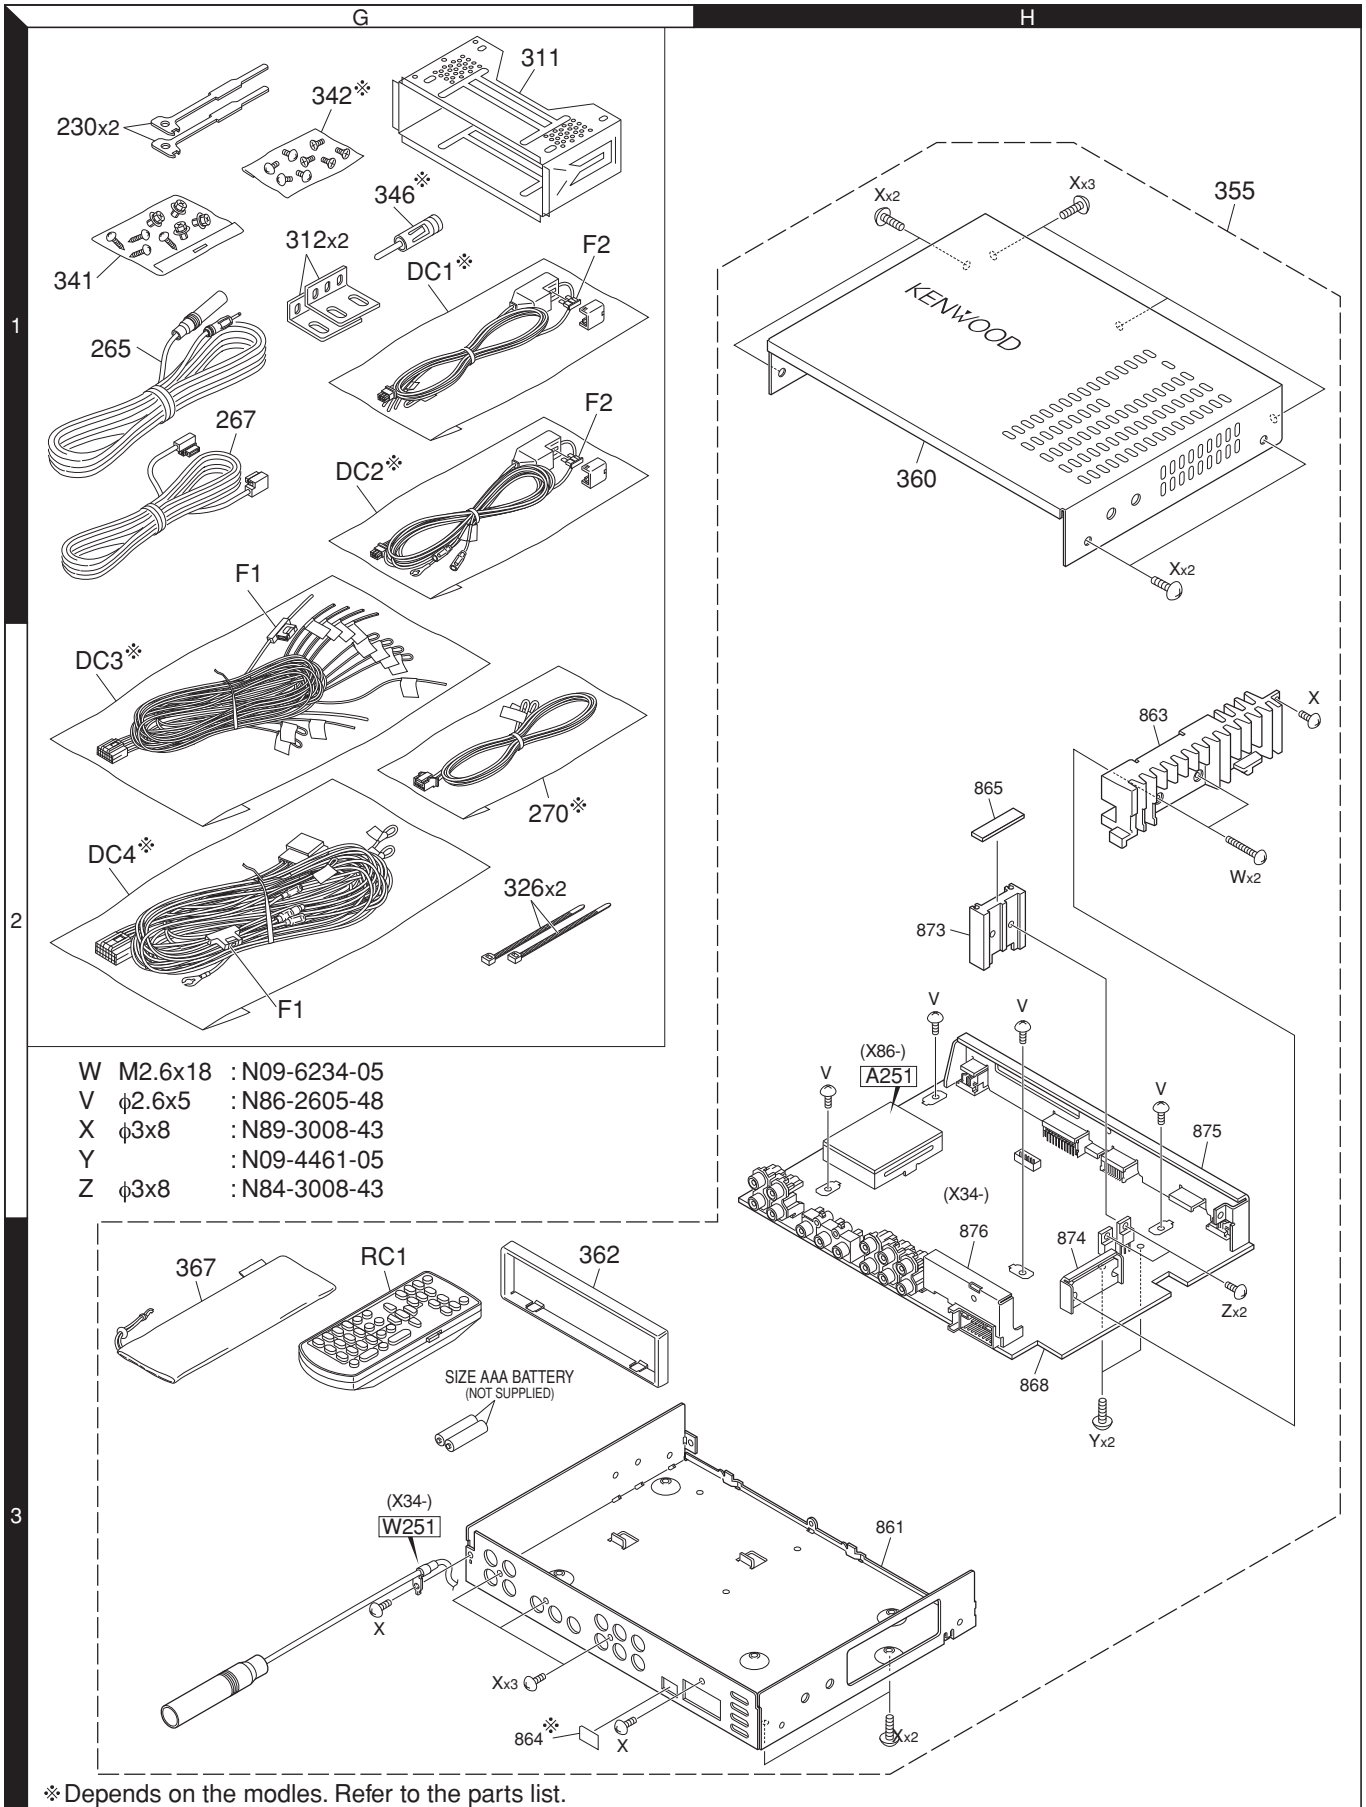

Parts with the exploded numbers larger than 700 are not supplied.

KVT-719DVD/729DVD /729DVDY/739DVD

PARTS LIST

* New parts

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
KVT-719DVD/729DVD/729DVDY/739DVD					
201	3F	*	A10-5164-02	CHASSIS CALKING ASSY	
202	2F	*	A10-5166-03	CHASSIS CALKING ASSY	
203	2F	*	A10-5168-03	CHASSIS CALKING ASSY	
206	3C	*	A11-1645-14	SUB CHASSIS CALKING ASSY	
208	1D	*	A21-6584-02	DRESSING PANEL	
209	1D	*	A21-6585-03	DRESSING PANEL	
211	3C	*	A22-3124-13	SUB PANEL ASSY	
214	1D	*	A46-1818-02	REAR COVER	
215	3C	*	A46-1849-01	REAR COVER	
PA1	1C	*	A64-4106-11	PANEL ASSY	K
PA1	1C	*	A64-4107-11	PANEL ASSY	R1
PA1	1C	*	A64-4108-11	PANEL ASSY	E1E2
PA1	1C	*	A64-4109-11	PANEL ASSY	M1X1
PA2	3C	*	A64-4116-02	PANEL ASSY	KR1X1
PA2	3C	*	A64-4117-02	PANEL ASSY	E1E2M1
PME1	1D	*	A10-5171-01	CHASSIS ASSY	
-			B46-0606-04	ID CARD	KR1
-			B46-0612-14	ID CARD	E1E2M1
-			B46-0612-14	ID CARD	X1
-		*	B54-4513-00	INSTALLATION MANUAL (ENG.SPA.)	KR1
-		*	B54-4514-00	INSTALLATION MANUAL (FRE.)	K
-		*	B54-4515-00	INSTALLATION MANUAL (POR.)	R1
-		*	B54-4516-00	INSTALLATION MANUAL (ENG.)	E1E2
-		*	B54-4517-00	INSTALLATION MANU (FRE.GER.DUT)	E1
-		*	B54-4517-00	INSTALLATION MANU (ITA.SPA.POR)	E1
-		*	B54-4518-00	INSTALLATION MANUAL (ENG.KOR.)	M1X1
-		*	B54-4519-00	INSTALLATION MANUAL (T-CHI.KOR)	M1
-		*	B59-1880-00	SUB-INSTRUCTION MANUAL	
-		*	B64-3569-00	INSTRUCTION MANUAL (ENG.)	KR1
-		*	B64-3570-00	INSTRUCTION MANUAL (FRE.)	K
-		*	B64-3571-00	INSTRUCTION MANUAL (SPA.)	KR1
-		*	B64-3572-00	INSTRUCTION MANUAL (POR.)	R1
-		*	B64-3573-00	INSTRUCTION MANUAL (ENG.)	E1E2
-		*	B64-3574-00	INSTRUCTION MANUAL (FRE.)	E1
-		*	B64-3575-00	INSTRUCTION MANUAL (GER.)	E1
-		*	B64-3576-00	INSTRUCTION MANUAL (DUT.)	E1
-		*	B64-3577-00	INSTRUCTION MANUAL (ITA.)	E1
-		*	B64-3578-00	INSTRUCTION MANUAL (SPA.)	E1
-		*	B64-3579-00	INSTRUCTION MANUAL (POR.)	E1
-		*	B64-3580-00	INSTRUCTION MANUAL (ENG.)	M1X1
-		*	B64-3581-00	INSTRUCTION MANUAL (T-CHI.)	M1
-		*	B64-3582-00	INSTRUCTION MANUAL (KOR.)	M1
218	1C	*	B07-3202-02	ESCUTCHEON	K
218	1C	*	B07-3203-02	ESCUTCHEON	R1M1X1
218	1C	*	B07-3204-02	ESCUTCHEON	E1E2
220	3C	*	B10-4955-03	FRONT GLASS	
221	3F	*	B11-1453-04	REFLECTION SHEET	
222	3C	*	B19-2330-04	LIGHTING BOARD	
225	1C	*	B43-1518-04	BADGE	
226	1C	*	B43-1527-04	BADGE	
LCD1	2C	*	B38-1176-05	LCD	
230	1G		D10-4674-04	LEVER	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
234	3C	*	D10-4727-03*A	ARM	
235	3C	*	D10-4728-04*A	ARM	
236	3C	*	D10-4729-04*A	LEVER	
238	2F	*	D10-4836-03	ARM ASSY	
239	2F	*	D10-4837-04	LEVER ASSY	
240	2E	*	D10-4840-03	ARM	
242	3C	*	D13-2280-04*A	GEAR	
243	3F	*	D13-2335-03	RACK (GEAR)	
244	3F	*	D13-2336-03	RACK (GEAR)	
246	1F	*	D13-2338-04	GEAR	
247	1F	*	D13-2339-04	GEAR	
248	2F	*	D13-2340-04	GEAR	
249	1F	*	D13-2341-04	GEAR	
250	1F	*	D13-2342-04	GEAR	
251	1F	*	D13-2343-04	GEAR	
252	1E	*	D13-2344-04	GEAR	
253	2F	*	D13-2345-04	GEAR	
254	2F	*	D13-2346-04	GEAR	
256	1F	*	D13-2349-04	GEAR	
257	1F	*	D13-2350-04	GEAR	
258	1F	*	D13-2351-04	GEAR	
260	2F	*	D21-2446-03	SHAFT	
261	3C		D39-0239-05	DAMPER	
263	3C	*	E29-2109-04	LEAD PLATE	
265	2G	*	E30-6483-05	CORD WITH PLUG	
267	1G	*	E30-6688-05	CORD WITH PLUG	
268	3D	*	E30-6689-05	CORD WITH PLUG	
269	3D	*	E30-6690-05	CORD WITH PLUG	
270	2G	*	E30-6693-05	CORD WITH PLUG	
DC1	1G	*	E30-6675-05	DC CORD	M1X1
DC1	1G	*	E30-6675-05	DC CORD	KR1M1
DC2	1G	*	E30-6676-15	DC CORD	X1
DC3	1G	*	E30-6680-05	DC CORD	E1E2
DC3	1G	*	E30-6680-05	DC CORD	KR1M1
DC3	1G	*	E30-6680-05	DC CORD	X1
DC4	1G	*	E30-6681-15	DC CORD	E1E2
FC1	2F	*	E39-0665-05	FLAT CABLE	
FC2	3D	*	E39-0906-05	FLAT CABLE	
FC3	3D	*	E39-0907-05	FLAT CABLE	
FC4	3D	*	E39-0908-05	FLAT CABLE	
272	1D	*	F07-1184-04	COVER	
274	2C	*	F09-1802-04	SHEET	
276	1D	*	F09-2865-04	SHEET	
277	2D	*	F09-2866-04	SHEET	
278	1D	*	F09-2867-04	SHEET	
279	1D	*	F09-2868-04	SHEET	
282	3D	*	F09-2890-04	CAP	
284	2C	*	F12-0775-04	SHIELDING SHEET	
290	2C	*	F20-2401-03	INSULATING SHEET	
F1	1G		F06-1032-05	FUSE 10A	
F2	1G		F52-0004-05	MINI FUSE 5A	
292	2F	*	G01-3222-04	COMPRESSION SPRING	
293	3F	*	G01-3223-04	TORSION COIL SPRING	
294	3F	*	G01-3224-04	TORSION COIL SPRING	

E1 : KVT-729DVD **E2** : KVT-729DVDY (Europe)
K : KVT-719DVD (North America) **R1** : KVT-739DVD (Latin America)
X1 : KVT-739DVD (Australia) **M1** : KVT-739DVD (Other Areas)

△ Indicates safety critical components.

PARTS LIST

KVT-719DVD/729DVD/729DVDY/739DVD

Ref. No.	Add	New	Parts No.	Description	Destination
295	2F	*	G01-3225-04	EXTENSION SPRING	
296	2F	*	G01-3226-04	COMPRESSION SPRING	
297	3C		G01-3265-04	TORSION COIL SPRING	
298	3C		G01-3266-04	COMPRESSION SPRING	
299	3C		G01-3267-04	TORSION COIL SPRING	
302	2E	*	G11-3587-04	CUSHION	K M1X1 E1 E2 R1
-		*	H54-4026-03	ITEM CARTON CASE	
-		*	H54-4027-03	ITEM CARTON CASE	
-		*	H54-4028-03	ITEM CARTON CASE	
-		*	H54-4029-03	ITEM CARTON CASE	
-		*	H54-4064-03	ITEM CARTON CASE	
308	2E	*	J19-7004-03	HOLDER	
309	2F	*	J19-7005-04	STABILIZER	
310	2F	*	J19-7007-03	HOLDER	
311	1G		J21-9823-03	MOUNTING HARDWARE ASSY	
312	1G		J22-0054-14	MOUNTING HARDWARE	
314	3E	*	J22-0198-02	MOUNTING HARDWARE ASSY	
316	1F	*	J22-0200-04	MOUNTING HARDWARE ASSY	
318	1F	*	J22-0202-04	MOUNTING HARDWARE ASSY	
319	1F	*	J22-0203-03	MOUNTING HARDWARE ASSY	
319	1F	*	J22-0212-04	MOUNTING HARDWARE	
320	1F	*	J22-0206-03	MOUNTING HARDWARE ASSY	
324	2D	*	J32-1373-04	HEXAGON BOSS	
325	3C	*	J39-0864-04	SPACER	
326	2G		J61-0620-05	WIRE BAND	
328	2F	*	J90-1092-03	GUIDE	
329	2E	*	J90-1093-03	GUIDE	
FPC1	2D	*	J86-0033-15	FPC (LEAD FREE)	
FPC2	1D	*	J86-0038-05	FPC (LEAD FREE)	
331	3C		K24-4346-04	PUSH KNOB (RELEASE)	
332	3C	*	K24-4673-03	PUSH KNOB (SRC)	
333	2C	*	K24-4680-03	PUSH KNOB (M.CTRL)	
334	3C	*	K24-4681-04	PUSH KNOB (RESET)	
335	3C	*	K24-4682-13	PUSH KNOB (EJECT)	
336	3C	*	K25-1871-03	PUSH KNOB (VOL)	
337	3C	*	K25-1872-03	PUSH KNOB (ATT.AUTO)	
338	2C	*	K25-1875-02	PUSH KNOB (OPEN-SCRN)	KR1M1 X1
339	3C	*	K28-0221-04	KEY TOP (4WAY)	
341	1G		N99-1753-05	SCREW SET	
342	1G		N99-1775-05	SCREW SET	
342	1G		N99-1775-05	SCREW SET	
A	2E	*	N09-6205-05	STEPPED SCREW	
B	1F	*	N09-6206-05	MACHINE SCREW (M2X2.2)	
C	2E	*	N09-6207-05	MACHINE SCREW (M2X3.5)	
D	3F	*	N09-6211-05	STEPPED SCREW	
E	3F	*	N09-6225-05	MACHINE SCREW	
F	2D		N09-6227-15	MACHINE SCREW (M2.6X 3.2NI)	
G	3C		N09-6236-05	SEMS (TAPTITE SCREW)(2.0X 5)	
H	1F	*	N09-6270-05	MACHINE SCREW (M1.7X2.2)	
J	1D	*	N09-6302-04	MACHINE SCREW	
K	1D	*	N09-6303-04	MACHINE SCREW	
L	3C		N09-6355-05	MACHINE SCREW (M2.0X4)	
M	3C		N19-2022-04	FLAT WASHER (1.6X3.2X0.25)	

Ref. No.	Add	New	Parts No.	Description	Destination
N	1F	*	N19-2195-04	FLAT WASHER (1.6X4X0.25 BL)	
P	1F	*	N19-2303-04	FLAT WASHER	
Q	2E	*	N29-0538-04	RETAINING RING (2)	
R	2D		N35-2605-47	BINDING HEAD MACHINE SCREW	
S	3C		N80-2006-43	PAN HEAD TAPTITE SCREW	
T	3C		N82-2005-48	BINDING HEAD TAPTITE SCREW	
U	1D	*	N82-2007-47	BINDING HEAD TAPTITE SCREW	
V	3D		N86-2605-48	BINDING HEAD TAPTITE SCREW	
344	2C	*	S79-0858-05	SWITCH ASSY (7INCH/T0.7)	E1E2
346	2G		T90-0552-05	ANTENNA ADAPTOR	
PM1	1F	*	T42-1097-04	MOTOR ASSY	
PM2	1F	*	T42-1099-04	MOTOR ASSY	
347	2F	*	W02-5121-05	ELECTRIC CIRCUIT MODULE	
348	1F	*	W02-5122-05	ELECTRIC CIRCUIT MODULE	K M1 X1 E1E2 R1
355	1H	*	X90-4240-10	TUNER ASSY	
355	1H	*	X90-4240-21	TUNER ASSY	
355	1H	*	X90-4240-71	TUNER ASSY	
355	1H	*	X90-4242-71	TUNER ASSY	
355	1H	*	X90-4243-21	TUNER ASSY	
VME1	2C	*	X92-5920-00	DVD MECHANISM ASSY (DVS-8530V)	
TUNER ASSY (X90-424x-xx)					
360	1H	*	A01-4425-11	METALLIC CABINET	M1X1 KR1E1 E2 M1X1 KR1E1
360	1H	*	A01-4432-11	METALLIC CABINET	
360	1H	*	A01-4432-11	METALLIC CABINET	
RC1	2G	*	A70-2082-15	REMOTE CONTROLLER AS (RC-DV330)	
RC1	2G	*	A70-2083-15	REMOTE CONTROLLER AS (RC-DV340)	
RC1	2G	*	A70-2083-15	REMOTE CONTROLLER AS (RC-DV340)	E2
362	3G		B07-3159-02	ESCUTCHEON	
V	2H		N86-2605-48	BINDING HEAD TAPTITE SCREW	
W	2H		N09-6234-05	MACHINE SCREW (M2.6X18)	
X	1H		N89-3008-43	BINDING HEAD TAPTITE SCREW	
367	3G		W01-1661-05	CARRYING CASE	
VIDEO CONTROL UNIT (X14-983x-xx)					
C1			C90-5670-05	ELECTRO	2200UF 16WV
C2,3			CK73GB1H104K	CHIP C	0.10UF K
C4			CK73FB1E474K	CHIP C	0.47UF K
C5			CE32BF1C221M	CHIP EL	220UF 16WV
C6			CE32BF0J101M	CHIP EL	100UF 6.3WV
C7			CK73FB0J106K	CHIP C	10UF K
C8			CK73GB1H104K	CHIP C	0.10UF K
C10			CK73EB1A106K	CHIP C	10UF K
C11			CK73GB1H103K	CHIP C	0.010UF K
C12			CK73EB1A106K	CHIP C	10UF K
C13			CK73GB1H103K	CHIP C	0.010UF K
C14			CE32BJ1C100M	CHIP EL	10UF 16WV
C16			CK73EB1C106K	CHIP C	10UF K
C17			CK73GB1H103K	CHIP C	0.010UF K
C19			CE32BF1E101M	CHIP EL	100UF 25WV
C20			CK73GB1H104K	CHIP C	0.10UF K
C22			CK73FB0J106K	CHIP C	10UF K

E1 : KVT-729DVD E2 : KVT-729DVDY (Europe)
K : KVT-719DVD (North America) R1 : KVT-739DVD (Latin America)
X1 : KVT-739DVD (Australia) M1 : KVT-739DVD (Other Areas)

△ Indicates safety critical components.

PARTS LIST

VIDEO CONTROL UNIT (X14-983x-xx)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation	Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
C23			CK73GB1A105K	CHIP C 1.0UF K		C161,162			CK73GB1H104K	CHIP C 0.10UF K	
C24			CK73EB1C106K	CHIP C 10UF K		C163,164			CK73GB1H103K	CHIP C 0.010UF K	
C27,28			CK73GB1H104K	CHIP C 0.10UF K		C165			C93-1367-05	CHIP C 10UF K	
C29			CK73FB0J106K	CHIP C 10UF K		C167-170			CK73GB1H102K	CHIP C 1000PF K	
C34			CK73FB0J106K	CHIP C 10UF K		C171		*	CE32AV0J221M	CHIP EL 220UF 6.3WV	
C92			CK73GB1H103K	CHIP C 0.010UF K		C172-174			CK73GB1H103K	CHIP C 0.010UF K	
C93			CK73GB1H104K	CHIP C 0.10UF K		C175			C93-1367-05	CHIP C 10UF K	
C94			CK73GB1H103K	CHIP C 0.010UF K		C177-180			CK73GB1H102K	CHIP C 1000PF K	
C95			CK73GB1H104K	CHIP C 0.10UF K		C181		*	CE32AV0G331M	CHIP EL 330UF 4.0WV	
C96			CK73GB1H103K	CHIP C 0.010UF K		C182			CK73GB1H103K	CHIP C 0.010UF K	
C97			CK73GB1H104K	CHIP C 0.10UF K		C183,184			CK73GB1H102K	CHIP C 1000PF K	
C98			CK73GB1H103K	CHIP C 0.010UF K		C185			CK73FB0J106K	CHIP C 10UF K	
C99			CK73GB1H104K	CHIP C 0.10UF K		C186,187			CK73GB1H104K	CHIP C 0.10UF K	
C101			CK73GB1H473K	CHIP C 0.047UF K		C188			CK73FB0J106K	CHIP C 10UF K	
C102			CK73GB1H102K	CHIP C 1000PF K		C189-200			CK73GB1H104K	CHIP C 0.10UF K	
C104			CC73GCH1H221J	CHIP C 220PF J		C201			CK73FB0J106K	CHIP C 10UF K	
C105			CK73GB1H102K	CHIP C 1000PF K		C202			CK73GB1H103K	CHIP C 0.010UF K	
C106			CK73GB1H103K	CHIP C 0.010UF K		C203			CK73GB1H104K	CHIP C 0.10UF K	
C107,108			CC73GCH1H101J	CHIP C 100PF J		C204			CK73FB0J475K	CHIP C 4.7UF K	
C109			CK73GB1H223K	CHIP C 0.022UF K		C205			CK73GB1H104K	CHIP C 0.10UF K	
C110			CC73GCH1H470J	CHIP C 47PF J		C206			CC73GCH1H220J	CHIP C 22PF J	
C111			CK73GB1H103K	CHIP C 0.010UF K		C207			CC73GCH1H180J	CHIP C 18PF J	
C112			CK73GB1H102K	CHIP C 1000PF K		C208,209			CK73GB1H104K	CHIP C 0.10UF K	
C114			CC73GCH1H221J	CHIP C 220PF J		C210			CK73GB1H103K	CHIP C 0.010UF K	
C115			CK73GB1H473K	CHIP C 0.047UF K		C212			CK73GB1H104K	CHIP C 0.10UF K	
C116			CK73GB1H104K	CHIP C 0.10UF K		C213			CK73GB1H221K	CHIP C 220PF K	
C117			CK73FB0J106K	CHIP C 10UF K		C214-217			CE32BM1E470M	CHIP EL 47UF 25WV	
C118			CK73GB1H104K	CHIP C 0.10UF K		C260			CK73GB1H102K	CHIP C 1000PF K	
C119			CK73EB1E225K	CHIP C 2.2UF K		C301			CK73GB1A105K	CHIP C 1.0UF K	
C120,121			CK73GB1H104K	CHIP C 0.10UF K		C303-305			CK73FB0J106K	CHIP C 10UF K	
C122,123			CK73GB1H103K	CHIP C 0.010UF K		C306			CK73GB1H104K	CHIP C 0.10UF K	
C124			C93-1367-05	CHIP C 10UF K		C307-312			CK73GB1H103K	CHIP C 0.010UF K	
C126-129			CK73GB1H102K	CHIP C 1000PF K		C313			CC73GCH1H821J	CHIP C 820PF J	
C130		*	CE32AV0J221M	CHIP EL 220UF 6.3WV		C314			CK73GB1A105K	CHIP C 1.0UF K	
C131-133			CK73GB1H103K	CHIP C 0.010UF K		C315			CK73EB1A106K	CHIP C 10UF K	
C134			C93-1367-05	CHIP C 10UF K		C316			CK73GB1A105K	CHIP C 1.0UF K	
C136-139			CK73GB1H102K	CHIP C 1000PF K		C317			CK73GB1H682K	CHIP C 6800PF K	
C140		*	CE32AV1A121M	CHIP EL 120UF 10WV		C319			CK73GB1H104K	CHIP C 0.10UF K	
C141			CK73GB1H103K	CHIP C 0.010UF K		C321			CK73GB1H103K	CHIP C 0.010UF K	
C142			CK73GB1H473K	CHIP C 0.047UF K		C322			CC73GCH1H050C	CHIP C 5.0PF C	
C143			CK73GB1H102K	CHIP C 1000PF K		C323			CK73GB1A474K	CHIP C 0.47UF K	
C145			CC73GCH1H221J	CHIP C 220PF J		C324			CK73GB1H103K	CHIP C 0.010UF K	
C146			CK73GB1H102K	CHIP C 1000PF K		C325			CC73GCH1H080D	CHIP C 8.0PF D	E1E2M1
C147			CK73GB1H103K	CHIP C 0.010UF K		C325			CC73GCH1H080D	CHIP C 8.0PF D	X1
C148			CC73GCH1H101J	CHIP C 100PF J		C327-329			CK73FB0J106K	CHIP C 10UF K	
C149			CC73GCH1H470J	CHIP C 47PF J		C330			CK73GB1H104K	CHIP C 0.10UF K	
C150			CK73GB1H153K	CHIP C 0.015UF K		C331			C93-1403-05	CHIP C 22UF M	
C151			CC73GCH1H470J	CHIP C 47PF J		C333-335			CK73EB1C106K	CHIP C 10UF K	
C152			CK73GB1H223K	CHIP C 0.022UF K		C336,337			CK73GB1H104K	CHIP C 0.10UF K	
C153			CK73GB1H102K	CHIP C 1000PF K		C338			CK73GB1H102K	CHIP C 1000PF K	
C155			CC73GCH1H221J	CHIP C 220PF J		C339,340			CK73GB1H103K	CHIP C 0.010UF K	
C156,157			CK73GB1H104K	CHIP C 0.10UF K		C341			CC73GCH1H390J	CHIP C 39PF J	
C158			CK73FB0J106K	CHIP C 10UF K		C342			CK73GB1H103K	CHIP C 0.010UF K	
C159			CK73GB1H104K	CHIP C 0.10UF K		C343			CK73EB1A106K	CHIP C 10UF K	
C160			CK73EB1E225K	CHIP C 2.2UF K		C344			CK73GB1H103K	CHIP C 0.010UF K	

E1 : KVT-729DVD E2 : KVT-729DVDY (Europe)
K : KVT-719DVD (North America) R1 : KVT-739DVD (Latin America)
X1 : KVT-739DVD (Australia) M1 : KVT-739DVD (Other Areas)

△ Indicates safety critical components.

PARTS LIST

VIDEO CONTROL UNIT (X14-983x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination	Ref. No.	Add	New	Parts No.	Description	Destination
C348			CK73GCH1H101J	CHIP C 100PF J		C551,552			CK73FB0J106K	CHIP C 10UF K	
C350-352			CK73FB0J106K	CHIP C 10UF K		C553,554			CK73GB1H104K	CHIP C 0.10UF K	
C353-355			CK73GB1H102K	CHIP C 1000PF K		CN301			E41-2065-05	FLAT CABLE CONNECTOR	
C356			CK73EB1C106K	CHIP C 10UF K		CN401	*		E41-2806-05	PIN ASSY	
C358			CK73GB1H103K	CHIP C 0.010UF K		CN501			E41-2237-05	FLAT CABLE CONNECTOR (60P)	
C359			CK73GB1H104K	CHIP C 0.10UF K		CN502			E41-2197-05	FLAT CABLE CONNECTOR (50P)	
C361			CK73GB1H103K	CHIP C 0.010UF K		CN503	*		E41-2410-05	FLAT CABLE CONNECTOR (22P)	
C362			CK73GB1H104K	CHIP C 0.10UF K		J1	*		E58-1065-05	RECTANGULAR RECEPTACLE (4P)	
C363			CK73GB1H103K	CHIP C 0.010UF K		J501			E11-0638-05	PHONE JACK	
C364			CK73GB1H104K	CHIP C 0.10UF K		J502	*		E58-1069-05	RECTANGULAR RECEPTACLE	
C400-403			CK73GB1A474K	CHIP C 0.47UF K		F301			F53-0297-05	FUSE (UL,CSA) 1.6A	
C404			CK73GB1H103K	CHIP C 0.010UF K		L2			L92-0373-05	CHIP FERRITE	
C405-407			CK73FB0J106K	CHIP C 10UF K		L3	*		L33-2369-05	CHOKE COIL	
C408			CK73GB1H104K	CHIP C 0.10UF K		L101	*		L33-2369-05	CHOKE COIL	
C409			CK73GB1H103K	CHIP C 0.010UF K		L102	*		L33-2370-05	CHOKE COIL	
C410-415			CK73GB1A105K	CHIP C 1.0UF K		L103	*		L33-2369-05	CHOKE COIL	
C416			CK73GB1H103K	CHIP C 0.010UF K		L104,105	*		L33-2370-05	CHOKE COIL	
C417-422			CK73GB1A105K	CHIP C 1.0UF K		L106	*		L33-2417-05	CHOKE COIL	
C423			CK73GB1H103K	CHIP C 0.010UF K		L107	*		L33-2369-05	CHOKE COIL	
C424-428			CK73GB1A105K	CHIP C 1.0UF K		L108	*		L33-2370-05	CHOKE COIL	
C429			CK73GB1H103K	CHIP C 0.010UF K		L201	*		L92-0319-05	CHIP FERRITE	
C430			CE32BQ0J331M	CHIP EL 330UF 6.3WV		L301-303			L41-1005-33	SMALL FIXED INDUCTOR (10U)	
C431,432			CK73GB1A105K	CHIP C 1.0UF K		L305			L41-1005-33	SMALL FIXED INDUCTOR (10U)	
C433,434			CK73GB1H103K	CHIP C 0.010UF K		L401-404			L92-0319-05	CHIP FERRITE	
C435			CK73EB1A106K	CHIP C 10UF K		L500			L41-1001-28	SMALL FIXED INDUCTOR (10U)	
C440			CK73FB0J106K	CHIP C 10UF K		L501	*		L33-2369-05	CHOKE COIL	
C442-445			CK73FB0J106K	CHIP C 10UF K		X201			L78-1210-05	RESONATOR (4.95MHZ)	
C447,448			CK73FB0J106K	CHIP C 10UF K		X202	*		L77-2917-15	CRYSTAL RESONATOR (32.768KHZ)	
C451,452			CK73GB1H102K	CHIP C 1000PF K		X301			L77-2905-05	CRYSTAL RESONATOR (3.579545MHZ)	
C463,464			CK73GB0J475K	CHIP C 4.7UF K		X302			L77-2906-05	CRYSTAL RESONATOR (4.433619MHZ)	
C465			CK73FB0J106K	CHIP C 10UF K		X302			L77-2906-05	CRYSTAL RESONATOR (4.433619MHZ)	E1E2M1 X1
C501-508			CK73GB1H104K	CHIP C 0.10UF K		CP401			RK74GB1J222J	CHIP-COM 2.2K J 1/16W	
C510-512			CK73GB1H104K	CHIP C 0.10UF K		CP402,403			RK74GB1J103J	CHIP-COM 10K J 1/16W	
C513,514			CK73FB1A225K	CHIP C 2.2UF K		R1,2	*		RK73EB2E622J	CHIP R 6.2K J 1/4W	
C515,516			CK73GB1H103K	CHIP C 0.010UF K		R3			RK73GB2A153J	CHIP R 15K J 1/10W	
C517			CK73FB0J106K	CHIP C 10UF K		R4			RK73GB2A912J	CHIP R 9.1K J 1/10W	
C518			CK73GB1H103K	CHIP C 0.010UF K		R5			RK73GB2A473J	CHIP R 47K J 1/10W	
C519			CK73GB1H104K	CHIP C 0.10UF K		R6			RK73GH2A104D	CHIP R 100K D 1/10W	
C520			CK73FB0J106K	CHIP C 10UF K		R7			RK73GH2A513D	CHIP R 51K D 1/10W	
C521			CK73GB1H104K	CHIP C 0.10UF K		R8			RK73GH2A333D	CHIP R 33K D 1/10W	
C523			CK73GCH1H101J	CHIP C 100PF J		R9,10			RK73GB2A224J	CHIP R 220K J 1/10W	
C528			CK73GB1H104K	CHIP C 0.10UF K		R11			RK73GH2A113D	CHIP R 11K D 1/10W	
C529-534			CK73GB1H103K	CHIP C 0.010UF K		R12			RK73GH2A104D	CHIP R 100K D 1/10W	
C535			CK73GB1H104K	CHIP C 0.10UF K		R13			RK73GH2A683D	CHIP R 68K D 1/10W	
C539	*		CE32AV0J121M	CHIP EL 120UF 6.3WV		R14,15			RK73GH2A334D	CHIP R 330K D 1/10W	
C540			CK73GB1H104K	CHIP C 0.10UF K		R16,17			RK73GB2A224J	CHIP R 220K J 1/10W	
C541			CK73GB1H103K	CHIP C 0.010UF K		R18			RK73GB2A000J	CHIP R 0.0 J 1/10W	
C542			CK73GB1H104K	CHIP C 0.10UF K		R19			RK73GB2A224J	CHIP R 220K J 1/10W	
C543			CK73GB1H103K	CHIP C 0.010UF K		R22			RK73GB2A224J	CHIP R 220K J 1/10W	
C544			CK73GB1H104K	CHIP C 0.10UF K		R24			RK73GB2A303J	CHIP R 30K J 1/10W	
C545			CK73GB1H103K	CHIP C 0.010UF K		R25			RK73GB2A224J	CHIP R 220K J 1/10W	
C546			CK73GB1H104K	CHIP C 0.10UF K		R26			RK73GB2A202J	CHIP R 2.0K J 1/10W	
C547			CK73GB1H103K	CHIP C 0.010UF K		R27,28			RK73GB2A224J	CHIP R 220K J 1/10W	
C548			CK73GB1H104K	CHIP C 0.10UF K							
C549			CK73GB1H103K	CHIP C 0.010UF K							

E1 : KVT-729DVD E2 : KVT-729DVDY (Europe)
K : KVT-719DVD (North America) R1 : KVT-739DVD (Latin America)
X1 : KVT-739DVD (Australia) M1 : KVT-739DVD (Other Areas)

△ Indicates safety critical components.

PARTS LIST

VIDEO CONTROL UNIT (X14-983x-xx)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
R29			RK73GB2A114J	CHIP R 110K J 1/10W	
R34			RK73GB2A823J	CHIP R 82K J 1/10W	
R35			RK73GB2A103J	CHIP R 10K J 1/10W	
R36			RK73GB2A224J	CHIP R 220K J 1/10W	
R37			RK73GB2A333J	CHIP R 33K J 1/10W	
R38			RK73GB2A224J	CHIP R 220K J 1/10W	
R39			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R40			RK73GB2A153J	CHIP R 15K J 1/10W	
R41			RK73GB2A272J	CHIP R 2.7K J 1/10W	
R42			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R43			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R44			RK73GB2A561J	CHIP R 560 J 1/10W	
R50			RK73GB2A302J	CHIP R 3.0K J 1/10W	
R51			RK73GB2A332J	CHIP R 3.3K J 1/10W	
R52			RK73GB2A272J	CHIP R 2.7K J 1/10W	
R53			RK73GB2A393J	CHIP R 39K J 1/10W	
R54			RK73GB2A113J	CHIP R 11K J 1/10W	
R55			RK73GB2A302J	CHIP R 3.0K J 1/10W	
R56			RK73GB2A332J	CHIP R 3.3K J 1/10W	
R57			RK73GB2A272J	CHIP R 2.7K J 1/10W	
R58			RK73GB2A393J	CHIP R 39K J 1/10W	
R59			RK73GB2A113J	CHIP R 11K J 1/10W	
R60			RK73GB2A223J	CHIP R 22K J 1/10W	
R61,62			RK73GB2A103J	CHIP R 10K J 1/10W	
R65			RK73GB2A153J	CHIP R 15K J 1/10W	
R66			RK73GB2A302J	CHIP R 3.0K J 1/10W	
R67			RK73GB2A332J	CHIP R 3.3K J 1/10W	
R68			RK73GB2A272J	CHIP R 2.7K J 1/10W	
R69			RK73GB2A333J	CHIP R 33K J 1/10W	
R70			RK73GB2A203J	CHIP R 20K J 1/10W	
R73,74			RK73GB2A101J	CHIP R 100 J 1/10W	
R76,77			RK73GB2A101J	CHIP R 100 J 1/10W	
R89			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R102,103			RK73GH2A561D	CHIP R 560 D 1/10W	
R104			RK73GH2A333D	CHIP R 33K D 1/10W	
R105			RK73GH2A622D	CHIP R 6.2K D 1/10W	
R106			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R107			RK73GH2A113D	CHIP R 11K D 1/10W	
R108			RK73GB2A103J	CHIP R 10K J 1/10W	
R111			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R112			RK73GB2A333J	CHIP R 33K J 1/10W	
R114			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R115			RK73GB2A683J	CHIP R 68K J 1/10W	
R116			RK73GH2A333D	CHIP R 33K D 1/10W	
R117			RK73GH2A562D	CHIP R 5.6K D 1/10W	
R118			RK73GH2A681D	CHIP R 680 D 1/10W	
R120			RK73EB2E100J	CHIP R 10 J 1/4W	
R121			RK73GB2A220J	CHIP R 22 J 1/10W	
R122-124			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R125,126			RK73EB2E100J	CHIP R 10 J 1/4W	
R127		*	R92-5158-05	CHIP R 0.022 J 1/4W	
R129			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R130			RK73GB2A220J	CHIP R 22 J 1/10W	
R131			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R132,133			RK73GH2A561D	CHIP R 560 D 1/10W	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
R134,135			RK73EB2E100J	CHIP R 10 J 1/4W	
R136,137		*	R92-5160-05	CHIP R 0.047 J 1/4W	
R138			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R143			RK73GH2A333D	CHIP R 33K D 1/10W	
R144			RK73GH2A103D	CHIP R 10K D 1/10W	
R145			RK73GH2A561D	CHIP R 560 D 1/10W	
R146			RK73GB2A103J	CHIP R 10K J 1/10W	
R149			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R150			RK73GB2A683J	CHIP R 68K J 1/10W	
R152			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R153			RK73GB2A683J	CHIP R 68K J 1/10W	
R154			RK73GH2A333D	CHIP R 33K D 1/10W	
R155			RK73GH2A562D	CHIP R 5.6K D 1/10W	
R156			RK73GH2A681D	CHIP R 680 D 1/10W	
R158			RK73EB2E100J	CHIP R 10 J 1/4W	
R159			RK73GB2A220J	CHIP R 22 J 1/10W	
R160-162			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R163,164			RK73EB2E100J	CHIP R 10 J 1/4W	
R165,166		*	R92-5158-05	CHIP R 0.022 J 1/4W	
R167			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R168			RK73GB2A220J	CHIP R 22 J 1/10W	
R169-171			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R172,173			RK73EB2E100J	CHIP R 10 J 1/4W	
R175		*	R92-5159-05	CHIP R 0.033 J 1/4W	
R176			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R188			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R201			RK73GB2A473J	CHIP R 47K J 1/10W	
R202,203			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R204-208			RK73GB2A101J	CHIP R 100 J 1/10W	
R209,210			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R211			RK73GB2A103J	CHIP R 10K J 1/10W	
R212			RK73GB2A332J	CHIP R 3.3K J 1/10W	
R213			RK73GB2A473J	CHIP R 47K J 1/10W	
R214			RK73GB2A104J	CHIP R 100K J 1/10W	
R215			RK73GB2A473J	CHIP R 47K J 1/10W	
R216-227			RK73GB2A101J	CHIP R 100 J 1/10W	
R228,229			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R230			RK73GB2A104J	CHIP R 100K J 1/10W	
R231-233			RK73GB2A473J	CHIP R 47K J 1/10W	
R234-236			RK73GB2A101J	CHIP R 100 J 1/10W	
R237			RK73GB2A473J	CHIP R 47K J 1/10W	
R238-240			RK73GB2A101J	CHIP R 100 J 1/10W	
R241			RK73GB2A473J	CHIP R 47K J 1/10W	
R242-246			RK73GB2A101J	CHIP R 100 J 1/10W	
R247			RK73GB2A473J	CHIP R 47K J 1/10W	
R248			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R249,250			RK73GB2A473J	CHIP R 47K J 1/10W	
R251-253			RK73GB2A101J	CHIP R 100 J 1/10W	
R254			RK73GB2A473J	CHIP R 47K J 1/10W	
R255,256			RK73GB2A123J	CHIP R 12K J 1/10W	
R257			RK73GB2A473J	CHIP R 47K J 1/10W	
R258			RK73GB2A103J	CHIP R 10K J 1/10W	R1E1E2
R258			RK73GB2A103J	CHIP R 10K J 1/10W	X1
R258-261			RK73GB2A103J	CHIP R 10K J 1/10W	M1
R259			RK73GB2A303J	CHIP R 30K J 1/10W	X1

E1 : KVT-729DVD E2 : KVT-729DVDY (Europe)
K : KVT-719DVD (North America) R1 : KVT-739DVD (Latin America)
X1 : KVT-739DVD (Australia) M1 : KVT-739DVD (Other Areas)

△ Indicates safety critical components.

PARTS LIST

VIDEO CONTROL UNIT (X14-983x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination	Ref. No.	Add	New	Parts No.	Description	Destination
R259			RK73GB2A332J	CHIP R 3.3K J 1/10W	E1E2	R394			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R259-261			RK73GB2A103J	CHIP R 10K J 1/10W	K	R400-403			RK73EB2E100J	CHIP R 10 J 1/4W	
R260,261			RK73GB2A103J	CHIP R 10K J 1/10W	R1E1E2	R404			RK73GB2A100J	CHIP R 10 J 1/10W	
R260,261			RK73GB2A103J	CHIP R 10K J 1/10W	X1	R405			RK73GB2A202J	CHIP R 2.0K J 1/10W	
R262			RK73GB2A104J	CHIP R 100K J 1/10W		R410,411			RK73GB2A223J	CHIP R 22K J 1/10W	
R264			RK73GB2A103J	CHIP R 10K J 1/10W		R412			RK73GB2A202J	CHIP R 2.0K J 1/10W	
R265,266			RK73GB2A000J	CHIP R 0.0 J 1/10W		R413			RK73GB2A750J	CHIP R 75 J 1/10W	
R276			RK73GB2A473J	CHIP R 47K J 1/10W		R414			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R301			RK73GB2A102J	CHIP R 1.0K J 1/10W		R415			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R302			RK73GB2A101J	CHIP R 100 J 1/10W		R420			RK73GB2A103J	CHIP R 10K J 1/10W	
R303			RK73GB2A000J	CHIP R 0.0 J 1/10W		R421			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R304			RK73GB2A681J	CHIP R 680 J 1/10W		R422-424			RK73GB2A101J	CHIP R 100 J 1/10W	
R305			RK73GB2A222J	CHIP R 2.2K J 1/10W		R425-430			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R306			RK73GB2A000J	CHIP R 0.0 J 1/10W		R431			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R307			RK73GH2A183D	CHIP R 18K D 1/10W		R432-435			RK73GB2A101J	CHIP R 100 J 1/10W	
R308			RK73GB2A473J	CHIP R 47K J 1/10W		R436			RK73GB2A751J	CHIP R 750 J 1/10W	
R309			RK73GB2A000J	CHIP R 0.0 J 1/10W		R437			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R310			RK73GB2A561J	CHIP R 560 J 1/10W		R438			RK73GB2A101J	CHIP R 100 J 1/10W	
R311			RK73GB2A105J	CHIP R 1.0M J 1/10W		R439			RK73GB2A751J	CHIP R 750 J 1/10W	
R312			RK73GB2A000J	CHIP R 0.0 J 1/10W		R440			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R313			RK73GB2A105J	CHIP R 1.0M J 1/10W		R441			RK73GB2A101J	CHIP R 100 J 1/10W	
R316			RK73GH2A222D	CHIP R 2.2K D 1/10W		R442			RK73GB2A751J	CHIP R 750 J 1/10W	
R317			RK73GB2A822J	CHIP R 8.2K J 1/10W		R443			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R318			RK73GB2A562J	CHIP R 5.6K J 1/10W		R444			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R319			RK73GH2A681D	CHIP R 680 D 1/10W	E1E2M1	R445-448			RK73GB2A101J	CHIP R 100 J 1/10W	
R319			RK73GH2A681D	CHIP R 680 D 1/10W	X1	R449			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R320-322			RK73GB2A000J	CHIP R 0.0 J 1/10W		R450			RK73GB2A221J	CHIP R 220 J 1/10W	
R324			RK73GB2A103J	CHIP R 10K J 1/10W		R451			RK73GB2A101J	CHIP R 100 J 1/10W	
R325			RK73GB2A000J	CHIP R 0.0 J 1/10W		R452			RK73GB2A751J	CHIP R 750 J 1/10W	
R326			RK73GB2A103J	CHIP R 10K J 1/10W		R453			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R327-330			RK73GB2A101J	CHIP R 100 J 1/10W		R454			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R331			RK73GH2A473D	CHIP R 47K D 1/10W		R455-459			RK73GB2A101J	CHIP R 100 J 1/10W	
R332			RK73GB2A361J	CHIP R 360 J 1/10W		R460,461			RK73GB2A473J	CHIP R 47K J 1/10W	
R334			RK73GB2A361J	CHIP R 360 J 1/10W		R463,464			RK73EB2E101J	CHIP R 100 J 1/4W	
R335,336			RK73GB2A303J	CHIP R 30K J 1/10W		R500,501			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R337			RK73GB2A100J	CHIP R 10 J 1/10W		R504-515			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R338			RK73GB2A102J	CHIP R 1.0K J 1/10W		R518,519			RK73GB2A223J	CHIP R 22K J 1/10W	
R339			RK73GB2A000J	CHIP R 0.0 J 1/10W		R522			RK73GB2A101J	CHIP R 100 J 1/10W	
R342			RK73GB2A000J	CHIP R 0.0 J 1/10W		R525-527			RK73GB2A101J	CHIP R 100 J 1/10W	
R344			RK73GB2A222J	CHIP R 2.2K J 1/10W		R529,530			RK73GB2A471J	CHIP R 470 J 1/10W	
R345			RK73GH2A432D	CHIP R 4.3K D 1/10W		R531-533			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R346			RK73GH2A152D	CHIP R 1.5K D 1/10W		R534			RK73GB2A100J	CHIP R 10 J 1/10W	
R347			RK73GH2A104D	CHIP R 100K D 1/10W		R535			RK73GB2A151J	CHIP R 150 J 1/10W	
R348			RK73GH2A363D	CHIP R 36K D 1/10W		R536			RK73EB2E750J	CHIP R 75 J 1/4W	
R349			RK73GH2A104D	CHIP R 100K D 1/10W		R537,538			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R350			RK73GH2A363D	CHIP R 36K D 1/10W		R539,540			RK73GB2A473J	CHIP R 47K J 1/10W	
R351			RK73GH2A104D	CHIP R 100K D 1/10W		R542			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R352			RK73GH2A363D	CHIP R 36K D 1/10W		R551			RK73GB2A100J	CHIP R 10 J 1/10W	
R353-355			RK73GB2A362J	CHIP R 3.6K J 1/10W		R552			RK73GB2A473J	CHIP R 47K J 1/10W	
R356-361			RK73GH2A102D	CHIP R 1.0K D 1/10W		R553			RK73GB2A100J	CHIP R 10 J 1/10W	
R370,371			RK73GB2A101J	CHIP R 100 J 1/10W		R554			RK73GB2A473J	CHIP R 47K J 1/10W	
R372,373			RK73GB2A000J	CHIP R 0.0 J 1/10W		R555			RK73GB2A100J	CHIP R 10 J 1/10W	
R374-387			RK73GB2A101J	CHIP R 100 J 1/10W		R556			RK73GB2A473J	CHIP R 47K J 1/10W	
R388			RK73GB2A272J	CHIP R 2.7K J 1/10W		R557			RK73GB2A100J	CHIP R 10 J 1/10W	
R389			RK73GB2A222J	CHIP R 2.2K J 1/10W		R558			RK73GB2A473J	CHIP R 47K J 1/10W	

E1 : KVT-729DVD E2 : KVT-729DVDY (Europe)
K : KVT-719DVD (North America) R1 : KVT-739DVD (Latin America)
X1 : KVT-739DVD (Australia) M1 : KVT-739DVD (Other Areas)

△ Indicates safety critical components.

PARTS LIST

VIDEO CONTROL UNIT (X14-983x-xx)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation	Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
R559-565 R566 R567 R568-571 R572			RK73EB2E101J RK73EB2E102J RK73EB2E750J RK73GB2A750J RK73GB2A101J	CHIP R 100 J 1/4W CHIP R 1.0K J 1/4W CHIP R 75 J 1/4W CHIP R 75 J 1/10W CHIP R 100 J 1/10W		IC400 IC401 IC402 IC403,404 IC405		*	NJM2505AF-ZB NJM2794RB2ZB BU2090FS MM1234XFBE-E BA7649F	ANALOGUE IC ANALOGUE IC MOS-IC ANALOGUE IC ANALOGUE IC	
R573-575 R576 R577 R581 R582-585			RK73GB2A100J RK73GB2A102J RK73GB2A472J RK73GB2A000J RK73EB2E101J	CHIP R 10 J 1/10W CHIP R 1.0K J 1/10W CHIP R 4.7K J 1/10W CHIP R 0.0 J 1/10W CHIP R 100 J 1/4W		IC406 IC407,408 IC501,502 IC503 Q1,2			MM1508XNRE-E TC4052BFT LB1836M-TLM-E TC7SET04FU-F 2SC4081	ANALOGUE IC MOS-IC ANALOGUE IC MOS-IC TRANSISTOR	
R586 R587,588 R589 R590,591 R598			RK73EB2E102J RK73EB2E101J RK73GB2A103J RK73GB2A472J RK73GB2A101J	CHIP R 1.0K J 1/4W CHIP R 100 J 1/4W CHIP R 10K J 1/10W CHIP R 4.7K J 1/10W CHIP R 100 J 1/10W		Q3 Q4 Q5 Q6 Q7			2SA1576A 2SC4081 2SA1576A 2SC4081 DTA114EUA	TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR	
D1 D2 D3 D4 D101-104		*	1SR154-400 DAN202U UDZS6.2B EP05Q04 1SS357-F	DIODE DIODE ZENER DIODE DIODE DIODE		Q8 Q9 Q10 Q13 Q14			DTC114YUA DTA114TUA DTC114YUA 2SC4081 2SB1184	DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR TRANSISTOR	
D301 D310,311 D312,313 D314-324 D400			DAN202U AVRM1608120M6A AVRM1608180M6A AVRM1608120M6A AVRM1608270MAA	DIODE VARISTOR VARISTOR VARISTOR VARISTOR		Q15,16 Q17 Q19 Q20,21 Q22			2SC4081 2SA1576A DTC144EUA 2SA1576A TPC8110-F	TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR FET	
D401,402 D403 D404 D405 D406			AVRM1608120M6A DAP202U UDZS4.7B AVRM1608120M6A AVRM1608270MAA	VARISTOR DIODE ZENER DIODE VARISTOR VARISTOR		Q23 Q24 Q25 Q26 Q31			2SC4081 2SA1576A DTC114YUA 2SB1689 2SB1184	TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR TRANSISTOR	
D501 D502 D503 D504-508 D510-513			DAP202U AVRM1608270MAA DA204U STZ6.2N AVRM1608120M6A	DIODE VARISTOR DIODE ZENER DIODE VARISTOR		Q32 Q33 Q34 Q35 Q36			2SC4081 2SA1576A 2SC4081 2SB1184 2SC4081	TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR	
D514 D515-518 D523 D524 D528-536			AVRM1608180M6A AVRM1608120M6A AVRM1608120M6A AVRM1608180M6A AVRM1608270MAA	VARISTOR VARISTOR VARISTOR VARISTOR VARISTOR		Q37 Q38 Q43 Q44 Q45			2SA1576A 2SC4081 2SB1184 2SC4081 2SA1576A	TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR	
IC1 IC2 IC10 IC101,102 IC201		*	SI-3033KMS PQ1X331M2ZPH NJM4565V-ZB LTC3728LEGN 703261YGC315A	ANALOGUE IC ANALOGUE IC ANALOGUE IC ANALOGUE IC MICROCONTROLLER IC		Q46 Q101 Q103 Q104,105 Q106		*	2SC4081 DTC114YUA DTC144EUA HAT2218R-E DTC144EUA	TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR DUAL FET DIGITAL TRANSISTOR	
IC202 IC203 IC203 IC203 IC203		*	S1000N30N4T1G W05-1260-00 W05-1261-00 W05-1262-00 W05-1263-00	ANALOGUE IC ROM IC ROM IC ROM IC ROM IC	K E1E2 M1 R1X1	Q108 Q109,110 Q111 Q201 Q203		*	DTC144EUA HAT2218R-E DTC144EUA DTC144EUA DTA144EUA	DIGITAL TRANSISTOR DUAL FET DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR	
IC205 IC301 IC302 IC303 IC304			TC7SET08FU-F RB5P0090M TC7SET04FU-F TC7WH123FU-F TC7SH04FU-F	MOS-IC ANALOGUE IC MOS-IC MOS-IC MOS-IC		Q204 Q205 Q206 Q207 Q208,209			DTC114YUA DTB123YK DTC114YUA DTB123YK DTC114YUA	DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR	

E1 : KVT-729DVD E2 : KVT-729DVDY (Europe)
K : KVT-719DVD (North America) R1 : KVT-739DVD (Latin America)
X1 : KVT-739DVD (Australia) M1 : KVT-739DVD (Other Areas)

⚠ Indicates safety critical components.

PARTS LIST

VIDEO CONTROL UNIT (X14-983x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination
Q210 Q301 Q304 Q305 Q306-309			DTB123YK 2SC4081 UMZ1N DTC114YUA UMZ1N	DIGITAL TRANSISTOR TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR	
Q401 Q501,502 Q503 Q504 Q508			2SA1576A DTC323TU DTA114EUA 2SA1576A 2SC3437-F(Y)	TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR TRANSISTOR	
SWITCH UNIT (X16-3920-10)					
D101 D203 D205 D207-209 D221-225			B30-1713-05 B30-1713-05 B30-1740-05 B30-1767-05 B30-1605-05	LED (SR,TS) LED (SR,TS) LED (CL-270PG-C-TSL) LED LED (2COLOR PG/RED)	
C203 C204			CC73GCH1H221J CK73FB1A225K	CHIP C 220PF J CHIP C 2.2UF K	
CN101 J101 J201			E41-2366-05 E58-1008-05 E59-0843-05	FLAT CABLE CONNECTOR RECTANGULAR RECEPTACLE RECTANGULAR PLUG	
R101,102 R103-105 R106 R107 R201			RK73EB2E101J RK73EB2E102J RK73GB2A101J RK73EB2E102J RK73GB2A152J	CHIP R 100 J 1/4W CHIP R 1.0K J 1/4W CHIP R 100 J 1/10W CHIP R 1.0K J 1/4W CHIP R 1.5K J 1/10W	
R202 R203 R204 R205 R206			RK73GB2A181J RK73GB2A101J RK73GB2A331J RK73GB2A272J RK73GB2A332J	CHIP R 180 J 1/10W CHIP R 100 J 1/10W CHIP R 330 J 1/10W CHIP R 2.7K J 1/10W CHIP R 3.3K J 1/10W	
R207 R208 R209 R214 R216			RK73GB2A181J RK73GB2A331J RK73GB2A472J RK73EB2E101J RK73GB2A104J	CHIP R 180 J 1/10W CHIP R 330 J 1/10W CHIP R 4.7K J 1/10W CHIP R 100 J 1/4W CHIP R 100K J 1/10W	
R217 R219 R221 R224 R225			RK73EB2E101J RK73GB2A391J RK73EB2E471J RK73GB2A822J RK73GB2A153J	CHIP R 100 J 1/4W CHIP R 390 J 1/10W CHIP R 470 J 1/4W CHIP R 8.2K J 1/10W CHIP R 15K J 1/10W	
R226 R234,235 R236 R237 R238			RK73GB2A473J RK73GB2A222J RK73GB2A471J RK73FB2B471J RK73GB2A391J	CHIP R 47K J 1/10W CHIP R 2.2K J 1/10W CHIP R 470 J 1/10W CHIP R 470 J 1/8W CHIP R 390 J 1/10W	
R239,240			RK73GB2A471J	CHIP R 470 J 1/10W	
S201-206 S207 S208			S70-0901-05 S70-0874-05 S70-0901-05	TACT SWITCH TACT SWITCH TACT SWITCH	
D102 D103-106 D201			AVRM1608180M6A AVRM1005270MAA UDZS6.2B	VARISTOR VARISTOR ZENER DIODE	

Ref. No.	Add	New	Parts No.	Description	Destination
D217 D404-410 D411 IC201 Q101			AVRM1608120M6A AVRM1608180M6A DAP202U RS-181 DTC114YUA	VARISTOR VARISTOR DIODE ANALOGUE IC DIGITAL TRANSISTOR	
Q206			2SA1576A	TRANSISTOR	
ELECTRIC UNIT (X34-475x-xx)					
C1 C2 C4-6 C7 C8			C90-5612-05 CK73GB1H103K CK73FB1C105K CK73GB1H103K CD04AS1H3R3M	ELECTRO 3900UF 16WV CHIP C 0.010UF K CHIP C 1.0UF K CHIP C 0.010UF K ELECTRO 3.3UF 50WV	
C9 C10 C11-13 C14,15 C16,17			CK73FB1C105K CK73GB1H104K CK73GB1H103K CK73FB1E474K CK73GB1H473K	CHIP C 1.0UF K CHIP C 0.10UF K CHIP C 0.010UF K CHIP C 0.47UF K CHIP C 0.047UF K	M1X1
C51 C53 C54 C61 C62			CD04AY1E221M CD04AY1H100M CD04AY0J331M CK73GB1A105K CD04AY1E470M	ELECTRO 220UF 25WV ELECTRO 10UF 50WV ELECTRO 330UF 6.3WV CHIP C 1.0UF K ELECTRO 47UF 25WV	
C71 C72 C81 C91 C101			CK73GB1A105K CD04AY1A101M CK73EB1E105K CK73EB1E105K CD04BJ0J331M	CHIP C 1.0UF K ELECTRO 100UF 10WV CHIP C 1.0UF K CHIP C 1.0UF K ELECTRO 330UF 6.3WV	M1X1 M1X1
C103 C104,105 C106 C107-110 C112			CK73GB1H102K CK73GB1H104K CK73GB1A105K CK73GB1H104K CK73GB1H102K	CHIP C 1000PF K CHIP C 0.10UF K CHIP C 1.0UF K CHIP C 0.10UF K CHIP C 1000PF K	
C113-116 C201 C202 C203,204 C205,206			CK73GB1H103K CD04BJ1E470M CD04AS1V100M CC73GCH1H070D CD04AS1H3R3M	CHIP C 0.010UF K ELECTRO 47UF 25WV ELECTRO 10UF 35WV CHIP C 7.0PF D ELECTRO 3.3UF 50WV	
C207 C209-211 C212,213 C216 C223,224			CK73FB1C105K CD04AS1H010M CK73FB1C105K CK73GB1H103K CK73FB1E474K	CHIP C 1.0UF K ELECTRO 1UF 50WV CHIP C 1.0UF K CHIP C 0.010UF K CHIP C 0.47UF K	
C225,226 C227,228 C233 C234,235 C260-263			CD04AS1H2R2M CK73FB1E474K CD04AS1V100M CK73GB1H103K CK73GB1H103K	ELECTRO 2.2UF 50WV CHIP C 0.47UF K ELECTRO 10UF 35WV CHIP C 0.010UF K CHIP C 0.010UF K	
C264,265 C264,265 C266 C266 C267			CC73GCH1H100D CC73GCH1H100D CK73GB1H103K CK73GB1H103K CC73GCH1H331J	CHIP C 10PF D CHIP C 10PF D CHIP C 0.010UF K CHIP C 0.010UF K CHIP C 330PF J	KR1E1 E2M1 KR1E1 E2M1 KR1E1
C267 C268,269			CC73GCH1H331J CD04AS1V100M	CHIP C 330PF J ELECTRO 10UF 35WV	E2M1 KR1E1

E1 : KVT-729DVD E2 : KVT-729DVDY (Europe)
K : KVT-719DVD (North America) R1 : KVT-739DVD (Latin America)
X1 : KVT-739DVD (Australia) M1 : KVT-739DVD (Other Areas)

△ Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-475x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination
C268,269 C270 C270 C305,306 C311,312			CD04AS1V100M CK73GB1H103K CK73GB1H103K C90-6779-05 C90-6780-05	ELECTRO 10UF 35WV CHIP C 0.010UF K CHIP C 0.010UF K ELECTRO 0.47UF 16WV ELECTRO 1UF 16WV	E2M1 KR1E1 E2M1
C315,316 C317,318 C319 C351-354 C355			CK73GB1A105K C90-6779-05 CD04BM1E330M CK73GB1H104K CD04AS1V100M	CHIP C 1.0UF K ELECTRO 0.47UF 16WV ELECTRO 33UF 25WV CHIP C 0.10UF K ELECTRO 10UF 35WV	
C356,357 C358,359 C360,361 C362,363 C364,365			CK73GB1H102K CD04AS1V100M CK73GB1H102K CD04AS1V100M CK73GB1H102K	CHIP C 1000PF K ELECTRO 10UF 35WV CHIP C 1000PF K ELECTRO 10UF 35WV CHIP C 1000PF K	
C366,367 C368,369 C370 C371 C401			CD04AS1V100M CK73GB1H102K CD04AS1V100M CK73GB1H222K CD04AS1HR47M	ELECTRO 10UF 35WV CHIP C 1000PF K ELECTRO 10UF 35WV CHIP C 2200PF K ELECTRO 0.47UF 50WV	
C402 C403 C501,502 C505-509 C511			CD04BJ1E470M CD04AS1HR47M CK73GB1H103K CD04AS1H2R2M CD04BJ1E470M	ELECTRO 47UF 25WV ELECTRO 0.47UF 50WV CHIP C 0.010UF K ELECTRO 2.2UF 50WV ELECTRO 47UF 25WV	
C512,513 C514 C515 C517 C701-703			CD04AS1H2R2M CD04AS1V100M CD04BJ1E470M CD04AS1H2R2M CK73GB1A474K	ELECTRO 2.2UF 50WV ELECTRO 10UF 35WV ELECTRO 47UF 25WV ELECTRO 2.2UF 50WV CHIP C 0.47UF K	
C707 C708 C709 C710 C711			CD04BJ1E470M CK73GB1H103K CD04AS1C220M CK73GB1A474K CD04BJ1E470M	ELECTRO 47UF 25WV CHIP C 0.010UF K ELECTRO 22UF 16WV CHIP C 0.47UF K ELECTRO 47UF 25WV	
C712 C713 C715 C719-721 C723			CK73GB1A474K CK73GB1H104K CK73GB1H103K CD04AS1HR47M CK73GB1H103K	CHIP C 0.47UF K CHIP C 0.10UF K CHIP C 0.010UF K ELECTRO 0.47UF 50WV CHIP C 0.010UF K	
C725 C726 C727 C729 C730			CD04BJ1E470M CK73GB1H222K CK73GB1H102K CD04AS1HR47M CK73GB1A474K	ELECTRO 47UF 25WV CHIP C 2200PF K CHIP C 1000PF K ELECTRO 0.47UF 50WV CHIP C 0.47UF K	
C801-804 C807 C808 C809-811 C812			CK73GB1A105K CK73GB1A105K CD04AS1C220M CK73GB1H104K CD04BJ0J331M	CHIP C 1.0UF K CHIP C 1.0UF K ELECTRO 22UF 16WV CHIP C 0.10UF K ELECTRO 330UF 6.3WV	
C813-815 C817 C818,819 C820 C821,822			CK73GB1A105K CK73GB1A105K CK73GB1H104K CD04BJ0J331M CK73GB1A105K	CHIP C 1.0UF K CHIP C 1.0UF K CHIP C 0.10UF K ELECTRO 330UF 6.3WV CHIP C 1.0UF K	

Ref. No.	Add	New	Parts No.	Description	Destination
C824 C825 C827 C828-830 C832			CK73GB1H104K CK73GB1H103K CK73GB1H473K CK73GB1H103K CK73GB1A105K	CHIP C 0.10UF K CHIP C 0.010UF K CHIP C 0.047UF K CHIP C 0.010UF K CHIP C 1.0UF K	
C834 C835 C836 C837 C838			CK73GB1H104K CK73GB1A105K CK73GB1H104K CK73GB1A105K CK73GB1H104K	CHIP C 0.10UF K CHIP C 1.0UF K CHIP C 0.10UF K CHIP C 1.0UF K CHIP C 0.10UF K	E1E2 E1E2 E1E2
C839 C841-843 C844-846 C847-849 C847-849			CK73GB1A105K CK73GB1H103K CK73GB1A105K CK73GB1A105K CK73GB1A105K	CHIP C 1.0UF K CHIP C 0.010UF K CHIP C 1.0UF K CHIP C 1.0UF K CHIP C 1.0UF K	E1E2 E1E2 KR1M1 X1
C850-852 C853 C854,855 C856-858 C859			CD04BJ0J331M CC73GCH1H101J CK73GB1A105K CK73GB1H104K CC73GCH1H101J	ELECTRO 330UF 6.3WV CHIP C 100PF J CHIP C 1.0UF K CHIP C 0.10UF K CHIP C 100PF J	
C860 C861 C862 C867-869 C870			CK73GB1H103K CK73GB1A105K CK73GB1H103K CC73GCH1H050C CK73GB1H103K	CHIP C 0.010UF K CHIP C 1.0UF K CHIP C 0.010UF K CHIP C 5.0PF C CHIP C 0.010UF K	
C871 C872 C874 C875 C877			CK73GB1H222K CC73GCH1H220J CK73GB1H222K CC73GCH1H220J CK73GB1H222K	CHIP C 2200PF K CHIP C 22PF J CHIP C 2200PF K CHIP C 22PF J CHIP C 2200PF K	
C878 C880 C881 C884 C885			CC73GCH1H220J CK73GB1H222K CC73GCH1H220J CC73GCH1H220J CK73GB1H222K	CHIP C 22PF J CHIP C 2200PF K CHIP C 22PF J CHIP C 22PF J CHIP C 2200PF K	
C887 C888 C890 C891 C893			CC73GCH1H220J CK73GB1H222K CC73GCH1H220J CK73GB1H222K CC73GCH1H220J	CHIP C 22PF J CHIP C 2200PF K CHIP C 22PF J CHIP C 2200PF K CHIP C 22PF J	
C894 C895			CK73GB1H222K CK73GB1H104K	CHIP C 2200PF K CHIP C 0.10UF K	
J1 J351 J401 J501 J701		*	E58-1043-05 E63-0944-05 E56-0856-05 E58-1069-05 E58-1034-05	RECTANGULAR RECEPTACLE PIN JACK CYLINDRICAL RECEPTACLE RECTANGULAR RECEPTACLE RECTANGULAR RECEPTACLE	
J702 J703 J704 J705 W251	3G	*	E56-0868-05 E63-0943-05 E63-0945-05 E58-1067-05 E30-6492-05	CYLINDRICAL RECEPTACLE PIN JACK PIN JACK RECTANGULAR RECEPTACLE CORD WITH PLUG	M1X1
F51			F53-0297-05	FUSE (UL,CSA) 1.6A	

E1 : KVT-729DVD E2 : KVT-729DVDY (Europe)
K : KVT-719DVD (North America) R1 : KVT-739DVD (Latin America)
X1 : KVT-739DVD (Australia) M1 : KVT-739DVD (Other Areas)

△ Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-475x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination	Ref. No.	Add	New	Parts No.	Description	Destination
L1			L33-1063-25	CHOKE COIL		R40			RK73EB2E103J	CHIP R 10K J 1/4W	
L71			L41-4795-33	SMALL FIXED INDUCTOR (4.7U)		R41-44			RK73GB2A473J	CHIP R 47K J 1/10W	M1X1
L101			L92-0319-05	CHIP FERRITE		R51			RK73EB2E000J	CHIP R 0.0 J 1/4W	
L105			L92-0319-05	CHIP FERRITE		R52			RK73FB2B203J	CHIP R 20K J 1/8W	
L251			L41-4795-33	SMALL FIXED INDUCTOR (4.7U)		R53,54			RK73GB2A101J	CHIP R 100 J 1/10W	
L253			L41-4795-33	SMALL FIXED INDUCTOR (4.7U)		R55			RK73GB2A223J	CHIP R 22K J 1/10W	
L255			L41-4795-33	SMALL FIXED INDUCTOR (4.7U)	KR1E1	R56			RK73FB2B222J	CHIP R 2.2K J 1/8W	
L255			L41-4795-33	SMALL FIXED INDUCTOR (4.7U)	E2M1	R61			RK73FB2B221J	CHIP R 220 J 1/8W	
L701			L41-4795-33	SMALL FIXED INDUCTOR (4.7U)		R62			RK73GH2A153D	CHIP R 15K D 1/10W	
L702			L92-0319-05	CHIP FERRITE		R63			RK73GH2A512D	CHIP R 5.1K D 1/10W	
L703			L41-4795-33	SMALL FIXED INDUCTOR (4.7U)		R71			RK73FB2B221J	CHIP R 220 J 1/8W	
X101		*	L78-1220-05	RESONATOR (19.8000MHZ)		R72			RK73GH2A243D	CHIP R 24K D 1/10W	
X251			L77-2002-05	CRYSTAL RESONATOR	KR1E1	R73			RK73GH2A432D	CHIP R 4.3K D 1/10W	
X251			L77-2002-05	CRYSTAL RESONATOR	E2M1	R81			RK73GB2A472J	CHIP R 4.7K J 1/10W	M1X1
Y	3H		N09-4461-05	TAPTITE SCREW		R82			RK73EB2E152J	CHIP R 1.5K J 1/4W	M1X1
Z	3H		N84-3008-43	PAN HEAD TAPTITE SCREW		R83			RK73GB2A621J	CHIP R 620 J 1/10W	M1X1
R1			RK73GB2A103J	CHIP R 10K J 1/10W		R84			RK73GB2A242J	CHIP R 2.4K J 1/10W	M1X1
R2			RK73FB2B472J	CHIP R 4.7K J 1/8W	M1X1	R85,86		*	RK73PB2H2R0J	CHIP R 2.0 J 1/2W	M1X1
R3			RK73EB2E272J	CHIP R 2.7K J 1/4W		R87			RK73GB2A124J	CHIP R 120K J 1/10W	M1X1
R4			RK73GB2A102J	CHIP R 1.0K J 1/10W		R88			RK73GB2A103J	CHIP R 10K J 1/10W	M1X1
R5			RK73FB2B472J	CHIP R 4.7K J 1/8W	M1X1	R89			RK73GB2A473J	CHIP R 47K J 1/10W	M1X1
R6			RK73GB2A473J	CHIP R 47K J 1/10W		R91			RK73GB2A472J	CHIP R 4.7K J 1/10W	M1X1
R7			RK73GB2A103J	CHIP R 10K J 1/10W		R92			RK73EB2E152J	CHIP R 1.5K J 1/4W	M1X1
R8			RK73EB2E103J	CHIP R 10K J 1/4W		R93			RK73GB2A621J	CHIP R 620 J 1/10W	M1X1
R9			RK73GB2A473J	CHIP R 47K J 1/10W		R94			RK73GB2A242J	CHIP R 2.4K J 1/10W	M1X1
R10			RK73EB2E272J	CHIP R 2.7K J 1/4W		R95,96		*	RK73PB2H2R0J	CHIP R 2.0 J 1/2W	M1X1
R11			RK73GB2A102J	CHIP R 1.0K J 1/10W		R97			RK73GB2A124J	CHIP R 120K J 1/10W	M1X1
R12			RK73EB2E102J	CHIP R 1.0K J 1/4W		R98			RK73GB2A103J	CHIP R 10K J 1/10W	M1X1
R13			RK73GB2A104J	CHIP R 100K J 1/10W		R99			RK73GB2A473J	CHIP R 47K J 1/10W	M1X1
R14			RK73GB2A223J	CHIP R 22K J 1/10W		R102			RK73GB2A472J	CHIP R 4.7K J 1/10W	M1X1
R15			RK73GB2A103J	CHIP R 10K J 1/10W		R103-106			RK73GB2A473J	CHIP R 47K J 1/10W	
R16			RK73GB2A183J	CHIP R 18K J 1/10W		R107			RK73GB2A101J	CHIP R 100 J 1/10W	
R19			RK73GB2A683J	CHIP R 68K J 1/10W		R108			RK73GB2A471J	CHIP R 470 J 1/10W	
R21			RK73GB2A393J	CHIP R 39K J 1/10W		R109-112			RK73GB2A101J	CHIP R 100 J 1/10W	
R22			RK73GB2A104J	CHIP R 100K J 1/10W		R114-117			RK73GB2A101J	CHIP R 100 J 1/10W	
R23			RK73FB2B472J	CHIP R 4.7K J 1/8W		R118			RK73GB2A223J	CHIP R 22K J 1/10W	
R24			RK73GB2A223J	CHIP R 22K J 1/10W		R119-126			RK73GB2A473J	CHIP R 47K J 1/10W	
R25,26			RK73PB2H102J	CHIP R 1.0K J 1/2W		R127-130			RK73GB2A101J	CHIP R 100 J 1/10W	
R27			RK73GB2A000J	CHIP R 0.0 J 1/10W	E1E2	R131			RK73GB2A103J	CHIP R 10K J 1/10W	
R28			RK73GB2A103J	CHIP R 10K J 1/10W	KR1M1	R132			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R28			RK73GB2A103J	CHIP R 10K J 1/10W	X1	R133			RK73GB2A153J	CHIP R 15K J 1/10W	
R29			RK73GB2A222J	CHIP R 2.2K J 1/10W	KR1M1	R134			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R29			RK73GB2A222J	CHIP R 2.2K J 1/10W	X1	R135-139			RK73GB2A101J	CHIP R 100 J 1/10W	
R30			RK73FB2B472J	CHIP R 4.7K J 1/8W		R140			RK73GB2A473J	CHIP R 47K J 1/10W	
R31,32			RK73PB2H102J	CHIP R 1.0K J 1/2W	KR1M1	R141			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R31,32			RK73PB2H102J	CHIP R 1.0K J 1/2W	X1	R142-147			RK73GB2A101J	CHIP R 100 J 1/10W	
R33			RK73GB2A103J	CHIP R 10K J 1/10W	KR1M1	R148,149			RK73GB2A103J	CHIP R 10K J 1/10W	
R33			RK73GB2A103J	CHIP R 10K J 1/10W	X1	R150-152			RK73GB2A473J	CHIP R 47K J 1/10W	
R34			RK73GB2A473J	CHIP R 47K J 1/10W		R153-156			RK73GB2A103J	CHIP R 10K J 1/10W	X1
R35			RK73GB2A222J	CHIP R 2.2K J 1/10W		R154-156			RK73GB2A103J	CHIP R 10K J 1/10W	R1E1E2
R36			RK73FB2B561J	CHIP R 560 J 1/8W		R154-157			RK73GB2A103J	CHIP R 10K J 1/10W	KM1
R37			RK73EB2E102J	CHIP R 1.0K J 1/4W		R157			RK73GB2A303J	CHIP R 30K J 1/10W	X1
R38			RK73GB2A104J	CHIP R 100K J 1/10W		R157			RK73GB2A332J	CHIP R 3.3K J 1/10W	E1E2
R39			RK73GB2A473J	CHIP R 47K J 1/10W		R161			RK73GB2A103J	CHIP R 10K J 1/10W	R1E1E2
						R161			RK73GB2A103J	CHIP R 10K J 1/10W	M1X1

E1 : KVT-729DVD E2 : KVT-729DVDY (Europe)
K : KVT-719DVD (North America) R1 : KVT-739DVD (Latin America)
X1 : KVT-739DVD (Australia) M1 : KVT-739DVD (Other Areas)

△ Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-475x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination
R162 R163 R164 R164,165 R164,165			RK73GB2A101J RK73GB2A102J RK73GB2A222J RK73GB2A222J RK73GB2A222J	CHIP R 100 J 1/10W CHIP R 1.0K J 1/10W CHIP R 2.2K J 1/10W CHIP R 2.2K J 1/10W CHIP R 2.2K J 1/10W	X1 KR1E1 E2M1
R166 R168-177 R178 R179,180 R181-184			RK73GB2A101J RK73GB2A101J RK73GB2A471J RK73GB2A104J RK73GB2A473J	CHIP R 100 J 1/10W CHIP R 100 J 1/10W CHIP R 470 J 1/10W CHIP R 100K J 1/10W CHIP R 47K J 1/10W	
R185 R186-188 R189,190 R191,192 R200			RK73GB2A472J RK73GB2A104J RK73GB2A473J RK73GB2A101J RK73GB2A104J	CHIP R 4.7K J 1/10W CHIP R 100K J 1/10W CHIP R 47K J 1/10W CHIP R 100 J 1/10W CHIP R 100K J 1/10W	
R201 R202,203 R204 R205 R206,207			RK73EB2E000J RK73GB2A100J RK73GB2A104J RK73GB2A102J RK73GB2A103J	CHIP R 0.0 J 1/4W CHIP R 10 J 1/10W CHIP R 100K J 1/10W CHIP R 1.0K J 1/10W CHIP R 10K J 1/10W	
R208,209 R210,211 R212-215 R216-219 R221			RK73GB2A101J RK73GB2A102J RK73GB2A470J RK73GB2A101J RK73GB2A104J	CHIP R 100 J 1/10W CHIP R 1.0K J 1/10W CHIP R 47 J 1/10W CHIP R 100 J 1/10W CHIP R 100K J 1/10W	
R251 R252 R253 R255-257 R255-257			RK73GB2A223J RK73GB2A102J RK73GB2A000J RK73GB2A222J RK73GB2A222J	CHIP R 22K J 1/10W CHIP R 1.0K J 1/10W CHIP R 0.0 J 1/10W CHIP R 2.2K J 1/10W CHIP R 2.2K J 1/10W	KR1E1 E2M1
R301 R302 R303 R304 R305			RK73GB2A333J RK73GB2A182J RK73GB2A221J RK73GB2A223J RK73GB2A432J	CHIP R 33K J 1/10W CHIP R 1.8K J 1/10W CHIP R 220 J 1/10W CHIP R 22K J 1/10W CHIP R 4.3K J 1/10W	
R306 R355 R356 R357 R358,359			RK73GB2A100J RK73FB2B101J RK73GB2A471J RK73GB2A223J RK73GB2A103J	CHIP R 10 J 1/10W CHIP R 100 J 1/8W CHIP R 470 J 1/10W CHIP R 22K J 1/10W CHIP R 10K J 1/10W	
R360 R361 R362 R363 R364			RK73GB2A223J RK73FB2B101J RK73GB2A471J RK73FB2B101J RK73GB2A471J	CHIP R 22K J 1/10W CHIP R 100 J 1/8W CHIP R 470 J 1/10W CHIP R 100 J 1/8W CHIP R 470 J 1/10W	
R365 R366,367 R368 R369 R370			RK73GB2A223J RK73GB2A103J RK73GB2A223J RK73FB2B101J RK73GB2A471J	CHIP R 22K J 1/10W CHIP R 10K J 1/10W CHIP R 22K J 1/10W CHIP R 100 J 1/8W CHIP R 470 J 1/10W	
R371 R372 R373 R374,375 R376			RK73FB2B101J RK73GB2A471J RK73GB2A223J RK73GB2A103J RK73GB2A223J	CHIP R 100 J 1/8W CHIP R 470 J 1/10W CHIP R 22K J 1/10W CHIP R 10K J 1/10W CHIP R 22K J 1/10W	
R377 R378 R379 R380 R381			RK73FB2B101J RK73GB2A471J RK73FB2B101J RK73GB2A471J RK73GB2A223J	CHIP R 100 J 1/8W CHIP R 470 J 1/10W CHIP R 100 J 1/8W CHIP R 470 J 1/10W CHIP R 22K J 1/10W	
R382,383 R384 R385 R386 R401-403		*	RK73GB2A103J RK73GB2A223J RK73FB2B101J RK73GB2A471J RK73EB2E432J	CHIP R 10K J 1/10W CHIP R 22K J 1/10W CHIP R 100 J 1/8W CHIP R 470 J 1/10W CHIP R 4.3K J 1/4W	
R404,405 R406,407 R408 R409 R410		*	RK73EB2E101J RK73EB2E432J RK73EB2E101J RK73EB2E100J RK73EB2E4R7J	CHIP R 100 J 1/4W CHIP R 4.3K J 1/4W CHIP R 100 J 1/4W CHIP R 10 J 1/4W CHIP R 4.7 J 1/4W	
R411 R501-508 R509-514 R517 R518-520			RK73EB2E100J RK73GB2A000J RK73GB2A473J RK73GB2A102J RK73EB2E100J	CHIP R 10 J 1/4W CHIP R 0.0 J 1/10W CHIP R 47K J 1/10W CHIP R 1.0K J 1/10W CHIP R 10 J 1/4W	
R521 R522-525 R526-534 R535 R536-539			RK73GB2A222J RK73EB2E100J RK73EB2E101J RK73GB2A750J RK73EB2E750J	CHIP R 2.2K J 1/10W CHIP R 10 J 1/4W CHIP R 100 J 1/4W CHIP R 75 J 1/10W CHIP R 75 J 1/4W	
R542 R543 R544 R601-611 R701-704			RK73GB2A102J RK73GB2A222J RK73EB2E100J RK73GB2A103J RK73GB2A750J	CHIP R 1.0K J 1/10W CHIP R 2.2K J 1/10W CHIP R 10 J 1/4W CHIP R 10K J 1/10W CHIP R 75 J 1/10W	E1E2
R704 R704 R705,706 R707-709 R710			RK73GB2A750J RK73GB2A750J RK73EB2E102J RK73EB2E101J RK73EB2E000J	CHIP R 75 J 1/10W CHIP R 75 J 1/10W CHIP R 1.0K J 1/4W CHIP R 100 J 1/4W CHIP R 0.0 J 1/4W	KR1M1 X1
R711,712 R713 R714 R715 R716-719			RK73EB2E102J RK73EB2E100J RK73EB2E4R7J RK73EB2E100J RK73EB2E101J	CHIP R 1.0K J 1/4W CHIP R 10 J 1/4W CHIP R 4.7 J 1/4W CHIP R 10 J 1/4W CHIP R 100 J 1/4W	E1E2
R719 R719 R720-723 R723 R723			RK73EB2E101J RK73EB2E101J RK73GB2A100J RK73GB2A100J RK73GB2A100J	CHIP R 100 J 1/4W CHIP R 100 J 1/4W CHIP R 10 J 1/10W CHIP R 10 J 1/10W CHIP R 10 J 1/10W	KR1M1 X1 E1E2 KR1M1 X1
R724 R733 R734 R735-737 R738			RK73EB2E100J RK73GB2A222J RK73GB2A102J RK73EB2E102J RK73EB2E100J	CHIP R 10 J 1/4W CHIP R 2.2K J 1/10W CHIP R 1.0K J 1/10W CHIP R 1.0K J 1/4W CHIP R 10 J 1/4W	
R739 R740 R741-744 R745-748 R751			RK73EB2E4R7J RK73EB2E100J RK73GB2A750J RK73EB2E101J RK73GB2A101J	CHIP R 4.7 J 1/4W CHIP R 10 J 1/4W CHIP R 75 J 1/10W CHIP R 100 J 1/4W CHIP R 100 J 1/10W	

E1 : KVT-729DVD E2 : KVT-729DVDY (Europe)
K : KVT-719DVD (North America) R1 : KVT-739DVD (Latin America)
X1 : KVT-739DVD (Australia) M1 : KVT-739DVD (Other Areas)

△ Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-475x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination	Ref. No.	Add	New	Parts No.	Description	Destination
R755-758			RK73GB2A100J	CHIP R 10 J 1/10W		D24,25			1SR154-400	DIODE	M1X1
R760			RK73GB2A102J	CHIP R 1.0K J 1/10W		D52			UDZS5.6B	ZENER DIODE	
R761			RK73GB2A750J	CHIP R 75 J 1/10W		D81			1SR154-400	DIODE	M1X1
R763			RK73GB2A750J	CHIP R 75 J 1/10W		D91			1SR154-400	DIODE	M1X1
R764			RK73EB2E750J	CHIP R 75 J 1/4W		D201-205			DAP202U	DIODE	
R768-770			RK73EB2E100J	CHIP R 10 J 1/4W		D251			IMSA-6801-E	SURGE ABSORBER	
R771			RK73GB2A000J	CHIP R 0.0 J 1/10W		D301,302			DAP202U	DIODE	
R772			RK73EB2E101J	CHIP R 100 J 1/4W		D351-358			AVRM1608180M6A	VARISTOR	
R774			RK73EB2E101J	CHIP R 100 J 1/4W		D359-365			DAP202U	DIODE	
R775			RK73GB2A100J	CHIP R 10 J 1/10W		D401-406			STZ6.8N	ZENER DIODE	
R777			RK73GB2A100J	CHIP R 10 J 1/10W		D503			DAP202U	DIODE	
R781			RK73GB2A103J	CHIP R 10K J 1/10W		D504			UDZS4.7B	ZENER DIODE	
R783			RK73GB2A103J	CHIP R 10K J 1/10W		D505,506			STZ6.8N	ZENER DIODE	
R786,787			RK73GB2A183J	CHIP R 18K J 1/10W		D509,510			STZ6.8N	ZENER DIODE	
R789			RK73GB2A222J	CHIP R 2.2K J 1/10W		D512-518			STZ6.2N	ZENER DIODE	
R791			RK73GB2A102J	CHIP R 1.0K J 1/10W		D519			UDZS4.7B	ZENER DIODE	
R792			RK73GB2A000J	CHIP R 0.0 J 1/10W		D520			DAP202U	DIODE	
R809,810			RK73GB2A123J	CHIP R 12K J 1/10W		D522-524			STZ6.2N	ZENER DIODE	
R812,813			RK73GB2A473J	CHIP R 47K J 1/10W		D701-706			STZ6.2N	ZENER DIODE	E1E2
R814			RK73GB2A000J	CHIP R 0.0 J 1/10W		D704-706			STZ6.2N	ZENER DIODE	KR1M1
R815			RK73GH2A333D	CHIP R 33K D 1/10W		D704-706			STZ6.2N	ZENER DIODE	X1
R816			RK73GH2A222D	CHIP R 2.2K D 1/10W		D707			UDZS6.2B	ZENER DIODE	
R817			RK73GH2A153D	CHIP R 15K D 1/10W		D708			AVRM1608180M6A	VARISTOR	
R818			RK73GB2A302J	CHIP R 3.0K J 1/10W		D709,710			AVRM1608120M6A	VARISTOR	
R819			RK73GB2A623J	CHIP R 62K J 1/10W		D711			STZ6.2N	ZENER DIODE	
R820			RK73GB2A222J	CHIP R 2.2K J 1/10W		D712			STZ6.8N	ZENER DIODE	
R821,822			RK73GB2A473J	CHIP R 47K J 1/10W		D713			DAP202U	DIODE	
R823			RK73GB2A222J	CHIP R 2.2K J 1/10W		D714			UDZS4.7B	ZENER DIODE	
R824			RK73GB2A682J	CHIP R 6.8K J 1/10W		D715-717			STZ6.2N	ZENER DIODE	
R825			RK73GB2A104J	CHIP R 100K J 1/10W		D718			STZ6.8N	ZENER DIODE	
R826			RK73GB2A682J	CHIP R 6.8K J 1/10W		D719-722			STZ6.2N	ZENER DIODE	
R827			RK73GB2A473J	CHIP R 47K J 1/10W		D723			AVRM1608270MAA	VARISTOR	
R828			RK73GB2A104J	CHIP R 100K J 1/10W		D724,725			STZ6.2N	ZENER DIODE	
R829			RK73GB2A473J	CHIP R 47K J 1/10W		D727			STZ6.8N	ZENER DIODE	
R830			RK73GB2A222J	CHIP R 2.2K J 1/10W		D731			UDZS8.2B	ZENER DIODE	
R831,832			RK73GB2A473J	CHIP R 47K J 1/10W		D732			STZ6.2N	ZENER DIODE	
R833			RK73GB2A000J	CHIP R 0.0 J 1/10W		D733			UDZS8.2B	ZENER DIODE	
R836-841			RK73GB2A473J	CHIP R 47K J 1/10W	E1E2	D735			DAP202U	DIODE	
R842-844			RK73GB2A272J	CHIP R 2.7K J 1/10W	E1E2	D737			UDZS4.7B	ZENER DIODE	
R845-847			RK73GB2A121J	CHIP R 120 J 1/10W	E1E2	IC61			M5237ML-CF0J	ANALOGUE IC	
R848-850			RK73GB2A473J	CHIP R 47K J 1/10W	E1E2	IC71			M5237ML-CF0J	ANALOGUE IC	
R851			RK73GB2A000J	CHIP R 0.0 J 1/10W		IC101		*	703030BYGCJ30	MICROCONTROLLER IC	
R852			RK73GB2A101J	CHIP R 100 J 1/10W		IC102			S-80842CNNB-G	MOS-IC	
R853			RK73GB2A102J	CHIP R 1.0K J 1/10W		IC104			TC7SET08FU-F	MOS-IC	
R855-857			RK73GB2A331J	CHIP R 330 J 1/10W		IC105			BU2090FS	MOS-IC	
D1			RM10ZLFNF	DIODE		IC106			TC74VHCT08AFT	MOS-IC	
D2-4			DAN202U	DIODE		IC201			E-TDA7415CB	ANALOGUE IC	
D5			UDZS6.2B	ZENER DIODE		IC202,203			TC4052BFT	MOS-IC	
D6			UDZS6.8B	ZENER DIODE		IC251			E-TDA7479AD	ANALOGUE IC	KR1E1
D7			DAP202U	DIODE		IC251			E-TDA7479AD	ANALOGUE IC	E2M1
D8			UDZS6.8B	ZENER DIODE		IC301			E-TDA7850A	ANALOGUE IC	
D9			DAP202U	DIODE		IC501,502		*	NJM2794RB2ZB	ANALOGUE IC	
D10-13			1SR154-400	DIODE		IC701		*	NJM2794RB2ZB	ANALOGUE IC	
D14			UDZS5.6B	ZENER DIODE		IC702			TC7S08FU-F	MOS-IC	
D15			UDZS4.7B	ZENER DIODE		IC723		*	NJM2794RB2ZB	ANALOGUE IC	

E1 : KVT-729DVD E2 : KVT-729DVDY (Europe)
K : KVT-719DVD (North America) R1 : KVT-739DVD (Latin America)
X1 : KVT-739DVD (Australia) M1 : KVT-739DVD (Other Areas)

△ Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-475x-xx)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
IC802 IC803 IC804 IC805 IC806			MM1508XNRE-E BA7652AF MM1508XNRE-E BA7653AFV MM1503-E	ANALOGUE IC ANALOGUE IC ANALOGUE IC ANALOGUE IC ANALOGUE IC	
IC807-809 IC810 Q1 Q2 Q3			MM1508XNRE-E MM1503-E DTC124EUA 2SA1576A DTC124EUA	ANALOGUE IC ANALOGUE IC DIGITAL TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR	
Q4 Q6 Q7 Q8 Q9			2SC4081 2SC4081 2SB1188(Q,R) 2SA1576A DTA114EUA	TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR	
Q10 Q11 Q11 Q12 Q12			DTC114YUA 2SB1188(R) 2SB1188(R) 2SC4081 2SC4081	DIGITAL TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR	KR1M1 X1 KR1M1 X1
Q13 Q14,15 Q51 Q52 Q53			2SA1576A 2SC4081 2SB1565(E,F) 2SC4081 2SB1689	TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR	M1X1
Q54 Q61 Q62 Q70 Q71			DTC124EUA 2SB1443 DTA124EUA DTC124EUA 2SB1565(E,F)	DIGITAL TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR	
Q72 Q81 Q82 Q83 Q84			DTA124EUA DTC114TUA 2SC4081 2SB1184 2SA1576A	DIGITAL TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR	M1X1 M1X1 M1X1 M1X1
Q85 Q91 Q92 Q93 Q94			2SC4081 DTC114TUA 2SC4081 2SB1184 2SA1576A	TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR	M1X1 M1X1 M1X1 M1X1 M1X1
Q95 Q101,102 Q103 Q104 Q105			2SC4081 DTC144EUA DTA114EUA DTA114TUA DTC114TUA	TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR	M1X1
Q107 Q251 Q252 Q351 Q352		*	RT1N440M DTC124EUA 2SB1689 DTC323TU DTA144EUA	TRANSISTOR DIGITAL TRANSISTOR TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR	
Q353-356 Q357 Q358,359 Q360 Q361			DTC323TU DTA144EUA DTC323TU DTA144EUA DTC323TU	DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR DIGITAL TRANSISTOR	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
Q802-805 Q806 Q807 Q808 Q808			2SC4081 2SA1576A 2SC4081 2SA1576A 2SA1576A	TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR	KR1M1 X1
Q808-811 Q813-815 TH301			2SA1576A 2SC4081 PRF18BE471QB2	TRANSISTOR TRANSISTOR POSITIVE RESISTOR	E1E2 E1E2
A251 A251		*	X86-4080-12 X86-4082-71	FRONT-END UNIT FRONT-END UNIT	KR1X1 E1E2M1
VIDEO UNIT (X35-4710-10)					
C1,2 C3 C5 C6 C7			C93-1396-05 C93-1283-05 C93-1363-05 C93-1361-05 CK73GB1H473K	CHIP C CHIP C CHIP C CHIP C CHIP C	10UF Z 1.0UF K 10PF 0.012UF 0.047UF K
C8 C9 C10 C11 C12			C93-1383-05 CK73GB0J225K CK73GB1H103K CK73GB0J225K CK73HB1E103K	CHIP C CHIP C CHIP C CHIP C CHIP C	220PF F 2.2UF K 0.010UF K 2.2UF K 0.010UF K
C13 C14 C15 C16 C17			CK73GB1A474K CK73HB1E103K CK73GB1H473K CK73HB1C183K CK73HB1E103K	CHIP C CHIP C CHIP C CHIP C CHIP C	0.47UF K 0.010UF K 0.047UF K 0.018UF K 0.010UF K
C18 C21 C22 C23 C24			C93-1283-05 CK73GB0J225K CK73HB1H152K C93-1396-05 CK73GB1H103K	CHIP C CHIP C CHIP C CHIP C CHIP C	1.0UF K 2.2UF K 1500PF K 10UF Z 0.010UF K
C25 C28 C100 C101 C102			C93-1286-05 C93-1283-05 CC73GCH1H151J CK73GB1H104K CK73FB0J106K	CHIP C CHIP C CHIP C CHIP C CHIP C	2700PF 1.0UF K 150PF J 0.10UF K 10UF K
C103 C104 C105 C106 C107,108			CK73GB1H103K CE32AU1C220M CK73GB1H104K CK73GB1H103K CK73EB1C106K	CHIP C CHIP EL CHIP C CHIP C CHIP C	0.010UF K 22UF 16WV 0.10UF K 0.010UF K 10UF K
C109 C110 C112 C113 C114			CK73FB1C105K CK73GB1H103K CK73FB1E154K CK73EB1E225K CK73GB1C224K	CHIP C CHIP C CHIP C CHIP C CHIP C	1.0UF K 0.010UF K 0.15UF K 2.2UF K 0.22UF K
C115 C116 C117 C118 C119			CK73GB1H104K CK73EB0J226K CK73HB1H102K CK73GB1H103K CK73HB1E103K	CHIP C CHIP C CHIP C CHIP C CHIP C	0.10UF K 22UF K 1000PF K 0.010UF K 0.010UF K
C120 C121 C301			CK73GB1H104K CK73HB1E103K CK73EB1C106K	CHIP C CHIP C CHIP C	0.10UF K 0.010UF K 10UF K

E1 : KVT-729DVD E2 : KVT-729DVDY (Europe)
K : KVT-719DVD (North America) R1 : KVT-739DVD (Latin America)
X1 : KVT-739DVD (Australia) M1 : KVT-739DVD (Other Areas)

△ Indicates safety critical components.

PARTS LIST

VIDEO UNIT (X35-4710-10)

Ref. No.	Add	New	Parts No.	Description	Destination	Ref. No.	Add	New	Parts No.	Description	Destination
C302			C93-1396-05	CHIP C 10UF Z		F1			F53-0297-05	FUSE (UL,CSA) 1.6A	
C303			CK73GB1H103K	CHIP C 0.010UF K		F100			F53-0280-05	FUSE 0.63A	
C304			CK73GB1H104K	CHIP C 0.10UF K		L1			L19-0783-05	TRANSFORMER FOR CONVERTER	
C305,306			CK73GB1H103K	CHIP C 0.010UF K		L101,102			L41-3392-13	SMALL FIXED INDUCTOR (3.3UH)	
C307			CK73FB0J106K	CHIP C 10UF K		L103			L41-4792-13	SMALL FIXED INDUCTOR (4.7UH)	
C308			CK73GB1H103K	CHIP C 0.010UF K		L104-106			L41-1005-33	SMALL FIXED INDUCTOR (10U)	
C309			CC73HCH1H100D	CHIP C 10PF D		L302,303			L41-1005-33	SMALL FIXED INDUCTOR (10U)	
C310			CK73HB1C333K	CHIP C 0.033UF K		L306			L41-5695-33	SMALL FIXED INDUCTOR (5.6U)	
C311			CK73HB1E103K	CHIP C 0.010UF K		L307			L41-8281-15	SMALL FIXED INDUCTOR (0.82U)	
C312			CK73GB1H103K	CHIP C 0.010UF K		L401			L41-1005-33	SMALL FIXED INDUCTOR (10U)	
C313,314			CK73HB1E103K	CHIP C 0.010UF K		L501			L41-1005-33	SMALL FIXED INDUCTOR (10U)	
C315,316			CK73GB1H104K	CHIP C 0.10UF K		CP301,302			RK74HB1J102J	CHIP-COM 1.0K J 1/16W	
C317			CK73HB1E103K	CHIP C 0.010UF K		CP303			RK74HB1J101J	CHIP-COM 100 J 1/16W	
C318,319			CK73GB1H104K	CHIP C 0.10UF K		R1			RK73HB1J512J	CHIP R 5.1K J 1/16W	
C320			CC73HCH1H330J	CHIP C 33PF J		R3			RK73HB1J220J	CHIP R 22 J 1/16W	
C321			CK73GB1H104K	CHIP C 0.10UF K		R4			RK73GH2A433D	CHIP R 43K D 1/10W	
C322			CC73GCH1E102J	CHIP C 1000PF J		R5			RK73HB1J153J	CHIP R 15K J 1/16W	
C323			CC73HCH1H101J	CHIP C 100PF J		R6			RK73HH1J563D	CHIP R 56K D 1/16W	
C324,325			CK73HB1E103K	CHIP C 0.010UF K		R7			RK73HB1J220J	CHIP R 22 J 1/16W	
C326			CC73GCH1H681J	CHIP C 680PF J		R8			RK73HB1J512J	CHIP R 5.1K J 1/16W	
C327,328			CK73GB1H104K	CHIP C 0.10UF K		R9			RK73HH1J204D	CHIP R 200K D 1/16W	
C329			CC73HCH1H101J	CHIP C 100PF J		R10			RK73FB2B152J	CHIP R 1.5K J 1/8W	
C330			CK73FB0J106K	CHIP C 10UF K		R11			RK73HB1J220J	CHIP R 22 J 1/16W	
C331,332			CC73HCH1H390J	CHIP C 39PF J		R12			RK73HB1J105J	CHIP R 1.0M J 1/16W	
C333			CK73GB1H104K	CHIP C 0.10UF K		R13			RK73HB1J220J	CHIP R 22 J 1/16W	
C334			CK73GB1H103K	CHIP C 0.010UF K		R14			RK73GH2A471D	CHIP R 470 D 1/10W	
C335			CK73GB1H104K	CHIP C 0.10UF K		R15			RK73GH2A513D	CHIP R 51K D 1/10W	
C337			CK73HB1E103K	CHIP C 0.010UF K		R16,17			RK73HB1J220J	CHIP R 22 J 1/16W	
C338			CK73GB1H103K	CHIP C 0.010UF K		R18			RK73HB1J222J	CHIP R 2.2K J 1/16W	
C339			CC73HCH1H221J	CHIP C 220PF J		R21			RK73HB1J104J	CHIP R 100K J 1/16W	
C340			CC73HCH1H101J	CHIP C 100PF J		R22			RK73GB2A515J	CHIP R 5.1M J 1/10W	
C342			CC73HCH1H100D	CHIP C 10PF D		R23			RK73HH1J824D	CHIP R 820K D 1/16W	
C346,347			CK73HB1E103K	CHIP C 0.010UF K		R24			RK73HB1J472J	CHIP R 4.7K J 1/16W	
C348			CK73FB1C105K	CHIP C 1.0UF K		R100			RK73HB1J100J	CHIP R 10 J 1/16W	
C349			C93-1389-05	CHIP C 33PF J		R101			RK73GH2A104D	CHIP R 100K D 1/10W	
C350		*	CK73GB0J106M	CHIP C 10UF M		R102			RK73GH2A113D	CHIP R 11K D 1/10W	
C401			CK73HB1H102K	CHIP C 1000PF K		R103			RK73GH2A184D	CHIP R 180K D 1/10W	
C421,422			CK73GB1A105K	CHIP C 1.0UF K		R104			RK73GH2A133D	CHIP R 13K D 1/10W	
C423			CK73FB0J106K	CHIP C 10UF K		R105			RK73HB1J473J	CHIP R 47K J 1/16W	
C424			CK73HB1E103K	CHIP C 0.010UF K		R118		*	RK73HB1J754J	CHIP R 750K J 1/16W	
C425			CK73FB1C105K	CHIP C 1.0UF K		R119			RK73FB2B222J	CHIP R 2.2K J 1/8W	
C426			CK73EB1E105K	CHIP C 1.0UF K		R201			RK73HB1J000J	CHIP R 0.0 J 1/16W	
C427			CK73GB0J225K	CHIP C 2.2UF K		R218			RK73HB1J102J	CHIP R 1.0K J 1/16W	
C428			CK73FB0J106K	CHIP C 10UF K		R219			RK73HB1J103J	CHIP R 10K J 1/16W	
C501-503			CK73HB1E103K	CHIP C 0.010UF K		R301			RK73HB1J220J	CHIP R 22 J 1/16W	
C504			CK73FB0J106K	CHIP C 10UF K		R304,305			RK73HB1J000J	CHIP R 0.0 J 1/16W	
CN1			E41-2483-05	PIN ASSY		R307			RK73HB1J101J	CHIP R 100 J 1/16W	
CN101			E41-2608-05	FLAT CABLE CONNECTOR		R308			RK73HB1J621J	CHIP R 620 J 1/16W	
CN103			E41-2359-05	PIN ASSY		R310			RK73HB1J101J	CHIP R 100 J 1/16W	
CN104			E41-2444-05	FLAT CABLE CONNECTOR		R313			RK73HB1J000J	CHIP R 0.0 J 1/16W	
CN302		*	E41-2761-05	FLAT CABLE CONNECTOR		R314,315			RK73HB1J103J	CHIP R 10K J 1/16W	
CN501			E41-2087-05	FLAT CABLE CONNECTOR		R316			RK73HB1J102J	CHIP R 1.0K J 1/16W	
CN502		*	E41-2762-05	FLAT CABLE CONNECTOR		R319			RK73HB1J102J	CHIP R 1.0K J 1/16W	
CN503			E41-2564-05	FLAT CABLE CONNECTOR		R320			RK73HB1J000J	CHIP R 0.0 J 1/16W	

E1 : KVT-729DVD E2 : KVT-729DVDY (Europe)
K : KVT-719DVD (North America) R1 : KVT-739DVD (Latin America)
X1 : KVT-739DVD (Australia) M1 : KVT-739DVD (Other Areas)

△ Indicates safety critical components.

PARTS LIST

VIDEO UNIT (X35-4710-10)

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
R321			RK73GH2A472D	CHIP R 4.7K D 1/10W	
R323			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R324,325			RK73GH2A472D	CHIP R 4.7K D 1/10W	
R326			RK73HH1J473D	CHIP R 47K D 1/16W	
R327			RK73HH1J683D	CHIP R 68K D 1/16W	
R328			RK73HH1J153D	CHIP R 15K D 1/16W	
R329			RK73HH1J101D	CHIP R 100 D 1/16W	
R330			RK73HH1J182D	CHIP R 1.8K D 1/16W	
R331			RK73HH1J331D	CHIP R 330 D 1/16W	
R332			RK73HH1J332D	CHIP R 3.3K D 1/16W	
R333,334			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R336			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R337,338			RK73HB1J101J	CHIP R 100 J 1/16W	
R339			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R340-344			RK73HB1J101J	CHIP R 100 J 1/16W	
R345			RK73HH1J683D	CHIP R 68K D 1/16W	
R346			RK73HH1J105D	CHIP R 1.0M D 1/16W	
R347			RK73HH1J153D	CHIP R 15K D 1/16W	
R348			RK73HB1J202J	CHIP R 2.0K J 1/16W	
R349			RK73HB1J133J	CHIP R 13K J 1/16W	
R350-352			RK73HB1J101J	CHIP R 100 J 1/16W	
R354			RK73HB1J300J	CHIP R 30 J 1/16W	
R355			RK73HB1J820J	CHIP R 82 J 1/16W	
R357			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R358			RK73HB1J103J	CHIP R 10K J 1/16W	
R359,360			RK73HB1J100J	CHIP R 10 J 1/16W	
R361,362			RK73HB1J103J	CHIP R 10K J 1/16W	
R365			RK73HB1J101J	CHIP R 100 J 1/16W	
R366-370			RK73HB1J103J	CHIP R 10K J 1/16W	
R371			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R373			RK73HB1J561J	CHIP R 560 J 1/16W	
R374			RK73HB1J473J	CHIP R 47K J 1/16W	
R376			RK73HB1J103J	CHIP R 10K J 1/16W	
R377			RK73HB1J912J	CHIP R 9.1K J 1/16W	
R378			RK73HB1J562J	CHIP R 5.6K J 1/16W	
R380			RK73HB1J473J	CHIP R 47K J 1/16W	
R381			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R385			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R389			RK73HB1J221J	CHIP R 220 J 1/16W	
R391			RK73HB1J100J	CHIP R 10 J 1/16W	
R392			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R393,394			RK73HB1J202J	CHIP R 2.0K J 1/16W	
R396			RK73HB1J101J	CHIP R 100 J 1/16W	
R397			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R398,399			RK73HB1J101J	CHIP R 100 J 1/16W	
R402			RK73HB1J392J	CHIP R 3.9K J 1/16W	
R403			RK73HB1J822J	CHIP R 8.2K J 1/16W	
R404			RK73HB1J243J	CHIP R 24K J 1/16W	
R406			RK73GB2A361J	CHIP R 360 J 1/10W	
R407			RK73GB2A751J	CHIP R 750 J 1/10W	
R422			RK73HB1J683J	CHIP R 68K J 1/16W	
R423			RK73HB1J104J	CHIP R 100K J 1/16W	
R441			RK73GB2A751J	CHIP R 750 J 1/10W	
R453			RK73FB2B102J	CHIP R 1.0K J 1/8W	
R454			RK73FB2B511J	CHIP R 510 J 1/8W	

Ref. No.	A d d	N e w	Parts No.	Description	Desti- nation
R456			RK73GB2A361J	CHIP R 360 J 1/10W	
R501,502			RK73HB1J333J	CHIP R 33K J 1/16W	
R503-506			RK73GB2A100J	CHIP R 10 J 1/10W	
R609-612			RK73GB2A000J	CHIP R 0.0 J 1/10W	
VR203			R32-0328-05	SEMI FIXED VARIABLE RESISTOR	
S401-405			S70-0937-05	TACT SWITCH	
D1,2			UDZS5.6B	ZENER DIODE	
D3			1SS355	DIODE	
D4,5			DA204U	DIODE	
D6			MA2S784-F	DIODE	
D7			UDZS5.6B	ZENER DIODE	
D8			AVRM1005270MAA	VARIATOR	
D9			DA204U	DIODE	
D10			1SS355	DIODE	
D101			EP05Q04	DIODE	
D102			EP05Q06	DIODE	
D103,104			EP05Q04	DIODE	
D301			UDZS3.9B	ZENER DIODE	
D303			DA204U	DIODE	
D305,306			DA204U	DIODE	
D307			AVRM1608120M6A	VARIATOR	
D309			1SV231-F	VARIABLE CAPACITANCE DIODE	
D314			DA204U	DIODE	
D401			AVRM1608120M6A	VARIATOR	
D403-412			AVRM1608180M6A	VARIATOR	
D501-504			AVRM1608180M6A	VARIATOR	
IC1			OZ964ISN-C	ANALOGUE IC	
IC101			LT1947-PBF	ANALOGUE IC	
IC102			TC7WH123FU-F	MOS-IC	
IC103			TC7SH04FU-F	MOS-IC	
IC301			BU2090FS	MOS-IC	
IC302			TC7SET08FU-F	MOS-IC	
IC303			NJM2107F-ZB	ANALOGUE IC	
IC304			TC200G02G0104	MOS-IC	
IC401			TPS850	ANALOGUE IC	
Q1			2SC4081	TRANSISTOR	
Q2,3			SI5504DC-E3	DUAL FET	
Q4			DTC114YUA	DIGITAL TRANSISTOR	
Q5			2SC4081	TRANSISTOR	
Q301			2SC4097	TRANSISTOR	
Q303			2SC4081	TRANSISTOR	
Q501			DTC114YE	DIGITAL TRANSISTOR	
Q502,503			PUMD10	DUAL TRANSISTOR	
DVD UNIT (X37-1120-03) IN DVD MECHANISM					
C3			CK73HB1A104K	CHIP C 0.10UF K	
C4		*	CC73HCH1H471J	CHIP C 470PF J	
C5-7			CK73HB1E103K	CHIP C 0.010UF K	
C8		*	CC73HCH1H471J	CHIP C 470PF J	
C11			CK73HB1E103K	CHIP C 0.010UF K	
C14		*	CK73GB0J106M	CHIP C 10UF M	
C15			CK73HB1A104K	CHIP C 0.10UF K	
C16		*	CK73GB0J106M	CHIP C 10UF M	
C17			CK73GB0J475K	CHIP C 4.7UF K	
C18			CK73FB0J226M	CHIP C 22UF M	

E1 : KVT-729DVD E2 : KVT-729DVDY (Europe)
K : KVT-719DVD (North America) R1 : KVT-739DVD (Latin America)
X1 : KVT-739DVD (Australia) M1 : KVT-739DVD (Other Areas)

△ Indicates safety critical components.

PARTS LIST

DVD UNIT (X37-1120-03) IN DVD MECHANISM

Ref. No.	Add	New	Parts No.	Description	Destination	Ref. No.	Add	New	Parts No.	Description	Destination
C20		*	CC73HCH1H102J	CHIP C 1000PF J		C267			CK73FB0J226M	CHIP C 22UF M	
C50,51			C93-1228-05	CHIP C 1UF M		C270			CK73HB0J105K	CHIP C 1.0UF K	
C54			C93-1228-05	CHIP C 1UF M		C271		*	CC73HCH1H102J	CHIP C 1000PF J	
C59,60			C93-1228-05	CHIP C 1UF M		C272			CK73HB0J105K	CHIP C 1.0UF K	
C62			C93-1228-05	CHIP C 1UF M		C300,301		*	CC73HCH1H102J	CHIP C 1000PF J	
C63			CK73FB0J226M	CHIP C 22UF M		C302		*	CK73GB0J106M	CHIP C 10UF M	
C72			CK73HB1A104K	CHIP C 0.10UF K		C304-306		*	CK73GB0J106M	CHIP C 10UF M	
C73		*	CK73GB0J106M	CHIP C 10UF M		C350,351		*	CC73HCH1H102J	CHIP C 1000PF J	
C100-102			CK73HB1A104K	CHIP C 0.10UF K		C434		*	CK73GB0J106M	CHIP C 10UF M	
C103			C93-1228-05	CHIP C 1UF M		C435			CK73HB1E103K	CHIP C 0.010UF K	
C104			CK73HB1A104K	CHIP C 0.10UF K		C441			CK73HB1A104K	CHIP C 0.10UF K	
C105			C93-1228-05	CHIP C 1UF M		C442-445			CK73FB0J226M	CHIP C 22UF M	
C106,107			CK73HB1A104K	CHIP C 0.10UF K		C446			CK73HB1A104K	CHIP C 0.10UF K	
C108			C93-1228-05	CHIP C 1UF M		C448,449			C93-1228-05	CHIP C 1UF M	
C109			CK73HB1A104K	CHIP C 0.10UF K		C450			CK73HB1A104K	CHIP C 0.10UF K	
C110			C93-1228-05	CHIP C 1UF M		C452			C93-1228-05	CHIP C 1UF M	
C111			CK73HB1C333K	CHIP C 0.033UF K		C454,455			CK73HB1A104K	CHIP C 0.10UF K	
C112,113			CK73HB1A104K	CHIP C 0.10UF K		C456-458			CK73HB1H682K	CHIP C 6800PF K	
C114			CK73GB1H562K	CHIP C 5600PF K		C461			CK73HB1H472K	CHIP C 4700PF K	
C115			CK73HB1C183K	CHIP C 0.018UF K		C462			CK73HB1E103K	CHIP C 0.010UF K	
C117			CK73HB1A104K	CHIP C 0.10UF K		C464			CK73HB0J105K	CHIP C 1.0UF K	
C118			CK73HB0J105K	CHIP C 1.0UF K		C466			CK73HB1A104K	CHIP C 0.10UF K	
C119			C93-1228-05	CHIP C 1UF M		C467			CC73HCH1H121J	CHIP C 120PF J	
C120,121			CK73HB1A104K	CHIP C 0.10UF K		C468,469			CK73HB1A104K	CHIP C 0.10UF K	
C122,123		*	CK73GB0J106M	CHIP C 10UF M		C470			CK73HB1E103K	CHIP C 0.010UF K	
C126-129			CK73HB1A104K	CHIP C 0.10UF K		C473			CK73HB1A104K	CHIP C 0.10UF K	
C130-133			CC73HCH1H151J	CHIP C 150PF J		C474		*	CC73HCH1H102J	CHIP C 1000PF J	
C134		*	CC73HCH1H102J	CHIP C 1000PF J		C476			CC73HCH1H101J	CHIP C 100PF J	
C135,136			C93-1228-05	CHIP C 1UF M		C477-479			CK73FB0J226M	CHIP C 22UF M	
C137,138			CK73HB0J105K	CHIP C 1.0UF K		C480			CK73HB1A104K	CHIP C 0.10UF K	
C139,140			C93-1228-05	CHIP C 1UF M		C481			CC73HCH1H151J	CHIP C 150PF J	
C142			C93-1228-05	CHIP C 1UF M		C482		*	CC73HCH1H471J	CHIP C 470PF J	
C143,144			CC73HCH1H100D	CHIP C 10PF D		C483		*	CC73HCH1H102J	CHIP C 1000PF J	
C145-149			CK73HB1A104K	CHIP C 0.10UF K		C484			CK73HB1E103K	CHIP C 0.010UF K	
C151,152			C93-1228-05	CHIP C 1UF M		C485			CC73HCH1H151J	CHIP C 150PF J	
C153,154			CK73HB1A104K	CHIP C 0.10UF K		C486		*	CC73HCH1H471J	CHIP C 470PF J	
C158			CK73HB1A104K	CHIP C 0.10UF K		C487		*	CC73HCH1H102J	CHIP C 1000PF J	
C162			CK73HB1A104K	CHIP C 0.10UF K		C488			CK73HB1E103K	CHIP C 0.010UF K	
C164-169		*	CK73GB0J106M	CHIP C 10UF M		C489			CC73HCH1H151J	CHIP C 150PF J	
C200-203		*	CK73GB0J106M	CHIP C 10UF M		C490		*	CC73HCH1H471J	CHIP C 470PF J	
C207,208			CK73HB1A104K	CHIP C 0.10UF K		C491		*	CC73HCH1H102J	CHIP C 1000PF J	
C220-223			CK73HB0J105K	CHIP C 1.0UF K		C492			CK73HB1E103K	CHIP C 0.010UF K	
C224			CK73HB1E103K	CHIP C 0.010UF K		C493			CC73HCH1H151J	CHIP C 150PF J	
C226			CK73FB0J226M	CHIP C 22UF M		C494		*	CC73HCH1H471J	CHIP C 470PF J	
C229,230			CK73HB1E103K	CHIP C 0.010UF K		C495		*	CC73HCH1H102J	CHIP C 1000PF J	
C231		*	CC73HCH1H102J	CHIP C 1000PF J		C496			CK73HB1E103K	CHIP C 0.010UF K	
C250		*	CC73HCH1H102J	CHIP C 1000PF J		C497,498			CK73FB0J226M	CHIP C 22UF M	
C251,252			CC73HCH1H221J	CHIP C 220PF J		C504,505			CK73HB1H472K	CHIP C 4700PF K	
C253		*	CC73HCH1H102J	CHIP C 1000PF J		C506,507		*	CC73HCH1H102J	CHIP C 1000PF J	
C254,255			CC73HCH1H221J	CHIP C 220PF J		C510		*	CC73HCH1H102J	CHIP C 1000PF J	
C256			CK73HB1A104K	CHIP C 0.10UF K		C511		*	CK73GB0J106M	CHIP C 10UF M	
C261,262		*	CC73HCH1H331J	CHIP C 330PF J		C512			CK73HB0J105K	CHIP C 1.0UF K	
C263			CK73HB0J105K	CHIP C 1.0UF K		C513-515			CK73HB1A104K	CHIP C 0.10UF K	
C265			CK73GB1A105K	CHIP C 1.0UF K		C516			CK73HB1C333K	CHIP C 0.033UF K	
C266			CK73HB1C333K	CHIP C 0.033UF K		C517			CK73HB1E103K	CHIP C 0.010UF K	

E1 : KVT-729DVD E2 : KVT-729DVDY (Europe)
K : KVT-719DVD (North America) R1 : KVT-739DVD (Latin America)
X1 : KVT-739DVD (Australia) M1 : KVT-739DVD (Other Areas)

△ Indicates safety critical components.

PARTS LIST

DVD UNIT (X37-1120-03) IN DVD MECHANISM

Ref. No.	Add	New	Parts No.	Description	Destination
C518,519			CC73HCH1H470J	CHIP C 47PF J	
C520		*	CC73HCH1H102J	CHIP C 1000PF J	
C521			CK73HB0J105K	CHIP C 1.0UF K	
C522			CC73HCH1H151J	CHIP C 150PF J	
C523		*	CC73HCH1H471J	CHIP C 470PF J	
C524		*	CC73HCH1H102J	CHIP C 1000PF J	
C525			CK73HB1E103K	CHIP C 0.010UF K	
C526			CC73HCH1H151J	CHIP C 150PF J	
C527		*	CC73HCH1H471J	CHIP C 470PF J	
C528		*	CC73HCH1H102J	CHIP C 1000PF J	
C529			CK73HB1E103K	CHIP C 0.010UF K	
C530			CK73HB0J105K	CHIP C 1.0UF K	
CN1			E41-2594-05	FLAT CABLE CONNECTOR	
CN3		*	E41-2596-05	FLAT CABLE CONNECTOR	
CN6			E41-2603-05	FLAT CABLE CONNECTOR	
CN10		*	E41-2602-05	FLAT CABLE CONNECTOR	
L1			L92-0365-05	CHIP FERRITE	
L2-4		*	L92-0612-05	CHIP FERRITE	
L5,6		*	L92-0611-05	CHIP FERRITE	
L7,8		*	L92-0612-05	CHIP FERRITE	
L10		*	L33-2281-05	SMALL FIXED INDUCTOR	
L11		*	L33-2280-05	SMALL FIXED INDUCTOR	
L12-14			L92-0365-05	CHIP FERRITE	
L15		*	L92-0612-05	CHIP FERRITE	
L20		*	L92-0617-05	CHIP FERRITE	
L21		*	L92-0612-05	CHIP FERRITE	
L22			L92-0838-05	CHIP FERRITE	
X1		*	L77-2924-05	CRYSTAL RESONATOR (27MHZ,30PPM)	
CP1-9			RK74HB1J470J	CHIP-COM 47 J 1/16W	
CP36,37			RK74HB1J103J	CHIP-COM 10K J 1/16W	
CP44,45			RK74HB1J330J	CHIP-COM 33 J 1/16W	
CP54-56			RK74HB1J330J	CHIP-COM 33 J 1/16W	
CP57			RK74HB1J820J	CHIP-COM 82 J 1/16W	
CP58			RK74HB1J330J	CHIP-COM 33 J 1/16W	
CP59-68			RK74HB1J103J	CHIP-COM 10K J 1/16W	
CP69			RK74HB1J220J	CHIP-COM 22 J 1/16W	
CP70-73			RK74HB1J103J	CHIP-COM 10K J 1/16W	
R1-4			RK73HB1J103J	CHIP R 10K J 1/16W	
R5,6			RK73HH1J123D	CHIP R 12K D 1/16W	
R10			RK73HB1J163J	CHIP R 16K J 1/16W	
R16			RK73HB1J103J	CHIP R 10K J 1/16W	
R17			RK73HB1J271J	CHIP R 270 J 1/16W	
R19			RK73HB1J301J	CHIP R 300 J 1/16W	
R21,22			RK73HH1J103D	CHIP R 10K D 1/16W	
R24			RK73HB1J4R7J	CHIP R 4.7 J 1/16W	
R79			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R80			RK73HB1J220J	CHIP R 22 J 1/16W	
R81			RK73HB1J470J	CHIP R 47 J 1/16W	
R84,85			RK73HB1J202J	CHIP R 2.0K J 1/16W	
R86			RK73HB1J105J	CHIP R 1.0M J 1/16W	
R87			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R89			RK73HH1J303D	CHIP R 30K D 1/16W	
R90			RK73HB1J223J	CHIP R 22K J 1/16W	

Ref. No.	Add	New	Parts No.	Description	Destination
R91			RK73HB1J470J	CHIP R 47 J 1/16W	
R92			RK73HH1J123D	CHIP R 12K D 1/16W	
R94			RK73HH1J512D	CHIP R 5.1K D 1/16W	
R111			RK73HB1J220J	CHIP R 22 J 1/16W	
R112,113			RK73HB1J101J	CHIP R 100 J 1/16W	
R116			RK73HB1J103J	CHIP R 10K J 1/16W	
R119			RK73HB1J103J	CHIP R 10K J 1/16W	
R121			RK73HB1J182J	CHIP R 1.8K J 1/16W	
R122			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R131			RK73HB1J220J	CHIP R 22 J 1/16W	
R150,151			RK73HB1J100J	CHIP R 10 J 1/16W	
R152,153			RK73HB1J471J	CHIP R 470 J 1/16W	
R154,155			RK73HB1J751J	CHIP R 750 J 1/16W	
R156,157			RK73HB1J560J	CHIP R 56 J 1/16W	
R158,159			RK73HB1J2R2J	CHIP R 2.2 J 1/16W	
R162,163			RK73HB1J104J	CHIP R 100K J 1/16W	
R164,165			RK73HH1J101D	CHIP R 100 D 1/16W	
R200-203		*	RK73HH1J201D	CHIP R 200 D 1/16W	
R204-207		*	RK73HH1J151D	CHIP R 150 D 1/16W	
R208			RK73HB1J4R7J	CHIP R 4.7 J 1/16W	
R251			RK73HB1J1R0J	CHIP R 1.0 J 1/16W	
R254		*	RK73HH1J912D	CHIP R 9.1K D 1/16W	
R255		*	RK73HH1J752D	CHIP R 7.5K D 1/16W	
R256			RK73HH1J331D	CHIP R 330 D 1/16W	
R257		*	RK73HH1J912D	CHIP R 9.1K D 1/16W	
R258		*	RK73HH1J752D	CHIP R 7.5K D 1/16W	
R259			RK73HH1J331D	CHIP R 330 D 1/16W	
R260		*	RK73HH1J912D	CHIP R 9.1K D 1/16W	
R261		*	RK73HH1J752D	CHIP R 7.5K D 1/16W	
R262			RK73HH1J331D	CHIP R 330 D 1/16W	
R263		*	RK73HH1J912D	CHIP R 9.1K D 1/16W	
R264		*	RK73HH1J752D	CHIP R 7.5K D 1/16W	
R265			RK73HH1J331D	CHIP R 330 D 1/16W	
R266,267			RK73HH1J101D	CHIP R 100 D 1/16W	
R269			RK73HB1J100J	CHIP R 10 J 1/16W	
R275,276			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R300,301			RK73HH1J472D	CHIP R 4.7K D 1/16W	
R302,303		*	RK73HH1J183D	CHIP R 18K D 1/16W	
R304			RK73HH1J202D	CHIP R 2.0K D 1/16W	
R305			RK73HB1J163J	CHIP R 16K J 1/16W	
R350,351			RK73HB1J4R7J	CHIP R 4.7 J 1/16W	
R400-402			RK73HB1J470J	CHIP R 47 J 1/16W	
R409			RK73HB1J470J	CHIP R 47 J 1/16W	
R410,411			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R450			RK73HB1J202J	CHIP R 2.0K J 1/16W	
R458			RK73HB1J220J	CHIP R 22 J 1/16W	
R464,465			RK73HH1J101D	CHIP R 100 D 1/16W	
R467			RK73HB1J470J	CHIP R 47 J 1/16W	
R468-470			RK73HB1J103J	CHIP R 10K J 1/16W	
R471			RK73HB1J820J	CHIP R 82 J 1/16W	
R472,473			RK73HB1J330J	CHIP R 33 J 1/16W	
R475			R92-3350-05	CHIP R 2.2 F 1/10W	
R476		*	R92-5112-05	CHIP R 4.7 F 1/10W	
R477			RK73GH2A111D	CHIP R 110 D 1/10W	
R478			RK73HH1J472D	CHIP R 4.7K D 1/16W	

E1 : KVT-729DVD E2 : KVT-729DVDY (Europe)
K : KVT-719DVD (North America) R1 : KVT-739DVD (Latin America)
X1 : KVT-739DVD (Australia) M1 : KVT-739DVD (Other Areas)

△ Indicates safety critical components.

PARTS LIST

DVD UNIT (X37-1120-03) IN DVD MECHANISM

Ref. No.	Add	New	Parts No.	Description	Destination
R480			RK73HH1J202D	CHIP R 2.0K D 1/16W	
R481			RK73HH1J203D	CHIP R 20K D 1/16W	
R482-484			RK73HB1J820J	CHIP R 82 J 1/16W	
R485			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R486,487			RK73HB1J103J	CHIP R 10K J 1/16W	
R489			RK73HB1J220J	CHIP R 22 J 1/16W	
R491-493			RK73HB1J751J	CHIP R 750 J 1/16W	
R496,497			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R498			RK73HB1J101J	CHIP R 100 J 1/16W	
R501		*	RK73HH1J132D	CHIP R 1.3K D 1/16W	
R502			RK73HH1J333D	CHIP R 33K D 1/16W	
R503			RK73HH1J203D	CHIP R 20K D 1/16W	
R504			RK73HB1J242J	CHIP R 2.4K J 1/16W	
R505			RK73HB1J821J	CHIP R 820 J 1/16W	
R507			RK73HB1J103J	CHIP R 10K J 1/16W	
R508			RK73HB1J225J	CHIP R 2.2M J 1/16W	
R509			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R510			RK73HB1J103J	CHIP R 10K J 1/16W	
R511			RK73HB1J473J	CHIP R 47K J 1/16W	
R512,513			RK73HB1J103J	CHIP R 10K J 1/16W	
R514-517			RK73HB1J220J	CHIP R 22 J 1/16W	
R518-522			RK73HB1J103J	CHIP R 10K J 1/16W	
R523,524			RK73HB1J4R7J	CHIP R 4.7 J 1/16W	
R525			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R530			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R531			RK73HB1J471J	CHIP R 470 J 1/16W	
R532			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R533			RK73HH1J683D	CHIP R 68K D 1/16W	
R535-538		*	RK73HH1J821D	CHIP R 820 D 1/16W	
R539			RK73HB1J4R7J	CHIP R 4.7 J 1/16W	
R541		*	RK73HH1J122D	CHIP R 1.2K D 1/16W	
R544-559			RK73HB1J2R2J	CHIP R 2.2 J 1/16W	
R560			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R561,562			RK73HH1J682D	CHIP R 6.8K D 1/16W	
R563		*	RK73HH1J122D	CHIP R 1.2K D 1/16W	
R564			RK73HB1J4R7J	CHIP R 4.7 J 1/16W	
R574-576			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R583,584		*	RK73HH1J391D	CHIP R 390 D 1/16W	
R588		*	R92-5112-05	CHIP R 4.7 F 1/10W	
R591			RK73HB1J820J	CHIP R 82 J 1/16W	
R599,600			RK73HB1J103J	CHIP R 10K J 1/16W	
R601-604			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R605,606			RK73HB1J103J	CHIP R 10K J 1/16W	
R614			RK73HH1J102D	CHIP R 1.0K D 1/16W	
R615			RK73HB1J1R0J	CHIP R 1.0 J 1/16W	
R617			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R619			RK73HB1J513J	CHIP R 51K J 1/16W	
R620			RK73HB1J333J	CHIP R 33K J 1/16W	
R621			RK73HB1J103J	CHIP R 10K J 1/16W	
R622			RK73HB1J333J	CHIP R 33K J 1/16W	
R623			RK73HB1J220J	CHIP R 22 J 1/16W	
R624-626			RK73HH1J332D	CHIP R 3.3K D 1/16W	
R627			RK73HB1J103J	CHIP R 10K J 1/16W	
R628,629		*	R92-5147-05	CHIP R 1.2 D 1/4W	
R630,631		*	R92-5146-05	CHIP R 1.0 D 1/4W	

Ref. No.	Add	New	Parts No.	Description	Destination
R632		*	RK73HH1J270D	CHIP R 27 D 1/16W	
R633			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R634			RK73HB1J103J	CHIP R 10K J 1/16W	
R636			RK73HB1J220J	CHIP R 22 J 1/16W	
R638-645			RK73HB1J2R2J	CHIP R 2.2 J 1/16W	
S1		*	S68-0911-15	PUSH SWITCH	
S2		*	S68-0910-05	PUSH SWITCH	
D5,6		*	015AZ5.1-F(Y)	ZENER DIODE	
D7			1SS402-F	DIODE	
IC1		*	MN2DS0016AAUB	MOS-IC	
IC5		*	-	ROM IC	
IC9			-	ROM IC	
IC10		*	AN41250A-VB	ANALOGUE IC	
IC12		*	MM1671XNRE	ANALOGUE IC	
IC15		*	AK4396VF	MOS-IC	
IC21			-	MOS-IC	
IC39			NJU7042	ANALOGUE IC	
IC42			TC74VHC273FT	MOS-IC	
IC49		*	TC7SG04FU-F	MOS-IC	
IC50,51			NJM4580V-ZB	ANALOGUE IC	
IC54		*	IS45S16800TL1	DRAM IC	
IC55			TC7WH32FU-F	MOS-IC	
IC56		*	HD74LV1GW57AE	MOS-IC	
IC57		*	NJM2573V-ZB	ANALOGUE IC	
IC60		*	-	ANALOGUE IC	
Q1-4			DTA143XE	DIGITAL TRANSISTOR	
Q10,11			2SC4617	TRANSISTOR	
Q12,13		*	2SB1709	TRANSISTOR	
Q14,15			2SK3019	FET	
Q20,21			2SK3019	FET	
Q24		*	SSM3J15FU-F	FET	
Q25			DTA143XE	DIGITAL TRANSISTOR	
Q27			DTA143ZE	DIGITAL TRANSISTOR	
Q28,29			2SA1774	TRANSISTOR	
DIGITAL I/O UNIT(X88-2020-11)					
C100			CC73HCH1H101J	CHIP C 100PF J	
C102-105			CK73HB1A104K	CHIP C 0.10UF K	
C106		*	CK73GB0J106M	CHIP C 10UF M	
C107-110			CK73HB1A104K	CHIP C 0.10UF K	
C112			CK73EB0J226K	CHIP C 22UF K	
C113		*	C92-1983-05	ELECTRO 100UF 4WV	
C114-124			CK73HB1A104K	CHIP C 0.10UF K	
C125			CC73HCH1H220J	CHIP C 22PF J	
C126-130			CK73HB1A104K	CHIP C 0.10UF K	
C133,134		*	CK73GB0J106M	CHIP C 10UF M	
C135			CK73HB1A104K	CHIP C 0.10UF K	
C138,139			CC73HCH1H100D	CHIP C 10PF D	
C142		*	CE32BN0J221M	CHIP EL 220UF 6.3WV	
C143			CK73HB0J105K	CHIP C 1.0UF K	
C144			CK73HB1A104K	CHIP C 0.10UF K	
C149			CK73HB1A104K	CHIP C 0.10UF K	
C153			CK73HB0J105K	CHIP C 1.0UF K	
C154			CK73HB1A104K	CHIP C 0.10UF K	
C200			CC73HCH1H220J	CHIP C 22PF J	

E1 : KVT-729DVD E2 : KVT-729DVDY (Europe)
K : KVT-719DVD (North America) R1 : KVT-739DVD (Latin America)
X1 : KVT-739DVD (Australia) M1 : KVT-739DVD (Other Areas)

● IC5, IC21, and IC60 in the DVD unit (X37-1120-03) are not replaceable components. In case of defective of any of these ICs, replace the DVD mechanism assembly.

△ Indicates safety critical components.

PARTS LIST

DIGITAL I/O UNIT(X88-2020-11)

Ref. No.	Add	New	Parts No.	Description	Destination
C201 C202 C203,204 C217-226 C227,228		*	CK73HB1A104K CC73HCH1H220J CK73HB1A104K CK73HB1A104K CK73GB0J106M	CHIP C 0.10UF K CHIP C 22PF J CHIP C 0.10UF K CHIP C 0.10UF K CHIP C 10UF M	
C230,231 C233-236 C244 C247 C264		*	CK73HB1H102K CK73HB1A104K CK73GB0J106M CK73HB1H102K CK73HB1A104K	CHIP C 1000PF K CHIP C 0.10UF K CHIP C 10UF M CHIP C 1000PF K CHIP C 0.10UF K	
C275 C309-312 C314,315 C316-318 C322-324		*	CK73GB0J106M CK73HB1A104K CK73GB0J106M CK73HB1A104K CK73HB1A104K	CHIP C 10UF M CHIP C 0.10UF K CHIP C 10UF M CHIP C 0.10UF K CHIP C 0.10UF K	
C326,327 C329 C331 C332 C336		*	CK73GB0J106M CC73HCH1H270J CK73GB0J106M CK73HB1A104K CK73GB0J106M	CHIP C 10UF M CHIP C 27PF J CHIP C 10UF M CHIP C 0.10UF K CHIP C 10UF M	
C337,338 C340,341 C342 C349 C351		*	CK73HB1H152K CC73HCH1H331J CK73HB1E103K CC73HCH1H020C CK73HB1A104K	CHIP C 1500PF K CHIP C 330PF J CHIP C 0.010UF K CHIP C 2.0PF C CHIP C 0.10UF K	
C352 C354-357 C358 C360,361 C362		*	CK73GB0J106M CK73HB1A104K CC73HCH1H020C CK73HB1A104K CK73GB0J106M	CHIP C 10UF M CHIP C 0.10UF K CHIP C 2.0PF C CHIP C 0.10UF K CHIP C 10UF M	
C363 C367 C368 C375,376 C389			CK73HB1A104K CK73HB0J105K CK73HB1A104K CK73HB1A104K CK73HB1A104K	CHIP C 0.10UF K CHIP C 1.0UF K CHIP C 0.10UF K CHIP C 0.10UF K CHIP C 0.10UF K	
C392 C394,395 C400,401 C456 C460			CK73HB1A104K CK73HB1A104K CK73HB1A104K CK73EB1A106K CK73HB1A104K	CHIP C 0.10UF K CHIP C 0.10UF K CHIP C 0.10UF K CHIP C 10UF K CHIP C 0.10UF K	
C464 C468 C470,471 C478 C482		*	CK73HB1C473K CK73GB0J106M CK73HB1E103K CK73HB1A104K CK73GB1H222K	CHIP C 0.047UF K CHIP C 10UF M CHIP C 0.010UF K CHIP C 0.10UF K CHIP C 2200PF K	
C700-713 C715 C800 C801,802 C803,804			CK73HB1H222K CK73HB1A104K CK73HB1H222K CK73HB1H102K CK73HB1H222K	CHIP C 2200PF K CHIP C 0.10UF K CHIP C 2200PF K CHIP C 1000PF K CHIP C 2200PF K	
C805			CK73HB1H102K	CHIP C 1000PF K	
CN101 CN210 CN327		*	E41-2839-05 E41-2195-05 E41-2237-05	PIN ASSY FLAT CABLE CONNECTOR FLAT CABLE CONNECTOR	

Ref. No.	Add	New	Parts No.	Description	Destination
L101,102 L103,104 L200 L203-205 L212			L41-1005-33 L92-0321-05 L41-1005-33 L41-1005-33 L41-1005-33	SMALL FIXED INDUCTOR (10U) CHIP FERRITE SMALL FIXED INDUCTOR (10U) SMALL FIXED INDUCTOR (10U) SMALL FIXED INDUCTOR (10U)	
L301,302 L303 L304-310 X100 X202		*	L41-1005-33 L41-6805-33 L41-1005-33 L77-2941-05 L77-2917-15	SMALL FIXED INDUCTOR (10U) SMALL FIXED INDUCTOR (68U) SMALL FIXED INDUCTOR (10U) CRYSTAL RESONATOR (14.7456MHZ) CRYSTAL RESONATOR (32.768KHZ)	
CP104-109 CP117-127 CP128-134 CP135-138 CP139-142			RK74HB1J220J RK74HB1J220J RK74HB1J103J RK74HB1J220J RK74HB1J330J	CHIP-COM 22 J 1/16W CHIP-COM 22 J 1/16W CHIP-COM 10K J 1/16W CHIP-COM 22 J 1/16W CHIP-COM 33 J 1/16W	
CP143-146 CP147-154 CP155-160 CP200-203 CP204-207			RK74HB1J680J RK74HB1J103J RK74HB1J220J RK74HB1J220J RK74HB1J103J	CHIP-COM 68 J 1/16W CHIP-COM 10K J 1/16W CHIP-COM 22 J 1/16W CHIP-COM 22 J 1/16W CHIP-COM 10K J 1/16W	
R1,2 R3-5 R6 R7 R8			RK73HB1J473J RK73HB1J220J RK73HB1J473J RK73HB1J472J RK73HB1J473J	CHIP R 47K J 1/16W CHIP R 22 J 1/16W CHIP R 47K J 1/16W CHIP R 4.7K J 1/16W CHIP R 47K J 1/16W	
R9,10 R12 R13 R14 R15,16			RK73HB1J220J RK73HB1J000J RK73HB1J473J RK73HB1J561J RK73FB2B220J	CHIP R 22 J 1/16W CHIP R 0.0 J 1/16W CHIP R 47K J 1/16W CHIP R 560 J 1/16W CHIP R 22 J 1/8W	
R17,18 R24 R29 R30 R31			RK73HB1J153J RK73HB1J220J RK73HB1J473J RK73HB1J472J RK73HB1J473J	CHIP R 15K J 1/16W CHIP R 22 J 1/16W CHIP R 47K J 1/16W CHIP R 4.7K J 1/16W CHIP R 47K J 1/16W	
R33 R34-37 R104 R105 R107-109			RK73HB1J473J RK73FB2B270J RK73HB1J330J RK73HB1J103J RK73HB1J103J	CHIP R 47K J 1/16W CHIP R 27 J 1/8W CHIP R 33 J 1/16W CHIP R 10K J 1/16W CHIP R 10K J 1/16W	
R112 R115 R116 R118 R121			RK73HB1J222J RK73HB1J222J RK73HB1J103J RK73HB1J103J RK73HB1J222J	CHIP R 2.2K J 1/16W CHIP R 2.2K J 1/16W CHIP R 10K J 1/16W CHIP R 10K J 1/16W CHIP R 2.2K J 1/16W	
R123 R124 R126 R129 R130-132			RK73HB1J222J RK73HB1J473J RK73HB1J473J RK73HB1J222J RK73HB1J220J	CHIP R 2.2K J 1/16W CHIP R 47K J 1/16W CHIP R 47K J 1/16W CHIP R 2.2K J 1/16W CHIP R 22 J 1/16W	
R134 R137 R139 R140 R141,142			RK73HB1J220J RK73HB1J472J RK73HB1J105J RK73HB1J222J RK73FB2B220J	CHIP R 22 J 1/16W CHIP R 4.7K J 1/16W CHIP R 1.0M J 1/16W CHIP R 2.2K J 1/16W CHIP R 22 J 1/8W	

E1 : KVT-729DVD E2 : KVT-729DVDY (Europe)
K : KVT-719DVD (North America) R1 : KVT-739DVD (Latin America)
X1 : KVT-739DVD (Australia) M1 : KVT-739DVD (Other Areas)

△ Indicates safety critical components.

PARTS LIST

DIGITAL I/O UNIT(X88-2020-11)

Ref. No.	Add	New	Parts No.	Description	Destination	Ref. No.	Add	New	Parts No.	Description	Destination
R145,146			RK73HB1J153J	CHIP R 15K J 1/16W		R369			RK73HB1J101J	CHIP R 100 J 1/16W	
R147			RK73HB1J220J	CHIP R 22 J 1/16W		R370			RK73HB1J272J	CHIP R 2.7K J 1/16W	
R148			RK73HB1J473J	CHIP R 47K J 1/16W		R371			RK73HB1J101J	CHIP R 100 J 1/16W	
R149			RK73HB1J472J	CHIP R 4.7K J 1/16W		R372			RK73HB1J272J	CHIP R 2.7K J 1/16W	
R150			RK73HB1J220J	CHIP R 22 J 1/16W		R373			RK73HB1J103J	CHIP R 10K J 1/16W	
R153			RK73HB1J000J	CHIP R 0.0 J 1/16W		R376			RK73HB1J222J	CHIP R 2.2K J 1/16W	
R157-163			RK73HB1J220J	CHIP R 22 J 1/16W		R438			RK73HB1J103J	CHIP R 10K J 1/16W	
R164,165			RK73HB1J470J	CHIP R 47 J 1/16W		R440			RK73HB1J103J	CHIP R 10K J 1/16W	
R166-169			RK73HB1J220J	CHIP R 22 J 1/16W		R445			RK73HB1J473J	CHIP R 47K J 1/16W	
R170,171			RK73HB1J330J	CHIP R 33 J 1/16W		R446			RK73HB1J101J	CHIP R 100 J 1/16W	
R172,173			RK73HB1J680J	CHIP R 68 J 1/16W		R447			RK73GB2A515J	CHIP R 5.1M J 1/10W	
R174,175			RK73HB1J470J	CHIP R 47 J 1/16W		R452			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R176			RK73HB1J220J	CHIP R 22 J 1/16W		R455			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R177-192			RK73HB1J473J	CHIP R 47K J 1/16W		R458,459			RK73HB1J473J	CHIP R 47K J 1/16W	
R193-198			RK73HB1J220J	CHIP R 22 J 1/16W		R461			RK73HB1J473J	CHIP R 47K J 1/16W	
R199			RK73HB1J473J	CHIP R 47K J 1/16W		R462			RK73HB1J561J	CHIP R 560 J 1/16W	
R200			RK73HB1J330J	CHIP R 33 J 1/16W		R463-465			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R201			RK73HB1J000J	CHIP R 0.0 J 1/16W		R467			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R202			RK73HB1J106J	CHIP R 10M J 1/16W		R472,473			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R203			RK73HB1J334J	CHIP R 330K J 1/16W		R478			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R212,213			RK73HB1J100J	CHIP R 10 J 1/16W		R481,482			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R219-221			RK73HB1J472J	CHIP R 4.7K J 1/16W		R485-487			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R223			RK73HB1J473J	CHIP R 47K J 1/16W		R494			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R227			RK73HB1J100J	CHIP R 10 J 1/16W		R496			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R248-250			RK73HB1J473J	CHIP R 47K J 1/16W		R498			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R255			RK73HH1J104D	CHIP R 100K D 1/16W		R500			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R258-260			RK73HB1J473J	CHIP R 47K J 1/16W		R502,503			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R265-271			RK73HB1J472J	CHIP R 4.7K J 1/16W		R505-507			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R273			RK73HB1J000J	CHIP R 0.0 J 1/16W		R509			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R276			RK73HB1J000J	CHIP R 0.0 J 1/16W		R522			RK73HB1J680J	CHIP R 68 J 1/16W	
R284-287			RK73HB1J473J	CHIP R 47K J 1/16W		R523			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R291			RK73HB1J330J	CHIP R 33 J 1/16W		R524			RK73HB1J330J	CHIP R 33 J 1/16W	
R292-295			RK73HB1J473J	CHIP R 47K J 1/16W		R527			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R296			RK73HB1J000J	CHIP R 0.0 J 1/16W		R701			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R297			RK73HB1J103J	CHIP R 10K J 1/16W							
R304,305			RK73HB1J103J	CHIP R 10K J 1/16W		D102,103	*		AVRL1613R3FTA	VARIATOR	
R308			RK73HB1J103J	CHIP R 10K J 1/16W		D104,105			IMSA-6802-E	SURGE ABSORBER	
R310			RK73HB1J103J	CHIP R 10K J 1/16W		D300			DA204U	DIODE	
R316			RK73HB1J473J	CHIP R 47K J 1/16W		IC100			MIC2005-05YM6	MOS-IC	
R320-322			RK73HB1J103J	CHIP R 10K J 1/16W		IC104			TC7S86FU-F	MOS-IC	
R324,325			RK73HB1J103J	CHIP R 10K J 1/16W		IC105			SI-3018KM	ANALOGUE IC	
R326,327			RK73HB1J822J	CHIP R 8.2K J 1/16W		IC106			-	MICROPROCESSOR IC	
R328,329			RK73HB1J472J	CHIP R 4.7K J 1/16W		IC108			TC7SH04FU-F	MOS-IC	
R332,333			RK73HB1J151J	CHIP R 150 J 1/16W		IC200			TC7WHU04FU-F	MOS-IC	
R343			RK73HB1J101J	CHIP R 100 J 1/16W		IC201			TC74LCX245FT	MOS-IC	
R344			RK73HB1J680J	CHIP R 68 J 1/16W		IC202,203	*		K4S561632HUI7	DRAM IC	
R345			RK73HB1J152J	CHIP R 1.5K J 1/16W		IC205			TC74LCX245FT	MOS-IC	
R347	*		RK73HH1J100D	CHIP R 10 D 1/16W		IC207	*		341S1962	MICROPROCESSOR IC	
R348			RK73HH1J131D	CHIP R 130 D 1/16W		IC211	*		DW128F70NF9W7	ROM IC	
R351	*		RK73HH1J100D	CHIP R 10 D 1/16W		IC301	*		WM8728SEDSR	ANALOGUE IC	
R352			RK73HH1J131D	CHIP R 130 D 1/16W		IC302	*		BH7240AKV	MOS-IC	
R356	*		RK73HH1J100D	CHIP R 10 D 1/16W		IC305			NJM2100V-ZB	ANALOGUE IC	
R357			RK73HH1J131D	CHIP R 130 D 1/16W		IC309	*		LC74735NW8A20	MOS-IC	
R367			RK73HB1J101J	CHIP R 100 J 1/16W		IC316			TC7WHU04FU-F	MOS-IC	
R368			RK73HB1J272J	CHIP R 2.7K J 1/16W		IC322	*		L4032VN8IPINO	MOS-IC (48PIN 32V)	

E1 : KVT-729DVD E2 : KVT-729DVDY (Europe)
K : KVT-719DVD (North America) R1 : KVT-739DVD (Latin America)
X1 : KVT-739DVD (Australia) M1 : KVT-739DVD (Other Areas)

● IC106 in the DIGITAL I/O UNIT (X88-2020-11) is not a replaceable component. In case of defective of this IC, replace the entire unit (X88-2020-11).

△ Indicates safety critical components.

Ref. No.	Added	New	Parts No.	Description	Destination
IC332 IC336,337 Q302-304			NJM2864F05-ZB TC7WH14FU-F 2SA1576A	ANALOGUE IC MOS-IC TRANSISTOR	
DVD MECHANISM ASSY (X92-5920-00) (DVS-8530V)					
1	1A	*	A10-5331-41	CHASSIS	
2	2B		A10-5332-41	CHASSIS	
3	1A	*	A10-5333-31	CHASSIS	
4	3A	*	A10-5334-22	CHASSIS	
7	1B	*	D10-4918-12	ARM	
8	1B	*	D10-4919-12	ARM	
9	1B	*	D10-4920-02	LEVER	
10	1B	*	D10-4921-02	LEVER	
12	2B	*	D10-4922-12	SLIDER	
13	2A	*	D10-4923-12	ARM	
14	2B	*	D10-4924-13	ARM	
15	2B	*	D10-4925-12	ARM	
25	2B	*	D10-4938-04	SLIDER ASSY	
27	2A	*	D10-4945-04	LEVER	
28	2B	*	D12-0639-02	CAM	
31	2B	*	D13-2402-04	GEAR	
32	2B	*	D13-2403-04	GEAR	
33	2B	*	D13-2404-04	GEAR	
34	2B	*	D13-2405-04	GEAR	
35	2B	*	D13-2406-04	GEAR	
36	2B	*	D13-2407-04	GEAR	
40	2A		D13-2413-04	GEAR	
41	2A		D13-2415-04	GEAR	
42	2A		D13-2416-04	GEAR	
43	1B	*	D14-1013-14	ROLLER	
53	1B	*	D21-2487-04	SHAFT	
54	2A	*	D39-0269-05	DAMPER	
55	2A	*	D39-0270-05	DAMPER	
60	3A	*	F09-2825-23	SHEET	
65	2B	*	G01-3298-04	EXTENSION SPRING	
66	1B	*	G01-3299-04	EXTENSION SPRING	
67	2A	*	G01-3300-14	TORSION COIL SPRING	
68	1B	*	G01-4601-04	EXTENSION SPRING	
69	1B	*	G01-4602-04	EXTENSION SPRING	
70	1B	*	G01-4604-04	TORSION COIL SPRING	
74	2B	*	G01-4609-14	TORSION COIL SPRING	
75	1B	*	G02-1550-03	FLAT SPRING	
79	2A	*	J22-0475-11	MOUNTING HARDWARE	
80	3B	*	J22-0476-01	MOUNTING HARDWARE	
A	1A	*	N09-6382-05	MACHINE SCREW (M1.7X2.0)	
B	3B	*	N09-6408-15	TAPTITE SCREW (1.7X4 P-TITE)	
C	1B	*	N09-6426-15	MACHINE SCREW (LOAD ARM SCREW	
D	3A		N09-6104-05	MACHINE SCREW (2X10 S-TITE)	
93	2A	*	T99-0471-05	MAGNET	
96	1B	*	X94-2080-00	ROLLER ASSY	
98	2A	*	X94-2060-00	TRAVERSE ASSY (PICKUP,SPINDLE)	
VM1	2A	*	X94-2070-00	MOTOR ASSY (LOADING)	

Ref. No.	Add	New	Parts No.	Description	Destination

⚠ Indicates safety critical components.