



EXPLODED VIEW

B		: N09-2292-05
C	M2 x 8	: N30-2008-43
D	M2.6 x 6	: N30-2606-48
E	M3 x 16	: N30-3016-43
F	M3 x 6 (F)	: N32-3006-43
G	M4 x 8 (F)	: N32-4008-43
H		: N67-3008-48
J		: N80-2006-43
K		: N80-2608-43
L	M2.6 x 8 (Br-Tap)	: N87-2608-48



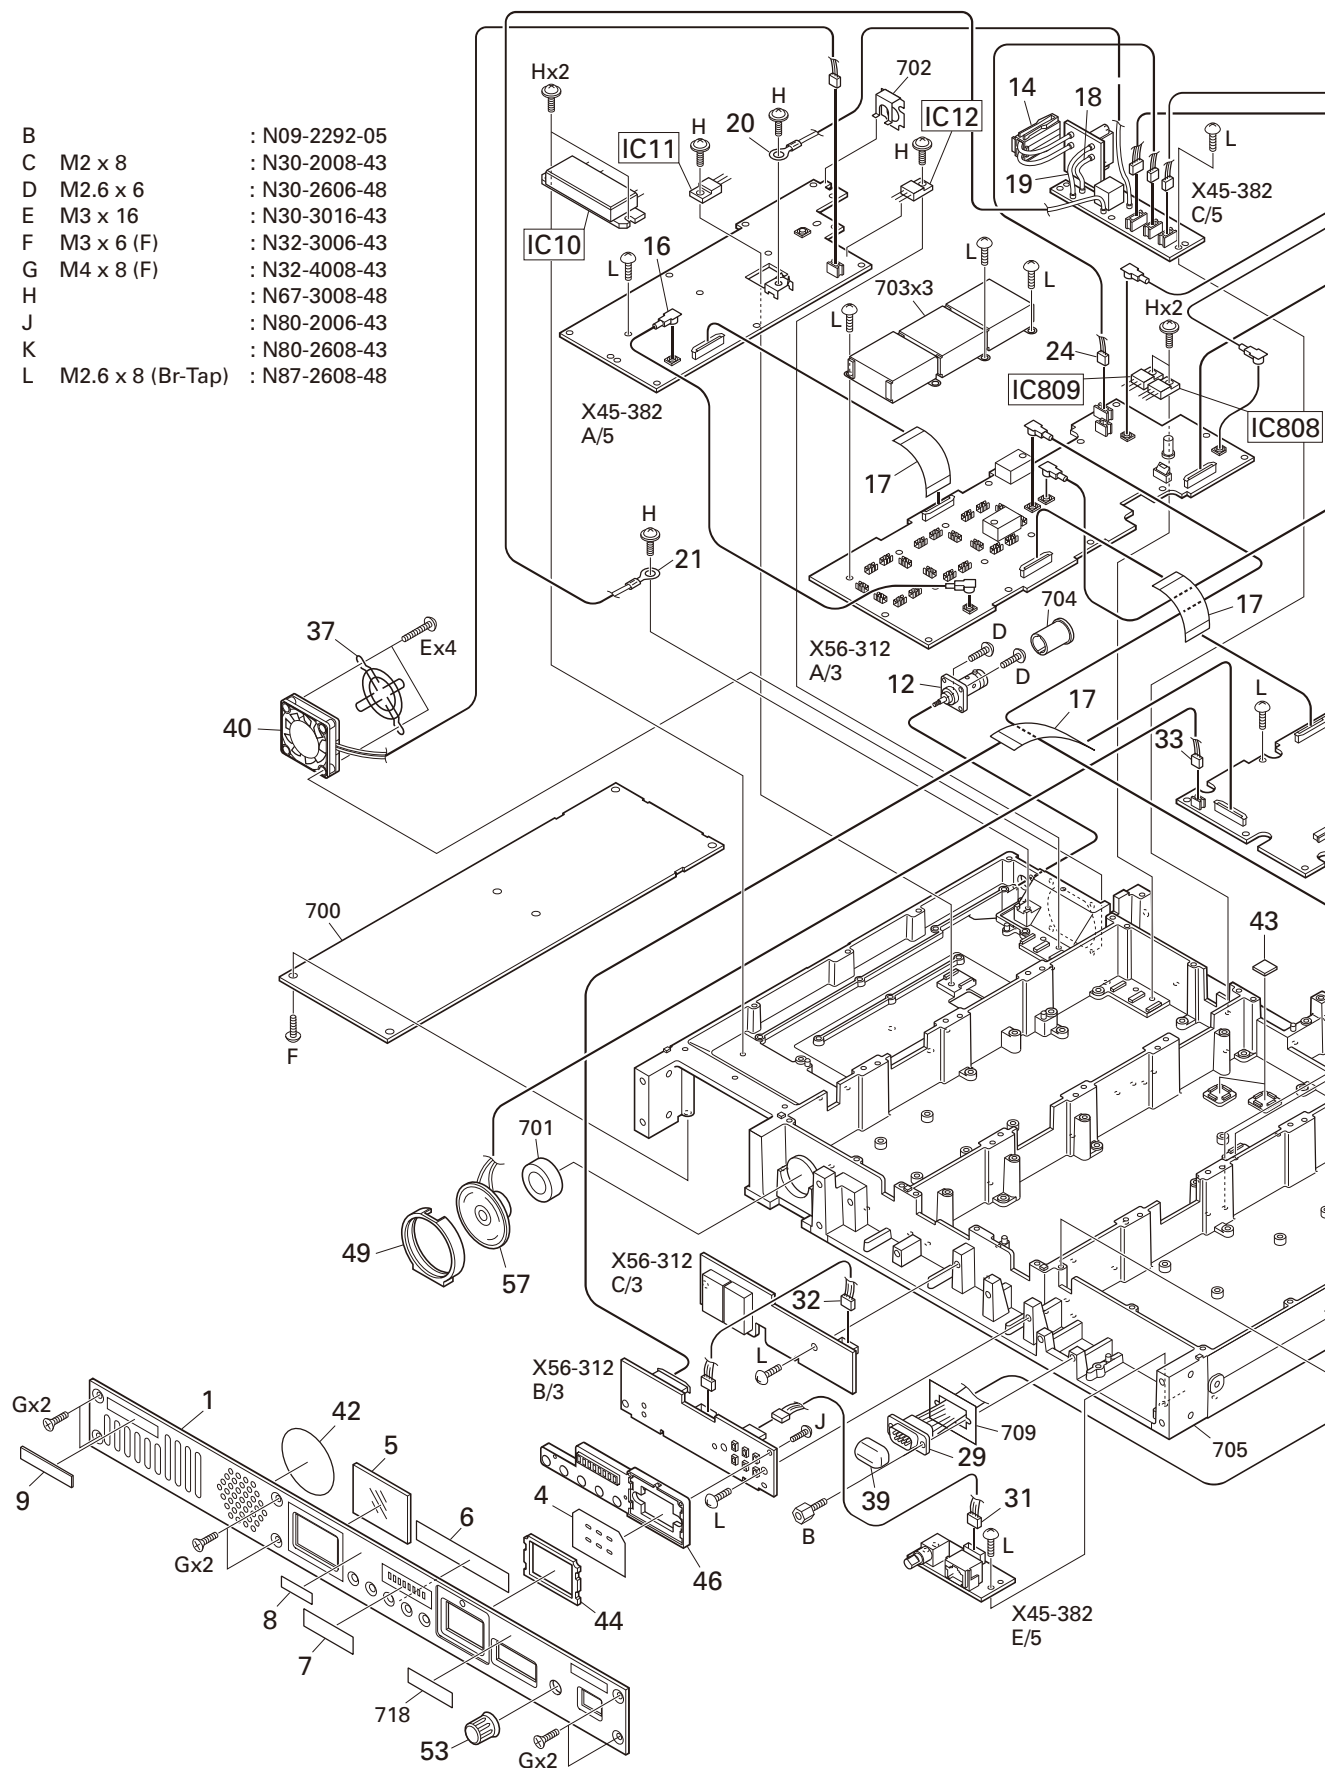

PACKING

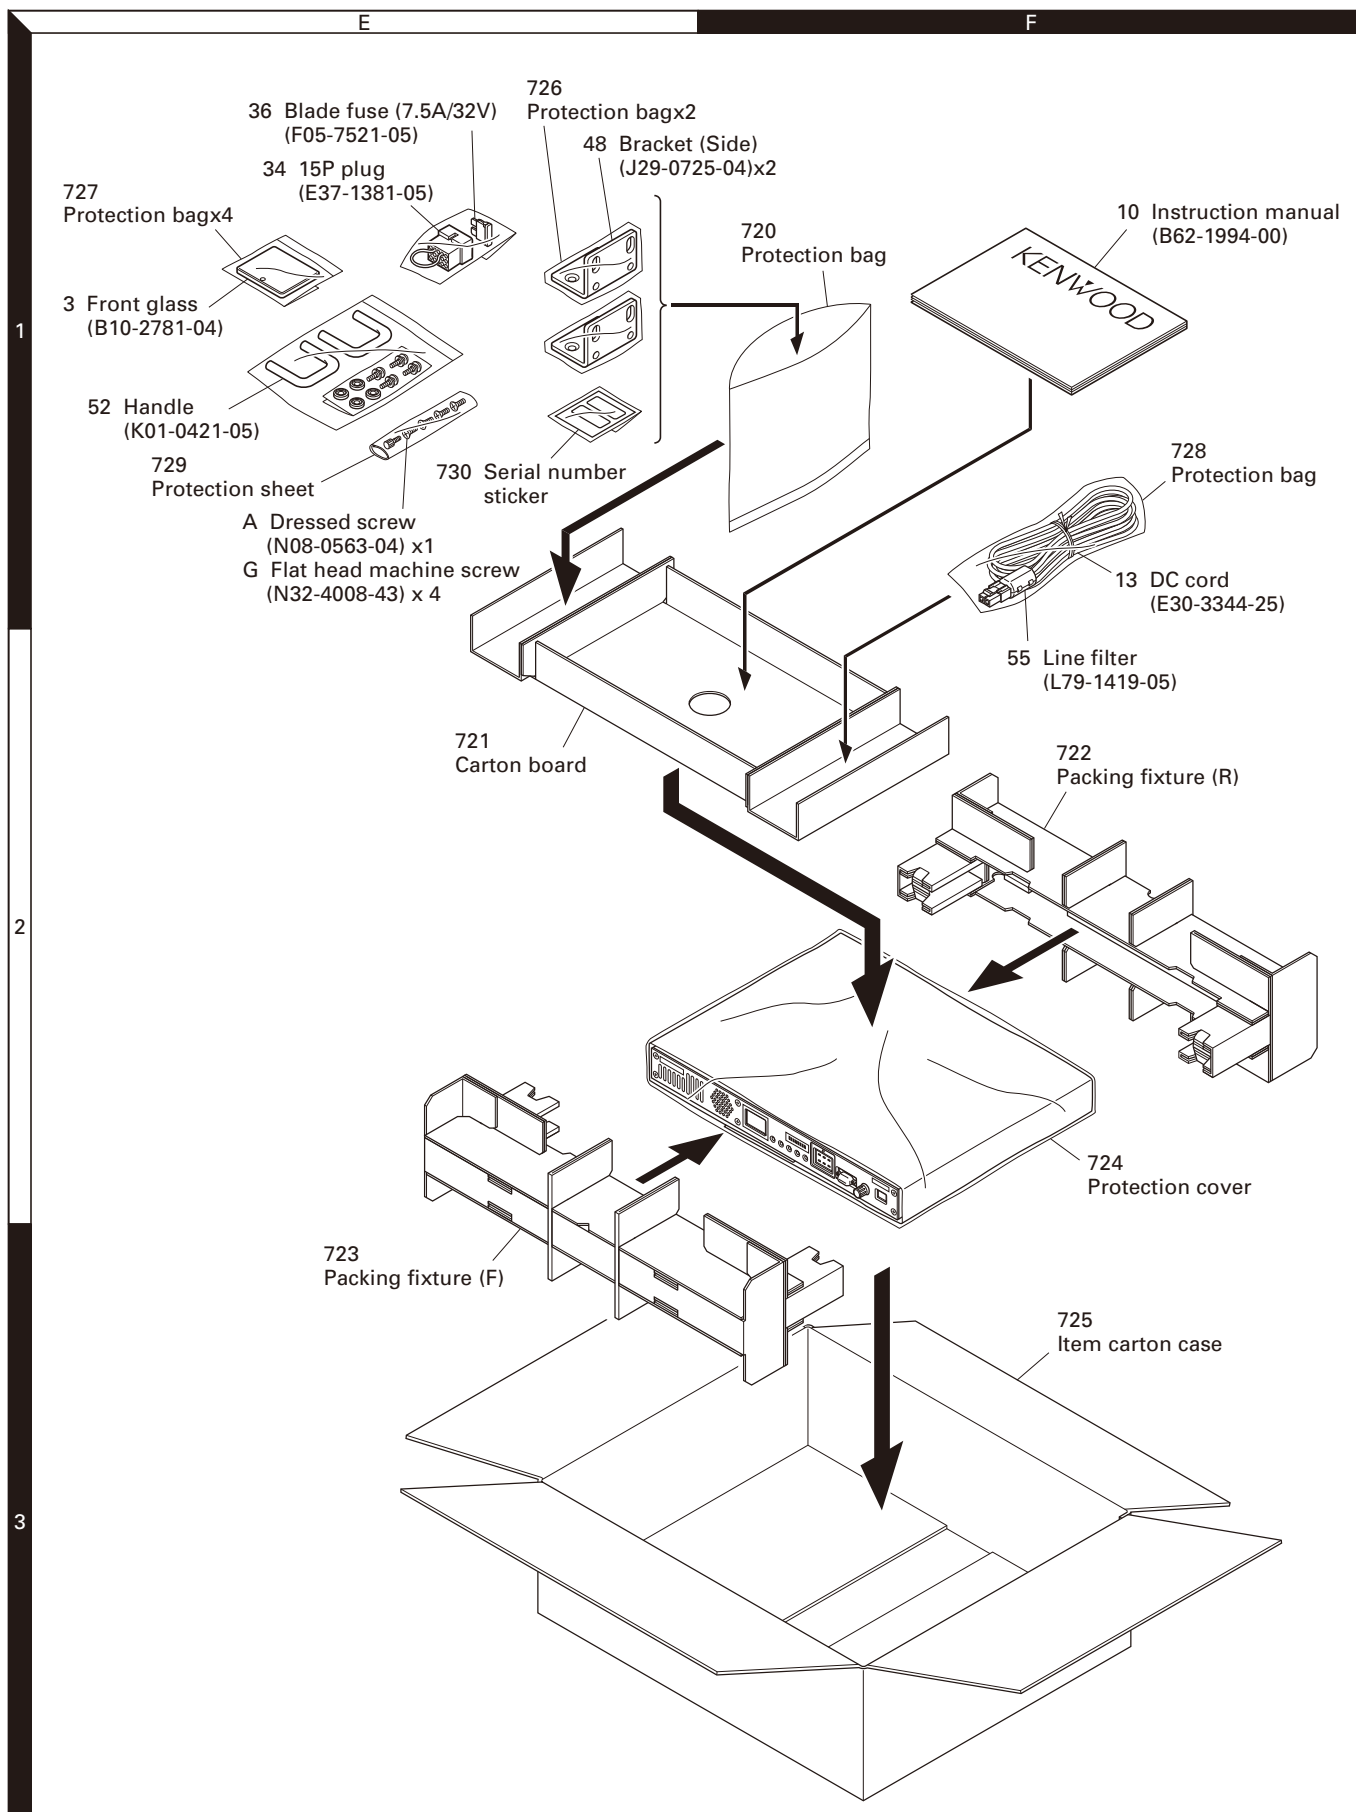

Parts with the exploded numbers larger than 700 are not supplied.

NXR-800

PARTS LIST

* New Parts. Δ indicates safety critical components.

Parts without **Parts No.** are not supplied.

Les articles non mentionnés dans le **Parts No.** ne sont pas fournis.

Teile ohne **Parts No.** werden nicht geliefert.

NXR-800 (Y54-3250-10)

FINAL UNIT (X45-3820-10)

Ref. No.	Address	New parts	Parts No.	Description	Destination
NXR-800					
1	3A	*	A62-1142-02	MAIN PANEL	
3	1E	*	B10-2781-04	FRONT GLASS	
4	3A	*	B11-1841-04	FILTER	
5	3A	*	B11-1842-04	FILTER	
6	3A	*	B11-1843-04	FILTER	
7	3A	*	B11-1844-04	FILTER	
8	3A	*	B42-7296-04	STICKER (NEXEDG)	
9	3A	*	B43-1188-04	BADGE	
10	1F	*	B62-1994-00	INSTRUCTION MANUAL	
12	2B	*	E04-0463-05	RF COAXIAL RECEPTACLE (BNC)	
13	1F	*	E30-3344-25	DC CORD ACCESSORY	
14	1B	*	E30-7581-05	DC CORD	
15	2C	*	E30-7582-05	TRUNK CABLE	
16	1B,2C	*	E30-7583-05	TRUNK CABLE	
17	1B,1C	*	E37-1295-05	FLAT CABLE (36P)	
18	1B	*	E37-1299-05	LEAD WIRE WITH TERMINAL (FUSE-DC +)	
19	1B	*	E37-1300-05	LEAD WIRE WITH TERMINAL (FUSE-DC -)	
20	1B	*	E37-1301-05	LEAD WIRE WITH TERMINAL (DC-PA +)	
21	1B	*	E37-1302-05	LEAD WIRE WITH TERMINAL (DC-PA -)	
22	2C	*	E37-1303-05	LEAD WIRE WITH CONNECTOR (BNC-RX)	
23	2D	*	E37-1304-05	LEAD WIRE WITH CONNECTOR (BNC-REF)	
24	1B	*	E37-1305-05	LEAD WIRE WITH CONNECTOR (DC-TX)	
25	1C	*	E37-1306-05	LEAD WIRE WITH CONNECTOR (DC-CONT)	
26	2C	*	E37-1307-05	LEAD WIRE WITH CONNECTOR (DC-RX)	
27	2D	*	E37-1308-05	LEAD WIRE WITH CONNECTOR (RX-DCDC)	
28	1D	*	E37-1310-05	LEAD WIRE WITH CONNECTOR (DSUB-25P)	
29	3B	*	E37-1311-05	LEAD WIRE WITH CONNECTOR (DSUB-9P)	
30	2D	*	E37-1313-05	LEAD WIRE WITH CONNECTOR (ACC15)	
31	3B	*	E37-1314-05	LEAD WIRE WITH CONNECTOR (DISP-MIC)	
32	3B	*	E37-1315-05	LEAD WIRE WITH CONNECTOR (DISP-17SEG)	
33	2B	*	E37-1316-05	LEAD WIRE WITH CONNECTOR (SP)	
34	1E		E37-1381-05	15P PLUG ACCESSORY	
36	1D,1E		F05-7521-05	BLADE FUSE (7.5A/32V) ACCESSORY	
37	2A	*	F07-1930-05	COVER (FAN)	
38	1D		F09-0445-05	CAP	
39	3B	*	F09-0484-05	CAP	
40	2A	*	F09-0488-05	FANMOTOR	
42	3A		G10-1343-04	FIBROUS SHEET (FRONT PANEL)	
43	2B	*	G11-4408-04	RUBBER SHEET (CONT-TR)	
44	3A	*	G13-2163-04	CUSHION (RF)	
46	3B	*	J19-5496-02	HOLDER (DISP)	
47	1C	*	J19-5497-05	HOLDER (CF)	
48	1E	*	J29-0725-04	BRACKET (SIDE)	
49	3A	*	J39-0655-03	SPACER (SP)	
50	2D		J61-0307-05	BAND (DC)	
52	1E		K01-0421-05	HANDLE ACCESSORY	
53	3A		K29-4539-04	KNOB (VOLUME)	
55	1F		L79-1419-05	LINE FILTER (DC)	
A	1E	*	N08-0563-04	DRESSED SCREW (FRONT GLASS)	
B	3B,1D		N09-2292-05	HEXAGON HEAD SCREW (DSUB)	
C	1C	*	N30-2008-43	PAN HEAD MACHINE SCREW (CF)	

L : Scandinavia

Y : PX (Far East, Hawaii)

Y : AAFES (Europe)

K : USA

T : England

X : Australia

P : Canada

E : Europe

M : Other Areas

Ref. No.	Address	New parts	Parts No.	Description	Destination
D	2C,1D		N30-2606-48	PAN HEAD MACHINE SCREW (BNC)	
E	2A	*	N30-3016-43	PAN HEAD MACHINE SCREW (FAN)	
F	2D,3D	*	N32-3006-43	FLAT HEAD MACHINE SCREW (TOP,REAR)	
G	3A,1E		N32-4008-43	FLAT HEAD MACHINE SCREW (PANEL)	
H	1B,1C		N67-3008-48	PAN HEAD SEMS SCREW (AVR)	
J	3B		N80-2006-43	PAN HEAD TAPTITE SCREW (DISP)	
K	1D		N80-2608-43	PAN HEAD TAPTITE SCREW (FESE)	
L	1B,2C		N87-2608-48	BRAZIER HEAD TAPTITE SCREW (PCB)	
57	3A	*	T07-0347-15	SPEAKER	
FINAL UNIT (X45-3820-10)					
C1,2		*	CD04BD1H101M	ELECTRO 100UF 50WV	
C7,8		*	CE32BM1V220M	CHIP EL 22UF 35WV	
C10,11			CK73GB1H471K	CHIP C 470PF K	
C15-17			CK73GB1H103K	CHIP C 0.010UF K	
C21			CK73GB1H471K	CHIP C 470PF K	
C25,26			CK73GB1H103K	CHIP C 0.010UF K	
C29,30			CK73GB1H471K	CHIP C 470PF K	
C32		*	CE32BM1V220M	CHIP EL 22UF 35WV	
C33		*	CE32AU1E100M	CHIP EL 10UF 25WV	
C36			CK73GB1H471K	CHIP C 470PF K	
C37			CK73GB1H103K	CHIP C 0.010UF K	
C38		*	CE32AU1E100M	CHIP EL 10UF 25WV	
C39			CK73GB1H471K	CHIP C 470PF K	
C40			CK73GB1H103K	CHIP C 0.010UF K	
C41,42			CK73GB1H471K	CHIP C 470PF K	
C44			CE32CL1V100M	CHIP EL 10UF 35WV	
C45,46			CK73GB1H471K	CHIP C 470PF K	
C47			CK73GB1H103K	CHIP C 0.010UF K	
C49			CK73GB1H104K	CHIP C 0.10UF K	
C50-52			CK73GB1H471K	CHIP C 470PF K	
C53			CK73GB1H103K	CHIP C 0.010UF K	
C54			CK73GB1H471K	CHIP C 470PF K	
C58			CK73GB1H471K	CHIP C 470PF K	
C59			CK73GB1H103K	CHIP C 0.010UF K	
C60			C93-0572-05	CHIP C 100PF J	
C61			CK73GB1H471K	CHIP C 470PF K	
C62			CK73GB1H103K	CHIP C 0.010UF K	
C63-65			CK73GB1H471K	CHIP C 470PF K	
C67			CK73GB1H471K	CHIP C 470PF K	
C68			CE32CL1V100M	CHIP EL 10UF 35WV	
C70			CK73GB1H103K	CHIP C 0.010UF K	
C71-75			CK73GB1H471K	CHIP C 470PF K	
C77,78			CK73GB1H471K	CHIP C 470PF K	
C80			CK73GB1H103K	CHIP C 0.010UF K	
C82			CK73GB1H104K	CHIP C 0.10UF K	
C83			CK73GB1H471K	CHIP C 470PF K	
C85			CC73GCH1H080D	CHIP C 8.0PF D	
C86			CK73GB1H103K	CHIP C 0.010UF K	
C87			CC73GCH1H120J	CHIP C 12PF J	
C88-90			CK73GB1H471K	CHIP C 470PF K	
C94,95			CK73GB1H104K	CHIP C 0.10UF K	
C96-102			CK73GB1H471K	CHIP C 470PF K	

PARTS LIST

FINAL UNIT (X45-3820-10)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
C104			CK73GB1H471K	CHIP C 470PF K		CN8			E41-2671-05	PIN ASSY	
C105			C93-0599-05	CHIP C 470PF K		CN11			E41-2673-05	PIN ASSY	
C106			CK73GB1H471K	CHIP C 470PF K		CN12			E41-2672-05	PIN ASSY	
C108,109			CK73GB1H471K	CHIP C 470PF K		CN15			E41-2672-05	PIN ASSY	
C111			C93-0552-05	CHIP C 2.0PF C		CN19			E04-0193-05	PIN SOCKET	
C112			CK73GB1H471K	CHIP C 470PF K		CN20			E40-6656-05	PIN ASSY	
C113,114			CK73GB1H472K	CHIP C 4700PF K		CN701	*		E41-2741-05	PIN ASSY	
C115			CK73GB1H471K	CHIP C 470PF K		CN905	*		E41-1483-05	PIN ASSY	
C117			CK73GB1H103K	CHIP C 0.010UF K		J901	*		E58-0526-05	MODULAR JACK	
C119			CC73GCH1H040C	CHIP C 4.0PF C		CN4			J13-0071-05	FUSE HOLDER	
C122			C93-0572-05	CHIP C 100PF J		L1			L92-0179-05	CHIP FERRITE	
C123			C93-0566-05	CHIP C 33PF J		L3			L79-0558-05	FILTER	
C124			CK73GB1H471K	CHIP C 470PF K		L4			L92-0131-05	CHIP FERRITE	
C126			C93-0554-05	CHIP C 4.0PF C		L5			L34-4518-05	AIR-CORE COIL	
C127,128			CK73GB1H471K	CHIP C 470PF K		L9			L34-4638-05	AIR-CORE COIL	
C131			C93-0557-05	CHIP C 7.0PF D		L10			L34-4605-05	AIR-CORE COIL	
C133,134			CK73GB1H471K	CHIP C 470PF K		L12			L34-4518-05	AIR-CORE COIL	
C138			CE32CL1V100M	CHIP EL 10UF 35WV		L13-15			L34-4517-05	AIR-CORE COIL	
C141			C93-0599-05	CHIP C 470PF K		L17			L34-4523-05	AIR-CORE COIL	
C147			C93-0557-05	CHIP C 7.0PF D		L701,702			L41-4705-33	SMALL FIXED INDUCTOR (47UH)	
C149			C93-0557-05	CHIP C 7.0PF D		L703,704			L41-1095-33	SMALL FIXED INDUCTOR (1.0UH)	
C150			CK73GB1H104K	CHIP C 0.10UF K		L900	*		L92-0447-05	BEADS CORE	
C158			C93-0552-05	CHIP C 2.0PF C		CP1			RK75GB1J103J	CHIP-COM 10K J 1/16W	
C159			C93-0553-05	CHIP C 3.0PF C		R1			RK73FB2B271J	CHIP R 270 J 1/8W	
C161			CC73FCH1H220J	CHIP C 22PF J		R2			RK73FB2B180J	CHIP R 18 J 1/8W	
C162			CK73GB1H104K	CHIP C 0.10UF K		R3			RK73FB2B271J	CHIP R 270 J 1/8W	
C167			CK73GB1H104K	CHIP C 0.10UF K		R4	*		R92-3604-05	CHIP R 0.047 D 1W	
C169,170			CK73GB1H471K	CHIP C 470PF K		R9			RK73GB2A101J	CHIP R 100 J 1/10W	
C187,188		*	C92-0905-05	OS-CON 47UF 35WV		R11			RS14DB3A4R7J	FL-PROOF RS 4.7 J 1W	
C189			CK73GB1H103K	CHIP C 0.010UF K		R12,13			RK73GB2A103J	CHIP R 10K J 1/10W	
C190			CK73GB1H471K	CHIP C 470PF K		R15			RK73GB2A332J	CHIP R 3.3K J 1/10W	
C191			CK73GB1E105K	CHIP C 1.0UF K		R17			RK73GB2A103J	CHIP R 10K J 1/10W	
C701			CK73GB1E105K	CHIP C 1.0UF K		R18			RK73GB2A473J	CHIP R 47K J 1/10W	
C702,703			CK73GB1H471K	CHIP C 470PF K		R20			RK73GB2A104J	CHIP R 100K J 1/10W	
C704		*	CE32AU1E100M	CHIP EL 10UF 25WV		R21,22			RK73GB2A184J	CHIP R 180K J 1/10W	
C705			CK73GB1E105K	CHIP C 1.0UF K		R23			RK73FB2B000J	CHIP R 0.0 J 1/8W	
C706,707			CK73GB1H471K	CHIP C 470PF K		R25			RK73GB2A104J	CHIP R 100K J 1/10W	
C708			CE32CL1V100M	CHIP EL 10UF 35WV		R26			RK73EB2E101J	CHIP R 100 J 1/4W	
C709		*	CE32AU1C330M	CHIP EL 33UF 16WV		R27			RK73GB2A224J	CHIP R 220K J 1/10W	
C710			CK73GB1H104K	CHIP C 0.10UF K		R28			RK73GB2A474J	CHIP R 470K J 1/10W	
C711			CS77CB21C100M	CHIP TNTL 10UF 16WV		R29,30			RK73GB2A103J	CHIP R 10K J 1/10W	
C712		*	CE32AU1C330M	CHIP EL 33UF 16WV		R31-33			RK73GB2A104J	CHIP R 100K J 1/10W	
C713,714			CK73GB1H104K	CHIP C 0.10UF K		R34			RK73FB2B8R2J	CHIP R 8.2 J 1/8W	
C715		*	CE32AU1C330M	CHIP EL 33UF 16WV		R35,36			RK73GB2A823J	CHIP R 82K J 1/10W	
C716			CK73GB1H104K	CHIP C 0.10UF K		R37			RK73GB2A104J	CHIP R 100K J 1/10W	
C717,718			CK73GB1H471K	CHIP C 470PF K		R38			RK73FB2B151J	CHIP R 150 J 1/8W	
C900			CK73GB1H104K	CHIP C 0.10UF K		R39,40			RK73GB2A334J	CHIP R 330K J 1/10W	
C901			CK73GB1H102K	CHIP C 1000PF K		R41			RK73GB2A000J	CHIP R 0.0 J 1/10W	
C902			CC73GCH1H101J	CHIP C 100PF J		R42			RK73FB2B8R2J	CHIP R 8.2 J 1/8W	
C904			CC73GCH1H101J	CHIP C 100PF J		R44			RK73FB2B8R2J	CHIP R 8.2 J 1/8W	
C905			CK73FB0J106K	CHIP C 10UF K		R45,46			RK73GB2A000J	CHIP R 0.0 J 1/10W	
C906-908			CK73GB1H102K	CHIP C 1000PF K		R47			RK73FB2B151J	CHIP R 150 J 1/8W	
C909,910			CC73GCH1H101J	CHIP C 100PF J		R49			RK73GB2A000J	CHIP R 0.0 J 1/10W	
C912,913			CC73GCH1H101J	CHIP C 100PF J		R50,51			RK73GB2A104J	CHIP R 100K J 1/10W	
C914			CK73GB1H104K	CHIP C 0.10UF K		R52			RK73FB2B8R2J	CHIP R 8.2 J 1/8W	
C915			CC73GCH1H101J	CHIP C 100PF J		R53,54			RK73GB2A154J	CHIP R 150K J 1/10W	
C916			CK73GB1H102K	CHIP C 1000PF K		R55-58			RK73GB2A104J	CHIP R 100K J 1/10W	
CN1			E04-0193-05	PIN SOCKET		R59,60			RK73GB2A103J	CHIP R 10K J 1/10W	
CN2			E23-0902-05	TERMINAL							

PARTS LIST

FINAL UNIT (X45-3820-10)

CONTROL UNIT (X53-4130-10)

Ref. No.	Address	New parts	Parts No.	Description	Destination
R61			RK73EB2E101J	CHIP R 100 J 1/4W	
R62			RK73GH2A563D	CHIP R 56K D 1/10W	
R63			RK73GH2A333D	CHIP R 33K D 1/10W	
R64			RK73GB2A474J	CHIP R 470K J 1/10W	
R65			RK73GB2A473J	CHIP R 47K J 1/10W	
R66			RK73GB2A100J	CHIP R 10 J 1/10W	
R67			RS14DB3A121J	FL-PROOF RS 120 J 1W	
R68			RK73GB2A104J	CHIP R 100K J 1/10W	
R69			RK73GB2A103J	CHIP R 10K J 1/10W	
R70-72			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R75,76			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R78			RK73GB2A104J	CHIP R 100K J 1/10W	
R89			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R92			RK73GB2A104J	CHIP R 100K J 1/10W	
R98			RK73FB2B000J	CHIP R 0.0 J 1/8W	
R102			RK73GH2A471D	CHIP R 470 D 1/10W	
R104			RK73GB2A393J	CHIP R 39K J 1/10W	
R105			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R106			RK73GB2A474J	CHIP R 470K J 1/10W	
R107			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R110			RK73GB2A394J	CHIP R 390K J 1/10W	
R121			RK73GH2A103D	CHIP R 10K D 1/10W	
R123			RK73GB2A103J	CHIP R 10K J 1/10W	
R124			RK73FB2B220J	CHIP R 22 J 1/8W	
R125			R92-1061-05	JUMPER REST 0 OHM	
R133			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R136			RK73GB2A394J	CHIP R 390K J 1/10W	
R137-140			RK73GB2A104J	CHIP R 100K J 1/10W	
R142			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R144			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R900			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R901			RK73GB2A182J	CHIP R 1.8K J 1/10W	
R902			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R903			RK73GB2A681J	CHIP R 680 J 1/10W	
R905,906			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R907			RK73GH2A153D	CHIP R 15K D 1/10W	
R909			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R910			RK73GB2A182J	CHIP R 1.8K J 1/10W	
R911,912			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R914			RK73GB2A222J	CHIP R 2.2K J 1/10W	
VR1			R32-0744-05	SEMI FIXED VARIABLE RESISTOR	
VR2			R32-0754-05	SEMI FIXED VARIABLE RESISTOR	
VR902		*	R31-0668-05	POTENTIOMETER (10K)	
D4		*	Z5W27V	SURGE ABSORBER	
D5			DSM3MA1-RPB	DIODE	
D6			1SS355	DIODE	
D7		*	02CZ5.6(Y)F	ZENER DIODE	
D9,10			HSB88WS	DIODE	
D11			L7091CER	DIODE	
D14-16			L7091CER	DIODE	
D19		*	02CZ4.7(Y)F	ZENER DIODE	
D902			AVRM16270MABB	VARISTOR	
IC1		*	LTC6101BIS5-F	ANALOGUE IC	
IC2			NJM2904E-ZB	ANALOGUE IC	
IC3			TA78L05FF	MOS-IC	
IC4-6			NJM2904E-ZB	ANALOGUE IC	
IC7		*	S-8130AC	MOS-IC	
IC8			NJM2904E-ZB	ANALOGUE IC	
IC9			S24CS02AFJTBG	ROM IC	

Ref. No.	Address	New parts	Parts No.	Description	Destination
IC10	1A	*	RA13H4452M101	MOS-IC	
IC11	1B		NJM7808FA-ZB	BI-POLAR IC	
IC12	1B	*	NJM7805FA-ZB	BI-POLAR IC	
IC15			NJM2904E-ZB	ANALOG IC	
IC701			NJM78L05UA-ZB	BI-POLAR IC	
IC702		*	LTC1046IS8	MOS-IC	
IC703		*	TK72130CS	BI-POLAR IC	
Q2			SSM3K15TE(F)	FET	
Q3		*	SSM3J01F	FET	
Q4			2SJ506-E(S)	FET	
Q5,6			SSM3K15TE(F)	FET	
Q8			SSM3K15TE(F)	FET	
Q14			SSM3K15TE(F)	FET	
CONTROL UNIT (X53-4130-10)					
C1-5			CK73GB1H102K	CHIP C 1000PF	K
C6			CC73GCH1H101J	CHIP C 100PF	J
C7			CK73GB1H102K	CHIP C 1000PF	K
C8			CC73GCH1H101J	CHIP C 100PF	J
C9			CK73GB1H102K	CHIP C 1000PF	K
C10			CC73GCH1H101J	CHIP C 100PF	J
C12-16			CK73GB1H102K	CHIP C 1000PF	K
C18-28			CK73GB1H102K	CHIP C 1000PF	K
C29			CC73GCH1H101J	CHIP C 100PF	J
C30-33			CK73GB1H102K	CHIP C 1000PF	K
C34			CC73GCH1H101J	CHIP C 100PF	J
C35			CK73GB1H102K	CHIP C 1000PF	K
C36			CC73GCH1H101J	CHIP C 100PF	J
C37			CK73GB1H104K	CHIP C 0.10UF	K
C39-47			CK73GB1H102K	CHIP C 1000PF	K
C49			CC73GCH1H101J	CHIP C 100PF	J
C50-53			CK73GB1H102K	CHIP C 1000PF	K
C54			CC73GCH1H101J	CHIP C 100PF	J
C55			CK73GB1H102K	CHIP C 1000PF	K
C56			CC73GCH1H101J	CHIP C 100PF	J
C57			CK73GB1H102K	CHIP C 1000PF	K
C58			CC73GCH1H101J	CHIP C 100PF	J
C60-62			CK73GB1H102K	CHIP C 1000PF	K
C63			CK73GB1H104K	CHIP C 0.10UF	K
C64			CK73GB1H102K	CHIP C 1000PF	K
C65			CK73FB0J106K	CHIP C 10UF	K
C66			CK73GB1H102K	CHIP C 1000PF	K
C67			CK73FB0J106K	CHIP C 10UF	K
C68			CK73GB1H102K	CHIP C 1000PF	K
C69			CK73GB1H104K	CHIP C 0.10UF	K
C70			CK73GB1H102K	CHIP C 1000PF	K
C71			CK73FB0J106K	CHIP C 10UF	K
C72			CK73GB1E105K	CHIP C 1.0UF	K
C73			CC73GCH1H101J	CHIP C 100PF	J
C74			CK73GB1H104K	CHIP C 0.10UF	K
C75			CC73GCH1H101J	CHIP C 100PF	J
C76			CK73GB1H102K	CHIP C 1000PF	K
C77		*	C93-0912-05	CHIP C 100UF	M
C78			CK73FB0J106K	CHIP C 10UF	K
C79-82			CK73GB1H104K	CHIP C 0.10UF	K
C83-86			CK73FB0J106K	CHIP C 10UF	K
C87		*	C93-0912-05	CHIP C 100UF	M
C88			CK73GB1H103K	CHIP C 0.010UF	K
C89,90			CC73GCH1H221J	CHIP C 220PF	J

PARTS LIST

CONTROL UNIT (X53-4130-10)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
C92			CC73GCH1H100D	CHIP C 10PF D		C205			CK73GB1H182K	CHIP C 1800PF K	
C95		*	C93-0912-05	CHIP C 100UF M		C206		*	C93-0912-05	CHIP C 100UF M	
C96			CC73GCH1H101J	CHIP C 100PF J		C207			CK73GB1H102K	CHIP C 1000PF K	
C97			CK73GB1H104K	CHIP C 0.10UF K		C208			CK73FB0J106K	CHIP C 10UF K	
C98			CK73FB0J106K	CHIP C 10UF K		C209			CK73GB1H103K	CHIP C 0.010UF K	
C99			CK73GB1H102K	CHIP C 1000PF K		C212			CC73GCH1H120J	CHIP C 12PF J	
C102			CC73GCH1H150J	CHIP C 15PF J		C213			CK73GB1H103K	CHIP C 0.010UF K	
C103			CC73GCH1H101J	CHIP C 100PF J		C215			CK73GB1H104K	CHIP C 0.10UF K	
C104-106		*	CD04BD1H221M	ELECTRO 220UF 50WV		C216			CC73GCH1H100D	CHIP C 10PF D	
C107			CK73GB1H102K	CHIP C 1000PF K		C219			CC73GCH1H100D	CHIP C 10PF D	
C108			CK73GB1H104K	CHIP C 0.10UF K		C222			CC73GCH1H150J	CHIP C 15PF J	
C109			CK73GB1H102K	CHIP C 1000PF K		C223			CK73GB1H103K	CHIP C 0.010UF K	
C110		*	C93-0912-05	CHIP C 100UF M		C224			CK73GB1E105K	CHIP C 1.0UF K	
C111			CK73GB1H104K	CHIP C 0.10UF K		C225			CK73GB1H104K	CHIP C 0.10UF K	
C119			CC73GCH1H181J	CHIP C 180PF J		C226			CK73FB0J106K	CHIP C 10UF K	
C120			CK73GB1H102K	CHIP C 1000PF K		C227			CK73GB1H102K	CHIP C 1000PF K	
C121			CK73FB0J106K	CHIP C 10UF K		C229			CC73GCH1H101J	CHIP C 100PF J	
C122			CC73GCH1H101J	CHIP C 100PF J		C230			CK73GB1E105K	CHIP C 1.0UF K	
C123			CK73GB1H472K	CHIP C 4700PF K		C234,235			CK73GB1H104K	CHIP C 0.10UF K	
C125			CK73GB1H472K	CHIP C 4700PF K		C236		*	C90-4120-05	ELECTRO 470UF 35WV	
C127			CK73GB1H182K	CHIP C 1800PF K		C237			CK73GB1H104K	CHIP C 0.10UF K	
C128			CC73GCH1H101J	CHIP C 100PF J		C239			C92-0777-05	ELECTRO 1000UF 25WV	
C130		*	CD04BD1H221M	ELECTRO 220UF 50WV		C244			CK73GB1H104K	CHIP C 0.10UF K	
C131		*	CE32AU1C330M	CHIP EL 33UF 16WV		C245			CK73FB0J106K	CHIP C 10UF K	
C133		*	CD04BD1H221M	ELECTRO 220UF 50WV		C246,247			CK73GB1H102K	CHIP C 1000PF K	
C134			CK73GB1H104K	CHIP C 0.10UF K		C248,249			CK73GB1H104K	CHIP C 0.10UF K	
C137,138			CK73GB1H102K	CHIP C 1000PF K		C250			CK73FB0J106K	CHIP C 10UF K	
C139,140		*	CE32AU1C330M	CHIP EL 33UF 16WV		C251			CK73GB1H102K	CHIP C 1000PF K	
C141			CK73GB1H102K	CHIP C 1000PF K		C252			CK73FB0J106K	CHIP C 10UF K	
C144		*	CE32AU1C330M	CHIP EL 33UF 16WV		C253-255			CK73GB1H103K	CHIP C 0.010UF K	
C145			CK73GB1H182K	CHIP C 1800PF K		C256			CK73GB1H104K	CHIP C 0.10UF K	
C146			CK73GB1H104K	CHIP C 0.10UF K		C257			CK73FB0J106K	CHIP C 10UF K	
C152			CK73GB1H102K	CHIP C 1000PF K		C258			CK73GB1H103K	CHIP C 0.010UF K	
C155			CC73GCH1H181J	CHIP C 180PF J		C262			CK73FB0J106K	CHIP C 10UF K	
C157		*	CE32AU1C330M	CHIP EL 33UF 16WV		C263			CK73GB1H102K	CHIP C 1000PF K	
C159			CK73GB1H102K	CHIP C 1000PF K		C265			CK73GB1H104K	CHIP C 0.10UF K	
C161			CK73GB1H102K	CHIP C 1000PF K		C266-270			CK73GB1H103K	CHIP C 0.010UF K	
C162		*	CE32AU1C330M	CHIP EL 33UF 16WV		C271			CK73FB0J106K	CHIP C 10UF K	
C165			CK73GB1H102K	CHIP C 1000PF K		C272,273			CK73GB1H103K	CHIP C 0.010UF K	
C166		*	CE32AU1C330M	CHIP EL 33UF 16WV		C274			CK73GB1H472K	CHIP C 4700PF K	
C169			CK73FB0J106K	CHIP C 10UF K		C275			CC73GCH1H120J	CHIP C 12PF J	
C170			CK73GB1H102K	CHIP C 1000PF K		C276			CC73GCH1H100D	CHIP C 10PF D	
C172			CK73FB0J106K	CHIP C 10UF K		C277			CK73GB1H103K	CHIP C 0.010UF K	
C173			CC73GCH1H101J	CHIP C 100PF J		C278			CK73FB0J106K	CHIP C 10UF K	
C174			CK73GB1H102K	CHIP C 1000PF K		C279			CK73GB1H103K	CHIP C 0.010UF K	
C175			CC73GCH1H391J	CHIP C 390PF J		C280			CC73GCH1H100D	CHIP C 10PF D	
C177			CC73GCH1H101J	CHIP C 100PF J		C281			CC73GCH1H150J	CHIP C 15PF J	
C178			CK73FB0J106K	CHIP C 10UF K		C282			CK73GB1H103K	CHIP C 0.010UF K	
C188,189			CK73GB1H104K	CHIP C 0.10UF K		C283			CK73GB1H104K	CHIP C 0.10UF K	
C190			CK73GB1E105K	CHIP C 1.0UF K		C284-288			CK73GB1H103K	CHIP C 0.010UF K	
C192,193			CK73GB1E105K	CHIP C 1.0UF K		C289			CK73GB1H102K	CHIP C 1000PF K	
C194			CC73GCH1H560J	CHIP C 56PF J		C290-297			CK73GB1H103K	CHIP C 0.010UF K	
C195			CC73GCH1H181J	CHIP C 180PF J		C299,300			CK73GB1H103K	CHIP C 0.010UF K	
C196			CC73GCH1H101J	CHIP C 100PF J		C302			CK73GB1H103K	CHIP C 0.010UF K	
C197			CC73GCH1H330J	CHIP C 33PF J		C304			CC73GCH1H101J	CHIP C 100PF J	
C199		*	C93-0912-05	CHIP C 100UF M		C305,306			CK73GB1H102K	CHIP C 1000PF K	
C200			CK73FB0J106K	CHIP C 10UF K		C307-310			CC73GCH1H101J	CHIP C 100PF J	
C202			CK73GB1E105K	CHIP C 1.0UF K		C311,312			CK73GB1H102K	CHIP C 1000PF K	
C203			CC73GCH1H101J	CHIP C 100PF J		C313			CC73GCH1H101J	CHIP C 100PF J	
C204			CC73GCH1H121J	CHIP C 120PF J		C314			CK73GB1H102K	CHIP C 1000PF K	

PARTS LIST

CONTROL UNIT (X53-4130-10)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
C315			CC73GCH1H101J	CHIP C 100PF J		C413			CK73GB1H104K	CHIP C 0.10UF K	
C316			CK73GB1H102K	CHIP C 1000PF K		C414			CK73GB1H103K	CHIP C 0.010UF K	
C317			CK73GB1H103K	CHIP C 0.010UF K		C415			CK73GB1H104K	CHIP C 0.10UF K	
C318			CC73GCH1H101J	CHIP C 100PF J		C416			CK73GB1H103K	CHIP C 0.010UF K	
C319			CK73GB1H102K	CHIP C 1000PF K		C417			CK73GB1E105K	CHIP C 1.0UF K	
C320			CK73GB1H103K	CHIP C 0.010UF K		C418-420			CK73GB1H102K	CHIP C 1000PF K	
C321			CC73GCH1H101J	CHIP C 100PF J		C421			CC73GCH1H101J	CHIP C 100PF J	
C322,323			CK73GB1H102K	CHIP C 1000PF K		C422-424			CK73GB1H102K	CHIP C 1000PF K	
C324			CK73GB1H103K	CHIP C 0.010UF K		C425,426			CC73GCH1H101J	CHIP C 100PF J	
C325			CC73GCH1H101J	CHIP C 100PF J		C427-435			CK73GB1H102K	CHIP C 1000PF K	
C326,327			CK73GB1H102K	CHIP C 1000PF K		C436			CK73GB1E105K	CHIP C 1.0UF K	
C328			CK73GB1H103K	CHIP C 0.010UF K		C437,438			CC73GCH1H101J	CHIP C 100PF J	
C329-331			CK73GB1H102K	CHIP C 1000PF K		C440			CK73GB1H102K	CHIP C 1000PF K	
C332			CK73GB1H103K	CHIP C 0.010UF K		C442			CC73GCH1H101J	CHIP C 100PF J	
C333-339			CK73GB1H102K	CHIP C 1000PF K		C444			CK73GB1H102K	CHIP C 1000PF K	
C340			CK73GB1H103K	CHIP C 0.010UF K		C445			CK73GB1H104K	CHIP C 0.10UF K	
C342,343			CK73GB1H102K	CHIP C 1000PF K		C446			CC73GCH1H391J	CHIP C 390PF J	
C344			CK73GB1H103K	CHIP C 0.010UF K		C447			CC73GCH1H101J	CHIP C 100PF J	
C345			CK73GB1H104K	CHIP C 0.10UF K		C448,449			CK73GB1H102K	CHIP C 1000PF K	
C346,347			CK73GB1H102K	CHIP C 1000PF K		C450			CC73GCH1H101J	CHIP C 100PF J	
C348			CK73GB1H103K	CHIP C 0.010UF K		C452,453			CK73GB1H102K	CHIP C 1000PF K	
C350			CK73GB1H102K	CHIP C 1000PF K		C456,457			CK73GB1H102K	CHIP C 1000PF K	
C351			CK73GB1H103K	CHIP C 0.010UF K		C463			CK73GB1H104K	CHIP C 0.10UF K	
C352,353			CK73GB1H102K	CHIP C 1000PF K		C467,468			CK73GB1H102K	CHIP C 1000PF K	
C354			CK73GB1H103K	CHIP C 0.010UF K		C469,470			CC73GCH1H101J	CHIP C 100PF J	
C355			CC73GCH1H101J	CHIP C 100PF J		C471			CK73GB1H102K	CHIP C 1000PF K	
C356			CK73GB1H102K	CHIP C 1000PF K		C473-475			CK73GB1H102K	CHIP C 1000PF K	
C357			CK73GB1H103K	CHIP C 0.010UF K		C477			CK73GB1E105K	CHIP C 1.0UF K	
C358			CK73GB1H102K	CHIP C 1000PF K		C499	*		C92-0905-05	OS-CON 47UF 35WV	
C359			CC73GCH1H101J	CHIP C 100PF J		C500			CK73GB1H104K	CHIP C 0.10UF K	
C360			CK73GB1H102K	CHIP C 1000PF K		C510			CK73FB0J106K	CHIP C 10UF K	
C361			CK73GB1H103K	CHIP C 0.010UF K		CN1-3			E40-6656-05	PIN ASSY	
C362			CK73GB1H102K	CHIP C 1000PF K		CN4			E41-2673-05	PIN ASSY	
C363			CC73GCH1H101J	CHIP C 100PF J		CN56,57			E40-6656-05	PIN ASSY	
C364			CK73GB1H102K	CHIP C 1000PF K		CN58			E40-5960-05	PIN ASSY	
C365			CK73GB1H103K	CHIP C 0.010UF K		CN59			E40-6102-05	PIN ASSY	
C366-368			CK73GB1H102K	CHIP C 1000PF K		CN60			E41-2735-05	PIN ASSY	
C369			CK73GB1H103K	CHIP C 0.010UF K		F1,2			F53-0315-05	FUSE	
C370-372			CK73GB1H102K	CHIP C 1000PF K		L3-14		*	L92-0447-05	BEADS CORE	
C373			CC73GCH1H101J	CHIP C 100PF J		L15		*	L33-1476-05	SMALL FIXED INDUCTOR	
C374			CK73GB1H103K	CHIP C 0.010UF K		L16		*	L33-1475-05	SMALL FIXED INDUCTOR	
C375,376			CK73GB1H102K	CHIP C 1000PF K		L17,18		*	L92-0447-05	BEADS CORE	
C377			CC73GCH1H101J	CHIP C 100PF J		L19		*	L33-1475-05	SMALL FIXED INDUCTOR	
C379,380			CK73GB1H102K	CHIP C 1000PF K		L20-22		*	L92-0447-05	BEADS CORE	
C381			CC73GCH1H101J	CHIP C 100PF J		L32-40		*	L92-0447-05	BEADS CORE	
C382			CK73GB1H103K	CHIP C 0.010UF K		L43		*	L92-0447-05	BEADS CORE	
C383,384			CK73GB1H102K	CHIP C 1000PF K		L44-49			L92-0467-05	CHIP FERRITE	
C385			CC73GCH1H101J	CHIP C 100PF J		X1		*	L77-1984-05	CRYSTAL RESONATOR (14.7456MHZ)	
C386,387			CK73GB1H102K	CHIP C 1000PF K		X2		*	L77-1987-05	CRYSTAL RESONATOR (16.515072MHZ)	
C388			CC73GCH1H101J	CHIP C 100PF J		CP8			RK75GB1JR00	CHIP-COM 0.00 1/16W	
C389,390			CK73GB1H102K	CHIP C 1000PF K		CP10			RK75GB1JR00	CHIP-COM 0.00 1/16W	
C394	*		C92-0905-05	OS-CON 47UF 35WV		CP13			RK75GB1JR00	CHIP-COM 0.00 1/16W	
C395			CK73GB1H103K	CHIP C 0.010UF K		CP19			RK75GB1JR00	CHIP-COM 0.00 1/16W	
C396-399			CK73GB1H102K	CHIP C 1000PF K		CP24-26			RK75GB1JR00	CHIP-COM 0.00 1/16W	
C400,401	*		CE32AU1C330M	CHIP EL 33UF 16WV		R1,2			RK73GB2A000J	CHIP R 0.0 J 1/10W	
C403			CK73GB1E105K	CHIP C 1.0UF K		R4			RK73GB2A000J	CHIP R 0.0 J 1/10W	
C404			CK73FB0J106K	CHIP C 10UF K		R6			RK73GB2A101J	CHIP R 100 J 1/10W	
C405,406			CC73GCH1H101J	CHIP C 100PF J							
C407			CK73GB1H102K	CHIP C 1000PF K							
C408-410			CK73GB1E105K	CHIP C 1.0UF K							

PARTS LIST

CONTROL UNIT (X53-4130-10)

Ref. No.	Address	New parts	Parts No.	Description	Desti-nation	Ref. No.	Address	New parts	Parts No.	Description	Desti-nation
R7-17			RK73GB2A000J	CHIP R 0.0 J 1/10W		R156,157			RK73GH2A104D	CHIP R 100K D 1/10W	
R18,19			RK73GB2A101J	CHIP R 100 J 1/10W		R158			RK73GB2A333J	CHIP R 33K J 1/10W	
R21-45			RK73GB2A000J	CHIP R 0.0 J 1/10W		R159			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R47-49			RK73GB2A000J	CHIP R 0.0 J 1/10W		R160,161			RK73GB2A563J	CHIP R 56K J 1/10W	
R51-61			RK73GB2A000J	CHIP R 0.0 J 1/10W		R162			RK73GB2A224J	CHIP R 220K J 1/10W	
R62			RK73GB2A101J	CHIP R 100 J 1/10W		R163			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R63,64			RK73GB2A332J	CHIP R 3.3K J 1/10W		R165			RK73GB2A104J	CHIP R 100K J 1/10W	
R65			RK73GB2A183J	CHIP R 18K J 1/10W		R166			RK73GB2A333J	CHIP R 33K J 1/10W	
R66			RK73GB2A823J	CHIP R 82K J 1/10W		R167			RK73GB2A473J	CHIP R 47K J 1/10W	
R67			RK73GH2A822D	CHIP R 8.2K D 1/10W		R168			RK73GB2A563J	CHIP R 56K J 1/10W	
R68			RK73GH2A332D	CHIP R 3.3K D 1/10W		R169			RK73GB2A333J	CHIP R 33K J 1/10W	
R69,70			RK73GB2A000J	CHIP R 0.0 J 1/10W		R171			RK73GB2A183J	CHIP R 18K J 1/10W	
R71			RK73GH2A473D	CHIP R 47K D 1/10W		R172,173			RK73GB2A473J	CHIP R 47K J 1/10W	
R72-76			RK73GB2A000J	CHIP R 0.0 J 1/10W		R174			RK73GB2A683J	CHIP R 68K J 1/10W	
R77			RK73GH2A104D	CHIP R 100K D 1/10W		R175			RK73GB2A393J	CHIP R 39K J 1/10W	
R78			RK73GB2A104J	CHIP R 100K J 1/10W		R176			RK73GB2A473J	CHIP R 47K J 1/10W	
R79			RK73GH2A332D	CHIP R 3.3K D 1/10W		R177,178			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R80			RK73GB2A123J	CHIP R 12K J 1/10W		R179			RK73GB2A473J	CHIP R 47K J 1/10W	
R81,82			RK73GB2A563J	CHIP R 56K J 1/10W		R181,182			RK73GB2A103J	CHIP R 10K J 1/10W	
R83			RK73GB2A124J	CHIP R 120K J 1/10W		R183			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R84			RK73GB2A473J	CHIP R 47K J 1/10W		R184			RK73GB2A473J	CHIP R 47K J 1/10W	
R85			RK73GB2A000J	CHIP R 0.0 J 1/10W		R188			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R86			RK73GB2A473J	CHIP R 47K J 1/10W		R191			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R87			RK73GB2A223J	CHIP R 22K J 1/10W		R193			RK73GB2A103J	CHIP R 10K J 1/10W	
R88			RK73GB2A000J	CHIP R 0.0 J 1/10W		R194			RK73GB2A473J	CHIP R 47K J 1/10W	
R89			RK73GB2A103J	CHIP R 10K J 1/10W		R195,196			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R90			RK73GB2A153J	CHIP R 15K J 1/10W		R197			RK73GB2A103J	CHIP R 10K J 1/10W	
R91			RK73GB2A472J	CHIP R 4.7K J 1/10W		R198			RK73GB2A473J	CHIP R 47K J 1/10W	
R92			RK73GB2A562J	CHIP R 5.6K J 1/10W		R199			RK73GB2A103J	CHIP R 10K J 1/10W	
R93,94			RK73GB2A000J	CHIP R 0.0 J 1/10W		R200,201			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R95			RK73GB2A470J	CHIP R 47 J 1/10W		R202			RK73GB2A473J	CHIP R 47K J 1/10W	
R96			RK73GB2A223J	CHIP R 22K J 1/10W		R203			RK73GB2A104J	CHIP R 100K J 1/10W	
R98			RK73GB2A103J	CHIP R 10K J 1/10W		R204			RK73GB2A473J	CHIP R 47K J 1/10W	
R100			RK73GB2A473J	CHIP R 47K J 1/10W		R205			RK73GB2A104J	CHIP R 100K J 1/10W	
R101			RK73GB2A000J	CHIP R 0.0 J 1/10W		R206			RK73GB2A122J	CHIP R 1.2K J 1/10W	
R102			RK73GB2A123J	CHIP R 12K J 1/10W		R207,208			RK73GB2A473J	CHIP R 47K J 1/10W	
R103-105			RK73GB2A473J	CHIP R 47K J 1/10W		R210			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R106-108			RK73GB2A000J	CHIP R 0.0 J 1/10W		R211,212			RK73GB2A473J	CHIP R 47K J 1/10W	
R109			RK73GB2A153J	CHIP R 15K J 1/10W		R215			RK73GB2A473J	CHIP R 47K J 1/10W	
R111			RK73GB2A823J	CHIP R 82K J 1/10W		R216,217			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R112			RK73GB2A123J	CHIP R 12K J 1/10W		R218,219			RK73GB2A473J	CHIP R 47K J 1/10W	
R113			RK73GB2A823J	CHIP R 82K J 1/10W		R220,221			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R114			RK73GB2A223J	CHIP R 22K J 1/10W		R222			RK73GB2A473J	CHIP R 47K J 1/10W	
R115			RK73GB2A154J	CHIP R 150K J 1/10W		R230,231			RK73GB2A473J	CHIP R 47K J 1/10W	
R116			RK73GB2A223J	CHIP R 22K J 1/10W		R232			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R127			RK73GB2A473J	CHIP R 47K J 1/10W		R233			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R128-130			RK73GB2A000J	CHIP R 0.0 J 1/10W		R234,235			RK73GB2A473J	CHIP R 47K J 1/10W	
R131-133			RK73GB2A473J	CHIP R 47K J 1/10W		R237			RK73GB2A473J	CHIP R 47K J 1/10W	
R135			RK73GB2A000J	CHIP R 0.0 J 1/10W		R240-243			RK73GB2A473J	CHIP R 47K J 1/10W	
R137			RK73GB2A102J	CHIP R 1.0K J 1/10W		R245,246			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R138			RK73GB2A473J	CHIP R 47K J 1/10W		R247			RK73GB2A473J	CHIP R 47K J 1/10W	
R141-144			RK73GB2A000J	CHIP R 0.0 J 1/10W		R249,250			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R145			RK73GB2A104J	CHIP R 100K J 1/10W		R251			RK73GB2A473J	CHIP R 47K J 1/10W	
R146-148			RK73GB2A000J	CHIP R 0.0 J 1/10W		R254			RK73GB2A473J	CHIP R 47K J 1/10W	
R149			RK73GB2A333J	CHIP R 33K J 1/10W		R261,262			RK73GB2A473J	CHIP R 47K J 1/10W	
R150			RK73GB2A563J	CHIP R 56K J 1/10W		R267-271			RK73GB2A473J	CHIP R 47K J 1/10W	
R151			RK73GB2A124J	CHIP R 120K J 1/10W		R273			RK73GB2A473J	CHIP R 47K J 1/10W	
R152			RK73GB2A104J	CHIP R 100K J 1/10W		R275			RK73GB2A473J	CHIP R 47K J 1/10W	
R153			RK73GB2A000J	CHIP R 0.0 J 1/10W		R277			RK73GB2A473J	CHIP R 47K J 1/10W	
R154,155			RK73GB2A333J	CHIP R 33K J 1/10W		R279			RK73GB2A103J	CHIP R 10K J 1/10W	

PARTS LIST

CONTROL UNIT (X53-4130-10)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
R281			RK73GB2A103J	CHIP R 10K J 1/10W		R526,527			RK73GB2A121J	CHIP R 120 J 1/10W	
R283			RK73GB2A000J	CHIP R 0.0 J 1/10W		R528-535			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R286-288			RK73GB2A000J	CHIP R 0.0 J 1/10W		R536			RK73GB2A104J	CHIP R 100K J 1/10W	
R289			RK73GB2A473J	CHIP R 47K J 1/10W		R540			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R290			RK73GB2A000J	CHIP R 0.0 J 1/10W		R541			RK73GB2A123J	CHIP R 12K J 1/10W	
R292-294			RK73GB2A000J	CHIP R 0.0 J 1/10W		R550			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R296,297			RK73GB2A473J	CHIP R 47K J 1/10W		D1,2		*	CMS05-Q	DIODE	
R299,300			RK73GB2A103J	CHIP R 10K J 1/10W		D3,4			DA204U	DIODE	
R301,302			RK73GB2A104J	CHIP R 100K J 1/10W		D5			1SS355	DIODE	
R303-315			RK73GB2A473J	CHIP R 47K J 1/10W		D6		*	02DZ18F-X	ZENER DIODE	
R316-338			RK73GB2A000J	CHIP R 0.0 J 1/10W		D7-11			DA204U	DIODE	
R340			RK73GB2A102J	CHIP R 1.0K J 1/10W		D12			1SS355	DIODE	
R342-351			RK73GB2A102J	CHIP R 1.0K J 1/10W		D13		*	02DZ18F-X	ZENER DIODE	
R352			RK73GB2A471J	CHIP R 470 J 1/10W		D14-18			DA204U	DIODE	
R353-357			RK73GB2A102J	CHIP R 1.0K J 1/10W		D20			DA204U	DIODE	
R358			RK73GB2A122J	CHIP R 1.2K J 1/10W		D23			DA204U	DIODE	
R359			RK73GB2A000J	CHIP R 0.0 J 1/10W		D24		*	SMD185F-2	VARISTOR	
R360			RK73GB2A122J	CHIP R 1.2K J 1/10W		D25			MINISMD C020F	VARISTOR	
R361-377			RK73GB2A000J	CHIP R 0.0 J 1/10W		D26			1SS388F	DIODE	
R378,379			RK73GB2A122J	CHIP R 1.2K J 1/10W		D28			1SS355	DIODE	
R380			RK73GB2A000J	CHIP R 0.0 J 1/10W		D29		*	02DZ18F-X	ZENER DIODE	
R389-396			RK73GB2A000J	CHIP R 0.0 J 1/10W		D30			1SS355	DIODE	
R398-409			RK73GB2A000J	CHIP R 0.0 J 1/10W		D31		*	02DZ18F-X	ZENER DIODE	
R410			RK73GB2A684J	CHIP R 680K J 1/10W		D32			1SS355	DIODE	
R411			RK73GB2A224J	CHIP R 220K J 1/10W		D33		*	02DZ18F-X	ZENER DIODE	
R412			RK73GB2A103J	CHIP R 10K J 1/10W		D36,37			DA204U	DIODE	
R413			RK73GB2A104J	CHIP R 100K J 1/10W		D38,39			1SS388F	DIODE	
R414			RK73GB2A000J	CHIP R 0.0 J 1/10W		IC1			BU4094BCFV	MOS-IC	
R415-418			RK73GB2A104J	CHIP R 100K J 1/10W		IC2,3			BU4053BCFV	MOS-IC	
R419,420			RK73GB2A000J	CHIP R 0.0 J 1/10W		IC4			AK4550VTP	MOS-IC	
R426			RS14KB3D220J	FL-PROOF RS 22 J 2W		IC5		*	NJM2732V	BI-POLAR IC	
R428-430			RK73GB2A000J	CHIP R 0.0 J 1/10W		IC6		*	XC6209B332PR	MOS-IC	
R432			RK73GB2A470J	CHIP R 47 J 1/10W		IC7			TA75S01F-F	MOS-IC	
R433			RK73GB2A473J	CHIP R 47K J 1/10W		IC8			M62364FP-F	MOS-IC	
R434			RK73GB2A470J	CHIP R 47 J 1/10W		IC9		*	NJM2734V	BI-POLAR IC	
R435			RK73GB2A473J	CHIP R 47K J 1/10W		IC10,11		*	NJM2340RB1	MOS-IC	
R436-446			RK73GB2A000J	CHIP R 0.0 J 1/10W		IC12		*	NJM2732V	BI-POLAR IC	
R448-454			RK73GB2A000J	CHIP R 0.0 J 1/10W		IC14			BU4053BCFV	MOS-IC	
R455			RK73GB2A104J	CHIP R 100K J 1/10W		IC15		*	BA33BC0FP	MOS-IC	
R457			RK73GB2A473J	CHIP R 47K J 1/10W		IC16		*	XC6209B502PR	MOS-IC	
R458,459			RK73GB2A104J	CHIP R 100K J 1/10W		IC17		*	Note 1 (BGA)	ROM IC	
R460,461			RK73GB2A103J	CHIP R 10K J 1/10W		IC18		*	XC6201P182MR	MOS-IC	
R467,468			RK73GB2A000J	CHIP R 0.0 J 1/10W		IC19		*	NJM2732V	BI-POLAR IC	
R469			RK73GB2A103J	CHIP R 10K J 1/10W		IC20,21		*	NJM2734V	BI-POLAR IC	
R470			RK73GB2A000J	CHIP R 0.0 J 1/10W		IC22			BU4094BCFV	MOS-IC	
R471-473			RK73GB2A104J	CHIP R 100K J 1/10W		IC23			TC7SH00FU-F	MOS-IC	
R474			RK73GB2A000J	CHIP R 0.0 J 1/10W		IC25			TC7S66FUF	MOS-IC	
R475			RK73GB2A104J	CHIP R 100K J 1/10W		IC27		*	TC7SET126FU-F	MOS-IC	
R477			RK73GB2A104J	CHIP R 100K J 1/10W		IC28		*	TC7SH126FU-F	MOS-IC	
R478			RK73GB2A103J	CHIP R 10K J 1/10W		IC29			LA4425A	MOS-IC	
R479			RK73GB2A000J	CHIP R 0.0 J 1/10W		IC30	2C		TC7SH00FU-F	MOS-IC	
R482			RK73GB2A000J	CHIP R 0.0 J 1/10W		IC31		*	TC7MH4040FK-F	MOS-IC	
R484			RK73GB2A000J	CHIP R 0.0 J 1/10W		IC32,33		*	TC7SH126FU-F	MOS-IC	
R491-495			RK73GB2A000J	CHIP R 0.0 J 1/10W		IC34		*	3625MGP396GP	MICROPROCESSOR IC	
R501			RK73GB2A000J	CHIP R 0.0 J 1/10W		IC35			S24CS02AFJTBG	ROM IC	
R502			RK73GB2A183J	CHIP R 18K J 1/10W		IC36			TC7MET541AFK	MOS-IC	
R507-510			RK73GB2A183J	CHIP R 18K J 1/10W		IC37			320VC5402PGE	MICROPROCESSOR IC	
R511-515			RK73GB2A123J	CHIP R 12K J 1/10W		IC38			TC7SET08FU-F	MOS-IC	
R522,523			RK73GB2A000J	CHIP R 0.0 J 1/10W		IC39		*	TC7SH125FU-F	MOS-IC	
R524,525			RK73GB2A473J	CHIP R 47K J 1/10W							

PARTS LIST

CONTROL UNIT (X53-4130-10)

CONTROL UNIT (X53-4140-10)

Ref. No.	Address	New parts	Parts No.	Description	Desti-nation	Ref. No.	Address	New parts	Parts No.	Description	Desti-nation
IC40		*	TC7SH126FU-F	MOS-IC		C364-366			CK73HB1H102K	CHIP C	1000PF K
IC41			TC7SH08FU-F	MOS-IC		C369,370			CK73HB1H102K	CHIP C	1000PF K
IC50			TC7SH08FU-F	MOS-IC		C371			CK73HB1A104K	CHIP C	0.10UF K
Q1			DTC114EUA	DIGITAL TRANSISTOR		C373,374			CK73HB1H102K	CHIP C	1000PF K
Q2,3			2SJ506-E(S)	FET		C376-378			CK73HB1H102K	CHIP C	1000PF K
Q4,5		*	2SC4738F	TRANSISTOR		C379			CK73HB1A104K	CHIP C	0.10UF K
Q6			DTC363EU	DIGITAL TRANSISTOR		C380,381			CK73HB1H102K	CHIP C	1000PF K
Q7,8			DTC114EUA	DIGITAL TRANSISTOR		C383-386			CK73HB1H102K	CHIP C	1000PF K
Q9			2SJ506-E(S)	FET		C387			CK73GB1H103K	CHIP C	0.010UF K
Q10		*	2SC4738F	TRANSISTOR		C388-390			CK73HB1H102K	CHIP C	1000PF K
Q11			2SD2114K(W)	TRANSISTOR		C391			CK73GB1E105K	CHIP C	1.0UF K
Q12		*	2SC4738F	TRANSISTOR		C393-395			CK73HB1H102K	CHIP C	1000PF K
Q13			2SD2114K(W)	TRANSISTOR		C396			CK73GB1H103K	CHIP C	0.010UF K
Q14			2SC4116(Y)F	TRANSISTOR		C397,398			CK73HB1H102K	CHIP C	1000PF K
Q15		*	2SA1586(Y)F	TRANSISTOR		C399			CK73GB1H104K	CHIP C	0.10UF K
Q16			2SC4116(Y)F	TRANSISTOR		C401			CC73HCH1H101J	CHIP C	100PF J
Q17		*	2SA1586(Y)F	TRANSISTOR		C402			CK73HB1H102K	CHIP C	1000PF K
Q18			2SK1830F	FET		C403			CC73HCH1H101J	CHIP C	100PF J
Q19			HN1L02FU(F)	FET		C405,406			CK73HB1H102K	CHIP C	1000PF K
Q20			2SA1955A-F	TRANSISTOR		C409			CK73HB1H102K	CHIP C	1000PF K
Q21			DTC144EUA	DIGITAL TRANSISTOR		C410			CC73HCH1H101J	CHIP C	100PF J
Q22			2SA1955A-F	TRANSISTOR		C412-415			CK73HB1H102K	CHIP C	1000PF K
Q23			DTC144EUA	DIGITAL TRANSISTOR		C416			CC73HCH1H101J	CHIP C	100PF J
Q25,26			DTC144EUA	DIGITAL TRANSISTOR		C417,418	*		CE32AU1C330M	CHIP EL	33UF 16WV
Q27-29			2SD2114K(W)	TRANSISTOR		C419			CC73HCH1H101J	CHIP C	100PF J
CONTROL UNIT (X53-4140-10)						C420			CK73HB1A104K	CHIP C	0.10UF K
C302			CC73HCH1H101J	CHIP C	100PF J	C421			CK73HB1H102K	CHIP C	1000PF K
C303			CK73HB1H102K	CHIP C	1000PF K	C422	*		CE32AU1C330M	CHIP EL	33UF 16WV
C305			CK73HB1A104K	CHIP C	0.10UF K	C423			CC73HCH1H101J	CHIP C	100PF J
C306			CK73HB1H102K	CHIP C	1000PF K	C424			CK73HB1H102K	CHIP C	1000PF K
C308,309			CK73HB1H102K	CHIP C	1000PF K	C426-430			CK73HB1H102K	CHIP C	1000PF K
C311			CK73HB1A104K	CHIP C	0.10UF K	C432			CC73HCH1H101J	CHIP C	100PF J
C312-317			CK73HB1H102K	CHIP C	1000PF K	C433			CK73HB1H102K	CHIP C	1000PF K
C320			CC73HCH1H101J	CHIP C	100PF J	C435-437			CK73HB1H102K	CHIP C	1000PF K
C322,323			CK73HB1H102K	CHIP C	1000PF K	C438			CK73GB1H103K	CHIP C	0.010UF K
C324			CC73HCH1H101J	CHIP C	100PF J	C439	*		CE32AU1C330M	CHIP EL	33UF 16WV
C326-329			CK73HB1H102K	CHIP C	1000PF K	C440-442			CK73HB1H102K	CHIP C	1000PF K
C331			CK73HB1H102K	CHIP C	1000PF K	C443,444	*		CE32AU1C330M	CHIP EL	33UF 16WV
C333-335			CK73HB1H102K	CHIP C	1000PF K	C445			CK73HB1A104K	CHIP C	0.10UF K
C337			CK73HB1H102K	CHIP C	1000PF K	C446			CK73FB1H102K	CHIP C	1000PF K
C339			CC73HCH1H101J	CHIP C	100PF J	C447			CK73HB1A104K	CHIP C	0.10UF K
C341,342			CK73HB1H102K	CHIP C	1000PF K	C448	*		CE32AU1C330M	CHIP EL	33UF 16WV
C343			CC73HCH1H101J	CHIP C	100PF J	C449,450			CK73HB1A104K	CHIP C	0.10UF K
C344			CK73HB1H102K	CHIP C	1000PF K	C453			CK73GB1H103K	CHIP C	0.010UF K
C345			CC73HCH1H101J	CHIP C	100PF J	C461			CK73GB1H103K	CHIP C	0.010UF K
C346-348			CK73HB1H102K	CHIP C	1000PF K	C462			CK73HB1E103K	CHIP C	0.010UF K
C349			CC73HCH1H101J	CHIP C	100PF J	C463			CC73HCH1H100D	CHIP C	10PF D
C350			CK73HB1H102K	CHIP C	1000PF K	C465			CK73GB1H103K	CHIP C	0.010UF K
C352			CK73HB1H102K	CHIP C	1000PF K	C466			CK73GB1H104K	CHIP C	0.10UF K
C353			CC73HCH1H101J	CHIP C	100PF J	C467			CK73GB1H103K	CHIP C	0.010UF K
C354			CK73HB1H102K	CHIP C	1000PF K	C468			CK73GB1H104K	CHIP C	0.10UF K
C355			CK73HB1E103K	CHIP C	0.010UF K	C469			CC73GCH1H121J	CHIP C	120PF J
C356			CC73HCH1H101J	CHIP C	100PF J	C471			CK73HB1H102K	CHIP C	1000PF K
C357,358			CK73HB1H102K	CHIP C	1000PF K	C474			CK73HB1H392K	CHIP C	3900PF K
C359,360			CK73HB1A104K	CHIP C	0.10UF K	C475			CK73FB0J106K	CHIP C	10UF K
C361			CK73HB1H102K	CHIP C	1000PF K	C476			CK73HB1A104K	CHIP C	0.10UF K
C362			CK73HB1E103K	CHIP C	0.010UF K	C477			CC73GCH1H121J	CHIP C	120PF J
						C478			CK73HB1H102K	CHIP C	1000PF K
						C479			CC73GCH1H121J	CHIP C	120PF J
						C480			CK73FB0J106K	CHIP C	10UF K

PARTS LIST

CONTROL UNIT (X53-4140-10)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
C482			CK73HB1A104K	CHIP C 0.10UF K		C715			CK73HB1A104K	CHIP C 0.10UF K	
C484			CS77BA1C010M	CHIP TNL 1UF 16WV		C716			CK73HB1H102K	CHIP C 1000PF K	
C485			CK73GB1H103K	CHIP C 0.010UF K		C717			CK73HB1A104K	CHIP C 0.10UF K	
C486			CC73GCH1H121J	CHIP C 120PF J		C718			CC73HCH1H070D	CHIP C 7.0PF D	
C487			CK73HB1H102K	CHIP C 1000PF K		C719			CK73FB0J106K	CHIP C 10UF K	
C491			CK73FB0J106K	CHIP C 10UF K		C720			CK73HB1A104K	CHIP C 0.10UF K	
C493,494			CK73HB1A104K	CHIP C 0.10UF K		C721			CC73HCH1H100D	CHIP C 10PF D	
C495			CK73GB1E105K	CHIP C 1.0UF K		C722,723			CK73HB1H102K	CHIP C 1000PF K	
C496			CK73HB1C822K	CHIP C 8200PF K		C724			CK73HB1A104K	CHIP C 0.10UF K	
C501			CK73HB1A104K	CHIP C 0.10UF K		C725			CK73HB1H102K	CHIP C 1000PF K	
C504			CK73HB1A104K	CHIP C 0.10UF K		C726			CK73FB0J106K	CHIP C 10UF K	
C506			CK73HB1H472K	CHIP C 4700PF K		C727			CC73HCH1H020B	CHIP C 2.0PF B	
C507			CK73HB1E103K	CHIP C 0.010UF K		C728			CK73HB1E103K	CHIP C 0.010UF K	
C508			CK73HB1A104K	CHIP C 0.10UF K		C729			CC73HCH1H020B	CHIP C 2.0PF B	
C509			CK73GB1E105K	CHIP C 1.0UF K		C730			CK73HB1A104K	CHIP C 0.10UF K	
C515			CK73GB1E105K	CHIP C 1.0UF K		C732			CK73HB1H102K	CHIP C 1000PF K	
C516			CK73HB1H102K	CHIP C 1000PF K		C733-741			CK73HB1A104K	CHIP C 0.10UF K	
C517			CK73HB1A104K	CHIP C 0.10UF K		C742			CK73FB0J106K	CHIP C 10UF K	
C519			CK73HB1C473K	CHIP C 0.047UF K		C743,744			CK73HB1A104K	CHIP C 0.10UF K	
C520			CK73GB1E105K	CHIP C 1.0UF K		C746-750			CK73GB1E105K	CHIP C 1.0UF K	
C521			CK73HB1E103K	CHIP C 0.010UF K		C751			CK73HB1E103K	CHIP C 0.010UF K	
C522-525			CK73HB1A104K	CHIP C 0.10UF K		C754-758			CK73HB1A104K	CHIP C 0.10UF K	
C526-529			CK73FB0J106K	CHIP C 10UF K		C767,768			CK73HB1H102K	CHIP C 1000PF K	
C531			CK73HB1H102K	CHIP C 1000PF K		C769			CK73FB0J106K	CHIP C 10UF K	
C532			CK73HB1A104K	CHIP C 0.10UF K		C770-773			CK73HB1A104K	CHIP C 0.10UF K	
C533-536			CK73HB1H102K	CHIP C 1000PF K		C775			CK73HB1H102K	CHIP C 1000PF K	
C537			CK73FB0J106K	CHIP C 10UF K		C776-780			CK73HB1E103K	CHIP C 0.010UF K	
C538,539			CK73HB1H102K	CHIP C 1000PF K		C781			CK73HB1A104K	CHIP C 0.10UF K	
C543			CK73FB0J106K	CHIP C 10UF K		C782			CC73HCH1H120G	CHIP C 12PF G	
C544-546			CK73HB1H102K	CHIP C 1000PF K		C783			CC73HCH1H100D	CHIP C 10PF D	
C547			CK73FB0J106K	CHIP C 10UF K		C784,785			CK73HB1A104K	CHIP C 0.10UF K	
C548			CK73HB1E103K	CHIP C 0.010UF K		C786			CC73HCH1H150J	CHIP C 15PF J	
C549			CC73HCH1H120G	CHIP C 12PF G		C787			CC73HCH1H100D	CHIP C 10PF D	
C550,551			CC73HCH1H100D	CHIP C 10PF D		C788			CK73FB0J106K	CHIP C 10UF K	
C552			CC73HCH1H150J	CHIP C 15PF J		C789-793			CK73HB1A104K	CHIP C 0.10UF K	
C553			CK73HB1E103K	CHIP C 0.010UF K		C794			CK73FB0J106K	CHIP C 10UF K	
C557			CK73HB1H102K	CHIP C 1000PF K		C795			CK73HB1A104K	CHIP C 0.10UF K	
C565			CK73FB0J106K	CHIP C 10UF K		C796,797			CK73HB1E103K	CHIP C 0.010UF K	
C566			CK73HB1H102K	CHIP C 1000PF K		C798			CK73HB1A104K	CHIP C 0.10UF K	
C567			CK73HB1E103K	CHIP C 0.010UF K		C801			CK73HB1H102K	CHIP C 1000PF K	
C569		*	CE32AU1C330M	CHIP EL 33UF 16WV		C802,803			CK73HB1A104K	CHIP C 0.10UF K	
C570,571			CK73HB1H102K	CHIP C 1000PF K		C804			CK73FB0J106K	CHIP C 10UF K	
C572			CE32BM1E470M	CHIP EL 47UF 25WV		C808			CK73HB1H102K	CHIP C 1000PF K	
C574			CK73HB1H102K	CHIP C 1000PF K		C809			CK73HB1A104K	CHIP C 0.10UF K	
C575-588			CK73HB1E103K	CHIP C 0.010UF K		C812			CK73HB1A104K	CHIP C 0.10UF K	
C590-601			CK73HB1E103K	CHIP C 0.010UF K		C813-815			CK73HB1H102K	CHIP C 1000PF K	
C700			CK73HB1E103K	CHIP C 0.010UF K		C816-818			CK73HB1A104K	CHIP C 0.10UF K	
C701			CK73HB1A104K	CHIP C 0.10UF K		C819			CK73HB1H102K	CHIP C 1000PF K	
C702			CK73HB1H102K	CHIP C 1000PF K		C820,821			CK73HB1A104K	CHIP C 0.10UF K	
C703			CC73HCH1H150J	CHIP C 15PF J		C822			CK73HB1H102K	CHIP C 1000PF K	
C704,705			CK73FB0J106K	CHIP C 10UF K		C825			CK73HB1H102K	CHIP C 1000PF K	
C706			CK73HB1H102K	CHIP C 1000PF K		C826,827			CC73HCH1H101J	CHIP C 100PF J	
C707			CC73HCH1H070D	CHIP C 7.0PF D		C828			CK73HB1H102K	CHIP C 1000PF K	
C708			CK73HB1A104K	CHIP C 0.10UF K		C829			CC73HCH1H101J	CHIP C 100PF J	
C709			CK73FB0J106K	CHIP C 10UF K		C830			CK73HB1H102K	CHIP C 1000PF K	
C710			CK73HB1E103K	CHIP C 0.010UF K		C831			CC73HCH1H101J	CHIP C 100PF J	
C711			CK73FB0J106K	CHIP C 10UF K		C832			CK73HB1H102K	CHIP C 1000PF K	
C712			CK73HB1H102K	CHIP C 1000PF K		C833,834			CK73HB1A104K	CHIP C 0.10UF K	
C713			CK73HB1A104K	CHIP C 0.10UF K		C835-837			CK73HB1H102K	CHIP C 1000PF K	
C714			CK73FB0J106K	CHIP C 10UF K		C838,839			CC73HCH1H101J	CHIP C 100PF J	

PARTS LIST

CONTROL UNIT (X53-4140-10)

Ref. No.	Address	New parts	Parts No.	Description	Desti-nation	Ref. No.	Address	New parts	Parts No.	Description	Desti-nation
C841-848			CC73GCH1H470J	CHIP C 47PF J		R398			RK73HB1J104J	CHIP R 100K J 1/16W	
C850			CC73GCH1H470J	CHIP C 47PF J		R399			RK73HB1J151J	CHIP R 150 J 1/16W	
C851-869			CC73HCH1H470J	CHIP C 47PF J		R401			RK73HB1J000J	CHIP R 0.0 J 1/16W	
C870-873			CK73HB1H102K	CHIP C 1000PF K		R403			RK73GB2A000J	CHIP R 0.0 J 1/10W	
						R404,405			RK73HB1J000J	CHIP R 0.0 J 1/16W	
CN300			E04-0193-05	PIN SOCKET							
CN302			E04-0193-05	PIN SOCKET		R406			RK73GB2A000J	CHIP R 0.0 J 1/10W	
CN400-402			E40-6656-05	PIN ASSY		R408,409			RK73HB1J000J	CHIP R 0.0 J 1/16W	
CN713			E41-2263-05	PIN ASSY		R410			RK73GB2A103J	CHIP R 10K J 1/10W	
J700		*	E58-0516-05	MODULAR JACK		R411			RK73GB2A472J	CHIP R 4.7K J 1/10W	
						R413			RK73GB2A103J	CHIP R 10K J 1/10W	
J701		*	E58-0515-05	RECTANGULAR RECEPTACLE							
J702,703		*	E58-0533-05	MODULAR JACK		R414			RK73HB1J000J	CHIP R 0.0 J 1/16W	
						R415			RK73HB1J100J	CHIP R 10 J 1/16W	
L300-307		*	L92-0447-05	BEADS CORE		R416			RK73HB1J104J	CHIP R 100K J 1/16W	
L308,309			L41-8285-33	SMALL FIXED INDUCTOR (0.82UH/5%)		R417			RK73HB1J000J	CHIP R 0.0 J 1/16W	
L310			L41-1005-33	SMALL FIXED INDUCTOR (10UH)		R418,419			RK73GB2A104J	CHIP R 100K J 1/10W	
L311,312			L41-1595-33	SMALL FIXED INDUCTOR (1.5UH)							
L313-316		*	L92-0447-05	BEADS CORE		R420			RK73HB1J000J	CHIP R 0.0 J 1/16W	
						R421			RK73HB1J100J	CHIP R 10 J 1/16W	
L317,318		*	L33-1500-05	CHOKE COIL		R423			RK73HB1J000J	CHIP R 0.0 J 1/16W	
L319-325		*	L92-0447-05	BEADS CORE		R424			RK73GB2A681J	CHIP R 680 J 1/10W	
L326-329			L92-0467-05	CHIP FERRITE		R425			RK73HB1J000J	CHIP R 0.0 J 1/16W	
X300		*	L77-1988-05	VCXO (12.288MHZ)							
X301		*	L77-1984-05	CRYSTAL RESONATOR (14.7456MHZ)		R428			RK73GB2A100J	CHIP R 10 J 1/10W	
						R429			RK73GB2A471J	CHIP R 470 J 1/10W	
X700		*	L77-1985-05	CRYSTAL RESONATOR (25.8048MHZ)		R431			RK73HB1J000J	CHIP R 0.0 J 1/16W	
X701			L77-1802-05	CRYSTAL RESONATOR (32768HZ)		R432			RK73GB2A220J	CHIP R 22 J 1/10W	
X702		*	L77-1986-05	CRYSTAL RESONATOR (25MHZ)		R433			RK73HB1J105J	CHIP R 1.0M J 1/16W	
CP716		*	RK75HA1JR00J	CHIP-COM 0.00 J 1/16W		R438			RK73GB2A100J	CHIP R 10 J 1/10W	
CP718		*	RK75HA1JR00J	CHIP-COM 0.00 J 1/16W		R439,440			RK73GB2A220J	CHIP R 22 J 1/10W	
CP720		*	RK75HA1JR00J	CHIP-COM 0.00 J 1/16W		R441			RK73HB1J823J	CHIP R 82K J 1/16W	
CP737		*	RK75HA1JR00J	CHIP-COM 0.00 J 1/16W		R442			RK73HB1J683J	CHIP R 68K J 1/16W	
CP739		*	RK75HA1JR00J	CHIP-COM 0.00 J 1/16W		R445			RK73HB1J393J	CHIP R 39K J 1/16W	
CP743		*	RK75HA1JR00J	CHIP-COM 0.00 J 1/16W		R446,447			RK73HB1J000J	CHIP R 0.0 J 1/16W	
CP747		*	RK75HA1JR00J	CHIP-COM 0.00 J 1/16W		R448			RK73GB2A221J	CHIP R 220 J 1/10W	
CP750		*	RK75HA1JR00J	CHIP-COM 0.00 J 1/16W		R449			RK73HB1J683J	CHIP R 68K J 1/16W	
CP760		*	RK75HA1JR00J	CHIP-COM 0.00 J 1/16W		R451			RK73HB1J473J	CHIP R 47K J 1/16W	
CP762		*	RK75HA1JR00J	CHIP-COM 0.00 J 1/16W		R452-454			RK73HB1J100J	CHIP R 10 J 1/16W	
CP768		*	RK75HA1JR00J	CHIP-COM 0.00 J 1/16W		R457-461			RK73HB1J473J	CHIP R 47K J 1/16W	
CP775-778		*	RK75HA1JR00J	CHIP-COM 0.00 J 1/16W		R464			RK73HB1J472J	CHIP R 4.7K J 1/16W	
CP783-798		*	RK75HA1J390J	CHIP-COM 39 J 1/16W		R469			RK73HB1J470J	CHIP R 47 J 1/16W	
CP807-811		*	RK75HA1J104J	CHIP-COM 100K J 1/16W		R470			RK73HB1J102J	CHIP R 1.0K J 1/16W	
CP813		*	RK75HA1J104J	CHIP-COM 100K J 1/16W		R474			RK73HB1J100J	CHIP R 10 J 1/16W	
CP814,815		*	RK75HA1JR00J	CHIP-COM 0.00 J 1/16W		R478			RK73HB1J100J	CHIP R 10 J 1/16W	
R300,301			RK73GB2A000J	CHIP R 0.0 J 1/10W		R479			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R302			RK73HB1J000J	CHIP R 0.0 J 1/16W		R480			RK73HB1J100J	CHIP R 10 J 1/16W	
R303			RK73GB2A000J	CHIP R 0.0 J 1/10W		R481			RK73HB1J473J	CHIP R 47K J 1/16W	
R309			RK73HB1J000J	CHIP R 0.0 J 1/16W		R483			RK73HB1J104J	CHIP R 100K J 1/16W	
R311-317			RK73HB1J000J	CHIP R 0.0 J 1/16W		R484			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R318,319			RK73HB1J101J	CHIP R 100 J 1/16W		R485			RK73HB1J100J	CHIP R 10 J 1/16W	
R320-337			RK73HB1J000J	CHIP R 0.0 J 1/16W		R486-489			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R339			RK73HB1J473J	CHIP R 47K J 1/16W		R491-505			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R340-350			RK73HB1J000J	CHIP R 0.0 J 1/16W		R516-518			RK73HB1J473J	CHIP R 47K J 1/16W	
R352-354			RK73HB1J000J	CHIP R 0.0 J 1/16W		R521			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R356-360			RK73HB1J000J	CHIP R 0.0 J 1/16W		R522			RK73HB1J473J	CHIP R 47K J 1/16W	
R361			RK73GB2A104J	CHIP R 100K J 1/10W		R526			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R362			RK73GB2A681J	CHIP R 680 J 1/10W		R527			RK73HB1J473J	CHIP R 47K J 1/16W	
R363-386			RK73HB1J000J	CHIP R 0.0 J 1/16W		R528,529			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R387			RK73HB1J104J	CHIP R 100K J 1/16W		R530			RK73HB1J473J	CHIP R 47K J 1/16W	
R388-390			RK73GB2A000J	CHIP R 0.0 J 1/10W		R531,532			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R391			RK73GB2A100J	CHIP R 10 J 1/10W		R533,534			RK73HB1J473J	CHIP R 47K J 1/16W	
R392			RK73HB1J103J	CHIP R 10K J 1/16W		R535-539			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R393-397			RK73HB1J000J	CHIP R 0.0 J 1/16W		R540-542			RK73HB1J473J	CHIP R 47K J 1/16W	

PARTS LIST

CONTROL UNIT (X53-4140-10)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
R543			RK73HB1J000J	CHIP R 0.0 J 1/16W		R690			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R546			RK73HB1J000J	CHIP R 0.0 J 1/16W		R700,701			RK73HB1J103J	CHIP R 10K J 1/16W	
R547,548			RK73HB1J473J	CHIP R 47K J 1/16W		R702,703			RK73HB1J473J	CHIP R 47K J 1/16W	
R549			RK73HB1J000J	CHIP R 0.0 J 1/16W		R709,710			RK73HB1J104J	CHIP R 100K J 1/16W	
R550			RK73HB1J473J	CHIP R 47K J 1/16W		R711			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R551,552			RK73HB1J000J	CHIP R 0.0 J 1/16W		R712-714			RK73HB1J100J	CHIP R 10 J 1/16W	
R553-555			RK73HB1J473J	CHIP R 47K J 1/16W		R715			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R556,557			RK73HB1J000J	CHIP R 0.0 J 1/16W		R716			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R559			RK73HB1J102J	CHIP R 1.0K J 1/16W		R718			RK73HB1J104J	CHIP R 100K J 1/16W	
R560			RK73HB1J103J	CHIP R 10K J 1/16W		R719			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R561			RK73HB1J000J	CHIP R 0.0 J 1/16W		R720			RK73HB1J100J	CHIP R 10 J 1/16W	
R562			RK73HB1J103J	CHIP R 10K J 1/16W		R721			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R564-566			RK73HB1J000J	CHIP R 0.0 J 1/16W		R722			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R567			RK73HB1J473J	CHIP R 47K J 1/16W		R725,726			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R568			RK73HB1J000J	CHIP R 0.0 J 1/16W		R727			RK73HB1J103J	CHIP R 10K J 1/16W	
R569			RK73HB1J224J	CHIP R 220K J 1/16W		R729,730			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R570			RK73HB1J000J	CHIP R 0.0 J 1/16W		R731			RK73HB1J103J	CHIP R 10K J 1/16W	
R573-576			RK73HB1J000J	CHIP R 0.0 J 1/16W		R732			RK73HB1J390J	CHIP R 39 J 1/16W	
R577,578			RK73HB1J473J	CHIP R 47K J 1/16W		R733			RK73HB1J104J	CHIP R 100K J 1/16W	
R579			RK73HB1J000J	CHIP R 0.0 J 1/16W		R734			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R581			RK73HB1J000J	CHIP R 0.0 J 1/16W		R735,736			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R582			RK73HB1J473J	CHIP R 47K J 1/16W		R738			RK73HB1J104J	CHIP R 100K J 1/16W	
R583			RK73HB1J000J	CHIP R 0.0 J 1/16W		R742			RK73HB1J104J	CHIP R 100K J 1/16W	
R584			RK73HB1J473J	CHIP R 47K J 1/16W		R743,744			RK73HB1J153J	CHIP R 15K J 1/16W	
R585,586			RK73HB1J000J	CHIP R 0.0 J 1/16W		R745			RK73HB1J104J	CHIP R 100K J 1/16W	
R587			RK73HB1J473J	CHIP R 47K J 1/16W		R751			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R588			RK73HB1J000J	CHIP R 0.0 J 1/16W		R754			RK73HB1J103J	CHIP R 10K J 1/16W	
R589			RK73HB1J473J	CHIP R 47K J 1/16W		R756			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R590			RK73HB1J000J	CHIP R 0.0 J 1/16W		R758			RK73HB1J103J	CHIP R 10K J 1/16W	
R591			RK73HB1J223J	CHIP R 22K J 1/16W		R759			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R592-600			RK73HB1J000J	CHIP R 0.0 J 1/16W		R760			RK73HB1J103J	CHIP R 10K J 1/16W	
R602			RK73HB1J103J	CHIP R 10K J 1/16W		R761-765			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R604			RK73HB1J103J	CHIP R 10K J 1/16W		R766			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R605-610			RK73HB1J000J	CHIP R 0.0 J 1/16W		R767			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R612-616			RK73HB1J000J	CHIP R 0.0 J 1/16W		R768-770			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R620-623			RK73HB1J000J	CHIP R 0.0 J 1/16W		R772-777			RK73HB1J104J	CHIP R 100K J 1/16W	
R624			RK73HB1J473J	CHIP R 47K J 1/16W		R778			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R626			RK73HB1J473J	CHIP R 47K J 1/16W		R779			RK73HB1J104J	CHIP R 100K J 1/16W	
R627			RK73HB1J000J	CHIP R 0.0 J 1/16W		R780			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R629-631			RK73HB1J000J	CHIP R 0.0 J 1/16W		R781-784			RK73HB1J104J	CHIP R 100K J 1/16W	
R632			RK73HB1J101J	CHIP R 100 J 1/16W		R785			RK73HB1J272J	CHIP R 2.7K J 1/16W	
R634			RK73HB1J473J	CHIP R 47K J 1/16W		R786-788			RK73HB1J104J	CHIP R 100K J 1/16W	
R635,636			RK73HB1J000J	CHIP R 0.0 J 1/16W		R794			RK73HB1J104J	CHIP R 100K J 1/16W	
R637-640			RK73HB1J473J	CHIP R 47K J 1/16W		R796			RK73HB1J104J	CHIP R 100K J 1/16W	
R641			RK73HB1J000J	CHIP R 0.0 J 1/16W		R799-803			RK73HB1J104J	CHIP R 100K J 1/16W	
R642			RK73HB1J101J	CHIP R 100 J 1/16W		R805-808			RK73HB1J103J	CHIP R 10K J 1/16W	
R643			RK73HB1J473J	CHIP R 47K J 1/16W		R816			RK73HB1J105J	CHIP R 1.0M J 1/16W	
R644			RK73HB1J000J	CHIP R 0.0 J 1/16W		R817			RK73HB1J821J	CHIP R 820 J 1/16W	
R646			RK73HB1J473J	CHIP R 47K J 1/16W		R818			RK73HB1J104J	CHIP R 100K J 1/16W	
R648			RK73HB1J000J	CHIP R 0.0 J 1/16W		R819			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R649			RK73HB1J101J	CHIP R 100 J 1/16W		R820			RK73HB1J103J	CHIP R 10K J 1/16W	
R650			RK73HB1J473J	CHIP R 47K J 1/16W		R821			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R651-653			RK73HB1J000J	CHIP R 0.0 J 1/16W		R822			RK73HB1J103J	CHIP R 10K J 1/16W	
R656,657			RK73HB1J000J	CHIP R 0.0 J 1/16W		R824			RK73HB1J103J	CHIP R 10K J 1/16W	
R660-664			RK73HB1J000J	CHIP R 0.0 J 1/16W		R826			RK73HB1J103J	CHIP R 10K J 1/16W	
R667,668			RK73HB1J000J	CHIP R 0.0 J 1/16W		R827			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R672-674			RK73HB1J473J	CHIP R 47K J 1/16W		R828			RK73HB1J104J	CHIP R 100K J 1/16W	
R678,679			RK73HB1J000J	CHIP R 0.0 J 1/16W		R829		*	RK73HH1J113D	CHIP R 11K D 1/16W	
R680			RK73HB1J473J	CHIP R 47K J 1/16W		R830			RK73HB1J104J	CHIP R 100K J 1/16W	
R685-687			RK73HB1J000J	CHIP R 0.0 J 1/16W		R832			RK73HB1J104J	CHIP R 100K J 1/16W	

PARTS LIST

CONTROL UNIT (X53-4140-10)

RX UNIT (X55-3100-10)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
R833			RK73HB1J000J	CHIP R 0.0 J 1/16W		IC307		*	XC6201P152PR	MOS-IC	
R834			RK73HB1J104J	CHIP R 100K J 1/16W		IC308			XC61CN2702N	MOS-IC	
R835			RK73HB1J000J	CHIP R 0.0 J 1/16W		IC309			AK4550VTP	MOS-IC	
R837		*	RK73GH2A49R9D	CHIP R 49.9 D 1/10W		IC312		*	ADCS7476AIMF	MOS-IC	
R839			RK73GB2A000J	CHIP R 0.0 J 1/10W		IC313			TC7WU04FK-F	MOS-IC	
R840		*	RK73GH2A49R9D	CHIP R 49.9 D 1/10W		IC314		*	Note 1 (BGA)	ROM IC	
R842-845			RK73HB1J104J	CHIP R 100K J 1/16W		IC315		*	ADF4001BRUZ	MOS-IC	
R867,868		*	RK73GH2A24R9D	CHIP R 24.9 D 1/10W		IC318		*	TC7SH126FU-F	MOS-IC	
R869			RK73HB1J331J	CHIP R 330 J 1/16W		IC319-321		*	TC7SET126FU-F	MOS-IC	
R870			RK73HB1J000J	CHIP R 0.0 J 1/16W		IC323,324			Note 1 (BGA)	MICROPROCESSOR IC	
R871-873			RK73HB1J103J	CHIP R 10K J 1/16W		IC325		*	3625MGP396GP	MICROPROCESSOR IC	
R874			RK73HB1J000J	CHIP R 0.0 J 1/16W		IC327			TC7SH08FU-F	MOS-IC	
R875,876		*	RK73GH2A24R9D	CHIP R 24.9 D 1/10W		IC329	1C	*	BA33DD0WT	MOS-IC	
R877,878			RK73HB1J103J	CHIP R 10K J 1/16W		IC330		*	TC7SH126FU-F	MOS-IC	
R879			RK73GB2A000J	CHIP R 0.0 J 1/10W		IC700		*	62167DV30LL55	SRAM IC	
R880,881			RK73HB1J104J	CHIP R 100K J 1/16W		IC701			RV5C386A	MOS-IC	
R883-885			RK73HB1J000J	CHIP R 0.0 J 1/16W		IC702		*	29PL127JKCDB	ROM IC	
R886			RK73HB1J221J	CHIP R 220 J 1/16W		IC703		*	Note 1 (BGA)	MICROPROCESSOR IC	
R887			RK73HB1J000J	CHIP R 0.0 J 1/16W		IC704		*	48LC8M16A2P75I	DRAM IC	
R888			RK73HB1J221J	CHIP R 220 J 1/16W		IC705		*	ADM3202ARUZ	MOS-IC	
R889			RK73HB1J103J	CHIP R 10K J 1/16W		IC707		*	48LC8M16A2P75I	DRAM IC	
R890			RK73HB1J000J	CHIP R 0.0 J 1/16W		IC708			BU4829FVE	MOS-IC	
R891			RK73HB1J104J	CHIP R 100K J 1/16W		IC709		*	TC7SH126FU-F	MOS-IC	
R892,893			RK73HB1J000J	CHIP R 0.0 J 1/16W		IC710,711			TC7SH00FU-F	MOS-IC	
R894			RK73HB1J103J	CHIP R 10K J 1/16W		IC712,713			TC7SH32FU-F	MOS-IC	
R895			RK73HB1J151J	CHIP R 150 J 1/16W		IC714-716		*	TC7MA244FK	MOS-IC	
R896			RK73HB1J101J	CHIP R 100 J 1/16W		IC717,718		*	TC7MA245FK	MOS-IC	
R897			RK73HB1J104J	CHIP R 100K J 1/16W		IC719		*	LAN91C1111-NU	MOS-IC	
R902,903			RK73HB1J000J	CHIP R 0.0 J 1/16W		IC720			AT93C4610SU1.8	ROM IC	
R907			RK73HB1J000J	CHIP R 0.0 J 1/16W		IC721			TC7SH08FU-F	MOS-IC	
R909			RK73HB1J000J	CHIP R 0.0 J 1/16W		IC722			TC7SH32FU-F	MOS-IC	
R910			RK73HB1J473J	CHIP R 47K J 1/16W		IC723			TC7SH00FU-F	MOS-IC	
R911			RK73HB1J000J	CHIP R 0.0 J 1/16W		IC724		*	TC7SH125FU-F	MOS-IC	
R912			RK73HB1J473J	CHIP R 47K J 1/16W		IC725		*	TC7SH126FU-F	MOS-IC	
R913,914			RK73HB1J000J	CHIP R 0.0 J 1/16W		IC726			TC7SH08FU-F	MOS-IC	
R915			RK73HB1J473J	CHIP R 47K J 1/16W		IC727,728		*	TC7SH126FU-F	MOS-IC	
R916-923			RK73HB1J000J	CHIP R 0.0 J 1/16W		Q300			2SC4738(GR)F	TRANSISTOR	
R924			RK73HB1J104J	CHIP R 100K J 1/16W		Q301			DTC114EUA	DIGITAL TRANSISTOR	
R926			RK73HB1J473J	CHIP R 47K J 1/16W		Q302			2SA1955A-F	TRANSISTOR	
R927-933			RK73HB1J000J	CHIP R 0.0 J 1/16W		Q303			DTA144EUA	DIGITAL TRANSISTOR	
R934,935			RK73HB1J474J	CHIP R 470K J 1/16W		Q304,305			2SC4738(GR)F	TRANSISTOR	
R936			RK73HB1J104J	CHIP R 100K J 1/16W		Q307,308			2SC4738(GR)F	TRANSISTOR	
R942			RK73HB1J104J	CHIP R 100K J 1/16W		Q309			SSM6N16FE-F	FET	
R943			RK73HB1J000J	CHIP R 0.0 J 1/16W		Q700			2SC4738(GR)F	TRANSISTOR	
R945-950			RK73HB1J000J	CHIP R 0.0 J 1/16W		Q702			2SC4738(GR)F	TRANSISTOR	
R951			RK73HB1J104J	CHIP R 100K J 1/16W		Q704,705			2SC4738(GR)F	TRANSISTOR	
R952,953			RK73HB1J000J	CHIP R 0.0 J 1/16W		Q706			DTC114EUA	DIGITAL TRANSISTOR	
R954-957			RK73GB2A000J	CHIP R 0.0 J 1/10W		Q707			DTC144EUA	DIGITAL TRANSISTOR	
R960			RK73GB2A000J	CHIP R 0.0 J 1/10W		BA300		*	W09-1004-05	LITHIUM CELL	
S700		*	S79-0473-05	DIP SWITCHES		RX UNIT (X55-3100-10)					
D300			1SS388F	DIODE		D21			B30-2230-05	LED (YG)	
D701			1SS388F	DIODE		C7			CC73GCH1H471J	CHIP C 470PF J	
D702			1SS355	DIODE		C10			CC73GCH1H080B	CHIP C 8.0PF B	
IC300,301		*	TC7SET126FU-F	MOS-IC		C12			CC73GCH1H100C	CHIP C 10PF C	
IC302		*	SN65HVD485EDR	MOS-IC		C14			CC73GCH1H471J	CHIP C 470PF J	
IC303			BU4829FVE	MOS-IC		C15			CK73GB1H104K	CHIP C 0.10UF K	
IC304		*	TC7SH125FU-F	MOS-IC							
IC305		*	XC6209B332PR	MOS-IC							
IC306		*	BA15BC0FP	MOS-IC							

If a part reference number is listed in a shaded box, that part does not come with the PCB.

Note 1 : This part cannot be replaced. Therefore, this part is not supplied as a service part.

PARTS LIST

RX UNIT (X55-3100-10)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
C17			CC73GCH1H471J	CHIP C 470PF J		C104			CC73GCH1H471J	CHIP C 470PF J	
C18			CK73GB1H104K	CHIP C 0.10UF K		C105,106			CC73FCH1H050B	CHIP C 5.0PF B	
C19			CC73GCH1H471J	CHIP C 470PF J		C107			CC73GCH1H330J	CHIP C 33PF J	
C24			CC73GCH1H471J	CHIP C 470PF J		C108			CC73GCH1H560J	CHIP C 56PF J	
C25			CK73GB1H104K	CHIP C 0.10UF K		C109,110			CK73GB1H103K	CHIP C 0.010UF K	
C26			CC73GCH1H471J	CHIP C 470PF J		C112			CC73GCH1H220J	CHIP C 22PF J	
C27			CK73GB1H102K	CHIP C 1000PF K		C113			CC73FCH1H060B	CHIP C 6.0PF B	
C32			CC73GCH1H151J	CHIP C 150PF J		C114			CC73FCH1H050B	CHIP C 5.0PF B	
C33			CC73GCH1H271J	CHIP C 270PF J		C115			CC73GCH1H090D	CHIP C 9.0PF D	
C34,35			CC73GCH1H471J	CHIP C 470PF J		C116			CC73GCH1H560J	CHIP C 56PF J	
C36			CK73GB1H102K	CHIP C 1000PF K		C117			CC73GCH1H121J	CHIP C 120PF J	
C37			CK73FB1E224K	CHIP C 0.22UF K		C118-120			CC73GCH1H471J	CHIP C 470PF J	
C38			CS77CA1VR33M	CHIP TNTL 0.33UF 35WV		C122			CC73GCH1H090D	CHIP C 9.0PF D	
C39			CC73GCH1H271J	CHIP C 270PF J		C123,124			CC73FCH1H060B	CHIP C 6.0PF B	
C41,42			CC73GCH1H471J	CHIP C 470PF J		C125			CC73GCH1H070D	CHIP C 7.0PF D	
C43			CC73GCH1H561J	CHIP C 560PF J		C126			CK73GB1H104K	CHIP C 0.10UF K	
C44			CK73GB1H103K	CHIP C 0.010UF K		C128			CC73GCH1H560J	CHIP C 56PF J	
C45			CK73GB1H104K	CHIP C 0.10UF K		C129,130			CK73GB1H103K	CHIP C 0.010UF K	
C46			CC73GCH1H561J	CHIP C 560PF J		C131		*	CS77CC1C330M	CHIP TNTL 33UF 16WV	
C47			CC73GCH1H471J	CHIP C 470PF J		C132-134			CC73GCH1H471J	CHIP C 470PF J	
C48			CK73GB1H104K	CHIP C 0.10UF K		C137			CC73GCH1H060D	CHIP C 6.0PF D	
C50			CE32BM1E470M	CHIP EL 47UF 25WV		C138			CC73GCH1H150J	CHIP C 15PF J	
C51			CK73GB1H104K	CHIP C 0.10UF K		C139			CE32BM1E470M	CHIP EL 47UF 25WV	
C53			CC73GCH1H271J	CHIP C 270PF J		C140,141			CK73GB1H103K	CHIP C 0.010UF K	
C54			CC73GCH1H101J	CHIP C 100PF J		C142,143			CC73FCH1H0R5C	CHIP C 0.5PF C	
C55			CC73GCH1H080D	CHIP C 8.0PF D		C144-146			CK73GB1H104K	CHIP C 0.10UF K	
C56			CC73GCH1H271J	CHIP C 270PF J		C147		*	CS77CC1C330M	CHIP TNTL 33UF 16WV	
C58		*	CS77CB21C220M	CHIP TNTL 22UF 16WV		C149,150			CC73GCH1H180J	CHIP C 18PF J	
C59			CK73GB1H104K	CHIP C 0.10UF K		C151			CC73GCH1H070D	CHIP C 7.0PF D	
C60,61			CC73GCH1H471J	CHIP C 470PF J		C154,155			CK73GB1H104K	CHIP C 0.10UF K	
C62-66			CK73GB1H104K	CHIP C 0.10UF K		C156			CC73GCH1H100C	CHIP C 10PF C	
C67		*	CS77CB21C220M	CHIP TNTL 22UF 16WV		C157,158			CC73GCH1H471J	CHIP C 470PF J	
C68			CC73GCH1H101J	CHIP C 100PF J		C159,160			CK73GB1H104K	CHIP C 0.10UF K	
C69			CC73GCH1H471J	CHIP C 470PF J		C161			CC73GCH1H030C	CHIP C 3.0PF C	
C70		*	CS77CC1C330M	CHIP TNTL 33UF 16WV		C162			CC73GCH1H060D	CHIP C 6.0PF D	
C71			CC73GCH1H271J	CHIP C 270PF J		C163			CC73GCH1H020B	CHIP C 2.0PF B	
C74			CC73GCH1H271J	CHIP C 270PF J		C164			CK73GB1H104K	CHIP C 0.10UF K	
C75		*	CS77CC1C330M	CHIP TNTL 33UF 16WV		C165			CS77CB21C100M	CHIP TNTL 10UF 16WV	
C76			CC73GCH1H561J	CHIP C 560PF J		C166,167			CC73GCH1H180J	CHIP C 18PF J	
C77			CK73GB1H104K	CHIP C 0.10UF K		C168			CC73GCH1H471J	CHIP C 470PF J	
C79			CS77BA1E010M	CHIP TNTL 1UF 25WV		C169			CC73GCH1H150J	CHIP C 15PF J	
C80			CC73GCH1H561J	CHIP C 560PF J		C170,171			CK73GB1H104K	CHIP C 0.10UF K	
C81			CK73GB1H104K	CHIP C 0.10UF K		C172			CK73GB1H473K	CHIP C 0.047UF K	
C82			CC73GCH1H271J	CHIP C 270PF J		C173,174			CK73GB1H103K	CHIP C 0.010UF K	
C83-85			CC73GCH1H471J	CHIP C 470PF J		C175			CC73GCH1H101J	CHIP C 100PF J	
C86			CC73GCH1H271J	CHIP C 270PF J		C176			CK73GB1H104K	CHIP C 0.10UF K	
C87			CK73GB1H104K	CHIP C 0.10UF K		C177-179			CC73GCH1H471J	CHIP C 470PF J	
C88			CK73GB1H103K	CHIP C 0.010UF K		C180			CK73GB1H104K	CHIP C 0.10UF K	
C89			CC73GCH1H220G	CHIP C 22PF G		C183		*	CE32AU1E100M	CHIP EL 10UF 25WV	
C90			CK73GB1H103K	CHIP C 0.010UF K		C185,186			CC73GCH1H471J	CHIP C 470PF J	
C91			CC73GCH1H180G	CHIP C 18PF G		C187			CC73GCH1H220J	CHIP C 22PF J	
C92,93			CC73FCH1H050B	CHIP C 5.0PF B		C188			CK73GB1H103K	CHIP C 0.010UF K	
C94			CC73FCH1H060B	CHIP C 6.0PF B		C192			CC73GCH1H471J	CHIP C 470PF J	
C95			CC73FCH1H050B	CHIP C 5.0PF B		C193			CK73GB1H104K	CHIP C 0.10UF K	
C96			CE32BM1E470M	CHIP EL 47UF 25WV		C194			CC73GCH1H080D	CHIP C 8.0PF D	
C97			CK73GB1H104K	CHIP C 0.10UF K		C195			CC73GCH1H471J	CHIP C 470PF J	
C98,99			CC73GCH1H471J	CHIP C 470PF J		C196,197			CK73GB1H103K	CHIP C 0.010UF K	
C100			CK73GB1H103K	CHIP C 0.010UF K		C198			CC73GCH1H471J	CHIP C 470PF J	
C102			CC73GCH1H471J	CHIP C 470PF J		C199			CK73GB1H103K	CHIP C 0.010UF K	
C103			CC73GCH1H060D	CHIP C 6.0PF D		C203-205			CC73GCH1H471J	CHIP C 470PF J	

PARTS LIST

RX UNIT (X55-3100-10)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
C206			CC73GCH1H100C	CHIP C 10PF C		C288,289			CC73GCH1H150J	CHIP C 15PF J	
C211,212			CK73GB1H103K	CHIP C 0.010UF K		C290,291			CK73GB1H473K	CHIP C 0.047UF K	
C213			CK73GB1H473K	CHIP C 0.047UF K		C292			CE32CL1V100M	CHIP EL 10UF 35WV	
C214			CC73GCH1H040C	CHIP C 4.0PF C		C293			CC73GCH1H151J	CHIP C 150PF J	
C215			CK73GB1H103K	CHIP C 0.010UF K		C295			CK73GB1H102K	CHIP C 1000PF K	
C216			CK73GB1H473K	CHIP C 0.047UF K		C296		*	CS77CA1DR68M	CHIP TNTL 0.68UF 20WV	
C217			CK73GB1H104K	CHIP C 0.10UF K		C297			CC73GCH1H151J	CHIP C 150PF J	
C218			CK73GB1H473K	CHIP C 0.047UF K		C298			CK73GB1H102K	CHIP C 1000PF K	
C220			CC73GCH1H040C	CHIP C 4.0PF C		C300			CC73GCH1H220G	CHIP C 22PF G	
C221,222			CK73GB1H104K	CHIP C 0.10UF K		C301			CK73GB1H473K	CHIP C 0.047UF K	
C223			CK73GB1H103K	CHIP C 0.010UF K		C302			CC73GCH1H100D	CHIP C 10PF D	
C224			CK73GB1H104K	CHIP C 0.10UF K		C303,304			CK73GB1H473K	CHIP C 0.047UF K	
C225			CK73GB1H473K	CHIP C 0.047UF K		C305			CC73GCH1H151J	CHIP C 150PF J	
C227			CC73GCH1H471J	CHIP C 470PF J		C306			CK73GB1H102K	CHIP C 1000PF K	
C228,229			CK73FB1E474K	CHIP C 0.47UF K		C307,308			CK73GB1H103K	CHIP C 0.010UF K	
C230			CC73GCH1H820J	CHIP C 82PF J		C309			CC73GCH1H471J	CHIP C 470PF J	
C231			CK73GB1H473K	CHIP C 0.047UF K		C310			CK73GB1H102K	CHIP C 1000PF K	
C232			CC73GCH1H470J	CHIP C 47PF J		C314			CK73GB1H104K	CHIP C 0.10UF K	
C233			CK73GB1H473K	CHIP C 0.047UF K		C315			CC73GCH1H270G	CHIP C 27PF G	
C234,235			CC73GCH1H270J	CHIP C 27PF J		C316			CK73GB1H473K	CHIP C 0.047UF K	
C236			CK73GB1H104K	CHIP C 0.10UF K		C317			CC73GCH1H151J	CHIP C 150PF J	
C237			CK73GB1H102K	CHIP C 1000PF K		C318,319			CK73GB1H103K	CHIP C 0.010UF K	
C238			CC73GCH1H090D	CHIP C 9.0PF D		C320			CE32BM1E470M	CHIP EL 47UF 25WV	
C239		*	CE32AU1C330M	CHIP EL 33UF 16WV		C324			CC73GCH1H471J	CHIP C 470PF J	
C240			CS77CB21C100M	CHIP TNTL 10UF 16WV		C325			CC73GCH1H270G	CHIP C 27PF G	
C241,242			CC73GCH1H150J	CHIP C 15PF J		C326			CC73GCH1H151J	CHIP C 150PF J	
C243			CC73GCH1H820J	CHIP C 82PF J		C327			CK73GB1H102K	CHIP C 1000PF K	
C244			CC73GCH1H100D	CHIP C 10PF D		C329			CK73GB1H103K	CHIP C 0.010UF K	
C245			CK73GB1H102K	CHIP C 1000PF K		C330			CK73GB1H102K	CHIP C 1000PF K	
C248			CC73GCH1H471J	CHIP C 470PF J		C331			CC73GCH1H020B	CHIP C 2.0PF B	
C249			CC73GCH1H070D	CHIP C 7.0PF D		C332			CK73GB1H104K	CHIP C 0.10UF K	
C250,251			CK73GB1H104K	CHIP C 0.10UF K		C333			CC73GCH1H151J	CHIP C 150PF J	
C252			CC73GCH1H151J	CHIP C 150PF J		C334,335			CK73GB1H103K	CHIP C 0.010UF K	
C253			CC73GCH1H010C	CHIP C 1.0PF C		C336			CC73GCH1H471J	CHIP C 470PF J	
C254			CC73GCH1H030C	CHIP C 3.0PF C		C337			CC73GCH1H560J	CHIP C 56PF J	
C255			CK73GB1H104K	CHIP C 0.10UF K		C340		*	CS77CC1C330M	CHIP TNTL 33UF 16WV	
C256			CK73GB1H102K	CHIP C 1000PF K		C341,342			CK73GB1H473K	CHIP C 0.047UF K	
C257			CK73GB1H103K	CHIP C 0.010UF K		C343			CC73GCH1H220J	CHIP C 22PF J	
C258			CK73GB1H473K	CHIP C 0.047UF K		C347,348			CK73GB1H103K	CHIP C 0.010UF K	
C260			CC73GCH1H471J	CHIP C 470PF J		C349			CC73GCH1H121J	CHIP C 120PF J	
C261			CK73GB1H103K	CHIP C 0.010UF K		C350		*	CS77CC1C330M	CHIP TNTL 33UF 16WV	
C262,263			CK73GB1H102K	CHIP C 1000PF K		C351			CK73GB1H102K	CHIP C 1000PF K	
C264			CS77CA1ER47M	CHIP TNTL 0.47UF 25WV		C352			CK73GB1H473K	CHIP C 0.047UF K	
C265			CC73GCH1H470J	CHIP C 47PF J		C353			CK73GB1H102K	CHIP C 1000PF K	
C266,267			CC73GCH1H471J	CHIP C 470PF J		C355			CK73GB1H103K	CHIP C 0.010UF K	
C268,269			CK73GB1H473K	CHIP C 0.047UF K		C356			CK73GB1H473K	CHIP C 0.047UF K	
C270		*	CS77CA1DR68M	CHIP TNTL 0.68UF 20WV		C357			CK73GB1H103K	CHIP C 0.010UF K	
C271			CC73GCH1H471J	CHIP C 470PF J		C358			CK73GB1H473K	CHIP C 0.047UF K	
C272			CK73GB1H104K	CHIP C 0.10UF K		C359,360			CC73GCH1H471J	CHIP C 470PF J	
C273			CC73GCH1H220J	CHIP C 22PF J		C361			CK73GB1H102K	CHIP C 1000PF K	
C274			CK73GB1H473K	CHIP C 0.047UF K		C362			CC73GCH1H270J	CHIP C 27PF J	
C277			CK73GB1H102K	CHIP C 1000PF K		C363			CK73GB1H473K	CHIP C 0.047UF K	
C278			CC73GCH1H151J	CHIP C 150PF J		C365,366			CK73GB1H104K	CHIP C 0.10UF K	
C279			CK73GB1H473K	CHIP C 0.047UF K		C367			CC73GCH1H560J	CHIP C 56PF J	
C280			CC73GCH1H080B	CHIP C 8.0PF B		C368			CC73GCH1H330J	CHIP C 33PF J	
C281			CC73GCH1H030B	CHIP C 3.0PF B		C369,370			CK73FB1E474K	CHIP C 0.47UF K	
C282		*	CS77CB21C150M	CHIP TNTL 15UF 16WV		C371			CK73GB1H102K	CHIP C 1000PF K	
C284			CK73GB1H473K	CHIP C 0.047UF K		C372			CK73GB1H473K	CHIP C 0.047UF K	
C285			CC73GCH1H471J	CHIP C 470PF J		C373			CK73GB1H103K	CHIP C 0.010UF K	
C287			CC73GCH1H390J	CHIP C 39PF J		C375			CK73GB1H103K	CHIP C 0.010UF K	

PARTS LIST

RX UNIT (X55-3100-10)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
C377			CK73GB1H103K	CHIP C 0.010UF K		C467			CK73GB1H102K	CHIP C 1000PF K	
C379			CC73GCH1H121J	CHIP C 120PF J		C468			CK73GB1H104K	CHIP C 0.10UF K	
C380			CC73GCH1H560J	CHIP C 56PF J		C469			CK73GB1H473K	CHIP C 0.047UF K	
C381			CE32BM1E470M	CHIP EL 47UF 25WV		C470			CC73GCH1H471J	CHIP C 470PF J	
C382,383			CK73GB1H104K	CHIP C 0.10UF K		C471,472			CK73GB1H104K	CHIP C 0.10UF K	
C385,386			CK73GB1H104K	CHIP C 0.10UF K		C473			CC73GCH1H270J	CHIP C 27PF J	
C387			CC73GCH1H270J	CHIP C 27PF J		C474			CK73FB1E474K	CHIP C 0.47UF K	
C388			CC73GCH1H820J	CHIP C 82PF J		C476		*	CE32AU1E100M	CHIP EL 10UF 25WV	
C389			CK73GB1H473K	CHIP C 0.047UF K		C477			CK73GB1H104K	CHIP C 0.10UF K	
C390			CK73GB1H104K	CHIP C 0.10UF K		C478			CK73FB1E474K	CHIP C 0.47UF K	
C391,392			CK73GB1H103K	CHIP C 0.010UF K		C480-482			CE32CL1V100M	CHIP EL 10UF 35WV	
C394,395			CK73GB1H102K	CHIP C 1000PF K		C484-488			CC73GCH1H471J	CHIP C 470PF J	
C396-398			CK73GB1H104K	CHIP C 0.10UF K		C489			CK73GB1H102K	CHIP C 1000PF K	
C400			CC73GCH1H220J	CHIP C 22PF J		C491			CK73GB1H104K	CHIP C 0.10UF K	
C401			CK73GB1H473K	CHIP C 0.047UF K		C492		*	C93-0912-05	CHIP C 100UF M	
C402			CC73GCH1H560J	CHIP C 56PF J		C493			CK73GB1H473K	CHIP C 0.047UF K	
C403			CK73GB1H104K	CHIP C 0.10UF K		C494			CK73FB0J106K	CHIP C 10UF K	
C405			CK73GB1H102K	CHIP C 1000PF K		C495			CK73GB1H104K	CHIP C 0.10UF K	
C406			CK73GB1H103K	CHIP C 0.10UF K		C498			CC73GCH1H470J	CHIP C 47PF J	
C407			CC73GCH1H560J	CHIP C 56PF J		C499			CK73FB0J106K	CHIP C 10UF K	
C408			CC73GCH1H220J	CHIP C 22PF J		C500-504			CC73GCH1H471J	CHIP C 470PF J	
C409			CK73GB1H102K	CHIP C 1000PF K		C505			CK73FB0J106K	CHIP C 10UF K	
C410			CK73GB1H104K	CHIP C 0.10UF K		C506			CK73GB1H102K	CHIP C 1000PF K	
C411			CC73GCH1H121J	CHIP C 120PF J		C507			CK73GB1H104K	CHIP C 0.10UF K	
C412			CK73GB1H104K	CHIP C 0.10UF K		C508			CK73FB0J106K	CHIP C 10UF K	
C413			CK73GB1H103K	CHIP C 0.010UF K		C509			CC73GCH1H101J	CHIP C 100PF J	
C414			CK73GB1H104K	CHIP C 0.10UF K		C510			CK73GB1H104K	CHIP C 0.10UF K	
C415,416			CK73GB1H103K	CHIP C 0.010UF K		C516			CK73GB1H473K	CHIP C 0.047UF K	
C417			CK73GB1H104K	CHIP C 0.10UF K		C517			CK73FB0J106K	CHIP C 10UF K	
C418,419			CK73GB1H103K	CHIP C 0.010UF K		C518			CK73GB1H104K	CHIP C 0.10UF K	
C420			CK73GB1H102K	CHIP C 1000PF K		C519			CC73GCH1H471J	CHIP C 470PF J	
C421,422			CK73GB1H473K	CHIP C 0.047UF K		C520			CK73GB1H103K	CHIP C 0.010UF K	
C423,424			CK73GB1H103K	CHIP C 0.010UF K		C521			CK73GB1H104K	CHIP C 0.10UF K	
C425			CK73GB1H104K	CHIP C 0.10UF K		C522			CK73GB1H103K	CHIP C 0.010UF K	
C427			CK73FB1E474K	CHIP C 0.47UF K		C523			CK73GB1H104K	CHIP C 0.10UF K	
C428,429			CC73GCH1H560J	CHIP C 56PF J		C524			CK73FB1H333K	CHIP C 0.033UF K	
C430			CK73GB1H102K	CHIP C 1000PF K		C527			CK73GB1H104K	CHIP C 0.10UF K	
C431			CK73GB1H473K	CHIP C 0.047UF K		C532			CK73GB1H104K	CHIP C 0.10UF K	
C432			CK73GB1H102K	CHIP C 1000PF K		C533-536			CE32CL1V100M	CHIP EL 10UF 35WV	
C434,435			CK73GB1H473K	CHIP C 0.047UF K		C537-540			CC73GCH1H471J	CHIP C 470PF J	
C437			CK73GB1H102K	CHIP C 1000PF K		C541,542			CK73GB1H104K	CHIP C 0.10UF K	
C438			CK73GB1H473K	CHIP C 0.047UF K		C543			CK73GB1H473K	CHIP C 0.047UF K	
C439			CK73GB1H104K	CHIP C 0.10UF K		C544			CC73GCH1H470J	CHIP C 47PF J	
C440-442			CK73FB1E474K	CHIP C 0.47UF K		C545-548			CC73GCH1H471J	CHIP C 470PF J	
C443,444			CK73GB1H473K	CHIP C 0.047UF K		C549			CC73GCH1H470J	CHIP C 47PF J	
C446		*	CE32AU1E100M	CHIP EL 10UF 25WV		C550-553			CK73GB1H103K	CHIP C 0.010UF K	
C447			CK73FB1E474K	CHIP C 0.47UF K		C554			CK73GB1H473K	CHIP C 0.047UF K	
C448			CK73GB1H104K	CHIP C 0.10UF K		C555		*	CE32BM1V220M	CHIP EL 22UF 35WV	
C449			CK73GB1H473K	CHIP C 0.047UF K		C556			CC73GCH1H471J	CHIP C 470PF J	
C450,451			CK73FB1E474K	CHIP C 0.47UF K		C557			CK73GB1H473K	CHIP C 0.047UF K	
C452,453			CK73GB1H104K	CHIP C 0.10UF K		C558			CC73GCH1H471J	CHIP C 470PF J	
C454,455			CK73FB1E474K	CHIP C 0.47UF K		C559			CK73GB1H104K	CHIP C 0.10UF K	
C456			CK73GB1H473K	CHIP C 0.047UF K		C560,561			CC73GCH1H471J	CHIP C 470PF J	
C458			CK73GB1H104K	CHIP C 0.10UF K		C562			CK73GB1H473K	CHIP C 0.047UF K	
C459			CC73GCH1H221J	CHIP C 220PF J		C563			CC73GCH1H471J	CHIP C 470PF J	
C460			CK73FB1E474K	CHIP C 0.47UF K		C564			CK73GB1H103K	CHIP C 0.010UF K	
C461			CC73GCH1H221J	CHIP C 220PF J		C565			CC73GCH1H471J	CHIP C 470PF J	
C462			CK73GB1H104K	CHIP C 0.10UF K		C566			CK73GB1H473K	CHIP C 0.047UF K	
C463-465			CK73FB1E474K	CHIP C 0.47UF K		C567			CE32CL1V100M	CHIP EL 10UF 35WV	
C466			CK73GB1H473K	CHIP C 0.047UF K		C568			CC73GCH1H470J	CHIP C 47PF J	

PARTS LIST

RX UNIT (X55-3100-10)

Ref. No.	Address	New parts	Parts No.	Description	Desti-nation	Ref. No.	Address	New parts	Parts No.	Description	Desti-nation
C569			CC73GCH1H471J	CHIP C 470PF J		L12			L34-4605-05	AIR-CORE COIL	
C570			CC73GCH1H470J	CHIP C 47PF J		L13			L41-1295-33	SMALL FIXED INDUCTOR (1.2UH)	
C571		*	C92-0904-05	OS-CON 22UF 35WV		L14			L41-1805-33	SMALL FIXED INDUCTOR (18UH)	
C572,573			CK73GB1H103K	CHIP C 0.010UF K		L16			L41-2705-33	SMALL FIXED INDUCTOR (27UH)	
C574-576			CK73GB1H104K	CHIP C 0.10UF K		L17,18			L41-1095-33	SMALL FIXED INDUCTOR (1.0UH)	
C577			CK73GB1H103K	CHIP C 0.010UF K		L20			L41-1295-33	SMALL FIXED INDUCTOR (1.2UH)	
C578			CC73GCH1H151J	CHIP C 150PF J		L21,22			L41-1095-33	SMALL FIXED INDUCTOR (1.0UH)	
C579			CC73GCH1H560J	CHIP C 56PF J		L23			L41-1295-33	SMALL FIXED INDUCTOR (1.2UH)	
C580-582			CK73GB1H103K	CHIP C 0.010UF K		L26			L41-1095-33	SMALL FIXED INDUCTOR (1.0UH)	
C583			CK73GB1H102K	CHIP C 1000PF K		L27			L41-1098-40	SMALL FIXED INDUCTOR (1000NH)	
C584			CK73GB1H103K	CHIP C 0.010UF K		L28			L34-4524-05	AIR-CORE COIL	
C585			CC73GCH1H470J	CHIP C 47PF J		L29			L41-1098-40	SMALL FIXED INDUCTOR (1000NH)	
C586			CC73GCH1H471J	CHIP C 470PF J		L30			L34-4524-05	AIR-CORE COIL	
C587-590			CK73FB1E474K	CHIP C 0.47UF K		L31			L41-1575-33	SMALL FIXED INDUCTOR (0.015UH)	
C591			CK73GB1H102K	CHIP C 1000PF K		L32			L41-8275-33	SMALL FIXED INDUCTOR (0.082UH)	
C618			CC73GCH1H101J	CHIP C 100PF J		L33			L41-2785-33	SMALL FIXED INDUCTOR (0.27UH)	
C619			CK73GB1H104K	CHIP C 0.10UF K		L34	*		L41-1205-33	SMALL FIXED INDUCTOR (12UH)	
C620			CK73GB1H102K	CHIP C 1000PF K		L35			L41-3395-33	SMALL FIXED INDUCTOR (3.3UH)	
C621,622			CK73GB1H104K	CHIP C 0.10UF K		L36			L41-1575-33	SMALL FIXED INDUCTOR (0.015UH)	
C624			CC73GCH1H101J	CHIP C 100PF J		L37	*		L41-1205-33	SMALL FIXED INDUCTOR (12UH)	
C625			CE32BM1E470M	CHIP EL 47UF 25WV		L38			L41-1095-33	SMALL FIXED INDUCTOR (1.0UH)	
C626			CS77BA1E010M	CHIP TINTL 1UF 25WV		L39			L41-1575-33	SMALL FIXED INDUCTOR (0.015UH)	
C628			CK73GB1H104K	CHIP C 0.10UF K		L40,41			L41-1095-33	SMALL FIXED INDUCTOR (1.0UH)	
C630			CK73GB1H104K	CHIP C 0.10UF K		L42			L41-1575-33	SMALL FIXED INDUCTOR (0.015UH)	
C652			CK73GB1H104K	CHIP C 0.10UF K		L43,44			L41-3395-33	SMALL FIXED INDUCTOR (3.3UH)	
C655			CK73FB0J106K	CHIP C 10UF K		L45			L41-1575-33	SMALL FIXED INDUCTOR (0.015UH)	
C657			CC73GCH1H270J	CHIP C 27PF J		L46,47			L34-4749-05	COIL	
C658			CK73FB1E474K	CHIP C 0.47UF K		L48			L41-1095-33	SMALL FIXED INDUCTOR (1.0UH)	
C659			CC73GCH1H101J	CHIP C 100PF J		L49			L41-2705-33	SMALL FIXED INDUCTOR (27UH)	
C660			CC73GCH1H050C	CHIP C 5.0PF C		L50			L41-2275-33	SMALL FIXED INDUCTOR (0.022UH)	
C661			CK73GB1H104K	CHIP C 0.10UF K		L51			L92-0140-05	CHIP FERRITE	
C671			CK73GB1H104K	CHIP C 0.10UF K		L52,53			L34-4749-05	COIL	
C677			CK73GB1H104K	CHIP C 0.10UF K		L54			L41-1075-33	SMALL FIXED INDUCTOR (0.01UH)	
CN1-4		*	E23-1280-05	TERMINAL		L55			L41-1575-33	SMALL FIXED INDUCTOR (0.015UH)	
CN5		*	E04-0460-05	RF COAXIAL RECEPTACLE (SMB)		L56	*		L41-8295-33	SMALL FIXED INDUCTOR (8.2UH)	
CN6			E41-2735-05	PIN ASSY		L57			L41-1075-33	SMALL FIXED INDUCTOR (0.01UH)	
CN8-35		*	E23-1280-05	TERMINAL		L58,59			L41-1885-33	SMALL FIXED INDUCTOR (0.18UH)	
CN36			E41-2735-05	PIN ASSY		L60,61			L41-2275-33	SMALL FIXED INDUCTOR (0.022UH)	
CN38,39		*	E23-1280-05	TERMINAL		L62			L41-1075-33	SMALL FIXED INDUCTOR (0.01UH)	
CN41			E04-0154-05	PIN SOCKET		L66,67			L41-8275-33	SMALL FIXED INDUCTOR (0.082UH)	
CN42			E40-6656-05	PIN ASSY		L68	*		L41-8295-33	SMALL FIXED INDUCTOR (8.2UH)	
CN43			E04-0193-05	PIN SOCKET		L69			L41-1595-33	SMALL FIXED INDUCTOR (1.5UH)	
CN44			E41-2672-05	PIN ASSY		L70			L41-3985-33	SMALL FIXED INDUCTOR (0.39UH)	
CN45			E04-0193-05	PIN SOCKET		L71			L41-1595-33	SMALL FIXED INDUCTOR (1.5UH)	
CN46,47			E41-2735-05	PIN ASSY		L72			L41-3985-33	SMALL FIXED INDUCTOR (0.39UH)	
CN61,62		*	E23-1280-05	TERMINAL		L73			L41-2285-33	SMALL FIXED INDUCTOR (0.22UH)	
E1			F10-2379-04	SHIELDING CASE		L74,75			L34-4748-05	COIL	
E2			F10-2409-04	SHIELDING CASE		L76			L41-1075-33	SMALL FIXED INDUCTOR (0.01UH)	
E3		*	F10-3080-04	SHIELDING CASE		L77			L92-0140-05	CHIP FERRITE	
CF1		*	L72-1019-05	CERAMIC FILTER		L78			L41-1005-33	SMALL FIXED INDUCTOR (10UH)	
CF2		*	L72-1028-05	CERAMIC FILTER		L79			L41-1095-33	SMALL FIXED INDUCTOR (1.0UH)	
CF3,4		*	L72-1027-05	CERAMIC FILTER		L80			L41-1575-33	SMALL FIXED INDUCTOR (0.015UH)	
CF5,6		*	L72-1028-05	CERAMIC FILTER		L81			L41-8285-33	SMALL FIXED INDUCTOR (0.82UH)	
CF7		*	L72-1027-05	CERAMIC FILTER		L82			L41-1005-33	SMALL FIXED INDUCTOR (10UH)	
L2			L34-4616-05	AIR-CORE COIL		L83			L41-6895-33	SMALL FIXED INDUCTOR (6.8UH)	
L5			L34-4604-05	AIR-CORE COIL		L86			L41-1585-33	SMALL FIXED INDUCTOR (0.15UH)	
L8,9			L41-1075-33	SMALL FIXED INDUCTOR (0.01UH)		L87			L41-1005-33	SMALL FIXED INDUCTOR (10UH)	
L10			L41-6885-33	SMALL FIXED INDUCTOR (0.68UH)		L88	*		L41-8295-33	SMALL FIXED INDUCTOR (8.2UH)	
L11			L41-1295-33	SMALL FIXED INDUCTOR (1.2UH)		L89			L41-3985-33	SMALL FIXED INDUCTOR (0.39UH)	
						L90,91			L34-4748-05	COIL	

PARTS LIST

RX UNIT (X55-3100-10)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
L92			L41-1075-33	SMALL FIXED INDUCTOR (0.01UH)		R33			RK73GB2A102J	CHIP R 1.0K J 1/10W	
L93			L41-1085-33	SMALL FIXED INDUCTOR (0.1UH)		R34			RK73GB2A471J	CHIP R 470 J 1/10W	
L94,95			L39-1476-05	TOROIDAL COIL		R36			RK73GB2A103J	CHIP R 10K J 1/10W	
L96			L41-3985-33	SMALL FIXED INDUCTOR (0.39UH)		R37			RK73GB2A123J	CHIP R 12K J 1/10W	
L97			L41-1005-33	SMALL FIXED INDUCTOR (10UH)		R38			RK73GB2A101J	CHIP R 100 J 1/10W	
L98,99		*	L41-1895-33	SMALL FIXED INDUCTOR (1.8UH)		R39			RK73GB2A000J	CHIP R 0.0 J 1/10W	
L100			L41-3985-33	SMALL FIXED INDUCTOR (0.39UH)		R40			RK73GB2A102J	CHIP R 1.0K J 1/10W	
L101			L41-1595-33	SMALL FIXED INDUCTOR (1.5UH)		R42-44			RK73GB2A000J	CHIP R 0.0 J 1/10W	
L102			L41-1005-33	SMALL FIXED INDUCTOR (10UH)		R45			RK73GB2A471J	CHIP R 470 J 1/10W	
L103			L41-3985-33	SMALL FIXED INDUCTOR (0.39UH)		R46			RK73GB2A330J	CHIP R 33 J 1/10W	
L106			L41-1585-33	SMALL FIXED INDUCTOR (0.15UH)		R48			RK73FB2B271J	CHIP R 270 J 1/8W	
L107			L41-6895-33	SMALL FIXED INDUCTOR (6.8UH)		R50			RK73FB2B180J	CHIP R 18 J 1/8W	
L108,109			L41-4775-33	SMALL FIXED INDUCTOR (0.047UH)		R52			RK73GB2A100J	CHIP R 10 J 1/10W	
L110			L41-1585-33	SMALL FIXED INDUCTOR (0.15UH)		R53,54			RK73GB2A000J	CHIP R 0.0 J 1/10W	
L111			L41-1595-33	SMALL FIXED INDUCTOR (1.5UH)		R55			RK73FB2B271J	CHIP R 270 J 1/8W	
L112,113			L39-1476-05	TOROIDAL COIL		R56			RK73GB2A100J	CHIP R 10 J 1/10W	
L114			L41-6875-33	SMALL FIXED INDUCTOR (0.068UH)		R60			RK73GB2A100J	CHIP R 10 J 1/10W	
L115			L41-8275-33	SMALL FIXED INDUCTOR (0.082UH)		R61			RK73GB2A470J	CHIP R 47 J 1/10W	
L116,117			L41-1585-33	SMALL FIXED INDUCTOR (0.15UH)		R62,63			RK73GB2A102J	CHIP R 1.0K J 1/10W	
L118			L41-6875-33	SMALL FIXED INDUCTOR (0.068UH)		R64			RK73GB2A000J	CHIP R 0.0 J 1/10W	
L119		*	L41-2285-33	SMALL FIXED INDUCTOR (0.22UH)		R65			RK73GB2A822J	CHIP R 8.2K J 1/10W	
L120			L41-8295-33	SMALL FIXED INDUCTOR (8.2UH)		R66,67			RK73FB2B331J	CHIP R 330 J 1/8W	
L121			L41-1595-33	SMALL FIXED INDUCTOR (1.5UH)		R68			RK73GB2A392J	CHIP R 3.9K J 1/10W	
L122			L41-1585-33	SMALL FIXED INDUCTOR (0.15UH)		R69-71			RK73GB2A102J	CHIP R 1.0K J 1/10W	
L123			L41-3395-33	SMALL FIXED INDUCTOR (3.3UH)		R72			RK73GB2A2R2J	CHIP R 2.2 J 1/10W	
L124-126		*	L41-1585-33	SMALL FIXED INDUCTOR (0.15UH)		R73			RK73GB2A104J	CHIP R 100K J 1/10W	
L127			L41-8295-33	SMALL FIXED INDUCTOR (8.2UH)		R75,76			RK73GB2A103J	CHIP R 10K J 1/10W	
L128			L34-4725-05	COIL		R77,78			RK73FB2B470J	CHIP R 47 J 1/8W	
L129,130			L41-1005-33	SMALL FIXED INDUCTOR (10UH)		R79			RK73GB2A100J	CHIP R 10 J 1/10W	
L131			L41-1585-33	SMALL FIXED INDUCTOR (0.15UH)		R80			RK73GB2A271J	CHIP R 270 J 1/10W	
L132-135			L79-1849-05	HELICAL BLOCK		R81			RK73FB2B000J	CHIP R 0.0 J 1/8W	
L136,137			L41-3985-33	SMALL FIXED INDUCTOR (0.39UH)		R82			RK73GB2A102J	CHIP R 1.0K J 1/10W	
XF1		*	L71-0646-05	MCF (49.95M/WIDE)		R83,84			RK73GB2A472J	CHIP R 4.7K J 1/10W	
XF2		*	L71-0645-05	MCF (49.95M/NARROW)		R85			RK73GB2A333J	CHIP R 33K J 1/10W	
XF3		*	L71-0648-05	MCF (49.95M/WIDE)		R86			RK73GB2A104J	CHIP R 100K J 1/10W	
XF4		*	L71-0647-05	MCF (49.95M/NARROW)		R88			RK73GB2A103J	CHIP R 10K J 1/10W	
R1			RK73GB2A332J	CHIP R 3.3K J 1/10W		R89			RK73GB2A100J	CHIP R 10 J 1/10W	
R2			RK73GB2A182J	CHIP R 1.8K J 1/10W		R90			RK73GB2A330J	CHIP R 33 J 1/10W	
R4			RK73FB2B121J	CHIP R 120 J 1/8W		R91			RK73GB2A331J	CHIP R 330 J 1/10W	
R8			RK73GB2A100J	CHIP R 10 J 1/10W		R92			RK73GB2A104J	CHIP R 100K J 1/10W	
R9			RK73GB2A332J	CHIP R 3.3K J 1/10W		R93			RK73GB2A105J	CHIP R 1.0M J 1/10W	
R10			RK73GB2A103J	CHIP R 10K J 1/10W		R94			RK73GB2A332J	CHIP R 3.3K J 1/10W	
R11			RK73GB2A681J	CHIP R 680 J 1/10W		R95			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R12			RK73GB2A102J	CHIP R 1.0K J 1/10W		R96			RK73GB2A100J	CHIP R 10 J 1/10W	
R13			RK73GB2A682J	CHIP R 6.8K J 1/10W		R97			RK73GB2A101J	CHIP R 100 J 1/10W	
R14			RK73FB2B100J	CHIP R 10 J 1/8W		R98,99			RK73GB2A331J	CHIP R 330 J 1/10W	
R15,16			RK73GB2A000J	CHIP R 0.0 J 1/10W		R100			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R17			RK73GB2A181J	CHIP R 180 J 1/10W		R101			RK73FB2B100J	CHIP R 10 J 1/8W	
R19,20			RK73GB2A104J	CHIP R 100K J 1/10W		R102			RK73GB2A101J	CHIP R 100 J 1/10W	
R21			RK73GB2A684J	CHIP R 680K J 1/10W		R103			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R22			RK73GB2A474J	CHIP R 470K J 1/10W		R104,105			RK73GB2A123J	CHIP R 12K J 1/10W	
R23			RK73GB2A000J	CHIP R 0.0 J 1/10W		R106			RK73GB2A105J	CHIP R 1.0M J 1/10W	
R24			RK73GB2A100J	CHIP R 10 J 1/10W		R107,108			RK73GB2A103J	CHIP R 10K J 1/10W	
R26,27			RK73GB2A000J	CHIP R 0.0 J 1/10W		R110			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R28			RK73GB2A100J	CHIP R 10 J 1/10W		R112			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R29			RK73GB2A152J	CHIP R 1.5K J 1/10W		R114			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R30			RK73GB2A684J	CHIP R 680K J 1/10W		R115			RK73FB2B220J	CHIP R 22 J 1/8W	
R31			RK73GB2A271J	CHIP R 270 J 1/10W		R116			RK73GB2A101J	CHIP R 100 J 1/10W	
R32			RK73GB2A104J	CHIP R 100K J 1/10W		R117,118			RK73FB2B220J	CHIP R 22 J 1/8W	
						R119,120			RK73GB2A103J	CHIP R 10K J 1/10W	

PARTS LIST

RX UNIT (X55-3100-10)

Ref. No.	Address	New parts	Parts No.	Description	Desti-nation	Ref. No.	Address	New parts	Parts No.	Description	Desti-nation
R122			RK73GB2A101J	CHIP R 100 J 1/10W		R205			RK73GB2A682J	CHIP R 6.8K J 1/10W	
R123			RK73GB2A153J	CHIP R 15K J 1/10W		R206			RK73GB2A152J	CHIP R 1.5K J 1/10W	
R124			RK73GB2A392J	CHIP R 3.9K J 1/10W		R207,208			RK73GB2A470J	CHIP R 47 J 1/10W	
R125			RK73GB2A102J	CHIP R 1.0K J 1/10W		R209			RK73GB2A101J	CHIP R 100 J 1/10W	
R128			RK73GB2A101J	CHIP R 100 J 1/10W		R210			RK73GB2A100J	CHIP R 10 J 1/10W	
R129			RK73GB2A102J	CHIP R 1.0K J 1/10W		R211			RK73GB2A104J	CHIP R 100K J 1/10W	
R130,131			RK73FB2B100J	CHIP R 10 J 1/8W		R212			RK73GB2A100J	CHIP R 10 J 1/10W	
R132			RK73GB2A102J	CHIP R 1.0K J 1/10W		R213,214			RK73GB2A563J	CHIP R 56K J 1/10W	
R133			RK73GB2A123J	CHIP R 12K J 1/10W		R215			RK73GB2A181J	CHIP R 180 J 1/10W	
R134			RK73GB2A104J	CHIP R 100K J 1/10W		R217			RK73GB2A104J	CHIP R 100K J 1/10W	
R135,136			RK73GB2A332J	CHIP R 3.3K J 1/10W		R218,219			RK73GB2A180J	CHIP R 18 J 1/10W	
R137			RK73GB2A101J	CHIP R 100 J 1/10W		R220			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R138,139			RK73GB2A682J	CHIP R 6.8K J 1/10W		R221,222			RK73GB2A471J	CHIP R 470 J 1/10W	
R140,141			RK73GB2A181J	CHIP R 180 J 1/10W		R223			RK73GB2A180J	CHIP R 18 J 1/10W	
R142			RK73FB2B100J	CHIP R 10 J 1/8W		R224			RK73GB2A100J	CHIP R 10 J 1/10W	
R145			RK73GB2A100J	CHIP R 10 J 1/10W		R225			RK73GB2A180J	CHIP R 18 J 1/10W	
R146			RK73GB2A101J	CHIP R 100 J 1/10W		R226,227			RK73GB2A101J	CHIP R 100 J 1/10W	
R147			RK73GB2A271J	CHIP R 270 J 1/10W		R229			RK73GB2A101J	CHIP R 100 J 1/10W	
R149			RK73GB2A821J	CHIP R 820 J 1/10W		R230			RK73GB2A100J	CHIP R 10 J 1/10W	
R150			RK73FB2B101J	CHIP R 100 J 1/8W		R231			RK73GB2A680J	CHIP R 68 J 1/10W	
R151			RK73GB2A000J	CHIP R 0.0 J 1/10W		R232			RK73GB2A100J	CHIP R 10 J 1/10W	
R152			RK73GB2A102J	CHIP R 1.0K J 1/10W		R233			RK73GB2A680J	CHIP R 68 J 1/10W	
R153			RK73GB2A101J	CHIP R 100 J 1/10W		R234,235			RK73GB2A101J	CHIP R 100 J 1/10W	
R154			RK73GB2A000J	CHIP R 0.0 J 1/10W		R236,237			RK73GB2A180J	CHIP R 18 J 1/10W	
R155			RK73GB2A332J	CHIP R 3.3K J 1/10W		R238			RK73GB2A181J	CHIP R 180 J 1/10W	
R156			RK73GB2A680J	CHIP R 68 J 1/10W		R239			RK73GB2A100J	CHIP R 10 J 1/10W	
R157			RK73GB2A151J	CHIP R 150 J 1/10W		R240			RK73GB2A471J	CHIP R 470 J 1/10W	
R158			RK73GB2A101J	CHIP R 100 J 1/10W		R241			RK73GB2A103J	CHIP R 10K J 1/10W	
R159			RK73GB2A000J	CHIP R 0.0 J 1/10W		R242,243			RK73GB2A470J	CHIP R 47 J 1/10W	
R160			RK73GB2A3R3J	CHIP R 3.3 J 1/10W		R244			RK73GB2A682J	CHIP R 6.8K J 1/10W	
R161			RK73GB2A000J	CHIP R 0.0 J 1/10W		R245			RK73GB2A473J	CHIP R 47K J 1/10W	
R164			RK73GB2A104J	CHIP R 100K J 1/10W		R248			RK73GB2A332J	CHIP R 3.3K J 1/10W	
R165,166			RK73GB2A273J	CHIP R 27K J 1/10W		R249			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R167			RK73GB2A000J	CHIP R 0.0 J 1/10W		R250			RK73GB2A103J	CHIP R 10K J 1/10W	
R169			RK73GB2A103J	CHIP R 10K J 1/10W		R254,255			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R171			RK73GB2A103J	CHIP R 10K J 1/10W		R256			RK73GB2A152J	CHIP R 1.5K J 1/10W	
R172			RK73GB2A100J	CHIP R 10 J 1/10W		R257,258			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R173			RK73GB2A271J	CHIP R 270 J 1/10W		R259			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R174,175			RK73GB2A153J	CHIP R 15K J 1/10W		R260			RK73GB2A103J	CHIP R 10K J 1/10W	
R176			RK73GB2A100J	CHIP R 10 J 1/10W		R261			RK73GB2A123J	CHIP R 12K J 1/10W	
R177			RK73GB2A470J	CHIP R 47 J 1/10W		R262			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R178,179			RK73GB2A103J	CHIP R 10K J 1/10W		R263			RK73GB2A183J	CHIP R 18K J 1/10W	
R180			RK73GB2A100J	CHIP R 10 J 1/10W		R264			RK73GB2A152J	CHIP R 1.5K J 1/10W	
R181			RK73GB2A102J	CHIP R 1.0K J 1/10W		R265			RK73GB2A181J	CHIP R 180 J 1/10W	
R183			RK73GB2A102J	CHIP R 1.0K J 1/10W		R266			RK73GB2A332J	CHIP R 3.3K J 1/10W	
R184			RK73GB2A000J	CHIP R 0.0 J 1/10W		R267			RK73GB2A103J	CHIP R 10K J 1/10W	
R185			RK73GB2A100J	CHIP R 10 J 1/10W		R268			RK73GB2A154J	CHIP R 150K J 1/10W	
R186,187			RK73GB2A104J	CHIP R 100K J 1/10W		R269			RK73GB2A470J	CHIP R 47 J 1/10W	
R189,190			RK73FB2B101J	CHIP R 100 J 1/8W		R270,271			RK73GB2A103J	CHIP R 10K J 1/10W	
R191,192			RK73FB2B271J	CHIP R 270 J 1/8W		R272			RK73GB2A104J	CHIP R 100K J 1/10W	
R193			RK73GB2A102J	CHIP R 1.0K J 1/10W		R273			RK73GB2A152J	CHIP R 1.5K J 1/10W	
R194			RK73GB2A472J	CHIP R 4.7K J 1/10W		R274			RK73GB2A103J	CHIP R 10K J 1/10W	
R195			RK73GB2A181J	CHIP R 180 J 1/10W		R275			RK73GB2A223J	CHIP R 22K J 1/10W	
R196,197			RK73FB2B100J	CHIP R 10 J 1/8W		R276			RK73GB2A183J	CHIP R 18K J 1/10W	
R198,199			RK73GB2A102J	CHIP R 1.0K J 1/10W		R277			RK73GB2A103J	CHIP R 10K J 1/10W	
R200			RK73GB2A682J	CHIP R 6.8K J 1/10W		R278,279			RK73GB2A152J	CHIP R 1.5K J 1/10W	
R201			RK73GB2A330J	CHIP R 33 J 1/10W		R280,281			RK73GB2A103J	CHIP R 10K J 1/10W	
R202			RK73GB2A2R2J	CHIP R 2.2 J 1/10W		R284			RK73GB2A471J	CHIP R 470 J 1/10W	
R203			RK73GB2A104J	CHIP R 100K J 1/10W		R285			RK73GB2A334J	CHIP R 330K J 1/10W	
R204			RK73GB2A332J	CHIP R 3.3K J 1/10W		R286			RK73GB2A103J	CHIP R 10K J 1/10W	

PARTS LIST

RX UNIT (X55-3100-10)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
R287			RK73GB2A273J	CHIP R 27K J 1/10W		R400,401			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R288			RK73GB2A560J	CHIP R 56 J 1/10W		R403			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R290			RK73GB2A332J	CHIP R 3.3K J 1/10W		R405			RK73GB2A153J	CHIP R 15K J 1/10W	
R291			RK73GB2A122J	CHIP R 1.2K J 1/10W		R406			RK73GB2A682J	CHIP R 6.8K J 1/10W	
R292			RK73GB2A000J	CHIP R 0.0 J 1/10W		R407			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R293			RK73GB2A183J	CHIP R 18K J 1/10W		R410			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R294			RK73GB2A273J	CHIP R 27K J 1/10W		R417			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R295			RK73GB2A104J	CHIP R 100K J 1/10W		R430,431			RK73GB2A331J	CHIP R 330 J 1/10W	
R296-298			RK73GB2A473J	CHIP R 47K J 1/10W		R432			RK73GB2A103J	CHIP R 10K J 1/10W	
R300			RK73GB2A103J	CHIP R 10K J 1/10W		R435			RK73GB2A473J	CHIP R 47K J 1/10W	
R306			RK73GB2A473J	CHIP R 47K J 1/10W		R436			RK73GB2A392J	CHIP R 3.9K J 1/10W	
R307-310			RK73GB2A000J	CHIP R 0.0 J 1/10W		R437			RK73GB2A183J	CHIP R 18K J 1/10W	
R311			RK73GB2A474J	CHIP R 470K J 1/10W		R438			RK73GB2A273J	CHIP R 27K J 1/10W	
R317-319			RK73GB2A100J	CHIP R 10 J 1/10W		R450			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R321			RK73GB2A104J	CHIP R 100K J 1/10W		R455			RK73GB2A104J	CHIP R 100K J 1/10W	
R323			RK73GB2A000J	CHIP R 0.0 J 1/10W		D1,2			HSC119	DIODE	
R324,325			RK73GB2A104J	CHIP R 100K J 1/10W		D3-6			1SV283F	VARIABLE CAPACITANCE DIODE	
R326			RK73GB2A100J	CHIP R 10 J 1/10W		D9,10	*		JDP4P02U	DIODE	
R328			RK73GB2A000J	CHIP R 0.0 J 1/10W		D11			KV1470-G	VARIABLE CAPACITANCE DIODE	
R330			RK73GB2A104J	CHIP R 100K J 1/10W		D12			1SV283F	VARIABLE CAPACITANCE DIODE	
R332			RK73GB2A101J	CHIP R 100 J 1/10W		D13,14	*		JDP4P02U	DIODE	
R333			RK73GB2A104J	CHIP R 100K J 1/10W		D15,16			DAN235E	DIODE	
R334			RK73GB2A101J	CHIP R 100 J 1/10W		D17,18			MA3J742	DIODE	
R335			RK73GB2A104J	CHIP R 100K J 1/10W		D19,20			DAN235E	DIODE	
R337			RK73GB2A102J	CHIP R 1.0K J 1/10W		IC4			TA75S01F-F	MOS-IC	
R338			RK73GB2A472J	CHIP R 4.7K J 1/10W		IC5			ADF4111BCP7	MOS-IC	
R340-342			RK73GB2A102J	CHIP R 1.0K J 1/10W		IC6			LMC7101BIM5	MOS-IC	
R343			RK73GB2A104J	CHIP R 100K J 1/10W		IC7			AD9835BRUZ	MOS-IC	
R344			RK73GB2A473J	CHIP R 47K J 1/10W		IC8	*		NJU6368PF1	MOS-IC	
R345,346			RK73GB2A472J	CHIP R 4.7K J 1/10W		IC9			UPB1509GV	BI-POLAR IC	
R347,348			RK73GB2A101J	CHIP R 100 J 1/10W		IC10			TK11230CMCL-G	BI-POLAR IC	
R349			RK73GB2A470J	CHIP R 47 J 1/10W		IC11			ADF4111BCP7	MOS-IC	
R350,351			RK73GB2A221J	CHIP R 220 J 1/10W		IC12			TA31137FNG	MOS-IC	
R352			RK73GB2A473J	CHIP R 47K J 1/10W		IC13	*		AD607Z	BI-POLAR IC	
R353			RK73GB2A470J	CHIP R 47 J 1/10W		IC14	*		AD8051ART	ANALOGUE IC	
R357			RK73GB2A471J	CHIP R 470 J 1/10W		IC15,16			NJM78L05UA-ZB	BI-POLAR IC	
R358			RK73GB2A100J	CHIP R 10 J 1/10W		IC17-19			NJM78M05DL1AZB	ANALOGUE IC	
R359			RK73GB2A221J	CHIP R 220 J 1/10W		IC20			NJM4558E-ZB	ANALOGUE IC	
R360			RK73GB2A682J	CHIP R 6.8K J 1/10W		IC22			XC6204B332M	MOS-IC	
R361			RK73GB2A332J	CHIP R 3.3K J 1/10W		IC23			BH2220FVM	ANALOGUE IC	
R362			RK73GB2A181J	CHIP R 180 J 1/10W		IC24,25	2D		NJM7808FA-ZB	BI-POLAR IC	
R363			RK73GB2A100J	CHIP R 10 J 1/10W		IC26,27		*	NJM2386ADL3-09	ANALOGUE IC	
R364			RK73GB2A470J	CHIP R 47 J 1/10W		IC28		*	AD1582	ANALOGUE IC	
R366,367			RK73GB2A000J	CHIP R 0.0 J 1/10W		IC29		*	NJM2732V	BI-POLAR IC	
R368-370			RK73GB2A103J	CHIP R 10K J 1/10W		IC30		*	AD7908BRU	MOS-IC	
R371,372			RK73GB2A000J	CHIP R 0.0 J 1/10W		IC31			S24CS02AFJTBG	ROM IC	
R373			RK73GB2A103J	CHIP R 10K J 1/10W		IC32		*	NJM2732V	BI-POLAR IC	
R375,376			RK73GB2A105J	CHIP R 1.0M J 1/10W		IC33			LMC7101BIM5	MOS-IC	
R377			RK73GB2A000J	CHIP R 0.0 J 1/10W		IC35		*	LM50BIM3/NOPB	MOS-IC	
R379			RK73GB2A101J	CHIP R 100 J 1/10W		Q1		*	2SC5337	TRANSISTOR	
R380			RK73GB2A104J	CHIP R 100K J 1/10W		Q2			2SC4116(BL)F	TRANSISTOR	
R381			RK73GB2A223J	CHIP R 22K J 1/10W		Q3			2SC4617(R)	TRANSISTOR	
R382-384			RK73GB2A104J	CHIP R 100K J 1/10W		Q4			2SC4116(BL)F	TRANSISTOR	
R385			RK73GB2A101J	CHIP R 100 J 1/10W		Q5			2SC4617(R)	TRANSISTOR	
R388			RK73GB2A000J	CHIP R 0.0 J 1/10W		Q6			2SC4116(BL)F	TRANSISTOR	
R390			RK73GB2A471J	CHIP R 470 J 1/10W		Q7,8			2SK508NV(K53)	FET	
R391,392			RK73GB2A000J	CHIP R 0.0 J 1/10W		Q9-11			2SC4116(BL)F	TRANSISTOR	
R393			RK73GB2A103J	CHIP R 10K J 1/10W		Q12			2SC4617(R)	TRANSISTOR	
R394			RK73GB2A000J	CHIP R 0.0 J 1/10W		Q13		*	2SA1832F	TRANSISTOR	
R396			RK73GB2A101J	CHIP R 100 J 1/10W		Q14,15			SSM3K15TE(F)	FET	

PARTS LIST

RX UNIT (X55-3100-10)

TX UNIT (X56-3120-10)

Ref. No.	Address	New parts	Parts No.	Description	Desti-nation	Ref. No.	Address	New parts	Parts No.	Description	Desti-nation	
Q16,17 Q18-20 Q21 Q22 Q23			2SC3356-A(R24) RD01MUS1-T113 2SC4725 2SC4617(R) 2SC3356-A(R24)	TRANSISTOR FET TRANSISTOR TRANSISTOR TRANSISTOR		C140,141 C142 C143 C145 C146			CC73GCH1H471J CC73GCH1H090B CC73GCH1H100D CC73GCH1H100C CC73GCH1H471J	CHIP C CHIP C CHIP C CHIP C CHIP C	470PF 9.0PF 10PF 10PF 470PF	J B D C J
Q24 Q25 Q26 Q27 Q28,29		*	2SK508NV(K52) SSM3J01F SSM3K15TE(F) 2SC4116(BL)F 3SK317-E	FET FET FET TRANSISTOR FET		C147 C148 C149 C151 C152			CC73GCH1H0R5B CC73GCH1H150J CK73GB1H103K CE32CL1V100M CC73GCH1H471J	CHIP C CHIP C CHIP C CHIP EL CHIP C	0.5PF 15PF 0.010UF 10UF 470PF	B J K 35WV J
Q30 Q31 Q32 Q33 Q34		*	2SC4617(R) SSM3K15TE(F) SSM3J01F 2SC4725 2SA1832F	TRANSISTOR FET FET TRANSISTOR TRANSISTOR		C153 C154 C156,157 C158 C160		*	CC73GCH1H100D CS77CC1C330M CC73GCH1H471J CS77CC1C330M CC73GCH1H471J	CHIP C CHIP TNTL CHIP C CHIP TNTL CHIP C	10PF 33UF 470PF 33UF 470PF	D 16WV J 16WV J
Q35,36 Q37 Q38 Q39 Q40			2SC4725 SSM3K15TE(F) 2SC4725 2SC4617(R) 2SC4617(S)	TRANSISTOR FET TRANSISTOR TRANSISTOR TRANSISTOR		C161 C162,163 C164 C166 C167			CE32BM1E470M CC73GCH1H471J CC73GCH1H070D CC73GCH1H060D CC73GCH1H070D	CHIP EL CHIP C CHIP C CHIP C CHIP C	47UF 470PF 7.0PF 6.0PF 7.0PF	25WV J D D D
Q50,51 Q52 Q53 Q56 Q57			SSM3K15TE(F) 2SJ484 2SC4725 SSM3K15TE(F) DTA144EE	FET FET TRANSISTOR FET DIGITAL TRANSISTOR		C168 C169,170 C171 C172 C173,174			CC73GCH1H030C CC73GCH1H471J CK73GB1H103K CK73GB1H471K CC73GCH1H471J	CHIP C CHIP C CHIP C CHIP C CHIP C	3.0PF 470PF 0.010UF 470PF 470PF	C J K K J
Q58-61 A1			SSM3K15TE(F) W02-1940-05	FET DBM		C175 C176 C177-180 C181 C182			CC73GCH1H070D CC73GCH1H471J CK73GB1H104K CC73GCH1H471J CC73GCH1H080D	CHIP C CHIP C CHIP C CHIP C CHIP C	7.0PF 470PF 0.10UF 470PF 8.0PF	D J K J D
TX UNIT (X56-3120-10)						C183 C186 C187 C188 C189		*	CC73GCH1H100D CC73GCH1H100D C93-0912-05 CC73GCH1H471J CC73GCH1H080B	CHIP C CHIP C CHIP C CHIP C CHIP C	10PF 10PF 100UF 470PF 8.0PF	D D M J B
D202 D301 D920-924 D925-932		*	B30-2230-05 B30-2230-05 B30-2265-05 B30-2171-05	LED (YG) LED (YG) LED (BR/PG) LED (D)		C190 C191 C192 C193 C194			CC73GCH1H0R5B CC73GCH1H020B CC73GCH1H471J CC73GCH1H090B CC73GCH1H100C	CHIP C CHIP C CHIP C CHIP C CHIP C	0.5PF 2.0PF 470PF 9.0PF 10PF	B B J B C
C101 C102 C103-105 C106,107 C108			CS77CA1ER47M CK73GB1E105K CC73GCH1H471J CK73GB1H103K CC73GCH1H471J	CHIP TNTL CHIP C CHIP C CHIP C CHIP C	0.47UF 1.0UF 470PF 0.010UF 470PF	25WV K J K J						
C109 C110 C111,112 C113 C114			CK73GB1H104K CC73GCH1H471J CK73GB1H104K CC73GCH1H471J CK73GB1H104K	CHIP C CHIP C CHIP C CHIP C CHIP C	0.10UF 470PF 0.10UF 470PF 0.10UF	K J K J K						
C115-117 C120 C122 C123 C124		*	CC73GCH1H471J CK73GB1H103K CC73GCH1H471J CS77CA1VR22M CS77CC1C330M	CHIP C CHIP C CHIP C CHIP TNTL CHIP TNTL	470PF 0.010UF 470PF 0.22UF 33UF	J K J 35WV 16WV						
C126 C132 C133 C134 C135			CC73GCH1H471J CC73GCH1H090B CC73GCH1H070D CC73GCH1H090B CC73GCH1H471J	CHIP C CHIP C CHIP C CHIP C CHIP C	470PF 9.0PF 7.0PF 9.0PF 470PF	J B D B J						
C136 C137 C138 C139			CC73GCH1H070B CK73GB1H103K CC73GCH1H0R5B CC73GCH1H020B	CHIP C CHIP C CHIP C CHIP C	7.0PF 0.010UF 0.5PF 2.0PF	B K B B						
C140,141 C142 C143 C145 C146			CC73GCH1H471J CC73GCH1H090B CC73GCH1H100D CC73GCH1H100C CC73GCH1H471J	CHIP C CHIP C CHIP C CHIP C CHIP C	470PF 9.0PF 10PF 10PF 470PF	J B D C J						
C147 C148 C149 C151 C152			CC73GCH1H0R5B CC73GCH1H150J CK73GB1H103K CE32CL1V100M CC73GCH1H471J	CHIP C CHIP C CHIP C CHIP EL CHIP C	0.5PF 15PF 0.010UF 10UF 470PF	B J K 35WV J						
C153 C154 C156,157 C158 C160		*	CC73GCH1H100D CS77CC1C330M CC73GCH1H471J CS77CC1C330M CC73GCH1H471J	CHIP C CHIP TNTL CHIP C CHIP TNTL CHIP C	10PF 33UF 470PF 33UF 470PF	D 16WV J 16WV J						
C161 C162,163 C164 C166 C167			CE32BM1E470M CC73GCH1H471J CC73GCH1H070D CC73GCH1H060D CC73GCH1H070D	CHIP EL CHIP C CHIP C CHIP C CHIP C	47UF 470PF 7.0PF 6.0PF 7.0PF	25WV J D D D						
C168 C169,170 C171 C172 C173,174			CC73GCH1H030C CC73GCH1H471J CK73GB1H103K CK73GB1H471K CC73GCH1H471J	CHIP C CHIP C CHIP C CHIP C CHIP C	3.0PF 470PF 0.010UF 470PF 470PF	C J K K J						
C175 C176 C177-180 C181 C182			CC73GCH1H070D CC73GCH1H471J CK73GB1H104K CC73GCH1H471J CC73GCH1H080D	CHIP C CHIP C CHIP C CHIP C CHIP C	7.0PF 470PF 0.10UF 470PF 8.0PF	D J K J D						
C183 C186 C187 C188 C189		*	CC73GCH1H100D CC73GCH1H100D C93-0912-05 CC73GCH1H471J CC73GCH1H080B	CHIP C CHIP C CHIP C CHIP C CHIP C	10PF 10PF 100UF 470PF 8.0PF	D D M J B						
C190 C191 C192 C193 C194			CC73GCH1H0R5B CC73GCH1H020B CC73GCH1H471J CC73GCH1H090B CC73GCH1H100C	CHIP C CHIP C CHIP C CHIP C CHIP C	0.5PF 2.0PF 470PF 9.0PF 10PF	B B J B C						
C195 C196-198 C201 C202 C203,204			CC73GCH1H0R5B CC73GCH1H471J CC73GCH1H471J CC73GCH1H070D CC73GCH1H471J	CHIP C CHIP C CHIP C CHIP C CHIP C	0.5PF 470PF 470PF 7.0PF 470PF	B J J D J						
C205 C206 C207 C208,209 C210,211			CK73GB1H103K CC73GCH1H471J CC73GCH1H070D CC73GCH1H471J CC73GCH1H060D	CHIP C CHIP C CHIP C CHIP C CHIP C	0.010UF 470PF 7.0PF 470PF 6.0PF	K J D J D						
C212-215 C216 C217 C218 C219			CC73GCH1H471J CK73GB1H103K CC73GCH1H100D CC73GCH1H120J CC73GCH1H471J	CHIP C CHIP C CHIP C CHIP C CHIP C	470PF 0.010UF 10PF 12PF 470PF	J K D J J						
C220 C221 C223 C224 C225,226			CK73GB1H104K CC73GCH1H030C CC73GCH1H471J CK73GB1H473K CC73GCH1H471J	CHIP C CHIP C CHIP C CHIP C CHIP C	0.10UF 3.0PF 470PF 0.047UF 470PF	K C J K J						

PARTS LIST

TX UNIT (X56-3120-10)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
C227			CK73GB1H103K	CHIP C 0.010UF K		C331			CK73GB1H104K	CHIP C 0.10UF K	
C228			CC73GCH1H471J	CHIP C 470PF J		C332			CC73GCH1H331J	CHIP C 330PF J	
C230			CC73GCH1H471J	CHIP C 470PF J		C333		*	CS77CC1C100M	CHIP TNTL 10UF 16WV	
C231			CK73GB1H103K	CHIP C 0.010UF K		C334			CK73GB1H103K	CHIP C 0.010UF K	
C233			CC73GCH1H010C	CHIP C 1.0PF C		C335			CK73GB1H102K	CHIP C 1000PF K	
C234			CC73GCH1H471J	CHIP C 470PF J		C336			CC73GCH1H180J	CHIP C 18PF J	
C235			CK73GB1H103K	CHIP C 0.010UF K		C337			CK73GB1H103K	CHIP C 0.010UF K	
C237			CC73GCH1H471J	CHIP C 470PF J		C338		*	CS77CB21A470M	CHIP TNTL 47UF 10WV	
C240			CC73GCH1H221J	CHIP C 220PF J		C339			CC73GCH1H221J	CHIP C 220PF J	
C241			CC73GCH1H820J	CHIP C 82PF J		C340			CK73GB1H103K	CHIP C 0.010UF K	
C242			CC73GCH1H330J	CHIP C 33PF J		C341			CK73GB1H104K	CHIP C 0.10UF K	
C243,244			CC73GCH1H471J	CHIP C 470PF J		C342		*	CS77CB21A470M	CHIP TNTL 47UF 10WV	
C245			CC73GCH1H470J	CHIP C 47PF J		C343,344			CK73GB1H103K	CHIP C 0.010UF K	
C246,247			CC73GCH1H471J	CHIP C 470PF J		C345			CK73GB1H104K	CHIP C 0.10UF K	
C248			CC73GCH1H151J	CHIP C 150PF J		C346,347			CK73GB1H103K	CHIP C 0.010UF K	
C249			CE32CL1V100M	CHIP EL 10UF 35WV		C348			CC73GCH1H221J	CHIP C 220PF J	
C250			CK73GB1H104K	CHIP C 0.10UF K		C349,350			CC73GCH1H100D	CHIP C 10PF D	
C251,252			CK73GB1H103K	CHIP C 0.010UF K		C351		*	CS77CC1C100M	CHIP TNTL 10UF 16WV	
C253			CE32CL1V100M	CHIP EL 10UF 35WV		C352			CC73GCH1H180J	CHIP C 18PF J	
C254			CK73GB1H104K	CHIP C 0.10UF K		C353			CK73GB1H103K	CHIP C 0.010UF K	
C255,256			CK73GB1H103K	CHIP C 0.010UF K		C354			CC73GCH1H331J	CHIP C 330PF J	
C257-260			CK73GB1H104K	CHIP C 0.10UF K		C355			CC73GCH1H470J	CHIP C 47PF J	
C263			CC73GCH1H390J	CHIP C 39PF J		C356			CK73GB1H103K	CHIP C 0.010UF K	
C265			CC73GCH1H680J	CHIP C 68PF J		C357			CC73GCH1H181J	CHIP C 180PF J	
C267			CC73GCH1H390J	CHIP C 39PF J		C358			CK73GB1H104K	CHIP C 0.10UF K	
C269-272			CK73GB1H104K	CHIP C 0.10UF K		C359			CC73GCH1H100D	CHIP C 10PF D	
C275			CC73GCH1H471J	CHIP C 470PF J		C360			CK73GB1H103K	CHIP C 0.010UF K	
C276			CC73GCH1H271J	CHIP C 270PF J		C361			CK73GB1H104K	CHIP C 0.10UF K	
C277			CC73GCH1H471J	CHIP C 470PF J		C362			CC73GCH1H471J	CHIP C 470PF J	
C278			CC73GCH1H391J	CHIP C 390PF J		C363,364			CK73GB1H103K	CHIP C 0.010UF K	
C279			CC73GCH1H471J	CHIP C 470PF J		C365			CC73GCH1H471J	CHIP C 470PF J	
C280			CC73GCH1H271J	CHIP C 270PF J		C366			CC73GCH1H100D	CHIP C 10PF D	
C281			CC73GCH1H471J	CHIP C 470PF J		C367			CK73GB1H103K	CHIP C 0.010UF K	
C282-285			CK73GB1H104K	CHIP C 0.10UF K		C369,370			CK73GB1H103K	CHIP C 0.010UF K	
C286			CK73GB1H103K	CHIP C 0.010UF K		C372			CC73GCH1H180J	CHIP C 18PF J	
C287			CK73GB1H104K	CHIP C 0.10UF K		C373			CC73GCH1H470J	CHIP C 47PF J	
C301			CS77CA1C2R2M	CHIP TNTL 2.2UF 16WV		C375			CK73GB1H103K	CHIP C 0.010UF K	
C302			CC73GCH1H100D	CHIP C 10PF D		C376			CC73GCH1H471J	CHIP C 470PF J	
C303			CK73GB1H103K	CHIP C 0.010UF K		C378			CK73FB1C105K	CHIP C 1.0UF K	
C304			CC73GCH1H331J	CHIP C 330PF J		C379			CK73GB1H103K	CHIP C 0.010UF K	
C305			CC73GCH1H180J	CHIP C 18PF J		C381			CK73GB1H103K	CHIP C 0.010UF K	
C306			CK73FB0J106K	CHIP C 10UF K		C382			CC73GCH1H221J	CHIP C 220PF J	
C307			CK73GB1H104K	CHIP C 0.10UF K		C383			CC73GCH1H331J	CHIP C 330PF J	
C308			CC73GCH1H471J	CHIP C 470PF J		C384			CC73GCH1H181J	CHIP C 180PF J	
C309			CC73GCH1H331J	CHIP C 330PF J		C386			CE32CL1V100M	CHIP EL 10UF 35WV	
C310			CK73FB0J106K	CHIP C 10UF K		C387			CK73GB1H104K	CHIP C 0.10UF K	
C311		*	C93-0912-05	CHIP C 100UF M		C388			CC73GCH1H471J	CHIP C 470PF J	
C312			CK73GB1H103K	CHIP C 0.010UF K		C389			CK73GB1H102K	CHIP C 1000PF K	
C313			CC73GCH1H121J	CHIP C 120PF J		C390			CK73GB1H222K	CHIP C 2200PF K	
C314,315			CK73GB1H103K	CHIP C 0.010UF K		C391		*	C93-0912-05	CHIP C 100UF M	
C316			CC73GCH1H100D	CHIP C 10PF D		C392,393			CC73GCH1H100D	CHIP C 10PF D	
C317			CK73GB1H104K	CHIP C 0.10UF K		C401			CK73GB1H103K	CHIP C 0.010UF K	
C318			CE32BM1E470M	CHIP EL 47UF 25WV		C402,403			CK73GB1H104K	CHIP C 0.10UF K	
C319			CK73GB1H104K	CHIP C 0.10UF K		C404			CK73GB1H103K	CHIP C 0.010UF K	
C320			CK73GB1H103K	CHIP C 0.010UF K		C405			CC73GCH1H471J	CHIP C 470PF J	
C321			CC73GCH1H471J	CHIP C 470PF J		C406-412			CK73GB1H103K	CHIP C 0.010UF K	
C323-326			CK73GB1H103K	CHIP C 0.010UF K		C413			CC73GCH1H471J	CHIP C 470PF J	
C327			CC73GCH1H181J	CHIP C 180PF J		C414-416			CK73GB1H103K	CHIP C 0.010UF K	
C328,329		*	C93-0912-05	CHIP C 100UF M		C419			CK73FB0J106K	CHIP C 10UF K	
C330			CC73GCH1H470J	CHIP C 47PF J		C420			CK73GB1H103K	CHIP C 0.010UF K	

PARTS LIST

TX UNIT (X56-3120-10)

Ref. No.	Address	New parts	Parts No.	Description	Desti-nation	Ref. No.	Address	New parts	Parts No.	Description	Desti-nation
C422			CK73GB1H103K	CHIP C 0.010UF K		C529-532			CK73GB1H104K	CHIP C 0.10UF K	
C423			CE32BM1E470M	CHIP EL 47UF 25WV		C533			CC73GCH1H471J	CHIP C 470PF J	
C425			CC73GCH1H181J	CHIP C 180PF J		C534-537			CK73GB1H104K	CHIP C 0.10UF K	
C427			CC73GCH1H470J	CHIP C 47PF J		C538			CC73GCH1H471J	CHIP C 470PF J	
C429			CC73GCH1H331J	CHIP C 330PF J		C539			CK73GB1H104K	CHIP C 0.10UF K	
C430			CC73GCH1H180J	CHIP C 18PF J		C541,542			CC73GCH1H100D	CHIP C 10PF D	
C433			CC73GCH1H221J	CHIP C 220PF J		C543-547			CK73GB1H104K	CHIP C 0.10UF K	
C435			CK73GB1H104K	CHIP C 0.10UF K		C548			CC73GCH1H471J	CHIP C 470PF J	
C436			CS77BA1E010M	CHIP TNL 1UF 25WV		C549-552			CK73GB1H104K	CHIP C 0.10UF K	
C437			CK73GB1H103K	CHIP C 0.010UF K		C554-556			CK73GB1H104K	CHIP C 0.10UF K	
C439-443			CK73GB1H103K	CHIP C 0.010UF K		C557			CC73GCH1H030C	CHIP C 3.0PF C	
C445			CS77CA1V0R1M	CHIP TNL 0.1UF 35WV		C558,559			CK73GB1H104K	CHIP C 0.10UF K	
C446			CK73FB1E473K	CHIP C 0.047UF K		C562			CK73GB1H104K	CHIP C 0.10UF K	
C447			CK73FB0J106K	CHIP C 10UF K		C563			CC73GCH1H121J	CHIP C 120PF J	
C448			CK73GB1H104K	CHIP C 0.10UF K		C564			CC73GCH1H470J	CHIP C 47PF J	
C449			CK73GB1H103K	CHIP C 0.010UF K		C565			CK73GB1H104K	CHIP C 0.10UF K	
C451			CK73GB1H104K	CHIP C 0.10UF K		C568			CC73GCH1H221J	CHIP C 220PF J	
C452			CK73FB0J106K	CHIP C 10UF K		C569			CC73GCH1H471J	CHIP C 470PF J	
C453			CC73GCH1H181J	CHIP C 180PF J		C570			CC73GCH1H010C	CHIP C 1.0PF C	
C454			CC73GCH1H470J	CHIP C 47PF J		C571			CC73GCH1H331J	CHIP C 330PF J	
C455			CK73GB1H103K	CHIP C 0.010UF K		C573,574			CC73GCH1H331J	CHIP C 330PF J	
C456			CC73GCH1H331J	CHIP C 330PF J		C575,576			CC73GCH1H180J	CHIP C 18PF J	
C457			CC73GCH1H181J	CHIP C 180PF J		C577,578			CC73GCH1H331J	CHIP C 330PF J	
C458			CC73GCH1H470J	CHIP C 47PF J		C601-605			CK73GB1H104K	CHIP C 0.10UF K	
C459			CC73GCH1H180J	CHIP C 18PF J		C610			CK73GB1H104K	CHIP C 0.10UF K	
C460			CC73GCH1H331J	CHIP C 330PF J		C612,613			CK73GB1H104K	CHIP C 0.10UF K	
C461			CC73GCH1H221J	CHIP C 220PF J		C614			CC73GCH1H100D	CHIP C 10PF D	
C462			CC73GCH1H180J	CHIP C 18PF J		C616			CC73GCH1H270J	CHIP C 27PF J	
C463			CK73GB1H104K	CHIP C 0.10UF K		C619			CC73GCH1H100D	CHIP C 10PF D	
C464,465			CK73GB1H103K	CHIP C 0.010UF K		C620-623			CK73GB1H104K	CHIP C 0.10UF K	
C466			CC73GCH1H221J	CHIP C 220PF J		C624-627			CC73GCH1H560J	CHIP C 56PF J	
C467			CK73FB1C105K	CHIP C 1.0UF K		C628-631			CK73GB1H104K	CHIP C 0.10UF K	
C468,469			CK73GB1H103K	CHIP C 0.010UF K		C632-634			CK73GB1H103K	CHIP C 0.010UF K	
C470			CK73GB1H104K	CHIP C 0.10UF K		C635,636			CK73GB1H104K	CHIP C 0.10UF K	
C471-482			CK73GB1H103K	CHIP C 0.010UF K		C637			CK73GB1H103K	CHIP C 0.010UF K	
C483-486			CK73GB1H104K	CHIP C 0.10UF K		C638			CC73GCH1H470J	CHIP C 47PF J	
C487			CK73GB1H103K	CHIP C 0.010UF K		C639			CC73GCH1H180J	CHIP C 18PF J	
C488-490			CK73GB1H104K	CHIP C 0.10UF K		C640			CC73GCH1H181J	CHIP C 180PF J	
C491			CC73GCH1H470J	CHIP C 47PF J		C641			CC73GCH1H331J	CHIP C 330PF J	
C492-495			CK73GB1H104K	CHIP C 0.10UF K		C642			CC73GCH1H221J	CHIP C 220PF J	
C496			CC73GCH1H221J	CHIP C 220PF J		C643			CC73GCH1H471J	CHIP C 470PF J	
C497			CK73GB1H104K	CHIP C 0.10UF K		C645			CC73GCH1H471J	CHIP C 470PF J	
C498			CC73GCH1H121J	CHIP C 120PF J		C656,657			CK73GB1H103K	CHIP C 0.010UF K	
C499			CK73GB1H104K	CHIP C 0.10UF K		C658			CK73GB1H104K	CHIP C 0.10UF K	
C500			CC73GCH1H471J	CHIP C 470PF J		C659,660			CK73GB1H103K	CHIP C 0.010UF K	
C501,502			CK73GB1H104K	CHIP C 0.10UF K		C661			CK73FB0J106K	CHIP C 10UF K	
C503			CC73GCH1H470J	CHIP C 47PF J		C662,663			CK73GB1H104K	CHIP C 0.10UF K	
C504			CC73GCH1H010C	CHIP C 1.0PF C		C703			CK73GB1H104K	CHIP C 0.10UF K	
C505,506			CK73GB1H104K	CHIP C 0.10UF K		C704			CK73FB0J106K	CHIP C 10UF K	
C507,508			CC73GCH1H331J	CHIP C 330PF J		C707			CK73GB1H102K	CHIP C 1000PF K	
C509,510			CK73GB1H104K	CHIP C 0.10UF K		C708			CK73GB1H104K	CHIP C 0.10UF K	
C511			CC73GCH1H470J	CHIP C 47PF J		C709			CE32CL1V100M	CHIP EL 10UF 35WV	
C512			CC73GCH1H471J	CHIP C 470PF J		C710			CK73GB1H104K	CHIP C 0.10UF K	
C513			CC73GCH1H010C	CHIP C 1.0PF C		C711			CK73GB1H103K	CHIP C 0.010UF K	
C514			CC73GCH1H121J	CHIP C 120PF J		C712,713			CC73GCH1H471J	CHIP C 470PF J	
C515			CC73GCH1H030C	CHIP C 3.0PF C		C714			CK73GB1H103K	CHIP C 0.010UF K	
C516,517			CK73GB1H104K	CHIP C 0.10UF K		C715			CE32CL1V100M	CHIP EL 10UF 35WV	
C519			CK73GB1H104K	CHIP C 0.10UF K		C716			CK73GB1H103K	CHIP C 0.010UF K	
C520			CC73GCH1H221J	CHIP C 220PF J		C717,718			CC73GCH1H471J	CHIP C 470PF J	
C521-527			CK73GB1H104K	CHIP C 0.10UF K		C719			CK73GB1H103K	CHIP C 0.010UF K	

PARTS LIST

TX UNIT (X56-3120-10)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
C720,721 C722 C723,724 C725 C801-803			CE32CL1V100M CK73GB1H103K CC73GCH1H471J CK73GB1H103K CK73GB1H104K	CHIP EL 10UF 35WV CHIP C 0.010UF K CHIP C 470PF J CHIP C 0.010UF K CHIP C 0.10UF K		CN802 CN803 CN804-806 CN807 CN920		*	E04-0193-05 E40-6822-05 E40-6656-05 E41-2671-05 E41-1493-05	PIN SOCKET FLAT CABLE CONNECTOR PIN ASSY PIN ASSY PIN ASSY	
C804 C805 C806 C807 C808,809			CC73GCH1H471J CK73GB1H104K CE32CL1V100M CK73FB1C105K CK73GB1H104K	CHIP C 470PF J CHIP C 0.10UF K CHIP EL 10UF 35WV CHIP C 1.0UF K CHIP C 0.10UF K		CN921 CN923 CN960 E100			E40-6656-05 E41-1483-05 E41-1493-05 F10-3081-04	PIN ASSY PIN ASSY PIN ASSY SHIELDING CASE	
C810 C811 C812 C813 C814			CC73GCH1H471J CK73GB1H104K CK73GB1H103K CC73GCH1H471J CK73GB1H104K	CHIP C 470PF J CHIP C 0.10UF K CHIP C 0.010UF K CHIP C 470PF J CHIP C 0.10UF K		CF201 CF601 L105,106 L108 L109-111		*	L72-1029-05 L72-1019-05 L41-1095-33 L34-4545-05 L41-1095-33	CERAMIC FILTER CERAMIC FILTER SMALL FIXED INDUCTOR (1.0UH) AIR-CORE COIL SMALL FIXED INDUCTOR (1.0UH)	
C816 C817 C818 C819 C820,821			CE32CL1V100M CK73GB1H103K CE32CL1V100M CC73GCH1H471J CK73GB1H104K	CHIP EL 10UF 35WV CHIP C 0.010UF K CHIP EL 10UF 35WV CHIP C 470PF J CHIP C 0.10UF K		L112,113 L116-119 L120 L121-124 L125,126			L41-1875-33 L41-1575-33 L41-2275-33 L41-1005-33 L41-1095-33	SMALL FIXED INDUCTOR (0.018UH) SMALL FIXED INDUCTOR (0.015UH) SMALL FIXED INDUCTOR (0.022UH) SMALL FIXED INDUCTOR (1.0UH) SMALL FIXED INDUCTOR (1.0UH)	
C822 C823,824 C825 C826 C827			CK73GB1H103K CC73GCH1H471J CK73GB1H103K CC73GCH1H471J CK73GB1H103K	CHIP C 0.010UF K CHIP C 470PF J CHIP C 0.010UF K CHIP C 470PF J CHIP C 0.010UF K		L128 L129-131 L201,202 L203,204 L205			L34-4545-05 L41-1095-33 L41-1575-33 L41-1275-33 L34-4604-05	AIR-CORE COIL SMALL FIXED INDUCTOR (1.0UH) SMALL FIXED INDUCTOR (0.015UH) SMALL FIXED INDUCTOR (0.012UH) AIR-CORE COIL	
C848 C850 C856 C857 C858,859		*	C92-0904-05 CK73GB1H103K CE32AU1E100M CK73GB1H103K CC73GCH1H471J	OS-CON 22UF 35WV CHIP C 0.010UF K CHIP EL 10UF 25WV CHIP C 0.010UF K CHIP C 470PF J		L207 L208 L210 L211 L212,213		*	L34-4607-05 L34-4606-05 L41-1595-33 L41-1895-33 L41-1005-33	AIR-CORE COIL AIR-CORE COIL SMALL FIXED INDUCTOR (1.5UH) SMALL FIXED INDUCTOR (1.8UH) SMALL FIXED INDUCTOR (10UH)	
C860 C885 C886 C887 C888			CK73GB1H103K CK73GB1H104K CC73GCH1H270J CC73GCH1H100D CC73GCH1H270J	CHIP C 0.010UF K CHIP C 0.10UF K CHIP C 27PF J CHIP C 10PF D CHIP C 27PF J		L214,215 L216,217 L218 L219 L301			L41-4705-33 L41-2295-33 L41-6885-33 L41-6895-33 L41-3985-33	SMALL FIXED INDUCTOR (47UH) SMALL FIXED INDUCTOR (2.2UH) SMALL FIXED INDUCTOR (0.68UH) SMALL FIXED INDUCTOR (6.8UH) SMALL FIXED INDUCTOR (0.39UH)	
C889 C890 C894,895 C896 C920-925			CK73GB1H104K CK73GB1E105K CK73GB1H103K CC73GCH1H100D CK73GB1H104K	CHIP C 0.10UF K CHIP C 1.0UF K CHIP C 0.010UF K CHIP C 10PF D CHIP C 0.10UF K		L302 L303 L304 L305 L306			L41-1005-33 L41-1095-33 L41-1005-33 L41-3385-33 L41-1095-33	SMALL FIXED INDUCTOR (10UH) SMALL FIXED INDUCTOR (1.0UH) SMALL FIXED INDUCTOR (10UH) SMALL FIXED INDUCTOR (0.33UH) SMALL FIXED INDUCTOR (1.0UH)	
C926 C928,929 C930,931 C932 C933,934			CK73GB1H102K CK73GB1H104K CK73GB1E105K CC73GCH1H470J CS77CA1A1R5M	CHIP C 1000PF K CHIP C 0.10UF K CHIP C 1.0UF K CHIP C 47PF J CHIP TNTL 1.5UF 10WV		L307,308 L309 L310 L311 L312			L41-3985-33 L41-1095-33 L41-3385-33 L41-3985-33 L41-3385-33	SMALL FIXED INDUCTOR (0.39UH) SMALL FIXED INDUCTOR (1.0UH) SMALL FIXED INDUCTOR (0.33UH) SMALL FIXED INDUCTOR (0.39UH) SMALL FIXED INDUCTOR (0.33UH)	
C935,936 C937 C938 C939 C941			CK73GB1H104K CK73GB1H103K CK73FB0J106K CK73GB1H102K CK73GB1H102K	CHIP C 0.10UF K CHIP C 0.010UF K CHIP C 10UF K CHIP C 1000PF K CHIP C 1000PF K		L313 L314 L401-403 L404 L405			L41-1095-33 L41-1005-33 L41-1095-33 L41-1005-33 L41-3385-33	SMALL FIXED INDUCTOR (1.0UH) SMALL FIXED INDUCTOR (10UH) SMALL FIXED INDUCTOR (1.0UH) SMALL FIXED INDUCTOR (10UH) SMALL FIXED INDUCTOR (0.33UH)	
C943 C960-965			CK73GB1H104K CK73GB1H104K	CHIP C 0.10UF K CHIP C 0.10UF K		L406 L407 L408 L409,410 L411			L41-1005-33 L41-3985-33 L41-1095-33 L41-3385-33 L41-3985-33	SMALL FIXED INDUCTOR (10UH) SMALL FIXED INDUCTOR (0.39UH) SMALL FIXED INDUCTOR (1.0UH) SMALL FIXED INDUCTOR (0.33UH) SMALL FIXED INDUCTOR (0.39UH)	
CN102-121 CN130 CN403 CN405,406 CN407		*	E23-1280-05 E23-1330-05 E04-0193-05 E04-0193-05 E04-0154-05	TERMINAL TERMINAL PIN SOCKET PIN SOCKET PIN SOCKET		L412 L413 L414,415 L416,417 L418			L41-1095-33 L41-3985-33 L41-1095-33 L41-1005-33 L41-5685-33	SMALL FIXED INDUCTOR (1.0UH) SMALL FIXED INDUCTOR (0.39UH) SMALL FIXED INDUCTOR (1.0UH) SMALL FIXED INDUCTOR (10UH) SMALL FIXED INDUCTOR (0.56UH)	
CN408 CN801			E04-0193-05 E41-2672-05	PIN SOCKET PIN ASSY							

PARTS LIST

TX UNIT (X56-3120-10)

Ref. No.	Address	New parts	Parts No.	Description	Desti- nation	Ref. No.	Address	New parts	Parts No.	Description	Desti- nation
L419,420			L41-6885-33	SMALL FIXED INDUCTOR (0.68UH)		R151			RK73GB2A101J	CHIP R 100 J 1/10W	
L421			L41-5685-33	SMALL FIXED INDUCTOR (0.56UH)		R152			RK73GB2A000J	CHIP R 0.0 J 1/10W	
L422		*	L39-1517-05	TOROIDAL COIL		R153			RK73GB2A271J	CHIP R 270 J 1/10W	
L423			L41-3305-33	SMALL FIXED INDUCTOR (33UH)		R154			RK73GB2A180J	CHIP R 18 J 1/10W	
L424		*	L39-1517-05	TOROIDAL COIL		R155			RK73GB2A682J	CHIP R 6.8K J 1/10W	
L425			L41-3305-33	SMALL FIXED INDUCTOR (33UH)		R156			RK73GB2A182J	CHIP R 1.8K J 1/10W	
L426,427		*	L39-1517-05	TOROIDAL COIL		R157			RK73GB2A271J	CHIP R 270 J 1/10W	
L430			L41-5685-33	SMALL FIXED INDUCTOR (0.56UH)		R158			RK73GB2A103J	CHIP R 10K J 1/10W	
L431			L41-6885-33	SMALL FIXED INDUCTOR (0.68UH)		R159-161			RK73GB2A104J	CHIP R 100K J 1/10W	
L433,434			L41-3985-33	SMALL FIXED INDUCTOR (0.39UH)		R164			RK73GB2A104J	CHIP R 100K J 1/10W	
L435			L41-2205-33	SMALL FIXED INDUCTOR (22UH)		R165-168			RK73GB2A102J	CHIP R 1.0K J 1/10W	
L601,602			L41-3305-33	SMALL FIXED INDUCTOR (33UH)		R170			RK73GB2A000J	CHIP R 0.0 J 1/10W	
L603,604			L41-4705-33	SMALL FIXED INDUCTOR (47UH)		R171,172			RK73GB2A470J	CHIP R 47 J 1/10W	
L605			L41-2205-33	SMALL FIXED INDUCTOR (22UH)		R173,174			RK73GB2A102J	CHIP R 1.0K J 1/10W	
L606,607		*	L41-1205-33	SMALL FIXED INDUCTOR (12UH)		R176			RK73GB2A000J	CHIP R 0.0 J 1/10W	
L608			L41-1005-33	SMALL FIXED INDUCTOR (10UH)		R178			RK73GB2A000J	CHIP R 0.0 J 1/10W	
L609			L92-0140-05	CHIP FERRITE		R179			RK73GB2A224J	CHIP R 220K J 1/10W	
L610			L41-1005-33	SMALL FIXED INDUCTOR (10UH)		R180			RK73GB2A101J	CHIP R 100 J 1/10W	
L611			L92-0140-05	CHIP FERRITE		R181			RK73GB2A184J	CHIP R 180K J 1/10W	
L612			L41-3385-33	SMALL FIXED INDUCTOR (0.33UH)		R182			RK73GB2A101J	CHIP R 100 J 1/10W	
L613			L41-3985-33	SMALL FIXED INDUCTOR (0.39UH)		R183			RK73GB2A181J	CHIP R 180 J 1/10W	
L614			L41-1005-33	SMALL FIXED INDUCTOR (10UH)		R184			RK73GB2A470J	CHIP R 47 J 1/10W	
L801			L41-1095-33	SMALL FIXED INDUCTOR (1.0UH)		R185,186			RK73GB2A103J	CHIP R 10K J 1/10W	
L812			L41-1005-33	SMALL FIXED INDUCTOR (10UH)		R187,188			RK73GB2A000J	CHIP R 0.0 J 1/10W	
X301		*	L77-1981-05	VCXO (19.2MHZ)		R189-191			RK73GB2A103J	CHIP R 10K J 1/10W	
X401		*	L77-1981-05	VCXO (19.2MHZ)		R201			RK73GB2A121J	CHIP R 120 J 1/10W	
X601		*	L77-3034-05	TCXO (19.2MHZ)		R202			RK73GB2A470J	CHIP R 47 J 1/10W	
CP920			RK74GB1J102J	CHIP-COM 1.0K J 1/16W		R203			RK73GB2A121J	CHIP R 120 J 1/10W	
CP923			RK74GB1J102J	CHIP-COM 1.0K J 1/16W		R204			RK73GB2A103J	CHIP R 10K J 1/10W	
CP924			RK75GB1JR00	CHIP-COM 0.00 1/16W		R205			RK73GB2A272J	CHIP R 2.7K J 1/10W	
CP926		*	RK74GB1J681J	CHIP-COM 680 J 1/16W		R206			RK73GB2A181J	CHIP R 180 J 1/10W	
CP928		*	RK74GB1J681J	CHIP-COM 680 J 1/16W		R207			RK73GB2A121J	CHIP R 120 J 1/10W	
CP961,962		*	RK74GB1J681J	CHIP-COM 680 J 1/16W		R208			RK73GB2A101J	CHIP R 100 J 1/10W	
CP965,966		*	RK74GB1J681J	CHIP-COM 680 J 1/16W		R210			RK73GB2A000J	CHIP R 0.0 J 1/10W	
CP970,971		*	RK74GB1J681J	CHIP-COM 680 J 1/16W		R212			RK73GB2A562J	CHIP R 5.6K J 1/10W	
CP973,974		*	RK74GB1J681J	CHIP-COM 680 J 1/16W		R213			RK73GB2A152J	CHIP R 1.5K J 1/10W	
R101			RK73GB2A000J	CHIP R 0.0 J 1/10W		R215			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R118			RK73GB2A000J	CHIP R 0.0 J 1/10W		R216			RK73GB2A470J	CHIP R 47 J 1/10W	
R119			RK73GB2A820J	CHIP R 82 J 1/10W		R218			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R120			RK73GB2A151J	CHIP R 150 J 1/10W		R220			RK73GB2A392J	CHIP R 3.9K J 1/10W	
R123			RK73GB2A000J	CHIP R 0.0 J 1/10W		R221			RK73GB2A103J	CHIP R 10K J 1/10W	
R124,125			RK73GB2A105J	CHIP R 1.0M J 1/10W		R222			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R129			RK73GB2A101J	CHIP R 100 J 1/10W		R223			RK73GB2A123J	CHIP R 12K J 1/10W	
R131			RK73GB2A101J	CHIP R 100 J 1/10W		R224			RK73GB2A221J	CHIP R 220 J 1/10W	
R132			RK73GB2A181J	CHIP R 180 J 1/10W		R225			RK73GB2A474J	CHIP R 470K J 1/10W	
R133			RK73GB2A470J	CHIP R 47 J 1/10W		R226			RK73GB2A220J	CHIP R 22 J 1/10W	
R134			RK73GB2A220J	CHIP R 22 J 1/10W		R227			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R135			RK73GB2A272J	CHIP R 2.7K J 1/10W		R229			RK73GB2A563J	CHIP R 56K J 1/10W	
R137			RK73GB2A102J	CHIP R 1.0K J 1/10W		R230			RK73FB2B487J	CHIP R 4.7 J 1/8W	
R138			RK73GB2A103J	CHIP R 10K J 1/10W		R231,232			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R139			RK73GB2A102J	CHIP R 1.0K J 1/10W		R233			RK73GB2A104J	CHIP R 100K J 1/10W	
R141			RK73GB2A101J	CHIP R 100 J 1/10W		R234,235			RK73GB2A474J	CHIP R 470K J 1/10W	
R142			RK73GB2A221J	CHIP R 220 J 1/10W		R236			RK73GB2A821J	CHIP R 820 J 1/10W	
R144,145			RK73GB2A000J	CHIP R 0.0 J 1/10W		R241			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R146			RK73GB2A271J	CHIP R 270 J 1/10W		R242			RK73GB2A474J	CHIP R 470K J 1/10W	
R147			RK73GB2A180J	CHIP R 18 J 1/10W		R243			RK73GB2A392J	CHIP R 3.9K J 1/10W	
R148			RK73GB2A271J	CHIP R 270 J 1/10W		R244-246			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R149			RK73GB2A221J	CHIP R 220 J 1/10W		R247-249			RK73GB2A104J	CHIP R 100K J 1/10W	
R150			RK73GB2A820J	CHIP R 82 J 1/10W		R250			RK73GB2A474J	CHIP R 470K J 1/10W	
						R251			RK73GB2A100J	CHIP R 10 J 1/10W	

PARTS LIST

TX UNIT (X56-3120-10)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
R252			RK73GB2A104J	CHIP R 100K J 1/10W		R360			RK73GB2A104J	CHIP R 100K J 1/10W	
R253			RK73GB2A331J	CHIP R 330 J 1/10W		R362			RK73GB2A100J	CHIP R 10 J 1/10W	
R254			RK73GB2A100J	CHIP R 10 J 1/10W		R363			RK73GB2A471J	CHIP R 470 J 1/10W	
R255			RK73GB2A274J	CHIP R 270K J 1/10W		R364			RK73GB2A104J	CHIP R 100K J 1/10W	
R256			RK73GB2A102J	CHIP R 1.0K J 1/10W		R367			RK73GB2A104J	CHIP R 100K J 1/10W	
R257,258			RK73GB2A000J	CHIP R 0.0 J 1/10W		R368			RK73GB2A822J	CHIP R 8.2K J 1/10W	
R259			RK73GB2A562J	CHIP R 5.6K J 1/10W		R369			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R260			RK73GB2A331J	CHIP R 330 J 1/10W		R370			RK73GB2A182J	CHIP R 1.8K J 1/10W	
R261			RK73GB2A562J	CHIP R 5.6K J 1/10W		R371			RK73GB2A2R2J	CHIP R 2.2 J 1/10W	
R262			RK73GB2A102J	CHIP R 1.0K J 1/10W		R374			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R263			RK73GB2A563J	CHIP R 56K J 1/10W		R375,376			RK73GB2A563J	CHIP R 56K J 1/10W	
R264			RK73GB2A100J	CHIP R 10 J 1/10W		R377,378			RK73GB2A104J	CHIP R 100K J 1/10W	
R265			RK73GB2A471J	CHIP R 470 J 1/10W		R379			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R266			RK73GB2A000J	CHIP R 0.0 J 1/10W		R380			RK73GB2A470J	CHIP R 47 J 1/10W	
R267			RK73GB2A271J	CHIP R 270 J 1/10W		R381			RK73GB2A104J	CHIP R 100K J 1/10W	
R268			RK73GB2A180J	CHIP R 18 J 1/10W		R401			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R269			RK73GB2A271J	CHIP R 270 J 1/10W		R402			RK73GB2A474J	CHIP R 470K J 1/10W	
R270,271			RK73GB2A472J	CHIP R 4.7K J 1/10W		R403,404			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R272			RK73GB2A100J	CHIP R 10 J 1/10W		R406-408			RK73GB2A100J	CHIP R 10 J 1/10W	
R274			RK73GB2A221J	CHIP R 220 J 1/10W		R409			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R276			RK73GB2A000J	CHIP R 0.0 J 1/10W		R410			RK73GB2A331J	CHIP R 330 J 1/10W	
R301,302			RK73GB2A473J	CHIP R 47K J 1/10W		R411			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R303			RK73GB2A000J	CHIP R 0.0 J 1/10W		R412			RK73GB2A331J	CHIP R 330 J 1/10W	
R304			RK73GB2A471J	CHIP R 470 J 1/10W		R413			RK73GB2A123J	CHIP R 12K J 1/10W	
R305			RK73GB2A104J	CHIP R 100K J 1/10W		R414			RK73GB2A562J	CHIP R 5.6K J 1/10W	
R306-309			RK73GB2A102J	CHIP R 1.0K J 1/10W		R415			RK73GB2A123J	CHIP R 12K J 1/10W	
R310,311			RK73GB2A104J	CHIP R 100K J 1/10W		R416			RK73GB2A562J	CHIP R 5.6K J 1/10W	
R312			RK73GB2A154J	CHIP R 150K J 1/10W		R417,418			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R313			RK73GB2A2R2J	CHIP R 2.2 J 1/10W		R422-424			RK73GB2A474J	CHIP R 470K J 1/10W	
R314			RK73GB2A000J	CHIP R 0.0 J 1/10W		R425			RK73GB2A104J	CHIP R 100K J 1/10W	
R316			RK73GB2A273J	CHIP R 27K J 1/10W		R427			RK73GB2A100J	CHIP R 10 J 1/10W	
R317			RK73GB2A104J	CHIP R 100K J 1/10W		R430,431			RK73GB2A100J	CHIP R 10 J 1/10W	
R318			RK73GB2A472J	CHIP R 4.7K J 1/10W		R433			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R319			RK73GB2A104J	CHIP R 100K J 1/10W		R434			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R320			RK73GB2A470J	CHIP R 47 J 1/10W		R435			RK73GB2A104J	CHIP R 100K J 1/10W	
R321-323			RK73GB2A100J	CHIP R 10 J 1/10W		R436,437			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R324			RK73GB2A682J	CHIP R 6.8K J 1/10W		R438			RK73GB2A104J	CHIP R 100K J 1/10W	
R325			RK73GB2A332J	CHIP R 3.3K J 1/10W		R439			RK73GB2A2R2J	CHIP R 2.2 J 1/10W	
R326			RK73GB2A100J	CHIP R 10 J 1/10W		R440			RK73GB2A103J	CHIP R 10K J 1/10W	
R327,328			RK73GB2A000J	CHIP R 0.0 J 1/10W		R442			RK73GB2A470J	CHIP R 47 J 1/10W	
R329,330			RK73GB2A104J	CHIP R 100K J 1/10W		R447			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R331,332			RK73GB2A471J	CHIP R 470 J 1/10W		R452,453			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R333			RK73GB2A000J	CHIP R 0.0 J 1/10W		R454,455			RK73GB2A105J	CHIP R 1.0M J 1/10W	
R334			RK73GB2A104J	CHIP R 100K J 1/10W		R457			RK73GB2A333J	CHIP R 33K J 1/10W	
R335			RK73GB2A223J	CHIP R 22K J 1/10W		R458			RK73GB2A104J	CHIP R 100K J 1/10W	
R336			RK73GB2A334J	CHIP R 330K J 1/10W		R459			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R337			RK73GB2A273J	CHIP R 27K J 1/10W		R460			RK73GB2A183J	CHIP R 18K J 1/10W	
R338			RK73GB2A105J	CHIP R 1.0M J 1/10W		R461			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R339			RK73GB2A104J	CHIP R 100K J 1/10W		R463			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R340			RK73GB2A101J	CHIP R 100 J 1/10W		R464			RK73GB2A221J	CHIP R 220 J 1/10W	
R341			RK73GB2A221J	CHIP R 220 J 1/10W		R465			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R342			RK73GB2A470J	CHIP R 47 J 1/10W		R466			RK73GB2A470J	CHIP R 47 J 1/10W	
R343			RK73GB2A000J	CHIP R 0.0 J 1/10W		R469,470			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R344-351			RK73GB2A104J	CHIP R 100K J 1/10W		R471			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R352			RK73GB2A123J	CHIP R 12K J 1/10W		R474			RK73GB2A682J	CHIP R 6.8K J 1/10W	
R353			RK73GB2A332J	CHIP R 3.3K J 1/10W		R475			RK73GB2A332J	CHIP R 3.3K J 1/10W	
R355			RK73GB2A221J	CHIP R 220 J 1/10W		R476,477			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R356			RK73GB2A100J	CHIP R 10 J 1/10W		R478			RK73GB2A153J	CHIP R 15K J 1/10W	
R357			RK73GB2A101J	CHIP R 100 J 1/10W		R479			RK73GB2A2R2J	CHIP R 2.2 J 1/10W	
R358			RK73GB2A105J	CHIP R 1.0M J 1/10W		R480			RK73GB2A682J	CHIP R 6.8K J 1/10W	

PARTS LIST

TX UNIT (X56-3120-10)

Ref. No.	Address	New parts	Parts No.	Description	Desti-nation	Ref. No.	Address	New parts	Parts No.	Description	Desti-nation
R481			RK73GB2A182J	CHIP R 1.8K J 1/10W		R551			RK73GB2A473J	CHIP R 47K J 1/10W	
R482			RK73GB2A103J	CHIP R 10K J 1/10W		R552			RK73GB2A104J	CHIP R 100K J 1/10W	
R483			RK73GB2A562J	CHIP R 5.6K J 1/10W		R553			RK73GB2A223J	CHIP R 22K J 1/10W	
R484			RK73GB2A101J	CHIP R 100 J 1/10W		R554			RK73GB2A180J	CHIP R 18 J 1/10W	
R485			RK73GB2A392J	CHIP R 3.9K J 1/10W		R555			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R486			RK73GB2A221J	CHIP R 220 J 1/10W		R556			RK73GB2A122J	CHIP R 1.2K J 1/10W	
R487			RK73GB2A102J	CHIP R 1.0K J 1/10W		R557			RK73GB2A473J	CHIP R 47K J 1/10W	
R488			RK73GB2A822J	CHIP R 8.2K J 1/10W		R558			RK73GB2A331J	CHIP R 330 J 1/10W	
R489			RK73GB2A272J	CHIP R 2.7K J 1/10W		R560			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R490			RK73GB2A470J	CHIP R 47 J 1/10W		R561			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R492			RK73GB2A471J	CHIP R 470 J 1/10W		R562			RK73GB2A104J	CHIP R 100K J 1/10W	
R493			RK73GB2A104J	CHIP R 100K J 1/10W		R563			RK73GB2A473J	CHIP R 47K J 1/10W	
R494			RK73GB2A123J	CHIP R 12K J 1/10W		R564			RK73GB2A223J	CHIP R 22K J 1/10W	
R495			RK73GB2A332J	CHIP R 3.3K J 1/10W		R566			RK73GB2A473J	CHIP R 47K J 1/10W	
R496,497			RK73GB2A100J	CHIP R 10 J 1/10W		R567			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R498			RK73GB2A471J	CHIP R 470 J 1/10W		R568			RK73GB2A224J	CHIP R 220K J 1/10W	
R499			RK73GB2A682J	CHIP R 6.8K J 1/10W		R569			RK73GB2A561J	CHIP R 560 J 1/10W	
R500			RK73GB2A332J	CHIP R 3.3K J 1/10W		R570			RK73GB2A473J	CHIP R 47K J 1/10W	
R501			RK73GB2A221J	CHIP R 220 J 1/10W		R571			RK73GB2A100J	CHIP R 10 J 1/10W	
R502			RK73GB2A000J	CHIP R 0.0 J 1/10W		R573			RK73GB2A104J	CHIP R 100K J 1/10W	
R503			RK73GB2A100J	CHIP R 10 J 1/10W		R575			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R504			RK73GB2A104J	CHIP R 100K J 1/10W		R576			RK73FB2B1R0J	CHIP R 1.0 J 1/8W	
R505			RK73GB2A000J	CHIP R 0.0 J 1/10W		R577			RK73GB2A104J	CHIP R 100K J 1/10W	
R506			RK73GB2A101J	CHIP R 100 J 1/10W		R578			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R507			RK73GB2A100J	CHIP R 10 J 1/10W		R580			RK73GB2A220J	CHIP R 22 J 1/10W	
R508-510			RK73GB2A000J	CHIP R 0.0 J 1/10W		R581			RK73GB2A104J	CHIP R 100K J 1/10W	
R511			RK73GB2A102J	CHIP R 1.0K J 1/10W		R582			RK73GB2A474J	CHIP R 470K J 1/10W	
R512			RK73GB2A181J	CHIP R 180 J 1/10W		R583			RK73GB2A221J	CHIP R 220 J 1/10W	
R513			RK73GB2A471J	CHIP R 470 J 1/10W		R586			RK73GB2A104J	CHIP R 100K J 1/10W	
R514			RK73GB2A100J	CHIP R 10 J 1/10W		R588			RK73GB2A103J	CHIP R 10K J 1/10W	
R515			RK73GB2A470J	CHIP R 47 J 1/10W		R591			RK73FB2B271J	CHIP R 270 J 1/8W	
R518			RK73GB2A104J	CHIP R 100K J 1/10W		R592			RK73GB2A273J	CHIP R 27K J 1/10W	
R519			RK73GB2A124J	CHIP R 120K J 1/10W		R593			RK73FB2B120J	CHIP R 12 J 1/8W	
R521			RK73GB2A223J	CHIP R 22K J 1/10W		R594			RK73FB2B271J	CHIP R 270 J 1/8W	
R522			RK73GB2A822J	CHIP R 8.2K J 1/10W		R595			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R523,524			RK73GB2A221J	CHIP R 220 J 1/10W		R601			RK73GB2A103J	CHIP R 10K J 1/10W	
R525			RK73GB2A471J	CHIP R 470 J 1/10W		R602			RK73GB2A104J	CHIP R 100K J 1/10W	
R526			RK73GB2A473J	CHIP R 47K J 1/10W		R603			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R527			RK73GB2A271J	CHIP R 270 J 1/10W		R604			RK73GB2A473J	CHIP R 47K J 1/10W	
R528			RK73GB2A152J	CHIP R 1.5K J 1/10W		R605			RK73GB2A153J	CHIP R 15K J 1/10W	
R529			RK73GB2A153J	CHIP R 15K J 1/10W		R606			RK73GB2A181J	CHIP R 180 J 1/10W	
R530			RK73GB2A120J	CHIP R 12 J 1/10W		R607			RK73GB2A470J	CHIP R 47 J 1/10W	
R531			RK73GB2A474J	CHIP R 470K J 1/10W		R608			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R532			RK73GB2A271J	CHIP R 270 J 1/10W		R610			RK73GB2A104J	CHIP R 100K J 1/10W	
R533			RK73GB2A104J	CHIP R 100K J 1/10W		R611			RK73GB2A100J	CHIP R 10 J 1/10W	
R534			RK73GB2A221J	CHIP R 220 J 1/10W		R612			RK73GB2A471J	CHIP R 470 J 1/10W	
R535			RK73GB2A104J	CHIP R 100K J 1/10W		R613			RK73GB2A682J	CHIP R 6.8K J 1/10W	
R536			RK73GB2A102J	CHIP R 1.0K J 1/10W		R614			RK73GB2A332J	CHIP R 3.3K J 1/10W	
R538			RK73GB2A102J	CHIP R 1.0K J 1/10W		R615			RK73GB2A471J	CHIP R 470 J 1/10W	
R539			RK73GB2A100J	CHIP R 10 J 1/10W		R616			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R540			RK73GB2A474J	CHIP R 470K J 1/10W		R617			RK73GB2A471J	CHIP R 470 J 1/10W	
R541			RK73FB2B1R0J	CHIP R 1.0 J 1/8W		R618			RK73GB2A104J	CHIP R 100K J 1/10W	
R542			RK73GB2A102J	CHIP R 1.0K J 1/10W		R619			RK73GB2A100J	CHIP R 10 J 1/10W	
R543			RK73GB2A220J	CHIP R 22 J 1/10W		R620			RK73GB2A104J	CHIP R 100K J 1/10W	
R544			RK73GB2A104J	CHIP R 100K J 1/10W		R621			RK73GB2A471J	CHIP R 470 J 1/10W	
R545			RK73GB2A470J	CHIP R 47 J 1/10W		R622			RK73GB2A331J	CHIP R 330 J 1/10W	
R547			RK73GB2A472J	CHIP R 4.7K J 1/10W		R623			RK73GB2A392J	CHIP R 3.9K J 1/10W	
R548			RK73GB2A473J	CHIP R 47K J 1/10W		R624			RK73GB2A474J	CHIP R 470K J 1/10W	
R549			RK73GB2A331J	CHIP R 330 J 1/10W		R625			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R550			RK73GB2A104J	CHIP R 100K J 1/10W		R626-628			RK73GB2A102J	CHIP R 1.0K J 1/10W	

PARTS LIST

TX UNIT (X56-3120-10)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
R629			RK73GB2A101J	CHIP R 100 J 1/10W		D401-403			HSM88AS-E	DIODE	
R630			RK73GB2A102J	CHIP R 1.0K J 1/10W		D404,405		*	JDP4P02U	DIODE	
R631			RK73GB2A561J	CHIP R 560 J 1/10W		D406,407			HSC119	DIODE	
R637,638			RK73GB2A472J	CHIP R 4.7K J 1/10W		D408			HSM88AS-E	DIODE	
R639,640			RK73GH2A104D	CHIP R 100K D 1/10W		D409			CSA70-401L	SURGE ABSORBER	
R705			RK73GB2A2R2J	CHIP R 2.2 J 1/10W		D601,602		*	JDP4P02U	DIODE	
R706-708			RK73GB2A100J	CHIP R 10 J 1/10W		D603-606		*	UDZS3.0B	ZENER DIODE	
R709			RK73GB2A474J	CHIP R 470K J 1/10W		D933,934			HSM88AS-E	DIODE	
R711			RK73GB2A104J	CHIP R 100K J 1/10W		D935,936			1SS355	DIODE	
R712,713			RK73GB2A472J	CHIP R 4.7K J 1/10W		D960,961		*	PSA0511EWA-FG1	LED	
R714			RK73GB2A104J	CHIP R 100K J 1/10W		IC101			LMX2352TMX/NP	ANALOGUE IC	
R715			RK73GB2A474J	CHIP R 470K J 1/10W		IC102			LMC7101BIM5	MOS-IC	
R716-718			RK73GB2A100J	CHIP R 10 J 1/10W		IC104		*	NJM2386ADL3-09	ANALOGUE IC	
R719,720			RK73GB2A104J	CHIP R 100K J 1/10W		IC201			NJM2904E-ZB	ANALOGUE IC	
R721			RK73GB2A100J	CHIP R 10 J 1/10W		IC202			AD9835BRUZ	MOS-IC	
R722			RK73GB2A474J	CHIP R 470K J 1/10W		IC301		*	NJM2732V	BI-POLAR IC	
R801			RK73GB2A102J	CHIP R 1.0K J 1/10W		IC302		*	NJU6368PF1	MOS-IC	
R802,803			RK73GB2A104J	CHIP R 100K J 1/10W		IC303		*	ADF4001BRUZ	MOS-IC	
R804-807			RK73GB2A100J	CHIP R 10 J 1/10W		IC304			M62364FP-F	MOS-IC	
R812-824			RK73GB2A000J	CHIP R 0.0 J 1/10W		IC305		*	NJM2732V	BI-POLAR IC	
R830-837			RK73GB2A000J	CHIP R 0.0 J 1/10W		IC306			LMC7101BIM5	MOS-IC	
R840			RK73GB2A000J	CHIP R 0.0 J 1/10W		IC307		*	NJU6368PF1	MOS-IC	
R845			RK73GB2A000J	CHIP R 0.0 J 1/10W		IC308		*	NJM2732V	BI-POLAR IC	
R865			RK73GB2A104J	CHIP R 100K J 1/10W		IC401			LMC7101BIM5	MOS-IC	
R866,867			RK73GB2A000J	CHIP R 0.0 J 1/10W		IC404		*	ADF4001BRUZ	MOS-IC	
R869			RK73GB2A104J	CHIP R 100K J 1/10W		IC405,406		*	TC75S59F-F	MOS-IC	
R870			RK73GB2A101J	CHIP R 100 J 1/10W		IC407		*	NJU6368PF1	MOS-IC	
R871,872			RK73GB2A104J	CHIP R 100K J 1/10W		IC408,409			TA75S01F-F	MOS-IC	
R873			RK73GB2A103J	CHIP R 10K J 1/10W		IC601			AD9835BRUZ	MOS-IC	
R877			RK73GB2A104J	CHIP R 100K J 1/10W		IC602		*	NJU6368PF1	MOS-IC	
R878			RK73GB2A000J	CHIP R 0.0 J 1/10W		IC603			XC6204B332M	MOS-IC	
R879			RK73GB2A104J	CHIP R 100K J 1/10W		IC701			BH2220FVM	ANALOGUE IC	
R881			RK73GB2A000J	CHIP R 0.0 J 1/10W		IC702			S24CS02AFJTBG	ROM IC	
R887-889			RK73GB2A102J	CHIP R 1.0K J 1/10W		IC703			BU4094BCFV	MOS-IC	
R891			RK73GB2A102J	CHIP R 1.0K J 1/10W		IC704			NJM78M08DL1AZB	ANALOGUE IC	
R920-932			RK73GB2A000J	CHIP R 0.0 J 1/10W		IC705,706			NJM78M05DL1AZB	ANALOGUE IC	
R933			RK73GB2A821J	CHIP R 820 J 1/10W		IC801		*	AD1582	ANALOGUE IC	
R934,935			RK73GB2A000J	CHIP R 0.0 J 1/10W		IC802		*	AD5312BRM	MOS-IC	
R936,937			RK73GB2A122J	CHIP R 1.2K J 1/10W		IC803		*	AD7908BRU	MOS-IC	
R938,939			RK73GB2A821J	CHIP R 820 J 1/10W		IC804		*	LM50BIM3/NOPB	MOS-IC	
R940			RK73GB2A122J	CHIP R 1.2K J 1/10W		IC805,806		*	TC7SET126FU-F	MOS-IC	
R941			RK73GB2A821J	CHIP R 820 J 1/10W		IC807			NJM78M05DL1AZB	ANALOGUE IC	
R942			RK73GB2A000J	CHIP R 0.0 J 1/10W		IC808,809	1B		NJM7808FA-ZB	BI-POLAR IC	
R943			RK73GH2A224D	CHIP R 220K D 1/10W		IC920-922		*	TC7SET126FU-F	MOS-IC	
R944,945			RK73GB2A102J	CHIP R 1.0K J 1/10W		IC923-925			BU4094BCFV	MOS-IC	
R946			RK73GB2A103J	CHIP R 10K J 1/10W		IC926		*	NJM2732V	BI-POLAR IC	
R947			RK73GB2A000J	CHIP R 0.0 J 1/10W		IC960-963			BU4094BCFV	MOS-IC	
R948,949			RK73GH2A104D	CHIP R 100K D 1/10W		Q101			SSM3K15TE(F)	FET	
R950			RK73GH2A822D	CHIP R 8.2K D 1/10W		Q102,103			2SK508NV(K52)	FET	
R951			RK73GB2A122J	CHIP R 1.2K J 1/10W		Q104			2SC3356-A(R24)	TRANSISTOR	
R960-965			RK73GB2A000J	CHIP R 0.0 J 1/10W		Q105			2SC4116(BL)F	TRANSISTOR	
R966,967			RK73GB2A681J	CHIP R 680 J 1/10W		Q106			2SC3356-A(R24)	TRANSISTOR	
VR401,402			R32-0754-05	SEMI FIXED VARIABLE RESISTOR		Q107,108			2SC4116(BL)F	TRANSISTOR	
S920-925			S70-0502-05	TACT SWITCH		Q109		*	2SA1832F	TRANSISTOR	
D101,102			1SV283F	VARIABLE CAPACITANCE DIODE		Q110			SSM3K15TE(F)	FET	
D106			1SV278F	VARIABLE CAPACITANCE DIODE		Q201			2SC3356-A(R24)	TRANSISTOR	
D107,108			1SV283F	VARIABLE CAPACITANCE DIODE		Q202		*	2SC5337	TRANSISTOR	
D112			1SV278F	VARIABLE CAPACITANCE DIODE		Q203			RD01MUS1-T113	FET	
D201			HSM88AS-E	DIODE		Q204			SSM3K15TE(F)	FET	
						Q205		*	SSM3J01F	FET	

PARTS LIST

TX UNIT (X56-3120-10)

Ref. No.	Address	New parts	Parts No.	Description	Destination	Ref. No.	Address	New parts	Parts No.	Description	Destination
Q206			SSM3K15TE(F)	FET							
Q210			SSM3K15TE(F)	FET							
Q211-213			2SC4617(R)	TRANSISTOR							
Q301,302			SSM3K15TE(F)	FET							
Q303		*	2SA1832F	TRANSISTOR							
Q304,305			2SC4617(R)	TRANSISTOR							
Q307			2SC4617(R)	TRANSISTOR							
Q401,402			2SC4617(R)	TRANSISTOR							
Q405			SSM3K15TE(F)	FET							
Q407-409			SSM3K15TE(F)	FET							
Q410		*	2SA1832F	TRANSISTOR							
Q412			2SC4617(R)	TRANSISTOR							
Q413,414			SSM3K15TE(F)	FET							
Q415-419			2SC4617(R)	TRANSISTOR							
Q420			3SK317-E	FET							
Q421			SSM6L05FU-F	FET							
Q422			RD01MUS1-T113	FET							
Q423			SSM6L05FU-F	FET							
Q424			SSM3K15TE(F)	FET							
Q425			RD01MUS1-T113	FET							
Q426		*	SSM3J01F	FET							
Q428,429			SSM3K15TE(F)	FET							
Q430,431			3SK317-E	FET							
Q601		*	SSM3J01F	FET							
Q602			SSM3K15TE(F)	FET							
Q603			2SC4617(R)	TRANSISTOR							
Q604			SSM3K15TE(F)	FET							
Q605		*	SSM3J01F	FET							
Q606			2SC4617(R)	TRANSISTOR							
Q607-609			SSM3K15TE(F)	FET							
Q701,702			SSM3K15TE(F)	FET							
Q920-930			UMG1N	TRANSISTOR							
Q931			2SC4116(Y)F	TRANSISTOR							
Q932		*	2SA1586(Y)F	TRANSISTOR							
Q960-976			UMG1N	TRANSISTOR							
TH101,102			157-302-65801	THERMISTOR							