2. EXPLODED VIEWS AND PARTS LIST

*NOTES : • Parts marked by " * " are generally unavailable because they are not in our Master Spare Parts List.*

- *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
- *Screw adjacent to▽mark on the product are used for disassembly.*
- *For the applying amount of lubricants or glue, follow the instructions in this manual. (In the case of no amount instructions,apply as you think it appropriate.)*

2.1 PACKING

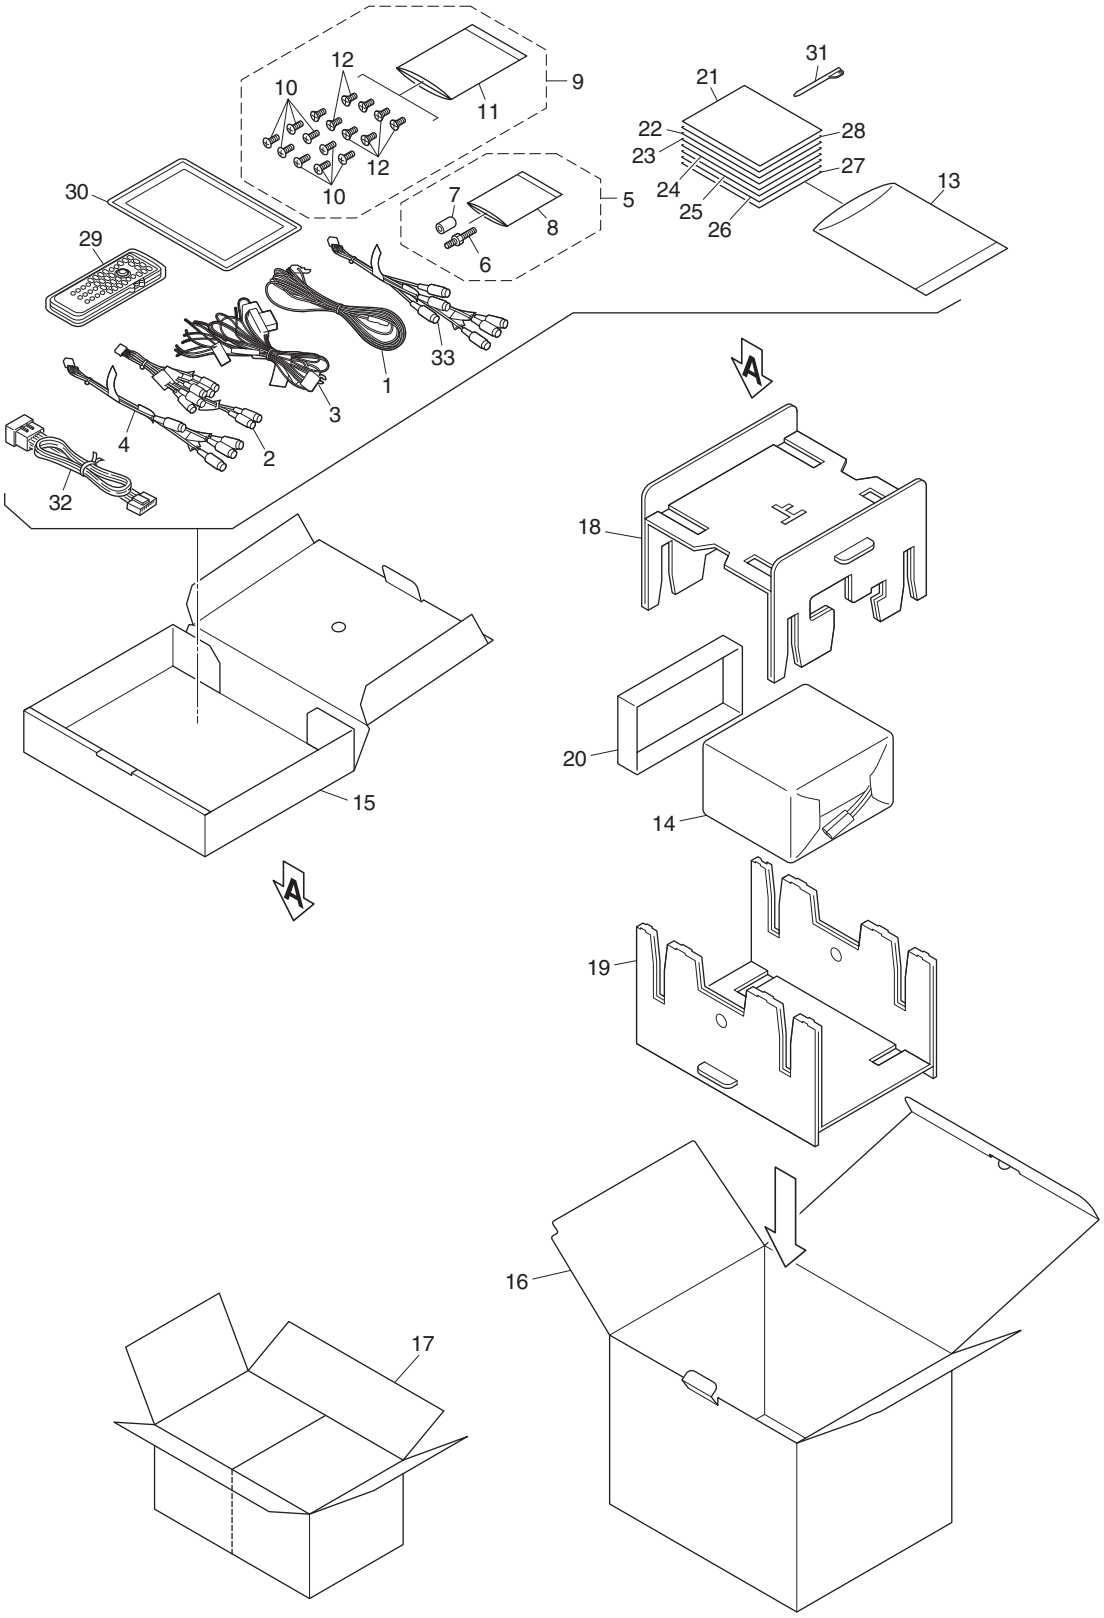

PACKING SECTION PARTS LIST

Mark	No.	Description	AVH-P6800DVD /UC	AVH-P6800DVD /RE	AVH-P6850DVD /RD	AVH-P6850DVD /RC	AVH-P6850DVD /RI
	1	Cord Assy	CDE7321	CDE7321	CDE7321	CDE7321	CDE7321
	2	Cord Assy	CDE7815	CDE7815	CDE7815	CDE7815	CDE7815
	3	Cord Assy	CDE8215	Not used	CDE8215	CDE8215	CDE8215
	4	Cord Assy	CDE8255	Not used	Not used	Not used	Not used
	5	Accessory Assy	CEA3743	CEA3743	CEA3743	CEA3743	CEA3743
	6	Screw	CBA1650	CBA1650	CBA1650	CBA1650	CBA1650
	7	Bush	CNV1917	CNV1917	CNV1917	CNV1917	CNV1917
*	8	Polyethylene Bag	E36-615	E36-615	E36-615	E36-615	E36-615
	9	Screw Assy	CEA3797	CEA3797	CEA3797	CEA3797	CEA3797
	10	Screw	BMZ50P060FTC	BMZ50P060FTC	BMZ50P060FTC	BMZ50P060FTC	BMZ50P060FTC
*	11	Polyethylene Bag	CEG-127	CEG-127	CEG-127	CEG-127	CEG-127
	12	Screw	CMZ50P060FTC	CMZ50P060FTC	CMZ50P060FTC	CMZ50P060FTC	CMZ50P060FTC
	13	Polyethylene Bag	CEG1116	CEG1116	CEG1116	CEG1116	CEG1116
	14	Cover	CEG1177	CEG1074	CEG1074	CEG1074	CEG1074
	15	Sub Carton	CHA3298	CHA3298	CHA3298	CHA3298	CHA3298
	16	Carton	CHG5774	CHG5778	CHG5775	CHG5775	CHG5775
	17	Contain Box	CHL5774	CHL5778	CHL5776	CHL5775	CHL5777
	18	Protector(Upper)	CHP2227	CHP2227	CHP2227	CHP2227	CHP2227
	19	Protector	CHP2272	CHP2272	CHP2272	CHP2272	CHP2272
	20	Protector	CHP3202	CHP3202	CHP3202	CHP3202	CHP3202
	21	Owner's Manual	CRB2171	CRB2213	CRB2163	CRB2163	CRB2163
	22	Owner's Manual	CRB2172	CRB2215	CRB2166	CRB2165	CRB2164
	23	Owner's Manual	Not used	Not used	CRB2167	CRB2273	Not used
	24	Installation Manual	CRD4075	CRD4074	CRD4073	CRD4072	CRD4071
	25	Caution Card	CRP1310	CRP1310	CRP1310	CRP1310	CRP1310
*	26	Warranty Card	CRY1246	CRY1157	Not used	Not used	Not used
*	27	Registration Card	CRY1229	Not used	Not used	Not used	Not used
*	28	Caution Card	CRP1342	CRP1342	CRP1342	CRP1342	CRP1342
	29	Remote Control Unit	CXC6317	CXC6317	CXC6317	CXC6317	CXC6317
	30	Panel	CNS8669	CNS8669	CNS8669	CNS8669	CNS8669
	31	Pen	CNV8969	CNV8969	CNV8969	CNV8969	CNV8969
	32	Cord Assy	Not used	CDE8253	Not used	Not used	Not used
	33	Cord Assy	Not used	CDE8263	CDE8263	CDE8263	CDE8263

Owner's Manual,Installation Manual

Part No.	Language
CRB2171	English
CRB2172	French
CRD4075	English, French
CRB2213	English
CRB2215	Russian
CRD4074	English, Russian
CRB2163	English
CRB2166	Spanish
CRB2167	Portuguese(B)
CRD4073	English, Spanish, Portuguese(B)
CRB2165	Traditional Chinese
CRB2273	Korean
CRD4072	English, Traditional Chinese, Korean
CRB2164	Arabic
CRD4071	English, Arabic

2.2 EXTERIOR (1)

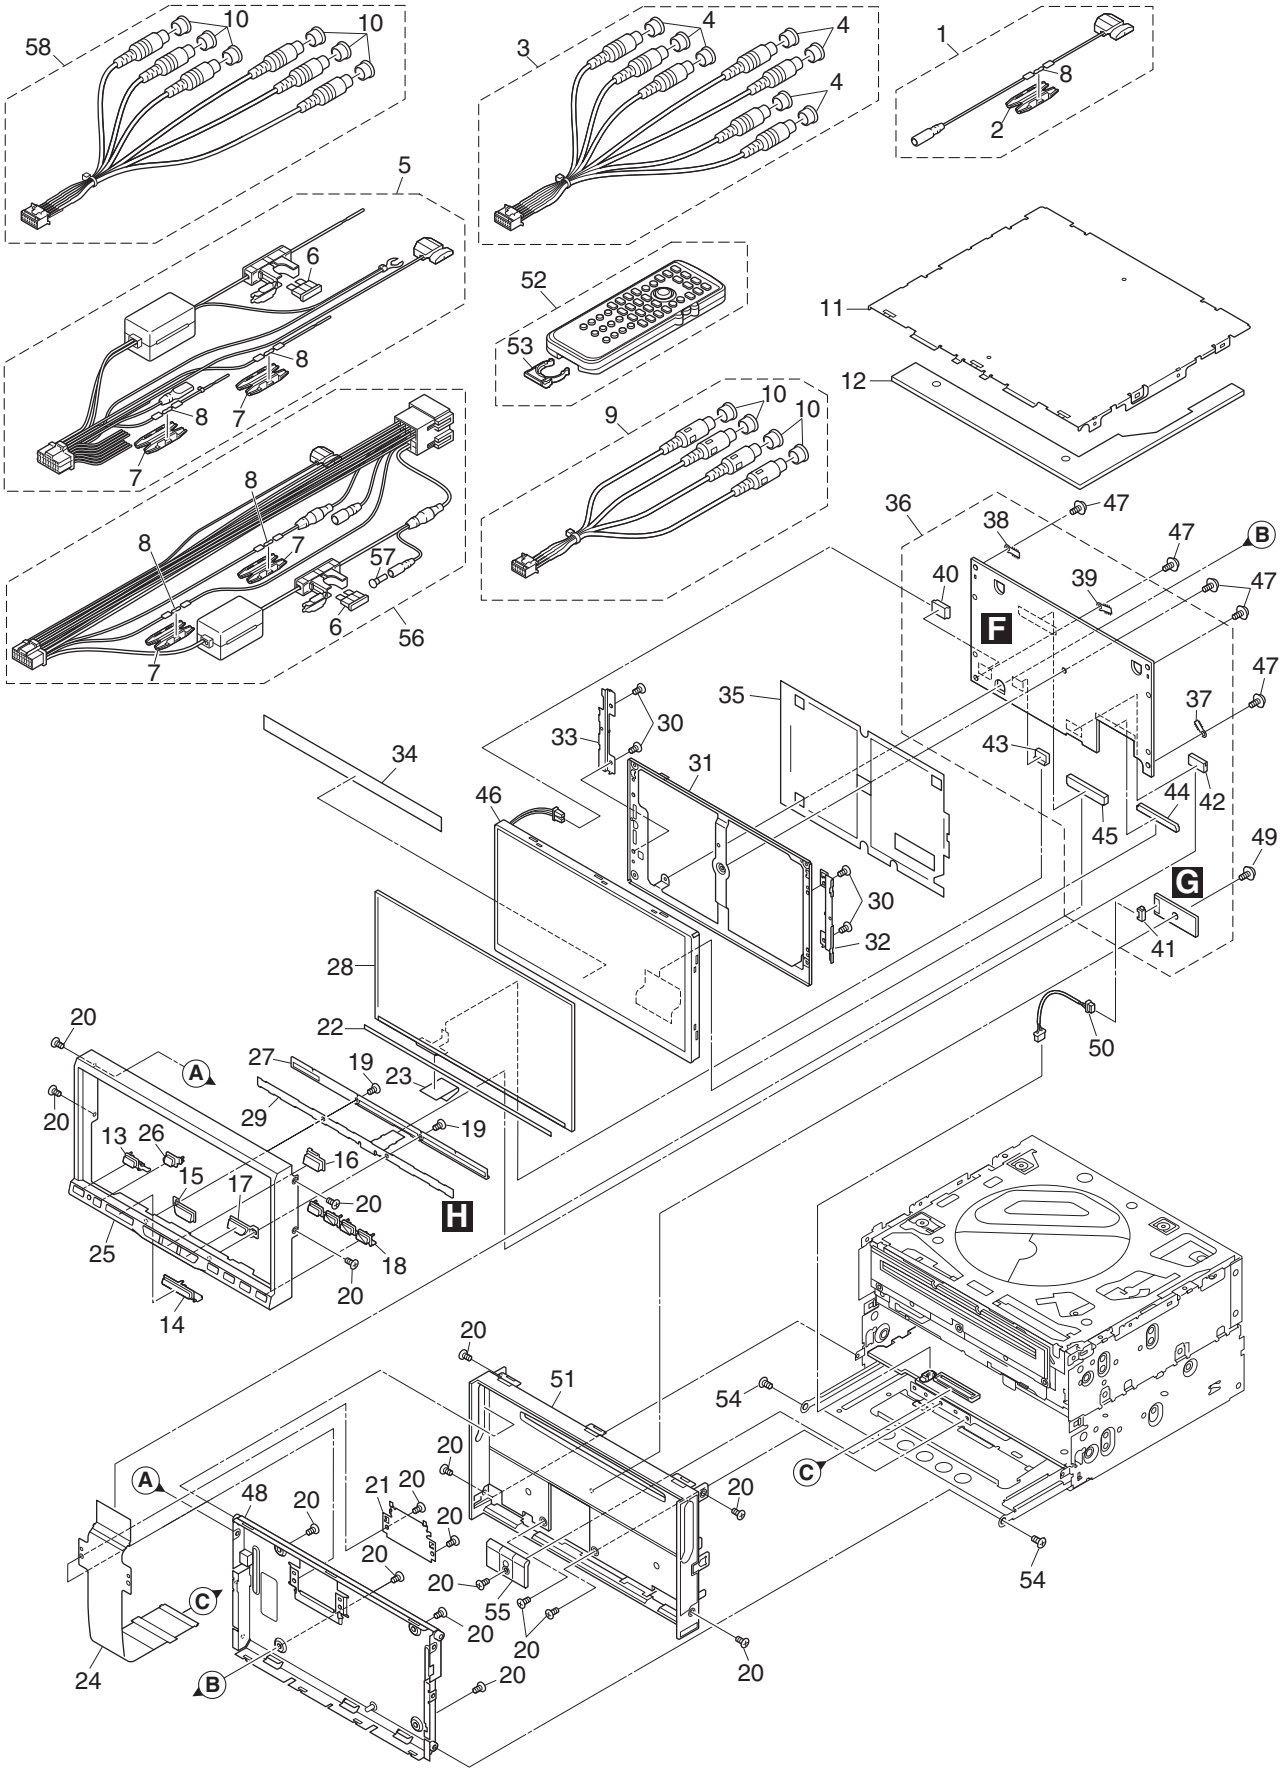

(1) EXTERIOR (1) SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	Cord Assy	CDE7321
	2	Cap	CNS1472
	3	Cord Assy	CDE7815
	4	Cap	CNV6727
	5	Cord Assy	See Contrast table(2)
⚠	6	Fuse(10 A)	CEK1136
	7	Cap	CNS1472
	8	Resistor	RS1/2PMF102J
	9	Cord Assy	See Contrast table(2)
	10	Cap	CNV6727
	11	Case	CNB3278
	12	Cushion	CNN1308
	13	Button(BAND)	CAC9731
	14	Button(TRACK)	CAC9732
	15	Button(VOL-)	CAC9733
	16	Button(SRC)	CAC9734
	17	Button(VOL+)	CAC9735
	18	Button(ENT,WIDE,V.ADJ,OPEN)	CAC9736
	19	Screw(M2 x 5)	CBA1875
	20	Screw(M2 x 3)	CBA1877
	21	Holder	CND3300
	22	Sheet	CNN1102
	23	Sheet	CNN1423
	24	Flexible PCB	CNP9191
	25	Grille	See Contrast table(2)
	26	Plate	CNS8597
	27	Spacer	CNV9123
	28	Touch Panel	CSX1093
	29	Key Unit	CWN1686
	30	Screw(M2 x 2)	CBA1771
	31	Holder	CND3014
	32	Holder	CND3015
	33	Holder	CND3016
	34	Insulator	CNM9811
	35	Insulator	CNN1106
	36	Monitor Unit	CWN1683
	37	Terminal(CN4204)	CKF1064
	38	Terminal(CN4205)	CKF1064
	39	Terminal(CN4206)	CKF1064
	40	Connector(CN4101)	CKS4428
	41	Connector(CN4951)	CKS4979
	42	Connector(CN4202)	CKS5041
	43	Connector(CN4201)	CKS5105
	44	Connector(CN4901)	CKS5111
	45	Connector(CN4203)	CKS5547
	46	LCD Module	CWX3263
	47	Screw	PMB20P040FTC
	48	Case Unit	CXC6260
	49	Screw(M2 x 6)	CBA1951
	50	Cord	CDE8153
	51	Panel Unit	See Contrast table(2)
	52	Remote Control Unit	CXC6317
	53	Cover	CZN7062
	54	Screw(M2 x 2)	CBA1735
	55	Holder	CNV9039
	56	Cord Assy	See Contrast table(2)
	57	Cover	See Contrast table(2)
	58	Cord Assy	See Contrast table(2)

(2) CONTRAST TABLE

AVH-P6800DVD/UC, AVH-P6800DVD/RE, AVH-P6850DVD/RD, AVH-P6850DVD/RC and AVH-P6850DVD/RI are constructed the same except for the following:

Mark	No.	Description	AVH-P6800DVD /UC	AVH-P6800DVD /RE	AVH-P6850DVD /RD	AVH-P6850DVD /RC	AVH-P6850DVD /RI
	5	Cord Assy	CDE8215	Not used	CDE8215	CDE8215	CDE8215
	9	Cord Assy	CDE8255	Not used	Not used	Not used	Not used
	25	Grille	CNS8593	CNS8593	CNS8594	CNS8594	CNS8594
	51	Panel Unit	CXC6258	CXC6261	CXC6259	CXC6259	CXC6259
	56	Cord Assy	Not used	CDE8253	Not used	Not used	Not used
	57	Cover	Not used	CKX-003	Not used	Not used	Not used
	58	Cord Assy	Not used	CDE8263	CDE8263	CDE8263	CDE8263

2.3 EXTERIOR (2)

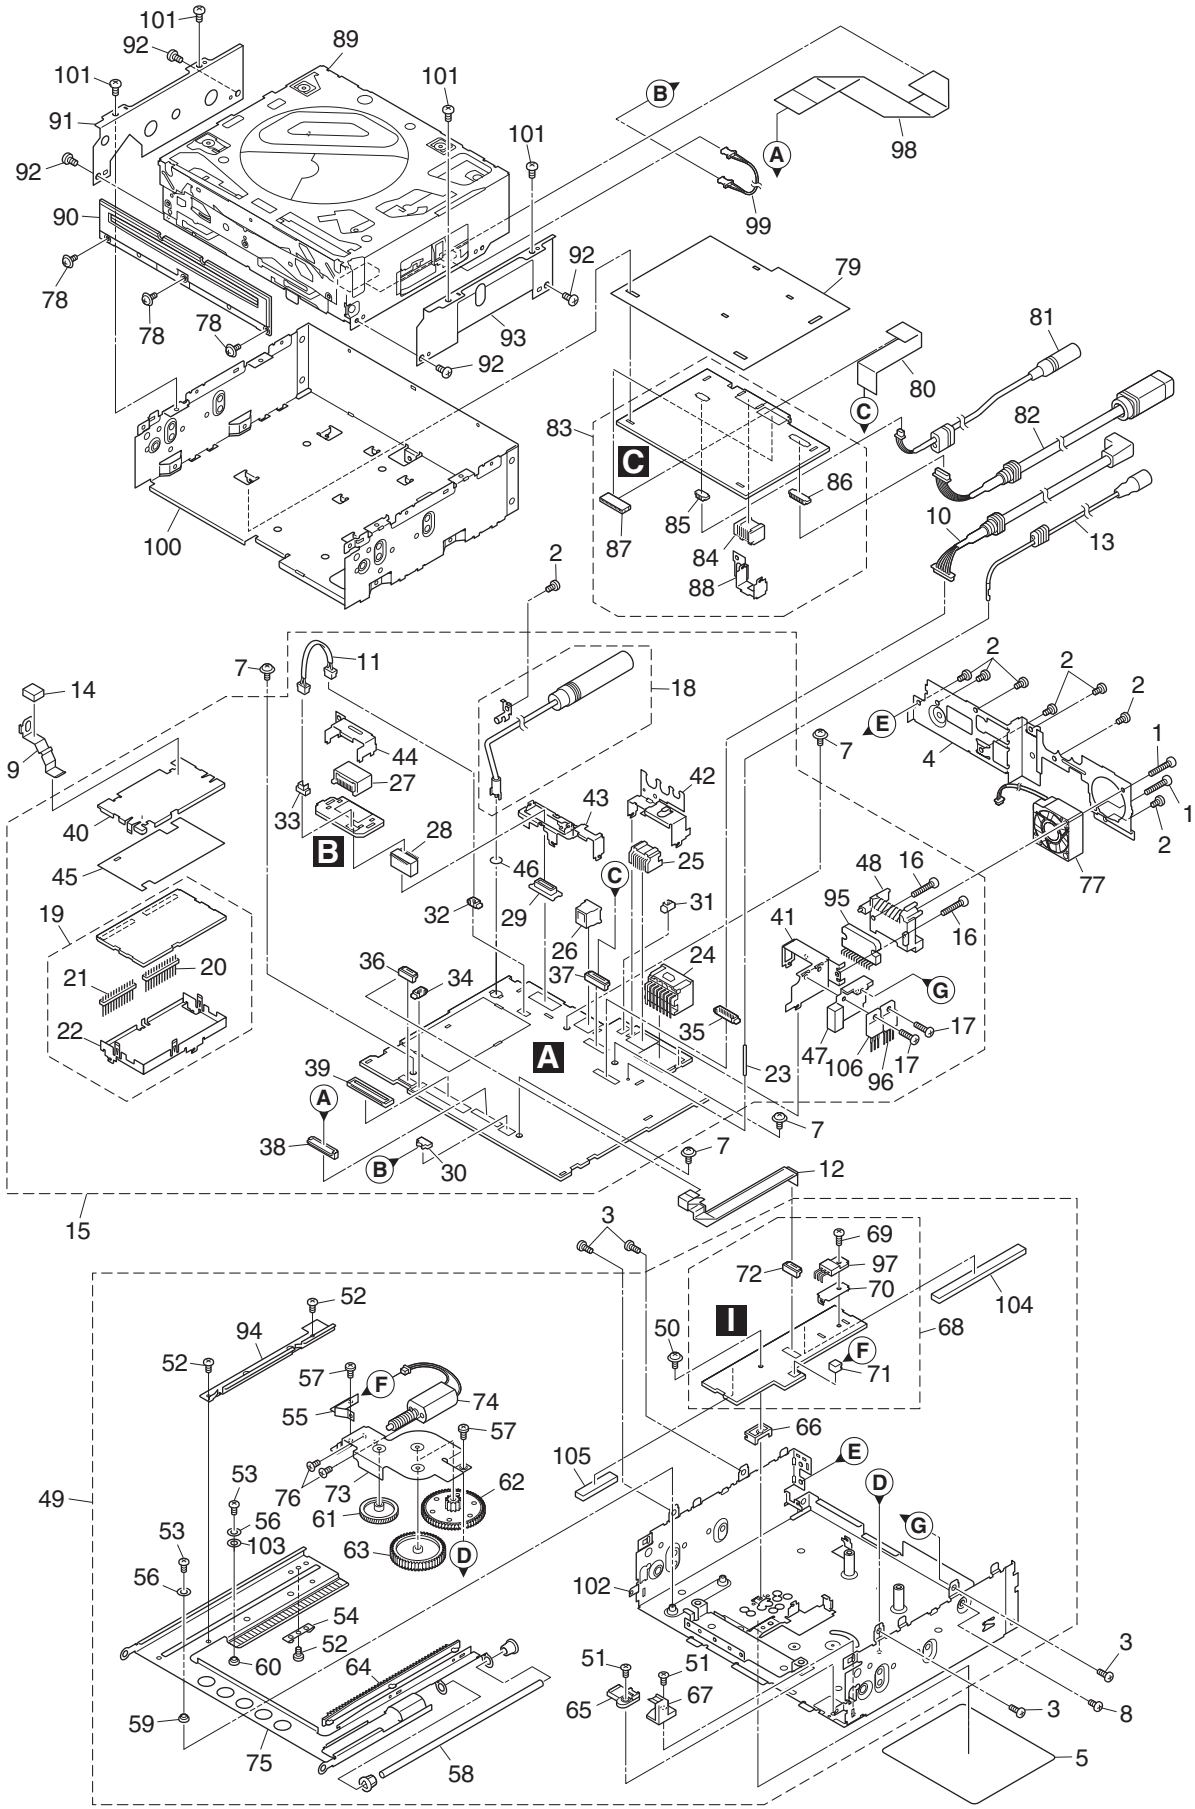

(1) EXTERIOR (2) SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	Screw	BMZ20P160FTC
	2	Screw	BMZ26P040FTC
	3	Screw	BSZ26P050FTC
	4	Panel	CNB3279
	5	Seal	CNN1326
	6	•••••	
	7	Screw	ASZ26P050FTC
	8	Screw	BMZ20P030FTC
	9	Spring	CBL1747
	10	Cord Assy	CDE7176
	11	Cord	CDE7809
	12	Cable	CDE8149
	13	Cord Assy	CDE8154
	14	Cushion	CNN1325
	15	Mother Unit	See Contrast table(2)
	16	Screw	BMZ26P160FTC
	17	Screw	BSZ26P080FTC
	18	Antenna Cable(CN401)	CDH1358
	19	FM/AM Tuner Unit	CWE1651
	20	Connector(CN101)	CKS4653
	21	Connector(CN102)	CKS4653
	22	Holder	CND1432
	23	Terminal(CN732)	CKF-047
	24	Connector(CN702)	CKM1332
	25	Socket(CN261)	CKM1457
	26	Connector(CN382)	CKS2104
	27	Connector(CN951)	CKS4497
	28	Connector(CN104)	CKS4799
	29	Connector(CN161)	CKS4800
	30	Connector(CN381)	CKS4817
	31	Connector(CN481)	CKS4822
	32	Connector(CN162)	CKS4823
	33	Connector(CN952)	CKS4823
	34	Connector(CN771)	CKS4824
	35	Connector(CN141)	CKS4830
	36	Connector(CN471)	CKS5062
	37	Connector(CN441)	CKS5070
	38	Connector(CN351)	CKS5075
	39	Connector(CN101)	CKS5547
	40	Holder	CND1058
	41	Holder	CND2633
	42	Holder	CND3283
	43	Holder	CND3284
	44	Holder	CND3285
	45	Insulator	CNM8453
	46	Spacer	CNM9522
	47	Heat Sink	CNR1703
	48	Heat Sink	CNR1784
	49	Drive Unit	CXC6065
	50	Screw(M2 x 6)	CBA1399
	51	Screw(M2 x 1.5)	CBA1615
	52	Screw(M2 x 2)	CBA1771
	53	Screw(M2 x 2.5)	CBA1881
	54	Spring	CZB3092
	55	Spring	CZB3093
	56	Washer	CZB5004
	57	Screw	CZB5005
	58	Shaft	CZL3010
	59	Roller	CZL3011
	60	Roller	CZL3012
	61	Gear	CZN7011
	62	Gear	CZN7012
	63	Gear	CZN7013
	64	Rack	CZN7014
	65	Holder	CZN7015
	66	Holder	CZN7042
	67	Holder	CZN7043
	68	Main PCB Unit	CZW5026
	69	Screw	BMZ26P050FTC
	70	Heat Sink	CND1228
	71	Connector(CN1)	CZK3071
	72	Connector(CN2)	CZK3075
	73	Bracket Unit	CZX5101
	74	Motor Unit	CZX5102
	75	Frame	CZN7063
	76	Screw	JFZ20P020FTC
	77	Fan Motor	CXM1262
	78	Screw	IMS20P022FTC
	79	Insulator	CNN1085
	80	Cable	CDE8151
	81	Cord Assy	CDE8155
	82	Cord Assy	CDE7449
	83	AV Selector Unit	See Contrast table(2)
	84	Connector(CN2101)	CKM1389
	85	Connector(CN2301)	CKS4978
	86	Connector(CN2401)	CKS4983
	87	Connector(CN2001)	CKS5049
	88	Holder	CND3286
	89	DVD Mechanism Module(Service)(MG4)	CXX2152
	90	Door Unit	CXC6154
	91	Holder	CND3282
	92	Screw	BMZ30P040FTC
	93	Holder	CND3281
*	94	Plate	CZN7065
	95	IC(IC241)	PAL007B
	96	Transistor (Q821)	2SB1708
	97	Transistor (Q1)	2SB1185
	98	Cable	CDE8150
	99	Cable	CDE8152
	100	Chassis	CNA2898
	101	Screw	BSZ26P050FTC
*	102	Chassis Unit	CZX5171
*	103	Washer	CZB5015
*	104	Cushion	CZN7087
*	105	Cushion	CZN7088
	106	Transistor (Q831)	2SD2396

(2) CONTRAST TABLE

AVH-P6800DVD/UC, AVH-P6800DVD/RE, AVH-P6850DVD/RD, AVH-P6850DVD/RC and AVH-P6850DVD/RI are constructed the same except for the following:

Mark	No.	Description	AVH-P6800DVD /UC	AVH-P6800DVD /RE	AVH-P6850DVD /RD	AVH-P6850DVD /RC	AVH-P6850DVD /RI
	15	Mother Unit	CWN1675	CWN1679	CWN1678	CWN1677	CWN1676
	83	AV Selector Unit	CWN1685	CWN1681	CWN1681	CWN1681	CWN1681

2.4 DVD MECHANISM MODULE

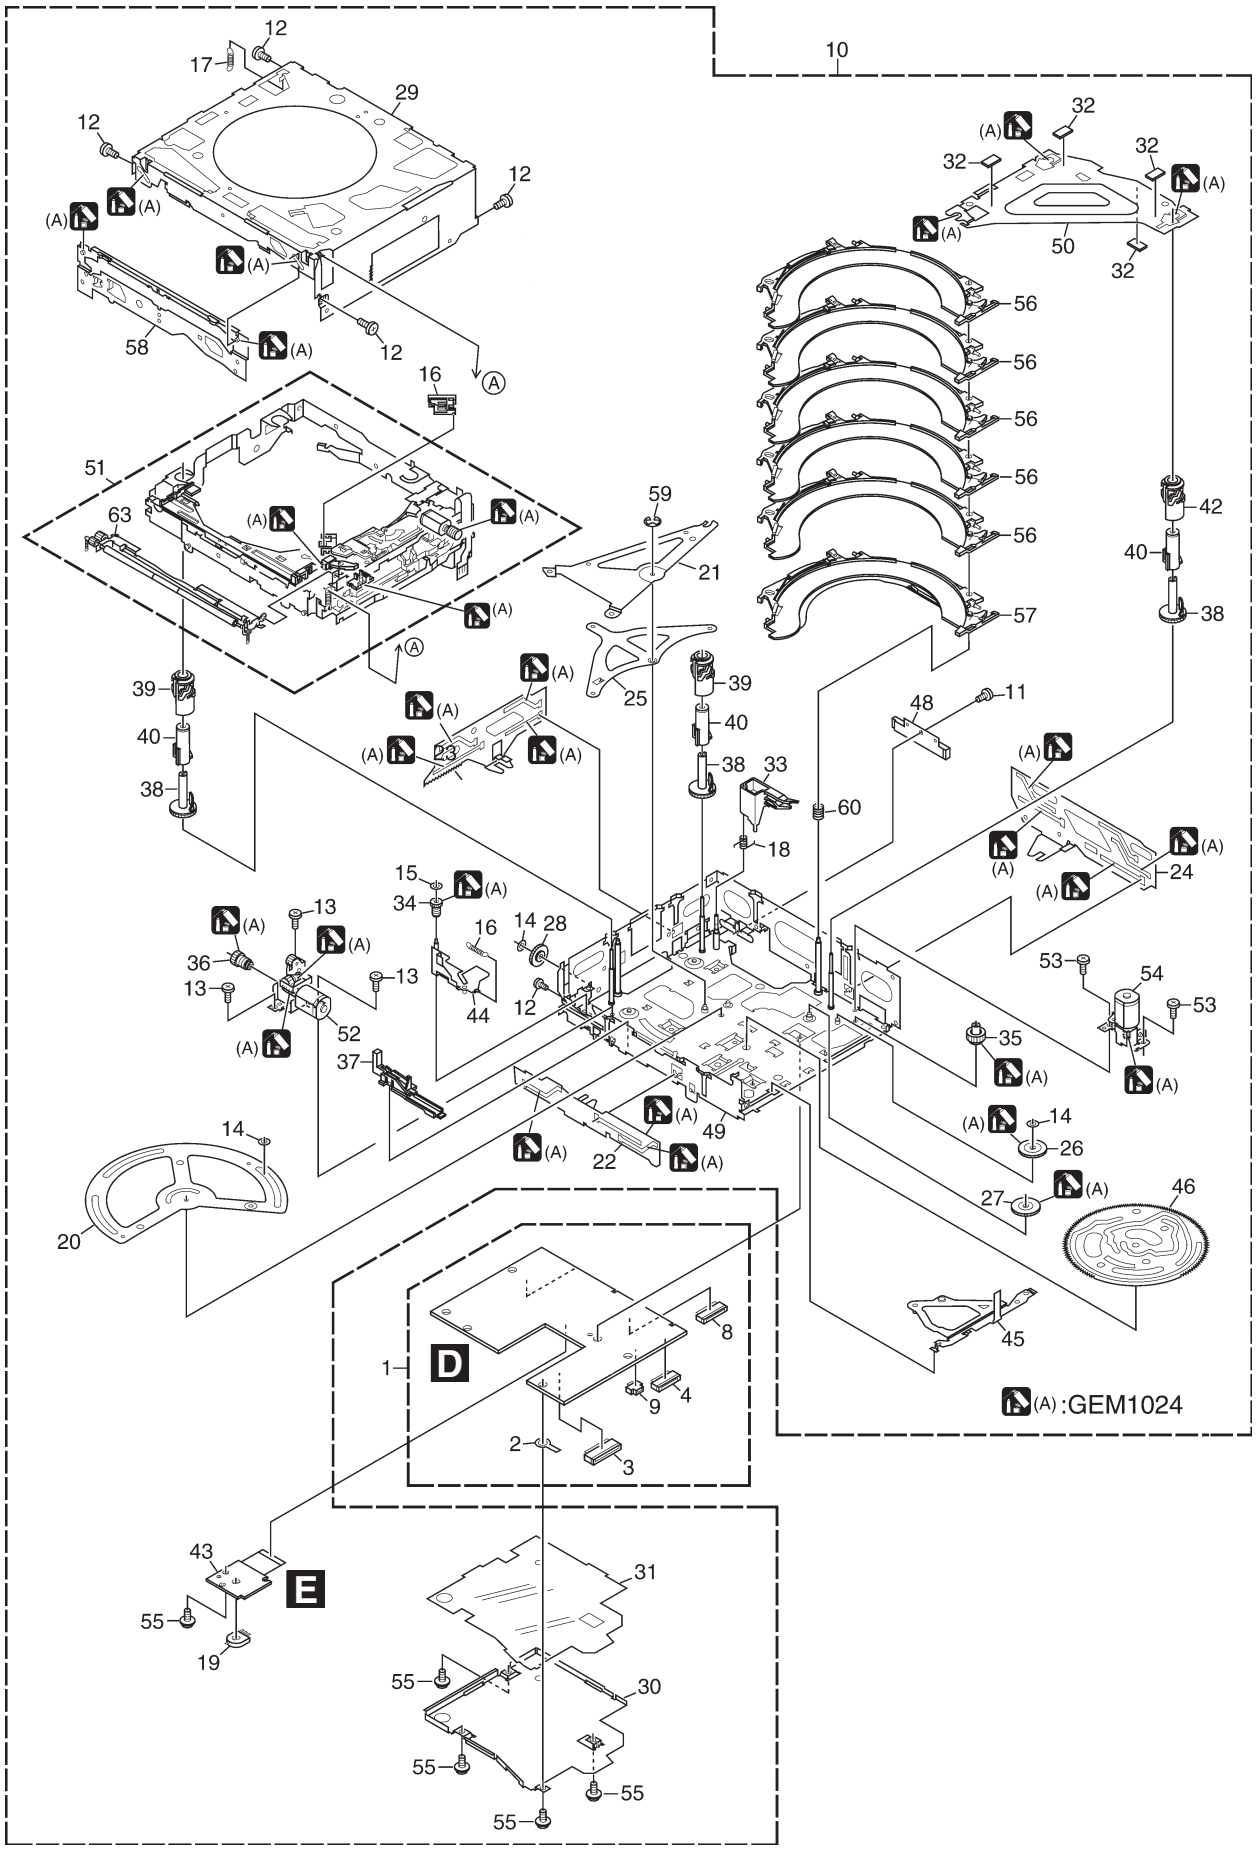

DVD MECHANISM MODULE SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	DVD Core Unit	CWX3333
	2	Terminal(CN1902)	CKF1064
	3	Connector(CN1901)	CKS5054
	4	Connector(CN1201)	CKS4840
	5	•••••	
	6	•••••	
	7	•••••	
	8	Connector(CN1101)	CKS4842
	9	Connector(CN1551)	CKS4817
	10	Mechanism Unit(Service)	CXX2155
	11	Screw	BMZ20P025FTC
	12	Screw(M2 x 2.5)	CBA1623
	13	Screw(M2 x 2.5)	CBA1823
	14	Washer	CBF1064
	15	Washer	CBF1094
	16	Spring	CBH2720
	17	Spring	CBH2731
	18	Spring	CBH2732
	19	Variable Resistor	CCW1029
*	20	Gear	CND1924
*	21	Arm	CND1926
	22	Stair	CND1930
	23	Stair	CND1931
	24	Stair	CND1932
*	25	Arm	CND1933
*	26	Gear	CND1936
*	27	Gear	CND1937
	28	Gear	CND1939
	29	Case	CND3076
	30	Plate	CND3105
	31	Sheet	CNM9680
	32	Sheet	CNM9746
	33	Arm	CNV7850
	34	Gear	CNV8944
	35	Gear	CNV7854
	36	Gear	CNV8945
	37	Holder	CNV7861
	38	Cam	CNV7866
	39	Cam	CNV8778
	40	Cam	CNV7868
	41	Arm	CNV7869
	42	Cam	CNV8779
	43	PCB Assy	CWX2986
*	44	Lever Unit	CXC2392
*	45	Lever Unit	CXC2393
*	46	Cam Gear Unit	CXC2435
	47	•••••	
	48	PCB Assy	CXC3142
*	49	Chassis Unit	CXC6900
	50	Holder Unit	CXC2418
	51	Stage Assy(Service)	CXX2133
	52	ELV Motor Assy(M2)	CXC5910
	53	Screw	JFZ20P020FTC
	54	Cam Motor Assy(M1)	CXC5908
	55	Screw	IMS26P025FTC
	56	Tray Assy	CXC6726
	57	Lower Tray Assy	CXC6787
	58	Shutter Assy	CXC5126
	59	Washer	YE15FTC
	60	Spring	CBH2950
	61	•••••	
	62	•••••	
	63	Load Arm Assy	CXC6681

5. ELECTRICAL PARTS LIST

NOTE:

- *Parts whose parts numbers are omitted are subject to being not supplied.*
- *The part numbers shown below indicate chip components.*

  Chip Resistor

  RS1/◯S◯◯◯J,RS1/◯◯S◯◯◯J

  Chip Capacitor (except for CQS.....)

  CKS....., CCS....., CSZS.....
- *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
- *Meaning of the figures and others in the parentheses in the parts list.*

  Example) IC 301 is on the point (face A, 91 of x-axis, and 111 of y-axis) of the corresponding PC board.

  IC 301 (A, 91, 111) IC NJM2068V

Circuit Symbol and No. **Part No.**

Unit Number : CWN1675(UC)
Unit Number : CWN1679(RE)
Unit Number : CWN1678(RD)
Unit Number : CWN1677(RC)
Unit Number : CWN1676(RI)
Unit Name : Mother Unit
Unit Number : CWN1685(UC)
Unit Name : AV Selector Unit
Unit Number : CWN1681(RE, RD, RC, RI)
Unit Name : AV Selector Unit
Unit Number : CWN1683
Unit Name : Monitor Unit
Unit Number : CWN1686
Unit Name : Key Unit
Unit Number : CZW5026
Unit Name : Main PCB Unit
Unit Number : CWX3333
Unit Name : DVD Core Unit
Unit Number : CWX2986
Unit Name : PCB Assy

Mother Unit
Consists of
Mother PCB
RGB Connector PCB

A B
Unit Number : CWN1675(UC)
Unit Number : CWN1679(RE)

Circuit Symbol and No. **Part No.**

Unit Number : CWN1678(RD)
Unit Number : CWN1677(RC)
Unit Number : CWN1676(RI)
Unit Name : Mother Unit

MISCELLANEOUS

IC 141	(A,120,81) IC	HA12241FP
IC 161	(B,71,39) IC	TC4S81F
IC 171	(B,26,120) IC	NJM2138V
IC 201	(B,83,93) IC	PML009A
IC 241	(A,155,115) IC	PAL007B
IC 301	(A,46,106) IC	NJM4558V
IC 302	(A,56,112) IC	NJM4558V
IC 303	(B,64,98) IC	NJM4580V
IC 331	(B,104,88) IC	PA2028A1
IC 351	(B,91,26) IC	SM5304AV
IC 352	(B,93,35) IC	TC7SET08FUS1
IC 353	(B,91,42) IC	S-80827CNUA-B8M
IC 354	(B,81,36) IC	TC7SET08FUS1
IC 355	(B,103,34) IC	TC74VHC08FTS1
IC 381	(A,53,125) IC	TC7WT125FU
IC 421	(B,70,83) IC	NJM4558MD
IC 451	(B,74,109) IC	NJM2136V
IC 452	(A,86,107) IC	BA7623F
IC 601	(A,87,52) IC	PE5535A
IC 602	(B,65,31) IC	TC7SET08FUS1
IC 651	(B,71,66) IC	S-80841CNUA-B82
IC 652	(A,66,59) IC	TC7SET08FUS1
IC 801	(A,25,27) IC	S-812C50AUA-C3E
IC 821	(A,168,99) IC	NJM2388F84
IC 822	(B,39,44) IC	NJM2391DL1-33
IC 841	(B,120,70) IC	S-812C33AUA-C2N
IC 842	(A,123,56) IC	AN8011S
IC 843	(B,128,39) IC	BA00BC0WFP
IC 901	(A,152,28) IC	BP5451-1
IC 941	(B,139,57) IC	BA00BC0WFP
IC 961	(B,40,27) IC	S-818A35AUC-BGP
Q 121	(B,60,6) Transistor	DTC114EU
Q 122	(B,63,13) Transistor	DTA114EU
Q 123	(B,69,6) Transistor	2SC4081

Circuit Symbol and No.		Part No.
Q 124	(B,65,6) Transistor	2SC4081
Q 125	(B,72,7) Transistor	2SC4081
Q 141	(A,114,102) Transistor	UMF23N
Q 161	(B,82,64) Transistor	2SC4081
Q 171	(A,21,121) Transistor	2SC4081
Q 235	(A,67,73) Transistor	2SC4081
Q 241	(A,132,87) Transistor	DTC124EUA
Q 242	(B,154,100) Transistor	DTC144EU
Q 261	(B,102,110) Transistor	IMH23
Q 262	(B,108,117) Transistor	IMH23
Q 263	(B,96,110) Transistor	IMH23
Q 281	(B,135,87) Transistor	IMD2A
Q 282	(B,135,90) Transistor	2SC4081
Q 291	(B,87,109) Transistor	IMD2A
Q 301	(B,58,106) Transistor	DTC124EUA
Q 302	(B,57,119) Transistor	DTC323TU
Q 303	(B,62,109) Transistor	IMD2A
Q 304	(B,64,105) Transistor	DTC124EUA
Q 351	(A,102,32) Transistor	IMD2A
Q 352	(A,100,28) Transistor	IMH23
Q 381	(B,57,126) Transistor	UMF5N
Q 441	(B,66,52) Transistor	2SC4081
Q 451	(A,69,107) Transistor	2SC4081
Q 481	(A,88,126) Transistor	2SD1760F5
Q 482	(A,83,139) Transistor	DTC144EU
Q 483	(A,83,142) Transistor	DTC144EU
Q 484	(B,83,138) Transistor	UMF5N
Q 601	(B,83,42) Transistor	DTC124EUA
Q 701	(A,108,70) Transistor	2SC4081
Q 711	(A,115,70) Transistor	IMX1
Q 721	(A,109,65) Transistor	DTC114EU
Q 731	(A,130,76) Transistor	2SC4081
Q 741	(B,104,55) Transistor	2SA1576
Q 751	(B,111,56) Transistor	2SA1576
Q 761	(B,149,69) Transistor	DTC114EU
Q 762	(B,132,67) Transistor	2SA1615-ZS1
Q 771	(B,38,9) Transistor	UMF5N
Q 781	(B,50,11) Transistor	2SD1664
Q 782	(B,47,6) Transistor	IMD2A
Q 801	(B,20,23) Transistor	2SB1184F5
Q 802	(A,6,24) Transistor	2SD1767
Q 803	(B,23,7) Transistor	UMF5N
Q 804	(B,23,12) Transistor	UMF5N
Q 821	(A,141,103) Transistor	2SB1708
Q 822	(A,143,106) Transistor	DTC114EU
Q 831	(A,168,91) Transistor	2SD2396
Q 832	(B,151,91) Transistor	IMD2A
Q 833	(A,157,90) Transistor	2SD1767
Q 841	(B,114,25) Transistor	DTC124EUA
Q 842	(B,112,61) Transistor	DTC124EUA
Q 843	(B,121,25) Transistor	2SA1797
Q 844	(B,115,64) Transistor	2SA1797
Q 845	(B,143,76) Transistor	2SB1184F5
Q 846	(A,145,78) Transistor	2SD1767
Q 847	(A,118,44) Transistor	2SJ529S
Q 848	(A,131,47) Transistor	2SD1767
Q 849	(B,117,49) Transistor	DTC124EUA
Q 901	(A,142,31) Transistor	2SJ529S
Q 902	(A,142,21) Transistor	2SJ529S
Q 931	(B,129,8) Transistor	2SA1834F5
Q 932	(B,132,18) Transistor	DTC124EUA
D 121	(B,69,10) Diode	1SS355
D 122	(B,64,10) Diode	1SS355
D 161	(B,69,43) Diode Network	DA204U
D 162	(B,65,46) Diode Network	DA204U
D 163	(B,72,113) Diode	UDZS5R6(B)
D 164	(B,69,112) Diode	UDZS5R6(B)
D 165	(B,40,105) Diode	UDZS5R6(B)
D 166	(B,35,106) Diode	HZU2R7(B1)
D 167	(B,35,104) Diode	HZU2R7(B1)
D 168	(B,42,123) Diode	HZU2R7(B1)
D 169	(B,48,123) Diode	HZU2R7(B1)
D 170	(A,45,129) Diode	HZU2R7(B1)
D 171	(A,49,129) Diode	HZU2R7(B1)
D 172	(B,31,106) Diode	HZU2R7(B1)
D 173	(B,31,104) Diode	HZU2R7(B1)
D 174	(B,44,125) Diode	HZU2R7(B1)
D 175	(B,51,125) Diode	HZU2R7(B1)
D 176	(B,74,117) Diode	UDZS5R6(B)
D 177	(B,75,114) Diode	UDZS5R6(B)
D 241	(B,145,89) Diode	DAN202U
D 261	(B,101,106) Diode	DAP202K
D 262	(B,114,106) Diode	DAP202K
D 263	(B,96,106) Diode	DAP202K
D 281	(A,139,99) Diode	RSX201L-30
D 282	(B,145,85) Diode	DAN202U
D 283	(B,128,90) Diode	UDZS8R2(B)
D 284	(B,151,98) Diode	1SS355
D 291	(B,86,106) Diode	DAN202U
D 351	(A,104,28) Diode	DAP202K
D 352	(B,85,40) Diode	1SS355
D 421	(A,69,82) Diode	UDZS3R9(B)
D 481	(A,92,140) Diode	HZU9R1(B2)
D 482	(A,88,140) Diode	HZU6R8(B2)
D 483	(A,88,142) Diode	HZU8R2(B2)
D 651	(B,65,65) Diode	1SS355
D 701	(A,104,125) Diode	5KP24A
D 702	(A,120,107) Diode	HZU7L(C3)
D 711	(A,126,106) Diode	HZU7L(A1)
D 721	(A,116,66) Diode	1SS355
D 731	(A,138,77) Diode	UDZS6R8(B)
D 741	(B,101,56) Diode	DAN202U
D 751	(B,111,52) Diode	DAN202U
D 761	(A,70,33) Diode	RSX201L-30
D 781	(B,46,10) Diode	HZU10(B1)
D 791	(B,126,141) Diode	S1G-6904G2P
D 792	(B,121,139) Diode	S1G-6904G2P
D 801	(A,9,18) Diode	UDZS18(B)
D 802	(A,10,29) Diode	1SR154-400
D 821	(B,32,35) Diode	1SR154-400
D 822	(B,37,34) Diode	1SR154-400
D 823	(B,43,36) Diode	1SR154-400
D 831	(B,152,86) Diode	HZU9R1(B3)
D 832	(A,161,87) Diode	UDZS5R6(B)
D 841	(A,118,38) Diode	RSX201L-30
D 842	(A,141,76) Diode	UDZS18(B)
D 843	(A,125,49) Diode	MA111
D 844	(A,166,69) Diode	RSX201L-30
D 845	(A,168,43) Diode	RSX201L-30
D 901	(B,141,35) Diode	RSX201L-30

Circuit Symbol and No.		Part No.
D 902	(B,140,24) Diode	RSX201L-30
D 903	(A,163,8) Diode	RSX201L-30
D 904	(A,163,4) Diode	RSX201L-30
D 905	(B,141,39) Diode	RSX201L-30
D 961	(B,48,26) Diode	RB060L-40
ZNR401	(A,5,101) Surge Protector	RCCA-201Q31UA-PI
L 101	(A,63,21) Inductor	CTF1395
L 102	(B,62,22) Inductor	CTF1395
L 103	(A,68,20) Inductor	CTF1306
L 104	(B,67,16) Inductor	CTF1306
L 141	(A,120,74) Inductor	LCTAW2R2J2520
L 171	(A,23,112) Chip Ferrite Bead	CTF1399
L 201	(A,85,86) Inductor	LCTAW2R2J2520
L 301	(A,50,110) Chip Ferrite Bead	CTF1399
L 302	(A,54,116) Chip Ferrite Bead	CTF1399
L 303	(B,69,99) Chip Ferrite Bead	CTF1399
L 331	(A,102,76) Inductor	LCTAW101J2520
L 352	(A,91,21) Inductor	CTF1473
L 353	(A,88,21) Inductor	CTF1473
L 354	(A,95,10) Chip Ferrite Bead	CTF1399
L 355	(B,87,29) Chip Ferrite Bead	CTF1399
L 356	(B,85,36) Inductor	CTF1305
L 357	(B,107,30) Inductor	CTF1305
L 381	(A,56,120) Inductor	CTF1378
L 401	(A,8,104) Chip Coil	LCTAW4R7J2520
L 402	(A,53,52) Chip Coil	LCTAW1R0J2520
L 403	(A,52,85) Chip Coil	LCTAW1R0J2520
L 404	(B,21,62) Inductor	CTF1473
L 405	(B,29,26) Inductor	CTF1473
L 421	(B,73,78) Chip Ferrite Bead	CTF1399
L 451	(A,105,101) Inductor	LCTAW150J2520
L 452	(B,82,107) Chip Ferrite Bead	CTF1399
L 453	(A,109,117) Inductor	CTF1383
L 601	(A,71,61) Inductor	CTF1473
L 602	(B,76,43) Inductor	LCTAW2R2J2520
L 603	(B,68,28) Inductor	CTF1305
L 731	(A,129,96) Inductor	CTF1295
L 741	(A,105,63) Inductor	LCTAW2R2J2520
L 751	(A,109,58) Inductor	LCTAW2R2J2520
L 761	(A,146,69) Inductor	CTH1262
L 762	(A,77,27) Coil	CTH1267
L 811	(B,19,7) Inductor	CTF1306
L 841	(A,114,32) Coil	CTH1295
L 842	(A,162,58) Coil	CTH1295
L 843	(A,133,60) Chip Coil	LCTAW100J2520
L 901	(A,142,43) Coil	CTH1303
L 902	(A,142,13) Coil	CTH1303
L 903	(A,161,26) Inductor	CTH1254
L 961	(B,35,30) Inductor	CTF1383
X 601	(A,80,35) Crystal Resonator	18.874 MHz CSS1622
VR841	(A,115,52) Semi-fixed 10 kΩ(B)	CCP1396
⚠FU101	(A,72,20) Fuse 1.25 A	CEK1281
⚠FU161	(A,20,108) Fuse 3 A	CEK1286
⚠FU162	(A,20,107) Fuse 3 A	CEK1286
⚠FU261	(A,97,129) Fuse 3 A	CEK1286
⚠FU351	(A,127,12) Fuse 3 A	CEK1286
⚠FU352	(A,101,8) Fuse 3 A	CEK1286
⚠FU353	(A,101,6) Fuse 3 A	CEK1286
⚠FU441	(A,82,113) Fuse 750 mA	CEK1279
⚠FU442	(A,82,122) Fuse 750 mA	CEK1279
⚠FU471	(A,42,15) Fuse 2 A	CEK1284
⚠FU481	(A,87,138) Fuse 1 A	CEK1280
⚠FU701	(B,126,134) Fuse 3 A	CEK1286
⚠FU762	(A,141,62) Fuse 1.75 A	CEK1283
⚠FU841	(A,121,29) Fuse 1.25 A	CEK1281
⚠FU842	(B,124,27) Fuse 750 mA	CEK1279
⚠FU843	(A,168,51) Fuse 3 A	CEK1286
⚠FU844	(B,27,21) Fuse 750 mA	CEK1279
⚠FU901	(A,157,6) Fuse 4 A	CEK1288
Y 401	(A,8,98) FM/AM Tuner Unit	CWE1651
BZ601	(A,22,10) Buzzer	CPV1063

RESISTORS

R 101	(A,80,21)	RS1/16S101J
R 102	(A,75,21)	RS1/16S101J
R 103	(A,77,21)	RS1/16S101J
R 104	(A,78,21)	RS1/16S101J
R 105	(A,58,22)	RS1/16S0R0J
R 106	(A,56,25)	RS1/16S101J
R 107	(B,60,14)	RS1/16S101J
R 109	(A,60,22)	RS1/16S0R0J
R 110	(B,60,21)	RS1/16S0R0J
R 121	(B,62,10)	RS1/16S103J
R 122	(B,62,9)	RS1/16S223J
R 123	(B,63,7)	RS1/16S473J
R 124	(B,68,10)	RS1/16S472J
R 125	(B,66,10)	RS1/16S472J
R 126	(B,75,7)	RS1/16S473J
R 127	(B,73,10)	RS1/16S473J
R 141	(A,121,91)	RS1/16S150J
R 142	(A,118,91)	RS1/16S470J
R 143	(A,121,89)	RS1/16S101J
R 144	(A,118,89)	RS1/16S101J
R 145	(A,113,100)	RS1/16S222J
R 146	(A,117,107)	RS1/16S332J
R 147	(A,116,105)	RS1/16S562J
R 148	(A,117,76)	RS1/16S102J
R 149	(A,77,82)	RS1/16S181J
R 150	(A,87,73)	RS1/16S181J
R 151	(A,77,84)	RS1/16S223J
R 152	(A,87,75)	RS1/16S223J
R 153	(A,77,85)	RS1/16S102J
R 154	(A,86,77)	RS1/16S102J
R 161	(A,32,116)	RS1/16S681J
R 162	(B,70,50)	RS1/16S473J
R 163	(A,32,130)	RS1/16S681J
R 164	(B,79,63)	RS1/16S473J
R 165	(B,82,66)	RS1/16S473J
R 166	(B,77,66)	RS1/16S473J
R 171	(B,31,125)	RS1/16S472J
R 172	(B,32,119)	RS1/16S472J
R 173	(B,31,114)	RS1/16S472J
R 174	(B,32,121)	RS1/16S472J
R 175	(B,32,131)	RS1/16S472J
R 176	(B,32,108)	RS1/16S472J
R 177	(B,34,113)	RS1/16S472J
R 178	(B,34,114)	RS1/16S472J
R 179	(B,34,127)	RS1/16S472J
R 180	(B,34,125)	RS1/16S472J

Circuit Symbol and No.		Part No.	Circuit Symbol and No.		Part No.
R 181	(B,25,112)	RS1/16S472J	R 282	(B,151,100)	RS1/16S103J
R 182	(B,32,123)	RS1/16S472J	R 283	(B,132,89)	RS1/16S104J
R 183	(B,32,129)	RS1/16S472J	R 284	(B,151,96)	RS1/16S101J
R 184	(B,32,116)	RS1/16S472J	R 285	(B,132,91)	RS1/16S473J
R 185	(B,32,111)	RS1/16S472J	R 287	(B,111,116)	RS1/16S0R0J
R 186	(B,25,128)	RS1/16S472J	R 288	(B,107,115)	RS1/16S0R0J
R 187	(B,37,113)	RS1/16S750J	R 291	(B,88,115)	RS1/16S222J
R 188	(A,20,124)	RS1/16S102J	R 301	(A,42,111)	RS1/16S473J
R 189	(B,37,114)	RS1/16S750J	R 302	(A,46,113)	RS1/16S101J
R 190	(B,37,127)	RS1/16S750J	R 303	(A,45,110)	RS1/16S473J
R 191	(B,37,125)	RS1/16S750J	R 304	(B,43,104)	RS1/16S473J
R 192	(A,23,122)	RS1/16S272J	R 305	(B,57,109)	RS1/16S103J
R 193	(A,23,124)	RS1/16S472J	R 306	(B,43,105)	RS1/16S472J
R 194	(A,38,130)	RS1/16S750J	R 307	(B,46,109)	RS1/16S472J
R 201	(B,81,83)	RS1/16S0R0J	R 308	(B,54,109)	RS1/16S103J
R 202	(B,86,83)	RS1/16S0R0J	R 309	(A,59,107)	RS1/16S104J
R 203	(B,74,90)	RS1/16S0R0J	R 310	(B,48,107)	RS1/16S473J
R 204	(B,92,89)	RS1/16S0R0J	R 311	(B,51,107)	RS1/16S473J
R 205	(B,77,103)	RS1/16S0R0J	R 312	(B,58,104)	RS1/16S102J
R 206	(B,93,99)	RS1/16S0R0J	R 313	(B,56,116)	RS1/16S473J
R 207	(B,75,99)	RS1/16S0R0J	R 314	(B,61,106)	RS1/16S473J
R 208	(B,91,99)	RS1/16S0R0J	R 315	(B,57,114)	RS1/16S821J
R 209	(B,74,99)	RS1/16S0R0J	R 316	(A,64,98)	RS1/16S103J
R 210	(B,89,103)	RS1/16S0R0J	R 317	(A,64,97)	RS1/16S103J
R 211	(A,70,95)	RAB4C102J	R 318	(A,66,98)	RS1/16S103J
R 235	(A,70,73)	RS1/16S224J	R 319	(A,66,101)	RS1/16S103J
R 236	(A,70,72)	RS1/16S224J	R 320	(A,64,95)	RS1/16S103J
R 237	(A,70,75)	RS1/16S104J	R 321	(B,67,102)	RS1/16S103J
R 238	(A,64,74)	RS1/16S102J	R 322	(B,67,95)	RS1/16S103J
R 239	(A,61,72)	RS1/16S103J	R 323	(A,64,101)	RS1/16S103J
R 240	(A,61,74)	RS1/16S682J	R 331	(B,97,88)	RS1/16S223J
R 241	(B,142,95)	RS1/16S0R0J	R 351	(B,94,15)	RS1/16S102J
R 242	(B,148,94)	RS1/16S0R0J	R 353	(A,90,20)	RS1/16S0R0J
R 243	(B,139,96)	RS1/16S0R0J	R 354	(A,98,31)	RS1/16S101J
R 244	(B,146,94)	RS1/16S0R0J	R 358	(B,83,26)	RS1/16S332J
R 246	(A,131,81)	RS1/16S103J	R 359	(B,90,37)	RS1/16S102J
R 248	(A,132,83)	RS1/16S103J	R 360	(B,90,15)	RS1/16S102J
R 251	(A,133,82)	RS1/16S221J	R 361	(A,94,8)	RS1/16S104J
R 252	(A,137,109)	RS1/16S103J	R 363	(B,87,40)	RS1/16S104J
R 253	(A,140,109)	RS1/16S473J	R 365	(A,86,29)	RS1/16S101J
R 254	(B,159,97)	RS1/16S101J	R 366	(A,83,29)	RS1/16S102J
R 261	(B,110,102)	RS1/16S820J	R 367	(B,88,15)	RS1/16S102J
R 262	(B,118,101)	RS1/16S820J	R 368	(A,91,8)	RS1/16S102J
R 263	(B,103,112)	RS1/16S223J	R 369	(A,96,21)	RS1/16S102J
R 264	(B,101,117)	RS1/16S223J	R 370	(A,94,21)	RS1/16S102J
R 265	(B,101,113)	RS1/16S471J	R 371	(B,93,15)	RS1/16S102J
R 266	(B,103,116)	RS1/16S471J	R 372	(B,91,15)	RS1/16S102J
R 267	(B,120,105)	RS1/16S820J	R 373	(B,99,26)	RS1/16S102J
R 268	(B,110,104)	RS1/16S820J	R 374	(B,91,21)	RS1/16S102J
R 269	(B,120,104)	RS1/16S223J	R 375	(B,87,34)	RS1/16S473J
R 270	(B,107,104)	RS1/16S223J	R 381	(A,62,129)	RS1/16S221J
R 271	(B,118,104)	RS1/16S471J	R 382	(A,59,127)	RS1/16S151J
R 272	(B,107,103)	RS1/16S471J	R 383	(A,57,126)	RS1/16S471J
R 273	(B,114,100)	RS1/16S820J	R 384	(A,57,125)	RS1/16S473J
R 274	(B,120,99)	RS1/16S820J	R 385	(A,54,121)	RS1/16S104J
R 275	(B,97,112)	RS1/16S223J	R 386	(A,58,129)	RS1/16S181J
R 276	(B,95,117)	RS1/16S223J	R 387	(A,55,129)	RS1/16S151J
R 277	(B,95,113)	RS1/16S471J	R 388	(B,59,124)	RS1/16S103J
R 278	(B,97,116)	RS1/16S471J	R 389	(B,58,124)	RS1/16S332J
R 281	(A,131,89)	RS1/16S222J	R 401	(B,21,57)	RS1/16S681J

Circuit Symbol and No.		Part No.
R 402	(B,18,79)	RS1/16S681J
R 403	(B,18,81)	RS1/16S681J
R 404	(B,18,82)	RS1/16S681J
R 405	(B,18,84)	RS1/16S681J
R 406	(B,18,78)	RS1/16S681J
R 408	(B,46,62)	RS1/16S0R0J
R 423	(A,65,86)	RS1/16S103J
R 424	(A,68,78)	RS1/16S103J
R 425	(B,70,88)	RS1/16S103J
R 426	(B,71,77)	RS1/16S103J
R 427	(B,63,78)	RS1/16S103J
R 428	(B,64,78)	RS1/16S103J
R 429	(B,64,84)	RS1/16S103J
R 430	(B,64,81)	RS1/16S103J
R 431	(A,71,82)	RS1/16S681J
R 441	(A,97,112)	RS1/16S473J
R 442	(B,64,52)	RS1/16S473J
R 443	(B,70,52)	RS1/16S473J
R 451	(A,75,113)	RS1/16S472J
R 452	(A,78,113)	RS1/16S472J
R 453	(B,69,109)	RS1/16S472J
R 454	(B,77,112)	RS1/16S472J
R 455	(A,72,113)	RS1/16S102J
R 456	(B,68,107)	RS1/16S101J
R 457	(A,69,110)	RS1/16S272J
R 458	(A,70,112)	RS1/16S392J
R 460	(B,70,105)	RS1/16S101J
R 461	(A,107,117)	RS1/16S560J
R 462	(A,108,115)	RS1/16S150J
R 463	(A,81,105)	RS1/16S473J
R 466	(A,81,109)	RS1/16S333J
R 481	(B,88,132)	RS1/16S271J
R 482	(B,88,135)	RS1/16S271J
R 483	(B,88,137)	RS1/16S271J
R 484	(B,86,137)	RS1/16S103J
R 485	(B,85,135)	RS1/16S103J
R 601	(B,92,68)	RS1/16S473J
R 602	(B,86,68)	RS1/16S104J
R 603	(B,86,67)	RS1/16S104J
R 605	(A,87,70)	RS1/16S473J
R 606	(A,100,66) (RE, RD, RC)	RS1/16S473J
R 607	(A,100,68) (RE, RD, RI)	RS1/16S473J
R 608	(A,96,67)	RS1/16S473J
R 609	(A,94,67)	RS1/16S102J
R 610	(A,95,69)	RS1/16S102J
R 611	(A,90,70)	RS1/16S102J
R 612	(A,102,57)	RS1/16S104J
R 613	(A,98,66) (UC, RE, RI)	RS1/16S473J
R 614	(A,98,69) (UC, RC)	RS1/16S473J
R 615	(B,88,63)	RAB4C101J
R 616	(B,79,56)	RS1/16S473J
R 617	(A,69,60)	RS1/16S102J
R 618	(A,69,58)	RS1/16S0R0J
R 619	(B,90,58)	RS1/16S221J
R 620	(B,96,62)	RS1/16S681J
R 621	(A,68,56)	RS1/16S221J
R 622	(A,72,56)	RS1/16S0R0J
R 623	(A,72,55)	RS1/16S0R0J
R 624	(A,74,69)	RS1/16S221J
R 625	(B,98,53)	RS1/16S473J

Circuit Symbol and No.		Part No.
R 626	(A,71,53)	RS1/16S102J
R 627	(A,69,52)	RS1/16S102J
R 628	(B,74,55)	RS1/16S473J
R 629	(B,74,54)	RS1/16S473J
R 630	(A,102,51)	RS1/16S104J
R 631	(B,79,50)	RS1/16S473J
R 632	(B,65,49)	RS1/16S473J
R 633	(B,113,58)	RS1/16S473J
R 634	(A,72,49)	RAB4C102J
R 635	(B,74,45)	RS1/16S473J
R 636	(B,91,54)	RS1/16S681J
R 637	(B,91,53)	RS1/16S681J
R 638	(B,101,48)	RS1/16S104J
R 639	(A,103,40)	RAB4C681J
R 640	(B,73,49)	RS1/16S102J
R 641	(B,77,49)	RS1/16S104J
R 642	(B,103,40)	RS1/16S473J
R 643	(A,84,36)	RS1/16S221J
R 644	(B,88,49)	RS1/16S681J
R 645	(B,88,48)	RS1/16S681J
R 646	(B,68,30)	RS1/16S102J
R 649	(A,99,37)	RS1/16S102J
R 650	(A,87,34)	RS1/16S102J
R 651	(A,86,37)	RS1/16S102J
R 652	(B,94,49)	RS1/16S104J
R 653	(B,86,46)	RS1/16S472J
R 654	(B,85,43)	RS1/16S473J
R 655	(A,81,78)	RS1/16S472J
R 656	(A,79,78)	RS1/16S472J
R 657	(B,67,62)	RS1/16S102J
R 659	(B,67,65)	RS1/16S104J
R 660	(A,98,37)	RS1/16S471J
R 661	(A,74,78)	RS1/16S103J
R 662	(A,79,68)	RS1/16S221J
R 664	(B,85,62)	RS1/16S473J
R 666	(A,84,64)	RS1/16S102J
R 701	(A,106,67)	RS1/16S473J
R 702	(A,120,102)	RS1/16S104J
R 703	(A,120,103)	RS1/16S473J
R 711	(A,123,102)	RS1/16S103J
R 712	(A,123,104)	RS1/16S473J
R 713	(A,122,105)	RS1/16S472J
R 721	(A,113,66)	RS1/16S103J
R 731	(A,120,65)	RS1/16S473J
R 732	(A,133,76)	RS1/16S103J
R 733	(A,135,77)	RS1/16S103J
R 734	(A,135,78)	RS1/16S103J
R 741	(B,104,52)	RS1/16S102J
R 742	(B,106,53)	RS1/16S473J
R 743	(B,106,56)	RS1/16S473J
R 744	(A,105,61)	RS1/16S103J
R 751	(B,113,53)	RS1/16S102J
R 752	(B,108,56)	RS1/16S472J
R 753	(B,108,53)	RS1/16S472J
R 754	(A,111,62)	RS1/16S153J
R 761	(B,145,70)	RS1/16S301J
R 763	(B,140,69)	RS1/16S301J
R 765	(B,141,66)	RS1/16S153J
R 771	(B,32,10)	RS1/16S103J
R 772	(B,34,11)	RS1/16S332J

Circuit Symbol and No.		Part No.
R 781	(B,52,7)	RS1/16S391J
R 782	(B,54,9)	RS1/16S391J
R 801	(B,12,22)	RS1/16S471J
R 802	(A,15,20)	RS1/16S2R2J
R 803	(A,15,17)	RS1/16S2R2J
R 804	(A,13,20)	RS1/16S2R2J
R 805	(A,13,17)	RS1/16S2R2J
R 806	(A,10,23)	RS1/16S222J
R 807	(B,21,7)	RS1/16S103J
R 808	(B,22,9)	RS1/16S332J
R 809	(B,21,12)	RS1/16S103J
R 810	(B,22,14)	RS1/16S332J
R 821	(A,161,100)	RS1/16S102J
R 822	(A,140,108)	RS1/16S471J
R 823	(A,140,106)	RS1/16S471J
R 825	(A,138,103)	RS1/16S103J
R 831	(B,155,90)	RS1/16S391J
R 832	(B,152,88)	RS1/16S391J
R 833	(B,155,91)	RS1/16S391J
R 834	(A,161,91)	RS1/16S152J
R 841	(B,116,25)	RS1/16S221J
R 842	(B,112,65)	RS1/16S221J
R 843	(B,117,25)	RS1/16S103J
R 844	(B,115,68)	RS1/16S103J
R 845	(B,123,54)	RS1/16S1002D
R 846	(B,120,53)	RS1/16S2701D
R 848	(B,123,57)	RS1/16S2701D
R 849	(B,123,56)	RS1/16S3302D
R 850	(B,136,74)	RS1/16S220J
R 851	(A,165,77)	RS1/16S2R2J
R 852	(A,165,74)	RS1/16S2R2J
R 853	(A,167,77)	RS1/16S2R2J
R 854	(A,167,74)	RS1/16S2R2J
R 855	(B,123,47)	RS1/16S0R0J
R 856	(A,148,77)	RS1/16S102J
R 857	(A,127,48)	RS1/16S272J
R 858	(B,122,59)	RS1/16S6801D
R 859	(A,128,51)	RS1/16S221J
R 860	(A,120,61)	RS1/16S1502D
R 861	(A,119,50)	RS1/16S6801D
R 862	(B,123,49)	RS1/16S2701D
R 863	(B,123,53)	RS1/16S1203D
R 864	(B,120,50)	RS1/16S5602D
R 865	(B,125,53)	RS1/16S3302D
R 867	(A,126,62)	RS1/16S3302D
R 869	(B,122,33)	RS1/16S2200F
R 870	(B,123,35)	RS1/16S1002D
R 871	(B,126,31)	RS1/16S0R0J
R 872	(B,123,31)	RS1/16S1102D
R 873	(B,131,31)	RS1/16S102J
R 874	(A,123,63)	RS1/16S0R0J
R 901	(A,154,45)	RS1/16S1102D
R 903	(A,154,39)	RS1/16S0R0J
R 904	(A,153,12)	RS1/16S0R0J
R 906	(A,154,5)	RS1/16S1202D
R 907	(A,164,10)	RS1/16S0R0J
R 908	(A,166,11)	RS1/16S0R0J
R 911	(A,154,48)	RS1/16S1001D
R 912	(A,154,7)	RS1/16S6200D
R 913	(B,142,51)	RS1/16S271J
R 914	(B,139,51)	RS1/16S271J
R 915	(B,136,51)	RS1/16S271J
R 916	(B,142,7)	RS1/16S221J
R 917	(B,139,7)	RS1/16S221J
R 931	(B,134,13)	RS1/16S101J
R 932	(B,135,10)	RS1/16S103J
R 933	(B,134,15)	RS1/16S101J
R 934	(B,134,12)	RS1/16S101J
R 935	(B,134,16)	RS1/16S101J
R 941	(B,139,61)	RS1/16S68R0D
R 942	(B,142,61)	RS1/16S3901D
R 943	(B,132,60)	RS1/16S0R0J
R 944	(B,136,61)	RS1/16S1202D
R 945	(B,126,60)	RS1/16S102J
R 948	(A,138,106)	RS1/16S471J
R 949	(A,137,108)	RS1/16S471J
R 950	(A,149,31)	RS1/16S0R0J
R 951	(A,149,18)	RS1/16S0R0J

CAPACITORS

C 101	(A,56,19)	CKSRYB104K16
C 102	(B,68,20)	CKSRYB104K16
C 103	(B,81,12)	CKSRYB104K16
C 104	(B,69,22)	CKSRYB104K16
C 105	(A,65,18)	CKSRYB104K16
C 106	(B,65,24)	CKSRYB104K16
C 108	(B,72,16)	CKSRYB104K16
C 109	(B,63,34)	CKSRYB102K50
C 112	(A,40,20)	CKSRYB104K16
C 121	(B,67,13)	CKSRYB103K50
C 122	(B,67,14)	CKSRYB103K50
C 141	(A,117,100)	CKSRYB104K16
C 144	(A,120,77)	CKSRYB104K16
C 161	(B,74,39)	CKSRYB104K16
C 162	(B,80,61)	CKSRYB104K16
C 163	(A,21,130)	CKSRYB104K16
C 165	(A,49,119)	CKSRYB104K16
C 171	(B,36,119)	CKSYB106K6R3
C 172	(B,36,131)	CKSYB106K6R3
C 173	(B,36,121)	CKSYB106K6R3
C 174	(B,31,127)	CCSRCH6R0D50
C 175	(B,31,113)	CCSRCH6R0D50
C 176	(B,36,108)	CKSYB106K6R3
C 177	(B,25,114)	CCSRCH6R0D50
C 178	(B,25,126)	CCSRCH6R0D50
C 179	(B,36,111)	CKSYB106K6R3
C 180	(B,36,116)	CKSYB106K6R3
C 181	(B,36,129)	CKSYB106K6R3
C 182	(B,36,123)	CKSYB106K6R3
C 183	(A,20,126)	CKSRYB104K16
C 184	(A,23,126)	CKSRYB102K50
C 185	(B,30,120)	CKSRYB104K16
C 186	(B,21,110)	CKSRYB104K16
C 187	(B,22,114)	CCSRCH101J50
C 201	(B,81,80)	CKSRYB105K10
C 202	(B,86,80)	CKSRYB105K10
C 205	(B,77,83)	CKSRYB224K10
C 206	(B,89,84)	CKSRYB105K10
C 207	(B,82,83)	CKSRYB105K10
C 208	(B,84,83)	CKSRYB105K10

Circuit Symbol and No.		Part No.
C 209	(B,77,84)	CKSRYB105K10
C 210	(B,89,82)	CKSRYB224K10
C 211	(B,77,86)	CKSRYB105K10
C 212	(B,89,86)	CKSRYB105K10
C 213	(A,81,84)	CKSRYB102K50
C 214	(A,83,94)	CEVW470M16
C 215	(A,81,87)	CKSRYB104K16
C 216	(A,91,88)	CKSYB475K10
C 217	(A,76,89)	CKSYB475K10
C 218	(A,91,90)	CKSYB475K10
C 219	(A,76,91)	CKSYB475K10
C 222	(A,91,92)	CKSYB475K10
C 223	(A,76,93)	CKSYB475K10
C 224	(A,91,94)	CKSYB475K10
C 225	(A,76,95)	CKSYB475K10
C 226	(B,93,96)	CCSRCH100D50
C 227	(B,74,96)	CCSRCH100D50
C 228	(B,91,96)	CCSRCH100D50
C 229	(B,75,96)	CCSRCH100D50
C 230	(B,89,101)	CCSRCH100D50
C 231	(B,77,101)	CCSRCH100D50
C 232	(A,91,98)	CEVW100M16
C 233	(B,81,102)	CKSRYB104K16
C 234	(B,80,102)	CKSRYB104K16
C 235	(B,74,91)	CKSRYB104K16
C 236	(B,92,91)	CKSRYB104K16
C 237	(A,64,72)	CKSRYB224K10
C 241	(B,143,97)	CKSRYB105K10
C 242	(B,148,97)	CKSRYB105K10
C 243	(B,141,97)	CKSRYB105K10
C 244	(B,146,97)	CKSRYB105K10
C 245	(B,143,100)	CKSRYB105K10
C 246	(B,148,100)	CKSRYB105K10
C 247	(B,141,100)	CKSRYB105K10
C 248	(B,146,100)	CKSRYB105K10
C 249	(A,138,84)	CEVW330M25
C 250	(A,130,115) 10 µF	CCG1138
C 251	(A,122,115) 1 000 µF/16 V	CCH1428
C 252	(A,150,107) 10 µF	CCG1182
C 253	(A,159,103)	CKSYB475K16
C 254	(A,157,105)	CKSYB475K16
C 255	(B,132,143)	CKSRYB473K50
C 261	(B,114,87) 10 µF	CCG1182
C 262	(B,120,88) 10 µF	CCG1182
C 263	(B,114,89) 10 µF	CCG1182
C 264	(B,120,90) 10 µF	CCG1182
C 265	(B,103,114)	CKSRYB222K50
C 266	(B,101,116)	CKSRYB222K50
C 267	(B,114,92) 10 µF	CCG1182
C 268	(B,120,93) 10 µF	CCG1182
C 269	(B,118,105)	CKSRYB222K50
C 270	(B,105,105)	CKSRYB222K50
C 271	(B,97,114)	CKSRYB222K50
C 272	(B,95,116)	CKSRYB222K50
C 274	(B,106,141)	CKSRYB102K50
C 281	(A,134,93)	CEVW101M16
C 283	(B,151,94) 10 µF	CCG1182
C 285	(A,141,93)	CEVW470M16
C 301	(A,45,112)	CKSRYB105K10
C 302	(A,47,111)	CKSRYB105K10

Circuit Symbol and No.		Part No.
C 305	(A,55,107)	CEVW100M16
C 306	(A,57,115)	CKSRYB104K16
C 307	(B,48,106) 10 µF	CCG1171
C 308	(A,46,109)	CKSRYB104K16
C 309	(B,59,110)	CKSRYB104K16
C 310	(B,57,112)	CKSRYB104K16
C 311	(A,64,93)	CCSRCH101J50
C 312	(B,67,99)	CKSRYB104K16
C 313	(A,64,100)	CCSRCH101J50
C 314	(B,81,104) 10 µF	CCG1182
C 315	(B,72,100) 10 µF	CCG1182
C 331	(B,95,82)	CKSYB475K10
C 332	(B,96,86) 10 µF	CCG1182
C 333	(A,99,88)	CEVW101M10
C 334	(A,96,93)	CKSQYB225K10
C 335	(B,97,90)	CKSQYB225K10
C 336	(A,100,92)	CKSQYB225K10
C 337	(B,97,92)	CKSQYB225K10
C 338	(A,101,94)	CKSQYB225K10
C 339	(B,97,94)	CKSQYB225K10
C 340	(A,94,81)	CEVW100M16
C 341	(A,100,80)	CEVW100M16
C 342	(A,100,83)	CKSRYB105K10
C 343	(A,108,88)	CEVW330M25
C 344	(A,108,80)	CEVW330M25
C 345	(B,98,82)	CKSYB684K16
C 352	(B,99,7)	CKSRYB104K16
C 354	(B,86,23)	CKSYB106K6R3
C 357	(B,91,29)	CKSYB475K10
C 358	(A,92,36)	CKSYB225K16
C 359	(B,92,24)	CKSRYB103K50
C 360	(A,84,24)	CEVW220M6R3
C 361	(A,92,29)	CEVW101M10
C 362	(B,93,37)	CKSRYB104K16
C 363	(B,84,34)	CKSRYB104K16
C 365	(B,107,34)	CKSRYB104K16
C 366	(A,105,23) 56 µF/10 V	CCH1397
C 368	(B,89,7)	CKSRYB104K16
C 369	(B,86,7)	CKSRYB104K16
C 370	(A,108,11)	CKSRYB102K50
C 371	(B,112,13)	CKSRYB102K50
C 372	(B,95,6)	CKSRYB102K50
C 373	(B,105,22)	CKSRYB102K50
C 374	(B,98,7)	CKSRYB102K50
C 381	(A,57,128)	CCSRCH150J50
C 382	(A,61,123)	CEVW100M16
C 383	(A,56,122)	CKSRYB104K16
C 384	(A,58,122)	CKSRYB104K16
C 385	(B,58,131) 4.7 µF	CCG1089
C 387	(B,59,128)	CKSRYB104K16
C 390	(B,87,128)	CKSRYB102K50
C 402	(B,17,54)	CKSYB475K10
C 404	(B,19,54)	CKSRYB103K50
C 405	(B,17,92)	CKSRYB103K50
C 406	(A,54,57)	CEVW470M6R3
C 407	(A,52,93)	CEVW101M16
C 408	(B,18,61)	CKSRYB103K50
C 421	(A,70,88)	CCSRCH470J50
C 422	(A,71,77)	CCSRCH470J50
C 423	(A,64,84)	CKSRYB474K10

Circuit Symbol and No.		Part No.
C 424	(A,65,78)	CKSRYB474K10
C 426	(B,73,83)	CKSRYB105K10
C 427	(A,66,82)	CKSYB475K16
C 428	(A,64,82)	CKSRYB103K50
C 429	(B,17,40)	CKSRYB474K10
C 430	(B,22,40)	CKSRYB474K10
C 431	(B,66,84)	CCSRCH470J50
C 432	(B,66,81)	CCSRCH470J50
C 442	(A,83,121)	CKSRYB104K16
C 443	(B,81,114)	CKSRYB104K16
C 451	(B,68,109)	CCSRCH4R0D50
C 452	(A,74,113)	CKSRYB104K16
C 453	(A,76,108)	CEVW101M10
C 454	(A,86,104) 10 µF	CCG1171
C 456	(A,64,108)	CEVW100M16
C 457	(A,72,101)	CEVW101M10
C 458	(B,73,106)	CKSRYB104K16
C 459	(A,103,116)	CEVW221M4
C 460	(A,95,107)	CEVW221M4
C 461	(A,102,107)	CEVW221M4
C 471	(A,40,13)	CKSRYB104K16
C 481	(A,82,131)	CKSRYB103K50
C 482	(A,83,135)	CEVW100M16
C 483	(B,81,135)	CKSRYB103K50
C 601	(A,72,63)	CKSRYB103K50
C 604	(A,74,61)	CKSRYB105K10
C 605	(A,102,60)	CKSRYB104K16
C 607	(A,77,33)	CCSRCH7R0D50
C 608	(A,81,33)	CCSRCH7R0D50
C 610	(B,76,46)	CKSRYB105K10
C 615	(B,65,29)	CKSRYB104K16
C 616	(A,73,61)	CKSRYB104K16
C 617	(B,107,45)	CKSRYB104K16
C 651	(A,67,64)	CEVW2R2M50
C 652	(A,67,61)	CKSRYB104K16
C 661	(A,83,70)	CKSRYB105K6R3
C 702	(A,116,121)	CKSRYB104K25
C 711	(B,131,116)	CKSRYB104K16
C 721	(A,113,64)	CKSRYB105K10
C 722	(B,129,116)	CKSRYB104K16
C 731	(A,135,75)	CKSRYB104K16
C 732	(B,137,98)	CKSRYB104K16
C 741	(B,136,116)	CKSRYB104K16
C 742	(A,109,61)	CKSRYB103K50
C 751	(B,135,116)	CKSRYB104K16
C 761	(B,126,67)	CKSRYB104K16
C 764	(A,159,68) 2 200 µF/16 V	CCH1405
C 765	(A,70,26)	CEVW101M16
C 771	(B,40,9)	CKSRYB104K16
C 772	(B,34,8)	CKSRYB102K50
C 781	(B,50,15) 10 µF	CCG1182
C 782	(B,44,10)	CKSRYB104K16
C 783	(B,54,14)	CKSYB475K16
C 791	(B,123,134)	CKSQYB104K50
C 801	(B,26,18)	CKSYB475K10
C 802	(B,24,16)	CKSRYB102K50
C 803	(A,24,20)	CEVW101M10
C 805	(A,21,29)	CKSRYB103K50
C 806	(B,10,21)	CKSRYB103K50
C 807	(A,17,25)	CEVW101M16

Circuit Symbol and No.		Part No.
C 808	(A,10,10) 2 200 µF/16 V	CCH1405
C 809	(A,10,20)	CKSRYB104K25
C 814	(B,19,4)	CKSRYB104K16
C 821	(A,150,93)	CEVW101M10
C 822	(A,144,102)	CKSRYB103K50
C 823	(A,150,101)	CEVW101M16
C 825	(A,53,47)	CEVW220M6R3
C 826	(B,35,51)	CKSRYB103K50
C 827	(B,37,37)	CKSYB475K10
C 828	(B,36,39)	CKSRYB104K16
C 829	(A,144,84)	CKSRYB102K50
C 831	(B,157,93) 10 µF	CCG1182
C 832	(B,155,88)	CKSRYB104K16
C 833	(A,154,87)	CKSRYB104K16
C 834	(A,149,85)	CEVW470M6R3
C 835	(A,157,86)	CKSRYB104K16
C 841	(B,121,64)	CKSYB106K6R3
C 842	(B,121,66)	CKSRYB103K50
C 843	(B,120,54)	CKSRYB103K50
C 844	(A,124,34) 470 µF/6.3 V	CCH1437
C 845	(A,156,79) 3 300 µF/16 V	CCH1486
C 846	(A,126,42)	CKSYB225K16
C 847	(A,150,76)	CKSRYB104K25
C 848	(A,116,57)	CKSYB475K10
C 849	(B,118,56)	CCSRCH121J50
C 850	(B,124,49)	CKSRYB103K50
C 851	(B,127,53)	CKSRYB104K16
C 852	(A,130,57)	CKSRYB104K16
C 853	(A,134,56)	CKSYB475K16
C 854	(A,151,58)	CEHAZL471M16
C 855	(B,165,58)	CKSYB225K16
C 856	(A,161,48)	CEHAZL471M16
C 857	(B,111,28) 22 µF	CCG1178
C 858	(B,116,30)	CKSRYB102K50
C 859	(B,128,31)	CKSRYB105K10
C 860	(A,141,78)	CKSRYB104K16
C 861	(A,128,62)	CKSRYB104K25
C 862	(A,132,56)	CKSYB475K10
C 871	(A,118,21)	CKSRYB104K16
C 901	(A,143,54)	CKSYB475K16
C 902	(A,141,50) 220 µF/10 V	CCH1409
C 903	(A,145,26)	CKSYB225K16
C 904	(A,161,37)	CEHAZL471M16
C 905	(A,145,36)	CKSYB225K16
C 907	(A,142,5) 470 µF/6.3 V	CCH1437
C 908	(B,162,28)	CKSYB475K16
C 909	(A,161,16) 3 300 µF/16 V	CCH1486
C 931	(B,129,17)	CKSRYB105K10
C 941	(B,132,57)	CCSRCH102J50
C 942	(B,130,57) 22 µF	CCG1178
C 943	(B,131,54)	CKSRYB474K10
C 961	(A,40,26) 0.22 µF/3.5 V	CCL1058
C 962	(B,45,27)	CKSQYB225K10
C 963	(B,35,27)	CKSRYB105K10
C 964	(B,34,27)	CKSRYB102K50
C 966	(A,36,130)	CKSRYB471K50
C 973	(A,55,84)	CKSRYB102K50
C 976	(B,48,84)	CKSRYB102K50
C 977	(A,51,75)	CKSRYB104K16
C 986	(A,50,41)	CKSRYB102K50

Circuit Symbol and No.			Part No.
C 987	(B,42,64)		CKSRYB102K50

C

Unit Number : CWN1685(UC)
Unit Name : AV Selector Unit

MISCELLANEOUS

IC 2001	(A,41,27)	IC	CXA2089Q
IC 2101	(A,67,49)	IC	NJM2505F
IC 2102	(A,61,49)	IC	NJM2505F
IC 2201	(A,37,8)	IC	NJM4558V
IC 2202	(A,64,8)	IC	NJM4558V
IC 2203	(A,25,8)	IC	NJM2068V
IC 2204	(A,53,8)	IC	NJM2068V
IC 2301	(A,78,34)	IC	NJM4558V
IC 2302	(A,96,38)	IC	NJM4558V
IC 2303	(A,67,34)	IC	NJM2068V
IC 2304	(A,96,27)	IC	NJM2068V
IC 2401	(A,19,44)	IC	NJM2505F
IC 2501	(A,52,52)	IC	NJM2505F
IC 2601	(A,51,39)	IC	NJM2505F
IC 2701	(A,11,20)	IC	NJM4558V
IC 2702	(A,14,41)	IC	NJM4558V
IC 2703	(A,22,20)	IC	NJM2068V
IC 2704	(A,14,31)	IC	NJM2068V
Q 2001	(A,41,54)	Transistor	2SC4081
Q 2002	(B,38,52)	Transistor	2SA1577
D 2191	(B,76,64)	Diode	HZU2R7(B1)
D 2192	(B,79,60)	Diode	HZU2R7(B1)
D 2193	(B,70,62)	Diode	HZU2R7(B1)
D 2194	(B,70,59)	Diode	HZU2R7(B1)
D 2201	(B,84,69)	Diode	UDZS5R6(B)
D 2202	(B,84,67)	Diode	UDZS5R6(B)
D 2203	(B,90,69)	Diode	UDZS5R6(B)
D 2204	(B,90,67)	Diode	UDZS5R6(B)
D 2205	(B,20,12)	Diode	UDZS4R7(B)
D 2206	(B,47,11)	Diode	UDZS4R7(B)
D 2301	(A,89,49)	Diode	UDZS5R6(B)
D 2302	(B,90,48)	Diode	UDZS5R6(B)
D 2303	(A,87,46)	Diode	UDZS5R6(B)
D 2304	(B,90,42)	Diode	UDZS5R6(B)
D 2305	(B,62,38)	Diode	UDZS4R7(B)
D 2306	(B,91,26)	Diode	UDZS4R7(B)
D 2401	(A,24,57)	Diode	HZU2R7(B1)
D 2402	(A,24,53)	Diode	HZU2R7(B1)
D 2705	(B,25,26)	Diode	UDZS4R7(B)
D 2706	(A,9,27)	Diode	UDZS4R7(B)
L 2001	(B,26,29)	Inductor	CTF1473
L 2002	(A,45,53)	Inductor	CTF1473
L 2101	(A,68,43)	Inductor	CTF1473
L 2102	(A,63,43)	Inductor	CTF1473
L 2401	(B,21,43)	Inductor	CTF1473
L 2501	(B,55,53)	Inductor	CTF1473
L 2601	(A,55,39)	Inductor	CTF1473
VR2001	(A,41,58)	Semi-fixed 1.5 kΩ(B)	CCP1391
⚠FU2401	(A,15,59)	Fuse 3 A	CEK1286

RESISTORS

R 2001	(A,29,47)	RS1/16S0R0J
R 2002	(A,30,47)	RS1/16S0R0J
R 2003	(B,42,52)	RS1/16S222J
R 2004	(B,42,50)	RS1/16S222J
R 2005	(A,37,53)	RS1/16S681J
R 2006	(A,38,55)	RS1/16S331J
R 2007	(B,40,56)	RS1/16S681J
R 2008	(A,36,55)	RS1/16S272J
R 2009	(B,40,58)	RS1/16S0R0J
R 2010	(A,34,55)	RS1/16S0R0J
R 2011	(A,32,55)	RS1/16S0R0J
R 2101	(B,75,57)	RS1/16S750J
R 2102	(B,64,57)	RS1/16S750J
R 2105	(A,52,23)	RS1/16S0R0J
R 2106	(A,52,29)	RS1/16S0R0J
R 2191	(B,74,50)	RS1/16S102J
R 2192	(B,62,59)	RS1/16S102J
R 2201	(B,45,13)	RS1/16S123J
R 2202	(A,72,10)	RS1/16S123J
R 2203	(A,45,15)	RS1/16S123J
R 2204	(A,72,15)	RS1/16S123J
R 2205	(A,43,15)	RS1/16S223J
R 2206	(A,70,13)	RS1/16S223J
R 2207	(B,44,7)	RS1/16S223J
R 2208	(A,71,6)	RS1/16S223J
R 2209	(B,39,8)	RS1/16S473J
R 2210	(B,66,8)	RS1/16S473J
R 2211	(B,39,10)	RS1/16S473J
R 2212	(B,66,10)	RS1/16S473J
R 2213	(B,38,6)	RS1/16S1002D
R 2214	(B,66,6)	RS1/16S1002D
R 2215	(B,34,10)	RS1/16S1002D
R 2216	(B,59,9)	RS1/16S1002D
R 2217	(B,27,8)	RS1/16S1002D
R 2218	(B,55,8)	RS1/16S1002D
R 2219	(B,25,12)	RS1/16S1002D
R 2220	(B,53,11)	RS1/16S1002D
R 2221	(A,20,9)	RS1/16S471J
R 2222	(A,48,9)	RS1/16S471J
R 2223	(B,17,11)	RS1/16S472J
R 2224	(B,48,6)	RS1/16S472J
R 2225	(A,52,25)	RS1/16S562J
R 2226	(A,52,26)	RS1/16S562J
R 2301	(B,84,45)	RS1/16S102J
R 2302	(A,95,49)	RS1/16S102J
R 2303	(B,80,48)	RS1/16S181J
R 2304	(A,92,49)	RS1/16S181J
R 2307	(B,80,47)	RS1/16S223J
R 2308	(A,94,49)	RS1/16S223J
R 2309	(B,80,33)	RS1/16S473J
R 2310	(B,96,41)	RS1/16S473J
R 2311	(B,80,35)	RS1/16S473J
R 2312	(B,94,41)	RS1/16S473J
R 2313	(B,80,31)	RS1/16S1002D
R 2314	(B,98,40)	RS1/16S1002D
R 2315	(B,73,35)	RS1/16S1002D
R 2316	(B,95,35)	RS1/16S1002D
R 2317	(B,69,32)	RS1/16S1002D
R 2318	(B,98,30)	RS1/16S1002D
R 2319	(B,68,37)	RS1/16S1002D

Circuit Symbol and No.		Part No.
R 2320	(B,93,30)	RS1/16S1002D
R 2321	(A,61,35)	RS1/16S471J
R 2322	(B,96,26)	RS1/16S471J
R 2323	(B,63,30)	RS1/16S472J
R 2324	(B,97,21)	RS1/16S472J
R 2325	(A,39,38)	RS1/16S562J
R 2326	(A,36,38)	RS1/16S562J
R 2401	(B,18,55)	RS1/16S750J
R 2403	(A,38,38)	RS1/16S0R0J
R 2503	(A,48,18)	RS1/16S0R0J
R 2603	(A,45,38)	RS1/16S0R0J
R 2701	(A,8,55)	RS1/16S181J
R 2702	(A,11,54)	RS1/16S181J
R 2703	(A,9,55)	RS1/16S102J
R 2704	(A,11,50)	RS1/16S102J
R 2705	(B,9,55)	RS1/16S223J
R 2706	(B,12,49)	RS1/16S223J
R 2707	(B,9,21)	RS1/16S473J
R 2708	(B,14,43)	RS1/16S473J
R 2709	(B,9,19)	RS1/16S473J
R 2710	(B,13,43)	RS1/16S473J
R 2711	(B,11,23)	RS1/16S1002D
R 2712	(B,17,42)	RS1/16S1002D
R 2713	(A,16,20)	RS1/16S1002D
R 2714	(A,14,36)	RS1/16S1002D
R 2715	(B,19,23)	RS1/16S1002D
R 2716	(B,17,34)	RS1/16S1002D
R 2717	(B,19,18)	RS1/16S1002D
R 2718	(B,12,34)	RS1/16S1002D
R 2719	(B,23,20)	RS1/16S471J
R 2720	(B,13,29)	RS1/16S471J
R 2721	(B,25,24)	RS1/16S472J
R 2722	(A,17,26)	RS1/16S472J
R 2723	(A,43,38)	RS1/16S562J
R 2724	(A,41,38)	RS1/16S562J

CAPACITORS

C 2001	(A,29,20)	CEJQ100M16
C 2002	(B,34,25)	CKSRYB104K50
C 2003	(A,29,27)	CEJQ100M16
C 2004	(A,29,40)	CEJQ220M10
C 2005	(A,29,33)	CEJQ470M10
C 2006	(A,23,38)	CEJQ220M10
C 2007	(A,23,31)	CEJQ470M10
C 2008	(A,39,48)	CEJQ101M10
C 2009	(A,44,53)	CKSRYB105K10
C 2101	(A,79,54)	CEJQ100M16
C 2102	(A,66,54)	CEJQ100M16
C 2103	(A,72,54)	CEJQ100M16
C 2104	(A,60,54)	CEJQ100M16
C 2105	(B,67,48)	CKSRYB104K50
C 2106	(B,61,48)	CKSRYB104K50
C 2107	(B,57,23)	CKSRYB105K10
C 2108	(B,56,30)	CKSRYB105K10
C 2191	(B,73,50)	CCSRCH471J50
C 2192	(B,62,61)	CCSRCH471J50
C 2201	(A,83,68)	CCSRCH471J50
C 2202	(A,83,67)	CCSRCH471J50
C 2203	(B,44,9)	CKSRYB105K10
C 2204	(A,71,8)	CKSRYB105K10
C 2205	(B,43,12)	CKSRYB105K10
C 2206	(A,70,10)	CKSRYB105K10
C 2207	(B,27,6)	CCSRCH820J50
C 2208	(B,53,8)	CCSRCH820J50
C 2209	(B,26,10)	CCSRCH820J50
C 2210	(B,52,11)	CCSRCH820J50
C 2211	(B,23,13)	CKSRYB104K50
C 2212	(B,50,13)	CKSRYB104K50
C 2213	(A,30,13)	CEJQ100M16
C 2214	(A,56,13)	CEJQ100M16
C 2215	(B,24,8)	CKSRYB104K50
C 2216	(B,50,8)	CKSRYB104K50
C 2217	(A,36,13)	CEJQ220M16
C 2218	(A,63,13)	CEJQ220M16
C 2219	(A,55,25)	CKSRYB105K10
C 2220	(A,55,26)	CKSRYB105K10
C 2301	(A,86,51)	CCSRCH471J50
C 2302	(A,97,49)	CCSRCH471J50
C 2303	(B,82,43)	CKSRYB105K10
C 2304	(A,95,47)	CKSRYB105K10
C 2305	(B,80,43)	CKSRYB105K10
C 2306	(A,94,46)	CKSRYB105K10
C 2307	(B,68,32)	CCSRCH820J50
C 2308	(B,98,28)	CCSRCH820J50
C 2309	(B,66,37)	CCSRCH820J50
C 2310	(B,93,28)	CCSRCH820J50
C 2311	(B,64,39)	CKSRYB104K50
C 2312	(B,93,23)	CKSRYB104K50
C 2313	(A,71,40)	CEJQ100M16
C 2314	(A,90,31)	CEJQ100M16
C 2315	(A,66,31)	CKSRYB104K50
C 2316	(A,99,26)	CKSRYB104K50
C 2317	(A,78,40)	CEJQ220M16
C 2318	(A,90,37)	CEJQ220M16
C 2319	(A,39,41)	CKSRYB105K10
C 2320	(A,36,41)	CKSRYB105K10
C 2402	(A,20,51)	CEJQ100M16
C 2403	(A,15,51)	CEJQ100M16
C 2404	(B,21,44)	CKSRYB104K50
C 2405	(B,38,42)	CKSRYB105K10
C 2501	(B,52,53)	CKSRYB104K50
C 2502	(B,49,24)	CKSRYB105K10
C 2503	(A,50,58)	CEJQ100M16
C 2504	(A,55,58)	CEJQ100M16
C 2601	(A,48,44)	CEJQ100M16
C 2602	(A,55,44)	CEJQ100M16
C 2603	(B,52,40)	CKSRYB104K50
C 2604	(A,46,40)	CKSRYB105K10
C 2701	(B,7,55)	CCSRCH471J50
C 2702	(B,10,55)	CCSRCH471J50
C 2703	(A,6,23)	CKSRYB105K10
C 2704	(A,11,47)	CKSRYB105K10
C 2705	(A,6,18)	CKSRYB105K10
C 2706	(A,10,50)	CKSRYB105K10
C 2707	(B,20,23)	CCSRCH820J50
C 2708	(B,17,32)	CCSRCH820J50
C 2709	(B,20,18)	CCSRCH820J50
C 2710	(B,12,32)	CCSRCH820J50
C 2711	(B,25,17)	CKSRYB104K50
C 2712	(A,9,29)	CKSRYB104K50

Circuit Symbol and No.		Part No.
C 2713	(A,16,15)	CEJQ100M16
C 2714	(A,9,34)	CEJQ100M16
C 2715	(A,22,23)	CKSRYB104K50
C 2716	(A,17,30)	CKSRYB104K50
C 2717	(A,9,15)	CEJQ220M16
C 2718	(A,9,40)	CEJQ220M16
C 2719	(B,44,37)	CKSRYB105K10
C 2720	(B,42,37)	CKSRYB105K10

C

Unit Number : CWN1681(RE, RD, RC, RI)
Unit Name : AV Selector Unit

MISCELLANEOUS

IC 2001	(A,41,27)	IC	CXA2089Q
IC 2101	(A,67,49)	IC	NJM2505F
IC 2102	(A,61,49)	IC	NJM2505F
IC 2201	(A,37,8)	IC	NJM4558V
IC 2202	(A,64,8)	IC	NJM4558V
IC 2203	(A,25,8)	IC	NJM2068V
IC 2204	(A,53,8)	IC	NJM2068V
IC 2251	(A,92,8)	IC	NJM4558V
IC 2252	(A,78,22)	IC	NJM4558V
IC 2253	(A,80,8)	IC	NJM2068V
IC 2254	(A,67,22)	IC	NJM2068V
IC 2301	(A,78,34)	IC	NJM4558V
IC 2302	(A,96,38)	IC	NJM4558V
IC 2303	(A,67,34)	IC	NJM2068V
IC 2304	(A,96,27)	IC	NJM2068V
IC 2401	(A,19,44)	IC	NJM2505F
IC 2501	(A,52,52)	IC	NJM2505F
IC 2601	(A,51,39)	IC	NJM2505F
IC 2701	(A,11,20)	IC	NJM4558V
IC 2702	(A,14,41)	IC	NJM4558V
IC 2703	(A,22,20)	IC	NJM2068V
IC 2704	(A,14,31)	IC	NJM2068V
Q 2001	(A,41,54)	Transistor	2SC4081
Q 2002	(B,38,52)	Transistor	2SA1577
D 2191	(B,76,64)	Diode	HZU2R7(B1)
D 2192	(B,79,60)	Diode	HZU2R7(B1)
D 2193	(B,70,62)	Diode	HZU2R7(B1)
D 2194	(B,70,59)	Diode	HZU2R7(B1)
D 2201	(B,84,69)	Diode	UDZS5R6(B)
D 2202	(B,84,67)	Diode	UDZS5R6(B)
D 2203	(B,90,69)	Diode	UDZS5R6(B)
D 2204	(B,90,67)	Diode	UDZS5R6(B)
D 2205	(B,20,12)	Diode	UDZS4R7(B)
D 2206	(B,47,11)	Diode	UDZS4R7(B)
D 2251	(B,84,64)	Diode	UDZS5R6(B)
D 2252	(B,83,61)	Diode	UDZS5R6(B)
D 2253	(B,90,64)	Diode	UDZS5R6(B)
D 2254	(B,89,61)	Diode	UDZS5R6(B)
D 2255	(A,78,12)	Diode	UDZS4R7(B)
D 2256	(B,62,26)	Diode	UDZS4R7(B)
D 2301	(A,89,49)	Diode	UDZS5R6(B)
D 2302	(B,90,48)	Diode	UDZS5R6(B)
D 2303	(A,87,46)	Diode	UDZS5R6(B)
D 2304	(B,90,42)	Diode	UDZS5R6(B)
D 2305	(B,62,38)	Diode	UDZS4R7(B)
D 2306	(B,91,26)	Diode	UDZS4R7(B)
D 2401	(A,24,57)	Diode	HZU2R7(B1)
D 2402	(A,24,53)	Diode	HZU2R7(B1)
D 2705	(B,25,26)	Diode	UDZS4R7(B)
D 2706	(A,9,27)	Diode	UDZS4R7(B)
L 2001	(B,26,29)	Inductor	CTF1473
L 2002	(A,45,53)	Inductor	CTF1473
L 2101	(A,68,43)	Inductor	CTF1473
L 2102	(A,63,43)	Inductor	CTF1473
L 2401	(B,21,43)	Inductor	CTF1473
L 2501	(B,55,53)	Inductor	CTF1473
L 2601	(A,55,39)	Inductor	CTF1473
VR2001	(A,41,58)	Semi-fixed 1.5 kΩ(B)	CCP1391
⚠FU2401	(A,15,59)	Fuse 3 A	CEK1286

RESISTORS

R 2001	(A,29,47)	RS1/16S0R0J
R 2002	(A,30,47)	RS1/16S0R0J
R 2003	(B,42,52)	RS1/16S222J
R 2004	(B,42,50)	RS1/16S222J
R 2005	(A,37,53)	RS1/16S681J
R 2006	(A,38,55)	RS1/16S331J
R 2007	(B,40,56)	RS1/16S681J
R 2008	(A,36,55)	RS1/16S272J
R 2009	(B,40,58)	RS1/16S0R0J
R 2010	(A,34,55)	RS1/16S0R0J
R 2011	(A,32,55)	RS1/16S0R0J
R 2101	(B,75,57)	RS1/16S750J
R 2102	(B,64,57)	RS1/16S750J
R 2105	(A,52,23)	RS1/16S0R0J
R 2106	(A,52,29)	RS1/16S0R0J
R 2191	(B,74,50)	RS1/16S102J
R 2192	(B,62,59)	RS1/16S102J
R 2201	(B,45,13)	RS1/16S123J
R 2202	(A,72,10)	RS1/16S123J
R 2203	(A,45,15)	RS1/16S123J
R 2204	(A,72,15)	RS1/16S123J
R 2205	(A,43,15)	RS1/16S223J
R 2206	(A,70,13)	RS1/16S223J
R 2207	(B,44,7)	RS1/16S223J
R 2208	(A,71,6)	RS1/16S223J
R 2209	(B,39,8)	RS1/16S473J
R 2210	(B,66,8)	RS1/16S473J
R 2211	(B,39,10)	RS1/16S473J
R 2212	(B,66,10)	RS1/16S473J
R 2213	(B,38,6)	RS1/16S1002D
R 2214	(B,66,6)	RS1/16S1002D
R 2215	(B,34,10)	RS1/16S1002D
R 2216	(B,59,9)	RS1/16S1002D
R 2217	(B,27,8)	RS1/16S1002D
R 2218	(B,55,8)	RS1/16S1002D
R 2219	(B,25,12)	RS1/16S1002D
R 2220	(B,53,11)	RS1/16S1002D
R 2221	(A,20,9)	RS1/16S471J
R 2222	(A,48,9)	RS1/16S471J
R 2223	(B,17,11)	RS1/16S472J
R 2224	(B,48,6)	RS1/16S472J
R 2225	(A,52,25)	RS1/16S562J
R 2226	(A,52,26)	RS1/16S562J

Circuit Symbol and No.		Part No.
R 2251	(B,102,16)	RS1/16S123J
R 2252	(A,89,23)	RS1/16S123J
R 2253	(B,100,18)	RS1/16S123J
R 2254	(A,89,25)	RS1/16S123J
R 2255	(B,96,16)	RS1/16S223J
R 2256	(A,88,26)	RS1/16S223J
R 2257	(B,103,13)	RS1/16S223J
R 2258	(A,89,22)	RS1/16S223J
R 2259	(B,94,10)	RS1/16S473J
R 2260	(B,80,22)	RS1/16S473J
R 2261	(B,97,13)	RS1/16S473J
R 2262	(B,80,24)	RS1/16S473J
R 2263	(B,94,8)	RS1/16S1002D
R 2264	(B,77,20)	RS1/16S1002D
R 2265	(B,87,10)	RS1/16S1002D
R 2266	(B,74,23)	RS1/16S1002D
R 2267	(B,83,8)	RS1/16S1002D
R 2268	(B,70,21)	RS1/16S1002D
R 2269	(B,81,11)	RS1/16S1002D
R 2270	(B,68,25)	RS1/16S1002D
R 2271	(A,75,9)	RS1/16S471J
R 2272	(A,62,23)	RS1/16S471J
R 2273	(B,74,8)	RS1/16S472J
R 2274	(B,62,19)	RS1/16S472J
R 2275	(A,52,30)	RS1/16S562J
R 2276	(A,52,32)	RS1/16S562J
R 2301	(B,84,45)	RS1/16S102J
R 2302	(A,95,49)	RS1/16S102J
R 2303	(B,80,48)	RS1/16S181J
R 2304	(A,92,49)	RS1/16S181J
R 2307	(B,80,47)	RS1/16S223J
R 2308	(A,94,49)	RS1/16S223J
R 2309	(B,80,33)	RS1/16S473J
R 2310	(B,96,41)	RS1/16S473J
R 2311	(B,80,35)	RS1/16S473J
R 2312	(B,94,41)	RS1/16S473J
R 2313	(B,80,31)	RS1/16S1002D
R 2314	(B,98,40)	RS1/16S1002D
R 2315	(B,73,35)	RS1/16S1002D
R 2316	(B,95,35)	RS1/16S1002D
R 2317	(B,69,32)	RS1/16S1002D
R 2318	(B,98,30)	RS1/16S1002D
R 2319	(B,68,37)	RS1/16S1002D
R 2320	(B,93,30)	RS1/16S1002D
R 2321	(A,61,35)	RS1/16S471J
R 2322	(B,96,26)	RS1/16S471J
R 2323	(B,63,30)	RS1/16S472J
R 2324	(B,97,21)	RS1/16S472J
R 2325	(A,39,38)	RS1/16S562J
R 2326	(A,36,38)	RS1/16S562J
R 2401	(B,18,55)	RS1/16S750J
R 2403	(A,38,38)	RS1/16S0R0J
R 2503	(A,48,18)	RS1/16S0R0J
R 2603	(A,45,38)	RS1/16S0R0J
R 2701	(A,8,55)	RS1/16S181J
R 2702	(A,11,54)	RS1/16S181J
R 2703	(A,9,55)	RS1/16S102J
R 2704	(A,11,50)	RS1/16S102J
R 2705	(B,9,55)	RS1/16S223J
R 2706	(B,12,49)	RS1/16S223J
R 2707	(B,9,21)	RS1/16S473J
R 2708	(B,14,43)	RS1/16S473J
R 2709	(B,9,19)	RS1/16S473J
R 2710	(B,13,43)	RS1/16S473J
R 2711	(B,11,23)	RS1/16S1002D
R 2712	(B,17,42)	RS1/16S1002D
R 2713	(A,16,20)	RS1/16S1002D
R 2714	(A,14,36)	RS1/16S1002D
R 2715	(B,19,23)	RS1/16S1002D
R 2716	(B,17,34)	RS1/16S1002D
R 2717	(B,19,18)	RS1/16S1002D
R 2718	(B,12,34)	RS1/16S1002D
R 2719	(B,23,20)	RS1/16S471J
R 2720	(B,13,29)	RS1/16S471J
R 2721	(B,25,24)	RS1/16S472J
R 2722	(A,17,26)	RS1/16S472J
R 2723	(A,43,38)	RS1/16S562J
R 2724	(A,41,38)	RS1/16S562J

CAPACITORS

C 2001	(A,29,20)	CEJQ100M16
C 2002	(B,34,25)	CKSRYB104K50
C 2003	(A,29,27)	CEJQ100M16
C 2004	(A,29,40)	CEJQ220M10
C 2005	(A,29,33)	CEJQ470M10
C 2006	(A,23,38)	CEJQ220M10
C 2007	(A,23,31)	CEJQ470M10
C 2008	(A,39,48)	CEJQ101M10
C 2009	(A,44,53)	CKSRYB105K10
C 2101	(A,79,54)	CEJQ100M16
C 2102	(A,66,54)	CEJQ100M16
C 2103	(A,72,54)	CEJQ100M16
C 2104	(A,60,54)	CEJQ100M16
C 2105	(B,67,48)	CKSRYB104K50
C 2106	(B,61,48)	CKSRYB104K50
C 2107	(B,57,23)	CKSRYB105K10
C 2108	(B,56,30)	CKSRYB105K10
C 2191	(B,73,50)	CCSRCH471J50
C 2192	(B,62,61)	CCSRCH471J50
C 2201	(A,83,68)	CCSRCH471J50
C 2202	(A,83,67)	CCSRCH471J50
C 2203	(B,44,9)	CKSRYB105K10
C 2204	(A,71,8)	CKSRYB105K10
C 2205	(B,43,12)	CKSRYB105K10
C 2206	(A,70,10)	CKSRYB105K10
C 2207	(B,27,6)	CCSRCH820J50
C 2208	(B,53,8)	CCSRCH820J50
C 2209	(B,26,10)	CCSRCH820J50
C 2210	(B,52,11)	CCSRCH820J50
C 2211	(B,23,13)	CKSRYB104K50
C 2212	(B,50,13)	CKSRYB104K50
C 2213	(A,30,13)	CEJQ100M16
C 2214	(A,56,13)	CEJQ100M16
C 2215	(B,24,8)	CKSRYB104K50
C 2216	(B,50,8)	CKSRYB104K50
C 2217	(A,36,13)	CEJQ220M16
C 2218	(A,63,13)	CEJQ220M16
C 2219	(A,55,25)	CKSRYB105K10
C 2220	(A,55,26)	CKSRYB105K10

Circuit Symbol and No.		Part No.
C 2251	(A,83,62)	CCSRCH471J50
C 2252	(A,85,59)	CCSRCH471J50
C 2253	(B,101,13)	CKSRYB105K10
C 2254	(A,86,23)	CKSRYB105K10
C 2255	(B,99,13)	CKSRYB105K10
C 2256	(A,86,25)	CKSRYB105K10
C 2257	(B,81,7)	CCSRCH820J50
C 2258	(B,68,21)	CCSRCH820J50
C 2259	(B,78,9)	CCSRCH820J50
C 2260	(B,66,24)	CCSRCH820J50
C 2261	(A,78,14)	CKSRYB104K50
C 2262	(B,64,27)	CKSRYB104K50
C 2263	(A,84,13)	CEJQ100M16
C 2264	(A,71,27)	CEJQ100M16
C 2265	(B,79,6)	CKSRYB104K50
C 2266	(A,67,19)	CKSRYB104K50
C 2267	(A,91,13)	CEJQ220M16
C 2268	(A,78,27)	CEJQ220M16
C 2269	(A,55,30)	CKSRYB105K10
C 2270	(A,55,32)	CKSRYB105K10
C 2301	(A,86,51)	CCSRCH471J50
C 2302	(A,97,49)	CCSRCH471J50
C 2303	(B,82,43)	CKSRYB105K10
C 2304	(A,95,47)	CKSRYB105K10
C 2305	(B,80,43)	CKSRYB105K10
C 2306	(A,94,46)	CKSRYB105K10
C 2307	(B,68,32)	CCSRCH820J50
C 2308	(B,98,28)	CCSRCH820J50
C 2309	(B,66,37)	CCSRCH820J50
C 2310	(B,93,28)	CCSRCH820J50
C 2311	(B,64,39)	CKSRYB104K50
C 2312	(B,93,23)	CKSRYB104K50
C 2313	(A,71,40)	CEJQ100M16
C 2314	(A,90,31)	CEJQ100M16
C 2315	(A,66,31)	CKSRYB104K50
C 2316	(A,99,26)	CKSRYB104K50
C 2317	(A,78,40)	CEJQ220M16
C 2318	(A,90,37)	CEJQ220M16
C 2319	(A,39,41)	CKSRYB105K10
C 2320	(A,36,41)	CKSRYB105K10
C 2402	(A,20,51)	CEJQ100M16
C 2403	(A,15,51)	CEJQ100M16
C 2404	(B,21,44)	CKSRYB104K50
C 2405	(B,38,42)	CKSRYB105K10
C 2501	(B,52,53)	CKSRYB104K50
C 2502	(B,49,24)	CKSRYB105K10
C 2503	(A,50,58)	CEJQ100M16
C 2504	(A,55,58)	CEJQ100M16
C 2601	(A,48,44)	CEJQ100M16
C 2602	(A,55,44)	CEJQ100M16
C 2603	(B,52,40)	CKSRYB104K50
C 2604	(A,46,40)	CKSRYB105K10
C 2701	(B,7,55)	CCSRCH471J50
C 2702	(B,10,55)	CCSRCH471J50
C 2703	(A,6,23)	CKSRYB105K10
C 2704	(A,11,47)	CKSRYB105K10
C 2705	(A,6,18)	CKSRYB105K10
C 2706	(A,10,50)	CKSRYB105K10
C 2707	(B,20,23)	CCSRCH820J50
C 2708	(B,17,32)	CCSRCH820J50
C 2709	(B,20,18)	CCSRCH820J50
C 2710	(B,12,32)	CCSRCH820J50
C 2711	(B,25,17)	CKSRYB104K50
C 2712	(A,9,29)	CKSRYB104K50
C 2713	(A,16,15)	CEJQ100M16
C 2714	(A,9,34)	CEJQ100M16
C 2715	(A,22,23)	CKSRYB104K50
C 2716	(A,17,30)	CKSRYB104K50
C 2717	(A,9,15)	CEJQ220M16
C 2718	(A,9,40)	CEJQ220M16
C 2719	(B,44,37)	CKSRYB105K10
C 2720	(B,42,37)	CKSRYB105K10

Monitor Unit
Consists of
Monitor PCB
Panel PCB

F G

Unit Number : CWN1683
Unit Name : Monitor Unit

MISCELLANEOUS

IC 4001	(B,66,61) IC	S-1131B15UC-N4A
IC 4002	(A,69,56) IC	S-1131B25UC-N4K
IC 4003	(B,62,32) IC	BD6171KV
IC 4101	(B,121,80) IC	TA78L05F
IC 4102	(B,134,71) IC	TC7SET08FUS1
IC 4103	(A,131,72) IC	TC7SET08FUS1
IC 4104	(B,140,76) IC	OZ961ISN
IC 4105	(A,140,69) FET	SI6544DQ
IC 4106	(A,144,67) FET	SI6544DQ
IC 4301	(A,5,56) IC	TC7SH02FUS1
IC 4302	(A,9,59) IC	TC7WH08FU
IC 4303	(A,4,53) IC	TC7SH32FUS1
IC 4351	(A,78,76) IC	NJM2505F
IC 4401	(A,65,68) IC	NJM2138V
IC 4701	(A,34,61) IC	TC90A96AFG-P
IC 4801	(A,10,51) IC	M62343FP
IC 4802	(A,17,45) IC	TC7SET04FUS1
IC 4803	(B,12,52) IC	NJM2100V
IC 4804	(B,15,44) IC	TC7S66FU
IC 4805	(A,8,36) IC	NJM082BV
IC 4901	(A,50,46) IC	TC7SET04FUS1
IC 4902	(B,51,41) IC	TC74VHC04FTS1
IC 5001	(B,129,57) IC	TC7SH08FUS1
IC 5002	(A,105,44) IC	PE5536A
IC 5003	(A,126,58) IC	TC7SH08FUS1
IC 5004	(A,105,62) IC	S-80830CNNB-B8P
IC 5006	(A,129,64) IC	S-93C66BD0I-J8
IC 5151	(A,131,51) IC	BA3834F
IC 5301	(A,96,13) IC	PD8165A
IC 5501	(B,103,44) IC	HD64413ASFI
IC 5502	(B,116,22) IC	TC7WHU04FU
IC 5503	(B,82,53) IC	TC7SZ04FU
IC 5701	(A,90,60) IC	TC7MB3257FK
IC 5801	(B,95,14) IC	K4S641632K-UC75
Q 4001	(A,68,31) FET	RSQ035P03

Circuit Symbol and No.		Part No.
Q 4002	(A,68,34) FET	RSQ035P03
Q 4003	(A,64,49) Transistor	DTC114EU
Q 4101	(A,133,76) Transistor	2SC4617
Q 4102	(A,136,77) Transistor	2SC4617
Q 4103	(A,141,83) Transistor	2SA1774
Q 4151	(B,140,63) Transistor	2SC4617
Q 4152	(B,140,61) Transistor	2SC4617
Q 4153	(B,137,61) Transistor	UMX2N
Q 4371	(A,72,83) Transistor	2SC4081
Q 4372	(A,66,80) Transistor	2SA1576
Q 4401	(B,64,79) Transistor	2SC4081
Q 4601	(B,28,83) Transistor	2SC4617
Q 4602	(B,24,80) Transistor	2SC4617
Q 4603	(A,23,84) Transistor	2SC4617
Q 4701	(B,22,78) Transistor	2SC4617
Q 4702	(B,39,76) Transistor	2SC4617
Q 4801	(B,14,34) Transistor	UMX2N
Q 4802	(B,10,34) Transistor	UMT2N
Q 5001	(A,81,44) Transistor	DTC124EUA
Q 5251	(A,101,82) Transistor	2SA1797
Q 5252	(A,97,85) Transistor	DTC124EUA
Q 5271	(B,107,82) Transistor	DTC124EUA
Q 5272	(B,101,82) Transistor	2SA1037K
Q 5401	(B,119,10) Transistor	UMF5N
Q 5402	(B,116,10) Transistor	UMF5N
Q 5403	(B,123,15) Transistor	FMG12
D 4001	(B,74,60) Diode	RB500V-40
D 4002	(B,74,56) Diode	RB500V-40
D 4003	(A,68,28) Diode	U2FWJ44N
D 4004	(A,69,37) Diode	RB160M-30
D 4005	(B,64,41) Diode	RB548W
D 4006	(B,66,41) Diode	RB548W
D 4007	(A,58,41) Diode	RB548W
D 4008	(B,58,41) Diode	RB548W
D 4009	(B,60,41) Diode	RB548W
D 4101	(A,127,75) Diode	UDZS6R2(B)
D 4102	(A,136,82) Diode	1SS355
D 4103	(A,137,74) Diode	RB751V-40
D 4104	(A,135,63) Diode	HZU6R2(B3)
D 4105	(B,143,67) Diode	HZU6R2(B3)
D 4106	(A,134,29) Diode	MA143
D 4107	(A,134,37) Diode	MA143
D 4108	(A,133,34) Diode	HZU6R2(B3)
D 4151	(B,143,64) Diode	UDZS8R2(B)
D 4201	(A,127,16) Diode	UDZS5R6(B)
D 4202	(A,127,20) Diode	UDZS5R6(B)
D 4203	(A,128,23) Diode	UDZS5R6(B)
D 4204	(A,128,27) Diode	UDZS5R6(B)
D 4221	(B,66,14) Diode	UDZS5R6(B)
D 4222	(B,69,12) Diode	UDZS5R6(B)
D 4223	(B,68,7) Diode	UDZS5R6(B)
D 4224	(B,69,15) Diode	UDZS5R6(B)
D 4951	(Panel PCB) Chip LED	CL220UBXTS
D 4952	(Panel PCB) Chip LED	CL220UBXTS
D 5001	(A,104,64) Diode	MA111
D 5401	(B,124,11) Diode	MA111
L 4001	(A,69,18) Choke Coil 18 µH	CTH1250
L 4002	(A,62,17) Choke Coil 10 µH	CTH1249
L 4003	(A,61,25) Choke Coil 18 µH	CTH1250
L 4004	(A,52,14) Inductor	CTF1488
L 4005	(A,73,41) Choke Coil 68 µH	CTH1318
L 4007	(A,70,47) Inductor	DTL1096
L 4008	(B,54,57) Inductor	CTF1635
L 4009	(A,60,59) Inductor	CTF1635
L 4010	(B,57,57) Inductor	CTF1635
L 4011	(A,58,10) Inductor	CTF1635
L 4012	(B,65,54) Inductor	CTF1635
L 4013	(A,67,52) Inductor	CTF1635
L 4014	(A,53,24) Inductor	CTF1635
L 4015	(A,60,48) Inductor	CTF1635
L 4016	(A,65,46) Inductor	CTF1635
L 4101	(A,122,84) Coil	CTH1338
L 4102	(B,136,69) Inductor	CTF1306
L 4201	(A,96,65) Inductor	CTF1473
L 4301	(A,8,63) Inductor	LCKAW101J2520
L 4351	(A,76,76) Inductor	CTF1379
L 4371	(A,73,78) Inductor	LCKAW270J2520
L 4372	(A,73,75) Inductor	LCKAW390J2520
L 4373	(A,70,86) Inductor	LCKAW101J2520
L 4401	(B,67,76) Chip Ferrite Bead	CTF1399
L 4701	(A,46,79) Inductor	CTF1306
L 4702	(A,38,79) Inductor	CTF1306
L 4703	(A,36,78) Inductor	CTF1306
L 4704	(A,32,78) Inductor	CTF1306
L 4705	(A,35,80) Inductor	CTF1306
L 4706	(A,23,77) Inductor	CTF1306
L 4707	(A,29,78) Inductor	CTF1306
L 4708	(A,26,78) Inductor	CTF1306
L 4709	(A,51,72) Inductor	CTF1306
L 4710	(A,48,75) Inductor	CTF1306
L 4711	(A,48,77) Inductor	CTF1306
L 4712	(A,47,79) Inductor	CTF1306
L 4713	(A,18,74) Inductor	CTF1306
L 4714	(A,17,72) Inductor	CTF1306
L 4715	(A,17,71) Inductor	CTF1306
L 4716	(A,17,69) Inductor	CTF1306
L 4717	(A,17,68) Inductor	CTF1306
L 4718	(A,51,69) Inductor	CTF1306
L 4719	(A,51,66) Inductor	CTF1306
L 4720	(A,51,63) Inductor	CTF1306
L 4721	(A,17,66) Inductor	CTF1306
L 4722	(A,14,68) Inductor	CTF1306
L 4723	(A,17,64) Inductor	CTF1306
L 4724	(A,14,66) Inductor	CTF1306
L 4725	(A,17,63) Inductor	CTF1306
L 4726	(A,14,65) Inductor	CTF1306
L 4727	(A,51,60) Inductor	CTF1306
L 4728	(A,51,57) Inductor	CTF1306
L 4729	(A,17,61) Inductor	CTF1306
L 4730	(A,16,58) Inductor	CTF1306
L 4731	(A,16,57) Inductor	CTF1306
L 4732	(A,51,54) Inductor	CTF1306
L 4733	(A,50,52) Inductor	CTF1306
L 4734	(A,17,56) Inductor	CTF1306
L 4735	(A,17,52) Inductor	CTF1306
L 4736	(A,17,50) Inductor	CTF1306
L 4737	(A,17,49) Inductor	CTF1306
L 4738	(A,17,47) Inductor	CTF1306
L 4739	(A,44,46) Ferrite Bead	CTF1528
L 4740	(A,44,43) Ferrite Bead	CTF1528

Circuit Symbol and No.		Part No.
L 4741	(A,46,44) Inductor	CTF1306
L 4742	(A,48,44) Inductor	CTF1306
L 4743	(A,43,43) Ferrite Bead	CTF1528
L 4744	(A,42,41) Ferrite Bead	CTF1528
L 4745	(A,42,43) Ferrite Bead	CTF1528
L 4746	(A,41,45) Ferrite Bead	CTF1528
L 4747	(A,40,44) Inductor	CTF1306
L 4748	(A,37,40) Ferrite Bead	CTF1528
L 4749	(A,38,43) Inductor	CTF1306
L 4750	(A,37,44) Inductor	CTF1306
L 4751	(A,36,40) Ferrite Bead	CTF1528
L 4752	(A,35,41) Ferrite Bead	CTF1528
L 4753	(A,35,46) Ferrite Bead	CTF1528
L 4754	(A,34,41) Ferrite Bead	CTF1528
L 4755	(A,33,41) Ferrite Bead	CTF1528
L 4756	(A,33,44) Inductor	CTF1306
L 4757	(A,31,45) Ferrite Bead	CTF1528
L 4758	(A,31,42) Ferrite Bead	CTF1528
L 4759	(A,30,44) Ferrite Bead	CTF1528
L 4760	(A,30,42) Ferrite Bead	CTF1528
L 4761	(A,29,46) Ferrite Bead	CTF1528
L 4762	(A,29,43) Ferrite Bead	CTF1528
L 4763	(A,25,45) Ferrite Bead	CTF1528
L 4764	(A,24,45) Ferrite Bead	CTF1528
L 4765	(A,23,45) Ferrite Bead	CTF1528
L 4766	(A,22,43) Ferrite Bead	CTF1528
L 4767	(A,21,45) Ferrite Bead	CTF1528
L 4768	(A,21,43) Ferrite Bead	CTF1528
L 4769	(A,20,45) Ferrite Bead	CTF1528
L 4770	(A,27,43) Inductor	CTF1306
L 4771	(A,25,43) Inductor	CTF1306
L 4772	(A,55,29) Inductor	LCKAW101J2520
L 4801	(A,14,43) Inductor	CTF1306
L 4802	(A,10,44) Inductor	LCKAW101J2520
L 4803	(A,9,28) Inductor	LCKAW101J2520
L 4901	(A,53,34) Inductor	CTF1306
L 4902	(A,46,40) Inductor	CTF1306
L 4903	(A,21,36) Inductor	DTL1096
L 4904	(A,13,34) Inductor	DTL1096
L 4905	(A,54,46) Inductor	CTF1635
L 4906	(A,26,38) Inductor	CTF1635
L 4907	(A,18,40) Inductor	CTF1635
L 5001	(B,127,59) Inductor	CTF1379
L 5002	(A,121,44) Inductor	CTF1473
L 5003	(A,129,59) Inductor	CTF1379
L 5004	(A,103,28) Inductor	CTF1473
L 5005	(A,100,59) Inductor	CTF1473
L 5006	(A,97,62) Inductor	CTF1473
L 5007	(A,90,49) Inductor	CTF1473
L 5008	(A,87,24) Inductor	CTF1306
L 5009	(A,128,69) Inductor	CTF1306
L 5010	(B,117,76) Inductor	CTF1488
L 5011	(B,113,66) Inductor	CTF1488
L 5151	(A,134,58) Inductor	CTF1306
L 5301	(A,83,37) Inductor	CTF1488
L 5401	(B,122,9) Inductor	CTF1379
L 5501	(B,114,17) Inductor	CTF1379
L 5502	(B,91,78) Inductor	CTF1379
L 5503	(B,117,71) Inductor	CTF1488
L 5504	(B,113,28) Inductor	CTF1378

Circuit Symbol and No.		Part No.
L 5701	(A,83,51) Inductor	CTF1379
L 5702	(A,94,61) Inductor	CTF1473
L 5703	(A,80,56) Inductor	CTF1379
L 5801	(A,81,37) Inductor	CTF1488
T 4101	(A,142,42) Transformer	CTT1119
TH5001	(A,87,49) Thermistor	CCX1051
X 4701	(A,42,80) Crystal Resonator 42 MHz	CSS1604
X 5001	(A,104,58) Crystal Resonator 8.0 MHz	CSS1675
X 5501	(B,121,26) Crystal Resonator 33.0 MHz	CSS1629
X 5701	(A,83,55) Crystal Resonator 9.600 MHz	CWX3206
VR4101	(A,145,75) Semi-fixed 15 kΩ(B)	CCP1424
⚠FU4001	(A,54,12) Fuse 1.25 A	CEK1281
⚠FU4101	(A,122,79) Fuse 2 A	CEK1284
EF4501	(A,35,84) EMI Filter	CCG1082
EF4521	(A,32,84) EMI Filter	CCG1082
EF4541	(A,27,84) EMI Filter	CCG1082
TP5004	(A,105,83) Checker Chip	CKF1031
TP5005	(A,126,40) Checker Chip	CKF1031
TP5006	(A,126,29) Checker Chip	CKF1031

RESISTORS

R 4001	(B,73,58)	RS1/16SS684J
R 4002	(B,73,56)	RS1/16SS474J
R 4003	(B,55,18)	RS1/16S0R0J
R 4004	(B,56,18)	RS1/16S6801F
R 4005	(A,64,21)	RS1/16S0R0J
R 4006	(B,64,20)	RS1/16S0R0J
R 4007	(B,58,18)	RS1/16S201J
R 4008	(B,67,20)	RS1/16S1001D
R 4009	(B,55,21)	RS1/16S1001D
R 4010	(B,56,21)	RS1/16S682J
R 4011	(B,57,27)	RS1/16S5100F
R 4012	(B,68,22)	RS1/16S1600D
R 4013	(B,67,22)	RS1/16S102J
R 4014	(B,68,25)	RS1/16S2700D
R 4015	(B,58,25)	RS1/16S2001F
R 4016	(B,60,22)	RS1/16S684J
R 4017	(B,53,18)	RS1/16S0R0J
R 4018	(B,64,24)	RS1/16S333J
R 4019	(B,61,20)	RS1/16S123J
R 4020	(B,72,28)	RS1/16S273J
R 4021	(A,64,30)	RS1/16S150J
R 4022	(A,65,33)	RS1/16S150J
R 4023	(B,70,34)	RS1/16S563J
R 4024	(A,64,36)	RS1/16S5102D
R 4025	(B,56,38)	RS1/16S0R0J
R 4026	(B,53,35)	RS1/16S1002F
R 4027	(A,65,36)	RS1/16S4300D
R 4028	(B,55,35)	RS1/16S1802F
R 4029	(A,55,35)	RS1/16S2202F
R 4030	(A,65,39)	RS1/16S1802D
R 4031	(A,56,37)	RS1/16S0R0J
R 4032	(B,68,40)	RS1/16S3303D
R 4033	(A,64,43)	RS1/16S0R0J
R 4034	(B,69,43)	RS1/16S0R0J
R 4036	(A,62,36)	RS1/16S2703D
R 4102	(B,133,68)	RS1/16S103J
R 4103	(A,130,75)	RS1/16S103J
R 4104	(A,130,77)	RS1/16S104J

Circuit Symbol and No.		Part No.	Circuit Symbol and No.		Part No.
R 4105	(B,134,73)	RS1/16SS103J	R 4303	(B,13,59)	RS1/16SS473J
R 4106	(A,136,79)	RS1/16S473J	R 4305	(A,8,57)	RS1/16SS473J
R 4107	(A,138,81)	RS1/16S472J	R 4306	(B,13,63)	RS1/16SS473J
R 4108	(A,138,78)	RS1/16S105J	R 4351	(A,80,79)	RS1/16SS0R0J
R 4109	(A,141,81)	RS1/16S473J	R 4372	(A,81,80)	RS1/16SS432J
R 4110	(A,144,81)	RS1/16S333J	R 4373	(A,78,79)	RS1/16SS104J
R 4111	(A,143,78)	RS1/16S513J	R 4374	(A,73,86)	RS1/16SS153J
R 4112	(B,129,70)	RS1/16S103J	R 4375	(A,72,80)	RS1/16SS104J
R 4113	(B,133,76)	RS1/16S105J	R 4376	(A,75,81)	RS1/16SS681J
R 4114	(A,134,73)	RS1/16S102J	R 4377	(A,74,80)	RS1/16SS471J
R 4115	(A,141,76)	RS1/16S563J	R 4378	(A,68,78)	RS1/16SS272J
R 4116	(A,137,63)	RS1/16S103J	R 4379	(A,65,82)	RS1/16SS391J
R 4117	(B,143,68)	RS1/16S103J	R 4401	(A,70,63)	RS1/16S472J
R 4118	(A,134,31)	RS1/16S471J	R 4402	(A,70,67)	RS1/16S472J
R 4151	(B,143,62)	RS1/16S103J	R 4403	(A,70,64)	RS1/16S472J
R 4152	(B,137,57)	RS1/16S621J	R 4404	(A,66,61)	RS1/16S472J
R 4153	(B,140,66)	RS1/16S104J	R 4405	(A,67,75)	RS1/16S472J
R 4154	(B,141,70)	RS1/16S473J	R 4406	(A,70,71)	RS1/16S472J
R 4155	(B,138,59)	RS1/16S621J	R 4407	(A,70,69)	RS1/16S472J
R 4156	(B,135,59)	RS1/16S101J	R 4408	(A,70,60)	RS1/16S472J
R 4157	(B,134,61)	RS1/16S101J	R 4409	(A,70,61)	RS1/16S472J
R 4158	(B,137,63)	RS1/16S821J	R 4410	(A,70,66)	RS1/16S472J
R 4201	(B,77,56)	RS1/16S0R0J	R 4415	(B,63,67)	RS1/16S472J
R 4202	(A,140,86)	RS1/16S0R0J	R 4416	(B,67,68)	RS1/16S472J
R 4203	(A,11,22)	RS1/16S0R0J	R 4417	(A,63,61)	RS1/16S472J
R 4204	(A,106,81)	RS1/16SS0R0J	R 4418	(A,63,75)	RS1/16S472J
R 4205	(A,14,19)	RS1/16S0R0J	R 4419	(B,67,71)	RS1/16S472J
R 4206	(A,140,8)	RS1/16S0R0J	R 4420	(B,63,70)	RS1/16S472J
R 4207	(A,106,79)	RS1/16SS0R0J	R 4421	(B,74,72)	RS1/16S101J
R 4208	(A,105,81)	RS1/16SS0R0J	R 4422	(B,74,69)	RS1/16S101J
R 4209	(A,107,67)	RS1/16SS0R0J	R 4423	(B,69,72)	RS1/16S101J
R 4210	(A,106,67)	RS1/16SS0R0J	R 4424	(B,61,78)	RS1/16SS102J
R 4211	(A,78,5)	RS1/16S0R0J	R 4425	(B,64,77)	RS1/16SS272J
R 4212	(A,105,67)	RS1/16SS0R0J	R 4426	(B,62,74)	RS1/16SS472J
R 4213	(A,86,3)	RS1/16S0R0J	R 4427	(B,63,71)	RS1/16S101J
R 4214	(A,109,67)	RS1/16SS0R0J	R 4502	(B,71,75)	RS1/16S0R0J
R 4215	(A,140,5)	RS1/16S0R0J	R 4522	(B,76,78)	RS1/16S0R0J
R 4216	(A,81,85)	RS1/16S0R0J	R 4542	(B,74,75)	RS1/16S0R0J
R 4221	(B,60,11)	RS1/16SS151J	R 4562	(A,59,66)	RS1/16S0R0J
R 4222	(B,61,8)	RS1/16SS151J	R 4601	(B,28,85)	RS1/16SS1002D
R 4223	(B,63,6)	RS1/16SS151J	R 4602	(B,24,82)	RS1/16SS1002D
R 4224	(B,62,10)	RS1/16SS151J	R 4603	(A,21,85)	RS1/16SS1002D
R 4225	(B,63,8)	RS1/16SS151J	R 4604	(B,31,83)	RS1/16S6202D
R 4226	(B,59,9)	RS1/16SS151J	R 4605	(B,29,78)	RS1/16S6202D
R 4227	(B,60,9)	RS1/16SS151J	R 4606	(B,22,81)	RS1/16S6202D
R 4228	(B,61,6)	RS1/16SS151J	R 4607	(B,25,76)	RS1/16S6202D
R 4229	(B,63,12)	RS1/16SS151J	R 4608	(A,21,84)	RS1/16S6202D
R 4230	(B,61,10)	RS1/16SS151J	R 4609	(A,21,82)	RS1/16S6202D
R 4231	(B,61,13)	RS1/16SS472J	R 4610	(B,28,80)	RS1/16SS102J
R 4232	(B,62,14)	RS1/16SS472J	R 4611	(B,26,80)	RS1/16SS102J
R 4233	(B,62,13)	RS1/16SS472J	R 4612	(A,24,82)	RS1/16SS102J
R 4234	(B,59,14)	RS1/16SS471J	R 4701	(B,20,81)	RS1/16S1102D
R 4235	(B,66,11)	RS1/16SS471J	R 4703	(A,41,77)	RS1/16SS391J
R 4236	(B,65,6)	RS1/16SS151J	R 4704	(B,20,77)	RS1/16S2201D
R 4237	(B,69,9)	RS1/16SS471J	R 4705	(B,18,75)	RS1/16S2201D
R 4238	(B,79,33)	RS1/16S471J	R 4706	(A,42,76)	RS1/16SS105J
R 4239	(A,59,7)	RS1/16S0R0J	R 4707	(B,39,74)	RS1/16SS331J
R 4240	(B,67,9)	RS1/16S470J	R 4708	(B,37,76)	RS1/16SS152J
R 4301	(B,15,59)	RS1/16SS101J	R 4709	(B,23,76)	RS1/16SS102J
R 4302	(A,14,61)	RAB4CQ101J	R 4710	(B,37,84)	RS1/16S0R0J

Circuit Symbol and No.		Part No.
R 4711	(A,20,79)	RS1/16SS0R0J
R 4712	(B,19,75)	RS1/16SS0R0J
R 4716	(A,14,72)	RS1/16S0R0J
R 4717	(A,14,71)	RS1/16S101J
R 4719	(A,14,69)	RS1/16S101J
R 4720	(A,9,70)	RS1/16S470J
R 4721	(A,11,66)	RS1/16S470J
R 4722	(A,8,66)	RS1/16SS471J
R 4723	(A,11,65)	RS1/16SS333J
R 4724	(A,11,68)	RS1/16SS222J
R 4725	(A,9,69)	RS1/16SS152J
R 4726	(A,19,60)	RS1/16SS473J
R 4727	(A,44,41)	RS1/16SS221J
R 4728	(A,43,41)	RS1/16SS221J
R 4729	(A,40,39)	RAB4CQ221J
R 4730	(A,36,38)	RAB4CQ221J
R 4731	(A,31,39)	RAB4CQ221J
R 4732	(A,34,39)	RS1/16SS221J
R 4733	(A,33,39)	RS1/16SS221J
R 4734	(A,22,41)	RAB4CQ221J
R 4735	(A,29,41)	RS1/16SS221J
R 4736	(A,28,41)	RS1/16SS221J
R 4737	(A,24,41)	RS1/16SS221J
R 4738	(A,23,43)	RS1/16SS221J
R 4739	(A,20,43)	RS1/16SS221J
R 4801	(A,4,48)	RAB4CQ221J
R 4803	(B,11,57)	RS1/16S101J
R 4804	(A,14,46)	RS1/16SS681J
R 4806	(B,17,48)	RS1/16S101J
R 4807	(B,17,44)	RS1/16SS472J
R 4808	(A,11,37)	RS1/16S3302F
R 4809	(A,11,41)	RS1/16S223J
R 4811	(A,11,40)	RS1/16S5602F
R 4812	(B,14,39)	RS1/16S101J
R 4813	(B,11,30)	RS1/16SS153J
R 4814	(B,10,38)	RS1/16S153J
R 4815	(B,12,31)	RS1/16SS0R0J
R 4816	(B,12,34)	RS1/16SS0R0J
R 4817	(B,11,38)	RS1/16S100J
R 4818	(B,10,32)	RS1/16SS100J
R 4902	(A,53,40)	RS1/16S6800D
R 4903	(A,53,37)	RS1/16S27R0D
R 4904	(A,52,37)	RS1/16S10R0D
R 4905	(A,52,40)	RS1/16S1000D
R 4906	(A,50,40)	RS1/16S82R0F
R 4907	(A,49,37)	RS1/16S56R0D
R 4908	(A,48,37)	RS1/16S47R0D
R 4909	(A,49,41)	RS1/16S36R0D
R 4910	(A,47,39)	RS1/16S33R0F
R 4911	(A,46,37)	RS1/16S27R0D
R 4912	(A,44,37)	RS1/16S1800D
R 4913	(A,44,39)	RS1/16S82R0F
R 4914	(A,43,37)	RS1/16S12R0F
R 4915	(B,29,32)	RS1/16SS102J
R 4951	(Panel PCB)	RS1/16S331J
R 4952	(Panel PCB)	RS1/16S331J
R 5001	(B,125,58)	RS1/16SS470J
R 5002	(A,120,53)	RS1/16SS103J
R 5003	(A,122,54)	RS1/16S473J
R 5004	(A,124,45)	RS1/16SS471J

Circuit Symbol and No.		Part No.
R 5005	(A,124,46)	RS1/16SS470J
R 5006	(A,123,48)	RS1/16SS473J
R 5007	(A,121,48)	RS1/16SS473J
R 5008	(A,119,51)	RS1/16SS471J
R 5009	(A,119,52)	RS1/16SS471J
R 5010	(A,119,59)	RS1/16SS473J
R 5011	(A,121,57)	RS1/16SS473J
R 5012	(A,121,42)	RS1/16SS471J
R 5013	(A,118,44)	RS1/16SS102J
R 5014	(A,77,38)	RS1/16SS471J
R 5016	(A,125,49)	RS1/16SS473J
R 5017	(A,119,53)	RS1/16SS470J
R 5018	(A,119,56)	RS1/16SS470J
R 5019	(A,120,46)	RS1/16SS470J
R 5020	(A,121,50)	RS1/16SS473J
R 5021	(A,119,50)	RS1/16SS470J
R 5022	(A,123,58)	RS1/16SS471J
R 5023	(A,92,55)	RS1/16SS102J
R 5024	(A,114,58)	RAB4CQ471J
R 5025	(A,112,57)	RS1/16SS473J
R 5026	(A,111,57)	RS1/16SS471J
R 5027	(A,110,57)	RS1/16SS470J
R 5028	(A,110,60)	RS1/16SS470J
R 5029	(B,124,61)	RS1/16SS102J
R 5030	(A,107,60)	RS1/16S473J
R 5031	(A,108,56)	RS1/16SS471J
R 5032	(A,108,58)	RS1/16SS471J
R 5033	(A,103,66)	RS1/16SS124J
R 5034	(A,100,30)	RS1/16SS0R0J
R 5035	(A,99,58)	RS1/16SS473J
R 5036	(A,100,29)	RS1/16SS0R0J
R 5037	(A,99,60)	RS1/16SS473J
R 5039	(A,97,60)	RS1/16SS473J
R 5040	(A,97,57)	RS1/16SS473J
R 5041	(A,96,31)	RS1/16SS104J
R 5042	(A,91,47)	RS1/16SS473J
R 5043	(A,72,51)	RS1/16SS221J
R 5044	(A,73,52)	RS1/16SS221J
R 5045	(A,90,34)	RS1/16SS470J
R 5046	(A,91,36)	RS1/16SS470J
R 5047	(A,89,37)	RS1/16S470J
R 5048	(A,91,53)	RS1/16SS102J
R 5049	(A,86,41)	RS1/16SS471J
R 5050	(A,90,44)	RS1/16SS221J
R 5051	(A,88,44)	RS1/16SS221J
R 5052	(A,92,45)	RS1/16SS221J
R 5053	(A,90,46)	RS1/16SS221J
R 5054	(A,76,53)	RS1/16SS221J
R 5056	(A,93,33)	RS1/16SS103J
R 5057	(A,88,41)	RS1/16SS473J
R 5058	(A,84,45)	RS1/16SS473J
R 5059	(A,112,60)	RS1/16SS473J
R 5060	(A,96,29)	RS1/16SS474J
R 5061	(A,88,47)	RS1/16SS473J
R 5062	(A,102,67)	RS1/16SS102J
R 5063	(A,64,51)	RS1/16SS0R0J
R 5064	(A,90,42)	RS1/16SS470J
R 5065	(A,92,42)	RS1/16SS470J
R 5066	(A,86,42)	RS1/16SS102J
R 5067	(A,86,45)	RS1/16SS470J

Circuit Symbol and No.		Part No.
R 5069	(A,86,50)	RS1/16SS473J
R 5070	(A,87,37)	RS1/16S473J
R 5071	(A,86,51)	RS1/16SS473J
R 5072	(A,90,36)	RS1/16SS473J
R 5073	(A,89,53)	RAB4CQ102J
R 5076	(A,85,48)	RS1/16S153J
R 5077	(A,130,69)	RS1/16SS474J
R 5078	(A,125,62)	RS1/16SS103J
R 5079	(A,133,61)	RS1/16SS103J
R 5080	(A,80,41)	RS1/16SS473J
R 5081	(A,90,35)	RS1/16SS102J
R 5082	(A,90,38)	RS1/16SS102J
R 5083	(A,88,39)	RS1/16SS102J
R 5084	(A,89,34)	RS1/16SS473J
R 5151	(B,132,56)	RS1/16SS473J
R 5152	(B,127,49)	RS1/16SS273J
R 5153	(B,131,50)	RS1/16S563J
R 5154	(B,134,49)	RS1/16S104J
R 5251	(A,103,87)	RS1/16S271J
R 5252	(A,101,86)	RS1/16S103J
R 5271	(B,107,79)	RS1/16S332J
R 5272	(B,98,81)	RS1/16S332J
R 5301	(A,83,22)	RS1/16SS101J
R 5302	(A,82,18)	RAB4CQ101J
R 5303	(A,82,15)	RAB4CQ101J
R 5304	(A,83,12)	RAB4CQ101J
R 5305	(A,83,20)	RS1/16SS101J
R 5306	(A,83,9)	RAB4CQ101J
R 5307	(A,81,6)	RAB4CQ101J
R 5308	(A,84,5)	RS1/16S0R0J
R 5309	(A,112,27)	RAB4CQ101J
R 5310	(A,113,21)	RAB4CQ101J
R 5311	(A,111,12)	RAB4CQ101J
R 5312	(A,109,13)	RS1/16SS101J
R 5313	(A,110,9)	RAB4CQ101J
R 5314	(A,113,6)	RS1/16SS101J
R 5401	(B,119,6)	RS1/16SS103J
R 5402	(B,119,7)	RS1/16SS103J
R 5403	(B,115,6)	RS1/16SS103J
R 5404	(B,116,7)	RS1/16SS103J
R 5405	(B,126,16)	RS1/16SS102J
R 5406	(B,126,20)	RS1/16SS102J
R 5407	(B,119,14)	RS1/16SS105J
R 5408	(B,118,16)	RS1/16SS105J
R 5409	(B,116,14)	RS1/16SS0R0J
R 5410	(B,120,14)	RS1/16SS0R0J
R 5501	(B,121,55)	RAB4CQ470J
R 5502	(B,120,52)	RAB4CQ470J
R 5503	(B,121,49)	RAB4CQ470J
R 5504	(B,119,46)	RAB4CQ101J
R 5505	(B,128,43)	RAB4CQ101J
R 5506	(B,120,41)	RAB4CQ101J
R 5507	(B,124,37)	RAB4CQ101J
R 5508	(B,124,34)	RAB4CQ101J
R 5509	(B,120,33)	RS1/16SS101J
R 5510	(B,122,31)	RS1/16SS101J
R 5511	(B,116,19)	RS1/16SS0R0J
R 5512	(B,117,25)	RS1/16SS105J
R 5513	(B,115,26)	RS1/16S220J
R 5514	(B,117,31)	RS1/16SS473J

Circuit Symbol and No.		Part No.
R 5515	(B,118,22)	RS1/16SS151J
R 5516	(B,114,59)	RAB4CQ470J
R 5517	(B,114,64)	RS1/16S470J
R 5518	(B,109,60)	RS1/16SS473J
R 5519	(B,117,30)	RS1/16SS473J
R 5520	(B,112,23)	RS1/16SS330J
R 5522	(B,111,28)	RS1/16SS102J
R 5523	(B,111,27)	RS1/16SS102J
R 5524	(B,110,28)	RS1/16SS102J
R 5525	(B,110,27)	RS1/16SS102J
R 5526	(B,108,25)	RAB4CQ470J
R 5527	(B,109,62)	RS1/16SS101J
R 5528	(B,108,63)	RS1/16SS151J
R 5529	(B,107,63)	RS1/16SS151J
R 5531	(B,104,62)	RS1/16S473J
R 5532	(B,105,24)	RAB4CQ470J
R 5533	(B,102,25)	RAB4CQ470J
R 5534	(B,102,61)	RS1/16SS101J
R 5535	(B,102,59)	RS1/16SS302J
R 5536	(B,78,54)	RS1/16S101J
R 5537	(B,97,62)	RS1/16S471J
R 5538	(B,96,62)	RS1/16S471J
R 5539	(B,99,24)	RAB4CQ470J
R 5540	(B,97,26)	RS1/16SS470J
R 5541	(B,96,25)	RS1/16SS470J
R 5542	(B,95,26)	RS1/16SS470J
R 5543	(B,95,23)	RS1/16SS470J
R 5544	(B,94,62)	RS1/16S470J
R 5545	(B,81,76)	RS1/16S331J
R 5546	(B,81,73)	RS1/16S331J
R 5547	(B,93,61)	RS1/16SS473J
R 5548	(B,88,60)	RS1/16SS473J
R 5549	(B,88,59)	RS1/16SS473J
R 5550	(B,88,57)	RS1/16SS473J
R 5551	(B,82,72)	RS1/16S331J
R 5552	(B,94,27)	RS1/16SS470J
R 5553	(B,92,26)	RS1/16SS470J
R 5554	(B,92,28)	RAB4CQ680J
R 5555	(B,85,40)	RAB4CQ680J
R 5556	(B,88,24)	RAB4CQ680J
R 5557	(B,88,37)	RS1/16SS470J
R 5558	(B,86,37)	RS1/16SS470J
R 5706	(A,90,65)	RS1/16SS0R0J
R 5707	(A,86,62)	RS1/16SS0R0J
R 5708	(A,82,60)	RS1/16SS0R0J
R 5709	(A,85,60)	RS1/16SS0R0J
R 5801	(B,92,22)	RS1/16S0R0J

CAPACITORS

C 4001	(B,54,62)	CKSYB105K16
C 4002	(A,57,59)	CSZSR330M10
C 4003	(B,58,63)	CKSYB105K16
C 4004	(A,77,18)	CKSRYB104K16
C 4005	(B,63,53)	CSZS100M16
C 4006	(A,59,54)	CSZSR220M10
C 4007	(A,75,17)	CSZSR330M10
C 4008	(A,54,9)	CSZSR220M10
C 4009	(A,65,56)	CSZS100M10
C 4010	(A,63,57)	CKSSYB104K10

Circuit Symbol and No.			Part No.
C 4011	(B,73,62)		CKSSYB104K10
C 4012	(B,71,56)		CKSRYB105K10
C 4013	(A,74,54)		CKSSYB104K10
C 4014	(A,74,56)		CKSQYF105Z25
C 4015	(A,58,16)		CSZS100M16
C 4016	(A,56,16)		CKSRYB105K10
C 4017	(A,55,26)		CKSRYB104K16
C 4018	(B,58,21)		CKSRYB473K50
C 4019	(A,68,24)	68 µF/6.3 V	CCH1440
C 4020	(B,64,21)		CCSRCH331J50
C 4021	(A,67,22)		CKSRYB104K16
C 4022	(B,54,23)		CKSRYB104K16
C 4023	(B,54,25)		CSZS100M16
C 4024	(B,59,20)		CKSRYB103K50
C 4025	(B,64,23)		CCSRCH101J50
C 4026	(B,67,25)		CKSRYB103K50
C 4027	(B,62,22)		CKSRYB393K16
C 4028	(B,58,23)		CKSRYB393K16
C 4029	(A,74,23)		CKSRYB103K50
C 4030	(B,69,28)		CKSRYB104K25
C 4031	(A,75,26)	10 µF	CCG1138
C 4032	(B,55,29)		CKSRYB393K16
C 4033	(A,75,29)	10 µF	CCG1138
C 4034	(A,52,17)		CKSRYB224K16
C 4035	(B,69,29)		CKSRYB105K10
C 4036	(B,70,31)		CKSRYB102K50
C 4037	(A,75,32)	10 µF	CCG1138
C 4039	(A,73,35)		CKSRYB103K50
C 4040	(A,58,33)		CKSRYB102K50
C 4041	(B,70,32)		CKSRYB104K25
C 4042	(B,53,32)		CKSRYB105K10
C 4043	(B,70,36)		CKSRYB105K10
C 4044	(B,69,36)		CKSRYB103K50
C 4045	(B,57,38)		CKSRYB104K16
C 4046	(A,60,34)		CKSYB475K16
C 4047	(B,64,39)		CKSRYB472K50
C 4048	(B,66,39)		CKSRYB472K50
C 4049	(A,65,41)		CKSRYB104K16
C 4050	(A,59,37)		CKSRYB103K50
C 4051	(A,60,39)		CKSRYB104K16
C 4052	(B,59,39)		CKSRYB104K16
C 4053	(B,61,39)		CKSRYB104K16
C 4054	(A,68,42)	33 µF/10 V	CCH1586
C 4055	(A,63,46)		CKSQYF105Z25
C 4056	(B,65,44)		CKSRYB104K25
C 4057	(B,66,45)		CKSQYF105Z25
C 4059	(A,57,44)		CKSQYF105Z25
C 4060	(B,58,45)		CKSQYF105Z25
C 4061	(B,62,45)		CKSQYF225Z16
C 4062	(B,60,45)		CKSQYF225Z16
C 4063	(A,61,41)		CKSRYB105K10
C 4064	(B,56,41)		CKSRYB105K10
C 4065	(A,68,49)		CKSQYF105Z25
C 4066	(A,58,48)		CKSQYF105Z25
C 4067	(B,67,56)		CKSSYB104K10
C 4068	(B,66,57)		CSZS100M10
C 4070	(B,91,70)		CKSYB475K10
C 4071	(A,67,86)		CKSYB475K10
C 4101	(A,113,87)	10 µF	CCG1138
C 4102	(A,116,87)	10 µF	CCG1138

Circuit Symbol and No.			Part No.
C 4103	(B,116,82)		CKSRYB104K16
C 4104	(B,123,77)		CKSRYB105K10
C 4105	(B,136,72)		CKSSYB104K10
C 4106	(A,140,78)		CKSRYB104K16
C 4107	(B,142,81)		CKSRYB104K16
C 4108	(B,138,81)		CKSRYB105K10
C 4110	(B,139,81)		CKSRYB474K10
C 4111	(B,144,81)		CKSRYB332K50
C 4112	(B,141,81)		CKSRYB105K10
C 4113	(B,145,81)		CKSRYB152K50
C 4114	(A,131,74)		CKSRYB104K16
C 4115	(B,135,76)		CKSRYB103K50
C 4116	(B,143,70)		CKSRYB473K50
C 4117	(B,139,70)		CKSRYB473K50
C 4118	(A,141,74)		CKSRYB221K50
C 4119	(A,137,68)	10 µF	CCG1138
C 4120	(A,147,67)	10 µF	CCG1138
C 4121	(A,141,63)		CKSRYB105K10
C 4122	(A,140,63)		CKSRYB105K10
C 4123	(A,134,23)	22 pF	CCG1140
C 4124	(B,133,39)		CKSRYB223K50
C 4151	(B,143,60)		CKSRYB104K16
C 4201	(A,127,15)		CKSRYB102K50
C 4202	(A,127,18)		CKSRYB102K50
C 4203	(A,128,22)		CKSRYB102K50
C 4204	(A,128,25)		CKSRYB102K50
C 4206	(B,96,73)		CKSRYB104K16
C 4207	(B,83,82)		CKSRYB104K16
C 4209	(A,12,25)		CCSRCH101J50
C 4213	(A,82,61)		CCSRCH101J50
C 4214	(A,98,80)		CKSRYB104K16
C 4215	(A,97,78)		CKSRYB104K16
C 4221	(B,64,14)		CKSRYB104K16
C 4222	(B,69,10)		CKSRYB104K16
C 4224	(B,69,14)		CKSRYB104K16
C 4225	(B,78,25)		CKSRYB104K16
C 4302	(A,3,58)		CKSSYB104K10
C 4303	(A,6,59)		CKSSYB104K10
C 4304	(A,4,50)		CKSSYB104K10
C 4305	(A,4,61)		CSZS100M10
C 4351	(A,80,72)	10 µF	CCG1171
C 4352	(A,78,72)	10 µF	CCG1171
C 4355	(A,76,79)		CKSSYB104K10
C 4371	(A,79,82)	10 µF	CCG1171
C 4372	(A,75,80)		CCSSCH680J50
C 4373	(A,71,78)		CCSSCH101J50
C 4374	(A,71,76)		CCSSCK2R0C50
C 4375	(A,70,78)		CCSSCH680J50
C 4376	(A,66,83)		CKSSYB104K10
C 4377	(A,69,82)		CSZSR330M10
C 4401	(A,73,62)	10 µF	CCG1171
C 4402	(A,73,66)	10 µF	CCG1171
C 4403	(A,73,67)	10 µF	CCG1171
C 4404	(A,73,64)	10 µF	CCG1171
C 4405	(A,73,71)	10 µF	CCG1171
C 4406	(A,73,69)	10 µF	CCG1171
C 4407	(A,77,61)	10 µF	CCG1171
C 4408	(A,73,60)	10 µF	CCG1171
C 4409	(A,66,63)		CCSRCH6R0D50
C 4410	(A,67,73)		CCSRCH6R0D50

Circuit Symbol and No.		Part No.
C 4411	(A,63,63)	CCSRCH6R0D50
C 4412	(A,63,73)	CCSRCH6R0D50
C 4413	(B,62,78)	CKSSYB104K10
C 4414	(B,62,76)	CKSSYB102K50
C 4415	(B,64,75)	CKSSYB104K10
C 4601	(B,32,84) 2.2 µF	CCG1179
C 4602	(B,24,84) 2.2 µF	CCG1179
C 4603	(A,23,87) 2.2 µF	CCG1179
C 4701	(A,43,77)	CCSSCH9R0D50
C 4702	(B,21,84) 2.2 µF	CCG1179
C 4704	(A,40,80)	CCSSCH9R0D50
C 4705	(B,38,79)	CKSSYB104K10
C 4706	(B,37,78)	CCSSCH4R0C50
C 4707	(A,32,80)	CKSSYB104K10
C 4708	(A,30,80)	CKSSYB104K10
C 4709	(A,29,80)	CKSSYB104K10
C 4712	(A,28,80)	CKSSYB104K10
C 4713	(A,26,80)	CKSSYB104K10
C 4714	(A,25,80)	CKSSYB104K10
C 4715	(A,24,80)	CKSSYB104K10
C 4717	(A,21,75)	CKSSYB104K10
C 4719	(A,45,76)	CKSSYB104K10
C 4720	(A,46,75)	CKSSYB104K10
C 4721	(A,49,72)	CKSSYB104K10
C 4722	(A,45,78)	CKSSYB104K10
C 4723	(A,39,76)	CKSSYB104K10
C 4724	(B,40,72)	CKSSYB103K16
C 4725	(B,39,72)	CCSSCH181J25
C 4726	(A,37,76)	CKSSYB104K10
C 4727	(B,37,73)	CKSSYB104K10
C 4728	(B,36,70)	CKSSYB104K10
C 4729	(B,35,69)	CKSSYB104K10
C 4730	(A,34,78)	CKSSYB104K10
C 4731	(A,34,76)	CKSSYB104K10
C 4732	(B,34,69)	CKSSYB104K10
C 4733	(B,32,70)	CKSSYB104K10
C 4734	(A,32,76)	CKSSYB104K10
C 4735	(B,30,71)	CKSSYB104K10
C 4736	(A,29,76)	CKSSYB104K10
C 4737	(B,28,71)	CKSSYB104K10
C 4738	(B,27,71)	CKSSYB104K10
C 4739	(A,26,76)	CKSSYB104K10
C 4740	(A,24,76)	CKSRYB104K16
C 4741	(A,19,73)	CKSSYB104K10
C 4742	(A,19,69)	CKSSYB104K10
C 4743	(A,49,68)	CKSSYB104K10
C 4744	(A,49,66)	CKSSYB104K10
C 4745	(A,19,67)	CKSSYB104K10
C 4746	(A,19,65)	CKSSYB104K10
C 4747	(A,49,62)	CKSSYB104K10
C 4748	(A,49,60)	CKSSYB104K10
C 4749	(A,49,56)	CKSSYB104K10
C 4750	(B,14,66)	CKSSYB104K10
C 4751	(A,19,62)	CKSSYB104K10
C 4753	(A,18,58)	CKSSYB104K10
C 4754	(A,19,57)	CKSSYB104K10
C 4755	(A,49,54)	CKSSYB104K10
C 4756	(A,49,50)	CKSSYB104K10
C 4757	(A,19,55)	CKSSYB104K10
C 4759	(A,18,54)	CKSSYB104K10

Circuit Symbol and No.		Part No.
C 4760	(A,19,53)	CKSSYB104K10
C 4761	(A,19,51)	CKSSYB104K10
C 4762	(A,19,48)	CKSRYB105K10
C 4763	(A,47,47)	CKSSYB104K10
C 4764	(A,45,46)	CKSSYB104K10
C 4765	(A,40,46)	CKSSYB104K10
C 4766	(A,38,45)	CKSSYB104K10
C 4767	(A,38,46)	CKSSYB104K10
C 4768	(A,33,46)	CKSSYB104K10
C 4769	(A,28,45)	CKSSYB104K10
C 4770	(A,27,46)	CKSSYB104K10
C 4771	(A,54,52)	CSZSR330M10
C 4803	(A,13,55)	CSZS100M16
C 4805	(A,17,43)	CKSSYB104K10
C 4807	(B,10,47)	CKSSYB104K10
C 4808	(B,14,46)	CKSRYB105K10
C 4809	(B,17,46)	CKSRYB105K10
C 4810	(A,6,32)	CKSSYB104K10
C 4811	(A,4,39)	CKSRYB104K25
C 4812	(A,5,30)	CSZSR220M16
C 4813	(A,4,42) 4.7 µF	CCG1111
C 4814	(A,11,34)	CKSRYB105K10
C 4815	(A,4,33)	CKSRYB104K16
C 4901	(A,51,48)	CKSSYB104K10
C 4902	(B,55,45)	CKSSYB104K10
C 4903	(A,51,44)	CSZS100M16
C 4904	(A,24,39)	CKSSYB104K10
C 4905	(A,21,39)	CKSSYB104K10
C 4906	(A,16,39)	CKSRYB104K25
C 4907	(A,14,38)	CKSRYB104K25
C 4908	(A,27,35)	CSZSR220M16
C 4909	(A,23,36)	CSZS100M16
C 4910	(A,12,30) 4.7 µF	CCG1111
C 4911	(A,18,36)	CKSQYF334Z25
C 4912	(A,28,33)	CKSSYB104K10
C 4913	(A,26,33)	CKSSYB104K10
C 4914	(A,22,33)	CKSRYB104K25
C 4915	(A,15,33)	CKSRYB104K25
C 4951	(Panel PCB)	CKSRYB104K16
C 4952	(Panel PCB)	CKSRYB104K16
C 5001	(B,128,61)	CKSRYB104K16
C 5002	(A,118,46)	CKSSYB104K10
C 5003	(A,118,38)	CKSSYB104K10
C 5004	(A,121,51)	CKSSYB102K50
C 5005	(A,116,56)	CKSSYB104K10
C 5006	(A,129,57)	CKSSYB104K10
C 5007	(A,109,31)	CKSSYB104K10
C 5008	(A,106,57)	CKSSYB104K10
C 5009	(A,104,30)	CKSSYB104K10
C 5010	(A,100,57)	CKSSYB104K10
C 5011	(A,102,62)	CKSRYB105K10
C 5012	(A,98,30)	CKSSYB104K10
C 5013	(A,95,58)	CCSRCH102J25
C 5014	(A,95,56)	CKSRYB104K16
C 5015	(A,90,40)	CKSSYB104K10
C 5017	(B,111,78)	CKSYB475K10
C 5018	(A,89,27)	CKSSYB103K16
C 5019	(A,83,25)	CKSYB475K10
C 5020	(A,92,48)	CKSSYB104K10
C 5021	(B,123,59)	CKSRYB102K50

Circuit Symbol and No.		Part No.
C 5022	(A,121,77)	CKSRYB104K16
C 5023	(A,124,74)	CSZSC101M10
C 5024	(A,125,68)	CKSSYB104K10
C 5025	(A,90,56)	CKSSYB103K16
C 5026	(A,119,65)	CKSRYB104K16
C 5027	(A,121,64)	CSZSC101M10
C 5151	(B,132,54)	CKSSYB104K10
C 5152	(B,134,47)	CKSSYB104K10
C 5153	(B,132,53)	CKSSYB104K10
C 5154	(B,134,45)	CKSSYB104K10
C 5155	(A,131,57)	CKSRYB105K10
C 5301	(A,110,15)	CKSRYB105K10
C 5302	(A,86,30)	CSZSC101M10
C 5303	(A,88,31)	CKSRYB104K16
C 5401	(B,126,14)	CKSSYB473K10
C 5402	(B,122,7)	CKSSYB102K50
C 5403	(B,118,14)	CKSSYB102K50
C 5404	(B,116,16)	CKSSYB102K50
C 5405	(B,127,19)	CKSSYB473K10
C 5501	(B,114,19)	CKSSYB104K10
C 5502	(A,117,76)	CSZSC101M10
C 5503	(A,118,71)	CKSRYB105K10
C 5504	(B,118,54)	CKSRYB105K10
C 5505	(B,118,49)	CKSRYB105K10
C 5506	(B,118,42)	CKSRYB105K10
C 5507	(B,118,36)	CKSRYB105K10
C 5508	(B,118,24)	CCSRCH5R0D50
C 5509	(B,118,27)	CCSRCH5R0D50
C 5510	(B,111,60)	CKSRYB105K10
C 5511	(B,115,28)	CCSRCH220J50
C 5512	(B,110,23)	CKSRYB105K10
C 5513	(B,108,29)	CKSRYB105K10
C 5514	(B,111,25)	CKSSYB471K50
C 5515	(B,110,25)	CKSSYB471K50
C 5516	(B,105,60)	CKSRYB105K10
C 5517	(B,86,77)	CKSYB475K10
C 5518	(B,104,29)	CKSRYB105K10
C 5519	(B,101,65)	CKSSYB104K10
C 5520	(B,81,52)	CKSSYB104K10
C 5521	(B,101,59)	CKSSYB104K10
C 5522	(B,88,73)	CKSYB475K10
C 5523	(B,86,69)	CKSYB475K10
C 5524	(B,99,29)	CKSRYB105K10
C 5525	(B,91,63)	CCSRCH101J50
C 5526	(B,96,60)	CKSRYB105K10
C 5527	(B,88,48)	CKSRYB105K10
C 5528	(B,88,44)	CKSRYB105K10
C 5529	(B,88,39)	CKSRYB105K10
C 5530	(B,88,34)	CKSRYB105K10
C 5531	(B,95,29)	CKSRYB105K10
C 5701	(A,82,52)	CKSSYB103K16
C 5702	(A,79,56)	CCSRCH150J50
C 5703	(A,90,63)	CKSSYB104K10
C 5801	(B,105,6)	CKSRYB105K10
C 5802	(B,108,7)	CKSRYB105K10
C 5803	(B,98,6)	CKSRYB105K10
C 5804	(B,95,7)	CKSRYB105K10
C 5805	(B,83,6)	CKSRYB105K10
C 5806	(A,81,30)	CSZSC101M10
C 5807	(B,83,21)	CKSRYB104K16
C 5808	(B,102,22)	CKSRYB105K10
C 5809	(B,98,21)	CKSRYB105K10

H

Unit Number : CWN1686
Unit Name : Key Unit

MISCELLANEOUS

IC 4251	IC	SBX3050-01
D 4251	LED	SML412BC5T(MN)
D 4252	LED	SML412BC5T(MN)
D 4253	LED	SML412BC5T(MN)
D 4254	LED	SML412BC5T(MN)
D 4255	LED	SML412BC5T(MN)
D 4256	LED	SML412BC5T(MN)
D 4257	LED	SML412BC5T(MN)
D 4258	LED	SML412BC5T(MN)
D 4259	LED	SML412BC5T(MN)
D 4260	LED	SML412BC5T(MN)
S 4251	Push Switch	CSG1155
S 4252	Push Switch	CSG1155
S 4253	Push Switch	CSG1155
S 4254	Push Switch	CSG1155
S 4255	Push Switch	CSG1155
S 4256	Push Switch	CSG1155
S 4257	Push Switch	CSG1155
S 4258	Push Switch	CSG1155
S 4259	Push Switch	CSG1155
S 4260	Push Switch	CSG1155
S 4261	Push Switch	CSG1155

RESISTORS

R 4251	RS1/16S222J
R 4252	RS1/16S472J
R 4253	RS1/16S103J
R 4254	RS1/16S222J
R 4255	RS1/16S472J
R 4256	RS1/16S103J
R 4257	RS1/16S222J
R 4258	RS1/16S472J
R 4259	RS1/16S103J

CAPACITORS

C 4251	CKSRYB104K50
C 4252	CKSRYB104K50
C 4253	CKSRYB104K50
C 4254	CKSRYB104K50
C 4255	CKSRYB104K50
C 4256	CKSRYB104K50
C 4257	CKSRYB104K50
C 4258	CKSRYB104K50
C 4259	CKSRYB104K50
C 4260	CKSRYB104K50
C 4261	CKSRYB104K50

I

Unit Number : CZW5026
Unit Name : Main PCB Unit

Circuit Symbol and No.		Part No.
MISCELLANEOUS		
IC 1	IC	BA6288FS
IC 2	IC	S-812C50AMC-C3E
IC 3	IC	TC7W14FU
IC 4	Photo-interrupter	GP2L24B
IC 5	Photo-interrupter	GP2L24B
Q 1	Transistor	2SB1185
Q 2	Transistor	IMX1
D 1	Diode	HZU6R2(B2)
L 2	Inductor	LCTAW2R2J2520
⚠FU1	Fuse 2 A	CEK1304
RESISTORS		
R 1		RS1/16S223J
R 2		RS1/8S271J
R 3		RS1/16S332J
R 4		RS1/16S471J
R 5		RS1/16S222J
R 11		RS1/10S0R0J
R 12		RS1/16S222J
R 13		RS1/16S222J
R 14		RS1/16S821J
R 15		RS1/16S821J
R 19		RS1/16S102J
R 20		RS1/16S102J
R 21		RS1/16S102J
R 22		RS1/16S102J
CAPACITORS		
C 1		CKSRYB153K50
C 2		CZC5169
C 3		CKSRYB105K10
C 7		CEVW100M16
C 8		CKSRYB104K50
C 9		CKSRYB473K50
C 10		CKSRYB473K50
C 11		CEVW100M16
C 12		CEVW100M16
C 13		CKSRYB104K50
C 14		CKSRYB104K50

D

Unit Number : CWX3333
Unit Name : DVD Core Unit

Circuit Symbol and No.		Part No.
MISCELLANEOUS		
IC 1001	(A,7,9) IC	S-L2980A50MC-C7J
IC 1003	(A,83,36) IC	LTC3411EMS
IC 1201	(A,23,73) IC	AN8471SAT1
IC 1240	(A,49,74) IC	BD7962FM
IC 1501	(A,86,79) IC	MN35104UB
IC 1570	(B,68,87) IC	EDS1232AATA-75
IC 1601	(B,108,57) IC	PD6541B
IC 1602	(B,120,62) IC	TC7SH86FUS1
IC 1651	(B,108,27) IC	M5M5V216ATP-70HI
IC 1652	(B,98,36) IC	TC7SZ126FU
IC 1671	(B,108,43) IC	TC74LCX16373AFT
IC 1672	(B,98,40) IC	TC7SZ08FU
IC 1801	(B,33,92) IC	SM8707LV
IC 1802	(B,33,81) IC	TC7WH157FU
IC 1851	(B,16,87) IC	PCM1742KE
IC 1852	(B,17,79) IC	NJM2100V
IC 1853	(B,17,74) IC	NJM2100V
IC 1901	(A,23,56) IC	BA033SFP
IC 2001	(A,108,39) IC	PE5555A
IC 2002	(A,98,28) IC	BR93L56RFVM-W
IC 2003	(A,98,23) IC	TC74HC4053AFT
IC 2006	(B,122,25) IC	NJM2904V
Q 1002	(A,76,37) Transistor	DTC114EU
Q 1101	(A,53,91) Transistor	2SB1260
Q 1102	(A,53,97) Transistor	2SB1260
Q 1103	(A,58,102) Transistor	DTC114EU
Q 1104	(A,55,102) Transistor	2SA1576
Q 1105	(A,50,102) Transistor	2SC4081
Q 1106	(A,63,93) Transistor	2SC4081
Q 1107	(A,63,99) Transistor	2SC4081
Q 1551	(A,107,98) Transistor	2SA1576
Q 2001	(A,123,42) Transistor	2SA2018
D 1001	(A,12,7) Diode	1SR154-400
D 1101	(A,49,91) Diode	1SS355
D 1102	(A,49,96) Diode	1SS355
D 2001	(B,94,36) Diode	DAN202U
L 1001	(A,77,30) Inductor	CTF1623
L 1002	(A,86,26) Inductor	CTF1624
L 1022	(A,9,5) Inductor	CTF1558
L 1101	(A,19,99) Inductor	CTF1305
L 1501	(A,118,69) Inductor	CTF1378
L 1502	(A,121,61) Inductor	CTF1487
L 1503	(B,75,71) Inductor	CTF1488
L 1554	(A,89,98) Inductor	CTF1473
L 1555	(A,90,100) Inductor	CTF1473
L 1556	(A,96,103) Inductor	CTF1400
L 1557	(A,103,102) Inductor	CTF1395
L 1558	(A,106,84) Inductor	CTF1473
L 1559	(A,73,101) Inductor	CTF1387
L 1561	(A,112,97) Inductor	CTF1473
L 1601	(B,112,68) Inductor	CTF1464
L 1651	(B,120,35) Inductor	CTF1464
L 1671	(B,120,39) Inductor	CTF1473
L 1801	(B,27,93) Inductor	CTF1558
L 1802	(B,27,90) Inductor	CTF1558
L 1803	(B,30,76) Inductor	CTF1464
L 1804	(B,35,76) Inductor	CTF1385
L 1805	(B,35,87) Inductor	CTF1385
L 1851	(B,25,89) Inductor	CTF1379
L 1852	(B,25,83) Inductor	CTF1473
L 1901	(B,17,15) Inductor	CTF1487
L 1902	(A,14,20) Inductor	CTF1558
L 1903	(A,16,22) Inductor	CTF1558
L 1904	(B,23,24) Inductor	CTF1468
L 1907	(B,23,22) Inductor	CTF1558
X 1801	(B,34,99) Reconator 27.000 MHz	CSS1661
X 2001	(A,109,50) Resonator 9.830 MHz	CSS1684
VR1551	(A,86,103) Semi-fixed 10kΩ(B)	CCP1448
EF1570	(B,75,74) EMI Filter	DTF1106
EF1801	(B,27,87) EMI Filter	DTL1106
EF1802	(B,30,79) EMI Filter	DTL1106

Circuit Symbol and No.			Part No.
EF1803	(B,27,96)	EMI Filter	DTL1106
EF1901	(A,11,20)	EMI Filter	DTL1106
EF1902	(A,13,22)	EMI Filter	DTL1106
EF1903	(B,21,24)	EMI Filter	DTL1106
EF1905	(B,13,15)	EMI Filter	DTF1106
EF1907	(B,21,22)	EMI Filter	DTL1106

RESISTORS

R 1003	(A,85,41)	RS1/16SS1003D
R 1005	(A,83,41)	RS1/16SS1501D
R 1006	(A,85,42)	RS1/16SS8202D
R 1007	(A,83,42)	RS1/16SS1502D
R 1008	(A,81,42)	RS1/16SS101J
R 1010	(A,88,37)	RS1/16SS105J
R 1011	(A,79,37)	RS1/16SS105J
R 1013	(A,85,39)	RS1/16SS103J
R 1014	(A,79,39)	RS1/16SS1203D
R 1015	(A,78,39)	RS1/16SS2402D
R 1016	(A,77,39)	RS1/16SS0R0J
R 1017	(A,75,39)	RS1/16SS0R0J
R 1018	(A,89,37)	RS1/16SS105J
R 1021	(A,83,39)	RS1/16SS122J
R 1101	(A,61,90)	RS1/16S6R8J
R 1102	(A,57,91)	RS1/16SS3R9J
R 1103	(A,57,89)	RS1/16SS3R9J
R 1104	(A,56,89)	RS1/16SS3R9J
R 1105	(A,56,91)	RS1/16SS3R9J
R 1106	(A,61,97)	RS1/16S6R8J
R 1107	(A,57,98)	RS1/16SS3R9J
R 1108	(A,57,96)	RS1/16SS3R9J
R 1109	(A,56,96)	RS1/16SS3R9J
R 1110	(A,56,98)	RS1/16SS3R9J
R 1111	(A,54,104)	RS1/16SS272J
R 1112	(A,57,104)	RS1/16SS472J
R 1113	(A,50,104)	RS1/16SS102J
R 1114	(A,56,94)	RS1/16SS221J
R 1115	(A,57,100)	RS1/16SS221J
R 1116	(A,63,95)	RS1/16SS331J
R 1117	(A,63,101)	RS1/16SS221J
R 1120	(A,57,93)	RS1/16SS0R0J
R 1201	(A,18,96)	RS1/16SS181J
R 1202	(A,14,95)	RS1/16SS181J
R 1203	(A,16,74)	RS1/16SS513J
R 1204	(A,16,71)	RS1/16SS221J
R 1206	(A,29,70)	RS1/16SS513J
R 1209	(A,19,88)	RS1/10S391J
R 1210	(A,15,88)	RS1/10S391J
R 1211	(A,29,76)	RS1/16SS1R0J
R 1212	(A,29,75)	RS1/16SS1R0J
R 1213	(A,29,74)	RS1/16SS1R0J
R 1214	(A,29,73)	RS1/16SS1R0J
R 1215	(A,29,72)	RS1/16SS1R0J
R 1216	(A,29,71)	RS1/16SS1R0J
R 1217	(A,15,75)	RS1/16SS102J
R 1251	(A,54,84)	RS1/16SS102J
R 1252	(A,51,85)	RS1/16SS472J
R 1253	(A,52,82)	RS1/16SS823J
R 1254	(A,52,84)	RS1/16SS122J
R 1255	(A,51,84)	RS1/16SS122J
R 1256	(A,51,82)	RS1/16SS682J
R 1257	(A,54,82)	RAB4CQ103J
R 1258	(A,47,84)	RS1/16SS223J
R 1259	(A,45,84)	RS1/16SS223J
R 1260	(A,46,82)	RS1/16SS393J
R 1261	(A,45,82)	RS1/16SS393J
R 1262	(A,54,67)	RS1/16SS273J
R 1263	(A,53,67)	RS1/16SS153J
R 1264	(A,52,67)	RS1/16SS102J
R 1265	(A,48,67)	RS1/16SS183J
R 1266	(A,47,67)	RS1/16SS333J
R 1272	(A,47,85)	RS1/16SS102J
R 1273	(A,45,85)	RS1/16SS102J
R 1274	(A,56,83)	RS1/10S0R0J
R 1501	(A,89,58)	RS1/16SS0R0J
R 1502	(A,80,63)	RS1/16SS0R0J
R 1503	(A,81,60)	RAB4CQ101J
R 1504	(A,82,58)	RS1/16SS0R0J
R 1505	(A,83,58)	RS1/16SS0R0J
R 1506	(A,84,60)	RAB4CQ101J
R 1507	(A,86,63)	RS1/16SS0R0J
R 1508	(A,87,60)	RAB4CQ101J
R 1509	(A,87,58)	RS1/16SS0R0J
R 1511	(A,90,60)	RAB4CQ101J
R 1512	(A,90,58)	RS1/16SS0R0J
R 1513	(A,92,59)	RS1/16SS473J
R 1514	(A,93,61)	RS1/16SS104J
R 1515	(A,105,66)	RS1/16SS222J
R 1521	(A,96,57)	RS1/16SS0R0J
R 1522	(A,103,68)	RS1/16SS103J
R 1523	(A,94,61)	RS1/16SS104J
R 1525	(A,95,59)	RS1/16SS102J
R 1526	(A,94,57)	RS1/16SS0R0J
R 1529	(A,95,57)	RS1/16SS0R0J
R 1530	(A,97,63)	RS1/16SS104J
R 1531	(A,99,60)	RS1/16S221J
R 1532	(A,100,60)	RS1/16SS104J
R 1536	(A,99,63)	RS1/16SS104J
R 1537	(A,100,63)	RS1/16SS104J
R 1539	(A,103,75)	RS1/16SS104J
R 1540	(A,103,70)	RS1/16SS221J
R 1541	(A,104,71)	RS1/16SS473J
R 1543	(A,103,72)	RS1/16SS104J
R 1544	(A,103,74)	RS1/16SS102J
R 1545	(A,104,74)	RS1/16SS102J
R 1546	(A,105,64)	RS1/16SS104J
R 1547	(A,104,75)	RS1/16SS330J
R 1548	(A,95,61)	RS1/16SS104J
R 1555	(A,79,98)	RS1/16S101J
R 1556	(A,80,101)	RS1/16S101J
R 1558	(A,85,96)	RS1/16SS750J
R 1561	(A,88,96)	RS1/16SS153J
R 1562	(A,109,96)	RS1/16SS471J
R 1563	(A,110,96)	RS1/16SS471J
R 1565	(A,112,95)	RS1/16S68R0D
R 1566	(A,114,95)	RS1/16S4R7J
R 1567	(A,83,102)	RS1/16SS273J
R 1568	(A,83,104)	RS1/16SS183J
R 1569	(A,84,98)	RS1/16SS153J
R 1570	(A,81,101)	RS1/16SS222J

Circuit Symbol and No.		Part No.	Circuit Symbol and No.		Part No.
R 1571	(A,73,99)	RAB4CQ101J	R 1806	(B,33,86)	RS1/16SS104J
R 1572	(A,73,96)	RAB4CQ101J	R 1809	(B,33,77)	RS1/16SS0R0J
R 1573	(A,67,91)	RAB4CQ101J	R 1821	(B,37,81)	RS1/16SS222J
R 1574	(A,67,88)	RAB4CQ101J	R 1823	(B,36,96)	RS1/16SS101J
R 1575	(A,67,86)	RS1/16SS560J	R 1825	(B,35,79)	RS1/16SS101J
R 1576	(A,67,85)	RS1/16SS560J	R 1851	(B,11,91)	RS1/16SS0R0J
R 1577	(A,67,83)	RAB4CQ560J	R 1856	(B,14,77)	RS1/16SS102J
R 1578	(A,67,81)	RAB4CQ560J	R 1857	(B,14,82)	RS1/16SS102J
R 1579	(A,69,79)	RS1/16SS220J	R 1858	(B,11,77)	RS1/16SS222J
R 1580	(A,67,78)	RAB4CQ560J	R 1859	(B,11,82)	RS1/16SS222J
R 1581	(A,67,76)	RS1/16SS560J	R 1860	(B,12,77)	RS1/16SS472J
R 1582	(A,67,75)	RS1/16SS560J	R 1861	(B,12,82)	RS1/16SS472J
R 1583	(A,67,74)	RS1/16SS560J	R 1862	(B,12,75)	RS1/16SS472J
R 1584	(A,67,72)	RAB4CQ560J	R 1863	(B,12,80)	RS1/16SS472J
R 1585	(A,67,70)	RS1/16SS560J	R 1864	(B,10,73)	RS1/16SS103J
R 1586	(A,67,69)	RS1/16SS560J	R 1865	(B,10,78)	RS1/16SS103J
R 1587	(A,67,67)	RAB4CQ101J	R 1866	(B,12,73)	RS1/16SS472J
R 1588	(A,67,64)	RAB4CQ101J	R 1867	(B,12,78)	RS1/16SS472J
R 1589	(A,74,60)	RAB4CQ101J	R 1868	(B,19,71)	RS1/16SS821J
R 1590	(A,77,60)	RAB4CQ101J	R 1869	(B,12,71)	RS1/16SS821J
R 1593	(B,61,86)	RS1/16SS104J	R 1870	(B,18,66)	RS1/16SS104J
R 1595	(A,78,101)	RS1/16SS101J	R 1871	(B,12,66)	RS1/16SS104J
R 1599	(A,71,101)	RS1/16S221J	R 1875	(B,16,91)	RS1/16SS0R0J
R 1604	(B,120,60)	RS1/16SS0R0J	R 1897	(B,37,84)	RS1/16SS101J
R 1608	(B,94,52)	RS1/16SS104J	R 1901	(A,18,24)	RS1/16SS221J
R 1613	(B,96,64)	RS1/16SS0R0J	R 1903	(A,20,26)	RS1/16SS221J
R 1621	(B,119,57)	RS1/16SS0R0J	R 1905	(A,18,50)	RS1/16SS102J
R 1652	(B,103,35)	RS1/16SS104J	R 1922	(A,16,30)	RS1/16SS0R0J
R 1653	(B,101,35)	RS1/16SS510J	R 1923	(A,117,82)	RS1/16SS221J
R 1671	(B,103,49)	RAB4CQ101J	R 1924	(B,26,33)	RS1/16S221J
R 1672	(B,107,50)	RAB4CQ101J	R 1927	(A,15,30)	RS1/16SS0R0J
R 1673	(B,109,50)	RAB4CQ101J	R 1931	(B,25,26)	RS1/16SS0R0J
R 1674	(B,113,49)	RAB4CQ101J	R 1933	(B,25,27)	RS1/16SS0R0J
R 1675	(B,101,41)	RS1/16SS331J	R 1938	(A,16,36)	RS1/16SS0R0J
R 1701	(A,103,69)	RS1/16SS103J	R 1945	(B,24,36)	RS1/16SS0R0J
R 1702	(A,105,68)	RS1/16SS103J	R 1947	(A,115,77)	RS1/16SS221J
R 1705	(A,90,98)	RN1/16SE1002D	R 1954	(A,16,26)	RS1/16SS221J
R 1709	(A,93,100)	RS1/16S1502D	R 1955	(A,18,27)	RS1/16SS221J
R 1710	(A,95,98)	RS1/16SS102J	R 2000	(A,118,32)	RS1/16SS104J
R 1711	(A,97,99)	RS1/16SS683J	R 2001	(A,120,32)	RS1/16SS104J
R 1712	(A,98,96)	RS1/16SS103J	R 2002	(A,118,34)	RS1/16SS472J
R 1713	(A,99,96)	RS1/16SS103J	R 2003	(A,118,35)	RS1/16SS104J
R 1714	(A,101,96)	RS1/16SS0R0J	R 2006	(A,118,37)	RS1/16SS104J
R 1715	(A,104,94)	RS1/16SS0R0J	R 2007	(A,120,37)	RS1/16SS104J
R 1716	(A,104,93)	RS1/16SS0R0J	R 2008	(A,118,38)	RS1/16SS104J
R 1717	(A,104,92)	RS1/16SS0R0J	R 2009	(A,120,38)	RS1/16SS103J
R 1718	(A,103,91)	RS1/16SS103J	R 2010	(A,105,27)	RS1/16SS473J
R 1719	(A,104,91)	RS1/16SS103J	R 2011	(A,118,40)	RS1/16SS103J
R 1720	(A,103,90)	RS1/16SS103J	R 2012	(A,120,41)	RS1/16SS103J
R 1721	(A,104,90)	RS1/16SS103J	R 2013	(A,120,42)	RS1/16SS223J
R 1723	(A,106,87)	RN1/16SE3901D	R 2016	(A,120,45)	RS1/16SS184J
R 1729	(A,105,81)	RAB4CQ220J	R 2021	(A,104,52)	RS1/16SS104J
R 1730	(A,105,78)	RAB4CQ220J	R 2022	(A,99,49)	RS1/16S221J
R 1733	(B,92,87)	RS1/16SS104J	R 2023	(A,95,46)	RS1/16S221J
R 1734	(B,91,87)	RS1/16SS104J	R 2037	(A,98,34)	RS1/16SS104J
R 1801	(B,31,87)	RS1/16S0R0J	R 2038	(A,96,32)	RS1/16SS104J
R 1802	(B,29,94)	RS1/16S151J	R 2040	(A,103,29)	RS1/16SS104J
R 1803	(B,29,87)	RS1/16S151J	R 2041	(A,104,27)	RS1/16SS221J
R 1804	(B,32,87)	RS1/16S221J	R 2042	(A,104,29)	RS1/16SS104J
R 1805	(B,37,87)	RS1/16S271J	R 2043	(A,106,29)	RS1/16SS104J

Circuit Symbol and No.		Part No.
R 2044	(A,106,27)	RS1/16SS104J
R 2045	(A,107,29)	RS1/16SS104J
R 2046	(A,107,27)	RS1/16SS104J
R 2047	(A,108,29)	RS1/16SS104J
R 2048	(A,108,27)	RS1/16SS104J
R 2049	(A,109,29)	RS1/16SS104J
R 2050	(A,109,24)	RS1/16SS104J
R 2051	(A,112,24)	RS1/16SS104J
R 2054	(A,110,29)	RS1/16SS104J
R 2055	(A,112,29)	RS1/16SS104J
R 2057	(A,113,27)	RS1/16SS104J
R 2059	(A,120,34)	RS1/16SS104J
R 2060	(A,118,46)	RS1/16SS473J
R 2061	(A,118,45)	RS1/16SS682J
R 2062	(A,112,51)	RS1/16SS473J
R 2063	(A,106,54)	RS1/16SS104J
R 2064	(A,105,54)	RS1/16SS222J
R 2065	(A,106,52)	RS1/16SS473J
R 2067	(A,105,52)	RS1/16SS473J
R 2068	(A,104,49)	RS1/16SS104J
R 2073	(A,96,31)	RS1/16SS473J
R 2074	(A,98,31)	RS1/16SS472J
R 2075	(A,102,29)	RS1/16SS473J
R 2076	(B,92,42)	RS1/16SS0R0J
R 2077	(A,122,39)	RS1/16SS272J
R 2078	(A,123,39)	RS1/16SS103J
R 2080	(A,103,23)	RS1/16SS272J
R 2081	(A,103,22)	RS1/16SS243J
R 2082	(A,104,50)	RS1/16SS221J
R 2083	(B,92,44)	RS1/16SS221J
R 2084	(A,97,35)	RS1/16SS221J
R 2086	(A,98,33)	RS1/16SS0R0J
R 2087	(A,83,51)	RS1/16S0R0J
R 2092	(A,105,25)	RS1/16SS103J
R 2093	(A,106,25)	RS1/16SS103J
R 2094	(A,120,28)	RS1/16S0R0J
R 2096	(A,98,48)	RS1/16SS104J
R 2097	(A,102,27)	RS1/16SS104J
R 2098	(A,115,29)	RS1/16SS104J
R 2109	(A,108,48)	RS1/16SS105J
R 2110	(A,75,55)	RS1/16SS392J
R 2111	(A,74,57)	RS1/16SS123J

CAPACITORS

C 1001	(A,6,6)	CKSRYB224K10
C 1004	(A,9,9)	CKSRYB102K50
C 1005	(A,4,9)	CKSRYB224K10
C 1006	(A,76,23)	CKSRYB104K25
C 1007	(A,79,26) 22 µF	CCG1178
C 1008	(A,84,32) 22 µF	CCG1178
C 1009	(A,83,40)	CCSSCH220J50
C 1010	(A,81,39)	CKSSYB102K50
C 1012	(A,79,24) 22 µF	CCG1178
C 1013	(A,84,30) 22 µF	CCG1178
C 1017	(A30.64)	CKSRYB105K10
C 1101	(A,29,83)	CSZSR220M16
C 1102	(A,59,91)	CSZSR101M6R3
C 1103	(A,56,93)	CKSSYB104K10
C 1104	(A,49,93)	CKSSYB103K16
C 1105	(A,59,97)	CSZSR101M6R3
C 1106	(A,56,100)	CKSSYB104K10
C 1107	(A,49,98)	CKSSYB103K16
C 1108	(A,52,103)	CKSRYB104K25
C 1109	(A,56,104)	CKSSYB473K10
C 1110	(A,47,104)	CKSSYB473K10
C 1111	(A,41,88)	CKSSYB103K16
C 1112	(A,41,104)	CKSRYB105K10
C 1113	(A,40,104)	CKSRYB105K10
C 1114	(A,40,99)	CKSSYB103K16
C 1115	(A,35,83)	CSZSR220M16
C 1201	(A,33,79) 10 µF	CCG1138
C 1202	(A,29,78)	CKSRYB104K25
C 1203	(A,21,64)	CSZSR220M16
C 1204	(A,29,68)	CKSRYB104K25
C 1205	(A,16,67)	CKSRYB104K25
C 1206	(A,17,67)	CKSRYB104K25
C 1207	(A,24,64)	CSZSR220M16
C 1208	(A,17,80)	CKSRYB104K25
C 1240	(A,46,81)	CCSSCH470J50
C 1241	(A,45,81)	CCSSCH5R0C50
C 1243	(A,38,73) 10 µF	CCG1138
C 1244	(A,54,68)	CKSSYB472K25
C 1245	(A,47,68)	CKSSYB103K16
C 1501	(A,115,69)	CSZSR470M10
C 1502	(A,118,61)	CSZSR101M6R3
C 1503	(A,114,61)	CSZSR101M6R3
C 1504	(A,74,63)	CKSSYB104K10
C 1505	(A,76,63)	CKSSYB104K10
C 1506	(A,79,62)	CKSSYB104K10
C 1507	(A,79,63)	CKSSYB104K10
C 1508	(A,82,63)	CKSSYB104K10
C 1509	(A,85,63)	CKSSYB104K10
C 1510	(A,90,63)	CKSSYB104K10
C 1511	(A,96,63)	CKSSYB104K10
C 1512	(A,102,68)	CKSSYB104K10
C 1513	(A,103,73)	CKSSYB104K10
C 1514	(A,103,78)	CKSSYB104K10
C 1515	(A,103,80)	CKSSYB104K10
C 1516	(A,82,96)	CKSSYB104K10
C 1517	(A,78,96)	CKSSYB104K10
C 1518	(A,76,96)	CKSSYB104K10
C 1519	(A,76,97)	CKSSYB104K10
C 1520	(A,70,91)	CKSSYB104K10
C 1521	(A,70,89)	CKSSYB104K10
C 1522	(A,70,86)	CKSSYB104K10
C 1523	(A,70,85)	CKSSYB104K10
C 1524	(A,70,83)	CKSSYB104K10
C 1525	(A,70,81)	CKSSYB104K10
C 1526	(A,70,78)	CKSSYB104K10
C 1527	(A,70,75)	CKSSYB104K10
C 1528	(A,70,73)	CKSSYB104K10
C 1529	(A,70,71)	CKSSYB104K10
C 1530	(A,70,69)	CKSSYB104K10
C 1531	(A,98,63)	CKSSYB471K50
C 1532	(A,105,67)	CKSSYB103K16
C 1533	(A,105,65)	CKSSYB103K16
C 1552	(A,83,96)	CKSSYB104K10
C 1553	(A,90,102)	CKSRYB104K25
C 1554	(A,87,96)	CKSSYB104K10
C 1555	(A,87,98)	CKSRYB105K10

Circuit Symbol and No.		Part No.
C 1556	(A,100,101)	CSZSR470M10
C 1557	(A,89,96)	CKSSYB104K10
C 1558	(A,111,98)	CSZS4R7M16
C 1559	(A,84,100)	CKSRYB105K10
C 1570	(B,67,73)	CSZSR470M10
C 1571	(B,76,77)	CKSRYB474K10
C 1572	(B,76,85)	CKSRYB474K10
C 1573	(B,61,80)	CKSRYB474K10
C 1574	(B,61,83)	CKSRYB474K10
C 1575	(B,61,91)	CKSRYB474K10
C 1576	(B,61,94)	CKSRYB474K10
C 1577	(B,61,97)	CKSRYB474K10
C 1578	(B,76,98)	CKSRYB474K10
C 1579	(B,76,79)	CKSRYB474K10
C 1580	(B,76,82)	CKSRYB474K10
C 1581	(B,76,92)	CKSRYB474K10
C 1582	(B,76,95)	CKSRYB474K10
C 1583	(B,71,73)	CSZSR470M10
C 1601	(B,110,65)	CSZSR470M10
C 1603	(B,96,51)	CKSSYB104K10
C 1651	(B,121,33)	CSZSR470M10
C 1653	(B,108,20)	CKSSYB104K10
C 1654	(B,98,34)	CKSRYB104K25
C 1655	(B,108,34)	CKSSYB104K10
C 1671	(B,106,48)	CKSSYB104K10
C 1672	(B,110,48)	CKSSYB104K10
C 1673	(B,110,37)	CKSSYB104K10
C 1674	(B,106,37)	CKSSYB104K10
C 1675	(B,98,42)	CKSRYB104K25
C 1676	(B,118,39)	CKSYB106K6R3
C 1701	(A,106,67)	CKSRYB104K25
C 1702	(A,105,69)	CKSRYB104K25
C 1703	(A,90,96)	CKSSYB104K10
C 1704	(A,91,96)	CKSSYB103K16
C 1706	(A,92,96)	CKSSYB104K10
C 1707	(A,96,100)	CKSSYB104K10
C 1708	(A,95,100)	CKSSYB103K16
C 1709	(A,92,98)	CCSRCH221J50
C 1710	(A,97,98)	CKSSYB152K50
C 1711	(A,94,97)	CKSRYB105K10
C 1712	(A,96,97)	CKSRYB105K10
C 1713	(A,97,97)	CKSRYB105K10
C 1715	(A,104,89)	CKSSYB104K10
C 1716	(A,103,88)	CKSSYB104K10
C 1717	(A,104,88)	CKSSYB104K10
C 1718	(A,103,87)	CKSSYB104K10
C 1719	(A,104,87)	CKSSYB562K25
C 1720	(A,103,86)	CCSSCH101J50
C 1721	(A,104,86)	CCSSCH470J50
C 1722	(A,103,85)	CKSSYB103K16
C 1723	(A,104,85)	CKSSYB104K10
C 1724	(A,103,84)	CKSSYB104K10
C 1725	(A,104,84)	CKSSYB104K10
C 1726	(A,103,83)	CCSSCH330J50
C 1727	(A,104,83)	CKSSYB333K16
C 1728	(A,103,82)	CKSSYB104K10
C 1801	(B,31,96)	CKSSYB104K10
C 1802	(B,33,96)	CKSSYB104K10
C 1804	(B,34,87)	CKSSYB104K10
C 1809	(B,32,101)	CCSSCJ3R0C50

Circuit Symbol and No.		Part No.
C 1810	(B,36,101)	CCSSCK2R0C50
C 1811	(B,35,81)	CKSSYB104K10
C 1851	(B,21,87)	CKSSYB104K10
C 1852	(B,12,85)	CKSSYB104K10
C 1853	(B,10,85)	CKSYB106K6R3
C 1854	(B,23,84)	CKSYB106K6R3
C 1855	(B,21,84)	CKSRYB104K25
C 1856	(B,17,82)	CKSQYB225K10
C 1857	(B,10,80)	CCSRCH471J50
C 1858	(B,10,74)	CCSRCH471J50
C 1859	(B,10,81)	CCSRCH471J50
C 1860	(B,10,76)	CCSRCH471J50
C 1861	(B,17,77)	CKSQYB225K10
C 1862	(B,19,69)	CKSSYB471K50
C 1863	(B,11,71)	CKSSYB471K50
C 1864	(B,17,69)	CKSYB475K10
C 1865	(B,14,69)	CKSYB475K10
C 1870	(B,23,92)	CKSSYB102K50
C 1901	(A,19,46)	CKSRYB474K10
C 1902	(A,29,54) 22 µF/6.3 V	CCH1300
C 1903	(A,28,48)	CSZSC101M10
C 1910	(B,10,15)	CKSRYB102K50
C 2001	(A,120,30)	CKSYB106K6R3
C 2002	(A,114,48)	CKSRYB105K10
C 2003	(A,112,49)	CKSSYB103K16
C 2004	(A,110,48)	CKSSYB103K16
C 2005	(A,109,54)	CKSQYB475K10
C 2006	(A,103,54)	CKSSYB103K16
C 2007	(A,96,41)	CKSSYB104K10
C 2008	(A,111,29)	CKSSYB104K10
C 2009	(A,120,43)	CKSSYB473K10
C 2010	(A,118,43)	CKSSYB103K16
C 2011	(A,123,47)	CKSRYB105K10
C 2015	(A,120,44)	CKSSYB473K10
C 2016	(A,118,44)	CKSSYB103K16
C 2017	(A,103,55)	CKSSYB103K16
C 2018	(A,98,20)	CKSRYB104K25
C 2020	(A,105,50)	CKSSYB471K50
C 2021	(A,119,48)	CKSRYB104K25
C 2022	(B,122,30)	CKSRYB104K16

E

Unit Number : CWX2986
Unit Name : PCB Assy

MISCELLANEOUS

VR11	(A,8,10) Semi-fixed 1 kΩ(B)	CCP1442
VR12	(A,9,23) Semi-fixed 1 kΩ(B)	CCP1442
R 11	(A,8,15)	RS1/16S562J
R 12	(A,10,15)	RS1/16S472J
R 13	(A,8,18)	RS1/16S562J
R 14	(A,9,6)	RS1/16S562J

Miscellaneous Parts List

	Stage Assy(Service)	CXX2133
M 1	Cam Motor Assy(CAM)	CXC5908
M 2	Motor Unit(E/L Motor)	CXC5910
VR13	Variable Resistor 10 kΩ(B)	CCW1029

7.1.2 CONNECTOR FUNCTION DESCRIPTION

IP-BUS INPUT

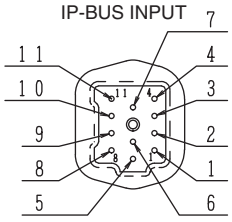

1. BUS+
2. BUSG
3. LG
4. NC
5. BUS-
6. BUSG
7. BUSLI
8. ASENB
9. BUSRI
10. BUSRG
11. BUSLG

AV-BUS INPUT

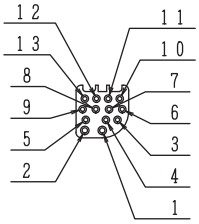

1. AVIN-
2. AVIN+
3. NC
4. VSEL2
5. VSEL1
6. NC
7. AV_GND
8. NC
9. NC
10. REMIN
11. GND
12. AVON
13. NC

RCA INPUT

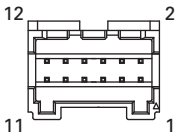

1 : V1
2 : V1GND
3 : L1GND
4 : L1
5 : R1
6 : R1GND
7 : V2
8 : V2GND
9 : L2GND
10 : L2
11 : R2
12 : R2GND

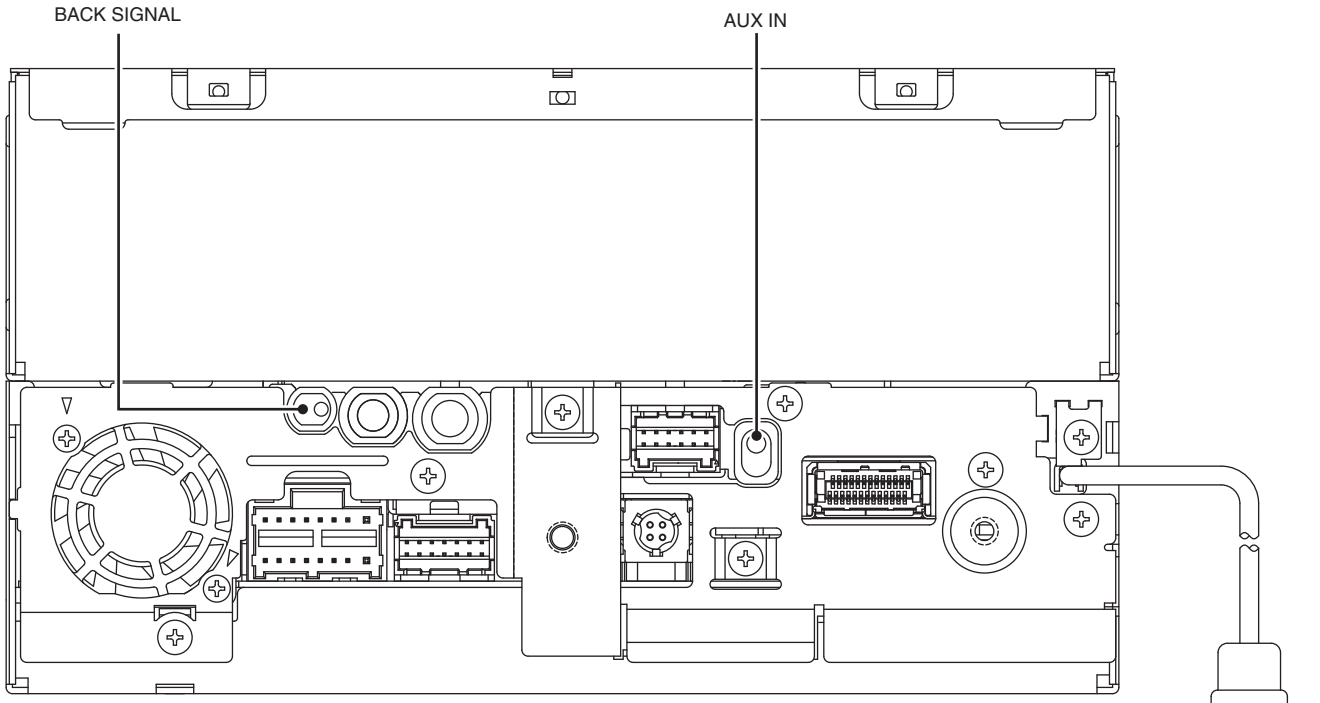

POWER SUPPLY, SPEAKER OUTPUT



1 : FL-
2 : RL-
3 : FL+
4 : RL+
5 : FR-
6 : RR-
7 : FR+
8 : RR+
9 : P.B.
10 : VGND
11 : ACC
12 : B.REM
13 : ILM
14 : MUTE
15 : B.UP
16 : GND

RCA OUTPUT

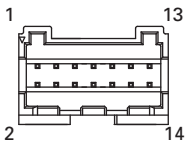

1 : REARV
2 : VGND
3 : FL
4 : FLGND
5 : FR
6 : FRGND
7 : SWL
8 : SWLGND
9 : SWR
10 : SWRGND
11 : RL
12 : RLGND
13 : RR
14 : RRGND

DIGITAL OUTPUT



1. GND
2. GND
3. OPT5V
4. OPTO

RGB VIDEO INPUT

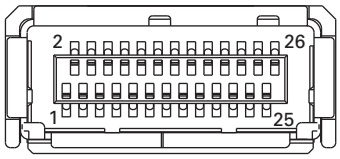

1 : CCR
2 : CCG
3 : CCB
4 : CCSYNC
5 : GNDSIG
6 : DVDVBS
7 : GNDDVD
8 : YS
9 : NC
10 : CCAUL
11 : CCAUR
12 : GNDAU
13 : ONSEI+
14 : ONSEI-
15 : REAUR
16 : REAUL
17 : GNDRAU
18 : CCREM
19 : DSEN
20 : TVON
21 : GION
22 : MONON
23 : VSW5
24 : HTXD
25 : HRXD
26 : GNDD

FM/AM ANTENNA

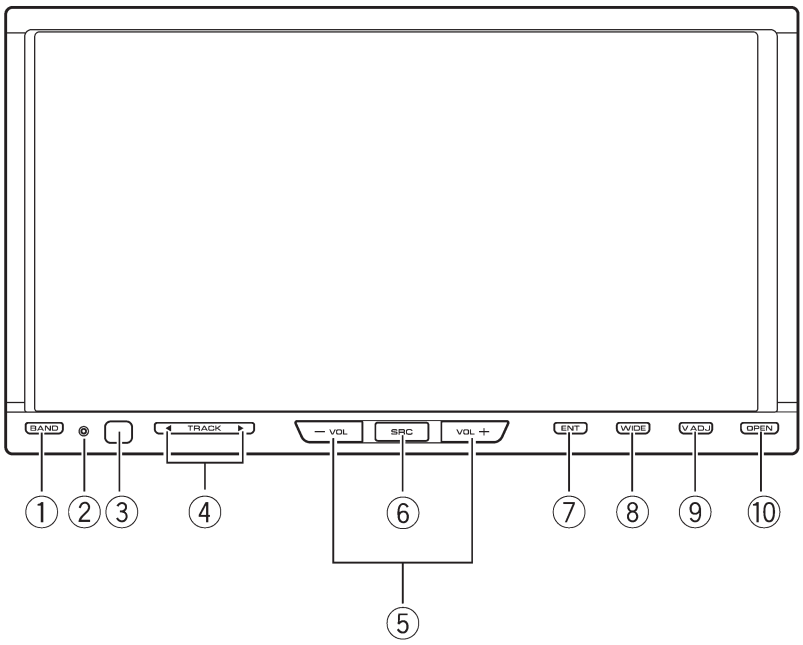

Head unit

① **BAND button**
Press to select among three FM bands and one AM band and to cancel the control mode of functions.

② **RESET button**
Press to return to the factory settings (initial settings).

③ **Signal receptor**
Receives signals from a remote control.

④ **◄/► buttons**
Press to do manual seek tuning, fast forward, reverse and track search controls.

⑤ **VOLUME**
Press to increase or decrease the volume.

⑥ **SOURCE button**
This unit is turned on by selecting a source. Press to cycle through all the available sources.

⑦ **ENTERTAINMENT (ENT) button**
Press to display the entertainment menu.

⑧ **WIDE button**
Press to select a desired mode for enlarging a 4:3 picture to a 16:9 one.

⑨ **V.ADJ button**
Press and hold to display the picture adjustment menu.

⑩ **OPEN button**
Press to slide down or up the LCD panel. ▣

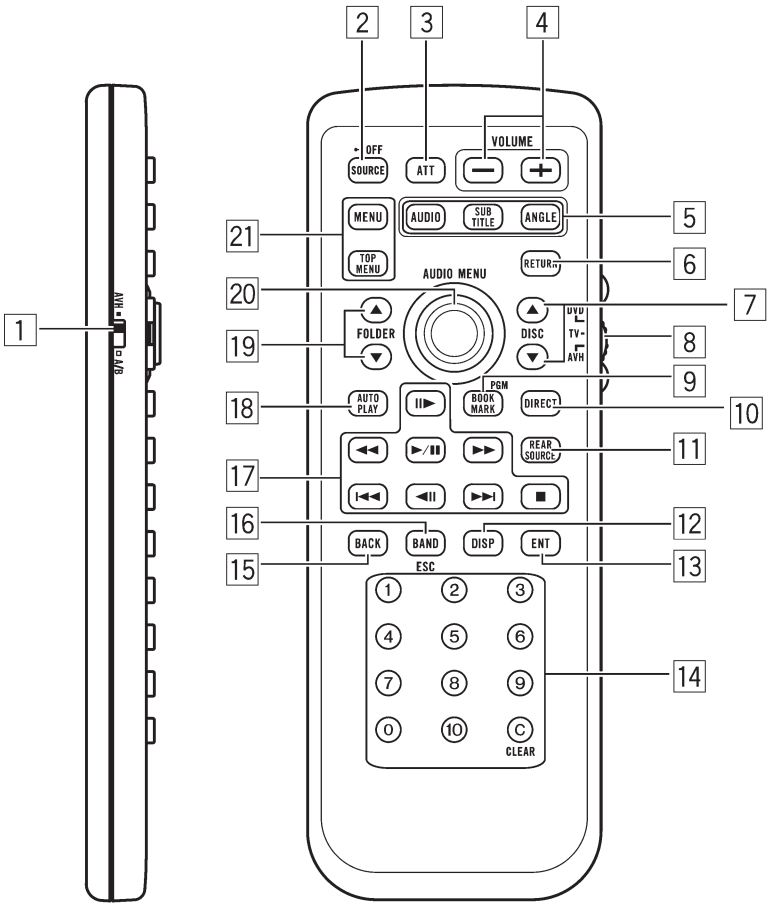

Remote control

	Button names	AVH mode	DVD mode with remote control code AVH
1	Remote control selection switch	Switch to change the setting of the remote control.	
2	**SOURCE** button	Press to cycle through all the available sources. Press and hold to turn the source off.	
3	**ATT** button	Press to quickly lower the volume level, by about 90%. Press once more to return to the original volume level.	
4	**VOLUME** buttons	Press to increase or decrease the volume.	
5	**AUDIO** button	Press to change the audio language during DVD playback.	
	SUB TITLE button	Press to change the subtitle language during DVD playback.	
	ANGLE button	Press to change the viewing angle during DVD playback.	
6	**RETURN** button	Press to display the PBC (playback control) menu during PBC playback.	

Connecting the power cord

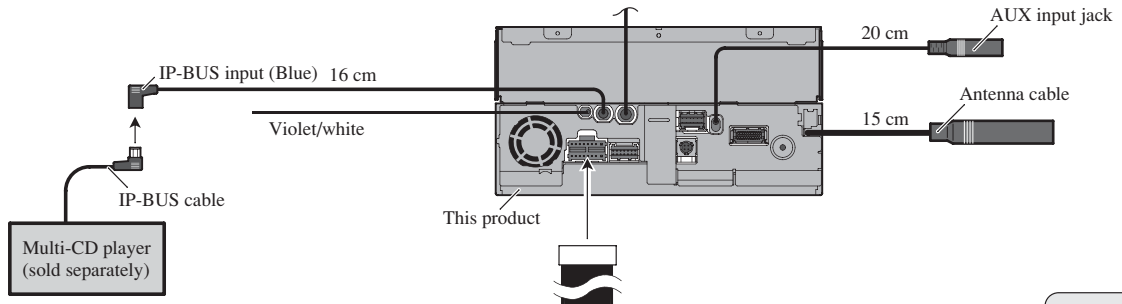

Yellow/black
If you use a cellular telephone, connect it via the Audio Mute lead on the cellular telephone. If not, keep the Audio Mute lead free of any connections.

Red
To electric terminal controlled by ignition switch (12 V DC) ON/OFF.

Fuse resistor

Orange/white
To lighting switch terminal.

Fuse resistor

Yellow
To terminal always supplied with power regardless of ignition switch position.

Fuse holder (10 A)

Black (ground)
To vehicle (metal) body

WARNING

LIGHT GREEN LEAD AT POWER CONNECTOR IS DESIGNED TO DETECT PARKED STATUS AND MUST BE CONNECTED TO THE POWER SUPPLY SIDE OF THE PARKING BRAKE SWITCH. IMPROPER CONNECTION OR USE OF THIS LEAD MAY VIOLATE APPLICABLE LAW AND MAY RESULT IN SERIOUS INJURY OR DAMAGE.

Light green
Used to detect the ON/OFF status of the parking brake.
This lead must be connected to the power supply side of the parking brake switch.

Connection method

1. Clamp the lead.



2. Clamp firmly with needle-nosed pliers.

Note:
- The position of the parking brake switch depends on the vehicle model. For details, consult the vehicle Owner's Manual or dealer.

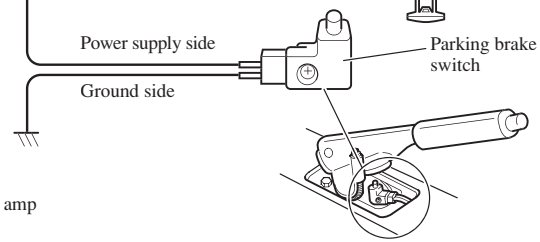

Blue/white
To system control terminal of the power amp or Auto-antenna relay control terminal (max. 300 mA 12 V DC).

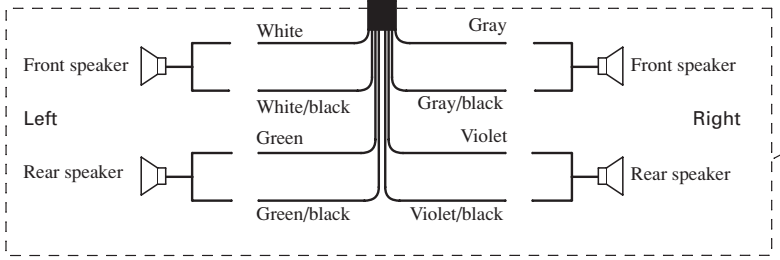

With a 2 speaker system, do not connect anything to the speaker leads that are not connected to speakers.

When you connect the separately sold multi-channel processor (DEQ-P8000) to this unit, do not connect anything to the speaker leads and system remote control (blue/white).

When connecting to separately sold power amp

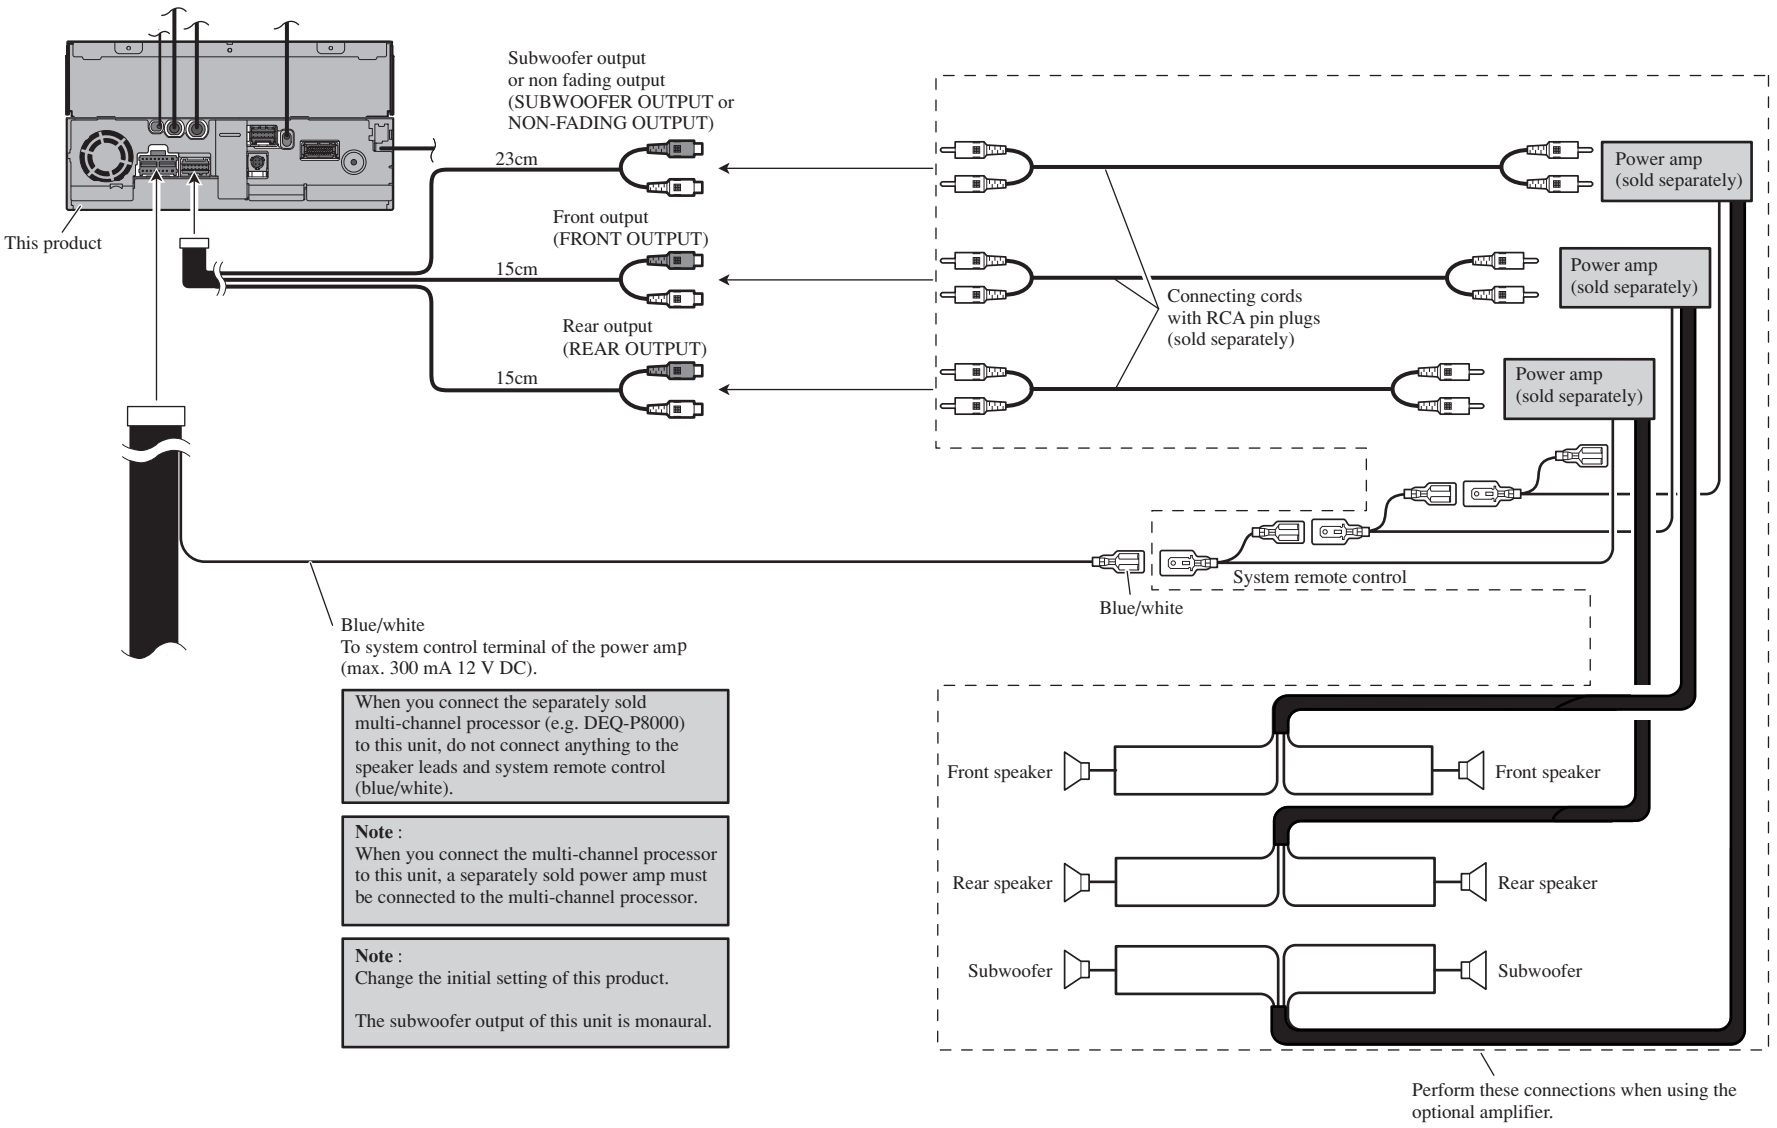

When you connect the separately sold multi-channel processor (e.g. DEQ-P8000) to this unit, do not connect anything to the speaker leads and system remote control (blue/white).

Note :
When you connect the multi-channel processor to this unit, a separately sold power amp must be connected to the multi-channel processor.

Note :
Change the initial setting of this product.

The subwoofer output of this unit is monaural.

When connecting with a rear view camera

When using this product with a rear view camera, automatic switching to video from a rear view camera when the gear shift is moved to **REVERSE (R)** position is possible.

WARNING

USE INPUT ONLY FOR REVERSE OR MIRROR IMAGE REAR VIEW CAMERA. OTHER USE MAY RESULT IN INJURY OR DAMAGE.

⚠ CAUTION

- The screen image may appear reversed.
- The rear view camera function is to use this product as an aid to keep an eye on trailers, or backing into a tight parking spot. Do not use this function for entertainment purposes.
- The object in rear view may appear closer or more distant than in reality.

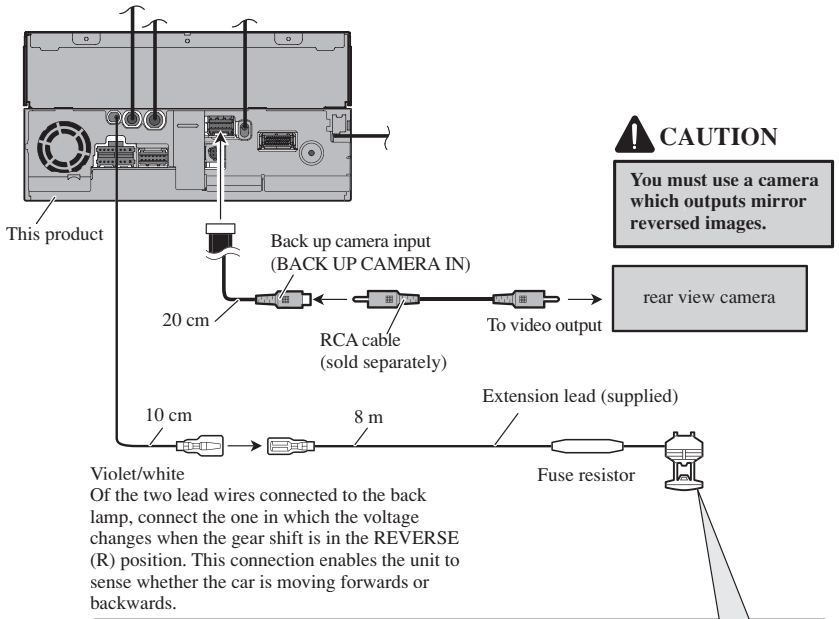

Connection method

1. Clamp the lead.



2. Clamp firmly with needle-nosed pliers.

Note:

- It is necessary to set **B.CAMERA** to **ON** in **SETUP** when connecting the rear view camera.

When connecting with a multi-channel processor

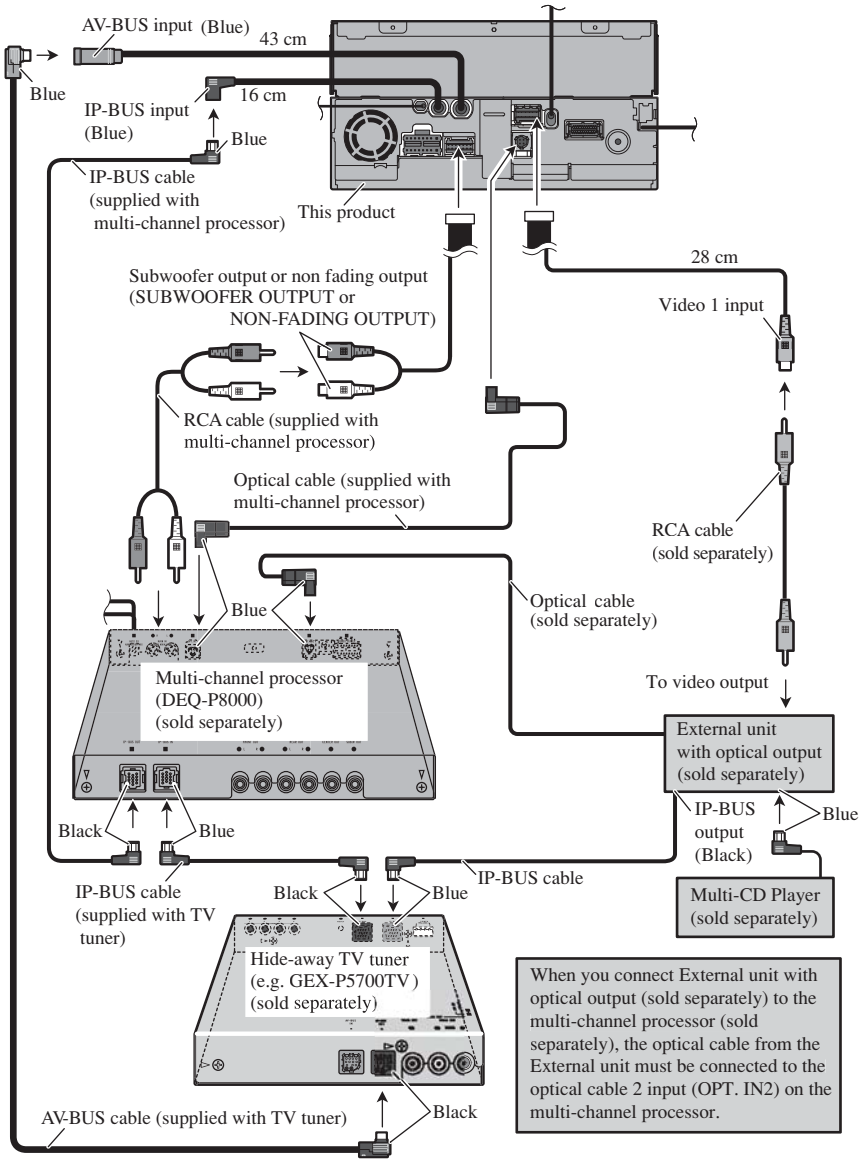

When you connect External unit with optical output (sold separately) to the multi-channel processor (sold separately), the optical cable from the External unit must be connected to the optical cable 2 input (OPT. IN2) on the multi-channel processor.

Connecting the power cord

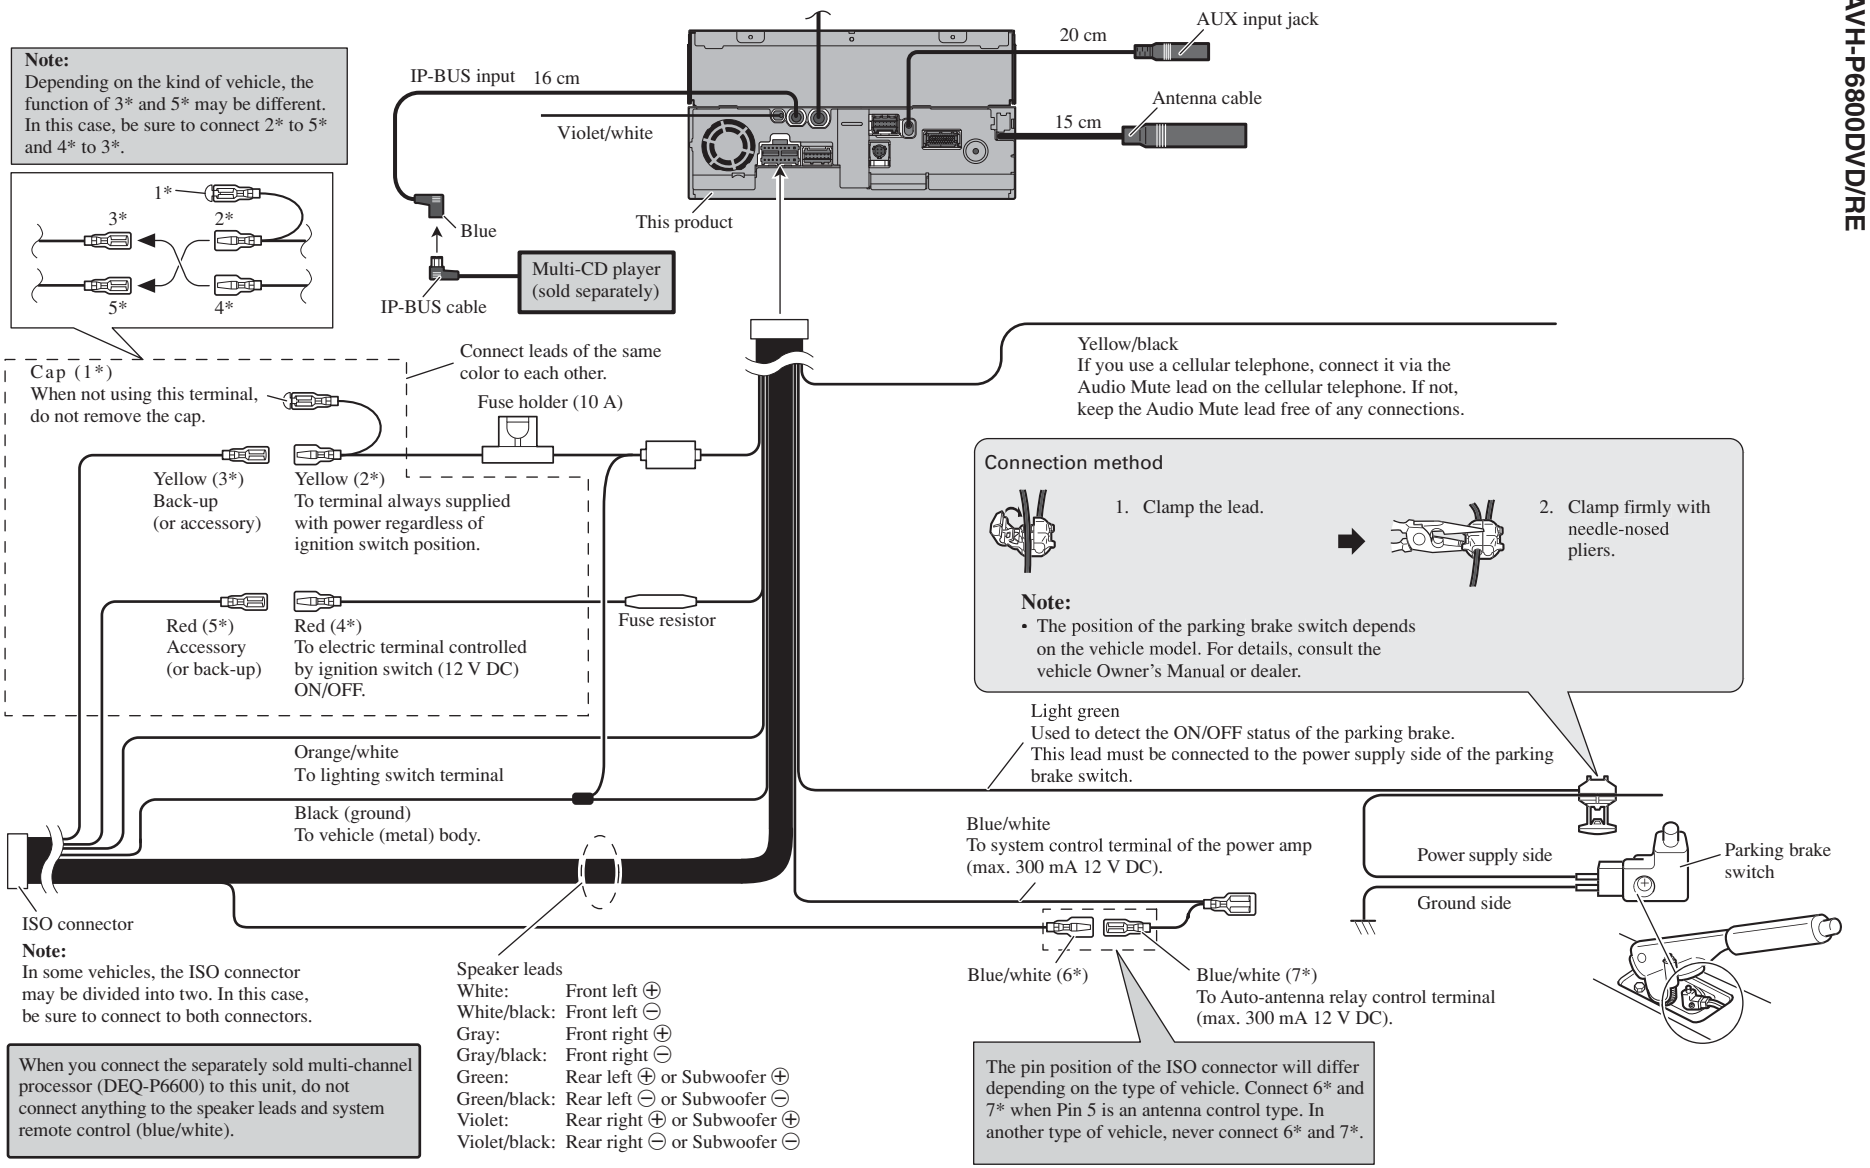

When connecting to separately sold power amp

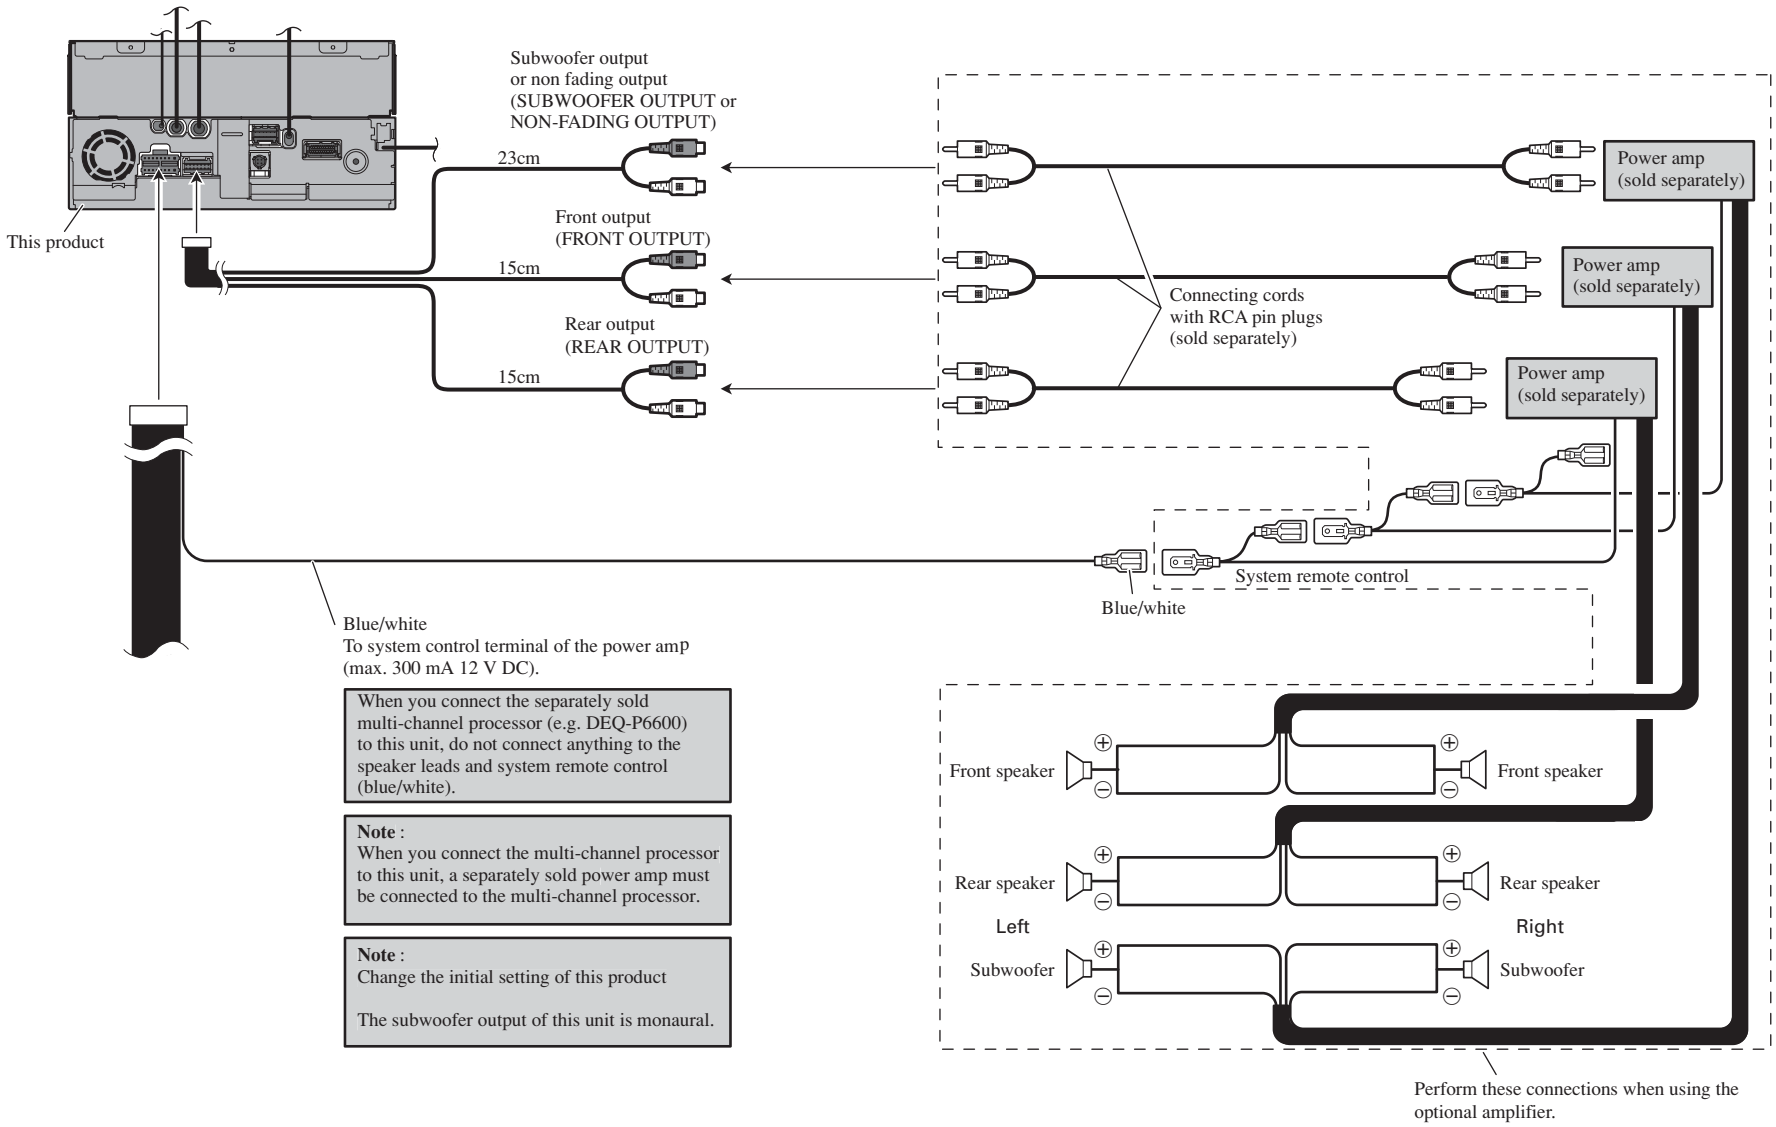

When you connect the separately sold multi-channel processor (e.g. DEQ-P6600) to this unit, do not connect anything to the speaker leads and system remote control (blue/white).

Note :
When you connect the multi-channel processor to this unit, a separately sold power amp must be connected to the multi-channel processor.

Note :
Change the initial setting of this product

The subwoofer output of this unit is monaural.

When connecting with a rear view camera

When using this product with a rear view camera, automatic switching to video from a rear view camera when the gear shift is moved to **REVERSE (R)** position is possible.

WARNING

USE INPUT ONLY FOR REVERSE OR MIRROR IMAGE REAR VIEW CAMERA. OTHER USE MAY RESULT IN INJURY OR DAMAGE.

⚠ CAUTION

- The screen image may appear reversed.
- The rear view camera function is to use this product as an aid to keep an eye on trailers, or backing into a tight parking spot. Do not use this function for entertainment purposes.
- The object in rear view may appear closer or more distant than in reality.

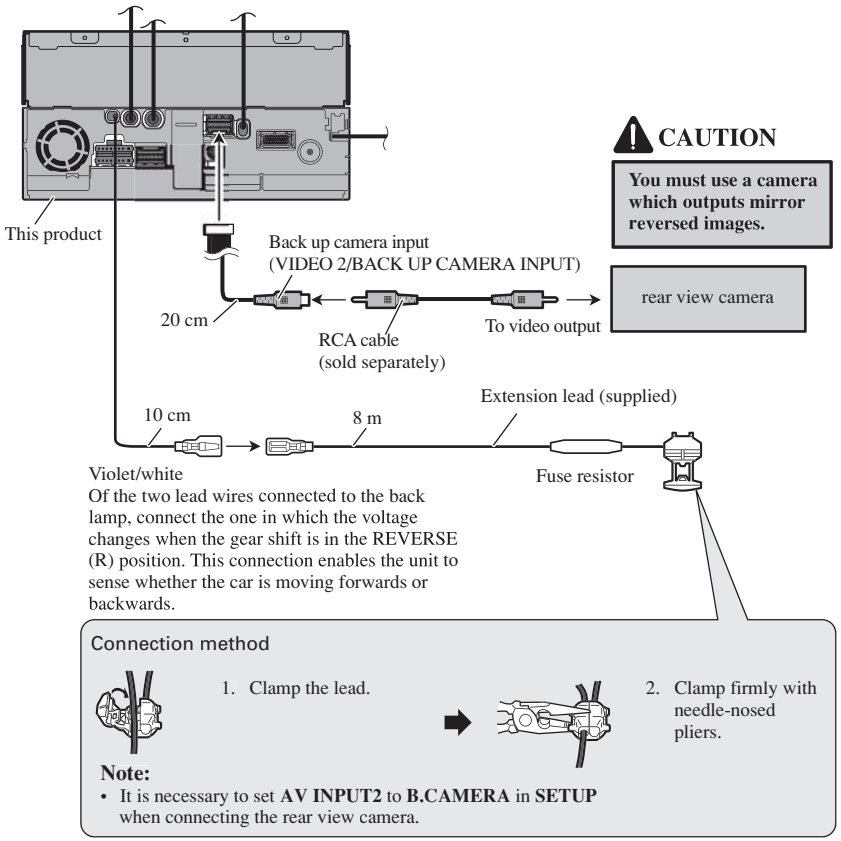

Note:

- It is necessary to set **AV INPUT2** to **B.CAMERA** in **SETUP** when connecting the rear view camera.

When connecting with a multi-channel processor

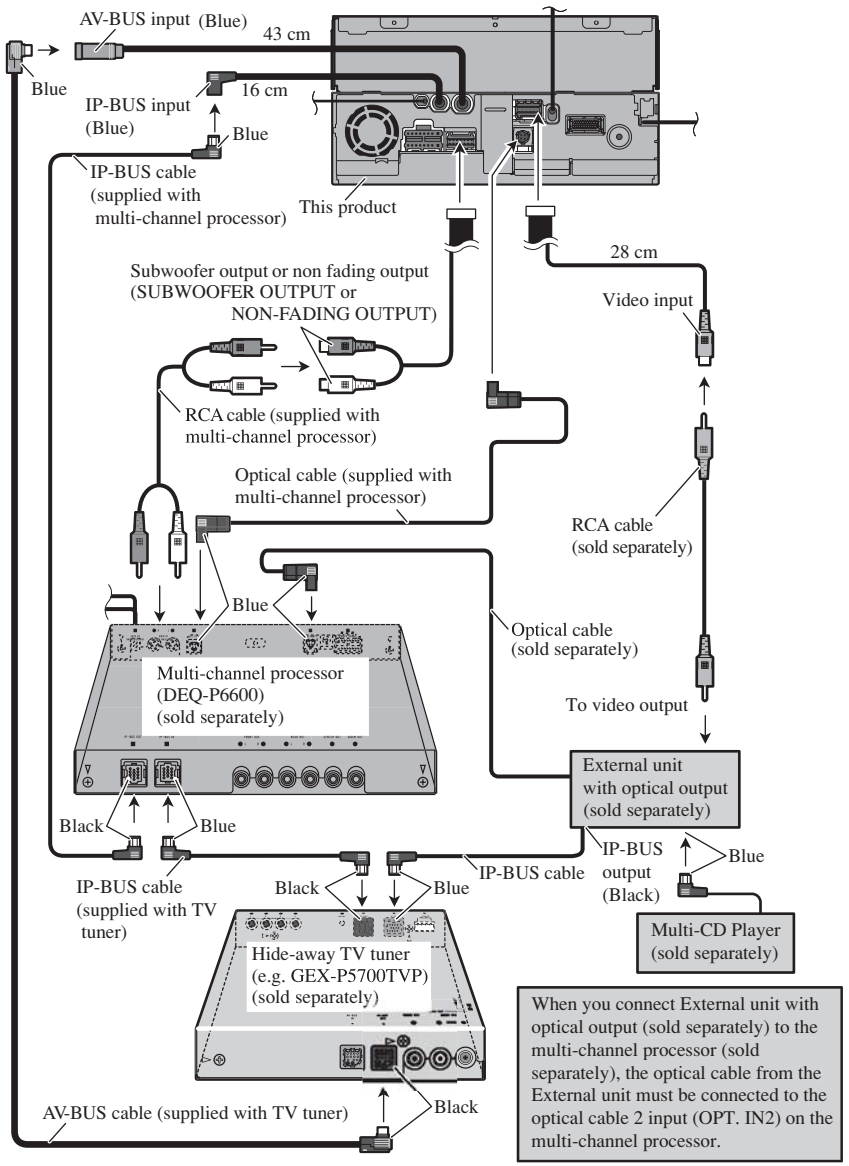

Connecting the power cord

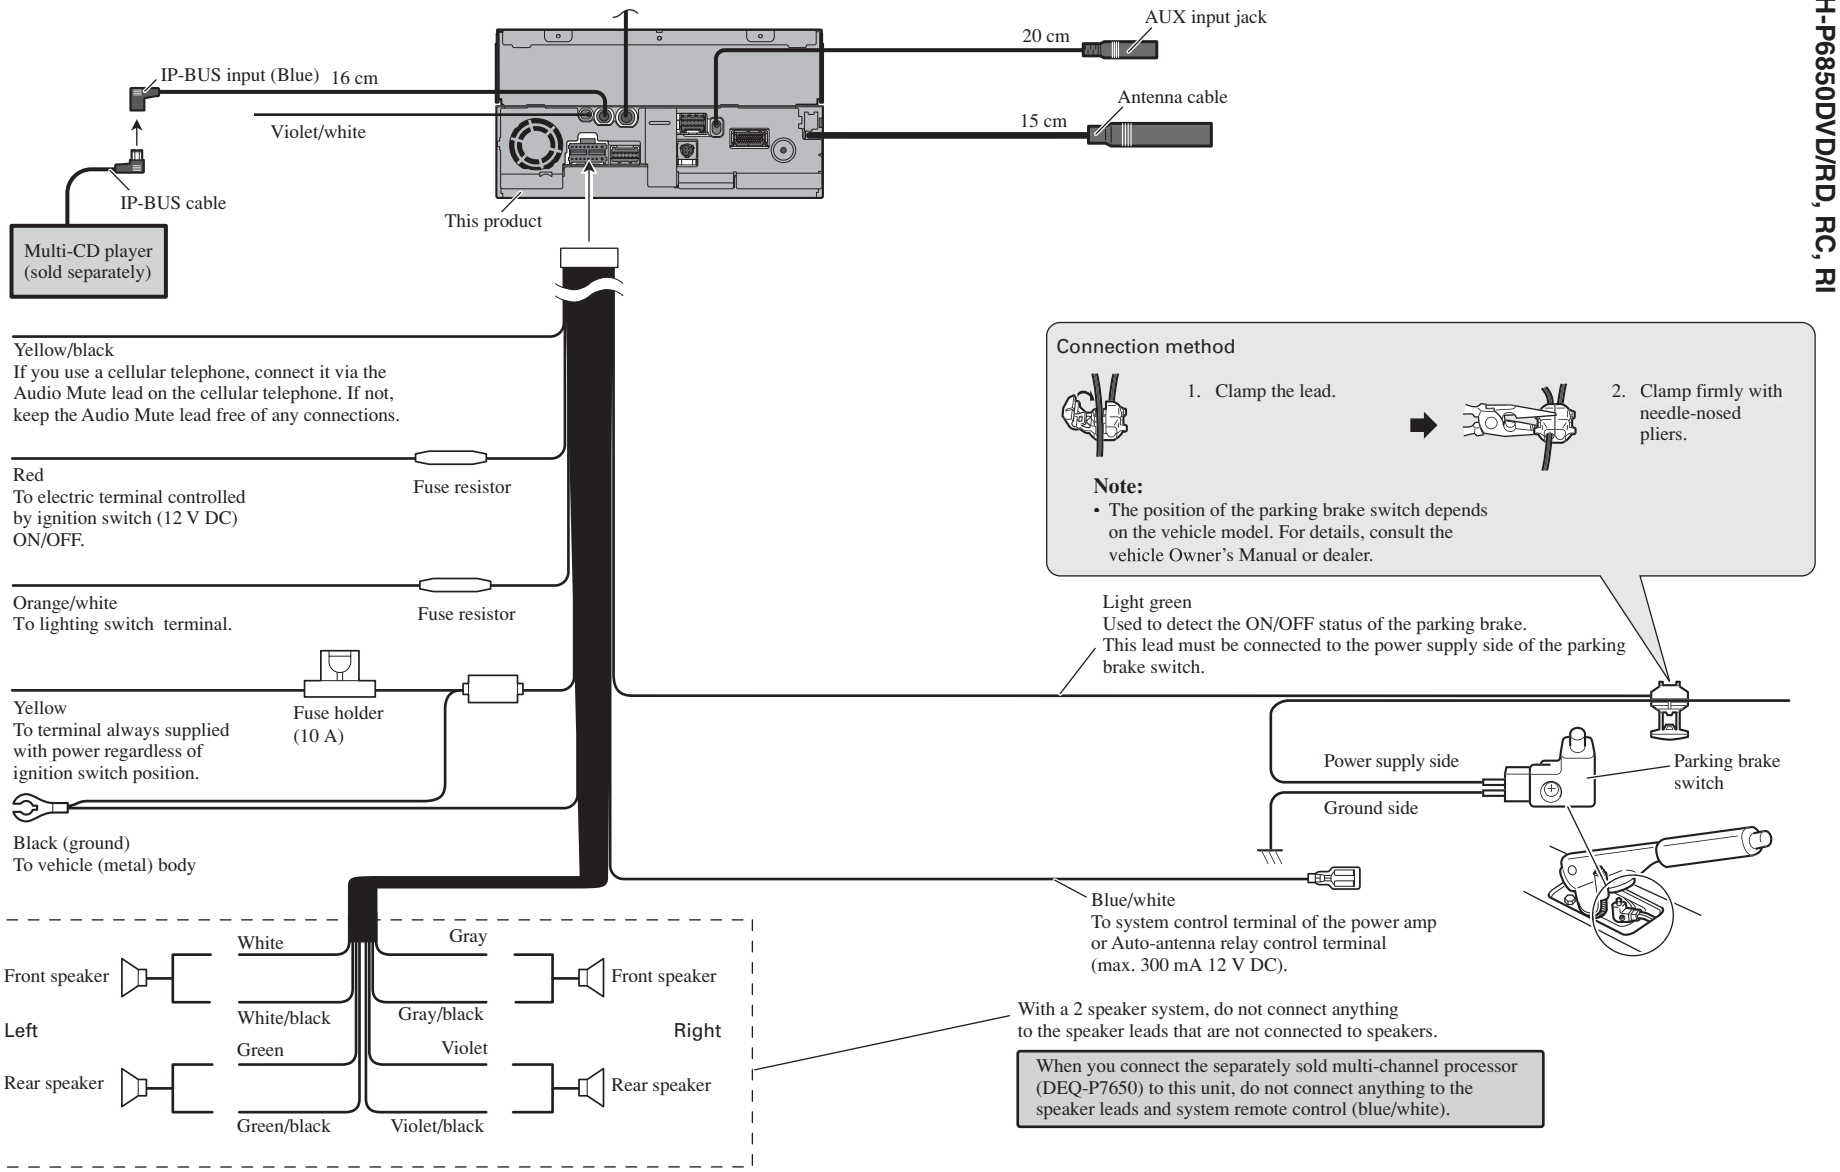

Connection method

1. Clamp the lead.

2. Clamp firmly with needle-nosed pliers.

Note:

- The position of the parking brake switch depends on the vehicle model. For details, consult the vehicle Owner's Manual or dealer.

When connecting to separately sold power amp

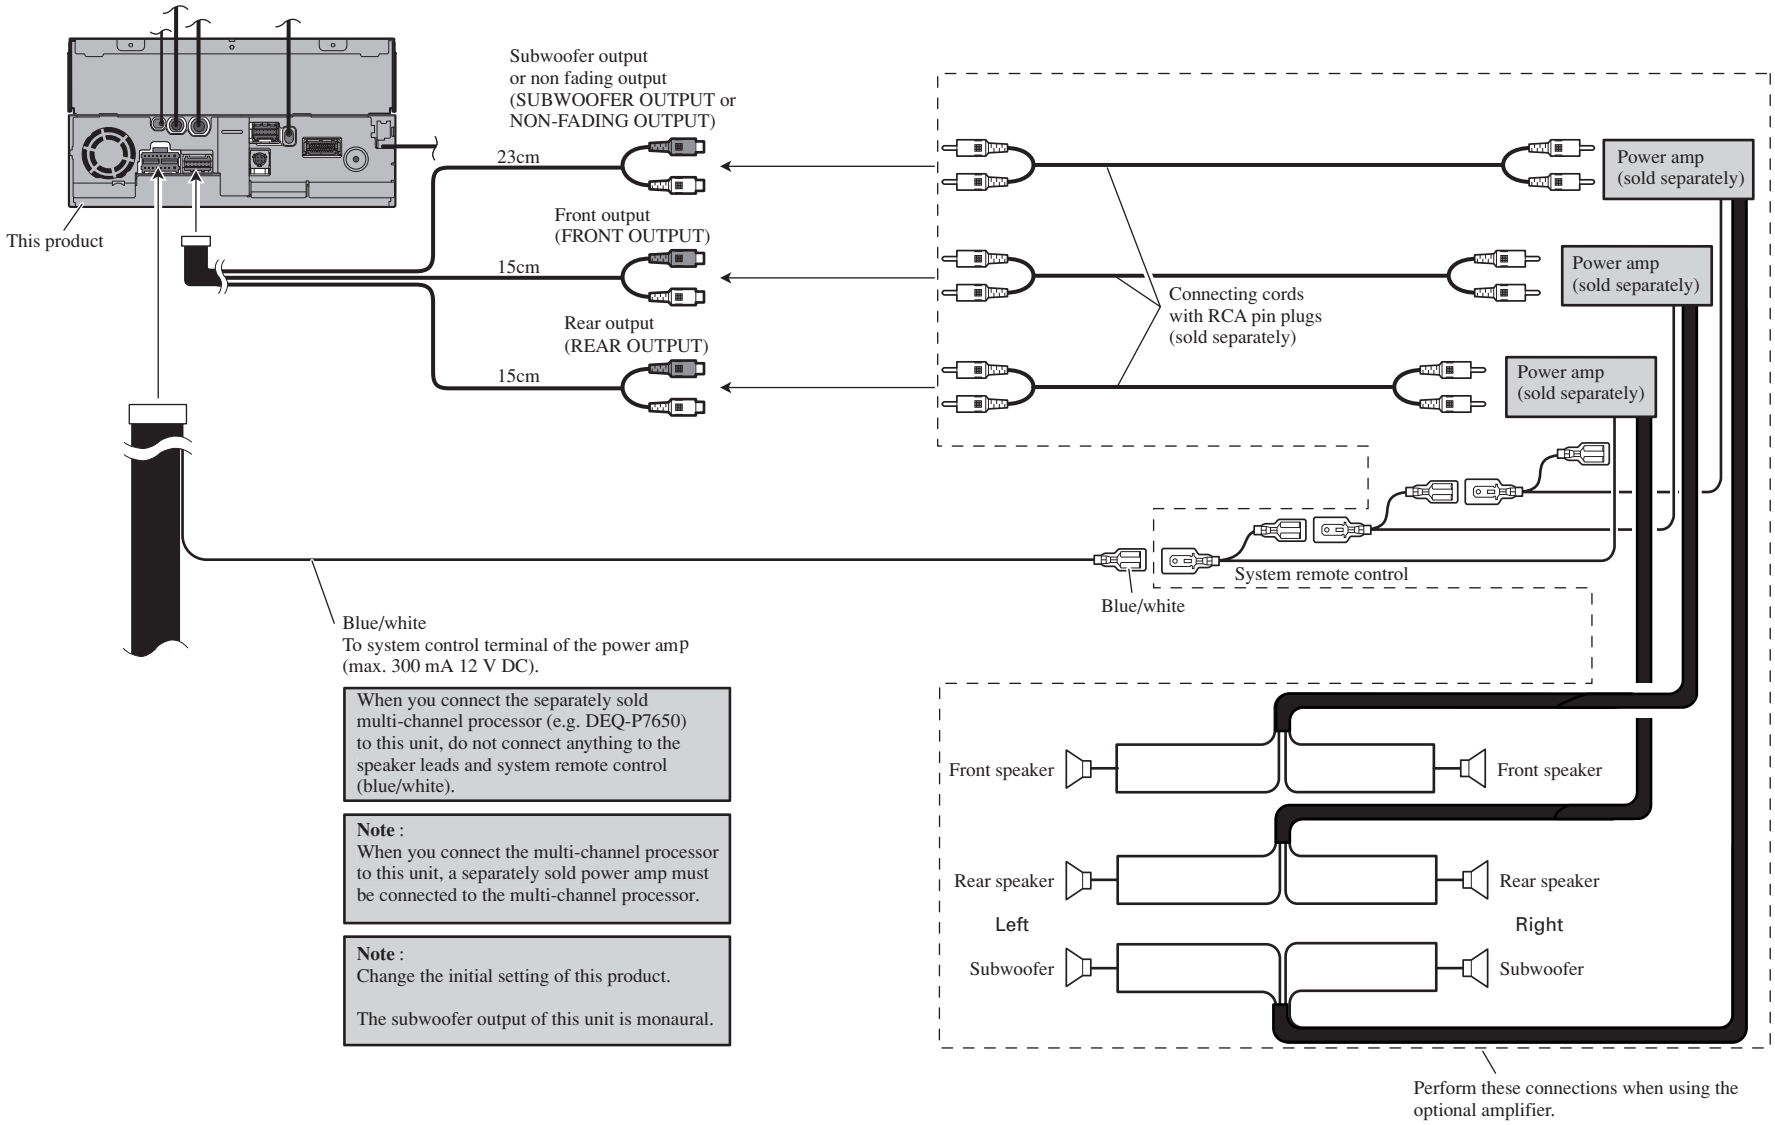

When you connect the separately sold multi-channel processor (e.g. DEQ-P7650) to this unit, do not connect anything to the speaker leads and system remote control (blue/white).

Note :
When you connect the multi-channel processor to this unit, a separately sold power amp must be connected to the multi-channel processor.

Note :
Change the initial setting of this product.

The subwoofer output of this unit is monaural.

When connecting with a rear view camera

When using this product with a rear view camera, automatic switching to video from a rear view camera when the gear shift is moved to **REVERSE (R)** position is possible.

WARNING

USE INPUT ONLY FOR REVERSE OR MIRROR IMAGE REAR VIEW CAMERA. OTHER USE MAY RESULT IN INJURY OR DAMAGE.

⚠ CAUTION

- The screen image may appear reversed.
- The rear view camera function is to use this product as an aid to keep an eye on trailers, or backing into a tight parking spot. Do not use this function for entertainment purposes.
- The object in rear view may appear closer or more distant than in reality.

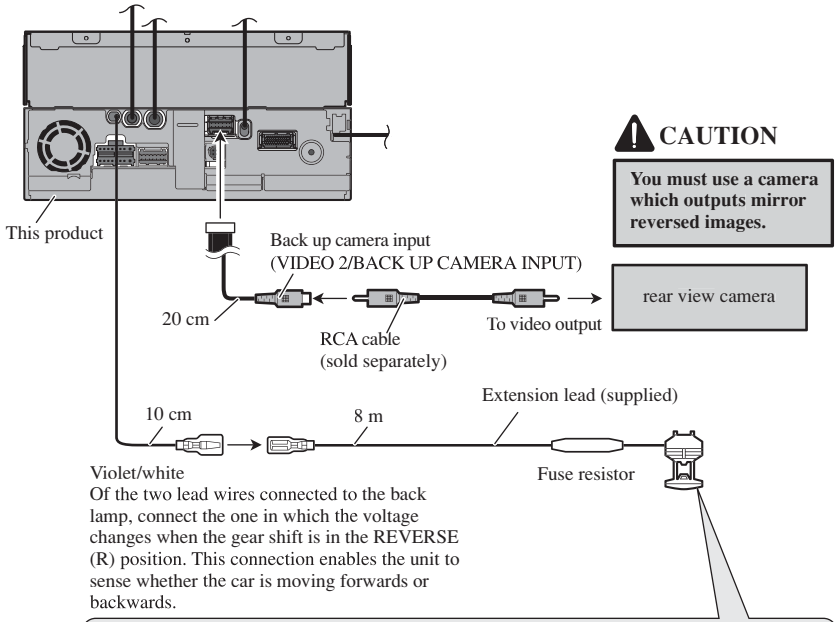

Connection method

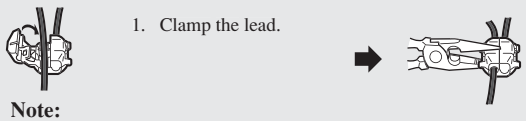

1. Clamp the lead.
2. Clamp firmly with needle-nosed pliers.

Note:

- It is necessary to set **AV INPUT2** to **B.CAMERA** in **SETUP** when connecting the rear view camera.

When connecting with a multi-channel processor

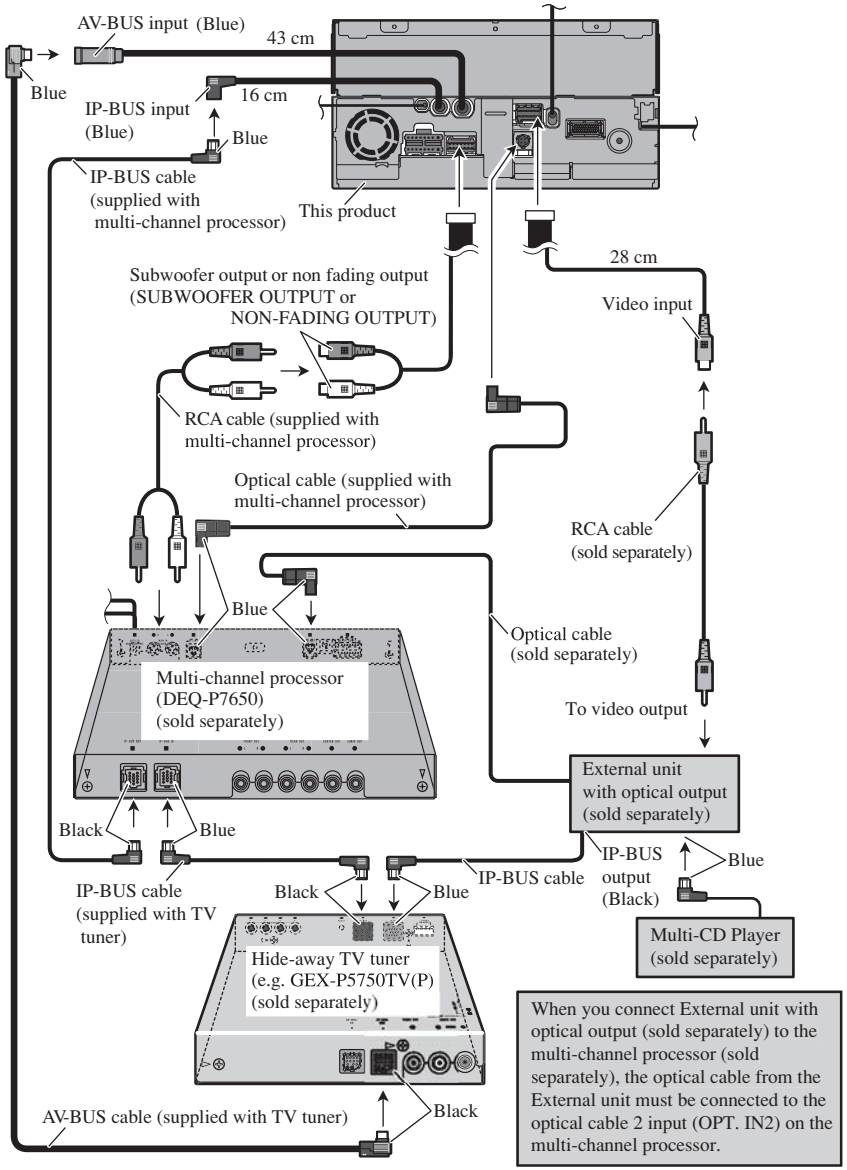

When you connect External unit with optical output (sold separately) to the multi-channel processor (sold separately), the optical cable from the External unit must be connected to the optical cable 2 input (OPT. IN2) on the multi-channel processor.

● Jigs List

Name	Jig No.	Remarks
Assembly jig	GGF1538	Assembly jig for MG4 (3pcs)
Flexible extension	GGD1170	40-Pin flexible extension

● Grease List

Name	Jig No.	Remarks
Grease(E Paste)	GEM1024	Mechanism Module Unit(SERVICE)

Before shipping out the product, be sure to clean the following portions by using the prescribed cleaning tools:

Portions to be cleaned	Cleaning tools
DVD pickup lenses	Cleaning liquid : GEM1004 Cleaning paper : GED-008

Portions to be cleaned	Cleaning tools
Fans	Cleaning paper : GED-008

● Internal multi-DVD shipping position mode setting

Auto change to the SHIP MODE after ALL DISC EJECT.

NOTE :
Do not switch off ACC and +B at the same time immediately after ejecting DISC.
(Switch off +B at 5 seconds after the shutter door is closed.)

*PICK UP is made to be automatically shifted to SHIP MODE. However, the above action may discontinue operation, disabling a shift to SHIP MODE.