9. EXPLODED VIEWS AND PARTS LIST

NOTES : • *Parts marked by " * " are generally unavailable because they are not in our Master Spare Parts List.*
• *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
• *Screw adjacent to▽ mark on the product are used for disassembly.*
• *For the applying amount of lubricants or glue, follow the instructions in this manual. (In the case of no amount instructions,apply as you think it appropriate.)*

9.1 PACKING

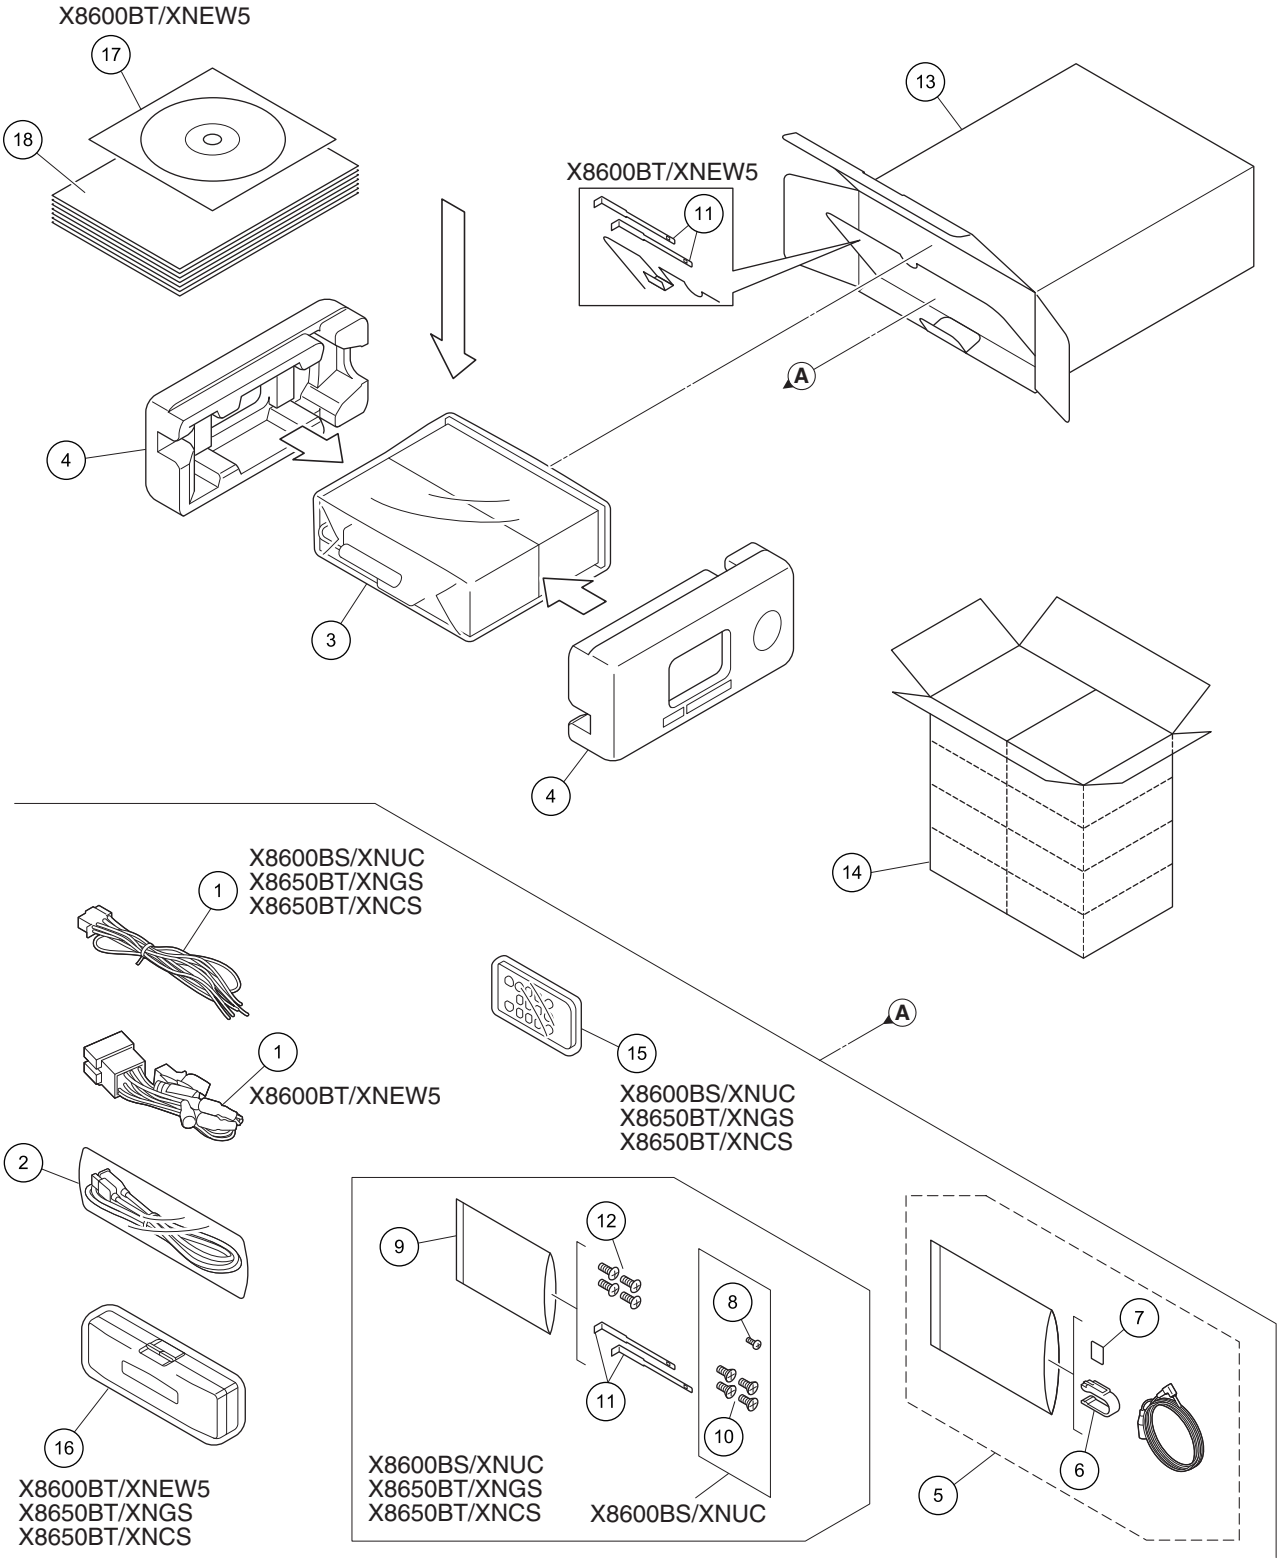

(1) PACKING SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	Cord Assy	See Contrast table (2)
	2	USB Extended Cable	CDP1587
	3	Polyethylene Bag	See Contrast table (2)
	4	Protector	CHP4594
	5	Microphone Assy	CPM1083
	6	Holder	CZN7192
	7	Cushion	CZN7193
	8	Screw	See Contrast table (2)
	9	Polyethylene Bag	See Contrast table (2)
	10	Screw	See Contrast table (2)
	11	Handle	QNC3021
	12	Screw	See Contrast table (2)
	13	Unit Box	See Contrast table (2)
	14	Contain Box	See Contrast table (2)
	15	Card Remote Control Unit	See Contrast table (2)
	16	Case Assy	See Contrast table (2)
	17	IM CD-ROM	See Contrast table (2)
	18-1	Owner's Manual	See Contrast table (2)
*	18-2	Caution Card	See Contrast table (2)
*	18-3	Caution Card	See Contrast table (2)
*	18-4	Warranty Card	See Contrast table (2)
	18-5	Quick Start Guide	See Contrast table (2)
	18-6	Installation Manual	See Contrast table (2)

(2) CONTRAST TABLE

DEH-X8600BS/XNUC, DEH-X8600BT/XNEW5, DEH-X8650BT/XNGS and DEH-X8650BT/XNCS are constructed the same except for the following:

Mark	No.	Description	DEH-X8600BS/ XNUC	DEH-X8600BT/ XNEW5	DEH-X8650BT/ XNGS	DEH-X8650BT/ XNCS
	1	Cord Assy	CDP1484	QDP3024	CDP1484	CDP1484
	3	Polyethylene Bag	CEG1173	QEG3001	QEG3001	QEG3001
	8	Screw	BPZ20P060FTC	Not used	Not used	Not used
	9	Polyethylene Bag	CEG1160	Not used	CEG1160	CEG1160
	10	Screw	CRZ50P090FTC	Not used	Not used	Not used
	12	Screw	TRZ50P080FTC	Not used	TRZ50P080FTC	TRZ50P080FTC
	13	Unit Box	QHG3603	QHG3602	QHG3605	QHG3604
	14	Contain Box	QHL3603	QHL3602	QHL3605	QHL3604
	15	Card Remote Control Unit	QXE1044	Not used	QXE1044	QXE1044
	16	Case Assy	Not used	YXA5856	YXA5856	YXA5856
	17	IM CD-ROM	Not used	QPJ3023	Not used	Not used
	18-1	Owner's Manual	QRD3228	QRB3364	QRD3230	QRD3229
*	18-2	Caution Card	Not used	CRP1438	Not used	Not used
*	18-3	Caution Card	Not used	CRP1441	Not used	Not used
*	18-4	Warranty Card	QRY3001	CRY1376	Not used	Not used
	18-5	Quick Start Guide	Not used	QRD3224	Not used	Not used
	18-6	Installation Manual	Not used	QRD3226	Not used	Not used

9.2 EXTERIOR

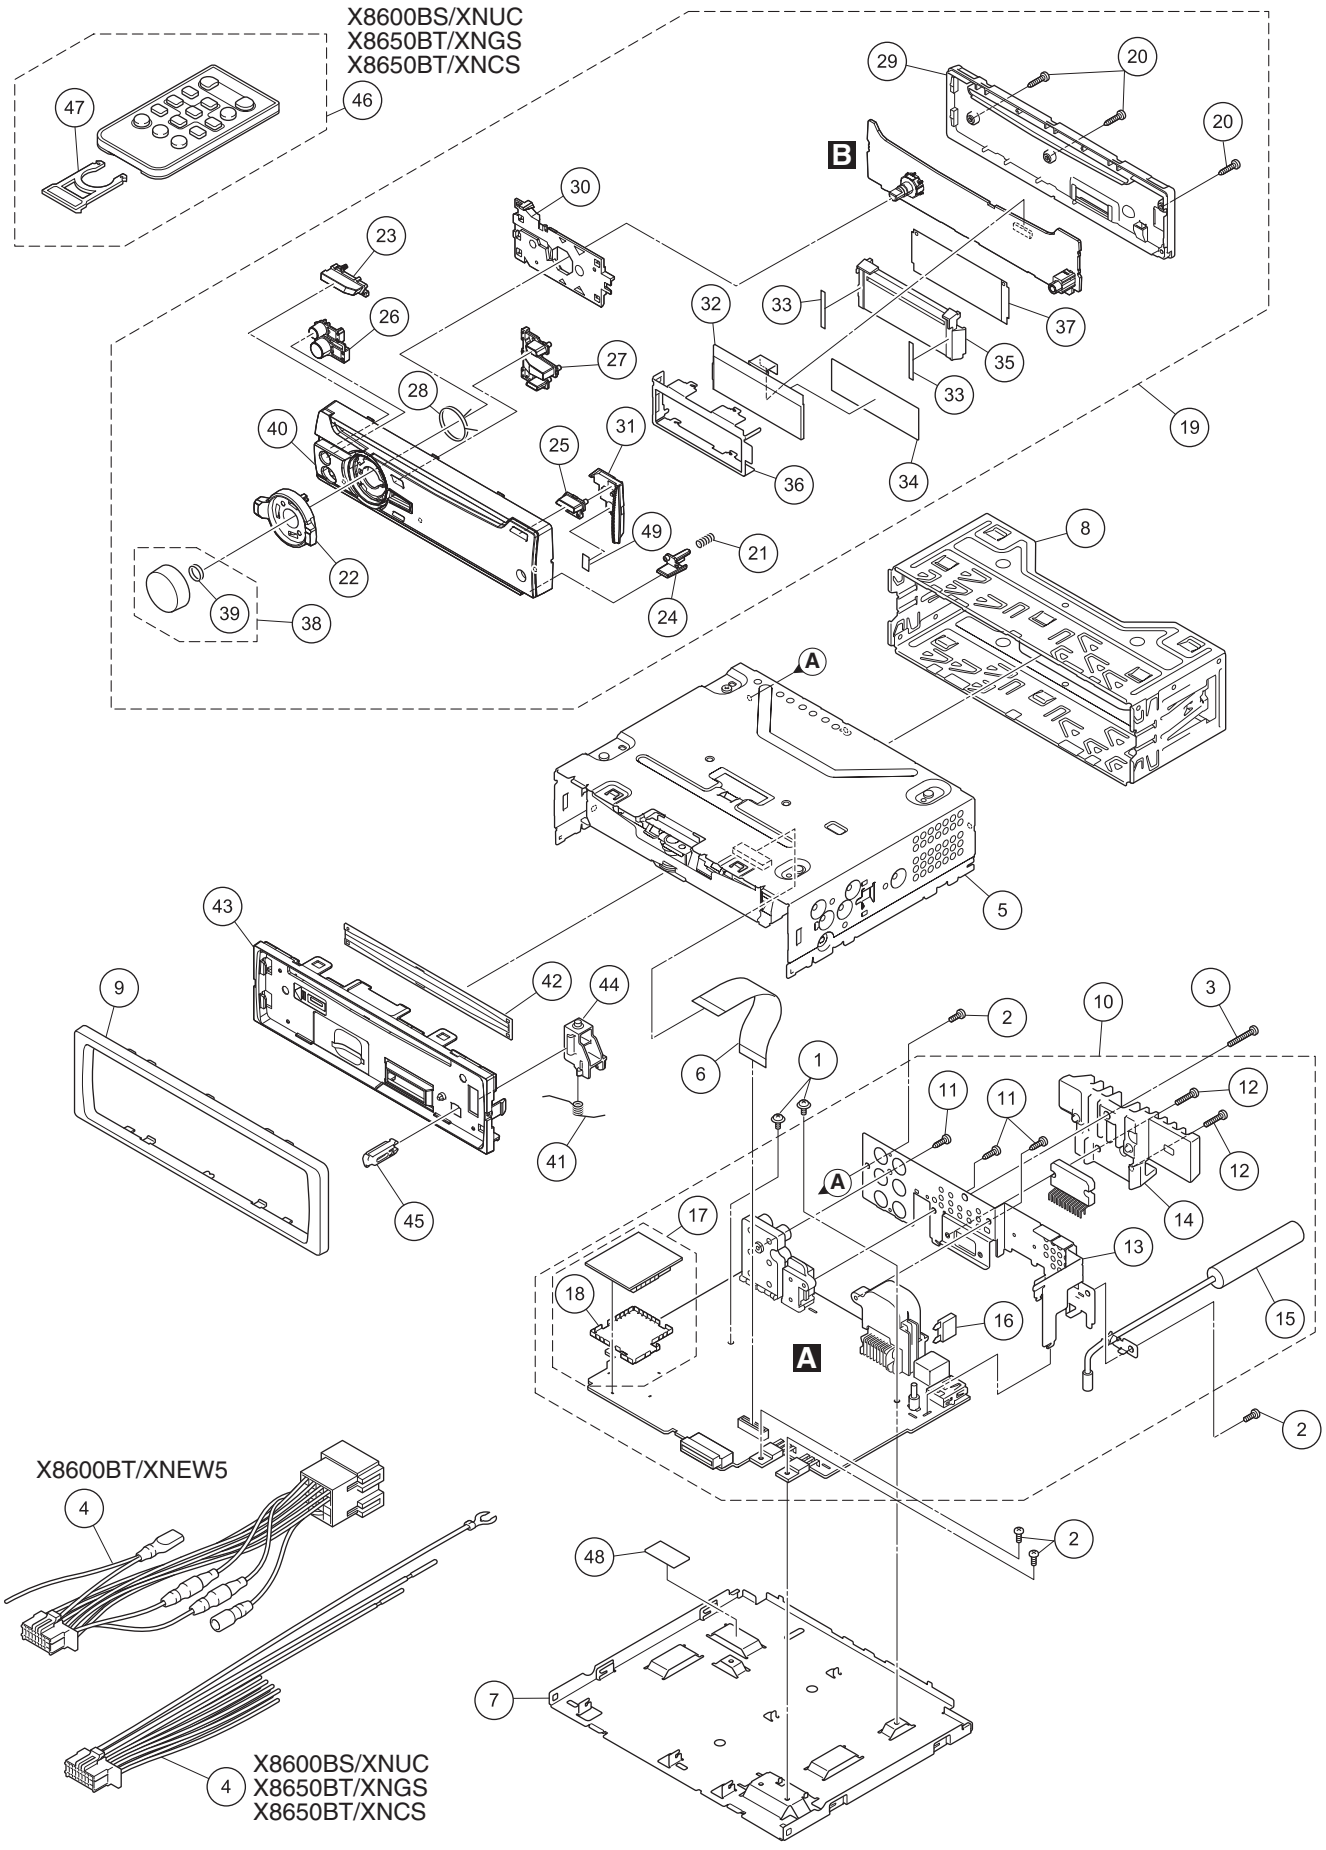
X8600BS/XNUC
X8650BT/XNGS
X8650BT/XNCS
X8600BT/XNEW5
X8600BS/XNUC
X8650BT/XNGS
X8650BT/XNCS

(1) EXTERIOR SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	Screw	ASZ26P050FTC
	2	Screw	BSZ26P060FTC
	3	Screw	BSZ26P120FTC
	4	Cord Assy	See Contrast table (2)
	5	CD Mechanism Module(S11.6)	CXK5804
	6	FFC	QDE3029
	7	Case	QNB3018
	8	Holder	QNC3020
	9	Panel	QNS3576
	10	Tuner Amp Assy	See Contrast table (2)
	11	Screw	BPZ26P080FTC
	12	Screw	BSZ26P120FTC
	13	Holder	See Contrast table (2)
	14	Heat Sink	See Contrast table (2)
	15	Antenna Attached Cable	YDH5001
⚠	16	Fuse (10 A)	YEK5001
	17	BT Module	YWX5048
	18	Shield Case	YNC5123
	19	Detachable Grille Assy	See Contrast table (2)
	20	Screw	BPZ20P100FTC
	21	Spring	CBH2210
	22	Lever	QAA3040
	23	Button (PHONE)	QAC3143
	24	Button (DETACH)	QAC3146
	25	Button (EJECT)	QAC3147
	26	Button (DISP)	QAC3148
	27	Button (MIX)	QAC3149
	28	Spring	QBH3006
	29	Cover	QNS3628
	30	Lighting Conductor	QNV3080
	31	Lighting Conductor	QNV3081
	32	LCD	See Contrast table (2)
	33	Tape	QNM3063
	34	Sheet	QNM3098
	35	Lighting Conductor	QNV3089
	36	Holder	YNC5101
	37	Sheet	YNM5187
	38	Knob Unit	QXA3981
	39	Spring	YBL5010
	40	Grille Unit	See Contrast table (2)
	41	Spring	QBH3001
	42	Cover	QNM3029
	43	Panel	See Contrast table (2)
	44	Arm	QNV3025
	45	Button	QNV3026
	46	Card Remote Control Unit	See Contrast table (2)
	47	Cover	See Contrast table (2)
	48	Sheet	QNM3105
	49	Sheet	QNM3101

(2) CONTRAST TABLE

DEH-X8600BS/XNUC, DEH-X8600BT/XNEW5, DEH-X8650BT/XNGS and DEH-X8650BT/XNCS are constructed the same except for the following:

Mark	No.	Description	DEH-X8600BS/ XNUC	DEH-X8600BT/ XNEW5	DEH-X8650BT/ XNGS	DEH-X8650BT/ XNCS
	4	Cord Assy	CDP1484	QDP3024	CDP1484	CDP1484
	10	Tuner Amp Assy	QWM3782	QWM3783	QWM3784	QWM3785
	13	Holder	QNC3062	YNC5108	YNC5108	YNC5108
	14	Heat Sink	QNR3010	QNR3010	QNR3002	QNR3010
	19	Detachable Grille Assy	QXA3984	QXA3983	QXA3986	QXA3985
	32	LCD	CAW2043	CAW2043	CAW2040	CAW2040
	40	Grille Unit	QXA3996	QXA3980	QXA3997	QXA3998
	43	Panel	QNS3669	QNS3627	QNS3627	QNS3627
	46	Card Remote Control Unit	QXE1044	Not used	QXE1044	QXE1044
	47	Cover	CNS7068	Not used	CNS7068	CNS7068

9.3 CD MECHANISM MODULE

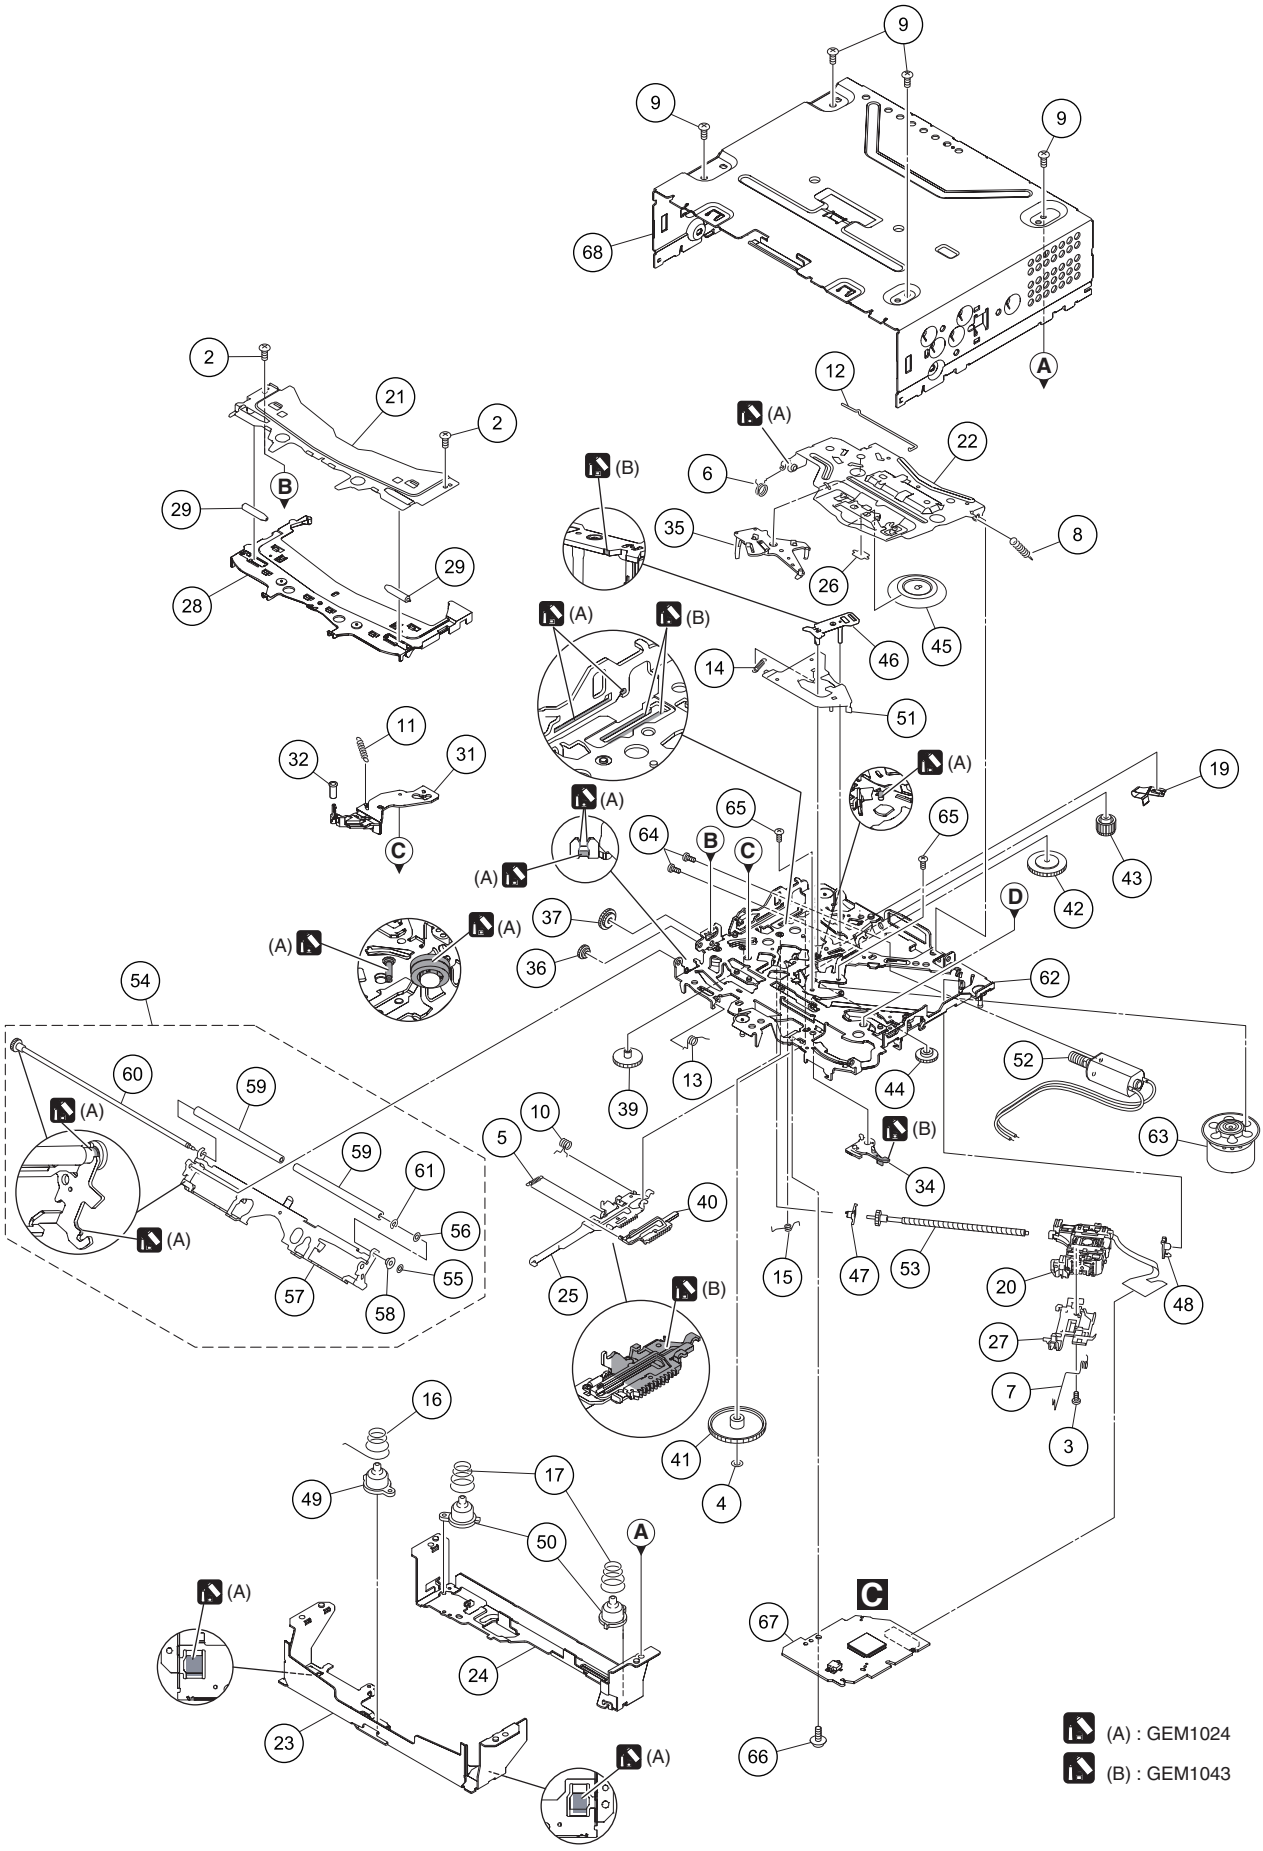

CD MECHANISM MODULE SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	.....	
	2	Screw	BSZ20P040FTC
	3	Screw(M2 x 4)	CBA1835
	4	Washer	CBF1038
	5	Spring	CBH3010
	6	Spring	CBH2855
	7	Spring	CBH2856
	8	Spring	CBH2860
	9	Screw	BSZ26P060FTC
	10	Spring	CBH3011
	11	Coil Spring	CBH3095
	12	Spring	CBH3014
	13	Spring	CBH3015
	14	Spring	CBH3016
	15	Spring	CBH3017
	16	Spring	CBH3086
	17	Spring	CBH3019
	18	.....	
	19	Leaf Spring	CBL1824
	20	Pickup Unit(P10.6)(Service)	CXX3556
	21	Bracket	CND4553
	22	Arm	CND6406
	23	Bracket	CND6127
	24	Bracket	CND5710
	25	Lever	CND5398
	26	Sheet	CNN3678
	27	Rack	CNV8342
	28	Guide	CNW2240
	29	Roller	CNW1172
	30	.....	
	31	Arm	CNW2241
	32	Roller	CNW1175
	33	.....	
	34	Arm	CNW1177
	35	Arm	CNW1178
	36	Gear	CNW1180
	37	Gear	CNW1181
	38	.....	
	39	Gear	CNW1183
	40	Rack	CNW1184
	41	Gear	CNW1185
	42	Gear	CNW1186
	43	Gear	CNW1187
	44	Gear	CNW2287
	45	Clamper	CNW1190
	46	Arm	CNW1192
	47	Holder	CNW1193
	48	Holder	CNW1194
	49	Damper	CNW1197
	50	Damper	CNW1198
	51	Arm	CNW1726
	52	Motor Unit(M2)(LOAD/CRG)	CXC4026
	53	Screw Unit	CXC8894
	54	Arm Assy	CXE6232
	55	Washer	CBF1037
	56	Washer	CBF1038
	57	Arm	CND6242
	58	Collar	CNW2444
	59	Roller	CNW2500
	60	Gear Unit	CXE6225
	61	Washer	YE15FTC
	62	Chassis Unit	CXE4528
	63	Motor Unit(M1)(SPDL)	CXE2273
	64	Screw	JFZ20P025FTC
	65	Screw	JGZ17P022FTC
	66	Screw	EBA1028
	67	CD Core Unit (S11.6STD)	CWX4023
	68	Chassis	CNA3181

12. ELECTRICAL PARTS LIST

NOTE:

- *Parts whose parts numbers are omitted are subject to being not supplied.*
- *The part numbers shown below indicate chip components.*

  Chip Resistor

  RS1/◯S◯◯◯J,RS1/◯◯S◯◯◯J

  Chip Capacitor (except for CQS.....)

  CKS....., CCS....., CSZS.....
- *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
- *Meaning of the figures and others in the parentheses in the parts list.*

  Example) IC 301 is on the point (face A, 91 of x-axis, and 111 of y-axis) of the corresponding PC board.

  IC 301 (A, 91, 111) IC NJM2068V
- *The expression of the unit in this manual is shown by u instead of μ. Please do not make a mistake.*

A:DEH-X8600BS/XNUC

B:DEH-X8600BT/XNEW5

C:DEH-X8650BT/XNGS

D:DEH-X8650BT/XNCS

Unit Number : QWM3782(A)

Unit Number : QWM3783(B)

Unit Number : QWM3784(C)

Unit Number : QWM3785(D)

Unit Name : Tuner Amp Assy

Unit Number :

Unit Name : Keyboard Unit

Unit Number : CWX4023

Unit Name : CD Core Unit (S11.6STD)

A

Unit Number : QWM3782(A)

Unit Number : QWM3783(B)

Unit Number : QWM3784(C)

Unit Number : QWM3785(D)

Unit Name : Tuner Amp Assy

MISCELLANEOUS

Circuit Symbol and No.		Part No.
IC 151	(A,81,115) IC	PM9012A
IC 181	(A,106,108) IC	NJW4132U2-A
IC 201	(A,40,110) IC	AN33014UA
IC 271	(A,27,48) Regulator IC	S-1172B18-E6
IC 281	(A,20,47) IC	S-1200B33-M5
IC 321	(A,81,142) IC	PA2032A
IC 371	(A,62,88) IC	WM8761BGED
IC 391	(A,138,60) Regulator IC	NJM2885DL1-05
IC 401	(A,141,87) IC	TDA7706
IC 601	(A,106,65) IC(A)	PEQ265A8
	(A,106,65) IC(B,D)	PEQ267A8
	(A,106,65) IC(C)	PEQ329A8
IC 603	(A,127,46) IC	S-80827CNMC-B8M
IC 604	(A,101,82) IC(A)	TC7SH126FU
IC 605	(A,97,82) L-MOS And Gate(A)	TC7SET08FUS1
IC 651	(A,70,68) IC	R5S726B0D216FP
IC 701	(A,43,70) RAM IC	M12L64164A-5TG2Y
IC 721	(A,33,92) Regulator IC	S-1155B12-U5
IC 731	(A,72,89) Flash ROM Unit	PEB125A8
IC 741	(A,84,53) IC(A,B)	MX25L4006EM2I-12G
IC 881	(A,54,93) IC	337S3959
IC 901	(A,13,63) Regulator IC	BD9876EFJ
IC 931	(A,27,57) Regulator IC	S-1172B33-E6
IC 941	(A,140,42) IC	NJM2388F84
Q 301	(A,11,130) Transistor	IMH23
Q 302	(A,20,130) Transistor	IMH23
Q 303	(A,28,130) Transistor	IMH23
Q 351	(A,57,132) Transistor	LSCR523UB
Q 352	(A,63,128) Chip Transistor	RN4983
Q 353	(A,67,128) Transistor	LTC014EEB
Q 701	(A,34,84) Transistor	LSAR523UB
Q 771	(A,155,41) Transistor	KTD2092
Q 772	(A,151,47) Chip Transistor	RN4983
Q 831	(A,114,28) Transistor	2SA1577
Q 832	(A,114,31) Transistor	LTC143EUB
Q 841	(A,107,29) Transistor	LSAR523UB
Q 842	(A,110,31) Transistor	LTC014EEB
Q 851	(A,53,40) Chip Transistor(B,C,D)	2SB1689
Q 852	(A,55,40) Transistor(B,C,D)	LTC014EEB
Q 853	(A,58,41) Transistor(B,C,D)	DTA123EU
Q 881	(A,50,87) Transistor	LSAR523UB
Q 921	(A,20,54) Transistor	2SD2153
Q 922	(A,21,59) Chip Transistor	RN4983
Q 951	(A,143,130) Chip Transistor	HN1C01FU
Q 961	(A,93,121) Transistor	LTC014EEB
D 182	(A,103,104) Diode	RB551VM-30
D 201	(A,45,109) Diode	RB060M-30
D 202	(B,59,119) Diode	RB056L-40
D 351	(A,57,130) Diode	DA2J101

Circuit Symbol and No.		Part No.
D 352	(A,61,131) Diode	DZ2J082M0
D 353	(A,63,131) Diode	DAN202UM
D 401	(A,149,102) Diode	RN731VN
D 402	(A,148,95) Diode	RN731VN
D 771	(A,154,45) Diode	DZ2J082M0
D 801	(B,106,22) Diode	DZ2S068C
D 802	(B,108,22) Diode	DZ2S068C
D 803	(B,110,22) Diode	DZ2S068C
D 901	(A,12,68) Diode	RB056L-40
D 902	(B,8,72) Diode	1SR154-400
D 903	(B,25,54) Diode	CRG03
D 922	(B,20,56) Diode	DZ2J056M0
D 923	(B,12,44) Diode	DA2J101
D 924	(B,14,50) Diode(A)	DB2J31400
D 951	(A,134,126) Diode	DZ2J075M0
D 952	(A,140,131) Diode	DZ2J068M0
D 961	(B,104,125) Diode	CRG03
D 981	(A,135,132) Diode	1SR154-400
D 982	(A,135,128) Diode	1SR154-400
D 991	(B,93,127) Diode	CRG03
L 151	(A,92,115) Inductor	LCTAW6R8J2520
L 181	(A,99,110) Choke Coil 22 uH	CTH1561
L 201	(A,154,125) Inductor	CTF1713
L 202	(A,50,106) Inductor	CTH1524
L 251	(A,14,35) Inductor	CTF1786
L 252	(A,14,33) Inductor	CTF1786
L 371	(A,58,96) Chip Ferrite Bead	DTL1107
L 402	(A,142,97) Inductor	CTF1786
L 403	(A,139,99) Inductor	CTF1786
L 404	(A,149,98) Chip Coil	LCTAWR15J2520
L 405	(A,146,99) Chip Coil	LCTAWR27J2520
L 406	(A,140,101) Inductor	CTF1389
L 409	(A,133,95) Inductor	LCTC1R5K1608
L 410	(A,151,92) Inductor	CTF1786
L 411	(A,151,91) Inductor	CTF1786
L 412	(A,128,87) Chip Coil	LCTAW470J2520
L 414	(A,132,78) Inductor	CTF1786
L 415	(A,146,78) Inductor	CTF1786
L 651	(A,84,61) Chip Beads	VTL1127
L 652	(A,37,88) Inductor(C,D)	CTF1786
L 653	(A,47,52) Chip Ferrite Bead	DTL1107
L 701	(A,31,78) Chip Ferrite Bead	DTL1107
L 731	(B,75,88) Inductor	CTF1389
L 851	(B,55,36) Inductor(B,C,D)	CTF1389
L 901	(A,10,75) Inductor	CTH1521
L 981	(A,114,141) Choke Coil 600 uH	CTH1432
X 401	(A,152,85) Resonator 36.480 MHz	CSS1805
X 601	(A,93,66) Resonator 20.000 MHz	CSS1795
X 651	(A,85,66) Resonator 12.000 MHz	YSS5005
X 652	(A,77,84) Resonator 16.93 MHz	CSS1794
P 301	(A,36,128) Poly Switch	FSMD075-24R
P 401	(A,152,112) Surge Absorber	IMSA-6803-01Y900
⚠P471	(A,123,97) Fuse 1.25 A(A)	CEK1382
BZ601	(A,87,29) Buzzer	CPV1062
VA801	(B,102,22) Varistor	EZJZ1V270RM
VA802	(B,113,22) Varistor	EZJZ1V270RM
VA803	(B,119,22) Varistor	EZJZ1V270RM
VA804	(B,117,22) Varistor	EZJZ1V270RM
VA805	(B,115,22) Varistor	EZJZ1V270RM
VA806	(B,121,22) Varistor	EZJZ1V270RM
VA807	(B,122,22) Varistor	EZJZ1V270RM
VA808	(B,120,12) Varistor	EZJZ1V270RM
CN251	(A,48,34) Connector	CKS6346
CN751	(A,116,38) Connector	VKN1192
CN802	(A,111,4) Connector	CKS6452
JA101	(A,145,143) Connector(A)	CKS3806
JA122	(A,45,141) Jack	YKS5035
JA201	(A,163,135) USB Jack	CKN1091
JA301	(A,22,138) Pin Jack	XKB7001
JA401	(A,157,116) ANT Pigtail Cable	YDH5001
JA851	(A,66,21) Connector(B,C,D)	YKS5040
JA981	(A,116,141) Connector	CKM1613

RESISTORS

R 102	(B,144,132) (A)	RS1/10SR473J
R 103	(A,148,134) (A)	RS1/16SS102J
R 104	(A,148,131) (A)	RS1/16SS102J
R 105	(A,147,131) (A)	RS1/16SS102J
R 106	(A,145,131) (A)	RS1/16SS102J
R 107	(A,149,134) (A)	RS1/16SS181J
R 108	(B,148,134) (A)	RS1/10SR223J
R 109	(B,148,135) (A)	RS1/10SR223J
R 110	(A,150,134) (A)	RS1/16SS181J
R 121	(A,46,129)	RS1/10SR102J
R 122	(A,44,129)	RS1/10SR102J
R 151	(A,72,107)	RS1/16SS223J
R 152	(A,86,107)	RS1/16SS223J
R 153	(A,73,107)	RS1/16SS331J
R 154	(A,73,124)	RS1/16SS102J
R 155	(A,72,124)	RS1/16SS102J
R 156	(A,73,123)	RS1/16SS102J
R 182	(A,111,104)	RS1/16SS0R0J
R 183	(A,110,104)	RS1/16SS4703D
R 184	(A,108,104)	RS1/16SS1802D
R 187	(A,95,113)	RS1/16SS0R0J
R 189	(A,106,104)	RS1/16SS1802D
R 190	(A,109,105)	RS1/16SS330J
R 192	(A,116,112)	RS1/10SR0R0J
R 196	(A,113,105)	RS1/10SR0R0J
R 202	(A,55,103)	RS1/10SR681J
R 203	(A,55,104)	RS1/10SR681J
R 204	(A,47,113) 0.056 ohm	ACN7160
R 206	(A,40,103)	RS1/16SS4702D
R 207	(A,37,103)	RS1/16SS224J
R 208	(A,33,117)	RS1/16SS152J
R 210	(A,34,116)	RS1/16SS3302D
R 211	(A,34,114)	RS1/16SS8201D
R 212	(A,35,116)	RS1/16SS223J
R 251	(B,55,29)	RS1/10SR221J
R 252	(B,55,32)	RS1/10SR221J
R 253	(B,55,31)	RS1/10SR221J
R 254	(A,50,41)	RS1/16SS102J
R 255	(A,49,41)	RS1/16SS102J
R 256	(A,16,36)	RS1/16SS222J
R 257	(B,48,43)	RS1/10SR101J
R 258	(B,46,43)	RS1/10SR101J
R 259	(B,44,43)	RS1/10SR102J
R 260	(A,16,32)	RS1/16SS222J
R 264	(A,30,46)	RS1/16SS0R0J

Circuit Symbol and No.		Part No.
R 301	(A,8,129)	RS1/16SS820J
R 302	(A,14,129)	RS1/16SS820J
R 303	(A,17,129)	RS1/16SS820J
R 304	(A,22,129)	RS1/16SS820J
R 305	(A,25,129)	RS1/16SS820J
R 306	(A,31,129)	RS1/16SS820J
R 307	(A,8,130)	RS1/16SS223J
R 308	(A,14,130)	RS1/16SS223J
R 309	(A,16,130)	RS1/16SS223J
R 310	(A,23,130)	RS1/16SS223J
R 311	(A,25,130)	RS1/16SS223J
R 312	(A,31,130)	RS1/16SS223J
R 321	(A,78,124)	RS1/16SS362J
R 322	(A,79,124)	RS1/16SS362J
R 323	(A,82,124)	RS1/16SS362J
R 324	(A,83,124)	RS1/16SS362J
R 325	(A,77,125)	RS1/16SS562J
R 326	(A,79,125)	RS1/16SS562J
R 327	(A,82,125)	RS1/16SS562J
R 328	(A,84,125)	RS1/16SS562J
R 329	(B,75,132)	RS1/10SR562J
R 330	(B,70,131)	RS1/10SR103J
R 331	(B,72,132)	RS1/10SR103J
R 351	(A,64,126)	RS1/16SS473J
R 352	(A,62,134)	RS1/16SS473J
R 353	(B,56,131)	RS1/10SR473J
R 354	(A,59,134)	RS1/16SS104J
R 355	(A,69,129)	RS1/16SS103J
R 356	(A,61,126)	RS1/16SS102J
R 357	(A,68,130)	RS1/16SS103J
R 358	(A,68,131)	RS1/16SS681J
R 360	(A,91,121)	RS1/16SS0R0J
R 371	(A,78,96)	RS1/16SS821J
R 372	(A,78,94)	RS1/16SS821J
R 401	(A,144,103)	RS1/16SS105J
R 402	(A,152,102)	RS1/16SS221J
R 403	(A,151,95)	RS1/16SS751J
R 404	(A,131,95)	RS1/16SS331J
R 405	(A,135,95)	RS1/16SS105J
R 406	(A,130,91)	RS1/16SS471J
R 407	(A,131,90)	RS1/16SS330J
R 408	(A,131,88)	RS1/16SS681J
R 410	(A,128,80)	RS1/4SA8R2J
R 411	(A,126,80)	RS1/4SA8R2J
R 413	(A,137,74)	RS1/16SS102J
R 415	(A,132,79)	RS1/16SS0R0J
R 421	(B,152,100)	RS1/8SQ0R0J
R 422	(B,148,100)	RS1/8SQ0R0J
R 424	(A,129,98)	RS1/8SQ0R0J
R 425	(A,139,106)	RS1/8SQ0R0J
R 474	(A,116,80) (A)	RS1/16SS183J
R 477	(A,108,78) (A)	RS1/16SS183J
R 479	(A,121,97) (A)	RS1/10SR0R0J
R 601	(A,94,33)	RS1/16SS102J
R 602	(B,102,71)	RS1/10SR154J
R 603	(A,98,56)	RS1/16SS222J
R 604	(A,95,65)	RS1/16SS105J
R 606	(B,94,62)	RS1/10SR104J
R 607	(A,98,55)	RS1/16SS104J
R 608	(A,99,54)	RS1/16SS104J

Circuit Symbol and No.		Part No.
R 609	(A,92,71)	RS1/16SS104J
R 610	(A,99,76)	RS1/16SS104J
R 611	(A,93,60)	RS1/16SS104J
R 612	(A,93,58)	RS1/16SS104J
R 613	(A,105,82)	RS1/16SS103J
R 614	(A,96,64)	RS1/16SS104J
R 615	(A,96,66)	RS1/16SS101J
R 616	(A,101,76) (D)	RS1/16SS104J
R 617	(A,103,76) (B,D)	RS1/16SS104J
R 618	(B,106,52)	RS1/10SR472J
R 619	(A,112,76)	RS1/16SS103J
R 620	(B,106,64)	RS1/10SR104J
R 621	(A,104,54)	RS1/16SS104J
R 622	(B,93,50)	RS1/10SR104J
R 623	(B,95,50)	RS1/10SR104J
R 624	(B,108,77)	RS1/10SR104J
R 628	(A,116,68)	RS1/16SS104J
R 631	(A,116,64)	RS1/16SS104J
R 632	(A,116,73)	RS1/16SS472J
R 633	(A,116,72)	RS1/16SS472J
R 636	(A,124,46)	RS1/16SS104J
R 638	(A,123,46)	RS1/16SS152J
R 642	(B,94,64)	RS1/10SR104J
R 643	(B,98,70)	RS1/10SR104J
R 646	(A,119,69)	RS1/16SS104J
R 647	(A,104,82)	RS1/16SS103J
R 648	(B,101,82) (A)	RS1/10SR473J
R 650	(A,91,73) (A)	RS1/16SS0R0J
R 652	(A,80,56) (C,D)	RS1/16SS473J
R 653	(A,76,50) (C,D)	RS1/16SS473J
R 657	(A,87,62)	RS1/16SS101J
R 660	(B,84,70)	RS1/10SR221J
R 661	(B,58,86)	RS1/10SR221J
R 662	(A,85,61)	RS1/16SS181J
R 663	(A,83,67)	RS1/16SS332J
R 664	(B,77,71)	RS1/10SR473J
R 666	(B,77,75)	RS1/10SR473J
R 669	(A,69,81)	RS1/16SS101J
R 670	(A,70,83)	RS1/16SS101J
R 671	(A,71,83)	RS1/16SS101J
R 672	(A,72,83)	RS1/16SS101J
R 673	(A,73,81)	RS1/16SS101J
R 674	(A,74,81)	RS1/16SS101J
R 675	(A,65,81)	RS1/16SS221J
R 676	(A,65,82)	RS1/16SS221J
R 677	(A,67,81)	RS1/16SS221J
R 678	(B,69,81)	RS1/10SR221J
R 679	(A,76,81)	RS1/16SS332J
R 680	(A,37,89) (A,B)	RS1/16SS0R0J
R 681	(A,84,81)	RAB4CQ473J
R 682	(A,83,69)	RS1/16SS153J
R 683	(A,83,70)	RS1/16SS153J
R 684	(A,88,71)	RS1/16SS153J
R 685	(A,88,72)	RS1/16SS153J
R 686	(A,83,72)	RS1/16SS473J
R 687	(A,83,73)	RS1/16SS473J
R 688	(A,86,76)	RS1/16SS473J
R 689	(A,85,77)	RS1/16SS473J
R 690	(B,58,72)	RS1/10SR473J
R 691	(B,84,63)	RS1/10SR0R0J
R 692	(B,67,80)	RS1/10SR473J

Circuit Symbol and No.		Part No.
R 693	(A,56,64) (B,C,D)	RS1/16SS221J
R 695	(B,77,67)	RS1/10SR473J
R 701	(B,43,76)	RS1/10SR473J
R 702	(A,43,79)	RS1/16SS472J
R 703	(A,41,79)	RAB4CQ220J
R 704	(A,38,79)	RAB4CQ220J
R 705	(A,34,79)	RAB4CQ220J
R 707	(A,37,83)	RS1/16SS472J
R 708	(A,43,61)	RS1/16SS220J
R 710	(A,37,61)	RAB4CQ220J
R 711	(A,34,61)	RAB4CQ220J
R 731	(A,73,93)	RS1/16SS473J
R 732	(B,71,92)	RS1/10SR473J
R 733	(A,72,93)	RS1/16SS473J
R 734	(A,78,90)	RS1/16SS473J
R 735	(A,78,87)	RS1/16SS473J
R 741	(A,82,56) (A,B)	RS1/16SS101J
R 742	(A,74,49) (A,B)	RS1/16SS101J
R 743	(A,78,53) (A,B)	RS1/16SS101J
R 744	(A,78,54) (A,B)	RS1/16SS101J
R 745	(A,85,57) (A,B)	RS1/16SS473J
R 751	(B,110,33)	RS1/10SR472J
R 752	(B,106,34)	RS1/10SR473J
R 753	(B,113,33)	RS1/10SR472J
R 754	(A,116,41)	RS1/16SS104J
R 755	(B,115,33)	RS1/10SR472J
R 756	(A,104,39)	RS1/16SS221J
R 757	(A,104,40)	RS1/16SS221J
R 758	(A,104,38)	RS1/16SS101J
R 759	(A,110,41)	RS1/16SS221J
R 760	(A,104,37)	RS1/16SS101J
R 761	(A,115,41)	RS1/16SS102J
R 762	(A,117,34)	RS1/16SS151J
R 763	(A,119,41)	RS1/16SS151J
R 764	(A,119,34)	RS1/16SS151J
R 765	(A,123,41)	RS1/16SS221J
R 766	(A,122,41)	RS1/16SS104J
R 767	(B,105,37)	RS1/10SR104J
R 771	(B,143,41)	RS1/10SR473J
R 772	(B,143,43)	RS1/10SR103J
R 773	(B,155,45)	RS1/4SA391J
R 803	(A,107,22)	RS1/10SR101J
R 804	(A,109,22)	RS1/10SR101J
R 805	(A,105,22)	RS1/10SR222J
R 806	(A,111,22)	RS1/10SR222J
R 807	(A,117,22)	RS1/10SR222J
R 808	(A,116,22)	RS1/10SR222J
R 809	(A,115,22)	RS1/10SR222J
R 810	(A,119,22)	RS1/10SR222J
R 811	(A,120,22)	RS1/10SR222J
R 812	(B,94,20)	RS1/10SR102J
R 813	(B,94,22)	RS1/10SR104J
R 832	(B,109,26)	RS1/10SR473J
R 833	(B,116,29)	RS1/10SR332J
R 834	(A,117,28)	RS1/10SR103J
R 841	(A,105,29)	RS1/10SR472J
R 842	(B,107,30)	RS1/10SR102J
R 843	(B,105,30)	RS1/10SR103J
R 851	(B,58,39) (B,C,D)	RS1/10SR221J
R 852	(A,60,38) (B,C,D)	RS1/16SS221J

Circuit Symbol and No.		Part No.
R 854	(A,70,37) (B,C,D)	RS1/16SS221J
R 855	(B,67,44) (B,C,D)	RS1/10SR221J
R 856	(B,69,44) (B,C,D)	RS1/10SR221J
R 857	(A,54,38) (B,C,D)	RS1/16SS102J
R 858	(B,53,41) (B,C,D)	RS1/10SR821J
R 859	(B,53,44) (B,C,D)	RS1/10SR103J
R 860	(A,70,38)	RS1/16SS473J
R 862	(A,69,38) (B,C,D)	RS1/16SS221J
R 863	(B,65,44)	RS1/10SR473J
R 864	(B,60,45) (A)	RS1/10SR0R0J
R 865	(B,71,44)	RS1/10SR473J
R 866	(B,60,36)	RS1/10SR473J
R 867	(B,62,36)	RS1/10SR473J
R 869	(B,62,45)	RS1/10SR473J
R 881	(A,47,87)	RS1/10SR103J
R 882	(A,55,96)	RS1/16SS473J
R 883	(A,54,96)	RS1/16SS222J
R 884	(A,53,90)	RS1/16SS222J
R 885	(A,54,89)	RS1/16SS272J
R 886	(A,53,85)	RS1/16SS472J
R 887	(A,53,96)	RS1/16SS101J
R 888	(A,53,89)	RS1/16SS101J
R 889	(A,56,89)	RS1/16SS472J
R 901	(B,26,72)	RS1/10SR102J
R 903	(A,9,62)	RS1/16SS513J
R 904	(A,7,62)	RS1/16SS103J
R 905	(A,7,64)	RS1/16SS103J
R 906	(A,6,63)	RS1/16SS183J
R 907	(A,6,61)	RS1/16SS0R0J
R 908	(A,6,60)	RS1/16SS473J
R 921	(B,21,58)	RS1/10SR223J
R 922	(B,21,60)	RS1/10SR332J
R 931	(A,31,52)	RS1/16SS473J
R 941	(B,130,43)	RS1/10SR473J
R 942	(A,127,53)	RS1/16SS0R0J
R 951	(A,142,133)	RS1/16SS103J
R 952	(A,141,128)	RS1/16SS104J
R 953	(A,142,134)	RS1/16SS473J
R 954	(A,142,130)	RS1/16SS473J
R 955	(B,120,128)	RS1/10SR682J
R 956	(A,119,129)	RS1/4SA102J
R 961	(B,99,126)	RS1/10SR103J
R 962	(A,114,129)	RS1/4SA102J
R 1001	(A,87,76)	RS1/16SS220J
R 1003	(A,90,77)	RS1/16SS220J

CAPACITORS

C 101	(B,146,142) (A)	CKSRYB105K16
C 121	(B,55,148)	CKSRYB102K50
C 122	(B,37,129)	CKSRYB102K50
C 123	(B,39,132)	CKSRYB102K50
C 151	(A,74,113)	CKSRYB105K10
C 152	(A,87,112)	CKSRYB105K10
C 153	(A,74,112)	CKSRYB224K16
C 154	(B,92,105)	CKSRYB224K16
C 155	(B,102,114) (A)	CKSRYB105K10
C 156	(B,102,113) (A)	CKSRYB105K10
C 157	(B,98,114) (A)	CKSRYB105K10
C 158	(B,98,113) (A)	CKSRYB105K10

Circuit Symbol and No.		Part No.
C 159	(A,74,110)	CKSRYB105K10
C 160	(A,87,109)	CKSRYB105K10
C 161	(A,74,109) 2.2 uF	CCG1205
C 163	(A,75,115)	CKSRYB105K10
C 164	(A,86,114)	CKSRYB105K10
C 165	(A,87,117) 10 uF	CCG1192
C 166	(A,89,115) 10 uF	CCG1192
C 168	(A,86,125)	CKSQYB225K16
C 170	(A,88,122)	CKSQYB225K16
C 181	(A,92,109)	CKSSYB104K16
C 184	(A,110,105)	CCSSCH150J50
C 186	(B,100,105) 10 uF	CCG1236
C 188	(A,112,109) 10 uF	CCG1236
C 190	(B,100,108) 10 uF	CCG1236
C 201	(A,46,118)	CKSSYB104K10
C 202	(A,51,112) 22 uF	CCG1254
C 204	(A,38,103)	CKSSYB102K50
C 205	(A,42,104)	CKSSYB104K16
C 206	(A,36,103)	CKSSYB472K25
C 207	(A,41,103)	CKSSYB104K16
C 208	(A,32,116)	CCSSCH151J50
C 209	(A,38,115) 1 uF	DCH1246
C 210	(A,37,116)	CKSSYB472K25
C 211	(A,43,117) 10 uF	DCH1165
C 212	(A,35,115)	CCSSCH270J50
C 213	(A,62,109)	CEVW101M16
C 214	(A,39,116)	CKSSYB104K16
C 215	(A,52,117) Capacitor	CEHVW101M6R3
C 216	(A,47,118)	CKSSYB102K50
C 217	(B,66,112) 22 uF	CCG1254
C 251	(A,36,48) Capacitor	CEVW471M10
C 253	(A,16,34)	CKSRYB105K16
C 255	(B,40,32) 4.7 uF	CCG1212
C 256	(B,40,34) 4.7 uF	CCG1212
C 262	(B,49,34)	CCSRCH270J50
C 264	(B,55,34)	CKSRYB104K16
C 272	(B,26,45) 4.7 uF	CCG1212
C 273	(B,26,50) 4.7 uF	CCG1212
C 281	(B,22,45) 4.7 uF	CCG1212
C 284	(B,18,45) 4.7 uF	CCG1212
C 301	(A,9,127) 10 uF	CCG1192
C 302	(A,13,127) 10 uF	CCG1192
C 303	(A,17,127) 10 uF	CCG1192
C 304	(A,22,127) 10 uF	CCG1192
C 305	(A,26,127) 10 uF	CCG1192
C 306	(A,30,127) 10 uF	CCG1192
C 307	(A,8,131)	CKSSYB103K16
C 308	(A,14,131)	CKSSYB103K16
C 309	(A,16,131)	CKSSYB103K16
C 310	(A,23,131)	CKSSYB103K16
C 311	(A,25,131)	CKSSYB103K16
C 312	(A,31,131)	CKSSYB103K16
C 315	(B,33,142)	CKSRYB102K50
C 325	(B,77,132)	CKSRYB224K16
C 326	(B,79,132)	CKSRYB224K16
C 327	(B,82,132)	CKSRYB224K16
C 328	(B,84,132)	CKSRYB224K16
C 333	(A,62,136)	CKSRYB105K16
C 335	(B,61,137)	CKSRYB102K50
C 337	(B,63,141)	CKSRYB103K50

Circuit Symbol and No.		Part No.
C 338	(B,63,143) 10 uF	CCG1236
C 339	(B,88,143)	CKSRYB104K16
C 340	(A,128,123) 3 300 uF/16 V	CCH1486
C 344	(B,66,136)	CKSRYB103K50
C 351	(A,51,129) Capacitor	CEVW220M16
C 352	(B,63,131) 2.2 uF	CCG1205
C 375	(A,67,90) 4.7 uF	CCG1212
C 376	(A,58,93)	CKSSYB103K16
C 377	(A,59,95) 4.7 uF	CCG1212
C 378	(B,65,96)	CKSRYB104K16
C 379	(A,80,96)	CKSSYB182K50
C 380	(A,80,94)	CKSSYB182K50
C 391	(A,142,57) 4.7 uF	CCG1212
C 393	(A,132,55)	CKSQYB474K16
C 401	(A,147,102)	CCSSCH330J50
C 402	(A,143,100)	CKSSYB103K16
C 403	(A,148,100)	CCSSCH6R0D50
C 404	(A,150,100)	CKSSYB103K16
C 405	(A,141,97)	CKSSYB104K10
C 406	(A,137,96)	CKSSYB104K10
C 410	(A,150,97)	CKSSYB103K16
C 411	(A,139,97)	CKSSYB104K10
C 412	(A,152,97)	CKSSYB103K16
C 413	(A,137,97)	CKSSYB103K16
C 414	(A,135,98) 10 uF	CCG1192
C 415	(A,134,98) (A,C,D)	CCSSCK2R0C50
C 416	(B,134,85) (A)	CCSRCK2R0C50
	(B,134,85) (B,C,D)	CCSRCH101J50
C 418	(A,140,97)	CCSSCK2R0C50
C 419	(A,135,96)	CKSSYB223K16
C 420	(A,139,95)	CKSSYB103K16
C 421	(A,144,95)	CKSSYB104K10
C 422	(A,146,97)	CKSSYB103K16
C 423	(A,143,97)	CKSRYB105K10
C 424	(A,149,93)	CKSRYB224K16
C 426	(A,133,93)	CKSSYB103K16
C 427	(A,148,90)	CKSSYB104K10
C 428	(A,130,92) 10 uF	CCG1192
C 429	(A,150,90)	CKSRYB105K10
C 430	(A,131,91)	CKSSYB104K10
C 431	(A,154,88)	CKSSYB472K25
C 432	(A,154,90)	CKSSYB472K25
C 433	(A,130,90)	CCSSCH101J50
C 434	(A,135,94)	CKSSYB104K10
C 435	(A,128,90)	CKSSYB103K16
C 436	(A,152,87)	CCSSCH100D50
C 437	(A,149,87)	CKSSYB104K10
C 438	(A,132,88)	CCSSCH820J50
C 440	(A,133,86) (B,C,D)	CCSSCH100D50
C 441	(A,130,82)	CKSRYB474K10
C 443	(A,131,80)	CCSRCH471J50
C 444	(A,152,82)	CCSSCH100D50
C 445	(A,153,79)	CKSSYB104K10
C 447	(A,150,79) 2.2 uF	CCG1205
C 449	(A,148,82) (A,C,D)	CKSSYB104K10
C 450	(A,145,80)	CKSSYB104K10
C 451	(A,135,79)	CKSSYB102K50
C 452	(A,144,80) 1 uF	DCH1246
C 453	(A,144,78) 2.2 uF(B)	CCG1205
C 454	(A,138,79)	CKSSYB104K10
C 456	(A,152,113)	CCSSCJ3R0C50

Circuit Symbol and No.		Part No.
C 459	(A,128,84) (A)	CCSSCH100D50
C 466	(B,139,92)	CCSRCH101J50
C 467	(A,148,110) (A)	CCSSCK2R0C50
C 601	(A,92,68)	CCSSCH100D50
C 602	(A,92,64)	CCSSCH120J50
C 604	(A,92,70)	CKSSYB104K10
C 605	(B,99,65)	CKSRYB105K10
C 608	(B,113,64)	CKSRYB105K10
C 610	(A,103,50)	CKSRYB104K50
C 612	(B,120,47)	CKSRYB105K10
C 615	(B,97,65) 10 uF	DCH1201
C 616	(A,103,82) (A)	CKSSYB104K10
C 617	(A,96,80) (A)	CKSSYB104K10
C 651	(B,68,58)	CKSRYB104K16
C 652	(B,76,61)	CKSRYB104K16
C 653	(B,85,56)	CKSRYB104K16
C 654	(B,61,58)	CKSRYB104K16
C 655	(B,67,62)	CKSRYB104K16
C 656	(B,72,62)	CKSRYB104K16
C 657	(B,78,57)	CKSRYB104K16
C 658	(A,56,65) (B,C,D)	CCSSCH100D50
C 659	(B,81,63)	CKSRYB104K16
C 660	(B,85,60)	CCSRCK2R0C50
C 661	(B,59,62)	CKSRYB104K16
C 662	(A,86,64)	CCSSCH120J50
C 663	(B,81,67)	CKSRYB104K16
C 664	(A,57,65) (B,C,D)	CCSSCH100D50
C 665	(B,59,66)	CKSRYB104K16
C 666	(B,81,65)	CKSRYB104K16
C 667	(A,57,70) (B,C,D)	CCSSCH100D50
C 668	(B,59,69)	CKSRYB104K16
C 669	(A,86,69)	CCSSCH120J50
C 670	(B,81,70)	CKSRYB104K16
C 671	(B,60,72)	CKSRYB104K16
C 672	(B,81,76)	CKSRYB104K16
C 673	(B,81,78)	CKSRYB104K16
C 674	(B,65,80)	CKSRYB104K16
C 675	(B,71,75)	CKSRYB104K16
C 676	(B,76,79)	CKSRYB104K16
C 677	(B,63,80)	CKSRYB104K16
C 678	(B,69,79)	CKSRYB104K16
C 682	(A,37,86) 4.7 uF	CCG1212
C 683	(B,49,52)	CKSRYB224K16
C 685	(A,74,83)	CCSSCH120J50
C 686	(A,79,84)	CCSSCH120J50
C 688	(B,44,52) 4.7 uF	CCG1212
C 696	(A,64,81)	CCSSCH220J50
C 701	(B,53,71)	CKSRYB104K16
C 702	(B,51,71)	CKSRYB104K16
C 703	(B,47,71)	CKSRYB104K16
C 704	(B,43,71)	CKSRYB104K16
C 705	(B,34,73)	CKSRYB104K16
C 706	(B,49,65)	CKSRYB104K16
C 707	(B,44,65)	CKSRYB104K16
C 708	(B,31,82) 2.2 uF	CCG1205
C 711	(B,51,37)	CKSRYB104K16
C 712	(B,54,47)	CKSRYB104K16
C 721	(A,35,87) 10 uF	CCG1192
C 722	(A,32,87) 10 uF	CCG1192
C 731	(B,75,92)	CKSRYB104K16

Circuit Symbol and No.		Part No.
C 741	(A,77,51) (A,B)	CKSSYB104K10
C 752	(A,120,34)	CCSSCH220J50
C 753	(A,121,41)	CCSSCH100D50
C 754	(A,116,34)	CCSSCH220J50
C 755	(B,106,37)	CKSRYB103K50
C 758	(A,93,38)	CKSSYB102K50
C 760	(A,112,41)	CKSSYB221K50
C 770	(B,123,42)	CKSRYB104K16
C 771	(B,151,41) 10 uF	DCH1201
C 773	(A,155,47)	CKSSYB473K16
C 803	(A,103,21)	CKSRYB104K16
C 805	(B,100,14)	CKSRYB104K16
C 806	(B,104,22)	CKSRYB104K16
C 807	(B,98,11)	CKSRYB104K16
C 809	(B,117,48)	CKSRYB104K16
C 810	(B,82,36)	CKSRYB104K16
C 811	(B,100,19)	CKSRYB105K16
C 812	(A,95,20)	CKSRYB104K16
C 831	(B,112,27)	CKSQYB105K16
C 841	(A,103,29)	CKSRYB104K16
C 851	(A,67,37) (B,C,D)	CKSRYB105K10
C 881	(A,57,90)	CKSSYB104K10
C 882	(A,56,90)	CKSSYB104K10
C 891	(A,37,92)	CKSRYB104K16
C 892	(A,50,92)	CKSRYB104K16
C 901	(A,15,79)	CKSSYB102K50
C 902	(A,16,79)	CKSRYB105K16
C 903	(A,22,74)	CEVQW221M6R3
C 904	(A,7,65)	CKSSYB102K50
C 905	(A,8,63)	CKSSYB682K25
C 906	(A,18,64)	CKSSYB103K16
C 908	(A,18,66)	CKSRYB105K16
C 909	(A,11,55)	XCEAT102M16
C 910	(A,20,67) 10 uF	CCG1236
C 911	(A,18,79) 10 uF	CCG1192
C 921	(B,17,55)	CKSRYB104K16
C 922	(B,21,53)	CKSRYB103K50
C 931	(A,29,63) 10 uF	CCG1192
C 932	(A,31,55) 10 uF	CCG1192
C 941	(B,136,40)	CKSRYB104K16
C 942	(A,135,49) Capacitor	CEVW221M10
C 943	(A,143,42)	CKSQYB105K16
C 961	(B,104,128)	CKSRYB105K10
C 991	(B,116,140)	CKSRYB104K16

B

Unit Number :
Unit Name : Keyboard Unit

MISCELLANEOUS

IC 1621	(A,132,14) IC	BH2228FV
IC 1701	(B,85,21) IC	PEQ271A8
IC 1702	(A,103,22) Flash ROM Unit(A,C)	PEH426A8
	(A,103,22) Flash ROM Unit(B,D)	PEH428A8
IC 1731	(A,74,10) IR RC REC Module	PNJ4833M
Q 1631	(B,57,18) Chip Transistor	HN1C01FU
Q 1632	(B,60,10) Chip Transistor	HN1C01FU
Q 1633	(A,138,20) Chip Transistor	HN1C01FU
Q 1634	(B,17,13) Chip Transistor	HN1C01FU

Circuit Symbol and No.		Part No.
Q 1635	(B,17,26) Chip Transistor	HN1C01FU
Q 1636	(B,53,14) Transistor	LSCR523UB
Q 1637	(B,139,21) Transistor	LSCR523UB
Q 1638	(B,139,26) Transistor	LSCR523UB
Q 1639	(B,53,11) Transistor	LSCR523UB
Q 1640	(B,144,20) Transistor	LSCR523UB
D 1631	(A,12,34) LED	SMLVN6RGB2UK(B)
D 1632	(A,11,14) LED	SMLVN6RGB2UK(B)
D 1633	(A,53,19) LED	SMLVN6RGB2UK(B)
D 1634	(A,160,26) LED	SMLVN6RGB2UK(B)
D 1635	(A,150,14) LED	SMLVN6RGB2UK(B)
D 1701	(B,66,19) Diode	DA2J101
L 1781	(B,151,17) Inductor	CTF1389
L 1782	(B,152,20) Inductor	CTF1389
X 1701	(B,73,20) Ceramic Resonator 16.000 MHz	CSS1616
S 1611	(A,40,18) Encoder(MULTI-CONTROL)	CSD1168
S 1731	(A,161,41) Push Switch	CSG1155
S 1732	(A,8,31) Push Switch	CSG1155
S 1733	(A,23,33) Push Switch	CSG1155
S 1735	(A,5,18) Push Switch	CSG1155
S 1737	(A,66,7) Push Switch	CSG1155
S 1738	(A,6,8) Push Switch	CSG1155
S 1739	(A,6,40) Push Switch	CSG1155
S 1740	(A,25,14) Spring Switch	CSN1080
S 1741	(A,25,23) Spring Switch	CSN1081
S 1742	(A,66,30) Push Switch	CSG1155
S 1743	(A,74,19) Push Switch	CSG1155
CN1601	(B,109,9) Connector	CKS6451
CN1751	(B,114,29) Connector	CKS6597
JA1781	(A,160,16) Jack	YKN5006

RESISTORS

R 1601	(B,92,7)	RS1/10SR222J
R 1602	(B,92,8)	RS1/10SR222J
R 1611	(B,58,22)	RS1/16SS103J
R 1621	(A,127,17)	RS1/10SR272J
R 1622	(A,127,15)	RS1/10SR272J
R 1623	(A,127,14)	RS1/10SR272J
R 1631	(B,60,15)	RAB4CQ102J
R 1632	(A,136,10)	RAB4CQ102J
R 1633	(B,55,20)	RS1/16SS101J
R 1634	(B,55,19)	RS1/16SS101J
R 1635	(B,27,9)	RS1/16SS101J
R 1636	(B,57,14)	RS1/16SS101J
R 1637	(B,14,22)	RS1/16SS101J
R 1638	(B,14,23)	RS1/16SS101J
R 1639	(A,141,18)	RS1/16SS101J
R 1640	(A,140,20)	RS1/16SS101J
R 1641	(A,138,24)	RS1/16SS101J
R 1642	(B,13,11)	RS1/10SR201J
R 1643	(B,13,13)	RS1/10SR201J
R 1644	(B,13,27)	RS1/10SR201J
R 1645	(B,13,26)	RS1/10SR820J
R 1646	(B,53,18)	RS1/10SR820J
R 1647	(B,54,18)	RS1/10SR820J
R 1648	(B,136,24)	RS1/10SR101J
R 1649	(B,136,22)	RS1/10SR101J
R 1650	(B,135,27)	RS1/10SR101J
R 1701	(B,73,17)	RS1/16SS154J
R 1702	(B,68,21)	RS1/16SS102J
R 1703	(B,68,20)	RS1/16SS154J
R 1704	(A,85,19)	RS1/16SS473J
R 1705	(B,70,23)	RS1/16SS103J
R 1706	(B,68,26)	RAB4CQ102J
R 1707	(A,76,21)	RS1/16SS103J
R 1708	(A,75,24)	RAB4CQ103J
R 1709	(A,68,24)	RS1/16SS103J
R 1710	(A,85,21)	RAB4CQ473J
R 1711	(B,85,31)	RS1/16SS473J
R 1712	(B,87,31)	RS1/16SS473J
R 1713	(A,123,27)	RS1/16SS101J
R 1714	(A,87,27)	RS1/16SS101J
R 1715	(B,96,28)	RAB4CQ101J
R 1716	(A,86,15)	RS1/16SS101J
R 1717	(A,111,13)	RAB4CQ101J
R 1718	(A,108,14)	RAB4CQ101J
R 1719	(B,95,20)	RAB4CQ101J
R 1720	(B,96,17)	RAB4CQ101J
R 1721	(A,89,15)	RAB4CQ101J
R 1722	(A,97,14)	RAB4CQ101J
R 1723	(A,90,21)	RAB4CQ101J
R 1724	(A,89,26)	RAB4CQ101J
R 1725	(B,80,10)	RAB4CQ102J
R 1731	(A,72,10)	RS1/16SS470J
R 1753	(B,123,23)	RAB4CQ473J
R 1755	(A,116,28)	RAB4CQ101J
R 1756	(B,124,25)	RS1/16SS154J
R 1783	(B,151,13)	RS1/10SR0R0J

CAPACITORS

C 1621	(A,129,19)	CKSSYB103K16
C 1622	(A,129,20)	CKSRYB105K10
C 1701	(B,102,17) 10 uF	CCG1192
C 1703	(B,70,21)	CKSSYB104K10
C 1704	(A,79,18)	CKSSYB103K16
C 1705	(B,95,22)	CKSSYB103K16
C 1706	(A,90,23)	CKSSYB103K16
C 1731	(A,75,10) 10 uF	CCG1192
C 1751	(B,108,23)	CKSQYB334K50
C 1752	(B,111,20) 4.7 uF	CCG1212
C 1753	(B,111,22) 4.7 uF	CCG1212
C 1754	(B,114,20) 4.7 uF	CCG1212
C 1755	(B,114,22) 4.7 uF	CCG1212
C 1756	(B,116,18) 2.2 uF	CCG1205
C 1760	(B,126,28)	CKSSYB104K10
C 1781	(B,145,17)	CKSRYB472K50
C 1782	(B,141,17)	CKSRYB472K50
C 1783	(B,148,15)	CKSRYB471K50

C

Unit Number : CWX4023
Unit Name : CD Core Unit (S11.6STD)

MISCELLANEOUS

IC 201	(B,23,37) IC	PE5791A
IC 301	(A,37,11) IC	BD8223EFV
Q 101	(B,11,53) Transistor	2SA1577

Circuit Symbol and No.			Part No.
Q 102	(B,15,54)	Transistor	LTA123JUB
X 201	(B,25,49)	Ceramic Resonator 16.934 MHz	CSS1603
S 901	(A,42,53)	Spring Switch(HOME)	CSN1080
S 903	(B,21,12)	Spring Switch(DSCSNS)	CSN1081
CN101	(A,16,58)	Connector	CKS4808
CN701	(A,25,29)	Connector	CKS6146

RESISTORS

R 101	(B,6,57)	RS1/10SR2R4J
R 102	(B,8,57)	RS1/10SR2R4J
R 103	(B,9,57)	RS1/10SR2R7J
R 108	(B,18,55)	RS1/16SS105J
R 109	(B,12,50)	RS1/16SS222J
R 214	(B,18,28)	RS1/16SS103J
R 215	(B,17,28)	RS1/16SS393J
R 216	(B,12,35)	RS1/16SS122J
R 217	(B,10,32)	RS1/16SS562J
R 218	(B,10,35)	RS1/16SS472J
R 229	(B,12,34)	RS1/16SS471J
R 232	(A,31,54)	RS1/16SS0R0J
R 237	(B,33,45)	RS1/16SS221J
R 240	(B,34,40)	RS1/16SS473J
R 245	(A,34,46)	RS1/16SS104J
R 254	(A,37,56)	RS1/16SS104J
R 260	(B,30,27)	RS1/16SS103J
R 264	(A,22,9)	RS1/16SS102J
R 281	(B,33,38)	RS1/16SS560J
R 282	(B,33,39)	RS1/16SS560J
R 291	(B,33,34)	RS1/16SS560J
R 294	(B,27,48)	RS1/16SS471J
R 303	(A,27,11)	RS1/16SS123J
R 304	(A,28,11)	RS1/16SS123J
R 305	(A,26,9)	RS1/16SS102J
R 306	(A,26,11)	RS1/16SS472J
R 307	(A,25,9)	RS1/16SS102J
R 308	(A,25,11)	RS1/16SS472J
R 309	(A,35,6)	RS1/16SS473J
R 310	(B,30,9)	RS1/16SS472J
R 311	(B,30,10)	RS1/16SS472J
R 312	(B,30,11)	RS1/16SS472J
R 313	(B,30,12)	RS1/16SS472J
R 701	(A,21,38)	RS1/16SS101J
R 702	(A,23,38)	RS1/16SS101J
R 706	(A,32,42)	RS1/16SS221J

CAPACITORS

C 104	(B,12,57)	CKSQYB475K6R3
C 203	(B,22,47)	CKSSYB104K10
C 209	(B,28,47)	CKSRYB104K16
C 210	(B,33,43)	CKSSYB104K10
C 211	(B,33,41)	CKSSYB104K10
C 212	(B,22,28)	CKSSYB104K10
C 213	(B,18,26)	CKSSYB332K50
C 214	(B,17,26)	CKSSYB473K16
C 215	(B,19,28)	CKSSYB104K10
C 216	(B,12,33)	CKSSYB182K50
C 217	(B,10,34)	CCSSCH560J50
C 218	(B,10,36)	CCSSCH4R0C50
C 219	(B,14,34)	CKSSYB104K10
C 220	(A,18,38)	CKSSYB104K10
C 221	(B,14,32)	CKSSYB104K10
C 222	(B,13,37)	CKSSYB104K10
C 223	(B,12,42)	CCSSCH680J50
C 224	(B,13,45)	CCSSCH470J50
C 225	(B,13,46)	CKSSYB103K16
C 228	(B,10,33)	CCSSCH270J50
C 229	(B,9,40)	CKSSYB104K10
C 233	(B,32,46)	CKSSYB103K16
C 236	(B,8,40)	CKSSYB104K10
C 238	(A,25,44)	CKSRYB104K16
C 299	(A,26,41)	CKSSYB104K10
C 302	(B,28,12)	CKSSYB102K50
C 303	(B,29,12)	CKSSYB102K50
C 304	(B,27,12)	CKSSYB223K16
C 305	(B,26,12)	CKSSYB104K10
C 306	(A,31,7)	CKSSYB104K10
C 307	(A,41,19)	CKSRYB105K10
C 308	(A,31,15)	CKSRYB105K10
C 710	(A,34,42)	CKSSYB102K50