A : N09-6108-15
B : N09-6426-15
C : N09-6735-05
D : N09-6737-15
E : N09-6738-15
F : N19-2335-14
G : N35-2003-48
H : N39-1720-48

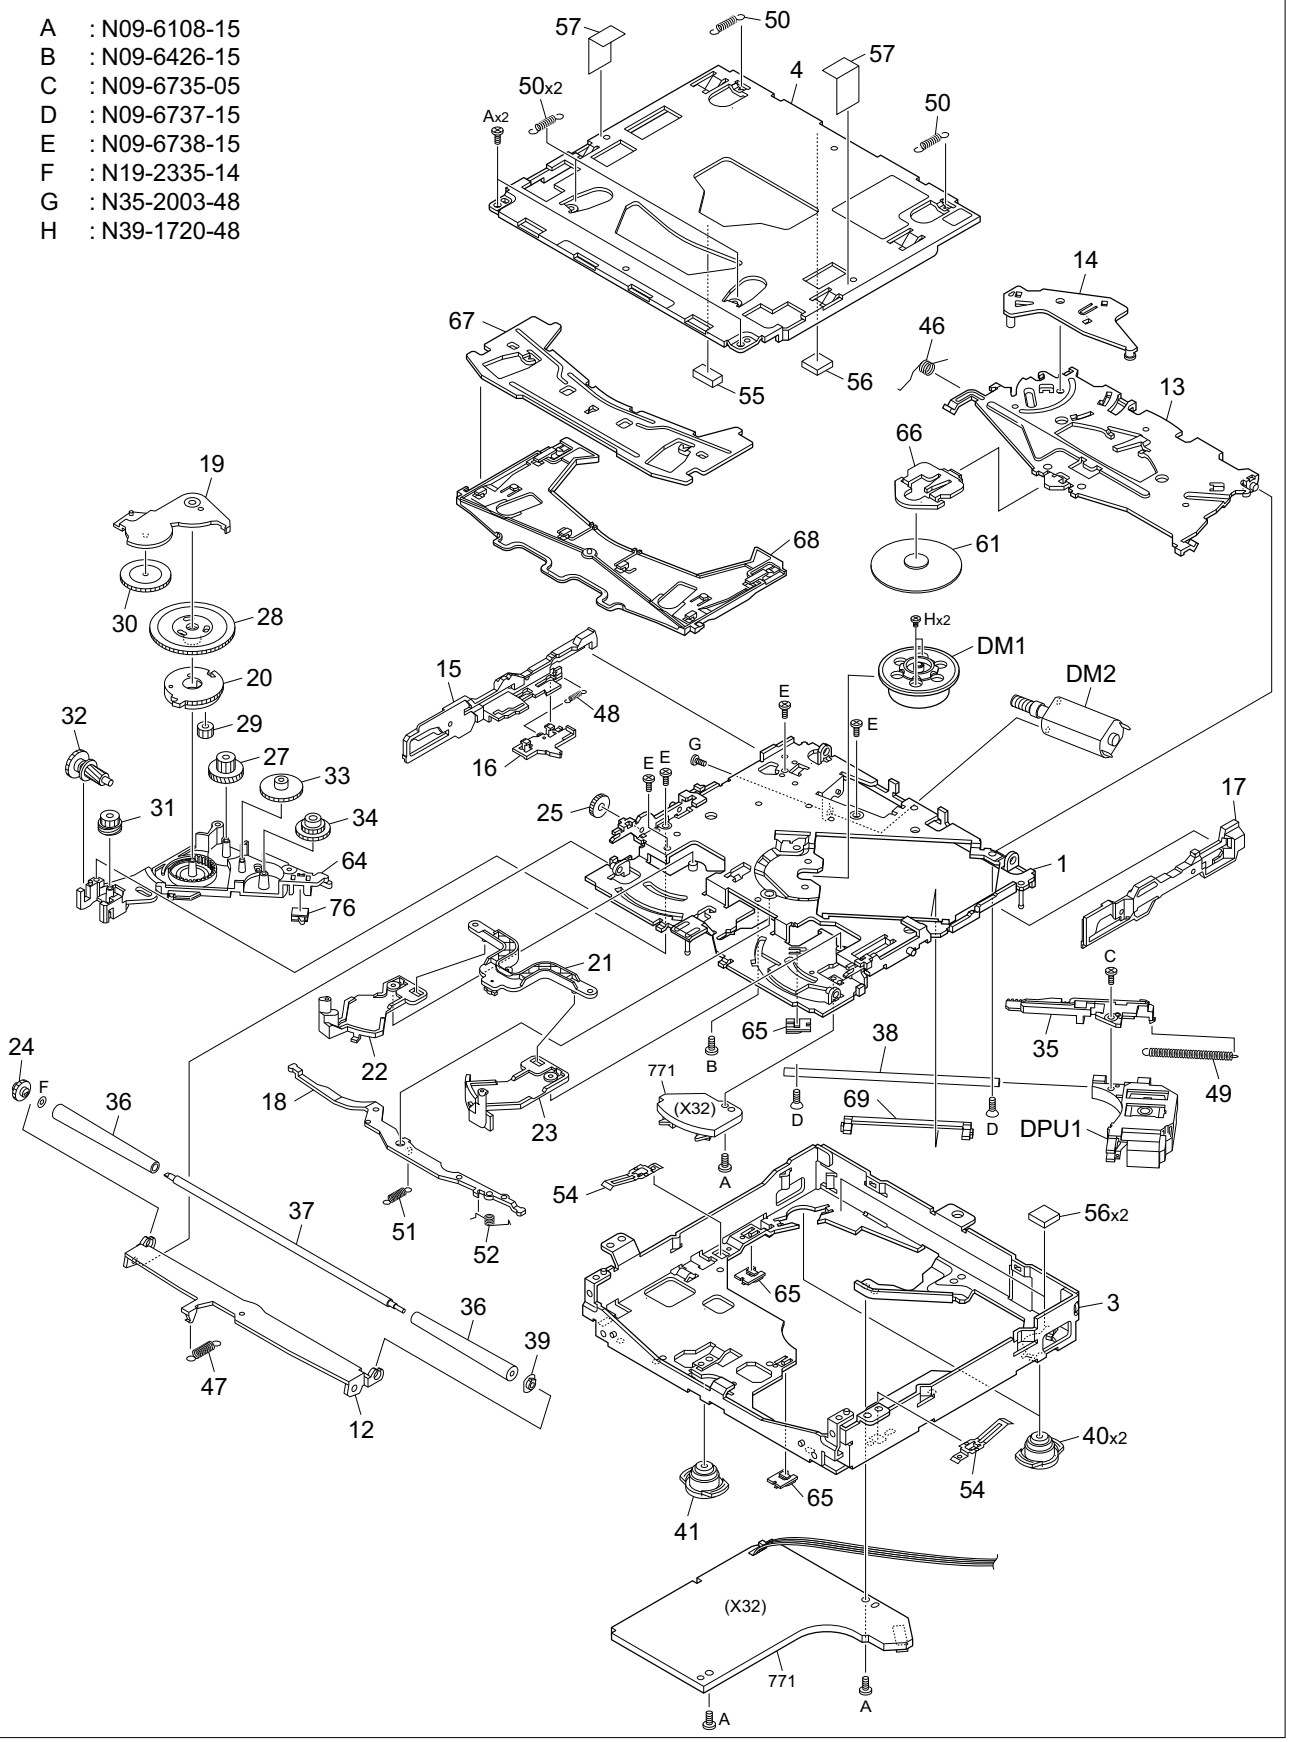

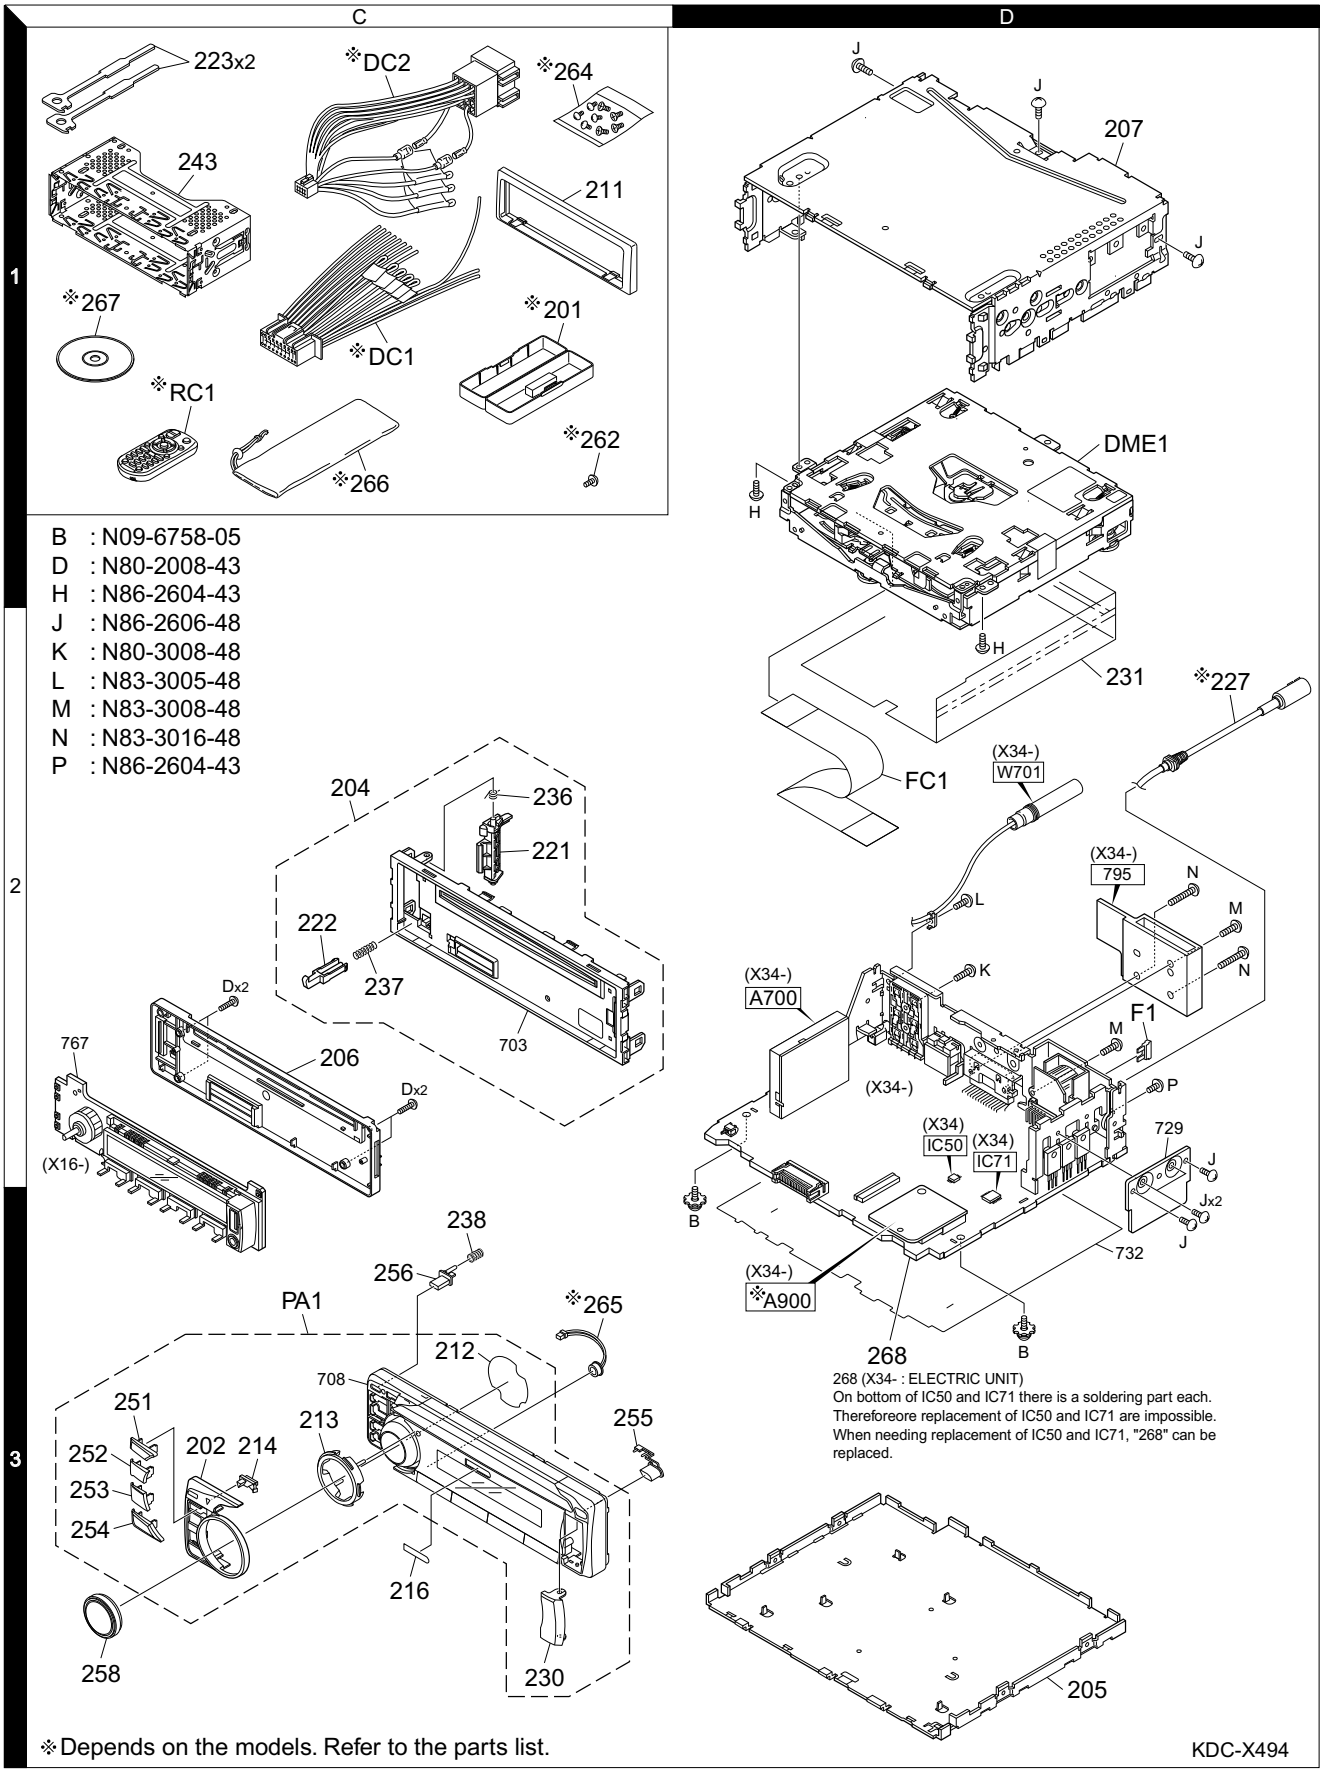

B : N09-6758-05
D : N80-2008-43
H : N86-2604-43
J : N86-2606-48
K : N80-3008-48
L : N83-3005-48
M : N83-3008-48
N : N83-3016-48
P : N86-2604-43

268 (X34- : ELECTRIC UNIT)
On bottom of IC50 and IC71 there is a soldering part each.
Thereforeore replacement of IC50 and IC71 are impossible.
When needing replacement of IC50 and IC71, "268" can be replaced.

※Depends on the models. Refer to the parts list.

KDC-X494

Parts with the exploded numbers larger than 700 are not supplied.

PARTS LIST

* New parts
Parts without **Parts No**. are not supplied.
Les articles non mentionnes dans le **Parts No**. ne sont pas fournis.
Teile ohne **Parts No**. werden nicht geliefert.

Ref.No.	Add	New	Parts No.	Description	Destination
KDC-5047U/BT50U/MP445U/U6046/KDC-U7046BT/X494 KMR-440U					
201	1C		A02-2757-13	PLASTIC CABINET ASSY	M1M2M3
201	1C		A02-2757-13	PLASTIC CABINET ASSY	M4
202	3C	*	A21-6760-02	DRESSING PANEL	KM3M4
202	3C	*	A21-6761-02	DRESSING PANEL	K1E1M1
202	3C	*	A21-6761-02	DRESSING PANEL	M2E2
202	3C	*	A21-6762-02	DRESSING PANEL	K2E3
204	2C	*	A22-3264-13	SUB PANEL ASSY	
205	3D	*	A40-1388-02	BOTTOM PLATE	
206	2C	*	A46-1904-01	REAR COVER	
207	1D	*	A52-1109-11	TOP COVER	
PA1	3C	*	A64-5025-02	PANEL ASSY	K
PA1	3C	*	A64-5026-02	PANEL ASSY	K1
PA1	3C	*	A64-5027-02	PANEL ASSY	E1
PA1	3C	*	A64-5028-02	PANEL ASSY	M1M2
PA1	3C	*	A64-5031-02	PANEL ASSY	E2
PA1	3C	*	A64-5032-02	PANEL ASSY	M3M4
PA1	3C	*	A64-5056-02	PANEL ASSY	K2
PA1	3C	*	A64-5057-02	PANEL ASSY	E3
RC1	1C		A70-2104-05	REMOTE CONTROLLER ASSY (RC-40	KK1M1
RC1	1C		A70-2104-05	REMOTE CONTROLLER ASSY (RC-40	M2M3M4
-		*	B59-2005-00	SUB-INST. MANUAL (ENG.FRE.SPA.)	KK1K2
-		*	B59-2006-00	SUB-INST. MANUAL (ENG.FRE.)	E1E2E3
-		*	B59-2006-00	SUB-INST. MANUAL (GER.DUT.)	E1E2E3
-		*	B59-2007-00	SUB-INST. MANUAL (ITA.SPA.POR.)	E1E2E3
-		*	B59-2007-00	SUB-INST. MANUAL (RUS.UKR.)	E1E2E3
-		*	B59-2008-00	SUB-INST. MANUAL (ENGLISH)	M1M2M3
-		*	B59-2008-00	SUB-INST. MANUAL (S-CHI.ARA.)	M4
-		*	B64-4640-00	INST. MANUAL (ENGLISH)	M1M2M3
-		*	B64-4640-00	INST. MANUAL (ENGLISH)	M4
-		*	B64-4641-00	INST. MANUAL (S-CHINESE)	M1M3
-		*	B64-4642-00	INST. MANUAL (ARABIC)	M2M4
211	1C		B07-3244-01	ESCUTCHEON	K1
211	1C		B07-3245-01	ESCUTCHEON	KE1M1
211	1C		B07-3245-01	ESCUTCHEON	M2E2M3
211	1C		B07-3245-01	ESCUTCHEON	M4
211	1C		B07-3247-01	ESCUTCHEON	K2E3
212	3C	*	B11-2045-04	OPTICAL DIFFUSER	
213	3C	*	B19-2558-03	LIGHTING BOARD (VOL)	
214	3C	*	B19-2560-03	LIGHTING BOARD (TRIANGLE)	
216	3C	*	B43-1545-14	BADGE	
221	2C		D10-7099-03	LEVER	
222	2C		D10-7098-03	LEVER	
223	1C		D10-7106-04	LEVER (ACCESSORY)	
227	2D	*	E30-6944-05	CORD WITH CONNECTOR (REMOTE)	K2E3
⚠ DC1	1C	*	E30-6939-05	DC CORD	KK1M1
⚠ DC1	1C	*	E30-6939-05	DC CORD	K2
⚠ DC1	1C	*	E30-6939-05	DC CORD	M2M3M4
⚠ DC2	1C	*	E30-6940-05	DC CORD	E1E2E3
FC1	2D		E39-1104-05	FLAT CABLE	
230	3C	*	F07-2220-03	COVER	
231	2D		F11-1874-03	SHIELDING COVER	
⚠ F1	2D		F52-0023-05	FUSE (MINI BLADE TYPE) (10A)	

Ref.No.	Add	New	Parts No.	Description	Destination
236	2C		G01-4750-04	TORSION COIL SPRING	
237	2C		G01-4749-04	COMPRESSION SPRING	
238	3C		G01-3244-04	COMPRESSION SPRING	
-		*	H54-4794-03	ITEM CARTON CASE	K
-		*	H54-4795-03	ITEM CARTON CASE	K1
-		*	H54-4796-03	ITEM CARTON CASE	E1
-		*	H54-4797-03	ITEM CARTON CASE	M1
-		*	H54-4798-03	ITEM CARTON CASE	M2
-		*	H54-4800-03	ITEM CARTON CASE	E2
-		*	H54-4801-03	ITEM CARTON CASE	M3
-		*	H54-4802-03	ITEM CARTON CASE	M4
-		*	H54-4803-03	ITEM CARTON CASE	K2
-		*	H54-4804-03	ITEM CARTON CASE	E3
243	1C	*	J22-0789-03	MOUNTING HARDWARE ASSY	
251	3C	*	K24-5045-03	PUSH KNOB (SRC)	
252	3C	*	K24-5046-03	PUSH KNOB (SEARCH)	
253	3C	*	K24-5047-03	PUSH KNOB (RETURN)	
254	3C	*	K24-5048-03	PUSH KNOB (FNC)	
255	3C	*	K24-5055-03	PUSH KNOB (EJECT)	
256	3C	*	K24-5056-04	PUSH KNOB (RELEASE)	
258	3C	*	K28-0398-04	KNOB ASSY (VOL)	
262	1C		N80-2006-48	PAN HEAD TAPTITE SCREW	KK1M1
262	1C		N80-2006-48	PAN HEAD TAPTITE SCREW	K2
262	1C		N80-2006-48	PAN HEAD TAPTITE SCREW	M2M3M
264	1C		N99-1757-15	SCREW SET	KK1M1
264	1C		N99-1757-15	SCREW SET	K2
264	1C		N99-1757-15	SCREW SET	M2M3M
B	3D		N09-6758-05	TAPTITE SCREW	
D	2C		N80-2008-43	PAN HEAD TAPTITE SCREW	
H	1D		N86-2604-43	BINDING HEAD TAPTITE SCREW	
J	1D		N86-2606-48	BINDING HEAD TAPTITE SCREW	
265	3C	*	T91-1007-05	MICROHONE ASSY	E2M3M
266	1C		W01-1664-05	CARRYING CASE (EXCELON)	K
266	1C		W01-1710-05	CARRYING CASE	K1E1E
266	1C		W01-1710-05	CARRYING CASE	K2E3
267	1C	*	W01-1777-05	COMPACT DISC (INST. MANUAL)	E2K2E
267	1C	*	W01-1777-05	COMPACT DISC (INST. MANUAL)	KK1E1
268	3D	*	X34-6650-10	ELECTRIC UNIT (For IC50,71)	K
268	3D	*	X34-6650-11	ELECTRIC UNIT (For IC50,71)	K1
268	3D	*	X34-6650-21	ELECTRIC UNIT (For IC50,71)	M1
268	3D	*	X34-6650-22	ELECTRIC UNIT (For IC50,71)	M2
268	3D	*	X34-6652-71	ELECTRIC UNIT (For IC50,71)	E1
268	3D	*	X34-6660-21	ELECTRIC UNIT (For IC50,71)	M3
268	3D	*	X34-6660-22	ELECTRIC UNIT (For IC50,71)	M4
268	3D	*	X34-6662-70	ELECTRIC UNIT (For IC50,71)	E2
268	3D	*	X34-6670-10	ELECTRIC UNIT (For IC50,71)	K2
268	3D	*	X34-6672-71	ELECTRIC UNIT (For IC50,71)	E3
DME1	1D		X92-6360-04	MECHANISM ASSY (DXM-9B34W)	
SWITCH UNIT (X16-68xx-xx)					
D11 ,12			B30-1779-05	LED (1608,SR)	E1E2
D12			B30-1779-05	LED (1608,SR)	KK1M1
D12			B30-1779-05	LED (1608,SR)	K2E3

K: KDC-X494 **K1**: KDC-MP445U **K2**: KMR-440U **M1**: KDC-U6046 **M2**: KDC-U6046L
M3: KDC-U7046BT **M4**: KDC-U7046BTL **E1**: KDC-5047U **E2**: KDC-BT50U **E3**: : KMR-440U

⚠ indicates safety critical components.

PARTS LIST

SWITCH UNIT (X16-68xx-xx)

Ref.No.	Add	New	Parts No.	Description	Destination
D12			B30-1779-05	LED (1608,SR)	M2M3M4
D100-108			B30-3208-05	LED (RGB,F9)	E1E2
D100-111			B30-3210-05	LED (1608,BLUE)	M3M4
D100-113			B30-3210-05	LED (1608,BLUE)	KK1M1
D100-113			B30-3210-05	LED (1608,BLUE)	M2K2E3
D112			B30-3221-05	LED (HI GREEN)	M3M4
D113			B30-1779-05	LED (1608,SR)	M3M4
C3			CK73GB1A105K	CHIP C 1.0UF K	KK1M1
C3			CK73GB1A105K	CHIP C 1.0UF K	M2M3M4
C3			CK73HB0J105K	CHIP C 1.0UF K	E1E2
C5 ,6			CK73GB1H103K	CHIP C 0.010UF K	KK1M1
C5 ,6			CK73GB1H103K	CHIP C 0.010UF K	K2E3
C5 ,6			CK73GB1H103K	CHIP C 0.010UF K	M2M3M4
C5 ,6			CK73HB1E103K	CHIP C 0.010UF K	E1E2
C7			CK73GB1H104K	CHIP C 0.10UF K	KK1M1
C7			CK73GB1H104K	CHIP C 0.10UF K	K2E3
C7			CK73GB1H104K	CHIP C 0.10UF K	M2M3M4
C7			CK73HB1A104K	CHIP C 0.10UF K	E1E2
C8			CK73GB1H103K	CHIP C 0.010UF K	KK1M1
C8			CK73GB1H103K	CHIP C 0.010UF K	K2E3
C8			CK73GB1H103K	CHIP C 0.010UF K	M2M3M4
C8			CK73HB1E103K	CHIP C 0.010UF K	E1E2
C10 ,11			CK73GB1H104K	CHIP C 0.10UF K	
C15			CK73FB0J226M	CHIP C 22UF M	
CN1			E41-1486-05	PIN ASSY	E2M3M4
J1			E59-0855-05	RECTANGULAR PLUG	
J2			E58-1129-05	RECTANGULAR RECEPTACLE	
J4			E11-0669-05	3.5D PHONE JACK	
L1			L92-0616-05	CHIP FERRITE	
L2			L92-0386-05	CHIP FERRITE	
X1			L78-0872-05	RESONATOR (12MHZ)	
CP2		*	RK74HB1J561J	CHIP-COM 560 J 1/16W	
CP3			RK74HB1J223J	CHIP-COM 22K J 1/16W	
CP4			RK74HB1J102J	CHIP-COM 1.0K J 1/16W	
CP5			RK74HB1J223J	CHIP-COM 22K J 1/16W	
CP6			RK74HB1J102J	CHIP-COM 1.0K J 1/16W	
CP7			RK74HB1J223J	CHIP-COM 22K J 1/16W	
CP8			RK74HB1J102J	CHIP-COM 1.0K J 1/16W	
CP9			RK74HB1J101J	CHIP-COM 100 J 1/16W	KK1M1
CP9			RK74HB1J101J	CHIP-COM 100 J 1/16W	K2E3
CP9			RK74HB1J101J	CHIP-COM 100 J 1/16W	M2M3M4
CP9 -11			RK74HB1J101J	CHIP-COM 100 J 1/16W	E1E2
CP11			RK74HB1J101J	CHIP-COM 100 J 1/16W	KK1M1
CP11			RK74HB1J101J	CHIP-COM 100 J 1/16W	K2E3
CP11			RK74HB1J101J	CHIP-COM 100 J 1/16W	M2M3M4
CP12			RK74HB1J102J	CHIP-COM 1.0K J 1/16W	
CP13,14			RK74HB1J101J	CHIP-COM 100 J 1/16W	E1E2
R13			RK73GB2A101J	CHIP R 100 J 1/10W	KK1M1
R13			RK73GB2A101J	CHIP R 100 J 1/10W	K2E3
R13			RK73GB2A101J	CHIP R 100 J 1/10W	M2M3M4
R13			RK73HB1J101J	CHIP R 100 J 1/16W	E1E2
R14 ,15			RK73GB2A472J	CHIP R 4.7K J 1/10W	KK1M1
R14 ,15			RK73GB2A472J	CHIP R 4.7K J 1/10W	K2E3

Ref.No.	Add	New	Parts No.	Description	Destination
R14 ,15			RK73GB2A472J	CHIP R 4.7K J 1/10W	M2M3M
R14 ,15			RK73HB1J472J	CHIP R 4.7K J 1/16W	E1E2
R16			RK73GB2A101J	CHIP R 100 J 1/10W	KK1M1
R16			RK73GB2A101J	CHIP R 100 J 1/10W	K2E3
R16			RK73GB2A101J	CHIP R 100 J 1/10W	M2M3M
R16			RK73HB1J101J	CHIP R 100 J 1/16W	E1E2
R17			RK73GB2A303J	CHIP R 30K J 1/10W	M3
R17			RK73GB2A333J	CHIP R 33K J 1/10W	M4
R17			RK73GB2A393J	CHIP R 39K J 1/10W	M1
R17			RK73GB2A433J	CHIP R 43K J 1/10W	M2
R17			RK73GB2A513J	CHIP R 51K J 1/10W	K2E3
R17 -19			RK73GB2A473J	CHIP R 47K J 1/10W	KK1
R17 -19			RK73HB1J473J	CHIP R 47K J 1/16W	E1E2
R18 ,19			RK73GB2A473J	CHIP R 47K J 1/10W	M1M2M
R18 ,19			RK73GB2A473J	CHIP R 47K J 1/10W	M4K2E
R21			RK73GB2A561J	CHIP R 560 J 1/10W	KK1M1
R21			RK73GB2A561J	CHIP R 560 J 1/10W	K2E3
R21			RK73GB2A561J	CHIP R 560 J 1/10W	M2M3M
R21			RK73HB1J561J	CHIP R 560 J 1/16W	E1E2
R22			RK73HB1J101J	CHIP R 100 J 1/16W	E1E2
R22 -24			RK73GB2A101J	CHIP R 100 J 1/10W	KK1M1
R22 -24			RK73GB2A101J	CHIP R 100 J 1/10W	K2E3
R22 -24			RK73GB2A101J	CHIP R 100 J 1/10W	M2M3M
R23			RK73GB2A361J	CHIP R 360 J 1/10W	E1E2
R25			RK73GB2A473J	CHIP R 47K J 1/10W	KK1M1
R25			RK73GB2A473J	CHIP R 47K J 1/10W	K2E3
R25			RK73GB2A473J	CHIP R 47K J 1/10W	M2M3M
R25			RK73HB1J473J	CHIP R 47K J 1/16W	E1E2
R26			RK73GB2A102J	CHIP R 1.0K J 1/10W	KK1M1
R26			RK73GB2A102J	CHIP R 1.0K J 1/10W	K2E3
R26			RK73GB2A102J	CHIP R 1.0K J 1/10W	M2M3M
R26			RK73HB1J102J	CHIP R 1.0K J 1/16W	E1E2
R27			RK73GB2A104J	CHIP R 100K J 1/10W	KK1M1
R27			RK73GB2A104J	CHIP R 100K J 1/10W	K2E3
R27			RK73GB2A104J	CHIP R 100K J 1/10W	M2M3M
R27			RK73HB1J104J	CHIP R 100K J 1/16W	E1E2
R28 ,29			RK73GB2A223J	CHIP R 22K J 1/10W	KK1M1
R28 ,29			RK73GB2A223J	CHIP R 22K J 1/10W	K2E3
R28 ,29			RK73GB2A223J	CHIP R 22K J 1/10W	M2M3M
R28 ,29			RK73HB1J223J	CHIP R 22K J 1/16W	E1E2
R30			RK73GB2A102J	CHIP R 1.0K J 1/10W	KK1M1
R30			RK73GB2A102J	CHIP R 1.0K J 1/10W	K2E3
R30			RK73GB2A102J	CHIP R 1.0K J 1/10W	M2M3M
R30			RK73HB1J102J	CHIP R 1.0K J 1/16W	E1E2
R32			RK73GB2A103J	CHIP R 10K J 1/10W	KK1M1
R32			RK73GB2A103J	CHIP R 10K J 1/10W	K2E3
R32			RK73GB2A103J	CHIP R 10K J 1/10W	M2M3M
R32			RK73HB1J103J	CHIP R 10K J 1/16W	E1E2
R33			RK73GB2A101J	CHIP R 100 J 1/10W	KK1M1
R33			RK73GB2A101J	CHIP R 100 J 1/10W	K2E3
R33			RK73GB2A101J	CHIP R 100 J 1/10W	M2M3M
R33			RK73HB1J101J	CHIP R 100 J 1/16W	E1E2
R34			RK73GB2A223J	CHIP R 22K J 1/10W	KK1M1
R34			RK73GB2A223J	CHIP R 22K J 1/10W	K2E3
R34			RK73GB2A223J	CHIP R 22K J 1/10W	M2M3M

K: KDC-X494 **K1**: KDC-MP445U **K2**: KMR-440U **M1**: KDC-U6046 **M2**: KDC-U6046L
M3: KDC-U7046BT **M4**: KDC-U7046BTL **E1**: KDC-5047U **E2**: KDC-BT50U **E3**: : KMR-440U

⚠ indicates safety critical components.

PARTS LIST

SWITCH UNIT (X16-68xx-xx)

Ref.No.	Add	New	Parts No.	Description	Destination
R34			RK73HB1J223J	CHIP R 22K J 1/16W	E1E2
R35			RK73GB2A102J	CHIP R 1.0K J 1/10W	KK1M1
R35			RK73GB2A102J	CHIP R 1.0K J 1/10W	K2E3
R35			RK73GB2A102J	CHIP R 1.0K J 1/10W	M2M3M4
R35			RK73HB1J102J	CHIP R 1.0K J 1/16W	E1E2
R36			RK73GB2A101J	CHIP R 100 J 1/10W	KK1M1
R36			RK73GB2A101J	CHIP R 100 J 1/10W	M2M3M4
R36			RK73HB1J101J	CHIP R 100 J 1/16W	E1E2
R37			RK73HB1J100J	CHIP R 10 J 1/16W	E1E2
R37 ,38			RK73GB2A100J	CHIP R 10 J 1/10W	KK1M1
R37 ,38			RK73GB2A100J	CHIP R 10 J 1/10W	K2E3
R37 ,38			RK73GB2A100J	CHIP R 10 J 1/10W	M2M3M4
R38			RK73GB2A100J	CHIP R 10 J 1/10W	E1E2
R39			RK73GB2A301J	CHIP R 300 J 1/10W	KK1M1
R39			RK73GB2A301J	CHIP R 300 J 1/10W	K2E3
R39			RK73GB2A301J	CHIP R 300 J 1/10W	M2M3M4
R39			RK73GB2A361J	CHIP R 360 J 1/10W	E1E2
R40			RK73GH2A201D	CHIP R 200 D 1/10W	KK1M1
R40			RK73GH2A201D	CHIP R 200 D 1/10W	K2E3
R40			RK73GH2A201D	CHIP R 200 D 1/10W	M2M3M4
R40			RK73HH1J201D	CHIP R 200 D 1/16W	E1E2
R41			RK73GH2A471D	CHIP R 470 D 1/10W	KK1M1
R41			RK73GH2A471D	CHIP R 470 D 1/10W	K2E3
R41			RK73GH2A471D	CHIP R 470 D 1/10W	M2M3M4
R41			RK73HH1J471D	CHIP R 470 D 1/16W	E1E2
R44 ,45			RK73GB2A330J	CHIP R 33 J 1/10W	KK1M1
R44 ,45			RK73GB2A330J	CHIP R 33 J 1/10W	K2E3
R44 ,45			RK73GB2A330J	CHIP R 33 J 1/10W	M2M3M4
R46			RK73GB2A104J	CHIP R 100K J 1/10W	KK1M1
R46			RK73GB2A104J	CHIP R 100K J 1/10W	K2E3
R46			RK73GB2A104J	CHIP R 100K J 1/10W	M2M3M4
R46			RK73HB1J104J	CHIP R 100K J 1/16W	E1E2
R50			RK73GB2A101J	CHIP R 100 J 1/10W	KK1M1
R50			RK73GB2A101J	CHIP R 100 J 1/10W	K2E3
R50			RK73GB2A101J	CHIP R 100 J 1/10W	M2M3M4
R50			RK73HB1J101J	CHIP R 100 J 1/16W	E1E2
R51			RK73GB2A103J	CHIP R 10K J 1/10W	KK1M1
R51			RK73GB2A103J	CHIP R 10K J 1/10W	K2E3
R51			RK73GB2A103J	CHIP R 10K J 1/10W	M2M3M4
R51			RK73HB1J103J	CHIP R 10K J 1/16W	E1E2
R100			RK73GB2A111J	CHIP R 110 J 1/10W	E1E2
R100-111			RK73GB2A561J	CHIP R 560 J 1/10W	M3M4
R100-113			RK73GB2A561J	CHIP R 560 J 1/10W	KK1M1
R100-113			RK73GB2A561J	CHIP R 560 J 1/10W	M2K2E3
R101			RK73FB2B181J	CHIP R 180 J 1/8W	E1E2
R102,103			RK73GB2A111J	CHIP R 110 J 1/10W	E1E2
R104			RK73FB2B181J	CHIP R 180 J 1/8W	E1E2
R105,106			RK73GB2A111J	CHIP R 110 J 1/10W	E1E2
R107			RK73FB2B181J	CHIP R 180 J 1/8W	E1E2
R108,109			RK73GB2A111J	CHIP R 110 J 1/10W	E1E2
R110			RK73FB2B181J	CHIP R 180 J 1/8W	E1E2
R111,112			RK73GB2A111J	CHIP R 110 J 1/10W	E1E2
R112			RK73GB2A331J	CHIP R 330 J 1/10W	M3M4
R113			RK73FB2B181J	CHIP R 180 J 1/8W	E1E2
R113			RK73GB2A361J	CHIP R 360 J 1/10W	M3M4
R114,115			RK73GB2A111J	CHIP R 110 J 1/10W	E1E2
R116			RK73FB2B181J	CHIP R 180 J 1/8W	E1
R117,118			RK73GB2A111J	CHIP R 110 J 1/10W	E1
R119			RK73FB2B181J	CHIP R 180 J 1/8W	E1E2
R120,121			RK73GB2A111J	CHIP R 110 J 1/10W	E1
R121			RK73GB2A111J	CHIP R 110 J 1/10W	E2
R122			RK73FB2B181J	CHIP R 180 J 1/8W	E1E2
R123,124			RK73GB2A111J	CHIP R 110 J 1/10W	E1E2
R125			RK73FB2B181J	CHIP R 180 J 1/8W	E1E2
R126			RK73GB2A111J	CHIP R 110 J 1/10W	E1E2
S1 -9		*	S70-0960-05	TACT SWITCH	
S10		*	S70-0961-05	TACT SWITCH	
D10			1SS355	DIODE	
D13			1SS355	DIODE	
ED1		*	GP1254AI	FLUORESCENT INDICATOR TUBE	
IC1		*	W05-1609-00	MICROCONTROLLER IC	E1E2E
IC1		*	W05-1609-00	MICROCONTROLLER IC	K2
IC1		*	W05-1610-00	MICROCONTROLLER IC	M1M3
IC1		*	W05-1611-00	MICROCONTROLLER IC	M2M4
IC1		*	W05-1612-00	MICROCONTROLLER IC	KK1
IC3			PIC95603	ANALOGUE IC	E1E2K
IC3			PIC95603	ANALOGUE IC	K1M1M
IC3			PIC95603	ANALOGUE IC	M3M4
Q1			RT1N144M-T111	TRANSISTOR	KK1M1
Q1			RT1N144M-T111	TRANSISTOR	K2E3
Q1			RT1N144M-T111	TRANSISTOR	M2M3M
Q1 ,2			RT1N144M-T111	TRANSISTOR	E1E2
Q3			2SB1188	TRANSISTOR	
Q100-102			RT1N237M-T111	TRANSISTOR	E1E2
Q100,101			RT1N436M-T111	TRANSISTOR	KK1M1
Q100,101			RT1N436M-T111	TRANSISTOR	K2E3
Q100,101			RT1N436M-T111	TRANSISTOR	M2M3M
Q102-105			RT1N144M-T111	TRANSISTOR	KK1M1
Q102-105			RT1N144M-T111	TRANSISTOR	K2E3
Q102-105			RT1N144M-T111	TRANSISTOR	M2M3M
Q103-109			RT1N436M-T111	TRANSISTOR	E2
Q103-114			RT1N436M-T111	TRANSISTOR	E1
Q106			RT1N436M-T111	TRANSISTOR	KK1M1
Q106			RT1N436M-T111	TRANSISTOR	K2E3
Q106			RT1N436M-T111	TRANSISTOR	M2M3M
Q113			RT1N436M-T111	TRANSISTOR	E2

CD PLAYER UNIT (X32-6260-01) IN CD MECHA

C1 ,2			CK73GB1A105K	CHIP C 1.0UF K	
C3			CK73GB1A474K	CHIP C 0.47UF K	
C4 -7			CK73GB1A105K	CHIP C 1.0UF K	
C9			CK73GB1C104K	CHIP C 0.10UF K	
C11			CK73GB1H153K	CHIP C 0.015UF K	
C12			CK73GB1H103K	CHIP C 0.010UF K	
C21			CK73GB1H103K	CHIP C 0.010UF K	
C22			CC73GCH1H220J	CHIP C 22PF J	
C23			CC73GCH1H180J	CHIP C 18PF J	
C24 ,25			CK73GB1H103K	CHIP C 0.010UF K	
C26			CK73FB0J106K	CHIP C 10UF K	
C27			CK73GB1A105K	CHIP C 1.0UF K	

K: KDC-X494 **K1**: KDC-MP445U **K2**: KMR-440U **M1**: KDC-U6046 **M2**: KDC-U6046L
M3: KDC-U7046BT **M4**: KDC-U7046BTL **E1**: KDC-5047U **E2**: KDC-BT50U **E3**: : KMR-440U

⚠ indicates safety critical components.

PARTS LIST

CD PLAYER UNIT (X32-6260-01) IN CD MECHA

Ref.No.	Add	New	Parts No.	Description	Destination
C28			CK73GB1H103K	CHIP C 0.010UF K	
C29			CK73FB0J106K	CHIP C 10UF K	
C30 -33			CK73GB1H103K	CHIP C 0.010UF K	
C34 ,35			CC73GCH1H150J	CHIP C 15PF J	
C36			CK73GB1H103K	CHIP C 0.010UF K	
C37			CK73GB1A105K	CHIP C 1.0UF K	
C38			CK73GB1H103K	CHIP C 0.010UF K	
C51			CK73GB1C104K	CHIP C 0.10UF K	
C52			CK73GB1H222K	CHIP C 2200PF K	
C53			CK73FB1C105K	CHIP C 1.0UF K	
C54			CK73GB1H103K	CHIP C 0.010UF K	
C55			CK73GB1H332K	CHIP C 3300PF K	
C56			CK73GB1C104K	CHIP C 0.10UF K	
C57			CK73GB1H153K	CHIP C 0.015UF K	
C58			CK73GB1C104K	CHIP C 0.10UF K	
C59			CC73GCH1H680J	CHIP C 68PF J	
C61			CK73GB1C104K	CHIP C 0.10UF K	
C62			CK73FB0J106K	CHIP C 10UF K	
C63			CK73GB1H333K	CHIP C 0.033UF K	
C64			CK73GB1H472K	CHIP C 4700PF K	
C65			CK73GB1C104K	CHIP C 0.10UF K	
C66			CK73GB1H153K	CHIP C 0.015UF K	
C67			CK73GB1H103K	CHIP C 0.010UF K	
C68			CK73GB1C104K	CHIP C 0.10UF K	
C69			CK73FB0J106K	CHIP C 10UF K	
C71			CK73FB0J106K	CHIP C 10UF K	
C73 ,74			CK73GB1H102K	CHIP C 1000PF K	
C75 -77			CK73GB1C104K	CHIP C 0.10UF K	
C78			CK73GB1A105K	CHIP C 1.0UF K	
C79 -81			CK73GB1C104K	CHIP C 0.10UF K	
C83			CC73GCH1H470J	CHIP C 47PF J	
C84			CK73GB1H153K	CHIP C 0.015UF K	
C85			CK73GB1A105K	CHIP C 1.0UF K	
C86			CK73GB1H103K	CHIP C 0.010UF K	
C92			CK73FB1A225K	CHIP C 2.2UF K	
C93			CC73GCH1H101J	CHIP C 100PF J	
C94			CC73GCH1H560J	CHIP C 56PF J	
C101,102			CK73GB1H103K	CHIP C 0.010UF K	
C113			CK73GB1C104K	CHIP C 0.10UF K	
CN1			E41-2954-05	FLAT CABLE CONNECTOR	
CN2			E41-2083-15	FLAT CABLE CONNECTOR	
X1			L77-2964-05	CRYSTAL RESONATOR (9.00MHZ)	
X2			L77-2921-15	CRYSTAL RESONATOR (32.768KHZ)	
X3			L78-1221-05	RESONATOR (16.93MHZ)	
CP10			RK74GA1J101J	CHIP-COM 100 J 1/16W	
CP11,12			RK74GB1J101J	CHIP-COM 100 J 1/16W	
CP15			RK74GB1J103J	CHIP-COM 10K J 1/16W	
CP22			RK74GB1J103J	CHIP-COM 10K J 1/16W	
R1 ,2			RK73EB2E4R7J	CHIP R 4.7 J 1/4W	
R3			RK73GB2A202J	CHIP R 2.0K J 1/10W	
R4			RK73GB2A103J	CHIP R 10K J 1/10W	
R10			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R19			RK73GB2A223J	CHIP R 22K J 1/10W	
R21			RK73GB2A102J	CHIP R 1.0K J 1/10W	

Ref.No.	Add	New	Parts No.	Description	Destination
R23			RK73GB2A223J	CHIP R 22K J 1/10W	
R24			RK73GB2A101J	CHIP R 100 J 1/10W	
R25			RK73GB2A104J	CHIP R 100K J 1/10W	
R26			RK73GB2A2R2J	CHIP R 2.2 J 1/10W	
R27			RK73GB2A101J	CHIP R 100 J 1/10W	
R28 ,29			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R30			RK73GB2A223J	CHIP R 22K J 1/10W	
R31			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R33			RK73GB2A223J	CHIP R 22K J 1/10W	
R36			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R38			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R41			RK73GB2A223J	CHIP R 22K J 1/10W	
R44			RK73GB2A223J	CHIP R 22K J 1/10W	
R45			RK73GB2A101J	CHIP R 100 J 1/10W	
R47			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R48			RK73GB2A105J	CHIP R 1.0M J 1/10W	
R49			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R50			RK73GB2A223J	CHIP R 22K J 1/10W	
R51			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R52			RK73GB2A100J	CHIP R 10 J 1/10W	
R53			RK73GB2A153J	CHIP R 15K J 1/10W	
R54			RK73GB2A100J	CHIP R 10 J 1/10W	
R55			RK73GB2A153J	CHIP R 15K J 1/10W	
R57			RK73GB2A223J	CHIP R 22K J 1/10W	
R58 ,59			RK73GB2A101J	CHIP R 100 J 1/10W	
R63			RK73GB2A223J	CHIP R 22K J 1/10W	
R65 ,66			RK73GB2A332J	CHIP R 3.3K J 1/10W	
R67 -69			RK73GB2A101J	CHIP R 100 J 1/10W	
R70			RK73GB2A223J	CHIP R 22K J 1/10W	
R81 ,82			RK73GB2A101J	CHIP R 100 J 1/10W	
R84			RK73GB2A101J	CHIP R 100 J 1/10W	
R86			RK73GB2A101J	CHIP R 100 J 1/10W	
R88			RK73GB2A101J	CHIP R 100 J 1/10W	
R90 -94			RK73GB2A101J	CHIP R 100 J 1/10W	
R95 -98			RK73GB2A223J	CHIP R 22K J 1/10W	
R101			RK73GB2A221J	CHIP R 220 J 1/10W	
R102			RK73GB2A4R7J	CHIP R 4.7 J 1/10W	
R103			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R104			RK73GB2A225J	CHIP R 2.2M J 1/10W	
R105			RK73GB2A104J	CHIP R 100K J 1/10W	
R106			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R107			RK73GB2A560J	CHIP R 56 J 1/10W	
R108			RK73GB2A333J	CHIP R 33K J 1/10W	
R109			RK73GB2A622J	CHIP R 6.2K J 1/10W	
R110			RK73GB2A913J	CHIP R 91K J 1/10W	
R112,113			RK73GB2A4R7J	CHIP R 4.7 J 1/10W	
R115			RK73GB2A105J	CHIP R 1.0M J 1/10W	
R116			RK73GB2A681J	CHIP R 680 J 1/10W	
R117-121			RK73GB2A103J	CHIP R 10K J 1/10W	
R123			RK73GB2A104J	CHIP R 100K J 1/10W	
R127			RK73GB2A153J	CHIP R 15K J 1/10W	
R128			RK73GB2A334J	CHIP R 330K J 1/10W	
R131			RK73GB2A204J	CHIP R 200K J 1/10W	
R132			RK73GB2A101J	CHIP R 100 J 1/10W	
R136			RK73GB2A363J	CHIP R 36K J 1/10W	

K: KDC-X494 **K1**: KDC-MP445U **K2**: KMR-440U **M1**: KDC-U6046 **M2**: KDC-U6046L
M3: KDC-U7046BT **M4**: KDC-U7046BTL **E1**: KDC-5047U **E2**: KDC-BT50U **E3**: : KMR-440U

⚠ indicates safety critical components.

PARTS LIST

CD PLAYER UNIT (X32-6260-01) IN CD MECHA

Ref.No.	Add	New	Parts No.	Description	Destination
R137			RK73GB2A223J	CHIP R 22K J 1/10W	
R139			RK73GB2A393J	CHIP R 39K J 1/10W	
R151			RK73GB2A333J	CHIP R 33K J 1/10W	
R152			RK73GB2A223J	CHIP R 22K J 1/10W	
R173-178			RK73GB2A2R2J	CHIP R 2.2 J 1/10W	
R180			RK73GB2A102J	CHIP R 1.0K J 1/10W	
S1 ,2			S68-0924-05	PUSH SWITCH	
D1			DAP202U	DIODE	
D2 ,3			DA204U	DIODE	
IC1			92CD28AFG7EG0	MICROCONTROLLER IC	
IC2			TC94A92FG-301	MOS-IC	
IC3			BD8222EFV	ANALOGUE IC	
IC4			MFI341S2162	MICROPROCESSOR IC	
IC5			74AHCT08PW	MOS-IC	
IC6			74LVC08APW	MOS-IC	
IC7			XC6415S001P1	MOS-IC	
IC9			XC6219B332MR	ANALOGUE IC	
Q3			RUE003N02	FET	
Q5			2SA1577	TRANSISTOR	
Q6			DTC114YUA	DIGITAL TRANSISTOR	
Q7			2SA1365-T1(E)	TRANSISTOR	
Q9			DTC144EUA	DIGITAL TRANSISTOR	
ELECTRIC UNIT (X34-66xx-xx)					
C2			CD04AZ1C332M2	ELECTRO 3300UF 16WV	
C20			CD04BF1C221M	ELECTRO 220UF 16WV	
C22			CK73GB1A105K	CHIP C 1.0UF K	
C30			CK73EB1C106K	CHIP C 10UF K	
C31			CK73FB0J106K	CHIP C 10UF K	
C32			CK73GB1H103K	CHIP C 0.010UF K	
C33			C90-6851-05	ELECTRO 220UF 25WV	
C40			CD04AJ1C101M	ELECTRO 100UF 16WV	
C41			CK73GB1A474K	CHIP C 0.47UF K	
C50			CK73GB0J106M	CHIP C 10UF M	
C51			CC73GCH1H220J	CHIP C 22PF J	
C52			CK73GB0J106M	CHIP C 10UF M	
C53			CK73GB1A474K	CHIP C 0.47UF K	
C54			CK73GB1H103K	CHIP C 0.010UF K	
C55			CK73EB1H475K	CHIP C 4.7UF K	
C56			CK73GB1C224K	CHIP C 0.22UF K	
C57			CC73GCH1H331J	CHIP C 330PF J	
C58			CK73GB1H104K	CHIP C 0.10UF K	
C59			CK73GB1H103K	CHIP C 0.010UF K	
C60			CD04BF1C221M	ELECTRO 220UF 16WV	
C61			CK73GB1C104K	CHIP C 0.10UF K	
C64			CK73GB1H104K	CHIP C 0.10UF K	
C71			C93-0059-05	CERAMIC 1UF K	
C72			CK73GB1H102K	CHIP C 1000PF K	
C73			CK73GB1H103K	CHIP C 0.010UF K	
C74 -76			CK73GB1H104K	CHIP C 0.10UF K	
C77			CK73FB1E475K	CHIP C 4.7UF K	
C78			CK73GB1H103K	CHIP C 0.010UF K	
C79			CK73GB1H104K	CHIP C 0.10UF K	
C80			CK73GB1H103K	CHIP C 0.010UF K	

Ref.No.	Add	New	Parts No.	Description	Destination
C81			CK73GB1H222K	CHIP C 2200PF K	
C82			CK73FB0J106K	CHIP C 10UF K	
C83			CK73GB1H104K	CHIP C 0.10UF K	
C84			CK73GB0J475K	CHIP C 4.7UF K	
C85			CK73GB1H103K	CHIP C 0.010UF K	
C86			CK73FB1E475K	CHIP C 4.7UF K	
C87 ,88			CK73GB1H103K	CHIP C 0.010UF K	
C89			CK73GB1C225K	CHIP C 2.2UF K	
C90			CD04BA1C100M	ELECTRO 10UF 16WV	K
C91 ,92			CK73GB1H102K	CHIP C 1000PF K	K
C93			CD04BA1C100M	ELECTRO 10UF 16WV	K
C94			CK73GB1H104K	CHIP C 0.10UF K	
C95			CC73GCH1H331J	CHIP C 330PF J	
C96			CK73GB1H104K	CHIP C 0.10UF K	
C97			CK73GB1H103K	CHIP C 0.010UF K	
C101,102			CK73GB1H103K	CHIP C 0.010UF K	
C120			CK73GB1H104K	CHIP C 0.10UF K	
C121			CK73GB1A105K	CHIP C 1.0UF K	
C122			CD04BA1H3R3M	ELECTRO 3.3UF 50WV	
C140			CK73GB1A105K	CHIP C 1.0UF K	
C141			CK73GB1H223K	CHIP C 0.022UF K	
C142			CK73GB1H103K	CHIP C 0.010UF K	
C150			CK73GB1H102K	CHIP C 1000PF K	K2E3
C151,152			CK73GB1H104K	CHIP C 0.10UF K	K2E3
C153			CK73GB1H103K	CHIP C 0.010UF K	K2E3
C154			CK73GB1C104K	CHIP C 0.10UF K	K2E3
C155			C93-0059-05	CERAMIC 1UF K	K2E3
C156			CK73GB1A105K	CHIP C 1.0UF K	K2E3
C170			CC73GCH1H150J	CHIP C 15PF J	
C200-203			CK73GB1H392K	CHIP C 3900PF K	
C204			CK73GB1A105K	CHIP C 1.0UF K	
C205			CD04BA1C100M	ELECTRO 10UF 16WV	
C207			CK73GB1H103K	CHIP C 0.010UF K	
C208			CC73GCH1H221J	CHIP C 220PF J	
C209			CK73GB1C224K	CHIP C 0.22UF K	
C210			CC73GCH1H221J	CHIP C 220PF J	
C211			CK73GB1C224K	CHIP C 0.22UF K	
C212			CC73GCH1H221J	CHIP C 220PF J	
C213			CK73GB1C224K	CHIP C 0.22UF K	
C214			CC73GCH1H221J	CHIP C 220PF J	
C215			CK73GB1C224K	CHIP C 0.22UF K	
C216			CK73GB1H103K	CHIP C 0.010UF K	
C217			CK73FB1C105K	CHIP C 1.0UF K	
C218-221			CK73GB1H392K	CHIP C 3900PF K	
C222			CK73GB1A105K	CHIP C 1.0UF K	
C300			CK73GB1A105K	CHIP C 1.0UF K	
C301			CK73GB1A474K	CHIP C 0.47UF K	
C302			CK73GB1A105K	CHIP C 1.0UF K	
C303			CK73GB1A474K	CHIP C 0.47UF K	
C304-306			CK73GB1A105K	CHIP C 1.0UF K	
C308			CK73GB1A105K	CHIP C 1.0UF K	
C309			CD04AS1H2R2M	ELECTRO 2.2UF 50WV	
C310			CK73GB1A105K	CHIP C 1.0UF K	
C312			CD04AS1H2R2M	ELECTRO 2.2UF 50WV	
C313,314			CC73GCH1H100D	CHIP C 10PF D	

K: KDC-X494 **K1**: KDC-MP445U **K2**: KMR-440U **M1**: KDC-U6046 **M2**: KDC-U6046L
M3: KDC-U7046BT **M4**: KDC-U7046BTL **E1**: KDC-5047U **E2**: KDC-BT50U **E3**: : KMR-440U

⚠ indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-66xx-xx)

Ref.No.	Add	New	Parts No.	Description	Destination
C315			CD04AS1H2R2M	ELECTRO 2.2UF 50WV	
C316			CK73GB1H103K	CHIP C 0.010UF K	
C317			CC73GCH1H470J	CHIP C 47PF J	
C318			CD04AS1V100M	ELECTRO 10UF 35WV	
C319-322			CK73GB1A105K	CHIP C 1.0UF K	
C323			CC73GCH1H330J	CHIP C 33PF J	
C350			CK73EB1A475K	CHIP C 4.7UF K	
C351			CC73GCH1H101J	CHIP C 100PF J	
C352-355			CK73GB1A105K	CHIP C 1.0UF K	
C356			CK73GB1H103K	CHIP C 0.010UF K	
C357			CK73GB0J225K	CHIP C 2.2UF K	
C382			CD04AS1C470M	ELECTRO 47UF 16WV	
C400			CK73FB1E474K	CHIP C 0.47UF K	KK1E1
C400			CK73FB1E474K	CHIP C 0.47UF K	M1M2M3
C400			CK73FB1E474K	CHIP C 0.47UF K	M4K2E3
C401			CD04AT0J470M	ELECTRO 47UF 6.3WV	KK1E1 ⚠
C401			CD04AT0J470M	ELECTRO 47UF 6.3WV	M1M2M3
C401			CD04AT0J470M	ELECTRO 47UF 6.3WV	M4K2E3
C402			CK73FB1E474K	CHIP C 0.47UF K	KK1E1
C402			CK73FB1E474K	CHIP C 0.47UF K	M1M2M3
C402			CK73FB1E474K	CHIP C 0.47UF K	M4K2E3
C403			CK73GB1H103K	CHIP C 0.010UF K	KK1E1
C403			CK73GB1H103K	CHIP C 0.010UF K	M1M2M3
C403			CK73GB1H103K	CHIP C 0.010UF K	M4K2E3
C500			CK73GB1C104K	CHIP C 0.10UF K	
C501			CK73GB1H103K	CHIP C 0.010UF K	
C502,503			CC73GCH1H220J	CHIP C 22PF J	
C504-506			CK73GB1C104K	CHIP C 0.10UF K	
C507,508			CK73GB1H103K	CHIP C 0.010UF K	
C509			CK73GB1C104K	CHIP C 0.10UF K	
C510			CK73GB1H103K	CHIP C 0.010UF K	
C511			CD04AS0J470M	ELECTRO 47UF 6.3WV	
C512			CK73GB1A105K	CHIP C 1.0UF K	
C513			CK73GB1H103K	CHIP C 0.010UF K	
C515			CK73GB1H103K	CHIP C 0.010UF K	
C516			CC73GCH1H101J	CHIP C 100PF J	
C517			CC73GCH1H102J	CHIP C 1000PF J	
C610			CD04AS1V100M	ELECTRO 10UF 35WV	
C611,612			CK73GB1H102K	CHIP C 1000PF K	
C613			CD04AS1V100M	ELECTRO 10UF 35WV	
C620			CD04AS1V100M	ELECTRO 10UF 35WV	
C621,622			CK73GB1H102K	CHIP C 1000PF K	
C623			CD04AS1V100M	ELECTRO 10UF 35WV	
C630			CD04AS1V100M	ELECTRO 10UF 35WV	
C631,632			CK73GB1H102K	CHIP C 1000PF K	
C633			CD04AS1V100M	ELECTRO 10UF 35WV	
C700-704			CK73GB1H103K	CHIP C 0.010UF K	
C751			CK73GB0J225K	CHIP C 2.2UF K	E1E2E3
C752			CC73GCH1H271J	CHIP C 270PF J	E1E2E3
C753			CK73GB1H103K	CHIP C 0.010UF K	E1E2E3
C754,755			CC73GCH1H120J	CHIP C 12PF J	E1E2E3
C800			CK73FB1E474K	CHIP C 0.47UF K	
C802			CD04AT0J470M	ELECTRO 47UF 6.3WV	
C803			CK73GB1H103K	CHIP C 0.010UF K	
C805			CK73FB1E474K	CHIP C 0.47UF K	
C900,901			CK73GB1H104K	CHIP C 0.10UF K	E2M3M
C911			CK73GB1H104K	CHIP C 0.10UF K	E2M3M
C915,916			CC73GCH1H221J	CHIP C 220PF J	E2M3M
C917,918			CK73GB1H102K	CHIP C 1000PF K	E2M3M
C920,921			CK73GB1A105K	CHIP C 1.0UF K	E2M3M
C923			CC73GCH1H220J	CHIP C 22PF J	E2M3M
C924,925			CK73GB1A105K	CHIP C 1.0UF K	E2M3M
C940			CK73FB0J106K	CHIP C 10UF K	E2M3M
C941			CK73GB1A105K	CHIP C 1.0UF K	E2M3M
C942-944			CC73GCH1H220J	CHIP C 22PF J	E2M3M
C945,946			CK73GB1A105K	CHIP C 1.0UF K	
C949,950			CK73GB1A105K	CHIP C 1.0UF K	
CN150			E41-1703-05	PIN ASSY	K2E3
CN170			E41-1822-05	FLAT CABLE CONNECTOR	
CN910			E41-3140-05	PIN ASSY	E2M3M
J1			E58-0991-05	RECTANGULAR RECEPTACLE	
J400			E56-0855-05	CYLINDRICAL RECEPTACLE	KK1E1
J400			E56-0855-05	CYLINDRICAL RECEPTACLE	M1M2M
J400			E56-0855-05	CYLINDRICAL RECEPTACLE	M4K2E
J600			E63-0972-05	PIN JACK	
J800			E58-1095-15	RECTANGULAR RECEPTACLE	
J801			E11-0625-05	PHONE JACK	E2M3M
W701	2D		E30-6438-05	CORD WITH PLUG	
⚠ L1			L33-2365-05	CHOKE COIL ASSY	
L50			L92-0365-05	CHIP FERRITE	
L51		*	L33-2561-05	SMALL FIXED INDUCTOR (10UH)	
L52		*	L92-0672-05	CHIP FERRITE	
L53			L92-0365-05	CHIP FERRITE	
L70			L92-0612-05	CHIP FERRITE	
L71		*	L33-2598-05	SMALL FIXED INDUCTOR (33UH)	
L72			L92-0365-05	CHIP FERRITE	
L73		*	L33-2597-05	SMALL FIXED INDUCTOR (10UH)	
L74			L92-0365-05	CHIP FERRITE	
L75			L92-0612-05	CHIP FERRITE	
L76			L92-0076-05	CHIP FERRITE	
L77		*	L92-0672-05	CHIP FERRITE	
L90			L92-0386-05	CHIP FERRITE	
L500			L92-0612-05	CHIP FERRITE	
X500			L78-0872-05	RESONATOR (12MHZ)	
X501			L77-2921-15	CRYSTAL RESONATOR (32.768KHZ)	
X750			L77-3825-05	CRYSTAL RESONATOR (4.332MHZ)	E1E2E
K	2D		N80-3008-48	PAN HEAD TAPTITE SCREW	
L	2D		N83-3005-48	PAN HEAD TAPTITE SCREW	
M	2D		N83-3008-48	PAN HEAD TAPTITE SCREW	
N	2D		N83-3016-48	PAN HEAD TAPTITE SCREW	
P	2D		N86-2604-43	BINDING HEAD TAPTITE SCREW	
CP500			RK74HB1J101J	CHIP-COM 100 J 1/16W	
CP501			RK74GA1J101J	CHIP-COM 100 J 1/16W	KK1E1
CP501			RK74GA1J101J	CHIP-COM 100 J 1/16W	M1M2M
CP501			RK74GA1J101J	CHIP-COM 100 J 1/16W	M4K2E
CP502			RK74HB1J101J	CHIP-COM 100 J 1/16W	E2
CP502,503			RK74HB1J101J	CHIP-COM 100 J 1/16W	KK1E1
CP502,503			RK74HB1J101J	CHIP-COM 100 J 1/16W	M1M2M

K: KDC-X494 **K1**: KDC-MP445U **K2**: KMR-440U **M1**: KDC-U6046 **M2**: KDC-U6046L
M3: KDC-U7046BT **M4**: KDC-U7046BTL **E1**: KDC-5047U **E2**: KDC-BT50U **E3**: : KMR-440U

⚠ indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-66xx-xx)

Ref.No.	Add	New	Parts No.	Description	Destination
CP502,503			RK74HB1J101J	CHIP-COM 100 J 1/16W	M4K2E3
CP505			RK74GA1J222J	CHIP-COM 2.2K J 1/16W	
CP506,507			RK74HB1J101J	CHIP-COM 100 J 1/16W	
CP508,509			RK74GA1J101J	CHIP-COM 100 J 1/16W	
CP750			RK74HB1J222J	CHIP-COM 2.2K J 1/16W	E1E2E3
R1 ,2			RK73EB2E103J	CHIP R 10K J 1/4W	
R20			RK73GH2A243D	CHIP R 24K D 1/10W	
R21			RK73GH2A432D	CHIP R 4.3K D 1/10W	
R22			RK73FB2B221J	CHIP R 220 J 1/8W	
R23			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R30			RK73FB2B822J	CHIP R 8.2K J 1/8W	
R31			RK73GB2A223J	CHIP R 22K J 1/10W	
R33			RK73FB2B473J	CHIP R 47K J 1/8W	
R34			RK73EB2E1R0J	CHIP R 1.0 J 1/4W	
R41			RK73EB2E681J	CHIP R 680 J 1/4W	
R50			RK73GH2A163D	CHIP R 16K D 1/10W	
R51			RK73GH2A823D	CHIP R 82K D 1/10W	
R52			RK73GB2A622J	CHIP R 6.2K J 1/10W	
R53			RK73GB2A333J	CHIP R 33K J 1/10W	
R54			RK73GH2A153D	CHIP R 15K D 1/10W	
R55			RK73GB2A330J	CHIP R 33 J 1/10W	
R56 -59			RK73EB2E201J	CHIP R 200 J 1/4W	E3
R56 -59			RK73EB2E201J	CHIP R 200 J 1/4W	KK1E1
R56 -59			RK73EB2E201J	CHIP R 200 J 1/4W	M1M2K2
R60			RK73GB2A223J	CHIP R 22K J 1/10W	
R61			RK73GB2A102J	CHIP R 1.0K J 1/10W	E3
R61			RK73GB2A102J	CHIP R 1.0K J 1/10W	KK1E1
R61			RK73GB2A102J	CHIP R 1.0K J 1/10W	M1M2K2
R62			RK73GB2A223J	CHIP R 22K J 1/10W	E3
R62			RK73GB2A223J	CHIP R 22K J 1/10W	KK1E1
R62			RK73GB2A223J	CHIP R 22K J 1/10W	M1M2K2
R70 ,71			RK73GB2A473J	CHIP R 47K J 1/10W	
R72			RK73GH2A753D	CHIP R 75K D 1/10W	
R73			RK73GH2A132D	CHIP R 1.3K D 1/10W	
R74			RK73EB2E113J	CHIP R 11K J 1/4W	
R76			RK73GB2A1R0J	CHIP R 1.0 J 1/10W	
R77			RK73GB2A333J	CHIP R 33K J 1/10W	
R79			RK73GB2A330J	CHIP R 33 J 1/10W	
R80			RK73GH2A163D	CHIP R 16K D 1/10W	
R81			RK73GH2A103D	CHIP R 10K D 1/10W	
R82			RK73GH2A132D	CHIP R 1.3K D 1/10W	
R83			RK73GH2A331D	CHIP R 330 D 1/10W	
R84			RK73GB2A822J	CHIP R 8.2K J 1/10W	
R85			RK73EB2E113J	CHIP R 11K J 1/4W	
R86			RK73EB2E102J	CHIP R 1.0K J 1/4W	
R87			RK73GH2A752D	CHIP R 7.5K D 1/10W	
R88			RK73GH2A132D	CHIP R 1.3K D 1/10W	
R89			RK73GH2A101D	CHIP R 100 D 1/10W	
R90			RK73GB2A362J	CHIP R 3.6K J 1/10W	K
R91			RK73GB2A432J	CHIP R 4.3K J 1/10W	K
R92			RK73GB2A562J	CHIP R 5.6K J 1/10W	K
R93			RK73GB2A2R2J	CHIP R 2.2 J 1/10W	K
R94			RK73FB2B102J	CHIP R 1.0K J 1/8W	K
R95			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R96			RK73GB2A561J	CHIP R 560 J 1/10W	
R97			RK73GB2A621J	CHIP R 620 J 1/10W	
R98			RK73GB2A1R0J	CHIP R 1.0 J 1/10W	
R100,101			RK73GB2A103J	CHIP R 10K J 1/10W	
R106			RK73GB2A183J	CHIP R 18K J 1/10W	
R107			RK73GB2A104J	CHIP R 100K J 1/10W	
R108			RK73FB2B203J	CHIP R 20K J 1/8W	
R109			RK73EB2E473J	CHIP R 47K J 1/4W	
R110			RK73FB2B683J	CHIP R 68K J 1/8W	
R111			RK73GB2A473J	CHIP R 47K J 1/10W	
R112-114			RK73EB2E102J	CHIP R 1.0K J 1/4W	
R120,121			RK73PB2H561J	CHIP R 560 J 1/2W	
R122			RK73GB2A223J	CHIP R 22K J 1/10W	
R123,124			RK73PB2H561J	CHIP R 560 J 1/2W	
R125			RK73FB2B472J	CHIP R 4.7K J 1/8W	
R126			RK73GB2A223J	CHIP R 22K J 1/10W	KK1M1
R126			RK73GB2A223J	CHIP R 22K J 1/10W	K2
R126			RK73GB2A223J	CHIP R 22K J 1/10W	M2M3M
R127			RK73GB2A000J	CHIP R 0.0 J 1/10W	E1E2E
R128,129			RK73PB2H221J	CHIP R 220 J 1/2W	KK1M1
R128,129			RK73PB2H221J	CHIP R 220 J 1/2W	K2
R128,129			RK73PB2H221J	CHIP R 220 J 1/2W	M2M3M
R130			RK73FB2B472J	CHIP R 4.7K J 1/8W	
R140,141			RK73GB2A104J	CHIP R 100K J 1/10W	
R142			RK73GB2A473J	CHIP R 47K J 1/10W	
R150			RK73EB2E471J	CHIP R 470 J 1/4W	
R151			RK73GB2A332J	CHIP R 3.3K J 1/10W	K2E3
R152			RK73GB2A104J	CHIP R 100K J 1/10W	K2E3
R153			RK73GB2A103J	CHIP R 10K J 1/10W	K2E3
R154,155			RK73GB2A471J	CHIP R 470 J 1/10W	K2E3
R156			RK73GB2A103J	CHIP R 10K J 1/10W	K2E3
R157			RK73EB2E101J	CHIP R 100 J 1/4W	K2E3
R158			RK73GB2A223J	CHIP R 22K J 1/10W	K2E3
R159			RK73EB2E100J	CHIP R 10 J 1/4W	K2E3
R160			RK73GB2A473J	CHIP R 47K J 1/10W	K2E3
R161			RK73GB2A163J	CHIP R 16K J 1/10W	K2E3
R163-165			RK73GB2A473J	CHIP R 47K J 1/10W	K2E3
R166			RK73FB2B4R7J	CHIP R 4.7 J 1/8W	K2E3
R167			RK73GB2A104J	CHIP R 100K J 1/10W	K2E3
R168			RK73GB2A334J	CHIP R 330K J 1/10W	K2E3
R170			RK73GB2A100J	CHIP R 10 J 1/10W	
R201			RK73GB2A333J	CHIP R 33K J 1/10W	
R202			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R204-207		*	RK73GB2A680JH	CHIP R 68 J 1/10W	
R209			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R210			RK73GB2A104J	CHIP R 100K J 1/10W	
R211		*	RK73GB2A100JH	CHIP R 10 J 1/10W	
R212			RK73GB2A432J	CHIP R 4.3K J 1/10W	
R213			RK73GB2A331J	CHIP R 330 J 1/10W	
R214			RK73GB2A223J	CHIP R 22K J 1/10W	
R216			RK73GB2A912J	CHIP R 9.1K J 1/10W	
R300			RK73GB2A103J	CHIP R 10K J 1/10W	
R301,302		*	RK73GB2A220JH	CHIP R 22 J 1/10W	
R303			RK73GB2A103J	CHIP R 10K J 1/10W	
R304			RK73GB2A100J	CHIP R 10 J 1/10W	
R305			RK73GB2A222J	CHIP R 2.2K J 1/10W	K

K: KDC-X494 **K1**: KDC-MP445U **K2**: KMR-440U **M1**: KDC-U6046 **M2**: KDC-U6046L
M3: KDC-U7046BT **M4**: KDC-U7046BTL **E1**: KDC-5047U **E2**: KDC-BT50U **E3**: : KMR-440U

⚠ indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-66xx-xx)

Ref.No.	Add	New	Parts No.	Description	Destination
R306			RK73GB2A101J	CHIP R 100 J 1/10W	K
R350			RK73GB2A473J	CHIP R 47K J 1/10W	
R352			RK73GB2A333J	CHIP R 33K J 1/10W	
R353			RK73GB2A473J	CHIP R 47K J 1/10W	
R354			RK73GB2A334J	CHIP R 330K J 1/10W	
R355			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R356			RK73GB2A821J	CHIP R 820 J 1/10W	
R357			RK73GB2A473J	CHIP R 47K J 1/10W	
R358			RK73GB2A334J	CHIP R 330K J 1/10W	
R359			RK73GB2A104J	CHIP R 100K J 1/10W	
R360,361			RK73GB2A103J	CHIP R 10K J 1/10W	
R380			RK73EB2E2R2J	CHIP R 2.2 J 1/4W	
R400,401			RK73EB2E432J	CHIP R 4.3K J 1/4W	KK1E1
R400,401			RK73EB2E432J	CHIP R 4.3K J 1/4W	M1M2M3
R400,401			RK73EB2E432J	CHIP R 4.3K J 1/4W	M4K2E3
R402			RK73EB2E102J	CHIP R 1.0K J 1/4W	KK1E1
R402			RK73EB2E102J	CHIP R 1.0K J 1/4W	M1M2M3
R402			RK73EB2E102J	CHIP R 1.0K J 1/4W	M4K2E3
R403			RK73EB2E432J	CHIP R 4.3K J 1/4W	KK1E1
R403			RK73EB2E432J	CHIP R 4.3K J 1/4W	M1M2M3
R403			RK73EB2E432J	CHIP R 4.3K J 1/4W	M4K2E3
R404			RK73EB2E102J	CHIP R 1.0K J 1/4W	KK1E1
R404			RK73EB2E102J	CHIP R 1.0K J 1/4W	M1M2M3
R404			RK73EB2E102J	CHIP R 1.0K J 1/4W	M4K2E3
R405			RK73EB2E101J	CHIP R 100 J 1/4W	KK1E1
R405			RK73EB2E101J	CHIP R 100 J 1/4W	M1M2M3
R405			RK73EB2E101J	CHIP R 100 J 1/4W	M4K2E3
R406			RK73EB2E100J	CHIP R 10 J 1/4W	KK1E1
R406			RK73EB2E100J	CHIP R 10 J 1/4W	M1M2M3
R406			RK73EB2E100J	CHIP R 10 J 1/4W	M4K2E3
R407			RK73EB2E4R7J	CHIP R 4.7 J 1/4W	KK1E1
R407			RK73EB2E4R7J	CHIP R 4.7 J 1/4W	M1M2M3
R407			RK73EB2E4R7J	CHIP R 4.7 J 1/4W	M4K2E3
R408			RK73EB2E100J	CHIP R 10 J 1/4W	KK1E1
R408			RK73EB2E100J	CHIP R 10 J 1/4W	M1M2M3
R408			RK73EB2E100J	CHIP R 10 J 1/4W	M4K2E3
R409			RK73EB2E102J	CHIP R 1.0K J 1/4W	KK1E1
R409			RK73EB2E102J	CHIP R 1.0K J 1/4W	M1M2M3
R409			RK73EB2E102J	CHIP R 1.0K J 1/4W	M4K2E3
R410			RK73EB2E101J	CHIP R 100 J 1/4W	KK1E1
R410			RK73EB2E101J	CHIP R 100 J 1/4W	M1M2M3
R410			RK73EB2E101J	CHIP R 100 J 1/4W	M4K2E3
R411			RK73GB2A102J	CHIP R 1.0K J 1/10W	KK1E1
R411			RK73GB2A102J	CHIP R 1.0K J 1/10W	M1M2M3
R411			RK73GB2A102J	CHIP R 1.0K J 1/10W	M4K2E3
R500			RK73GB2A473J	CHIP R 47K J 1/10W	
R501			RK73GB2A103J	CHIP R 10K J 1/10W	
R502			RK73GB2A104J	CHIP R 100K J 1/10W	E2
R502,503			RK73GB2A104J	CHIP R 100K J 1/10W	KK1E1
R502,503			RK73GB2A104J	CHIP R 100K J 1/10W	M1M2M3
R502,503			RK73GB2A104J	CHIP R 100K J 1/10W	M4K2E3
R504			RK73GB2A473J	CHIP R 47K J 1/10W	E1E2E3
R505			RK73GB2A104J	CHIP R 100K J 1/10W	
R506,507			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R508			RK73GB2A473J	CHIP R 47K J 1/10W	E1E2E3
R510			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R511			RK73GB2A473J	CHIP R 47K J 1/10W	
R512,513			RK73GB2A101J	CHIP R 100 J 1/10W	KK1E1
R512,513			RK73GB2A101J	CHIP R 100 J 1/10W	M1M2M
R512,513			RK73GB2A101J	CHIP R 100 J 1/10W	M4K2E
R513			RK73GB2A101J	CHIP R 100 J 1/10W	E2
R514			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R515			RK73GB2A101J	CHIP R 100 J 1/10W	
R516			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R518			RK73GB2A104J	CHIP R 100K J 1/10W	
R519			RK73GB2A473J	CHIP R 47K J 1/10W	KK1E1
R519			RK73GB2A473J	CHIP R 47K J 1/10W	M1M2M
R519			RK73GB2A473J	CHIP R 47K J 1/10W	M4K2E
R520			RK73GB2A101J	CHIP R 100 J 1/10W	KK1E1
R520			RK73GB2A101J	CHIP R 100 J 1/10W	M1M2M
R520			RK73GB2A101J	CHIP R 100 J 1/10W	M4K2E
R521			RK73GB2A473J	CHIP R 47K J 1/10W	KK1E1
R521			RK73GB2A473J	CHIP R 47K J 1/10W	M1M2M
R521			RK73GB2A473J	CHIP R 47K J 1/10W	M4K2E
R522			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R523			RK73GB2A104J	CHIP R 100K J 1/10W	E2
R523,524			RK73GB2A104J	CHIP R 100K J 1/10W	KK1E1
R523,524			RK73GB2A104J	CHIP R 100K J 1/10W	M1M2M
R523,524			RK73GB2A104J	CHIP R 100K J 1/10W	M4K2E
R526,527			RK73GB2A473J	CHIP R 47K J 1/10W	
R528			RK73GB2A104J	CHIP R 100K J 1/10W	KK1E1
R528			RK73GB2A104J	CHIP R 100K J 1/10W	M1M2M
R528			RK73GB2A104J	CHIP R 100K J 1/10W	M4K2E
R529			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R530			RK73GB2A101J	CHIP R 100 J 1/10W	
R531			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R532			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R533-535			RK73GB2A104J	CHIP R 100K J 1/10W	
R536			RK73GB2A471J	CHIP R 470 J 1/10W	
R537			RK73GB2A104J	CHIP R 100K J 1/10W	
R538			RK73GB2A471J	CHIP R 470 J 1/10W	
R540,541			RK73GB2A473J	CHIP R 47K J 1/10W	
R542			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R543			RK73GB2A473J	CHIP R 47K J 1/10W	
R545			RK73GB2A473J	CHIP R 47K J 1/10W	
R546			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R547			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R548			RK73GB2A223J	CHIP R 22K J 1/10W	
R549			RK73GB2A101J	CHIP R 100 J 1/10W	
R550			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R551-553			RK73GB2A101J	CHIP R 100 J 1/10W	K2E3
R554			RK73GB2A473J	CHIP R 47K J 1/10W	
R555-557			RK73GB2A101J	CHIP R 100 J 1/10W	
R558			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R559			RK73GB2A473J	CHIP R 47K J 1/10W	
R560			RK73GB2A104J	CHIP R 100K J 1/10W	
R561			RK73GB2A473J	CHIP R 47K J 1/10W	E1M1M
R561			RK73GB2A473J	CHIP R 47K J 1/10W	E2M3M
R561			RK73GB2A473J	CHIP R 47K J 1/10W	E3
R561,562			RK73GB2A473J	CHIP R 47K J 1/10W	KK1K2

K: KDC-X494 **K1**: KDC-MP445U **K2**: KMR-440U **M1**: KDC-U6046 **M2**: KDC-U6046L
M3: KDC-U7046BT **M4**: KDC-U7046BTL **E1**: KDC-5047U **E2**: KDC-BT50U **E3**: : KMR-440U

⚠ indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-66xx-xx)

Ref.No.	Add	New	Parts No.	Description	Destination
R562			RK73GB2A223J	CHIP R 22K J 1/10W	M1M2M3
R562			RK73GB2A223J	CHIP R 22K J 1/10W	M4
R563			RK73GB2A473J	CHIP R 47K J 1/10W	M2M4E3
R563,564			RK73GB2A473J	CHIP R 47K J 1/10W	E1M1E2
R563,564			RK73GB2A473J	CHIP R 47K J 1/10W	M3
R564			RK73GB2A223J	CHIP R 22K J 1/10W	K2
R564			RK73GB2A473J	CHIP R 47K J 1/10W	K
R565			RK73GB2A473J	CHIP R 47K J 1/10W	K1M2M4
R565			RK73GB2A473J	CHIP R 47K J 1/10W	K2E3
R567,568			RK73GB2A473J	CHIP R 47K J 1/10W	
R569			RK73GB2A101J	CHIP R 100 J 1/10W	KK1E1
R569			RK73GB2A101J	CHIP R 100 J 1/10W	M1M2M3
R569			RK73GB2A101J	CHIP R 100 J 1/10W	M4K2E3
R570,571			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R610			RK73FB2B101J	CHIP R 100 J 1/8W	
R611			RK73GB2A471J	CHIP R 470 J 1/10W	
R612,613			RK73GB2A223J	CHIP R 22K J 1/10W	
R614			RK73FB2B101J	CHIP R 100 J 1/8W	
R615			RK73GB2A471J	CHIP R 470 J 1/10W	
R620			RK73FB2B101J	CHIP R 100 J 1/8W	
R621			RK73GB2A471J	CHIP R 470 J 1/10W	
R622,623			RK73GB2A223J	CHIP R 22K J 1/10W	
R624			RK73FB2B101J	CHIP R 100 J 1/8W	
R625			RK73GB2A471J	CHIP R 470 J 1/10W	
R630			RK73FB2B101J	CHIP R 100 J 1/8W	
R631			RK73GB2A471J	CHIP R 470 J 1/10W	
R632,633			RK73GB2A223J	CHIP R 22K J 1/10W	
R634			RK73FB2B101J	CHIP R 100 J 1/8W	
R635			RK73GB2A471J	CHIP R 470 J 1/10W	
R642,643			RK73EB2E101J	CHIP R 100 J 1/4W	E2M3M4
R700			RK73GB2A223J	CHIP R 22K J 1/10W	
R701,702			RK73GB2A471J	CHIP R 470 J 1/10W	
R703			RK73FB2B821J	CHIP R 820 J 1/8W	
R704			RK73GB2A223J	CHIP R 22K J 1/10W	
R705			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R751			RK73GB2A512J	CHIP R 5.1K J 1/10W	E1E2E3
R752			RK73GB2A102J	CHIP R 1.0K J 1/10W	E1E2E3
R800,801			RK73EB2E101J	CHIP R 100 J 1/4W	
R802			RK73EB2E102J	CHIP R 1.0K J 1/4W	
R803			RK73EB2E432J	CHIP R 4.3K J 1/4W	
R804			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R805			RK73EB2E100J	CHIP R 10 J 1/4W	
R806			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R807			RK73GB2A123J	CHIP R 12K J 1/10W	
R808			RK73EB2E4R7J	CHIP R 4.7 J 1/4W	
R809			RK73GB2A123J	CHIP R 12K J 1/10W	
R810			RK73EB2E100J	CHIP R 10 J 1/4W	
R811,812			RK73EB2E432J	CHIP R 4.3K J 1/4W	
R816,817			RK73GB2A220J	CHIP R 22 J 1/10W	
R819			RK73EB2E432J	CHIP R 4.3K J 1/4W	
R900,901			RK73GB2A101J	CHIP R 100 J 1/10W	E2M3M4
R910			RK73GB2A472J	CHIP R 4.7K J 1/10W	E2M3M4
R911			RK73GB2A223J	CHIP R 22K J 1/10W	E2M3M4
R912			RK73GB2A101J	CHIP R 100 J 1/10W	E2M3M4
R913			RK73GB2A473J	CHIP R 47K J 1/10W	E2M3M4
R915			RK73GB2A472J	CHIP R 4.7K J 1/10W	E2M3M
R916			RK73GB2A473J	CHIP R 47K J 1/10W	E2M3M
R917,918			RK73GB2A681J	CHIP R 680 J 1/10W	E2M3M
R920			RK73GB2A473J	CHIP R 47K J 1/10W	E2M3M
R923			RK73GB2A473J	CHIP R 47K J 1/10W	E2M3M
R925-928			RK73GH2A473D	CHIP R 47K D 1/10W	E2M3M
R931,932			RK73GH2A473D	CHIP R 47K D 1/10W	E2M3M
R934			RK73GH2A473D	CHIP R 47K D 1/10W	E2M3M
R940			RK73GH2A473D	CHIP R 47K D 1/10W	E3
R940			RK73GH2A473D	CHIP R 47K D 1/10W	KK1E1
R940			RK73GH2A473D	CHIP R 47K D 1/10W	M1M2K
R940,941			RK73GH2A473D	CHIP R 47K D 1/10W	E2M3M
R945-950			RK73GH2A473D	CHIP R 47K D 1/10W	
R952			RK73GH2A473D	CHIP R 47K D 1/10W	
W90			R92-2053-05	CHIP R 0 OHM J 1/8W	K1E1M
W90			R92-2053-05	CHIP R 0 OHM J 1/8W	M2E2M
W90			R92-2053-05	CHIP R 0 OHM J 1/8W	M4K2E
W700			R92-2053-05	CHIP R 0 OHM J 1/8W	
W702-705			R92-2053-05	CHIP R 0 OHM J 1/8W	
S800			S70-0959-05	TACT SWITCH	
D1			S2V60-5009F46	DIODE	
D30			UDZW5.6(B)	ZENER DIODE	
D31			1SR154-400	DIODE	
D32			1SS355	DIODE	
D40			UDZW8.2(B)	ZENER DIODE	
D50		*	CMS20	DIODE	
D70		*	CUS02	DIODE	
D71 ,72			1SS388	DIODE	
D73			UDZW15(B)	ZENER DIODE	
D74			1SS355	DIODE	
D75		*	CUS02	DIODE	
D90			1SR154-400	DIODE	K
D91			UDZW5.6(B)	ZENER DIODE	K
D100			UDZW6.2(B)	ZENER DIODE	
D102,103			UDZW6.8(B)	ZENER DIODE	
D120			1SS355	DIODE	
D121-124			1SR154-400	DIODE	
D140			UDZW4.7(B)	ZENER DIODE	
D150			UDZW6.2(B)	ZENER DIODE	
D152			UDZW6.2(B)	ZENER DIODE	K2E3
D153			CVL10C270M300	VARISTOR	K2E3
D200			DAP202U	DIODE	
D300-302			DAP202U	DIODE	
D303			UDZW5.6(B)	ZENER DIODE	K
D350			DA204U	DIODE	
D403			UDZW6.2(B)	ZENER DIODE	KK1E1
D403			UDZW6.2(B)	ZENER DIODE	M1M2M
D403			UDZW6.2(B)	ZENER DIODE	M4K2E
D406			UDZW6.2(B)	ZENER DIODE	KK1E1
D406			UDZW6.2(B)	ZENER DIODE	M1M2M
D406			UDZW6.2(B)	ZENER DIODE	M4K2E
D408-410			UDZW6.8(B)	ZENER DIODE	KK1E1
D408-410			UDZW6.8(B)	ZENER DIODE	M1M2M
D408-410			UDZW6.8(B)	ZENER DIODE	M4K2E

K: KDC-X494 **K1**: KDC-MP445U **K2**: KMR-440U **M1**: KDC-U6046 **M2**: KDC-U6046L
M3: KDC-U7046BT **M4**: KDC-U7046BTL **E1**: KDC-5047U **E2**: KDC-BT50U **E3**: : KMR-440U

⚠ indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-66xx-xx)

Ref.No.	Add	New	Parts No.	Description	Destination
D610			DAP202U	DIODE	
D630			DAP202U	DIODE	
D642,643			UDZW4.7(B)	ZENER DIODE	E2M3M4
D701			UDZW5.6(B)	ZENER DIODE	
D800,801			UDZW6.2(B)	ZENER DIODE	
D804-806			UDZW6.8(B)	ZENER DIODE	
D810-813			LVS10C270S030	VARISTOR	
D815,816			LVS10C270S030	VARISTOR	
IC20			M5237ML-CF0J	ANALOGUE IC	
IC50	2D	*	Impossible to repla	ANALOGUE IC (See exploded view)	
IC60			BD6538G	MOS-IC	
IC71	2D	*	Impossible to repla	ANALOGUE IC (See exploded view)	
IC80			TC7WH00FU-F	MOS-IC	
IC200			E-TDA7851A	ANALOGUE IC	
IC300			E-TDA7415CB	ANALOGUE IC	
IC350			NJM4565V-ZB	ANALOGUE IC	
IC500			XC6120N292N1	MOS-IC	
IC502		*	W05-1603-00	MICROCONTROLLER IC	E2
IC502		*	W05-1604-00	MICROCONTROLLER IC	M3M4
IC502		*	W05-1605-00	MICROCONTROLLER IC	KK1M1
IC502		*	W05-1605-00	MICROCONTROLLER IC	M2
IC502		*	W05-1606-00	MICROCONTROLLER IC	E1
IC502		*	W05-1607-00	MICROCONTROLLER IC	K2
IC502		*	W05-1608-00	MICROCONTROLLER IC	E3
IC503			M24C08-RDW6TP	ROM IC	K2E3
IC504			74HC2G02DP	MOS-IC	
IC750			E-TDA7478AD	ANALOGUE IC	E1E2E3
IC900			TC7SET08FU-F	MOS-IC	E2M3M4
IC901			TC7SH08FU-F	MOS-IC	E2M3M4
IC910			NJM4565V-ZB	ANALOGUE IC	E2M3M4
IC912			NJM4565V-ZB	ANALOGUE IC	
IC915			NJM2886DL3-33	ANALOGUE IC	E2M3M4
Q20			DTA124EUA	DIGITAL TRANSISTOR	
Q21			DTC144EUA	DIGITAL TRANSISTOR	
Q22			2SA1869-Q(Y)	TRANSISTOR	
Q23			DTA124EUA	DIGITAL TRANSISTOR	
Q24			DTC124EUA	DIGITAL TRANSISTOR	
Q30			2SA1576A	TRANSISTOR	
Q31			DTC124EUA	DIGITAL TRANSISTOR	
Q32			2SC4081	TRANSISTOR	
Q33			2SB1184(Q,R)	TRANSISTOR	
Q40			2SC4081	TRANSISTOR	
Q41		*	2SA1869-Q(Y)	TRANSISTOR	
Q50			DTC124EUA	DIGITAL TRANSISTOR	E3
Q50			DTC124EUA	DIGITAL TRANSISTOR	KK1E1
Q50			DTC124EUA	DIGITAL TRANSISTOR	M1M2K2
Q51			2SB1689	TRANSISTOR	E3
Q51			2SB1689	TRANSISTOR	KK1E1
Q51			2SB1689	TRANSISTOR	M1M2K2
Q70			DTC124EUA	DIGITAL TRANSISTOR	
Q71			2SA1576A	TRANSISTOR	
Q72			2SC4081	TRANSISTOR	
Q73		*	2SA1869-Q(Y)	TRANSISTOR	
Q74			2SD1760	TRANSISTOR	
Q90			2SC4081	TRANSISTOR	K
Q91			2SC5053	TRANSISTOR	K
Q92			DTA124EUA	DIGITAL TRANSISTOR	K
Q93			DTC124EUA	DIGITAL TRANSISTOR	K
Q100			2SC4081	TRANSISTOR	
Q102,103			2SC4081	TRANSISTOR	
Q120			DTC114YUA	DIGITAL TRANSISTOR	
Q121			DTA114EUA	DIGITAL TRANSISTOR	
Q122			2SA1576A	TRANSISTOR	
Q123			2SB1188(Q,R)	TRANSISTOR	E1E2E
Q123,124			2SB1188(Q,R)	TRANSISTOR	KK1M1
Q123,124			2SB1188(Q,R)	TRANSISTOR	K2
Q123,124			2SB1188(Q,R)	TRANSISTOR	M2M3M
Q125			DTC114YUA	DIGITAL TRANSISTOR	KK1M1
Q125			DTC114YUA	DIGITAL TRANSISTOR	K2
Q125			DTC114YUA	DIGITAL TRANSISTOR	M2M3M
Q140			DTC144EUA	DIGITAL TRANSISTOR	
Q150			SSM3J15FU-F	FET	K2E3
Q151			2SK3018	FET	K2E3
Q152			DTC124EUA	DIGITAL TRANSISTOR	K2E3
Q156,157			2SC4081	TRANSISTOR	K2E3
Q158			2SJ518-E	FET	K2E3
Q159			2SC4081	TRANSISTOR	K2E3
Q160			2SA1576A	TRANSISTOR	K2E3
Q350			2SC4081	TRANSISTOR	
Q610			DTC143TUA	DIGITAL TRANSISTOR	
Q611			DTA124EUA	DIGITAL TRANSISTOR	
Q612			DTC143TUA	DIGITAL TRANSISTOR	
Q620,621			DTC143TUA	DIGITAL TRANSISTOR	
Q630			DTC143TUA	DIGITAL TRANSISTOR	
Q631			DTA124EUA	DIGITAL TRANSISTOR	
Q632			DTC143TUA	DIGITAL TRANSISTOR	
Q700			DTC124EUA	DIGITAL TRANSISTOR	
Q701			2SA1577	TRANSISTOR	
Q702			2SC4081	TRANSISTOR	
Q900			DTC124EUA	DIGITAL TRANSISTOR	E2M3M
TH200			PRF18BE471QS2	POSITIVE RESISTOR	
A900	3D	*	W02-5372-05	ELECTRIC CIRCUIT MODULE	E2M3M
A700	2D		X86-4032-70	FRONT-END UNIT	E1E2E
A700	2D		X86-4230-11	FRONT-END UNIT	KK1M1
A700	2D		X86-4230-11	FRONT-END UNIT	K2
A700	2D		X86-4230-11	FRONT-END UNIT	M2M3M

MECHANISM ASSY (X92-6360-04) DXM-9B30W

1	2B		A10-5450-63	CHASSIS ASSY
3	3B		A10-5452-41	CHASSIS
4	1B		A10-5453-32	CHASSIS
12	3A		D10-4993-52	LEVER
13	1B		D10-4991-22	ARM
14	1B		D10-4992-13	ARM
15	2A		D10-4994-02	SLIDER
16	2A		D10-4995-03	SLIDER
17	2B		D10-4996-02	SLIDER
18	2A		D10-4997-03	LEVER
19	1A		D10-4998-03	ARM

K: KDC-X494 **K1**: KDC-MP445U **K2**: KMR-440U **M1**: KDC-U6046 **M2**: KDC-U6046L
M3: KDC-U7046BT **M4**: KDC-U7046BTL **E1**: KDC-5047U **E2**: KDC-BT50U **E3**: : KMR-440U

⚠ indicates safety critical components.

PARTS LIST

MECHANISM ASSY (X92-6360-04) DXM-9B30W

Ref.No.	Add	New	Parts No.	Description	Destination
20	2A		D10-4999-03	ARM	
21	2A		D10-7001-03	ARM	
22	2A		D10-7002-03	ARM	
23	2A		D10-7003-03	ARM	
24	2A		D13-2445-04	GEAR	
25	2A		D13-2446-04	GEAR	
27	2A		D13-2448-04	GEAR	
28	2A		D13-2449-04	GEAR	
29	2A		D13-2450-04	GEAR	
30	2A		D13-2451-04	GEAR	
31	2A		D13-2452-04	GEAR	
32	2A		D13-2453-04	GEAR	
33	2A		D13-2454-04	GEAR	
34	2A		D13-2455-04	GEAR	
35	2B		D13-2456-03	RACK (GEAR)	
36	2A		D14-1028-04	ROLLER	
37	3A		D21-2507-04	SHAFT	
38	2B		D21-2508-04	SHAFT	
39	3A		D23-0963-04	RETAINER	
40	3B		D39-0277-15	DAMPER	
41	3B		D39-0278-15	DAMPER	
46	1B		G01-4682-34	TORSION COIL SPRING	
47	3A	*	G01-4756-04	EXTENSION SPRING	
48	2A		G01-4684-04	EXTENSION SPRING	
49	2B		G01-4685-04	EXTENSION SPRING	
50	1B		G01-4686-14	EXTENSION SPRING	
51	3A		G01-4688-14	EXTENSION SPRING	
52	3A		G01-4692-24	TORSION COIL SPRING	
54	3A		G02-1588-04	FLAT SPRING	
55	1B		G13-1297-04	CUSHION	
56	1B		G13-1299-14	CUSHION	
57	1A		G16-1715-04	SHEET	
61	1B		J11-0675-03	CLAMPER	
64	2A		J19-7210-21	HOLDER	
65	2B		J19-7225-04	HOLDER	
66	1B		J22-0706-03	MOUNTING HARDWARE	
67	1A		J22-0707-12	MOUNTING HARDWARE	
68	1B		J90-1166-11	GUIDE	
69	2B		J90-1168-03	RAIL	
A	1A		N09-6108-15	TAPTITE SCREW (M2X3.5)	
B	2B		N09-6426-15	MACHINE SCREW	
C	2B		N09-6735-05	TAPTITE SCREW	
D	2B		N09-6737-15	MACHINE SCREW	
E	2B		N09-6738-15	TAPTITE SCREW	
F	2A		N19-2335-14	FLAT WASHER	
G	2B		N35-2003-48	BINDING HEAD MACHINE SCREW	
H	2B		N39-1720-48	PAN HEAD MACHINE SCREW	
76	2A		S68-0921-05	PUSH SWITCH	
DM1	2B		X94-2090-00	SPINDLE MOTOR ASSY	
DM2	2B		X94-2100-00	FEED MOTOR ASSY (LOAD/SLED)	
DPU1	2B		X93-2280-00	OPTICAL PICKUP ASSY	

Ref.No.	Add	New	Parts No.	Description	Destination

K: KDC-X494 **K1**: KDC-MP445U **K2**: KMR-440U **M1**: KDC-U6046 **M2**: KDC-U6046L
M3: KDC-U7046BT **M4**: KDC-U7046BTL **E1**: KDC-5047U **E2**: KDC-BT50U **E3**: : KMR-440U

⚠ indicates safety critical components.