EXPLODED VIEW (CD MECHANISM)

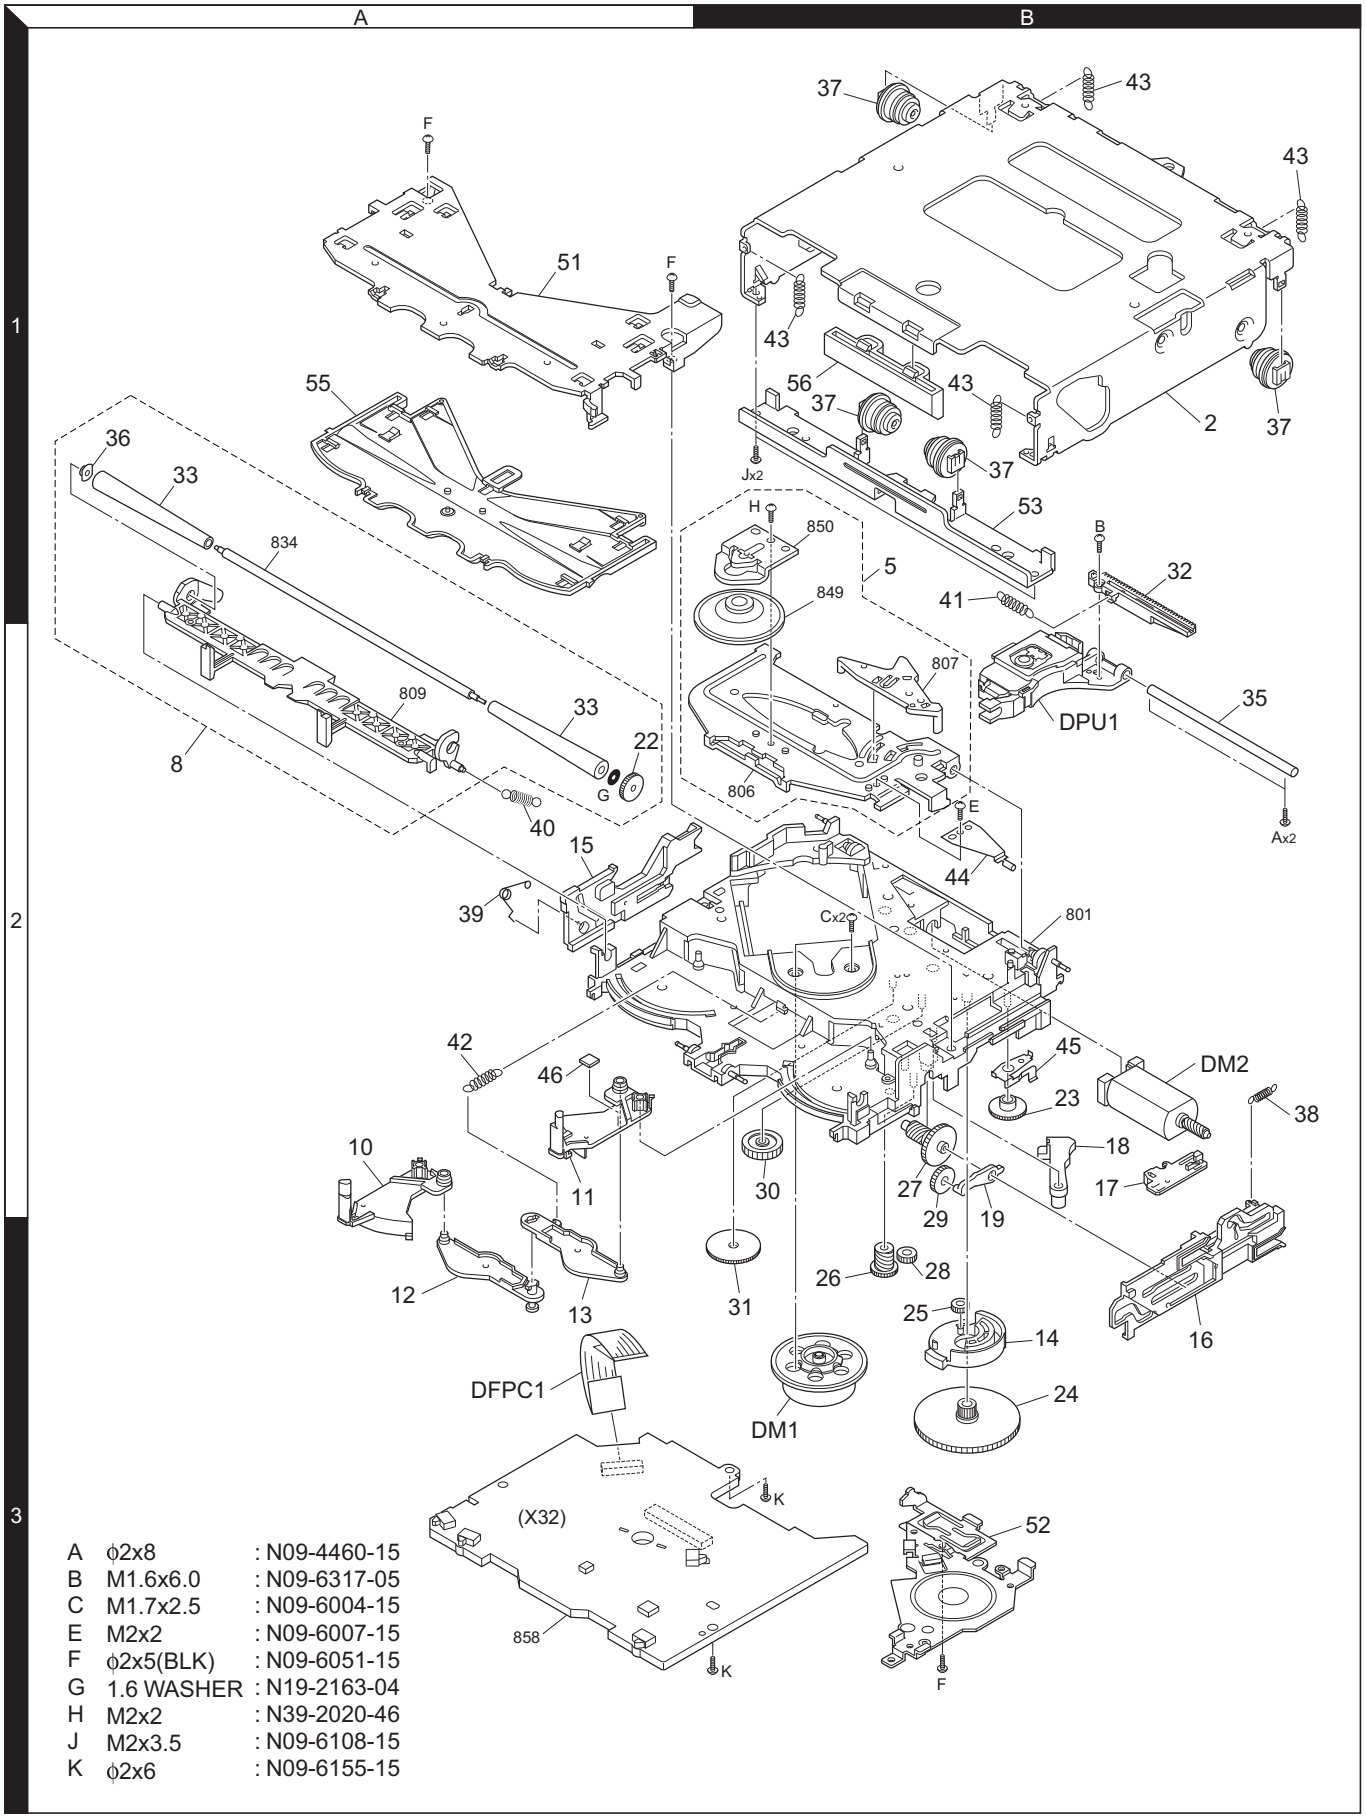

A	ϕ2x8	: N09-4460-15
B	M1.6x6.0	: N09-6317-05
C	M1.7x2.5	: N09-6004-15
E	M2x2	: N09-6007-15
F	ϕ2x5(BLK)	: N09-6051-15
G	1.6 WASHER	: N19-2163-04
H	M2x2	: N39-2020-46
J	M2x3.5	: N09-6108-15
K	ϕ2x6	: N09-6155-15

Parts with the exploded numbers larger than 700 are not supplied.

EXPLODED VIEW (UNIT)

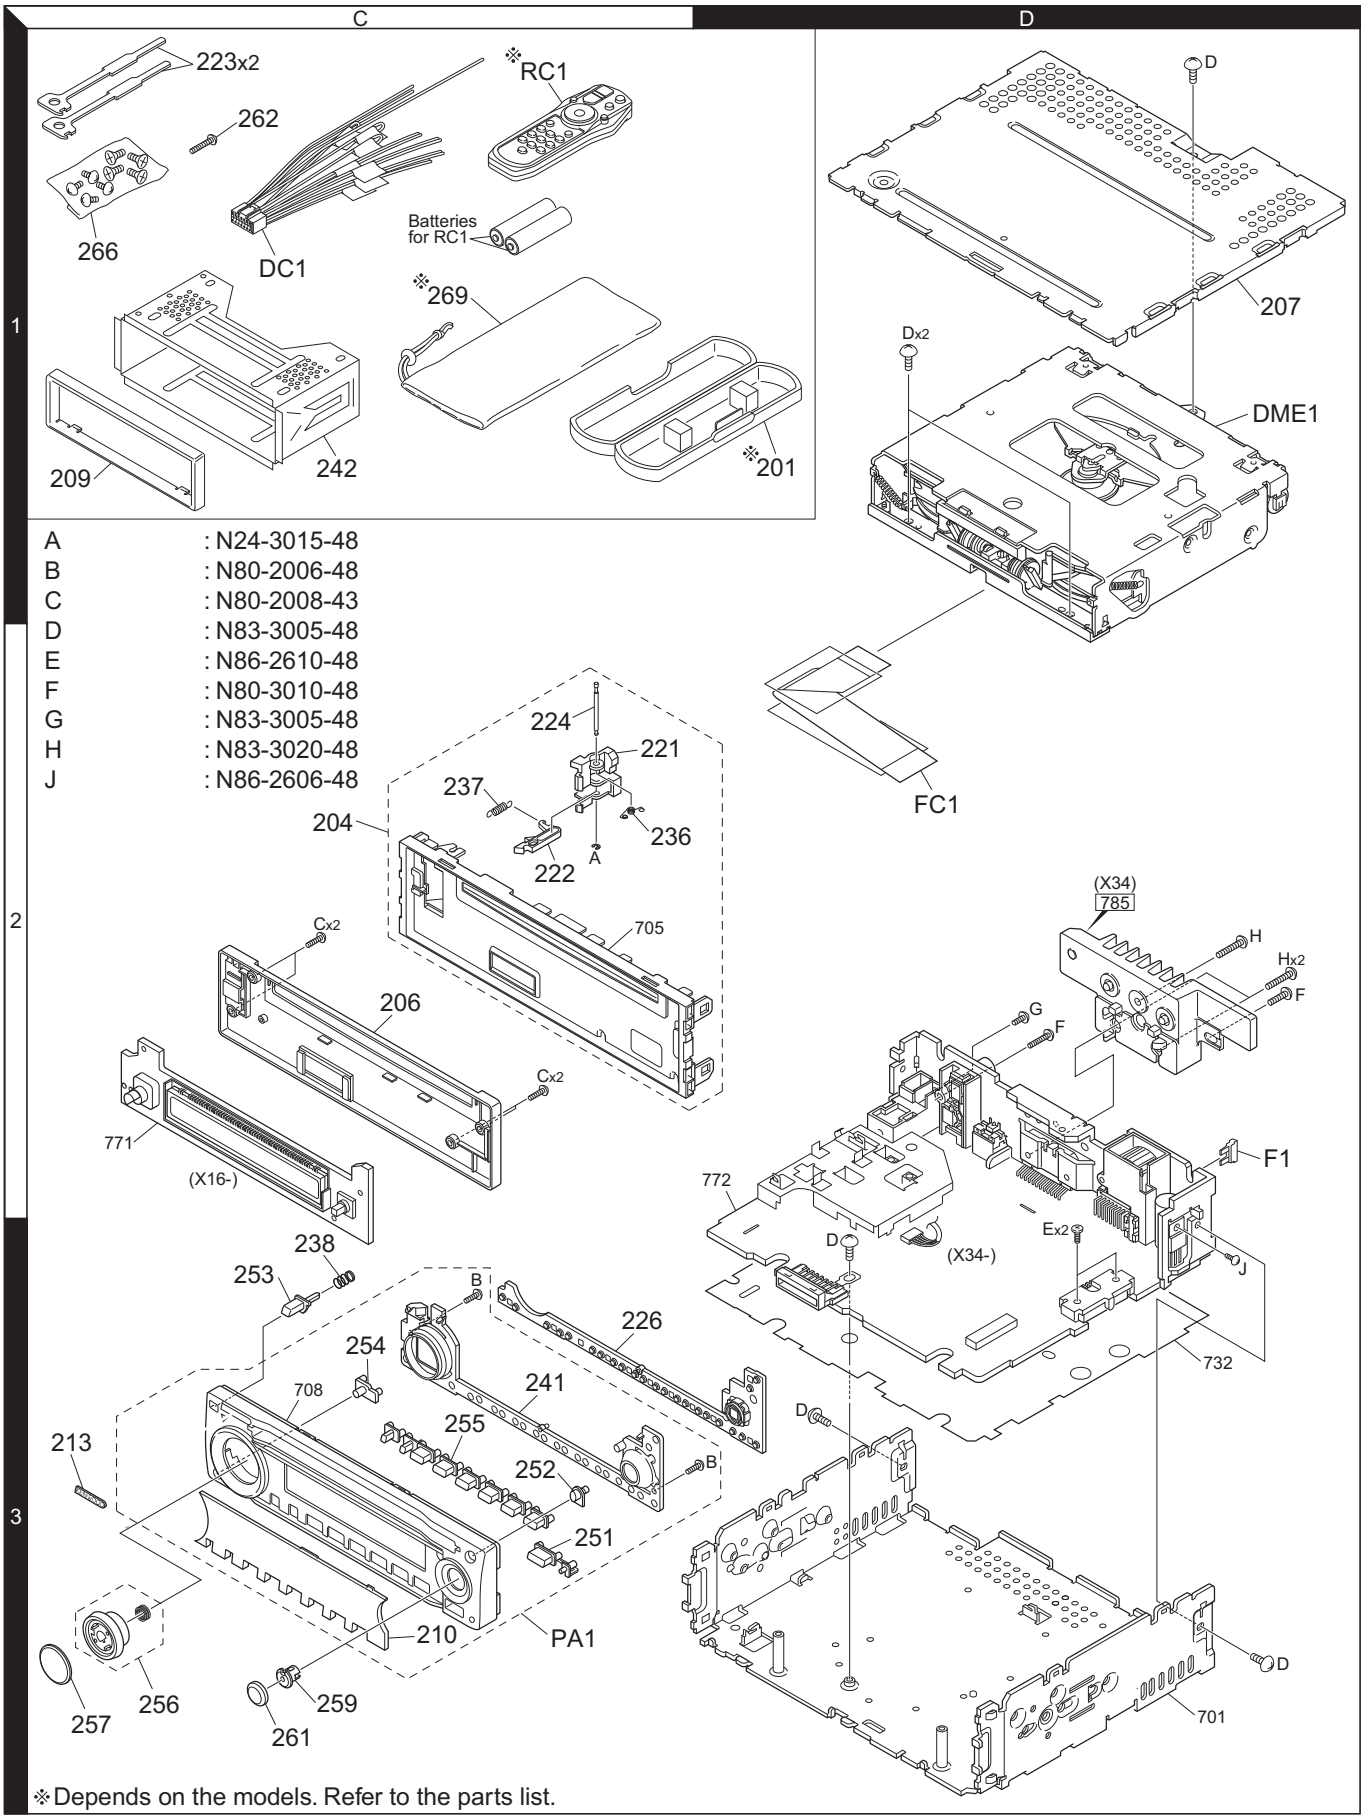

※Depends on the models. Refer to the parts list.

Parts with the exploded numbers larger than 700 are not supplied.

PARTS LIST

✻ New parts
Parts without **Parts No.** are not supplied.
Les articles non mentionnes dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

Ref. No.	Add	New	Parts No.	Description	Destination
KDC-MP202/MP333/MP333RC/MP433					
201	1D		A02-2736-03	PLASTIC CABINET ASSY	M1M2M3
204	2C		A22-2863-13	SUB PANEL ASSY	
206	2C		A46-1815-01	REAR COVER	
207	1D		A52-0804-12	TOP PLATE	
PA1	3C	✻	A64-3798-02	PANEL ASSY	M1M3
PA1	3C	✻	A64-3799-02	PANEL ASSY	M2
PA1	3C	✻	A64-3802-02	PANEL ASSY	K1
RC1	1C		A70-2069-15	REMOTE CONTROLLER ASSY (RC-517)	M3
-			B46-0681-04	ID CARD	
-			B46-0682-00	WARRANTY CARD	
-		✻	B64-3290-00	INST. MANUAL (ENG,SPA)	K1
-		✻	B64-3291-00	INST. MANUAL (FRENCH)	K1
-		✻	B64-3292-00	INST. MANUAL (ENG,T-CHI)	M1M2M3
-		✻	B64-3293-00	INST. MANUAL (ARABIC)	M1M2M3
209	1C		B07-3122-01	ESCUTCHEON	M1M3
209	1C		B07-3123-01	ESCUTCHEON	K1M2
210	3C	✻	B10-4797-01	FRONT GLASS	K1
210	3C	✻	B10-4802-01	FRONT GLASS	M2
210	3C	✻	B10-4803-01	FRONT GLASS	M1M3
213	3C		B43-1518-04	BADGE	
221	2C		D10-4446-03	LEVER	
222	2C		D10-4447-03	LEVER	
223	1C		D10-4589-04	LEVER	
224	2C		D21-2329-04	SHAFT	
226	3C	✻	E29-2070-02	CONDUCTIVE RUBBER	
⚠ DC1	1C		E30-6415-15	DC CORD	
FC1	2D		E39-0736-05	FLAT CABLE	
⚠ F1	2D		F52-0023-05	FUSE (MINI BLADE TYPE) (10A)	
236	2C		G01-2987-04	TORSION COIL SPRING	
237	2C		G01-3096-04	EXTENSION SPRING	
238	3C		G01-3244-04	COMPRESSION SPRING	
-			H10-4919-12	POLYSTYRENE FOAMED FIXTURE	
-		✻	H21-1176-04	PROTECTION SHEET	
-			H25-0329-04	PROTECTION BAG (280X450X0.03)	
-		✻	H25-1236-14	PROTECTION BAG (0.03X180X500)	
-		✻	H54-3609-03	ITEM CARTON CASE (KDC-MP202)	K1
-		✻	H54-3611-03	ITEM CARTON CASE (KDC-MP333)	M1
-		✻	H54-3612-03	ITEM CARTON CASE (KDC-MP433)	M2
-		✻	H54-3680-03	ITEM CARTON CASE (KDC-MP333RC)	M3
241	3C	✻	J19-7115-01	HOLDER	
242	1C		J21-9716-03	MOUNTING HARDWARE ASSY	
251	3C		K25-1788-03	PUSH KNOB (SRC)	
252	3C		K24-4457-04	PUSH KNOB (EJECT)	
253	3C		K24-4459-04	PUSH KNOB (RELEASE)	
254	3C		K24-4455-04	PUSH KNOB (ATT)	
255	3C		K25-1790-02	PUSH KNOB (PRESET)	
256	3C	✻	K29-7200-03	KNOB ASSY (VOL)	
257	3C	✻	K28-0104-03	KEY TOP (VOL)	M1M3
257	3C	✻	K28-0115-03	KEY TOP (VOL)	K1M2
259	3C	✻	K28-0102-03	KNOB BASE (FM/AM)	
261	3C	✻	K28-0107-03	KEY TOP (FM/AM)	M1M3
261	3C	✻	K28-0113-03	KEY TOP (FM/AM)	K1M2
262	1C		N84-4016-48	PAN HEAD TAPTITE SCREW	
266	1C		N99-1757-05	SCREW SET	
A	2C		N24-3015-48	E TYPE RETAINING RING	
B	3C		N80-2006-48	PAN HEAD TAPTITE SCREW	
C	2C		N80-2008-43	PAN HEAD TAPTITE SCREW	
D	1D		N83-3005-48	PAN HEAD TAPTITE SCREW	
E	3D		N86-2610-48	BINDING HEAD TAPTITE SCREW	
269	1C		W01-1661-05	CARRYING CASE	K1
DME1	1D	✻	X92-5470-00	MECHANISM ASSY (DXM-6680W)	
SWITCH UNIT (X16-350x-xx)					
D31-33			B30-1567-05	LED (1608,RED)	K1
D34-36			B30-1533-05	LED (1608,PG)	M1M2M3
D37-39			B30-1567-05	LED (1608,RED)	K1
D40-42			B30-1533-05	LED (1608,PG)	M1M2M3
D43-45			B30-1567-05	LED (1608,RED)	K1
D46-48			B30-1533-05	LED (1608,PG)	M1M2M3
D49-51			B30-1567-05	LED (1608,RED)	K1
D52-54			B30-1533-05	LED (1608,PG)	M1M2M3
D61,62			B30-1533-05	LED (1608,PG)	M1M2M3
D61,62			B30-1567-05	LED (1608,RED)	K1
D63-65			B30-1533-05	LED (1608,PG)	M1M2M3
D70			B30-1567-05	LED (1608,RED)	
D97,98			B30-1567-05	LED (1608,RED)	K1
C10			CK73GB0J225K	CHIP C 2.2UF K	
C11,12			CK73GB1H103K	CHIP C 0.010UF K	
C15			CC73GCH1H470J	CHIP C 47PF J	
C21			CK73FB1A225K	CHIP C 2.2UF K	M1M2M3
J1			E59-0851-05	RECTANGULAR PLUG	
CP11			RK74HB1J103J	CHIP-COM 10K J 1/16W	
R11			RK73GB2A221J	CHIP R 220 J 1/10W	
R13-17			RK73GB2A221J	CHIP R 220 J 1/10W	
R18			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R19			RK73GB2A221J	CHIP R 220 J 1/10W	
R21			RK73GB2A104J	CHIP R 100K J 1/10W	M1M2M3
R22			RK73GB2A101J	CHIP R 100 J 1/10W	M1M2M3
R23			RK73GB2A104J	CHIP R 100K J 1/10W	K1
R31-34			RK73FB2B471J	CHIP R 470 J 1/8W	
R61			RK73EB2E621J	CHIP R 620 J 1/4W	M1M2M3
R61			RK73EB2E681J	CHIP R 680 J 1/4W	K1
R62			RK73EB2E621J	CHIP R 620 J 1/4W	M1M2M3
R62			RK73EB2E821J	CHIP R 820 J 1/4W	K1
R63			RK73EB2E681J	CHIP R 680 J 1/4W	
R70			RK73GB2A221J	CHIP R 220 J 1/10W	
R72			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R74			RK73GB2A4R7J	CHIP R 4.7 J 1/10W	
R75			RK73GB2A203J	CHIP R 20K J 1/10W	
R78			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R80-82			RK73PB2H470J	CHIP R 47 J 1/2W	
W1			R92-1252-05	CHIP R 0 OHM J 1/16W	M1M2M3

K1 : KDC-MP202 **M1** : KDC-MP333 **M2** : KDC-MP433 **M3** : KDC-MP333RC
(**E** : Europe **K** : North America **M** : Other Areas **W** : Without Europe)

⚠ Indicates safety critical components.

PARTS LIST

SWITCH UNIT (X16-350x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination
W2,3			R92-1252-05	CHIP R 0 OHM J 1/16W	K1
S12			S70-0106-05	TACT SWITCH	
S11			T99-0457-15	ROTARY ENCODER	
D71-77			UDZS5.6B	ZENER DIODE	
D78			DA204U	DIODE	
D96			UDZS5.6B	ZENER DIODE	M1M2M3
ED1		✻	HNR-03SS09T	FLUORESCENT INDICATOR TUBE	
IC1			LC75756W	MOS-IC	
IC3		✻	PNA4S22M02KW	ANALOGUE IC	M1M2M3
Q21			RT1P141U	TRANSISTOR	

CD PLAYER UNIT (X32-5860-00)

Ref. No.	Add	New	Parts No.	Description	Destination
C1,2			CK73GB1A105K	CHIP C 1.0UF K	
C3,4			CC73GCH1H681J	CHIP C 680PF J	
C5,6			CC73GCH1H680J	CHIP C 68PF J	
C7,8			CK73GB1H222K	CHIP C 2200PF K	
C9			CK73GB1H104K	CHIP C 0.10UF K	
C10			CK73FB0J106K	CHIP C 10UF K	
C11			CK73GB1H103K	CHIP C 0.010UF K	
C12			CK73GB1A105K	CHIP C 1.0UF K	
C20			CC73GCH1H391J	CHIP C 390PF J	
C21			CK73GB1H472K	CHIP C 4700PF K	
C22			CK73GB1H152K	CHIP C 1500PF K	
C23			CC73GCH1H391J	CHIP C 390PF J	
C24			CK73EB1A475K	CHIP C 4.7UF K	
C25			CK73FB0J106K	CHIP C 10UF K	
C30			CK73GB1H104K	CHIP C 0.10UF K	
C31			CK73GB1A105K	CHIP C 1.0UF K	
C32			CK73GB1H104K	CHIP C 0.10UF K	
C34			CK73FB0J475K	CHIP C 4.7UF K	
C35			CK73GB1H104K	CHIP C 0.10UF K	
C38-40			CK73GB1H104K	CHIP C 0.10UF K	
C41			CK73GB0J225K	CHIP C 2.2UF K	
C42			CK73GB1A105K	CHIP C 1.0UF K	
C43			C92-1792-05	ELECTRO 22UF 6.3WV	
C50			CK73GB1H104K	CHIP C 0.10UF K	
C51			CK73GB1H102K	CHIP C 1000PF K	
C52			CK73GB0J225K	CHIP C 2.2UF K	
C53,54			CK73GB0J475K	CHIP C 4.7UF K	
C55			CK73FB0J106K	CHIP C 10UF K	
C56,57			CK73GB1H104K	CHIP C 0.10UF K	
C58			CK73FB0J475K	CHIP C 4.7UF K	
C60			CK73GB0J225K	CHIP C 2.2UF K	
C61			CK73GB1H104K	CHIP C 0.10UF K	
C62			CK73FB0J475K	CHIP C 4.7UF K	
C63			CK73GB0J225K	CHIP C 2.2UF K	
C64			CK73GB1H152K	CHIP C 1500PF K	
C65,66			CK73GB1H102K	CHIP C 1000PF K	
C67			CK73GB1H152K	CHIP C 1500PF K	
C68			CK73GB1H103K	CHIP C 0.010UF K	
C69			CK73GB1H332K	CHIP C 3300PF K	
C70			CK73GB1H682K	CHIP C 6800PF K	
C71			CK73GB1H104K	CHIP C 0.10UF K	
C72			CK73GB1H103K	CHIP C 0.010UF K	
C73			CC73GCH1H120J	CHIP C 12PF J	
C74			CC73GCH1H060D	CHIP C 6.0PF D	
C75			CK73GB1H104K	CHIP C 0.10UF K	
C76			CC73GCH1H030C	CHIP C 3.0PF C	
C77			CC73GCH1H020C	CHIP C 2.0PF C	
C78			CK73GB0J225K	CHIP C 2.2UF K	
C79,80			CK73GB1H104K	CHIP C 0.10UF K	
C81,82			CC73GCH1H470J	CHIP C 47PF J	
C83			CK73GB1H103K	CHIP C 0.010UF K	
C85			CK73FB0J106K	CHIP C 10UF K	
C96			CK73GB0J475K	CHIP C 4.7UF K	
C100			CK73GB1C224K	CHIP C 0.22UF K	
C101			CK73GB1H103K	CHIP C 0.010UF K	
CN1			E41-2083-15	FLAT CABLE CONNECTOR	
CN2			E41-2297-05	FLAT CABLE CONNECTOR	
X1			L78-0862-05	RESONATOR (16.00MHZ)	
X2			L78-0851-05	RESONATOR (16.93MHZ)	
CP1			RK74GA1J101J	CHIP-COM 100 J 1/16W	
CP2			RK74GA1J472J	CHIP-COM 4.7K J 1/16W	
CP4,5			RK74GA1J101J	CHIP-COM 100 J 1/16W	
CP6,7			RK74HB1J103J	CHIP-COM 10K J 1/16W	
CP8-11			RK74HB1J101J	CHIP-COM 100 J 1/16W	
CP12			RK74GA1J101J	CHIP-COM 100 J 1/16W	
CP13			RK74GA1J103J	CHIP-COM 10K J 1/16W	
CP27			RK74GB1J472J	CHIP-COM 4.7K J 1/16W	
CP28			RK74GB1J103J	CHIP-COM 10K J 1/16W	
R1,2			RK73GH2A103D	CHIP R 10K D 1/10W	
R3,4			RK73GB2A272J	CHIP R 2.7K J 1/10W	
R5,6			RK73GB2A752J	CHIP R 7.5K J 1/10W	
R7,8			RK73GB2A333J	CHIP R 33K J 1/10W	
R9,10			RK73GH2A103D	CHIP R 10K D 1/10W	
R11,12			RK73GB2A331J	CHIP R 330 J 1/10W	
R14-16			RK73GB2A2R2J	CHIP R 2.2 J 1/10W	
R20			RK73GB2A123J	CHIP R 12K J 1/10W	
R21			RK73GB2A133J	CHIP R 13K J 1/10W	
R22,23			RK73GB2A123J	CHIP R 12K J 1/10W	
R24			RK73GB2A432J	CHIP R 4.3K J 1/10W	
R25			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R26			RK73GB2A183J	CHIP R 18K J 1/10W	
R27			RK73GB2A163J	CHIP R 16K J 1/10W	
R28			RK73GB2A133J	CHIP R 13K J 1/10W	
R29			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R30			RK73GB2A101J	CHIP R 100 J 1/10W	
R31			RK73GB2A133J	CHIP R 13K J 1/10W	
R40-44			RK73GB2A103J	CHIP R 10K J 1/10W	
R48			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R50-52			RK73GB2A103J	CHIP R 10K J 1/10W	
R55			RK73GB2A103J	CHIP R 10K J 1/10W	
R56			RK73GB2A101J	CHIP R 100 J 1/10W	
R57			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R70			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R71			RK73GB2A101J	CHIP R 100 J 1/10W	

K1 : KDC-MP202 **M1** : KDC-MP333 **M2** : KDC-MP433 **M3** : KDC-MP333RC
(**E** : Europe **K** : North America **M** : Other Areas **W** : Without Europe)

⚠ Indicates safety critical components.

PARTS LIST

CD PLAYER UNIT (X32-5860-00)

Ref. No.	Add	New	Parts No.	Description				Destination
R72			RK73GB2A333J	CHIP R	33K	J	1/10W	
R74			RK73GB2A333J	CHIP R	33K	J	1/10W	
R75			RK73GB2A750J	CHIP R	75	J	1/10W	
R78			RK73GB2A103J	CHIP R	10K	J	1/10W	
R79			RK73GB2A333J	CHIP R	33K	J	1/10W	
R80,81			RK73GB2A682J	CHIP R	6.8K	J	1/10W	
R88			RK73GB2A472J	CHIP R	4.7K	J	1/10W	
R89			RK73GB2A104J	CHIP R	100K	J	1/10W	
R90			RK73GB2A4R7J	CHIP R	4.7	J	1/10W	
R91			RK73GB2A910J	CHIP R	91	J	1/10W	
R92			RK73GB2A225J	CHIP R	2.2M	J	1/10W	
R93			RK73GB2A103J	CHIP R	10K	J	1/10W	
R100			RK73GB2A470J	CHIP R	47	J	1/10W	
R101			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R102			RK73GB2A272J	CHIP R	2.7K	J	1/10W	
R103,104			RK73GB2A223J	CHIP R	22K	J	1/10W	
R112,113			RK73GB2A100J	CHIP R	10	J	1/10W	
R150			RK73GB2A103J	CHIP R	10K	J	1/10W	
R151			RK73GB2A2R2J	CHIP R	2.2	J	1/10W	
R152			RK73EB2E3R3J	CHIP R	3.3	J	1/4W	
W1			R92-1252-05	CHIP R	0 OHM	J	1/16W	
W20,21			R92-1252-05	CHIP R	0 OHM	J	1/16W	
S1,2			S68-0863-05	PUSH SWITCH				
S3			S68-0862-05	PUSH SWITCH				
D1			DAP202U	DIODE				
IC1			TAR5S33-F	ANALOGUE IC				
IC2			NJM4580V-ZB	ANALOGUE IC				
IC3			BA5824FP	ANALOGUE IC				
IC4		✻	703030BYGCJ21A	MICROCONTROLLER IC				
IC5			XC6219B332MR	ANALOGUE IC				
IC6			BA33BC0WFP	ANALOGUE IC				
IC7		✻	UPD63763CGJ	MOS-IC				
IC11			TC7SET32FU-F	MOS-IC				
Q1			2SA1576A	TRANSISTOR				
Q4			2SB0970	TRANSISTOR				
Q5			DTA143XUA	DIGITAL TRANSISTOR				
Q6			DTC143XUA	DIGITAL TRANSISTOR				
Q7			DTA143XUA	DIGITAL TRANSISTOR				
Q8			DTC143XUA	DIGITAL TRANSISTOR				
ELECTRIC UNIT (X34-409x-xx)								
D301			B30-1567-05	LED (1608,RED)				K1
C1			C90-5683-05	ELECTRO	3300UF		16WV	
C2			CD04AB1C220M	ELECTRO	22UF		16WV	
C4			CK73GB1H104K	CHIP C	0.10UF		K	
C5			CK73GB1H104K	CHIP C	0.10UF		K	M1M2M3
C6			CK73GB1H104K	CHIP C	0.10UF		K	
C7			CK73GB1A105K	CHIP C	1.0UF		K	
C8			CK73FB1A225K	CHIP C	2.2UF		K	
C9			CK73GB1H104K	CHIP C	0.10UF		K	
C10		✻	CD04AB0J101M	ELECTRO	100UF		6.3WV	
C11,12			CD04AT1E101M	ELECTRO	100UF		25WV	
C97			CD04AB1C220M	ELECTRO	22UF		16WV	
C101,102			CK73GB1H103K	CHIP C	0.010UF		K	

Ref. No.	Add	New	Parts No.	Description				Destination
C201			CC73GCH1H180J	CHIP C	18PF	J		
C202			CC73GCH1H220J	CHIP C	22PF	J		
C203			CK73GB1H104K	CHIP C	0.10UF	K		
C204			CK73GB1H102K	CHIP C	1000PF	K		
C301,302			CD04AB1HR47M	ELECTRO	0.47UF	50WV		
C410			CK73GB1A105K	CHIP C	1.0UF	K		
C501			CC73GCH1H100D	CHIP C	10PF	D		
C502			CK73GB1H152K	CHIP C	1500PF	K		
C503			CK73GB1H104K	CHIP C	0.10UF	K		
C504			CK73GB1H103K	CHIP C	0.010UF	K		
C505			CD04AC1V4R7M	ELECTRO	4.7UF	35WV		
C506			CK73GB1H104K	CHIP C	0.10UF	K		
C507		✻	CD04AC1A330M	ELECTRO	33UF	10WV		
C508		✻	CD04AC1C220M	ELECTRO	22UF	16WV		
C509			CC73GCH1H680J	CHIP C	68PF	J		
C510			CC73GCH1H101J	CHIP C	100PF	J		
C511			CK73GB1H103K	CHIP C	0.010UF	K		
C512			CD04AC1V4R7M	ELECTRO	4.7UF	35WV		
C513,514			CK73GB1H103K	CHIP C	0.010UF	K		
C515			CK73FB1C105K	CHIP C	1.0UF	K		
C521			CK73GB1H104K	CHIP C	0.10UF	K		
C522			CC73GCH1H330J	CHIP C	33PF	J		
C523			CC73GCH1H270J	CHIP C	27PF	J		
C524			CC73GCH1H101J	CHIP C	100PF	J		
C525			CK73GB1H103K	CHIP C	0.010UF	K		
C527			CC73GCH1H050C	CHIP C	5.0PF	C		
C528			CK73GB1H102K	CHIP C	1000PF	K		
C529			CC73GCH1H060D	CHIP C	6.0PF	D		
C531			CC73GCH1H040C	CHIP C	4.0PF	C		
C532			CK73FB1C105K	CHIP C	1.0UF	K		
C533		✻	CD04AC1A330M	ELECTRO	33UF	10WV		
C534,535			CK73GB1H103K	CHIP C	0.010UF	K		
C536			CC73GCH1H020C	CHIP C	2.0PF	C		
C537			CC73GCH1H040C	CHIP C	4.0PF	C		
C538,539			CC73GCH1H080D	CHIP C	8.0PF	D		
C541			CC73GCH1H040C	CHIP C	4.0PF	C		
C542			CC73GCH1H220J	CHIP C	22PF	J		
C543			CC73GCH1H680J	CHIP C	68PF	J		
C544			CC73GCH1H150J	CHIP C	15PF	J		
C545			CK73GB1H682K	CHIP C	6800PF	K		
C546			CK73GB1H103K	CHIP C	0.010UF	K		
C547		✻	CD04AC1C100M	ELECTRO	10UF	16WV		
C548		✻	CD04AB1C101M	ELECTRO	100UF	16WV		
C549			CK73GB1H102K	CHIP C	1000PF	K		
C550			CK73GB1H333K	CHIP C	0.033UF	K		
C551			CK73GB1H223K	CHIP C	0.022UF	K		
C552			CK73GB1H222K	CHIP C	2200PF	K		
C553,554			CK73GB1H103K	CHIP C	0.010UF	K		
C555			CK73FB1C105K	CHIP C	1.0UF	K		
C556,557			CK73GB1H104K	CHIP C	0.10UF	K		
C558		✻	CD04AC1H010M	ELECTRO	1.0UF	50WV		
C559			CK73GB1H102K	CHIP C	1000PF	K		
C560		✻	CD04AB1V100M	ELECTRO	10UF	35WV		
C561			CC73GCH1H101J	CHIP C	100PF	J		
C563			CD04AB1C470M	ELECTRO	47UF	16WV		

K1 : KDC-MP202 **M1** : KDC-MP333 **M2** : KDC-MP433 **M3** : KDC-MP333RC
(**E** : Europe **K** : North America **M** : Other Areas **W** : Without Europe)

⚠ Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-409x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination
C565			CK73GB1A474K	CHIP C 0.47UF K	
C566		✻	CD04AC1HR47M	ELECTRO 0.47UF 50WV	
C567			CC73GCH1H821J	CHIP C 820PF J	
C571			CC73GCH1H020C	CHIP C 2.0PF C	
C572			CK73GB1H104K	CHIP C 0.10UF K	
C573			CK73GB1H103K	CHIP C 0.010UF K	
C574			CK73GB1H104K	CHIP C 0.10UF K	
C575			CD04AC1V4R7M	ELECTRO 4.7UF 35WV	
C576			CK73GB1H103K	CHIP C 0.010UF K	
C577			CK73GB1H104K	CHIP C 0.10UF K	
C578			CK73GB1H103K	CHIP C 0.010UF K	
C579			CK73GB1A474K	CHIP C 0.47UF K	
C580			CK73GB1H104K	CHIP C 0.10UF K	
C601			CD04AB1H010M	ELECTRO 1.0UF 50WV	
C602-605			C90-5684-05	NP-ELECT 0.22UF 50WV	
C606			CK73GB1A105K	CHIP C 1.0UF K	
C607			C90-5663-05	ELECTRO 1UF 50WV	
C608		✻	CD04AB1V100M	ELECTRO 10UF 35WV	
C701		✻	CD04AC1C100M	ELECTRO 10UF 16WV	
C702		✻	CD04AB1V100M	ELECTRO 10UF 35WV	
C801		✻	CD04AB1V100M	ELECTRO 10UF 35WV	
C901,902		✻	CD04AB1C101M	ELECTRO 100UF 16WV	
CN2		✻	E41-2581-05	FLAT CABLE CONNECTOR	
⚠ J1			E58-0991-05	RECTANGULAR RECEPTACLE	
J2		✻	E04-0332-05	RF COAXIAL CABLE RECEPTACLE	
J5			E58-0992-05	RECTANGULAR RECEPTACLE	
J6			E63-0898-05	PIN JACK	
CF51-53			L72-0805-05	CERAMIC FILTER	
CF54			L72-0804-05	CERAMIC FILTER	
L1			L33-1988-05	CHOKE COIL ASSY	
L2			L33-1978-05	CHOKE COIL	
L61			L40-4795-91	SMALL FIXED INDUCTOR (4.7UH,J)	
L401			L40-4795-91	SMALL FIXED INDUCTOR (4.7UH,J)	
L500			L33-2260-05	CHOKE COIL	
L501			L40-6891-58	SMALL FIXED INDUCTOR (6.8UH)	
L502			L40-3301-58	SMALL FIXED INDUCTOR (33UH)	
L503			L40-1021-56	SMALL FIXED INDUCTOR (1MH)	
L504			L40-1011-58	SMALL FIXED INDUCTOR (100UH)	
L505			L31-0979-05	FM-RF COIL (ANT)	
L506			L31-0981-05	FM-RF COIL (RF)	
L507			L32-0945-05	FM OSCILLATING COIL (VCO)	
L508			L30-0779-05	FM IFT	
L509			L30-0781-05	AM IFT	
L510-515			L40-4795-91	SMALL FIXED INDUCTOR (4.7UH,J)	
X1			L78-0879-05	RESONATOR (10.0MHZ)	
X2		✻	L77-2920-05	CRYSTAL RESONATOR (32.768KHZ)	
X501			L77-2077-05	CRYSTAL RESONATOR (10.25MHZ)	
F	2D		N80-3010-48	PAN HEAD TAPTITE SCREW	
G	2D		N83-3005-48	PAN HEAD TAPTITE SCREW	
H	2D		N83-3020-48	PAN HEAD TAPTITE SCREW	
J	2D		N86-2606-48	BINDING HEAD TAPTITE SCREW	
R1			RD14BB2C102J	RD 1.0K J 1/6W	
R4-7			RK73GB2A103J	CHIP R 10K J 1/10W	
R8			RK73FB2B681J	CHIP R 680 J 1/8W	

Ref. No.	Add	New	Parts No.	Description	Destination
R9			RK73GB2A103J	CHIP R 10K J 1/10W	
R10			RK73GB2A473J	CHIP R 47K J 1/10W	
R11-14		✻	RK73PB2H100J	CHIP R 10 J 1/2W	
R15			RD14DB2H100J	SMALL-RD 10 J 1/2W	
R33			RD14BB2C100J	RD 10 J 1/6W	
R51			RK73FB2B683J	CHIP R 68K J 1/8W	
R52			RK73GB2A393J	CHIP R 39K J 1/10W	
R53			RK73GB2A104J	CHIP R 100K J 1/10W	
R100			RK73GB2A272J	CHIP R 2.7K J 1/10W	
R101			RD14BB2C472J	RD 4.7K J 1/6W	
R102			RD14BB2C472J	RD 4.7K J 1/6W	M1M2M3
R103			RD14BB2C103J	RD 10K J 1/6W	
R104			RK73GB2A223J	CHIP R 22K J 1/10W	
R105			RK73GB2A473J	CHIP R 47K J 1/10W	
R106			RD14DB2H332J	SMALL-RD 3.3K J 1/2W	
R107			RD14BB2C333J	RD 33K J 1/6W	
R108			RK73GB2A103J	CHIP R 10K J 1/10W	
R109			RD14BB2C223J	RD 22K J 1/6W	
R112			RD14BB2C203J	RD 20K J 1/6W	
R114-117			RK73GB2A103J	CHIP R 10K J 1/10W	
R201,202			RK73GB2A103J	CHIP R 10K J 1/10W	
R203			RK73GB2A473J	CHIP R 47K J 1/10W	
R204,205			RK73GB2A223J	CHIP R 22K J 1/10W	
R206			RK73GB2A223J	CHIP R 22K J 1/10W	K1
R207			RK73GB2A223J	CHIP R 22K J 1/10W	M1M2M3
R208			RK73GB2A223J	CHIP R 22K J 1/10W	
R210			RK73GB2A223J	CHIP R 22K J 1/10W	K1
R211			RK73GB2A223J	CHIP R 22K J 1/10W	M1M2M3
R212,213			RD14BB2C471J	RD 470 J 1/6W	
R214			RK73GB2A473J	CHIP R 47K J 1/10W	
R215			RD14BB2C473J	RD 47K J 1/6W	
R217			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R218			RD14BB2C473J	RD 47K J 1/6W	
R219			RD14BB2C472J	RD 4.7K J 1/6W	
R220			RK73GB2A223J	CHIP R 22K J 1/10W	
R225			RK73GB2A103J	CHIP R 10K J 1/10W	
R226			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R227			RK73GB2A473J	CHIP R 47K J 1/10W	
R228			RD14BB2C473J	RD 47K J 1/6W	
R229			RK73GB2A123J	CHIP R 12K J 1/10W	
R301			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R302			RK73GB2A101J	CHIP R 100 J 1/10W	
R303			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R304			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R307-309			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R310			RK73GB2A104J	CHIP R 100K J 1/10W	
R312			RD14BB2C472J	RD 4.7K J 1/6W	
R314			RD14BB2C472J	RD 4.7K J 1/6W	
R315			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R316			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R317			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R318			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R319			RD14BB2C241J	RD 240 J 1/6W	K1
R320,321			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R402			RD14BB2C222J	RD 2.2K J 1/6W	

K1 : KDC-MP202 **M1** : KDC-MP333 **M2** : KDC-MP433 **M3** : KDC-MP333RC
(**E** : Europe **K** : North America **M** : Other Areas **W** : Without Europe)

⚠ Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-409x-xx)

Ref. No.	Add	New	Parts No.	Description			Destination
R403			RD14BB2C102J	RD	1.0K	J 1/6W	
R404,405			RD14BB2C222J	RD	2.2K	J 1/6W	
R406			RD14BB2C104J	RD	100K	J 1/6W	
R407-409			RD14BB2C222J	RD	2.2K	J 1/6W	
R410			RD14BB2C102J	RD	1.0K	J 1/6W	
R411			RD14BB2C225J	RD	2.2M	J 1/6W	
R412			RD14BB2C222J	RD	2.2K	J 1/6W	
R413			RD14BB2C474J	RD	470K	J 1/6W	
R414			RD14BB2C102J	RD	1.0K	J 1/6W	
R415			RD14BB2C474J	RD	470K	J 1/6W	
R501			RK73GB2A682J	CHIP R	6.8K	J 1/10W	
R502			RK73GB2A222J	CHIP R	2.2K	J 1/10W	
R503			RK73EB2E222J	CHIP R	2.2K	J 1/4W	
R504			RK73GB2A102J	CHIP R	1.0K	J 1/10W	
R505			RK73GB2A105J	CHIP R	1.0M	J 1/10W	
R506			RK73GB2A102J	CHIP R	1.0K	J 1/10W	
R521-524			RK73GB2A104J	CHIP R	100K	J 1/10W	
R525			RK73GB2A821J	CHIP R	820	J 1/10W	
R526			RK73GB2A562J	CHIP R	5.6K	J 1/10W	
R527			RK73GB2A104J	CHIP R	100K	J 1/10W	
R528			RD14BB2C104J	RD	100K	J 1/6W	
R541			RK73GB2A562J	CHIP R	5.6K	J 1/10W	
R542			RK73GB2A222J	CHIP R	2.2K	J 1/10W	
R543			RK73GB2A220J	CHIP R	22	J 1/10W	
R544			RK73GB2A432J	CHIP R	4.3K	J 1/10W	
R545			RK73GB2A333J	CHIP R	33K	J 1/10W	
R546			RK73GB2A104J	CHIP R	100K	J 1/10W	
R547,548			RK73GB2A471J	CHIP R	470	J 1/10W	
R549			RD14BB2C473J	RD	47K	J 1/6W	
R561			RK73GB2A272J	CHIP R	2.7K	J 1/10W	
R581			RK73GB2A102J	CHIP R	1.0K	J 1/10W	
R582			RD14BB2C1R0J	RD	1.0	J 1/6W	
R604			RK73GB2A154J	CHIP R	150K	J 1/10W	
R606			RK73GB2A331J	CHIP R	330	J 1/10W	
R607			RK73GB2A154J	CHIP R	150K	J 1/10W	
R608			RK73GB2A103J	CHIP R	10K	J 1/10W	M1M2M3
R608			RK73GB2A752J	CHIP R	7.5K	J 1/10W	M2
R609			RK73GB2A432J	CHIP R	4.3K	J 1/10W	
R610			RK73GB2A100J	CHIP R	10	J 1/10W	
R701,702			RK73GB2A331J	CHIP R	330	J 1/10W	
R703,704			RD14BB2C223J	RD	22K	J 1/6W	
R705,706			RD14BB2C181J	RD	180	J 1/6W	
R901,902			RK73GB2A334J	CHIP R	330K	J 1/10W	
R903			RK73GB2A153J	CHIP R	15K	J 1/10W	
R904			RK73GB2A223J	CHIP R	22K	J 1/10W	
R905,906			RK73GB2A104J	CHIP R	100K	J 1/10W	
R907-914			RD14BB2C104J	RD	100K	J 1/6W	
R915			RK73GB2A104J	CHIP R	100K	J 1/10W	
R952,953			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R955,956			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R959			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R960			RK73EB2E000J	CHIP R	0.0	J 1/4W	M1M2M3
R962			RK73EB2E000J	CHIP R	0.0	J 1/4W	
R963			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R964			RK73EB2E000J	CHIP R	0.0	J 1/4W	

Ref. No.	Add	New	Parts No.	Description			Destination
R965			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R966			RK73EB2E000J	CHIP R	0.0	J 1/4W	
R967			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R970			RK73EB2E000J	CHIP R	0.0	J 1/4W	
R971			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R972			RK73EB2E000J	CHIP R	0.0	J 1/4W	
R973-978			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R980,981			RK73GB2A000J	CHIP R	0.0	J 1/10W	
D1			S2V60✻A	DIODE			
D2			MTZJ8.2B	ZENER DIODE			
D3		✻	1SR139-400T64	DIODE			
D4			1SS133	DIODE			
D5			1SS133	DIODE			M1M2M3
D6			MTZJ12B	ZENER DIODE			
D52			MTZJ6.8B	ZENER DIODE			
D55			1SS133	DIODE			
D101,102			1SR154-400	DIODE			
D103		✻	1SR139-400T64	DIODE			M1M2M3
D104			1SR154-400	DIODE			M1M2M3
D105			MTZJ4.7B	ZENER DIODE			
D106,107			MTZJ6.8B	ZENER DIODE			
D110-112			1SS133	DIODE			
D501			IMSA-6802-E	SURGE ABSORBER			
D502,503			RN739F	DIODE			
D504-506			KV1720STL-G	VARIABLE CAPACITANCE DIODE			
D508,509			MTZJ6.8B	ZENER DIODE			
D510			1SS133	DIODE			
D610			1SS133	DIODE			
D901			MTZJ4.7B	ZENER DIODE			
IC1		✻	30302MAPA12FP	MICROCONTROLLER IC			
IC3			BD4912-V4	ANALOGUE IC			
IC8			S-80836CNNB-J	MOS-IC			
IC10			E-TDA7513T	ANALOGUE IC			
IC11		✻	M24C04-WDW6TP	ROM IC			
IC14			TB2903HQ	ANALOGUE IC			M2
IC14			TB2904HQ	ANALOGUE IC			M1M2M3
Q1			UMC2N	TRANSISTOR			
Q2			2SB1565	TRANSISTOR			
Q3			2SC4155A(Q,R,S	TRANSISTOR			
Q4			UMC2N	TRANSISTOR			M1M2M3
Q5			UMC2N	TRANSISTOR			
Q6			2SB1565	TRANSISTOR			
Q7			2SC4155A(Q,R,S	TRANSISTOR			
Q8			2SA1603A	TRANSISTOR			
Q9			RT1N241M	TRANSISTOR			
Q51			2SC4155A(Q,R,S	TRANSISTOR			
Q101			2SC4155A(Q,R,S	TRANSISTOR			
Q103			2SC4155A(Q,R,S	TRANSISTOR			
Q104,105			RT1N441M	TRANSISTOR			
Q301			RT1N144M	TRANSISTOR			K1
Q401			RT1P144M	TRANSISTOR			
Q501			HN3G01J(BL)-F	TRANSISTOR			
Q502			3SK126-F	DUAL FET			
Q701			RT1P241M	TRANSISTOR			

K1 : KDC-MP202 **M1** : KDC-MP333 **M2** : KDC-MP433 **M3** : KDC-MP333RC
(**E** : Europe **K** : North America **M** : Other Areas **W** : Without Europe)

⚠ Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-409x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination
Q702,703			RT1N430M	TRANSISTOR	
Q901			2SC4155A(Q,R,S	TRANSISTOR	
Q902,903			2SA1603A	TRANSISTOR	
TH1			PRF18BE471QS2	POSITIVE RESISTOR	
MECHANISM ASSY (X92-5470-00)					
2	1B		A10-4827-32	CHASSIS	
5	1B		D10-4576-83	ARM ASSY	
8	2A		D10-4579-23	LEVER ASSY	
10	2A		D10-4581-13	ARM	
11	2A		D10-4582-13	ARM	
12	3A		D10-4583-03	ARM	
13	3A		D10-4584-03	ARM	
14	3B		D10-4585-03	ARM	
15	2A		D10-4586-13	SLIDER	
16	3B		D10-4587-52	SLIDER	
17	2B		D10-4588-13	SLIDER	
18	2B		D10-4595-04	ARM	
19	2B		D10-4596-24	ARM	
22	2A		D13-2151-04	GEAR	
23	2B		D13-2152-04	GEAR	
24	3B		D13-2153-04	GEAR	
25	3B		D13-2154-04	GEAR	
26	3B		D13-2155-04	WORM	
27	2B		D13-2156-14	GEAR	
28	3B		D13-2157-04	GEAR	
29	2B		D13-2158-04	GEAR	
30	2B		D13-2168-04	GEAR	
31	3B		D13-2171-04	GEAR	
32	1B		D13-2381-13	RACK (GEAR)	
33	2A		D14-0759-04	ROLLER	
35	2B		D21-2382-04	SHAFT	
36	1A		D23-0954-04	RETAINER	
37	1B		D39-0246-05	DAMPER	
38	2B		G01-3072-04	EXTENSION SPRING	
39	2A		G01-3073-04	TORSION COIL SPRING	
40	2A		G01-3074-04	EXTENSION SPRING	
41	1B		G01-3075-24	EXTENSION SPRING	
42	2A		G01-3076-04	EXTENSION SPRING	
43	1B		G01-3077-14	EXTENSION SPRING	
44	2B		G02-1399-04	FLAT SPRING	
45	2B		G02-1408-04	FLAT SPRING	
46	2A		G13-1258-04	CUSHION	
51	1A		J21-9676-32	MOUNTING HARDWARE	
52	3B		J21-9677-22	MOUNTING HARDWARE	
53	1B		J21-9678-13	MOUNTING HARDWARE	
55	1A		J90-1001-11	GUIDE	
56	1B		J90-1023-03	GUIDE	
DFPC1	3A		J84-0141-05	FLEXIBLE PRINTED WIRING BOARD	
A	2B	✻	N09-4460-15	TAPTITE SCREW (OVAL P TAPTIT)	
B	1B		N09-6317-05	TAPTITE SCREW (M1.6X6.0)	
C	2B	✻	N09-6004-15	MACHINE SCREW (M1.7X2.5)	
E	2B	✻	N09-6007-15	MACHINE SCREW (PAN M2X2)	
F	1A	✻	N09-6051-15	TAPTITE SCREW (BIND P 2X5)	

Ref. No.	Add	New	Parts No.	Description	Destination
G	2A		N19-2163-04	FLAT WASHER	
H	1B		N39-2020-46	PAN HEAD MACHINE SCREW	
J	1B	✻	N09-6108-15	MACHINE SCREW (M2X3.5)	
K	3B	✻	N09-6155-15	SEMS (TAPTITE SCREW) (PT2X6)	
DM1	3B		T42-1066-14	DC MOTOR (SPINDLE)	
DM2	2B		T42-1067-14	DC MOTOR (LOADING)	
DPU1	2B		X93-2130-00	OPTICAL PICKUP ASSY	

K1 : KDC-MP202 **M1** : KDC-MP333 **M2** : KDC-MP433 **M3** : KDC-MP333RC
(**E** : Europe **K** : North America **M** : Other Areas **W** : Without Europe)

⚠ Indicates safety critical components.