EXPLODED VIEW

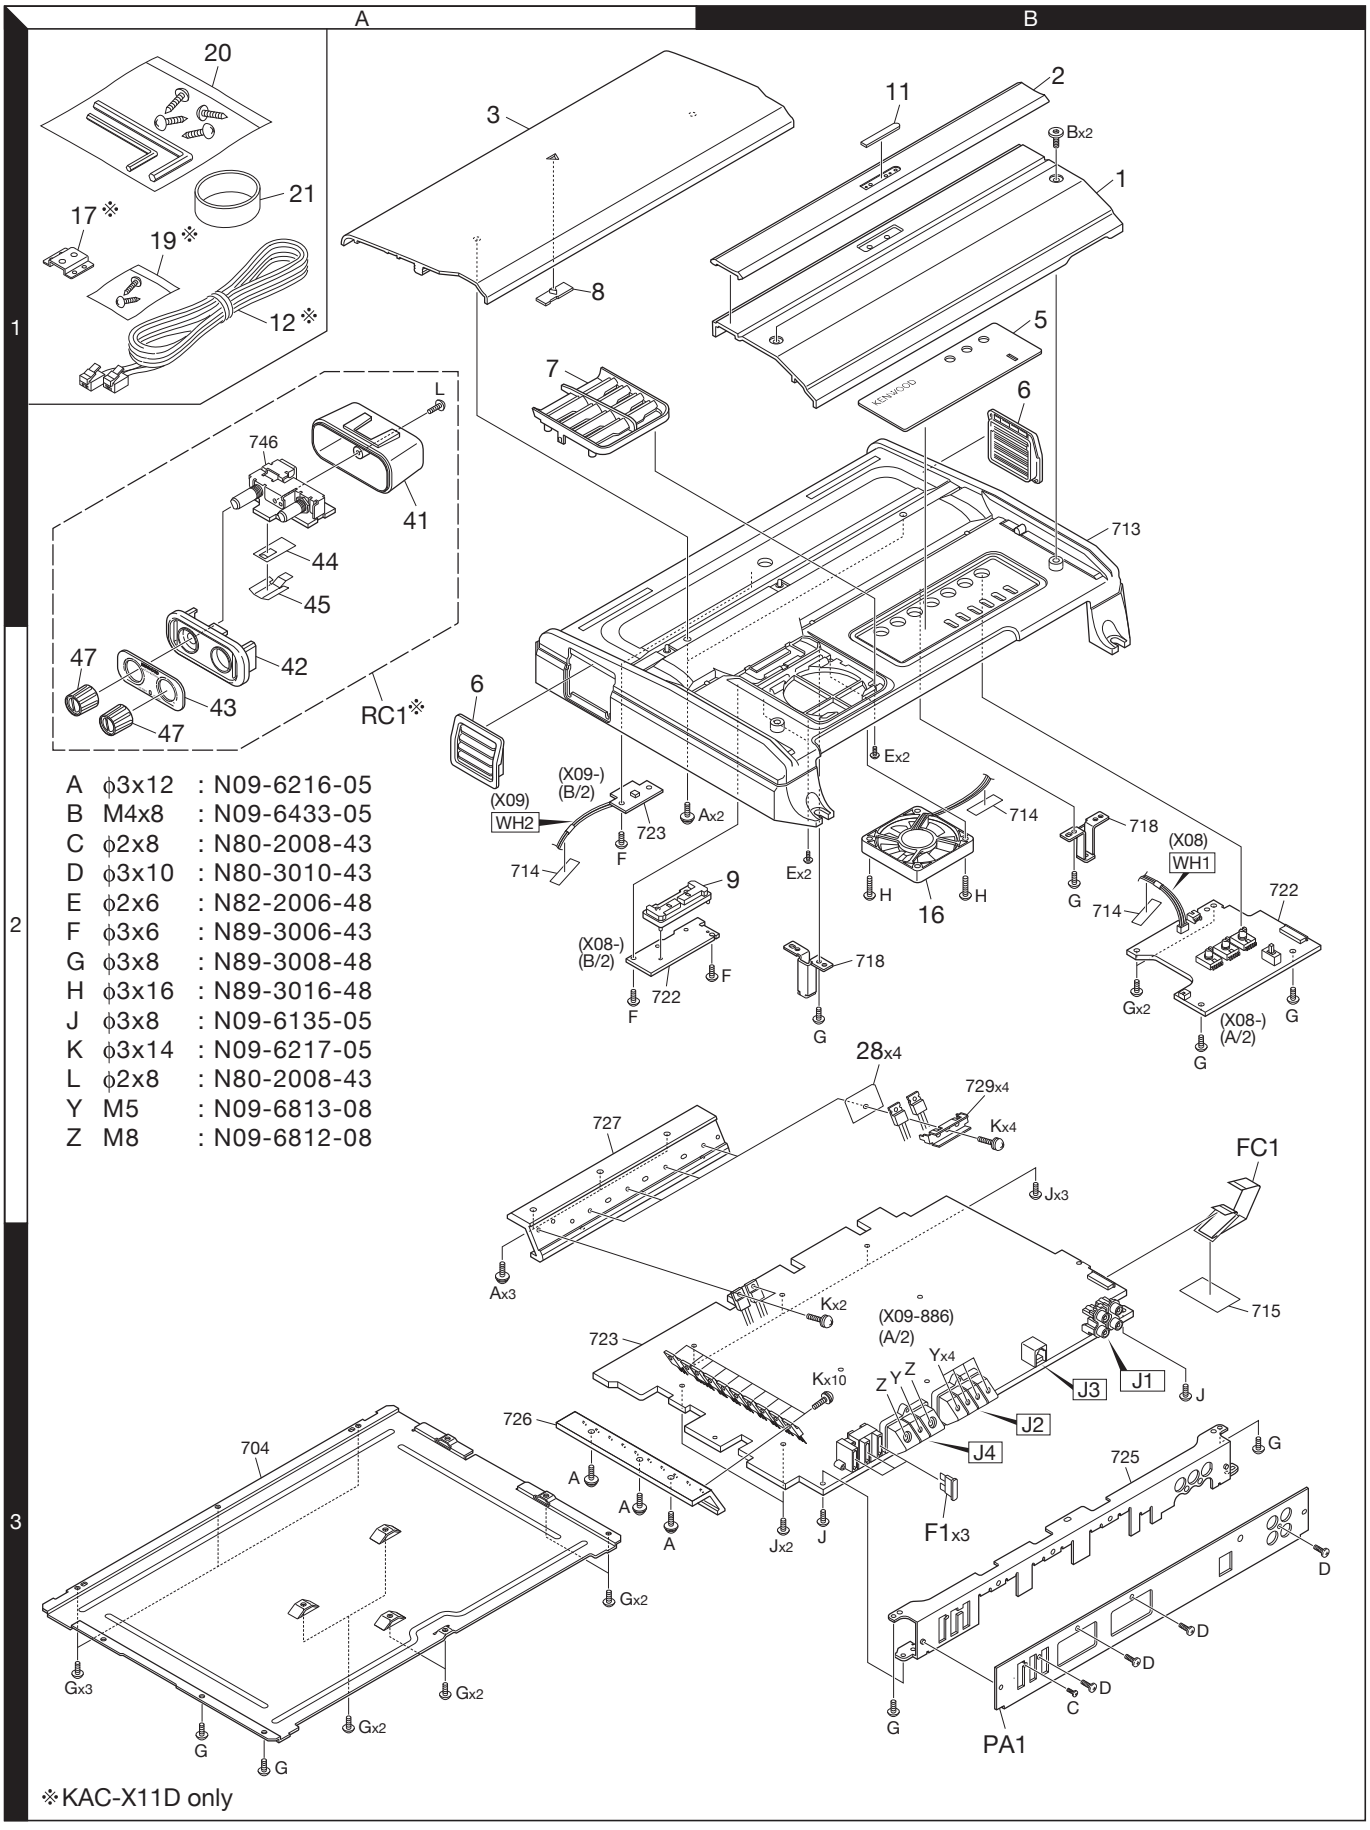

A	ϕ3x12	:	N09-6216-05
B	M4x8	:	N09-6433-05
C	ϕ2x8	:	N80-2008-43
D	ϕ3x10	:	N80-3010-43
E	ϕ2x6	:	N82-2006-48
F	ϕ3x6	:	N89-3006-43
G	ϕ3x8	:	N89-3008-48
H	ϕ3x16	:	N89-3016-48
J	ϕ3x8	:	N09-6135-05
K	ϕ3x14	:	N09-6217-05
L	ϕ2x8	:	N80-2008-43
Y	M5	:	N09-6813-08
Z	M8	:	N09-6812-08

Parts with the exploded numbers larger than 700 are not supplied.

KAC-X11D/X1200M

PARTS LIST

✻ New parts
Parts without **Parts No.** are not supplied.
Les articles non mentionnes dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

Ref. No.	Add	New	Parts No.	Description	Destination
KAC-X11D/X1200M					
1	1B	✻	A21-6696-01	DRESSING PANEL	K
1	1B	✻	A21-6697-01	DRESSING PANEL	M1
2	1B	✻	A21-6701-02	DRESSING PANEL	
3	1A	✻	A21-6708-01	DRESSING PANEL	
PA1	3B	✻	A64-4729-02	PANEL	
5	1B	✻	B03-5105-02	DRESSING PLATE	K
5	1B	✻	B03-5106-02	DRESSING PLATE	M1
6	2A		B07-3197-02	ESCUTCHEON	
7	1A		B07-3208-12	ESCUTCHEON	
8	1A		B19-2424-04	LIGHTING BOARD	
9	2B	✻	B19-2524-03	LIGHTING BOARD	
11	1B		B43-0336-04	BADGE	
-		✻	B64-4197-00	INSTRUCTION MANUAL (ENG.FRE.SPA	K
-		✻	B64-4198-00	INSTRUCTION MANUAL (ENG.S-CHI.)	M1
12	1A		E30-6240-15	MODULAR CABLE	M1
FC1	2B	✻	E39-0942-05	FLAT CABLE	
16	2B		F09-2915-05	FAN	
F1	3B	✻	F52-0045-05	FUSE (BLADE TYPE) 30A	
-		✻	H54-4549-03	ITEM CARTON CASE	K
-		✻	H54-4550-03	ITEM CARTON CASE	M1
17	1A		J22-0301-14	MOUNTING HARDWARE	M1
19	1A	✻	N99-1766-15	SCREW SET	M1
20	1A	✻	N99-1833-05	SCREW & WRENCH KEY SET	
A	3A		N09-6216-05	TAPTITE SCREW (3X12)	
B	1B		N09-6433-05	DRESSED SCREW (M4X8)	
C	3B		N80-2008-43	PAN HEAD TAPTITE SCREW	
D	3B		N80-3010-43	PAN HEAD TAPTITE SCREW	
E	2B		N82-2006-48	BINDING HEAD TAPTITE SCREW	
F	2A		N89-3006-43	BINDING HEAD TAPTITE SCREW	
G	3A		N89-3008-48	BINDING HEAD TAPTITE SCREW	
H	2B		N89-3016-48	BINDING HEAD TAPTITE SCREW	
Y	3B	✻	N09-6813-08	SCREW (TERMINAL) M5	
Z	3B	✻	N09-6812-08	SCREW (TERMINAL) M8	
21	1A	✻	W01-1746-05	ACCESSORIES	
RC1	2A		X16-6000-10	SWITCH UNIT (REMOTE CONTROL)	M1
PREAMPLIFIER UNIT (X08-4500-10)					
D1 ,2			B30-1743-05	LED (RED LED)	
C1 -3			CC73GCH1H101J	CHIP C 100PF J	
C5			CD04AS1V100M	ELECTRO 10UF 35WV	
C6 ,7			CK73GB1H103K	CHIP C 0.010UF K	
C12			CK73FB1C684K	CHIP C 0.68UF K	
C13			CK73FB1E474K	CHIP C 0.47UF K	
C14			CK73GB1C224K	CHIP C 0.22UF K	
C15			CK73GB1E154K	CHIP C 0.15UF K	
C16			CK73FB1E154K	CHIP C 0.15UF K	
C17			CK73GB1H223K	CHIP C 0.022UF K	
C18			CK73FB1E154K	CHIP C 0.15UF K	
C19			CK73GB1H333K	CHIP C 0.033UF K	
C21			CD04AS1V100M	ELECTRO 10UF 35WV	
C25			CK73GB1H103K	CHIP C 0.010UF K	
C901,902			CK73GB1H103K	CHIP C 0.010UF K	
C903,904			CK73GB1H683K	CHIP C 0.068UF K	
C907-910			CK73GB1H103K	CHIP C 0.010UF K	
CN1			E41-2278-05	FLAT CABLE CONNECTOR	
CN2			E41-1700-05	PIN ASSY	
CN3			E41-1699-05	PIN ASSY	
CN4			E41-1700-05	PIN ASSY	
WH1		✻	E39-1068-05	WIRING HARNESS	
R1 ,2			RK73GB2A431J	CHIP R 430 J 1/10W	
R3 ,4			RK73GB2A473J	CHIP R 47K J 1/10W	
R5 -8			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R9 ,10			RK73GB2A152J	CHIP R 1.5K J 1/10W	
R11 ,12			RK73GB2A203J	CHIP R 20K J 1/10W	
R13			RK73GB2A103J	CHIP R 10K J 1/10W	
R15 -18			RK73GB2A473J	CHIP R 47K J 1/10W	
R19 ,20			RK73GB2A223J	CHIP R 22K J 1/10W	
R28			RK73GB2A912J	CHIP R 9.1K J 1/10W	
R29 -31			RK73GB2A682J	CHIP R 6.8K J 1/10W	
R32			RK73GB2A623J	CHIP R 62K J 1/10W	
R34			RK73GB2A153J	CHIP R 15K J 1/10W	
R35			RK73GB2A332J	CHIP R 3.3K J 1/10W	
R36			RK73GB2A153J	CHIP R 15K J 1/10W	
R37			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R38			RK73GB2A153J	CHIP R 15K J 1/10W	
R39			RK73GB2A123J	CHIP R 12K J 1/10W	
R40			RK73GB2A153J	CHIP R 15K J 1/10W	
R41			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R44			RK73GB2A473J	CHIP R 47K J 1/10W	
R45			RK73GB2A102J	CHIP R 1.0K J 1/10W	
VR1			R31-0238-05	VARIABLE RESISTOR 10K	
VR3 ,4			R31-0241-05	VARIABLE RESISTOR 50K	
W51 ,52			RK73GB2A000J	CHIP R 0.0 J 1/10W	
W53 -56			R92-2053-05	CHIP R 0 OHM J 1/8W	
W57 -60			RK73GB2A000J	CHIP R 0.0 J 1/10W	
W61			R92-2053-05	CHIP R 0 OHM J 1/8W	
W62 ,63			RK73GB2A000J	CHIP R 0.0 J 1/10W	
W64 -67			R92-2053-05	CHIP R 0 OHM J 1/8W	
S1			S62-0879-05	SLIDE SWITCH	
D3			LM1MA142WA-G	DIODE	
IC1 ,2			BA4560RF	ANALOGUE IC	
IC6 ,7			BA4560RF	ANALOGUE IC	
AUDIO UNIT (X09-8860-10)					
D601			B30-1743-05	LED (RED LED)	
C1			CK73EB1E105K	CHIP C 1.0UF K	
C2			CD04AU1H100M	NP ELEC 10UF 50WV	
C3 -5			CD04BJ1H100M	ELECTRO 10UF 50WV	
C6 ,7			CK73GB1H103K	CHIP C 0.010UF K	
C10			CK73GB1H102K	CHIP C 1000PF K	
C11 ,12			CD04BJ1H470M	ELECTRO 47UF 50WV	
C13			CD04AU1H100M	NP ELEC 10UF 50WV	
C14 -17		✻	C90-6876-05	ELECTRO 4700UF 16WV	

K: X1200M (North America) **M1**: KAC-X11D (Other Areas)

⚠Indicates safety critical compo nents.

PARTS LIST

AUDIO UNIT (X09-8860-10)

Ref. No.	Add	New	Parts No.	Description			Destination
C18 ,19			CK73GB1H222K	CHIP C	2200PF	K	
C20 -23			C91-2293-05	CHIP C	1000PF	200WV	
C24 -27			CK73GB1H103K	CHIP C	0.010UF	K	
C28 ,29		✻	C90-6908-05	ELECTRO	4700UF	63WV	
C32			CD04BJ1H470M	ELECTRO	47UF	50WV	
C34 ,35			CK73GB1H103K	CHIP C	0.010UF	K	
C36 -40			CD04BJ1H470M	ELECTRO	47UF	50WV	
C41			CK73GB1H103K	CHIP C	0.010UF	K	
C42 ,43			CD04BJ1H100M	ELECTRO	10UF	50WV	
C44 ,45			CK73GB1H103K	CHIP C	0.010UF	K	
C101,102			CK73GB1H102K	CHIP C	1000PF	K	
C103,104			CD04BJ1V330M	ELECTRO	33UF	35WV	
C105,106			CC73GCH1H330J	CHIP C	33PF	J	
C107,108			CC73GCH1H470J	CHIP C	47PF	J	
C109,110			CC73GCH1H101J	CHIP C	100PF	J	
C111,112			CC73GCH1H330J	CHIP C	33PF	J	
C113,114			CC73GCH1H101J	CHIP C	100PF	J	
C115,116			CD04BJ1V330M	ELECTRO	33UF	35WV	
C117,118			CD04BJ1H100M	ELECTRO	10UF	50WV	
C119,120			CK73GB1H102K	CHIP C	1000PF	K	
C121			CD04BJ1H470M	ELECTRO	47UF	50WV	
C122			CD04BJ1H100M	ELECTRO	10UF	50WV	
C123			CK73GB1H104K	CHIP C	0.10UF	K	
C124			CC73GCH1H101J	CHIP C	100PF	J	
C125			CK73GB1H102K	CHIP C	1000PF	K	
C126			CC73GCH1H331J	CHIP C	330PF	J	
C127			CK73GB1H103K	CHIP C	0.010UF	K	
C128			CC73GCH1H470J	CHIP C	47PF	J	
C129			CC73GCH1H101J	CHIP C	100PF	J	
C130			C91-2292-05	CHIP C	0.047UF	200WV	
C131			CC73GCH1H470J	CHIP C	47PF	J	
C132			CC73GCH1H101J	CHIP C	100PF	J	
C133			C91-2292-05	CHIP C	0.047UF	200WV	
C134,135			C91-2295-05	CHIP C	1500PF	K	
C136,137		✻	CQ92FMH1H153J	MYLAR	0.H15UF	J	
C138,139			C91-2304-05	CHIP C	10UF	J	
C140			C91-2290-05	CHIP C	4.7UF	250WV	
C141,142		✻	CQ92FMH1H563J	MYLAR	0.H56UF	J	
C147			CD04BJ1H100M	ELECTRO	10UF	50WV	
C148,149			CK73GB1H473K	CHIP C	0.047UF	K	
C150-152			CD04BJ1H100M	ELECTRO	10UF	50WV	
C153			CC73GCH1H470J	CHIP C	47PF	J	
C154-156			CD04BJ1H100M	ELECTRO	10UF	50WV	
C157			CC73GCH1H220J	CHIP C	22PF	J	
C158,159			CK73GB1H103K	CHIP C	0.010UF	K	
C160			CD04BJ1H100M	ELECTRO	10UF	50WV	
C161,162			CK73FB1C105K	CHIP C	1.0UF	K	
C163,164			CK73GB1H103K	CHIP C	0.010UF	K	
C400			CK73FB1C684K	CHIP C	0.68UF	K	
C401			CK73GB1H473K	CHIP C	0.047UF	K	
C402,403			CD04BJ1A101M	ELECTRO	100UF	10WV	
C404			CK73GB1H104K	CHIP C	0.10UF	K	
C405,406			CK73GB1H103K	CHIP C	0.010UF	K	
C407			CK73GB1H102K	CHIP C	1000PF	K	
C408			CD04BJ1H100M	ELECTRO	10UF	50WV	

Ref. No.	Add	New	Parts No.	Description			Destination
C409,410			CK73GB1H103K	CHIP C	0.010UF	K	
C411			CK73GB1H473K	CHIP C	0.047UF	K	
C412-414			CK73GB1H103K	CHIP C	0.010UF	K	
C415			CK73GB1H104K	CHIP C	0.10UF	K	
C416,417			CK73GB1H103K	CHIP C	0.010UF	K	
C418			CD04BJ1E470M	ELECTRO	47UF	25WV	
C419,420			CK73GB1H472K	CHIP C	4700PF	K	
C421,422			CD04BJ1H100M	ELECTRO	10UF	50WV	
C423,424			CK73GB1H103K	CHIP C	0.010UF	K	
C425			CD04BJ1H100M	ELECTRO	10UF	50WV	
C426			CK73GB1H682K	CHIP C	6800PF	K	
C427			CK73GB1H473K	CHIP C	0.047UF	K	
C428			CK73GB1H103K	CHIP C	0.010UF	K	
C429			CD04BJ1H100M	ELECTRO	10UF	50WV	
C601			CK73GB1H103K	CHIP C	0.010UF	K	
C901,902			CK73GB1H103K	CHIP C	0.010UF	K	
C903			CC73GCH1H070D	CHIP C	7.0PF	D	
C904,905			CK73GB1H103K	CHIP C	0.010UF	K	
C906-909			CC73GCH1H101J	CHIP C	100PF	J	
C910-912			CK73GB1H103K	CHIP C	0.010UF	K	
C915-927			CK73GB1H103K	CHIP C	0.010UF	K	
C929			CK73GB1A105K	CHIP C	1.0UF	K	
C930			CK73GB1H103K	CHIP C	0.010UF	K	
C931,932			CK73GB1H104K	CHIP C	0.10UF	K	
C933,934			CK73GB1H332K	CHIP C	3300PF	K	
C935			CD04BJ1H100M	ELECTRO	10UF	50WV	
C936			CD04BJ1E470M	ELECTRO	47UF	25WV	
C937			CK73GB1H104K	CHIP C	0.10UF	K	
C938			CD04BJ1H100M	ELECTRO	10UF	50WV	
C939			CK73GB1H102K	CHIP C	1000PF	K	
C940			CK73GB1H103K	CHIP C	0.010UF	K	
C941			CK73GB1H102K	CHIP C	1000PF	K	
C942,943			CK73GB1H332K	CHIP C	3300PF	K	
C944			CK73GB1H103K	CHIP C	0.010UF	K	
CN1			E41-2278-05	FLAT CABLE CONNECTOR			
J1		✻	E63-0968-05	PIN JACK			
J2		✻	E70-0853-05	SCREW TERMINAL BOARD			
J3			E58-0966-15	RECTANGULAR RECEPTACLE			
J4		✻	E70-0854-05	SCREW TERMINAL BOARD			
WH2			E39-0710-05	WIRING HARNESS			
28	2B	✻	F20-2474-04	INSULATING SHEET			
CN2		✻	J13-0611-05	FUSE HOLDER			
⚠ CN3			J13-0602-05	FUSE HOLDER			
L1			L33-2443-05	CHOKE COIL			
L2 ,3		✻	L19-0832-05	TRANSFORMER FOR CONVERTER			
L4			L33-2443-05	CHOKE COIL			
L701		✻	L33-2539-05	CHOKE COIL			
L801		✻	L33-2539-05	CHOKE COIL			
J	3B		N09-6135-05	TAPTITE SCREW (3X8 BT)			
K	3B		N09-6217-05	TAPTITE SCREW (3X14)			
R1			RD14BB2C101J	RD	100	J 1/6W	
R2			RK73GB2A392J	CHIP R	3.9K	J 1/10W	

K: X1200M (North America) **M1**: KAC-X11D (Other Areas)

⚠Indicates safety critical components.

KAC-X11D/X1200M

PARTS LIST

AUDIO UNIT (X09-8860-10)

Ref. No.	Add	New	Parts No.	Description			Destination
R3			RK73GB2A332J	CHIP R	3.3K	J 1/10W	
R5			RK73GB2A473J	CHIP R	47K	J 1/10W	
R7			RK73GB2A392J	CHIP R	3.9K	J 1/10W	
R8			RK73GB2A152J	CHIP R	1.5K	J 1/10W	
R10			RK73GB2A103J	CHIP R	10K	J 1/10W	
R11			RK73GB2A472J	CHIP R	4.7K	J 1/10W	
R12			RK73GB2A333J	CHIP R	33K	J 1/10W	
R13			RK73GB2A472J	CHIP R	4.7K	J 1/10W	
R14			RK73GB2A222J	CHIP R	2.2K	J 1/10W	
R15			RK73EB2E333J	CHIP R	33K	J 1/4W	
R16			RK73EB2E203J	CHIP R	20K	J 1/4W	
R17			RK73GB2A333J	CHIP R	33K	J 1/10W	
R18			RK73GB2A683J	CHIP R	68K	J 1/10W	
R19			RK73GB2A101J	CHIP R	100	J 1/10W	
R20			RK73GB2A103J	CHIP R	10K	J 1/10W	
R22			RK73EB2E152J	CHIP R	1.5K	J 1/4W	
R24			RK73GB2A203J	CHIP R	20K	J 1/10W	
R25			RK73GB2A154J	CHIP R	150K	J 1/10W	
R26			RK73GB2A682J	CHIP R	6.8K	J 1/10W	
R27			RK73GB2A391J	CHIP R	390	J 1/10W	
R28			RK73GB2A113J	CHIP R	11K	J 1/10W	
R29			RK73GB2A101J	CHIP R	100	J 1/10W	
R30			RK73GB2A103J	CHIP R	10K	J 1/10W	
R31			RK73GB2A473J	CHIP R	47K	J 1/10W	
R32			RK73GB2A474J	CHIP R	470K	J 1/10W	
R33 ,34			RK73GB2A473J	CHIP R	47K	J 1/10W	
R35 ,36			RK73GB2A560J	CHIP R	56	J 1/10W	
R37 ,38			RK73GB2A152J	CHIP R	1.5K	J 1/10W	
R39 ,40			RK73GB2A472J	CHIP R	4.7K	J 1/10W	
R41 -48			RK73GB2A560J	CHIP R	56	J 1/10W	
R49 -54			RD14DB2H100J	SMALL-RD	10	J 1/2W	
R55 ,56			RK73EB2E473J	CHIP R	47K	J 1/4W	
R57			RK73GB2A102J	CHIP R	1.0K	J 1/10W	
R58			RK73GB2A221J	CHIP R	220	J 1/10W	
R59 ,60			RK73GB2A473J	CHIP R	47K	J 1/10W	
R61			RK73GB2A562J	CHIP R	5.6K	J 1/10W	
R62 -64			RK73GB2A470J	CHIP R	47	J 1/10W	
R65 -67			RK73GB2A4R7J	CHIP R	4.7	J 1/10W	
R68			RK73GB2A563J	CHIP R	56K	J 1/10W	
R69			RD14BB2C681J	RD	680	J 1/6W	
R70			RK73GB2A392J	CHIP R	3.9K	J 1/10W	
R71			RK73GB2A332J	CHIP R	3.3K	J 1/10W	
R72			RK73GB2A102J	CHIP R	1.0K	J 1/10W	
R73			RK73GB2A221J	CHIP R	220	J 1/10W	
R74 ,75			RK73GB2A682J	CHIP R	6.8K	J 1/10W	
R101,102			RD14BB2C102J	RD	1.0K	J 1/6W	
R103,104			RK73GB2A103J	CHIP R	10K	J 1/10W	
R105,106			RK73GB2A472J	CHIP R	4.7K	J 1/10W	
R107-110			RK73GB2A103J	CHIP R	10K	J 1/10W	
R111-118			RK73GH2A103D	CHIP R	10K	D 1/10W	
R119,120			RK73GB2A101J	CHIP R	100	J 1/10W	
R121			RK73GB2A103J	CHIP R	10K	J 1/10W	
R122			RK73GB2A474J	CHIP R	470K	J 1/10W	
R123			RK73GB2A104J	CHIP R	100K	J 1/10W	
R124			RK73GB2A154J	CHIP R	150K	J 1/10W	
R126-129			RK73GB2A473J	CHIP R	47K	J 1/10W	
R130,131			RD14BB2C102J	RD	1.0K	J 1/6W	
R132			RK73GB2A272J	CHIP R	2.7K	J 1/10W	
R133			RK73GB2A182J	CHIP R	1.8K	J 1/10W	
R134			RK73GB2A912J	CHIP R	9.1K	J 1/10W	
R135			RK73GB2A103J	CHIP R	10K	J 1/10W	
R136			RK73GB2A153J	CHIP R	15K	J 1/10W	
R137			RK73EB2E391J	CHIP R	390	J 1/4W	
R138			RK73GB2A512J	CHIP R	5.1K	J 1/10W	
R139			RK73GB2A102J	CHIP R	1.0K	J 1/10W	
R140			RK73GB2A471J	CHIP R	470	J 1/10W	
R141			RK73GB2A102J	CHIP R	1.0K	J 1/10W	
R142			RK73GB2A474J	CHIP R	470K	J 1/10W	
R143,144			RK73GB2A103J	CHIP R	10K	J 1/10W	
R145			RK73GB2A912J	CHIP R	9.1K	J 1/10W	
R146			RK73GB2A682J	CHIP R	6.8K	J 1/10W	
R147			RK73GB2A103J	CHIP R	10K	J 1/10W	
R148,149			RK73GB2A622J	CHIP R	6.2K	J 1/10W	
R150			RK73GB2A392J	CHIP R	3.9K	J 1/10W	
R151			RK73GB2A103J	CHIP R	10K	J 1/10W	
R152			RK73GB2A112J	CHIP R	1.1K	J 1/10W	
R153-156			RK73GB2A103J	CHIP R	10K	J 1/10W	
R157			RK73GB2A392J	CHIP R	3.9K	J 1/10W	
R158			RK73GB2A112J	CHIP R	1.1K	J 1/10W	
R159,160			RK73GB2A103J	CHIP R	10K	J 1/10W	
R161,162			RK73GB2A472J	CHIP R	4.7K	J 1/10W	
R163			RK73GB2A182J	CHIP R	1.8K	J 1/10W	
R164,165			RK73GB2A681J	CHIP R	680	J 1/10W	
R166			RK73GB2A112J	CHIP R	1.1K	J 1/10W	
R167			RK73GB2A471J	CHIP R	470	J 1/10W	
R168			RK73GB2A751J	CHIP R	750	J 1/10W	
R169			RK73GB2A510J	CHIP R	51	J 1/10W	
R170			RK73EB2E431J	CHIP R	430	J 1/4W	
R171-173			RK73EB2E221J	CHIP R	220	J 1/4W	
R174			RK73EB2E270J	CHIP R	27	J 1/4W	
R175,176			RK73GB2A473J	CHIP R	47K	J 1/10W	
R177-180			RK73EB2E100J	CHIP R	10	J 1/4W	
R181,182			RK73GB2A472J	CHIP R	4.7K	J 1/10W	
R183			RK73GB2A182J	CHIP R	1.8K	J 1/10W	
R184,185			RK73GB2A681J	CHIP R	680	J 1/10W	
R186			RK73GB2A112J	CHIP R	1.1K	J 1/10W	
R187			RK73GB2A471J	CHIP R	470	J 1/10W	
R188			RK73GB2A751J	CHIP R	750	J 1/10W	
R189			RK73GB2A510J	CHIP R	51	J 1/10W	
R190			RK73EB2E431J	CHIP R	430	J 1/4W	
R191-193			RK73EB2E221J	CHIP R	220	J 1/4W	
R194			RK73EB2E270J	CHIP R	27	J 1/4W	
R195,196			RK73GB2A473J	CHIP R	47K	J 1/10W	
R197-200			RK73EB2E100J	CHIP R	10	J 1/4W	
R201,202			RS14KB3D4R7JP	FL-PROOF RS	4.7	J 2W	
R203,204			RD14BB2C243J	RD	24K	J 1/6W	
R205,206			R92-5142-05	METAL PR	2.2	5W	
R207-210			RD14BB2C243J	RD	24K	J 1/6W	
R211,212			RD14BB2C123J	RD	12K	J 1/6W	
R213,214			RD14BB2C332J	RD	3.3K	J 1/6W	

K: X1200M (North America) **M1**: KAC-X11D (Other Areas)

⚠Indicates safety critical compo nents.

PARTS LIST

AUDIO UNIT (X09-8860-10)

Ref. No.	Add	New	Parts No.	Description			Destination
R215			RD14BB2C102J	RD	1.0K	J 1/6W	
R222			RK73GB2A153J	CHIP R	15K	J 1/10W	
R223,224			RK73GB2A472J	CHIP R	4.7K	J 1/10W	
R225			RK73GB2A393J	CHIP R	39K	J 1/10W	
R226			RK73GB2A152J	CHIP R	1.5K	J 1/10W	
R227			RK73GB2A103J	CHIP R	10K	J 1/10W	
R228			RK73GB2A303J	CHIP R	30K	J 1/10W	
R229			RK73GB2A223J	CHIP R	22K	J 1/10W	
R230			RK73GB2A302J	CHIP R	3.0K	J 1/10W	
R231			RK73GB2A223J	CHIP R	22K	J 1/10W	
R232,233			RK73EB2E181J	CHIP R	180	J 1/4W	
R236,237			RK73GB2A243J	CHIP R	24K	J 1/10W	
R238			RK73GB2A223J	CHIP R	22K	J 1/10W	
R239			RK73GB2A273J	CHIP R	27K	J 1/10W	
R240			RK73GB2A472J	CHIP R	4.7K	J 1/10W	
R241			RK73GB2A471J	CHIP R	470	J 1/10W	
R400			RK73GB2A224J	CHIP R	220K	J 1/10W	
R401			R92-5169-05	METAL PR	0.01	5W	
R402			RK73GB2A332J	CHIP R	3.3K	J 1/10W	
R403			RK73GB2A152J	CHIP R	1.5K	J 1/10W	
R404			RK73GB2A102J	CHIP R	1.0K	J 1/10W	
R405			RK73GB2A623J	CHIP R	62K	J 1/10W	
R406,407			R92-5161-05	METAL PR	0.02	5W	
R408			RK73GB2A332J	CHIP R	3.3K	J 1/10W	
R409			RK73GB2A242J	CHIP R	2.4K	J 1/10W	
R410			RK73EB2E223J	CHIP R	22K	J 1/4W	
R411			RK73GB2A242J	CHIP R	2.4K	J 1/10W	
R412			RK73GB2A332J	CHIP R	3.3K	J 1/10W	
R413,414			RK73GB2A473J	CHIP R	47K	J 1/10W	
R415			RK73GB2A100J	CHIP R	10	J 1/10W	
R416			RK73GB2A103J	CHIP R	10K	J 1/10W	
R417			RK73GB2A102J	CHIP R	1.0K	J 1/10W	
R418,419			RK73GB2A393J	CHIP R	39K	J 1/10W	
R420,421			RK73GB2A103J	CHIP R	10K	J 1/10W	
R422,423			RK73GB2A104J	CHIP R	100K	J 1/10W	
R424			RK73GB2A821J	CHIP R	820	J 1/10W	
R425			RK73GB2A103J	CHIP R	10K	J 1/10W	
R426			RK73GB2A473J	CHIP R	47K	J 1/10W	
R427			RK73GB2A103J	CHIP R	10K	J 1/10W	
R428			RK73GB2A222J	CHIP R	2.2K	J 1/10W	
R429			RK73GB2A102J	CHIP R	1.0K	J 1/10W	
R430			RK73GH2A333D	CHIP R	33K	D 1/10W	
R431			RK73GB2A222J	CHIP R	2.2K	J 1/10W	
R432			RK73GB2A333J	CHIP R	33K	J 1/10W	
R433			RK73GB2A393J	CHIP R	39K	J 1/10W	
R434			RK73GB2A104J	CHIP R	100K	J 1/10W	
R435,436			RK73GB2A473J	CHIP R	47K	J 1/10W	
R437			RK73GB2A103J	CHIP R	10K	J 1/10W	
R438			RK73GB2A222J	CHIP R	2.2K	J 1/10W	
R439			RK73GB2A102J	CHIP R	1.0K	J 1/10W	
R440			RK73GB2A334J	CHIP R	330K	J 1/10W	
R441			RK73GB2A102J	CHIP R	1.0K	J 1/10W	
R442			RK73GB2A203J	CHIP R	20K	J 1/10W	
R443			RK73GB2A472J	CHIP R	4.7K	J 1/10W	
R444			RK73GB2A153J	CHIP R	15K	J 1/10W	
R445			RK73GB2A472J	CHIP R	4.7K	J 1/10W	
R446-450			RK73GB2A473J	CHIP R	47K	J 1/10W	
R451			RK73GB2A273J	CHIP R	27K	J 1/10W	
R452			RK73GB2A163J	CHIP R	16K	J 1/10W	
R453,454			RK73GB2A103J	CHIP R	10K	J 1/10W	
R455			RK73GB2A473J	CHIP R	47K	J 1/10W	
R456			RK73GB2A102J	CHIP R	1.0K	J 1/10W	
R457			RK73GB2A153J	CHIP R	15K	J 1/10W	
R458			RK73GB2A302J	CHIP R	3.0K	J 1/10W	
R459			RK73GB2A473J	CHIP R	47K	J 1/10W	
R460			RK73GB2A123J	CHIP R	12K	J 1/10W	
R461,462			RK73GB2A103J	CHIP R	10K	J 1/10W	
R463			RK73GB2A243J	CHIP R	24K	J 1/10W	
R464			RK73GB2A152J	CHIP R	1.5K	J 1/10W	
R465,466			RK73GB2A103J	CHIP R	10K	J 1/10W	
R467			RK73GB2A152J	CHIP R	1.5K	J 1/10W	
R468			RK73GB2A243J	CHIP R	24K	J 1/10W	
R469,470			RK73GB2A103J	CHIP R	10K	J 1/10W	
R471			RK73GB2A302J	CHIP R	3.0K	J 1/10W	
R472			RK73GB2A821J	CHIP R	820	J 1/10W	
R473			RK73GB2A101J	CHIP R	100	J 1/10W	
R474			RK73GB2A202J	CHIP R	2.0K	J 1/10W	
R475			RK73GB2A472J	CHIP R	4.7K	J 1/10W	
R476,477			RK73GB2A474J	CHIP R	470K	J 1/10W	
R478			RK73GB2A101J	CHIP R	100	J 1/10W	
R479,480			RK73GB2A562J	CHIP R	5.6K	J 1/10W	
R481			RK73GB2A101J	CHIP R	100	J 1/10W	
R482			RK73GB2A102J	CHIP R	1.0K	J 1/10W	
R483,484			RK73GB2A103J	CHIP R	10K	J 1/10W	
R485			RK73GB2A223J	CHIP R	22K	J 1/10W	
R486			RK73GB2A102J	CHIP R	1.0K	J 1/10W	
R487			RK73GB2A103J	CHIP R	10K	J 1/10W	
R488,489			RK73GB2A101J	CHIP R	100	J 1/10W	
R490,491			RK73GB2A473J	CHIP R	47K	J 1/10W	
R492			RK73GB2A182J	CHIP R	1.8K	J 1/10W	
R493			RK73GB2A203J	CHIP R	20K	J 1/10W	
R494			RK73GB2A471J	CHIP R	470	J 1/10W	
R495			RK73GB2A123J	CHIP R	12K	J 1/10W	
R496			RK73GB2A103J	CHIP R	10K	J 1/10W	
R497			RK73GB2A223J	CHIP R	22K	J 1/10W	
R498			RK73GB2A203J	CHIP R	20K	J 1/10W	
R499			RK73GB2A132J	CHIP R	1.3K	J 1/10W	
R500			RK73GB2A223J	CHIP R	22K	J 1/10W	
R501			RK73GB2A103J	CHIP R	10K	J 1/10W	
R502,503			RK73GB2A203J	CHIP R	20K	J 1/10W	
R504			RK73GB2A103J	CHIP R	10K	J 1/10W	
R505			RK73GB2A243J	CHIP R	24K	J 1/10W	
R506			RK73GB2A133J	CHIP R	13K	J 1/10W	
R507			RK73GB2A162J	CHIP R	1.6K	J 1/10W	
R508			R92-5169-05	METAL PR	0.01	5W	
R509			RK73GB2A332J	CHIP R	3.3K	J 1/10W	
R510			RK73GH2A152D	CHIP R	1.5K	D 1/10W	
R511			RK73GH2A333D	CHIP R	33K	D 1/10W	
R512			RK73GH2A472D	CHIP R	4.7K	D 1/10W	
R513			RK73GH2A103D	CHIP R	10K	D 1/10W	

K: X1200M (North America) **M1**: KAC-X11D (Other Areas)

⚠Indicates safety critical components.

KAC-X11D/X1200M

PARTS LIST

AUDIO UNIT (X09-8860-10)

Ref. No.	Add	New	Parts No.	Description	Destination
R514			RK73GB2A223J	CHIP R 22K J 1/10W	
R515,516			RK73GB2A101J	CHIP R 100 J 1/10W	
R517,518			RK73GB2A153J	CHIP R 15K J 1/10W	
R519,520			RK73GB2A473J	CHIP R 47K J 1/10W	
R521			RK73EB2E152J	CHIP R 1.5K J 1/4W	
R522			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R523			RK73GB2A103J	CHIP R 10K J 1/10W	
R901			RD14BB2C562J	RD 5.6K J 1/6W	
R902			RD14BB2C100J	RD 10 J 1/6W	
R903,904			RD14BB2C103J	RD 10K J 1/6W	
R905			RK73EB2E271J	CHIP R 270 J 1/4W	
R906			RK73GB2A183J	CHIP R 18K J 1/10W	
R907			RK73GB2A242J	CHIP R 2.4K J 1/10W	
R910			RK73GB2A123J	CHIP R 12K J 1/10W	
R911			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R914			RK73GB2A473J	CHIP R 47K J 1/10W	
R915			RK73GB2A912J	CHIP R 9.1K J 1/10W	
R916			RK73GB2A221J	CHIP R 220 J 1/10W	
R917			RK73GB2A473J	CHIP R 47K J 1/10W	
R918			RK73GB2A393J	CHIP R 39K J 1/10W	
R919			RK73GB2A752J	CHIP R 7.5K J 1/10W	
R920			RK73GB2A331J	CHIP R 330 J 1/10W	
R921			RK73GB2A103J	CHIP R 10K J 1/10W	
R922			RK73GB2A123J	CHIP R 12K J 1/10W	
R923			RK73GB2A103J	CHIP R 10K J 1/10W	
R924			RK73GB2A223J	CHIP R 22K J 1/10W	
R925			RK73GB2A103J	CHIP R 10K J 1/10W	
R926			RK73GB2A473J	CHIP R 47K J 1/10W	
R927			RK73EB2E203J	CHIP R 20K J 1/4W	
R928,929			RK73GB2A103J	CHIP R 10K J 1/10W	
W700-703			R92-2053-05	CHIP R 0 OHM J 1/8W	
W704			RK73GB2A000J	CHIP R 0.0 J 1/10W	
W705-708			R92-2053-05	CHIP R 0 OHM J 1/8W	
W709			RK73GB2A000J	CHIP R 0.0 J 1/10W	
W710-713			R92-2053-05	CHIP R 0 OHM J 1/8W	
W714,715			RK73GB2A000J	CHIP R 0.0 J 1/10W	
W716-718			R92-2053-05	CHIP R 0 OHM J 1/8W	
W719-725			RK73GB2A000J	CHIP R 0.0 J 1/10W	
W726			R92-2053-05	CHIP R 0 OHM J 1/8W	
W727			RK73GB2A000J	CHIP R 0.0 J 1/10W	
W728-730			R92-2053-05	CHIP R 0 OHM J 1/8W	
W731			RK73GB2A000J	CHIP R 0.0 J 1/10W	
W732,733			R92-2053-05	CHIP R 0 OHM J 1/8W	
W734,735			RK73GB2A000J	CHIP R 0.0 J 1/10W	
W736-746			R92-2053-05	CHIP R 0 OHM J 1/8W	
W747			RK73GB2A000J	CHIP R 0.0 J 1/10W	
W748-750			R92-2053-05	CHIP R 0 OHM J 1/8W	
W751			RK73GB2A000J	CHIP R 0.0 J 1/10W	
W752,753			R92-2053-05	CHIP R 0 OHM J 1/8W	
W755,756			R92-2053-05	CHIP R 0 OHM J 1/8W	
W758-761			R92-2053-05	CHIP R 0 OHM J 1/8W	
W762,763			RK73GB2A000J	CHIP R 0.0 J 1/10W	
W764,765			R92-2053-05	CHIP R 0 OHM J 1/8W	
W766,767			RK73GB2A000J	CHIP R 0.0 J 1/10W	
W768-772			R92-2053-05	CHIP R 0 OHM J 1/8W	

Ref. No.	Add	New	Parts No.	Description	Destination
W773-775			RK73GB2A000J	CHIP R 0.0 J 1/10W	
W776-779			R92-2053-05	CHIP R 0 OHM J 1/8W	
W780			RK73GB2A000J	CHIP R 0.0 J 1/10W	
W781-783			R92-2053-05	CHIP R 0 OHM J 1/8W	
W784			RK73GB2A000J	CHIP R 0.0 J 1/10W	
W801			R92-2053-05	CHIP R 0 OHM J 1/8W	
W802,803			RK73GB2A000J	CHIP R 0.0 J 1/10W	
W806-813			RK73GB2A000J	CHIP R 0.0 J 1/10W	
D1 -3			1N5406-TSC	DIODE	
D6			UDZW6.8 (B)	ZENER DIODE	
D8			UDZW15 (B)	ZENER DIODE	
D9			1SS133	DIODE	
D10			1SS355	DIODE	
D11			UDZW10 (B)	ZENER DIODE	
D12			LM1MA142WK-G	DIODE	
D15			1SS133	DIODE	
D16			LM1MA142WK-G	DIODE	
D17			FCH20A15	DIODE	
D18			FRH20A15	DIODE	
D21			UDZW6.2 (B)	ZENER DIODE	
D22 -26			1SS133	DIODE	
D27			UDZW15 (B)	ZENER DIODE	
D28			MTZJ12 (B)	ZENER DIODE	
D29			1SS355	DIODE	
D54			UDZW6.2 (B)	ZENER DIODE	
D55			DA204U	DIODE	
D101			LM1MA142WA-G	DIODE	
D102			LM1MA142WK-G	DIODE	
D103			LM1MA142WA-G	DIODE	
D104,105			LM1MA142WK-G	DIODE	
D106			LM1MA142WA-G	DIODE	
D107			MTZJ5.1 (B)	ZENER DIODE	
D108			1SS133	DIODE	
D109,110			MTZJ5.6 (B)	ZENER DIODE	
D111-116			1SS133	DIODE	
D118			UDZW5.1 (B)	ZENER DIODE	
D119			1SS133	DIODE	
D120,121			UMZ6.8N	ZENER DIODE	
D122,123			1SS355	DIODE	
D400			DA204U	DIODE	
D401			1SS133	DIODE	
D402			UDZW5.1 (B)	ZENER DIODE	
D403,404			DA204U	DIODE	
D405			UDZW10 (B)	ZENER DIODE	
D406			DA204U	DIODE	
D407			LM1MA142WA-G	DIODE	
D408			1SS133	DIODE	
D409			LM1MA142WA-G	DIODE	
D411			DA204U	DIODE	
D412,413			1SS355	DIODE	
D414,415			1SS133	DIODE	
D416,417			UDZW5.1 (B)	ZENER DIODE	
D418			1SS355	DIODE	
D902			1SS355	DIODE	

K: X1200M (North America) **M1**: KAC-X11D (Other Areas)

⚠Indicates safety critical compo nents.

PARTS LIST

AUDIO UNIT (X09-8860-10)

Ref. No.	Add	New	Parts No.	Description	Destination
D904,905			1SS355	DIODE	
IC1			TL494IDR	ANALOGUE IC	
IC2			BA2903F	ANALOGUE IC	
IC3 -5			BA4560RF	ANALOGUE IC	
IC6			BA2903F	ANALOGUE IC	
IC7			SN74HC00D	MOS-IC	
IC12			BA2903F	ANALOGUE IC	
IC15			BA4560RF	ANALOGUE IC	
IC51-55			BA4560RF	ANALOGUE IC	
IC56,57			BA2903F	ANALOGUE IC	
IC58-60			SN74HC00D	MOS-IC	
IC61			BA4560RF	ANALOGUE IC	
IC62			NJM2172V-ZBTE2	ANALOGUE IC	
IC63,64			BA4560RF	ANALOGUE IC	
Q5			2SB1241	TRANSISTOR	
Q6 ,7			2SC4081	TRANSISTOR	
Q8			2SA1576A	TRANSISTOR	
Q9			2SC4081	TRANSISTOR	
Q10 ,11			DTA114EUA	DIGITAL TRANSISTOR	
Q12			2SC4097	TRANSISTOR	
Q13			2SB1427	TRANSISTOR	
Q14			2SC4097	TRANSISTOR	
Q15			2SB1427	TRANSISTOR	
Q16 -23			STP60NF06FP	FET	
Q24			2SC4883ANF	TRANSISTOR	
Q25			2SA1859ANF	TRANSISTOR	
Q26 -29			2SD1863	TRANSISTOR	
Q30			2SC4081	TRANSISTOR	
Q31			2SA1576A	TRANSISTOR	
Q50 ,51			2SK879-F (GR)	FET	
Q101			2SA1576A	TRANSISTOR	
Q102,103			2SA970-F (BL)	TRANSISTOR	
Q104			2SC2713-F	TRANSISTOR	
Q105			2SA1370	TRANSISTOR	
Q106-108			2SC2235-F	TRANSISTOR	
Q109			2SC3415S	TRANSISTOR	
Q110,111			2SB1427	TRANSISTOR	
Q112			2SA1576A	TRANSISTOR	
Q113,114			2SA970-F (BL)	TRANSISTOR	
Q115			2SC2713-F	TRANSISTOR	
Q116			2SA1370	TRANSISTOR	
Q117-119			2SC2235-F	TRANSISTOR	
Q120			2SC3415S	TRANSISTOR	
Q121,122			2SB1427	TRANSISTOR	
Q400			2SC4081	TRANSISTOR	
Q401			2SC2713-F	TRANSISTOR	
Q402-404			2SA1163-F	TRANSISTOR	
Q405			2SA1576A	TRANSISTOR	
Q406			2SC2713-F	TRANSISTOR	
Q407,408			2SC4081	TRANSISTOR	
Q409			2SA1576A	TRANSISTOR	
Q410			2SC4081	TRANSISTOR	
Q411			2SA1576A	TRANSISTOR	
Q412			DTA114EUA	DIGITAL TRANSISTOR	
Q413			DTC114EUA	DIGITAL TRANSISTOR	
Q414			2SA1576A	TRANSISTOR	
Q415			DTC114EUA	DIGITAL TRANSISTOR	
Q416			2SA1576A	TRANSISTOR	
Q417-419			DTC114EUA	DIGITAL TRANSISTOR	
Q420-422			2SC4081	TRANSISTOR	
Q423			DTC114EUA	DIGITAL TRANSISTOR	
Q424			2SA1576A	TRANSISTOR	
Q425,426			2SC4081	TRANSISTOR	
Q427,428			2SA1576A (R,S)	TRANSISTOR	
Q429			2SC4081	TRANSISTOR	
Q430			DTA114EUA	DIGITAL TRANSISTOR	
Q431-433			2SC4081	TRANSISTOR	
Q434			2SA1576A	TRANSISTOR	
Q435,436			2SA1163-F	TRANSISTOR	
Q437			2SC2713-F	TRANSISTOR	
Q438			2SC4081	TRANSISTOR	
Q439,440			2SA1576A (R,S)	TRANSISTOR	
Q701-704			IRFB38N20DPBF	FET	
Q801-804			IRFB38N20DPBF	FET	
Q902			DTA114EUA	DIGITAL TRANSISTOR	
Q904,905			2SC4081	TRANSISTOR	
Q909			DTA114EUA	DIGITAL TRANSISTOR	
TH1			NCP18WB473J0S	THERMISTOR	
TH2 ,3			NCP18XH103J0S	THERMISTOR	

SWITCH UNIT (REMOTE CONTROL) (X16-6000-10)

41	2A		A02-2738-02	PLASTIC CABINET	M1
42	2A		A64-3541-22	PANEL	M1
43	2A	✻	B03-5094-24	DRESSING PLATE	M1
D1			B30-1764-05	LED (3216 RED)	M1
C1			CK73GB1H103K	CHIP C 0.010UF K	M1
J1			E58-0966-15	RECTANGULAR RECEPTACLE	M1
44	2A	✻	F09-2884-04	SHEET	M1
45	2A	✻	F09-2885-04	SHEET	M1
47	2A		K23-1093-03	KNOB	M1
L	1A		N80-2008-43	PAN HEAD TAPTITE SCREW	M1
R1			RK73GB2A153J	CHIP R 15K J 1/10W	M1
R2			RK73GB2A822J	CHIP R 8.2K J 1/10W	M1
R3			RK73GB2A471J	CHIP R 470 J 1/10W	M1
VR1 ,2			R31-0243-05	VARIABLE RESISTOR	M1

K: X1200M (North America) **M1**: KAC-X11D (Other Areas)

⚠Indicates safety critical components.