9. EXPLODED VIEWS AND PARTS LIST

NOTES:
- *Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.*
- *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
- *Screws adjacent to ▼ mark on product are used for disassembly.*
- *For the applying amount of lubricants or glue, follow the instructions in this manual. (In the case of no amount instructions, apply as you think it appropriate.)*

9.1 PACKING SECTION

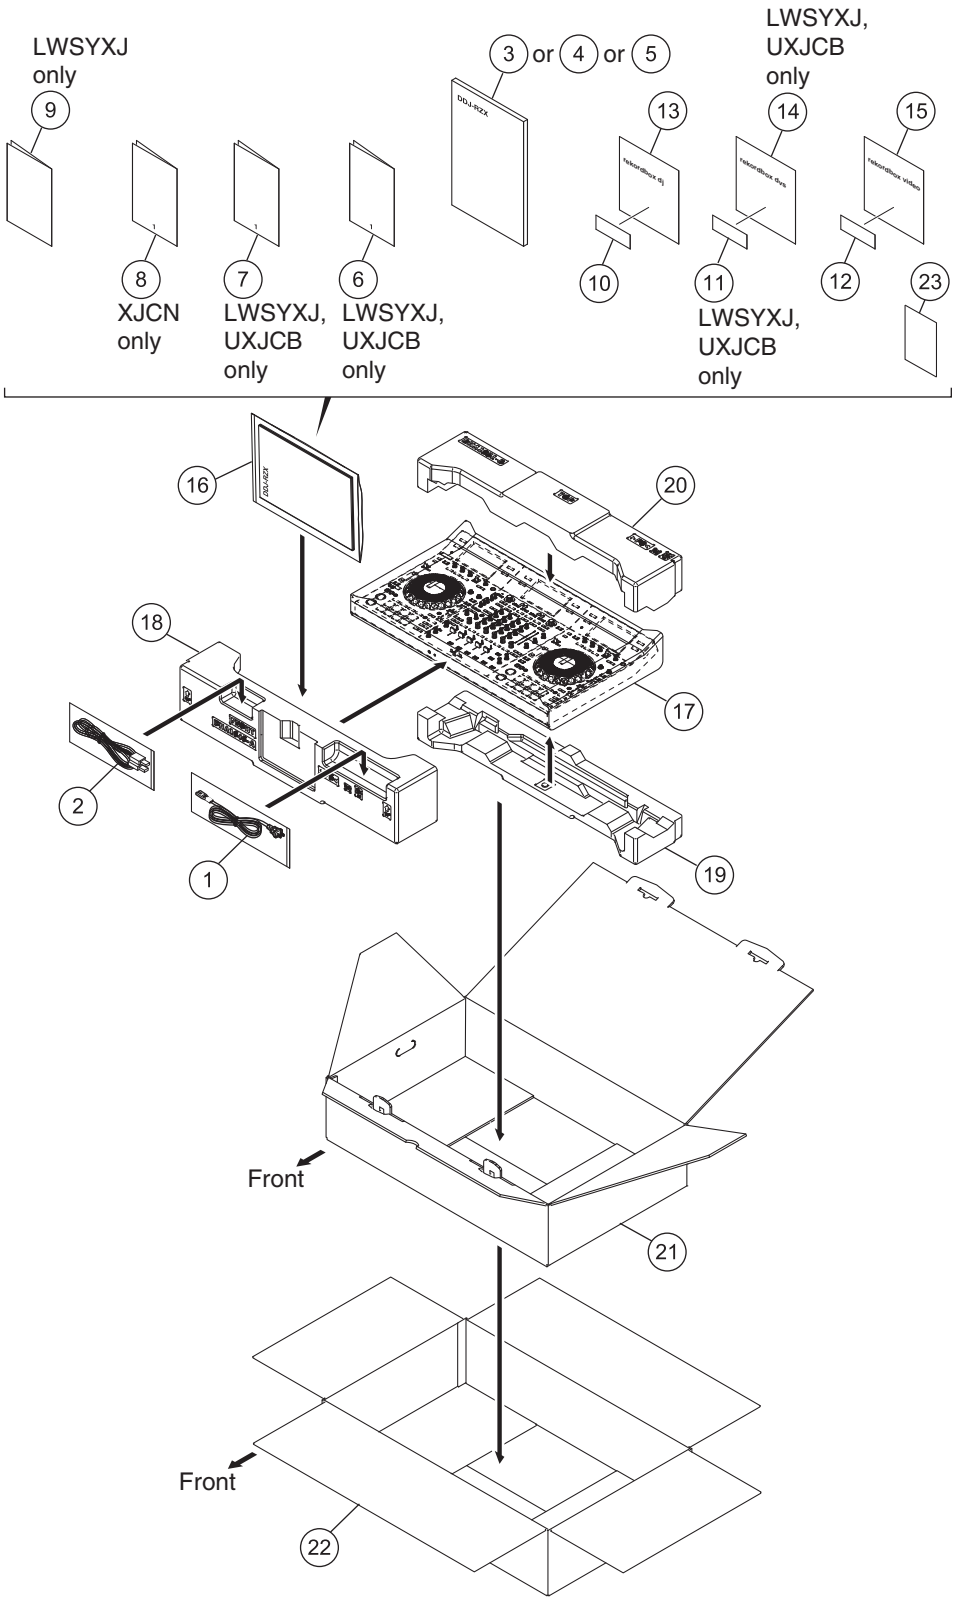

(1) PACKING SECTION PARTS LIST

Mark	No.	Description	Part No.
⚠	1	Power Cord	See Contrast table (2)
	2	USB Cable	DDE1128
	3	Operating Instructions (Quick Start Guide)	See Contrast table (2)
	4	Operating Instructions (Quick Start Guide)	See Contrast table (2)
	5	Operating Instructions (Quick Start Guide)	See Contrast table (2)
	6	License Caution	See Contrast table (2)
	7	License Caution	See Contrast table (2)
	8	License Caution	See Contrast table (2)
NSP	9	Warranty	See Contrast table (2)
NSP	10	rekordbox dj license key card	DXA2304
NSP	11	rekordbox dvs license key card	See Contrast table (2)
NSP	12	rekordbox video license key card	DXA2323
NSP	13	Software license notice	DRM1410
NSP	14	Leaflet	See Contrast table (2)
NSP	15	Leaflet	DRM1415
NSP	16	Polyethylene Bag	AHG7117
	17	Mirror Mat	DHL1201
	18	Pad	DHA1949
	19	Pad	DHA1950
	20	Pad	DHA1951
	21	Packing Case	See Contrast table (2)
	22	Carton	See Contrast table (2)
NSP	23	Other Card	See Contrast table (2)

(2) CONTRAST TABLE

DDJ-RZX/LWSYXJ, UXJCB and XJCN are constructed the same except for the following:

Mark	No.	Symbol and Description	DDJ-RZX /LWSYXJ	DDJ-RZX /UXJCB	DDJ-RZX /XJCN
⚠	1	Power Cord	ADG1244	DDG1108	DDG1114
	3	Operating Instructions (Quick Start Guide)(En, Fr)	Not used	DRH1344	Not used
	4	Operating Instructions (Quick Start Guide) (En, Fr, De, It, Nl, Es, Pt, Ru)	DRH1345	Not used	Not used
	5	Operating Instructions (Quick Start Guide)(Zhcn)	Not used	Not used	DRH1347
	6	License Caution (En, Fr, De, It, Nl, Es, Pt, Ru, Ja, Zhtw)	DRH1387	DRH1387	Not used
	7	License Caution (Fr)	DRH1388	DRH1388	Not used
	8	License Caution (Zhtw, Ko)	Not used	Not used	DRH1389
NSP	9	Warranty	DRY1270	Not used	Not used
NSP	11	rekordbox dvs license key card	DXA2322	DXA2322	Not used
NSP	14	Leaflet	DRM1414	DRM1414	Not used
	21	Packing Case	DHG3468	DHG3466	DHG3472
	22	Carton	DHG3469	DHG3467	DHG3473
NSP	23	Other Card	Not used	DRM1413	Not used

9.2 CHASSIS SECTION

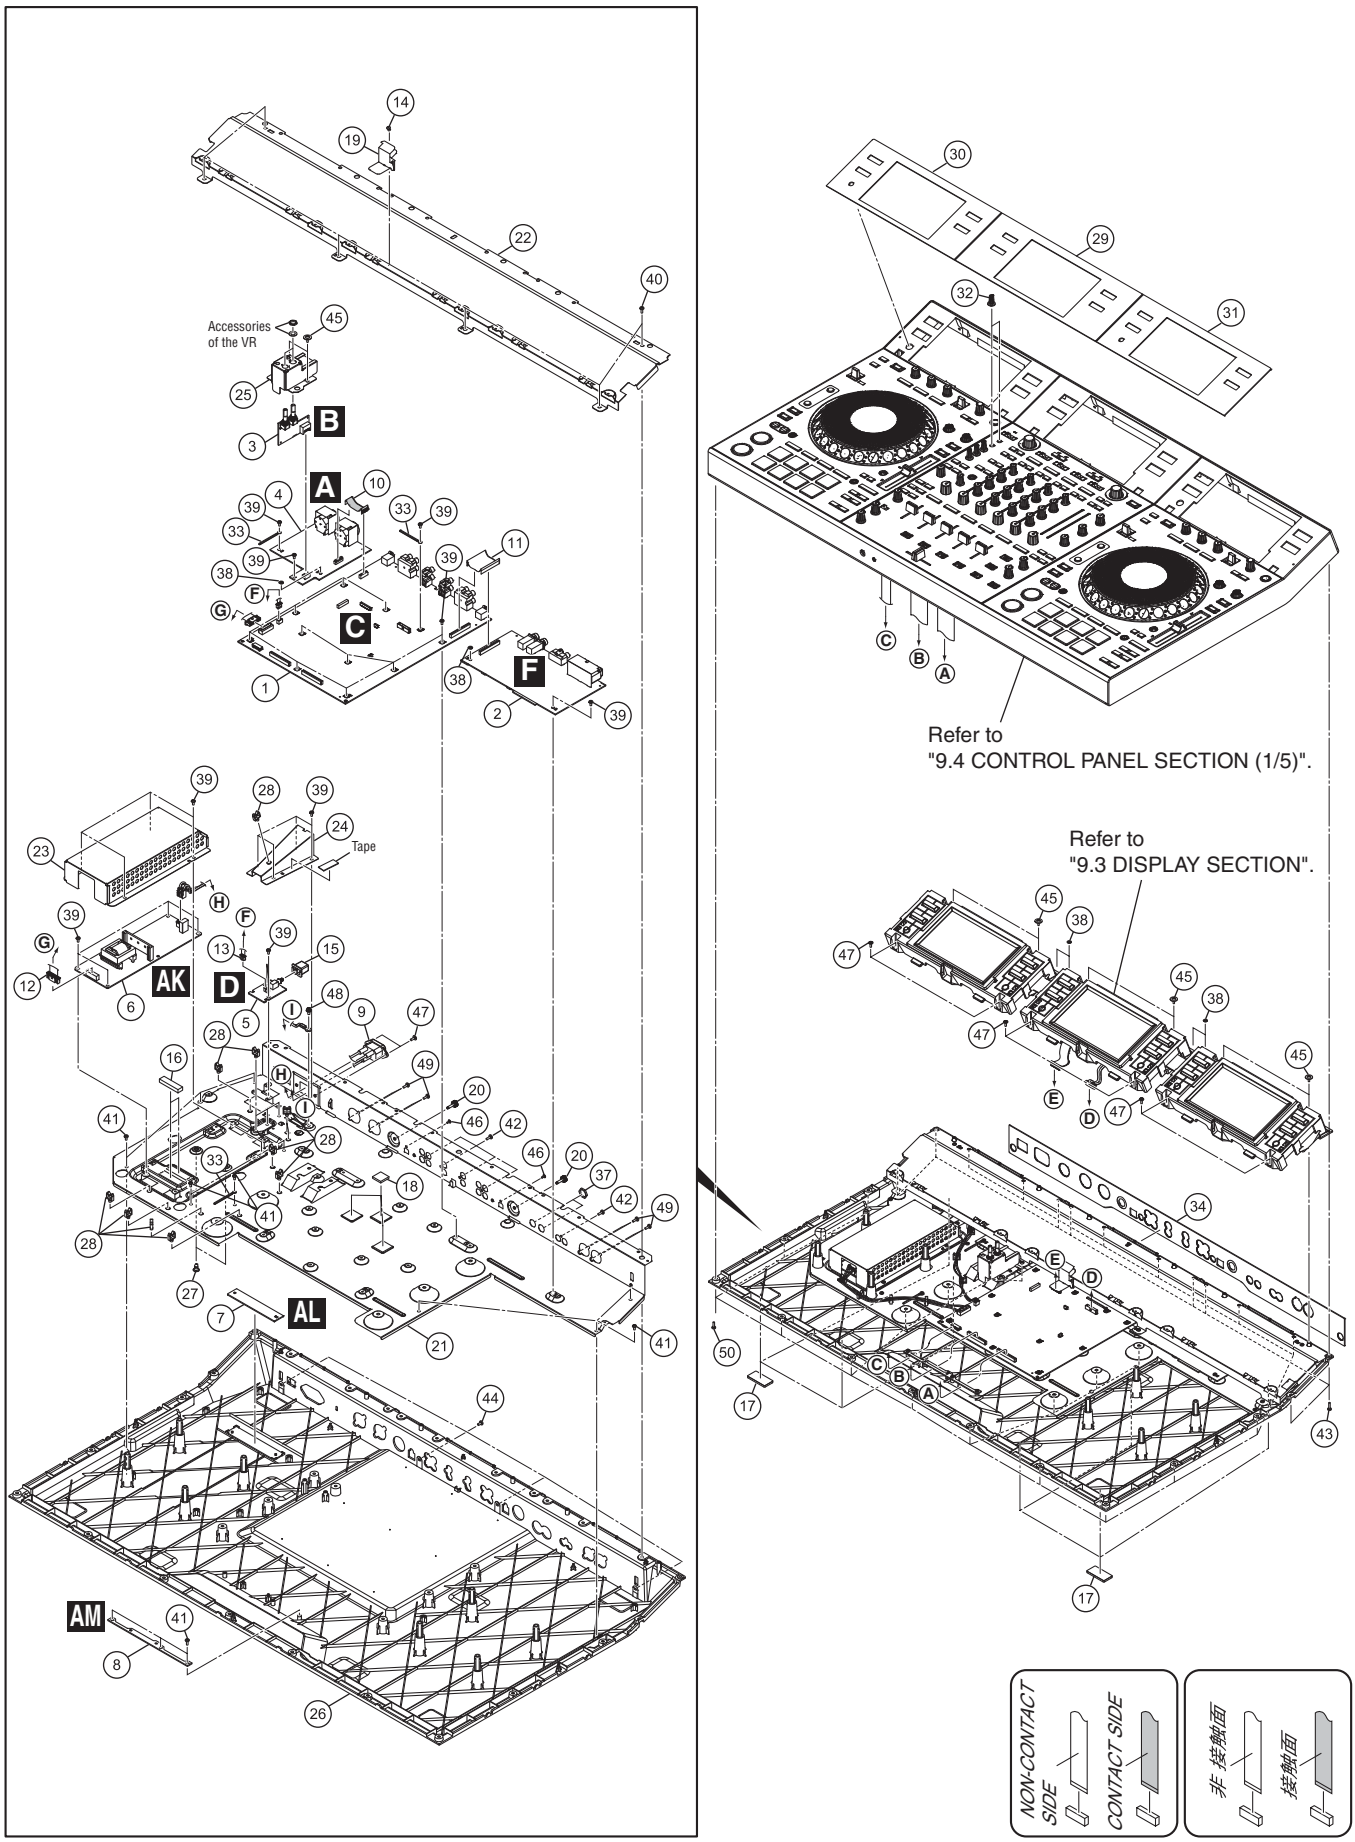

(1) CHASSIS SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	MAIN Assy	DWX3822
	2	JACB Assy	DWX3797
	3	MTRM Assy	DWX3799
	4	MCJK Assy	DWX3809
	5	PSWB Assy	DWX3808
⚠	6	SW POWER SUPPLY Assy	DWR1548
	7	HOLD1 Assy	DWX3889
	8	HOLD2 Assy	DWX3890
⚠	9	AC Inlet	DKP3980
	10	FFC	DDD1788
	11	FFC	DDD1741
	12	Crimp Connector	DKP3981
	13	Connector Assy	PF03PP-C40
	14	Nylon Rivet	AEC1671
	15	Power Knob	DAC2306
	16	Heat Cond Sheet	DEB2020
	17	Sheet/LEG	DEC3534
	18	Sheet	DEC3618
	19	Sheet	DEC3677
	20	Earth Terminal	DKE1015
	21	Chassis	DNA1460
	22	Rest	DNF1983
	23	Shield Case	DNF1984
	24	Cover	DNH3254
	25	Bracket	DNH3255
	26	Chassis	DNK6535
NSP	27	PCB Holder	PNW1706
	28	Holder	VEC1355
	29	Bezel	DAH3098
	30	Bezel	DAH3099
	31	Bezel	DAH3100
	32	Knob/RSW	DAA1308
	33	Cord Clamper (Steel)	RNH-184
	34	Plate	See Contrast table (2)
	35	•••••	
	36	•••••	
	37	Nut (M12)	NKX2FNI
	38	Washer	DBF1005
	39	Screw	BBZ30P060FTC
	40	Screw	BBZ30P080FTB
	41	Screw	BPZ30P080FNI
	42	Screw	BPZ30P080FTB
	43	Screw	BPZ30P140FTB
	44	Screw	BSZ30P060FTB
	45	DM Screw (FTC)	DBA1260
	46	Screw (M3*5)	DBA1340
	47	Screw	IBZ30P080FTB
	48	Screw	PMH40P080FTC
	49	Screw	PPZ30P080FTB
	50	Screw	BBZ30P100FTB

(2) CONTRAST TABLE

DDJ-RZX/LWSYXJ, UXJCB and XJCN are constructed the same except for the following:

Mark	No.	Symbol and Description	DDJ-RZX /LWSYXJ	DDJ-RZX /UXJCB	DDJ-RZX /XJCN
	34	Plate	DAK1006	DAK1006	DAK1008

9.3 DISPLAY SECTION

■ Center

■ Left and Right

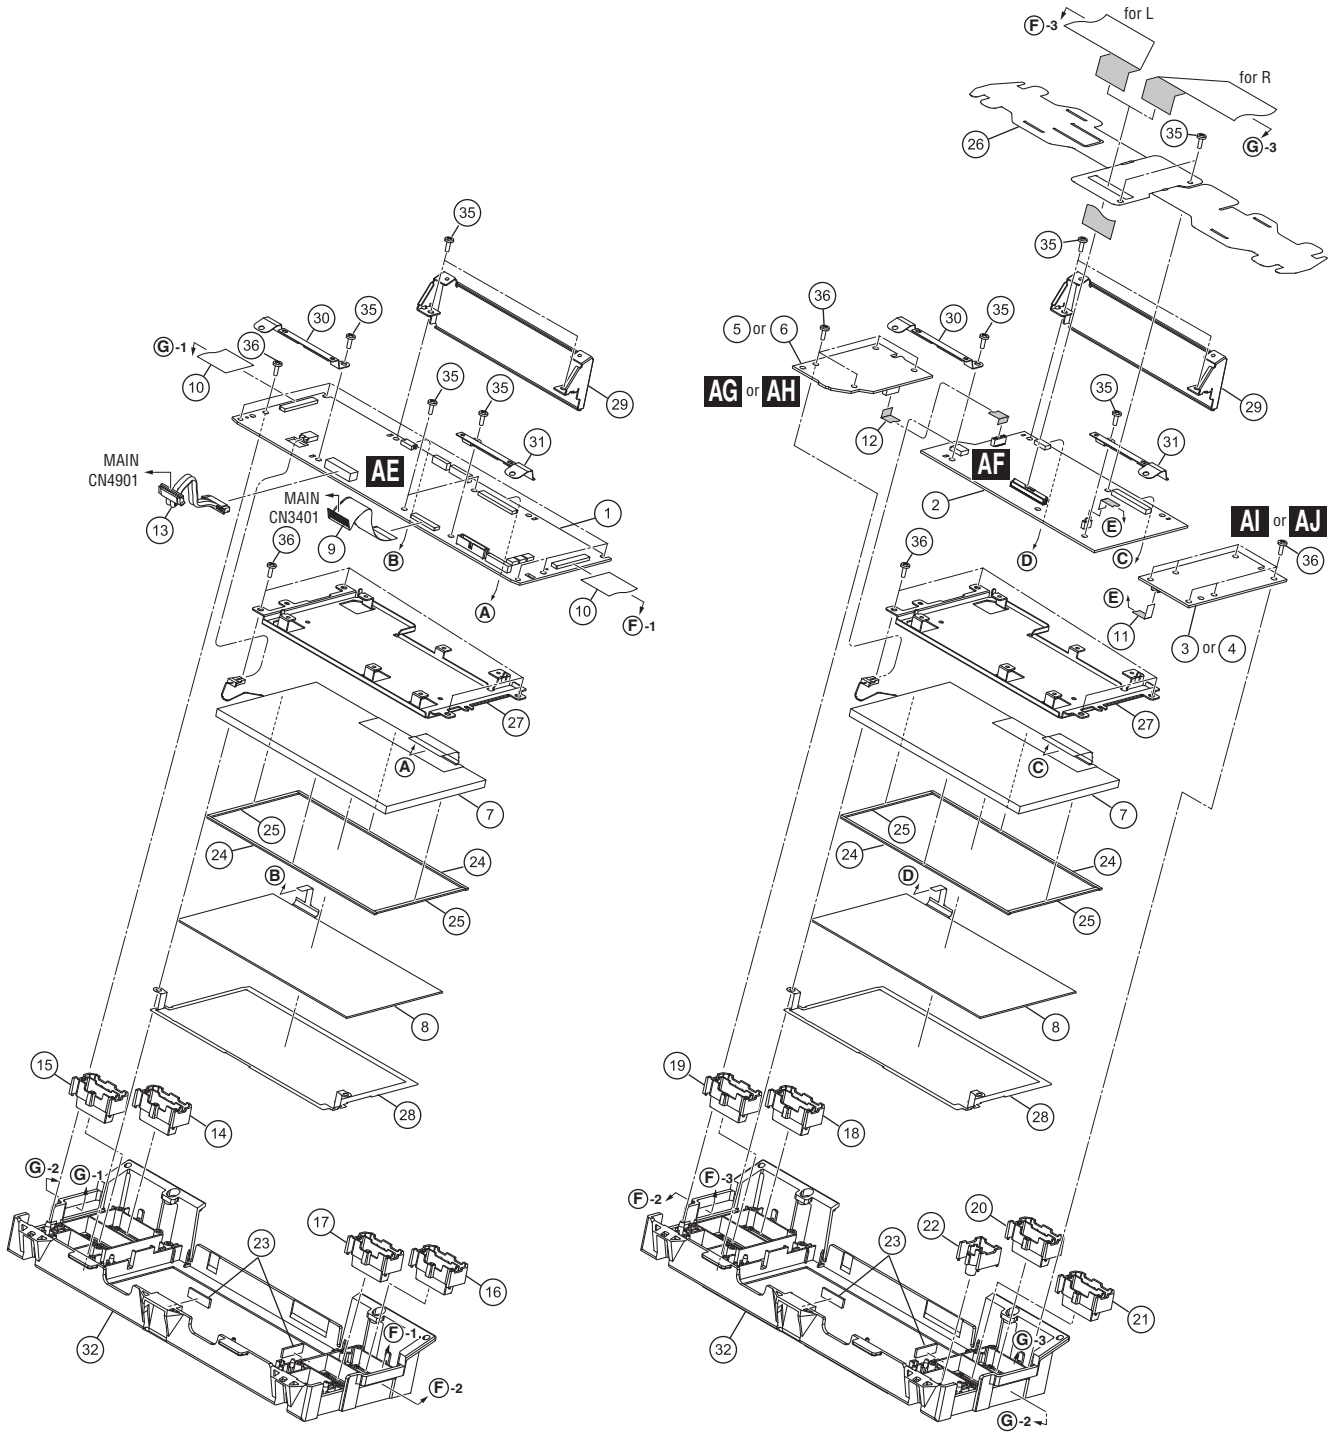

• Bottom view

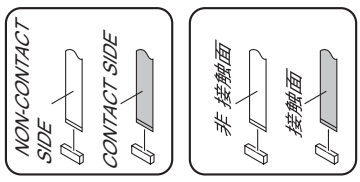

DISPLAY SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	LCDM Assy	DWX3828
	2	LCDP Assy	DWX3791
	3	MSL1 Assy	DWX3884
	4	MSL2 Assy	DWX3885
	5	XYM1 Assy	DWX3886
	6	XYM2 Assy	DWX3887
	7	TFT LCD	CWX4352
	8	Touch Panel	DSX1128
	9	FFC	DDD1703
	10	FFC	DDD1740
	11	FFC	ADD7783
	12	10P FFC	DDD1533
	13	Shielded Conn-Cable	DDA1075
	14	Button	DAC3170
	15	Button	DAC3172
	16	Button	DAC3175
	17	Button	DAC3176
	18	Button	DAC3173
	19	Button	DAC3174
	20	Button	DAC3177
	21	Button	DAC3178
	22	Button	DAC3171
	23	Packing/LCD	DEC3565
	24	Packing/L	DEC3568
	25	Packing/S	DEC3569
	26	Sheet	DEC3678
	27	Bracket	DNF1991
	28	Plate/GND	DNH3173
	29	Angle	DNH3256
	30	Angle	DNH3277
	31	Angle	DNH3278
	32	Holder	DNK6612
	33	•••••	
	34	•••••	
	35	Screw	BBZ30P080FTB
	36	Screw	BPZ30P080FNI

9.4 CONTROL PANEL SECTION (1/5)

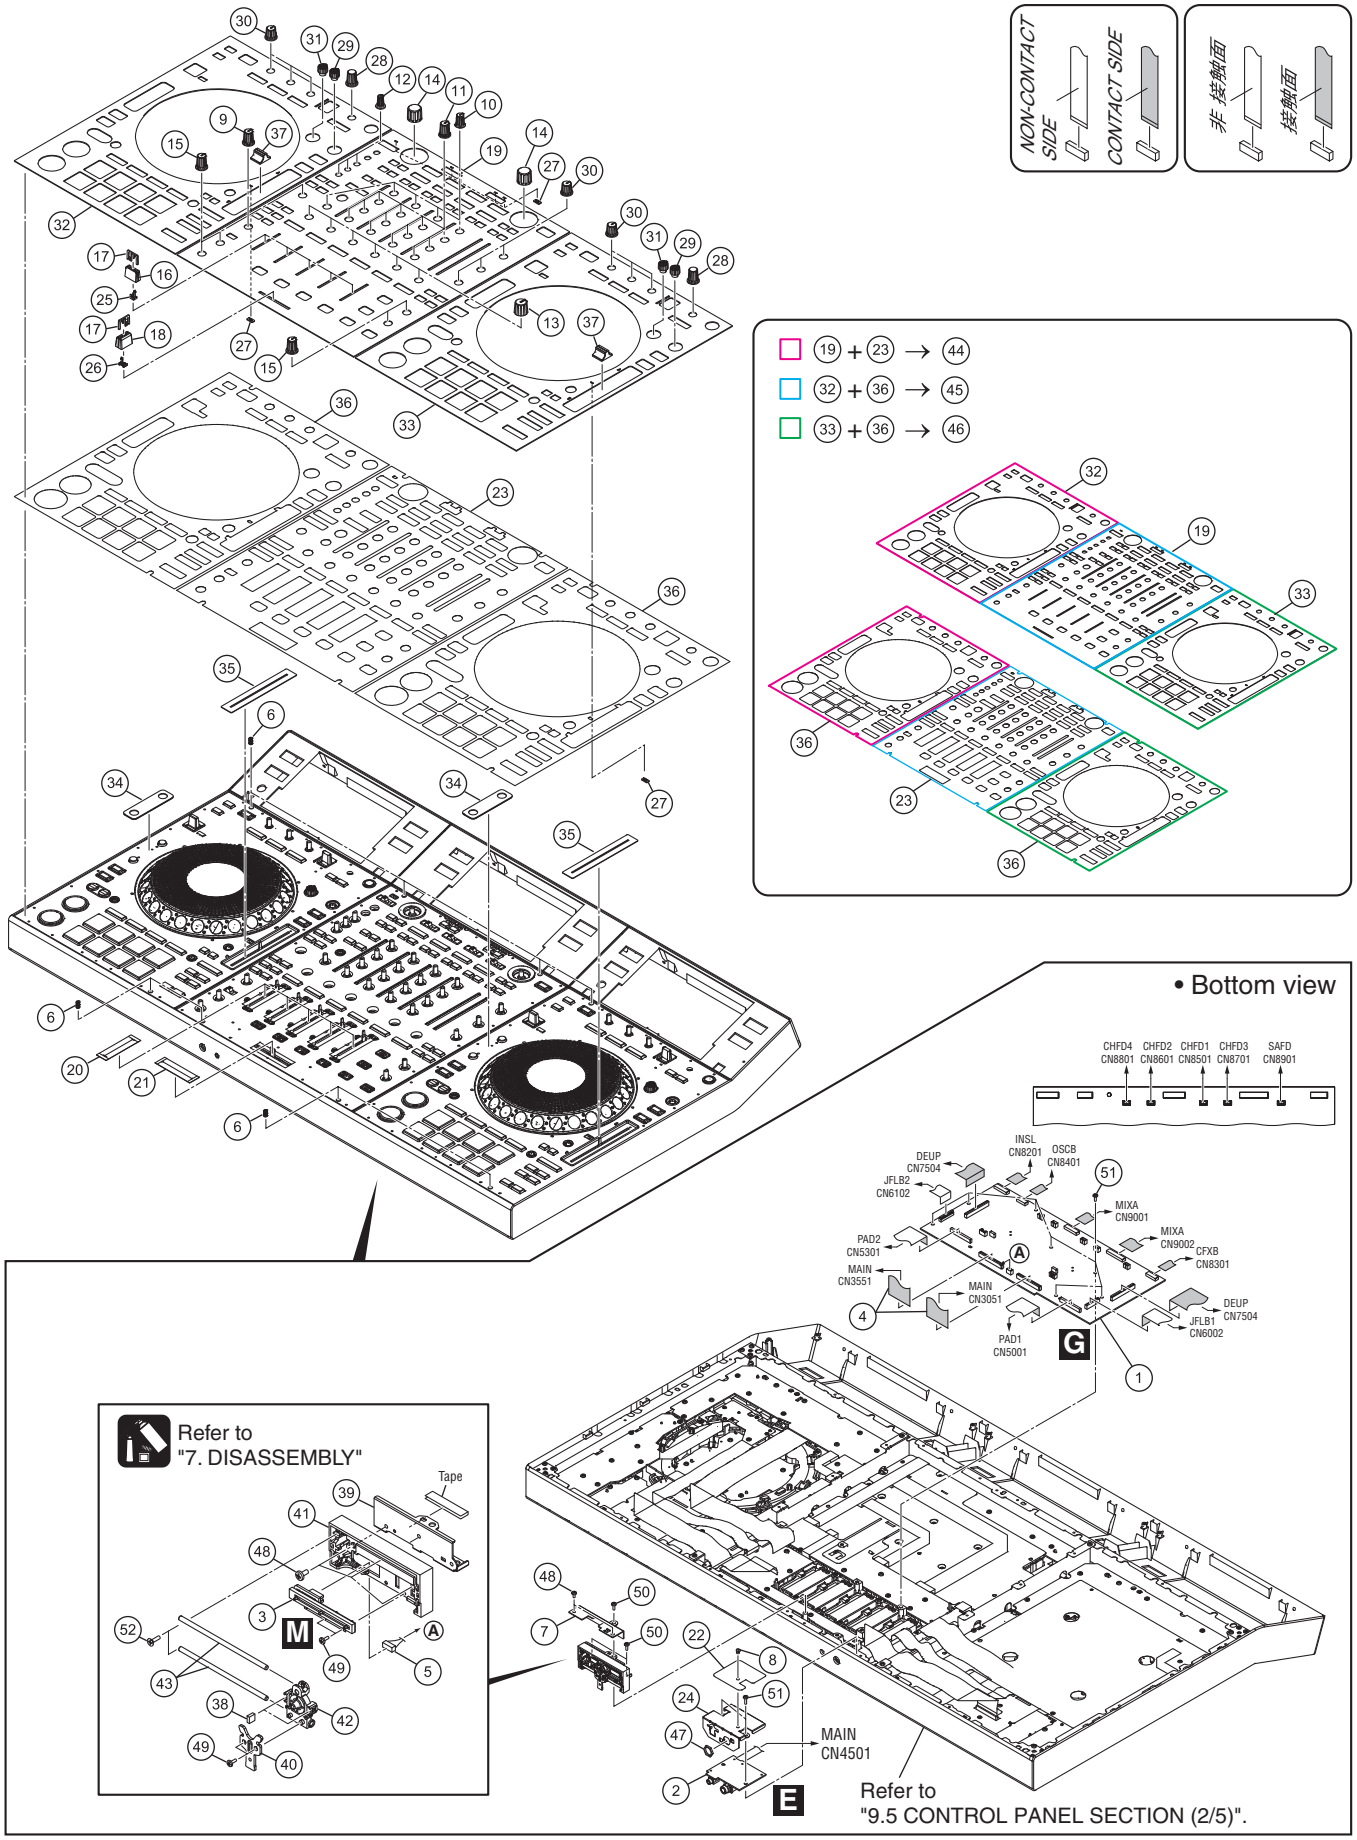

CONTROL PANEL SECTION (1/5) PARTS LIST

Mark	No.	Description	Part No.
	1	STMO Assy	DWX3824
	2	HPJK Assy	DWX3810
	3	CRFD Assy	DWX3817
	4	FFC	DDD1751
	5	Connector Assy	PF03PP-B05
	6	Coil Spring	DBH1813
	7	Holder	DNF2005
	8	Nylon Rivet	AEC1671
	9	Knob (RES)	DAA1250
	10	Knob/CH	DAA1300
	11	Knob/RSW	DAA1305
	12	Knob/RSW	DAA1307
	13	Knob/FRE	DAA1309
	14	Knob/BRS	DAA1342
	15	Knob	DAA1368
	16	Slider Knob 1	DAC2684
	17	Slider Knob 2	DAC2685
	18	Knob	DAC3238
	19	Plate	DAH3101
	20	Fader Packing	DEC3355
	21	Packing	DEC3642
	22	Sheet	DEC3705
	23	DS Tape	DEH1087
	24	Stay	DNF1992
	25	Slider Knob Stopper	DNK5888
	26	Stopper	DNK6440
	27	Lens	DNK6621
	28	Rotary SW Knob (C)	DAA1180
	29	Knob/CFC	DAA1326
	30	Knob	DAA1370
	31	Adjust Knob Black	DAC2528
	32	Plate	DAH3102
	33	Plate	DAH3116
	34	Plate	DAH3106
	35	Sheet	DAH3112
	36	DS Tape	DEH1086
	37	Knob/SLD	DNK5981
NSP	38	Cushion	DEC3356
	39	Stay	DNF1942
	40	Lever	DNH3211
	41	Holder	DNK6425
	42	Slider	DNK6426
	43	Guide Bar	VLL1514
	44	•••••	DEA1056
	45	•••••	DEA1057
	46	•••••	DEA1058
	47	Nut (M12)	NKX2FNI
	48	Screw	BBZ30P060FTC
	49	Screw	BPZ20P050FTC
	50	Screw	BPZ30P080FNI
	51	Screw	BPZ30P100FTC
	52	Screw	CPZ26P080FTC

9.5 CONTROL PANEL SECTION (2/5)

• Bottom view

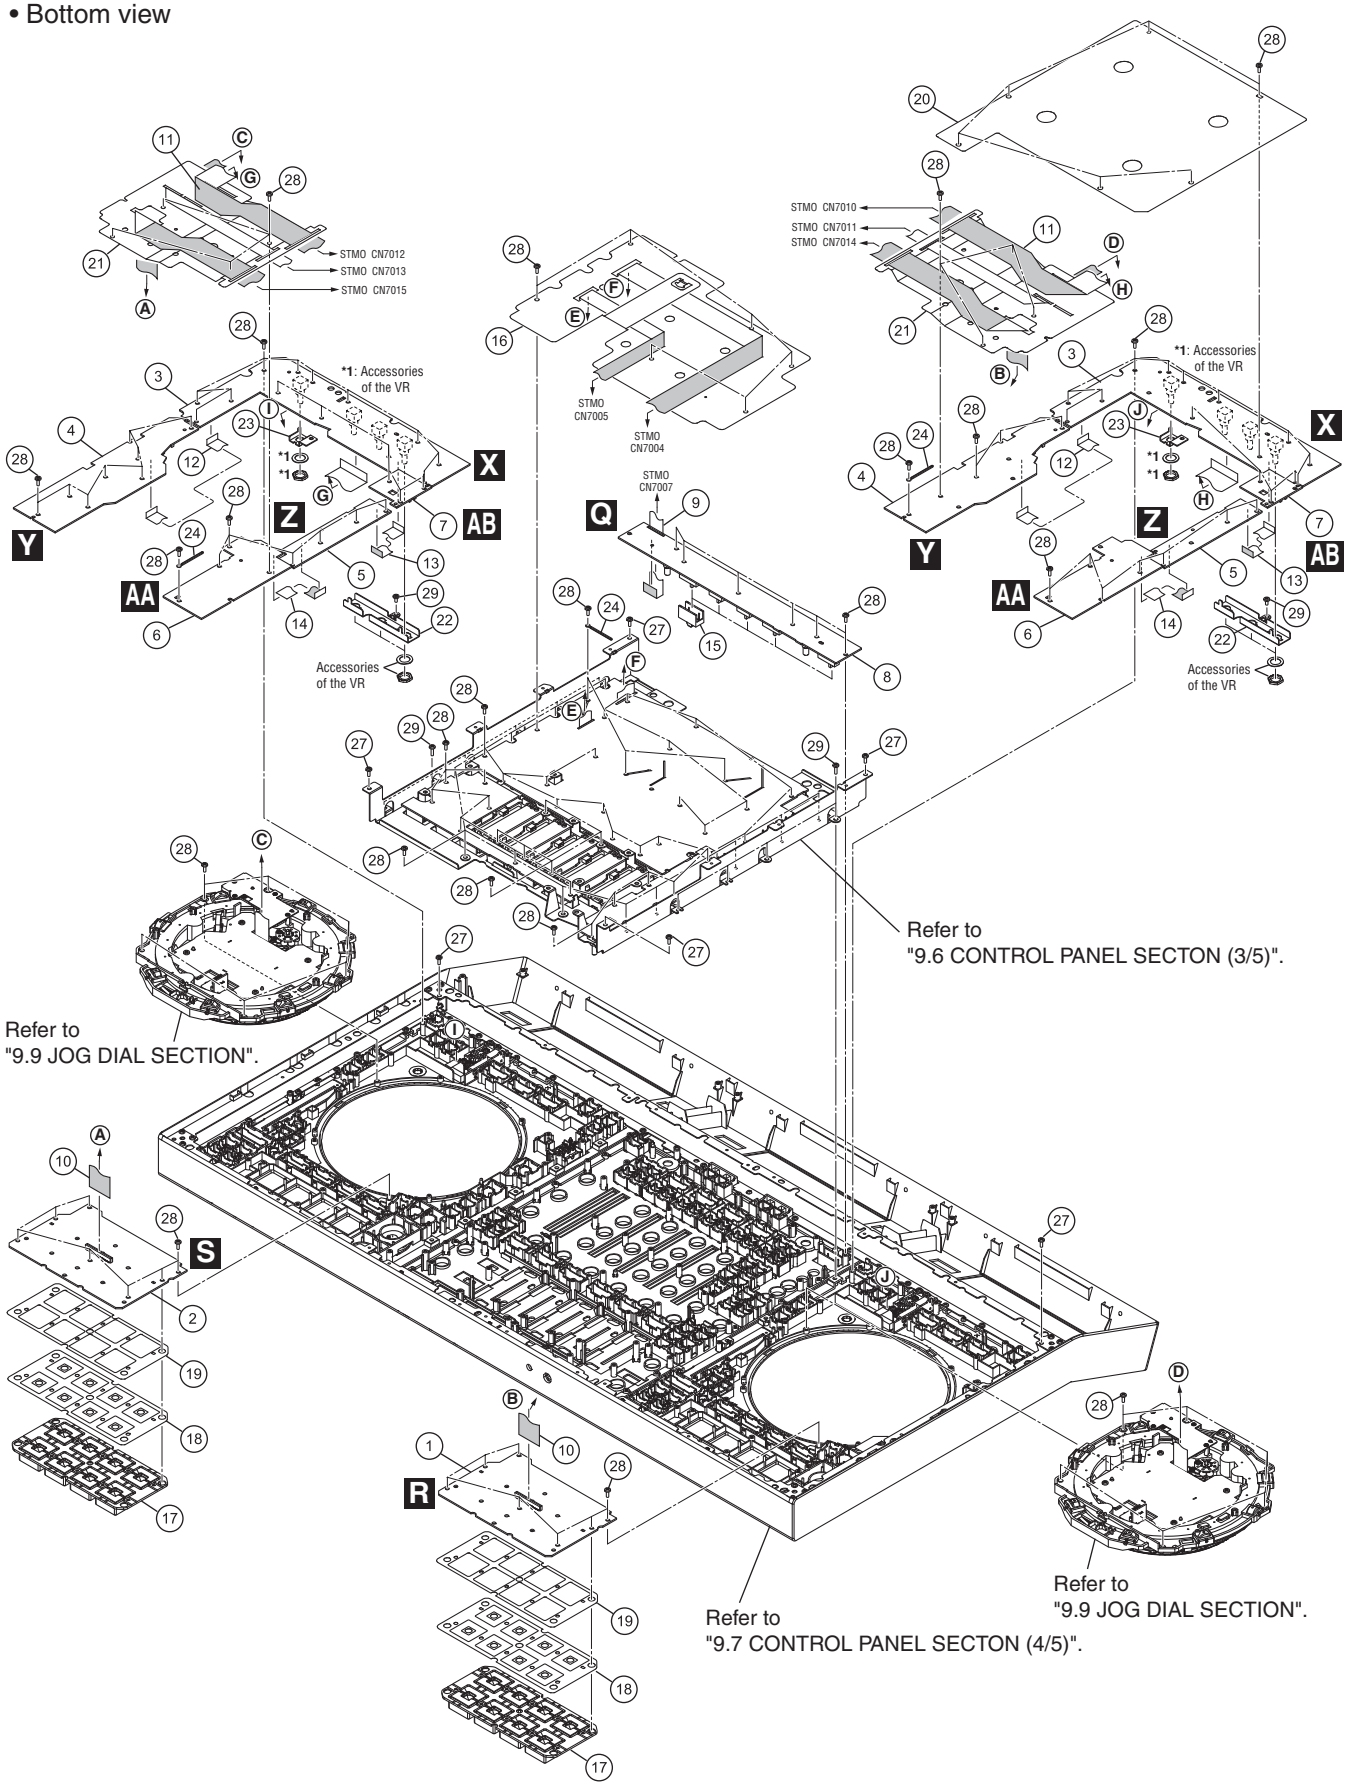

CONTROL PANEL SECTION (2/5) PARTS LIST

Mark	No.	Description	Part No.
	1	PAD1 Assy	DWX3818
	2	PAD2 Assy	DWX3819
	3	DEUP Assy	DWX3811
	4	SLDB Assy	DWX3812
	5	DUAL Assy	DWX3813
	6	PLAY Assy	DWX3814
	7	REVB Assy	DWX3826
	8	INSL Assy	DWX3800
	9	FFC	DDD1742
	10	FFC	DDD1745
	11	FFC	DDD1747
	12	FFC	DDD1748
	13	FFC	DDD1749
	14	12P FFC	DDD1507
	15	Cap	DAC3136
	16	Sheet	DEC3682
	17	Button/PAD	DEB2005
	18	Sensor	DEC3656
	19	Spacer	DEC3667
	20	Sheet	DEC3683
	21	Sheet	DEC3684
	22	Stay	DND1306
	23	Stay	DNF2004
	24	Cord Clamper (Steel)	RNH-184
	25	•••••	
	26	•••••	
	27	Screw	BBZ30P060FTC
	28	Screw	BPZ30P080FNI
	29	Screw	BPZ30P100FTC

9.6 CONTROL PANEL SECTION (3/5)

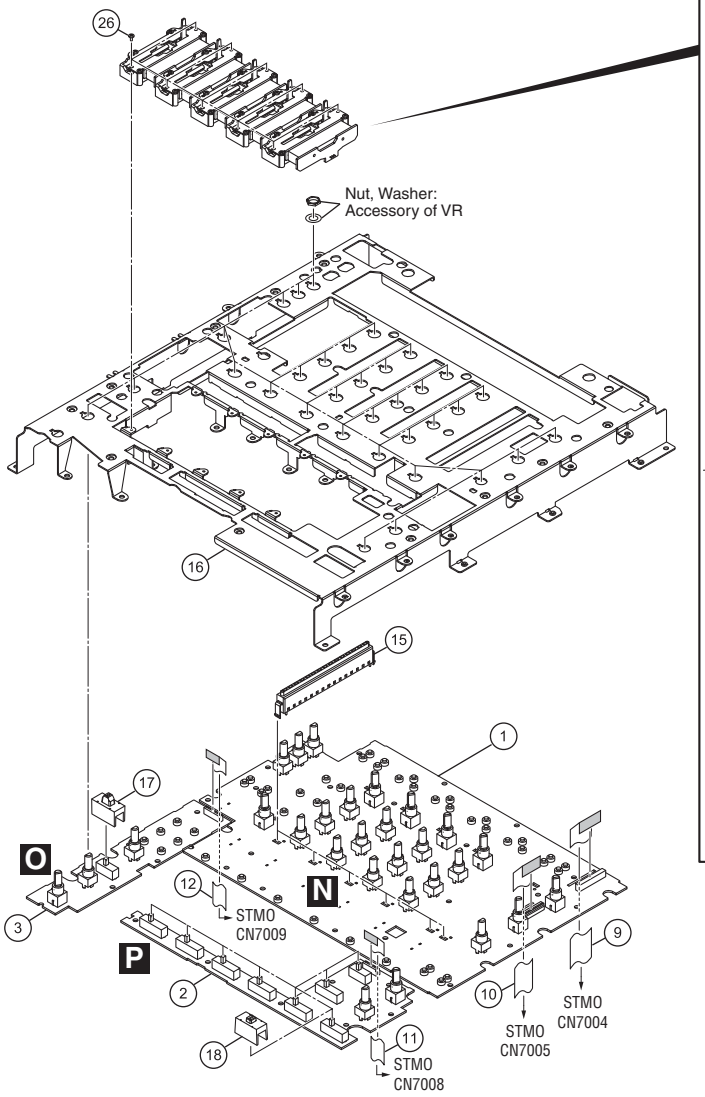

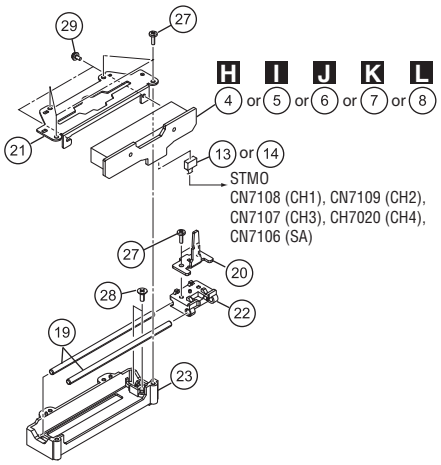

Lubricating oil
(GYA1001)

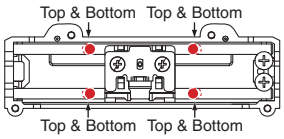

Note:
Greasing must be performed at a total of 8 points, 2 points each for the upper and bottom places of each shaft. (0.4 to 1 mg per point × 8 points)
After applying grease, move the slider base back and forth from one end to the other for approximately 10 to 20 strokes, in order to fully spread the grease.

注意:
グリス塗布位置は各シャフト上下2箇所ずつ計8箇所です。
(1ポイント当たり 0.4～1 mg ×8ポイント)
グリス塗布後はスライダーベースを動かして (フルストローク)
摺動部にグリスを十分なじませてください。
(動かす回数の目安は10～20往復)

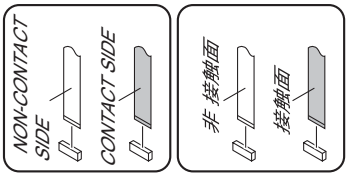

CONTROL PANEL SECTION (3/5) PARTS LIST

Mark	No.	Description	Part No.
	1	MIXA Assy	DWX3794
	2	OSCB Assy	DWX3802
	3	CFXB Assy	DWX3801
	4	CHFD1 Assy	DWX3803
	5	CHFD2 Assy	DWX3804
	6	CHFD3 Assy	DWX3805
	7	CHFD4 Assy	DWX3806
	8	SAFD Assy	DWX3807
	9	FFC	DDD1742
	10	FFC	DDD1743
	11	FFC	DDD1744
	12	FFC	DDD1789
	13	Connector Assy	PF03PP-C12
	14	Connector Assy	PF03PP4B12
	15	Level Meter Assy	DXB1882
	16	Stay	DND1305
	17	Cap	DAC3136
	18	Slide SW Cap (W)	DAC2401
NSP	19	Guide Shaft VK1	DLA1978
	20	Lever Plate	DNH2954
	21	VR Stay	DNH2955
	22	Slider Base	DNK5851
	23	Shaft Holder	DNK5852
	24	•••••	
	25	•••••	
	26	Screw	BSZ20P040FTB
	27	Screw	BPZ20P060FTC
	28	Screw	CPZ26P080FTC
	29	Screw	PMH20P040FTC

9.7 CONTROL PANEL SECTION (4/5)

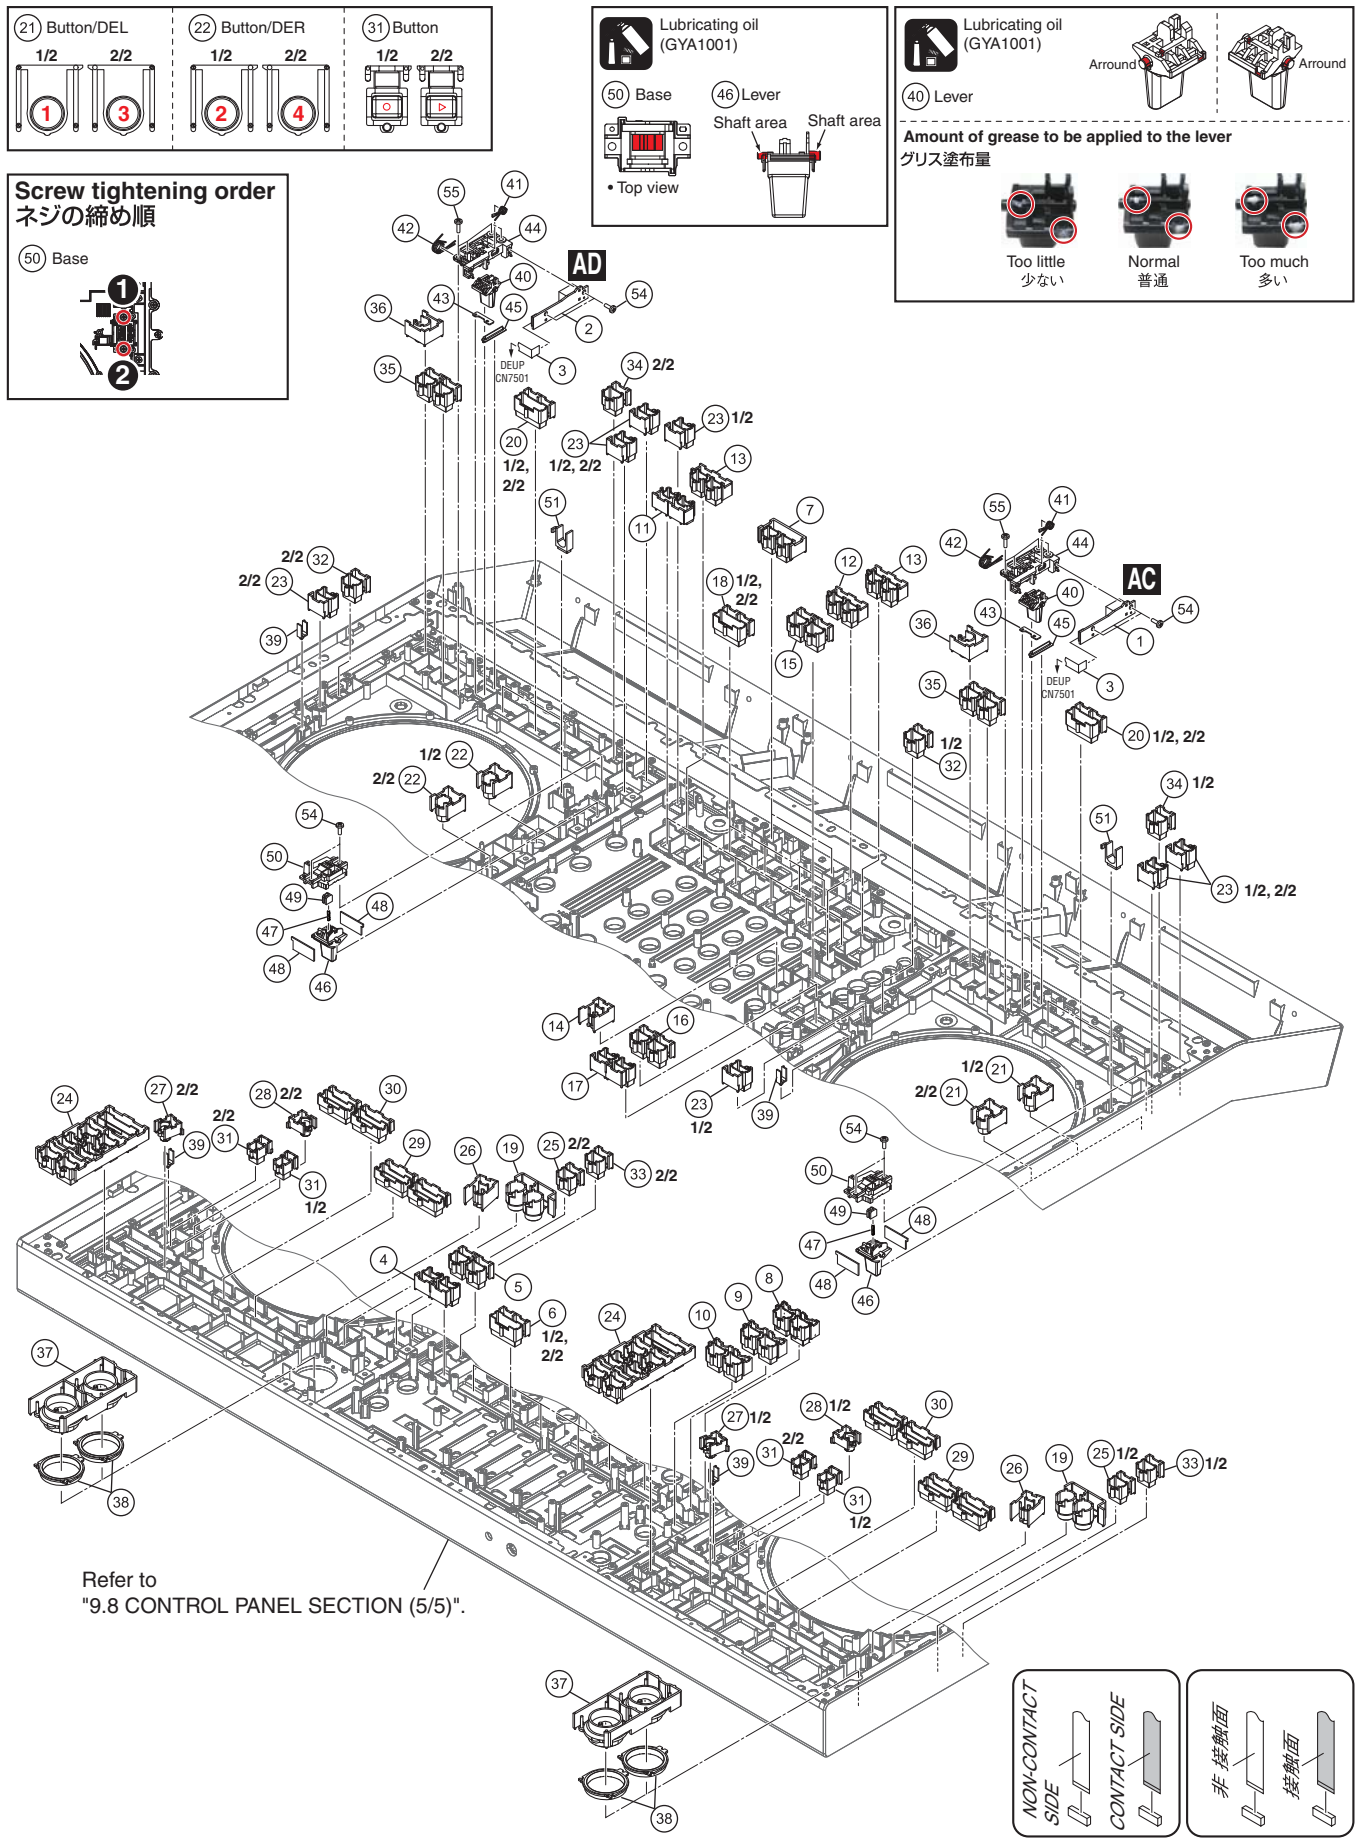

CONTROL PANEL SECTION (4/5) PARTS LIST

Mark	No.	Description	Part No.
	1	RFX1 Assy	DWX3820
	2	RFX2 Assy	DWX3821
	3	FFC	DDD1752
	4	Button/FX2	DAC2986
	5	Button	DAC3154
	6	Button	DAC3155
	7	Button	DAC3156
	8	Button	DAC3166
	9	Button	DAC3179
	10	Button	DAC3180
	11	Button	DAC3167
	12	Button	DAC3186
	13	Button	DAC3187
	14	Button	DAC3193
	15	Button	DAC3223
	16	Button	DAC3181
	17	Button	DAC3182
	18	Button	DAC3224
	19	Button/BSY	DAC2810
	20	Button/ON	DAC2991
	21	Button/DEL	DAC3000
	22	Button/DER	DAC3001
	23	Button	DAC3125
	24	Button	DAC3128
	25	Button	DAC3239
	26	Button	DAC3194
	27	Button	DAC3185
	28	Button	DAC3184
	29	Button	DAC3196
	30	Button	DAC3204
	31	Button	DAC3168
	32	Button	DAC3225
	33	Button	DAC3240
	34	Button	DAC3228
	35	Button	DAC3226
	36	Button	DAC3227
	37	Button	DXB2174
	38	Ring Rens (PLAY)	DNK5315
	39	Lens/TMP	DNK6307
	40	Lever	DAC2804
	41	Torsion Spring/LVR	DBH1790
	42	Torsion Spring/PRS	DBH1791
	43	Cushion	DEB1999
	44	Holder/LVR	DNK6025
	45	Lens	DNK6620
	46	Lever	DAC3097
	47	Lever Spring	DBH1702
	48	Brake	DEC3634
	49	Lever CAP	DNK5344
	50	Base	DNK6470
	51	Lens	DNK6622
	52	•••••	
	53	•••••	
	54	Screw	BPZ30P080FNI
	55	Screw	BPZ30P100FTC

9.8 CONTROL PANEL SECTION (5/5)

Screw tightening order
ネジの締め順

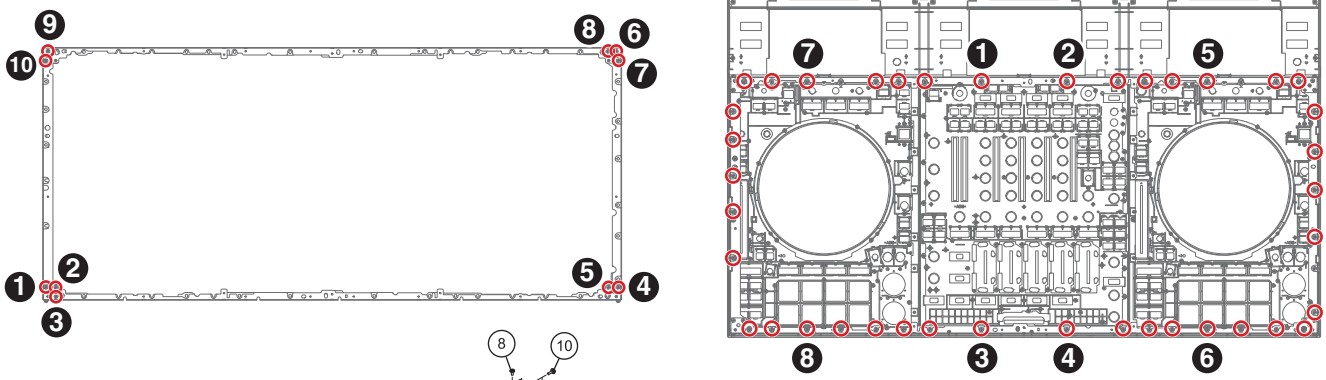

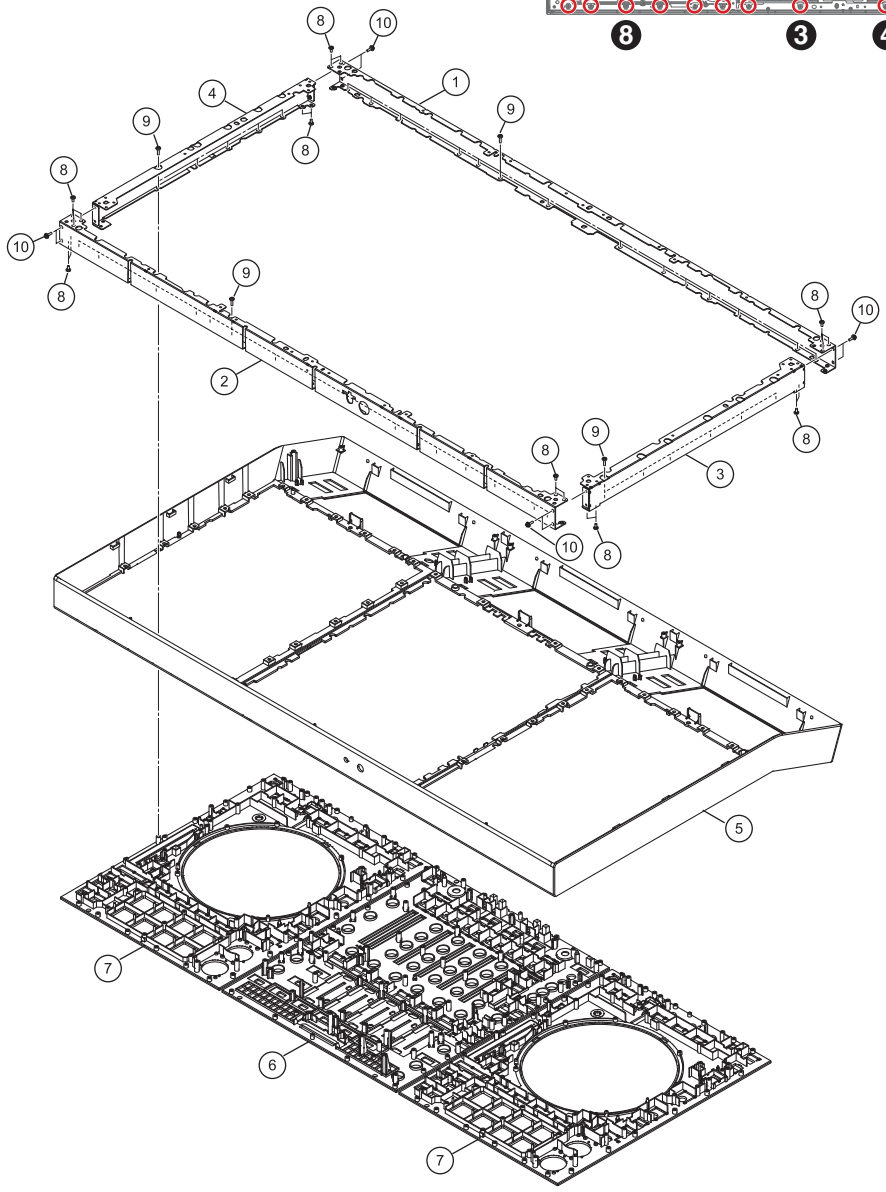

CONTROL PANEL SECTION (5/5) PARTS LIST

Mark	No.	Description	Part No.
	1	Frame	DNH3260
	2	Frame	DNH3261
	3	Frame	DNH3262
	4	Frame	DNH3263
	5	Frame	DNK6613
	6	Panel	DNK6614
	7	Panel	DNK6615
	8	Screw	BBZ30P060FTC
	9	Screw	BPZ30P100FTC
	10	Screw	PMB30P060FTC

9.9 JOG DIAL SECTION

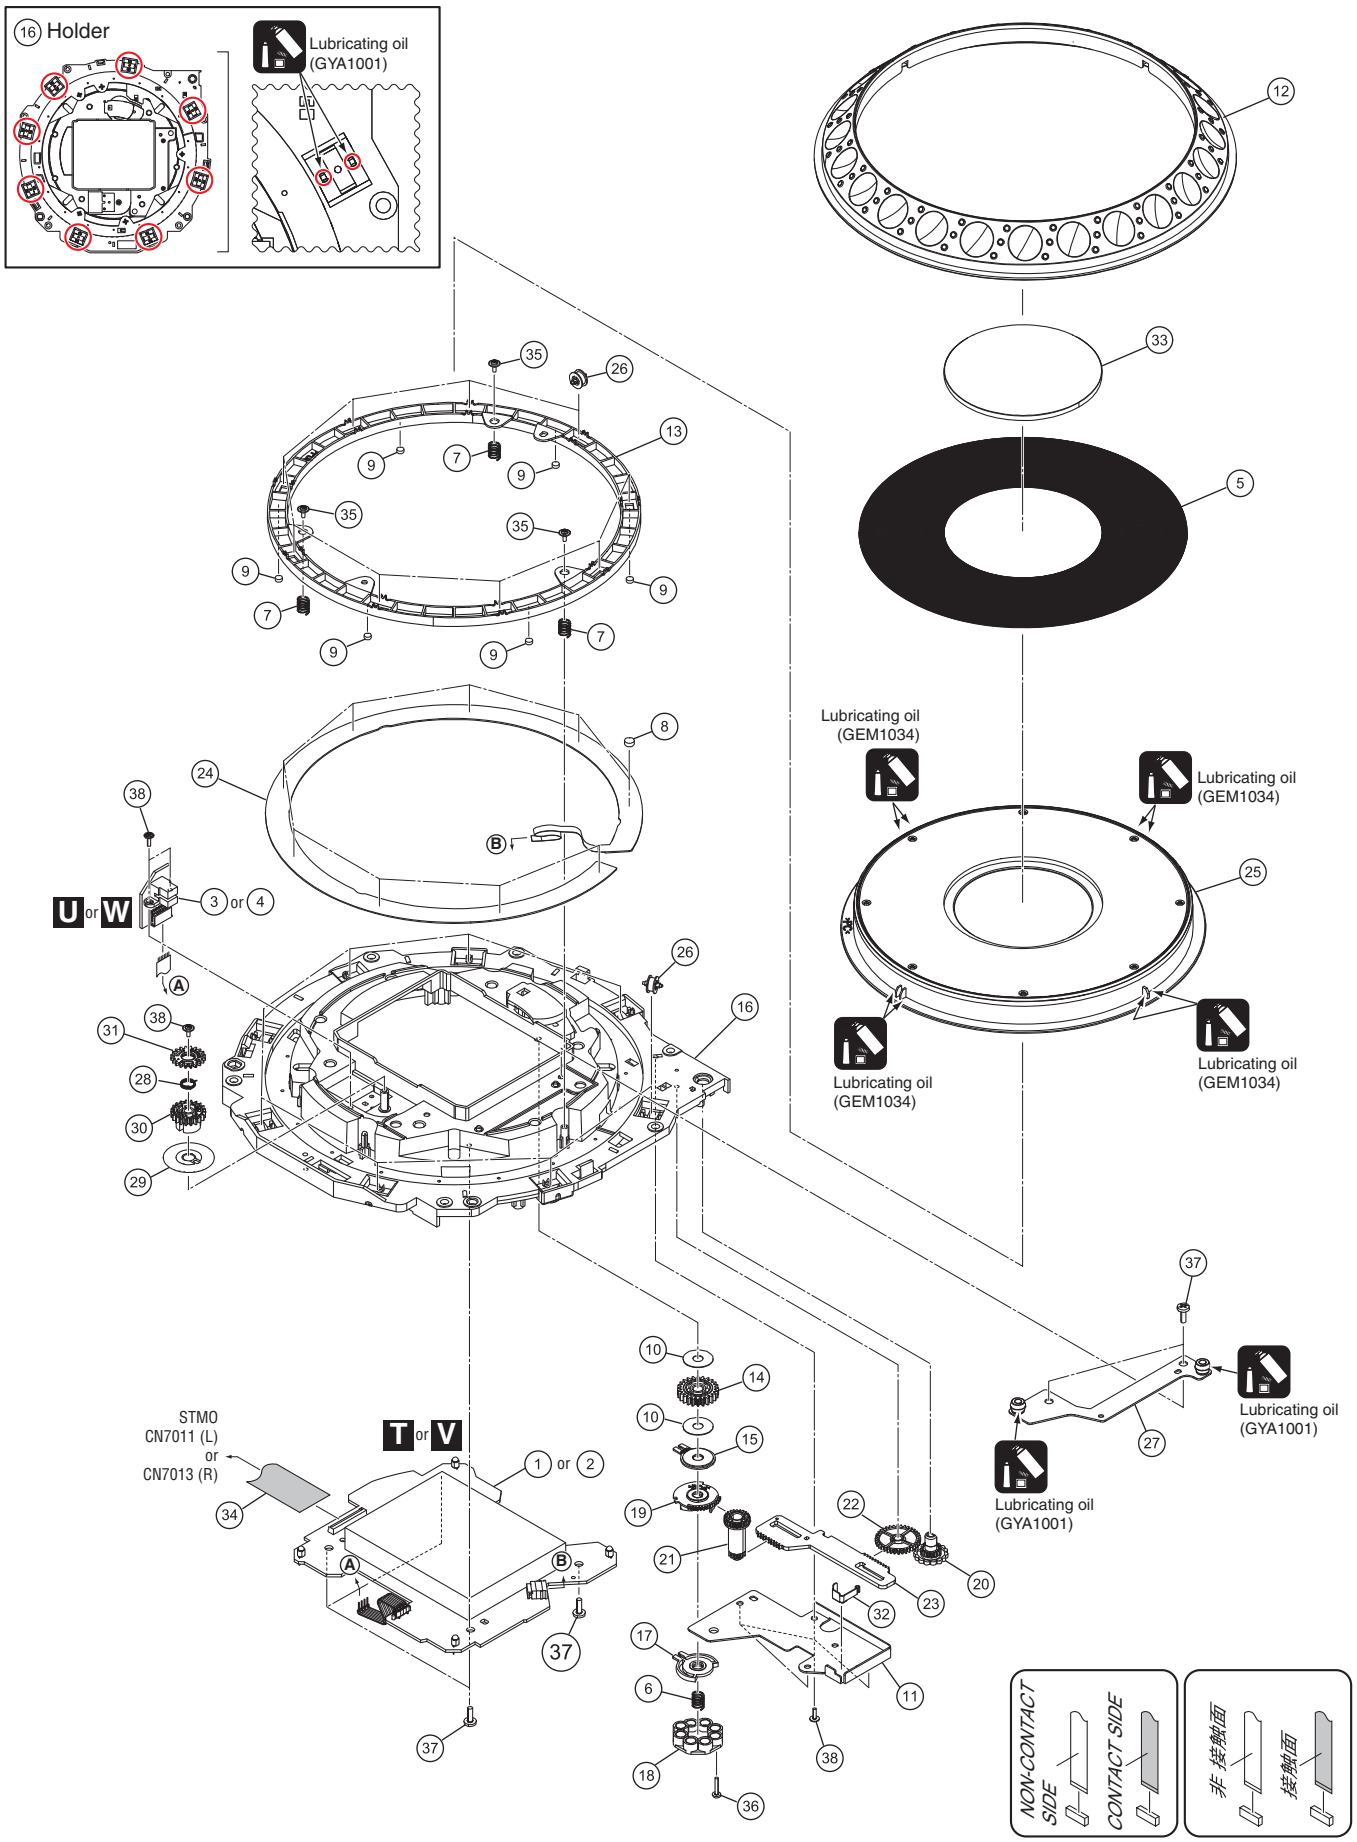

JOG DIAL SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	JFLB1 Assy (for Left deck)	DWX3795
	2	JFLB2 Assy (for right deck)	DWX3796
	3	JOGR1 Assy (for Left deck)	DWX3815
	4	JOGR2 Assy (for right deck)	DWX3827
	5	Jog Plate	DAH2679
	6	Coil Spring/LD	DBH1798
	7	SW Spring	DBH1681
	8	SW Cushion Hh48/2	DEC2538
	9	Cushion/RNG	DEC3466
	10	Washer	DEC3137
	11	Link Plate	DNH2848
	12	Jog B	DNK4068
	13	SW Ring	DNK5233
	14	Gear/LD	DNK6145
	15	Smoother	DNK5237
	16	Holder	DNK6556
	17	Comp Plate	DNK5243
	18	Adjust Plate	DNK5300
	19	Cam Plate	DNK5301
	20	Dial Gear	DNK5302
	21	Link Gear A	DNK5303
	22	Link Gear B	DNK5304
	23	Rack Plate	DNK5305
	24	Sheet SW	DSX1078
	25	Jog Dial A Assy	DXA2159
	26	Roller	DXB2178
	27	Stay Assy/Jog	DXB2133
	28	Encoder Spring	DBH1710
	29	Plate	DEC3700
	30	Gear/A	DNK6143
	31	Gear/B	DNK6144
	32	Leaf Spring/ADJ	DBK1376
	33	Jog Panel	DAH2609
	34	FFC	DDD1746
	35	Screw (FE)	DBA1265
	36	Screw	BPZ20P100FTC
	37	Screw	BPZ30P080FNI
	38	Screw	IPZ20P060FTC

12. PCB PARTS LIST

NOTES: ● *Parts marked by "NSP" are generally unavailable because they are not in our Master Spare Parts List.*
● *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
● *When ordering resistors, first convert resistance values into code form as shown in the following examples.*

Ex.1 When there are 2 effective digits (any digit apart from 0), such as 560 ohm and 47 k ohm (tolerance is shown by J = 5%, and K = 10%).

560 Ω → 56 × 10¹ → 561 ····· RD1/4PU 5 6 1 J
47 kΩ → 47 × 10³ → 473 ····· RD1/4PU 4 7 3 J
0.5 Ω → R50 ····· RN2H R 5 0 K
1 Ω → 1R0 ····· RS1P 1 R 0 K

Ex.2 When there are 3 effective digits (such as in high precision metal film resistors).

5.62 kΩ → 562 × 10¹ → 5621 ····· RN1/4PC 5 6 2 1 F

Mark	No.	Description	Part No.
		LIST OF ASSEMBLIES	
	1	..MAIN ASSY	DWX3822
	1	..LCDM ASSY	DWX3828
	1	..LCDP ASSY	DWX3791
	1	..MIXA ASSY	DWX3794
NSP	1	..PADA ASSY	DWM2594
	2	..CRFD ASSY	DWX3817
	2	..PAD1 ASSY	DWX3818
	2	..PAD2 ASSY	DWX3819
	2	..RFX1 ASSY	DWX3820
	2	..RFX2 ASSY	DWX3821
NSP	1	..MIXB ASSY	DWM2596
	2	..JFLB1 ASSY	DWX3795
	2	..JFLB2 ASSY	DWX3796
	2	..OSCB ASSY	DWX3802
	2	..CHFD1 ASSY	DWX3803
	2	..CHFD2 ASSY	DWX3804
	2	..CHFD3 ASSY	DWX3805
	2	..CHFD4 ASSY	DWX3806
	2	..SAFD ASSY	DWX3807
	2	..JOGR1 ASSY	DWX3815
	2	..JOGR2 ASSY	DWX3827
	2	..HOLD1 ASSY	DWX3889
	2	..HOLD2 ASSY	DWX3890
NSP	1	..JACK ASSY	DWM2597
	2	..JACB ASSY	DWX3797
	2	..MTRM ASSY	DWX3799
	2	..MCJK ASSY	DWX3809
	2	..HPJK ASSY	DWX3810
	2	..MSL1 ASSY	DWX3884
	2	..MSL2 ASSY	DWX3885
	2	..XYM1 ASSY	DWX3886
	2	..XYM2 ASSY	DWX3887
NSP	1	..CDJA ASSY	DWM2595
	2	..DEUP ASSY	DWX3811
	2	..SLDB ASSY	DWX3812
	2	..DUAL ASSY	DWX3813
	2	..PLAY ASSY	DWX3814
	2	..REVB ASSY	DWX3826
NSP	1	..UCOM ASSY	DWM2602
	2	..INSL ASSY	DWX3800
	2	..CFXB ASSY	DWX3801
	2	..PSWB ASSY	DWX3808
	2	..STMO ASSY	DWX3824

Mark	No.	Description	Part No.
⚠	1	..SW POWER SUPPLY ASSY	DWR1548

Mark	No.	Description	Part No.
		A MCJK ASSY	
		SEMICONDUCTORS	
		IC 8002,8003	NJM4580MD
		Q 8001-8004	2SK209
		D 8001-8012	DZ2J270M0
		MISCELLANEOUS	
		JA 8001,8003 XLR SOCKET	DKB1124
		CN 8001 CONNECTOR	CKS3561
		CN 8002 13P CONNECTOR	VKN1244
		VA 8001,8002 VARISTORS	EZJZ1V270RM
		RESISTORS	
		R 8001,8002,8025,8026	RS1/10SR0R0J
		R 8003,8004,8027,8028	RN1/16SE3301D
		R 8005,8012,8029,8036	RN1/16SE2701D
		R 8006,8010,8030,8034	RN1/16SE4701D
		R 8007,8009,8031,8033	RN1/16SE1501D
		R 8008,8032	RN1/16SE8200D
		R 8011,8035	RS1/10SR1500D
		R 8013-8015,8037	RS1/10SR1003D
		R 8018,8039-8041	RN1/16SE2200D
		R 8021,8022	RS1/10SR2201D
		R 8023,8024	RS1/10SR4702D
		Other Resistors	RS1/8SQ###J
		CAPACITORS	
		C 8001,8013,8043-8046	CCSRCH102J50
		C 8004,8005,8012,8032	ACE7113
		C 8006,8034	CKSRYB471K50
		C 8007,8010,8035,8038	CCSRCH471J50
		C 8008,8033,8036,8040	CKSRYB103K50
		C 8009,8037	CCSRCH331J50
		C 8011,8014,8015,8039	CEAT101M16
		C 8016,8018,8020,8022	CEAT101M25
		C 8027,8028	CCSRCH120J50
		C 8041,8042	CCSRCH101J50
		B MTRM ASSY	
		MISCELLANEOUS	

Mark	No.	Description	Part No.
	VR	6701,6702 ROTARY VR	DCS1123
	CN	6701 PLUG	CKS3533

RESISTORS

		All Resistors	RS1/8SQ###J

C MAIN ASSY

SEMICONDUCTORS

⚠	IC	1051,1103,1301	BD9328EFJ
⚠	IC	1101,1102,1151,1152	MM3542BF
⚠	IC	1153	NJM2392M
	IC	1154,1155,1157	BD2232G-G
⚠	IC	1201,1251	BD9851EFV
⚠	IC	1202	NJM78M15DL1A
⚠	IC	1203	NJM79M15DL1A
⚠	IC	1302	NJM7805DL1A
⚠	IC	1303	NJM2831F33
⚠	IC	1451	MM3542BF
	IC	1452-1454	BD2232G-G
⚠	IC	1601	TPS65910A31A1RSL
	IC	1701	AM3352BZCZ80
	IC	1802	W631GG6KB-12
	IC	2002	74LCX541FT
	IC	2003	TC7SH04FUS1
	IC	2004,2005	74LCX373FT
	IC	2006	DYW1981*
	*Part number of the initial firmware equipped		
	IC	2201,2206	74LCX244FT
	IC	2202,3002,3202	TC7SG08FU
	IC	2601,3101	D810K013DZKB456
	IC	2801,2851	M12L2561616A-5TG2S
	IC	3601,3603	TC7SZ08FUS1
	IC	3602	SI5351C-B03300GM
	IC	3604	74LCX08FT
	IC	3605-3609,3613,4902	TC7SH08FUS1
	IC	3610,3611	TC74VHC08FK
	IC	3612	TC7SZ125FUS1
	IC	3701	AK4490EQ
	IC	3702,3703,3902,3903	NJM8901E
	IC	3901	AK4382AVT
	IC	4101,4201,4301,4401	NJM4580MD
	IC	4103,4205,4303,4405	AK5381VT
	IC	4202,4203,4402,4403	NJM2121MD
	IC	4501	AK4387ET
	IC	4502,4601,4602	NJM4580MD
	IC	4603	AK5381VT
	IC	4901,4951	USB2512B-AEZG-TR
	IC	4952	TC7SH08FUS1
	Q	1001	LTC043EEB
	Q	1101	LSAR523UB
	Q	1102	LTC024EEB
	Q	1103	2SB1689
	Q	1201	RSR020P05
	Q	1202	RTQ045N03
	Q	1251,1252	RSQ030P03
	Q	1405-1407	HN1A01FU
	Q	1408,1409	HN1C01FU
	Q	1411	LSCR523UB
	Q	2901,4051,4052,4055	LTC124EUB
	Q	4053,4054	LTA143EUB
	Q	4056	LTC124EUB
	Q	4057	LSC4081UB
	Q	4058,4059	LSA1576UB
	Q	4201,4202,4401,4402	2SK3320
	Q	4205,4405	LTC114EUB
	Q	4501,4502	INC2002AC1
	Q	4503,4505	2SD1767
	Q	4504,4506	2SB1189
	Q	4507	2SA1577
	D	1102	RB162M-40
	D	1151	RB160L-40
	D	1201,1202,1251-1253	DB2J41100
	D	1205,1206,1301	RB501VM-40
	D	1405,1412,1413,4053	DA2J101
	D	1406,1407	DAN202UM
	D	3901	DZ2J056M0
	D	4051,4052	RB160M-30

MISCELLANEOUS

	L	1052 INDUCTOR	CTH1255
	L	1101,1103 SMD SPL INDUCTOR	CTH1584
	L	1102 CHOKE COIL	CTH1561
	L	1151,1153,1451 SMD SPL INDUCTOR	CTH1524
	L	1152 CHOKE COIL	CTH1209
	L	1201,1202,1251 POWER INDUCTOR	ATH7011
	L	1252 POWER INDUCTOR	ATH7011
	L	1301 POWER INDUCTOR	ATH7053
	L	1601-1603 SMD SPL INDUCTOR	CTH1531
	L	2601,3101 CHIP SOLID INDUCTOR	QTL1013
	L	2602,3102 SMD FERRITE BEADS	CTF1823
	L	4901-4903,4951 COIL	ATH7015
	JA	4101,4301 RCA JACK	DKB1122
	JA	4201,4401 4P PIN JACK	DKB1090
	JA	4901,4951 USB CONNECTOR	DKN1237
	KN	1001-1003 WRAPPING TERMINAL	CKF1089
	KN	1005-1011 WRAPPING TERMINAL	CKF1089
	X	2201 CRYSTAL OSCILLATOR	CWX4280
	X	3601 CRYSTAL OSCILLATOR	ASS7102
	X	4901,4951 RESONATOR	CSS1808
	CN	1001 CONNECTOR	DKN1661
	CN	3401 CONNECTOR	VKN2050
	CN	3451 PLUG(3P)	KM200NA3
	CN	3501,3551,3701 39P CONNECTOR	VKN2097
	CN	4501 6PJUMPER CONNECTOR	52151-0610
	CN	4601 13P CONNECTOR	VKN1244
	CN	4901 CONNECTOR	AKM1281
	VA	4101,4102,4201,4301 VARISTORS	EZJZ1V270RM
	VA	4302,4401 VARISTORS	EZJZ1V270RM
	VA	4901-4903 SMD VARISTOR	EZJZ1V80010
	VA	4951-4953 SMD VARISTOR	EZJZ1V80010

RESISTORS

	R	1004,1058,1120,1121	RS1/8SQ0R0J
	R	1051,4622	RS1/10SR104J
	R	1052,1211,1213,2755	RS1/10SR220J
	R	1054,1170,4521,4522	RS1/10SR2702D
	R	1055,1202,1206,1218	RS1/10SR1002D
	R	1056	RS1/10SR223J
	R	1057	RS1/10SR393J
	R	1059	RS1/8SQ1R8J
	R	1108	RS1/16SS1802D
	R	1109	RS1/16SS1502D

Mark	No.	Description	Part No.
R	1110		RS1/16SS6801D
R	1111		RS1/16SS8201D
R	1112		RS1/16SS51R0D
R	1113,1116,1119,1159		RS1/16SS2201D
R	1114		RS1/10SR6801D
R	1115		RS1/10SR75R0D
R	1117		RS1/16SS8200D
R	1123-1125,1174-1180		RS1/8SQ0R0J
R	1127-1130		RS1/4SA2R7J
R	1133		RS1/8SQ471J
R	1134-1136		RS1/4SA101J
R	1151,1164,1453		RS1/16SS2202D
R	1152,1160,1420,1451		RS1/10SR0R0J
R	1153,1154		RS1/4SA1R0J
R	1157,1167,1428,1454		RS1/16SS1202D
R	1158,1168,1455,4101		RS1/10SR1000D
R	1169,1456		RS1/16SS2201D
R	1171		RS1/10SR2701D
R	1172		RS1/10SR1501D
R	1182,1187,1225-1231		RS1/8SQ0R0J
R	1201,1210,1251		RS1/10SR1502D
R	1203,1214,1253,1264		RS1/10SR3002D
R	1204,1217,1254,1267		RS1/10SR6802D
R	1205		RS1/10SR1803D
R	1207,1221		RS1/10SR5101D
R	1212,1262		RS1/10SR472J
R	1215,1265		RS1/10SR105J
R	1216		RS1/10SR6201D
R	1220		RS1/10SR1503D
R	1222		RS1/10SR2002D
R	1223,1224,1272,1274		RS1/4SA0R0J
R	1252,1260,1269,4519		RS1/10SR1002D
R	1255		RS1/10SR5102D
R	1256,3727-3734		RS1/10SR5601D
R	1259		RS1/10SR123J
R	1261,1263,2753		RS1/10SR100J
R	1266,4621		RS1/10SR103J
R	1270		RS1/10SR6202D
R	1273,4109,4110,4233		RS1/10SR3001D
R	1277,1309,1310,1457		RS1/8SQ0R0J
R	1306,1308		RS1/16SS1002D
R	1307		RS1/16SS6802D
R	1426		RS1/16SS1002F
R	1429		RS1/16SS2002D
R	1458,1460,1462,1465		RS1/8SQ0R0J
R	1603,1618,2171,2601		RS1/10SR0R0J
R	1619-1627,4540-4542		RS1/8SQ0R0J
R	1801		RS1/16SS49R9F
R	1802,1803		RS1/16SS1001D
R	1806		RS1/16SS2400F
R	1807		RS1/16SS1000D
R	2801,2851,3101,3646		RS1/10SR0R0J
R	3602,3603		RS1/16SS56R0F
R	3701,3702,3711-3716		RS1/10SR0R0J
R	3708,3710		RS1/10SR101J
R	3709,4223,4224,4423		RS1/10SR470J
R	3743-3750,3768,3771		RS1/10SR0R0J
R	3751-3758,3945-3952		RN1/16SE1802D
R	3759-3766,3953-3960		RS1/10SR10R0D
R	3773,3775,3777		RS1/10SR0R0J

Mark	No.	Description	Part No.
R	3921-3928		RS1/10SR5601D
R	3937-3944,4134-4137		RS1/10SR0R0J
R	4102,4201-4204,4301		RS1/10SR1000D
R	4103,4104,4205-4208		RS1/10SR2000D
R	4105,4106,4209-4212		RS1/10SR1003D
R	4107,4108,4213-4216		RS1/10SR9102D
R	4111,4112,4235,4236		RS1/10SR3301D
R	4113,4114,4237,4238		RS1/10SR3601D
R	4115,4116,4241,4242		RS1/10SR821J
R	4124,4125,4218,4220		RN1/16SE1201D
R	4217,4219,4221,4222		RN1/16SE1501D
R	4225-4228,4425-4428		RS1/10SR1201D
R	4229,4230,4429,4430		RN1/16SE2703D
R	4231,4232,4431,4432		RN1/16SE2202D
R	4234,4309,4310,4433		RS1/10SR3001D
R	4239,4240,4439,4440		RS1/10SR473J
R	4302,4401-4404		RS1/10SR1000D
R	4303,4304,4405-4408		RS1/10SR2000D
R	4305,4306,4409-4412		RS1/10SR1003D
R	4307,4308,4413-4416		RS1/10SR9102D
R	4311,4312,4435,4436		RS1/10SR3301D
R	4313,4314,4437,4438		RS1/10SR3601D
R	4315,4316,4441,4442		RS1/10SR821J
R	4324,4325,4418,4420		RN1/16SE1201D
R	4334-4337,4507,4508		RS1/10SR0R0J
R	4417,4419,4421,4422		RN1/16SE1501D
R	4424		RS1/10SR470J
R	4434		RS1/10SR3001D
R	4509-4512		RS1/10SR183J
R	4513,4514		RS1/10SR3301D
R	4515,4516,4539,4928		RS1/10SR0R0J
R	4517,4518		RS1/10SR1001D
R	4520,4603-4606		RS1/10SR1002D
R	4523-4526,4529,4531		RS1/4SA0R0J
R	4527,4528		RS1/10SR102J
R	4549,4550		RS1/4SA680J
R	4607,4608		RS1/10SR3601D
R	4609,4610		RS1/10SR821J
R	4910,4920,4960,4970		RS1/8SQ0R0J
R	4918,4968		RS1/16SS1202F
R	4936,4937,4978		RS1/10SR0R0J
	Other Resistors		RS1/16SS###J

CAPACITORS

C	1001,1002,1004,1006		CKSRYB104K16
C	1003,1171,2204,2638		CCSSCH101J50
C	1005,1163,1183,1227		CCSSCH102J50
C	1007,1321		CFHXSQ103J16
C	1008,1017,1052,1053		ACG1142
C	1009		CFHXSP104J16
C	1010,1013,1014,1018		CCH1565
C	1011		CCG1325
C	1016,1019,1054,1056		CKSRYB104K16
C	1051,1143,1144,1271		CKSSYB104K16
C	1055,1062,3705,3710		CCSRCH102J50
C	1057,1064,3704,3709		CKSRYB104K16
C	1058,1201,1238,1239		CKSRYB103K50
C	1059		ACG1142
C	1063,1315,1620,3703		CCH1565
C	1101-1103,1151,1152		CCG1236

Mark	No.	Description	Part No.
	C	1104-1106,1134-1136	CKSQYB104K50
	C	1107-1109,1131-1133	CKSRYB102K50
	C	1113-1115,1119-1121	CKSSYB104K10
A	C	1116,1117,1159,1166	CKSRYB153K50
	C	1118	CKSSYB473K16
	C	1122	CKSSYB222K50
	C	1123	CKSSYB272K50
	C	1124	CKSRYB273K25
	C	1137-1142,1173,1176	CCG1192
	C	1145	CEVW471M16
	C	1153,1155,1172,1184	CKSQYB104K50
	C	1154,1242,1243,1278	CEVW101M25
	C	1156,1158,1169,1182	CKSRYB102K50
	C	1157,1223,1225,1301	CCG1236
B	C	1160,1221,1224,1234	CKSRYB104K25
	C	1162,1164,1165,1167	CKSSYB104K10
	C	1168,1170,1458	CKSSYB182K50
	C	1178	CCSSCH151J50
	C	1181,1187,1189,1198	CCG1192
	C	1185,1190-1192,1194	CKSQYB104K50
	C	1186	CKSRYB104K50
	C	1188	CEVW331M35
	C	1195,1452,1460,1463	CKSQYB104K50
	C	1203,1222	CCSSCH271J50
C	C	1205	CKSSYB332K50
	C	1208,1213,1258,1263	DCH1263
	C	1210	CCSSCH221J50
	C	1211,1215,1216,1261	CKSRYB105K16
	C	1214,1264	CKSYB105K16
	C	1219,1270	CKSSYB682K25
	C	1226,1228,1236,1237	CKSQYB105K25
	C	1229,1231,4516,4518	CEVW470M25
	C	1230,1240,1241,1277	CCSSCH102J50
	C	1232,1318	CKSRYB334K25
	C	1233	CKSYB225K25
D	C	1235,4102,4126,4202	CKSRYB104K25
	C	1251,3702,3706	CKSRYB103K50
	C	1254	CKSSYB472K50
	C	1260	CCSSCH561J50
	C	1265,1266,1275,1279	CKSRYB105K16
	C	1272,1276,1313,1464	CCG1192
	C	1274,1302,1306,1312	CKSSYB104K16
	C	1280,1303,1311,1320	CCSSCH102J50
	C	1281,4111,4114,4231	CEVW101M25
	C	1305,1309,1323,1455	CKSSYB104K10
	C	1307	CKSSYB223K16
E	C	1322	CCH1961
	C	1324,1601-1603,1606	CCG1218
	C	1401,3731,3732	CCH2090
	C	1402,1403,1622,4912	CKSRYB105K10
	C	1408,1712-1715	CKSSYB103K16
	C	1451	CCG1236
	C	1453,1462,4101,4125	CKSRYB102K50
	C	1456	CKSRYB474K16
	C	1457,1611,1701,1702	CKSSYB104K10
	C	1465,1471,1608,1609	CCG1192
	C	1466-1470	CKSQYB104K50
F	C	1604,1605,1610,1614	CCG1212
	C	1607,1612,1616,1619	CCG1218
	C	1613,1615,1617,1621	CCG1192

Mark	No.	Description	Part No.
	C	1618	CCG1212
	C	1703-1709,1716,1717	CCG1192
	C	1710,1711,1718,1726	CKSSYB104K10
	C	1719-1725,1727-1729	CKSSYB103K16
	C	1730,1736,1742,1744	CKSSYB104K10
	C	1731,1732,1735	CKSSYB103K16
	C	1733,1734,1773,1774	CCG1192
	C	1737-1741,1743	CKSSYB103K16
	C	1745-1747,1749-1751	CKSSYB103K16
	C	1748,1752,1754-1761	CKSSYB104K10
	C	1753,1766-1772,1775	CKSSYB103K16
	C	1762-1764,1801,1802	DCH1266
	C	1776,2008,2011,2012	CKSSYB103K16
	C	1803-1807,1820	CKSSYB104K10
	C	1808,2009,2601-2604	CCG1192
	C	1809-1819	CKSSYB224K6R3
	C	2001,2002,2203,2206	CCSSCH102J50
	C	2004-2007,2201,2205	CKSSYB104K10
	C	2010,2607,2608,3107	CKSSYB471K50
	C	2202,2609,2611,2613	CKSSYB103K16
	C	2207,2214,2215,2404	CCSSCH102J50
	C	2209,2219,2221,2605	CKSSYB104K10
	C	2402,2403,2405,2406	CCSSCH471J50
	C	2407-2409,3401,3402	CCSSCH102J50
	C	2606,3002,3003,3105	CKSSYB104K10
	C	2610,2612,2614,2616	CKSSYB102K50
	C	2615,2617,2619,2621	CKSSYB103K16
	C	2618,2620,2622,2624	CKSSYB102K50
	C	2623,2625,2627,2629	CKSSYB103K16
	C	2626,2628,2630,2632	CKSSYB102K50
	C	2631,2633,2635-2637	CKSSYB103K16
	C	2634,3110,3112,3114	CKSSYB102K50
	C	2639,2803-2809	CKSSYB103K16
	C	2640,3140,4916,4966	DCH1266
	C	2801,2851,3101-3104	CCG1192
	C	2853-2859,2902,3001	CKSSYB103K16
	C	3106,3202,3203,3601	CKSSYB104K10
	C	3108	CKSSYB471K50
	C	3109,3111,3113,3115	CKSSYB103K16
	C	3116,3118,3120,3122	CKSSYB102K50
	C	3117,3119,3121,3123	CKSSYB103K16
	C	3124,3126,3128,3130	CKSSYB102K50
	C	3125,3127,3129,3131	CKSSYB103K16
	C	3132,3134,3602,3607	CKSSYB102K50
	C	3133,3135-3137,3139	CKSSYB103K16
	C	3138	CCSSCH101J50
	C	3201,3605,3606,3609	CKSSYB103K16
	C	3403,3415,3427	CCSSCH470J50
	C	3404-3406,3425,3426	CCSSCH102J50
	C	3451,3518,3523,3524	CCSSCH102J50
	C	3505-3507,3509	CCSSCH470J50
	C	3511-3513,3515-3517	CCSSCH470J50
	C	3520-3522,3556,3559	CCSSCH470J50
	C	3551,3552,3567,4918	CCSSCH102J50
	C	3560,3563-3565	CCSSCH470J50
	C	3603,3604,3608,3612	CKSSYB104K10
	C	3610,3701,3901,4130	CKSSYB103K16
	C	3611,3613-3616	CKSSYB102K50
	C	3617-3620,3624-3626	CKSSYB104K10
	C	3621-3623,3634,3636	CKSSYB102K50

Mark	No.	Description	Part No.
	C	3635,3637,4903,4905	CKSSYB104K10
	C	3708,3905	CCH1565
	C	3711,3720,3727,3728	CCSRCH102J50
	C	3712,3719	ACE7100
	C	3715,3716	CCH1680
	C	3724,3726	CEVW470M16
	C	3737-3740,3903	CCSRCH102J50
	C	3741-3748,3914-3921	CCSRCH121J50
	C	3749,3752,3755,3756	CCH2000
	C	3904,4124,4128,4132	CKSRYB104K16
	C	3910-3913,4129,4131	CCSRCH102J50
	C	3922,3925,3928,3929	CCH2000
	C	3930	CEVW221M16
	C	4054	CKSSYB103K25
	C	4103,4104,4203-4206	CCSRCH221J50
	C	4105,4106,4207-4210	CCSRCH101J50
	C	4107,4108,4121,4122	CEVW101M16
	C	4123,4248,4323,4448	CEVW220M16
	C	4127,4133,4252,4258	CCH1998
	C	4201,4301,4325,4401	CKSRYB102K50
	C	4211,4212,4246,4247	CEVW101M16
	C	4215,4216,4415,4416	CCSRCH471J50
	C	4217,4218,4417,4418	CKSRYB123K50
	C	4219,4220,4419,4420	CEVW221M10
	C	4221,4222,4421,4422	CCSRCH331J50
	C	4223,4224,4423,4424	ACE7125
	C	4225,4226,4425,4426	DCG1049
	C	4232,4235,4238,4311	CEVW101M25
	C	4241,4302,4326,4402	CKSRYB104K25
	C	4249,4253,4257,4324	CKSRYB104K16
	C	4254,4256,4329,4331	CCSRCH102J50
	C	4255,4330,4455,4501	CKSSYB103K16
	C	4303,4304,4403-4406	CCSRCH221J50
	C	4305,4306,4407-4410	CCSRCH101J50
	C	4307,4308,4321,4322	CEVW101M16
	C	4314,4431,4432,4435	CEVW101M25
	C	4327,4333,4452,4458	CCH1998
	C	4328,4332,4449,4453	CKSRYB104K16
	C	4411,4412,4446,4447	CEVW101M16
	C	4438	CEVW101M25
	C	4441	CKSRYB104K25
	C	4454,4456,4502,4504	CCSRCH102J50
	C	4457,4505,4506,4614	CKSRYB104K16
	C	4503,4507	CCG1192
	C	4508,4509,4611,4612	CEVW101M16
	C	4512,4513	CCSRCH561J50
	C	4514,4515	CCSRCH120J50
	C	4520-4523,4601,4602	CEVW470M25
	C	4606,4608	CEVW470M25
	C	4613	CEVW220M16
	C	4617,4623	CCH1998
	C	4618,4622	CKSRYB104K16
	C	4619,4621	CCSRCH102J50
	C	4620,4901,4951	CKSSYB103K16
	C	4902,4921,4952,4971	DCH1201
	C	4904,4954	CCG1201
	C	4906,4908-4911,4915	CKSSYB104K10
	C	4907,4957	CCSSCH120J50
	C	4913,4962,4963	CKSRYB105K10
	C	4914,4964	CCSSCH150J50
	C	4917,4919,4922,4926	CKSSYB104K10
	C	4920,4970	CKSSYB102K50
	C	4923-4925,4968,4973	CCSSCH102J50
	C	4953,4955,4956	CKSSYB104K10
	C	4958-4961,4965,4967	CKSSYB104K10
	C	4969,4972,4974	CKSSYB104K10

D PSWB ASSY

MISCELLANEOUS

	S	6801 PUSH SW	ASG1102
	CN	6801 PLUG(3P)	KM200NA3

RESISTORS

		All Resistors	RS1/10SR###J

E HPJK ASSY

SEMICONDUCTORS

	Q	8101,8102	INC2002AC1

MISCELLANEOUS

	JA	8101 HEADPHONE JACK	DKN1622
	JA	8102 STEREO MINI JACK	XKN3017
	KN	8101 EARTH TERMINAL	AKF7002
	JH	8101 6P CABLE HOLDER	51048-0600
	VA	8101,8102 VARISTORS	EZJZ1V270RM

RESISTORS

	R	8101,8103	RS1LMF220J
		Other Resistors	RS1/10SR###J

CAPACITORS

	C	8101-8104	CKSRYB473K50
	C	8105,8107	CKSRYB103K50
	C	8109,8110	CEANP471M6R3

F JACB ASSY

SEMICONDUCTORS

	IC	6201,6202,6501,6502	NJM4580DD
	IC	6401	NJM4580MD
	Q	6201-6208,6401-6404	INC2002AC1
	Q	6501-6508	INC2002AC1
	D	6201-6204,6501-6504	DZ2S180C

MISCELLANEOUS

	JA	6201,6202 CANON CONNECTOR	DKB1093
	JA	6401 RCA JACK	DKB1120
	JA	6501,6502 6.5 DIA JACK	DKN1653
	CN	6401 39P CONNECTOR	VKN2097
	VA	6201,6202,6401,6501 VARISTORS	EZJZ1V270RM
	VA	6502 VARISTORS	EZJZ1V270RM

RESISTORS

	R	6201-6208,6501-6508	RS1/10SR5601D
	R	6209-6216,6509-6516	RN1/16SE6801D
	R	6217-6220,6517-6520	RD1/2VM271J
	R	6221-6224,6521-6524	RS1/10SR2201D
	R	6229,6232,6233,6236	RD1/2VM100J
	R	6401,6402	RS1/10SR2202D
	R	6403,6404	RS1/10SR1002D
	R	6529,6532,6533,6536	RD1/2VM100J
		Other Resistors	RS1/10SR###J

Mark	No.	Description	Part No.
CAPACITORS			
	C	6201,6204,6205,6207	DCG1062
	C	6202,6209,6215,6216	CEHAZL101M25
	C	6208,6211,6212,6214	DCG1062
	C	6217-6220	ACH1482
	C	6221-6224,6409,6410	DCE1018
	C	6225,6227,6411,6527	CKSRYB103K50
	C	6401,6402,6501,6504	DCG1062
	C	6403,6406,6502,6509	CEHAZL101M25
	C	6407,6408	CEAT101M25
	C	6505,6507,6508,6511	DCG1062
	C	6512,6514	DCG1062
	C	6515,6516	CEHAZL101M25
	C	6517-6520	ACH1480
	C	6521-6524	DCE1018

G STMO ASSY

SEMICONDUCTORS			
	IC	7000,7002,7006	TC74HC4052AF
	IC	7001	DYW1973*
		*Part number of the initial firmware equipped	
	IC	7003	PST8430N
	IC	7004	TC74VHC595F
	IC	7005	DYW1974*
		*Part number of the initial firmware equipped	
	Q	7000	LTC123JUB
	D	7000,7001	DA2J101
MISCELLANEOUS			
	L	7000,7001 CHIP COIL	LCTAW330J2520
	X	7000,7001 CERAMIC RESONATOR	DSS1131
	CN	7002,7003,7010 39P CONNECTOR	VKN2097
	CN	7004 27P CONNECTOR	VKN1287
	CN	7005,7007 20P CONNECTOR	VKN1280
	CN	7008 13P CONNECTOR	VKN1273
	CN	7009 15P CONNECTOR	VKN1275
	CN	7011,7013 21P CONNECTOR	VKN1252
	CN	7012 39P CONNECTOR	VKN2097
	CN	7014,7015 35P CONNECTOR	VKN2025
	CN	7016,7018,7020,7021 PLUG(3P)	KM200NA3
	CN	7017,7019 PLUG(3P)	KM200NA3Y
RESISTORS			
	R	7045,7146	RS1/8SQ105J
		Other Resistors	RS1/10SR###J
CAPACITORS			
	C	7000,7001,7005-7007	CKSRYB102K50
	C	7004,7022,7027,7039	CKSRYB104K16
	C	7008,7033,7037,7065	CKSRYB105K10
	C	7009-7021,7023,7024	CKSRYB102K50
	C	7025,7034,7074,7079	CCSRCH9R0D50
	C	7026,7028-7032	CKSRYB102K50
	C	7038	CKSRYB103K50
	C	7040	CKSRYB273K16
	C	7041,7048,7072,7089	CKSRYB104K16
	C	7042-7045	CCSRCH221J50
	C	7047,7096,7100,7103	CEJQ101M16
	C	7049-7064,7066	CKSRYB102K50
	C	7069-7071,7073	CKSRYB102K50
	C	7075-7078,7082-7086	CKSRYB102K50
	C	7080,7081	CKSRYB105K10
	C	7090-7093,7188-7193	CKSRYB102K50
	C	7097,7101,7102,7104	CKSRYB104K16
	C	7098	CEHAT101M35
	C	7099,7145,7154	CKSRYB104K50
	C	7105,7122-7125	CKSRYB104K16
	C	7130-7139,7143	CKSRYB104K16
	C	7146-7153,7159-7163	CKSRYB104K16
	C	7176,7203,7205,7206	CKSRYB104K16
	C	7195-7199,7207	CCSRCH101J50
	C	7202	CEJQ101M16
	C	7204	CKSRYB102K50

H CHFD1 ASSY

MISCELLANEOUS			
	VR	8501 SLIDE VR	DCV1027
	CN	8501 PLUG(3P)	KM200NA3
CAPACITORS			
	C	8501	CKSRYB104K50
	C	8502	CCSRCH102J50

I CHFD2 ASSY

MISCELLANEOUS			
	VR	8601 SLIDE VR	DCV1027
	CN	8601 PLUG(3P)	KM200NA3Y
CAPACITORS			
	C	8601	CKSRYB104K50
	C	8602	CCSRCH102J50

J CHFD3 ASSY

MISCELLANEOUS			
	VR	8701 SLIDE VR	DCV1027
	CN	8701 PLUG(3P)	KM200NA3Y
CAPACITORS			
	C	8701	CKSRYB104K50
	C	8702	CCSRCH102J50

K CHFD4 ASSY

MISCELLANEOUS			
	VR	8801 SLIDE VR	DCV1027
	CN	8801 PLUG(3P)	KM200NA3
CAPACITORS			
	C	8801	CKSRYB104K50
	C	8802	CCSRCH102J50

L SAFD ASSY

MISCELLANEOUS			
	VR	8901 SLIDE VR	DCV1027
	CN	8901 PLUG(3P)	KM200NA3
CAPACITORS			
	C	8901	CKSRYB104K50
	C	8902	CCSRCH102J50

Mark	No.	Description	Part No.

M CRFD ASSY

MISCELLANEOUS

	VR	5601 VARIABLE RESISTOR	CCW1024
	CN	5601 CONNECTOR	AKM1274

RESISTORS

		All Resistors	RS1/10SR###J

CAPACITORS

	C	5601	CKSSYB471K50
	C	5602	CKSSYB104K10

N MIXA ASSY

SEMICONDUCTORS

	IC	9001,9002	TC74VHC595F
	IC	9003-9006	TC74HC4052AF
	IC	9007	NJM12903V
	Q	9001-9016,9033-9041	LSCR523UB
	Q	9017,9019,9021,9023	LTC124EUB
	Q	9018,9020,9022,9024	2SB1689
	Q	9025,9027,9029,9031	LTC124EUB
	Q	9026,9028,9030,9032	2SB1689
	Q	9042,9056	LTC124EUB
	Q	9043	ISA1602AM1
	Q	9044-9055	LSCR523UB
	Q	9057	2SB1689
	Q	9058	LTA143EUB
	D	9001,9004-9007,9017	SLI-343YYW
	D	9002,9003,9019,9020	LTL17KRH5D
	D	9008-9016,9025-9033	LTL17KGH5D
	D	9018,9021-9024,9034	SLI-343YYW
	D	9035,9038-9041,9051	SLI-343YYW
	D	9036,9037,9053,9054	LTL17KRH5D
	D	9042-9050,9059-9067	LTL17KGH5D
	D	9052,9055-9058,9068	SLI-343YYW
	D	9069,9072-9075,9085	SLI-343YYW
	D	9070,9071,9087,9088	LTL17KRH5D
	D	9076-9084,9093-9101	LTL17KGH5D
	D	9086,9089-9092,9102	SLI-343YYW
	D	9103,9104,9108-9111	LTL17KGH5D
	D	9105	LTL17KRH5D
	D	9106,9107,9112	SLI-343YYW
	D	9113,9114	LTL17KGH5D
	D	9115-9118,9120-9129	SLR343BD2T
	D	9119,9130,9132,9136	SLR343WBC7T
	D	9131,9133-9135,9137	SLR343BD2T
	D	9138	SLR343WBC7T
	D	9139	SLR343BD2T
	D	9140-9178	DA2J101

MISCELLANEOUS

	VR	9001,9003-9005,9017 ROTARY VR	DCS1104
	VR	9002,9008-9012,9015 ROTARY VR	DCS1078
	VR	9006,9007,9013,9014 ROTARY VR	DCS1126
	VR	9016,9019-9021 ROTARY VR	DCS1078
	VR	9018,9030 ROTARY VR	DCS1104
	VR	9022,9028,9029 ROTARY VR	DCS1126
	VR	9023-9027 ROTARY VR	DCS1078
	S	9001-9039 TACT SWITCH	DSG1079
	CN	9001 20P CONNECTOR	VKN1251
	CN	9002 27P CONNECTOR	VKN1842

Mark	No.	Description	Part No.

RESISTORS

		All Resistors	RS1/10SR###J

CAPACITORS

	C	9002,9008,9009,9014	CKSRYB105K10
	C	9003,9005	CEJQ101M16
	C	9004,9006,9016-9025	CKSRYB104K16
	C	9010	CCSRCH470J50
	C	9011-9013	CCSRCH221J50
	C	9015	CCSRCH471J50
	C	9026-9039,9052-9067	CKSRYB102K50
	C	9040-9043,9102	CKSRYB105K10
	C	9068-9101	CKSRYB104K16
	C	9103	CCSRCH101J50

O CFXB ASSY

SEMICONDUCTORS

	Q	8301,8302,8305,8306	LSCR523UB
	Q	8303,8307,8311	LTC124EUB
	Q	8304,8308,8312	ISA1602AM1
	Q	8309,8310	LSCR523UB
	D	8301,8304-8309	DA2J101
	D	8302,8303,8310-8313	SLR343WBC7T

MISCELLANEOUS

	VR	8301,8302 ROTARY VR	DCS1078
	VR	8303 ROTARY VR	DCS1104
	S	8301 SLIDE SWITCH	DSH1066
	S	8302-8307 TACT SWITCH	DSG1079
	CN	8301 15P CONNECTOR	VKN1246

RESISTORS

		All Resistors	RS1/10SR###J

CAPACITORS

	C	8302,8304-8306,8308	CKSRYB104K16
	C	8303	CEJQ101M16

P OSCB ASSY

SEMICONDUCTORS

	D	8401-8414	DA2J101

MISCELLANEOUS

	VR	8401 ROTARY VR	DCS1104
	VR	8402 ROTARY VR	DCS1078
	S	8401,8403-8408 SLIDE SWITCH	DSH1058
	S	8402 SLIDE SWITCH	DSH1066
	CN	8401 13P CONNECTOR	VKN1244

CAPACITORS

	C	8402-8404	CKSRYB104K16

Q INSL ASSY

SEMICONDUCTORS

	Q	8201	LTA114EUB
	Q	8202,8203	LSCR523UB
	Q	8204,8206,8208,8210	LTC124EUB
	Q	8205,8207	2SB1689
	Q	8209,8211	ISA1602AM1
	D	8201,8211	LTL17KRH5D
	D	8202,8204,8206,8208	SLI-343YYW

Mark	No.	Description	Part No.
	D	8203,8205,8207,8209	LTL17KGH5D
	D	8210,8212-8214	LTL17KGH5D
	D	8215-8228	DA2J101
		MISCELLANEOUS	
	S	8201,8204,8207,8209 TACT SWITCH	DSG1079
	S	8202,8212 ROTARY ENCODER	DSX1133
	S	8203,8206,8211 SLIDE SWITCH	DSH1058
	S	8205,8208 SLIDE SWITCH	DSH1066
	S	8210 TACT SWITCH	DSG1079
	CN	8201 20P CONNECTOR	VKN1251
		RESISTORS	
		All Resistors	RS1/10SR###J
		CAPACITORS	
	C	8201	CEJQ101M16
	C	8202-8207	CKSRYB104K16

R PAD1 ASSY

		SEMICONDUCTORS	
	IC	5001,5002	74VHC595FT
	Q	5001-5004,5006,5007	HN1A01FU
	Q	5005,5015,5025	LTC124EUB
	Q	5008,5018,5029	2SB1689
	Q	5009-5014,5016,5017	HN1A01FU
	Q	5019-5024,5026-5028	HN1A01FU
	Q	5030	HN1A01FU
	Q	5031-5042	LTC123JUB
	Q	5045-5056	LSCR523UB
	D	5001-5012	SMLVN6RGB2UK
	D	5013-5016	DA2J101
		MISCELLANEOUS	
	S	5001-5004 PUSH SWITCH	CSG1155
	CN	5001 35P CONNECTOR	VKN1439
		5001 SPACER	DEC3622
		RESISTORS	
	R	5018,5020,5022,5024	RS1/16SS0R0J
	R	5030,5032,5034,5036	RS1/16SS0R0J
	R	5037,5092,5149	RS1/16SS152J
	R	5046,5101,5156,5228	RS1/16SS103J
	R	5047,5102,5157	RS1/16SS563J
	R	5073,5075,5077,5079	RS1/16SS0R0J
	R	5085,5087,5089,5091	RS1/16SS0R0J
	R	5128,5130,5132,5134	RS1/16SS0R0J
	R	5140,5142,5144,5146	RS1/16SS0R0J
	R	5178-5189	RS1/16SS0R0J
	R	5191,5192	RS1/16SS472J
	R	5194-5201	RS1/10SR3301D
	R	5227,5229-5239	RS1/16SS222J
	R	5240-5250	RS1/16SS103J
		Other Resistors	RS1/10SR###J
		CAPACITORS	
	C	5001	CKSSYB104K16
	C	5009	CEVW101M16
	C	5010	CKSSYB104K10
	C	5011,5012	CKSSYB103K16
	C	5013,5022-5028	CCSRCH101J50
	C	5014-5021	CKSRYB103K50

S PAD2 ASSY

		SEMICONDUCTORS	
	IC	5301,5302	74VHC595FT
	Q	5301-5304,5306,5307	HN1A01FU
	Q	5305,5315,5325	LTC124EUB
	Q	5308,5318,5329	2SB1689
	Q	5309-5314,5316,5317	HN1A01FU
	Q	5319-5324,5326-5328	HN1A01FU
	Q	5330	HN1A01FU
	Q	5331-5342	LTC123JUB
	Q	5345-5356	LSCR523UB
	D	5301-5312	SMLVN6RGB2UK
	D	5313-5316	DA2J101
		MISCELLANEOUS	
	S	5301-5304 PUSH SWITCH	CSG1155
	CN	5301 35P CONNECTOR	VKN1439
		RESISTORS	
	R	5318,5320,5322,5324	RS1/16SS0R0J
	R	5330,5332,5334,5336	RS1/16SS0R0J
	R	5337,5392,5449	RS1/16SS152J
	R	5346,5401,5456,5528	RS1/16SS103J
	R	5347,5402,5457	RS1/16SS563J
	R	5373,5375,5377,5379	RS1/16SS0R0J
	R	5385,5387,5389,5391	RS1/16SS0R0J
	R	5428,5430,5432,5434	RS1/16SS0R0J
	R	5440,5442,5444,5446	RS1/16SS0R0J
	R	5478-5489	RS1/16SS0R0J
	R	5491,5492	RS1/16SS472J
	R	5494-5501	RS1/10SR3301D
	R	5527,5529-5539	RS1/16SS222J
	R	5540-5550	RS1/16SS103J
		Other Resistors	RS1/10SR###J
		CAPACITORS	
	C	5301	CKSSYB104K16
	C	5309	CEVW101M16
	C	5310	CKSSYB104K10
	C	5311,5312	CKSSYB103K16
	C	5313,5322-5328	CCSRCH101J50
	C	5314-5321	CKSRYB103K50

T JFLB1 ASSY

		SEMICONDUCTORS	
⚠	IC	6002	MM1856A33N
	Q	6001,6002	2SC4154-11
	Q	6003,6006,6007	LSCR523UB
	Q	6004	LSAR523UB
	Q	6005	2SC5712
	D	6001,6003	DA2J101
	D	6002	DZ2J062M0
	D	6004	DB2J41100
	D	6006,6007,6010,6011	SLR343BD2T
	D	6008,6009,6012,6013	SLR343WBD2PT
		MISCELLANEOUS	
	V	6001 VFD	DEL1074
	CN	6001 CONNECTOR	CKS1072
	CN	6002 CONNECTOR	VKN1281
		6001 FL HOLDER	DNF1735

Mark	No.	Description	Part No.
NSP		6002,6003 DOUBLE-SIDED TAPE	Z12-016
	JH	6001 4P CABLE HOLDER	51048-0400
	JP	6001 JUMPER WIRE	D20PYY0405E
RESISTORS			
	R	6014,6015	RS1/8SQ100J
	R	6022,6024	RS1/4SA102J
	R	6027	RS1/10SR8201D
	R	6028	RS1/10SR3901D
	R	6040,6041,6043,6044	RS1/4SA7R5J
	R	6048,6049,6051,6052	RS1/4SA7R5J
	R	6055,6056	RS1/4SA7R5J
		Other Resistors	RS1/10SR###J
CAPACITORS			
	C	6003,6006,6010,6014	CKSRYB104K50
	C	6004,6007,6022,6027	CKSRYB104K16
	C	6016	CEHAT101M35
	C	6020,6038	CKSRYB105K10
	C	6023,6036	CKSRYB104K50
	C	6024	DCH1263
	C	6025,6037,6042	CKSRYB105K16
	C	6029,6030,6032	CCSRCH470J50
	C	6033,6035,6043	CKSRYB104K16
	C	6039	DCH1201
	C	6044	CKSRYB103K50

U JOGR1 ASSY

MISCELLANEOUS			
	CN	7901 4PJUMPER CONNECTOR	52151-0410
RESISTORS			
		All Resistors	RS1/10SR###J
MISCELLANEOUS			
	PC	7901 PHOTO INTERRUPTER	KE-2K18-15
CAPACITORS			
	C	7901	CCG1218
	C	7902	CKSRYB103K50

V JFLB2 ASSY

SEMICONDUCTORS			
⚠	IC	6102	MM1856A33N
	Q	6101,6102	2SC4154-11
	Q	6103,6106,6107	LSCR523UB
	Q	6104	LSAR523UB
	Q	6105	2SC5712
	D	6101,6103	DA2J101
	D	6102	DZ2J062M0
	D	6104	DB2J41100
	D	6106,6107,6110,6111	SLR343BD2T
	D	6108,6109,6112,6113	SLR343WBD2PT
MISCELLANEOUS			
	V	6101 VFD	DEL1074
	CN	6101 CONNECTOR	CKS1072
	CN	6102 CONNECTOR	VKN1281
		6101 FL HOLDER	DNF1735
NSP		6102,6103 DOUBLE-SIDED TAPE	Z12-016
	JH	6101 4P CABLE HOLDER	51048-0400
	JP	6101 JUMPER WIRE	D20PYY0405E
RESISTORS			
	R	6114,6115	RS1/8SQ100J
	R	6122,6124	RS1/4SA102J
	R	6127	RS1/10SR8201D
	R	6128	RS1/10SR3901D
	R	6140,6141,6143,6144	RS1/4SA7R5J
	R	6148,6149,6151,6152	RS1/4SA7R5J
	R	6155,6156	RS1/4SA7R5J
		Other Resistors	RS1/10SR###J
CAPACITORS			
	C	6103,6106,6110,6114	CKSRYB104K50
	C	6104,6107,6122,6127	CKSRYB104K16
	C	6116	CEHAT101M35
	C	6120,6138	CKSRYB105K10
	C	6123,6136	CKSRYB104K50
	C	6124	DCH1263
	C	6125,6137,6142	CKSRYB105K16
	C	6129,6130,6132	CCSRCH470J50
	C	6133,6135,6143	CKSRYB104K16
	C	6139	DCH1201
	C	6144	CKSRYB103K50

W JOGR2 ASSY

MISCELLANEOUS			
	CN	7951 4PJUMPER CONNECTOR	52151-0410
RESISTORS			
		All Resistors	RS1/10SR###J
MISCELLANEOUS			
	PC	7951 PHOTO INTERRUPTER	KE-2K18-15
CAPACITORS			
	C	7951	CCG1218
	C	7952	CKSRYB103K50

X DEUP ASSY

SEMICONDUCTORS			
	Q	7501,7503,7505,7509	LTC124EUB
	Q	7502,7504,7506,7510	ISA1602AM1
	Q	7512,7516-7522	LSCR523UB
	Q	7523,7525,7527	LTC124EUB
	Q	7524,7526,7528	ISA1602AM1
	D	7501-7503,7506-7509	SLR343BD2T
	D	7505	LTL17KGH5D
	D	7511,7512,7525	LTL17KRH5D
	D	7513-7523	DA2J101
MISCELLANEOUS			
	VR	7501 ROTARY VR	DCS1121
	VR	7502-7504 ROTARY VR	DCS1078
	S	7501-7511 TACT SWITCH	DSG1079
	S	7512 ROTARY ENCODER	DSX1132
	CN	7501 7P CONNECTOR	VKN1267
	CN	7502 19P CONNECTOR	VKN1250
	CN	7503 15P CONNECTOR	VKN1246
	CN	7504 39P CONNECTOR	VKN2097
	JH	7501 7P CABLE HOLDER	51048-0700
	JP	7501 7P JUMPER WIRE	D20PYY0705E

Mark	No.	Description	Part No.
RESISTORS			
	R	7546	RS1/4SA0R0J
	R	7547	RS1/8SQ0R0J
		Other Resistors	RS1/10SR###J
CAPACITORS			
	C	7501-7504,7506,7508	CKSRYB104K16
	C	7509,7515,7517	CKSRYB104K16
	C	7512,7514	CKSRYB105K10
	C	7513,7516	CEJQ101M16
	C	7521-7523,7525-7530	CKSRYB104K16

Y SLDB ASSY

SEMICONDUCTORS			
	Q	7601,7603,7605,7607	LTC124EUB
	Q	7602,7604,7606,7608	ISA1602AM1
	Q	7609	2SC4154-11
	Q	7610-7612	LSCR523UB
	D	7601,7602,7604,7606	SLI-343YYW
	D	7603,7608,7612-7614	LTL17KRH5D
	D	7605	SLR343WBC7T
	D	7607,7610,7611	SLI-343YYW
	D	7609	LTL17KGH5D
	D	7615-7625	DA2J101
MISCELLANEOUS			
	VR	7601 SEMI FIXED RESISTOR	CCP1571
	VR	7602 SLIDE VR	DCV1032
	S	7601-7611 TACT SWITCH	DSG1079
	CN	7601 19P CONNECTOR	VKN1250
RESISTORS			
	R	7616,7617	RS1/10SR3601D
	R	7648,7649	RS1/4SA0R0J
		Other Resistors	RS1/10SR###J
CAPACITORS			
	C	7601,7605,7609-7612	CKSRYB104K16
	C	7602,7606	CKSRYB105K10
	C	7607	CEJQ470M6R3

Z DUAL ASSY

SEMICONDUCTORS			
	Q	7701,7703,7708	LTC124EUB
	Q	7702,7704,7709	ISA1602AM1
	Q	7705-7707	LSCR523UB
	D	7701	LTL17KRH5D
	D	7702	SLR343BD2T
	D	7703	SLR343WBC7T
	D	7704-7707	DA2J101
MISCELLANEOUS			
	S	7701-7704 TACT SWITCH	DSG1079
	CN	7701 15P CONNECTOR	VKN1246
	CN	7702 12P CONNECTOR	VKN1243
RESISTORS			
	R	7717	RS1/4SA222J
	R	7724	RS1/4SA0R0J
		Other Resistors	RS1/10SR###J
CAPACITORS			
	C	7705,7709-7711	CKSRYB104K16
	C	7706	CEJQ470M16
	C	7708	CKSRYB105K16

AA PLAY ASSY

SEMICONDUCTORS			
	Q	7851,7853,7855	LTC124EUB
	Q	7852,7856,7859,7862	ISA1602AM1
	Q	7857,7860	LSCR523UB
	Q	7858,7861,7866	2SC4154-11
	Q	7863-7865	LTC124EUB
	D	7851,7853,7856	DA2J101
	D	7852	LTL17KSL5D
	D	7854	LTL17KRH5D
	D	7855	SLI-343YYW
	D	7857	SLR343WBC7T
	D	7858	LTL17KCGP4J
MISCELLANEOUS			
	S	7851,7852 SWITCH	VSG1024
	S	7853,7854 TACT SWITCH	DSG1117
	S	7855 TACT SWITCH	DSG1079
	CN	7851 12P CONNECTOR	VKN1272
RESISTORS			
		All Resistors	RS1/10SR###J
CAPACITORS			
	C	7851,7852,7855	CKSRYB104K16
	C	7853	CKSRYB105K16
	C	7858-7861	CKSRYB104K16

AB REVB ASSY

SEMICONDUCTORS			
	D	7802	LTL17KRH5D
MISCELLANEOUS			
	CN	7801 7P JUMPER CONNECTOR	52147-0710
	PC	7801,7802 PHOTO INTERRUPTER	GP1S094HCZ0F
RESISTORS			
	R	7803	RS1/4SA391J
		Other Resistors	RS1/10SR###J
CAPACITORS			
	C	7801	CKSRYB104K16
	C	7802	CKSRYB105K10

AC RFX1 ASSY

SEMICONDUCTORS			
	D	5701-5703	SMLE12BC7T
MISCELLANEOUS			
	VR	5701 SLIDE VR	DCV1028
	CN	5701 07P CONNECTOR	RKN1048
RESISTORS			
		All Resistors	RS1/10SR###J

AD RFX2 ASSY

SEMICONDUCTORS			
	D	5751-5753	SMLE12BC7T

Mark	No.	Description	Part No.
MISCELLANEOUS			
	VR 5751	SLIDE VR	DCV1028
	CN 5751	07P CONNECTOR	RKN1048
RESISTORS			
	All Resistors		RS1/10SR###J

AE LCDM ASSY

Mark	No.	Description	Part No.
SEMICONDUCTORS			
⚠	IC	101	BD9328EFJ
⚠	IC	401	MMPF0100F0AEP
	IC	501	MCIMX6Q5EYM10AD
	IC	601,602	W631GG6KB-12
	IC	802	DYW1980*
		*Part number of the initial firmware equipped	
	IC	851	S2R72V27
	IC	1201	TFP401APZP
⚠	IC	1301	R1290K103A
⚠	IC	1351	BD81A04EFV-M
	IC	1381	AK4187VN
	Q	151,153-155,1053	LSAR523UB
	Q	156	LTC124EUB
	Q	501,801,851	RT3T22M
	Q	1001	RT1N241M
	Q	1051,1052	LTC123JUB
	Q	1054	LSAR523UB
	Q	1301	2SA1577
	Q	1351	LTC024EEB
	Q	1352	LTA024EEB
	D	1052,1055	NHSW046A-0171
	D	1301-1303	DB3S308F0
	D	1304	DB2J41100
	D	1351	RB060M-30
MISCELLANEOUS			
	L	101 SMD SPL INDUCTOR	CTH1501
	L	402,405-407 SMD SPL INDUCTOR	CTH1530
	L	801 CHIP SOLID INDUCTOR	XTL3010
	L	802,851,1501-1504 COIL	ATH7015
	L	1201-1204 CHIP SOLID INDUCTOR	XTL3010
	L	1205,1404-1406,1408 CHIP BEADS	VTL1126
	L	1302 CHOKE COIL	CTH1426
	L	1352 INDUCTOR	CTF1545
	L	1353 POWER INDUCTOR	ATH7068
	L	1401 INDUCTOR	CTF1635
	L	1402,1411 CHIP INDUCTOR(10U)	DTL1105
	L	1409,1413-1426 CHIP BEADS	VTL1126
	L	1410 INDUCTOR	LCTAW101J2520
	L	1412 CHIP BEEDS FILTER	BTX1042
	L	1532-1535 COIL	ATH7015
	S	1051-1054 PUSH SWITCH	CSG1155
	X	851,1002 RESONATOR	CSS1808
	X	1001 RESONATOR	CSS1807
	CN	801 CONNECTOR	AKM1296
	CN	1351 CONNECTOR	CKS4428
	CN	1381 FFC/FPC CONNECTOR	CKS6625
	CN	1401,1501 FFC/FPC CONNECTOR	CKS6646
	CN	1531 FFC/FPC CONNECTOR	CKS6646
	CN	1561 FFC/FPC CONNECTOR	CKS6644

Mark	No.	Description	Part No.
RESISTORS			
	R	101,417,420,421	RS1/4SA0R0J
	R	105,106,1310,1316	RS1/16SS1502D
	R	107,1315	RS1/16SS8201D
	R	108	RS1/4SA561J
	R	160,163,165	RS1/10SR332J
	R	164	RS1/10SR562J
	R	168	RS1/10SR272J
	R	169	RS1/10SR682J
	R	171,403,411,414	RS1/10SR0R0J
	R	416,418,419,422	RS1/10SR0R0J
	R	423,428,511,519	RS1/10SR0R0J
	R	425,427,429,1201	RS1/4SA0R0J
	R	508	RS1/16SS1601F
	R	512,605,608	RS1/16SS2400F
	R	518,832,867	RS1/10SR101J
	R	603,604	RS1/10SR1001D
	R	715,716,720-723	RAB4CQ101J
	R	729-732	RAB4CQ472J
	R	734,739,744,749	RAB4CQ103J
	R	805,810	RAB4CQ680J
	R	830,831,853,854	RAB4CQ220J
	R	833,851,852	RS1/10SR0R0J
	R	857,858	RAB4CQ220J
	R	863	RS1/16SS6201F
	R	864-866,868,1318	RS1/10SR0R0J
	R	1073,1079	RS1/10SR472J
	R	1074,1080	RS1/10SR273J
	R	1303	RS1/16SS3603D
	R	1304	RS1/16SS6802D
	R	1305	RS1/16SS3901D
	R	1312	RS1/16SS1103D
	R	1313	RS1/16SS1002D
	R	1319	RS1/16SS3303D
	R	1320	RS1/16SS5601D
	R	1321	RS1/16SS3902D
	R	1356	RS1/16SS1502D
	R	1357	RS1/16SS5100F
	R	1360	RS1/16SS3302D
	R	1361,1517-1524	RS1/10SR0R0J
	R	1362	RS1/16SS2202D
	R	1365	RS1/16SS1203D
	R	1366	RS1/16SS1602D
	R	1387	RS1/4SA0R0J
	R	1401,1416	RS1/16SS39R0D
	R	1403,1420	RS1/16SS47R0D
	R	1407,1417	RS1/16SS75R0F
	R	1414,1418	RS1/16SS1300D
	R	1415	RS1/16SS51R0D
	R	1419,1423	RS1/16SS82R0D
	R	1421	RS1/16SS56R0D
	R	1422	RS1/16SS1800D
	R	1441	RS1/16SS1001D
	R	1443	RS1/16SS8200D
	Other Resistors		RS1/16SS###J
CAPACITORS			
	C	101,1323,1324,1351	CCG1236
	C	103,111,154,155	CKSRYB104K16
	C	105,116,807,808	CCSSCH102J50
	C	106,114,151,153	CKSSYB104K16
	C	107	CKSSYB682K25

Mark	No.	Description	Part No.
	C	112,409,522,559	DCH1201
	C	113	ACH7275
	C	115,801,803-805	CKSSYB103K16
	C	403,406,410,424	CKSRYB105K10
	C	404,415,435,444	CKSRYB474K10
	C	405,408,413,416	CKSSYB104K16
	C	407	CKSRYB224K16
	C	411,414,417,419	CCG1201
	C	412	RS1/10SR472J
	C	418,420,421,425	CKSSYB104K16
	C	422,423,426,440	CCG1201
	C	427,429,1053,1054	CKSRYB104K16
	C	428,430-433,436	DCH1256
	C	434,437,542,560	CKSSYB104K16
	C	438,439,441,442	DCH1256
	C	445,447,448,1308	CCG1201
	C	450,452,502,511	DCH1256
	C	501,503-510	CKSSYB224K6R3
	C	512-514,516-518	CKSSYB224K6R3
	C	515,519,528,536	DCH1256
	C	520,521,523-527	CKSSYB224K6R3
	C	529-535,537-541	CKSSYB224K6R3
	C	543,545,547-549	CKSSYB224K6R3
	C	544,546,550,552	DCH1256
	C	551,553-557	CKSSYB224K6R3
	C	558,609,610,809	CKSRYB105K10
	C	601-606,613-624	CKSSYB224K6R3
	C	607,611,612,625	CKSSYB104K16
	C	608,626,810,851	DCH1201
	C	627-632,806,1316	CKSSYB224K6R3
	C	811,852,854-865	CKSSYB104K16
	C	853,871,872,875	DCH1201
	C	866,873	CCSSCH120J50
	C	867,870,874,1303	CKSRYB105K10
	C	868,869,876,906	CKSSYB104K16
	C	901-905,918-922	CKSSYB103K16
	C	1001,1002	CCSSCH100D50
	C	1003,1004	CCSSCH5R0C50
	C	1005,1201,1203-1206	CKSSYB103K16
	C	1202,1208,1210,1211	DCH1256
	C	1207,1212-1214,1313	CKSSYB104K16
	C	1209,1215-1223,1320	CKSSYB103K16
	C	1302,1318,1325,1428	CCSSCH102J50
	C	1304,1314,1420,1472	DCH1266
	C	1306,1307	CKSQYB105K25
	C	1310	CKSRYB104K16
	C	1311,1312	CKSQYB474K25
	C	1317,1411	CKSYB475K16
	C	1319	CKSSYB561K50
	C	1321,1362	CKSSYB332K50
	C	1322,1353,1386,1387	CKSSYB104K16
	C	1352	CCSRCH102J50
	C	1355,1580	CKSSYB103K16
	C	1356,1357	CCH2090
	C	1358,1360,1361,1433	CCG1236
	C	1359	CCG1218
	C	1364,1369	CCG1254
	C	1385,1388,1434,1561	DCH1201
	C	1412-1414,1417-1419	CKSSYB104K16
	C	1415,1416	CKSRYB105K10
	C	1436,1437,1457,1461	CKSSYB104K16
	C	1439,1440,1468-1471	CCSSCH102J50
	C	1448	CKSQYB225K16
	C	1449	CKSSYB103K25
	C	1450	CCG1236
	C	1455	CCG1201
	C	1456	CKSQYB334K50
	C	1458	CKSRYB104K25
	C	1473-1475,1477,1478	CCSSCH102J50
	C	1501,1503,1505,1507	CCSSCH102J50
	C	1517,1531,1539,1541	CCSSCH102J50
	C	1562,1564,1566,1567	CCSSCH102J50
	C	1563,1565	DCH1263
	C	1568,1570,1572	DCH1201
	C	1569,1571,1573	CCSSCH102J50

AF LCDP ASSY

SEMICONDUCTORS

Mark	No.	Description	Part No.
	IC	1701	BU90R104
⚠	IC	1801	R1290K103A
⚠	IC	1851	BD81A04EFV-M
	IC	1881	AK4187VN
	IC	1901-1903	74LCX541FT
	Q	1801	2SA1577
	Q	1851	LTC024EEB
	Q	1852	LTA024EEB
	D	1801-1803	DB3S308F0
	D	1804	DB2J41100
	D	1851	RB060M-30

MISCELLANEOUS

	L	1701 CHIP BEEDS FILTER	BTX1047
	L	1702,1703 CHIP SOLID INDUCTOR	XTL3010
	L	1704,1903,1905-1909 CHIP BEADS	VTL1126
	L	1802 CHOKE COIL	CTH1426
	L	1852 INDUCTOR	CTF1545
	L	1853 POWER INDUCTOR	ATH7068
	L	1901 INDUCTOR	CTF1635
	L	1902,1911 CHIP INDUCTOR(10U)	DTL1105
	L	1910 INDUCTOR	LCTAW101J2520
	L	1912 CHIP BEEDS FILTER	BTX1042
	L	1913-1926 CHIP BEADS	VTL1126
	CN	1601 FFC/FPC CONNECTOR	CKS6543
	CN	1602 CONNECTOR	CKS3851
	CN	1603 5P CONNECTOR	VKN1374
	CN	1851 CONNECTOR	CKS4428
	CN	1881 FFC/FPC CONNECTOR	CKS6625
	CN	1901 FFC/FPC CONNECTOR	CKS6646

RESISTORS

	R	1613,1614,1619,1818	RS1/10SR0R0J
	R	1701-1704	RS1/16SS1000D
	R	1803	RS1/16SS3603D
	R	1804	RS1/16SS6802D
	R	1805	RS1/16SS3901D
	R	1810,1816,1856	RS1/16SS1502D
	R	1812	RS1/16SS1103D
	R	1813	RS1/16SS1002D
	R	1815	RS1/16SS8201D
	R	1819	RS1/16SS3303D

Mark	No.	Description	Part No.
	R	1820	RS1/16SS5601D
	R	1821	RS1/16SS3902D
	R	1857	RS1/16SS5100F
	R	1860	RS1/16SS3302D
	R	1861,1913,1931,1940	RS1/10SR0R0J
	R	1862	RS1/16SS2202D
	R	1865	RS1/16SS1203D
	R	1866	RS1/16SS1602D
	R	1887	RS1/4SA0R0J
	R	1901,1916	RS1/16SS39R0D
	R	1903,1920	RS1/16SS47R0D
	R	1907,1917	RS1/16SS75R0F
	R	1914,1918	RS1/16SS1300D
	R	1915	RS1/16SS51R0D
	R	1919,1923	RS1/16SS82R0D
	R	1921	RS1/16SS56R0D
	R	1922	RS1/16SS1800D
	R	1941	RS1/16SS1001D
	R	1943	RS1/16SS8200D
	Other Resistors		RS1/16SS###J
CAPACITORS			
	C	1603,1608,1609,1615	CCSSCH102J50
	C	1616,1619-1625,1802	CCSSCH102J50
	C	1701,1885,1888,1934	DCH1201
	C	1703,1705,1706,1709	CKSSYB103K16
	C	1704,1707,1708,1719	CKSSYB104K16
	C	1712,1859	CCG1218
	C	1717,1723,1729,1820	CKSSYB103K16
	C	1721,1728,1813,1822	CKSSYB104K16
	C	1803,1915,1916	CKSRYB105K10
	C	1804,1814,1972	DCH1266
	C	1806,1807	CKSQYB105K25
	C	1808,1955	CCG1201
	C	1810,1958	CKSRYB104K50
	C	1811,1812	CKSQYB474K25
	C	1816	CKSSYB224K6R3
	C	1817,1911	CKSYB475K16
	C	1818,1825,1928,1939	CCSSCH102J50
	C	1819	CKSSYB561K50
	C	1821,1862	CKSSYB332K50
	C	1823,1824,1851,1858	CCG1236
	C	1826,1864,1869	CCG1254
	C	1852	CCSRCH102J50
	C	1853,1886,1887	CKSSYB104K16
	C	1855	CKSSYB103K16
	C	1856,1857	CCH2090
	C	1860,1861,1933,1950	CCG1236
	C	1912-1914,1917-1919	CKSSYB104K16
	C	1920	DCH1246
	C	1921,1923,1936,1937	CKSSYB104K16
	C	1940,1968-1971,1973	CCSSCH102J50
	C	1945,1957,1961	CKSSYB104K16
	C	1948	CKSQYB225K16
	C	1949	CKSSYB103K25
	C	1956	CKSQYB334K50
	C	1977,1978	CCSSCH102J50
	C	1979-1981	DCH1201

AG XYM1 ASSY

Mark	No.	Description	Part No.
SEMICONDUCTORS			
	Q	6901,6902	LTC123JUB
	Q	6903,6904	LSAR523UB
	D	6901,6903	SLR343BC4T
	D	6904,6906	SLR343WBC7T
MISCELLANEOUS			
	S	6901,6902 TACT SWITCH	DSG1079
	CN	6901 10P CONNECTOR	VKN1241
RESISTORS			
	R	6901	RS1/8SQ0R0J
	Other Resistors		RS1/10SR###J
CAPACITORS			
	C	6901,6902	CKSRYB104K16

AH XYM2 ASSY

Mark	No.	Description	Part No.
SEMICONDUCTORS			
	Q	6951,6952	LTC123JUB
	Q	6953,6954	LSAR523UB
	D	6951,6953	SLR343BC4T
	D	6954,6956	SLR343WBC7T
MISCELLANEOUS			
	S	6951,6952 TACT SWITCH	DSG1079
	CN	6951 10P CONNECTOR	VKN1241
RESISTORS			
	R	6951	RS1/8SQ0R0J
	Other Resistors		RS1/10SR###J
CAPACITORS			
	C	6951,6952	CKSRYB104K16

AI MSL1 ASSY

Mark	No.	Description	Part No.
MISCELLANEOUS			
	S	7401-7403 TACT SWITCH	DSG1079
	CN	7401 5P CONNECTOR	VKN1236
RESISTORS			
	All Resistors		RS1/10SR###J

AJ MSL2 ASSY

Mark	No.	Description	Part No.
MISCELLANEOUS			
	S	7451-7453 TACT SWITCH	DSG1079
	CN	7451 5P CONNECTOR	VKN1236
RESISTORS			
	All Resistors		RS1/10SR###J

AK SW POWER SUPPLY ASSY

There is no service parts.