9. EXPLODED VIEWS AND PARTS LIST

NOTES : • *Parts marked by " * " are generally unavailable because they are not in our Master Spare Parts List.*
• *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
• *Screw adjacent to▽mark on the product are used for disassembly.*
• *For the applying amount of lubricants or glue, follow the instructions in this manual. (In the case of no amount instructions,apply as you think it appropriate.)*

9.1 PACKING SECTION

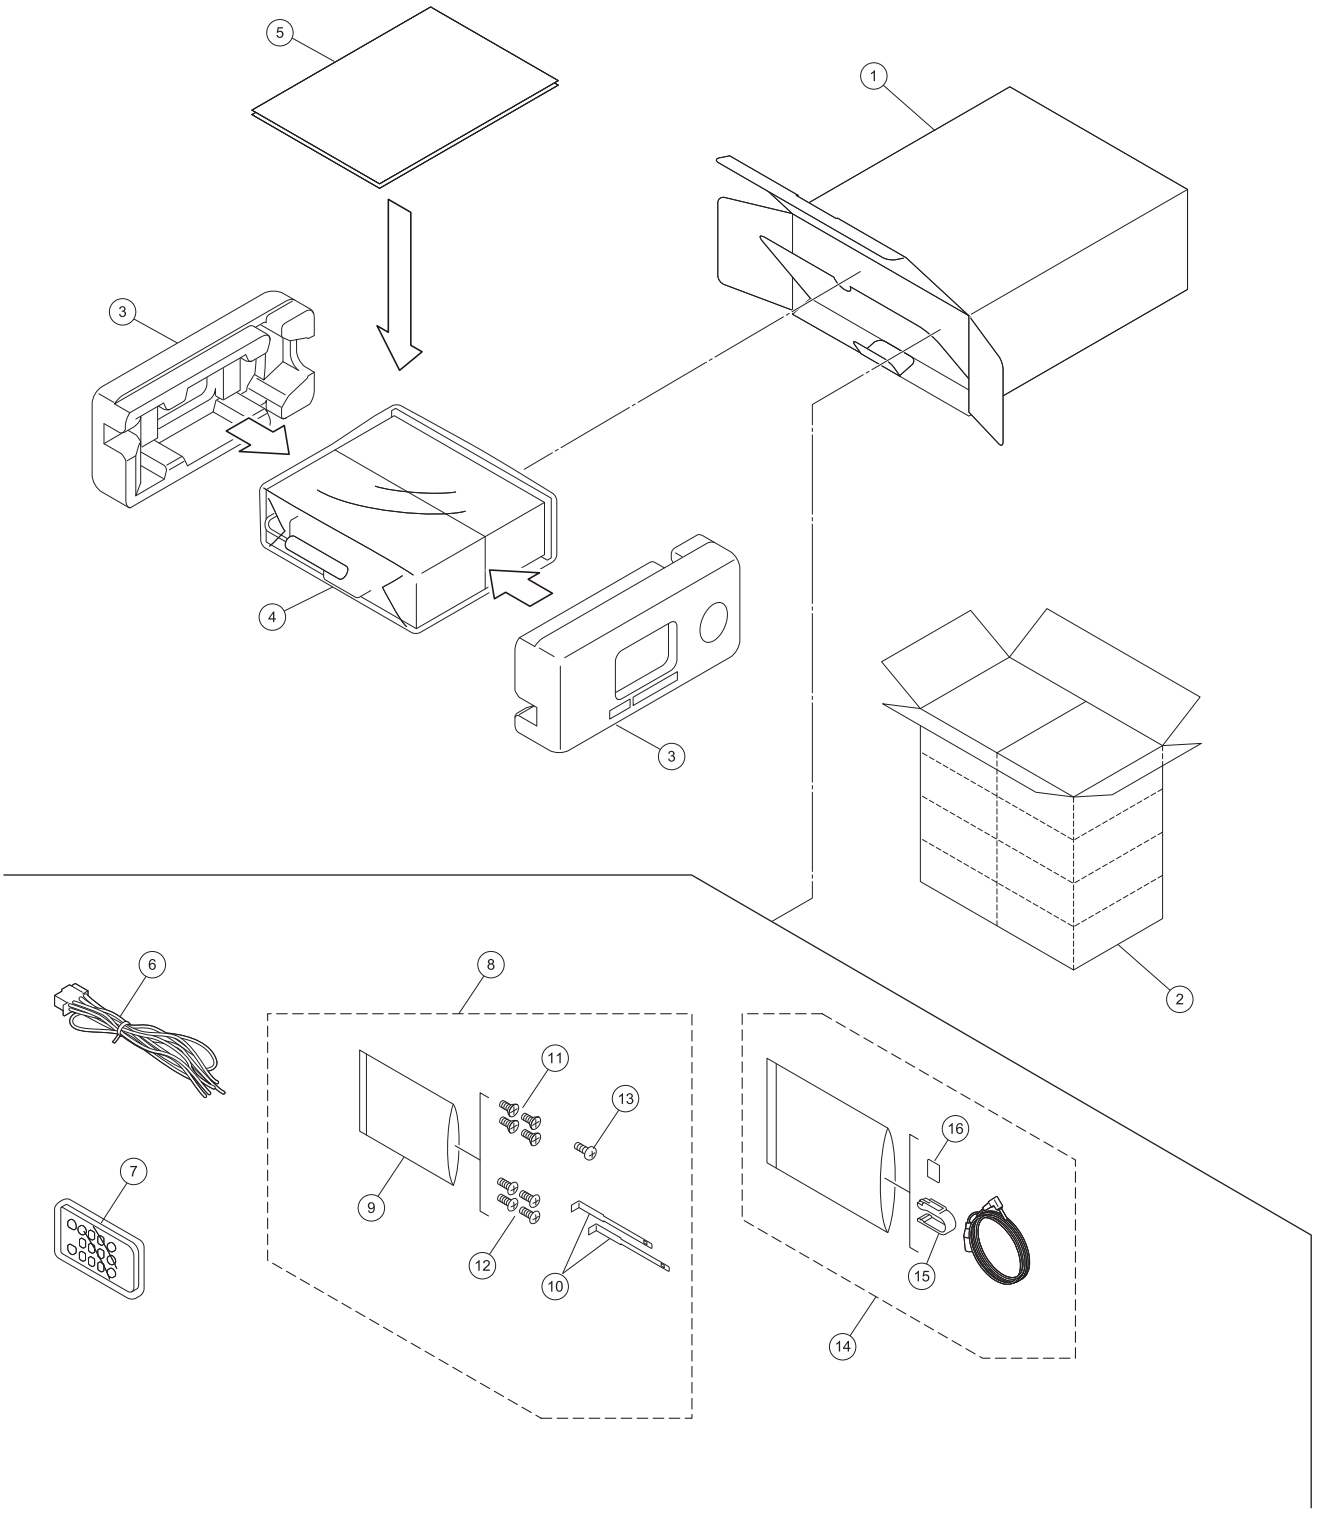

(1) PACKING SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	Unit Box	See Contrast tabel (2)
	2	Contain Box	See Contrast tabel (2)
	3	Protector	CHP4594
	4	Polyethylene Bag	CEG1173
	5-1	Quick Start Guide	QRD3532
*	5-2	Web IM	See Contents of Web IM (3)
*	5-3	Warranty Card	QRY3001
	6	Cord Assy	CDP1484
	7	Card Remote Control Unit	CXE9605
	8	Accessory Assy	QEA3337
*	9	Polyethylene Bag	CEG1160
	10	Handle	QNC3021
	11	Screw	CBA2383
	12	Screw	CBA2384
	13	Screw	BPZ20P060FTC
	14	Microphone Assy	CPM1109
	15	Holder	CZN7192
	16	Cushion	CZN7193

(2) CONTRAST TABLE

DEH-S6000BS/XNUC and DEH-S6010BS/XNUC are constructed the same except for the following:

Mark	No.	Symbol and Description	DEH-S6000BS/XNUC	DEH-S6010BS/XNUC
	1	Unit Box	QHG4142	QHG4145
	2	Contain Box	QHL4142	QHL4145

Owner's Manual, Installation Manual

Part No.	Language
QRD3532	English, French, Spanish(Espanol)

(3) CONTENTS OF WEB IM

Part No.	Language
*QRI3026	English, French, Spanish (Espanol)

All operation manuals are supplied in PDF files by the WEB. No printed papers are available.

9.2 EXTERIOR SECTION

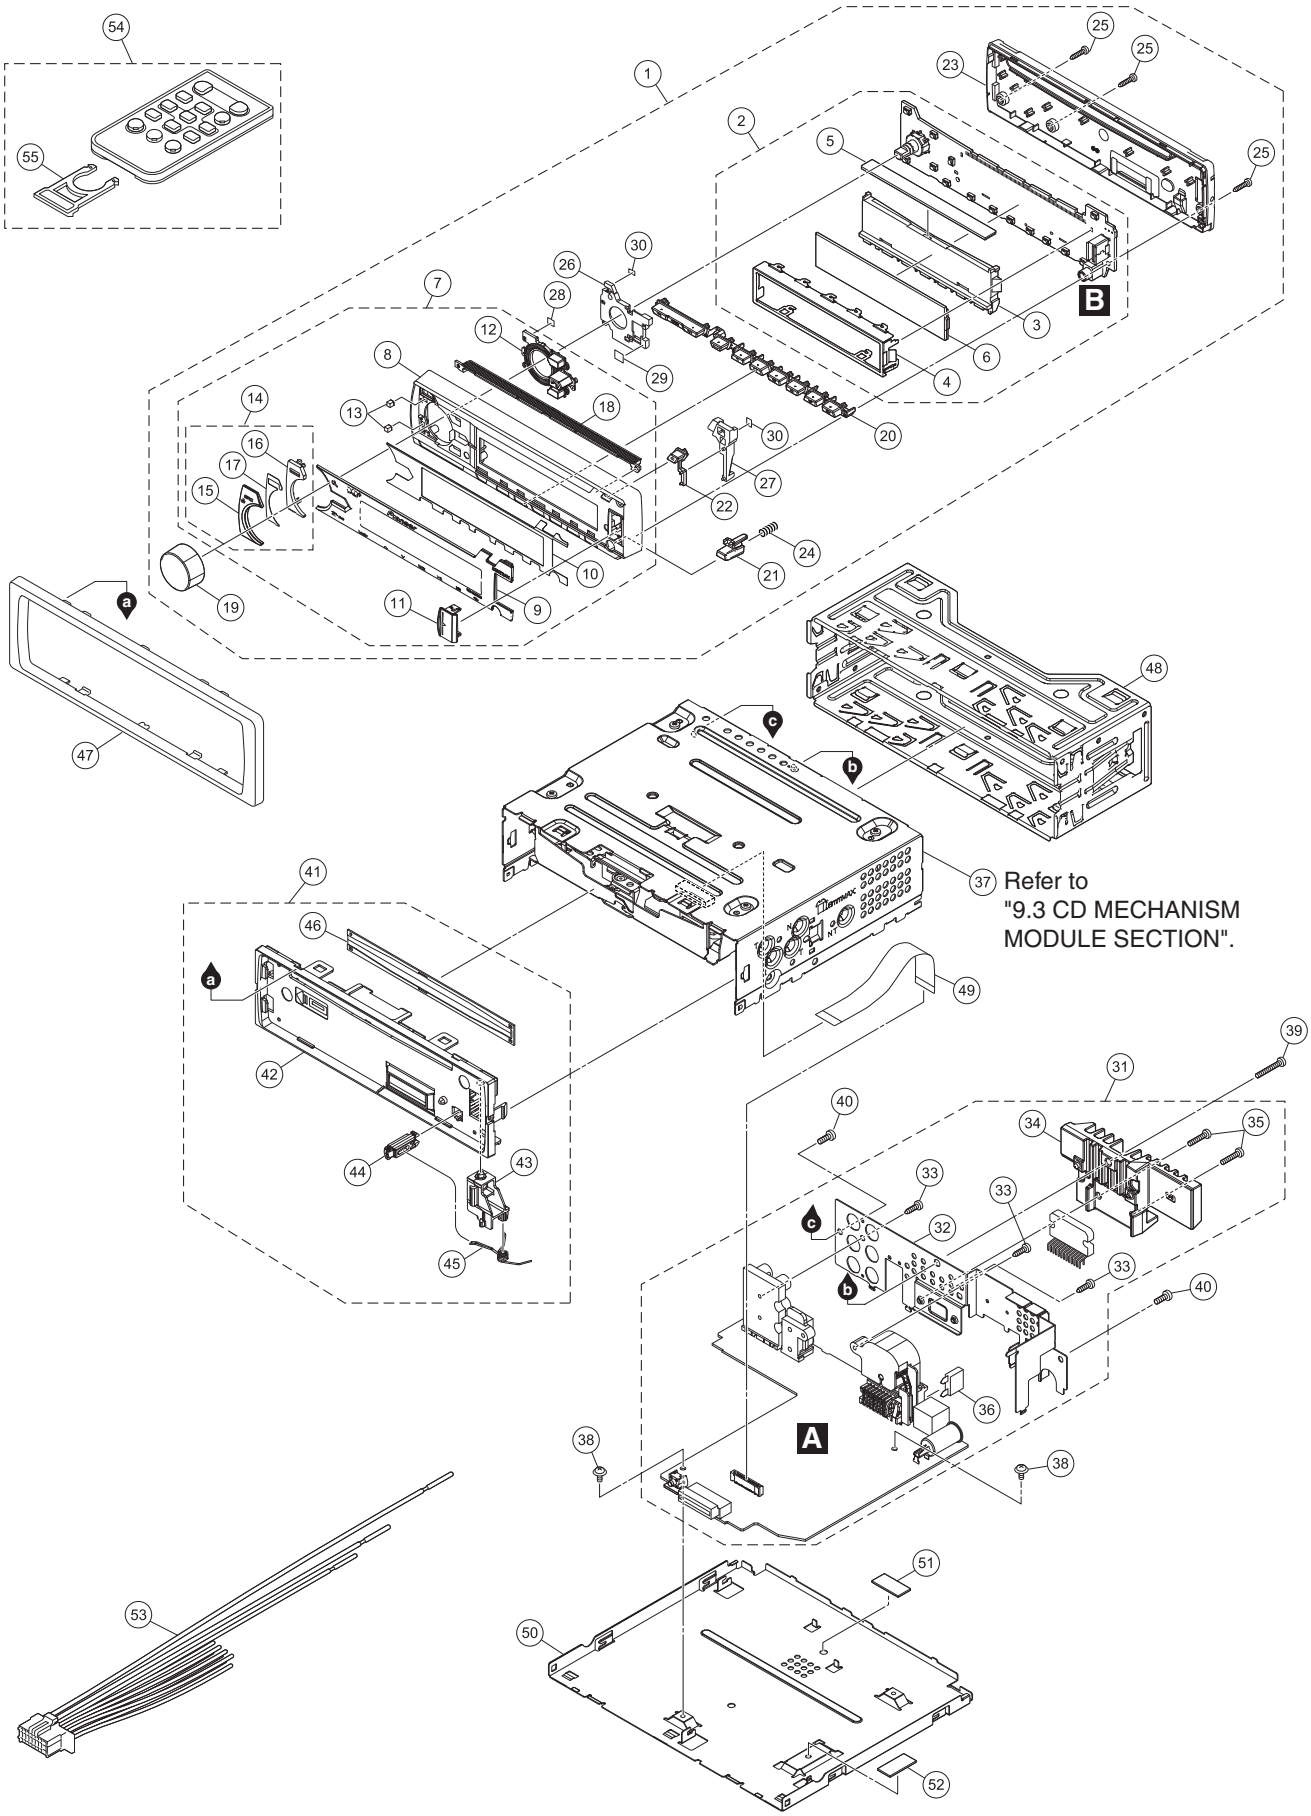

(1) EXTERIOR SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	Detach Grille Assy	See Contrast tabel (2)
	2	Keyboard Unit	QWM4636
	3	Lighting Conductor	QNV3120
	4	Holder	QNC3120
	5	Rubber Connector	QNV3126
	6	Segment LCD(V1801)	CAW2057
	7	Grille Unit	See Contrast tabel (2)
*	8	Grille	QNS3969
*	9	Plate	QNS3961
*	10	DS Tape	QNM3140
*	11	Door	QAT3033
*	12	Button (PHONE)	QAC3220
*	13	Cushion	QNM3142
*	14	Button Unit (SRC)	QXA4598
*	15	Plate	QNS3966
*	16	Holder	QNS3968
*	17	DS Tape	QNM3141
*	18	Lighting Conductor	QNV3119
	19	Knob Unit	QXA4712
	20	Button (TRACK, 1-6)	QAC3222
	21	Button (DETACH)	QAC3224
	22	Button (EJECT)	QAC3223
	23	Cover	QNS3962
	24	Spring	CBH2210
	25	Screw	BPZ20P100FTC
	26	Lighting Conductor	QNV3117
	27	Lighting Conductor	QNV3118
	28	Sheet	QNM3143
	29	Sheet	QNM3144
	30	Sheet	QNM3145

Mark	No.	Description	Part No.
	31	Tuner Amp Unit	See Contrast tabel (2)
	32	Holder	QNC3112
	33	Screw	BPZ26P080FTC
	34	Heat Sink	QNR3010
	35	Screw	BSZ26P120FTC
⚠	36	Fuse (10 A)	YEK5001
	37	CD Mechanism Module(11.6VA_T07)	CXK5808
		CD Mechanism Module(S11.6_T07)	CXK5807
	38	Screw	ASZ26P050FTC
	39	Screw	BSZ26P120FTC
	40	Screw	BSZ26P060FTC
	41	Panel Assy	QXA4716
	42	Panel	QNS4071
	43	Arm	QNV3025
	44	Button	QNV3026
	45	Spring	QBH3001
	46	Cover	QNM3029
	47	Panel	QNS3576
	48	Holder	QNC3020
	49	FFC	QDE3029
	50	Case	QNB3055
	51	Heat Cond Sheet	QNM3130
	52	Heat Cond Sheet	QNM3223
	53	Cord Assy	CDP1484
	54	Card Remote Control Unit	CXE9605
	55	Cover	CNU3681

Notes: For No.37, please refer to "1.4 NOTES ON REPLACING PARTS" for part distinguish.

(2) CONTRAST TABLE

DEH-S6000BS/XNUC and DEH-S6010BS/XNUC are constructed the same except for the following:

Mark	No.	Symbol and Description	DEH-S6000BS/XNUC	DEH-S6010BS/XNUC
	1	Detach Grille Assy	QXA5248	QXA5253
	7	Grille Unit	QXA5242	QXA5247
	31	Tuner Amp Unit	QWM4581	QWM4682

9.3 CD MECHANISM MODULE

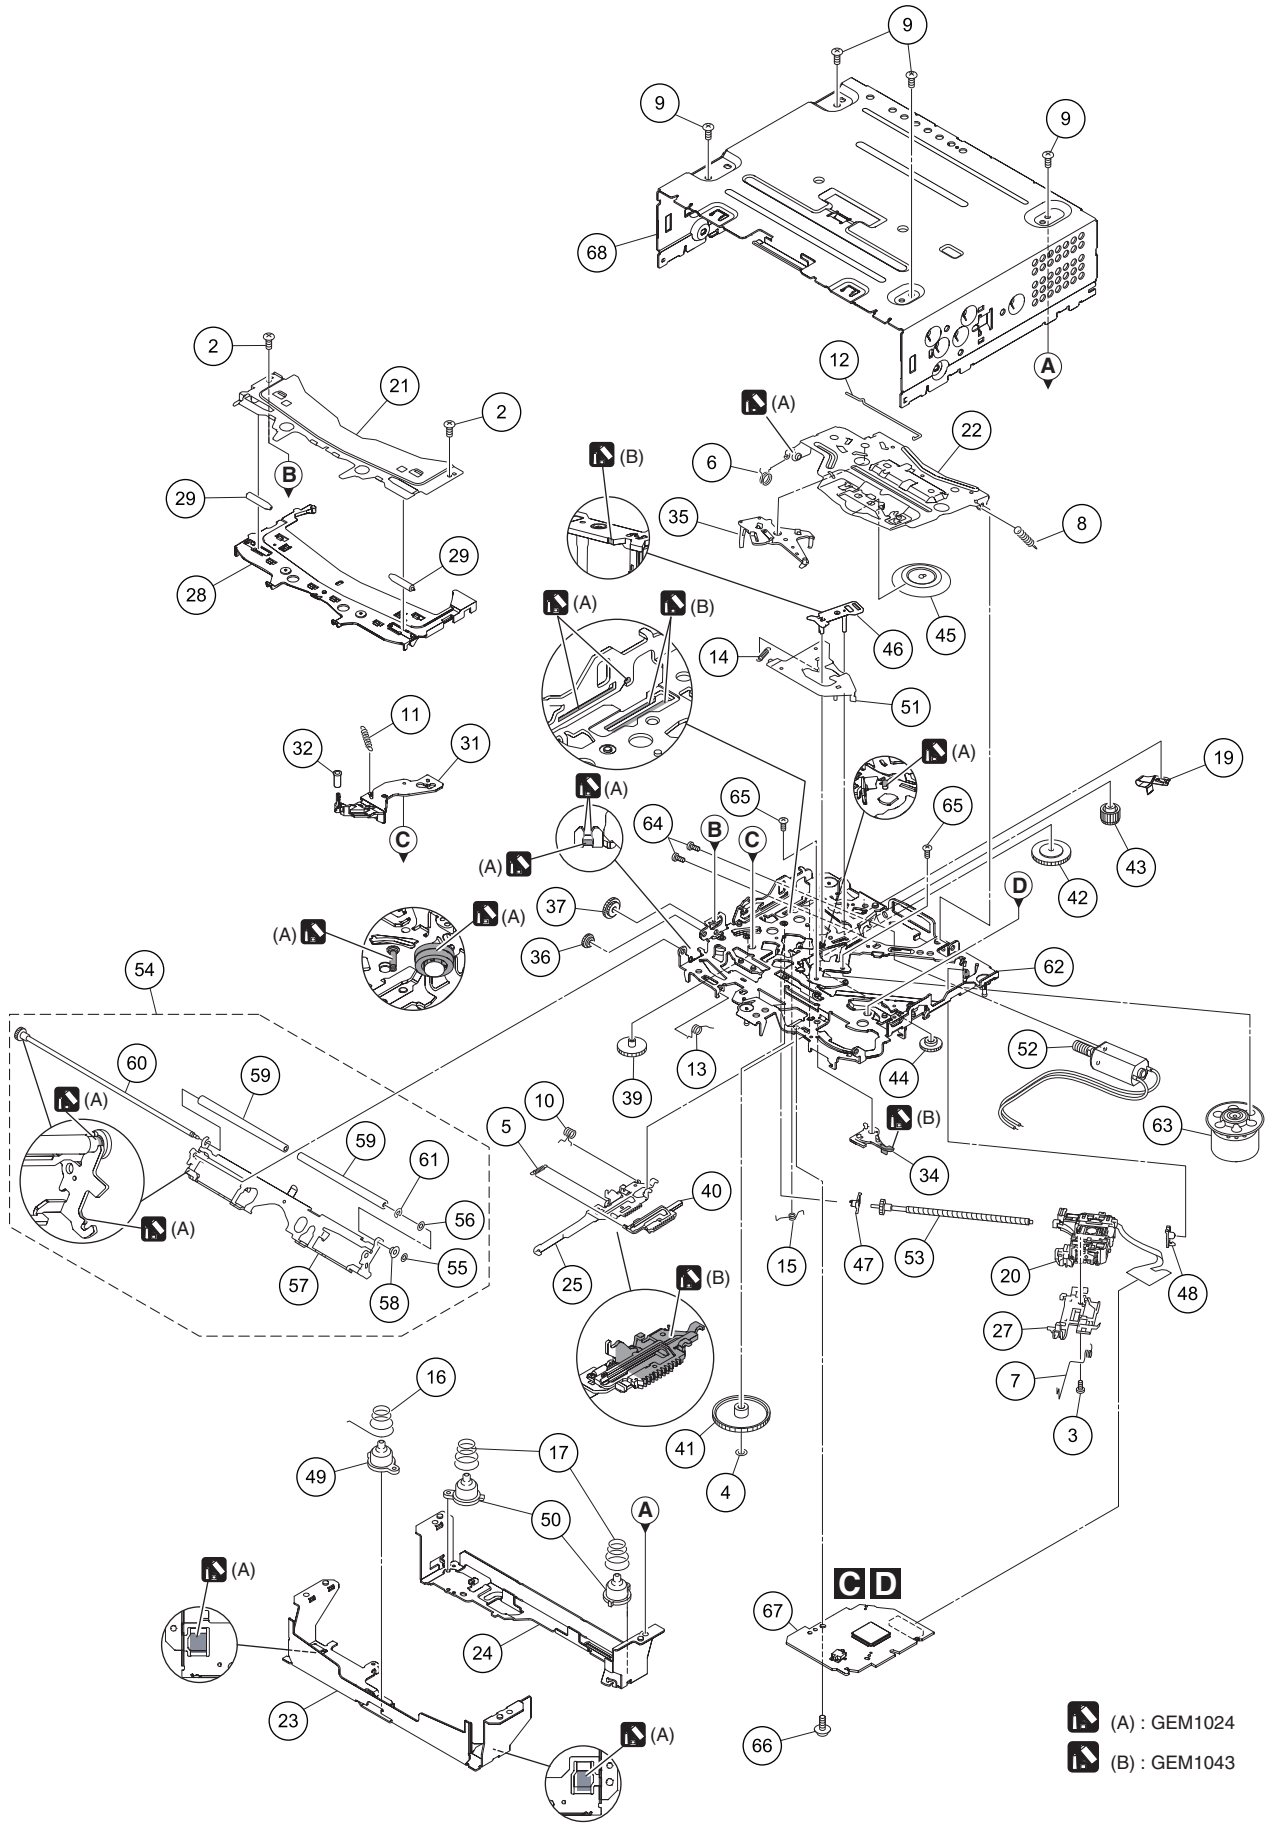

CD MECHANISM MODULE SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	• • • • •	
	2	Screw	BSZ20P040FTC
	3	Screw(M2 x 4)	CBA1835
	4	Washer	CBF1038
	5	Spring	CBH3010
	6	Spring	CBH2855
	7	Spring	CBH2856
	8	• • • • •	
	9	Screw	BSZ26P060FTC
	10	Spring	CBH3011
	11	Coil Spring	CBH3095
	12	Spring	CBH3014
	13	Spring	CBH3145
	14	Spring	CBH3016
	15	Spring	CBH3017
	16	Spring	CBH3086
	17	Spring	CBH3019
	18	• • • • •	
	19	Leaf Spring	CBL1824
	20	Pickup Unit(P11)(Service) for CXK5808	CXX4754
		Pickup Unit(P10.6)(Service) for CXK5807	CXX3556
	21	Bracket	CND4553
	22	Arm	CND7608
	23	Bracket	CND6127
	24	Bracket	CND5710
	25	Lever	CND6834
	26	• • • • •	
	27	Rack	CNV8342
	28	Guide	CNW3489
	29	Roller	CNW1172
	30	• • • • •	
	31	Arm	CNW2241
	32	Roller	CNW1175
	33	• • • • •	
	34	Arm	CNW1177
	35	Arm	CNW1178

Mark	No.	Description	Part No.
	36	Gear	CNW1180
	37	Gear	CNW1181
	38	• • • • •	
	39	Gear	CNW1183
	40	Rack	CNW1184
	41	Gear	CNW1185
	42	Gear	CNW1186
	43	Gear	CNW1187
	44	Gear	CNW2287
	45	Clamper	CNW1190
	46	Arm	CNW1192
	47	Holder	CNW1193
	48	Holder	CNW1194
	49	Damper	CNW1197
	50	Damper	CNW1198
	51	Arm	CNW1726
	52	Motor Unit(M2)(LOAD/CRG)	CXC4026
	53	Screw Unit	CXC8894
	54	Arm Assy	CXE8953
	55	Washer	CBF1037
	56	Washer	CBF1038
	57	Arm	CND6242
	58	Collar	CNW2444
	59	Roller	CNW2500
	60	Gear Unit	CXE8952
	61	Washer	YE15FTC
	62	Chassis Unit	CXE9531
	63	Motor Unit(M1)(SPDL)	CXE2273
	64	Screw	JFZ20P025FTC
	65	Screw	JGZ17P022FTC
	66	Screw	EBA1028
	67	CD Core Unit (S11.6VA)(for CXK5808)	CWX4269
		CD Core Unit (S11.6STD)(for CXK5807)	CWX4023
	68	Chassis	CNA3373

Notes: For No.20 and 67, please refer to "1.4 NOTES ON REPLACING PARTS" for part distinguish.

12. ELECTRICAL PARTS LIST

NOTE:

- *Parts whose parts numbers are omitted are subject to being not supplied.*
- *The part numbers shown below indicate chip components.*

  Chip Resistor

  RS1/◯S◯◯◯J,RS1/◯◯S◯◯◯J

  Chip Capacitor (except for CQS.....)

  CKS....., CCS....., CSZS.....
- *Parts marked by " * " are generally unavailable because they are not in our Master Spare Parts List.*
- *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
- *The expression of the unit in this manual is shown by u instead of μ. Please do not make a mistake.*

A:DEH-S6000BS/XNUC
B:DEH-S6010BS/XNUC

Unit Number: QWM4581(A)
Unit Number: QWM4682(B)
Unit Name : Tuner Amp Unit
Unit Number: QWM4636
Unit Name : Keyboard Unit
Unit Number: CWX4269
Unit Name : CD Core Unit(S11.6VA)
Unit Number: CWX4023
Unit Name : CD Core Unit(S11.6STD)

Notes:
For CD Core Unit, please refer to "1.4 NOTES ON REPLACING PARTS" for part distinguish.

A

Unit Number: QWM4581(A)
Unit Number: QWM4682(B)
Unit Name : Tuner Amp Unit

MISCELLANEOUS

Circuit Symbol and No.		Part No.
IC 201	Power supply IC	BD49101ARFS
IC 461	DC/DC Converter IC(B)	NJW4132U2-A
IC 501	Microprocessor IC	STA1080
IC 502	IC	S-80827CNMC-B8M
IC 503	Logic IC	TC7SET08FUS3
IC 504	Logic IC	TC7SH126FUS1
IC 701	IC	337S3959
IC 711	RAM IC	M12L128168A-5TG2N
IC 731	ROM IC	M95512-RMN6P
IC 741	Flash ROM Unit	QVQ1016
IC 742	IC	MX25L1636EM2I-08G
IC 761	E-VOL System LSI(A)	BD37067FV
IC 761	E-VOL System LSI(B)	BD37068FV
IC 851	Tuner IC	TEF6686HN-V102
IC 1301	Power Amp IC	TCB501HQ
IC 1302	Logic IC	TC7SH32FUS2
Q 111	Bipolar Transistor	LSCR523UB
Q 121	Resistor Built-in Transistor	LTC014EEB
Q 141	Bipolar Transistor	LSCR523UB
Q 142	Bipolar Transistor	LSCR523UB
Q 201	Bipolar Transistor	LSCR523UB
Q 202	FET	SSM3J332R
Q 203	Power MOS FET	RRR040P03
Q 204	Bipolar Transistor	LSCR523UB
Q 205	FET	SSM3J332R
Q 441	Transistor	2SAR502UB
Q 442	Resistor Built-in Transistor	LTC023YEB
Q 701	Bipolar Transistor	LSAR523UB
Q 1101	Resistor Built-in Transistor	LTC014EEB
Q 1241	Transistor	IMH23
Q 1242	Transistor	IMH23
Q 1243	Transistor	IMH23
Q 1301	Transistor	EMD52
Q 1302	Transistor	ISA1602AM1
D 101	Diode	D1F60-5053
D 102	Diode	D1F60-5053
D 111	Diode	DZ2J068M0
D 121	Rectifier Diode	DA2J101
D 141	Diode	DZ2J075M0
D 201	Schottky Diode	RB162M-40
D 202	Diode	RR264MM-400TF
D 203	Diode	RB056L-40
D 204	Diode	RR264MM-400TF
D 206	Schottky Diode	CMS30I30A
D 207	Schottky Diode	RB751SM-40
D 208	Schottky Diode	RB751SM-40
D 210	Schottky Diode	DB2J41100
D 461	Schottky Diode(B)	RB551VM-30
D 501	Schottky Diode	RB751SM-40
D 502	Schottky Diode	RB751SM-40
D 506	Diode	DZ2J036M0
D 507	Diode	DZ2J036M0
D 508	Diode	DZ2J051M0
D 1101	Diode	DZ2J180M0
D 1201	Diode	DZ2S068C
D 1204	Diode	DZ2J180M0
D 1205	Diode	DZ2J180M0
D 1206	Diode	DZ2S068C
D 1207	Diode	DZ2S068C
D 1208	Diode	DZ2S068C
D 1209	Diode	DZ2S068C
D 1210	Diode	DZ2S068C
D 1302	Diode	RR264MM-400TF

Circuit Symbol and No.		Part No.
D 1303	Schottky Diode	RB751SM-40
L 101	Choke Coil	CTH1620
L 201	SMD SPL Inductor	CTH1521
L 202	SMD SPL Inductor	CTH1524
L 203	Chip Beads	VTL1133
L 441	Inductor	CTF1736
L 461	Choke Coil(B)	CTH1561
L 501	Chip Beads	VTL1133
L 502	Inductor	CTF1645
L 511	Chip Beads	VTL1133
L 513	Chip Beads	VTL1133
L 514	Chip Beads	VTL1126
L 515	Chip Beads	VTL1133
L 516	Chip Beads	VTL1133
L 517	Chip Beads	VTL1133
L 518	Chip Beads	VTL1133
L 519	Chip Beads	VTL1133
L 520	Chip Beads	VTL1133
L 711	Chip Beads	VTL1133
L 731	Chip Beads	VTL1126
L 741	Chip Beads	VTL1133
L 742	Chip Beads	VTL1126
L 854	Inductor	LCMAR27J1608
L 855	Inductor	CTF1786
L 856	Inductor	CTF1389
L 860	Inductor	LCYC150K1608
L 1001	Inductor	CTF1786
L 1101	Inductor	CTF1389
L 1102	Chip Beads	VTL1133
L 1103	Chip Beads	VTL1133
L 1104	Chip Beads	VTL1133
L 1201	Inductor	CTF1713
L 1231	Chip Beads	VTL1133
L 1232	Chip Beads	VTL1133
L 1276	Chip Beads	VTL1126
L 1277	Chip Beads	VTL1126
L 1292	Chip Beads	VTL1126
L 1293	Chip Beads	VTL1126
L 1294	Chip Beads	VTL1126
L 1295	Chip Beads	VTL1126
L 1296	Chip Beads	VTL1126
L 1297	Chip Beads	VTL1126
T 851	Variable Coil	CTC1215
X 501	Resonator 24 MHz	CSS1773
X 502	Resonator 32.768 kHz	CSS1807
X 851	Crystal Resonator	CSS1868
S 501	Switch(RESET)	CSG1020
P 852	Surge Absorber	IMSA-6803-01Y900
P 1231	Poly Switch	FSMD110-24R
P 1243	Poly Switch	FSMD075-24R
P 1276	Poly Switch	FSMD075-24R
VA1101	SMD Varistor	MLV0402ES012V0010N
VA1201	SMD Varistor	MLV0402ES012V0010N
VA1202	SMD Varistor	MLV0402ES012V0010N
U 1001	BT Module	CWX4751
CN1101	Connector	VKN1192
CN1201	Connector	CKS6452
JA101	Plug	CKM1624
JA851	Antenna Jack	CKX1104

Circuit Symbol and No.		Part No.
JA1231	Connector	CKS3806
JA1241	Jack	CKB1113
JA1276	Jack	CKN1103

RESISTORS

R 111		RS1/16SS223J
R 112		RS1/16SS473J
R 113		RS1/16SS682J
R 114		RS1/4SA102J
R 121		RS1/16SS103J
R 123		RS1/4SA102J
R 141		RS1/16SS104J
R 142		RS1/16SS473J
R 143		RS1/16SS103J
R 144		RS1/16SS472J
R 145		RS1/16SS0R0J
R 201		RS1/16SS102J
R 202		RS1/16SS3303D
R 203		RS1/10SR0R0J
R 204		RS1/10SR0R0J
R 206		RS1/16SS472J
R 207		RS1/16SS103J
R 208		RS1/16SS473J
R 209		RS1/10SR472J
R 210		RS1/16SS103J
R 211		RS1/10SR472J
R 212		RS1/16SS103J
R 213		RS1/16SS132J
R 214		RS1/16SS102J
R 215		RS1/16SS2403D
R 216		RS1/16SS7502D
R 217		RS1/16SS4303D
R 218		RS1/16SS4303D
R 219		RS1/16SS273J
R 220		RS1/16SS474J
R 221		RS1/16SS473J
R 222		RS1/16SS6802D
R 223	20 mohm	CCN1401
R 224		RS1/16SS6802D
R 225		RS1/16SS102J
R 226		RS1/16SS1203D
R 227		RS1/16SS1802D
R 229		RS1/16SS3902D
R 230		RS1/16SS682J
R 231		RS1/16SS4703D
R 232		RS1/16SS1503D
R 233		RS1/16SS1003D
R 234		RS1/16SS7503D
R 235		RS1/16SS1603D
R 236		RS1/16SS103J
R 238		RS1/16SS103J
R 239		RS1/16SS101J
R 240		RS1/16SS101J
R 241		RS1/16SS680J
R 242		RS1/16SS4701D
R 243		RS1/16SS393J
R 244		RS1/16SS103J
R 248		RS1/16SS473J
R 250		RS1/10SR471J
R 263		RS1/10SR103J

Circuit Symbol and No.		Part No.
R 269		RS1/16SS101J
R 301		RS1/10SR0R0J
R 441		RS1/16SS103J
R 442		RS1/10SR221J
R 461	(B)	RS1/10SR0R0J
R 462	(B)	RS1/16SS0R0J
R 463	(B)	RS1/16SS2202D
R 464	(B)	RS1/16SS4701D
R 465	(B)	RS1/16SS4303D
R 466	(B)	RS1/10SR102J
R 467	(B)	RS1/10SR0R0J
R 501	(B)	RS1/16SS222J
R 503		RS1/16SS100J
R 504		RS1/16SS100J
R 505		RS1/16SS221J
R 506		RS1/16SS473J
R 507		RS1/16SS473J
R 508		RS1/16SS473J
R 509		RS1/16SS473J
R 510		RS1/16SS473J
R 511		RS1/16SS473J
R 512		RS1/16SS0R0J
R 513		RS1/16SS222J
R 514		RS1/16SS101J
R 515		RS1/16SS103J
R 516		RS1/16SS101J
R 517		RS1/16SS103J
R 518		RS1/16SS472J
R 519		RS1/16SS271J
R 521		RS1/16SS473J
R 522		RS1/16SS0R0J
R 524		RS1/16SS3001D
R 525		RS1/16SS103J
R 526		RS1/16SS1213F
R 530		RS1/16SS472J
R 531		RS1/16SS222J
R 532		RS1/16SS222J
R 533		RS1/10SR103J
R 534		RS1/10SR103J
R 535		RS1/10SR0R0J
R 536		RS1/16SS472J
R 538	(A)	RS1/16SS472J
R 538	(B)	RS1/16SS103J
R 539	(B)	RS1/16SS473J
R 540		RS1/16SS103J
R 541		RS1/16SS103J
R 542		RS1/10SR0R0J
R 543		RS1/10SR0R0J
R 544		RS1/16SS102J
R 545		RS1/16SS473J
R 546		RS1/16SS273J
R 547		RS1/16SS473J
R 548		RS1/16SS102J
R 550		RS1/16SS103J
R 551		RS1/16SS103J
R 552		RS1/16SS102J
R 554		RS1/16SS222J
R 555		RS1/16SS135J
R 556		RS1/16SS101J
R 557		RS1/16SS101J

Circuit Symbol and No.	Part No.
R 558	RS1/16SS222J
R 559	RS1/16SS222J
R 560	RS1/16SS473J
R 561	RS1/16SS103J
R 562	RS1/16SS472J
R 563	RS1/16SS472J
R 564	RS1/16SS472J
R 566	RAB4CQ103J
R 567	RS1/16SS472J
R 568	RS1/16SS0R0J
R 570	RS1/16SS221J
R 571	RS1/16SS221J
R 572	RS1/16SS472J
R 573	RS1/16SS473J
R 574	RS1/16SS473J
R 575	RS1/16SS473J
R 578	RS1/16SS473J
R 579	RS1/16SS473J
R 580	RS1/16SS473J
R 581	RS1/16SS0R0J
R 583	RS1/16SS0R0J
R 584	RS1/16SS102J
R 585	RS1/16SS0R0J
R 586	RS1/16SS103J
R 587	RS1/16SS0R0J
R 588	RS1/16SS221J
R 589	RS1/16SS0R0J
R 590	RS1/16SS221J
R 591	RS1/16SS361J
R 597	RS1/16SS102J
R 598	RS1/16SS102J
R 599	RS1/16SS102J
R 603	RS1/16SS101J
R 604	RS1/16SS101J
R 605	RS1/16SS101J
R 607	RS1/16SS101J
R 611	RS1/16SS472J
R 614	RS1/16SS473J
R 615	RS1/16SS103J
R 617	RS1/16SS473J
R 627	RS1/16SS153J
R 628	RS1/16SS153J
R 629	RS1/16SS472J
R 630	RS1/16SS101J
R 631	RS1/16SS0R0J
R 632	RS1/16SS101J
R 633	RS1/16SS101J
R 634	RS1/16SS101J
R 635	RS1/16SS101J
R 636	RS1/16SS101J
R 637	RS1/16SS221J
R 638	RS1/16SS221J
R 639	RS1/16SS101J
R 640	RS1/16SS101J
R 642	RS1/16SS221J
R 643	RS1/16SS101J
R 644	RS1/16SS473J
R 645	RS1/16SS101J
R 646	RS1/16SS101J

Circuit Symbol and No.		Part No.
R 647		RS1/16SS102J
R 648		RS1/16SS102J
R 650		RS1/16SS101J
R 651		RS1/16SS102J
R 652		RS1/16SS101J
R 653		RS1/16SS0R0J
R 657		RS1/16SS101J
R 658		RS1/16SS101J
R 659		RS1/16SS101J
R 660		RS1/16SS101J
R 661		RS1/16SS101J
R 663		RS1/16SS101J
R 664		RS1/16SS101J
R 672		RS1/16SS101J
R 690		RS1/16SS472J
R 701		RS1/16SS103J
R 702		RS1/16SS472J
R 703		RS1/16SS101J
R 704		RS1/16SS101J
R 705		RS1/16SS222J
R 706		RS1/16SS222J
R 707		RS1/16SS472J
R 708		RS1/16SS272J
R 709		RS1/16SS473J
R 710		RS1/16SS0R0J
R 714		RAB4CQ121J
R 715		RAB4CQ121J
R 716		RAB4CQ121J
R 717		RAB4CQ121J
R 718		RAB4CQ121J
R 719		RAB4CQ121J
R 720		RAB4CQ121J
R 721		RAB4CQ121J
R 722		RAB4CQ121J
R 723		RS1/10SR0R0J
R 724		RS1/16SS121J
R 731		RS1/16SS330J
R 732		RS1/16SS330J
R 733		RS1/16SS103J
R 734		RS1/16SS103J
R 735		RS1/16SS103J
R 736		RS1/16SS330J
R 737		RS1/16SS330J
R 741		RS1/16SS330J
R 742		RS1/16SS103J
R 743		RS1/16SS103J
R 744		RS1/16SS330J
R 745		RS1/16SS330J
R 746		RS1/16SS103J
R 747		RS1/16SS330J
R 748		RS1/16SS330J
R 749		RS1/16SS330J
R 750		RS1/16SS103J
R 751		RS1/16SS103J
R 753		RS1/16SS103J
R 754		RS1/16SS330J
R 761		RS1/10SR221J
R 762	(B)	RS1/16SS0R0J
R 763		RS1/16SS101J

Circuit Symbol and No.		Part No.
R 764		RS1/16SS101J
R 765	(B)	RS1/16SS222J
R 766	(A)	RS1/16SS0R0J
R 767		RS1/16SS104J
R 768		RS1/16SS181J
R 769		RS1/8SQ0R0J
R 770		RS1/10SR0R0J
R 851		RS1/16SS105J
R 852		RS1/16SS105J
R 853		RS1/16SS391J
R 864		RS1/16SS103J
R 868		RS1/16SS103J
R 870		RS1/16SS101J
R 871		RS1/16SS0R0J
R 872		RS1/16SS0R0J
R 873		RS1/16SS182J
R 874		RS1/16SS101J
R 875		RS1/16SS472J
R 890		RS1/16SS0R0J
R 1001		RS1/16SS0R0J
R 1002		RS1/16SS221J
R 1004		RS1/16SS473J
R 1005		RS1/16SS221J
R 1006		RS1/16SS0R0J
R 1007		RS1/16SS0R0J
R 1011		RS1/16SS221J
R 1012		RS1/16SS221J
R 1013		RS1/16SS0R0J
R 1017		RS1/16SS473J
R 1018		RS1/16SS473J
R 1101		RS1/16SS104J
R 1104		RS1/16SS472J
R 1105		RS1/16SS221J
R 1106		RS1/16SS221J
R 1107		RS1/16SS101J
R 1108		RS1/16SS221J
R 1109		RS1/16SS101J
R 1110		RS1/16SS102J
R 1112		RS1/16SS221J
R 1114		RS1/16SS473J
R 1115		RS1/16SS472J
R 1116		RS1/16SS472J
R 1117		RS1/16SS472J
R 1119		RS1/16SS473J
R 1120		RS1/16SS151J
R 1121		RS1/16SS151J
R 1122		RS1/16SS151J
R 1201		RS1/10SR222J
R 1203		RS1/16SS223J
R 1204		RS1/16SS223J
R 1205		RS1/10SR222J
R 1206		RS1/10SR221J
R 1207		RS1/10SR221J
R 1208		RS1/10SR0R0J
R 1209		RS1/10SR222J
R 1210		RS1/10SR222J
R 1211		RS1/10SR222J
R 1212		RS1/10SR222J
R 1213		RS1/16SS123J

Circuit Symbol and No.		Part No.
R 1214		RS1/10SR222J
R 1215		RS1/10SR101J
R 1231		RS1/16SS181J
R 1232		RS1/16SS181J
R 1233		RS1/16SS223J
R 1234		RS1/16SS223J
R 1235		RS1/10SR822J
R 1236		RS1/10SR471J
R 1237		RS1/16SS104J
R 1238		RS1/16SS471J
R 1239		RS1/10SR471J
R 1241	(A)	RS1/16SS821J
R 1241	(B)	RS1/16SS470J
R 1242	(A)	RS1/16SS821J
R 1242	(B)	RS1/16SS470J
R 1243	(A)	RS1/16SS821J
R 1243	(B)	RS1/16SS470J
R 1244	(A)	RS1/16SS821J
R 1244	(B)	RS1/16SS470J
R 1245	(A)	RS1/16SS821J
R 1245	(B)	RS1/16SS470J
R 1246	(A)	RS1/16SS821J
R 1246	(B)	RS1/16SS470J
R 1247		RS1/16SS223J
R 1248		RS1/16SS223J
R 1249		RS1/16SS223J
R 1250		RS1/16SS223J
R 1251		RS1/16SS223J
R 1252		RS1/16SS223J
R 1253		RS1/16SS0R0J
R 1255		RS1/16SS0R0J
R 1278		RS1/16SS102J
R 1280		RS1/16SS102J
R 1281		RS1/16SS101J
R 1282		RS1/16SS101J
R 1284		RS1/16SS0R0J
R 1285		RS1/16SS0R0J
R 1301		RS1/16SS123J
R 1302		RS1/16SS103J
R 1303		RS1/16SS221J
R 1304		RS1/16SS0R0J
R 1306		RS1/16SS103J
R 1307		RS1/16SS0R0J
R 1308		RS1/8SQ0R0J
R 1309		RS1/8SQ0R0J
R 1312		RS1/16SS103J
R 1313		RS1/16SS102J
R 1321	(A)	RS1/16SS0R0J
R 1321	(B)	RS1/16SS432J
R 1322	(A)	RS1/16SS0R0J
R 1322	(B)	RS1/16SS432J
R 1323	(A)	RS1/16SS0R0J
R 1323	(B)	RS1/16SS432J
R 1324	(A)	RS1/16SS0R0J
R 1324	(B)	RS1/16SS432J
R 1325	(B)	RS1/16SS272J
R 1326	(B)	RS1/16SS272J
R 1327	(B)	RS1/16SS272J
R 1328	(B)	RS1/16SS272J

Circuit Symbol and No.		Part No.
R 1421		RS1/16SS0R0J
R 1422		RS1/16SS0R0J
R 1427		RS1/16SS0R0J

CAPACITORS

C 101	2 200 uF/16 V	CCH1405
C 102		CKSRYB103K50
C 103		CKSSYB102K50
C 104		CKSSYB102K50
C 105		CKSSYB102K50
C 106		CKSSYB102K50
C 107		CKSSYB102K50
C 108		CKSSYB102K50
C 109		CKSSYB102K50
C 110		CKSSYB102K50
C 111		CKSRYX104K50
C 121		CKSRYB104K16
C 122		CKSRYX105K50
C 201		CCSSCH681J50
C 202		CEVW221M16
C 203		CKSRYX106M6R3
C 204		CEVQW221M6R3
C 205		CKSRYX105K50
C 206		CKSYX106K35
C 207		CKSSYB104K10
C 208		CCSSCH471J50
C 209		CCSSCH681J50
C 210	2 200 uF/16 V	CCH1405
C 211		CKSQYX106K10
C 212		CEAT102M16
C 213		CKSSYB222K50
C 214		CKSRYX106M6R3
C 215		CKSRYB104K16
C 216		CKSRYX104K50
C 217		CCSRCH102J50
C 218		CKSYX106K35
C 220		CKSYX106K35
C 221		CKSYX106K35
C 222		CEVW221M16
C 223		CCSSCH221J50
C 224		CKSRYB105K10
C 225		CKSRYB105K10
C 227		CCSSCH221J50
C 228		CCSSCH102J50
C 230		CKSQYX106K10
C 231		CKSRYB104K16
C 232		CEHVW101M6R3
C 234		CKSRYX475K6R3
C 236		CKSYX106K35
C 237		CKSRYB104K16
C 238		CKSYX226M16
C 239		CCSSCH100D50
C 240		CCSSCH100D50
C 241		CKSQYX106K10
C 242		CKSRYB104K16
C 243		CKSYX106K35
C 247		CKSRYB105K10
C 248		CKSRYX105K50
C 249		CCSSCH820J50
C 250		CKSRYX225K10

Circuit Symbol and No.		Part No.
C 251		CKSRYB105K10
C 252		CKSRYX475K6R3
C 253		CKSRYX105K50
C 255		CKSSYX105K10
C 257		CKSYX106K35
C 259		CKSQYX106K10
C 260		CKSQYX106K10
C 261		CKSSYB104K10
C 270		CKSRYX475K6R3
C 441		CCSRCH101J50
C 442		CKSQYX106K10
C 443		CCSRCH101J50
C 444		CKSQYX106K10
C 461	(B)	CKSYX106K35
C 462	(B)	CKSYX106K35
C 463	(B)	CKSQYX106K16
C 464	(B)	CKSSYB221K50
C 502		CKSSYB104K10
C 503		CKSRYX475K6R3
C 505		CKSSYB104K10
C 506		CKSRYX475K6R3
C 507		CKSRYX475K6R3
C 508		CKSSYB104K10
C 509		CKSRYX475K6R3
C 510		CKSSYB104K10
C 511		CKSRYX475K6R3
C 512		CKSSYB104K10
C 513		CKSRYX475K6R3
C 514		CKSSYB104K10
C 515		CKSSYX105K10
C 516		CKSRYX225K16
C 517		CKSSYB104K10
C 518		CCSSCH100D50
C 519		CCSSCH100D50
C 520		CKSRYX475K6R3
C 521		CKSSYB104K10
C 522		CKSRYX475K6R3
C 523		CKSRYX475K6R3
C 524		CKSRYX475K6R3
C 525		CKSRYX106M6R3
C 526		CKSSYB103K16
C 527		CKSRYX106M6R3
C 528		CKSSYB103K16
C 529		CKSSYB104K10
C 530		CKSRYX475K6R3
C 531		CKSSYX105K10
C 532		CKSSYX105K10
C 533		CKSRYX475K6R3
C 534		CKSSYB104K10
C 535		CEVW221M10
C 536		CCSSCH101J50
C 537		CKSSYB103K16
C 538		CKSRYX106M6R3
C 539		CKSSYB103K16
C 540		CKSRYX106M6R3
C 541		CKSSYB222K50
C 542		CKSSYB104K10
C 543		CKSSYX105K10
C 544		CKSSYB473K16
C 545		CCSSCH100D50

Circuit Symbol and No.	Part No.
C 546	CCSSCH120J50
C 551	CKSSYB104K10
C 552	CKSRYX475K6R3
C 553	CKSQYX106K10
C 555	CKSSYB103K16
C 556	CKSSYB104K10
C 557	CKSSYB104K10
C 558	CKSSYB104K10
C 559	CKSQYB224K50
C 560	CKSSYB103K16
C 565	CCSRCH270J50
C 566	CCSRCH330J50
C 569	CCSSCH101J50
C 573	CCSRCH101J50
C 574	CCSSCH101J50
C 575	CKSSYB104K10
C 576	CKSSYB102K50
C 577	CCSSCH101J50
C 580	CKSRYB104K16
C 588	CKSSYB104K10
C 590	CKSSYB472K25
C 591	CKSSYB472K25
C 592	CKSSYB472K25
C 593	CKSSYB472K25
C 595	CKSSYB472K25
C 701	CKSSYB104K10
C 702	CKSSYB104K10
C 712	CKSSYX105K10
C 713	CKSSYB104K10
C 714	CKSSYX105K10
C 715	CKSSYX105K10
C 716	CKSSYX105K10
C 717	CKSRYX475K6R3
C 718	CKSSYX105K10
C 719	CKSSYB104K10
C 721	CKSRYX105K16
C 722	CKSSYB104K10
C 723	CCSSCH102J50
C 729	CKSQYX106K10
C 731	CKSSYB104K10
C 741	CKSRYX225K10
C 742	CKSSYB104K10
C 743	CKSSYB104K10
C 761	CKSRYB105K10
C 762	CKSRYB105K10
C 763	CKSRYB105K10
C 764	CKSRYB105K10
C 765	CKSRYB105K10
C 766	CKSRYB105K10
C 769	CKSRYB105K10
C 770	CKSRYB105K10
C 771	CKSRYB105K10
C 772	CKSRYB105K10
C 773	CKSRYB105K10
C 774	CCSSCH151J50
C 775	CCSSCH151J50
C 776	CKSRYX104K50
C 777	CKSYX106K35
C 778	CKSRYB105K10

Circuit Symbol and No.		Part No.
C 779		CKSQYX106K10
C 780		CKSSYB104K16
C 781		CKSRYB105K10
C 782		CKSRYB105K10
C 783		CKSRYB105K10
C 784		CKSRYB105K10
C 785		CKSRYB105K10
C 787		CKSQYX106K16
C 788		CKSQYX106K16
C 790		CKSQYX106K10
C 791		CKSRYB103K50
C 794		CCSRCH101J50
C 853		CCSSCH100D50
C 854		CCSSCH471J50
C 856		CKSRYX104K50
C 857		CKSRYX104K50
C 858		CCSSCH220J50
C 859		CCSSCH331J50
C 865		CKSRYX225K10
C 866		CKSSYB224K6R3
C 867		CKSSYB102K50
C 870		CCSSCH102J50
C 872		CKSSYB104K10
C 874		CCSSCH390J50
C 875		CKSSYB104K10
C 878		CKSSYB152K50
C 882		CKSSYX105K10
C 884	(A)	CKSSYB104K16
C 885		CCG1318
C 890		CKSRYX106M6R3
C 891		CKSRYX225K10
C 1003		CKSRYB104K16
C 1004		CKSRYB104K16
C 1101		CKSSYB103K16
C 1105		CKSSYX105K10
C 1106		CKSSYX105K10
C 1109		CCSSCH102J50
C 1201		CCSRCH102J50
C 1202		CKSRYX104K50
C 1203		CKSRYB104K16
C 1204		CKSRYB105K10
C 1205		CCSRCH221J50
C 1206		CCSRCH221J50
C 1207		CKSRYB474K10
C 1210		CKSRYB105K10
C 1212		CCSSCH470J50
C 1217		CCSSCH121J50
C 1221		CKSYX106K35
C 1231		CKSRYB104K16
C 1232		CKSRYX104K50
C 1241	(A)	CKSQYX106K10
C 1241	(B)	CKSQYX106K25
C 1242	(A)	CKSQYX106K10
C 1242	(B)	CKSQYX106K25
C 1243	(A)	CKSQYX106K10
C 1243	(B)	CKSQYX106K25
C 1244	(A)	CKSQYX106K10
C 1244	(B)	CKSQYX106K25
C 1245	(A)	CKSQYX106K10

Circuit Symbol and No.		Part No.
C 1245	(B)	CKSQYX106K25
C 1246	(A)	CKSQYX106K10
C 1246	(B)	CKSQYX106K25
C 1247	(A)	CCSSCH102J50
C 1247	(B)	CKSSYB103K16
C 1248	(A)	CCSSCH102J50
C 1248	(B)	CKSSYB103K16
C 1249	(A)	CCSSCH102J50
C 1249	(B)	CKSSYB103K16
C 1250	(A)	CCSSCH102J50
C 1250	(B)	CKSSYB103K16
C 1251	(A)	CCSSCH102J50
C 1251	(B)	CKSSYB103K16
C 1252	(A)	CCSSCH102J50
C 1252	(B)	CKSSYB103K16
C 1253		CKSSYB103K16
C 1254		CKSSYB104K10
C 1255		CCSRCH331J50
C 1256		CKSSYX105K10
C 1276		CKSRYB104K16
C 1277		CKSRYB104K16
C 1278		CKSRYB104K16
C 1279		CKSRYB104K16
C 1280		CKSSYB102K50
C 1281		CKSSYB102K50
C 1301		CKSQYB474K25
C 1302		CKSQYB474K25
C 1303		CKSQYB474K25
C 1304		CKSQYB474K25
C 1305		CKSSYB104K10
C 1306		CKSRYB474K10
C 1308		CKSRYX104K50
C 1310		CKSQYX106K16
C 1311		CKSRYX225K10
C 1312		CKSRYX104K50
C 1316		CKSRYX104K50
C 1317		CKSRYX104K50
C 1318		CKSRYX104K50
C 1321		CKSRYX106M6R3

B

Unit Number: QWM4636
Unit Name : Keyboard Unit

MISCELLANEOUS

IC 1801	Driver IC	BU97540KV-M
IC 1802	Driver IC	BU97540KV-M
IC 1951	IR RC REC Module	PNJ4833M
Q 1841	Bipolar Transistor	LSCR523UB
Q 1842	Bipolar Transistor	LSCR523UB
Q 1843	Bipolar Transistor	LSCR523UB
Q 1847	Bipolar Transistor	LSCR523UB
Q 1848	Bipolar Transistor	LSCR523UB
Q 1849	Bipolar Transistor	LSCR523UB
D 1841	LED	SMLVN6RGB3U(B)
D 1842	LED	SMLVN6RGB3U(B)
D 1843	LED	SMLVN6RGB3U(B)
D 1844	LED	SMLVN6RGB3U(B)
D 1845	LED	SMLVN6RGB3U(B)

Circuit Symbol and No.		Part No.
D 1901	Diode	SZESD7351HG
D 1902	Diode	SZESD7351HG
D 1921	Diode	DZ2S068C
D 1922	Diode	DZ2S068C
D 1923	Diode	DZ2S068C
L 1921	Ferrite Bead	CTF1528
L 1922	Ferrite Bead	CTF1528
L 1923	Ferrite Bead	CTF1528
S 1821	Push Switch	CSG1155
S 1822	Push Switch	CSG1155
S 1823	Push Switch	CSG1155
S 1825	Push Switch	CSG1155
S 1826	Push Switch	CSG1155
S 1827	Push Switch	CSG1155
S 1828	Push Switch	CSG1155
S 1829	Push Switch	CSG1155
S 1830	Push Switch	CSG1155
S 1831	Push Switch	CSG1155
S 1832	Push Switch	CSG1155
S 1833	Push Switch	CSG1155
S 1834	Push Switch	CSG1155
S 1835	Push Switch	CSG1155
S 1836	Encoder(MULTI-CONTROL)	CSD1168
CN1941	Connector	CKS6451
JA1901	Connector	CKS6443
JA1921	Jack	CKN1090
V 1801	Segment LCD	CAW2057

RESISTORS

R 1805		RS1/16SS472J
R 1821		RS1/16SS273J
R 1841		RS1/16SS332J
R 1842		RS1/16SS152J
R 1843		RS1/16SS332J
R 1844		RS1/16SS152J
R 1845		RS1/16SS332J
R 1846		RS1/16SS152J
R 1847		RS1/16SS470J
R 1849		RS1/16SS470J
R 1851		RS1/16SS470J
R 1865		RS1/16SS332J
R 1866		RS1/16SS152J
R 1867		RS1/16SS332J
R 1868		RS1/16SS152J
R 1869		RS1/16SS332J
R 1870		RS1/16SS152J
R 1871		RS1/16SS390J
R 1873		RS1/16SS390J
R 1875		RS1/16SS390J
R 1877		RS1/16SS0R0J
R 1878		RS1/16SS0R0J
R 1879		RS1/16SS0R0J
R 1883		RS1/8SQ101J
R 1884		RS1/10SR221J
R 1885		RS1/10SR0R0J
R 1886		RS1/10SR0R0J
R 1887		RS1/16SS101J
R 1888		RS1/16SS101J
R 1941		RS1/10SR222J
R 1942		RS1/10SR222J
R 1943		RS1/10SR222J
R 1944		RS1/10SR222J
R 1953		RS1/10SR101J

CAPACITORS

C 1801		CKSRYB105K10
C 1802		CKSRYB105K10
C 1903		CCSRCH471J50
C 1904		CKSRYX105K16
C 1905		CKSRYX105K16
C 1906	4.7 uF	CCG1212
C 1951	10 uF	CCG1192
C 1952		CCSSCH470J50
C 1953		CCSSCH470J50

C

Unit Number: CWX4269
Unit Name : CD Core Unit(S11.6VA)

MISCELLANEOUS

IC 201	IC	PEQ094A
IC 301	Driver IC	BD8223EFV
Q 101	Transistor	2SAR502UB
Q 102	Chip Digital Transistor	LTA123JUB
X 201	Ceramic Resonator 16.934 MHz	CSS1603
S 901	Lever Switch(HOME)	CSN1090
S 903	Spring Switch(DSCSNS)	CSN1081
CN101	Connector	CKS4808
CN701	Connector	CKS6146

RESISTORS

R 101		RS1/10SR2R4J
R 102		RS1/10SR2R4J
R 103		RS1/10SR2R7J
R 108		RS1/16SS105J
R 109		RS1/16SS152J
R 214		RS1/16SS103J
R 215		RS1/16SS393J
R 216		RS1/16SS102J
R 217		RS1/16SS562J
R 218		RS1/16SS472J
R 229		RS1/16SS471J
R 232		RS1/16SS0R0J
R 237		RS1/16SS221J
R 240		RS1/16SS473J
R 245		RS1/16SS104J
R 254		RS1/16SS104J
R 260		RS1/16SS103J
R 264		RS1/16SS102J
R 281		RS1/16SS560J
R 282		RS1/16SS560J
R 291		RS1/16SS560J
R 294		RS1/16SS471J
R 303		RS1/16SS123J
R 304		RS1/16SS123J
R 305		RS1/16SS102J
R 306		RS1/16SS472J
R 307		RS1/16SS102J
R 308		RS1/16SS472J
R 309		RS1/16SS473J
R 310		RS1/16SS472J

Circuit Symbol and No.	Part No.
R 311	RS1/16SS472J
R 312	RS1/16SS472J
R 313	RS1/16SS472J
R 701	RS1/16SS101J
R 702	RS1/16SS101J
R 706	RS1/16SS221J
CAPACITORS	
C 104	CKSQYB475K6R3
C 110	CKSSYB104K10
C 111	CKSSYB103K16
C 203	CKSSYB104K10
C 205	CKSRYB105K10
C 209	CKSRYB104K16
C 210	CKSSYB104K10
C 211	CKSSYB104K10
C 212	CKSSYB104K10
C 213	CKSSYB332K50
C 214	CKSSYB473K16
C 215	CKSSYB104K10
C 216	CKSSYB152K50
C 217	CCSSCH390J50
C 218	CCSSCH5R0C50
C 219	CKSSYB104K10
C 220	CKSSYB104K10
C 221	CKSSYB104K10
C 222	CKSSYB104K10
C 223	CCSSCH680J50
C 224	CCSSCH470J50
C 225	CKSSYB103K16
C 228	CCSSCH180J50
C 229	CKSSYB104K10
C 233	CKSSYB103K16
C 236	CKSSYB104K10
C 238	CKSRYB104K16
C 299	CKSSYB104K10
C 302	CKSSYB102K50
C 303	CKSSYB102K50
C 304	CKSSYB223K16
C 305	CKSSYB104K10
C 306	CKSSYB104K10
C 307	CKSRYB105K10
C 308	CKSRYB105K10
C 710	CKSSYB102K50

D

Unit Number: CWX4023
Unit Name : CD Core Unit(S11.6STD)

MISCELLANEOUS		
IC 201	IC	PE5791A
IC 301	Driver IC	BD8223EFV
Q 101	Transistor	2SAR502UB
Q 102	Chip Digital Transistor	LTA123JUB
X 201	Ceramic Resonator 16.934 MHz	CSS1603
S 901	Lever Switch(HOME)	CSN1090
S 903	Spring Switch(DSCSNS)	CSN1081
CN101	Connector	CKS4808
CN701	Connector	CKS6146

Circuit Symbol and No.	Part No.
RESISTORS	
R 101	RS1/10SR2R4J
R 102	RS1/10SR2R4J
R 103	RS1/10SR2R7J
R 108	RS1/16SS105J
R 109	RS1/16SS222J
R 214	RS1/16SS103J
R 215	RS1/16SS393J
R 216	RS1/16SS122J
R 217	RS1/16SS562J
R 218	RS1/16SS472J
R 229	RS1/16SS471J
R 232	RS1/16SS0R0J
R 237	RS1/16SS221J
R 240	RS1/16SS473J
R 245	RS1/16SS104J
R 254	RS1/16SS104J
R 260	RS1/16SS103J
R 264	RS1/16SS102J
R 281	RS1/16SS560J
R 282	RS1/16SS560J
R 291	RS1/16SS560J
R 294	RS1/16SS471J
R 303	RS1/16SS123J
R 304	RS1/16SS123J
R 305	RS1/16SS102J
R 306	RS1/16SS472J
R 307	RS1/16SS102J
R 308	RS1/16SS472J
R 309	RS1/16SS473J
R 310	RS1/16SS472J
R 311	RS1/16SS472J
R 312	RS1/16SS472J
R 313	RS1/16SS472J
R 701	RS1/16SS101J
R 702	RS1/16SS101J
R 706	RS1/16SS221J
CAPACITORS	
C 104	CKSQYB475K6R3
C 203	CKSSYB104K10
C 209	CKSRYB104K16
C 210	CKSSYB104K10
C 211	CKSSYB104K10
C 212	CKSSYB104K10
C 213	CKSSYB332K50
C 214	CKSSYB473K16
C 215	CKSSYB104K10
C 216	CKSSYB182K50
C 217	CCSSCH560J50
C 218	CCSSCH4R0C50
C 219	CKSSYB104K10
C 220	CKSSYB104K10
C 221	CKSSYB104K10
C 222	CKSSYB104K10
C 223	CCSSCH680J50
C 224	CCSSCH470J50
C 225	CKSSYB103K16
C 228	CCSSCH270J50

Circuit Symbol and No.	Part No.
C 229	CKSSYB104K10
C 233	CKSSYB103K16
C 236	CKSSYB104K10
C 238	CKSRYB104K16
C 299	CKSSYB104K10
C 302	CKSSYB102K50
C 303	CKSSYB102K50
C 304	CKSSYB223K16
C 305	CKSSYB104K10
C 306	CKSSYB104K10
C 307	CKSRYB105K10
C 308	CKSRYB105K10
C 710	CKSSYB102K50