EXPLODED VIEW (CD MECHANISM)

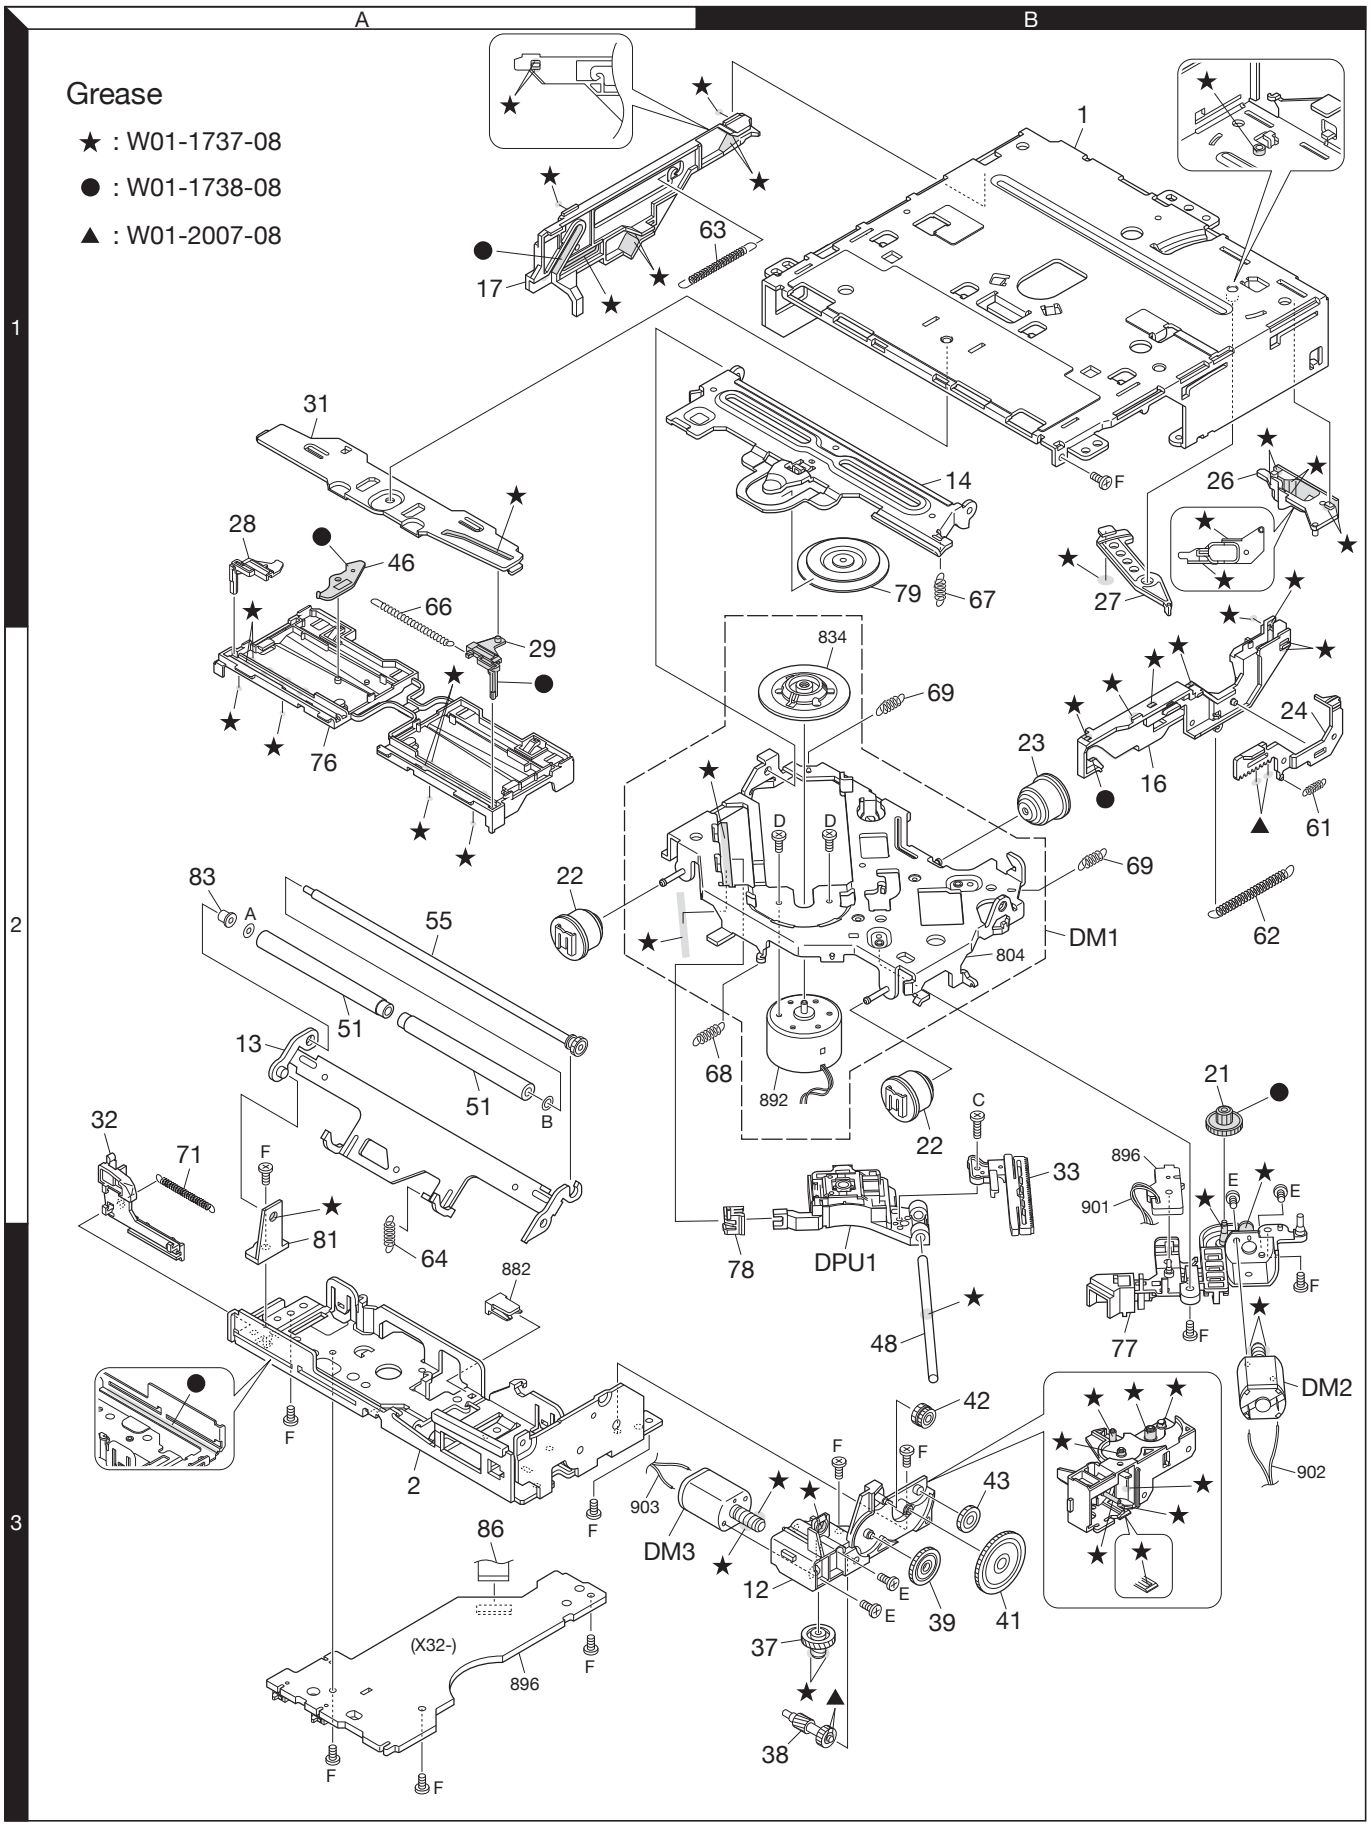

Parts with the exploded numbers larger than 700 are not supplied.

EXPLODED VIEW (UNIT)

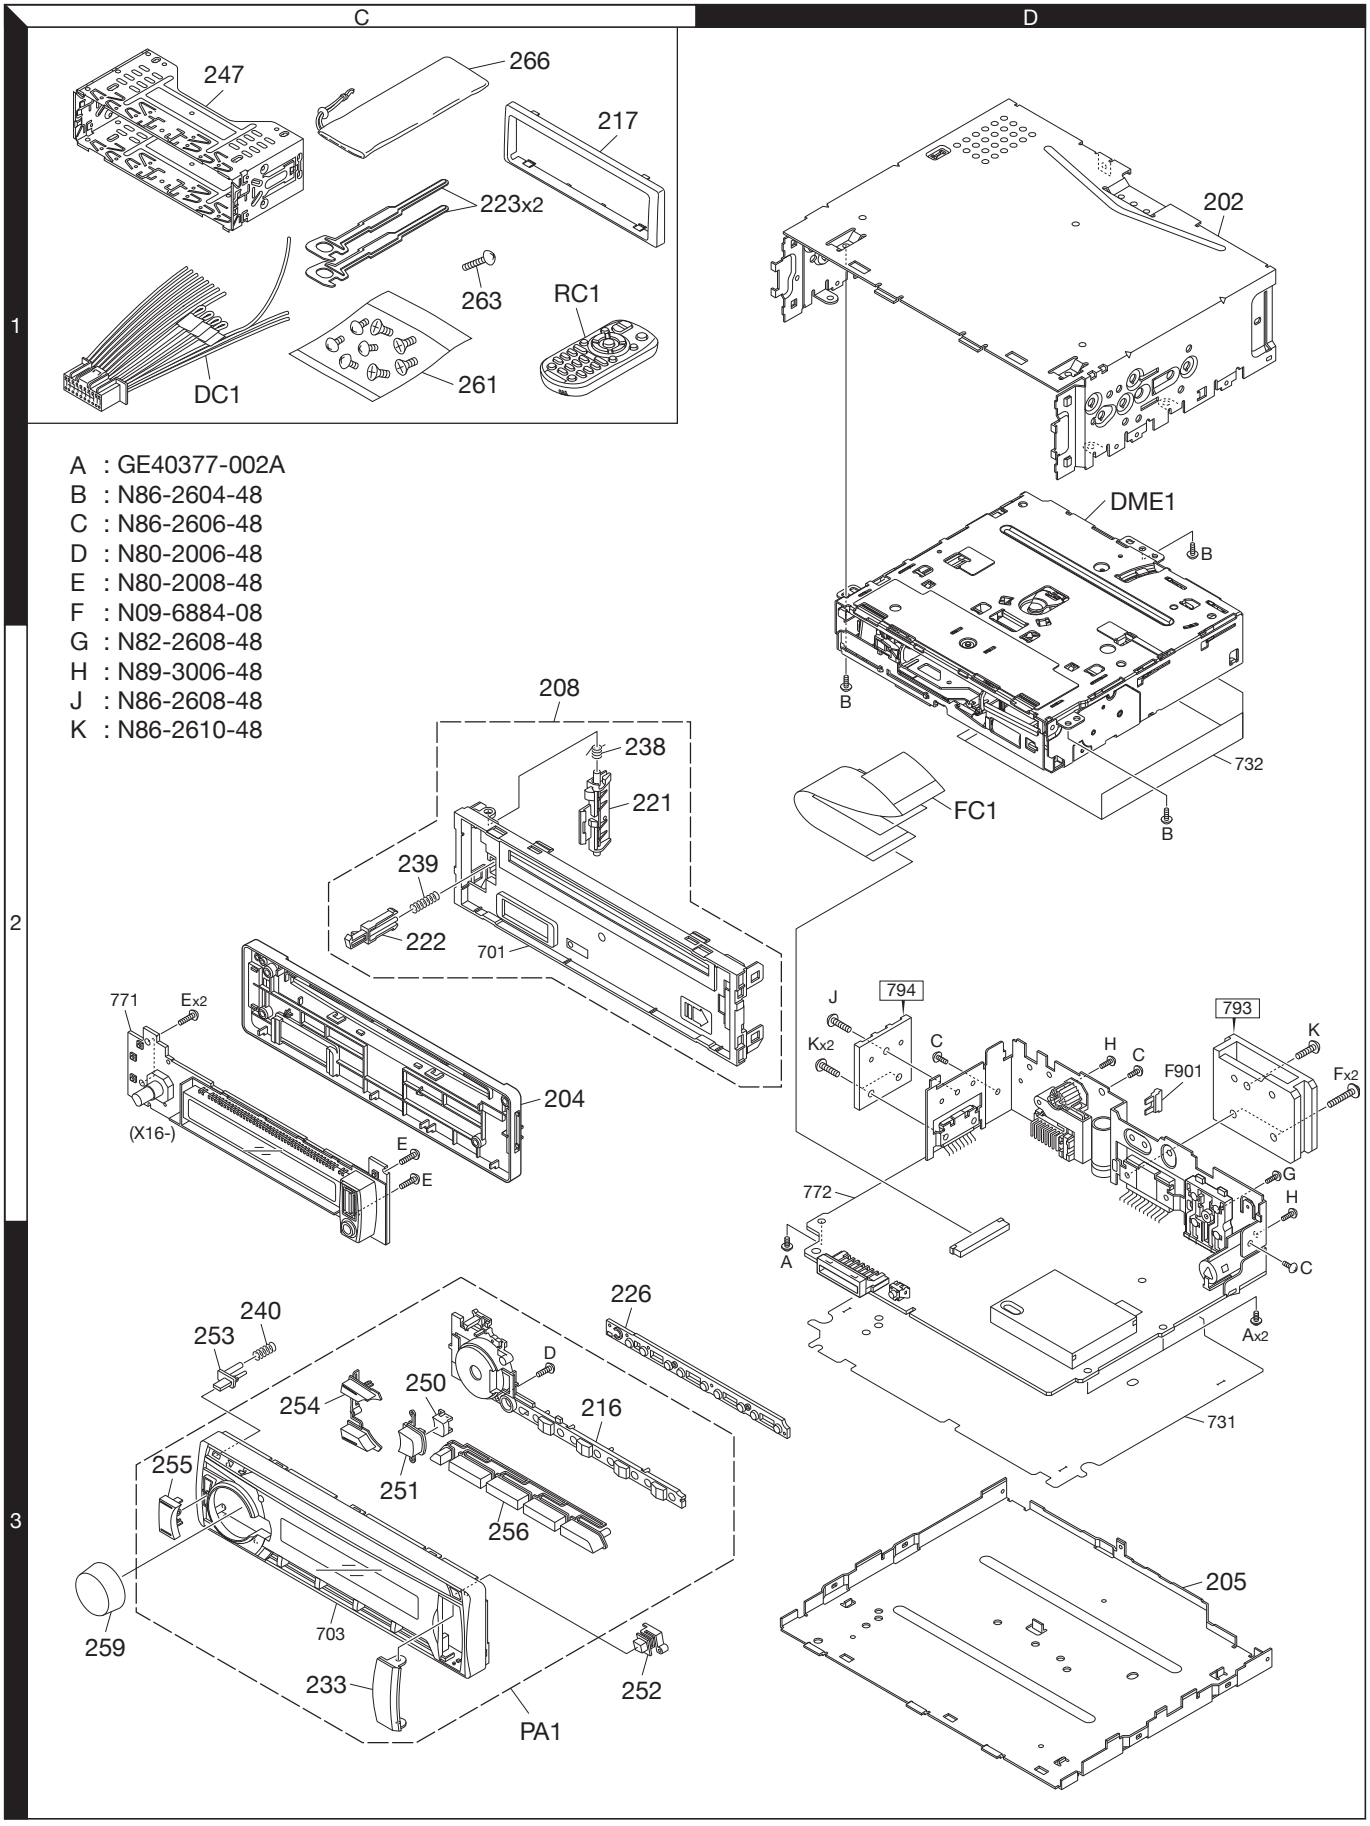

A : GE40377-002A
B : N86-2604-48
C : N86-2606-48
D : N80-2006-48
E : N80-2008-48
F : N09-6884-08
G : N82-2608-48
H : N89-3006-48
J : N86-2608-48
K : N86-2610-48

Parts with the exploded numbers larger than 700 are not supplied.

KDC-HD548U

PARTS LIST

✻ New parts
Parts without **Parts No.** are not supplied.
Les articles non mentionnes dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

Ref. No.	Add	New	Parts No.	Description	Destination
KDC-HD548U					
202	1D	✻	GE10283-003A	TOP CHASSIS	
204	2C		GE10286-001A	REAR COVER	
205	3D	✻	GE20271-004A	BOTTOM COVER	
208	2C		GE34074-001A	F.CHASSIS ASSY	
PA1	3C	✻	GE20277-029A	PANEL ASSY	
RC1	1C		A70-2104-05	REMOTE CONTROL UNIT (RC-405)	
-		✻	GET0696-001A	INSTRUCTION BOOK (ENG.FRE.SPA.)	
-		✻	GET0696-002A	INSTALLATION MANUAL (ENG.FRE.SPA.)	
216	3C		GE10289-001A	LIGHT GUIDE	
217	1C		GE20274-001A	TRIM PLATE	
221	2C		GE34045-001A	LOCK LEVER	
222	2C		GE34046-001A	RELEASE LEVER	
223	1C	✻	GE40510-002A	HOOK	
226	3C		GE34058-001A	CONDUCTIVE RUBBER	
DC1	1C		E30-6933-05	CAR CABLE	
FC1	2D	✻	WJT0253-001A-E	E-CARD WIRE	
233	3C		GE34055-001A	USB DOOR COVER	
F901	2D		F52-0023-05	FUSE (10A)	
238	2C		GE40504-001A	SPRING (TORSION)	
239	2C		GE40505-001A	SPRING (COMPRESSION)	
240	3C		GE40505-002A	SPRING (DETACH)	
-		✻	GE34366-001A	INNER CARTON	
247	1C		GE34134-002A	MOUNTING SLEEVE ASSY	
250	3C		GE34053-001A	ACCENT BUTTON BASE	
251	3C	✻	GE34052-006A	ACCENT BUTTON TOP (HD)	
252	3C		GE34059-001A	EJECT BUTTON	
253	3C		GE34060-001A	DETACH BUTTON	
254	3C		GE34061-001A	SRC BUTTON	
255	3C		GE34063-001A	SEARCH BUTTON	
256	3C		GE34064-001A	PRESET BUTTON	
259	3C		GE40511-001A	VOL KNOB RUBBER	
261	1C		N99-1757-15	SCREW SET	
263	1C		N80-2008-43	TAP SCREW (ACCESSORY)	
A	3D		GE40377-002A	SPECIAL SCREW	
B	2D		N86-2604-48	TAP SCREW	
C	2D		N86-2606-48	TAP SCREW	
D	3C		N80-2006-48	TAP SCREW	
E	2C		N80-2008-48	TAP SCREW	
266	1C		W01-1710-05	CARRYING CASE	
DME1	1D		X92-6630-00	MECHANISM ASSY (HCS-1000W)	
SWITCH UNIT (X16-7040-11)					
D651			B30-1566-05	LED	
D652			B30-3210-05	LED	
D655			B30-3210-05	LED	
D659			B30-3210-05	LED	
D664			SMLE12WBCR1R2X	LED	
D665-670			B30-3210-05	LED	

Ref. No.	Add	New	Parts No.	Description	Destination
D672,673			SMLE12WBCR1R2X	LED	
D676			SMLE12WBCR1R2X	LED	
D679			SMLE12WBCR1R2X	LED	
FL601			QLF0202-001	FLUORESCENT INDICATOR TUBE	
C611,612			CK73GB1H104K	CHIP C 0.10UF K	
C614			CK73GB1H102K	CHIP C 1000PF K	
C615-617			CK73GB1H471K	CHIP C 470PF K	
C618			CK73GB1H102K	CHIP C 1000PF K	
C621			CK73GB1H104K	CHIP C 0.10UF K	
C671,672			CK73GB1H472K	CHIP C 4700PF K	
C681,682			CC73GCH1H270J	CHIP C 27PF J	
C684			NCJ11EK-106X-R	CERAMIC CAPACITOR	
CN601		✻	QGZ1102K2-20X	DETACHABLE CONNECTOR	
CN603			QNZ1057-001	USB CONNECTOR	
J602			QNS0308-001	DIA 3.5 TYPE JACK	
LF601		✻	NQR0682-001X	CHOKE COIL	
R611			RK73GB2A104J	CHIP R 100K J 1/10W	
R612			RK73GB2A4R7J	CHIP R 4.7 J 1/10W	
R614			RK73GB2A101J	CHIP R 100 J 1/10W	
R615			RK73GB2A473J	CHIP R 47K J 1/10W	
R617,618			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R622			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R625			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R634-638			RK73GB2A101J	CHIP R 100 J 1/10W	
R639-641			RK73GB2A473J	CHIP R 47K J 1/10W	
R642-645			RK73GB2A101J	CHIP R 100 J 1/10W	
R648			RK73EB2E102J	CHIP R 1.0K J 1/4W	
R650,651			RK73EB2E152J	CHIP R 1.5K J 1/4W	
R652			RK73EB2E102J	CHIP R 1.0K J 1/4W	
R653,654			RK73EB2E152J	CHIP R 1.5K J 1/4W	
R656-659			RK73EB2E102J	CHIP R 1.0K J 1/4W	
R669-671			RK73EB2E102J	CHIP R 1.0K J 1/4W	
R673,674			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R681,682			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R683			RK73GB2A103J	CHIP R 10K J 1/10W	
S602,603			NSW0326-001X	TACT SWITCH	
S610,611			NSW0326-001X	TACT SWITCH	
S615,616			NSW0326-001X	TACT SWITCH	
EN601			QSW1288-001	ROTARY ENCODER	
D601-608			DZ2J051/M/-X	ZENER DIODE	
D685,686			DZ2J051/M/-X	ZENER DIODE	
IC602			KSM-2003TN5B	IR DETECT FOR REMOTO CONTROL	
Q602			RT1P141C-X	DIGITAL TRANSISTOR	
Q603			RT1N241C-X	DIGITAL TRANSISTOR	
Q610-612			RT1P141C-X	DIGITAL TRANSISTOR	
CD PLAYER UNIT (X32-6430-00) IN CD MECHA					
CN101			QGF1049F1-26X	FFC/FPC CONNECTOR	
CN102			QGF0522F3-15W	FFC/FPC CONNECTOR	
B1			RK73EB2E000J	CHIP R 0.0 J 1/4W	
R1			RK73GB2A131J	CHIP R 130 J 1/10W	

⚠Indicates safety critical components.

PARTS LIST

CD PLAYER UNIT (X32-6430-00) IN CD MECHA

Ref. No.	Add	New	Parts No.	Description			Destination
SW1 -4			NSW0291-001X	DETECTION SWITCH			
ELECTRIC UNIT							
B1			CK73GB1E473K	CHIP C	0.047UF	K	
B6			CC73GCH1H471J	CHIP C	470PF	J	
B9			CK73GB1H472K	CHIP C	4700PF	K	
B12			CK73GB1H472K	CHIP C	4700PF	K	
B14			CC73GCH1H471J	CHIP C	470PF	J	
B18, 19			CK73GB1H472K	CHIP C	4700PF	K	
B27			CC73GCH1H471J	CHIP C	470PF	J	
C1			CC73GCH1H330J	CHIP C	33PF	J	
C4			CK73GB1H102K	CHIP C	1000PF	K	
C6			CC73GCH1H390J	CHIP C	39PF	J	
C8			CC73GCH1H060D	CHIP C	6.0PF	D	
C9			CK73GB1H102K	CHIP C	1000PF	K	
C10			CK73GB1H103K	CHIP C	0.010UF	K	
C17			NCJ11EK-106X-A	C CAPACITOR			
C18			CK73GB1H103K	CHIP C	0.010UF	K	
C19			CC73GCH1H221J	CHIP C	220PF	J	
C21			CK73FB0J106K	CHIP C	10UF	K	
C22			CK73GB1C104K	CHIP C	0.10UF	K	
C23			CC73GCH1H101J	CHIP C	100PF	J	
C24			C93-1512-08	CHIP C	0.10UF	K	
C25			CK73HB1H103K	CHIP C	0.010UF	K	
C26			CC73GCH1H820J	CHIP C	82PF	J	
C27			CK73GB1C105K	CHIP C	1.0UF	K	
C28			CK73FB0J106K	CHIP C	10UF	K	
C29			CC73GCH1H471J	CHIP C	470PF	J	
C30			CK73GB1H103K	CHIP C	0.010UF	K	
C31			CK73GB1C224K	CHIP C	0.22UF	K	
C32			C93-1512-08	CHIP C	0.10UF	K	
C33			CK73GB1H472K	CHIP C	4700PF	K	
C34			CK73GB1H104K	CHIP C	0.10UF	K	
C35			CC73GCH1H100D	CHIP C	10PF	D	
C36			CK73HB1H103K	CHIP C	0.010UF	K	
C40, 41			CK73GB1H472K	CHIP C	4700PF	K	
C42			CK73GB1C105K	CHIP C	1.0UF	K	
C45			C93-1512-08	CHIP C	0.10UF	K	
C46, 47			CC73GCH1H070D	CHIP C	7.0PF	D	
C48, 49			CK73GB1H104K	CHIP C	0.10UF	K	
C51			C93-1512-08	CHIP C	0.10UF	K	
C53			C93-1512-08	CHIP C	0.10UF	K	
C56, 57			CC73GCH1H220J	CHIP C	22PF	J	
C58			CC73GCH1H020C	CHIP C	2.0PF	C	
C59			CC73GCH1H050C	CHIP C	5.0PF	C	
C63			CK73GB1C105K	CHIP C	1.0UF	K	
C64			C93-1512-08	CHIP C	0.10UF	K	
C65			CK73GB1C474K	CHIP C	0.47UF	K	
C66, 67			CK73HB1H103K	CHIP C	0.010UF	K	
C69			CK73GB1A105K	CHIP C	1.0UF	K	
C71			CK73GB1H102K	CHIP C	1000PF	K	
C72			CC73GCH1H040C	CHIP C	4.0PF	C	
C73			CC73GCH1H120J	CHIP C	12PF	J	
C80			CK73GB1E473K	CHIP C	0.047UF	K	
C101,102			CK73GB1C105K	CHIP C	1.0UF	K	

Ref. No.	Add	New	Parts No.	Description			Destination
C111			CK73GB1C105K	CHIP C	1.0UF	K	
C112			CK73GB1C104K	CHIP C	0.10UF	K	
C166			CK73GB1C104K	CHIP C	0.10UF	K	
C168			CK73GB1C104K	CHIP C	0.10UF	K	
C169-171			CK73GB1A105K	CHIP C	1.0UF	K	
C177			CK73GB1A105K	CHIP C	1.0UF	K	
C253,254			CC73GCH1H101J	CHIP C	100PF	J	
C301-304			NCB21CK-224X-A	C CAPACITOR			
C311,312			CK73GB1E104K	CHIP C	0.10UF	K	
C313			NCB21AK-105X-A	C CAPACITOR			
C314,315			CK73GB1A105K	CHIP C	1.0UF	K	
C321			CC73GCH1H101J	CHIP C	100PF	J	
C331			CC73GCH1H101J	CHIP C	100PF	J	
C341			CC73GCH1H101J	CHIP C	100PF	J	
C351			CC73GCH1H101J	CHIP C	100PF	J	
C403			CC73GCH1H101J	CHIP C	100PF	J	
C404			CC73GCH1H151J	CHIP C	150PF	J	
C408			CC73GCH1H101J	CHIP C	100PF	J	
C409			CC73GCH1H151J	CHIP C	150PF	J	
C413			C93-1512-08	CHIP C	0.10UF	K	
C503			C93-1512-08	CHIP C	0.10UF	K	
C504			CK73GB1H104K	CHIP C	0.10UF	K	
C508-510			CC73GCH1H471J	CHIP C	470PF	J	
C513			CK73GB1C104K	CHIP C	0.10UF	K	
C517			C93-1512-08	CHIP C	0.10UF	K	
C531			CK73GB1H104K	CHIP C	0.10UF	K	
C533			C93-1512-08	CHIP C	0.10UF	K	
C535			C93-1512-08	CHIP C	0.10UF	K	
C540			C93-1512-08	CHIP C	0.10UF	K	
C541			CK73HB1H222K	CHIP C	2200PF	K	
C542			CK73GB1H104K	CHIP C	0.10UF	K	
C543			CK73HB1H103K	CHIP C	0.010UF	K	
C545			C93-1512-08	CHIP C	0.10UF	K	
C546			CK73GB1A105K	CHIP C	1.0UF	K	
C547			CK73GB1H153K	CHIP C	0.015UF	K	
C548			CC73GCH1H680J	CHIP C	68PF	J	
C549			C93-1512-08	CHIP C	0.10UF	K	
C550			CK73FB0J106K	CHIP C	10UF	K	
C551			C93-1512-08	CHIP C	0.10UF	K	
C553			CK73GB1H472K	CHIP C	4700PF	K	
C554			CC73GCH1H391J	CHIP C	390PF	J	
C555			CC73GCH1H681J	CHIP C	680PF	J	
C556			CK73GB1C683K	CHIP C	0.068UF	K	
C557			CK73GB1E473K	CHIP C	0.047UF	K	
C558,559			C93-1512-08	CHIP C	0.10UF	K	
C560			CC73HCH1H101J	CHIP C	100PF	J	
C561,562			CK73FB0J106K	CHIP C	10UF	K	
C563			CC73HCH1H101J	CHIP C	100PF	J	
C564			CK73GB1H104K	CHIP C	0.10UF	K	
C565,566			C93-1512-08	CHIP C	0.10UF	K	
C567			CK73GB1A105K	CHIP C	1.0UF	K	
C568,569			C93-1512-08	CHIP C	0.10UF	K	
C570			CK73GB1H104K	CHIP C	0.10UF	K	
C571			CC73GCH1H470J	CHIP C	47PF	J	
C572			CK73GB1H153K	CHIP C	0.015UF	K	

⚠Indicates safety critical components.

KDC-HD548U

PARTS LIST

ELECTRIC UNIT

Ref. No.	Add	New	Parts No.	Description	Destination
C573			C93-1512-08	CHIP C 0.10UF K	
C574			CK73HB1H103K	CHIP C 0.010UF K	
C582,583			CC73GCH1H101J	CHIP C 100PF J	
C701,702			CC73GCH1H100D	CHIP C 10PF D	
C703			CK73GB1H103K	CHIP C 0.010UF K	
C705			CK73GB1C104K	CHIP C 0.10UF K	
C706			CK73HB1A104K	CHIP C 0.10UF K	
C708,709			CK73GB1C104K	CHIP C 0.10UF K	
C711			CK73GB1C104K	CHIP C 0.10UF K	
C712,713			C93-1512-08	CHIP C 0.10UF K	
C714,715			CK73GB1C104K	CHIP C 0.10UF K	
C716			C93-1512-08	CHIP C 0.10UF K	
C717			CK73GB1C104K	CHIP C 0.10UF K	
C718			CK73GB1A474K	CHIP C 0.47UF K	
C721			CC73GCH1H471J	CHIP C 470PF J	
C722			NCJ11EK-106X-A	C CAPACITOR	
C724,725			CC73GCH1H180J	CHIP C 18PF J	
C891			CK73GB1H104K	CHIP C 0.10UF K	
C901			QEZ0934-338	E CAPACITOR	
C905			C93-1512-08	CHIP C 0.10UF K	
C912,913			C93-1512-08	CHIP C 0.10UF K	
C914			NCJ11EK-106X-A	C CAPACITOR	
C916			NCJ11EK-106X-A	C CAPACITOR	
C917			CK73GB1H472K	CHIP C 4700PF K	
C921			CK73GB1C105K	CHIP C 1.0UF K	
C924			CK73GB1C105K	CHIP C 1.0UF K	
C925,926			NCJ11EK-106X-R	C CAPACITOR	
C931			CK73GB1C104K	CHIP C 0.10UF K	
C933			CK73GB1C104K	CHIP C 0.10UF K	
C941			CK73GB1H104K	CHIP C 0.10UF K	
C954			CK73GB1C104K	CHIP C 0.10UF K	
C958			CK73GB1C105K	CHIP C 1.0UF K	
C964			CK73GB1H104K	CHIP C 0.10UF K	
C965			CK73GB1H103K	CHIP C 0.010UF K	
C968			CK73GB1C105K	CHIP C 1.0UF K	
C970			CC73GCH1H100D	CHIP C 10PF D	
C981			NCJ11EK-106X-A	C CAPACITOR	
C983			CC73GCH1H151J	CHIP C 150PF J	
C984			CK73GB1C104K	CHIP C 0.10UF K	
C985-987			NCJ11EK-106X-A	C CAPACITOR	
C989,990			CK73GB1H104K	CHIP C 0.10UF K	
CN502			QGF1049F1-26X	FFC/FPC CONNECTOR	
CN701			E58-1124-05	DETACHABLE CONNECTOR	
CN901			E58-0991-05	CAR CONNECTOR	
J1			QNB0190-001	ANT TERMINAL	
J321		✻	E63-0991-08	PIN JACK	
F902,903		✻	F53-0468-08	FUSE (UL,CSA) (2A)	
B5			L40-1075-38	INDUCTOR	
L7			L40-4781-86	SMALL FIXED INDUCTOR	
L8			L40-1891-86	SMALL FIXED INDUCTOR	
L10			L40-2281-86	SMALL FIXED INDUCTOR	
L11		✻	L92-0692-08	CHIP FERRITE	
L12			L40-1075-38	INDUCTOR	

Ref. No.	Add	New	Parts No.	Description	Destination
L161			L40-2775-92	INDUCTOR	
L532-534			L92-0879-05	FERRITE BEADS	
L703			L92-0879-05	FERRITE BEADS	
L902			L33-2625-08	SMALL FIXED INDUCTOR	
L961			L92-0639-05	FERRITE BEADS	
L962			NQLH25M-4R7X	INDUCTOR	
L981		✻	QQLA1AM-220	INDUCTOR	
L982			NQLH25M-4R7X	INDUCTOR	
L993			L92-0879-05	FERRITE BEADS	
X1			NAX1117-001X	CRYSTAL RESONATOR	
X540			L78-1236-05	CERAMIC RESONATOR	
X701			QAX0957-001Z	CRYSTAL RESONATOR	
X702			QAX0401-001	CRYSTAL RESONATOR	
F	2D	✻	N09-6884-08	SPECIAL SCREW	
G	2D		N82-2608-48	TAP SCREW	
H	2D		N89-3006-48	TAP SCREW	
J	2D		N86-2608-48	TAP SCREW	
K	2D		N86-2610-48	TAP SCREW	
B3, 4			RK73GB2A000J	CHIP R 0.0 J 1/10W	
B8			RK73EB2E000J	CHIP R 0.0 J 1/4W	
B15, 16			RK73GB2A000J	CHIP R 0.0 J 1/10W	
B20			RK73GB2A000J	CHIP R 0.0 J 1/10W	
B23			RK73EB2E000J	CHIP R 0.0 J 1/4W	
B24, 25			RK73GB2A000J	CHIP R 0.0 J 1/10W	
B29			RK73GB2A000J	CHIP R 0.0 J 1/10W	
B30			RK73EB2E000J	CHIP R 0.0 J 1/4W	
K1- 8			RK73GB2A000J	CHIP R 0.0 J 1/10W	
K11			RK73GB2A102J	CHIP R 1.0K J 1/10W	
L531			RK73GB2A000J	CHIP R 0.0 J 1/10W	
L535,536			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R1			RK73HB1J221J	CHIP R 220 J 1/16W	
R3			RK73HB1J152J	CHIP R 1.5K J 1/16W	
R4			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R7			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R9- 13			RK73GB2A470J	CHIP R 47 J 1/10W	
R14			RK73GB2A511J	CHIP R 510 J 1/10W	
R16, 17			RK73GB2A511J	CHIP R 510 J 1/10W	
R18			RK73GB2A330J	CHIP R 33 J 1/10W	
R19			RK73HB1J471J	CHIP R 470 J 1/16W	
R20			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R22			RK73HB1J681J	CHIP R 680 J 1/16W	
R24			RK73EB2E000J	CHIP R 0.0 J 1/4W	
R25			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R26, 27			RK73HB1J101J	CHIP R 100 J 1/16W	
R30, 31			RK73EB2E220J	CHIP R 22 J 1/4W	
R32			RK73GB2A471J	CHIP R 470 J 1/10W	
R33			RK73GB2A106J	CHIP R 10M J 1/10W	
R44			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R46			RK73EB2E000J	CHIP R 0.0 J 1/4W	
R59			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R63			RK73HB1J105J	CHIP R 1.0M J 1/16W	
R68, 69			RK73GB2A474J	CHIP R 470K J 1/10W	
R80			RK73GB2A101J	CHIP R 100 J 1/10W	
R81			RK73HB1J101J	CHIP R 100 J 1/16W	

⚠Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT

Ref. No.	Add	New	Parts No.	Description			Destination
R82			RK73HB1J473J	CHIP R	47K	J 1/16W	
R100			RK73HB1J123J	CHIP R	12K	J 1/16W	
R101			RK73HB1J473J	CHIP R	47K	J 1/16W	
R102			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R110			RK73HB1J123J	CHIP R	12K	J 1/16W	
R111			RK73HB1J473J	CHIP R	47K	J 1/16W	
R112			RK73GB2A471J	CHIP R	470	J 1/10W	
R161			RK73GB2A103J	CHIP R	10K	J 1/10W	
R162			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R163			RK73GB2A101J	CHIP R	100	J 1/10W	
R165			RK73GB2A101J	CHIP R	100	J 1/10W	
R167			RK73GB2A222J	CHIP R	2.2K	J 1/10W	
R168,169			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R251,252			RK73HB1J472J	CHIP R	4.7K	J 1/16W	
R253,254			RK73GB2A331J	CHIP R	330	J 1/10W	
R255,256			RK73GB2A223J	CHIP R	22K	J 1/10W	
R257,258			RK73GB2A181J	CHIP R	180	J 1/10W	
R259,260			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R301,302			RK73HB1J473J	CHIP R	47K	J 1/16W	
R304			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R307			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R310			RK73EB2E100J	CHIP R	10	J 1/4W	
R311			RK73GB2A102J	CHIP R	1.0K	J 1/10W	
R312			RK73HB1J102J	CHIP R	1.0K	J 1/16W	
R313,314			RK73GB2A102J	CHIP R	1.0K	J 1/10W	
R315-317			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R318			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R320			RK73GB2A331J	CHIP R	330	J 1/10W	
R321			RK73GB2A223J	CHIP R	22K	J 1/10W	
R322			RK73GB2A181J	CHIP R	180	J 1/10W	
R323			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R330			RK73GB2A331J	CHIP R	330	J 1/10W	
R331			RK73GB2A223J	CHIP R	22K	J 1/10W	
R332			RK73GB2A181J	CHIP R	180	J 1/10W	
R333			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R340			RK73GB2A331J	CHIP R	330	J 1/10W	
R341			RK73GB2A223J	CHIP R	22K	J 1/10W	
R342			RK73GB2A181J	CHIP R	180	J 1/10W	
R343			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R347			RK73HB1J472J	CHIP R	4.7K	J 1/16W	
R349			RK73HB1J472J	CHIP R	4.7K	J 1/16W	
R350			RK73GB2A331J	CHIP R	330	J 1/10W	
R351			RK73GB2A223J	CHIP R	22K	J 1/10W	
R352			RK73GB2A181J	CHIP R	180	J 1/10W	
R353			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R357			RK73HB1J472J	CHIP R	4.7K	J 1/16W	
R358			RK73GB2A472J	CHIP R	4.7K	J 1/10W	
R402			RK73GB2A243J	CHIP R	24K	J 1/10W	
R403			RK73HB1J273J	CHIP R	27K	J 1/16W	
R404			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R405			RK73HB1J822J	CHIP R	8.2K	J 1/16W	
R406			RK73GB2A473J	CHIP R	47K	J 1/10W	
R407,408			RK73GB2A103J	CHIP R	10K	J 1/10W	
R409,410			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R411			RK73GB2A243J	CHIP R	24K	J 1/10W	
R412			RK73GB2A273J	CHIP R	27K	J 1/10W	
R413			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R414			RK73GB2A822J	CHIP R	8.2K	J 1/10W	
R415			RK73HB1J473J	CHIP R	47K	J 1/16W	
R416,417			RK73GB2A103J	CHIP R	10K	J 1/10W	
R418			RK73EB2E100J	CHIP R	10	J 1/4W	
R501			RK73HB1J333J	CHIP R	33K	J 1/16W	
R502,503			RK73HB1J101J	CHIP R	100	J 1/16W	
R504			RK73GB2A513J	CHIP R	51K	J 1/10W	
R505			RK73GB2A223J	CHIP R	22K	J 1/10W	
R506			RK73GB2A682J	CHIP R	6.8K	J 1/10W	
R507			RK73GB2A113J	CHIP R	11K	J 1/10W	
R508,509			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R510			RK73GB2A822J	CHIP R	8.2K	J 1/10W	
R511			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R512			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R513			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R514			RK73GB2A822J	CHIP R	8.2K	J 1/10W	
R515			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R516,517			RK73GB2A822J	CHIP R	8.2K	J 1/10W	
R518			RK73HB1J101J	CHIP R	100	J 1/16W	
R519			RK73HB1J683J	CHIP R	68K	J 1/16W	
R520			RK73HB1J103J	CHIP R	10K	J 1/16W	
R530			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R540			RK73HB1J221J	CHIP R	220	J 1/16W	
R541			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R543			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R545			RK73GB2A225J	CHIP R	2.2M	J 1/10W	
R548			RK73HB1J104J	CHIP R	100K	J 1/16W	
R549			RK73HB1J102J	CHIP R	1.0K	J 1/16W	
R550			RK73HB1J472J	CHIP R	4.7K	J 1/16W	
R551,552			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R553			RK73HB1J473J	CHIP R	47K	J 1/16W	
R556			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R557			RK73GB2A471J	CHIP R	470	J 1/10W	
R558			RK73GB2A105J	CHIP R	1.0M	J 1/10W	
R559-564			RK73GB2A101J	CHIP R	100	J 1/10W	
R565			RK73GB2A103J	CHIP R	10K	J 1/10W	
R566-569			RK73HB1J103J	CHIP R	10K	J 1/16W	
R570			RK73GB2A101J	CHIP R	100	J 1/10W	
R571			RK73GB2A103J	CHIP R	10K	J 1/10W	
R572			RK73HB1J104J	CHIP R	100K	J 1/16W	
R573			RK73HB1J334J	CHIP R	330K	J 1/16W	
R574			RK73HB1J153J	CHIP R	15K	J 1/16W	
R575			RK73EB2E332J	CHIP R	3.3K	J 1/4W	
R576			RK73HB1J103J	CHIP R	10K	J 1/16W	
R577			RK73GB2A103J	CHIP R	10K	J 1/10W	
R580			RK73HB1J102J	CHIP R	1.0K	J 1/16W	
R586			RK73HB1J102J	CHIP R	1.0K	J 1/16W	
R595,596			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R701			RK73GB2A472J	CHIP R	4.7K	J 1/10W	
R702,703			RK73GB2A101J	CHIP R	100	J 1/10W	
R704			RK73HB1J101J	CHIP R	100	J 1/16W	
R706-717			RK73GB2A101J	CHIP R	100	J 1/10W	
R718			RK73GB2A473J	CHIP R	47K	J 1/10W	

⚠Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT

Ref. No.	Add	New	Parts No.	Description			Destination
R719			RK73HB1J473J	CHIP R	47K	J 1/16W	
R720			RK73GB2A473J	CHIP R	47K	J 1/10W	
R721			RK73GB2A105J	CHIP R	1.0M	J 1/10W	
R722,723			RK73HB1J473J	CHIP R	47K	J 1/16W	
R725,726			RK73HB1J473J	CHIP R	47K	J 1/16W	
R727,728			RK73GB2A473J	CHIP R	47K	J 1/10W	
R730			RK73GB2A473J	CHIP R	47K	J 1/10W	
R731			RK73HB1J473J	CHIP R	47K	J 1/16W	
R732			RK73GB2A472J	CHIP R	4.7K	J 1/10W	
R733			RK73HB1J473J	CHIP R	47K	J 1/16W	
R735,736			RK73HB1J473J	CHIP R	47K	J 1/16W	
R737			RK73GB2A101J	CHIP R	100	J 1/10W	
R738			RK73HB1J222J	CHIP R	2.2K	J 1/16W	
R739,740			RK73HB1J103J	CHIP R	10K	J 1/16W	
R741			RK73GB2A103J	CHIP R	10K	J 1/10W	
R742,743			RK73GB2A473J	CHIP R	47K	J 1/10W	
R745			RK73HB1J101J	CHIP R	100	J 1/16W	
R746			RK73GB2A473J	CHIP R	47K	J 1/10W	
R747			RK73GB2A243J	CHIP R	24K	J 1/10W	
R748			RK73HB1J473J	CHIP R	47K	J 1/16W	
R749			RK73HB1J332J	CHIP R	3.3K	J 1/16W	
R750			RK73GB2A332J	CHIP R	3.3K	J 1/10W	
R751			RK73HB1J223J	CHIP R	22K	J 1/16W	
R752			RK73GB2A223J	CHIP R	22K	J 1/10W	
R753,754			RK73GB2A332J	CHIP R	3.3K	J 1/10W	
R755,756			RK73HB1J473J	CHIP R	47K	J 1/16W	
R757,758			RK73GB2A332J	CHIP R	3.3K	J 1/10W	
R759			RK73GB2A473J	CHIP R	47K	J 1/10W	
R760			RK73GB2A821J	CHIP R	820	J 1/10W	
R761			RK73GB2A101J	CHIP R	100	J 1/10W	
R762			RK73GB2A472J	CHIP R	4.7K	J 1/10W	
R763			RK73HB1J473J	CHIP R	47K	J 1/16W	
R765			RK73GB2A273J	CHIP R	27K	J 1/10W	
R766			RK73HB1J473J	CHIP R	47K	J 1/16W	
R767			RK73HB1J223J	CHIP R	22K	J 1/16W	
R768,769			RK73GB2A473J	CHIP R	47K	J 1/10W	
R771-773			RK73GH2A472D	CHIP R	4.7K	D 1/10W	
R774			RK73HH1J472D	CHIP R	4.7K	D 1/16W	
R775,776			RK73GB2A153J	CHIP R	15K	J 1/10W	
R777			RK73GB2A102J	CHIP R	1.0K	J 1/10W	
R778			RK73GB2A271J	CHIP R	270	J 1/10W	
R779			RK73HB1J271J	CHIP R	270	J 1/16W	
R780			RK73HB1J473J	CHIP R	47K	J 1/16W	
R781			RK73HB1J331J	CHIP R	330	J 1/16W	
R782			RK73GB2A104J	CHIP R	100K	J 1/10W	
R783			RK73GB2A103J	CHIP R	10K	J 1/10W	
R785			RK73HB1J273J	CHIP R	27K	J 1/16W	
R786			RK73EB2E000J	CHIP R	0.0	J 1/4W	
R788			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R790			RK73HB1J102J	CHIP R	1.0K	J 1/16W	
R791			RK73HB1J472J	CHIP R	4.7K	J 1/16W	
R792			RK73HB1J103J	CHIP R	10K	J 1/16W	
R798,799			RK73GB2A270J	CHIP R	27	J 1/10W	
R891			RK73GB2A103J	CHIP R	10K	J 1/10W	
R892			RK73GB2A683J	CHIP R	68K	J 1/10W	

Ref. No.	Add	New	Parts No.	Description			Destination
R893			RK73GB2A123J	CHIP R	12K	J 1/10W	
R894			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R901			RK73GB2A103J	CHIP R	10K	J 1/10W	
R906			RK73GB2A472J	CHIP R	4.7K	J 1/10W	
R907			RK73GB2A155J	CHIP R	1.5M	J 1/10W	
R908			RK73GH2A472D	CHIP R	4.7K	D 1/10W	
R912			RK73EB2E000J	CHIP R	0.0	J 1/4W	
R914			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R941			RK73EB2E472J	CHIP R	4.7K	J 1/4W	
R950			RK73GB2A101J	CHIP R	100	J 1/10W	
R951			RK73GB2A102J	CHIP R	1.0K	J 1/10W	
R952			RK73GB2A331J	CHIP R	330	J 1/10W	
R954,955			RK73GB2A103J	CHIP R	10K	J 1/10W	
R958			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R959			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R964			RK73HB1J103J	CHIP R	10K	J 1/16W	
R970			RK73GB2A473J	CHIP R	47K	J 1/10W	
R971,972			RK73GB2A103J	CHIP R	10K	J 1/10W	
R973			RK73GB2A203J	CHIP R	20K	J 1/10W	
R974			RK73HB1J473J	CHIP R	47K	J 1/16W	
R975			RK73GB2A473J	CHIP R	47K	J 1/10W	
R976			RK73GB2A683J	CHIP R	68K	J 1/10W	
R981			RK73GH2A184D	CHIP R	180K	D 1/10W	
R982			RK73GH2A333D	CHIP R	33K	D 1/10W	
R983			RK73GB2A154J	CHIP R	150K	J 1/10W	
R986			RK73GH2A753D	CHIP R	75K	D 1/10W	
R989			RK73GH2A134D	CHIP R	130K	D 1/10W	
R998			RK73EB2E150J	CHIP R	15	J 1/4W	
S701			S70-0959-05	TACT SWITCH			
D1			RN731V	DIODE			
D3			RN731V	DIODE			
D100,101			DZ2J062/M/-X	ZENER DIODE			
D110,111			DZ2J062/M/-X	ZENER DIODE			
D251			BAW56W	SILICON DIODE			
D321			BAW56W	SILICON DIODE			
D341			BAW56W	SILICON DIODE			
D502			GS1J-LTP-X	SILICON DIODE			
D540			DA2J101-X	SILICON DIODE			
D704			DZ2J062/M/-X	ZENER DIODE			
D780,781			BAW56W	SILICON DIODE			
D782			DA2J101-X	SILICON DIODE			
D783			BAW56W	SILICON DIODE			
D891			BAW56W	SILICON DIODE			
D901			1N5401-BPC04	SILICON DIODE			
D902			MBRX130-TP-X	SCHOTTKY BARRIER DIODE			
D931			MBRX130-TP-X	SCHOTTKY BARRIER DIODE			
D941,942			MBRX130-TP-X	SCHOTTKY BARRIER DIODE			
D970,971			DZ2J068/M/-X	ZENER DIODE			
D981			MBRX130-TP-X	SCHOTTKY BARRIER DIODE			
D982			DA2J101-X	SILICON DIODE			
IC1			TDA7706	MOS-IC			
IC3			NJM4565E-X	SV-ANALOGUE IC			
IC80			MFI341S2162-X	SV-MICROPROCESSOR IC			
IC161			E-TDA7718N	ANALOGUE IC			

⚠Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT

Ref. No.	Add	New	Parts No.	Description	Destination
IC301			TB2926CHQ	ANALOGUE IC	
IC501			LA6565	ANALOGUE IC	
IC530			XC6213B332NG-X	ANALOGUE IC	
IC531,532			XC6213B152NG-X	ANALOGUE IC	
IC540		✻	JCV8023	MOS-IC	
IC701		✻	W05-1652-00	MCU	
IC702			XC6120N282NG-X	MOS-IC	
IC771		✻	R1EX24256ASASX	SV-ROM IC	
IC901			LV5680P	ANALOGUE IC	
IC910		✻	NJM2855DL1-33-	SV-ANALOGUE IC	
IC912		✻	XC6222B121PG-X	SV-ANALOGUE IC	
IC922			TC7WBL126AFKF	MOS-IC	
IC931			XC6213B332NG-X	ANALOGUE IC	
IC961			BD2224G	MOS-IC	
IC981			MP2562DS-X	ANALOGUE IC	
IC983		✻	NJM2855DL1-05-	SV-ANALOGUE IC	
Q251			IMX9	PAIR TRANSISTOR	
Q321			IMX9	PAIR TRANSISTOR	
Q341			IMX9	PAIR TRANSISTOR	
Q540			2SA2188/F/-X	SMALL SIGNAL TRANSISTOR	
Q701			RT1P144C-X	DIGITAL TRANSISTOR	
Q780,781			RT1P241C-X	DIGITAL TRANSISTOR	
Q782			RT1N241C-X	DIGITAL TRANSISTOR	
Q951			2SA812A/5-6/-X	SMALL SIGNAL TRANSISTOR	
Q952			RT1N441C-X	DIGITAL TRANSISTOR	
Q963			RT1N441C-X	DIGITAL TRANSISTOR	
Q964			RSQ025P03-W	SV-MOS-FET	
Q965			RT1N441C-X	DIGITAL TRANSISTOR	
Q966			RSQ025P03-W	SV-MOS-FET	
Q970,971			2SC1623A/5-6/X	SMALL SIGNAL TRANSISTOR	
Q981			RT1N441C-X	DIGITAL TRANSISTOR	
VA2			EZAEG3A50A	SURGE ABSORBER	

HD PROCESSOR UNIT

C101			CK73GB1C105K	CHIP C	1.0UF	K	
C102			CK73GB1H471K	CHIP C	470PF	K	
C103-116			CK73GB1C104K	CHIP C	0.10UF	K	
C117,118			CK73FB0J106K	CHIP C	10UF	K	
C119-122			CK73GB1C104K	CHIP C	0.10UF	K	
C124-135			CK73GB1C104K	CHIP C	0.10UF	K	
C136			CC73GCH1H030C	CHIP C	3.0PF	C	
C137			CC73GCH1H040C	CHIP C	4.0PF	C	
C138			CK73FB0J106K	CHIP C	10UF	K	
C144-146			CC73GCH1H680J	CHIP C	68PF	J	
C147			CK73GB1C104K	CHIP C	0.10UF	K	
C150-156			CK73GB1C104K	CHIP C	0.10UF	K	
CN101			E41-3220-08	FLAT CABLE CONNECTOR			
CN102			E41-3221-08	PIN ASSY			
L101,102			L40-1891-86	SMALL FIXED INDUCTOR			
X101		✻	NAX1116-001X	CRYSTAL RESONATOR			
R104,105			RK73GB2A470J	CHIP R	47	J	1/10W
R106			RK73GB2A471J	CHIP R	470	J	1/10W
R108,109			RK73GB2A470J	CHIP R	47	J	1/10W
R110-112			RK73GB2A103J	CHIP R	10K	J	1/10W
R113			RK73GB2A750J	CHIP R	75	J	1/10W
R114			RK73GB2A102J	CHIP R	1.0K	J	1/10W
R115			RK73GB2A270J	CHIP R	27	J	1/10W
R116			RK73GB2A470J	CHIP R	47	J	1/10W
R117,118			RK73GB2A103J	CHIP R	10K	J	1/10W
R122			RK73GB2A000J	CHIP R	0.0	J	1/10W
RA101-109			RK74HB1J470J	CHIP-COM	47	J	1/16W
RA111-113			RK74HB1J470J	CHIP-COM	47	J	1/16W
IC101		✻	STA680Q	MOS-IC			
IC151		✻	GEU03533-01A	SV-ROM IC			
IC191			M12L1281687TG2	SV-DRAM IC			

MECHANISM ASSY (X92-6630-00) HCS-1000W

Ref. No.	Add	New	Parts No.	Description	Destination
1	1B		LV11685-503A	TOP FRAME	
2	3A		LV11686-501A	BOTTOM FRAME	
12	3B		LV11688-501A	LOADING BASE	
13	2A		LV11690-501A	ROLLER ARM	
14	1B		LV22825-502A	HC CLAMPER BASE	
16	2B		LV22826-502A	LOAD CAM	
17	1A		LV22827-501A	FL SLIDER (L)	
21	2B		LV36815-501A	F WHEEL GEAR	
22	2A		LV36904-001A	DAMPER (FRONT)	
23	2B		LV37061-001A	DAMPER (REAR)	
24	2B		LV38951-501A	TRIGGER RACK	
26	1B		LV38952-501A	FL SLIDER (B)	
27	1B		LV38953-501A	TRIGGER PLATE	
28	1A		LV38956-501A	SW SLIDER (L)	
29	2A		LV38957-501A	SW SLIDER (R)	
31	1A		LV38958-501A	JOINT PLATE	
32	2A		LV38959-501A	SW ACTUATOR	
33	2B		LV38960-501A	FEED RACK	
37	3B		LV38964-501A	D.WHEEL GEAR	
38	3B		LV38965-501A	ACT GEAR (1)	
39	3B		LV38966-501A	ACT GEAR (2)	
41	3B		LV38967-501A	ACT GEAR (3)	
42	3B		LV38968-501A	ROLLER ACT GEAR	
43	3B		LV38969-501A	DRIVE GEAR	
46	1A		LV39009-501A	JOINT LEVER	
48	3B		LV44555-001A	MAIN SHAFT	
51	2A		LV45424-001A	HC ROLLER	
55	2A		X94-2180-00	HC ROLLER SHAFT ASSY (SVC PRT)	
61	2B		LV45415-501A	TRIGGER SPRING	
62	2B		LV45416-501A	LOAD CAM SPRING	
63	1B		LV45417-501A	FL SLIDER SPRING	
64	3A		LV45418-501A	R.ARM SPRING	
66	1A		LV45420-501A	SW SLIDER SPRING	
67	1B		LV45421-501A	HC CL SPRING	
68	2B		LV45422-501A	SUS SPRING (F)	
69	2B		LV45423-501A	SUS SPRING (B)	
71	2A		LV45505-502A	SW ACT SPRING	
76	2A		LV11689-501A	DISC GUIDE	
77	3B		LV22828-501A	FEED BRACKET	
78	3B		LV36813-501A	SUB GUIDE CAP	
79	1B		LV36819-502A	CLAMPER	

⚠Indicates safety critical components.

PARTS LIST

MECHANISM ASSY (X92-6630-00) HCS-1000W

Ref. No.	Add	New	Parts No.	Description	Destination
81	3A		LV38954-501A	R.ARM GUIDE	
83	2A		LV45411-502A	RA COLLER (L)	
86	3A		QAL0817-003	FPC	
A	2A		LV45270-001A	WASHER (2)	
B	2A		LV45449-001A	WASHER	
C	2B		QYSPSGT1745ZA	TAP SCREW	
D	2B		LV45568-001A	MINI SCREW	
E	2B		QYSPSPT2025MA	SCREW	
F	3A		VKZ4539-054	MINI SCREW	
DPU1	3B		QAL1226-001	PICK UP	
DM1	2B		X94-2150-00	SPINDLE MOTOR ASSY (SVC PRT)	
DM2	3B		X94-2160-00	FEED MOTOR ASSY (SVC PRT)	
DM3	3A		X94-2170-00	LOADING MOTOR ASSY (SVC PRT)	

Ref. No.	Add	New	Parts No.	Description	Destination

⚠Indicates safety critical components.