PARTS LIST

* New Parts. ⚠ indicates safety critical components.
Parts without **Parts No.** are not supplied.
Les articles non mentionnes dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

L: Scandinavia **K**: USA **P**: Canada
Y: PX (Far East, Hawaii) **T**: England **E**: Europe
Y: AAFES (Europe) **X**: Australia **M**: Other Areas

TK-3202/3206 (Y50-5900-XX)
TX-RX UNIT (X57-6890-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination
			TK-3202/3206		
1	1A	*	A02-3851-23	CABINET ASSY(16CH)	BM,BM3
1	1A	*	A02-3852-23	CABINET ASSY(8CH)	AK,AK2
1	1A	*	A02-3852-23	CABINET ASSY(8CH)	AM,AM2
2	1A	*	A02-3858-13	CABINET	
3	3A	*	A10-4078-01	CHASSIS	
4	1B	*	A21-1644-13	DRESSING PANEL(16CH)	BM,BM3
4	1B	*	A21-1645-13	DRESSING PANEL(8CH)	AK,AK2
4	1B	*	A21-1645-13	DRESSING PANEL(8CH)	AM,AM2
6	2C,2E	*	B09-0680-03	CAP(SP/MIC) ACCESSORY	
7	2B	*	B11-1817-04	ILLUMINATION GUIDE	
8	1B	*	B43-1156-04	BADGE	
9	1C	*	B62-1762-00	INSTRUCTION MANUAL	AK,AK2
9	1C	*	B62-1762-00	INSTRUCTION MANUAL	AM,AM2
10	1E	*	B62-1763-00	INSTRUCTION MANUAL	BM,BM3
11	1A	*	D10-0649-03	LEVER	
12	1A	*	D21-0863-04	SHAFT	
13	1A	*	D32-0441-03	STOPPER	
14	2A	*	E04-0451-05	RF COAXIAL RECEPTACLE(SMA)	
15	3B	*	E23-1253-04	TERMINAL(BATT-)	
16	2B		E37-0794-05	PROCESSED LEAD WIRE(SP+)	
17	2B		E37-0803-05	PROCESSED LEAD WIRE(SP-)	
18	3A	*	F20-3353-14	INSULATING SHEET(CHASSIS BATT+)	
19	2A	*	G01-4542-04	COIL SPRING(LEVER)	
20	1A	*	G01-4543-04	COIL SPRING(STOPPER)	
21	2B	*	G10-1330-04	FIBROUS SHEET(IC302:AUDIO IC)	
22	3A		G11-2622-04	SHEET	
23	3A	*	G11-4283-04	RUBBER SHEET(Q103:FINAL FET)	
24	2A	*	G11-4313-04	SHEET(MIC ELEMENT)	
25	3B	*	G11-4318-04	SHEET	
26	3A	*	G11-4320-14	SHEET	
27	2B,3B	*	G11-4322-04	SHEET	
28	2A	*	G11-4323-04	SHEET	
29	3B	*	G13-2009-04	CUSHION(TERMINAL BATT-)	
30	3A	*	G13-2033-04	CUSHION(TERMINAL BATT-)	
31	3B	*	G13-2034-14	CUSHION(CHASSIS)	
32	2B	*	G13-2037-04	CUSHION(CHASSIS VOL/CH)	
33	3A	*	G13-2038-04	CUSHION(CHASSIS-CERAMIC FILTER)	
34	2A	*	G13-2039-04	CUSHION(PCB-CERAMIC FILTER)	
35	3A	*	G53-1604-03	PACKING(CHASSIS)	
36	3A	*	G53-1605-03	PACKING(TERMINAL BATT+)	
37	2B	*	G53-1606-03	PACKING(VOL/CH/LED)	
38	1B	*	G53-1607-03	PACKING(SP/MIC)	
39	2B	*	G53-1608-03	PACKING(SP)	
40	2A	*	G53-1609-14	PACKING(MIC ELEMENT)	
41	2B	*	G53-1610-04	PACKING(SMA)	
43	2C,2F	*	H12-3158-05	PACKING FIXTURE	
44	1D	*	H13-2109-03	CARTON BOARD	AK,AK2
44	1D	*	H13-2109-03	CARTON BOARD	AM,AM2
45	1C,1E		H25-0085-04	PROTECTION BAG (100/200/0.07)	
46	3D	*	H52-2056-02	ITEM CARTON CASE	AK,AK2
46	3D	*	H52-2056-02	ITEM CARTON CASE	AM,AM2
47	3F	*	H52-2057-02	ITEM CARTON CASE	BM,BM3
48	2C,2F	*	J19-5472-03	HOLDER(SP/MIC) ACCESSORY	
49	2A	*	J19-5473-03	HOLDER ASSY(TERMINAL BATT+)	
50	2B	*	J21-8477-04	HARDWARE FIXTURE(VOL/CH)	
51	2B	*	J21-8478-04	HARDWARE FIXTURE(SP/MIC)	
52	2C,2F	*	J29-0713-05	BELT CLIP ACCESSORY	
54	2B	*	J82-0092-05	FPC	
56	1A	*	K29-9307-03	BUTTON KNOB(SIDE1/SIDE2)	
57	1A	*	K29-9308-03	BUTTON KNOB(PTT)	
58	1B	*	K29-9309-03	KNOB(VOL)	
59	1B	*	K29-9318-03	KNOB(CH)	
A	2B	*	N14-0808-04	CIRCULAR NUT(CH KNOB)	
B	2B	*	N14-0812-04	CIRCULAR NUT(VOL KNOB)	
C	2A,2B		N30-2604-46	PAN HEAD MACHINE SCREW(SMA)	
D	3A		N30-2606-46	PAN HEAD MACHINE SCREW(CHASSIS)	
E	2A,2B,3B		N83-2005-46	PAN HEAD TAPTITE SCREW(PCB)	
60	1C,2F	*	N99-2043-05	SCREW SET ACCESSORY	
61	2B	*	R31-0653-05	VARIABLE RESISTOR(POWER SW/VOL)	
62	2B	*	S60-0427-05	ROTARY SWITCH(16CH)	BM,BM3
62	2B	*	S60-0428-15	ROTARY SWITCH(8CH)	AK,AK2
62	2B	*	S60-0428-15	ROTARY SWITCH(8CH)	AM,AM2
63	1B		T07-0369-05	SPEAKER	
64	1C		T90-1039-05	WHIP ANTENNA ACCESSORY	AK,AM
64	1C		T90-1040-05	WHIP ANTENNA ACCESSORY	AK2,AM2
65	2D	*	W08-0969-05	CHARGER ACCESSORY	AK,AK2
65	2D	*	W08-0969-05	CHARGER ACCESSORY	AM,AM2
66	1D	*	W08-0970-05	AC ADAPTER(AC120V) ACCESSORY	AK,AK2
66	1D	*	W08-0971-05	AC ADAPTER(AC230V) ACCESSORY	AM,AM2
			TX-RX UNIT (X57-6890-XX) -20 :TK-3202 (K,M) TK-3206 (M) -22 :TK-3206 (M3) -23 :TK-3202 (K2,M2)		
D403			B30-2156-05	LED(RED)	
D404			B30-2157-05	LED(YELLOW)	
C1			CK73HB1H332K	CHIP C 3300PF K	
C2			CK73HB1C682K	CHIP C 6800PF K	
C3			CK73GB1A105K	CHIP C 1.0UF K	
C4			CK73HB1C103K	CHIP C 0.010UF K	
C5			CK73HB1H102K	CHIP C 1000PF K	
C6			CK73HB1A104K	CHIP C 0.10UF K	
C7 ,8			CC73HCH1H101J	CHIP C 100PF J	
C9			CC73HCH1H100D	CHIP C 10PF D	
C10			C92-0713-05	CHIP-TAN 10UF 6.3WV	
C11			CC73HCH1H101J	CHIP C 100PF J	
C12			CK73HB1H102K	CHIP C 1000PF K	
C13			CK73HB1A104K	CHIP C 0.10UF K	
C14			CK73HB1C103K	CHIP C 0.010UF K	
C15			CC73HCH1H100D	CHIP C 10PF D	
C16			CK73HB1H102K	CHIP C 1000PF K	
C17			CC73HCH1H470J	CHIP C 47PF J	
C18			CC73HCH1H180J	CHIP C 18PF J	
C19			CK73HB1A104K	CHIP C 0.10UF K	

AK : TK-3202 (K) AK2 : TH-3202 (K2) AM : TK-3202 (M) AM2 : TH-3202 (M2)
BM : TK-3206 (M) BM3 : TH-3206 (M3)

PARTS LIST

TX-RX UNIT (X57-6890-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination
C21			C92-0713-05	CHIP-TAN 10UF 6.3WV	
C22			C92-0502-05	CHIP-TAN 0.33UF 35WV	
C24			CK73HB1H102K	CHIP C 1000PF K	
C25			CC73HCH1H020B	CHIP C 2.0PF B	
C26			CC73HCH1H300J	CHIP C 30PF J	
C27			C92-0697-05	CHIP-TAN 3.3UF 16WV	
C29 ,30			CK73HB1H471K	CHIP C 470PF K	
C32			C92-0001-05	CHIP C 0.1UF 35WV	
C33 ,34			CK73HB1H102K	CHIP C 1000PF K	
C35			CC73HCH1H270J	CHIP C 27PF J	
C38			CC73HCH1H050B	CHIP C 5.0PF B	
C39			CK73GB1H332K	CHIP C 3300PF K	
C40			CC73HCH1H030B	CHIP C 3.0PF B	
C41			CK73GB1H682K	CHIP C 6800PF K	
C42			CC73HCH1H050B	CHIP C 5.0PF B	
C43			CC73HCH1H100C	CHIP C 10PF C	
C44			CK73HB1H471K	CHIP C 470PF K	
C45			CK73GB1A105K	CHIP C 1.0UF K	
C47			CC73HCH1H101J	CHIP C 100PF J	
C48			CK73HB1H471K	CHIP C 470PF K	
C49			CC73HCH1H101J	CHIP C 100PF J	
C50			CC73HCH1H100D	CHIP C 10PF D	
C52			CC73HCH1H110J	CHIP C 11PF J	AK,AM
C52			CC73HCH1H110J	CHIP C 11PF J	BM,BM3
C52			CC73HCH1H120J	CHIP C 12PF J	AK2,AM2
C53			CC73HCH1H020B	CHIP C 2.0PF B	AK,AK2
C53			CC73HCH1H020B	CHIP C 2.0PF B	AM,AM2
C53			CC73HCH1H020B	CHIP C 2.0PF B	BM
C53			CC73HCH1H040B	CHIP C 4.0PF B	BM3
C54			CC73HCH1H060B	CHIP C 6.0PF B	AK,AM,BM
C54			CC73HCH1H070B	CHIP C 7.0PF B	BM3
C54			CC73HCH1H090B	CHIP C 9.0PF B	AK2,AM2
C55			CC73HCH1H110J	CHIP C 11PF J	AK,AM,BM
C55			CC73HCH1H120J	CHIP C 12PF J	AK2,AM2
C55			CC73HCH1H120J	CHIP C 12PF J	BM3
C56			CC73HCH1H020B	CHIP C 2.0PF B	AK,AM,BM
C56			CC73HCH1H050B	CHIP C 5.0PF B	BM3
C57			CC73HCH1H0R5B	CHIP C 0.5PF B	BM3
C58			CC73HCH1H060B	CHIP C 6.0PF B	AK,AM,BM
C58			CC73HCH1H070B	CHIP C 7.0PF B	BM3
C58			CC73HCH1H090B	CHIP C 9.0PF B	AK2,AM2
C59			CC73HCH1H010B	CHIP C 1.0PF B	AK2,AM2
C59			CC73HCH1H1R5B	CHIP C 1.5PF B	BM3
C59 ,60			CC73HCH1H010B	CHIP C 1.0PF B	AK,AM,BM
C60			CC73HCH1H010B	CHIP C 1.0PF B	AK2,AM2
C60			CC73HCH1H010B	CHIP C 1.0PF B	BM3
C61			CC73HCH1H030B	CHIP C 3.0PF B	AK,AM,BM
C61			CC73HCH1H040B	CHIP C 4.0PF B	AK2,AM2
C61			CC73HCH1H040B	CHIP C 4.0PF B	BM3
C62			CC73HCH1H020B	CHIP C 2.0PF B	AK,AK2
C62			CC73HCH1H020B	CHIP C 2.0PF B	AM,AM2
C62			CC73HCH1H020B	CHIP C 2.0PF B	BM
C62			CC73HCH1H030B	CHIP C 3.0PF B	BM3
C63			CC73HCH1H101J	CHIP C 100PF J	
C64			CC73HCH1H040B	CHIP C 4.0PF B	AK,AM,BM
C64			CC73HCH1H040B	CHIP C 4.0PF B	BM3
C64 ,65			CC73HCH1H050B	CHIP C 5.0PF B	AK2,AM2
C65 ,66			CC73HCH1H050B	CHIP C 5.0PF B	BM3
C65 ,66			CC73HCH1H060B	CHIP C 6.0PF B	AK,AM,BM
C66			CC73HCH1H060B	CHIP C 6.0PF B	AK2,AM2

Ref. No.	Address	New parts	Parts No.	Description	Destination
C67			CC73HCH1H040B	CHIP C 4.0PF B	BM3
C67			CC73HCH1H050B	CHIP C 5.0PF B	AK,AK2
C67			CC73HCH1H050B	CHIP C 5.0PF B	AM,AM2
C67			CC73HCH1H050B	CHIP C 5.0PF B	BM
C68 -70			CK73HB1H471K	CHIP C 470PF K	
C71 ,72			CK73HB1A104K	CHIP C 0.10UF K	
C73 ,74			CC73HCH1H0R5B	CHIP C 0.5PF B	
C75 ,76			CK73HB1H102K	CHIP C 1000PF K	
C77			CK73HB1H471K	CHIP C 470PF K	
C78			CC73HCH1H330J	CHIP C 33PF J	
C79			C92-0713-05	CHIP-TAN 10UF 6.3WV	
C80			CK73HB1H471K	CHIP C 470PF K	
C83			CC73HCH1H150J	CHIP C 15PF J	
C84 -86			CK73HB1H102K	CHIP C 1000PF K	
C87			CC73HCH1H100D	CHIP C 10PF D	
C90			CK73HB1H102K	CHIP C 1000PF K	
C100			CK73HB1H471K	CHIP C 470PF K	
C101			CK73GB1H471K	CHIP C 470PF K	
C102			CC73GCH1H120J	CHIP C 12PF J	
C106			CK73HB1H471K	CHIP C 470PF K	
C107			CC73GCH1H060B	CHIP C 6.0PF B	AK,AK2
C107			CC73GCH1H060B	CHIP C 6.0PF B	AM,AM2
C107			CC73GCH1H060B	CHIP C 6.0PF B	BM
C107			CC73GCH1H070D	CHIP C 7.0PF D	BM3
C108			CK73HB1H471K	CHIP C 470PF K	
C110,111			CK73GB1H471K	CHIP C 470PF K	
C112			CC73GCH1H070D	CHIP C 7.0PF D	
C113			CK73GB1C104K	CHIP C 0.10UF K	
C116			CC73GCH1H030B	CHIP C 3.0PF B	BM3
C116			CC73GCH1H110J	CHIP C 11PF J	AK,AK2
C116			CC73GCH1H110J	CHIP C 11PF J	AM,AM2
C116			CC73GCH1H110J	CHIP C 11PF J	BM
C118			CC73GCH1H470J	CHIP C 47PF J	AK2,AM2
C119			CK73GB1H471K	CHIP C 470PF K	
C120			CC73GCH1H150G	CHIP C 15PF G	AK2,AM2
C121			CC73GCH1H060B	CHIP C 6.0PF B	AK2,AM2
C121			CC73GCH1H120J	CHIP C 12PF J	BM3
C122			CC73GCH1H330J	CHIP C 33PF J	
C123			CC73GCH1H330G	CHIP C 33PF G	
C124			CC73HCH1H100D	CHIP C 10PF D	
C125			CC73GCH1H060B	CHIP C 6.0PF B	AK,AM,BM
C125			CC73GCH1H080B	CHIP C 8.0PF B	BM3
C126			C92-0004-05	CHIP-TAN 1.0UF 16WV	
C127			CC73GCH1H200J	CHIP C 20PF J	AK,AM,BM
C128			CK73HB1H471K	CHIP C 470PF K	
C129			CK73GB1H471K	CHIP C 470PF K	
C130			CK73HB1H471K	CHIP C 470PF K	
C132			CC73GCH1H200J	CHIP C 20PF J	AK,AM,BM
C132			CC73GCH1H270J	CHIP C 27PF J	AK2,AM2
C132			CC73GCH1H390J	CHIP C 39PF J	BM3
C133			CK73GB1H471K	CHIP C 470PF K	
C134			CK73GB1H103K	CHIP C 0.010UF K	
C135			CK73GB1C104K	CHIP C 0.10UF K	
C136			CK73GB1A105K	CHIP C 1.0UF K	
C138			CK73GB1H102K	CHIP C 1000PF K	
C140			CC73GCH1H101J	CHIP C 100PF J	
C145			CC73GCH1H180J	CHIP C 18PF J	AK,AK2
C145			CC73GCH1H180J	CHIP C 18PF J	AM,AM2
C145			CC73GCH1H180J	CHIP C 18PF J	BM
C145			CC73GCH1H300J	CHIP C 30PF J	BM3

AK : TK-3202 (K) AK2 : TH-3202 (K2) AM : TK-3202 (M) AM2 : TH-3202 (M2)
BM : TK-3206 (M) BM3 : TH-3206 (M3)

PARTS LIST

TX-RX UNIT (X57-6890-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination
C146			CK73GB1H102K	CHIP C 1000PF K	
C148			CK73GB1H102K	CHIP C 1000PF K	
C149			CC73GCH1H070B	CHIP C 7.0PF B	AK,AM,BM
C149			CC73GCH1H070B	CHIP C 7.0PF B	BM3
C151			CC73GCH1H070B	CHIP C 7.0PF B	AK2,AM2
C151			CC73GCH1H070B	CHIP C 7.0PF B	BM3
C152			CC73GCH1H200J	CHIP C 20PF J	AK,AK2
C152			CC73GCH1H200J	CHIP C 20PF J	AM,AM2
C152			CC73GCH1H200J	CHIP C 20PF J	BM
C152			CC73GCH1H300J	CHIP C 30PF J	BM3
C154			CK73GB1H471K	CHIP C 470PF K	
C156			CC73GCH1H030B	CHIP C 3.0PF B	BM3
C156			CC73GCH1H040B	CHIP C 4.0PF B	AK,AM,BM
C156			CC73GCH1H3R5B	CHIP C 3.5PF B	AK2,AM2
C157			CC73GCH1H040B	CHIP C 4.0PF B	AK2,AM2
C157			CC73GCH1H040B	CHIP C 4.0PF B	BM3
C157			CC73GCH1H2R5B	CHIP C 2.5PF B	AK,AM,BM
C158			CC73GCH1H101J	CHIP C 100PF J	
C159			CC73GCH1H020C	CHIP C 2.0PF C	AK,AM,BM
C159			CC73GCH1H020C	CHIP C 2.0PF C	BM3
C159			CC73GCH1H030B	CHIP C 3.0PF B	AK2,AM2
C160			CC73GCH1H020B	CHIP C 2.0PF B	AK,AM,BM
C160			CC73GCH1H020B	CHIP C 2.0PF B	BM3
C160			CC73GCH1H1R5B	CHIP C 1.5PF B	AK2,AM2
C161			CC73GCH1H050B	CHIP C 5.0PF B	AK,AM,BM
C161			CC73GCH1H050B	CHIP C 5.0PF B	BM3
C161			CC73GCH1H060B	CHIP C 6.0PF B	AK2,AM2
C163			CC73GCH1H030B	CHIP C 3.0PF B	
C164			CC73GCH1H050B	CHIP C 5.0PF B	AK,AM,BM
C164			CC73GCH1H050B	CHIP C 5.0PF B	BM3
C164			CC73GCH1H060B	CHIP C 6.0PF B	AK2,AM2
C166			CC73GCH1HR75B	CHIP C 0.75PF B	AK,AM,BM
C166			CC73GCH1HR75B	CHIP C 0.75PF B	BM3
C166			CC73GCH1H1R5B	CHIP C 1.5PF B	AK2,AM2
C168			CC73GCH1H0R3B	CHIP C 0.3PF B	AK2,AM2
C169			CC73GCH1H040B	CHIP C 4.0PF B	AK,AM,BM
C169			CC73GCH1H030B	CHIP C 3.0PF B	AK2,AM2
C169			CC73GCH1H100C	CHIP C 10PF C	BM3
C190			CK73GB1A105K	CHIP C 1.0UF K	
C191			CK73GB1H103K	CHIP C 0.010UF K	
C201			CK73GB1A224K	CHIP C 0.22UF K	
C206			CK73HB1H102K	CHIP C 1000PF K	
C207			CK73HB1H182K	CHIP C 1800PF K	
C208			CK73HB1H471K	CHIP C 470PF K	
C209			C92-0713-05	CHIP-TAN 10UF 6.3WV	
C210			CK73HB1H471K	CHIP C 470PF K	
C211			CK73HB1C103K	CHIP C 0.010UF K	
C213			CK73HB1A104K	CHIP C 0.10UF K	
C214			CC73HCH1H680J	CHIP C 68PF J	
C215			CK73HB1H102K	CHIP C 1000PF K	
C216			CK73GB1C104K	CHIP C 0.10UF K	
C217			CK73HB1A104K	CHIP C 0.10UF K	
C218			CK73GB1C104K	CHIP C 0.10UF K	
C219			CC73HCH1H330J	CHIP C 33PF J	
C220			CK73HB1H102K	CHIP C 1000PF K	
C221			CK73GB1C104K	CHIP C 0.10UF K	
C222			CK73HB1H102K	CHIP C 1000PF K	
C224,225			CK73HB1C103K	CHIP C 0.010UF K	
C228			CC73GCH1H100C	CHIP C 10PF C	
C230			CK73HB1C103K	CHIP C 0.010UF K	

Ref. No.	Address	New parts	Parts No.	Description	Destination
C231			CK73GB1H103K	CHIP C 0.010UF K	
C232			CK73HB1C103K	CHIP C 0.010UF K	
C233			CC73GCH1H060B	CHIP C 6.0PF B	
C234			CK73HB1H102K	CHIP C 1000PF K	
C236			CC73GCH1H180J	CHIP C 18PF J	
C237			CK73HB1H102K	CHIP C 1000PF K	
C238			CK73GB1C104K	CHIP C 0.10UF K	
C239			CK73GB1H102K	CHIP C 1000PF K	
C240			CC73GCH1H010B	CHIP C 1.0PF B	BM3
C240			CC73GCH1H3R5B	CHIP C 3.5PF B	AK,AK2
C240			CC73GCH1H3R5B	CHIP C 3.5PF B	AM,AM2
C240			CC73GCH1H3R5B	CHIP C 3.5PF B	BM
C241			CK73GB1H471K	CHIP C 470PF K	
C244			CC73GCH1H030B	CHIP C 3.0PF B	AK,AM,BM
C244			CC73GCH1H3R5B	CHIP C 3.5PF B	AK2,AM2
C245			CC73GCH1H180J	CHIP C 18PF J	AK2,AM2
C245			CC73GCH1H220J	CHIP C 22PF J	AK,AM,BM
C246			CC73GCH1HR75B	CHIP C 0.75PF B	AK2,AM2
C246			CC73GCH1H010B	CHIP C 1.0PF B	AK,AM,BM
C247			CK73HB1H471K	CHIP C 470PF K	AK,AK2
C247			CK73HB1H471K	CHIP C 470PF K	AM,AM2
C247			CK73HB1H471K	CHIP C 470PF K	BM
C248			CC73GCH1H010B	CHIP C 1.0PF B	AK2,AM2
C248			CC73GCH1H020B	CHIP C 2.0PF B	AK,AM,BM
C249			CC73GCH1H050B	CHIP C 5.0PF B	BM3
C249			CC73GCH1H060B	CHIP C 6.0PF B	AK,AK2
C249			CC73GCH1H060B	CHIP C 6.0PF B	AM,AM2
C249			CC73GCH1H060B	CHIP C 6.0PF B	BM
C250			CC73GCH1H180J	CHIP C 18PF J	AK2,AM2
C250			CC73GCH1H220J	CHIP C 22PF J	AK,AM,BM
C250			CC73GCH1H220J	CHIP C 22PF J	BM3
C251			CK73HB1H471K	CHIP C 470PF K	
C252			CC73GCH1HR75B	CHIP C 0.75PF B	AK2,AM2
C252			CC73GCH1H1R5B	CHIP C 1.5PF B	BM3
C252,253			CC73GCH1H020B	CHIP C 2.0PF B	AK,AM,BM
C253			CC73GCH1H020B	CHIP C 2.0PF B	AK2,AM2
C253			CC73GCH1H020B	CHIP C 2.0PF B	BM3
C254			CK73HB1H471K	CHIP C 470PF K	
C255			CC73GCH1H180J	CHIP C 18PF J	AK2,AM2
C255			CC73GCH1H220J	CHIP C 22PF J	AK,AM,BM
C255			CC73GCH1H220J	CHIP C 22PF J	BM3
C256			C92-0714-05	CHIP-TAN 4.7UF 6.3WV	
C257			CC73GCH1H060B	CHIP C 6.0PF B	AK2,AM2
C257			CC73GCH1H070B	CHIP C 7.0PF B	BM3
C257			CC73GCH1H4R5B	CHIP C 4.5PF B	AK,AM,BM
C258			CK73HB1H471K	CHIP C 470PF K	
C259			CK73GB1H471K	CHIP C 470PF K	
C262,263			CK73HB1H471K	CHIP C 470PF K	
C265			CK73HB1H471K	CHIP C 470PF K	
C266			CK73GB1H471K	CHIP C 470PF K	
C267			CC73GCH1H050B	CHIP C 5.0PF B	AK2,AM2
C267			CC73GCH1H060B	CHIP C 6.0PF B	BM3
C267			CC73GCH1H3R5B	CHIP C 3.5PF B	AK,AM,BM
C268			CC73GCH1H180J	CHIP C 18PF J	AK2,AM2
C268			CC73GCH1H220J	CHIP C 22PF J	AK,AM,BM
C268			CC73GCH1H220J	CHIP C 22PF J	BM3
C269			CC73GCH1H020B	CHIP C 2.0PF B	AK,AM,BM
C269			CC73GCH1H020B	CHIP C 2.0PF B	BM3
C269			CC73GCH1H2R5B	CHIP C 2.5PF B	AK2,AM2
C270,271			CK73HB1H471K	CHIP C 470PF K	

AK : TK-3202 (K) AK2 : TH-3202 (K2) AM : TK-3202 (M) AM2 : TH-3202 (M2)
BM : TK-3206 (M) BM3 : TH-3206 (M3)

PARTS LIST

TX-RX UNIT (X57-6890-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination
C272			CC73GCH1H020B	CHIP C 2.0PF B	
C273			CC73GCH1H180J	CHIP C 18PF J	AK2,AM2
C273			CC73GCH1H220J	CHIP C 22PF J	AK,AM,BM
C273			CC73GCH1H220J	CHIP C 22PF J	BM3
C274			CC73GCH1H010B	CHIP C 1.0PF B	AK,AM,BM
C274			CC73GCH1H020B	CHIP C 2.0PF B	AK2,AM2
C274			CC73GCH1H040B	CHIP C 4.0PF B	BM3
C275			CC73GCH1H020B	CHIP C 2.0PF B	AK,AM,BM
C275			CC73GCH1H020B	CHIP C 2.0PF B	BM3
C275			CC73GCH1H090B	CHIP C 9.0PF B	AK2,AM2
C276			CC73GCH1H040B	CHIP C 4.0PF B	AK2,AM2
C276			CC73GCH1H040B	CHIP C 4.0PF B	BM3
C276			CC73GCH1H3R5B	CHIP C 3.5PF B	AK,AM,BM
C290			CC73GCH1H020B	CHIP C 2.0PF B	
C291			CC73GCH1H060B	CHIP C 6.0PF B	
C292			CK73HB1H471K	CHIP C 470PF K	
C301			CK73HB1H392K	CHIP C 3900PF K	
C302			CK73HB1H271K	CHIP C 270PF K	
C304			CK73GB1A224K	CHIP C 0.22UF K	
C306			C92-0714-05	CHIP-TAN 4.7UF 6.3WV	
C307,308			CK73HB1A104K	CHIP C 0.10UF K	
C309			CC73GCH1H820J	CHIP C 82PF J	
C310			CK73HB1A683K	CHIP C 0.068UF K	
C311			CK73GB1A105K	CHIP C 1.0UF K	
C312			CC73GCH1H120J	CHIP C 12PF J	
C313			CC73GCH1H121J	CHIP C 120PF J	
C314			CK73HB1A104K	CHIP C 0.10UF K	
C315			CK73GB1A105K	CHIP C 1.0UF K	
C316			CK73GB1C104K	CHIP C 0.10UF K	
C317			CK73HB1A104K	CHIP C 0.10UF K	
C318			C92-0714-05	CHIP-TAN 4.7UF 6.3WV	
C319			CC73GCH1H271J	CHIP C 270PF J	
C320			CK73HB1C103K	CHIP C 0.010UF K	
C321			CK73GB1A105K	CHIP C 1.0UF K	
C322			CK73HB1C153K	CHIP C 0.015UF K	
C323			CC73GCH1H820J	CHIP C 82PF J	
C324			CC73HCH1H820J	CHIP C 82PF J	
C325			CK73HB1A104K	CHIP C 0.10UF K	
C326			CK73HB1H102K	CHIP C 1000PF K	
C327			CC73HCH1H101J	CHIP C 100PF J	
C328			CK73HB1H391K	CHIP C 390PF K	
C329,330			CK73GB1A105K	CHIP C 1.0UF K	
C331			CK73HB1A104K	CHIP C 0.10UF K	
C332			CK73HB1H471K	CHIP C 470PF K	
C333,334			CK73GB1C104K	CHIP C 0.10UF K	
C335			CC73GCH1H221J	CHIP C 220PF J	
C336			CK73FB1C474K	CHIP C 0.47UF K	
C338			CC73GCH1H101J	CHIP C 100PF J	
C339			C92-0560-05	CHIP-TAN 10UF 6.3WV	
C340			CK73GB1C104K	CHIP C 0.10UF K	
C341			CK73GB1C473K	CHIP C 0.047UF K	
C342			C92-0560-05	CHIP-TAN 10UF 6.3WV	
C343			CK73GB1C473J	CHIP C 0.047UF J	
C344			CC73GCH1H221J	CHIP C 220PF J	
C345			C92-0665-05	TANTAL 100UF 6.3WV	
C346			CK73GB1H102K	CHIP C 1000PF K	
C348			CK73HB1H471K	CHIP C 470PF K	
C351,352			CK73HB1C103K	CHIP C 0.010UF K	
C354			CK73HB1A104K	CHIP C 0.10UF K	
C370			CK73HB1A104K	CHIP C 0.10UF K	

Ref. No.	Address	New parts	Parts No.	Description	Destination
C401			CC73GCH1H471J	CHIP C 470PF J	
C402			CK73HB1H102K	CHIP C 1000PF K	
C403			CK73GB1C104K	CHIP C 0.10UF K	
C405			CC73GCH1H101J	CHIP C 100PF J	
C407			CK73HB1H102K	CHIP C 1000PF K	
C409,410			CK73GB1A105K	CHIP C 1.0UF K	
C411			CK73HB1H102K	CHIP C 1000PF K	
C415			CK73HB1H471K	CHIP C 470PF K	
C417			CK73GB1A105K	CHIP C 1.0UF K	
C418,419			CK73HB1H102K	CHIP C 1000PF K	
C421			CK73GB1A105K	CHIP C 1.0UF K	
C426,427			CK73GB1A105K	CHIP C 1.0UF K	
C428,429			CK73HB1H102K	CHIP C 1000PF K	
C430			CK73GB1H103K	CHIP C 0.010UF K	
C431			CK73HB1C103K	CHIP C 0.010UF K	
C432			CC73HCH1H050B	CHIP C 5.0PF B	
C433,434			CC73HCH1H030B	CHIP C 3.0PF B	
C435			CC73HCH1H050B	CHIP C 5.0PF B	
C440			CC73GCH1H1R5B	CHIP C 1.5PF B	
C443			CK73GB1A474K	CHIP C 0.47UF K	
C444			CC73GCH1H020B	CHIP C 2.0PF B	BM3
C445			CC73GCH1H180J	CHIP C 18PF J	AK2,AM2
TC1 ,2			C05-0384-05	CERAMIC TRIMMER CAP(10PF)	
CN201			E23-1081-05	TERMINAL	
CN401		*	E40-6362-05	FLAT CABLE CONNECTOR	
J301			E11-0457-05	PHONE JACK(2.5/3.5)	
F401			F53-0190-05	FUSE(2.5A)	
67	2A	*	J30-1282-04	SPACER(MIC ELEMENT)	
CD201			L79-1582-05	TUNING COIL	
CF201	2A		L72-0973-05	CERAMIC FILTER(450KHZ)	
L1			L40-4791-37	SMALL FIXED INDUCTOR(4.700UH)	
L3			L40-5681-86	SMALL FIXED INDUCTOR(0.56UH)	
L5			L40-5681-86	SMALL FIXED INDUCTOR(0.56UH)	
L6 ,7			L92-0138-05	FERRITE CHIP	
L8 ,9			L40-1875-92	SMALL FIXED INDUCTOR(18NH)	
L10 ,11			L40-1085-92	SMALL FIXED INDUCTOR(100NH)	
L12			L92-0138-05	FERRITE CHIP	
L13 ,14			L40-1085-92	SMALL FIXED INDUCTOR(100NH)	
L16			L40-1878-67	SMALL FIXED INDUCTOR(18NH)	AK2,AM2
L16			L40-2278-67	SMALL FIXED INDUCTOR(22NH)	AK,AM,BM
L16			L40-2778-67	SMALL FIXED INDUCTOR(27NH)	BM3
L17			L40-2278-67	SMALL FIXED INDUCTOR(22NH)	AK2,AM2
L17			L40-2778-67	SMALL FIXED INDUCTOR(27NH)	AK,AM,BM
L17			L40-3378-67	SMALL FIXED INDUCTOR(33NH)	BM3
L18 ,19			L41-2285-03	SMALL FIXED INDUCTOR	
L20 ,21			L40-3391-86	SMALL FIXED INDUCTOR(3.3UH)	
L22			L92-0138-05	FERRITE CHIP	
L23			L40-2275-92	SMALL FIXED INDUCTOR(22NH)	
L24			L92-0141-05	FERRITE CHIP	
L25			L40-2275-92	SMALL FIXED INDUCTOR(22NH)	
L100			L40-3375-92	SMALL FIXED INDUCTOR(33NH)	BM3
L100,101			L40-1575-92	SMALL FIXED INDUCTOR(15NH)	AK,AK2
L100,101			L40-1575-92	SMALL FIXED INDUCTOR(15NH)	AM,AM2
L100,101			L40-1575-92	SMALL FIXED INDUCTOR(15NH)	BM
L101			L40-2275-92	SMALL FIXED INDUCTOR(22NH)	BM3
L102			L92-0138-05	FERRITE CHIP	
L103,104			L40-8265-92	SMALL FIXED INDUCTOR(8.2NH)	

AK : TK-3202 (K) AK2 : TH-3202 (K2) AM : TK-3202 (M) AM2 : TH-3202 (M2)
BM : TK-3206 (M) BM3 : TH-3206 (M3)

PARTS LIST

TX-RX UNIT (X57-6890-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination
L105			L40-1575-54	SMALL FIXED INDUCTOR(15NH)	AK,AM,BM
L105			L40-1575-54	SMALL FIXED INDUCTOR(15NH)	BM3
L105			L40-2275-54	SMALL FIXED INDUCTOR(22NH)	AK2,AM2
L106			L92-0149-05	FERRITE CHIP	
L107			L40-1263-92	SMALL FIXED INDUCTOR(1.2NH)	AK,AM,BM
L109			L92-0149-05	FERRITE CHIP	
L110			L40-2285-54	SMALL FIXED INDUCTOR(220NH)	
L111			L40-1092-81	SMALL FIXED INDUCTOR	
L130			L40-1263-92	SMALL FIXED INDUCTOR(1.2NH)	AK2,AM2
L201			L40-1091-37	SMALL FIXED INDUCTOR(1.000UH)	
L202			L92-0138-05	FERRITE CHIP	
L203			L40-5685-85	SMALL FIXED INDUCTOR(0.56UH)	
L204			L40-2785-92	SMALL FIXED INDUCTOR(270NH)	
L206			L40-2775-92	SMALL FIXED INDUCTOR(27NH)	AK2,AM2
L206			L40-3975-92	SMALL FIXED INDUCTOR(39NH)	BM3
L211,212			L41-8268-14	SMALL FIXED INDUCTOR	AK,AK2
L211,212			L41-8268-14	SMALL FIXED INDUCTOR	AM,AM2
L211,212			L41-8268-14	SMALL FIXED INDUCTOR	BM
L212			L41-8268-14	SMALL FIXED INDUCTOR	BM3
L214			L41-6868-14	SMALL FIXED INDUCTOR	AK2,AM2
L214			L41-8268-14	SMALL FIXED INDUCTOR	AK,AM,BM
L214			L41-8268-14	SMALL FIXED INDUCTOR	BM3
L215			L41-2285-03	SMALL FIXED INDUCTOR	
L220			L34-4602-05	AIR-CORE COIL	
L223			L34-4572-05	AIR-CORE COIL	AK,AK2
L223			L34-4572-05	AIR-CORE COIL	AM,AM2
L223			L34-4572-05	AIR-CORE COIL	BM
L224-226			L34-4564-05	AIR-CORE COIL	
L228			L41-6868-14	SMALL FIXED INDUCTOR	AK2,AM2
L228,229			L41-8268-14	SMALL FIXED INDUCTOR	AK,AM,BM
L228,229			L41-8268-14	SMALL FIXED INDUCTOR	BM3
L229			L41-8268-14	SMALL FIXED INDUCTOR	AK2,AM2
L230			L41-4778-03	SMALL FIXED INDUCTOR	AK,AK2
L230			L41-4778-03	SMALL FIXED INDUCTOR	AM,AM2
L230			L41-4778-03	SMALL FIXED INDUCTOR	BM
L230			L41-5678-03	SMALL FIXED INDUCTOR	BM3
L250			L40-1875-92	SMALL FIXED INDUCTOR(18NH)	
L290		*	L41-3078-17	SMALL FIXED INDUCTOR	AK,AM,BM
L301			L92-0140-05	FERRITE CHIP	
L302			L92-0149-05	FERRITE CHIP	
L401			L92-0149-05	FERRITE CHIP	
L402-404			L92-0138-05	FERRITE CHIP	
L410			L92-0138-05	FERRITE CHIP	
L411			L40-1875-92	SMALL FIXED INDUCTOR(18NH)	
L412			L34-4564-05	AIR-CORE COIL BM3	
X1			L77-1931-05	TCXO(12.8MHZ)	
X2		*	L78-1411-05	RESONATOR(7.37MHZ)	
XF201			L71-0619-05	MCF(38.85MHZ)	
CP404			RK75HA1J473J	CHIP-COM 47K J 1/16W	
CP405			RK75HA1J102J	CHIP-COM 1.0K J 1/16W	
R1			RK73HB1J223J	CHIP R 22K J 1/16W	
R2			RK73HB1J103J	CHIP R 10K J 1/16W	
R3			RK73HB1J333J	CHIP R 33K J 1/16W	
R4			RK73HB1J563J	CHIP R 56K J 1/16W	
R5			RK73HB1J104J	CHIP R 100K J 1/16W	
R6			RK73HB1J823J	CHIP R 82K J 1/16W	
R7			RK73HB1J101J	CHIP R 100 J 1/16W	
R8 -11			R92-1368-05	CHIP R 0 OHM	
R12			RK73HB1J222J	CHIP R 2.2K J 1/16W	

Ref. No.	Address	New parts	Parts No.	Description	Destination
R13			R92-1252-05	CHIP R 0 OHM J 1/16W	
R14			RK73HB1J334J	CHIP R 330K J 1/16W	
R15			RK73GB1J221J	CHIP R 220 J 1/16W	
R16			RK73GB1J561J	CHIP R 560 J 1/16W	
R17			RK73HB1J101J	CHIP R 100 J 1/16W	
R18			RK73GB1J181J	CHIP R 180 J 1/16W	
R19			RK73GB1J122J	CHIP R 1.2K J 1/16W	
R20			RK73HB1J100J	CHIP R 10 J 1/16W	
R21			RK73GB1J681J	CHIP R 680 J 1/16W	
R22			R92-1252-05	CHIP R 0 OHM J 1/16W	
R23			RK73GB1J103J	CHIP R 10K J 1/16W	
R25			RK73HB1J223J	CHIP R 22K J 1/16W	
R26			RK73HB1J103J	CHIP R 10K J 1/16W	
R27			RK73HB1J220J	CHIP R 22 J 1/16W	
R30			RK73HB1J333J	CHIP R 33K J 1/16W	
R31			RK73HB1J474J	CHIP R 470K J 1/16W	
R32			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R33			RK73HB1J154J	CHIP R 150K J 1/16W	
R34			RK73HB1J474J	CHIP R 470K J 1/16W	
R35 ,36			RK73HB1J274J	CHIP R 270K J 1/16W	
R37			RK73HB1J101J	CHIP R 100 J 1/16W	
R38			RK73HB1J181J	CHIP R 180 J 1/16W	
R39			RK73HB1J151J	CHIP R 150 J 1/16W	
R40			RK73HB1J101J	CHIP R 100 J 1/16W	
R41			RK73HB1J154J	CHIP R 150K J 1/16W	
R42			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R43			RK73HB1J101J	CHIP R 100 J 1/16W	
R46			RK73HB1J103J	CHIP R 10K J 1/16W	
R47			RK73HB1J220J	CHIP R 22 J 1/16W	
R48			RK73HB1J331J	CHIP R 330 J 1/16W	
R49			RK73HB1J222J	CHIP R 2.2K J 1/16W	
R50			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R100			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R103			RK73GB1J473J	CHIP R 47K J 1/16W	
R105			RK73GB1J331J	CHIP R 330 J 1/16W	
R106			RK73GB1J220J	CHIP R 22 J 1/16W	
R107			RK73HB1J101J	CHIP R 100 J 1/16W	
R110			RK73GB1J331J	CHIP R 330 J 1/16W	
R111,112			R92-1252-05	CHIP R 0 OHM J 1/16W	
R114			RK73GB1J473J	CHIP R 47K J 1/16W	
R115			RK73GB1J103J	CHIP R 10K J 1/16W	
R116			RK73GB1J220J	CHIP R 22 J 1/16W	
R120			R92-1252-05	CHIP R 0 OHM J 1/16W	BM3
R121			RK73GB1J220J	CHIP R 22 J 1/16W	
R123			R92-0670-05	CHIP R 0 OHM	AK,AM,BM
R123			R92-0670-05	CHIP R 0 OHM	BM3
R124			RK73GB1J473J	CHIP R 47K J 1/16W	
R126			RK73GB1J222J	CHIP R 2.2K J 1/16W	
R127-129			RK73EB2ER39K	CHIP R 0.39 K 1/4W	
R130-135			RK73GH1J154D	CHIP R 150K D 1/16W	
R137			R92-0670-05	CHIP R 0 OHM	
R138			RK73GB1J105J	CHIP R 1.0M J 1/16W	
R139			RK73GB1J473J	CHIP R 47K J 1/16W	
R140			RK73GB1J563J	CHIP R 56K J 1/16W	
R141			RK73GB1J104J	CHIP R 100K J 1/16W	
R142			R92-1252-05	CHIP R 0 OHM J 1/16W	
R143			RK73GB1J104J	CHIP R 100K J 1/16W	
R145			R92-1252-05	CHIP R 0 OHM J 1/16W	
R147			R92-1252-05	CHIP R 0 OHM J 1/16W	
R190			RK73GB1J101J	CHIP R 100 J 1/16W	

AK : TK-3202 (K) AK2 : TH-3202 (K2) AM : TK-3202 (M) AM2 : TH-3202 (M2)
BM : TK-3206 (M) BM3 : TH-3206 (M3)

PARTS LIST

TX-RX UNIT (X57-6890-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination
R191,192			RK73GB1J271J	CHIP R 270 J 1/16W	
R193			RK73GB1J473J	CHIP R 47K J 1/16W	BM3
R193,194			RK73GB1J473J	CHIP R 47K J 1/16W	AK,AK2
R193,194			RK73GB1J473J	CHIP R 47K J 1/16W	AM,AM2
R193,194			RK73GB1J473J	CHIP R 47K J 1/16W	BM
R194			RK73GB1J223J	CHIP R 22K J 1/16W	BM3
R203			RK73HB1J184J	CHIP R 180K J 1/16W	
R206			RK73GB1J100J	CHIP R 10 J 1/16W	
R207			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R208			RK73HB1J823J	CHIP R 82K J 1/16W	
R209			RK73HB1J272J	CHIP R 2.7K J 1/16W	
R210,211			RK73HB1J332J	CHIP R 3.3K J 1/16W	
R212			RK73HB1J823J	CHIP R 82K J 1/16W	
R213			RK73HB1J392J	CHIP R 3.9K J 1/16W	
R215			RK73HB1J101J	CHIP R 100 J 1/16W	
R216			RK73HB1J124J	CHIP R 120K J 1/16W	
R217			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R218			RK73HB1J561J	CHIP R 560 J 1/16W	
R219			RK73GB1J561J	CHIP R 560 J 1/16W	
R226,227			RK73GB1J102J	CHIP R 1.0K J 1/16W	
R228			RK73GB1J151J	CHIP R 150 J 1/16W	
R233			RK73HB1J104J	CHIP R 100K J 1/16W	
R236			RK73HB1J563J	CHIP R 56K J 1/16W	
R238			RK73HB1J104J	CHIP R 100K J 1/16W	
R239			RK73HB1J563J	CHIP R 56K J 1/16W	
R240			R92-1252-05	CHIP R 0 OHM J 1/16W	
R241			RK73HB1J105J	CHIP R 1.0M J 1/16W	AK,AK2
R241			RK73HB1J105J	CHIP R 1.0M J 1/16W	AM,AM2
R241			RK73HB1J105J	CHIP R 1.0M J 1/16W	BM
R243,244			RK73HB1J105J	CHIP R 1.0M J 1/16W	
R248			RK73GB1J221J	CHIP R 220 J 1/16W	
R249			RK73GB1J220J	CHIP R 22 J 1/16W	
R251			RK73HB1J104J	CHIP R 100K J 1/16W	
R253			RK73HB1J104J	CHIP R 100K J 1/16W	
R254			RK73HB1J683J	CHIP R 68K J 1/16W	
R255			R92-1252-05	CHIP R 0 OHM J 1/16W	
R256,257			RK73HB1J105J	CHIP R 1.0M J 1/16W	
R258			R92-0670-05	CHIP R 0 OHM	
R301			RK73HB1J103J	CHIP R 10K J 1/16W	
R304			RK73HB1J273J	CHIP R 27K J 1/16W	
R305			RK73HB1J104J	CHIP R 100K J 1/16W	
R306			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R307,308			R92-1368-05	CHIP R 0 OHM	
R310			RK73GB1J394J	CHIP R 390K J 1/16W	
R311			RK73HB1J123J	CHIP R 12K J 1/16W	
R312			RK73GB1J334J	CHIP R 330K J 1/16W	
R313			RK73GB1J104J	CHIP R 100K J 1/16W	
R314			RK73GB1J103J	CHIP R 10K J 1/16W	
R315			RK73GB1J334J	CHIP R 330K J 1/16W	
R316			RK73GB1J124J	CHIP R 120K J 1/16W	
R317			RK73GB1J474J	CHIP R 470K J 1/16W	
R318			RK73GB1J122J	CHIP R 1.2K J 1/16W	
R319			RK73HB1J563J	CHIP R 56K J 1/16W	
R320			RK73HB1J332J	CHIP R 3.3K J 1/16W	
R321			RK73HB1J224J	CHIP R 220K J 1/16W	
R322			RK73HB1J184J	CHIP R 180K J 1/16W	
R323			RK73HB1J563J	CHIP R 56K J 1/16W	
R324,325			RK73GB1J104J	CHIP R 100K J 1/16W	
R326			R92-1252-05	CHIP R 0 OHM J 1/16W	
R327			RK73GB1J184J	CHIP R 180K J 1/16W	
R328			RK73GB1J103J	CHIP R 10K J 1/16W	
R329			RK73GB1J823J	CHIP R 82K J 1/16W	
R330			RK73HB1J332J	CHIP R 3.3K J 1/16W	
R331			RK73GB1J154J	CHIP R 150K J 1/16W	
R332			RK73GB1J153J	CHIP R 15K J 1/16W	
R334			RK73GB1J473J	CHIP R 47K J 1/16W	
R335			RK73GB1J222J	CHIP R 2.2K J 1/16W	
R336			RK73GB1J102J	CHIP R 1.0K J 1/16W	
R337			RK73GB1J151J	CHIP R 150 J 1/16W	
R338			RK73GB1J222J	CHIP R 2.2K J 1/16W	
R339			RK73GB1J471J	CHIP R 470 J 1/16W	
R340			RK73GB1J182J	CHIP R 1.8K J 1/16W	
R341			RK73GB1J103J	CHIP R 10K J 1/16W	
R342			RK73GB1J101J	CHIP R 100 J 1/16W	
R343			RK73GB1J474J	CHIP R 470K J 1/16W	
R344			RK73GB1J102J	CHIP R 1.0K J 1/16W	
R345,346			RK73GB1J101J	CHIP R 100 J 1/16W	
R347			RK73GB1J104J	CHIP R 100K J 1/16W	
R348			RK73GB1J563J	CHIP R 56K J 1/16W	
R349			RK73GB1J333J	CHIP R 33K J 1/16W	
R350			R92-1368-05	CHIP R 0 OHM	
R354,355			RK73HB1J103J	CHIP R 10K J 1/16W	
R357			R92-1368-05	CHIP R 0 OHM	
R360			R92-1368-05	CHIP R 0 OHM	
R403			RK73GB1J101J	CHIP R 100 J 1/16W	
R404			RK73HH1J474D	CHIP R 470K D 1/16W	
R405			RK73GB1J334J	CHIP R 330K J 1/16W	
R406			RK73HH1J474D	CHIP R 470K D 1/16W	
R407			RK73HB1J334J	CHIP R 330K J 1/16W	
R408-412			RK73HB1J473J	CHIP R 47K J 1/16W	
R413,414			RK73GB1J331J	CHIP R 330 J 1/16W	
R415,416			RK73GB1J473J	CHIP R 47K J 1/16W	
R417-420			RK73HB1J473J	CHIP R 47K J 1/16W	
R421,422			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R423			R92-1368-05	CHIP R 0 OHM	
R424,425			RK73HB1J473J	CHIP R 47K J 1/16W	
R426			R92-1368-05	CHIP R 0 OHM	
R435			RK73HB1J473J	CHIP R 47K J 1/16W	
R436			R92-1252-05	CHIP R 0 OHM J 1/16W	
R437,438			RK73HB1J473J	CHIP R 47K J 1/16W	
R445,446			R92-1252-05	CHIP R 0 OHM J 1/16W	
R447			RK73HB1J123J	CHIP R 12K J 1/16W	
R449,450			R92-1252-05	CHIP R 0 OHM J 1/16W	BM3
R452			RK73HB1J103J	CHIP R 10K J 1/16W	
R453			RK73HB1J223J	CHIP R 22K J 1/16W	
R454			R92-1252-05	CHIP R 0 OHM J 1/16W	AK2,AM2
VR1			R12-7491-05	TRIMMING POT.(68K)	
S401-403			S70-0414-05	TACT SWITCH	
MIC301			T91-0543-05	MIC ELEMENT	
D1			MA2S111	DIODE	
D2 -9			HVC376B	VARIABLE CAPACITANCE DIODE	
D10			1SV278	VARIABLE CAPACITANCE DIODE	
D11			MA2S111	DIODE	
D101			HSC277	DIODE	
D102			HZU5CLL	ZENER DIODE	
D103,104			HVC131	DIODE	
D106			HVC131	DIODE	

AK : TK-3202 (K) AK2 : TH-3202 (K2) AM : TK-3202 (M) AM2 : TH-3202 (M2)
BM : TK-3206 (M) BM3 : TH-3206 (M3)

PARTS LIST

TX-RX UNIT (X57-6890-XX)
ADDITIONAL PCB

Ref. No.	Address	New parts	Parts No.	Description	Destination
D122			HVC131	DIODE	
D202			HSC277	DIODE	
D203-206			HVC355B	VARIABLE CAPACITANCE DIODE	
D210			HVC355B	VARIABLE CAPACITANCE DIODE	AK,AK2
D210			HVC355B	VARIABLE CAPACITANCE DIODE	AM,AM2
D210			HVC355B	VARIABLE CAPACITANCE DIODE	BM
D301,302			RB706F-40	DIODE	
D303			DAN222	DIODE	
D401			RB521S-30	DIODE	
D402			1SR154-400	DIODE	
IC1			MB15A02	MOS IC	
IC101			TA75W01FU	MOS IC	
IC201			TA31136FN	MOS IC	
IC301			AQUA	MOS IC	
IC302			TA7368F	MOS IC	
IC401,402			XC6204B502MR	MOS IC	
IC403		*	BD4840FVE	MOS IC	
IC404		*	BD4845FVE	MOS IC	
IC405		*	30622MAA-B89GP	MPU	
IC406		*	BR24L08F-W	ROM IC	
Q1			KTC4082	TRANSISTOR	
Q2			2SC5108(Y)	TRANSISTOR	
Q3 ,4			2SK508NV(K52)	FET	
Q5			DTA143TE	DIGITAL TRANSISTOR	
Q6			2SC5108(Y)	TRANSISTOR	
Q7			DTA143TE	DIGITAL TRANSISTOR	
Q8			2SC4617(S)	TRANSISTOR	
Q9			2SC4619	TRANSISTOR	
Q100			2SC4619	TRANSISTOR	
Q101			2SK3077	FET	
Q102			2SK2596	FET	
Q103			2SK3476	FET	
Q104			DTC114EE	DIGITAL TRANSISTOR	
Q105			2SK879(Y)	FET	
Q107			DTC114EE	DIGITAL TRANSISTOR	
Q108			2SK1824	FET	
Q109			DTA144EE	DIGITAL TRANSISTOR	
Q202			DTA144EE	DIGITAL TRANSISTOR	
Q203			2SC4649(N,P)	TRANSISTOR	
Q204,205			3SK318	FET	
Q301			DTA114EE	DIGITAL TRANSISTOR	
Q302			2SC4919	TRANSISTOR	
Q303			DTC144EE	DIGITAL TRANSISTOR	
Q304			2SA1362(GR)	TRANSISTOR	
Q305			DTC144EE	DIGITAL TRANSISTOR	
Q306			CPH3413	FET	
Q316			CPH3413	FET	
Q401,402			DTC114EE	DIGITAL TRANSISTOR	
Q403,404			CPH3317	FET	
Q405			DTA123JE	DIGITAL TRANSISTOR	
Q407,408			2SK1830	FET	
TH101			157-104-65001	THERMISTOR	
TH203			157-104-65001	THERMISTOR	
ADDITIONAL PCB					
C901,902			CK73GB1A105K	CHIP C 1.0UF K	
R901,902			RK73GB1J472J	CHIP R 4.7K J 1/16W	
Q901			2SK1824	FET	

Ref. No.	Address	New parts	Parts No.	Description	Destination

AK : TK-3202 (K) AK2 : TH-3202 (K2) AM : TK-3202 (M) AM2 : TH-3202 (M2)
BM : TK-3206 (M) BM3 : TH-3206 (M3)

EXPLODED VIEW

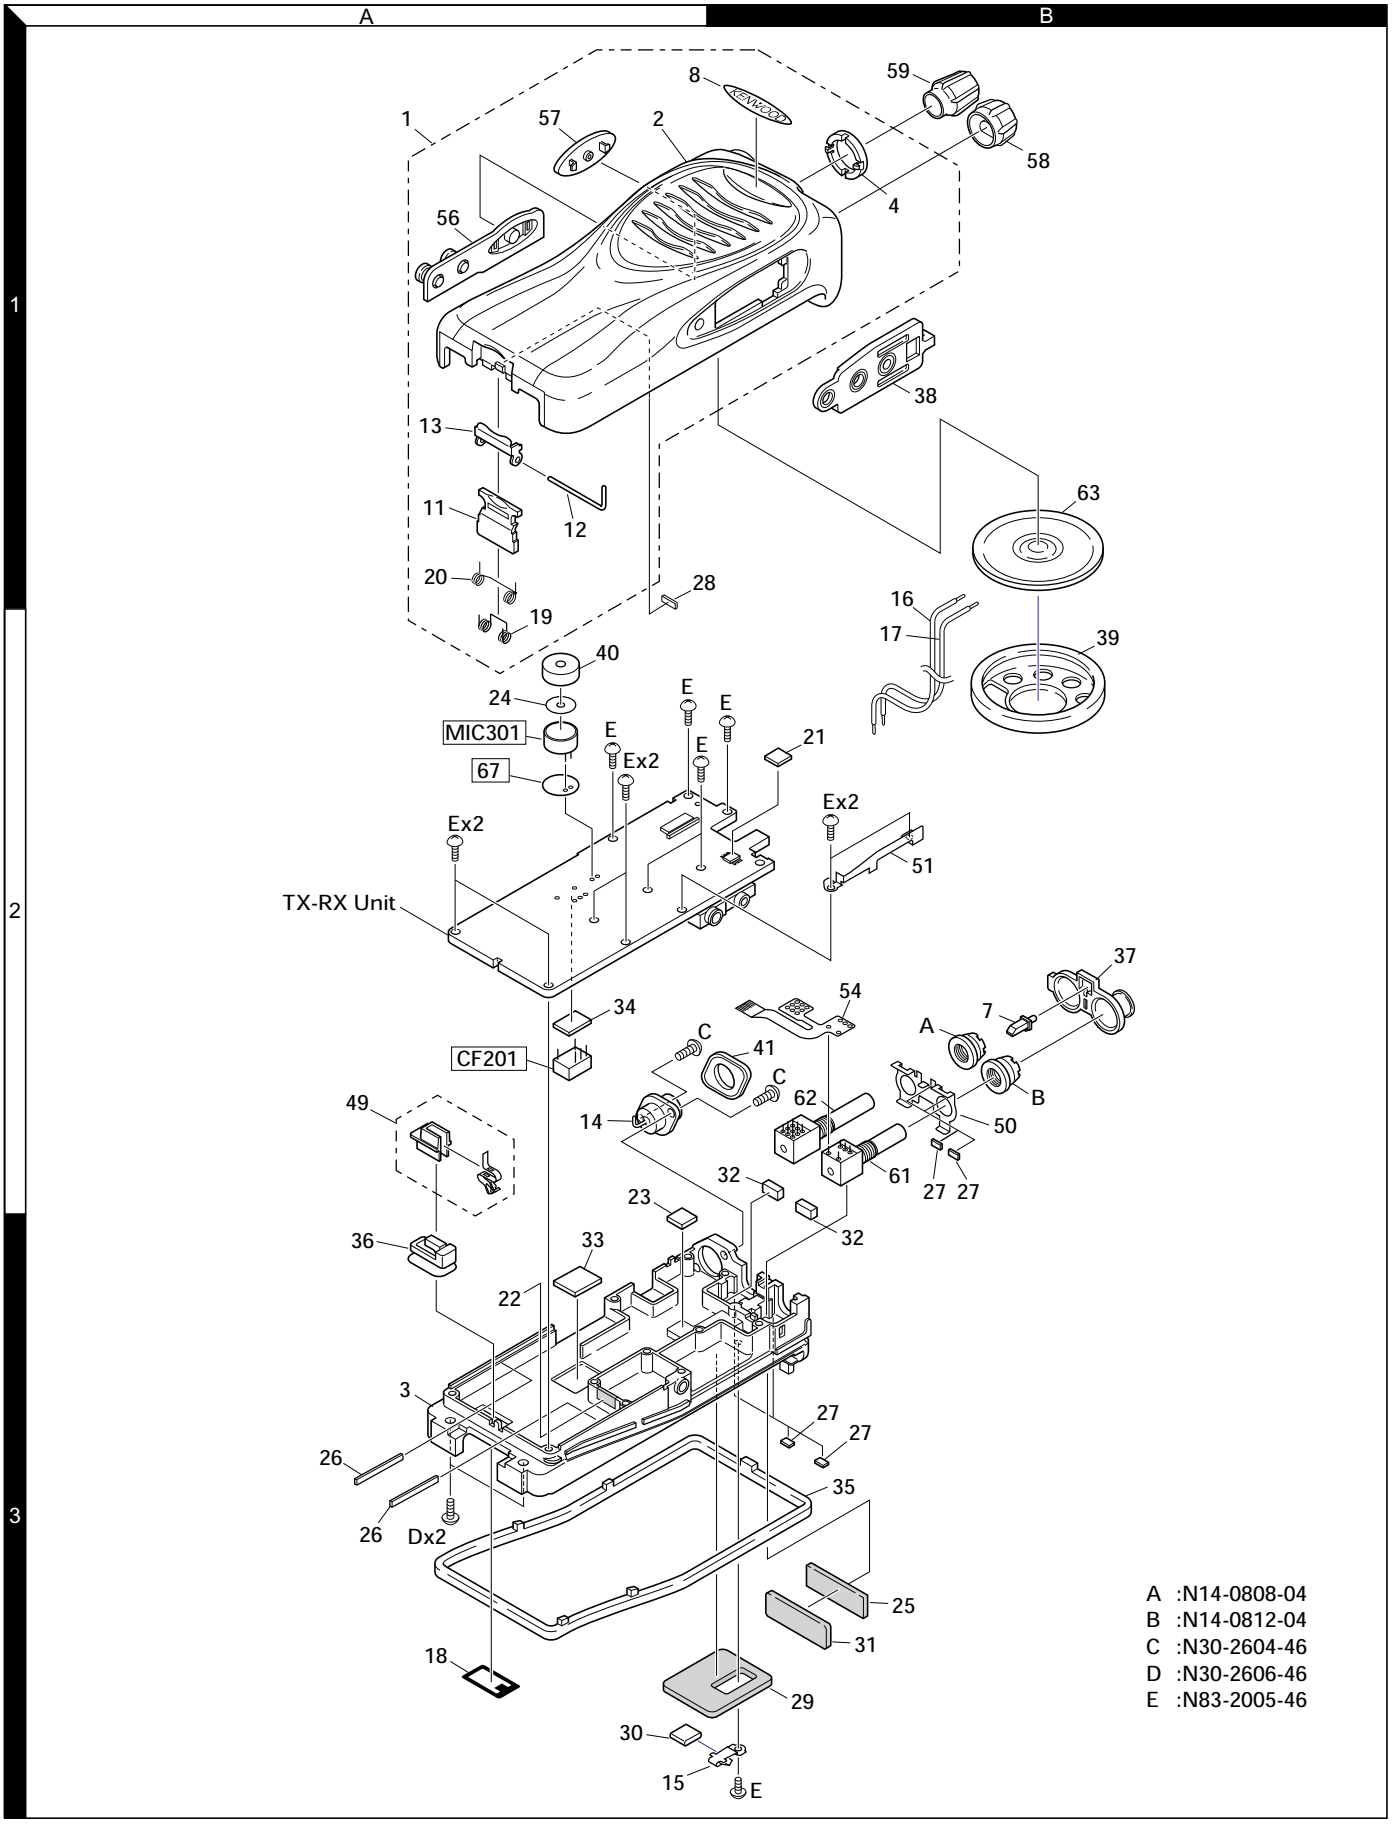

Parts with the exploded numbers larger than 700 are not supplied.

PACKING (TK-3202)

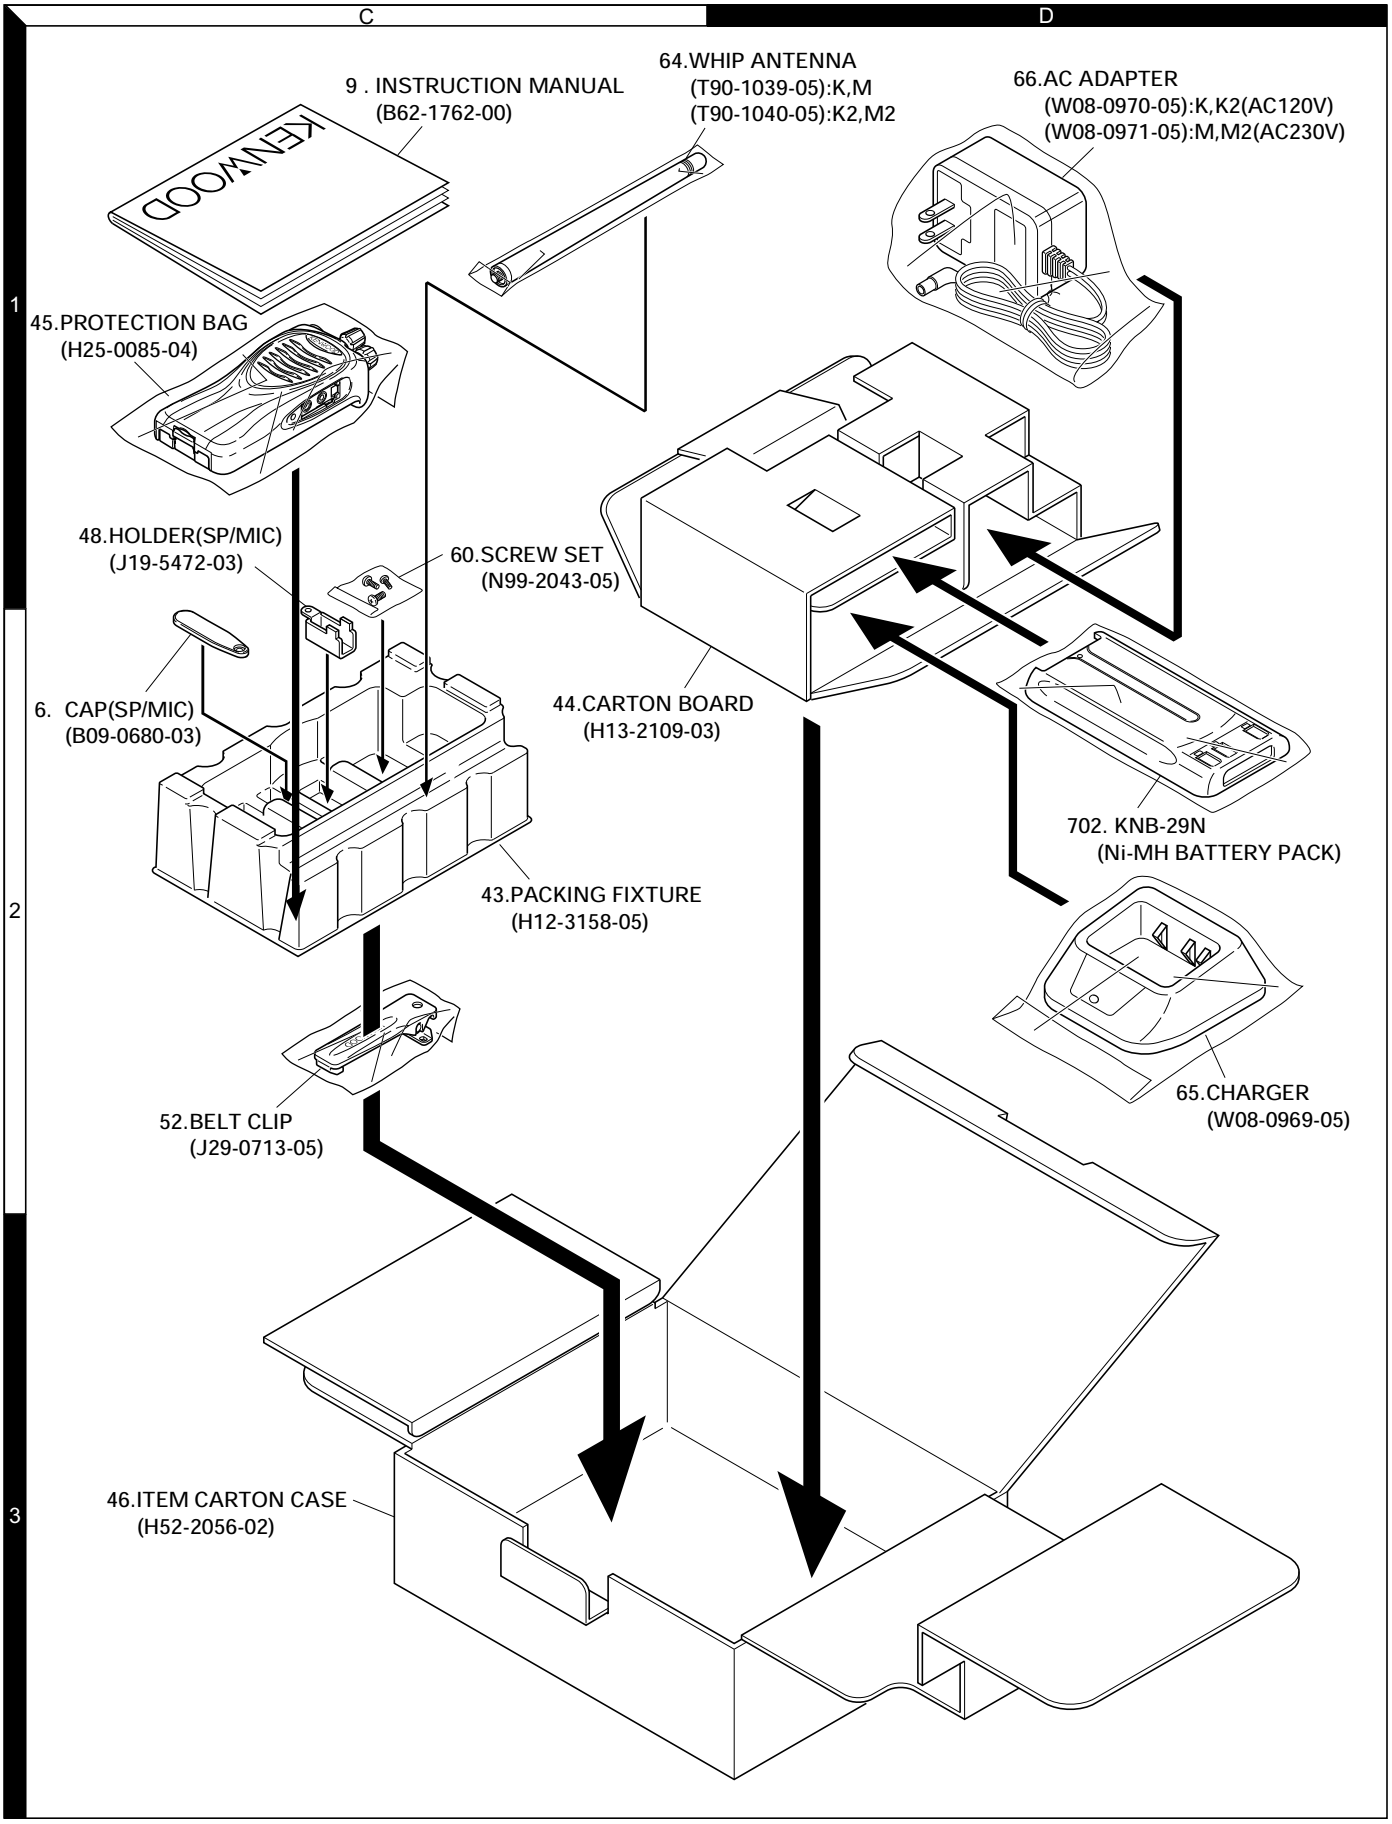

 Parts with the exploded numbers larger than 700 are not supplied.
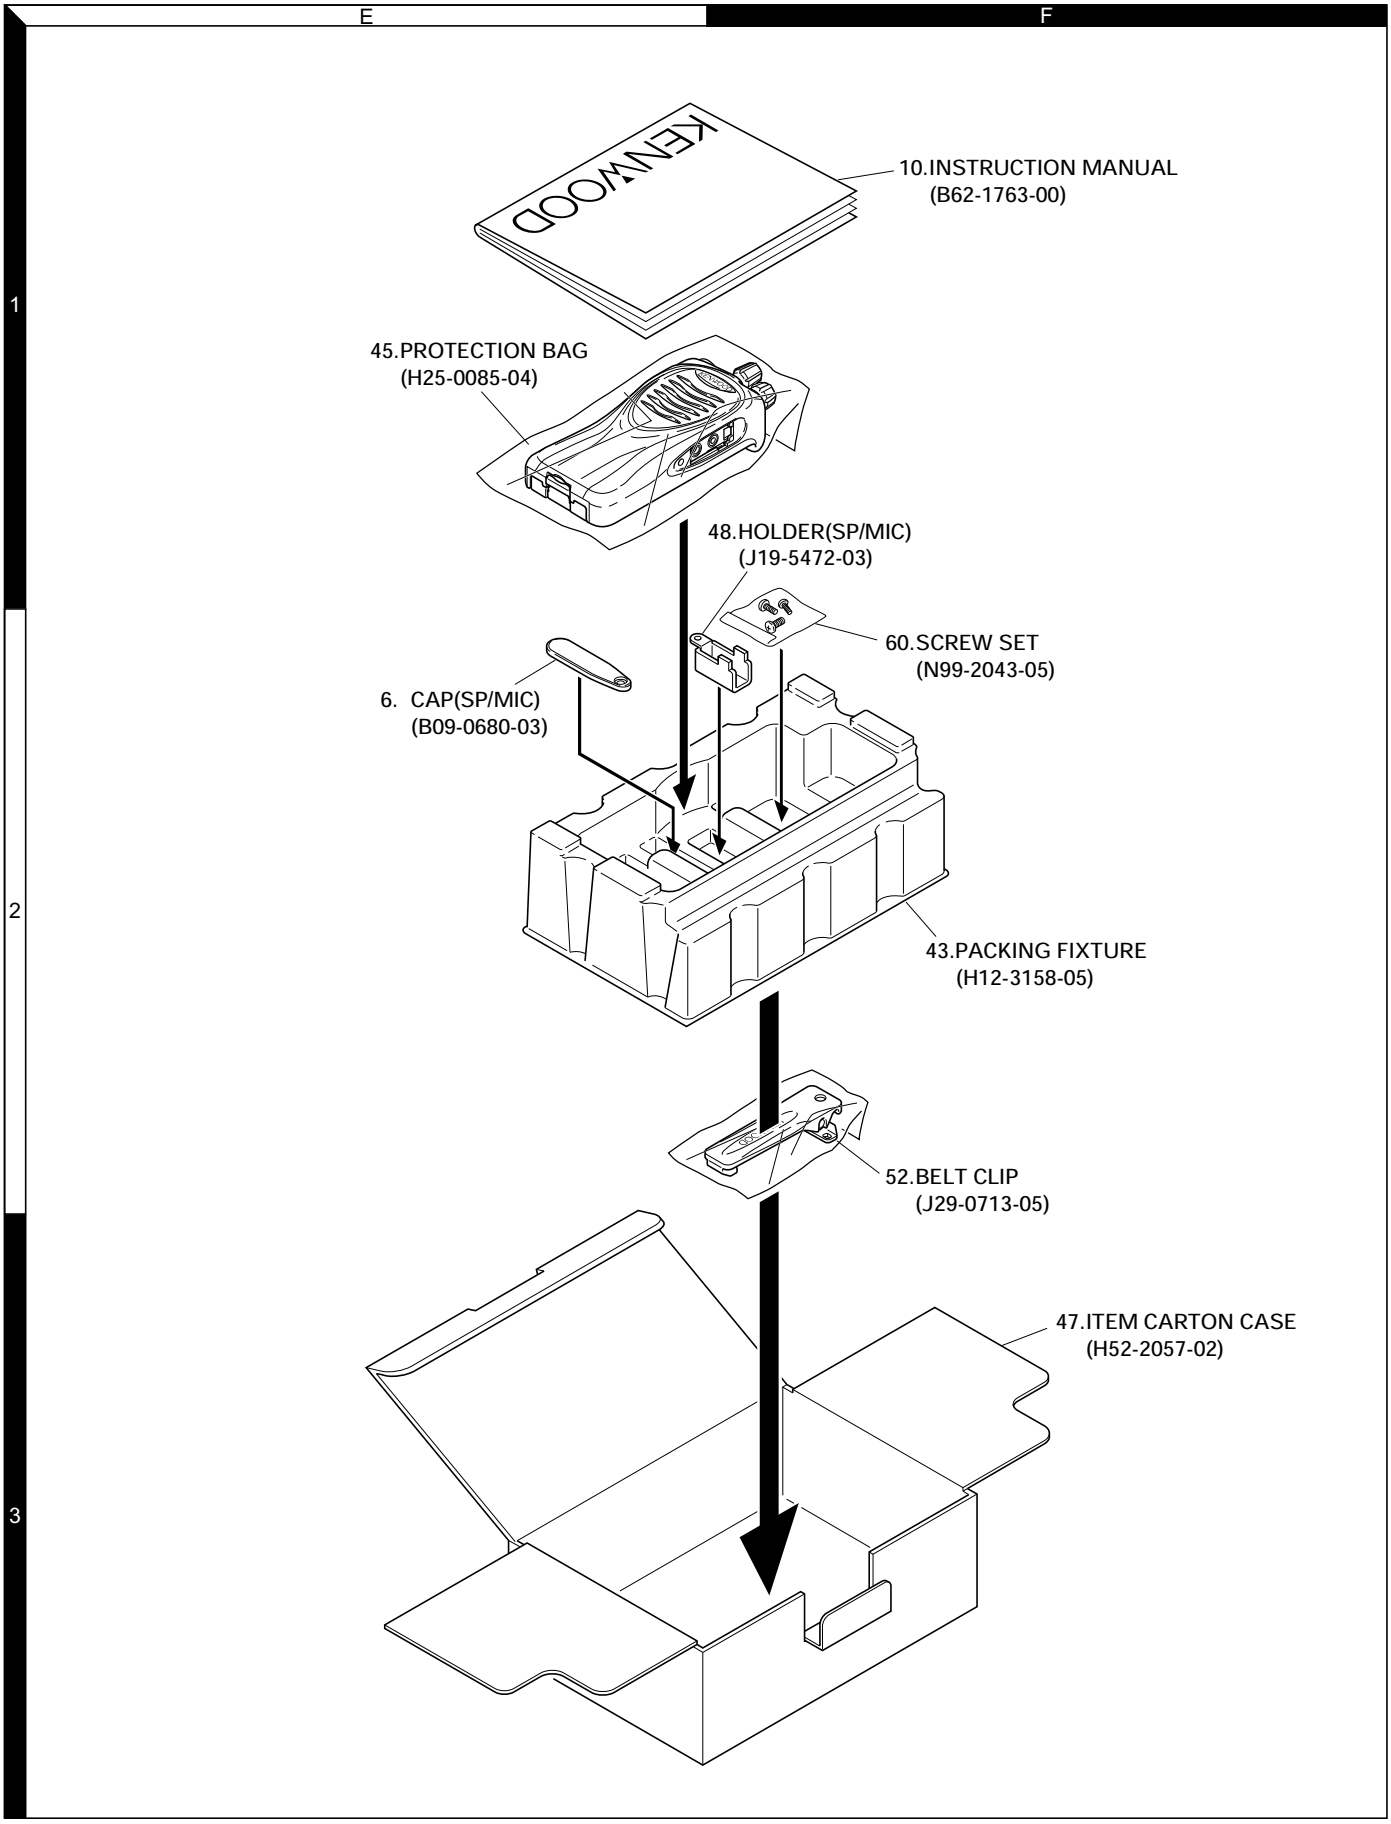
PACKING (TK-3206)