EXPLODED VIEW (DVD MECHANISM)

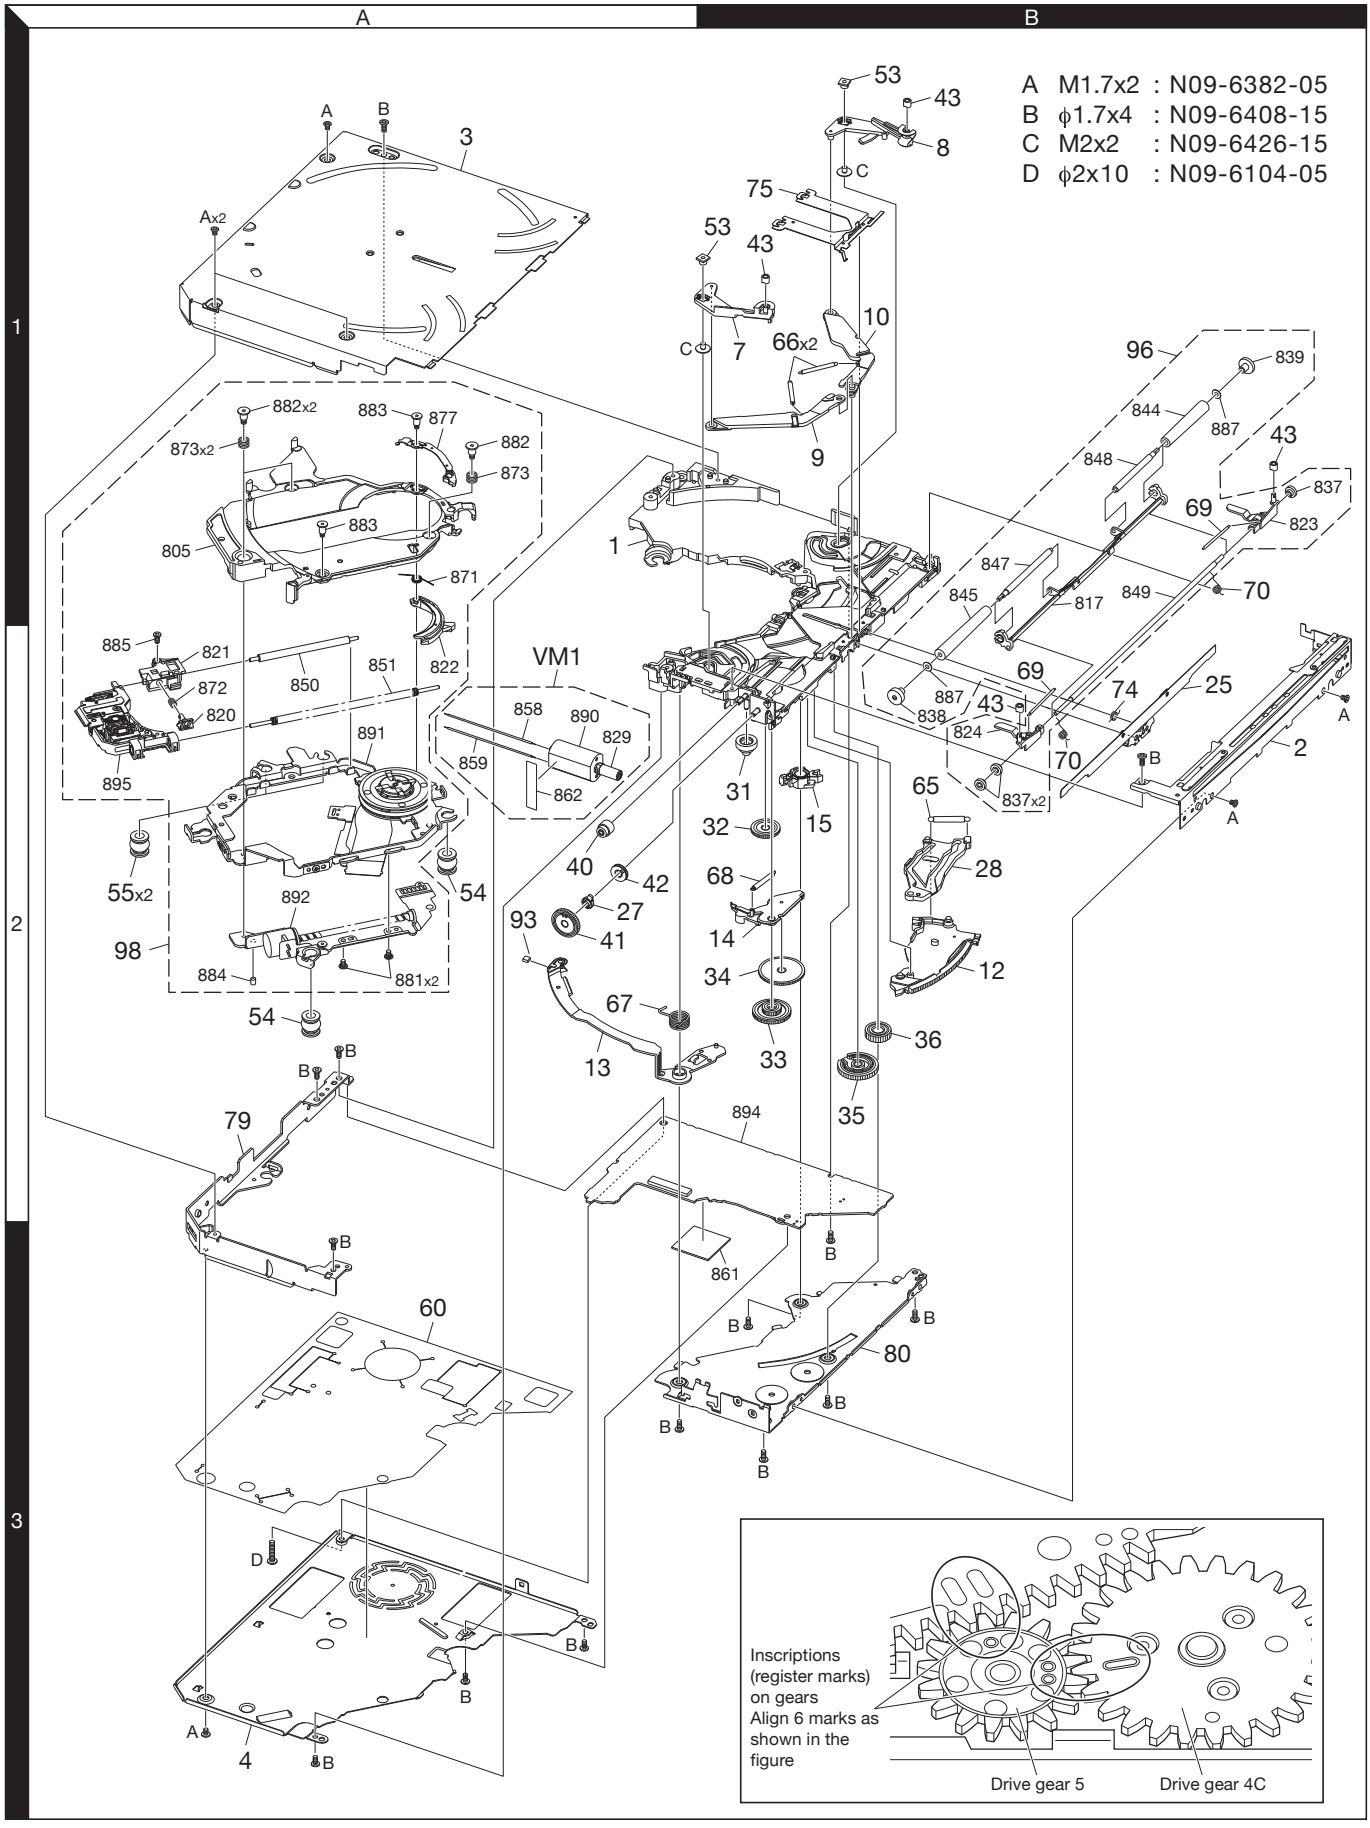

Parts with the exploded numbers larger than 700 are not supplied.

EXPLODED VIEW (UNIT)

A	ϕ2.6x5	: N86-2605-48
E	M2.6x4	: N35-2604-43
F	PANEL SCREW	: N09-6490-05
Q	M3x11	: N09-6498-05
R	M2.6x27	: N09-6491-05
T	M2.6x5	: N09-6493-05
U	M2.6x6	: N09-6494-05
W	M3x5	: N09-6425-15
AA	M2x3	: N35-2003-48
AB	ϕ3x8	: N09-6727-05

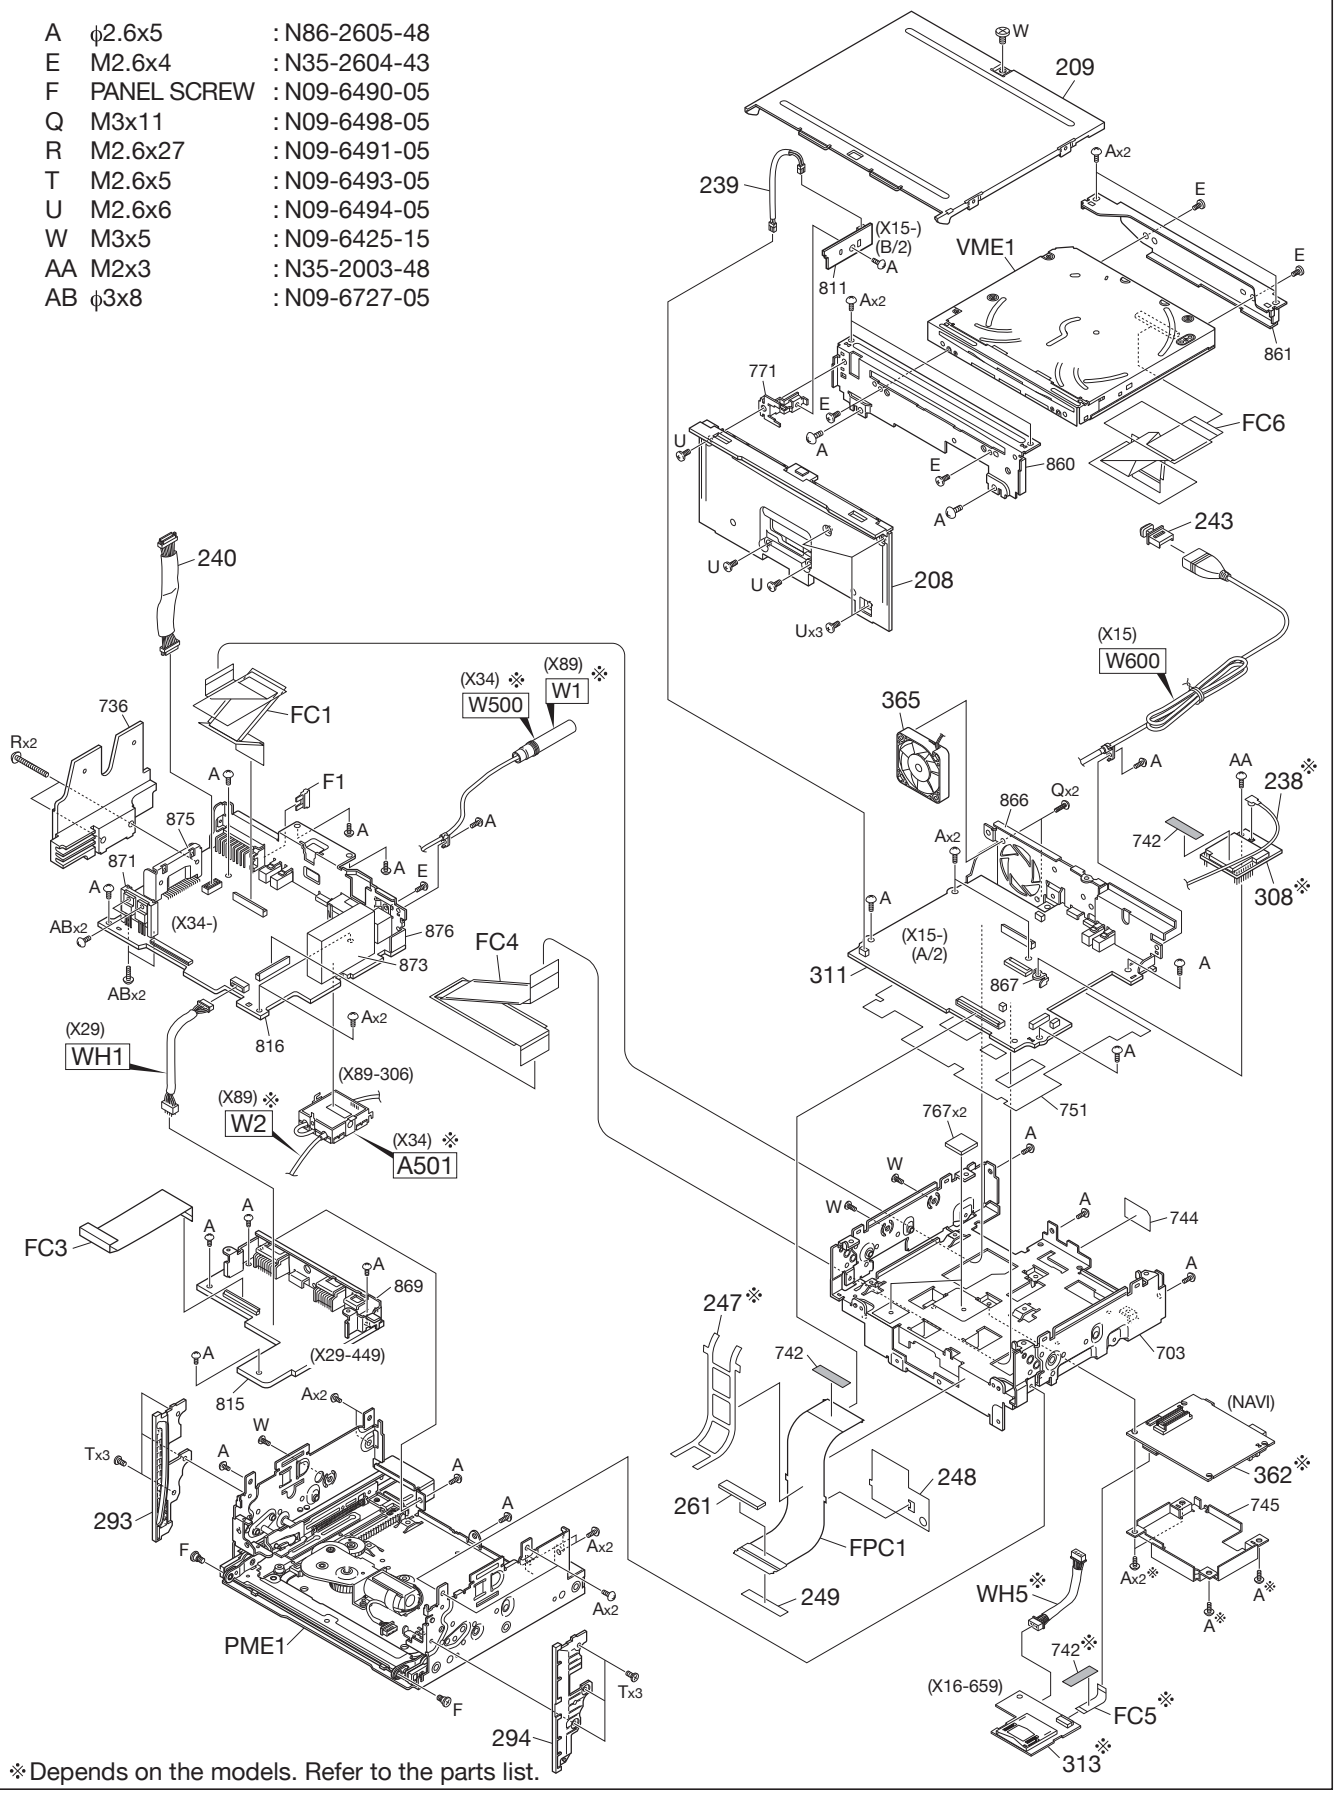

Parts with the exploded numbers larger than 700 are not supplied.

EXPLODED VIEW (PANEL)

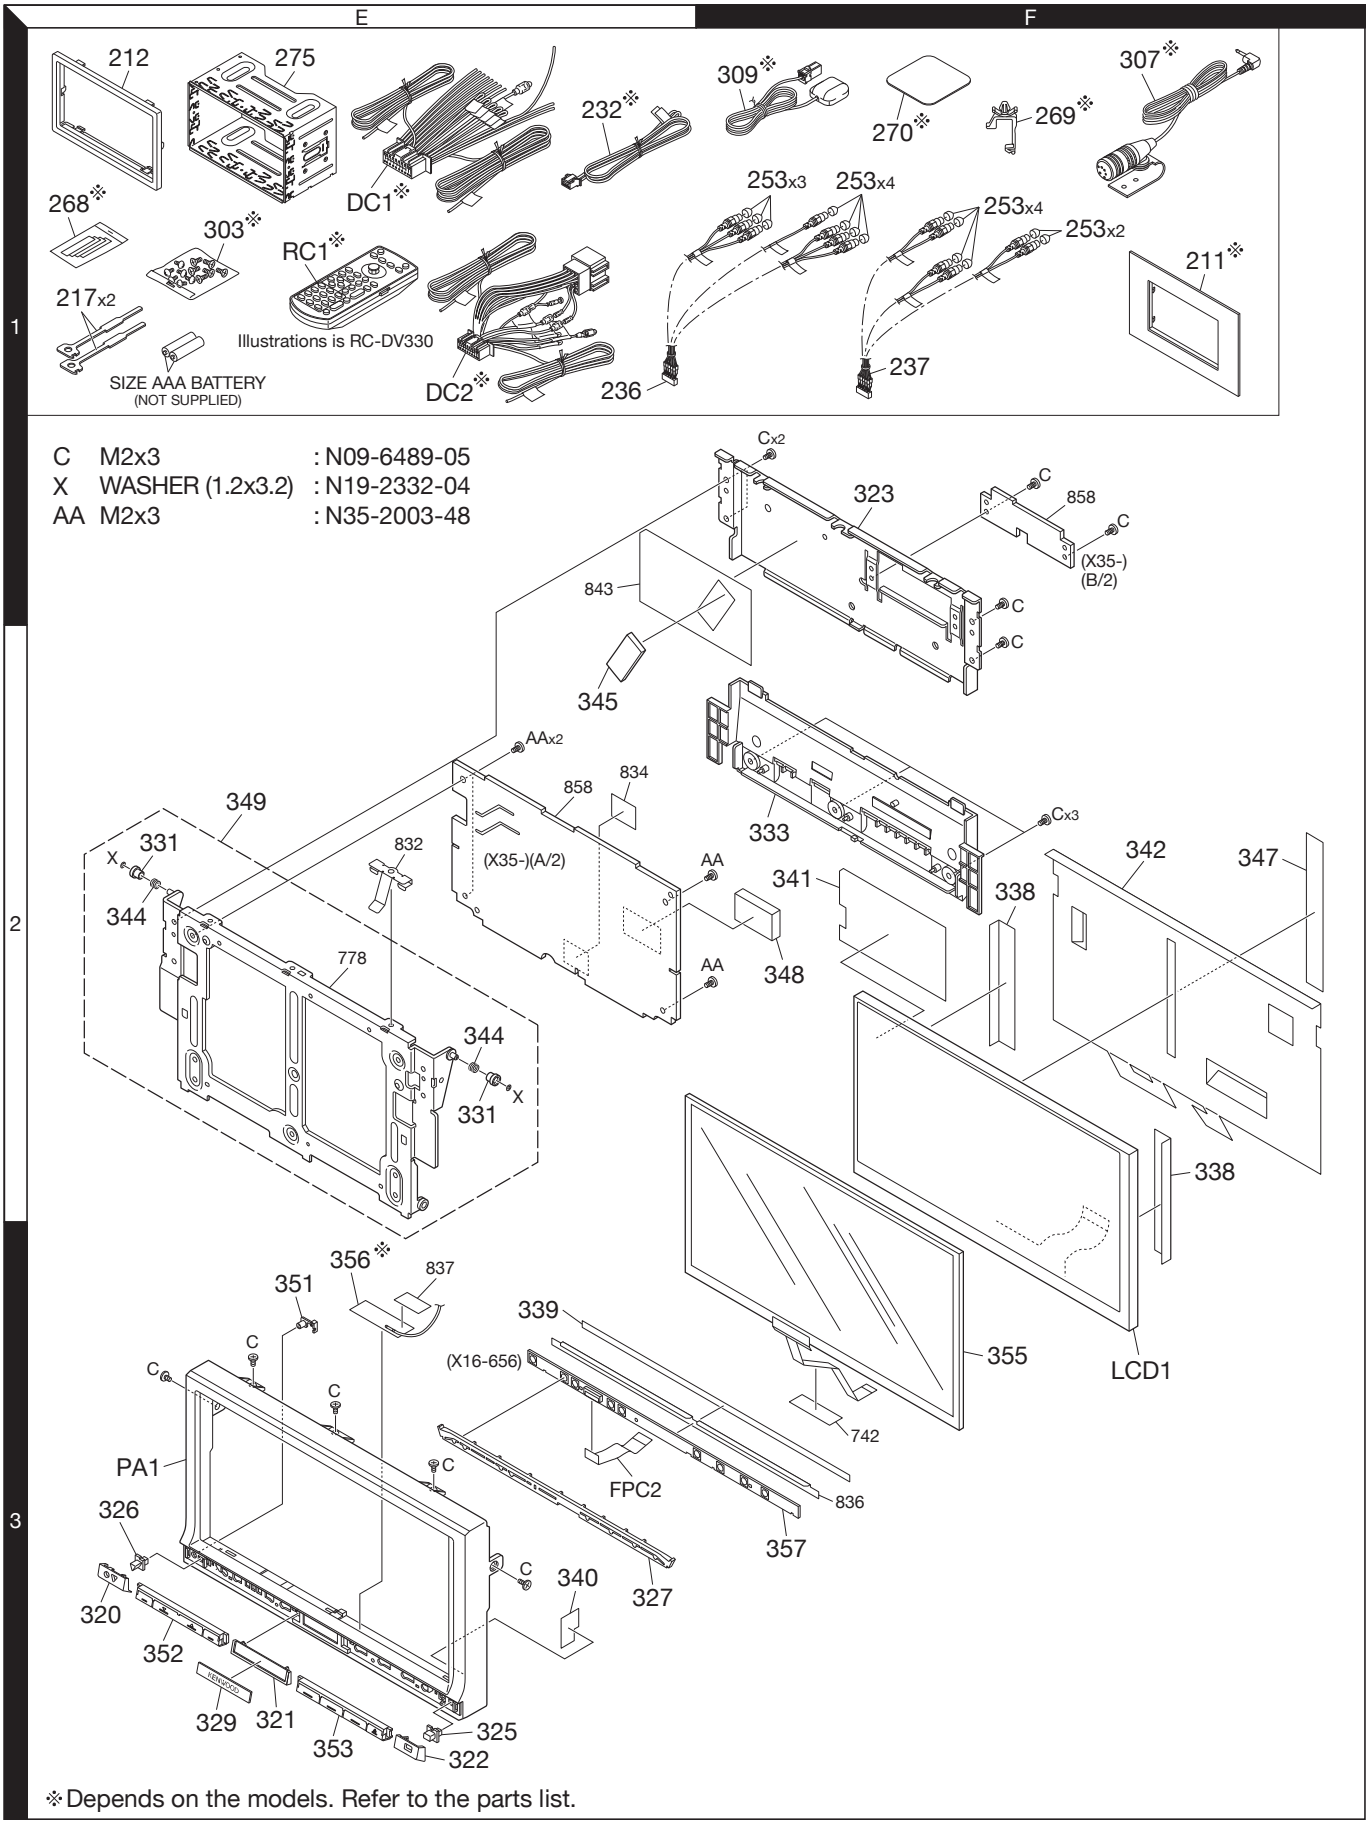

※Depends on the models. Refer to the parts list.

Parts with the exploded numbers larger than 700 are not supplied.

EXPLODED VIEW (DRIVE MECHANISM)

G	M2x2.5	: N09-6361-05
H	M1.7x3.7	: N09-6363-05
J	M2x2.5	: N09-6375-05
K	M2x3.5	: N09-6376-05
L	M2x2.5	: N09-6377-05
M	φ2x2	: N09-6378-05
N	M2.6x4	: N09-6379-05
Y	WASHER	: N19-2321-04

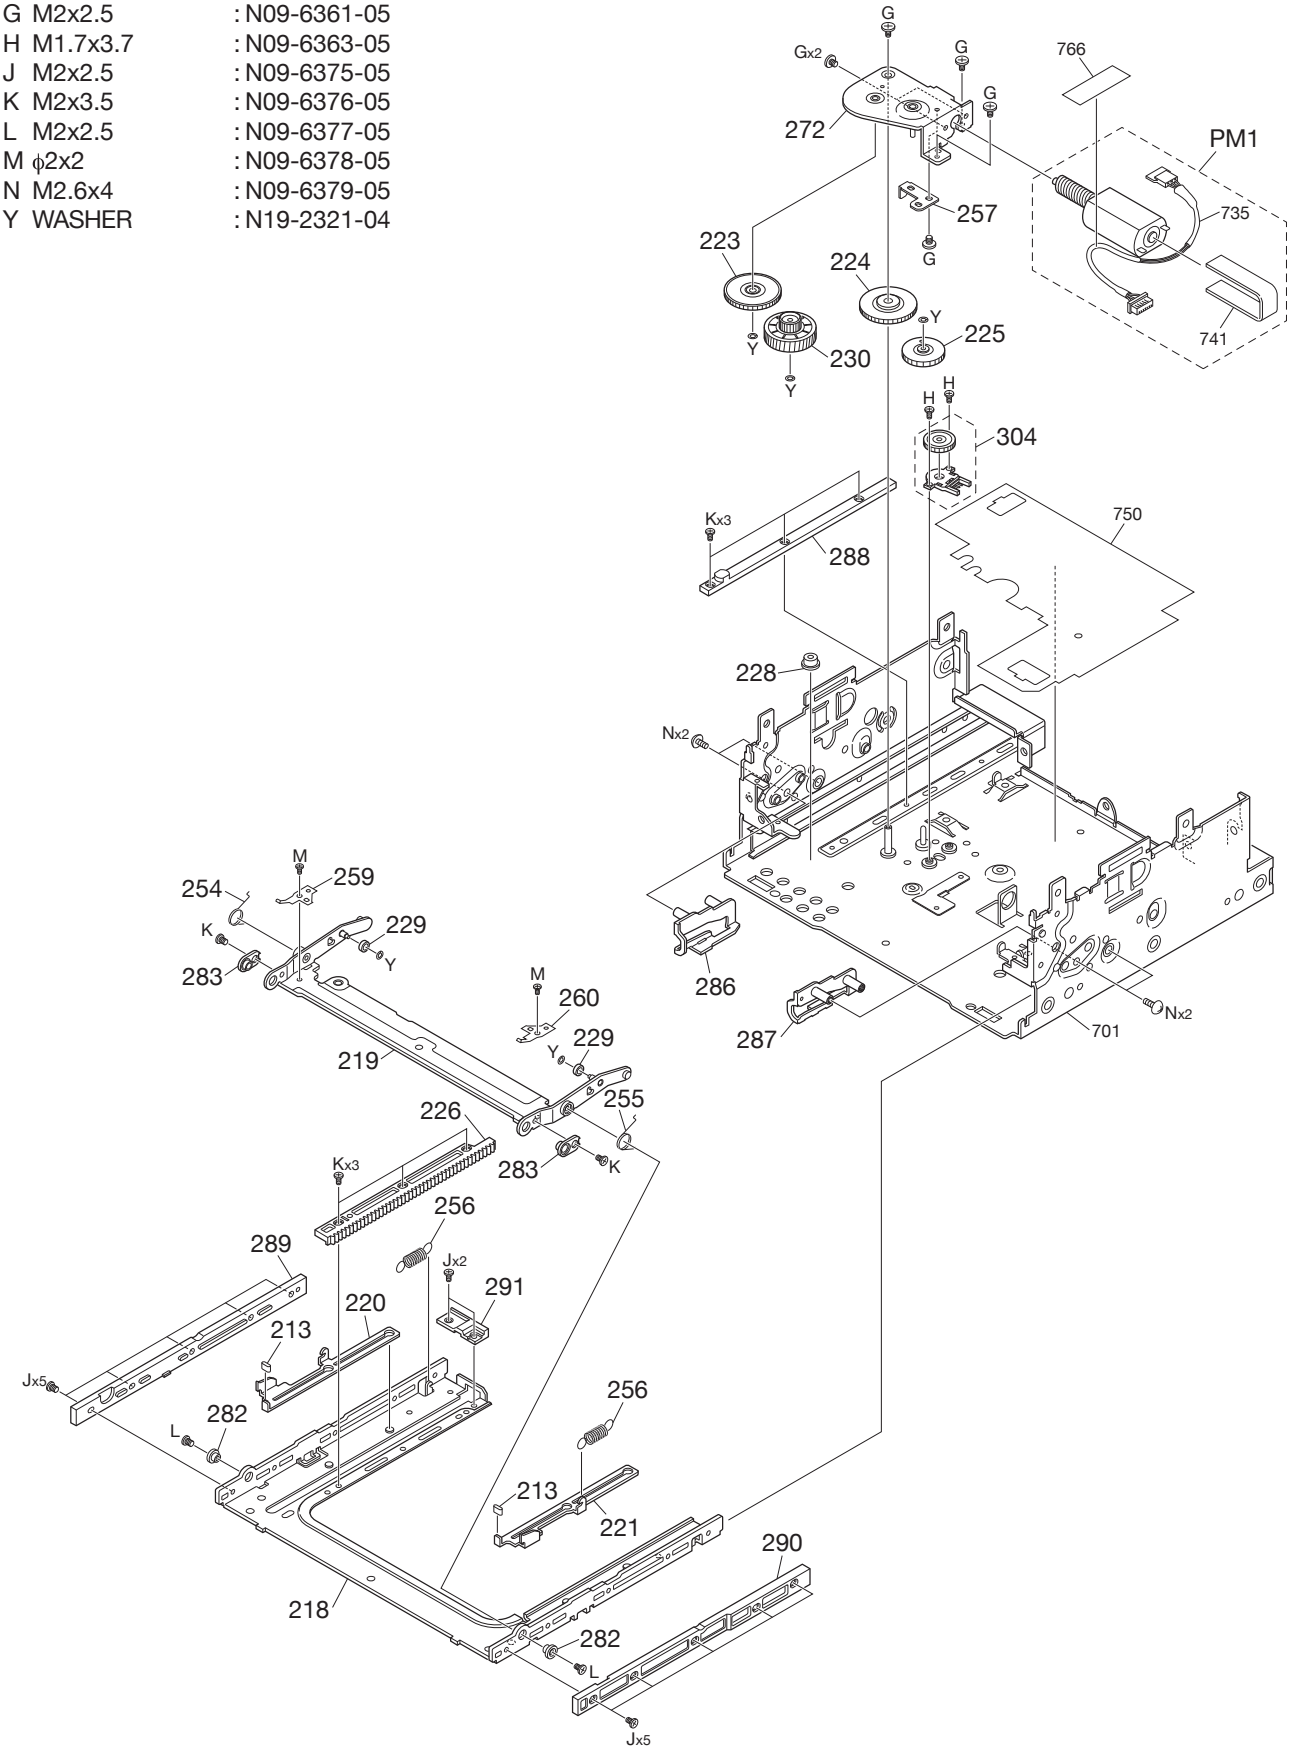

Parts with the exploded numbers larger than 700 are not supplied.

PARTS LIST

✻ New parts
Parts without **Parts No.** are not supplied.
Les articles non mentionnes dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

Ref. No.	Add	New	Parts No.	Description	Destination
DDX6034/6034M/6054/7034BT/7034BTM/714 DNX7000EX/7140/7240BT/7340BT					
208	1D	✻	A22-3223-01	SUB PANEL ASSY	M5X3
208	1D	✻	A22-3224-11	SUB PANEL ASSY	M1M2X1
208	1D	✻	A22-3238-11	SUB PANEL ASSY	K1K2
208	1D	✻	A22-3239-01	SUB PANEL ASSY	E1
208	1D	✻	A22-3240-11	SUB PANEL ASSY	K
208	1D	✻	A22-3242-01	SUB PANEL ASSY	Q1M3M4
208	1D	✻	A22-3242-01	SUB PANEL ASSY	X2
208	1D	✻	A22-3253-01	SUB PANEL ASSY	R1
209	1D		A52-0895-02	TOP PLATE	
PME1	3C		A10-5300-51	CHASSIS ASSY	
RC1	1E		A70-2082-15	REMOTE CONTROLLER AS (RC-DV330)	K1K2M5
RC1	1E		A70-2082-15	REMOTE CONTROLLER AS (RC-DV330)	X3E1
RC1	1E		A70-2083-15	REMOTE CONTROLLER AS (RC-DV340)	M4X2
RC1	1E		A70-2083-15	REMOTE CONTROLLER AS (RC-DV340)	R1M1M2
RC1	1E		A70-2083-15	REMOTE CONTROLLER AS (RC-DV340)	X1Q1M3
-		✻	B54-4714-00	INSTALLATION MANU (ENG.FRE.SPA)	KR1K1
-		✻	B54-4714-00	INSTALLATION MANU (ENG.FRE.SPA)	K2
-		✻	B54-4715-00	INSTALLATION MANUAL (POR.)	R1
-		✻	B54-4716-00	INSTALLATION MANUAL (ENG.)	Q1E1
-		✻	B54-4717-00	INSTALLATION MANUAL (RUS.UKR.)	Q1
-		✻	B54-4718-00	INSTALLATION MANUAL (ENG.)	M1M2X1
-		✻	B54-4718-00	INSTALLATION MANUAL (ENG.)	M3M4X2
-		✻	B54-4718-00	INSTALLATION MANUAL (ENG.)	M5X3
-		✻	B54-4719-00	INSTALLATION MANUAL (S-CHI.HOR.	M1M3M5
-		✻	B54-4720-00	INSTALLATION MANUA (F.G.D.I.S.P	E1
-		✻	B54-4721-00	INSTALLATION MANUAL (ARA.)	M2M4
-		✻	B64-4338-00	INSTRUCTION MANUAL (ENG.)	K1K2
-		✻	B64-4339-00	INSTRUCTION MANUAL (FRE.SPA.)	K1K2
-		✻	B64-4340-00	INSTRUCTION MANUAL (ENG.)	E1
-		✻	B64-4341-00	INSTRUCTION MANUA (FRE.GER.DUT)	E1
-		✻	B64-4342-00	INSTRUCTION MANUA (ITA.SPA.POR)	E1
-		✻	B64-4343-00	INSTRUCTION MANUAL (ENG.S-CHI.)	M5
-		✻	B64-4346-00	INSTRUCTION MANUAL (ENG.)	X3
-		✻	B64-4361-00	INSTRUCTION MANUAL (ENG.)	KR1K1
-		✻	B64-4361-00	INSTRUCTION MANUAL (ENG.)	K2
-		✻	B64-4362-00	INSTRUCTION MANUAL (FRE.)	KK1K2
-		✻	B64-4363-00	INSTRUCTION MANUAL (SPA.)	KR1K1
-		✻	B64-4363-00	INSTRUCTION MANUAL (SPA.)	K2
-		✻	B64-4364-00	INSTRUCTION MANUAL (POR.)	R1
-		✻	B64-4365-00	INSTRUCTION MANUAL (ENG.)	Q1E1
-		✻	B64-4366-00	INSTRUCTION MANUAL (FRE.)	E1
-		✻	B64-4367-00	INSTRUCTION MANUAL (GER.)	E1
-		✻	B64-4368-00	INSTRUCTION MANUAL (DUT.)	E1
-		✻	B64-4369-00	INSTRUCTION MANUAL (ITA.)	E1
-		✻	B64-4370-00	INSTRUCTION MANUAL (SPA.)	E1
-		✻	B64-4371-00	INSTRUCTION MANUAL (POR.)	E1
-		✻	B64-4372-00	INSTRUCTION MANUAL (RUS.)	Q1
-		✻	B64-4373-00	INSTRUCTION MANUAL (UKR.)	Q1
-		✻	B64-4374-00	INSTRUCTION MANUAL (ENG.)	M1M2X1
-		✻	B64-4374-00	INSTRUCTION MANUAL (ENG.)	M3M4X2
-		✻	B64-4374-00	INSTRUCTION MANUAL (ENG.)	M5X3
-		✻	B64-4375-00	INSTRUCTION MANUAL (S-CHI.)	M1M3M5
-		✻	B64-4376-00	INSTRUCTION MANUAL (KOR.)	M1M3

Ref. No.	Add	New	Parts No.	Description	Destination
-		✻	B64-4377-00	INSTRUCTION MANUAL (ARA.)	M2M4
211	1F		B07-3172-12	ESCUTCHEON	KM1M2
211	1F		B07-3172-12	ESCUTCHEON	K1K2M5
211	1F		B07-3172-12	ESCUTCHEON	M3M4X1
211	1F		B07-3172-12	ESCUTCHEON	X2R1Q1
211	1F		B07-3172-12	ESCUTCHEON	X3
212	1E		B07-3224-31	ESCUTCHEON	
213	3G		B09-0541-04	CAP	
217	1E		D10-7012-04	LEVER	
218	3G		D10-4895-22	SLIDER ASSY	
219	2G		D10-4897-13	ARM ASSY	
220	3G		D10-4899-03	LEVER (L)	
221	3G		D10-4900-03	LEVER (R)	
223	1H		D13-2394-04	GEAR	
224	1H		D13-2395-04	GEAR	
225	1H		D13-2396-04	GEAR	
226	3G		D13-2397-03	RACK (GEAR)	
228	2H		D14-1010-04	ROLLER	
229	2G		D14-1011-14	ROLLER	
230	1H		D19-0653-23	CLUTCH ASSY	
232	1F		E30-6786-05	CORD WITH PLUG (RELAY)	E1
232	1F		E30-6786-05	CORD WITH PLUG (RELAY)	KR1M1
232	1F		E30-6786-05	CORD WITH PLUG (RELAY)	K2M5X3
232	1F		E30-6786-05	CORD WITH PLUG (RELAY)	M2X1K1
236	1E	✻	E30-6899-05	CORD WITH PINPLUG (AV)	
237	1F	✻	E30-6898-05	CORD WITH PINPLUG (PRE)	
238	2D	✻	E30-6888-05	CORD WITH CONNECTOR	E1
238	2D	✻	E30-6888-05	CORD WITH CONNECTOR	KR1M1
238	2D	✻	E30-6888-05	CORD WITH CONNECTOR	K2M5X3
238	2D	✻	E30-6888-05	CORD WITH CONNECTOR	M2X1K1
239	1D		E39-0915-05+	WIRING HARNESS	
240	1C	✻	E39-1079-05	WIRING HARNESS	
DC1	1E		E30-6881-15	DC CORD	KR1M1
DC1	1E		E30-6881-15	DC CORD	K2M5X3
DC1	1E		E30-6881-15	DC CORD	M2X1M3
DC1	1E		E30-6881-15	DC CORD	M4X2K1
DC2	1E		E30-6796-05	DC CORD (ISO)	Q1E1
FC1	2C	✻	E39-1074-05	FLAT CABLE	
FC3	3C		E39-1024-05	FLAT CABLE	
FC4	2C	✻	E39-1073-05	FLAT CABLE	
FC6	1D	✻	E39-1075-05	FLAT CABLE	
WH5	3D	✻	E39-1078-05	WIRING HARNESS	M1M2X1
243	1D		F09-2929-04	CAP	
247	3D		F09-2972-04	SHEET	E1
247	3D		F09-2972-04	SHEET	KR1M1
247	3D		F09-2972-04	SHEET	K2M5X3
247	3D		F09-2972-04	SHEET	M2X1K1
248	3D	✻	F12-0978-04	SHIELDING SHEET	
249	2D	✻	F12-0979-04	SHIELDING SHEET	
253	1F		F29-0626-04	INSULATING COVER	
⚠ F1	2C		F52-0007-05	FUSE (MINI BLADE TYPE) 15A	
254	2G		G01-3288-04	TORSION COIL SPRING	
255	2G		G01-3289-04	TORSION COIL SPRING	

M1: DDX7034BT **M2**: DDX7034BTM **M3**: DDX6034 **M4**: DDX6034M **M5**: DNX7340BT (Other Areas)
X1: DDX7034BT **X2**: DDX6034 **X3**: DNX7340BT (Australia) **R1**: DDX7034BT (Latin America)
K: DDX714 **K1**: DNX7140 **K2**: DNX7000EX (North America)
E1: DNX7240BT (Europe) **Q1**: DDX6054 (Russian)

⚠Indicates safety critical components.

PARTS LIST

DDX6034/6034M/6054/7034BT/7034BTM/714
DNX7000EX/7140/7240BT/7340BT

Ref. No.	Add	New	Parts No.	Description	Destination
256	3G		G01-3290-04	EXTENSION SPRING	
257	1H		G02-1539-04	FLAT SPRING	
259	2G		G02-1544-04	FLAT SPRING	
260	2G		G02-1545-04	FLAT SPRING	
261	3D	✻	G11-3799-04	CUSHION	
-		✻	H54-4560-03	ITEM CARTON CASE	K1
-		✻	H54-4561-13	ITEM CARTON CASE	K2
-		✻	H54-4562-03	ITEM CARTON CASE	E1
-		✻	H54-4563-03	ITEM CARTON CASE	M5X3
-		✻	H54-4565-03	ITEM CARTON CASE	K
-		✻	H54-4566-03	ITEM CARTON CASE	R1
-		✻	H54-4567-03	ITEM CARTON CASE	M1X1
-		✻	H54-4568-03	ITEM CARTON CASE	M2
-		✻	H54-4569-03	ITEM CARTON CASE	Q1
-		✻	H54-4570-03	ITEM CARTON CASE	M3X2
-		✻	H54-4571-03	ITEM CARTON CASE	M4
268	1E		H30-0595-04	ADHESIVE DOUBLE-COATED TAPE	KM1M2
268	1E		H30-0595-04	ADHESIVE DOUBLE-COATED TAPE	K1K2M5
268	1E		H30-0595-04	ADHESIVE DOUBLE-COATED TAPE	M3M4X1
268	1E		H30-0595-04	ADHESIVE DOUBLE-COATED TAPE	X2R1Q1
268	1E		H30-0595-04	ADHESIVE DOUBLE-COATED TAPE	X3
269	1F		J11-0660-05	CLAMPER	K1K2
270	1F		J21-9867-04	MOUNTING HARDWARE (GPS-ANT)	K1K2M5
270	1F		J21-9867-04	MOUNTING HARDWARE (GPS-ANT)	X3E1
272	1H		J22-0444-13	MOUNTING HARDWARE ASSY (MOTOR)	
275	1E		J22-0657-03	MOUNTING HARDWARE ASSY	
282	3G		J31-1075-14	COLLAR (ARM COLLAR)	
283	2G		J31-1077-04	COLLAR (PANEL COLLAR)	
286	2H		J90-1124-13	GUIDE ASSY	
287	2H		J90-1126-13	GUIDE ASSY	
288	2H		J90-1128-03	RAIL	
289	3G		J90-1129-23	RAIL	
290	3H		J90-1130-23	RAIL	
291	3G		J90-1131-03	GUIDE	
293	3C		J90-1160-01	RAIL	
294	3C		J90-1161-01	RAIL	
FPC1	3D	✻	J86-0057-05	FPC (LEAD FREE)	
303	1E		N99-1779-15	SCREW SET	KR1M1
303	1E		N99-1779-15	SCREW SET	K2M5X3
303	1E		N99-1779-15	SCREW SET	M2X1M3
303	1E		N99-1779-15	SCREW SET	M4X2K1
A	3C		N86-2605-48	BINDING HEAD TAPTITE SCREW	
AA	2E		N35-2003-48	BINDING HEAD MACHINE SCREW	E1
AA	2E		N35-2003-48	BINDING HEAD MACHINE SCREW	KR1M1
AA	2E		N35-2003-48	BINDING HEAD MACHINE SCREW	K2M5X3
AA	2E		N35-2003-48	BINDING HEAD MACHINE SCREW	M2X1K1
C	3E		N09-6489-05	MACHINE SCREW (M2.0X3.0)	
F	3C		N09-6490-05	STEPPED SCREW (PANEL SCREW)	
G	1H		N09-6361-05	MACHINE SCREW (M2X2.5)	
H	1H		N09-6363-05	MACHINE SCREW (M1.7X3.7)	
J	3G		N09-6375-05	MACHINE SCREW (M2X2.5)	
K	2G		N09-6376-05	MACHINE SCREW (M2X3.5)	
L	3G		N09-6377-05	MACHINE SCREW (M2X2.5)	
M	2G		N09-6378-05	TAPTITE SCREW (STITE 2X2)	
N	2H		N09-6379-05	MACHINE SCREW (M2.6X4 BIND)	
R	2C		N09-6491-05	MACHINE SCREW (M2.6X27)	
T	3C		N09-6493-05	MACHINE SCREW (M2.6X5)	
U	1D		N09-6494-05	MACHINE SCREW (M2.6X6)	
W	3C		N09-6425-15	MACHINE SCREW (M3.0X5)	
Y	1H		N19-2321-04	FLAT WASHER (1.6X4X0.25)	
304	1H		R31-0248-05	VARIABLE RESISTOR	
PM1	1H		T42-1322-24	MOTOR ASSY	
307	1F		W01-1718-05	MICROPHONE	E1
307	1F		W01-1718-05	MICROPHONE	KR1M1
307	1F		W01-1718-05	MICROPHONE	K2M5X3
307	1F		W01-1718-05	MICROPHONE	M2X1K1
308	2D	✻	W02-5360-05	ELECTRIC CIRCUIT MODULE (BT)	E1
308	2D	✻	W02-5360-05	ELECTRIC CIRCUIT MODULE (BT)	KR1M1
308	2D	✻	W02-5360-05	ELECTRIC CIRCUIT MODULE (BT)	K2M5X3
308	2D	✻	W02-5360-05	ELECTRIC CIRCUIT MODULE (BT)	M2X1K1
309	1F		W02-5305-05	ANTENNA MODULE (GPS)	K1K2M5
309	1F		W02-5305-05	ANTENNA MODULE (GPS)	X3E1
311	2D	✻	X15-1230-10	VIDEO CONTROL UNIT	K1
311	2D	✻	X15-1230-11	VIDEO CONTROL UNIT	K2
311	2D	✻	X15-1230-21	VIDEO CONTROL UNIT	M5
311	2D	✻	X15-1230-71	VIDEO CONTROL UNIT	X3
311	2D	✻	X15-1232-71	VIDEO CONTROL UNIT	E1
311	2D	✻	X15-1340-10	VIDEO CONTROL UNIT	K
311	2D	✻	X15-1340-21	VIDEO CONTROL UNIT	M1
311	2D	✻	X15-1340-22	VIDEO CONTROL UNIT	M2
311	2D	✻	X15-1340-23	VIDEO CONTROL UNIT	M3
311	2D	✻	X15-1340-24	VIDEO CONTROL UNIT	M4
311	2D	✻	X15-1340-71	VIDEO CONTROL UNIT	X1
311	2D	✻	X15-1340-72	VIDEO CONTROL UNIT	X2
311	2D	✻	X15-1343-21	VIDEO CONTROL UNIT	R1
311	2D	✻	X15-1343-81	VIDEO CONTROL UNIT	Q1
313	3D	✻	X16-6590-20	SUB-CIRCUIT UNIT	M1M2X1
313	3D	✻	X16-6590-21	SUB-CIRCUIT UNIT	M5X3

DISPLAY ASSY

Ref. No.	Add	New	Parts No.	Description	Destination
320	3E	✻	A21-6723-03	DRESSING PANEL	
321	3E	✻	A21-6724-03	DRESSING PANEL	
322	3E	✻	A21-6725-03	DRESSING PANEL	
323	1F	✻	A46-1893-02	REAR COVER	
PA1	3E	✻	A64-4834-11	PANEL	K1
PA1	3E	✻	A64-4835-11	PANEL	K2
PA1	3E	✻	A64-4836-11	PANEL	E1
PA1	3E	✻	A64-4837-11	PANEL	M5X3
PA1	3E	✻	A64-4839-11	PANEL	K
PA1	3E	✻	A64-4840-11	PANEL	R1
PA1	3E	✻	A64-4841-11	PANEL	M1M2X1
PA1	3E	✻	A64-4843-11	PANEL	M3M4X2
PA1	3E	✻	A64-4924-11	PANEL	Q1
325	3E	✻	B10-5266-04	FRONT GLASS	
326	3E	✻	B10-5267-04	FRONT GLASS	
327	3E	✻	B11-2031-13	OPTICAL DIFFUSER	

M1: DDX7034BT **M2**: DDX7034BTM **M3**: DDX6034 **M4**: DDX6034M **M5**: DNX7340BT (Other Areas)
X1: DDX7034BT **X2**: DDX6034 **X3**: DNX7340BT (Australia) **R1**: DDX7034BT (Latin America)
K: DDX714 **K1**: DNX7140 **K2**: DNX7000EX (North America)
E1: DNX7240BT (Europe) **Q1**: DDX6054 (Russian)

⚠Indicates safety critical compo nents.

PARTS LIST

DISPLAY ASSY

Ref. No.	Add	New	Parts No.	Description	Destination
329	3E	✻	B43-1548-04	BADGE	
LCD1	3F	✻	B38-1215-05	LCD	
331	2E		D14-1024-04	ROLLER	
333	2F	✻	F07-2208-02	COVER	
338	2F	✻	F09-3017-04	SHEET	
339	3E	✻	F09-3025-04	SHEET	
340	3E	✻	F12-0976-04	SHIELDING SHEET	
341	2F		F20-2433-04	INSULATING SHEET	
342	2F	✻	F20-2487-03	INSULATING SHEET	
344	2E		G01-4659-04	COMPRESSION SPRING	
345	2E		G16-1688-04	SHEET	
347	2F	✻	G16-1749-04	SHEET	
348	2F	✻	G16-1755-04	SHEET	
349	2E	✻	J22-0869-02	MOUNTING HARDWARE ASSY	
FPC2	3E	✻	J86-0060-05	FPC (LEAD FREE)	
351	3E	✻	K24-5011-04	PUSH KNOB (RESET)	
352	3E	✻	K25-1960-13	KNOB ASSY (ATT,VOL,AUD)	
353	3E	✻	K25-1962-13	KNOB ASSY (NAV,SRC,TEL,EJ)	K1K2M5
353	3E	✻	K25-1962-13	KNOB ASSY (NAV,SRC,TEL,EJ)	X3E1
353	3E	✻	K25-1966-13	KNOB ASSY (TOP,SRC,TEL,EJ)	KM1M2
353	3E	✻	K25-1966-13	KNOB ASSY (TOP,SRC,TEL,EJ)	M3M4X1
353	3E	✻	K25-1966-13	KNOB ASSY (TOP,SRC,TEL,EJ)	X2R1Q1
AA	2E		N35-2003-48	BINDING HEAD MACHINE SCREW	
C	1F		N09-6489-05	MACHINE SCREW (M2.0X3.0)	
X	2E		N19-2332-04	FLAT WASHER (1.2X3.2X0.25)	
355	3F	✻	S79-0868-05	SWITCH ASSY (TOUCH PANEL)	
356	3E	✻	T90-0596-05	ANTENNA ASSY (BT)	E1
356	3E	✻	T90-0596-05	ANTENNA ASSY (BT)	KR1M1
356	3E	✻	T90-0596-05	ANTENNA ASSY (BT)	K2M5X3
356	3E	✻	T90-0596-05	ANTENNA ASSY (BT)	M2X1K1
357	3F	✻	X16-6560-10	SWITCH UNIT	
DVD PLAYER ASSY					
E	1D		N35-2604-43	BINDING HEAD MACHINE SCREW	
VME1	1D		X92-6400-00	DVD MECHANISM ASSY (DVS-8220W)	
CONTROL ASSY (NAVI)					
FC5	3D		E39-1026-05	FLAT CABLE	M5X3
362	3D	✻	W02-5351-05	NAVIGATION MODULE (K)	K1K2
362	3D	✻	W02-5352-05	NAVIGATION MODULE (E)	E1
362	3D	✻	W02-5353-05	NAVIGATION MODULE (M)	M5X3
VIDEO CONTROL UNIT (X15-123x/134x-xx)					
D91			B30-1767-05	LED	
C1			C90-5670-05	ELECTRO 2200UF 16WV	
C2 ,3			CK73GB1H104K	CHIP C 0.10UF K	
C6			CK73GB1H103K	CHIP C 0.010UF K	
C7			CK73GB1H104K	CHIP C 0.10UF K	
C8			C93-1470-05	CHIP C 15000PF K	E1
C8			C93-1470-05	CHIP C 15000PF K	M2Q1M4

Ref. No.	Add	New	Parts No.	Description	Destination
C10			CK73GB1A105K	CHIP C 1.0UF K	
C11			CE32BQ1C221M	CHIP EL 220UF 16WV	
C12			CK73FB0J106K	CHIP C 10UF K	
C13 -16			CK73GB1A105K	CHIP C 1.0UF K	
C18			CK73GB1H104K	CHIP C 0.10UF K	
C19			CE32BQ1E101M	CHIP EL 100UF 25WV	
C20			CK73GB1H103K	CHIP C 0.010UF K	
C21			CK73GB1H104K	CHIP C 0.10UF K	
C51			CK73HB1A104K	CHIP C 0.10UF K	
C52			CK73HB1E103K	CHIP C 0.010UF K	
C53			CK73GB1H103K	CHIP C 0.010UF K	
C54			CK73FB0J106K	CHIP C 10UF K	
C55			CE32BJ1C100M	CHIP EL 10UF 16WV	
C56			CK73GB1H102K	CHIP C 1000PF K	
C61			CK73HB1E103K	CHIP C 0.010UF K	
C62			CK73HB1A104K	CHIP C 0.10UF K	
C101,102			CK73GB1H104K	CHIP C 0.10UF K	
C103,104			CK73GB1H103K	CHIP C 0.010UF K	
C105,106			CK73GB1H102K	CHIP C 1000PF K	
C109-112			CK73EB1E106K	CHIP C 10UF K	
C113,114			CK73GB1H104K	CHIP C 0.10UF K	
C115,116			CK73GB1H103K	CHIP C 0.010UF K	
C117,118			CK73GB1H104K	CHIP C 0.10UF K	
C119-122			CK73GB1H102K	CHIP C 1000PF K	
C123			CE32AV1A121M	CHIP EL 120UF 10WV	
C124			CE32AV0J221M	CHIP EL 220UF 6.3WV	
C125,126			CK73GB1H104K	CHIP C 0.10UF K	
C127,128			CK73GB1H103K	CHIP C 0.010UF K	
C131,132			CC73GCH1H221J	CHIP C 220PF J	
C133			CK73GB1H473K	CHIP C 0.047UF K	
C134			CK73GB1H103K	CHIP C 0.010UF K	
C135			CK73GB1H223K	CHIP C 0.022UF K	
C136			CK73GB1H103K	CHIP C 0.010UF K	
C137			CC73GCH1H101J	CHIP C 100PF J	
C138			CC73GCH1H470J	CHIP C 47PF J	
C139			CK73GB1H103K	CHIP C 0.010UF K	
C140			CK73GB1H102K	CHIP C 1000PF K	
C141			CC73GCH1H101J	CHIP C 100PF J	
C142,143			CK73GB1H102K	CHIP C 1000PF K	
C144			CK73EB1E225K	CHIP C 2.2UF K	
C145			CK73GB1H104K	CHIP C 0.10UF K	
C146			CK73FB0J106K	CHIP C 10UF K	
C147			CK73GB1H104K	CHIP C 0.10UF K	
C148			CK73HB1E103K	CHIP C 0.010UF K	
C151,152			CK73GB1H104K	CHIP C 0.10UF K	
C153,154			CK73GB1H103K	CHIP C 0.010UF K	
C155,156			CK73GB1H102K	CHIP C 1000PF K	
C159-162			CK73EB1E106K	CHIP C 10UF K	
C163,164			CK73GB1H104K	CHIP C 0.10UF K	
C165,166			CK73GB1H103K	CHIP C 0.010UF K	
C167,168			CK73GB1H104K	CHIP C 0.10UF K	
C169-172			CK73GB1H102K	CHIP C 1000PF K	
C173			CE32AV0J221M	CHIP EL 220UF 6.3WV	
C174			CE32AV0G331M	CHIP EL 330UF 4.0WV	
C175,176			CK73GB1H104K	CHIP C 0.10UF K	

M1: DDX7034BT **M2**: DDX7034BTM **M3**: DDX6034 **M4**: DDX6034M **M5**: DNX7340BT (Other Areas)
X1: DDX7034BT **X2**: DDX6034 **X3**: DNX7340BT (Australia) **R1**: DDX7034BT (Latin America)
K: DDX714 **K1**: DNX7140 **K2**: DNX7000EX (North America)
E1: DNX7240BT (Europe) **Q1**: DDX6054 (Russian)

⚠Indicates safety critical components.

PARTS LIST

VIDEO CONTROL UNIT (X15-123x/134x-xx)

Ref. No.	Add	New	Parts No.	Description			Destination
C177,178			CK73GB1H103K	CHIP C	0.010UF	K	
C179,180			CC73GCH1H101J	CHIP C	100PF	J	
C181-183			CK73GB1H103K	CHIP C	0.010UF	K	
C184			CK73GB1H223K	CHIP C	0.022UF	K	
C185-188			CC73GCH1H470J	CHIP C	47PF	J	
C189			CK73GB1H103K	CHIP C	0.010UF	K	
C190			CK73GB1H102K	CHIP C	1000PF	K	
C191			CC73GCH1H101J	CHIP C	100PF	J	
C192			CK73FB0J106K	CHIP C	10UF	K	
C193			CK73GB1H104K	CHIP C	0.10UF	K	
C194			CK73EB1E225K	CHIP C	2.2UF	K	
C195			CK73GB1H104K	CHIP C	0.10UF	K	
C201			CK73FB0J106K	CHIP C	10UF	K	
C202			CK73GB1H222K	CHIP C	2200PF	K	
C203			CK73FB0J106K	CHIP C	10UF	K	
C204			CK73GB1H222K	CHIP C	2200PF	K	
C205			CC73HCH1H150J	CHIP C	15PF	J	
C206			CC73HCH1H120J	CHIP C	12PF	J	
C207			CK73HB1A104K	CHIP C	0.10UF	K	
C208,209			CC73HCH1H080D	CHIP C	8.0PF	D	
C210			CK73HB1A104K	CHIP C	0.10UF	K	
C212-215			CK73HB1A104K	CHIP C	0.10UF	K	
C216,217			CK73HB1E103K	CHIP C	0.010UF	K	
C218,219			CC73HCH1H101J	CHIP C	100PF	J	
C221			CC73HCH1H101J	CHIP C	100PF	J	
C222			CK73HB1A104K	CHIP C	0.10UF	K	
C223			CK73HB1H102K	CHIP C	1000PF	K	
C224			CC73HCH1H101J	CHIP C	100PF	J	
C225,226			CK73HB0J105K	CHIP C	1.0UF	K	
C227,228			CK73HB1E103K	CHIP C	0.010UF	K	
C231			CK73HB1E103K	CHIP C	0.010UF	K	
C235-237			CK73HB1A104K	CHIP C	0.10UF	K	
C238			CK73HB1E103K	CHIP C	0.010UF	K	
C240			CK73HB1A104K	CHIP C	0.10UF	K	KR1Q1
C240			CK73HB1A104K	CHIP C	0.10UF	K	K1K2
C240			CK73HB1A104K	CHIP C	0.10UF	K	M3M4X2
C241,242			CK73HB1E103K	CHIP C	0.010UF	K	
C244			CK73HB1E103K	CHIP C	0.010UF	K	K1K2M5
C244			CK73HB1E103K	CHIP C	0.010UF	K	X3E1
C301			CK73GB1H103K	CHIP C	0.010UF	K	
C302			CK73GB1H104K	CHIP C	0.10UF	K	
C304			CK73GB1H103K	CHIP C	0.010UF	K	
C305			CK73GB1H104K	CHIP C	0.10UF	K	
C308			CK73GB1H471K	CHIP C	470PF	K	
C309			CK73EB1E106K	CHIP C	10UF	K	
C310			CK73GB1H471K	CHIP C	470PF	K	
C311			CK73EB1E106K	CHIP C	10UF	K	
C312-314			CK73HB1A104K	CHIP C	0.10UF	K	
C403			CK73GB1H104K	CHIP C	0.10UF	K	K1K2M5
C403			CK73GB1H104K	CHIP C	0.10UF	K	X3E1
C404			CK73GB1H103K	CHIP C	0.010UF	K	K1K2M5
C404			CK73GB1H103K	CHIP C	0.010UF	K	X3E1
C405,406			CK73GB1A474K	CHIP C	0.47UF	K	
C407			CE32BJ0J470M	CHIP EL	47UF	6.3WV	
C411			CK73HB1E103K	CHIP C	0.010UF	K	

Ref. No.	Add	New	Parts No.	Description			Destination
C421			CK73FB0J106K	CHIP C	10UF	K	E1
C421			CK73FB0J106K	CHIP C	10UF	K	KR1M1
C421			CK73FB0J106K	CHIP C	10UF	K	K2M5X3
C421			CK73FB0J106K	CHIP C	10UF	K	M2X1K1
C422			CK73HB1A104K	CHIP C	0.10UF	K	E1
C422			CK73HB1A104K	CHIP C	0.10UF	K	KR1M1
C422			CK73HB1A104K	CHIP C	0.10UF	K	K2M5X3
C422			CK73HB1A104K	CHIP C	0.10UF	K	M2X1K1
C423			CC73HCH1H101J	CHIP C	100PF	J	E1
C423			CC73HCH1H101J	CHIP C	100PF	J	KR1M1
C423			CC73HCH1H101J	CHIP C	100PF	J	K2M5X3
C423			CC73HCH1H101J	CHIP C	100PF	J	M2X1K1
C424			CK73HB1A104K	CHIP C	0.10UF	K	E1
C424			CK73HB1A104K	CHIP C	0.10UF	K	KR1M1
C424			CK73HB1A104K	CHIP C	0.10UF	K	K2M5X3
C424			CK73HB1A104K	CHIP C	0.10UF	K	M2X1K1
C425			CE32BJ1C100M	CHIP EL	10UF	16WV	E1
C425			CE32BJ1C100M	CHIP EL	10UF	16WV	KR1M1
C425			CE32BJ1C100M	CHIP EL	10UF	16WV	K2M5X3
C425			CE32BJ1C100M	CHIP EL	10UF	16WV	M2X1K1
C426			CK73HB1A104K	CHIP C	0.10UF	K	E1
C426			CK73HB1A104K	CHIP C	0.10UF	K	KR1M1
C426			CK73HB1A104K	CHIP C	0.10UF	K	K2M5X3
C426			CK73HB1A104K	CHIP C	0.10UF	K	M2X1K1
C428			CK73FB0J106K	CHIP C	10UF	K	E1
C428			CK73FB0J106K	CHIP C	10UF	K	KR1M1
C428			CK73FB0J106K	CHIP C	10UF	K	K2M5X3
C428			CK73FB0J106K	CHIP C	10UF	K	M2X1K1
C431-434			CK73GB1A105K	CHIP C	1.0UF	K	E1
C431-434			CK73GB1A105K	CHIP C	1.0UF	K	KR1M1
C431-434			CK73GB1A105K	CHIP C	1.0UF	K	K2M5X3
C431-434			CK73GB1A105K	CHIP C	1.0UF	K	M2X1K1
C435-438			CC73GCH1H100D	CHIP C	10PF	D	E1
C435-438			CC73GCH1H100D	CHIP C	10PF	D	KR1M1
C435-438			CC73GCH1H100D	CHIP C	10PF	D	K2M5X3
C435-438			CC73GCH1H100D	CHIP C	10PF	D	M2X1K1
C491			CK73FB1A225K	CHIP C	2.2UF	K	
C500-503			CK73GB1A105K	CHIP C	1.0UF	K	
C504			CK73HB1A104K	CHIP C	0.10UF	K	
C505,506			CK73FB0J106K	CHIP C	10UF	K	
C507			CK73HB1A104K	CHIP C	0.10UF	K	
C509			CK73HB1A104K	CHIP C	0.10UF	K	
C510,511			CK73EB1A106K	CHIP C	10UF	K	
C512,513			CK73HB1H222K	CHIP C	2200PF	K	
C514			CK73HB1A104K	CHIP C	0.10UF	K	
C515			CK73FB0J106K	CHIP C	10UF	K	
C516			CK73GB1A105K	CHIP C	1.0UF	K	
C517			CK73HB1H221K	CHIP C	220PF	K	
C518			CK73HB1A104K	CHIP C	0.10UF	K	
C519			CK73HB1H221K	CHIP C	220PF	K	
C520			CK73HB1E103K	CHIP C	0.010UF	K	
C522			CK73GB1A105K	CHIP C	1.0UF	K	
C524			CK73FB0J106K	CHIP C	10UF	K	
C525			CK73HB1A104K	CHIP C	0.10UF	K	
C526			CK73GB1A105K	CHIP C	1.0UF	K	

M1: DDX7034BT **M2**: DDX7034BTM **M3**: DDX6034 **M4**: DDX6034M **M5**: DNX7340BT (Other Areas)
X1: DDX7034BT **X2**: DDX6034 **X3**: DNX7340BT (Australia) **R1**: DDX7034BT (Latin America)
K: DDX714 **K1**: DNX7140 **K2**: DNX7000EX (North America)
E1: DNX7240BT (Europe) **Q1**: DDX6054 (Russian)

⚠Indicates safety critical compo nents.

PARTS LIST

VIDEO CONTROL UNIT (X15-123x/134x-xx)

Ref. No.	Add	New	Parts No.	Description			Destination
C528			CK73HB1A104K	CHIP C	0.10UF	K	
C529			CK73FB0J106K	CHIP C	10UF	K	
C530			CK73HB1A104K	CHIP C	0.10UF	K	
C531,532			CK73FB0J106K	CHIP C	10UF	K	
C534			CK73FB0J106K	CHIP C	10UF	K	
C535			CK73HB1A104K	CHIP C	0.10UF	K	
C536			CK73FB0J106K	CHIP C	10UF	K	M1M2X1
C537			CK73HB0J105K	CHIP C	1.0UF	K	
C538			CK73FB0J106K	CHIP C	10UF	K	M1M2X1
C540			CK73HB1A104K	CHIP C	0.10UF	K	
C541			CK73HB0J105K	CHIP C	1.0UF	K	
C542			CK73HB1A104K	CHIP C	0.10UF	K	
C543			CK73HB0J105K	CHIP C	1.0UF	K	
C544			CK73HB1A104K	CHIP C	0.10UF	K	
C550,551			CK73HB1E103K	CHIP C	0.010UF	K	
C580-582			CK73FB0J226M	CHIP C	22UF	M	
C600,601			CC73HCH1H100D	CHIP C	10PF	D	
C602-604			CK73HB1A104K	CHIP C	0.10UF	K	
C605			CK73FB0J106K	CHIP C	10UF	K	
C606			CK73HB1H102K	CHIP C	1000PF	K	
C607			CC73HCH1H101J	CHIP C	100PF	J	
C608			CK73HB1A104K	CHIP C	0.10UF	K	
C609			CK73GB0J475K	CHIP C	4.7UF	K	
C610			CK73HB1A104K	CHIP C	0.10UF	K	
C612			CE32BF1C221M	CHIP EL	220UF	16WV	
C615,616			CK73HB1A104K	CHIP C	0.10UF	K	
C620			CK73FB0J106K	CHIP C	10UF	K	
C622			CK73HB1A104K	CHIP C	0.10UF	K	
C624,625			CK73HB1A104K	CHIP C	0.10UF	K	
C701			CK73HB1E103K	CHIP C	0.010UF	K	
C704			CK73FB0J106K	CHIP C	10UF	K	
C707			CK73FB0J106K	CHIP C	10UF	K	
C708			CE32BQ0J560M	CHIP EL	56UF	6.3WV	
C709			CK73FB0J106K	CHIP C	10UF	K	
C712-714			CK73HB1A104K	CHIP C	0.10UF	K	
C718,719			CK73HB1E103K	CHIP C	0.010UF	K	
C800-813			CK73HB1A104K	CHIP C	0.10UF	K	
C814			CK73FB0J106K	CHIP C	10UF	K	
C815,816			CC73HCH1H470J	CHIP C	47PF	J	
C817,818			CK73HB1A104K	CHIP C	0.10UF	K	
C819			CK73FB0J106K	CHIP C	10UF	K	
C820,821			CK73HB1A104K	CHIP C	0.10UF	K	
C822			CK73HB1E103K	CHIP C	0.010UF	K	
C823			CK73FB0J106K	CHIP C	10UF	K	
C824			CK73HB1A104K	CHIP C	0.10UF	K	
C825			CC73HCH1H150J	CHIP C	15PF	J	
C826			CK73HB1E103K	CHIP C	0.010UF	K	
C827			CK73HB1A104K	CHIP C	0.10UF	K	
C828			CC73HCH1H150J	CHIP C	15PF	J	
C829-838			CK73HB1A104K	CHIP C	0.10UF	K	
C839,840			CC73HCH1H100D	CHIP C	10PF	D	
C841-860			CK73HB1A104K	CHIP C	0.10UF	K	
C870			CK73FB0J106K	CHIP C	10UF	K	
C900,901			CK73HB1A104K	CHIP C	0.10UF	K	
C920-935			CK73HB1A104K	CHIP C	0.10UF	K	

Ref. No.	Add	New	Parts No.	Description			Destination
C936,937			CK73FB0J106K	CHIP C	10UF	K	
C938-941			CK73HB1A104K	CHIP C	0.10UF	K	
C942			CK73FB0J106K	CHIP C	10UF	K	
C943			CK73GB0J225K	CHIP C	2.2UF	K	
C944-950			CK73HB1A104K	CHIP C	0.10UF	K	
C951			CK73HB0J105K	CHIP C	1.0UF	K	
C952			CK73HB1A104K	CHIP C	0.10UF	K	
C953			CK73FB0J106K	CHIP C	10UF	K	
C954			CE32BQ0J331M	CHIP EL	330UF	6.3WV	
C955			CK73HB1A104K	CHIP C	0.10UF	K	
C956			CK73FB0J106K	CHIP C	10UF	K	
C957-965			CK73HB1A104K	CHIP C	0.10UF	K	
C966,967			CK73HB0J105K	CHIP C	1.0UF	K	
C968			CK73HB1A104K	CHIP C	0.10UF	K	
CN1			E41-2961-05	PIN ASSY			
CN2 ,3			E41-2979-05	FLAT CABLE CONNECTOR			
CN4			E41-2359-05	PIN ASSY			
CN5			E41-2248-05	PIN ASSY			
CN7			E41-1476-05	PIN ASSY			
CN8			E41-1486-05	PIN ASSY			
CN301			E41-2985-05	FLAT CABLE CONNECTOR			
CN401		✻	E41-3061-05	PIN ASSY			K1K2M5
CN401		✻	E41-3061-05	PIN ASSY			X3E1
CN402		✻	E41-3064-05	SOCKET FOR PIN ASSY			E1
CN402		✻	E41-3064-05	SOCKET FOR PIN ASSY			KR1M1
CN402		✻	E41-3064-05	SOCKET FOR PIN ASSY			K2M5X3
CN402		✻	E41-3064-05	SOCKET FOR PIN ASSY			M2X1K1
CN403		✻	E41-3063-05	SOCKET FOR PIN ASSY			E1
CN403		✻	E41-3063-05	SOCKET FOR PIN ASSY			KR1M1
CN403		✻	E41-3063-05	SOCKET FOR PIN ASSY			K2M5X3
CN403		✻	E41-3063-05	SOCKET FOR PIN ASSY			M2X1K1
CN404			E41-2735-05	PIN ASSY			
CN600		✻	E41-2948-05	PIN ASSY			M1M2X1
CN700			E41-2979-05	FLAT CABLE CONNECTOR			
J401			E56-0809-15	CYLINDRICAL RECEPTACLE			KM1M2
J401			E56-0809-15	CYLINDRICAL RECEPTACLE			M3M4X1
J401			E56-0809-15	CYLINDRICAL RECEPTACLE			X2R1Q1
J402			E11-0625-05	PHONE JACK (LGY6502-0900)			E1
J402			E11-0625-05	PHONE JACK (LGY6502-0900)			KR1M1
J402			E11-0625-05	PHONE JACK (LGY6502-0900)			K2M5X3
J402			E11-0625-05	PHONE JACK (LGY6502-0900)			M2X1K1
J500			E11-0625-05	PHONE JACK (LGY6502-0900)			
W600	2D	✻	E30-6897-05	CORD WITH PLUG (USB)			
365	2D		F09-2923-05	FAN			
F301		✻	F53-0369-05	FUSE 1.6A			
F302		✻	F53-0371-05	FUSE 2.5A			
⚠ L1			L33-2358-05	CHOKE COIL			
L103			L33-2457-05	SMALL FIXED INDUCTOR			
L104		✻	L33-2519-05	CHOKE COIL			
L107		✻	L33-2519-05	CHOKE COIL			
L108			L33-2467-05	SMALL FIXED INDUCTOR			
L201,202			L92-0332-05	CHIP FERRITE			
L301,302			L33-2457-05	SMALL FIXED INDUCTOR			
L401			L92-0373-05	CHIP FERRITE			E1

M1: DDX7034BT **M2**: DDX7034BTM **M3**: DDX6034 **M4**: DDX6034M **M5**: DNX7340BT (Other Areas)
X1: DDX7034BT **X2**: DDX6034 **X3**: DNX7340BT (Australia) **R1**: DDX7034BT (Latin America)
K: DDX714 **K1**: DNX7140 **K2**: DNX7000EX (North America)
E1: DNX7240BT (Europe) **Q1**: DDX6054 (Russian)

⚠Indicates safety critical components.

PARTS LIST

VIDEO CONTROL UNIT (X15-123x/134x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination
L401			L92-0373-05	CHIP FERRITE	KR1M1
L401			L92-0373-05	CHIP FERRITE	K2M5X3
L401			L92-0373-05	CHIP FERRITE	M2X1K1
L500			L41-1005-33	SMALL FIXED INDUCTOR (10U)	
L503			L92-0373-05	CHIP FERRITE	
L600			L92-0319-05	CHIP FERRITE	
L604			L92-0641-05	FERRITE CORE	
L606			L92-0641-05	FERRITE CORE	
L610			L92-0319-05	CHIP FERRITE	
L700			L92-0373-05	CHIP FERRITE	
L701			L33-2457-05	SMALL FIXED INDUCTOR	
L800-809			L92-0373-05	CHIP FERRITE	
L920-922			L92-0373-05	CHIP FERRITE	
X201			L77-2975-05	CRYSTAL RESONATOR (11.0592MHZ)	
X202			L77-2921-15	CRYSTAL RESONATOR (32.768KHZ, 1	
X800			L77-2951-05	CRYSTAL RESONATOR (12.00MHZ)	
X801			L77-2886-05	CRYSTAL RESONATOR (27.00MHZ)	
X803		✻	L77-3813-05	CRYSTAL RESONATOR (3225 24MHZ)	
Q	2D		N09-6498-05	MACHINE SCREW (M3.0X11)	
CP201-205			RK74HB1J101J	CHIP-COM 100 J 1/16W	
CP701			RK74HB1J101J	CHIP-COM 100 J 1/16W	
CP702			RK74HB1J103J	CHIP-COM 10K J 1/16W	
CP704			RK74HB1J101J	CHIP-COM 100 J 1/16W	
CP705			RK74HB1J103J	CHIP-COM 10K J 1/16W	
CP706-709			RK74HB1J101J	CHIP-COM 100 J 1/16W	
CP800-804			RK74HB1J220J	CHIP-COM 22 J 1/16W	
CP920-927			RK74HB1J220J	CHIP-COM 22 J 1/16W	
CP929-933			RK74HB1J220J	CHIP-COM 22 J 1/16W	
CP934,935			RK74HB1J331J	CHIP-COM 330 J 1/16W	
CP936-939			RK74HB1J220J	CHIP-COM 22 J 1/16W	
CP940-944			RK74HB1J331J	CHIP-COM 330 J 1/16W	
CP945-948			RK74HB1J220J	CHIP-COM 22 J 1/16W	
CP949-955			RK74HB1J331J	CHIP-COM 330 J 1/16W	
R1			RK73GH2A104D	CHIP R 100K D 1/10W	
R2			RK73GH2A513D	CHIP R 51K D 1/10W	
R3			RK73GH2A333D	CHIP R 33K D 1/10W	
R4 ,5			RK73GB2A224J	CHIP R 220K J 1/10W	
R6			RK73GH2A113D	CHIP R 11K D 1/10W	
R7			RK73GH2A104D	CHIP R 100K D 1/10W	
R8			RK73GH2A683D	CHIP R 68K D 1/10W	
R9 ,10			RK73GH2A334D	CHIP R 330K D 1/10W	
R11 ,12			RK73GB2A224J	CHIP R 220K J 1/10W	
R13			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R14			RK73GB2A224J	CHIP R 220K J 1/10W	
R17			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R21 ,22			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R26 ,27			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R31			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R32			RK73GB2A473J	CHIP R 47K J 1/10W	
R33			RK73GB2A152J	CHIP R 1.5K J 1/10W	
R34 ,35			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R41			RK73GB2A823J	CHIP R 82K J 1/10W	
R42			RK73GB2A103J	CHIP R 10K J 1/10W	
R43			RK73GB2A224J	CHIP R 220K J 1/10W	

Ref. No.	Add	New	Parts No.	Description	Destination
R44			RK73GB2A333J	CHIP R 33K J 1/10W	
R45			RK73GB2A224J	CHIP R 220K J 1/10W	
R46			RK73GB2A473J	CHIP R 47K J 1/10W	
R52			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R59			RK73HB1J101J	CHIP R 100 J 1/16W	
R61 -63			RK73HB1J101J	CHIP R 100 J 1/16W	
R64 -66			RK73HB1J000J	CHIP R 0.0 J 1/16W	M1M2X1
R64 -66			RK73HB1J000J	CHIP R 0.0 J 1/16W	Q1M3M4
R64 -66			RK73HB1J000J	CHIP R 0.0 J 1/16W	X2E1M5
R64 -66			RK73HB1J000J	CHIP R 0.0 J 1/16W	X3
R65 ,66			RK73HB1J000J	CHIP R 0.0 J 1/16W	KR1K1
R65 ,66			RK73HB1J000J	CHIP R 0.0 J 1/16W	K2
R67 ,68			RK73HB1J103J	CHIP R 10K J 1/16W	
R69			RK73HB1J100J	CHIP R 10 J 1/16W	
R71			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R81 -86			RK73GB2A101J	CHIP R 100 J 1/10W	
R91 -93			RK73GB2A101J	CHIP R 100 J 1/10W	
R95			RK73GB2A471J	CHIP R 470 J 1/10W	
R101,102			RK73GB2A100J	CHIP R 10 J 1/10W	
R103,104			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R105,106			RK73EB2E100J	CHIP R 10 J 1/4W	
R107		✻	R92-5255-05	CHIP R 0.1 1/3W	
R108		✻	R92-5244-05	CHIP R 0.039 1/3W	
R109		✻	R92-5255-05	CHIP R 0.1 1/3W	
R110		✻	R92-5244-05	CHIP R 0.039 1/3W	
R111,112			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R113			RK73GB2A333J	CHIP R 33K J 1/10W	
R114			RK73GB2A683J	CHIP R 68K J 1/10W	
R115			RK73GH2A561D	CHIP R 560 D 1/10W	
R116			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R117			RK73GH2A561D	CHIP R 560 D 1/10W	
R118			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R119,120			RK73GH2A561D	CHIP R 560 D 1/10W	
R121,122			RK73GH2A333D	CHIP R 33K D 1/10W	
R123			RK73GH2A622D	CHIP R 6.2K D 1/10W	
R124			RK73GH2A562D	CHIP R 5.6K D 1/10W	
R125			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R126			RK73GH2A681D	CHIP R 680 D 1/10W	
R127			RK73GH2A912D	CHIP R 9.1K D 1/10W	
R128			RK73GB2A103J	CHIP R 10K J 1/10W	
R129			RK73FB2B2R2J	CHIP R 2.2 J 1/8W	
R130			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R135			RK73HB1J104J	CHIP R 100K J 1/16W	
R136			RK73GB2A100J	CHIP R 10 J 1/10W	
R141,142			RK73GB2A100J	CHIP R 10 J 1/10W	
R143,144			RK73GB2A2R2J	CHIP R 2.2 J 1/10W	
R145,146			RK73EB2E100J	CHIP R 10 J 1/4W	
R147-150		✻	R92-5244-05	CHIP R 0.039 1/3W	
R151-154			RK73GB2A100J	CHIP R 10 J 1/10W	
R155,156			RK73GH2A333D	CHIP R 33K D 1/10W	
R157			RK73GH2A562D	CHIP R 5.6K D 1/10W	
R158			RK73GH2A103D	CHIP R 10K D 1/10W	
R159			RK73GH2A511D	CHIP R 510 D 1/10W	
R160			RK73GH2A561D	CHIP R 560 D 1/10W	
R161,162			RK73GB2A000J	CHIP R 0.0 J 1/10W	

M1: DDX7034BT **M2**: DDX7034BTM **M3**: DDX6034 **M4**: DDX6034M **M5**: DNX7340BT (Other Areas)
X1: DDX7034BT **X2**: DDX6034 **X3**: DNX7340BT (Australia) **R1**: DDX7034BT (Latin America)
K: DDX714 **K1**: DNX7140 **K2**: DNX7000EX (North America)
E1: DNX7240BT (Europe) **Q1**: DDX6054 (Russian)

⚠Indicates safety critical compo nents.

PARTS LIST

VIDEO CONTROL UNIT (X15-123x/134x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination
R163			RK73GB2A203J	CHIP R 20K J 1/10W	
R164			RK73GB2A153J	CHIP R 15K J 1/10W	
R165			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R166			RK73FB2B2R2J	CHIP R 2.2 J 1/8W	
R167			RK73GB2A103J	CHIP R 10K J 1/10W	
R168			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R169,170			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R181-188			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R201			RK73HB1J101J	CHIP R 100 J 1/16W	
R202			RK73HB1J222J	CHIP R 2.2K J 1/16W	
R203			RK73HB1J101J	CHIP R 100 J 1/16W	
R204			RK73HB1J104J	CHIP R 100K J 1/16W	
R205			RK73HB1J101J	CHIP R 100 J 1/16W	
R206			RK73HB1J104J	CHIP R 100K J 1/16W	
R207			RK73HB1J101J	CHIP R 100 J 1/16W	Q1M3M4
R207			RK73HB1J101J	CHIP R 100 J 1/16W	X2
R207,208			RK73HB1J101J	CHIP R 100 J 1/16W	E1
R207,208			RK73HB1J101J	CHIP R 100 J 1/16W	KR1M1
R207,208			RK73HB1J101J	CHIP R 100 J 1/16W	K2M5X3
R207,208			RK73HB1J101J	CHIP R 100 J 1/16W	M2X1K1
R209			RK73HB1J472J	CHIP R 4.7K J 1/16W	E1
R209			RK73HB1J472J	CHIP R 4.7K J 1/16W	KR1M1
R209			RK73HB1J472J	CHIP R 4.7K J 1/16W	K2M5X3
R209			RK73HB1J472J	CHIP R 4.7K J 1/16W	M2X1K1
R210			RK73HB1J101J	CHIP R 100 J 1/16W	E1
R210			RK73HB1J101J	CHIP R 100 J 1/16W	KR1M1
R210			RK73HB1J101J	CHIP R 100 J 1/16W	K2M5X3
R210			RK73HB1J101J	CHIP R 100 J 1/16W	M2X1K1
R211			RK73HB1J472J	CHIP R 4.7K J 1/16W	E1
R211			RK73HB1J472J	CHIP R 4.7K J 1/16W	KR1M1
R211			RK73HB1J472J	CHIP R 4.7K J 1/16W	K2M5X3
R211			RK73HB1J472J	CHIP R 4.7K J 1/16W	M2X1K1
R215			RK73HB1J101J	CHIP R 100 J 1/16W	
R216			RK73HB1J104J	CHIP R 100K J 1/16W	
R217			RK73HB1J101J	CHIP R 100 J 1/16W	
R218			RK73HB1J104J	CHIP R 100K J 1/16W	
R219			RK73HB1J101J	CHIP R 100 J 1/16W	
R220			RK73HB1J104J	CHIP R 100K J 1/16W	
R221			RK73HB1J473J	CHIP R 47K J 1/16W	
R222			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R223			RK73GB2A101J	CHIP R 100 J 1/10W	
R224			RK73HB1J561J	CHIP R 560 J 1/16W	
R226			RK73HB1J473J	CHIP R 47K J 1/16W	
R227,228			RK73HB1J101J	CHIP R 100 J 1/16W	
R229			RK73HB1J104J	CHIP R 100K J 1/16W	
R230-232			RK73HB1J101J	CHIP R 100 J 1/16W	
R233			RK73HB1J104J	CHIP R 100K J 1/16W	
R234			RK73HB1J101J	CHIP R 100 J 1/16W	
R235			RK73HB1J104J	CHIP R 100K J 1/16W	
R236			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R237			RK73HB1J101J	CHIP R 100 J 1/16W	
R239-243			RK73HB1J101J	CHIP R 100 J 1/16W	
R244			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R245			RK73HB1J101J	CHIP R 100 J 1/16W	
R246			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R247-249			RK73HB1J104J	CHIP R 100K J 1/16W	
R250			RK73HB1J103J	CHIP R 10K J 1/16W	
R251			RK73HB1J104J	CHIP R 100K J 1/16W	KR1Q1
R251			RK73HB1J104J	CHIP R 100K J 1/16W	K1K2E1
R251			RK73HB1J104J	CHIP R 100K J 1/16W	M3M4X2
R252			RK73HB1J104J	CHIP R 100K J 1/16W	M1M2X1
R252			RK73HB1J104J	CHIP R 100K J 1/16W	M5X3
R253			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R255,256			RK73HB1J101J	CHIP R 100 J 1/16W	
R257			RK73HB1J104J	CHIP R 100K J 1/16W	E1
R257			RK73HB1J104J	CHIP R 100K J 1/16W	KR1M1
R257			RK73HB1J104J	CHIP R 100K J 1/16W	K2M5X3
R257			RK73HB1J104J	CHIP R 100K J 1/16W	M2X1K1
R257,258			RK73HB1J104J	CHIP R 100K J 1/16W	Q1M3M4
R257,258			RK73HB1J104J	CHIP R 100K J 1/16W	X2
R259			RK73HB1J104J	CHIP R 100K J 1/16W	E1
R259			RK73HB1J104J	CHIP R 100K J 1/16W	KR1M1
R259			RK73HB1J104J	CHIP R 100K J 1/16W	K2M5X3
R259			RK73HB1J104J	CHIP R 100K J 1/16W	M2X1K1
R260			RK73HB1J103J	CHIP R 10K J 1/16W	
R261			RK73HB1J104J	CHIP R 100K J 1/16W	Q1M3M4
R261			RK73HB1J104J	CHIP R 100K J 1/16W	X2
R262			RK73HB1J104J	CHIP R 100K J 1/16W	E1
R262			RK73HB1J104J	CHIP R 100K J 1/16W	KR1M1
R262			RK73HB1J104J	CHIP R 100K J 1/16W	K2M5X3
R262			RK73HB1J104J	CHIP R 100K J 1/16W	M2X1K1
R263			RK73HB1J101J	CHIP R 100 J 1/16W	
R264			RK73HB1J104J	CHIP R 100K J 1/16W	
R265			RK73HB1J101J	CHIP R 100 J 1/16W	
R267			RK73HB1J104J	CHIP R 100K J 1/16W	
R269			RK73HB1J104J	CHIP R 100K J 1/16W	E1
R269			RK73HB1J104J	CHIP R 100K J 1/16W	KR1M1
R269			RK73HB1J104J	CHIP R 100K J 1/16W	K2M5X3
R269			RK73HB1J104J	CHIP R 100K J 1/16W	M2X1K1
R269,270			RK73HB1J104J	CHIP R 100K J 1/16W	Q1M3M4
R269,270			RK73HB1J104J	CHIP R 100K J 1/16W	X2
R271,272			RK73HB1J104J	CHIP R 100K J 1/16W	E1
R271,272			RK73HB1J104J	CHIP R 100K J 1/16W	KR1M1
R271,272			RK73HB1J104J	CHIP R 100K J 1/16W	K2M5X3
R271,272			RK73HB1J104J	CHIP R 100K J 1/16W	M2X1K1
R272			RK73HB1J104J	CHIP R 100K J 1/16W	Q1M3M4
R272			RK73HB1J104J	CHIP R 100K J 1/16W	X2
R274			RK73HB1J101J	CHIP R 100 J 1/16W	
R275			RK73HB1J104J	CHIP R 100K J 1/16W	KR1Q1
R275			RK73HB1J104J	CHIP R 100K J 1/16W	K1K2
R275			RK73HB1J104J	CHIP R 100K J 1/16W	M3M4X2
R275,276			RK73HB1J104J	CHIP R 100K J 1/16W	E1M5X3
R275,276			RK73HB1J104J	CHIP R 100K J 1/16W	M1M2X1
R277			RK73HB1J104J	CHIP R 100K J 1/16W	KR1Q1
R277			RK73HB1J104J	CHIP R 100K J 1/16W	K1K2
R277			RK73HB1J104J	CHIP R 100K J 1/16W	M3M4X2
R279			RK73HB1J104J	CHIP R 100K J 1/16W	
R280			RK73HB1J101J	CHIP R 100 J 1/16W	
R281			RK73HB1J104J	CHIP R 100K J 1/16W	
R282			RK73HB1J101J	CHIP R 100 J 1/16W	

M1: DDX7034BT **M2**: DDX7034BTM **M3**: DDX6034 **M4**: DDX6034M **M5**: DNX7340BT (Other Areas)
X1: DDX7034BT **X2**: DDX6034 **X3**: DNX7340BT (Australia) **R1**: DDX7034BT (Latin America)
K: DDX714 **K1**: DNX7140 **K2**: DNX7000EX (North America)
E1: DNX7240BT (Europe) **Q1**: DDX6054 (Russian)

⚠Indicates safety critical components.

PARTS LIST

VIDEO CONTROL UNIT (X15-123x/134x-xx)

Ref. No.	Add	New	Parts No.	Description				Destination
R283			RK73HB1J104J	CHIP R	100K	J	1/16W	
R285			RK73HB1J101J	CHIP R	100	J	1/16W	
R286			RK73HB1J104J	CHIP R	100K	J	1/16W	
R288			RK73HB1J104J	CHIP R	100K	J	1/16W	
R289			RK73HB1J101J	CHIP R	100	J	1/16W	
R292			RK73HB1J101J	CHIP R	100	J	1/16W	
R293			RK73HB1J104J	CHIP R	100K	J	1/16W	
R294			RK73HB1J101J	CHIP R	100	J	1/16W	
R295			RK73HB1J104J	CHIP R	100K	J	1/16W	
R296			RK73HB1J101J	CHIP R	100	J	1/16W	
R297			RK73HB1J104J	CHIP R	100K	J	1/16W	
R298			RK73HB1J101J	CHIP R	100	J	1/16W	
R299			RK73GB2A103J	CHIP R	10K	J	1/10W	M4X2E1
R299			RK73GB2A103J	CHIP R	10K	J	1/10W	M5X3
R299			RK73GB2A103J	CHIP R	10K	J	1/10W	R1M1M2
R299			RK73GB2A103J	CHIP R	10K	J	1/10W	X1Q1M3
R300			RK73GB2A103J	CHIP R	10K	J	1/10W	KK1K2
R300			RK73GB2A153J	CHIP R	15K	J	1/10W	M1M2M3
R300			RK73GB2A153J	CHIP R	15K	J	1/10W	M4M5
R300			RK73GB2A242J	CHIP R	2.4K	J	1/10W	E1
R300			RK73GB2A393J	CHIP R	39K	J	1/10W	X1X2X3
R300			RK73GB2A682J	CHIP R	6.8K	J	1/10W	Q1
R301			RK73HB1J103J	CHIP R	10K	J	1/16W	K1K2M5
R301			RK73HB1J103J	CHIP R	10K	J	1/16W	X3E1
R302			RK73HB1J103J	CHIP R	10K	J	1/16W	KM1M2
R302			RK73HB1J103J	CHIP R	10K	J	1/16W	M3M4X1
R302			RK73HB1J103J	CHIP R	10K	J	1/16W	X2R1Q1
R303			RK73HB1J123J	CHIP R	12K	J	1/16W	
R306			RK73HB1J223J	CHIP R	22K	J	1/16W	
R307			RK73HB1J101J	CHIP R	100	J	1/16W	
R308			RK73HB1J104J	CHIP R	100K	J	1/16W	
R309,310			RK73HB1J101J	CHIP R	100	J	1/16W	
R313			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R314			RK73HB1J222J	CHIP R	2.2K	J	1/16W	
R316			RK73HB1J222J	CHIP R	2.2K	J	1/16W	
R318			RK73HB1J101J	CHIP R	100	J	1/16W	
R321			RK73HB1J101J	CHIP R	100	J	1/16W	
R322			RK73HB1J222J	CHIP R	2.2K	J	1/16W	
R323			RK73HB1J104J	CHIP R	100K	J	1/16W	
R325			RK73HB1J101J	CHIP R	100	J	1/16W	
R326			RK73HB1J103J	CHIP R	10K	J	1/16W	
R327			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R328			RK73GH2A101D	CHIP R	100	D	1/10W	
R329			RK73HB1J104J	CHIP R	100K	J	1/16W	KM1M2
R329			RK73HB1J104J	CHIP R	100K	J	1/16W	K1E1M5
R329			RK73HB1J104J	CHIP R	100K	J	1/16W	M3M4X1
R329			RK73HB1J104J	CHIP R	100K	J	1/16W	X2R1Q1
R329			RK73HB1J104J	CHIP R	100K	J	1/16W	X3
R330			RK73HB1J104J	CHIP R	100K	J	1/16W	K2
R331,332			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R333,334			RK73HB1J101J	CHIP R	100	J	1/16W	
R337,338			RK73HB1J103J	CHIP R	10K	J	1/16W	
R339,340			RK73HB1J473J	CHIP R	47K	J	1/16W	
R341,342			RK73HB1J103J	CHIP R	10K	J	1/16W	
R346			RK73HB1J472J	CHIP R	4.7K	J	1/16W	

Ref. No.	Add	New	Parts No.	Description				Destination
R348			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R349			RK73GH2A101D	CHIP R	100	D	1/10W	
R350			RK73HB1J101J	CHIP R	100	J	1/16W	
R351			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R352			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R353			RK73HB1J473J	CHIP R	47K	J	1/16W	
R355			RK73HB1J103J	CHIP R	10K	J	1/16W	KR1Q1
R355			RK73HB1J103J	CHIP R	10K	J	1/16W	K1K2
R355			RK73HB1J103J	CHIP R	10K	J	1/16W	M3M4X2
R356			RK73HB1J000J	CHIP R	0.0	J	1/16W	KM1M2
R356			RK73HB1J000J	CHIP R	0.0	J	1/16W	M3M4X1
R356			RK73HB1J000J	CHIP R	0.0	J	1/16W	X2R1Q1
R357			RK73HB1J104J	CHIP R	100K	J	1/16W	K1K2M5
R357			RK73HB1J104J	CHIP R	100K	J	1/16W	X3E1
R361-364			RK73HB1J101J	CHIP R	100	J	1/16W	
R366-374			RK73HB1J101J	CHIP R	100	J	1/16W	
R375,376			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R377-379			RK73HB1J101J	CHIP R	100	J	1/16W	
R381			RK73HB1J104J	CHIP R	100K	J	1/16W	
R382			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R383-385			RK73HB1J104J	CHIP R	100K	J	1/16W	
R386			RK73FB2B000J	CHIP R	0.0	J	1/8W	
R388			RK73HB1J101J	CHIP R	100	J	1/16W	
R389			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R390-392			RK73HB1J470J	CHIP R	47	J	1/16W	K1K2M5
R390-392			RK73HB1J470J	CHIP R	47	J	1/16W	X3E1
R390-394			RK73HB1J000J	CHIP R	0.0	J	1/16W	KM1M2
R390-394			RK73HB1J000J	CHIP R	0.0	J	1/16W	M3M4X1
R390-394			RK73HB1J000J	CHIP R	0.0	J	1/16W	X2R1Q1
R393,394			RK73HB1J000J	CHIP R	0.0	J	1/16W	K1K2M5
R393,394			RK73HB1J000J	CHIP R	0.0	J	1/16W	X3E1
R395,396			RK73HB1J104J	CHIP R	100K	J	1/16W	
R401,402			RK73HB1J100J	CHIP R	10	J	1/16W	K1K2M5
R401,402			RK73HB1J100J	CHIP R	10	J	1/16W	X3E1
R403			RK73HB1J101J	CHIP R	100	J	1/16W	K1K2M5
R403			RK73HB1J101J	CHIP R	100	J	1/16W	X3E1
R404			RK73HB1J000J	CHIP R	0.0	J	1/16W	K1K2M5
R404			RK73HB1J000J	CHIP R	0.0	J	1/16W	X3E1
R405			RK73HB1J102J	CHIP R	1.0K	J	1/16W	K1K2M5
R405			RK73HB1J102J	CHIP R	1.0K	J	1/16W	X3E1
R406			RK73HB1J511J	CHIP R	510	J	1/16W	K1K2M5
R406			RK73HB1J511J	CHIP R	510	J	1/16W	X3E1
R407-409			RK73HB1J000J	CHIP R	0.0	J	1/16W	K1K2M5
R407-409			RK73HB1J000J	CHIP R	0.0	J	1/16W	X3E1
R410,411			RK73HB1J100J	CHIP R	10	J	1/16W	K1K2M5
R410,411			RK73HB1J100J	CHIP R	10	J	1/16W	X3E1
R412			RK73HB1J4R7J	CHIP R	4.7	J	1/16W	K1K2M5
R412			RK73HB1J4R7J	CHIP R	4.7	J	1/16W	X3E1
R413,414			RK73FB2B100J	CHIP R	10	J	1/8W	KM1M2
R413,414			RK73FB2B100J	CHIP R	10	J	1/8W	M3M4X1
R413,414			RK73FB2B100J	CHIP R	10	J	1/8W	X2R1Q1
R415			RK73FB2B4R7J	CHIP R	4.7	J	1/8W	KM1M2
R415			RK73FB2B4R7J	CHIP R	4.7	J	1/8W	M3M4X1
R415			RK73FB2B4R7J	CHIP R	4.7	J	1/8W	X2R1Q1
R416-418			RK73GB2A100J	CHIP R	10	J	1/10W	

M1: DDX7034BT **M2**: DDX7034BTM **M3**: DDX6034 **M4**: DDX6034M **M5**: DNX7340BT (Other Areas)
X1: DDX7034BT **X2**: DDX6034 **X3**: DNX7340BT (Australia) **R1**: DDX7034BT (Latin America)
K: DDX714 **K1**: DNX7140 **K2**: DNX7000EX (North America)
E1: DNX7240BT (Europe) **Q1**: DDX6054 (Russian)

⚠Indicates safety critical compo nents.

PARTS LIST

VIDEO CONTROL UNIT (X15-123x/134x-xx)

Ref. No.	Add	New	Parts No.	Description				Destination
R419,420			RK73FB2B102J	CHIP R	1.0K	J	1/8W	KM1M2
R419,420			RK73FB2B102J	CHIP R	1.0K	J	1/8W	M3M4X1
R419,420			RK73FB2B102J	CHIP R	1.0K	J	1/8W	X2R1Q1
R421-424			RK73GB2A750J	CHIP R	75	J	1/10W	KM1M2
R421-424			RK73GB2A750J	CHIP R	75	J	1/10W	M3M4X1
R421-424			RK73GB2A750J	CHIP R	75	J	1/10W	X2R1Q1
R425-428			RK73FB2B101J	CHIP R	100	J	1/8W	KM1M2
R425-428			RK73FB2B101J	CHIP R	100	J	1/8W	M3M4X1
R425-428			RK73FB2B101J	CHIP R	100	J	1/8W	X2R1Q1
R429-432			RK73GB2A100J	CHIP R	10	J	1/10W	KM1M2
R429-432			RK73GB2A100J	CHIP R	10	J	1/10W	M3M4X1
R429-432			RK73GB2A100J	CHIP R	10	J	1/10W	X2R1Q1
R433-435			RK73GH2A750D	CHIP R	75	D	1/10W	K1K2M5
R433-435			RK73GH2A750D	CHIP R	75	D	1/10W	X3E1
R436			RK73FB2B102J	CHIP R	1.0K	J	1/8W	KM1M2
R436			RK73FB2B102J	CHIP R	1.0K	J	1/8W	M3M4X1
R436			RK73FB2B102J	CHIP R	1.0K	J	1/8W	X2R1Q1
R437			RK73GB2A750J	CHIP R	75	J	1/10W	K1K2M5
R437			RK73GB2A750J	CHIP R	75	J	1/10W	X3E1
R441,442			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R443			RK73HB1J104J	CHIP R	100K	J	1/16W	
R444			RK73HB1J000J	CHIP R	0.0	J	1/16W	KR1K1
R444			RK73HB1J000J	CHIP R	0.0	J	1/16W	K2
R445			RK73HB1J101J	CHIP R	100	J	1/16W	
R448			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R451,452			RK73FB2B101J	CHIP R	100	J	1/8W	E1
R451,452			RK73FB2B101J	CHIP R	100	J	1/8W	KR1M1
R451,452			RK73FB2B101J	CHIP R	100	J	1/8W	K2M5X3
R451,452			RK73FB2B101J	CHIP R	100	J	1/8W	M2X1K1
R453,454			RK73GB2A101J	CHIP R	100	J	1/10W	E1
R453,454			RK73GB2A101J	CHIP R	100	J	1/10W	KR1M1
R453,454			RK73GB2A101J	CHIP R	100	J	1/10W	K2M5X3
R453,454			RK73GB2A101J	CHIP R	100	J	1/10W	M2X1K1
R455-458			RK73GB2A223J	CHIP R	22K	J	1/10W	E1
R455-458			RK73GB2A223J	CHIP R	22K	J	1/10W	KR1M1
R455-458			RK73GB2A223J	CHIP R	22K	J	1/10W	K2M5X3
R455-458			RK73GB2A223J	CHIP R	22K	J	1/10W	M2X1K1
R459-462			RK73GB2A104J	CHIP R	100K	J	1/10W	E1
R459-462			RK73GB2A104J	CHIP R	100K	J	1/10W	KR1M1
R459-462			RK73GB2A104J	CHIP R	100K	J	1/10W	K2M5X3
R459-462			RK73GB2A104J	CHIP R	100K	J	1/10W	M2X1K1
R463			RK73HB1J102J	CHIP R	1.0K	J	1/16W	E1
R463			RK73HB1J102J	CHIP R	1.0K	J	1/16W	KR1M1
R463			RK73HB1J102J	CHIP R	1.0K	J	1/16W	K2M5X3
R463			RK73HB1J102J	CHIP R	1.0K	J	1/16W	M2X1K1
R464			RK73HB1J100J	CHIP R	10	J	1/16W	E1
R464			RK73HB1J100J	CHIP R	10	J	1/16W	KR1M1
R464			RK73HB1J100J	CHIP R	10	J	1/16W	K2M5X3
R464			RK73HB1J100J	CHIP R	10	J	1/16W	M2X1K1
R467,468			RK73HB1J473J	CHIP R	47K	J	1/16W	E1
R467,468			RK73HB1J473J	CHIP R	47K	J	1/16W	KR1M1
R467,468			RK73HB1J473J	CHIP R	47K	J	1/16W	K2M5X3
R467,468			RK73HB1J473J	CHIP R	47K	J	1/16W	M2X1K1
R500-502			RK73HB1J101J	CHIP R	100	J	1/16W	
R503			RK73GB2A000J	CHIP R	0.0	J	1/10W	

Ref. No.	Add	New	Parts No.	Description				Destination
R504,505			RK73HB1J153J	CHIP R	15K	J	1/16W	
R506			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R507,508			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R510			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R511,512			RK73HB1J153J	CHIP R	15K	J	1/16W	
R513			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R514			RK73GH2A181D	CHIP R	180	D	1/10W	
R516			RK73GB2A100J	CHIP R	10	J	1/10W	
R517			RK73GH2A751D	CHIP R	750	D	1/10W	
R518-520			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R524,525			RK73HB1J101J	CHIP R	100	J	1/16W	
R526			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R527			RK73EB2E151J	CHIP R	150	J	1/4W	
R529			RK73GH2A162D	CHIP R	1.6K	D	1/10W	
R530			RK73GH2A102D	CHIP R	1.0K	D	1/10W	
R533			RK73HB1J151J	CHIP R	150	J	1/16W	
R534			RK73GB2A2R2J	CHIP R	2.2	J	1/10W	
R535			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R536			RK73GH2A751D	CHIP R	750	D	1/10W	
R537			RK73GH2A332D	CHIP R	3.3K	D	1/10W	
R539			RK73GB2A000J	CHIP R	0.0	J	1/10W	M1M2X1
R541			RK73GB2A000J	CHIP R	0.0	J	1/10W	M1M2X1
R542			RK73GH2A242D	CHIP R	2.4K	D	1/10W	M1M2X1
R543			RK73GH2A562D	CHIP R	5.6K	D	1/10W	M1M2X1
R544			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R546-551			RK73HB1J204J	CHIP R	200K	J	1/16W	
R554,555			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R600-603			RK73HB1J104J	CHIP R	100K	J	1/16W	
R604,605			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R606,607			RK73HB1J103J	CHIP R	10K	J	1/16W	
R608,609			RK73HB1J473J	CHIP R	47K	J	1/16W	
R612			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R613			RK73HB1J223J	CHIP R	22K	J	1/16W	
R614			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R616			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R617			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R618			RK73HB1J472J	CHIP R	4.7K	J	1/16W	
R619			RK73HB1J220J	CHIP R	22	J	1/16W	
R623			RK73HB1J220J	CHIP R	22	J	1/16W	
R625			RK73HB1J473J	CHIP R	47K	J	1/16W	
R626			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R627			RK73HB1J331J	CHIP R	330	J	1/16W	
R629			RK73HB1J103J	CHIP R	10K	J	1/16W	
R634			RK73EB2E000J	CHIP R	0.0	J	1/4W	
R637			RK73EB2E000J	CHIP R	0.0	J	1/4W	
R644			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R646,647			RK73HB1J000J	CHIP R	0.0	J	1/16W	M1M2X1
R648			RK73HB1J000J	CHIP R	0.0	J	1/16W	K1K2E1
R650			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R652			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R655			RK73HB1J000J	CHIP R	0.0	J	1/16W	K1K2E1
R656			RK73HB1J103J	CHIP R	10K	J	1/16W	
R673			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R700,701			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R703			RK73HB1J103J	CHIP R	10K	J	1/16W	

M1: DDX7034BT **M2**: DDX7034BTM **M3**: DDX6034 **M4**: DDX6034M **M5**: DNX7340BT (Other Areas)
X1: DDX7034BT **X2**: DDX6034 **X3**: DNX7340BT (Australia) **R1**: DDX7034BT (Latin America)
K: DDX714 **K1**: DNX7140 **K2**: DNX7000EX (North America)
E1: DNX7240BT (Europe) **Q1**: DDX6054 (Russian)

⚠Indicates safety critical components.

PARTS LIST

VIDEO CONTROL UNIT (X15-123x/134x-xx)

Ref. No.	Add	New	Parts No.	Description			Destination
R704,705			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R707,708			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R711			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R713			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R714			RK73HB1J103J	CHIP R	10K	J 1/16W	
R715-718			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R720,721			RK73HB1J103J	CHIP R	10K	J 1/16W	
R760			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R801,802			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R803			RK73HB1J472J	CHIP R	4.7K	J 1/16W	
R804			RK73HB1J103J	CHIP R	10K	J 1/16W	
R805			RK73HB1J101J	CHIP R	100	J 1/16W	
R806			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R807			RK73HB1J101J	CHIP R	100	J 1/16W	
R808			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R809			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R810			RK73HB1J101J	CHIP R	100	J 1/16W	
R812-815			RK73HB1J101J	CHIP R	100	J 1/16W	
R818			RK73HB1J103J	CHIP R	10K	J 1/16W	
R821-823			RK73HB1J103J	CHIP R	10K	J 1/16W	
R825			RK73HB1J332J	CHIP R	3.3K	J 1/16W	
R826			RK73HB1J220J	CHIP R	22	J 1/16W	
R827			RK73HB1J103J	CHIP R	10K	J 1/16W	
R828			RK73HB1J102J	CHIP R	1.0K	J 1/16W	
R829			RK73HB1J332J	CHIP R	3.3K	J 1/16W	
R832,833			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R834			RK73HB1J101J	CHIP R	100	J 1/16W	
R836,837			RK73HB1J101J	CHIP R	100	J 1/16W	
R838			RK73HB1J102J	CHIP R	1.0K	J 1/16W	
R839			RK73HB1J101J	CHIP R	100	J 1/16W	
R840			RK73HB1J220J	CHIP R	22	J 1/16W	
R841			RK73HB1J103J	CHIP R	10K	J 1/16W	
R844			RK73HB1J103J	CHIP R	10K	J 1/16W	
R846			RK73HB1J220J	CHIP R	22	J 1/16W	KR1Q1
R846			RK73HB1J220J	CHIP R	22	J 1/16W	K1K2
R846			RK73HB1J220J	CHIP R	22	J 1/16W	M3M4X2
R848			RK73HB1J000J	CHIP R	0.0	J 1/16W	KR1Q1
R848			RK73HB1J000J	CHIP R	0.0	J 1/16W	K1K2
R848			RK73HB1J000J	CHIP R	0.0	J 1/16W	M3M4X2
R849			RK73HB1J220J	CHIP R	22	J 1/16W	
R850			RK73FB2B000J	CHIP R	0.0	J 1/8W	
R851			RK73HB1J220J	CHIP R	22	J 1/16W	E1M5X3
R851			RK73HB1J220J	CHIP R	22	J 1/16W	M1M2X1
R851,852			RK73HB1J220J	CHIP R	22	J 1/16W	KR1Q1
R851,852			RK73HB1J220J	CHIP R	22	J 1/16W	K1K2
R851,852			RK73HB1J220J	CHIP R	22	J 1/16W	M3M4X2
R855			RK73HB1J103J	CHIP R	10K	J 1/16W	
R858			RK73HB1J103J	CHIP R	10K	J 1/16W	
R860			RK73HB1J103J	CHIP R	10K	J 1/16W	
R862			RK73HB1J220J	CHIP R	22	J 1/16W	
R863			RK73HB1J103J	CHIP R	10K	J 1/16W	
R864,865			RK73HB1J220J	CHIP R	22	J 1/16W	
R866-869			RK73HB1J103J	CHIP R	10K	J 1/16W	
R870			RK73GH2A622D	CHIP R	6.2K	D 1/10W	
R871,872			RK73HB1J332J	CHIP R	3.3K	J 1/16W	

Ref. No.	Add	New	Parts No.	Description			Destination
R873			RK73GH2A820D	CHIP R	82	D 1/10W	
R874			RK73GH2A180D	CHIP R	18	D 1/10W	
R876			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R877			RK73HB1J102J	CHIP R	1.0K	J 1/16W	
R878			RK73GH2A820D	CHIP R	82	D 1/10W	
R879			RK73GH2A180D	CHIP R	18	D 1/10W	
R880			RK73HB1J223J	CHIP R	22K	J 1/16W	
R881,882			RK73GH2A750D	CHIP R	75	D 1/10W	
R884,885			RK73GH2A750D	CHIP R	75	D 1/10W	
R887,888			RK73GH2A750D	CHIP R	75	D 1/10W	
R889			RK73HB1J220J	CHIP R	22	J 1/16W	
R890			RK73FB2B000J	CHIP R	0.0	J 1/8W	
R891			RK73GH2A750D	CHIP R	75	D 1/10W	
R892			RK73HB1J220J	CHIP R	22	J 1/16W	
R893			RK73GH2A750D	CHIP R	75	D 1/10W	
R894,895			RK73HB1J220J	CHIP R	22	J 1/16W	
R896			RK73HB1J472J	CHIP R	4.7K	J 1/16W	
R897			RK73HB1J152J	CHIP R	1.5K	J 1/16W	
R898			RK73HB1J473J	CHIP R	47K	J 1/16W	
R899			RK73HB1J152J	CHIP R	1.5K	J 1/16W	
R900			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R901			RK73HB1J105J	CHIP R	1.0M	J 1/16W	
R902			RK73HB1J220J	CHIP R	22	J 1/16W	
R903			RK73HB1J222J	CHIP R	2.2K	J 1/16W	
R904			RK73HB1J103J	CHIP R	10K	J 1/16W	
R905			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R907			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R908			RK73HB1J102J	CHIP R	1.0K	J 1/16W	
R909			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R910			RK73HB1J102J	CHIP R	1.0K	J 1/16W	
R911			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R912			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R913,914			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R920-927			RK73HB1J220J	CHIP R	22	J 1/16W	
R932-939			RK73HB1J331J	CHIP R	330	J 1/16W	
R940-945			RK73HB1J220J	CHIP R	22	J 1/16W	
R946			RK73HB1J100J	CHIP R	10	J 1/16W	
R950,951			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R952		*	RK74HB1J000J	CHIP-COM	0.0	J 1/16W	
R992			RK73HB1J101J	CHIP R	100	J 1/16W	
R994			RK73HB1J105J	CHIP R	1.0M	J 1/16W	
R995			RK73HH1J123D	CHIP R	12K	D 1/16W	
R996			RK73EB2E000J	CHIP R	0.0	J 1/4W	
D2			1SS355	DIODE			
D101-104			1SS357-F	DIODE			
D201			1SS355	DIODE			KR1Q1
D201			1SS355	DIODE			K1K2
D201			1SS355	DIODE			M3M4X2
D402-404			CVS10A180M	VARISTOR			KM1M2
D402-404			CVS10A180M	VARISTOR			M3M4X1
D402-404			CVS10A180M	VARISTOR			X2R1Q1
D405-408			CVL10C270M300	VARISTOR			KM1M2
D405-408			CVL10C270M300	VARISTOR			M3M4X1
D405-408			CVL10C270M300	VARISTOR			X2R1Q1

M1: DDX7034BT **M2**: DDX7034BTM **M3**: DDX6034 **M4**: DDX6034M **M5**: DNX7340BT (Other Areas)
X1: DDX7034BT **X2**: DDX6034 **X3**: DNX7340BT (Australia) **R1**: DDX7034BT (Latin America)
K: DDX714 **K1**: DNX7140 **K2**: DNX7000EX (North America)
E1: DNX7240BT (Europe) **Q1**: DDX6054 (Russian)

⚠Indicates safety critical compo nents.

PARTS LIST

The IC101,102 and IC801 in the Video control unit (X15-123/134) are not replaceable components. When these ICs are defective, replace the whole Video control unit (X15-123/134).

VIDEO CONTROL UNIT (X15-123x/134x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination
D409-411			UDZW6.2(B)	ZENER DIODE	KM1M2
D409-411			UDZW6.2(B)	ZENER DIODE	M3M4X1
D409-411			UDZW6.2(B)	ZENER DIODE	X2R1Q1
D461,462			CVS10A120M	VARISTOR	E1
D461,462			CVS10A120M	VARISTOR	KR1M1
D461,462			CVS10A120M	VARISTOR	K2M5X3
D461,462			CVS10A120M	VARISTOR	M2X1K1
D463			UDZW3.9(B)	ZENER DIODE	E1
D463			UDZW3.9(B)	ZENER DIODE	KR1M1
D463			UDZW3.9(B)	ZENER DIODE	K2M5X3
D463			UDZW3.9(B)	ZENER DIODE	M2X1K1
D502			CVL10C270M300	VARISTOR	
IC1			XC6201P502PR	ANALOGUE IC	
IC2			R1114N331B-TR	ANALOGUE IC (3.3V LF)	
IC5			NJM4565V-ZB	ANALOGUE IC	
IC101		✻	-	ANALOGUE IC	
IC102		✻	-	ANALOGUE IC	
IC103			74AHC1GU04GW	MOS-IC	
IC201		✻	30878MJBA35GP	MICROCONTROLLER IC	
IC202			S-80835CNNB-G	MOS-IC	
IC203		✻	W05-1506-00	ROM IC (K)	KK1K2
IC203		✻	W05-1507-00	ROM IC (E)	E1M2M4
IC203		✻	W05-1508-00	ROM IC (M)	M1M3M5
IC203		✻	W05-1509-00	ROM IC (X)	X1X2X3
IC203		✻	W05-1509-00	ROM IC (R)	R1
IC203		✻	W05-1510-00	ROM IC (Q)	Q1
IC203		✻	W05-1511-00	ROM IC (V)	V
IC205			74AHCT1G08GW	MOS-IC	K1K2M5
IC205			74AHCT1G08GW	MOS-IC	X3E1
IC207,208			74AHCT1G08GW	MOS-IC	
IC209,210			74LVC3G34DP	MOS-IC	
IC301			TC7SH125FU-F	MOS-IC	
IC302			TC7W02FU-F	MOS-IC	
IC303			TC7SH02FU-F	MOS-IC	
IC401			74AHCT1G08GW	MOS-IC	
IC403			74AHC2G126DP	MOS-IC	E1
IC403			74AHC2G126DP	MOS-IC	KR1M1
IC403			74AHC2G126DP	MOS-IC	K2M5X3
IC403			74AHC2G126DP	MOS-IC	M2X1K1
IC404			NJM4565V-ZB	ANALOGUE IC	E1
IC404			NJM4565V-ZB	ANALOGUE IC	KR1M1
IC404			NJM4565V-ZB	ANALOGUE IC	K2M5X3
IC404			NJM4565V-ZB	ANALOGUE IC	M2X1K1
IC500			PCM1754DB	MOS-IC	
IC501		✻	NJM2516VC3-ZB	ANALOGUE IC	
IC502		✻	NJM2561F1-ZB	ANALOGUE IC	
IC503			NJM4565V-ZB	ANALOGUE IC	
IC504		✻	R1173S001D-F	ANALOGUE IC (LDO ADJ)	
IC505			XC6201P502MR	ANALOGUE IC	
IC506		✻	R1173S001D-F	ANALOGUE IC (LDO ADJ)	KR1Q1
IC506		✻	R1173S001D-F	ANALOGUE IC (LDO ADJ)	K1K2M5
IC506		✻	R1173S001D-F	ANALOGUE IC (LDO ADJ)	M3M4X2
IC506		✻	R1173S001D-F	ANALOGUE IC (LDO ADJ)	X3E1
IC506,507		✻	R1173S001D-F	ANALOGUE IC (LDO ADJ)	M1M2X1
IC605			MIC2005-08YM6	MOS-IC	
IC607			MFI341S2162	MICROPROCESSOR IC	
IC703		✻	GL128P90TF6B4	ROM IC	
IC704,705			74AHC1GU04GW	MOS-IC	
IC800		✻	FM24C64-G	FERAM IC	
IC801		✻	-	MICROPROCESSOR IC	
IC920			BD3533FVM	ANALOGUE IC	
IC921,922		✻	HY5D561622FT3	DRAM IC	
IC923		✻	USB2513I-AEZG	MOS-IC	
Q1			2SC4081	TRANSISTOR	
Q2			2SA1576A	TRANSISTOR	
Q3			DTA114TUA	DIGITAL TRANSISTOR	
Q4			DTC114YUA	DIGITAL TRANSISTOR	
Q5			2SC4081	TRANSISTOR	
Q6			2SA1576A	TRANSISTOR	
Q7			2SC4081	TRANSISTOR	
Q8			DTA114EUA	DIGITAL TRANSISTOR	
Q9			DTC144EUA	DIGITAL TRANSISTOR	
Q10			2SB1689	TRANSISTOR	
Q11			DTC144EUA	DIGITAL TRANSISTOR	
Q14			DTC144EUA	DIGITAL TRANSISTOR	
Q15 ,16			2SA1576A	TRANSISTOR	
Q17			TPC8110-F	FET	
Q18			DTC144EUA	DIGITAL TRANSISTOR	
Q91			DTC143ZUA	DIGITAL TRANSISTOR	
Q101,102			HAT2218R-E	DUAL FET	
Q103,104			DTC144EUA	DIGITAL TRANSISTOR	
Q105			DTC114YUA	DIGITAL TRANSISTOR	
Q107,108			HAT2218R-E	DUAL FET	
Q201			2SA1576A	TRANSISTOR	
Q202			DTC144EUA	DIGITAL TRANSISTOR	
Q203,204			2SA1576A	TRANSISTOR	
Q206,207			DTA114YUA	DIGITAL TRANSISTOR	KR1Q1
Q206,207			DTA114YUA	DIGITAL TRANSISTOR	K1K2
Q206,207			DTA114YUA	DIGITAL TRANSISTOR	M3M4X2
Q207			DTA114YUA	DIGITAL TRANSISTOR	E1M5X3
Q207			DTA114YUA	DIGITAL TRANSISTOR	M1M2X1
Q500			2SB1184	TRANSISTOR	
Q501			2SC4081	TRANSISTOR	
Q504			2SC4081	TRANSISTOR	
Q505			2SA1576A	TRANSISTOR	

SWITCH UNIT (X16-6560-10)

D1			B30-1566-05	LED (1608,RED)	
D4			B30-1784-05	LED (RGB SIDE)	
D6			B30-1784-05	LED (RGB SIDE)	
CN1		✻	E41-3101-05	FLAT CABLE CONNECTOR	
R2			RK73GB2A242J	CHIP R 2.4K J 1/10W	
R3			RK73GB2A362J	CHIP R 3.6K J 1/10W	
R5			RK73GB2A622J	CHIP R 6.2K J 1/10W	
R6			RK73GB2A123J	CHIP R 12K J 1/10W	
R7			RK73GB2A363J	CHIP R 36K J 1/10W	
S1 -9			S70-0948-05	TACT SWITCH	
D2 ,3			CVS10A120M	VARISTOR	
D5		✻	MKZM120HGL	ZENER DIODE	

M1: DDX7034BT **M2**: DDX7034BTM **M3**: DDX6034 **M4**: DDX6034M **M5**: DNX7340BT (Other Areas)
X1: DDX7034BT **X2**: DDX6034 **X3**: DNX7340BT (Australia) **R1**: DDX7034BT (Latin America)
K: DDX714 **K1**: DNX7140 **K2**: DNX7000EX (North America)
E1: DNX7240BT (Europe) **Q1**: DDX6054 (Russian)

⚠Indicates safety critical components.

PARTS LIST

The IC1 in the Sub-circuit unit (X16-6590-2x) are not replaceable components. When these ICs are defective, replace the whole Sub-circuit unit (X16-6590-2x).

SWITCH UNIT (X16-6560-10)

Ref. No.	Add	New	Parts No.	Description	Destination
D7			CVS10A120M	VARISTOR	
IC1			PIC95603	ANALOGUE IC	
SUB-CIRCUIT UNIT (X16-6590-2x)					
C1			CK73GB1A105K	CHIP C 1.0UF K	M5X3
C2			CK73GB1H103K	CHIP C 0.010UF K	M5X3
C3			CK73GB1A105K	CHIP C 1.0UF K	M5X3
C4			CK73GB0J475K	CHIP C 4.7UF K	M1M2X1
C5			CK73GB1A105K	CHIP C 1.0UF K	M1M2X1
C6			CK73GB1H104K	CHIP C 0.10UF K	M1M2X1
C7 ,8			CC73GCH1H150J	CHIP C 15PF J	M1M2X1
C9 -11			CK73GB1H104K	CHIP C 0.10UF K	M1M2X1
C12			CK73GB0J475K	CHIP C 4.7UF K	M1M2X1
C13			CK73GB1A105K	CHIP C 1.0UF K	M1M2X1
C14 -17			CK73GB1H104K	CHIP C 0.10UF K	M1M2X1
CN1		✻	E41-2451-15	FLAT CABLE CONNECTOR	M5X3
CN2			E41-2806-05	PIN ASSY	M1M2X1
J1			E68-0025-05	JACK (SD CARD SLOT)	M1M2X1
J1			E68-0025-05	JACK (SD CARD SLOT)	M5X3
X1			L77-2943-05	CRYSTAL RESONATOR (24.000MHZ)	M1M2X1
R1			RK73GB2A103J	CHIP R 10K J 1/10W	M5X3
R2			RK73GB2A224J	CHIP R 220K J 1/10W	M5X3
R3 ,4			RK73GB2A102J	CHIP R 1.0K J 1/10W	M1M2X1
R5			RK73GB2A222J	CHIP R 2.2K J 1/10W	M1M2X1
R6 -11			RK73GB2A000J	CHIP R 0.0 J 1/10W	M1M2X1
R12			RK73GB2A104J	CHIP R 100K J 1/10W	M1M2X1
R13 ,14			RK73GB2A102J	CHIP R 1.0K J 1/10W	M1M2X1
R15			RK73GB2A000J	CHIP R 0.0 J 1/10W	M1M2X1
R16 -19			RK73GB2A102J	CHIP R 1.0K J 1/10W	M1M2X1
R20			RK73GH2A123D	CHIP R 12K D 1/10W	M1M2X1
R21			RK73GB2A105J	CHIP R 1.0M J 1/10W	M1M2X1
R22 ,23			RK73GB2A102J	CHIP R 1.0K J 1/10W	M1M2X1
R24 ,25			RK73GB2A000J	CHIP R 0.0 J 1/10W	M1M2X1
IC1		✻	-	MOS-IC	M1M2X1
Q1			RTQ025P02	FET	M5X3
CONTROL CIRCUIT UNIT (X29-4490-xx)					
C1			CK73GB1H103K	CHIP C 0.010UF K	
C11			CK73FB1C105K	CHIP C 1.0UF K	
C14			CK73FB1C106K	CHIP C 10UF K	
C15			CK73FB1C105K	CHIP C 1.0UF K	
C16			CE32BJ1C100M	CHIP EL 10UF 16WV	
C17			CK73GB1H102K	CHIP C 1000PF K	
C18 ,19			CK73GB1H104K	CHIP C 0.10UF K	
C20			CK73GB1H102K	CHIP C 1000PF K	
C21			CE32BJ1C100M	CHIP EL 10UF 16WV	
C24			CD04AT0J331M	ELECTRO 330UF 6.3WV	
C27 -29			CK73GB1H104K	CHIP C 0.10UF K	
C100-102			CK73GB1H104K	CHIP C 0.10UF K	
C104			CE32BJ1C100M	CHIP EL 10UF 16WV	
C107,108			CK73GB1H102K	CHIP C 1000PF K	
C110			CE32BJ1C100M	CHIP EL 10UF 16WV	
C114			CE32BJ1C100M	CHIP EL 10UF 16WV	
C116			CK73GB1H102K	CHIP C 1000PF K	
C118			CK73GB1H102K	CHIP C 1000PF K	
C120			CE32BJ1C100M	CHIP EL 10UF 16WV	
C124			CK73EB1C106K	CHIP C 10UF K	
C125			CK73GB1H102K	CHIP C 1000PF K	
C128			CK73GB1H102K	CHIP C 1000PF K	
C130			CK73EB1C106K	CHIP C 10UF K	
C200			CK73GB1H473K	CHIP C 0.047UF K	E1
C200			CK73GB1H473K	CHIP C 0.047UF K	KR1M1
C200			CK73GB1H473K	CHIP C 0.047UF K	K2M5X3
C200			CK73GB1H473K	CHIP C 0.047UF K	M2X1K1
C201			CK73EB1E105K	CHIP C 1.0UF K	E1
C201			CK73EB1E105K	CHIP C 1.0UF K	KR1M1
C201			CK73EB1E105K	CHIP C 1.0UF K	K2M5X3
C201			CK73EB1E105K	CHIP C 1.0UF K	M2X1K1
C202			CK73GB1H473K	CHIP C 0.047UF K	E1
C202			CK73GB1H473K	CHIP C 0.047UF K	KR1M1
C202			CK73GB1H473K	CHIP C 0.047UF K	K2M5X3
C202			CK73GB1H473K	CHIP C 0.047UF K	M2X1K1
C203			CK73EB1E105K	CHIP C 1.0UF K	E1
C203			CK73EB1E105K	CHIP C 1.0UF K	KR1M1
C203			CK73EB1E105K	CHIP C 1.0UF K	K2M5X3
C203			CK73EB1E105K	CHIP C 1.0UF K	M2X1K1
CN1			E41-2959-05	PIN ASSY	
CN100			E41-2964-05	PIN ASSY	
CN300			E41-2980-05	FLAT CABLE CONNECTOR	
CN302			E40-6469-05	PIN ASSY	
J200			E58-1067-05	RECTANGULAR RECEPTACLE	E1
J200			E58-1067-05	RECTANGULAR RECEPTACLE	KR1M1
J200			E58-1067-05	RECTANGULAR RECEPTACLE	K2M5X3
J200			E58-1067-05	RECTANGULAR RECEPTACLE	M2X1K1
WH1	2C		E39-0985-15	WIRING HARNESS	
R4			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R9			RK73FB2B000J	CHIP R 0.0 J 1/8W	
R10			RK73EB2E100J	CHIP R 10 J 1/4W	
R11			RK73FB2B000J	CHIP R 0.0 J 1/8W	
R14			RK73FB2B000J	CHIP R 0.0 J 1/8W	
R15			RK73EB2E100J	CHIP R 10 J 1/4W	
R19			RK73FB2B000J	CHIP R 0.0 J 1/8W	
R20			RK73GB2A750J	CHIP R 75 J 1/10W	
R22			RK73GH2A750D	CHIP R 75 D 1/10W	
R25			RK73FB2B000J	CHIP R 0.0 J 1/8W	
R30			RK73FB2B000J	CHIP R 0.0 J 1/8W	
R40			RK73EB2E332J	CHIP R 3.3K J 1/4W	
R41			RK73EB2E162J	CHIP R 1.6K J 1/4W	
R43			RK73EB2E332J	CHIP R 3.3K J 1/4W	
R46			RK73FB2B101J	CHIP R 100 J 1/8W	
R47			RK73GB2A471J	CHIP R 470 J 1/10W	
R48			RK73EB2E750J	CHIP R 75 J 1/4W	
R49			RK73GB2A223J	CHIP R 22K J 1/10W	
R51			RK73GB2A223J	CHIP R 22K J 1/10W	
R53			RK73FB2B101J	CHIP R 100 J 1/8W	
R54			RK73GB2A471J	CHIP R 470 J 1/10W	
R55 ,56			RK73GB2A103J	CHIP R 10K J 1/10W	
R102			RK73EB2E101J	CHIP R 100 J 1/4W	

M1: DDX7034BT **M2**: DDX7034BTM **M3**: DDX6034 **M4**: DDX6034M **M5**: DNX7340BT (Other Areas)
X1: DDX7034BT **X2**: DDX6034 **X3**: DNX7340BT (Australia) **R1**: DDX7034BT (Latin America)
K: DDX714 **K1**: DNX7140 **K2**: DNX7000EX (North America)
E1: DNX7240BT (Europe) **Q1**: DDX6054 (Russian)

⚠Indicates safety critical compo nents.

PARTS LIST

CONTROL CIRCUIT UNIT (X29-4490-xx)

Ref. No.	Add	New	Parts No.	Description	Destination
R103			RK73GB2A471J	CHIP R 470 J 1/10W	
R106			RK73GB2A223J	CHIP R 22K J 1/10W	
R109			RK73GB2A223J	CHIP R 22K J 1/10W	
R113			RK73GB2A471J	CHIP R 470 J 1/10W	
R117			RK73EB2E101J	CHIP R 100 J 1/4W	
R119			RK73EB2E101J	CHIP R 100 J 1/4W	
R120			RK73GB2A471J	CHIP R 470 J 1/10W	
R125			RK73GB2A223J	CHIP R 22K J 1/10W	
R129			RK73GB2A223J	CHIP R 22K J 1/10W	
R132			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R133			RK73GB2A471J	CHIP R 470 J 1/10W	
R134			RK73EB2E101J	CHIP R 100 J 1/4W	
R138			RK73EB2E101J	CHIP R 100 J 1/4W	
R139			RK73GB2A471J	CHIP R 470 J 1/10W	
R141			RK73GB2A223J	CHIP R 22K J 1/10W	
R146			RK73GB2A223J	CHIP R 22K J 1/10W	
R149			RK73GB2A471J	CHIP R 470 J 1/10W	
R150			RK73EB2E101J	CHIP R 100 J 1/4W	
R200			RK73GB2A472J	CHIP R 4.7K J 1/10W	E1
R200			RK73GB2A472J	CHIP R 4.7K J 1/10W	KR1M1
R200			RK73GB2A472J	CHIP R 4.7K J 1/10W	K2M5X3
R200			RK73GB2A472J	CHIP R 4.7K J 1/10W	M2X1K1
R201			RK73GB2A473J	CHIP R 47K J 1/10W	E1
R201			RK73GB2A473J	CHIP R 47K J 1/10W	KR1M1
R201			RK73GB2A473J	CHIP R 47K J 1/10W	K2M5X3
R201			RK73GB2A473J	CHIP R 47K J 1/10W	M2X1K1
R202			RK73EB2E152J	CHIP R 1.5K J 1/4W	E1
R202			RK73EB2E152J	CHIP R 1.5K J 1/4W	KR1M1
R202			RK73EB2E152J	CHIP R 1.5K J 1/4W	K2M5X3
R202			RK73EB2E152J	CHIP R 1.5K J 1/4W	M2X1K1
R203			RK73GB2A473J	CHIP R 47K J 1/10W	E1
R203			RK73GB2A473J	CHIP R 47K J 1/10W	KR1M1
R203			RK73GB2A473J	CHIP R 47K J 1/10W	K2M5X3
R203			RK73GB2A473J	CHIP R 47K J 1/10W	M2X1K1
R204			RK73GB2A621J	CHIP R 620 J 1/10W	E1
R204			RK73GB2A621J	CHIP R 620 J 1/10W	KR1M1
R204			RK73GB2A621J	CHIP R 620 J 1/10W	K2M5X3
R204			RK73GB2A621J	CHIP R 620 J 1/10W	M2X1K1
R205			RK73GB2A242J	CHIP R 2.4K J 1/10W	E1
R205			RK73GB2A242J	CHIP R 2.4K J 1/10W	KR1M1
R205			RK73GB2A242J	CHIP R 2.4K J 1/10W	K2M5X3
R205			RK73GB2A242J	CHIP R 2.4K J 1/10W	M2X1K1
R206,207			RK73PB2H2R0J	CHIP R 2.0 J 1/2W	E1
R206,207			RK73PB2H2R0J	CHIP R 2.0 J 1/2W	KR1M1
R206,207			RK73PB2H2R0J	CHIP R 2.0 J 1/2W	K2M5X3
R206,207			RK73PB2H2R0J	CHIP R 2.0 J 1/2W	M2X1K1
R208			RK73GB2A124J	CHIP R 120K J 1/10W	E1
R208			RK73GB2A124J	CHIP R 120K J 1/10W	KR1M1
R208			RK73GB2A124J	CHIP R 120K J 1/10W	K2M5X3
R208			RK73GB2A124J	CHIP R 120K J 1/10W	M2X1K1
R209			RK73GB2A103J	CHIP R 10K J 1/10W	E1
R209			RK73GB2A103J	CHIP R 10K J 1/10W	KR1M1
R209			RK73GB2A103J	CHIP R 10K J 1/10W	K2M5X3
R209			RK73GB2A103J	CHIP R 10K J 1/10W	M2X1K1
R210			RK73GB2A473J	CHIP R 47K J 1/10W	E1
R210			RK73GB2A473J	CHIP R 47K J 1/10W	KR1M1
R210			RK73GB2A473J	CHIP R 47K J 1/10W	K2M5X3
R210			RK73GB2A473J	CHIP R 47K J 1/10W	M2X1K1
R211			RK73FB2B472J	CHIP R 4.7K J 1/8W	E1
R211			RK73FB2B472J	CHIP R 4.7K J 1/8W	KR1M1
R211			RK73FB2B472J	CHIP R 4.7K J 1/8W	K2M5X3
R211			RK73FB2B472J	CHIP R 4.7K J 1/8W	M2X1K1
R212			RK73GB2A472J	CHIP R 4.7K J 1/10W	E1
R212			RK73GB2A472J	CHIP R 4.7K J 1/10W	KR1M1
R212			RK73GB2A472J	CHIP R 4.7K J 1/10W	K2M5X3
R212			RK73GB2A472J	CHIP R 4.7K J 1/10W	M2X1K1
R213			RK73GB2A473J	CHIP R 47K J 1/10W	E1
R213			RK73GB2A473J	CHIP R 47K J 1/10W	KR1M1
R213			RK73GB2A473J	CHIP R 47K J 1/10W	K2M5X3
R213			RK73GB2A473J	CHIP R 47K J 1/10W	M2X1K1
R214			RK73EB2E152J	CHIP R 1.5K J 1/4W	E1
R214			RK73EB2E152J	CHIP R 1.5K J 1/4W	KR1M1
R214			RK73EB2E152J	CHIP R 1.5K J 1/4W	K2M5X3
R214			RK73EB2E152J	CHIP R 1.5K J 1/4W	M2X1K1
R215			RK73GB2A473J	CHIP R 47K J 1/10W	E1
R215			RK73GB2A473J	CHIP R 47K J 1/10W	KR1M1
R215			RK73GB2A473J	CHIP R 47K J 1/10W	K2M5X3
R215			RK73GB2A473J	CHIP R 47K J 1/10W	M2X1K1
R216			RK73GB2A621J	CHIP R 620 J 1/10W	E1
R216			RK73GB2A621J	CHIP R 620 J 1/10W	KR1M1
R216			RK73GB2A621J	CHIP R 620 J 1/10W	K2M5X3
R216			RK73GB2A621J	CHIP R 620 J 1/10W	M2X1K1
R217			RK73GB2A242J	CHIP R 2.4K J 1/10W	E1
R217			RK73GB2A242J	CHIP R 2.4K J 1/10W	KR1M1
R217			RK73GB2A242J	CHIP R 2.4K J 1/10W	K2M5X3
R217			RK73GB2A242J	CHIP R 2.4K J 1/10W	M2X1K1
R218,219			RK73PB2H2R0J	CHIP R 2.0 J 1/2W	E1
R218,219			RK73PB2H2R0J	CHIP R 2.0 J 1/2W	KR1M1
R218,219			RK73PB2H2R0J	CHIP R 2.0 J 1/2W	K2M5X3
R218,219			RK73PB2H2R0J	CHIP R 2.0 J 1/2W	M2X1K1
R220			RK73GB2A124J	CHIP R 120K J 1/10W	E1
R220			RK73GB2A124J	CHIP R 120K J 1/10W	KR1M1
R220			RK73GB2A124J	CHIP R 120K J 1/10W	K2M5X3
R220			RK73GB2A124J	CHIP R 120K J 1/10W	M2X1K1
R221			RK73GB2A103J	CHIP R 10K J 1/10W	E1
R221			RK73GB2A103J	CHIP R 10K J 1/10W	KR1M1
R221			RK73GB2A103J	CHIP R 10K J 1/10W	K2M5X3
R221			RK73GB2A103J	CHIP R 10K J 1/10W	M2X1K1
R222			RK73GB2A473J	CHIP R 47K J 1/10W	E1
R222			RK73GB2A473J	CHIP R 47K J 1/10W	KR1M1
R222			RK73GB2A473J	CHIP R 47K J 1/10W	K2M5X3
R222			RK73GB2A473J	CHIP R 47K J 1/10W	M2X1K1
R223			RK73FB2B472J	CHIP R 4.7K J 1/8W	E1
R223			RK73FB2B472J	CHIP R 4.7K J 1/8W	KR1M1
R223			RK73FB2B472J	CHIP R 4.7K J 1/8W	K2M5X3
R223			RK73FB2B472J	CHIP R 4.7K J 1/8W	M2X1K1
R300			RK73GB2A105J	CHIP R 1.0M J 1/10W	
D1			STZ6.2N	ZENER DIODE	
D3			STZ6.2N	ZENER DIODE	

M1: DDX7034BT **M2**: DDX7034BTM **M3**: DDX6034 **M4**: DDX6034M **M5**: DNX7340BT (Other Areas)
X1: DDX7034BT **X2**: DDX6034 **X3**: DNX7340BT (Australia) **R1**: DDX7034BT (Latin America)
K: DDX714 **K1**: DNX7140 **K2**: DNX7000EX (North America)
E1: DNX7240BT (Europe) **Q1**: DDX6054 (Russian)

⚠Indicates safety critical components.

PARTS LIST

CONTROL CIRCUIT UNIT (X29-4490-xx)

Ref. No.	Add	New	Parts No.	Description	Destination
D4			UDZW6.8(B)	ZENER DIODE	
D5			UDZW6.2(B)	ZENER DIODE	
D6			UDZW6.8(B)	ZENER DIODE	
D10			AVRM16270MAAB	VARISTOR	
D12 ,13			AVRM16270MAAB	VARISTOR	
D14 ,15			AVRM16180M6AB	VARISTOR	
D16 ,17			DAP202U	DIODE	
D18			STZ6.2N	ZENER DIODE	
D100-105			AVRM16180M6AB	VARISTOR	
D106-110			DAP202U	DIODE	
D200-203			1SR154-400	DIODE	E1
D200-203			1SR154-400	DIODE	KR1M1
D200-203			1SR154-400	DIODE	K2M5X3
D200-203			1SR154-400	DIODE	M2X1K1
D307-309			CVS10A120M	VARISTOR	
Q4			DTC143TUA	DIGITAL TRANSISTOR	
Q5			DTA144EUA	DIGITAL TRANSISTOR	
Q6			DTC143TUA	DIGITAL TRANSISTOR	
Q100			DTC143TUA	DIGITAL TRANSISTOR	
Q101			DTA144EUA	DIGITAL TRANSISTOR	
Q102-105			DTC143TUA	DIGITAL TRANSISTOR	
Q106			DTA144EUA	DIGITAL TRANSISTOR	
Q107			DTC143TUA	DIGITAL TRANSISTOR	
Q200			DTC114TUA	DIGITAL TRANSISTOR	E1
Q200			DTC114TUA	DIGITAL TRANSISTOR	KR1M1
Q200			DTC114TUA	DIGITAL TRANSISTOR	K2M5X3
Q200			DTC114TUA	DIGITAL TRANSISTOR	M2X1K1
Q201			2SC4081	TRANSISTOR	E1
Q201			2SC4081	TRANSISTOR	KR1M1
Q201			2SC4081	TRANSISTOR	K2M5X3
Q201			2SC4081	TRANSISTOR	M2X1K1
Q202			2SB1443	TRANSISTOR	E1
Q202			2SB1443	TRANSISTOR	KR1M1
Q202			2SB1443	TRANSISTOR	K2M5X3
Q202			2SB1443	TRANSISTOR	M2X1K1
Q203			2SA1576A	TRANSISTOR	E1
Q203			2SA1576A	TRANSISTOR	KR1M1
Q203			2SA1576A	TRANSISTOR	K2M5X3
Q203			2SA1576A	TRANSISTOR	M2X1K1
Q204,205			2SC4081	TRANSISTOR	E1
Q204,205			2SC4081	TRANSISTOR	KR1M1
Q204,205			2SC4081	TRANSISTOR	K2M5X3
Q204,205			2SC4081	TRANSISTOR	M2X1K1
Q206			DTC114TUA	DIGITAL TRANSISTOR	E1
Q206			DTC114TUA	DIGITAL TRANSISTOR	KR1M1
Q206			DTC114TUA	DIGITAL TRANSISTOR	K2M5X3
Q206			DTC114TUA	DIGITAL TRANSISTOR	M2X1K1
Q207			2SC4081	TRANSISTOR	E1
Q207			2SC4081	TRANSISTOR	KR1M1
Q207			2SC4081	TRANSISTOR	K2M5X3
Q207			2SC4081	TRANSISTOR	M2X1K1
Q208			2SB1443	TRANSISTOR	E1
Q208			2SB1443	TRANSISTOR	KR1M1
Q208			2SB1443	TRANSISTOR	K2M5X3
Q208			2SB1443	TRANSISTOR	M2X1K1
Q209			2SA1576A	TRANSISTOR	E1
Q209			2SA1576A	TRANSISTOR	KR1M1
Q209			2SA1576A	TRANSISTOR	K2M5X3
Q209			2SA1576A	TRANSISTOR	M2X1K1
Q210,211			2SC4081	TRANSISTOR	E1
Q210,211			2SC4081	TRANSISTOR	KR1M1
Q210,211			2SC4081	TRANSISTOR	K2M5X3
Q210,211			2SC4081	TRANSISTOR	M2X1K1

ELECTRIC UNIT (X34-634x-xx)

Ref. No.	Add	New	Parts No.	Description			Destination
C1			C90-5666-05	ELECTRO	3900UF	25WV	
C2 ,3			CK73GB1H103K	CHIP C	0.010UF	K	
C4			C93-1470-05	CHIP C	15000PF	K	M1M2Q1
C4			C93-1470-05	CHIP C	15000PF	K	M3M4E1
C4			C93-1470-05	CHIP C	15000PF	K	M5
C5			CK73GB1H103K	CHIP C	0.010UF	K	
C6 ,7			CK73FB1C105K	CHIP C	1.0UF	K	
C8			CK73GB1H103K	CHIP C	0.010UF	K	
C9			CK73FB1C105K	CHIP C	1.0UF	K	
C10			CK73FB1E474K	CHIP C	0.47UF	K	
C11			CK73FB1A335K	CHIP C	3.3UF	K	
C12			CK73FB1C105K	CHIP C	1.0UF	K	
C13			CK73GB1H104K	CHIP C	0.10UF	K	
C14			CK73GB1H103K	CHIP C	0.010UF	K	
C101			CK73FB1H334K	CHIP C	0.33UF	K	
C102			CK73GB1H103K	CHIP C	0.010UF	K	
C103			CK73GB1A105K	CHIP C	1.0UF	K	
C104			C90-5692-05	ELECTRO	220UF	16WV	
C105			CK73GB1H103K	CHIP C	0.010UF	K	
C106			CK73GB1H104K	CHIP C	0.10UF	K	KR1Q1
C106			CK73GB1H104K	CHIP C	0.10UF	K	K1K2
C106			CK73GB1H104K	CHIP C	0.10UF	K	M3M4X2
C111			CK73FB1H334K	CHIP C	0.33UF	K	E1
C111			CK73FB1H334K	CHIP C	0.33UF	K	KR1M1
C111			CK73FB1H334K	CHIP C	0.33UF	K	K2M5X3
C111			CK73FB1H334K	CHIP C	0.33UF	K	M2X1K1
C112			CK73GB1H103K	CHIP C	0.010UF	K	E1
C112			CK73GB1H103K	CHIP C	0.010UF	K	KR1M1
C112			CK73GB1H103K	CHIP C	0.010UF	K	K2M5X3
C112			CK73GB1H103K	CHIP C	0.010UF	K	M2X1K1
C113			CK73GB1A105K	CHIP C	1.0UF	K	E1
C113			CK73GB1A105K	CHIP C	1.0UF	K	KR1M1
C113			CK73GB1A105K	CHIP C	1.0UF	K	K2M5X3
C113			CK73GB1A105K	CHIP C	1.0UF	K	M2X1K1
C114			CD04AY1A101M	ELECTRO	100UF	10WV	E1
C114			CD04AY1A101M	ELECTRO	100UF	10WV	KR1M1
C114			CD04AY1A101M	ELECTRO	100UF	10WV	K2M5X3
C114			CD04AY1A101M	ELECTRO	100UF	10WV	M2X1K1
C115			CK73GB1A105K	CHIP C	1.0UF	K	
C116			CD04BD1C221M	ELECTRO	220UF	16WV	
C117			CK73GB1H102K	CHIP C	1000PF	K	
C118			CD04AT1A101M	ELECTRO	100UF	10WV	
C123			CK73FB1H334K	CHIP C	0.33UF	K	
C128			C90-6851-05	ELECTRO	220UF	25WV	
C129			CK73FB1A225K	CHIP C	2.2UF	K	

M1: DDX7034BT **M2**: DDX7034BTM **M3**: DDX6034 **M4**: DDX6034M **M5**: DNX7340BT (Other Areas)
X1: DDX7034BT **X2**: DDX6034 **X3**: DNX7340BT (Australia) **R1**: DDX7034BT (Latin America)
K: DDX714 **K1**: DNX7140 **K2**: DNX7000EX (North America)
E1: DNX7240BT (Europe) **Q1**: DDX6054 (Russian)

⚠Indicates safety critical compo nents.

PARTS LIST

ELECTRIC UNIT (X34-634x-xx)

Ref. No.	Add	New	Parts No.	Description			Destination
C130			CK73GB1A105K	CHIP C	1.0UF	K	
C131,132			CK73GB1C104K	CHIP C	0.10UF	K	
C133			CK73FB0J106K	CHIP C	10UF	K	
C151			CK73GB1H103K	CHIP C	0.010UF	K	
C152,153			CK73GB1H104K	CHIP C	0.10UF	K	
C154,155			CK73GB1H103K	CHIP C	0.010UF	K	
C301			CK73GB1H103K	CHIP C	0.010UF	K	
C302			CK73GB1H473K	CHIP C	0.047UF	K	
C303,304			CK73GB1H103K	CHIP C	0.010UF	K	
C305			CK73GB1H102K	CHIP C	1000PF	K	
C306,307			CK73GB1H103K	CHIP C	0.010UF	K	
C308			CK73GB1C104K	CHIP C	0.10UF	K	
C309			CK73FB0J106K	CHIP C	10UF	K	
C401,402			CK73GB1A105K	CHIP C	1.0UF	K	
C403,404			CK73GB1A474K	CHIP C	0.47UF	K	
C405			CK73GB1A105K	CHIP C	1.0UF	K	
C406			CE32BJ1H010M	CHIP EL	1.0UF	50WV	
C407			CE32BD1C470M	CHIP EL	47UF	16WV	
C408			CK73GB1H103K	CHIP C	0.010UF	K	
C409,410			CK73GB1A105K	CHIP C	1.0UF	K	
C413,414			CK73GB1A105K	CHIP C	1.0UF	K	
C417			CE32BJ1V100M	CHIP EL	10UF	35WV	
C431,432			CK73EB1E225K	CHIP C	2.2UF	K	
C433-436			CK73GB1A105K	CHIP C	1.0UF	K	
C443			CK73GB1A105K	CHIP C	1.0UF	K	
C444			CK73FB1C106K	CHIP C	10UF	K	
C445			CK73GB1A105K	CHIP C	1.0UF	K	
C451			CK73FB1C106K	CHIP C	10UF	K	
C452			CK73GB1C104K	CHIP C	0.10UF	K	
C453			CK73FB0J106K	CHIP C	10UF	K	
C454			CK73GB1C104K	CHIP C	0.10UF	K	
C455			CK73GB1A105K	CHIP C	1.0UF	K	
C456			CE32BJ1C220M	CHIP EL	22UF	16WV	
C457			CK73GB1C104K	CHIP C	0.10UF	K	
C458			CK73FB0J106K	CHIP C	10UF	K	
C462,463			CK73GB1A105K	CHIP C	1.0UF	K	Q1M3M4
C462,463			CK73GB1A105K	CHIP C	1.0UF	K	X2
C463-467			CK73GB1A105K	CHIP C	1.0UF	K	E1
C463-467			CK73GB1A105K	CHIP C	1.0UF	K	KR1M1
C463-467			CK73GB1A105K	CHIP C	1.0UF	K	K2M5X3
C463-467			CK73GB1A105K	CHIP C	1.0UF	K	M2X1K1
C466,467			CK73GB1A105K	CHIP C	1.0UF	K	Q1M3M4
C466,467			CK73GB1A105K	CHIP C	1.0UF	K	X2
C469-474			CK73GB1A105K	CHIP C	1.0UF	K	KR1Q1
C469-474			CK73GB1A105K	CHIP C	1.0UF	K	K1K2
C469-474			CK73GB1A105K	CHIP C	1.0UF	K	M3M4X2
C469-477			CK73GB1A105K	CHIP C	1.0UF	K	E1M5X3
C469-477			CK73GB1A105K	CHIP C	1.0UF	K	M1M2X1
C479			CK73GB1A105K	CHIP C	1.0UF	K	Q1M3M4
C479			CK73GB1A105K	CHIP C	1.0UF	K	X2
C482-487			CK73GB1A105K	CHIP C	1.0UF	K	
C500,501			CC73GCH1H100D	CHIP C	10PF	D	E1M5
C500,501			CC73GCH1H100D	CHIP C	10PF	D	KR1M1
C500,501			CC73GCH1H100D	CHIP C	10PF	D	M2Q1M3
C500,501			CC73GCH1H100D	CHIP C	10PF	D	M4K1K2
C504			CK73GB1H103K	CHIP C	0.010UF	K	E1M5
C504			CK73GB1H103K	CHIP C	0.010UF	K	KR1M1
C504			CK73GB1H103K	CHIP C	0.010UF	K	M2Q1M3
C504			CK73GB1H103K	CHIP C	0.010UF	K	M4K1K2
C505			CC73GCH1H331J	CHIP C	330PF	J	E1M5
C505			CC73GCH1H331J	CHIP C	330PF	J	KR1M1
C505			CC73GCH1H331J	CHIP C	330PF	J	M2Q1M3
C505			CC73GCH1H331J	CHIP C	330PF	J	M4K1K2
C515			CD04AS1V100M	ELECTRO	10UF	35WV	E1M5
C515			CD04AS1V100M	ELECTRO	10UF	35WV	KR1M1
C515			CD04AS1V100M	ELECTRO	10UF	35WV	M2Q1M3
C515			CD04AS1V100M	ELECTRO	10UF	35WV	M4K1K2
C516-519			CK73GB1H103K	CHIP C	0.010UF	K	
C520			CK73GB1H102K	CHIP C	1000PF	K	E1
C524			CK73GB1H102K	CHIP C	1000PF	K	
C597			CK73GB1H102K	CHIP C	1000PF	K	
C598			CC73GCH1H101J	CHIP C	100PF	J	E1
C598			CC73GCH1H101J	CHIP C	100PF	J	KR1M1
C598			CC73GCH1H101J	CHIP C	100PF	J	K2M5X3
C598			CC73GCH1H101J	CHIP C	100PF	J	M2X1K1
C600-602			CK73GB1A105K	CHIP C	1.0UF	K	
C605			CK73GB1H103K	CHIP C	0.010UF	K	KR1K1
C605			CK73GB1H103K	CHIP C	0.010UF	K	K2
C616			CK73GB1H104K	CHIP C	0.10UF	K	KR1K1
C616			CK73GB1H104K	CHIP C	0.10UF	K	K2
C616-618			CK73GB1H104K	CHIP C	0.10UF	K	M1M2X1
C616-618			CK73GB1H104K	CHIP C	0.10UF	K	Q1M3M4
C616-618			CK73GB1H104K	CHIP C	0.10UF	K	X2E1M5
C616-618			CK73GB1H104K	CHIP C	0.10UF	K	X3
C618			CK73GB1H104K	CHIP C	0.10UF	K	KR1K1
C618			CK73GB1H104K	CHIP C	0.10UF	K	K2
C650-652			CK73FB1C105K	CHIP C	1.0UF	K	KR1Q1
C650-652			CK73FB1C105K	CHIP C	1.0UF	K	K1K2
C650-652			CK73FB1C105K	CHIP C	1.0UF	K	M3M4X2
C653			CK73GB1C104K	CHIP C	0.10UF	K	KR1Q1
C653			CK73GB1C104K	CHIP C	0.10UF	K	K1K2
C653			CK73GB1C104K	CHIP C	0.10UF	K	M3M4X2
C654			CC73GCH1H470J	CHIP C	47PF	J	KR1Q1
C654			CC73GCH1H470J	CHIP C	47PF	J	K1K2
C654			CC73GCH1H470J	CHIP C	47PF	J	M3M4X2
C701,702			CC73GCH1H102J	CHIP C	1000PF	J	
C751			CK73FB1C106K	CHIP C	10UF	K	E1
C751			CK73FB1C106K	CHIP C	10UF	K	KR1M1
C751			CK73FB1C106K	CHIP C	10UF	K	K2M5X3
C751			CK73FB1C106K	CHIP C	10UF	K	M2X1K1
C752			CK73HB1A104K	CHIP C	0.10UF	K	E1
C752			CK73HB1A104K	CHIP C	0.10UF	K	KR1M1
C752			CK73HB1A104K	CHIP C	0.10UF	K	K2M5X3
C752			CK73HB1A104K	CHIP C	0.10UF	K	M2X1K1
C753			CK73GB0J225K	CHIP C	2.2UF	K	E1
C753			CK73GB0J225K	CHIP C	2.2UF	K	KR1M1
C753			CK73GB0J225K	CHIP C	2.2UF	K	K2M5X3
C753			CK73GB0J225K	CHIP C	2.2UF	K	M2X1K1
C754			CK73HB1A104K	CHIP C	0.10UF	K	E1
C754			CK73HB1A104K	CHIP C	0.10UF	K	KR1M1

M1: DDX7034BT **M2**: DDX7034BTM **M3**: DDX6034 **M4**: DDX6034M **M5**: DNX7340BT (Other Areas)
X1: DDX7034BT **X2**: DDX6034 **X3**: DNX7340BT (Australia) **R1**: DDX7034BT (Latin America)
K: DDX714 **K1**: DNX7140 **K2**: DNX7000EX (North America)
E1: DNX7240BT (Europe) **Q1**: DDX6054 (Russian)

⚠Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-634x-xx)

Ref. No.	Add	New	Parts No.	Description			Destination
C754			CK73HB1A104K	CHIP C	0.10UF	K	K2M5X3
C754			CK73HB1A104K	CHIP C	0.10UF	K	M2X1K1
C755,756			CK73GB1A105K	CHIP C	1.0UF	K	E1
C755,756			CK73GB1A105K	CHIP C	1.0UF	K	KR1M1
C755,756			CK73GB1A105K	CHIP C	1.0UF	K	K2M5X3
C755,756			CK73GB1A105K	CHIP C	1.0UF	K	M2X1K1
C758			CK73GB1H102K	CHIP C	1000PF	K	E1
C758			CK73GB1H102K	CHIP C	1000PF	K	KR1M1
C758			CK73GB1H102K	CHIP C	1000PF	K	K2M5X3
C758			CK73GB1H102K	CHIP C	1000PF	K	M2X1K1
C759			CE32BD1C100M	CHIP EL	10UF	16WV	E1
C759			CE32BD1C100M	CHIP EL	10UF	16WV	KR1M1
C759			CE32BD1C100M	CHIP EL	10UF	16WV	K2M5X3
C759			CE32BD1C100M	CHIP EL	10UF	16WV	M2X1K1
C760			CK73HB1A104K	CHIP C	0.10UF	K	E1
C760			CK73HB1A104K	CHIP C	0.10UF	K	KR1M1
C760			CK73HB1A104K	CHIP C	0.10UF	K	K2M5X3
C760			CK73HB1A104K	CHIP C	0.10UF	K	M2X1K1
C763-768			CK73HB1H222K	CHIP C	2200PF	K	E1
C763-768			CK73HB1H222K	CHIP C	2200PF	K	KR1M1
C763-768			CK73HB1H222K	CHIP C	2200PF	K	K2M5X3
C763-768			CK73HB1H222K	CHIP C	2200PF	K	M2X1K1
C775			CK73FB1C106K	CHIP C	10UF	K	E1
C775			CK73FB1C106K	CHIP C	10UF	K	KR1M1
C775			CK73FB1C106K	CHIP C	10UF	K	K2M5X3
C775			CK73FB1C106K	CHIP C	10UF	K	M2X1K1
C776			CK73GB1H104K	CHIP C	0.10UF	K	E1
C776			CK73GB1H104K	CHIP C	0.10UF	K	KR1M1
C776			CK73GB1H104K	CHIP C	0.10UF	K	K2M5X3
C776			CK73GB1H104K	CHIP C	0.10UF	K	M2X1K1
C777,778			CC73GCH1H100D	CHIP C	10PF	D	E1
C777,778			CC73GCH1H100D	CHIP C	10PF	D	KR1M1
C777,778			CC73GCH1H100D	CHIP C	10PF	D	K2M5X3
C777,778			CC73GCH1H100D	CHIP C	10PF	D	M2X1K1
C779			CK73GB1A105K	CHIP C	1.0UF	K	E1
C779			CK73GB1A105K	CHIP C	1.0UF	K	KR1M1
C779			CK73GB1A105K	CHIP C	1.0UF	K	K2M5X3
C779			CK73GB1A105K	CHIP C	1.0UF	K	M2X1K1
C782			CK73HB1E103K	CHIP C	0.010UF	K	E1
C782			CK73HB1E103K	CHIP C	0.010UF	K	KR1M1
C782			CK73HB1E103K	CHIP C	0.010UF	K	K2M5X3
C782			CK73HB1E103K	CHIP C	0.010UF	K	M2X1K1
C784			CK73HB1E103K	CHIP C	0.010UF	K	E1
C784			CK73HB1E103K	CHIP C	0.010UF	K	KR1M1
C784			CK73HB1E103K	CHIP C	0.010UF	K	K2M5X3
C784			CK73HB1E103K	CHIP C	0.010UF	K	M2X1K1
C786,787			CK73GB1A105K	CHIP C	1.0UF	K	E1
C786,787			CK73GB1A105K	CHIP C	1.0UF	K	KR1M1
C786,787			CK73GB1A105K	CHIP C	1.0UF	K	K2M5X3
C786,787			CK73GB1A105K	CHIP C	1.0UF	K	M2X1K1
C789-792			CK73GB1A105K	CHIP C	1.0UF	K	E1
C789-792			CK73GB1A105K	CHIP C	1.0UF	K	KR1M1
C789-792			CK73GB1A105K	CHIP C	1.0UF	K	K2M5X3
C789-792			CK73GB1A105K	CHIP C	1.0UF	K	M2X1K1
C901-904			C90-6768-05	ELECTRO	0.22UF	16WV	

Ref. No.	Add	New	Parts No.	Description			Destination
C905			CK73GB1A105K	CHIP C	1.0UF	K	
C906			CD04BA1E330M	ELECTRO	33UF	25WV	
C907			C90-6780-05	ELECTRO	1UF	16WV	
C909			CK73GB1A105K	CHIP C	1.0UF	K	
C913-920			CK73GB1H222K	CHIP C	2200PF	K	
C921-928			CC73GCH1H221J	CHIP C	220PF	J	
C931-934			CC73GCH1H101J	CHIP C	100PF	J	
CN201			E41-2237-05	FLAT CABLE CONNECTOR			
CN202			E40-6470-05	PIN ASSY			
CN203,204			E41-2979-05	FLAT CABLE CONNECTOR			
CN205			E41-2958-05	PIN ASSY			
J1			E58-1043-05	RECTANGULAR RECEPTACLE (DCCN)			
J600			E58-1034-05	RECTANGULAR RECEPTACLE (TV-TU)			
J650			E58-1097-05	RECTANGULAR RECEPTACLE (KAB)			KR1Q1
J650			E58-1097-05	RECTANGULAR RECEPTACLE (KAB)			K1K2
J650			E58-1097-05	RECTANGULAR RECEPTACLE (KAB)			M3M4X2
J701			E11-0625-05	PHONE JACK (LGY6502-0900)			
J702			E11-0656-05	PHONE JACK (3.5D YELLOW)			
W500		✲	E30-6883-05	CORD WITH PLUG (ANT)			KM1M2
W500		✲	E30-6883-05	CORD WITH PLUG (ANT)			K1K2M5
W500		✲	E30-6883-05	CORD WITH PLUG (ANT)			M3M4X1
W500		✲	E30-6883-05	CORD WITH PLUG (ANT)			X2R1Q1
W500		✲	E30-6883-05	CORD WITH PLUG (ANT)			X3
F101			F53-0306-05	FUSE(UL,CSA) 5A			KR1Q1
F101			F53-0306-05	FUSE(UL,CSA) 5A			K1K2
F101			F53-0306-05	FUSE(UL,CSA) 5A			M3M4X2
F102			F53-0297-05	FUSE(UL,CSA) 1.6A			
⚠ L1			L33-2436-05	CHOKE COIL ASSY			
L104			L41-1005-33	SMALL FIXED INDUCTOR (10U)			
L451,452			L41-1005-33	SMALL FIXED INDUCTOR (10U)			
L502			L41-4795-33	SMALL FIXED INDUCTOR (4.7U)			
L505			L92-0329-05	CHIP FERRITE			E1
X500			L77-2002-05	CRYSTAL RESONATOR			E1M5
X500			L77-2002-05	CRYSTAL RESONATOR			KR1M1
X500			L77-2002-05	CRYSTAL RESONATOR			M2Q1M3
X500			L77-2002-05	CRYSTAL RESONATOR			M4K1K2
X751			L77-3810-05	CRYSTAL RESONATOR (11.2896MHZ)			E1
X751			L77-3810-05	CRYSTAL RESONATOR (11.2896MHZ)			KR1M1
X751			L77-3810-05	CRYSTAL RESONATOR (11.2896MHZ)			K2M5X3
X751			L77-3810-05	CRYSTAL RESONATOR (11.2896MHZ)			M2X1K1
AB	2C		N09-6727-05	TAPTITE SCREW (3X8)			
E	2C		N35-2604-43	BINDING HEAD MACHINE SCREW			KR1Q1
E	2C		N35-2604-43	BINDING HEAD MACHINE SCREW			K1K2
E	2C		N35-2604-43	BINDING HEAD MACHINE SCREW			M3M4X2
R1			RK73EB2E272J	CHIP R	2.7K	J 1/4W	
R2			RK73GB2A102J	CHIP R	1.0K	J 1/10W	
R4			RK73EB2E103J	CHIP R	10K	J 1/4W	
R5			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R6			RK73GB2A103J	CHIP R	10K	J 1/10W	
R7 ,8			RK73GB2A473J	CHIP R	47K	J 1/10W	
R9			RK73EB2E272J	CHIP R	2.7K	J 1/4W	
R10			RK73GB2A102J	CHIP R	1.0K	J 1/10W	
R12			RK73EB2E102J	CHIP R	1.0K	J 1/4W	

M1: DDX7034BT **M2**: DDX7034BTM **M3**: DDX6034 **M4**: DDX6034M **M5**: DNX7340BT (Other Areas)
X1: DDX7034BT **X2**: DDX6034 **X3**: DNX7340BT (Australia) **R1**: DDX7034BT (Latin America)
K: DDX714 **K1**: DNX7140 **K2**: DNX7000EX (North America)
E1: DNX7240BT (Europe) **Q1**: DDX6054 (Russian)

⚠Indicates safety critical compo nents.

PARTS LIST

ELECTRIC UNIT (X34-634x-xx)

Ref. No.	Add	New	Parts No.	Description				Destination
R13 ,14			RK73EB2E622J	CHIP R	6.2K	J	1/4W	
R15			RK73GB2A153J	CHIP R	15K	J	1/10W	
R16			RK73GB2A912J	CHIP R	9.1K	J	1/10W	
R18			RK73FB2B472J	CHIP R	4.7K	J	1/8W	
R19			RK73PB2H102J	CHIP R	1.0K	J	1/2W	
R20			RK73GB2A223J	CHIP R	22K	J	1/10W	
R21			RK73PB2H102J	CHIP R	1.0K	J	1/2W	
R22			RK73FB2B472J	CHIP R	4.7K	J	1/8W	
R24			RK73FB2B000J	CHIP R	0.0	J	1/8W	Q1E1
R25			RK73PB2H102J	CHIP R	1.0K	J	1/2W	KR1M1
R25			RK73PB2H102J	CHIP R	1.0K	J	1/2W	K2M5X3
R25			RK73PB2H102J	CHIP R	1.0K	J	1/2W	M2X1M3
R25			RK73PB2H102J	CHIP R	1.0K	J	1/2W	M4X2K1
R26			RK73GB2A103J	CHIP R	10K	J	1/10W	KR1M1
R26			RK73GB2A103J	CHIP R	10K	J	1/10W	K2M5X3
R26			RK73GB2A103J	CHIP R	10K	J	1/10W	M2X1M3
R26			RK73GB2A103J	CHIP R	10K	J	1/10W	M4X2K1
R27			RK73PB2H102J	CHIP R	1.0K	J	1/2W	KR1M1
R27			RK73PB2H102J	CHIP R	1.0K	J	1/2W	K2M5X3
R27			RK73PB2H102J	CHIP R	1.0K	J	1/2W	M2X1M3
R27			RK73PB2H102J	CHIP R	1.0K	J	1/2W	M4X2K1
R28			RK73GB2A103J	CHIP R	10K	J	1/10W	KR1M1
R28			RK73GB2A103J	CHIP R	10K	J	1/10W	K2M5X3
R28			RK73GB2A103J	CHIP R	10K	J	1/10W	M2X1M3
R28			RK73GB2A103J	CHIP R	10K	J	1/10W	M4X2K1
R29			RK73GB2A222J	CHIP R	2.2K	J	1/10W	KR1M1
R29			RK73GB2A222J	CHIP R	2.2K	J	1/10W	K2M5X3
R29			RK73GB2A222J	CHIP R	2.2K	J	1/10W	M2X1M3
R29			RK73GB2A222J	CHIP R	2.2K	J	1/10W	M4X2K1
R30			RK73EB2E103J	CHIP R	10K	J	1/4W	
R31			RK73GB2A104J	CHIP R	100K	J	1/10W	
R32			RK73GB2A473J	CHIP R	47K	J	1/10W	
R101			RK73FB2B221J	CHIP R	220	J	1/8W	
R102			RK73GH2A243D	CHIP R	24K	D	1/10W	
R103			RK73GH2A432D	CHIP R	4.3K	D	1/10W	
R104			RK73GB2A223J	CHIP R	22K	J	1/10W	
R105			RK73FB2B222J	CHIP R	2.2K	J	1/8W	
R106			RK73GB2A823J	CHIP R	82K	J	1/10W	KR1Q1
R106			RK73GB2A823J	CHIP R	82K	J	1/10W	K1K2
R106			RK73GB2A823J	CHIP R	82K	J	1/10W	M3M4X2
R107			RK73GB2A103J	CHIP R	10K	J	1/10W	KR1Q1
R107			RK73GB2A103J	CHIP R	10K	J	1/10W	K1K2
R107			RK73GB2A103J	CHIP R	10K	J	1/10W	M3M4X2
R108			RK73FB2B221J	CHIP R	220	J	1/8W	E1
R108			RK73FB2B221J	CHIP R	220	J	1/8W	KR1M1
R108			RK73FB2B221J	CHIP R	220	J	1/8W	K2M5X3
R108			RK73FB2B221J	CHIP R	220	J	1/8W	M2X1K1
R109			RK73GB2A4R7J	CHIP R	4.7	J	1/10W	
R110			RK73GB2A473J	CHIP R	47K	J	1/10W	KR1Q1
R110			RK73GB2A473J	CHIP R	47K	J	1/10W	K1K2
R110			RK73GB2A473J	CHIP R	47K	J	1/10W	M3M4X2
R114			RK73GH2A153D	CHIP R	15K	D	1/10W	E1
R114			RK73GH2A153D	CHIP R	15K	D	1/10W	KR1M1
R114			RK73GH2A153D	CHIP R	15K	D	1/10W	K2M5X3
R114			RK73GH2A153D	CHIP R	15K	D	1/10W	M2X1K1

Ref. No.	Add	New	Parts No.	Description				Destination
R115			RK73FB2B221J	CHIP R	220	J	1/8W	
R116			RK73GH2A243D	CHIP R	24K	D	1/10W	
R117			RK73GH2A432D	CHIP R	4.3K	D	1/10W	
R118			RK73GH2A512D	CHIP R	5.1K	D	1/10W	E1
R118			RK73GH2A512D	CHIP R	5.1K	D	1/10W	KR1M1
R118			RK73GH2A512D	CHIP R	5.1K	D	1/10W	K2M5X3
R118			RK73GH2A512D	CHIP R	5.1K	D	1/10W	M2X1K1
R120			RK73FB2B223J	CHIP R	22K	J	1/8W	
R121,122			RK73GB2A101J	CHIP R	100	J	1/10W	
R123			RK73GB2A2R2J	CHIP R	2.2	J	1/10W	
R125-127			RK73EB2E100J	CHIP R	10	J	1/4W	E1
R125-127			RK73EB2E100J	CHIP R	10	J	1/4W	KR1M1
R125-127			RK73EB2E100J	CHIP R	10	J	1/4W	K2M5X3
R125-127			RK73EB2E100J	CHIP R	10	J	1/4W	M2X1K1
R133			RK73GB2A000J	CHIP R	0.0	J	1/10W	E1
R133			RK73GB2A000J	CHIP R	0.0	J	1/10W	KR1M1
R133			RK73GB2A000J	CHIP R	0.0	J	1/10W	K2M5X3
R133			RK73GB2A000J	CHIP R	0.0	J	1/10W	M2X1K1
R135			RK73GB2A000J	CHIP R	0.0	J	1/10W	E1
R135			RK73GB2A000J	CHIP R	0.0	J	1/10W	KR1M1
R135			RK73GB2A000J	CHIP R	0.0	J	1/10W	K2M5X3
R135			RK73GB2A000J	CHIP R	0.0	J	1/10W	M2X1K1
R301,302			RK73GB2A303J	CHIP R	30K	J	1/10W	
R303			RK73GB2A272J	CHIP R	2.7K	J	1/10W	
R304			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R305			RK73GH2A333D	CHIP R	33K	D	1/10W	
R306			RK73GH2A222D	CHIP R	2.2K	D	1/10W	
R307			RK73GH2A153D	CHIP R	15K	D	1/10W	
R308			RK73GB2A302J	CHIP R	3.0K	J	1/10W	
R309			RK73GB2A623J	CHIP R	62K	J	1/10W	
R310			RK73GB2A222J	CHIP R	2.2K	J	1/10W	
R311			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R312,313			RK73GB2A473J	CHIP R	47K	J	1/10W	
R314			RK73GB2A222J	CHIP R	2.2K	J	1/10W	
R315			RK73GB2A682J	CHIP R	6.8K	J	1/10W	
R316			RK73GB2A104J	CHIP R	100K	J	1/10W	
R317			RK73GB2A473J	CHIP R	47K	J	1/10W	
R318			RK73GB2A682J	CHIP R	6.8K	J	1/10W	
R319			RK73GB2A104J	CHIP R	100K	J	1/10W	
R320			RK73GB2A473J	CHIP R	47K	J	1/10W	
R321			RK73GB2A222J	CHIP R	2.2K	J	1/10W	
R401			RK73GB2A104J	CHIP R	100K	J	1/10W	
R402			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R403			RK73GB2A103J	CHIP R	10K	J	1/10W	
R404,405			RK73GB2A101J	CHIP R	100	J	1/10W	
R407			RK73EB2E4R7J	CHIP R	4.7	J	1/4W	
R408			RK73GB2A103J	CHIP R	10K	J	1/10W	
R417,418			RK73GB2A101J	CHIP R	100	J	1/10W	
R451			RK73GB2A101J	CHIP R	100	J	1/10W	
R453			RK73GB2A101J	CHIP R	100	J	1/10W	
R456			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R462			RK73GB2A000J	CHIP R	0.0	J	1/10W	K1K2M5
R462			RK73GB2A000J	CHIP R	0.0	J	1/10W	X3E1
R463			RK73GH2A471D	CHIP R	470	D	1/10W	
R465			RK73GB2A000J	CHIP R	0.0	J	1/10W	K1K2M5

M1: DDX7034BT **M2**: DDX7034BTM **M3**: DDX6034 **M4**: DDX6034M **M5**: DNX7340BT (Other Areas)
X1: DDX7034BT **X2**: DDX6034 **X3**: DNX7340BT (Australia) **R1**: DDX7034BT (Latin America)
K: DDX714 **K1**: DNX7140 **K2**: DNX7000EX (North America)
E1: DNX7240BT (Europe) **Q1**: DDX6054 (Russian)

⚠Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-634x-xx)

Ref. No.	Add	New	Parts No.	Description			Destination
R465			RK73GB2A000J	CHIP R	0.0	J 1/10W	X3E1
R465,466			RK73GB2A000J	CHIP R	0.0	J 1/10W	KM1M2
R465,466			RK73GB2A000J	CHIP R	0.0	J 1/10W	M3M4X1
R465,466			RK73GB2A000J	CHIP R	0.0	J 1/10W	X2R1Q1
R467			RK73GH2A471D	CHIP R	470	D 1/10W	
R471-473			RK73GB2A000J	CHIP R	0.0	J 1/10W	KR1Q1
R471-473			RK73GB2A000J	CHIP R	0.0	J 1/10W	K1K2
R471-473			RK73GB2A000J	CHIP R	0.0	J 1/10W	M3M4X2
R475,476			RK73GB2A000J	CHIP R	0.0	J 1/10W	E1
R475,476			RK73GB2A000J	CHIP R	0.0	J 1/10W	KR1M1
R475,476			RK73GB2A000J	CHIP R	0.0	J 1/10W	K2M5X3
R475,476			RK73GB2A000J	CHIP R	0.0	J 1/10W	M2X1K1
R486			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R500			RK73GB2A222J	CHIP R	2.2K	J 1/10W	E1M5
R500			RK73GB2A222J	CHIP R	2.2K	J 1/10W	KR1M1
R500			RK73GB2A222J	CHIP R	2.2K	J 1/10W	M2Q1M3
R500			RK73GB2A222J	CHIP R	2.2K	J 1/10W	M4K1K2
R501			RK73GB2A223J	CHIP R	22K	J 1/10W	
R502			RK73GB2A102J	CHIP R	1.0K	J 1/10W	
R504,505			RK73GB2A222J	CHIP R	2.2K	J 1/10W	E1M5
R504,505			RK73GB2A222J	CHIP R	2.2K	J 1/10W	KR1M1
R504,505			RK73GB2A222J	CHIP R	2.2K	J 1/10W	M2Q1M3
R504,505			RK73GB2A222J	CHIP R	2.2K	J 1/10W	M4K1K2
R506			RK73GB2A4R7J	CHIP R	4.7	J 1/10W	E1M5
R506			RK73GB2A4R7J	CHIP R	4.7	J 1/10W	KR1M1
R506			RK73GB2A4R7J	CHIP R	4.7	J 1/10W	M2Q1M3
R506			RK73GB2A4R7J	CHIP R	4.7	J 1/10W	M4K1K2
R509			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R511			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R515-517			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R598			RK73GB2A4R7J	CHIP R	4.7	J 1/10W	E1
R598			RK73GB2A4R7J	CHIP R	4.7	J 1/10W	KR1M1
R598			RK73GB2A4R7J	CHIP R	4.7	J 1/10W	K2M5X3
R598			RK73GB2A4R7J	CHIP R	4.7	J 1/10W	M2X1K1
R600			RK73EB2E200J	CHIP R	20	J 1/4W	
R601			RK73EB2E100J	CHIP R	10	J 1/4W	
R602			RK73EB2E200J	CHIP R	20	J 1/4W	
R603			RK73EB2E102J	CHIP R	1.0K	J 1/4W	
R604			RK73EB2E101J	CHIP R	100	J 1/4W	
R605			RK73EB2E102J	CHIP R	1.0K	J 1/4W	
R606-608			RK73EB2E101J	CHIP R	100	J 1/4W	
R609,610			RK73EB2E102J	CHIP R	1.0K	J 1/4W	
R611			RK73EB2E101J	CHIP R	100	J 1/4W	
R612			RK73GB2A100J	CHIP R	10	J 1/10W	
R613			RK73GB2A750J	CHIP R	75	J 1/10W	
R614			RK73GB2A473J	CHIP R	47K	J 1/10W	
R615			RK73GB2A000J	CHIP R	0.0	J 1/10W	M1M2X1
R615			RK73GB2A000J	CHIP R	0.0	J 1/10W	Q1M3M4
R615			RK73GB2A000J	CHIP R	0.0	J 1/10W	X2E1M5
R615			RK73GB2A000J	CHIP R	0.0	J 1/10W	X3
R616			RK73GB2A473J	CHIP R	47K	J 1/10W	KR1K1
R616			RK73GB2A473J	CHIP R	47K	J 1/10W	K2
R617			RK73GB2A101J	CHIP R	100	J 1/10W	KR1K1
R617			RK73GB2A101J	CHIP R	100	J 1/10W	K2
R618-620			RK73GB2A100J	CHIP R	10	J 1/10W	

Ref. No.	Add	New	Parts No.	Description			Destination
R650,651			RK73EB2E200J	CHIP R	20	J 1/4W	KR1Q1
R650,651			RK73EB2E200J	CHIP R	20	J 1/4W	K1K2
R650,651			RK73EB2E200J	CHIP R	20	J 1/4W	M3M4X2
R652			RK73EB2E100J	CHIP R	10	J 1/4W	KR1Q1
R652			RK73EB2E100J	CHIP R	10	J 1/4W	K1K2
R652			RK73EB2E100J	CHIP R	10	J 1/4W	M3M4X2
R653,654			RK73EB2E102J	CHIP R	1.0K	J 1/4W	KR1Q1
R653,654			RK73EB2E102J	CHIP R	1.0K	J 1/4W	K1K2
R653,654			RK73EB2E102J	CHIP R	1.0K	J 1/4W	M3M4X2
R655			RK73GB2A473J	CHIP R	47K	J 1/10W	
R656,657			RK73GB2A103J	CHIP R	10K	J 1/10W	KR1Q1
R656,657			RK73GB2A103J	CHIP R	10K	J 1/10W	K1K2
R656,657			RK73GB2A103J	CHIP R	10K	J 1/10W	M3M4X2
R658			RK73HB1J472J	CHIP R	4.7K	J 1/16W	KR1Q1
R658			RK73HB1J472J	CHIP R	4.7K	J 1/16W	K1K2
R658			RK73HB1J472J	CHIP R	4.7K	J 1/16W	M3M4X2
R659			RK73GB2A472J	CHIP R	4.7K	J 1/10W	KR1Q1
R659			RK73GB2A472J	CHIP R	4.7K	J 1/10W	K1K2
R659			RK73GB2A472J	CHIP R	4.7K	J 1/10W	M3M4X2
R661-663			RK73EB2E101J	CHIP R	100	J 1/4W	KR1Q1
R661-663			RK73EB2E101J	CHIP R	100	J 1/4W	K1K2
R661-663			RK73EB2E101J	CHIP R	100	J 1/4W	M3M4X2
R664-666			RK73GB2A103J	CHIP R	10K	J 1/10W	KR1Q1
R664-666			RK73GB2A103J	CHIP R	10K	J 1/10W	K1K2
R664-666			RK73GB2A103J	CHIP R	10K	J 1/10W	M3M4X2
R667-669			RK73GB2A100J	CHIP R	10	J 1/10W	KR1Q1
R667-669			RK73GB2A100J	CHIP R	10	J 1/10W	K1K2
R667-669			RK73GB2A100J	CHIP R	10	J 1/10W	M3M4X2
R670			RK73GB2A223J	CHIP R	22K	J 1/10W	KR1Q1
R670			RK73GB2A223J	CHIP R	22K	J 1/10W	K1K2
R670			RK73GB2A223J	CHIP R	22K	J 1/10W	M3M4X2
R673			RK73HB1J103J	CHIP R	10K	J 1/16W	KR1Q1
R673			RK73HB1J103J	CHIP R	10K	J 1/16W	K1K2
R673			RK73HB1J103J	CHIP R	10K	J 1/16W	M3M4X2
R701-703			RK73EB2E100J	CHIP R	10	J 1/4W	
R705,706			RK73GB2A223J	CHIP R	22K	J 1/10W	
R707			RK73GB2A202J	CHIP R	2.0K	J 1/10W	
R709,710			RK73EB2E101J	CHIP R	100	J 1/4W	
R711			RK73GB2A680J	CHIP R	68	J 1/10W	
R722,723			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R725			RK73EB2E4R7J	CHIP R	4.7	J 1/4W	
R726			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R731			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R755			RK73EB2E2R2J	CHIP R	2.2	J 1/4W	E1
R755			RK73EB2E2R2J	CHIP R	2.2	J 1/4W	KR1M1
R755			RK73EB2E2R2J	CHIP R	2.2	J 1/4W	K2M5X3
R755			RK73EB2E2R2J	CHIP R	2.2	J 1/4W	M2X1K1
R757-762			RK73HB1J471J	CHIP R	470	J 1/16W	E1
R757-762			RK73HB1J471J	CHIP R	470	J 1/16W	KR1M1
R757-762			RK73HB1J471J	CHIP R	470	J 1/16W	K2M5X3
R757-762			RK73HB1J471J	CHIP R	470	J 1/16W	M2X1K1
R770			RK73EB2E2R2J	CHIP R	2.2	J 1/4W	E1
R770			RK73EB2E2R2J	CHIP R	2.2	J 1/4W	KR1M1
R770			RK73EB2E2R2J	CHIP R	2.2	J 1/4W	K2M5X3
R770			RK73EB2E2R2J	CHIP R	2.2	J 1/4W	M2X1K1

M1: DDX7034BT **M2**: DDX7034BTM **M3**: DDX6034 **M4**: DDX6034M **M5**: DNX7340BT (Other Areas)
X1: DDX7034BT **X2**: DDX6034 **X3**: DNX7340BT (Australia) **R1**: DDX7034BT (Latin America)
K: DDX714 **K1**: DNX7140 **K2**: DNX7000EX (North America)
E1: DNX7240BT (Europe) **Q1**: DDX6054 (Russian)

⚠Indicates safety critical compo nents.

PARTS LIST

ELECTRIC UNIT (X34-634x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination
R771			RK73GB2A102J	CHIP R 1.0K J 1/10W	E1
R771			RK73GB2A102J	CHIP R 1.0K J 1/10W	KR1M1
R771			RK73GB2A102J	CHIP R 1.0K J 1/10W	K2M5X3
R771			RK73GB2A102J	CHIP R 1.0K J 1/10W	M2X1K1
R773			RK73GB2A105J	CHIP R 1.0M J 1/10W	E1
R773			RK73GB2A105J	CHIP R 1.0M J 1/10W	KR1M1
R773			RK73GB2A105J	CHIP R 1.0M J 1/10W	K2M5X3
R773			RK73GB2A105J	CHIP R 1.0M J 1/10W	M2X1K1
R780			RK73GB2A000J	CHIP R 0.0 J 1/10W	E1
R780			RK73GB2A000J	CHIP R 0.0 J 1/10W	KR1M1
R780			RK73GB2A000J	CHIP R 0.0 J 1/10W	K2M5X3
R780			RK73GB2A000J	CHIP R 0.0 J 1/10W	M2X1K1
R781-783			RK73HB1J101J	CHIP R 100 J 1/16W	E1
R781-783			RK73HB1J101J	CHIP R 100 J 1/16W	KR1M1
R781-783			RK73HB1J101J	CHIP R 100 J 1/16W	K2M5X3
R781-783			RK73HB1J101J	CHIP R 100 J 1/16W	M2X1K1
R784			RK73GB2A104J	CHIP R 100K J 1/10W	E1
R784			RK73GB2A104J	CHIP R 100K J 1/10W	KR1M1
R784			RK73GB2A104J	CHIP R 100K J 1/10W	K2M5X3
R784			RK73GB2A104J	CHIP R 100K J 1/10W	M2X1K1
R785			RK73GB2A000J	CHIP R 0.0 J 1/10W	E1
R785			RK73GB2A000J	CHIP R 0.0 J 1/10W	KR1M1
R785			RK73GB2A000J	CHIP R 0.0 J 1/10W	K2M5X3
R785			RK73GB2A000J	CHIP R 0.0 J 1/10W	M2X1K1
R832			RK73GB2A000J	CHIP R 0.0 J 1/10W	E1
R832			RK73GB2A000J	CHIP R 0.0 J 1/10W	KR1M1
R832			RK73GB2A000J	CHIP R 0.0 J 1/10W	K2M5X3
R832			RK73GB2A000J	CHIP R 0.0 J 1/10W	M2X1K1
R837			RK73GB2A000J	CHIP R 0.0 J 1/10W	E1
R837			RK73GB2A000J	CHIP R 0.0 J 1/10W	KR1M1
R837			RK73GB2A000J	CHIP R 0.0 J 1/10W	K2M5X3
R837			RK73GB2A000J	CHIP R 0.0 J 1/10W	M2X1K1
R905			RK73GB2A333J	CHIP R 33K J 1/10W	
R906			RK73GB2A123J	CHIP R 12K J 1/10W	
R907			RK73GB2A300J	CHIP R 30 J 1/10W	
R908			RK73GB2A223J	CHIP R 22K J 1/10W	
R909			RK73GB2A221J	CHIP R 220 J 1/10W	
R910			RK73GB2A822J	CHIP R 8.2K J 1/10W	
R911-914			RK73GB2A820J	CHIP R 82 J 1/10W	
R915			RK73GB2A473J	CHIP R 47K J 1/10W	
D1			RM30LF014-102	DIODE	
D2 -4			1SS355	DIODE	
D5			UDZW6.2(B)	ZENER DIODE	
D6			1SS355	DIODE	
D7			UDZW6.2(B)	ZENER DIODE	
D8 ,9			M1F60-6063	DIODE	
D10			1SS355	DIODE	
D11 ,12			M1F60-6063	DIODE	
D13			UDZW4.7(B)	ZENER DIODE	
D104			UDZW6.8(B)	ZENER DIODE	
D301			DA204U	DIODE	
D401-403			DAP202U	DIODE	
D404,405			1SS355	DIODE	
D601-608			UDZW6.2(B)	ZENER DIODE	
D609			CVS10A120M	VARISTOR	

Ref. No.	Add	New	Parts No.	Description	Destination
D610,611			UDZW6.2(B)	ZENER DIODE	
D612,613			UDZW6.8(B)	ZENER DIODE	
D650,651			UDZW6.8(B)	ZENER DIODE	KR1Q1
D650,651			UDZW6.8(B)	ZENER DIODE	K1K2
D650,651			UDZW6.8(B)	ZENER DIODE	M3M4X2
D652			UDZW6.2(B)	ZENER DIODE	KR1Q1
D652			UDZW6.2(B)	ZENER DIODE	K1K2
D652			UDZW6.2(B)	ZENER DIODE	M3M4X2
D653			CVS10A180M	VARISTOR	KR1Q1
D653			CVS10A180M	VARISTOR	K1K2
D653			CVS10A180M	VARISTOR	M3M4X2
D654			1SS355	DIODE	KR1Q1
D654			1SS355	DIODE	K1K2
D654			1SS355	DIODE	M3M4X2
D657,658			UDZW6.2(B)	ZENER DIODE	KR1Q1
D657,658			UDZW6.2(B)	ZENER DIODE	K1K2
D657,658			UDZW6.2(B)	ZENER DIODE	M3M4X2
D662,663			CVS10A180M	VARISTOR	KR1Q1
D662,663			CVS10A180M	VARISTOR	K1K2
D662,663			CVS10A180M	VARISTOR	M3M4X2
D701,702			CVL10C270M300	VARISTOR	
D703-705			CVS10A120M	VARISTOR	
D901			DAP202U	DIODE	
D902			1SS355	DIODE	
IC101			M5237ML-CF0J	ANALOGUE IC	
IC103,104			M5237ML-CF0J	ANALOGUE IC	E1
IC103,104			M5237ML-CF0J	ANALOGUE IC	KR1M1
IC103,104			M5237ML-CF0J	ANALOGUE IC	K2M5X3
IC103,104			M5237ML-CF0J	ANALOGUE IC	M2X1K1
IC104			M5237ML-CF0J	ANALOGUE IC	Q1M3M4
IC104			M5237ML-CF0J	ANALOGUE IC	X2
IC106			XC6201P502PR	ANALOGUE IC	
IC151			LB1836M-TLM-E	ANALOGUE IC	
IC401			E-TDA7415CB	ANALOGUE IC	
IC451		✻	AN15887A-VTU	ANALOGUE IC	
IC500			E-TDA7478AD	ANALOGUE IC	E1M5
IC500			E-TDA7478AD	ANALOGUE IC	KR1M1
IC500			E-TDA7478AD	ANALOGUE IC	M2Q1M3
IC500			E-TDA7478AD	ANALOGUE IC	M4K1K2
IC600			74AHCT1G08GW	MOS-IC	KR1K1
IC600			74AHCT1G08GW	MOS-IC	K2
IC651			74AHCT08PW	MOS-IC	KR1Q1
IC651			74AHCT08PW	MOS-IC	K1K2
IC651			74AHCT08PW	MOS-IC	M3M4X2
IC751			AK7600VF	MOS-IC	E1
IC751			AK7600VF	MOS-IC	KR1M1
IC751			AK7600VF	MOS-IC	K2M5X3
IC751			AK7600VF	MOS-IC	M2X1K1
IC901			E-TDA7850A	ANALOGUE IC	
Q1			DTC124EUA	DIGITAL TRANSISTOR	
Q2			2SA1576A	TRANSISTOR	
Q3			DTC124EUA	DIGITAL TRANSISTOR	
Q4			2SC4081	TRANSISTOR	
Q5			2SB1188(Q,R)	TRANSISTOR	
Q6			2SA1576A	TRANSISTOR	

M1: DDX7034BT **M2**: DDX7034BTM **M3**: DDX6034 **M4**: DDX6034M **M5**: DNX7340BT (Other Areas)
X1: DDX7034BT **X2**: DDX6034 **X3**: DNX7340BT (Australia) **R1**: DDX7034BT (Latin America)
K: DDX714 **K1**: DNX7140 **K2**: DNX7000EX (North America)
E1: DNX7240BT (Europe) **Q1**: DDX6054 (Russian)

⚠Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-634x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination
Q7			DTA114EUA	DIGITAL TRANSISTOR	
Q8			DTC143ZUA	DIGITAL TRANSISTOR	
Q9			2SB1188(R)	TRANSISTOR	KR1M1
Q9			2SB1188(R)	TRANSISTOR	K2M5X3
Q9			2SB1188(R)	TRANSISTOR	M2X1M3
Q9			2SB1188(R)	TRANSISTOR	M4X2K1
Q10			2SC4081	TRANSISTOR	KR1M1
Q10			2SC4081	TRANSISTOR	K2M5X3
Q10			2SC4081	TRANSISTOR	M2X1M3
Q10			2SC4081	TRANSISTOR	M4X2K1
Q101			DTC124EUA	DIGITAL TRANSISTOR	
Q102			DTA124EUA	DIGITAL TRANSISTOR	
Q103			DTC124EUA	DIGITAL TRANSISTOR	
Q104			DTA124EUA	DIGITAL TRANSISTOR	
Q105			KTA1046-P	TRANSISTOR	
Q106			DTC124EUA	DIGITAL TRANSISTOR	
Q107			2SB1689	TRANSISTOR	
Q108			DTC143ZUA	DIGITAL TRANSISTOR	KR1Q1
Q108			DTC143ZUA	DIGITAL TRANSISTOR	K1K2
Q108			DTC143ZUA	DIGITAL TRANSISTOR	M3M4X2
Q109			DTC124EUA	DIGITAL TRANSISTOR	E1
Q109			DTC124EUA	DIGITAL TRANSISTOR	KR1M1
Q109			DTC124EUA	DIGITAL TRANSISTOR	K2M5X3
Q109			DTC124EUA	DIGITAL TRANSISTOR	M2X1K1
Q110			DTA124EUA	DIGITAL TRANSISTOR	E1
Q110			DTA124EUA	DIGITAL TRANSISTOR	KR1M1
Q110			DTA124EUA	DIGITAL TRANSISTOR	K2M5X3
Q110			DTA124EUA	DIGITAL TRANSISTOR	M2X1K1
Q111			TPC8110-F	FET	KR1Q1
Q111			TPC8110-F	FET	K1K2
Q111			TPC8110-F	FET	M3M4X2
Q115			DTC124EUA	DIGITAL TRANSISTOR	
Q116			DTA124EUA	DIGITAL TRANSISTOR	
Q117			2SB1449(R)-E	TRANSISTOR	
Q118			KTA1046-P	TRANSISTOR	
Q119			2SC4081	TRANSISTOR	
Q120			2SB1184(Q,R)	TRANSISTOR	E1
Q120			2SB1184(Q,R)	TRANSISTOR	KR1M1
Q120			2SB1184(Q,R)	TRANSISTOR	K2M5X3
Q120			2SB1184(Q,R)	TRANSISTOR	M2X1K1
Q301-305			2SC4081	TRANSISTOR	
Q306			2SA1576A	TRANSISTOR	
Q307			2SC4081	TRANSISTOR	
Q308			2SA1576A	TRANSISTOR	
Q500			DTC143ZUA	DIGITAL TRANSISTOR	
Q501			2SA1577	TRANSISTOR	
Q650,651			2SC4081	TRANSISTOR	KR1Q1
Q650,651			2SC4081	TRANSISTOR	K1K2
Q650,651			2SC4081	TRANSISTOR	M3M4X2
Q653,654			DTC144EUA	DIGITAL TRANSISTOR	KR1Q1
Q653,654			DTC144EUA	DIGITAL TRANSISTOR	K1K2
Q653,654			DTC144EUA	DIGITAL TRANSISTOR	M3M4X2
Q656,657			DTC143ZUA	DIGITAL TRANSISTOR	
Q659			DTC143ZUA	DIGITAL TRANSISTOR	
Q660			DTC114TUA	DIGITAL TRANSISTOR	

Ref. No.	Add	New	Parts No.	Description	Destination
TH901			PRF18BE471QS2	POSITIVE RESISTOR	
A500			X86-4030-11	FRONT-END UNIT	KR1X1
A500			X86-4030-11	FRONT-END UNIT	X2K1K2
A500			X86-4030-11	FRONT-END UNIT	X3
A500			X86-4032-70	FRONT-END UNIT	M1M2Q1
A500			X86-4032-70	FRONT-END UNIT	3M4E1
A500			X86-4032-70	FRONT-END UNIT	M5
A501		✻	X89-3062-72	DAUGHTER UNIT	E1

VIDEO UNIT (X35-5010-xx)

Ref. No.	Add	New	Parts No.	Description			Destination
C1			CK73GB1H103K	CHIP C	0.010UF	K	
C2			CK73GB1H104K	CHIP C	0.10UF	K	
C3			CK73EB1E106K	CHIP C	10UF	K	
C4			C93-1383-05	CHIP C	220PF	F	
C5 -8			CK73GB1A105K	CHIP C	1.0UF	K	
C11		✻	C92-2018-05	ELECTRO	82UF	6.3WV	
C12			CK73GB1H103K	CHIP C	0.010UF	K	
C13			CK73GB1H104K	CHIP C	0.10UF	K	
C14 ,15			CK73HB1C333K	CHIP C	0.033UF	K	
C16			CK73HB1E103K	CHIP C	0.010UF	K	
C17 ,18			CC73HCH1H101J	CHIP C	100PF	J	
C19			CK73HB1A683K	CHIP C	0.068UF	K	
C20			CK73HB1E103K	CHIP C	0.010UF	K	
C21			CK73HB1C333K	CHIP C	0.033UF	K	
C22 -24			CC73HCH1H221J	CHIP C	220PF	J	
C25 -28			CC73HCH1H101J	CHIP C	100PF	J	
C29			CC73HCH1H471J	CHIP C	470PF	J	
C30		✻	C93-1509-05	CHIP C	100PF	F	
C31			CK73HB0J474K	CHIP C	0.47UF	K	
C33 -35			CK73HB1E103K	CHIP C	0.010UF	K	
C36			CK73HB1A104K	CHIP C	0.10UF	K	
C37			CK73GB0J106M	CHIP C	10UF	M	
C38			CK73HB0J105K	CHIP C	1.0UF	K	
C39			CK73GB0J225K	CHIP C	2.2UF	K	
C40			CK73EB1E105K	CHIP C	1.0UF	K	
C41 ,42			CK73GB1H103K	CHIP C	0.010UF	K	
C43			CK73HB1E103K	CHIP C	0.010UF	K	
C44 ,45			CK73GB1H104K	CHIP C	0.10UF	K	
C46			CK73HB0J474K	CHIP C	0.47UF	K	
C47 ,48			CK73GB0J106M	CHIP C	10UF	M	
C49			CK73HB0J474K	CHIP C	0.47UF	K	
C50 ,51			CK73GB1H103K	CHIP C	0.010UF	K	
C52 ,53			CK73GB1H104K	CHIP C	0.10UF	K	
C54			CK73HB1E103K	CHIP C	0.010UF	K	
C55 ,56			CK73GB0J106M	CHIP C	10UF	M	
C57			CK73FB1C105K	CHIP C	1.0UF	K	
C58			CC73GCH1H102J	CHIP C	1000PF	J	
C59			C93-1383-05	CHIP C	220PF	F	
C60			CK73HB1H472K	CHIP C	4700PF	K	
C61			CK73HB1A104K	CHIP C	0.10UF	K	
C62			CK73HB0J105K	CHIP C	1.0UF	K	
C63			CK73HB0J474K	CHIP C	0.47UF	K	
C64			CK73HB1E103K	CHIP C	0.010UF	K	
C65 -67			CC73GCH1H102J	CHIP C	1000PF	J	
C68			CK73HB1E223K	CHIP C	0.022UF	K	

M1: DDX7034BT **M2**: DDX7034BTM **M3**: DDX6034 **M4**: DDX6034M **M5**: DNX7340BT (Other Areas)
X1: DDX7034BT **X2**: DDX6034 **X3**: DNX7340BT (Australia) **R1**: DDX7034BT (Latin America)
K: DDX714 **K1**: DNX7140 **K2**: DNX7000EX (North America)
E1: DNX7240BT (Europe) **Q1**: DDX6054 (Russian)

⚠Indicates safety critical compo nents.

PARTS LIST

VIDEO UNIT (X35-5010-xx)

Ref. No.	Add	New	Parts No.	Description			Destination
C69 ,70			CK73GB1H103K	CHIP C	0.010UF	K	
C71			CK73GB1H104K	CHIP C	0.10UF	K	
C72 ,73			CC73GCH1H102J	CHIP C	1000PF	J	
C74			CK73GB1H104K	CHIP C	0.10UF	K	
C75		✻	C92-2017-05	ELECTRO	100UF	4WV	
C76 ,77			CC73GCH1H102J	CHIP C	1000PF	J	
C78 ,79			CK73FB1C106K	CHIP C	10UF	K	
C80 ,81			CK73GB1H103K	CHIP C	0.010UF	K	
C82			CK73FB1C106K	CHIP C	10UF	K	
C83 ,84			CK73GB1H104K	CHIP C	0.10UF	K	
C85			C92-2020-05	ELECTRO	33UF	16WV	
C86 -88			CK73EB1E106K	CHIP C	10UF	K	
C89 -92			C93-1283-05	CHIP C	1.0UF	K	
C93			CK73HB1A104K	CHIP C	0.10UF	K	
C95			CK73FB0J226M	CHIP C	22UF	M	
C96			CK73FB1E475K	CHIP C	4.7UF	K	
C97			CK73FB1C106K	CHIP C	10UF	K	
C98			CK73EB1E106K	CHIP C	10UF	K	
C99		✻	C93-1458-05	CHIP C	1500PF	F	
C100			CK73HB1A104K	CHIP C	0.10UF	K	
C101			CK73EB1E106K	CHIP C	10UF	K	
C103			C93-1273-05	CHIP C	15PF	J	
C104		✻	C93-1465-05	CHIP C	0.015UF	F	
C105			CK73EB1E106K	CHIP C	10UF	K	
C107			CK73FB0J226M	CHIP C	22UF	M	
C108,109			CK73FB1C106K	CHIP C	10UF	K	
C110,111			CK73EB1E106K	CHIP C	10UF	K	
C112			CK73GB1H104K	CHIP C	0.10UF	K	
C113			CK73GB1H103K	CHIP C	0.010UF	K	
C114			CK73EB1E106K	CHIP C	10UF	K	
C115			CK73FB1E475K	CHIP C	4.7UF	K	
C116,117			CK73GB1H103K	CHIP C	0.010UF	K	
C118,119			CK73GB1H104K	CHIP C	0.10UF	K	
C120			CK73GB1H103K	CHIP C	0.010UF	K	
C121			CK73GB1H104K	CHIP C	0.10UF	K	
C122			CK73GB1H103K	CHIP C	0.010UF	K	
C123			CK73FB1E475K	CHIP C	4.7UF	K	
C124-127			CK73EB1E106K	CHIP C	10UF	K	
C128			CK73GB1A105K	CHIP C	1.0UF	K	
C129			CK73FB1C106K	CHIP C	10UF	K	
C130			CK73FB1E475K	CHIP C	4.7UF	K	
C131			CK73FB0J226M	CHIP C	22UF	M	
C132			CK73FB1E475K	CHIP C	4.7UF	K	
C133			CK73GB0J106M	CHIP C	10UF	M	
C201			CK73HB1A104K	CHIP C	0.10UF	K	
C203			CK73HB1A104K	CHIP C	0.10UF	K	
C204			CK73GB1A105K	CHIP C	1.0UF	K	
C205,206			CK73HB1A104K	CHIP C	0.10UF	K	
C207			CK73GB0J106M	CHIP C	10UF	M	
C208-213			CK73HB1A104K	CHIP C	0.10UF	K	
C214			CC73HCH1H820J	CHIP C	82PF	J	
C215,216			CK73HB1A104K	CHIP C	0.10UF	K	
C217			CK73EB1E105K	CHIP C	1.0UF	K	
C218-220			CK73HB1A104K	CHIP C	0.10UF	K	
C221			CK73GB0J106M	CHIP C	10UF	M	

Ref. No.	Add	New	Parts No.	Description			Destination
C222			CK73HB1A104K	CHIP C	0.10UF	K	
C223			CK73EB1E105K	CHIP C	1.0UF	K	
C224			CK73HB1A104K	CHIP C	0.10UF	K	
C225			CK73GB0J106M	CHIP C	10UF	M	
C226-235			CK73HB1A104K	CHIP C	0.10UF	K	
C236			CK73HB1E103K	CHIP C	0.010UF	K	
C237,238			CK73HB1A104K	CHIP C	0.10UF	K	
C239-245			CK73HB1E103K	CHIP C	0.010UF	K	
C246			CK73GB0J106M	CHIP C	10UF	M	
C247			CK73HB1A104K	CHIP C	0.10UF	K	
C249			CK73GB0J106M	CHIP C	10UF	M	
C250-254			CK73HB1A104K	CHIP C	0.10UF	K	
C255			CC73HCH1H150J	CHIP C	15PF	J	
C256			CK73GB0J106M	CHIP C	10UF	M	
C257			CC73HCH1H180J	CHIP C	18PF	J	
C258-263			CK73HB1A104K	CHIP C	0.10UF	K	
C265,266			CK73FB0J226M	CHIP C	22UF	M	
C267-273			CK73HB1A104K	CHIP C	0.10UF	K	
C274,275			CK73FB0J226M	CHIP C	22UF	M	
C277-279			CC73HCH1H101J	CHIP C	100PF	J	
C281,282			CK73HB1E103K	CHIP C	0.010UF	K	
C283-285			CK73GB0J106M	CHIP C	10UF	M	
C286-288			CK73FB0J226M	CHIP C	22UF	M	
C289			CK73GB0J106M	CHIP C	10UF	M	
C290			CK73HB1E103K	CHIP C	0.010UF	K	
C291			CK73HB1A104K	CHIP C	0.10UF	K	
C292			CK73HB1E103K	CHIP C	0.010UF	K	
C293			CK73HB1A104K	CHIP C	0.10UF	K	
C294			CK73HB1E103K	CHIP C	0.010UF	K	
C295			CK73GB1H104K	CHIP C	0.10UF	K	
C296			CK73HB1E103K	CHIP C	0.010UF	K	
C297			CK73GB1H104K	CHIP C	0.10UF	K	
C298			CK73HB1E103K	CHIP C	0.010UF	K	
C299			CK73HB1A104K	CHIP C	0.10UF	K	
C300			CK73HB1E103K	CHIP C	0.010UF	K	
C301			CK73GB1H104K	CHIP C	0.10UF	K	
C391-397			CC73HCH1H102J	CHIP C	1000PF	J	
C398			CK73HB1A104K	CHIP C	0.10UF	K	
C399			CK73GB0J106M	CHIP C	10UF	M	
C404			CK73FB1C106K	CHIP C	10UF	K	
C406			CC73HCH1H560J	CHIP C	56PF	J	
C407			CK73FB1C106K	CHIP C	10UF	K	
C408			CK73HB1E103K	CHIP C	0.010UF	K	
C409			CK73FB1C106K	CHIP C	10UF	K	
C410			CK73HB1E103K	CHIP C	0.010UF	K	
C411,412			CK73FB1C106K	CHIP C	10UF	K	
C413			CK73GB1H104K	CHIP C	0.10UF	K	
C414			CC73HCH1H101J	CHIP C	100PF	J	
C415			CK73FB1C106K	CHIP C	10UF	K	
C416			CK73GB0J106M	CHIP C	10UF	M	
C417			CK73HB1E103K	CHIP C	0.010UF	K	
C418			CK73GB0J106M	CHIP C	10UF	M	
C419			CK73HB1E103K	CHIP C	0.010UF	K	
C500			CK73FB0J106K	CHIP C	10UF	K	
C501,502			CK73HB1E103K	CHIP C	0.010UF	K	

M1: DDX7034BT **M2**: DDX7034BTM **M3**: DDX6034 **M4**: DDX6034M **M5**: DNX7340BT (Other Areas)
X1: DDX7034BT **X2**: DDX6034 **X3**: DNX7340BT (Australia) **R1**: DDX7034BT (Latin America)
K: DDX714 **K1**: DNX7140 **K2**: DNX7000EX (North America)
E1: DNX7240BT (Europe) **Q1**: DDX6054 (Russian)

⚠Indicates safety critical components.

PARTS LIST

VIDEO UNIT (X35-5010-xx)

Ref. No.	Add	New	Parts No.	Description	Destination
C600			CK73GB1H103K	CHIP C 0.010UF K	
C603			CK73FB0J226M	CHIP C 22UF M	
C700			CC73HCH1H101J	CHIP C 100PF J	
C701,702			CK73GB0J106M	CHIP C 10UF M	
C703			CK73FB0J226M	CHIP C 22UF M	
C704-710			CC73HCH1H151J	CHIP C 150PF J	
C711			CK73HB1A104K	CHIP C 0.10UF K	
C713			CK73GB0J106M	CHIP C 10UF M	
CN1			E41-2985-05	FLAT CABLE CONNECTOR	
CN2			E41-2642-05	PIN ASSY	
CN200			E41-2359-05	PIN ASSY	
CN201			E41-2594-05	FLAT CABLE CONNECTOR	
CN500			E41-2088-05	FLAT CABLE CONNECTOR	
CN600		✻	E41-3102-05	FLAT CABLE CONNECTOR	
J1 ,2			E04-0433-05	RF COAXIAL CABLE RECEPTACLE	E1
J1 ,2			E04-0433-05	RF COAXIAL CABLE RECEPTACLE	KR1M1
J1 ,2			E04-0433-05	RF COAXIAL CABLE RECEPTACLE	K2M5X3
J1 ,2			E04-0433-05	RF COAXIAL CABLE RECEPTACLE	M2X1K1
L1			L33-2370-05	CHOKE COIL	
L2		✻	L33-2520-05	CHOKE COIL	
L3			L33-2369-05	CHOKE COIL	
L4 -6		✻	L33-2517-05	CHOKE COIL	
L7		✻	L33-2513-05	CHOKE COIL	
L8		✻	L33-2534-05	CHOKE COIL	
L9		✻	L33-2514-05	CHOKE COIL	
L10		✻	L33-2351-05	CHOKE COIL	
L11			L41-1005-39	SMALL FIXED INDUCTOR (10UH/2520	
L12			L92-0319-05	CHIP FERRITE	
L13			L41-1005-39	SMALL FIXED INDUCTOR (10UH/2520	
L14			L19-0788-05	TRANSFORMER FOR CONVERTER	
L15			L33-2454-05	CHOKE COIL	
L16 ,17			L41-1005-39	SMALL FIXED INDUCTOR (10UH/2520	
L201-203			L41-1005-39	SMALL FIXED INDUCTOR (10UH/2520	
L204			L41-8281-15	SMALL FIXED INDUCTOR (0.82U)	
L205			L41-1005-39	SMALL FIXED INDUCTOR (10UH/2520	
L207-212			L41-1005-39	SMALL FIXED INDUCTOR (10UH/2520	
L214			L41-1005-39	SMALL FIXED INDUCTOR (10UH/2520	
L215			L92-0364-05	CHIP FERRITE	
L216,217			L92-0319-05	CHIP FERRITE	
L218,219			L41-1005-39	SMALL FIXED INDUCTOR (10UH/2520	
L220,221			L92-0319-05	CHIP FERRITE	
L224			L92-0378-05	CHIP FERRITE	
L225-228			L92-0373-05	CHIP FERRITE	
L229			L92-0378-05	CHIP FERRITE	
L248		✻	L92-0667-05	CHIP FERRITE	
L249,250		✻	L92-0668-05	CHIP FERRITE	
L401-405			L41-1005-39	SMALL FIXED INDUCTOR (10UH/2520	
L600			L41-1005-39	SMALL FIXED INDUCTOR (10UH/2520	
X200		✻	L77-2996-05	CRYSTAL RESONATOR (14.31818MHZ)	
CP201-203			RK74HB1J101J	CHIP-COM 100 J 1/16W	
CP207-211			RK74HB1J101J	CHIP-COM 100 J 1/16W	
CP212-215			RK74HB1J560J	CHIP-COM 56 J 1/16W	
CP217-220			RK74HB1J820J	CHIP-COM 82 J 1/16W	
R1			RK73GH2A301D	CHIP R 300 D 1/10W	

Ref. No.	Add	New	Parts No.	Description	Destination
R2			RK73HH1J434D	CHIP R 430K D 1/16W	
R3			RK73HB1J103J	CHIP R 10K J 1/16W	
R4			RK73HH1J104D	CHIP R 100K D 1/16W	
R5			RK73GH2A752D	CHIP R 7.5K D 1/10W	
R7			RK73HB1J100J	CHIP R 10 J 1/16W	
R8			RK73EB2E100J	CHIP R 10 J 1/4W	
R9 ,10			RK73HB1J101J	CHIP R 100 J 1/16W	
R11 ,12			RK73FB2B000J	CHIP R 0.0 J 1/8W	
R13			RK73HH1J303D	CHIP R 30K D 1/16W	
R14			RK73HH1J203D	CHIP R 20K D 1/16W	
R15			RK73HH1J123D	CHIP R 12K D 1/16W	
R16		✻	RK73HH1J302D	CHIP R 3.0K D 1/16W	
R17			RK73HB1J303J	CHIP R 30K J 1/16W	
R18			RK73HB1J162J	CHIP R 1.6K J 1/16W	
R19 ,20			RK73HB1J103J	CHIP R 10K J 1/16W	
R22			RK73HB1J473J	CHIP R 47K J 1/16W	
R23			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R24			RK73FB2B000J	CHIP R 0.0 J 1/8W	
R25			RK73HB1J203J	CHIP R 20K J 1/16W	
R27			RK73HH1J163D	CHIP R 16K D 1/16W	
R28			RK73HH1J202D	CHIP R 2.0K D 1/16W	
R29			RK73HH1J333D	CHIP R 33K D 1/16W	
R30		✻	RK73HH1J513D	CHIP R 51K D 1/16W	
R31			RK73HH1J683D	CHIP R 68K D 1/16W	
R32			RK73HH1J163D	CHIP R 16K D 1/16W	
R33		✻	RK73HH1J513D	CHIP R 51K D 1/16W	
R34 -38			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R39			RK73HB1J103J	CHIP R 10K J 1/16W	
R40			RK73HB1J682J	CHIP R 6.8K J 1/16W	
R41			RK73HB1J103J	CHIP R 10K J 1/16W	
R43			RK73HB1J103J	CHIP R 10K J 1/16W	
R45			RK73EB2E220J	CHIP R 22 J 1/4W	
R46			RK73HB1J103J	CHIP R 10K J 1/16W	
R47 ,48			RK73HB1J220J	CHIP R 22 J 1/16W	
R50			RK73HB1J101J	CHIP R 100 J 1/16W	
R51			RK73HB1J103J	CHIP R 10K J 1/16W	
R52			RK73HB1J512J	CHIP R 5.1K J 1/16W	
R53 ,54			RK73HB1J220J	CHIP R 22 J 1/16W	
R55			RK73HB1J512J	CHIP R 5.1K J 1/16W	
R56			RK73HB1J563J	CHIP R 56K J 1/16W	
R57			RK73HB1J363J	CHIP R 36K J 1/16W	
R58			RK73HB1J512J	CHIP R 5.1K J 1/16W	
R59			RK73HB1J123J	CHIP R 12K J 1/16W	
R60			RK73GH2A301D	CHIP R 300 D 1/10W	
R61			RK73HB1J100J	CHIP R 10 J 1/16W	
R62			RK73EB2E100J	CHIP R 10 J 1/4W	
R63			RK73HB1J103J	CHIP R 10K J 1/16W	
R64			RK73HB1J105J	CHIP R 1.0M J 1/16W	
R65			RK73EB2E100J	CHIP R 10 J 1/4W	
R66 -69			RK73HB1J220J	CHIP R 22 J 1/16W	
R70			RK73HH1J274D	CHIP R 270K D 1/16W	
R71			RK73HH1J473D	CHIP R 47K D 1/16W	
R72 ,73			RK73EB2E100J	CHIP R 10 J 1/4W	
R74			RK73HH1J473D	CHIP R 47K D 1/16W	
R75 ,76			RK73HH1J103D	CHIP R 10K D 1/16W	

M1: DDX7034BT **M2**: DDX7034BTM **M3**: DDX6034 **M4**: DDX6034M **M5**: DNX7340BT (Other Areas)
X1: DDX7034BT **X2**: DDX6034 **X3**: DNX7340BT (Australia) **R1**: DDX7034BT (Latin America)
K: DDX714 **K1**: DNX7140 **K2**: DNX7000EX (North America)
E1: DNX7240BT (Europe) **Q1**: DDX6054 (Russian)

⚠Indicates safety critical compo nents.

PARTS LIST

VIDEO UNIT (X35-5010-xx)

Ref. No.	Add	New	Parts No.	Description				Destination
R78			RK73HB1J472J	CHIP R	4.7K	J	1/16W	
R79		✻	RK73HH1J243D	CHIP R	24K	D	1/16W	
R80			RK73HB1J302J	CHIP R	3.0K	J	1/16W	
R81			RK73HB1J472J	CHIP R	4.7K	J	1/16W	
R82			RK73HH1J681D	CHIP R	680	D	1/16W	
R83			RK73HB1J272J	CHIP R	2.7K	J	1/16W	
R84			RK73HB1J332J	CHIP R	3.3K	J	1/16W	
R85			RK73HH1J912D	CHIP R	9.1K	D	1/16W	
R86			RK73GB2A122J	CHIP R	1.2K	J	1/10W	
R87			RK73HB1J272J	CHIP R	2.7K	J	1/16W	
R88			RK73HH1J153D	CHIP R	15K	D	1/16W	
R89			RK73HH1J622D	CHIP R	6.2K	D	1/16W	
R90			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R91		✻	RK73HH1J621D	CHIP R	620	D	1/16W	
R92			RK73FB2B000J	CHIP R	0.0	J	1/8W	
R93			RK73EB2E2R2J	CHIP R	2.2	J	1/4W	
R94 ,95			RK73FB2B000J	CHIP R	0.0	J	1/8W	
R96 ,97			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R98			RK73FB2B000J	CHIP R	0.0	J	1/8W	
R99 ,100			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R102			RK73HB1J103J	CHIP R	10K	J	1/16W	
R103			RK73HB1J101J	CHIP R	100	J	1/16W	
R105-107			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R108			RK73HB1J101J	CHIP R	100	J	1/16W	
R110,111			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R112			RK73HB1J101J	CHIP R	100	J	1/16W	
R113			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R114,115			RK73HB1J103J	CHIP R	10K	J	1/16W	
R116			RK73HB1J101J	CHIP R	100	J	1/16W	
R117			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R118			RK73HB1J103J	CHIP R	10K	J	1/16W	
R119			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R121,122			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R123			RK73HB1J473J	CHIP R	47K	J	1/16W	
R126,127			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R200,201			RK73HB1J101J	CHIP R	100	J	1/16W	
R202			RK73HB1J330J	CHIP R	33	J	1/16W	
R203			RK73HB1J472J	CHIP R	4.7K	J	1/16W	
R205			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R206			RK73HB1J330J	CHIP R	33	J	1/16W	
R208			RK73HB1J472J	CHIP R	4.7K	J	1/16W	
R211			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R214,215			RK73HB1J101J	CHIP R	100	J	1/16W	
R216,217			RK73HB1J330J	CHIP R	33	J	1/16W	
R218-223			RK73HB1J101J	CHIP R	100	J	1/16W	
R227			RK73HB1J103J	CHIP R	10K	J	1/16W	
R231			RK73HB1J103J	CHIP R	10K	J	1/16W	
R232			RK73HB1J123J	CHIP R	12K	J	1/16W	
R234			RK73HB1J103J	CHIP R	10K	J	1/16W	
R235			RK73HB1J181J	CHIP R	180	J	1/16W	
R236-245			RK73HB1J103J	CHIP R	10K	J	1/16W	
R246			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R247			RK73HB1J101J	CHIP R	100	J	1/16W	
R248			RK73HB1J330J	CHIP R	33	J	1/16W	
R249			RK73HB1J000J	CHIP R	0.0	J	1/16W	

Ref. No.	Add	New	Parts No.	Description				Destination
R250			RK73HB1J101J	CHIP R	100	J	1/16W	
R251			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R253-255			RK73HB1J103J	CHIP R	10K	J	1/16W	
R256			RK73HH1J153D	CHIP R	15K	D	1/16W	
R257			RK73HH1J123D	CHIP R	12K	D	1/16W	
R258			RK73HB1J103J	CHIP R	10K	J	1/16W	
R260			RK73HH1J123D	CHIP R	12K	D	1/16W	
R261			RK73HH1J273D	CHIP R	27K	D	1/16W	
R262			RK73HB1J103J	CHIP R	10K	J	1/16W	
R266			RK73HB1J104J	CHIP R	100K	J	1/16W	
R267			RK73HB1J472J	CHIP R	4.7K	J	1/16W	
R268			RK73HH1J102D	CHIP R	1.0K	D	1/16W	
R269			RK73HB1J472J	CHIP R	4.7K	J	1/16W	
R270			RK73HH1J102D	CHIP R	1.0K	D	1/16W	
R273			RK73HH1J102D	CHIP R	1.0K	D	1/16W	
R274			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R275			RK73HH1J303D	CHIP R	30K	D	1/16W	
R278			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R279			RK73HB1J101J	CHIP R	100	J	1/16W	
R280			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R281			RK73HB1J105J	CHIP R	1.0M	J	1/16W	
R296,297			RK73HB1J472J	CHIP R	4.7K	J	1/16W	
R298-300			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R304-307			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R317-319			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R320,321			RK73HB1J101J	CHIP R	100	J	1/16W	
R323,324			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R326,327			RK73HB1J472J	CHIP R	4.7K	J	1/16W	
R328,329			RK73HB1J560J	CHIP R	56	J	1/16W	
R330			RK73HB1J470J	CHIP R	47	J	1/16W	
R331,332			RK73HB1J820J	CHIP R	82	J	1/16W	
R333,334			RK73HB1J101J	CHIP R	100	J	1/16W	
R336			RK73HB1J472J	CHIP R	4.7K	J	1/16W	
R338-344			RK73HH1J102D	CHIP R	1.0K	D	1/16W	
R345			RK73HH1J473D	CHIP R	47K	D	1/16W	
R347			RK73HB1J103J	CHIP R	10K	J	1/16W	
R348			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R350			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R351			RK73HB1J101J	CHIP R	100	J	1/16W	
R352			RK73EB2E392J	CHIP R	3.9K	J	1/4W	
R353,354			RK73HB1J101J	CHIP R	100	J	1/16W	
R355			RK73HB1J103J	CHIP R	10K	J	1/16W	
R404		✻	RK73HH1J392D	CHIP R	3.9K	D	1/16W	
R405			RK73HB1J222J	CHIP R	2.2K	J	1/16W	
R406			RK73HH1J123D	CHIP R	12K	D	1/16W	
R408			RK73HB1J101J	CHIP R	100	J	1/16W	
R409			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R411			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R413,414			RK73FB2B470J	CHIP R	47	J	1/8W	
R415			RK73HH1J202D	CHIP R	2.0K	D	1/16W	
R416			RK73HH1J102D	CHIP R	1.0K	D	1/16W	
R417			RK73HB1J222J	CHIP R	2.2K	J	1/16W	
R418			RK73HH1J153D	CHIP R	15K	D	1/16W	
R419			RK73HH1J103D	CHIP R	10K	D	1/16W	
R420			RK73HH1J752D	CHIP R	7.5K	D	1/16W	

M1: DDX7034BT **M2**: DDX7034BTM **M3**: DDX6034 **M4**: DDX6034M **M5**: DNX7340BT (Other Areas)
X1: DDX7034BT **X2**: DDX6034 **X3**: DNX7340BT (Australia) **R1**: DDX7034BT (Latin America)
K: DDX714 **K1**: DNX7140 **K2**: DNX7000EX (North America)
E1: DNX7240BT (Europe) **Q1**: DDX6054 (Russian)

⚠Indicates safety critical components.

PARTS LIST

VIDEO UNIT (X35-5010-xx)

Ref. No.	Add	New	Parts No.	Description	Destination
R421			RK73HH1J103D	CHIP R 10K D 1/16W	
R422			RK73HH1J332D	CHIP R 3.3K D 1/16W	
R423			RK73HH1J103D	CHIP R 10K D 1/16W	
R425			RK73HB1J103J	CHIP R 10K J 1/16W	
R426			RK73FB2B000J	CHIP R 0.0 J 1/8W	
R500			RK73FB2B000J	CHIP R 0.0 J 1/8W	
R501,502			RK73HB1J333J	CHIP R 33K J 1/16W	
R504-507			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R512-515			RK73GB2A100J	CHIP R 10 J 1/10W	
R604-607			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R610-613			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R614			RK73EB2E101J	CHIP R 100 J 1/4W	
R615			RK73EB2E121J	CHIP R 120 J 1/4W	
R616-619			RK73EB2E101J	CHIP R 100 J 1/4W	
R620-623			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R624-626			RK73GH2A331D	CHIP R 330 D 1/10W	
R627-629			RK73EB2E100J	CHIP R 10 J 1/4W	
R632			RK73HB1J221J	CHIP R 220 J 1/16W	
R633			RK73EB2E100J	CHIP R 10 J 1/4W	
R634-636			RK73GH2A361D	CHIP R 360 D 1/10W	
R640,641			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R642-648			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R649,650			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R651			RK73GH2A331D	CHIP R 330 D 1/10W	
R652			RK73GH2A361D	CHIP R 360 D 1/10W	
R653-656			RK73HB1J473J	CHIP R 47K J 1/16W	
D1			1SS355	DIODE	
D2			EC31QS04AG	DIODE	
D3			MA2S784-F	DIODE	
D4			DAP202U	DIODE	
D5			1SS355	DIODE	
D6			EC31QS04AG	DIODE	
D7			EP05Q04	DIODE	
D8			EP05Q06	DIODE	
D9			EP05Q04	DIODE	
D10			DA204U	DIODE	
D12			DA204U	DIODE	
D100			DA204U	DIODE	
D200			DA204U	DIODE	
D500			DA204U	DIODE	
D501-504			CVS10A120M	VARISTOR	
D600,601			DA204U	DIODE	
D603,604			CVL10C270M300	VARISTOR	
D607-612			CVS10A120M	VARISTOR	
D613-616			CVS10A180M	VARISTOR	
IC1			XC6219B332PR	ANALOGUE IC	
IC2			XC6219B182PR	ANALOGUE IC	
IC3		✻	OZ9922ITN-A11	ANALOGUE IC	
IC4			SI-3012KM	ANALOGUE IC	
IC5			XC6201P332PR	ANALOGUE IC	
IC200		✻	AT25DF321-8B1	ROM IC	
IC201		✻	MST7702-A-LF	MOS-IC	
IC203		✻	M12L641645TIR	DRAM IC	
IC400			TA75W558FU-F	ANALOGUE IC	

Ref. No.	Add	New	Parts No.	Description	Destination
IC401			NJM2107F-ZB	ANALOGUE IC	
Q1			DTC114YE	DIGITAL TRANSISTOR	
Q2		✻	TPC8020-H	FET	
Q3			DTA114YE	DIGITAL TRANSISTOR	
Q4		✻	TPCF8104-F	FET	
Q6 -8		✻	TPCP8201-F	DUAL FET	
Q9			DTA114YE	DIGITAL TRANSISTOR	
Q10			DTC114YE	DIGITAL TRANSISTOR	
Q11			2SC4081	TRANSISTOR	
Q12			2SA1576A	TRANSISTOR	
Q13			2SB1188(R)	TRANSISTOR	
Q14			2SC4081	TRANSISTOR	
Q15			2SA1576A	TRANSISTOR	
Q16			2SC4081	TRANSISTOR	
Q17		✻	TPCF8104-F	FET	
Q18			2SC4097	TRANSISTOR	
Q19			DTC114YE	DIGITAL TRANSISTOR	
Q20			DTA114YE	DIGITAL TRANSISTOR	
Q21			2SA1577	TRANSISTOR	
Q22			2SA1576A	TRANSISTOR	
Q23			2SC4081	TRANSISTOR	
Q24			DTC114YE	DIGITAL TRANSISTOR	
Q25			DTA114YE	DIGITAL TRANSISTOR	
Q26			DTC114YE	DIGITAL TRANSISTOR	
Q27			DTA114YE	DIGITAL TRANSISTOR	
Q28			DTC114YE	DIGITAL TRANSISTOR	
Q200			DTC114YE	DIGITAL TRANSISTOR	
Q201			2SC4081	TRANSISTOR	
Q401			2SC4097	TRANSISTOR	
Q402			2SA1577	TRANSISTOR	
Q403			UMZ1N	TRANSISTOR	
Q500			DTC114YE	DIGITAL TRANSISTOR	
Q501			DTC143ZE	DIGITAL TRANSISTOR	
Q502			DTA143ZE	DIGITAL TRANSISTOR	
Q503			DTC143ZE	DIGITAL TRANSISTOR	
Q504			DTA143ZE	DIGITAL TRANSISTOR	
Q505			DTC114YE	DIGITAL TRANSISTOR	
Q600-603			2SC4081	TRANSISTOR	

DVD UNIT (X37-1250-00) IN DVD MECHA.

C3			CK73HB1A104K	CHIP C	0.10UF	K
C4			CC73HCH1H471J	CHIP C	470PF	J
C5 -7			CK73HB1E103K	CHIP C	0.010UF	K
C8			CC73HCH1H471J	CHIP C	470PF	J
C9			CK73HB0J105K	CHIP C	1.0UF	K
C11 ,12			CK73HB1E103K	CHIP C	0.010UF	K
C13			CK73HB1H472K	CHIP C	4700PF	K
C14			CK73GB0J106M	CHIP C	10UF	M
C15			CK73HB1A104K	CHIP C	0.10UF	K
C16			CK73GB0J106M	CHIP C	10UF	M
C17			CK73GB0J475K	CHIP C	4.7UF	K
C18			CK73FB0J226M	CHIP C	22UF	M
C21			CK73GB0J106M	CHIP C	10UF	M
C22 ,23			CK73GB0J475K	CHIP C	4.7UF	K
C50			CK73HB1E103K	CHIP C	0.010UF	K

M1: DDX7034BT **M2**: DDX7034BTM **M3**: DDX6034 **M4**: DDX6034M **M5**: DNX7340BT (Other Areas)
X1: DDX7034BT **X2**: DDX6034 **X3**: DNX7340BT (Australia) **R1**: DDX7034BT (Latin America)
K: DDX714 **K1**: DNX7140 **K2**: DNX7000EX (North America)
E1: DNX7240BT (Europe) **Q1**: DDX6054 (Russian)

⚠Indicates safety critical compo nents.

PARTS LIST

DVD UNIT (X37-1250-00) IN DVD MECHA.

Ref. No.	Add	New	Parts No.	Description			Destination
C51			CK73HB1A104K	CHIP C	0.10UF	K	
C52			CK73HB1E223K	CHIP C	0.022UF	K	
C53			CC73HCH1H470J	CHIP C	47PF	J	
C54			CC73HCH1H102J	CHIP C	1000PF	J	
C55			CC73HCH1H100D	CHIP C	10PF	D	
C56			CC73HCH1H102J	CHIP C	1000PF	J	
C57			CC73HCH1E681J	CHIP C	680PF	J	
C58			CK73HB1H682K	CHIP C	6800PF	K	
C60 ,61			CK73HB1A104K	CHIP C	0.10UF	K	
C62			CC73HCH1H102J	CHIP C	1000PF	J	
C63			CC73HCH1H331J	CHIP C	330PF	J	
C64			CK73HB1H222K	CHIP C	2200PF	K	
C65			CC73HCH1E681J	CHIP C	680PF	J	
C66			CK73HB1H152K	CHIP C	1500PF	K	
C67 ,68			CC73HCH1H102J	CHIP C	1000PF	J	
C69 -72			CC73HCH1H151J	CHIP C	150PF	J	
C73 -82			CK73HB1A104K	CHIP C	0.10UF	K	
C84			CK73HB0J105K	CHIP C	1.0UF	K	
C85			CK73HB1A104K	CHIP C	0.10UF	K	
C90			CK73HB1E103K	CHIP C	0.010UF	K	
C93 -95			CK73HB1A104K	CHIP C	0.10UF	K	
C97			CK73HB1A104K	CHIP C	0.10UF	K	
C99			CK73HB1A104K	CHIP C	0.10UF	K	
C100			CK73FB0J226M	CHIP C	22UF	M	
C101			CK73GB0J475K	CHIP C	4.7UF	K	
C103			CK73FB0J226M	CHIP C	22UF	M	
C104			CK73GB0J475K	CHIP C	4.7UF	K	
C120,121			CK73HB1E223K	CHIP C	0.022UF	K	
C143,144			CC73HCH1H100D	CHIP C	10PF	D	
C202			CK73FB0J226M	CHIP C	22UF	M	
C207,208			CK73HB1A104K	CHIP C	0.10UF	K	
C210			CK73HB1A104K	CHIP C	0.10UF	K	
C212			CK73HB1A104K	CHIP C	0.10UF	K	
C213			CK73HB1H332K	CHIP C	3300PF	K	
C214,215			CK73HB1A104K	CHIP C	0.10UF	K	
C216			CC73HCH1H471J	CHIP C	470PF	J	
C217			CK73HB1A104K	CHIP C	0.10UF	K	
C218			CK73HB1C473K	CHIP C	0.047UF	K	
C219-222			CK73HB1A104K	CHIP C	0.10UF	K	
C223			CK73HB0J105K	CHIP C	1.0UF	K	
C224			CK73HB1A104K	CHIP C	0.10UF	K	
C225			CK73GB0J475K	CHIP C	4.7UF	K	
C227			CK73FB0J226M	CHIP C	22UF	M	
C434			CK73GB0J106M	CHIP C	10UF	M	
C435			CK73HB1E103K	CHIP C	0.010UF	K	
C440-442			CK73FB0J226M	CHIP C	22UF	M	
C446			CC73HCH1H101J	CHIP C	100PF	J	
C447,448			CC73HCH1H102J	CHIP C	1000PF	J	
C449,450			CK73HB1H472K	CHIP C	4700PF	K	
C451			CC73HCH1H102J	CHIP C	1000PF	J	
C452-454			CK73HB0J105K	CHIP C	1.0UF	K	
C455			CK73FB0J226M	CHIP C	22UF	M	
CN1			E41-2594-05	FLAT CABLE CONNECTOR			
CN2			E41-2114-15	FLAT CABLE CONNECTOR			

Ref. No.	Add	New	Parts No.	Description				Destination
CN3			E41-2596-05	FLAT CABLE CONNECTOR				
L1			L92-0365-05	CHIP FERRITE				
L5			L92-0365-05	CHIP FERRITE				
X2			L77-3803-05	CRYSTAL RESONATOR (16.897849MHZ				
CP2 -4			RK74HB1J103J	CHIP-COM	10K	J	1/16W	
CP5 -9			RK74HB1J330J	CHIP-COM	33	J	1/16W	
CP10			RK74HB1J820J	CHIP-COM	82	J	1/16W	
CP11			RK74HB1J103J	CHIP-COM	10K	J	1/16W	
R1			RK73HB1J103J	CHIP R	10K	J	1/16W	
R3 ,4			RK73HB1J103J	CHIP R	10K	J	1/16W	
R5 ,6			RK73HH1J123D	CHIP R	12K	D	1/16W	
R7			RK73HH1J333D	CHIP R	33K	D	1/16W	
R8 ,9			RK73HB1J103J	CHIP R	10K	J	1/16W	
R10			RK73HB1J163J	CHIP R	16K	J	1/16W	
R11			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R13			RK73HB1J103J	CHIP R	10K	J	1/16W	
R16			RK73HB1J103J	CHIP R	10K	J	1/16W	
R17			RK73HB1J271J	CHIP R	270	J	1/16W	
R19			RK73HB1J301J	CHIP R	300	J	1/16W	
R21 ,22			RK73HH1J103D	CHIP R	10K	D	1/16W	
R31			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R50 ,51			RK73HB1J510J	CHIP R	51	J	1/16W	
R52			RK73HH1J153D	CHIP R	15K	D	1/16W	
R53			RK73HB1J105J	CHIP R	1.0M	J	1/16W	
R54			RK73HB1J472J	CHIP R	4.7K	J	1/16W	
R55			RK73HB1J103J	CHIP R	10K	J	1/16W	
R56			RK73HH1J472D	CHIP R	4.7K	D	1/16W	
R57 ,58			RK73HB1J202J	CHIP R	2.0K	J	1/16W	
R59 ,60			RK73HB1J103J	CHIP R	10K	J	1/16W	
R63			RK73HB1J103J	CHIP R	10K	J	1/16W	
R64 ,65			RK73HB1J472J	CHIP R	4.7K	J	1/16W	
R81			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R83 ,84			RK73HB1J473J	CHIP R	47K	J	1/16W	
R85			RK73HB1J223J	CHIP R	22K	J	1/16W	
R86			RK73HB1J103J	CHIP R	10K	J	1/16W	
R87			RK73HB1J105J	CHIP R	1.0M	J	1/16W	
R88			RK73HB1J222J	CHIP R	2.2K	J	1/16W	
R89 ,90			RK73HB1J123J	CHIP R	12K	J	1/16W	
R91			RK73HB1J472J	CHIP R	4.7K	J	1/16W	
R92			RK73HB1J273J	CHIP R	27K	J	1/16W	
R96			RK73HB1J103J	CHIP R	10K	J	1/16W	
R98			RK73HB1J202J	CHIP R	2.0K	J	1/16W	
R101			RK73HH1J273D	CHIP R	27K	D	1/16W	
R105			RK73HB1J103J	CHIP R	10K	J	1/16W	
R120			RK73HB1J103J	CHIP R	10K	J	1/16W	
R121			RK73HB1J820J	CHIP R	82	J	1/16W	
R122			RK73HB1J103J	CHIP R	10K	J	1/16W	
R123			RK73HB1J330J	CHIP R	33	J	1/16W	
R124-126			RK73HB1J820J	CHIP R	82	J	1/16W	
R150,151			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R152,153			RK73HB1J104J	CHIP R	100K	J	1/16W	
R154,155			RK73HB1J103J	CHIP R	10K	J	1/16W	
R158,159			RK73HB1J1R0J	CHIP R	1.0	J	1/16W	
R160			R92-3350-05	CHIP R	2.2	F	1/10W	

M1: DDX7034BT **M2**: DDX7034BTM **M3**: DDX6034 **M4**: DDX6034M **M5**: DNX7340BT (Other Areas)
X1: DDX7034BT **X2**: DDX6034 **X3**: DNX7340BT (Australia) **R1**: DDX7034BT (Latin America)
K: DDX714 **K1**: DNX7140 **K2**: DNX7000EX (North America)
E1: DNX7240BT (Europe) **Q1**: DDX6054 (Russian)

⚠Indicates safety critical components.

PARTS LIST

The IC3, and IC11 in the DVD unit (X37-1250-00) are not replaceable components. When these ICs are defective, replace the whole DVD mechanism assembly (X92-6400-00).

DVD UNIT (X37-1250-00) IN DVD MECHA.

Ref. No.	Add	New	Parts No.	Description	Destination
R162,163			RK73HB1J104J	CHIP R 100K J 1/16W	
R164,165			RK73HH1J101D	CHIP R 100 D 1/16W	
R167			RK73HH1J113D	CHIP R 11K D 1/16W	
R168			RK73HH1J273D	CHIP R 27K D 1/16W	
R169			RK73HB1J125J	CHIP R 1.2M J 1/16W	
R255			R92-5112-05	CHIP R 4.7 F 1/10W	
R257			RK73HH1J202D	CHIP R 2.0K D 1/16W	
R260			RK73HH1J132D	CHIP R 1.3K D 1/16W	
R261			RK73HH1J203D	CHIP R 20K D 1/16W	
R262			RK73HB1J821J	CHIP R 820 J 1/16W	
R263			RK73HB1J242J	CHIP R 2.4K J 1/16W	
R272			RK73HH1J682D	CHIP R 6.8K D 1/16W	
R273			RK73HH1J122D	CHIP R 1.2K D 1/16W	
R274			RK73HH1J682D	CHIP R 6.8K D 1/16W	
R275			RK73HH1J122D	CHIP R 1.2K D 1/16W	
R278			R92-5112-05	CHIP R 4.7 F 1/10W	
R284			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R288			R92-3416-05	CHIP R 0.27 1/2W	
R289			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R297			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R298,299			RK73HB1J330J	CHIP R 33 J 1/16W	
R300			RK73HB1J103J	CHIP R 10K J 1/16W	
S1			S68-0911-15	PUSH SWITCH	
S2			S68-0917-05	PUSH SWITCH	
D1			1SS402-F	DIODE	
D5 ,6			015AZ5.1-F(Y)	ZENER DIODE	
D8			1SS387-F	DIODE	
IC1			AN22022ABV	ANALOGUE IC	
IC3		✻	-	ROM IC	
IC4			MN103S71F	MOS-IC	
IC5			S1000N28I4T1G	ANALOGUE IC	
IC10			AN41250A-VB	ANALOGUE IC	
IC11		✻	-	ROM IC	
IC13			NJM2845DL115B	ANALOGUE IC	
IC14			NJM2845DL133B	ANALOGUE IC	
Q1 -4			DTA143XE	DIGITAL TRANSISTOR	
Q12 ,13			2SB1709	TRANSISTOR	
Q16			UM6K1N	DUAL FET	

DAUGHTER UNIT (X89-3062-72)

C1			CC73GCH1H180J	CHIP C 18PF J	E1
C2			CC73GCH1H070D	CHIP C 7.0PF D	E1
C3			CC73GCH1H150J	CHIP C 15PF J	E1
C4			CC73GCH1H180J	CHIP C 18PF J	E1
C5			CC73GCH1H390J	CHIP C 39PF J	E1
C6			CC73GCH1H020C	CHIP C 2.0PF C	E1
C7			CC73GCH1H120J	CHIP C 12PF J	E1
C8			CK73FB1C105K	CHIP C 1.0UF K	E1
C10 -12			CC73GCH1H102J	CHIP C 1000PF J	E1
C13			CC73GCH1H221J	CHIP C 220PF J	E1
C14			CC73GCH1H030C	CHIP C 3.0PF C	E1
C15 ,16			CC73GCH1H560J	CHIP C 56PF J	E1
C17			CC73GCH1H102J	CHIP C 1000PF J	E1
CN2			E41-3009-05	PIN ASSY	E1

Ref. No.	Add	New	Parts No.	Description	Destination
W1		✻	E30-6884-05	CORD WITH PLUG	E1
W2		✻	E30-6885-05	CORD WITH PLUG	E1
L1			L41-2705-33	SMALL FIXED INDUCTOR (27U)	E1
L2			L41-1588-18	SMALL FIXED INDUCTOR	E1
L3			L41-1805-33	SMALL FIXED INDUCTOR (18U)	E1
L4 ,5			L41-1588-18	SMALL FIXED INDUCTOR	E1
L6			L19-0825-05	BALUN TRANSFORMER	E1
L8			L41-1888-18	SMALL FIXED INDUCTOR (0.18U)	E1
R1			RK73GB2A104J	CHIP R 100K J 1/10W	E1
R3			RK73GB2A562J	CHIP R 5.6K J 1/10W	E1
R4			RK73GB2A332J	CHIP R 3.3K J 1/10W	E1
R5			RK73GB2A331J	CHIP R 330 J 1/10W	E1
R6			RK73GB2A391J	CHIP R 390 J 1/10W	E1
R7 ,8			RK73GB2A330J	CHIP R 33 J 1/10W	E1
R10			RK73GB2A431J	CHIP R 430 J 1/10W	E1
R11			RK73GB2A270J	CHIP R 27 J 1/10W	E1
R12			RK73GB2A431J	CHIP R 430 J 1/10W	E1
R13			RK73GB2A151J	CHIP R 150 J 1/10W	E1
R14			RK73GB2A431J	CHIP R 430 J 1/10W	E1
R15			RK73GB2A270J	CHIP R 27 J 1/10W	E1
R17			RK73GB2A431J	CHIP R 430 J 1/10W	E1
D1			IMSA-6801-E	SURGE ABSORBER	E1
Q1			2SC3357-A	TRANSISTOR	E1

DVD MECHANISM ASSY (X92-6400-00) (DVS-8220W)

1	1A		A10-5523-01+	CHASSIS
2	2B		A10-5524-01+	CHASSIS
3	1A		A10-5525-01+	CHASSIS
4	3A		A10-5526-02+	CHASSIS
7	1B		D10-7080-02+	ARM
8	1B		D10-7081-02+	ARM
9	1B		D10-7082-02+	LEVER
10	1B		D10-7083-02+	LEVER
12	2B		D10-7084-02+	SLIDER
13	2A		D10-7085-02+	ARM
14	2B		D10-7086-03+	ARM
15	2B		D10-7087-02+	ARM
25	2B		D10-7092-04+	SLIDER ASSY
27	2A		D10-7091-04+	LEVER
28	2B		D12-0640-02+	CAM
31	2B		D13-3029-04+	GEAR
32	2B		D13-3030-04+	GEAR
33	2B		D13-3031-04+	GEAR
34	2B		D13-3032-04+	GEAR
35	2B		D13-3033-04+	GEAR
36	2B		D13-3034-04+	GEAR
40	2A		D13-3038-04+	GEAR
41	2A		D13-3039-04+	GEAR
42	2A		D13-3040-04+	GEAR
43	1B		D14-1034-04+	ROLLER
53	1B		D21-2487-24	SHAFT
54	2A		D39-0275-05	DAMPER
55	2A		D39-0276-05	DAMPER

M1: DDX7034BT **M2**: DDX7034BTM **M3**: DDX6034 **M4**: DDX6034M **M5**: DNX7340BT (Other Areas)
X1: DDX7034BT **X2**: DDX6034 **X3**: DNX7340BT (Australia) **R1**: DDX7034BT (Latin America)
K: DDX714 **K1**: DNX7140 **K2**: DNX7000EX (North America)
E1: DNX7240BT (Europe) **Q1**: DDX6054 (Russian)

⚠Indicates safety critical compo nents.

PARTS LIST

DVD MECHANISM ASSY (X92-6400-00) (DVS-8220W)

Ref. No.	Add	New	Parts No.	Description	Destination
60	3A		F09-3019-03	SHEET	
65	2B		G01-4734-04	EXTENSION SPRING	
66	1B		G01-3299-04+	EXTENSION SPRING	
67	2A		G01-3300-14+	TORSION COIL SPRING	
68	2B		G01-4601-04+	EXTENSION SPRING	
69	1B		G01-4738-04	EXTENSION SPRING	
70	1B		G01-4740-04	TORSION COIL SPRING	
74	2B		G01-4609-14+	TORSION COIL SPRING	
75	1B		G02-1904-03+	FLAT SPRING	
79	2A		J22-0890-01+	MOUNTING HARDWARE	
80	3B		J22-0891-01+	MOUNTING HARDWARE	
A	1A		N09-6382-05	MACHINE SCREW (M1.7X2.0)	
B	3B		N09-6408-15	TAPTITE SCREW (1.7X4 P-TITE)	
C	1B		N09-6426-15	MACHINE SCREW (LOAD ARM SCREW	
D	3A		N09-6104-05	MACHINE SCREW (2X10 S-TITE)	
93	2A		T99-0471-05	MAGNET	
96	1B		X94-2080-00	ROLLER ASSY	
98	2A		X94-2060-00	TRAVERSE ASSY (PICKUP,SPINDLE)	
VM1	2A		X94-2070-00	MOTOR ASSY (LOADING)	

Ref. No.	Add	New	Parts No.	Description	Destination

M1: DDX7034BT **M2**: DDX7034BTM **M3**: DDX6034 **M4**: DDX6034M **M5**: DNX7340BT (Other Areas)
X1: DDX7034BT **X2**: DDX6034 **X3**: DNX7340BT (Australia) **R1**: DDX7034BT (Latin America)
K: DDX714 **K1**: DNX7140 **K2**: DNX7000EX (North America)
E1: DNX7240BT (Europe) **Q1**: DDX6054 (Russian)

⚠Indicates safety critical components.