2. EXPLODED VIEWS AND PARTS LIST

*NOTES : • Parts marked by " * " are generally unavailable because they are not in our Master Spare Parts List.*
• Screw adjacent to ▽ mark on the product are used for disassembly.
• For the applying amount of lobricants or glue, follow the instructions in this manual.
(In the case of no amount instructions,apply as you think it appropriate.)

2.1 PACKING(UC MODEL)

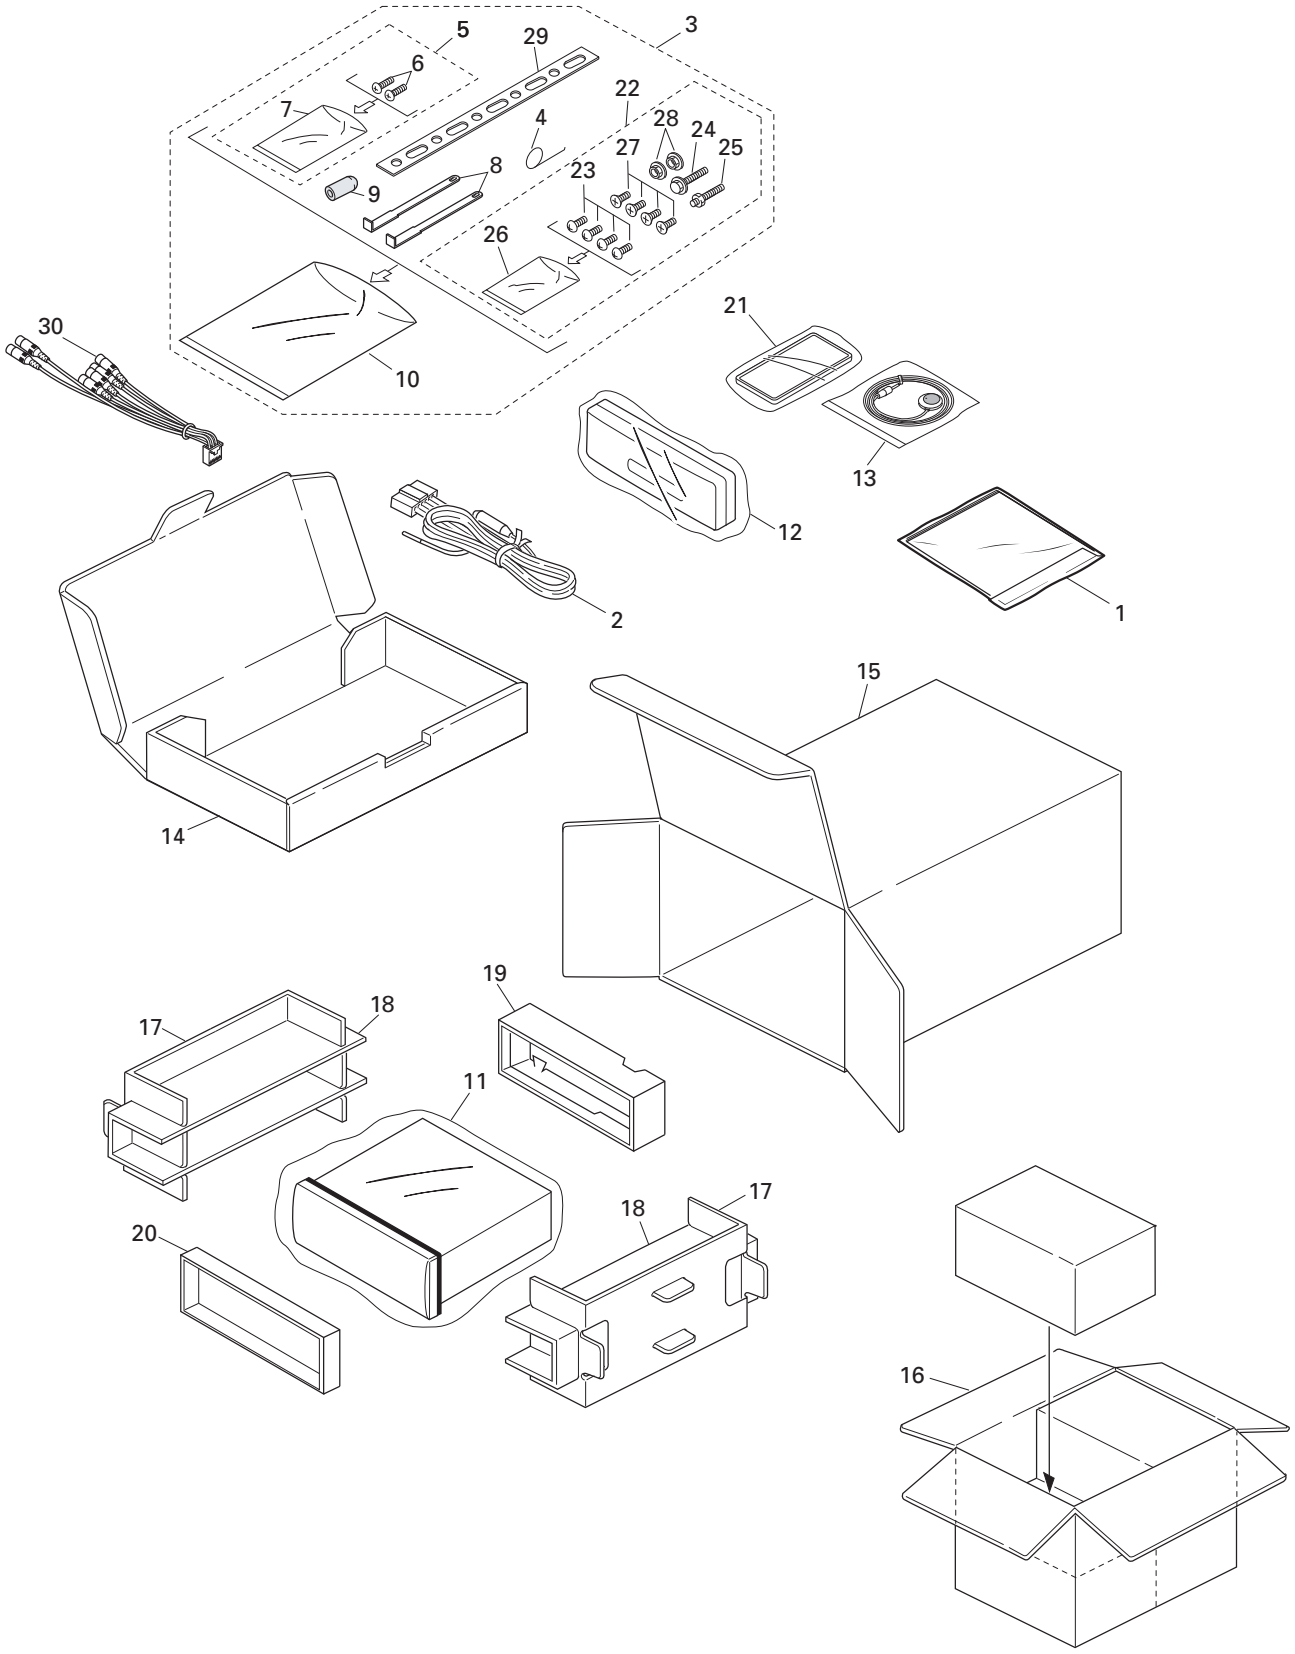

PACKING(UC MODEL) SECTION PARTS LIST

Mark	No.	Description	Part No.
	1-1	Owner's Manual(DEH-P960MP)	CRD3817
		Owner's Manual(DEH-P9600MP)	CRD3819
	1-2	Installation Manual(DEH-P960MP)	CRD3818
		Installation Manual(DEH-P9600MP)	CRD3820
*	1-3	Warranty Card(DEH-P960MP)	CRY1070
*	1-4	Card(DEH-P9600MP)	ARY1048
	1-5	Polyethylene Bag	CEG1116
*	1-6	Caution Card	CRP1309
	1-7	Caution Card	CRP1310
	2	Cord Assy	CDE7701
	3	Accessory Assy	CEA4113
	4	Spring	CBH1650
	5	Screw Assy	CEA4117
	6	Screw	BPZ20P060FZK
*	7	Polyethylene Bag	CEG-127
	8	Handle	CNC5395
	9	Bush	CNV3930
*	10	Polyethylene Bag	CEG-158
	11	Polyethylene Bag	CEG1185
	12	Case Assy	CXB8574
	13	MicrophoneAssy	CPM1054
	14	Sub Carton	CHA3258
	15	Carton(DEH-P960MP)	CHG5205
		Carton(DEH-P7600MP)	CHG5204
	16	Contain Box(DEH-P960MP)	CHL5205
		Contain Box(DEH-P9600MP)	CHL5204
	17	Protector	CHP2538
	18	Protector	CHP2539
	19	Protector	CHP2541
	20	Protector	CHP2546
	21	Remote Control Unit	CXC2665
	22	Screw Assy	CEA4115
	23	Screw	BMZ50P060FTC
	24	Screw	CBA1783
	25	Screw	CBA1650
*	26	Polyethylene Bag	CEG-127
	27	Screw	CMZ50P060FTC
	28	Nut	NF50FTC
	29	Strap	CNC5402
	30	Cord Assy(DEH-P960MP)	CDE7436
		Cord Assy(DEH-P9600MP)	CDE7437

Owner's Manual,Installation Manual

Part No.	Language
CRD3817, CRD3818, CRD3819, CRD3820	English,French

2.2 PACKING(ES MODEL)

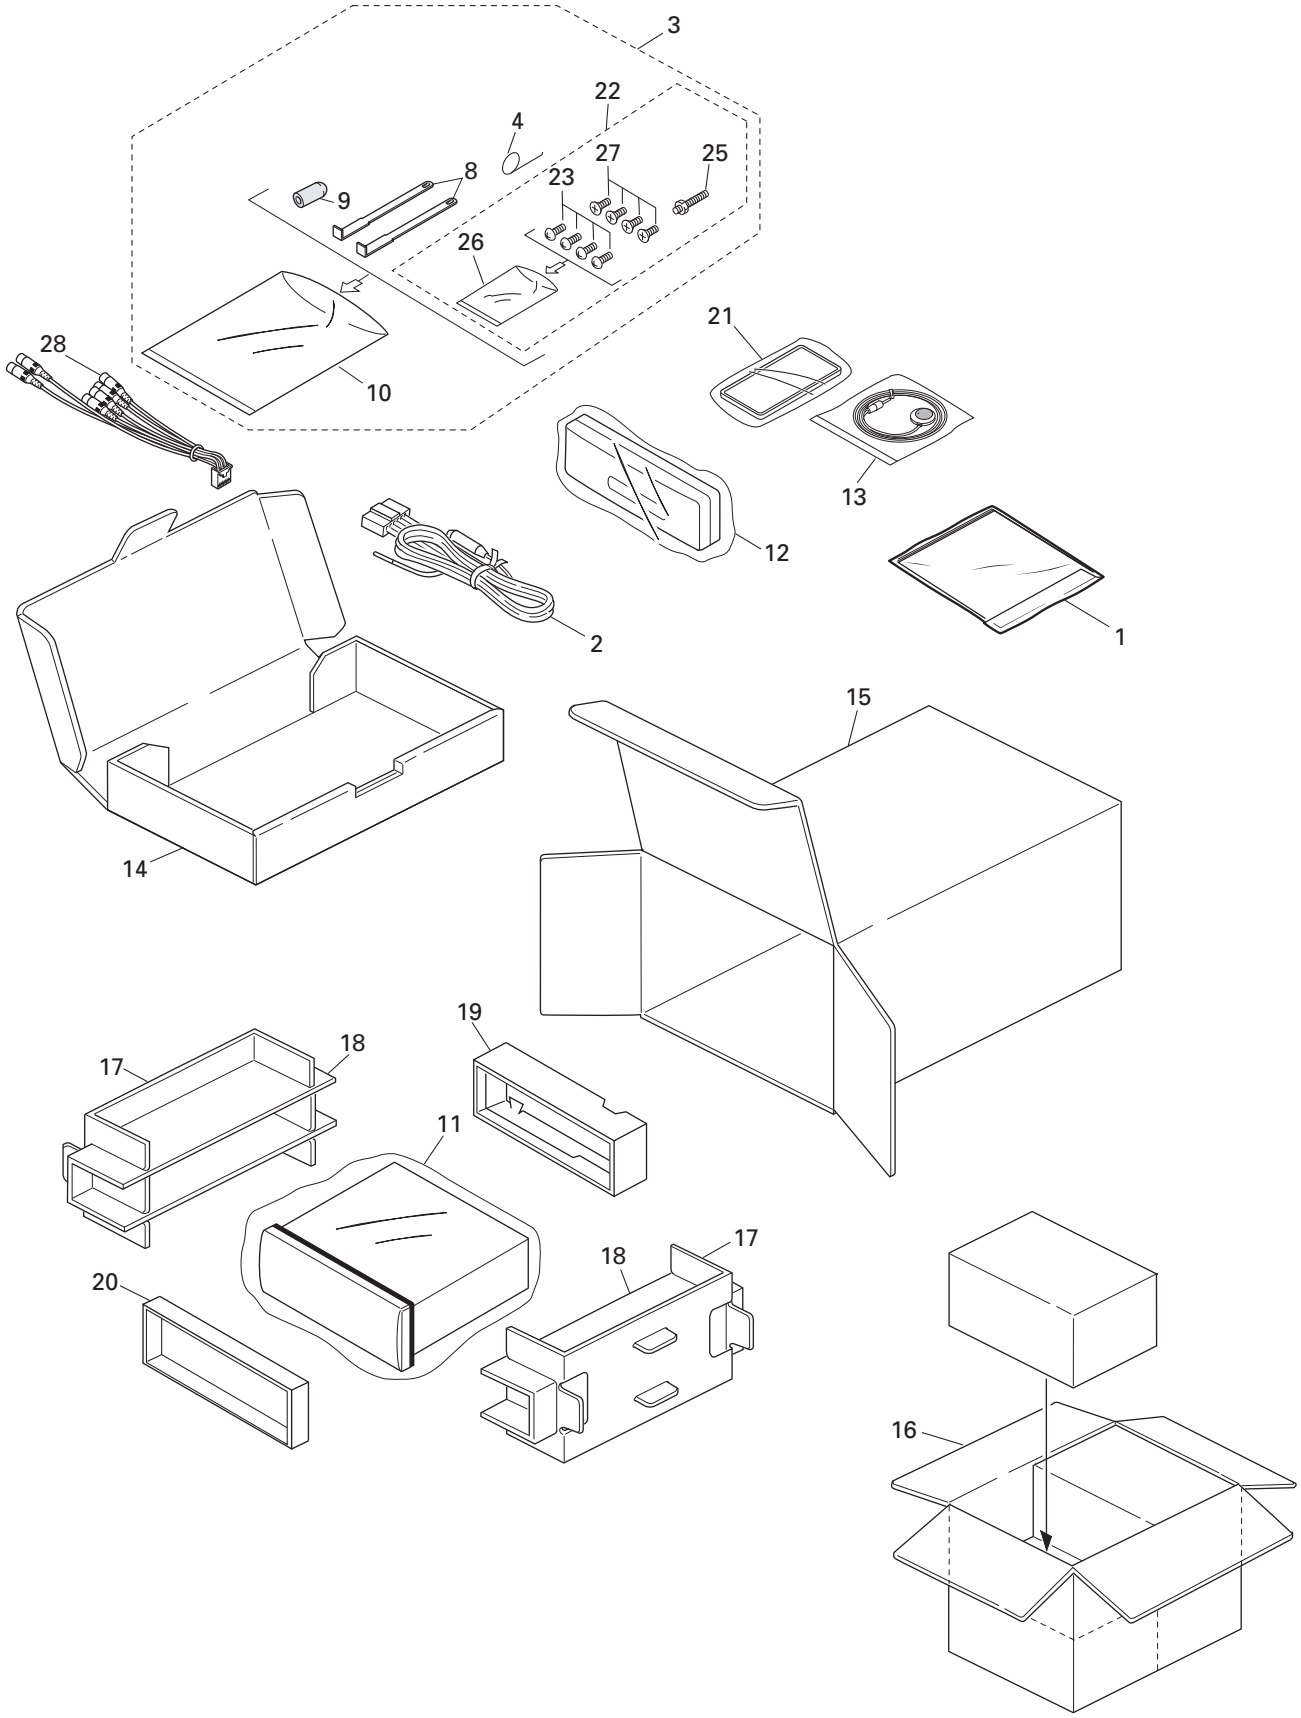

PACKING(ES MODEL) SECTION PARTS LIST

Mark	No.	Description	Part No.
	1-1	Owner's Manual	CRD3821
	1-2	Owner's Manual	CRD3822
	1-3	Installation Manual	CRD3823
*	1-4	Caution Card	CRP1310
	1-5	Polyethylene Bag	CEG1116
*	1-6	Caution Card	CRP1309
	2	Cord Assy	CDE7701
	3	Accessory Assy	CEA4112
	4	Spring	CBH1650
	5-7	•••••	
	8	Handle	CNC5395
	9	Bush	CNV3930
*	10	Polyethylene Bag	CEG-158
	11	Polyethylene Bag	CEG1088
	12	Case Assy	CXB8574
	13	MicrophoneAssy	CPM1054
	14	Sub Carton	CHA3258
	15	Carton	CHG5203
	16	Contain Box	CHL5203
	17	Protector	CHP2538
	18	Protector	CHP2539
	19	Protector	CHP2541
	20	Protector	CHP2546
	21	Remote Control Unit	CXC2665
	22	Screw Assy	CEA4114
	23	Screw	BMZ50P060FTC
	24	•••••	
	25	Screw	CBA1650
*	26	Polyethylene Bag	CEG-127
	27	Screw	CMZ50P060FTC
	28	Cord Assy	CDE7436

Owner's Manual,Installation Manual

Part No.	Language
CRD3821	English,Spanish,Portuguese(B)
CRD3822	Traditional Chinese,Arabic
CRD3823	English,Spanish,Portuguese(B),Traditional Chinese,Arabic

2.3 EXTERIOR(1)

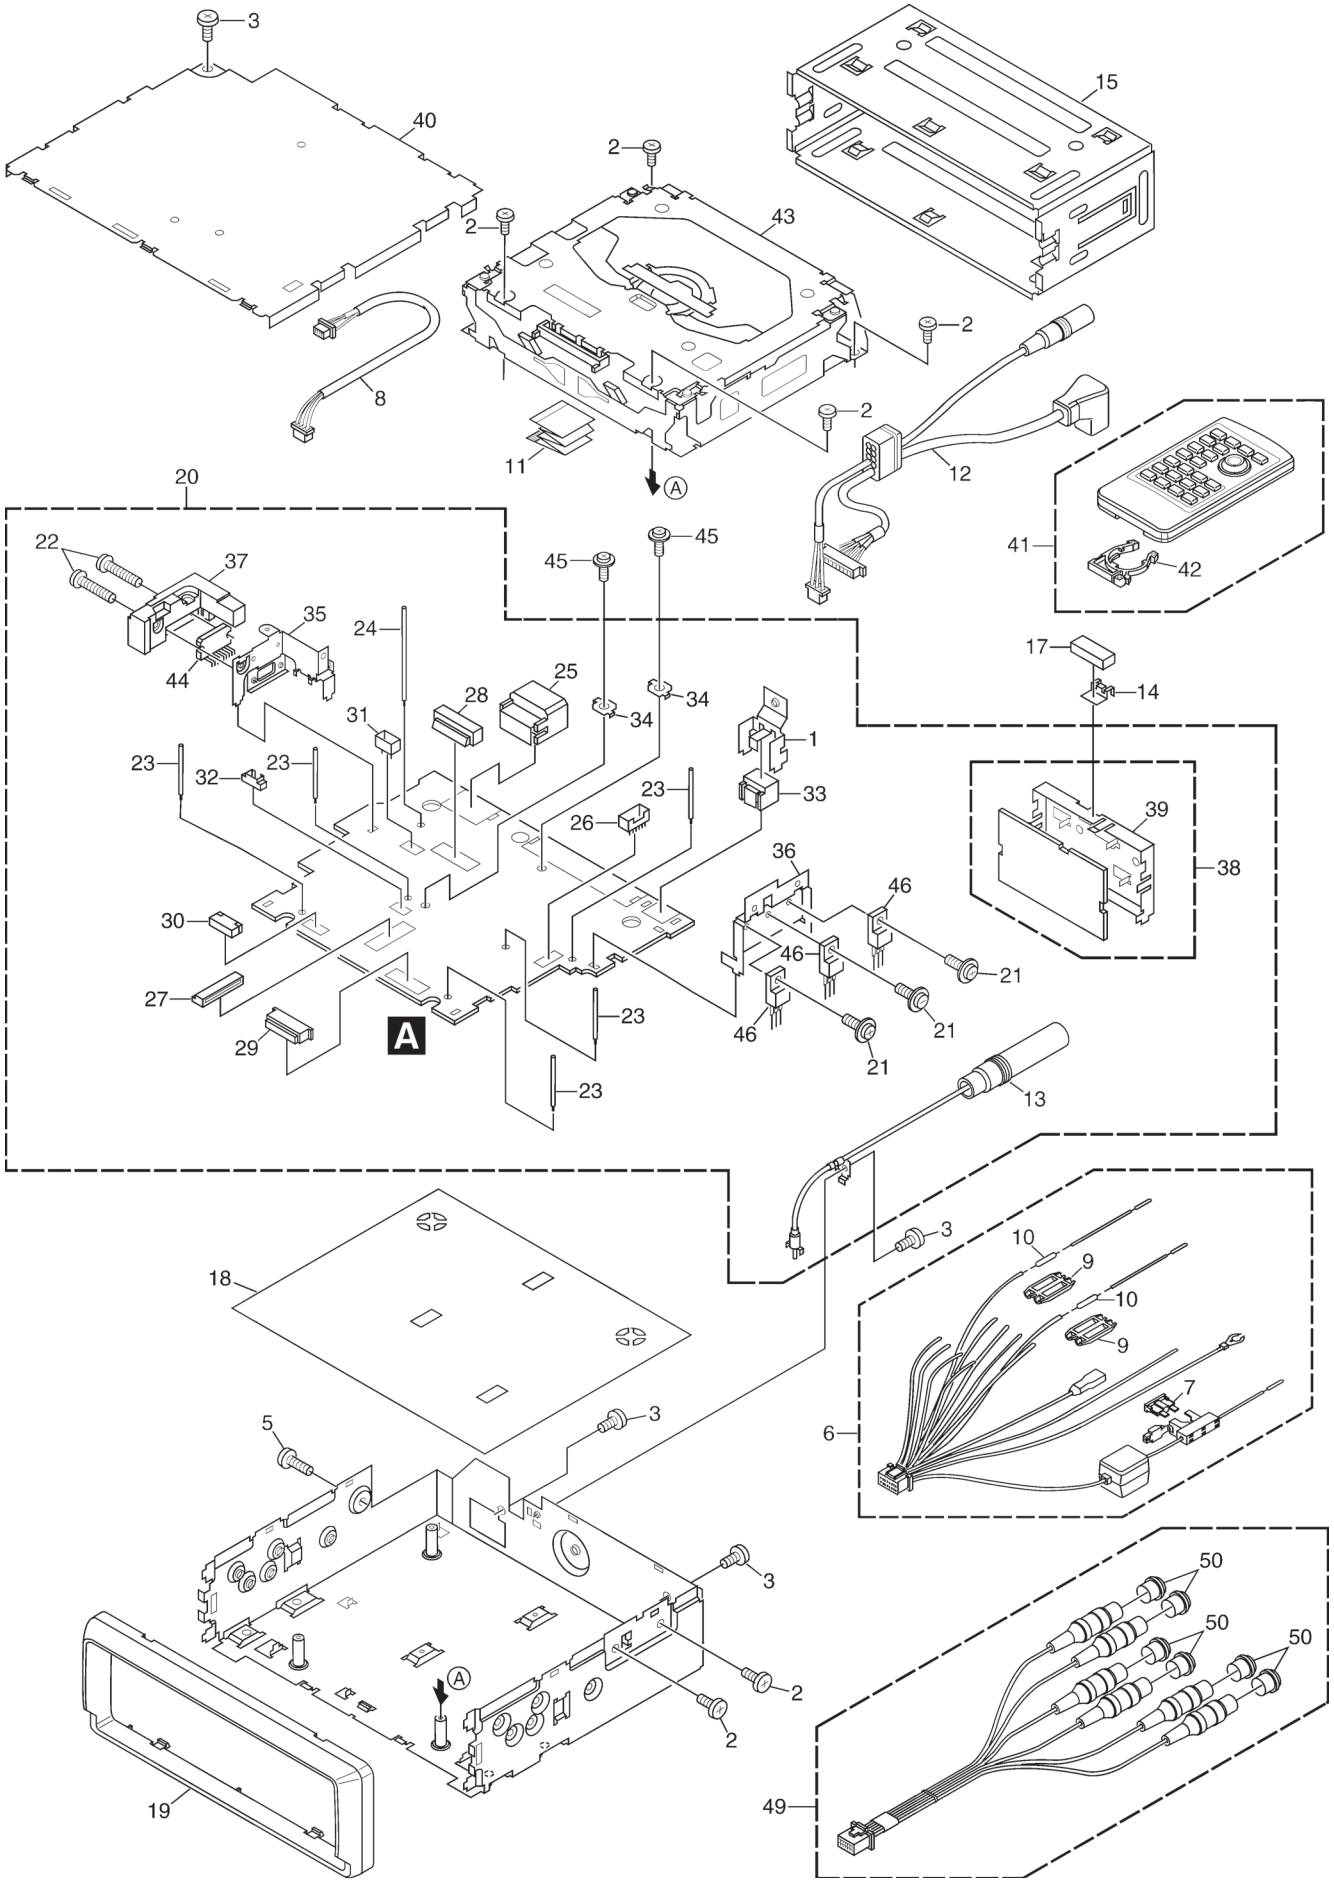

(1) EXTERIOR(1) SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	Holder	CND1979
	2	Screw	BSZ26P060FTC
	3	Screw	BSZ30P050FTC
	4	•••••	
	5	Screw	BSZ30P160FTC
	6	Cord Assy	CDE7701
	7	Fuse(10A)	CEK1136
	8	Cord Assy	CDE7439
	9	Cap	CNS1472
	10	Resistor	RS1/2PMF102J
	11	Flat Cable	CDE7440
	12	Cord Assy	See Contrast table(2)
	13	Antenna Cable(CN401)	CDH1336
	14	Holder	CNC6469
	15	Holder	CNC8659
	16	•••••	
	17	Cushion	CNM8890
	18	Insulator	CNM8590
	19	Panel	CNS6863
	20	Tuner Amp Unit	See Contrast table(2)
	21	Screw	ASZ26P080FTC
	22	Screw	BMZ26P140FTC
	23	Clamper	CEF1035
	24	Clamper	CEF1036
	25	Plug(CN981)	CKM1278
	26	Plug(CN811)	CKS-787
	27	Connector(CN701)	CKS3837
*	28	Plug(CN101)	CKS1058
	29	Connector(CN872)	CKS1082
*	30	Connector(CN871)	CKS2211
	31	Connector(CN771)	See Contrast table(2)
	32	Connector(CN703)	CKS3126
	33	Connector(CN351)	CKM1389
	34	Holder	CNC5399
	35	Holder	CNC9711
	36	Holder	CNC9713
	37	Heat Sink	CNR1615
	38	FM/AM Tuner Unit	CWE1646
	39	Holder	CND1054
	40	Case Unit	CXB8524
	41	Remote Control Assy	CXC2665
	42	Cover	CZN5357
	43	CD Mechanism Module(S10WMACODE2)	CXK5676
	44	IC(IC301)	PAL007A
	45	Screw	ISS26P055FTC
	46	Transistor(Q742,901,921)	2SD2396
	47	•••••	
	48	•••••	
	49	Cord Assy	See Contrast table(2)
	50	Cap	CNV6727

(2) CONTRAST TABLE

DEH-P960MP/XN/UC , DEH-P9600MP/XN/UC and DEH-P9650MP/XN/ES are constructed the same except for the following:

Mark	NO	Description	DEH-P960MP/XN/UC	DEH-P9600MP/XN/UC	DEH-P9650MP/XN/ES
	14	Cord Assy	CDE7434	CDE7434	CDE7435
	20	Tuner Amp Unit	CWM9185	CWM9186	CWM9187
	31	Plug(CN771)	CKS1036	CKS1036	Not used
	49	Cord Assy	CDE7436	CDE7437	CDE7436

2.4 EXTERIOR(2)

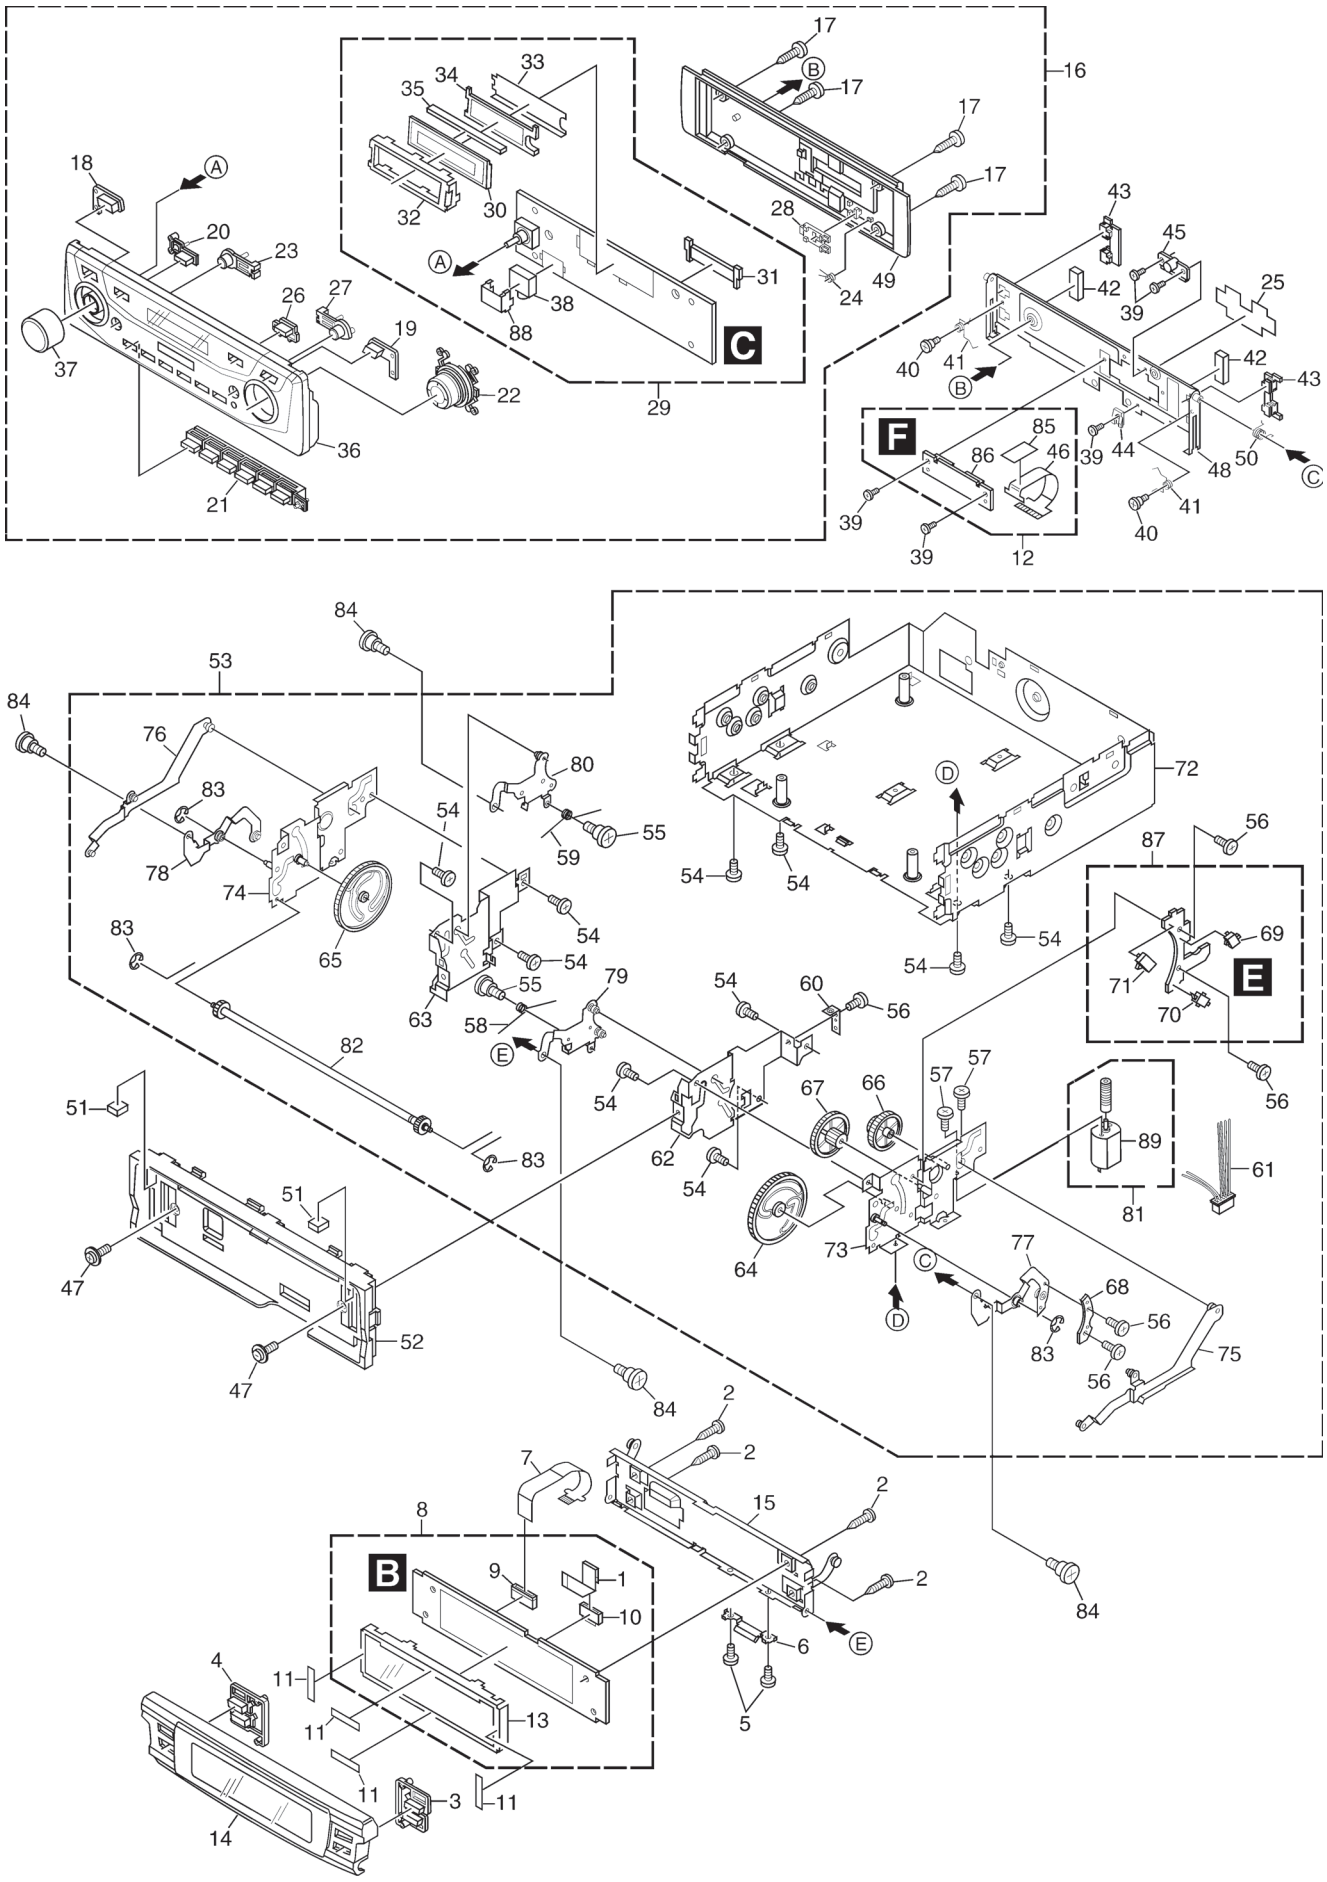

(1) EXTERIOR(2) SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	Cable	CDE7441
	2	Screw	BPZ20P080FZK
	3	Button(AUDIO,FUNC)	CAC8297
	4	Button(ENT,DISP)	CAC8298
	5	Screw(M2x2)	CBA1633
	6	Holder	CNC9800
	7	Flexible PCB	CNP6498
	8	Keyboard Unit(OEL)	CWM9191
	9	Connector(CN1801)	CKS4175
	10	Connector(CN1802)	CKS4792
	11	Spacer	CNM8982
	12	PCB Assy(Service)	CXX1799
	13	OEL Module	MXK8200
	14	Grille Unit	See Contrast table(2)
	15	Case Unit	CXC2406
	16	Detach Grille Assy	See Contrast table(2)
	17	Screw	BPZ20P080FZK
	18	Button(EJECT)	CAC8319
	19	Button(OPEN)	CAC8320
	20	Button(CLK)	CAC8323
	21	Button(1-6)	CAC8317
	22	Button Assy(CROSS)	CXC3687
	23	Button Unit(EQ)	CXC2450
	24	Spring	CBH2543
	25	Insulator	CNM8897
	26	Button(PAUSE)	CAC8324
	27	Button Unit(BAND)	CXC2451
	28	Arm	CNV6963
	29	Keyboard Unit(LCD)	CWM9194
	30	LCD(LCD1901)	CAW1704
	31	Connector(CN1901)	CKS4549
	32	Holder	CNC9648
	33	Sheet	CNM7512
	34	Lighting Conductor	CNV6914
	35	Connector	CNV6915
	36	Grille Unit	See Contrast table(2)
	37	Knob Unit	CXC3686
	38	Jack(CN1902)	CKN1016
	39	Screw(M2x2)	CBA1633
	40	Screw	CBA1561
	41	Spring	CBH2530
	42	Cushion	CNM8895
	43	Arm	CNV6962
	44	Guide	CNV6968
	45	Guide	CNV6967
	46	Flexible PCB	CNP7913
	47	Screw	ISS26P055FTC
	48	Case Unit	CXB7968
	49	Cover Unit	CXC2453
	50	Spring	CBH2545
	51	Cushion	CNM8894
	52	Panel Unit	CXB7953
	53	Drive Unit	See Contrast table(2)
	54	Screw	BMZ26P040FTC
	55	Screw(M2x1.4)	CBA1757
	56	Screw(M2x2)	CBA1633
	57	Screw	JFZ20P030FTC
	58	Spring	CBH2752
	59	Spring	CBH2753
	60	Spring	CBL1658
	61	Cord	CDE7587
	62	Holder	CND2244
	63	Holder	CND2245
	64	Gear	CNV8087
	65	Gear	CNV8088
	66	Gear	CNV8090
	67	Gear	CNV8091
	68	Lever	CNV8092
	69	Switch(S951)	CSN1051
	70	Spring Switch(S952)	CSN1052
	71	Switch(S953)	CSN1058
	72	Chassis Unit	See Contrast table(2)
	73	Holder Unit	CXC3023
	74	Holder Unit	CXC3024
	75	Arm Unit	CXC3025
	76	Arm Unit	CXC3026
	77	Arm Unit	CXC3027
	78	Arm Unit	CXC3028
	79	Arm Unit	CXC3029
	80	Arm Unit	CXC3030
	81	Motor Unit(M951)	CXC3190
	82	Gear Unit	CXC3094
	83	Washer	YE15FTC
	84	Screw(M2x1.5)	CBA1559
	85	Sheet	CNM7839
	86	PCB	CNX3607
	87	Switch Unit	CWS1370
	88	Holder	CND1971
	89	Motor	CXM1217

(2) CONTRAST TABLE

DEH-P960MP/XN/UC , DEH-P9600MP/XN/UC and DEH-P9650MP/XN/ES are constructed the same except for the following:

Mark	NO	Description	DEH-P960MP/XN/UC	DEH-P9600MP/XN/UC	DEH-P9650MP/XN/ES
	14	Grille Unit	CXC2404	CXC2403	CXC2402
	16	Detach Grille Assy	CXC3181	CXC3180	CXC3179
	36	Grille Unit	CXC2519	CXC2518	CXC2517
	53	Drive Unit	CXC2514	CXC2515	CXC2514
	72	Chassis Unit	CXC2454	CXC2455	CXC2454

2.5 CD MECHANISM MODULE

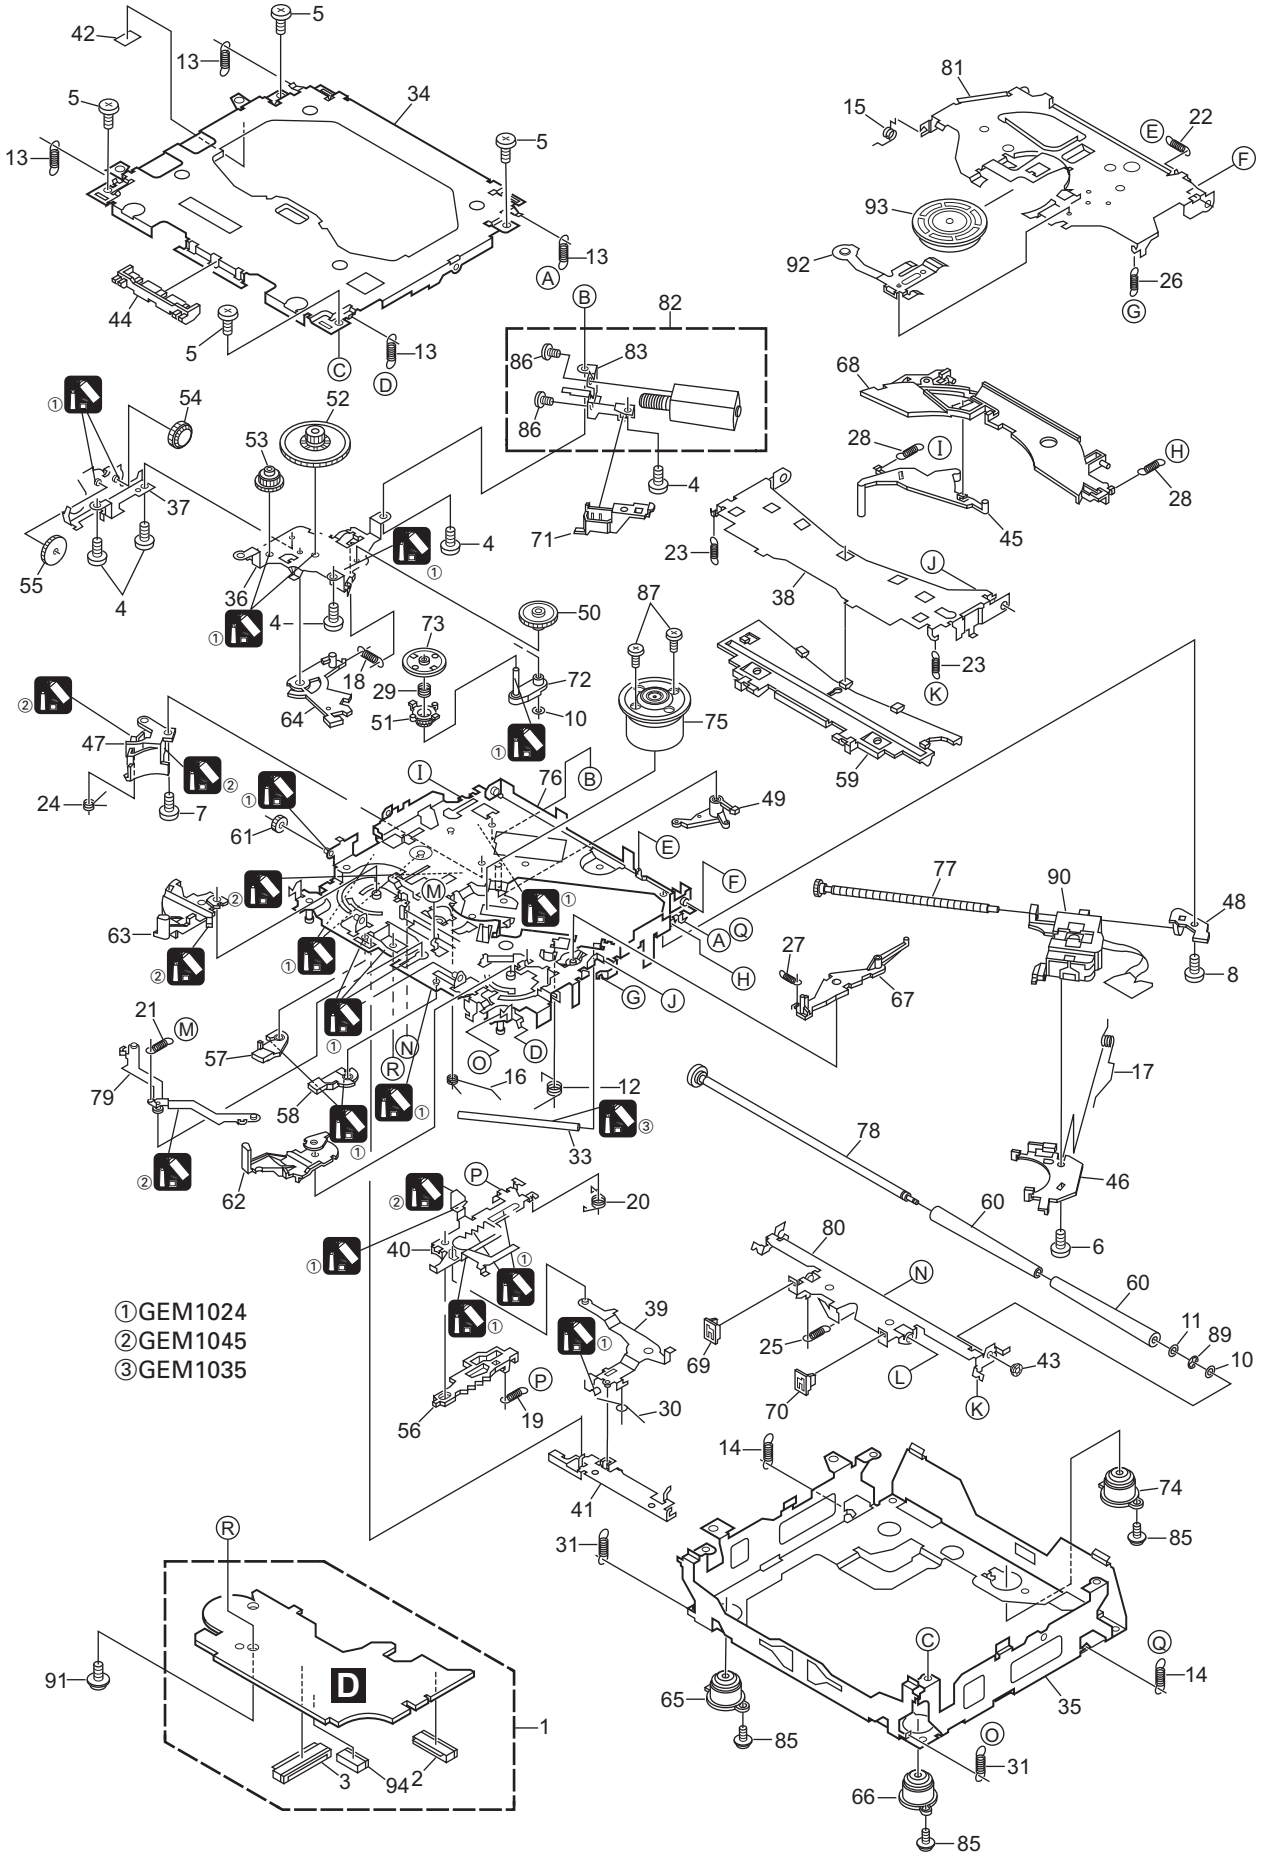

CD MECHANISM MODULE SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	CD Core Unit(S10WMA)	CWX2851
	2	Connector(CN101)	CKS4182
	3	Connector(CN901)	CKS4017
	4	Screw	BMZ20P035FTC
	5	Screw	BSZ20P040FTC
	6	Screw(M2x4)	CBA1362
	7	Screw(M2x3)	CBA1511
	8	Screw(M2x3)	CBA1527
	9	•••••	
	10	Washer	CBF1038
	11	Washer	CBF1060
	12	Spring	CBH2390
	13	Spring	CBH2606
	14	Spring	CBH2607
	15	Spring	CBH2608
	16	Spring	CBH2609
	17	Spring	CBH2610
	18	Spring	CBH2735
	19	Spring	CBH2612
	20	Spring	CBH2613
	21	Spring	CBH2614
	22	Spring	CBH2615
	23	Spring	CBH2616
	24	Spring	CBH2617
	25	Spring	CBH2620
	26	Spring	CBH2621
	27	Spring	CBH2641
	28	Spring	CBH2642
	29	Spring	CBH2643
	30	Spring	CBH2659
	31	Spring	CBH2688
	32	•••••	
	33	Shaft	CLA4441
	34	Frame	CNC9962
	35	Frame	CNC9963
	36	Bracket	CNC9966
	37	Bracket	CND1895
	38	Arm	CNC9968
	39	Arm	CND1909
	40	Lever	CND2032
	41	Lever	CNC9984
	42	Sheet	CNM8134
	43	Collar	CNV7798
	44	Guide	CNV7799
	45	Arm	CNV7800
	46	Rack	CNV7199
	47	Holder	CNV7201
	48	Holder	CNV7202
	49	Arm	CNV7203
	50	Gear	CNV7207
	51	Gear	CNV7208
	52	Gear	CNV7209
	53	Gear	CNV7210
	54	Gear	CNV7211
	55	Gear	CNV7212
	56	Rack	CNV7214
	57	Arm	CNV7215
	58	Arm	CNV7216
	59	Guide	CNV7217
	60	Roller	CNV7218
	61	Gear	CNV7219
	62	Arm	CNV7221
	63	Arm	CNV7220
	64	Arm	CNV7222
	65	Damper	CNV7313
	66	Damper	CNV7314
	67	Arm	CNV7341
	68	Arm	CNV7342
	69	Guide	CNV7360
	70	Guide	CNV7361
	71	Holder	CNV7437
	72	Arm	CNV7805
	73	Gear	CNV7595
	74	Damper	CNV7618
	75	Motor Unit(M1)	CXB6007
	76	Chassis Unit	CXC2318
	77	Screw Unit	CXB8729
	78	Gear Unit	CXC2397
	79	Arm Unit	CXC2316
	80	Arm	CND1896
	81	Arm	CND1894
	82	Motor Unit(M2)	CXB8933
	83	Bracket	CNC9985
	84	•••••	
	85	Screw(M2x5)	EBA1028
	86	Screw	JFZ20P020FTC
	87	Screw	JGZ17P022FTC
	88	•••••	
	89	Washer	YE20FTC
	90	Pickup Unit(P10)(Service)	CXX1641
	91	Screw	IMS26P030FTC
	92	Spring	CBL1635
	93	Clamper	CNV7197
	94	Connector(CN902)	CKS2193

5. ELECTRICAL PARTS LIST

NOTE:

¥ Parts whose parts numbers are omitted are subject to being not supplied.

¥ The part numbers shown below indicate chip components.

Chip Resistor

RS1/◯S◯◯◯J,RS1/◯◯S◯◯◯J

Chip Capacitor (except for CQS.....)

CKS....., CCS....., CSZS.....

¥ The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.

A

Unit Number:CWM9185(P960MP)
Unit Number:CWM9186(P9600MP)
Unit Number:CWM9187(P9650MP)
Unit Name:Tuner Amp Unit

MISCELLANEOUS

Circuit Symbol and No.		Part No.
IC 101	IC	HA12240FP
IC 131	IC	PML011A
IC 171	IC	NJM4558MD
IC 172	IC	NJM4558MD
IC 173	IC	NJM4558MD
IC 201	IC	NJM4558MD
IC 211	IC	PCM1606EG
IC 231	IC	NJM2100V
IC 251	IC	TC74VHC08FT
IC 252	IC	TC74VHC08FT
IC 271	IC	AK7730VT
IC 272	IC	TC7SH08FU
IC 301	IC	PAL007A
IC 321	IC	NJM4558MD
IC 322	IC	NJM4558MD
IC 571	IC	PA2028A
IC 601	IC(P960MP,P9600MP)	PD5914A
	IC(P9650MP)	PD5915A
IC 651	IC	BD4835G
IC 671	IC	NJM2391DL1-33
IC 681	IC	S-818A33AUC-BGN
IC 691	IC	BA05FP
IC 811	IC	BA6288FS
IC 871	IC	TC74VHCT125AFT
Q 101	Transistor	UMF23N
Q 301	Transistor	DTC124EU
Q 321	Transistor	IMD2A
Q 351	Transistor(P960MP,P9650MP)	HN1C03F
	Transistor(P9600MP)	IMH3A
Q 352	Transistor(P960MP,P9650MP)	HN1C03F
	Transistor(P9600MP)	IMH3A
Q 353	Transistor(P960MP,P9650MP)	HN1C03F
	Transistor(P9600MP)	IMH3A
Q 364	Transistor	IMD2A
Q 501	Transistor	2SC2412K
Q 651	Transistor	2SC2412K
Q 691	Transistor	2SD1767
Q 692	Transistor	IMD2A
Q 741	Transistor	IMD2A
Q 742	Transistor	2SD2396
Q 743	Transistor	2SD1767
Q 744	Transistor	IMD2A
Q 751	Transistor	2SC3052-12
Q 752	Transistor	IMD2A
Q 811	Transistor	2SD1760F5
Q 812	Transistor	IMD3A
Q 833	Transistor	DTC114EU
Q 834	Transistor	2SC2412K
Q 835	Transistor	IMD2A
Q 841	Transistor	2SD1760F5
Q 842	Transistor	IMD2A
Q 851	Transistor	2SB808
Q 852	Transistor	DTC114EU
Q 861	Transistor	2SB808
Q 862	Transistor	DTC114EU
Q 901	Transistor	2SD2396
Q 902	Transistor	IMD2A
Q 921	Transistor	2SD2396
Q 922	Transistor	2SB1243
Q 923	Transistor	DTC114EU
Q 931	Transistor	IMX1
Q 941	Transistor	DTC114EU
Q 951	Transistor	2SA1037K
Q 961	Transistor	2SC2412K
Q 962	Transistor	2SD1767
Q 963	Transistor	IMD2A
Q 964	Transistor	2SA1235A-12
Q 965	Transistor	DTC114EU
D 301	Diode	MPG06G-6415G50
D 302	Diode	MPG06G-6415G50
D 321	Diode	UDZS3R9(B)
D 322	Diode	RB706F-40
D 361	Diode	1SS133
D 501	Diode	DAN202U
D 502	Diode	HZS9L(A2)
D 571	Diode(P960MP,P9650MP)	1SS396
D 671	Diode	1SR154-400
D 672	Diode	1SR154-400
D 673	Diode	1SR154-400
D 691	Diode	HZS12L(A1)
D 741	Diode	HZS9L(B1)
D 742	Diode	HZS6L(C1)

Circuit Symbol and No.		Part No.
D 751	Diode	MA3039(L)
D 811	Diode	HZS7L(C3)
D 812	Diode	1SS133
D 813	Diode	1SS133
D 841	Diode	HZS6L(A2)
D 842	Diode	HZS9L(A1)
D 843	Diode	HZS9L(C2)
D 873	Diode Network	DA204U
D 874	Diode	DAN202U
D 875	Diode	DAP202U
D 876	Diode	DAN202U
D 877	Diode	DAP202U
D 878	Diode	DAN202U
D 879	Diode	DAP202U
D 901	Diode	MPG06G-6415G50
D 902	Diode	HZS6L(B1)
D 921	Diode	HZS9L(B2)
D 931	Diode	HZS7L(C3)
D 932	Diode	HZS7L(A1)
D 941	Diode	MPG06G-6415G50
D 951	Diode	DAN202U
D 961	Diode	HZS11L(A1)
D 962	LED	SML310BA1T
D 981	Diode	MPG06G-6415G50
D 982	Diode	MPG06G-6415G50
ZNR401	Surge Protector	DSP-201M-A21F
L 101	Inductor	LCTA2R2J2520
L 131	Inductor	LAYU2R2K
L 191	Inductor	LAYU2R2K
L 201	Inductor	LAYU2R2K
L 211	Inductor	CTF1379
L 251	Inductor	CTF1379
L 252	Inductor	CTF1379
L 271	Inductor	CTF1379
L 272	Inductor	CTF1389
L 273	Inductor	CTF1389
L 275	Inductor	CTF1389
L 401	Inductor	LAYU1R0K
L 402	Inductor	LAYU100K
L 403	Inductor	LAYU1R0K
L 404	Inductor	LAYU4R7K
L 572	Ferri-Inductor	LAU101K
L 601	Inductor	LAYU100K
L 681	Inductor	CTF1530
L 682	Inductor	CTF1530
L 701	Inductor	LAYU100K
L 841	Inductor	LAYU2R2K
L 851	Inductor	LAYU100K
L 861	Chip Felight Beads	CTF1399
L 871	Inductor	CTF1379
L 951	Inductor	LAYU2R2K
X 271	Oscillator 16.934MHz	CSS1620
X 601	Crystal Resonator 15.000MHz	CSS1653
S 391	Slide Switch(DSP MODE) (P960MP,P9650MP)	CSH1051
VR321	Semi-fixed 10kΩ(B)	CCP1229
FU351	Fuse 3A ⚠	CEK1286
MIC321	Microphone	CPM1011
BZ381	Buzzer	CPV1062
	FM/AM Tuner Unit	CWE1646

Circuit Symbol and No.	Part No.
RESISTORS	
R 101	RS1/16S562J
R 102	RS1/16S332J
R 103	RS1/16S181J
R 104	RS1/16S181J
R 105	RS1/16S223J
R 106	RS1/16S223J
R 107	RS1/16S102J
R 108	RS1/16S102J
R 109	RS1/16S222J
R 110	RS1/16S101J
R 111	RS1/16S101J
R 112	RS1/16S102J
R 113	RS1/16S150J
R 114	RS1/16S470J
R 131	RAB4C0R0J
R 132	RS1/16S0R0J
R 133	RS1/16S0R0J
R 134	RS1/16S682J
R 135	RS1/16S103J
R 136	RS1/16S103J
R 137	RS1/16S153J
R 171	RS1/16S223J
R 172	RS1/16S223J
R 173	RS1/16S223J
R 174	RS1/16S223J
R 175	RS1/16S223J
R 176	RS1/16S223J
R 177	RS1/16S682J
R 178	RS1/16S682J
R 179	RS1/16S682J
R 180	RS1/16S682J
R 181	RS1/16S682J
R 182	RS1/16S682J
R 183	RS1/16S682J
R 184	RS1/16S682J
R 185	RS1/16S682J
R 186	RS1/16S682J
R 187	RS1/16S682J
R 188	RS1/16S682J
R 189	RS1/16S101J
R 190	RS1/16S101J
R 191	RS1/16S101J
R 192	RS1/16S101J
R 193	RS1/16S101J
R 194	RS1/16S101J
R 195	RS1/16S122J
R 196	RS1/16S122J
R 197	RS1/16S122J
R 198	RS1/16S122J
R 199	RS1/16S122J
R 200	RS1/16S122J
R 201	RS1/16S473J
R 202	RS1/16S473J
R 203	RS1/16S473J
R 204	RS1/16S433J
R 211	RS1/16S103J
R 212	RS1/16S103J

Circuit Symbol and No.		Part No.
R 213		RS1/16S102J
R 231		RS1/16S223J
R 232		RS1/16S223J
R 233		RS1/16S223J
R 234		RS1/16S223J
R 235		RS1/16S223J
R 236		RS1/16S223J
R 237		RS1/16S331J
R 238		RS1/16S331J
R 239		RS1/16S331J
R 240		RS1/16S331J
R 251		RAB4C681J
R 252		RS1/16S681J
R 253		RS1/16S681J
R 254		RS1/16S681J
R 255		RAB4C681J
R 256		RS1/16S153J
R 257		RS1/16S153J
R 258		RS1/16S153J
R 259		RS1/16S223J
R 260		RS1/16S223J
R 261		RS1/16S223J
R 271		RS1/16S101J
R 273		RS1/16S101J
R 274		RS1/16S101J
R 275		RS1/16S101J
R 276		RS1/16S101J
R 278		RS1/16S101J
R 279		RS1/16S101J
R 280		RS1/16S222J
R 281		RS1/16S681J
R 282		RS1/16S101J
R 285		RS1/16S562J
R 286		RS1/16S0R0J
R 287		RS1/16S0R0J
R 288		RS1/16S0R0J
R 289		RS1/16S681J
R 290		RS1/16S681J
R 301		RS1/16S103J
R 302		RS1/16S103J
R 303		RS1/16S103J
R 304		RS1/16S331J
R 321		RS1/16S104J
R 322		RS1/16S152J
R 323		RS1/16S222J
R 324		RS1/16S152J
R 327		RS1/16S102J
R 328		RS1/16S101J
R 329		RS1/16S563J
R 330		RS1/16S103J
R 331		RS1/16S103J
R 332		RS1/16S153J
R 333		RS1/16S104J
R 334		RS1/16S153J
R 335		RS1/16S104J
R 336		RS1/16S223J
R 351		RS1/16S820J
R 352		RS1/16S820J
R 353		RS1/16S820J
R 354		RS1/16S820J

Circuit Symbol and No.		Part No.
R 355		RS1/16S820J
R 356		RS1/16S820J
R 357		RS1/16S223J
R 358		RS1/16S223J
R 359		RS1/16S223J
R 360		RS1/16S223J
R 361		RS1/16S223J
R 362		RS1/16S223J
R 363		RS1/16S471J
R 364		RS1/16S471J
R 365		RS1/16S471J
R 366		RS1/16S471J
R 367		RS1/16S471J
R 368		RS1/16S471J
R 369	(P960MP,P9650MP)	RS1/16S103J
	(P9600MP)	RS1/16S0R0J
R 370	(P960MP,P9650MP)	RS1/16S103J
	(P9600MP)	RS1/16S0R0J
R 371	(P960MP,P9650MP)	RS1/16S103J
	(P9600MP)	RS1/16S0R0J
R 372	(P960MP,P9650MP)	RS1/16S103J
	(P9600MP)	RS1/16S0R0J
R 373	(P960MP,P9650MP)	RS1/16S103J
	(P9600MP)	RS1/16S0R0J
R 374	(P960MP,P9650MP)	RS1/16S103J
	(P9600MP)	RS1/16S0R0J
R 381		RS1/16S102J
R 389		RS1/16S102J
R 391		RS1/16S102J
R 392		RS1/16S104J
R 401		RS1/16S681J
R 403		RS1/16S681J
R 404		RS1/16S681J
R 405		RS1/16S681J
R 406		RS1/16S681J
R 407		RS1/16S681J
R 501		RS1/16S103J
R 502		RS1/16S473J
R 504		RS1/16S473J
R 571		RS1/16S103J
R 572		RS1/16S103J
R 575	(P9600MP)	RS1/16S0R0J
R 601		RS1/16S0R0J
R 602		RS1/16S0R0J
R 605	(P960MP)	RS1/16S104J
R 606	(P9600MP)	RS1/16S104J
R 607		RS1/16S473J
R 608		RS1/16S0R0J
R 609		RS1/16S104J
R 610		RS1/16S681J
R 611		RS1/16S0R0J
R 613		RS1/16S473J
R 614	(P960MP,P9600MP)	RS1/16S103J
R 615	(P960MP,P9600MP)	RS1/16S103J
R 616	(P960MP,P9600MP)	RS1/16S102J
R 617	(P960MP,P9600MP)	RS1/16S102J
R 618		RS1/16S472J
R 619		RS1/16S472J
R 620		RS1/16S472J
R 621		RS1/16S681J

Circuit Symbol and No.	Part No.
R 622	RS1/16S681J
R 623	RS1/16S681J
R 624	RS1/16S104J
R 625	RS1/16S104J
R 626	RS1/16S104J
R 627	RS1/16S104J
R 628	RS1/16S473J
R 629	RS1/16S473J
R 630	RS1/16S473J
R 631	RS1/16S102J
R 632	RS1/16S102J
R 642	RS1/16S104J
R 651	RS1/16S102J
R 652	RS1/16S102J
R 653	RS1/16S222J
R 654	RS1/16S473J
R 655	RS1/16S183J
R 691	RS1/16S271J
R 702	RS1/16S473J
R 703	RS1/16S682J
R 704	RS1/16S682J
R 705	RS1/16S682J
R 706	RS1/16S682J
R 707	RS1/16S221J
R 708	RS1/16S221J
R 709	RS1/16S221J
R 710	RS1/16S221J
R 711	RS1/16S221J
R 712	RS1/16S221J
R 715	RS1/16S681J
R 717	RS1/16S681J
R 741	RD1/4PU391J
R 743	RS1/16S331J
R 751	RS1/16S104J
R 752	RS1/16S222J
R 753	RS1/16S561J
R 754	RS1/16S683J
R 755	RS1/16S153J
R 756	RS1/16S682J
R 757	RS1/16S152J
R 811	RS1/16S102J
R 812	RS1/16S102J
R 813	RD1/4PU271J
R 814	RAB4C102J
R 815	RAB4C104J
R 841	RS1/16S1R0J
R 843	RD1/4PU271J
R 850	RS1/16S332J
R 851	RS1/16S222J
R 852	RS1/16S102J
R 853	RS1/16S472J
R 861	RS1/16S102J
R 862	RS1/16S472J
R 863	RS1/16S222J
R 871	RS1/16S222J
R 872	RS1/16S222J
R 873	RS1/16S104J
R 874	RS1/16S104J
R 875	RS1/16S222J
R 876	RS1/16S471J

Circuit Symbol and No.	Part No.
R 877	RS1/16S222J
R 878	RS1/16S222J
R 879	RS1/16S222J
R 880	RS1/16S222J
R 881	RS1/16S222J
R 882	RS1/16S473J
R 883	RS1/16S104J
R 884	RS1/16S473J
R 901	RS1/16S223J
R 902	RS1/16S272J
R 922	RS1/16S821J
R 923	RD1/4PU182J
R 924	RS1/16S223J
R 925	RS1/16S223J
R 931	RS1/16S104J
R 932	RS1/16S473J
R 933	RS1/16S103J
R 934	RS1/16S473J
R 935	RS1/16S472J
R 943	RS1/16S103J
R 951	RS1/16S102J
R 952	RS1/16S472J
R 953	RS1/16S472J
R 954	RS1/16S153J
R 961	RS1/16S151J
R 962	RS1/16S103J
R 963	RS1/16S562J
R 964	RD1/4PU391J
R 965	RS1/16S1R0J
R 967	RS1/16S472J
R 968	RS1/16S103J

CAPACITORS

C 102	CKSRYB104K25
C 103	CKSRYB102K50
C 104	CKSRYB102K50
C 131	CEJQ4R7M35
C 132	CEJQ4R7M35
C 133	CEJQ4R7M35
C 134	CEJQ4R7M35
C 135	CEJQ4R7M35
C 136	CEJQ4R7M35
C 137	CKSRYB472K50
C 138	CKSRYB472K50
C 139	CKSQYB225K10
C 140	CKSQYB225K10
C 141	CKSRYB104K25
C 142	CSZS100M10
C 143	CSZS100M10
C 145	CKSRYB104K25
C 146	CKSQYB225K10
C 147	CKSRYB104K25
C 148	CKSRYB104K25
C 149	CKSRYB105K10
C 150	CEJQ2R2M50
C 151	CEJQ2R2M50
C 152	CEJQ2R2M50
C 153	CEJQ2R2M50
C 171	CCSRCH681J50

Circuit Symbol and No.		Part No.
C 172		CCSRCH681J50
C 173		CCSRCH681J50
C 174		CCSRCH681J50
C 175		CCSRCH681J50
C 176		CCSRCH681J50
C 177		CCSRCH331J50
C 178		CCSRCH331J50
C 179		CCSRCH331J50
C 180		CCSRCH331J50
C 181		CCSRCH331J50
C 182		CCSRCH331J50
C 183		CKSRYB104K25
C 184		CKSRYB104K25
C 185		CKSRYB104K25
C 201		CKSRYB104K25
C 202		CEJQ100M16
C 203		CEJQ100M16
C 211		CSZS100M16
C 212		CKSRYB104K25
C 213		CSZS100M10
C 214		CKSRYB104K25
C 221		CEJQ100M16
C 222		CEJQ100M16
C 223		CEJQ100M16
C 224		CEJQ100M16
C 225		CEJQ100M16
C 226		CEJQ100M16
C 231		CCSRCH220J50
C 232		CCSRCH220J50
C 233		CSZS100M10
C 234		CSZS100M10
C 235		CKSRYB104K25
C 236		CKSRYB332K50
C 237		CKSRYB332K50
C 251		CKSRYB104K25
C 252		CKSRYB104K25
C 271		CKSRYB104K25
C 272		CKSRYB104K25
C 273		CCSRCH680J50
C 275		CCSRCH100D50
C 276		CCSRCH100D50
C 277		CKSRYB104K25
C 278		CKSQYB682K50
C 279		CSZS100M10
C 280		CKSRYB104K25
C 281		CKSRYB104K25
C 282		CSZS100M10
C 283		CKSRYB104K25
C 284		CSZS100M10
C 286		CKSRYB103K50
C 287		CCSRCH560J50
C 291		CKSRYB102K50
C 292	(P9650MP)	CCSRCH101J50
C 293	(P9650MP)	CKSRYB102K50
C 297	(P960MP,P9600MP)	CKSRYB102K50
C 301		CKSRYB474K10
C 302		CKSRYB474K10
C 303		CKSRYB474K10
C 304		CKSRYB474K10
C 305		CKSRYB474K10

Circuit Symbol and No.		Part No.
C 306		CKSRYB474K10
C 307		CKSRYB474K10
C 308		CKSRYB474K10
C 309		CEHAR330M10
C 310	3300µF/16V	CCH1486
C 311		CKSRYB104K25
C 312		CEHAR100M16
C 313		CKSQYB225K10
C 314		CKSQYB225K10
C 321		CKSRYB105K10
C 322		CKSRYB105K10
C 325		CCSRCH101J50
C 326		CKSRYB105K10
C 327		CEALNP4R7M16
C 328		CKSRYB105K10
C 329		CEALNP4R7M16
C 330		CKSRYB474K10
C 331		CKSRYB104K25
C 332		CEAL100M16
C 333		CKSRYB105K10
C 334		CKSRYB105K10
C 351		CEJQ100M50
C 352		CEJQ100M50
C 353		CEJQ100M50
C 354		CEJQ100M50
C 355		CEJQ100M50
C 356		CEJQ100M50
C 357		CKSRYB222K50
C 358		CKSRYB222K50
C 359		CKSRYB222K50
C 360		CKSRYB222K50
C 361		CKSRYB222K50
C 362		CKSRYB222K50
C 371		CKSRYB102K50
C 373		CEHAR220M16
C 401		CKSRYB103K50
C 402		CKSRYB103K50
C 403		CEJQ470M10
C 404		CKSRYB103K50
C 405		CEJQ101M10
C 407		CKSYB475K10
C 571		CKSRYB105K10
C 572		CKSRYB105K10
C 573		CKSRYB105K10
C 574		CKSRYB105K10
C 575		CKSRYB105K10
C 576		CKSRYB105K10
C 580		CEAL4R7M35
C 582		CEJQ101M16
C 583		CASAQ3R3M16
C 585		CKSYB684K25
C 586		CEAL100M16
C 587		CKSQYB225K10
C 588		CEJQ330M25
C 589		CEJQ330M25
C 590	(P960MP,P9650MP)	CEJQ330M25
C 591	(P960MP,P9650MP)	CEJQ330M25
C 601		CSZS4R7M16
C 602		CKSRYB103K50
C 603		CCSRCH180J50

Circuit Symbol and No.		Part No.
C 604		CCSRCH101J50
C 605		CCSRCH180J50
C 652		CKSRYB104K25
C 653		CKSRYB105K10
C 671		CEJQ220M6R3
C 672		CKSRYB103K50
C 673		CKSYB475K10
C 681		CKSRYB474K10
C 682		CKSRYB103K50
C 683		CEJQ220M6R3
C 684		CKSRYB105K10
C 685		CKSRYB105K10
C 686		CEJQ101M6R3
C 687		CEJQ101M6R3
C 688		CKSRYB104K25
C 689		CKSRYB104K25
C 691		CKSQYB474K16
C 692		CKSRYB103K50
C 693		CEJQ101M6R3
C 694		CKSRYB104K25
C 701	470µF/10V	CCH1438
C 741		CKSRYB473K50
C 742		CKSRYB102K50
C 743		CEJQ101M16
C 744		CKSRYB473K50
C 745		CEJQ101M16
C 751		CKSRYB681K50
C 752		CEJQ101M6R3
C 753		CKSQYB225K10
C 811		CCSRCH101J50
C 812		CEJQ220M16
C 813		CKSRYB104K25
C 814		CKSRYB102K50
C 815		CKSRYB102K50
C 816		CCSRCH101J50
C 837		CKSRYB103K50
C 841		CEJQ470M16
C 842		CKSRYB104K25
C 843		CCSRCH101J50
C 844		CEJQ330M25
C 851		CKSRYB104K25
C 852		CKSRYB104K25
C 853		CEJQ470M10
C 861		CKSRYB104K25
C 862		CEJQ470M10
C 863		CKSRYB104K25
C 871		CKSRYB473K50
C 901	470µF/16V	CCH1331
C 902	470µF/16V	CCH1459
C 903		CKSRYB472K50
C 904		CKSRYB103K50
C 905		CEJQ470M10
C 921		CEJQ221M10
C 922		CKSRYB103K50
C 923		CEJQ101M16
C 931		CKSRYB104K25
C 941		CKSQYB105K16
C 961		CKSRYB473K50
C 962		CKSRYB104K25

Circuit Symbol and No.		Part No.

B

Unit Number:CWM9191
Unit Name:Keyboard Unit(OEL)

MISCELLANEOUS

IC 1802	IC	S-818A33AUC-BGN
IC 1805	IC	PD5917A
IC 1806	IC	PD8122A
IC 1807	IC	PD6460A
IC 1808	IC	TC7WH32FK
D 1803	Diode	1SS355
D 1808	LED	SML310BA1T
D 1809	LED	SML310BA1T
D 1810	LED	SML310BA1T
D 1811	LED	SML310BA1T
L 1801	Inductor	CTF1530
L 1802	Inductor	CTF1484
L 1803	Inductor	CTF1530
L 1804	Chip Felight Beads	CTF1399
X 1801	Radiator 10.0MHz	CSS1577
S 1801	Push Switch	CSG1111
S 1802	Push Switch	CSG1111
S 1803	Push Switch	CSG1111
S 1804	Push Switch	CSG1111
	OEL Module	MXK8200

RESISTORS

R 1807	RS1/16SS222J
R 1808	RS1/16SS222J
R 1809	RS1/16SS271J
R 1810	RS1/16SS271J
R 1811	RS1/16SS473J
R 1812	RS1/16SS104J
R 1815	RS1/16SS101J
R 1816	RS1/16SS101J
R 1817	RS1/16SS101J
R 1818	RS1/16SS101J
R 1819	RAB4CQ681J
R 1820	RS1/16SS222J
R 1821	RS1/16SS154J
R 1822	RS1/16SS473J
R 1823	RS1/16SS0R0J
R 1824	RS1/16SS473J
R 1825	RS1/16SS473J
R 1826	RS1/16SS473J
R 1827	RS1/16SS0R0J
R 1828	RS1/16SS0R0J
R 1829	RS1/16SS473J
R 1830	RS1/16SS473J
R 1832	RS1/16SS0R0J
R 1835	RAB4CQ681J
R 1836	RAB4CQ681J
R 1837	RAB4CQ681J
R 1838	RAB4CQ681J
R 1839	RAB4CQ681J
R 1840	RAB4CQ681J
R 1841	RAB4CQ681J
R 1842	RAB4CQ681J
R 1843	RAB4CQ681J

Circuit Symbol and No.		Part No.
R 1844		RAB4CQ681J
R 1845		RS1/16SS473J
R 1846		RS1/16SS473J
R 1847		RS1/16SS473J
R 1849		RS1/16SS392J
R 1850		RS1/16SS682J
R 1851		RAB4CQ221J
R 1852		RS1/16SS221J
R 1853		RS1/16SS221J
R 1854		RS1/16SS0R0J
R 1856		RS1/16SS0R0J
R 1857		RS1/16SS0R0J

CAPACITORS

C 1805		CKSRYB105K10
C 1806		CSZSP4R7M10
C 1807		CKSQYB225K10
C 1808		CKSRYB474K10
C 1809		CKSSYB103K16
C 1810		CKSSYB103K16
C 1814		CKSSYB473K10
C 1816		CKSSYB103K16
C 1817		CSZSP4R7M10
C 1822		CKSSYB103K16
C 1826		CKSSYB103K16
C 1827		CKSSYB103K16
C 1828		CKSSYB104K10
C 1829		CKSSYB104K10
C 1830		CKSSYB104K10
C 1831		CKSSYB104K10

C
Unit Number:CWM9194
Unit Name:Keyboard Unit(LCD)

MISCELLANEOUS

IC 1901	IC	TSOP4840SB1
IC 1902	IC	PD6340A
Q 1906	Transistor	2SC3052-12
D 1903	LED	NSSW440-9159
D 1904	LED	SML310BA1T
D 1905	LED	SML310BA1T
D 1906	LED	SML310BA1T
D 1907	LED	SML310BA1T
D 1908	LED	SML310BA1T
D 1909	LED	SML310BA1T
D 1910	LED	SML310BA1T
D 1911	LED	SML310BA1T
D 1913	LED	SML310BA1T
D 1914	LED	SML310BA1T
D 1915	LED	SML310BA1T
D 1916	LED	SML310BA1T
D 1917	LED	SML310BA1T
D 1918	LED	SML310BA1T
D 1919	LED	SML310BA1T
D 1920	LED	SML310BA1T
L 1902	Inductor	CTF1530
X 1901	Ceramic Resonator 4.97MHz	CSS1573
S 1901	Push Switch	CSG1111

Circuit Symbol and No.		Part No.
S 1902	Encoder	CSD1104
S 1903	Push Switch	CSG1111
S 1904	Push Switch	CSG1111
S 1905	Push Switch	CSG1111
S 1906	Push Switch	CSG1111
S 1907	Push Switch	CSG1111
S 1908	Push Switch	CSG1111
S 1909	Push Switch	CSG1111
S 1911	Push Switch	CSG1111
S 1912	Push Switch	CSG1111
S 1913	Push Switch	CSG1111
S 1914	Push Switch	CSG1111
S 1915	Push Switch	CSG1111
S 1916	Push Switch	CSG1111
S 1917	Push Switch	CSG1111
S 1918	Push Switch	CSG1111
S 1919	Push Switch	CSG1111
LCD1901	LCD	CAW1704

RESISTORS

R 1901		RS1/16S222J
R 1902		RS1/16S222J
R 1903		RS1/16S274J
R 1904		RS1/16S103J
R 1905		RS1/16S121J
R 1906		RS1/16S2R2J
R 1907		RS1/16S101J
R 1908		RS1/16S101J
R 1918		RS1/16S271J
R 1920		RS1/16S271J
R 1922		RS1/16S271J
R 1924		RS1/16S271J
R 1926		RS1/16S271J
R 1928		RS1/16S271J
R 1934		RS1/16S104J
R 1935		RS1/16S103J
R 1936		RS1/16S223J
R 1937		RS1/16S271J
R 1939		RS1/16S271J

CAPACITORS

C 1901		CKSRYB104K25
C 1903		CSZSR4R7M16
C 1904		CKSRYB104K16
C 1905		CCSRCH101J50
C 1908		CKSRYB104K16
C 1909		CKSRYB104K16
C 1910		CKSRYB104K16
C 1911		CKSRYB104K16
C 1912		CKSRYB104K16
C 1913		CKSRYB104K16
C 1914		CKSRYB104K16
C 1915		CKSRYB104K16
C 1916		CKSRYB104K16
C 1917		CKSRYB104K16
C 1918		CKSRYB104K16
C 1919		CKSRYB104K16
C 1920		CKSRYB104K16
C 1921		CKSRYB104K16

Circuit Symbol and No.		Part No.
C 1922		CKSRYB104K16
C 1923		CKSRYB104K16

D

Unit Number:CWX2953
Unit Name:CD CORE UNIT(S10WMACODE2)

MISCELLANEOUS

IC 201	IC	UPD63761GJ
IC 203	IC	NJM2391DL1-33
IC 301	IC	BA5835FM
IC 501	IC	S-L2980A15MC-C6A
IC 701	IC	PE5423A
IC 703	IC	S-812C33AUA-C2N
Q 101	Transistor	2SB1132
Q 701	Transistor	UN2111
D 101	Diode	1SS355
L 203	Inductor	CTF1389
L 207	Inductor	CTF1389
L 209	Inductor	CTF1389
L 703	Inductor	CTF1389
L 902	Inductor	CTF1306
L 903	Inductor	CTF1306
L 904	Inductor	CTF1306
X 702	Resonator 4.00MHz	CSS1654
S 901	Switch(HOME)	CSN1051
S 902	Switch(CLAMP)	CSN1051
S 903	Spring Switch(DSCSNS)	CSN1052
S 904	Switch(12EJ)	CSN1051
S 905	Switch(8EJ)	CSN1051

RESISTORS

R 101	RS1/10S1R5J
R 102	RS1/10S1R5J
R 103	RS1/10S1R5J
R 104	RS1/10S1R5J
R 105	RS1/10S1R5J
R 107	RS1/16SS0R0J
R 201	RS1/16SS102J
R 202	RS1/16SS333J
R 205	RS1/16SS473J
R 207	RS1/16SS473J
R 209	RS1/16SS473J
R 210	RS1/16SS0R0J
R 214	RS1/16SS472J
R 216	RS1/16SS472J
R 218	RS1/16SS472J
R 220	RS1/16SS472J
R 221	RS1/16SS103J
R 222	RS1/16SS103J
R 223	RS1/16SS0R0J
R 224	RS1/16SS0R0J
R 225	RS1/16SS103J
R 226	RS1/16SS393J
R 227	RS1/16SS562J
R 228	RS1/16SS122J
R 229	RS1/16SS472J

Circuit Symbol and No.	Part No.
R 231	RS1/16SS0R0J
R 232	RS1/16SS122J
R 233	RS1/16SS0R0J
R 237	RS1/16SS221J
R 238	RS1/16SS221J
R 239	RS1/16SS221J
R 240	RS1/16SS0R0J
R 241	RS1/16SS333J
R 243	RS1/16SS333J
R 245	RS1/16SS333J
R 250	RS1/16SS0R0J
R 256	RS1/16SS0R0J
R 261	RS1/16S0R0J
R 262	RS1/16S0R0J
R 263	RS1/16S0R0J
R 264	RS1/16S0R0J
R 267	RS1/16S0R0J
R 301	RS1/16SS183J
R 302	RS1/16SS822J
R 304	RS1/16SS183J
R 305	RS1/16SS822J
R 307	RS1/16SS183J
R 308	RS1/16SS183J
R 309	RS1/16SS183J
R 310	RS1/16SS183J
R 501	RS1/16SS0R0J
R 701	RS1/16S0R0J
R 702	RS1/16SS0R0J
R 703	RS1/16SS104J
R 704	RS1/16SS104J
R 705	RS1/16SS221J
R 706	RS1/16SS221J
R 707	RS1/16SS0R0J
R 708	RS1/16SS221J
R 709	RS1/16SS473J
R 710	RS1/16SS102J
R 711	RS1/16SS102J
R 712	RS1/16SS102J
R 713	RS1/16SS102J
R 714	RS1/16SS473J
R 715	RS1/16SS101J
R 716	RS1/16SS472J
R 717	RS1/16SS221J
R 718	RS1/16SS221J
R 719	RS1/16SS221J
R 720	RS1/16SS471J
R 721	RS1/16S0R0J
R 724	RS1/16S473J
R 725	RS1/16SS222J
R 726	RS1/16SS103J
R 727	RS1/16SS473J
R 729	RS1/16SS223J
R 730	RS1/16SS473J
R 731	RS1/16SS104J
R 732	RS1/16SS104J
R 733	RS1/16SS104J
R 735	RS1/16SS473J
R 737	RS1/16SS104J
R 740	RS1/16SS473J
R 743	RS1/16SS104J

Circuit Symbol and No.		Part No.
R 745		RS1/16SS473J
R 746		RS1/16SS104J
R 747		RS1/16SS102J
R 750		RS1/16SS473J
R 751		RS1/16SS102J
R 754		RS1/16SS102J
R 755		RS1/16SS102J
R 756		RS1/16SS104J
R 765		RAB4CQ221J
R 769		RAB4CQ221J
R 773		RAB4CQ221J
R 777		RS1/16SS221J
R 778		RS1/16SS221J
R 779		RS1/16SS221J
R 901		RAB4CQ221J
R 902		RS1/16S0R0J
R 905		RS1/16SS221J
R 906		RS1/16SS221J
R 909		RS1/16SS0R0J
R 911		RS1/16SS0R0J

CAPACITORS

C 101		CKSSYB104K10
C 102		CKSSYB104K10
C 103	100µF/16V	CCH1504
C 104	47µF/6.3V	CCH1506
C 105		CKSSYB104K10
C 106		CCSSCH101J50
C 107		CKSRYB224K16
C 108		CKSSYB104K10
C 110		CKSSYB104K10
C 201		CKSSYB471K50
C 202		CKSSYB104K10
C 203		CKSSYB104K10
C 205		CKSSYB104K10
C 207	220µF/4V	CCH1590
C 208		CKSSYB104K10
C 209		CKSSYB104K10
C 216		CKSSYB332K50
C 217		CKSSYB104K10
C 218		CKSSYB223K16
C 219		CKSSYB104K10
C 220		CKSSYB103K16
C 221		CKSSYB104K10
C 222		CCSSCH560J50
C 223		CCSSCH5R0C50
C 224		CKSSYB104K10
C 225		CKSSYB103K16
C 226		CCSSCH680J50
C 227		CCSSCH470J50
C 228		CKSSYB682K25
C 230		CKSSYB104K10
C 232		CKSSYB104K10
C 233	10µF/6.3V	CCH1470
C 234	220µF/4V	CCH1590
C 235		CKSRYB224K16
C 237		CKSSYB104K10
C 239		CCSSCH330J50
C 242		CKSSYB104K10
C 246		CKSSYB104K10

Circuit Symbol and No.		Part No.
C 249		CKSSYB221K50
C 250		CKSRYB102K50
C 251		CKSRYB102K50
C 260		CKSSYB104K10
C 301		CKSSYB221K50
C 302		CKSSYB221K50
C 303		CKSSYB472K25
C 304		CKSSYB103K16
C 305	100µF/16V	CCH1504
C 306		CKSSYB104K10
C 307		CKSSYB104K10
C 501		CKSRYB224K16
C 505		CKSQYB475K6R3
C 701		CKSSYB104K10
C 702		CKSSYB471K50
C 703		CKSSYB103K16
C 704	4.7µF/25V	CCH1592
C 706		CKSSYB104K10
C 707		CKSSYB104K10
C 712		CKSRYB224K16
C 713		CKSSYB104K10
C 714		CKSSYB104K10
C 716		CKSSYB103K16
C 717		CCSSCH180J50
C 718		CCSSCH180J50
C 720		CKSQYB225K10
C 722		CKSRYB105K10
C 903		CKSSYB471K50
C 906		CKSRYB224K16
C 910		CKSQYB225K10

E

Unit Number:
Unit Name:Switch PCB

MISCELLANEOUS

S 951	Switch(OPEN)	CSN1051
S 952	Switch(CLOSE)	CSN1052
S 953	Switch(EJECT)	CSN1058

Miscellaneous Parts List

	Pickup Unit(P10)(Service)	CXX1641
M 1	Motor Unit(SPINDLE)	CXB6007
M 2	Motor Unit(LOADING/CARRIAGE)	CXB8933
M 951	Motor Unit(AUTOMATIC FLAP)	CXC3190