EXPLODED VIEW

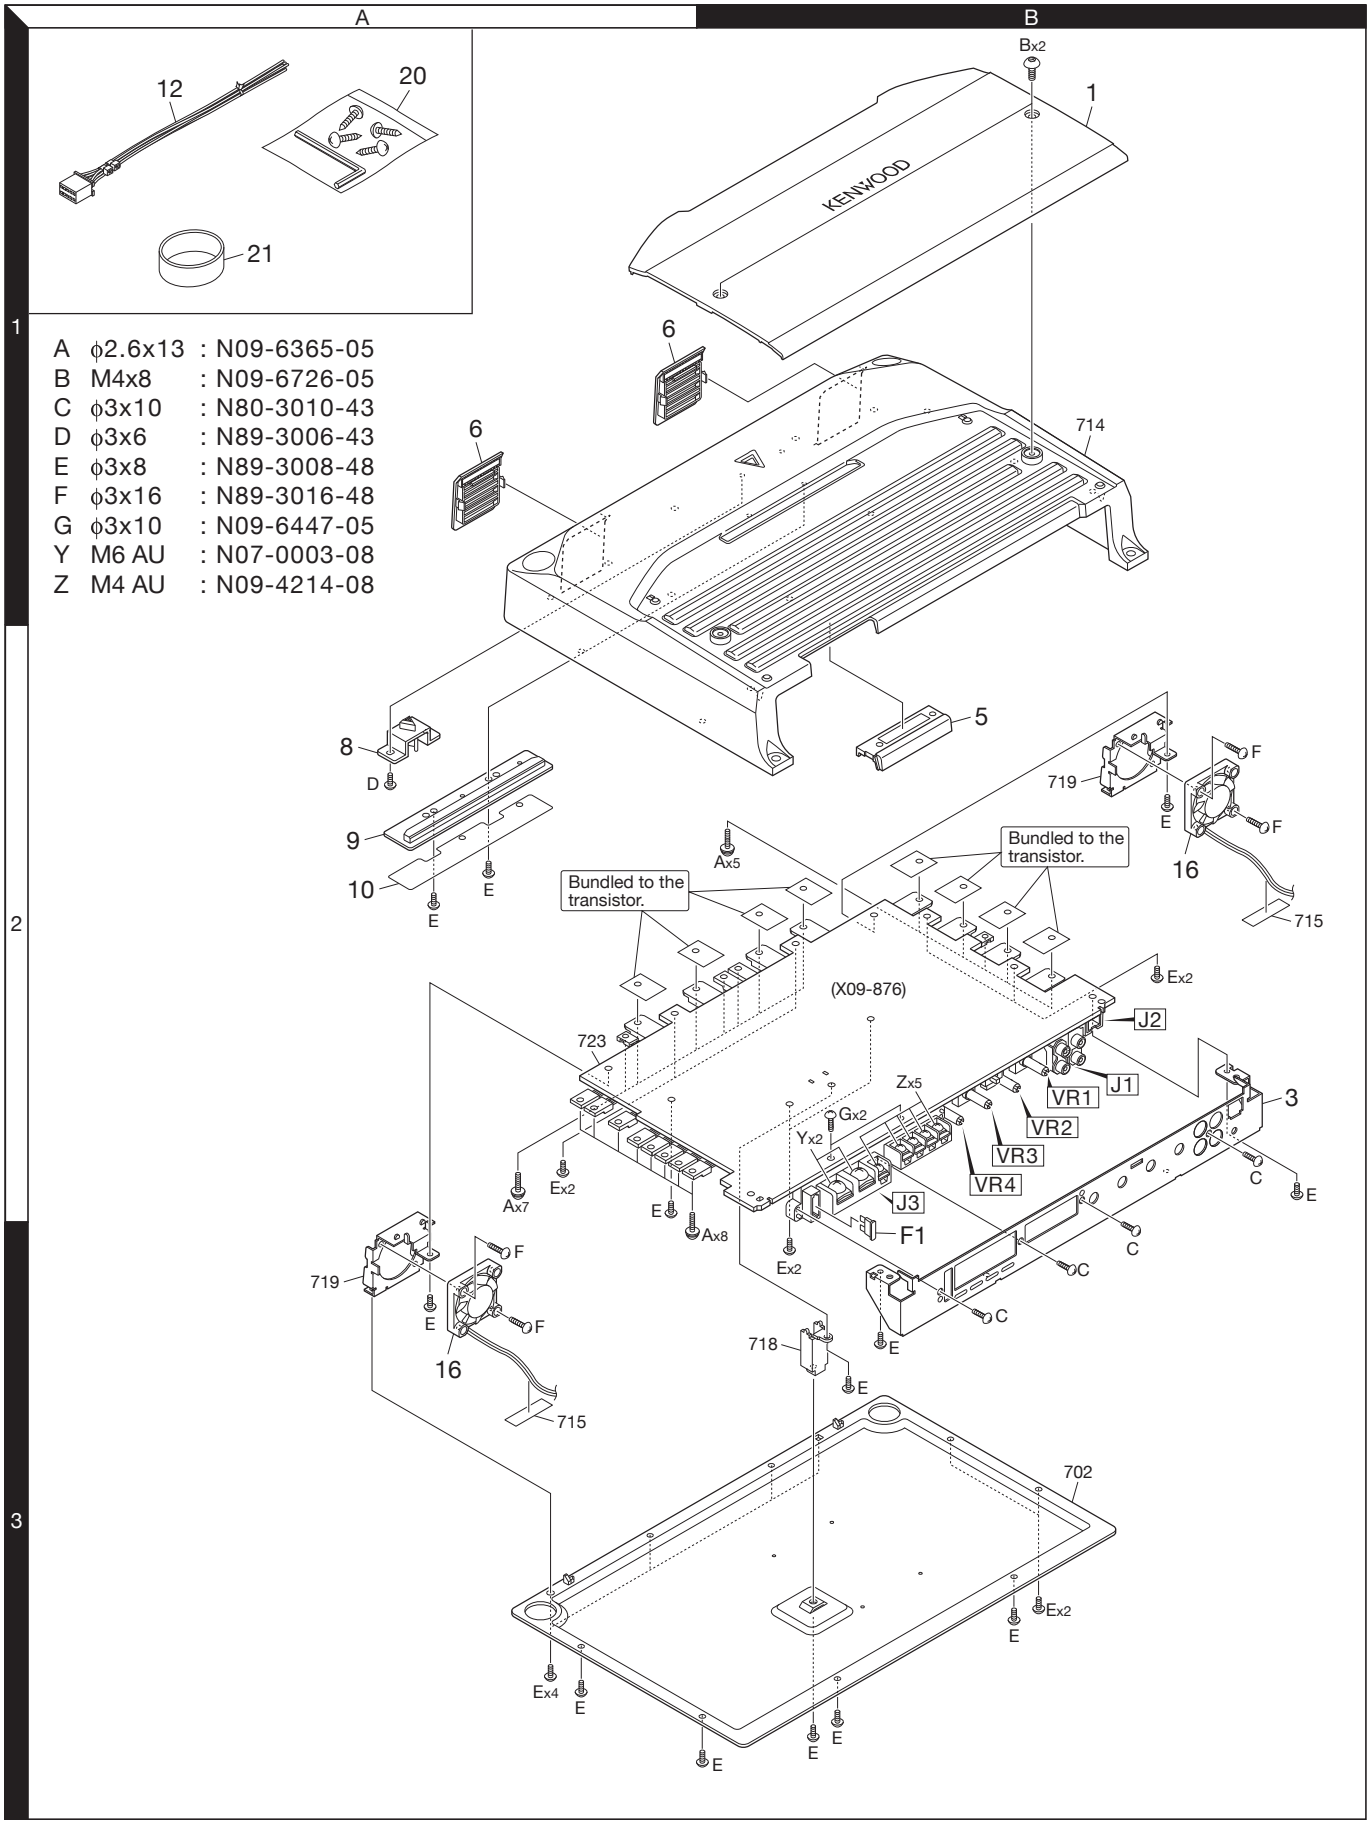

Parts with the exploded numbers larger than 700 are not supplied.

KAC-7204

PARTS LIST

✻ New parts
Parts without **Parts No.** are not supplied.
Les articles non mentionnes dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

Ref. No.	Add	New	Parts No.	Description			Destination
KAC-7204							
1	1B	✻	A21-6640-01	DRESSING PANEL			KE1
1	1B	✻	A21-6641-01	DRESSING PANEL			M1
3	2B	✻	A64-4421-02	PANEL			
5	2B		B07-3231-03	ESCUTCHEON			
6	1A		B07-3232-02	ESCUTCHEON			
8	2A		B19-2324-03	LIGHTING BOARD			
9	2A		B19-2468-03	LIGHTING BOARD			
10	2A		B19-2502-03	LIGHTING BOARD			
-		✻	B64-3928-00	INSTRUCTION MANUAL (ENG.FRE.SPA			KE1
-		✻	B64-3929-00	INSTRUCTION MANUAL (GE.DU.IT.PO			E1
-		✻	B64-3930-00	INSTRUCTION MANUAL (ENG.S-CHI)			M1
12	1A		E30-6145-05	CONNECTING CORD ASSY			
16	3A		F09-2974-05	FAN			
⚠ F1	3B		F52-0016-05	FUSE (BLADE TYPE) 40A			
-		✻	H54-4231-03	ITEM CARTON CASE			KE1
-		✻	H54-4233-03	ITEM CARTON CASE			M1
20	1A		N99-1820-05	SCREW & WRENCH KEY SET			
A	2A		N09-6365-05	SEMS (TAPTITE SCREW)(2.6X13)			
B	1B		N09-6726-05	DRESSED SCREW (M4X8)			
C	3B		N80-3010-43	PAN HEAD TAPTITE SCREW			
D	2A		N89-3006-43	BINDING HEAD TAPTITE SCREW			
E	3B		N89-3008-48	BINDING HEAD TAPTITE SCREW			
F	3A		N89-3016-48	BINDING HEAD TAPTITE SCREW			
Y	2B		N07-0003-08	TERMINAL SCREW (M6 AU)			
Z	2B		N09-4214-08	TERMINAL SCREW (M4 AU)			
21	1A		W01-1606-05	ACCESSORIES			
AUDIO UNIT (X09-8760-10)							
C1			C90-5557-05	ELECTRO	10UF	25WV	
C2-5			CD04BJ1E470M	ELECTRO	47UF	25WV	
C6,7		✻	C90-5546-05	ELECTRO	3300UF	63WV	
C8,9			C91-2293-05	M P F C	1000PF	200WV	
C10,11			CD04BC1C392M	ELECTRO	3900UF	16WV	
C13			C90-5557-05	ELECTRO	10UF	25WV	
C14			CK73GB1H104K	CHIP C	0.10UF	K	
C15			CD04BJ1E470M	ELECTRO	47UF	25WV	
C16			CD04BJ1H100M	ELECTRO	10UF	50WV	
C17			CQ93FMG1H102J	MYLAR	1000PF	J	
C18			CK45FB1H222K	CERAMIC	2200PF	K	
C19,20			CQ93FMG1H473J	MYLAR	0.047UF	J	
C24			CD04BJ1H100M	ELECTRO	10UF	50WV	
C34			CK73GB1H103K	CHIP C	0.010UF	K	
C36			CK73GB1H103K	CHIP C	0.010UF	K	
C50,51			CD04BJ1H100M	ELECTRO	10UF	50WV	
C52			CK73GB1H473K	CHIP C	0.047UF	K	
C57,58			CD04BJ1H100M	ELECTRO	10UF	50WV	
C101,102			CK73GB1H102K	CHIP C	1000PF	K	
C103,104			CD04BJ1H100M	ELECTRO	10UF	50WV	
C105,106			CC73GCH1H150J	CHIP C	15PF	J	
C107,108			CK73GB1H104K	CHIP C	0.10UF	K	
C109-112			CD04BJ1H100M	ELECTRO	10UF	50WV	
C113,114			CC73GCH1H150J	CHIP C	15PF	J	
C115,116			CD04BJ1H100M	ELECTRO	10UF	50WV	
C117,118			CK73FB1H224K	CHIP C	0.22UF	K	
C119			CD04BJ1H100M	ELECTRO	10UF	50WV	
C120			CK73GB1H103K	CHIP C	0.010UF	K	
C121			CK73GB1H104K	CHIP C	0.10UF	K	
C122			CD04BJ1H100M	ELECTRO	10UF	50WV	
C123			CD04BJ1H4R7M	ELECTRO	4.7UF	50WV	
C124			CK73GB1H103K	CHIP C	0.010UF	K	
C125			CC73GCH1H101J	CHIP C	100PF	J	
C126,127			CK73GB1H103K	CHIP C	0.010UF	K	
C128			CC73GCH1H150J	CHIP C	15PF	J	
C129			CK73GB1H103K	CHIP C	0.010UF	K	
C130			CK73GB1H104K	CHIP C	0.10UF	K	
C131-134			CC73GCH1H101J	CHIP C	100PF	J	
C135			CK73FB1E154K	CHIP C	0.15UF	K	
C136			CD04BJ1H4R7M	ELECTRO	4.7UF	50WV	
C137			CK73GB1H333K	CHIP C	0.033UF	K	
C138			CC73GCH1H101J	CHIP C	100PF	J	
C139			CK73FB1E154K	CHIP C	0.15UF	K	
C140			CQ93FMG1H102J	MYLAR	1000PF	J	
C141			CK73GB1H333K	CHIP C	0.033UF	K	
C143			CD04BJ1H100M	ELECTRO	10UF	50WV	
C145-148			CK73GB1H103K	CHIP C	0.010UF	K	
C149,150			CK73GB1H472K	CHIP C	4700PF	K	
C201,202			CD04BJ1H100M	ELECTRO	10UF	50WV	
C203,204			CC45FCH1H221J	CERAMIC	220PF	J	
C205,206			CK73GB1H472K	CHIP C	4700PF	K	
C207,208			CD04BJ1E470M	ELECTRO	47UF	25WV	
C209,210			CC45FCH1H100D	CERAMIC	10PF	D	
C211,212			CC45FCH1H221J	CERAMIC	220PF	J	
C213,214			CC45FCH1H220J	CERAMIC	22PF	J	
C215,216			CD04BJ1H100M	ELECTRO	10UF	50WV	
C217,218			CC45FCH1H220J	CERAMIC	22PF	J	
C219-222			CK73GB1H102K	CHIP C	1000PF	K	
C223			CD04BJ1J101M	ELECTRO	100UF	63WV	
C225,226			CC45FSL1H471J	CERAMIC	470PF	J	
C227,228			CC73GCH1H470J	CHIP C	47PF	J	
C230-233			CC73GCH1H101J	CHIP C	100PF	J	
C263,264			CC45FCH1H221J	CERAMIC	220PF	J	
C600			CK73GB1H103K	CHIP C	0.010UF	K	
C601			CD04BJ1V330M	ELECTRO	33UF	35WV	
C602-605			CD04BJ1H100M	ELECTRO	10UF	50WV	
C606			CD04BJ1A101M	ELECTRO	100UF	10WV	
C607			CK73GB1H103K	CHIP C	0.010UF	K	
C608			CD04BJ1A101M	ELECTRO	100UF	10WV	
C609,610			CK73GB1H103K	CHIP C	0.010UF	K	
C611,612			CD04BJ1H100M	ELECTRO	10UF	50WV	
C613,614			CK73GB1H103K	CHIP C	0.010UF	K	
C615			CD04BJ1H100M	ELECTRO	10UF	50WV	
C616			CK73GB1H104K	CHIP C	0.10UF	K	
C617			CK73GB1H103K	CHIP C	0.010UF	K	
C620,621			CK73GB1H103K	CHIP C	0.010UF	K	
C698			CK73GB1H103K	CHIP C	0.010UF	K	
C699			CD04BJ1H010M	ELECTRO	1.0UF	50WV	

E1 : KAC-7204 (Europe) **K** : KAC-7204 (North America)
M1 : KAC-7204 (Other Areas)

⚠Indicates safety critical compo nents.

PARTS LIST

AUDIO UNIT (X09-8760-10)

Ref. No.	Add	New	Parts No.	Description				Destination
CN1,2			E41-1682-05	PIN ASSY				
J1			E63-0947-05	PIN JACK				
J2			E58-1031-05	RECTANGULAR RECEPTACLE				
J3			E70-0832-15	SCREW TERMINAL BOARD				
L1,2		✻	L33-2444-05	CHOKE COIL 21UH				
L3			L19-0771-05	TRANSFORMER FOR CONVERTER				
G	2B		N09-6447-05	TAPTITE SCREW				
R1,2			RK73EB2E100J	CHIP R	10	J	1/4W	
R3,4		✻	RK73EB2E163J	CHIP R	16K	J	1/4W	
R5,6			RK73EB2E333J	CHIP R	33K	J	1/4W	
R7,8			RD14DB2H100J	SMALL-RD	10	J	1/2W	
R9,10			RK73GB2A472J	CHIP R	4.7K	J	1/10W	
R11-14			RK73GB2A470J	CHIP R	47	J	1/10W	
R15,16			RK73GB2A152J	CHIP R	1.5K	J	1/10W	
R17			RK73GB2A333J	CHIP R	33K	J	1/10W	
R18			RK73GB2A822J	CHIP R	8.2K	J	1/10W	
R19			RK73GB2A103J	CHIP R	10K	J	1/10W	
R20			RK73GB2A334J	CHIP R	330K	J	1/10W	
R21			RK73GB2A103J	CHIP R	10K	J	1/10W	
R22			RK73GB2A104J	CHIP R	100K	J	1/10W	
R23			RK73GB2A103J	CHIP R	10K	J	1/10W	
R24			RK73GB2A203J	CHIP R	20K	J	1/10W	
R25			RK73GB2A682J	CHIP R	6.8K	J	1/10W	
R26			RK73GB2A104J	CHIP R	100K	J	1/10W	
R27			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R28-30			RD14DB2H100J	SMALL-RD	10	J	1/2W	
R34			RK73GB2A151J	CHIP R	150	J	1/10W	
R35			RK73GB2A103J	CHIP R	10K	J	1/10W	
R49			RK73GB2A1R0J	CHIP R	1.0	J	1/10W	
R50			RK73EB2E222J	CHIP R	2.2K	J	1/4W	
R51,52			RK73GB2A2R2J	CHIP R	2.2	J	1/10W	
R53			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R54-57			RK73GB2A470J	CHIP R	47	J	1/10W	
R58			RK73GB2A103J	CHIP R	10K	J	1/10W	
R59			RK73GB2A104J	CHIP R	100K	J	1/10W	
R60			RK73GB2A103J	CHIP R	10K	J	1/10W	
R61			RK73GB2A472J	CHIP R	4.7K	J	1/10W	
R62			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R71,72			RK73EB2E2R2J	CHIP R	2.2	J	1/4W	
R73,74			RK73GB2A101J	CHIP R	100	J	1/10W	
R100			RK73EB2E102J	CHIP R	1.0K	J	1/4W	
R101,102			RD14BB2C102J	RD	1.0K	J	1/6W	
R103-106			RK73GB2A103J	CHIP R	10K	J	1/10W	
R107,108			RK73GB2A123J	CHIP R	12K	J	1/10W	
R109-112		✻	RN73GE1J103D	CHIP R	10K	D	1/16W	
R113,114			RK73GB2A472J	CHIP R	4.7K	J	1/10W	
R115,116			RK73GB2A473J	CHIP R	47K	J	1/10W	
R117			RK73GB2A822J	CHIP R	8.2K	J	1/10W	
R118			RK73GB2A563J	CHIP R	56K	J	1/10W	
R119			RK73GB2A912J	CHIP R	9.1K	J	1/10W	
R120,121			RK73EB2E222J	CHIP R	2.2K	J	1/4W	
R122			RK73EB2E104J	CHIP R	100K	J	1/4W	
R123-126		✻	RN73GE1J103D	CHIP R	10K	D	1/16W	
R127-129			RK73EB2E104J	CHIP R	100K	J	1/4W	
R130			RK73GB2A822J	CHIP R	8.2K	J	1/10W	
R131			RK73GB2A563J	CHIP R	56K	J	1/10W	
R132			RK73GB2A912J	CHIP R	9.1K	J	1/10W	
R133,134			RK73GB2A473J	CHIP R	47K	J	1/10W	
R135			RK73GB2A431J	CHIP R	430	J	1/10W	
R136			RK73GB2A103J	CHIP R	10K	J	1/10W	
R137			RK73GB2A431J	CHIP R	430	J	1/10W	
R138			RK73GB2A623J	CHIP R	62K	J	1/10W	
R139			RK73GB2A621J	CHIP R	620	J	1/10W	
R140			RK73GB2A154J	CHIP R	150K	J	1/10W	
R141			RK73GB2A103J	CHIP R	10K	J	1/10W	
R142			RK73GB2A241J	CHIP R	240	J	1/10W	
R143			RK73GB2A103J	CHIP R	10K	J	1/10W	
R144			RK73GB2A222J	CHIP R	2.2K	J	1/10W	
R145			RK73GB2A563J	CHIP R	56K	J	1/10W	
R146			RK73GB2A103J	CHIP R	10K	J	1/10W	
R147			RK73GB2A154J	CHIP R	150K	J	1/10W	
R148			RK73GB2A222J	CHIP R	2.2K	J	1/10W	
R149			RK73GB2A241J	CHIP R	240	J	1/10W	
R150			RK73GB2A473J	CHIP R	47K	J	1/10W	
R151			RK73GB2A222J	CHIP R	2.2K	J	1/10W	
R152,153			RK73GB2A203J	CHIP R	20K	J	1/10W	
R154			RK73GB2A103J	CHIP R	10K	J	1/10W	
R155			R92-0205-05	METAL-PLATE	0.1	K	2W	
R156			RK73GB2A103J	CHIP R	10K	J	1/10W	
R157			RK73GB2A184J	CHIP R	180K	J	1/10W	
R158			RK73GB2A752J	CHIP R	7.5K	J	1/10W	
R159			RK73GB2A103J	CHIP R	10K	J	1/10W	
R160			RK73GB2A912J	CHIP R	9.1K	J	1/10W	
R161			RK73GB2A104J	CHIP R	100K	J	1/10W	
R162			RK73GB2A752J	CHIP R	7.5K	J	1/10W	
R163			RK73GB2A473J	CHIP R	47K	J	1/10W	
R165			RK73GB2A222J	CHIP R	2.2K	J	1/10W	
R167			RK73GB2A473J	CHIP R	47K	J	1/10W	
R168-171		✻	RN73GE1J101D	MF R	100	D	1/16W	
R201			RK73GB2A113J	CHIP R	11K	J	1/10W	
R202			RD14NB2E100J	RD	10	J	1/4W	
R203,204			RD14BB2C223J	RD	22K	J	1/6W	
R205-208			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R209,210			RK73GB2A101J	CHIP R	100	J	1/10W	
R211,212			RD14BB2C102J	RD	1.0K	J	1/6W	
R213,214			RD14BB2C223J	RD	22K	J	1/6W	
R215-218			RK73GB2A151J	CHIP R	150	J	1/10W	
R219-222			RD14BB2C622J	RD	6.2K	J	1/6W	
R223,224			RK73GB2A101J	CHIP R	100	J	1/10W	
R225,226			RK73GB2A132J	CHIP R	1.3K	J	1/10W	
R227,228			RK73GB2A223J	CHIP R	22K	J	1/10W	
R229-232			RK73GB2A512J	CHIP R	5.1K	J	1/10W	
R233-236			RD14NB2E101J	RD	100	J	1/4W	
R237,238			RK73GB2A362J	CHIP R	3.6K	J	1/10W	
R239,240			RK73GB2A472J	CHIP R	4.7K	J	1/10W	
R241,242			RK73GB2A103J	CHIP R	10K	J	1/10W	
R243			R92-0205-05	METAL-PLATE	0.1	K	2W	
R245-248			R92-0205-05	METAL-PLATE	0.1	K	2W	

E1 : KAC-7204 (Europe) **K** : KAC-7204 (North America)
M1 : KAC-7204 (Other Areas)

⚠Indicates safety critical components.

PARTS LIST

AUDIO UNIT (X09-8760-10)

Ref. No.	Add	New	Parts No.	Description			Destination
R249,250			RK73GB2A362J	CHIP R	3.6K	J 1/10W	
R251			RK73GB2A330J	CHIP R	33	J 1/10W	
R257,258			R92-0205-05	METAL-PLATE	0.1	K 2W	
R260			RK73GB2A330J	CHIP R	33	J 1/10W	
R261,262			RD14NB2E471J	RD	470	J 1/4W	
R263,264			RK73GB2A152J	CHIP R	1.5K	J 1/10W	
R265,266			RK73GB2A103J	CHIP R	10K	J 1/10W	
R271,272			RD14NB2E471J	RD	470	J 1/4W	
R273-279			RD14NB2E2R2J	RD	2.2	J 1/4W	
R280			RK73GB2A113J	CHIP R	11K	J 1/10W	
R281			RK73GB2A243J	CHIP R	24K	J 1/10W	
R282			RD14NB2E2R2J	RD	2.2	J 1/4W	
R283			RK73GB2A303J	CHIP R	30K	J 1/10W	
R285,286			RK73GB2A103J	CHIP R	10K	J 1/10W	
R287			RK73GB2A243J	CHIP R	24K	J 1/10W	
R289,290			RK73GB2A101J	CHIP R	100	J 1/10W	
R422,423			RK73GB2A102J	CHIP R	1.0K	J 1/10W	
R600			RK73GB2A223J	CHIP R	22K	J 1/10W	
R602			RK73GB2A103J	CHIP R	10K	J 1/10W	
R603			RK73GB2A101J	CHIP R	100	J 1/10W	
R604			RK73GB2A103J	CHIP R	10K	J 1/10W	
R605			RK73GB2A333J	CHIP R	33K	J 1/10W	
R606			RK73GB2A103J	CHIP R	10K	J 1/10W	
R607			RK73GB2A472J	CHIP R	4.7K	J 1/10W	
R608			RK73EB2E183J	CHIP R	18K	J 1/4W	
R609			RK73GB2A333J	CHIP R	33K	J 1/10W	
R610			RK73GB2A303J	CHIP R	30K	J 1/10W	
R611,612			RK73GB2A362J	CHIP R	3.6K	J 1/10W	
R613			RK73GB2A152J	CHIP R	1.5K	J 1/10W	
R614			RK73GB2A682J	CHIP R	6.8K	J 1/10W	
R615			RK73GB2A392J	CHIP R	3.9K	J 1/10W	
R616			RD14BB2C392J	RD	3.9K	J 1/6W	
R617			RK73GB2A123J	CHIP R	12K	J 1/10W	
R618			RK73GB2A432J	CHIP R	4.3K	J 1/10W	
R619			RD14BB2C4R7J	RD	4.7	J 1/6W	
R620,621			RK73GB2A473J	CHIP R	47K	J 1/10W	
R622			RD14BB2C222J	RD	2.2K	J 1/6W	
R624			RK73GB2A432J	CHIP R	4.3K	J 1/10W	
R625			RK73EB2E621J	CHIP R	620	J 1/4W	
R626			RK73GB2A681J	CHIP R	680	J 1/10W	
R627			RK73GB2A102J	CHIP R	1.0K	J 1/10W	
R629			RK73GB2A103J	CHIP R	10K	J 1/10W	
R630			RK73GB2A473J	CHIP R	47K	J 1/10W	
R631,632			RK73GB2A123J	CHIP R	12K	J 1/10W	
R633			RK73GB2A622J	CHIP R	6.2K	J 1/10W	
R634			RK73GB2A222J	CHIP R	2.2K	J 1/10W	
R635			RK73GB2A103J	CHIP R	10K	J 1/10W	
R636			RK73GB2A183J	CHIP R	18K	J 1/10W	
R638			RK73GB2A223J	CHIP R	22K	J 1/10W	
R639			RK73GB2A103J	CHIP R	10K	J 1/10W	
R640			RK73EB2E152J	CHIP R	1.5K	J 1/4W	
R643			RK73GB2A224J	CHIP R	220K	J 1/10W	
R646			RK73GB2A302J	CHIP R	3.0K	J 1/10W	
R647			RK73GB2A224J	CHIP R	220K	J 1/10W	
R648			RK73GB2A472J	CHIP R	4.7K	J 1/10W	

Ref. No.	Add	New	Parts No.	Description			Destination
R649			RK73GB2A272J	CHIP R	2.7K	J 1/10W	
R650			RK73GB2A104J	CHIP R	100K	J 1/10W	
R651			RK73GB2A472J	CHIP R	4.7K	J 1/10W	
R652,653			RK73GB2A432J	CHIP R	4.3K	J 1/10W	
R656			RK73GB2A392J	CHIP R	3.9K	J 1/10W	
R658			RK73GB2A473J	CHIP R	47K	J 1/10W	
R659			RK73GB2A562J	CHIP R	5.6K	J 1/10W	
R660			RK73GB2A473J	CHIP R	47K	J 1/10W	
R661			RK73GB2A433J	CHIP R	43K	J 1/10W	
R662,663			RK73GB2A103J	CHIP R	10K	J 1/10W	
R664			RK73GB2A433J	CHIP R	43K	J 1/10W	
R665,666			RK73GB2A363J	CHIP R	36K	J 1/10W	
R667,668			RK73GB2A470J	CHIP R	47	J 1/10W	
R691			RK73GB2A103J	CHIP R	10K	J 1/10W	
R692			RK73GB2A100J	CHIP R	10	J 1/10W	
R693			RK73GB2A103J	CHIP R	10K	J 1/10W	
R694			RK73GB2A223J	CHIP R	22K	J 1/10W	
R695			RK73GB2A103J	CHIP R	10K	J 1/10W	
R696			RK73GB2A201J	CHIP R	200	J 1/10W	
R699			RK73EB2E183J	CHIP R	18K	J 1/4W	
R914			RK73GB2A303J	CHIP R	30K	J 1/10W	
R915,916			RK73GB2A103J	CHIP R	10K	J 1/10W	
VR1,2			R31-0255-05	VARIABLE RESISTOR	50K, C		
VR3			R31-0253-05	VARIABLE RESISTOR	10K, A		
VR4			R31-0254-05	VARIABLE RESISTOR	10K, C		
VR5 ,6			R32-0151-05	SEMI FIXED VARIABLE R	470		
W200			R92-2053-05	CHIP R	0 OHM	J 1/8W	
W201			RK73GB2A000J	CHIP R	0.0	J 1/10W	
W202,203			R92-2053-05	CHIP R	0 OHM	J 1/8W	
W204-217			RK73GB2A000J	CHIP R	0.0	J 1/10W	
W218			R92-2053-05	CHIP R	0 OHM	J 1/8W	
W219			RK73GB2A000J	CHIP R	0.0	J 1/10W	
W220			R92-2053-05	CHIP R	0 OHM	J 1/8W	
W221			RK73GB2A000J	CHIP R	0.0	J 1/10W	
W223			RK73GB2A000J	CHIP R	0.0	J 1/10W	
W224			R92-2053-05	CHIP R	0 OHM	J 1/8W	
W225-231			RK73GB2A000J	CHIP R	0.0	J 1/10W	
W232,233			R92-2053-05	CHIP R	0 OHM	J 1/8W	
W234-237			RK73GB2A000J	CHIP R	0.0	J 1/10W	
W238			R92-2053-05	CHIP R	0 OHM	J 1/8W	
W239-242			RK73GB2A000J	CHIP R	0.0	J 1/10W	
W243,244			R92-2053-05	CHIP R	0 OHM	J 1/8W	
W245			RK73GB2A000J	CHIP R	0.0	J 1/10W	
W246			R92-2053-05	CHIP R	0 OHM	J 1/8W	
W247-250			RK73GB2A000J	CHIP R	0.0	J 1/10W	
W252			R92-2053-05	CHIP R	0 OHM	J 1/8W	
W253-257			RK73GB2A000J	CHIP R	0.0	J 1/10W	
W258			R92-2053-05	CHIP R	0 OHM	J 1/8W	
W259-263			RK73GB2A000J	CHIP R	0.0	J 1/10W	
W265-269			RK73GB2A000J	CHIP R	0.0	J 1/10W	
W270			R92-2053-05	CHIP R	0 OHM	J 1/8W	
W271-273			RK73GB2A000J	CHIP R	0.0	J 1/10W	
W274,275			R92-2053-05	CHIP R	0 OHM	J 1/8W	
W276-282			RK73GB2A000J	CHIP R	0.0	J 1/10W	
W283			R92-2053-05	CHIP R	0 OHM	J 1/8W	

E1 : KAC-7204 (Europe) **K** : KAC-7204 (North America)
M1 : KAC-7204 (Other Areas)

⚠Indicates safety critical compo nents.

PARTS LIST

AUDIO UNIT (X09-8760-10)

Ref. No.	Add	New	Parts No.	Description	Destination
W284-288			RK73GB2A000J	CHIP R 0.0 J 1/10W	
W291-299			RK73GB2A000J	CHIP R 0.0 J 1/10W	
W300			R92-2053-05	CHIP R 0 OHM J 1/8W	
W301-304			RK73GB2A000J	CHIP R 0.0 J 1/10W	
W305			R92-2053-05	CHIP R 0 OHM J 1/8W	
W306-308			RK73GB2A000J	CHIP R 0.0 J 1/10W	
W309			R92-2053-05	CHIP R 0 OHM J 1/8W	
W310-315			RK73GB2A000J	CHIP R 0.0 J 1/10W	
W317,318			RK73GB2A000J	CHIP R 0.0 J 1/10W	
W320,321			RK73GB2A000J	CHIP R 0.0 J 1/10W	
W322-325			R92-2053-05	CHIP R 0 OHM J 1/8W	
W326-328			RK73GB2A000J	CHIP R 0.0 J 1/10W	
S6			S31-2630-05	SLIDE SWITCH	
D1,2			1N5406-TSC	DIODE	
D3,4			UDZS16B	ZENER DIODE	
D5			FCH10A20	DIODE	
D6			FRH10A20	DIODE	
D7			1SS133	DIODE	
D8,9			1SS355	DIODE	
D10			LM1MA142WK-G	DIODE	
D50			1SS133	DIODE	
D52			LM1MA142WK-G	DIODE	
D101			LM1MA142WK-G	DIODE	
D102			LM1MA142WA-G	DIODE	
D103,104			UDZS6.8B	ZENER DIODE	
D152			1SS133	DIODE	
D203-206			1SS133	DIODE	
D251			1SS133	DIODE	
D253			LM1MA142WK-G	DIODE	
D254			LM1MA142WA-G	DIODE	
D255			LM1MA142WK-G	DIODE	
D260,261			1SS133	DIODE	
D295,296			LM1MA142WA-G	DIODE	
D600			B30-1770-05	LED	
D601-603			1SS133	DIODE	
D604			UDZS10B	ZENER DIODE	
D605			1SS133	DIODE	
D606			UDZS15B	ZENER DIODE	
D607			UDZS6.2B	ZENER DIODE	
D608			UDZS13B	ZENER DIODE	
D609			B30-1743-05	LED (RED)	
D610-613			1SS133	DIODE	
D614			UDZS10B	ZENER DIODE	
D615,616			1SS133	DIODE	
D617			B30-1770-05	LED (BLUE)	
D624			1SS133	DIODE	
D699			1SS133	DIODE	
IC1,2			BA4560RF	ANALOGUE IC	
IC5			TL494IDR	ANALOGUE IC	
IC6-8			BA4560RF	ANALOGUE IC	
IC10-12			BA4560RF	ANALOGUE IC	
Q1			2SC4883ANF	TRANSISTOR	
Q2			2SA1859ANF	TRANSISTOR	

Ref. No.	Add	New	Parts No.	Description	Destination
Q3-8			STP60NF06FP	FET	
Q9			2SC4097	TRANSISTOR	
Q10,11			2SA1577	TRANSISTOR	
Q12			2SC4097	TRANSISTOR	
Q13,14			DTA114EUA	DIGITAL TRANSISTOR	
Q15			2SC4081	TRANSISTOR	
Q16			2SC1845-A (F,E)	TRANSISTOR	
Q17			2SA992-A (F,E)	TRANSISTOR	
Q50			2SA1576A	TRANSISTOR	
Q51			2SC4081	TRANSISTOR	
Q201-204			2SA992-A (F,E)	TRANSISTOR	
Q205-208			2SC3478AA (L,K)	TRANSISTOR	
Q209,210			2SA1376AA (L,K)	TRANSISTOR	
Q211		✻	KTC3114-PH (A)	TRANSISTOR	
Q213		✻	KTC3114-PH (A)	TRANSISTOR	
Q215,216			2SC1845-A (F,E)	TRANSISTOR	
Q217,218			2SA992-A (F,E)	TRANSISTOR	
Q220			2SC4468NF	TRANSISTOR	
Q222			2SA1695NF	TRANSISTOR	
Q223,224			2SC4468NF	TRANSISTOR	
Q225,226			2SA1695NF	TRANSISTOR	
Q227			2SC4468NF	TRANSISTOR	
Q229			2SA1695NF	TRANSISTOR	
Q241,242			2SC4081	TRANSISTOR	
Q251			2SC2235-F	TRANSISTOR	
Q252			2SA965-F	TRANSISTOR	
Q253			2SC2235-F	TRANSISTOR	
Q254,255			2SA965-F	TRANSISTOR	
Q256			2SC2235-F	TRANSISTOR	
Q257			2SA965-F	TRANSISTOR	
Q258			2SC2235-F	TRANSISTOR	
Q281-284			2SC4081	TRANSISTOR	
Q602			2SC4081	TRANSISTOR	
Q603			2SA1576A	TRANSISTOR	
Q604			2SB1241	TRANSISTOR	
Q605,606			2SC4081	TRANSISTOR	
Q609			2SD1863	TRANSISTOR	
Q610-613			2SC945AA (Q,P)	TRANSISTOR	
Q614,615			2SA1576A	TRANSISTOR	
Q616			2SC4081	TRANSISTOR	
Q617			2SA1576A	TRANSISTOR	
Q618			2SC4081	TRANSISTOR	
Q698			2SA1576A	TRANSISTOR	
TH601,602			NCP18XH103J0S	THERMISTOR	
TH605			NCP18XH103J0S	THERMISTOR	

E1 : KAC-7204 (Europe) **K** : KAC-7204 (North America)
M1 : KAC-7204 (Other Areas)

⚠Indicates safety critical components.