EXPLODED VIEW (DVD MECHANISM)

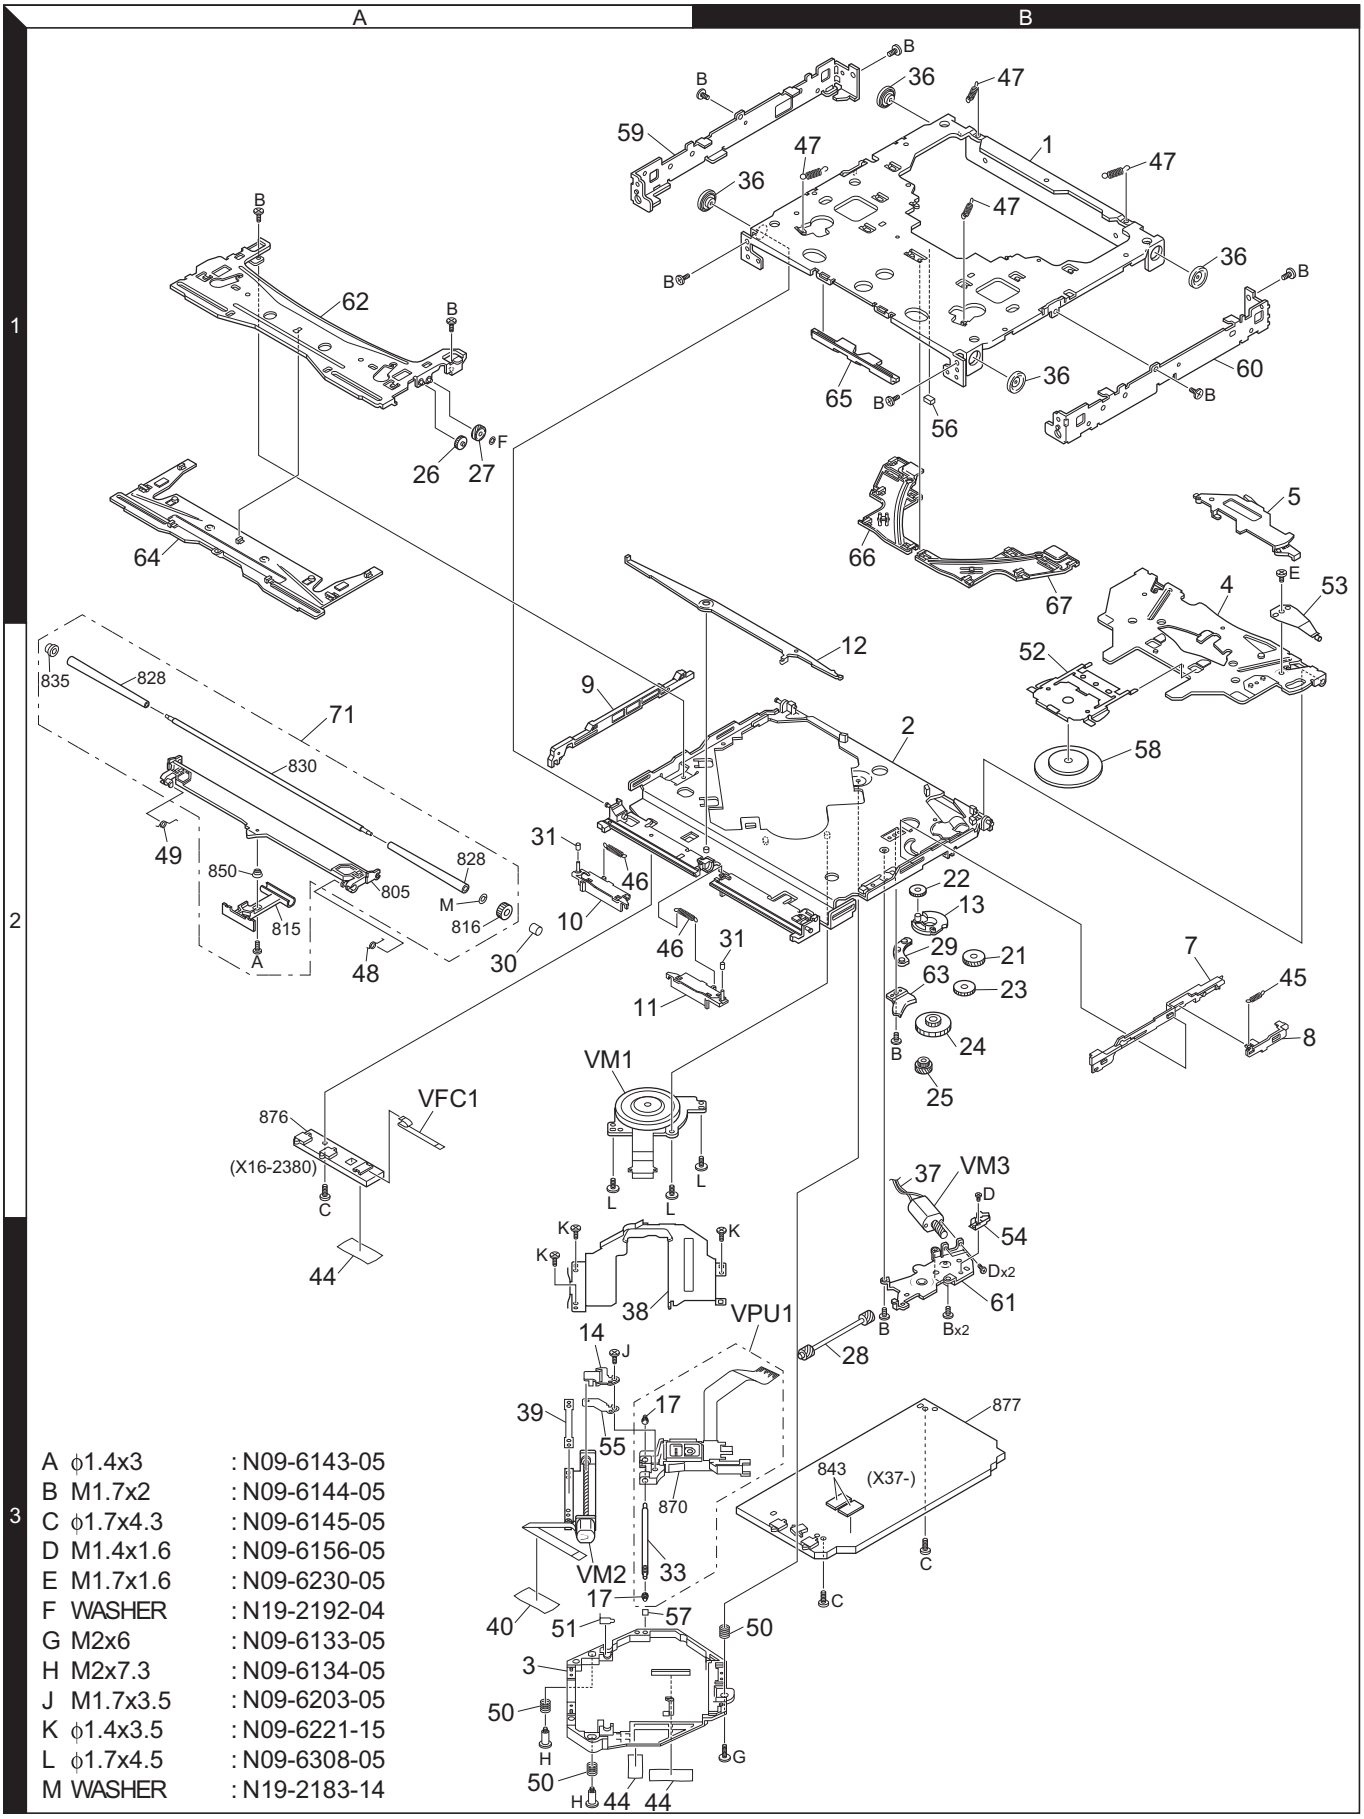

Parts with the exploded numbers larger than 700 are not supplied.

EXPLODED VIEW (UNIT)

A	φ2.6x5	: N86-2605-48
B	M3x2.5	: N09-6396-05
E	M2x2.5	: N09-6314-05
F	PANEL SCREW	: N09-6360-05
P	M3x7	: N09-6398-05
Q	M3x11	: N09-6399-05
R	M2.6x27	: N09-6400-05
T	M2.6x5	: N09-6402-05
U		: N09-6403-05
W	M3x5	: N09-6425-05
AD	φ3x8	: N84-3008-43
AE	φ3x6	: N09-4461-05

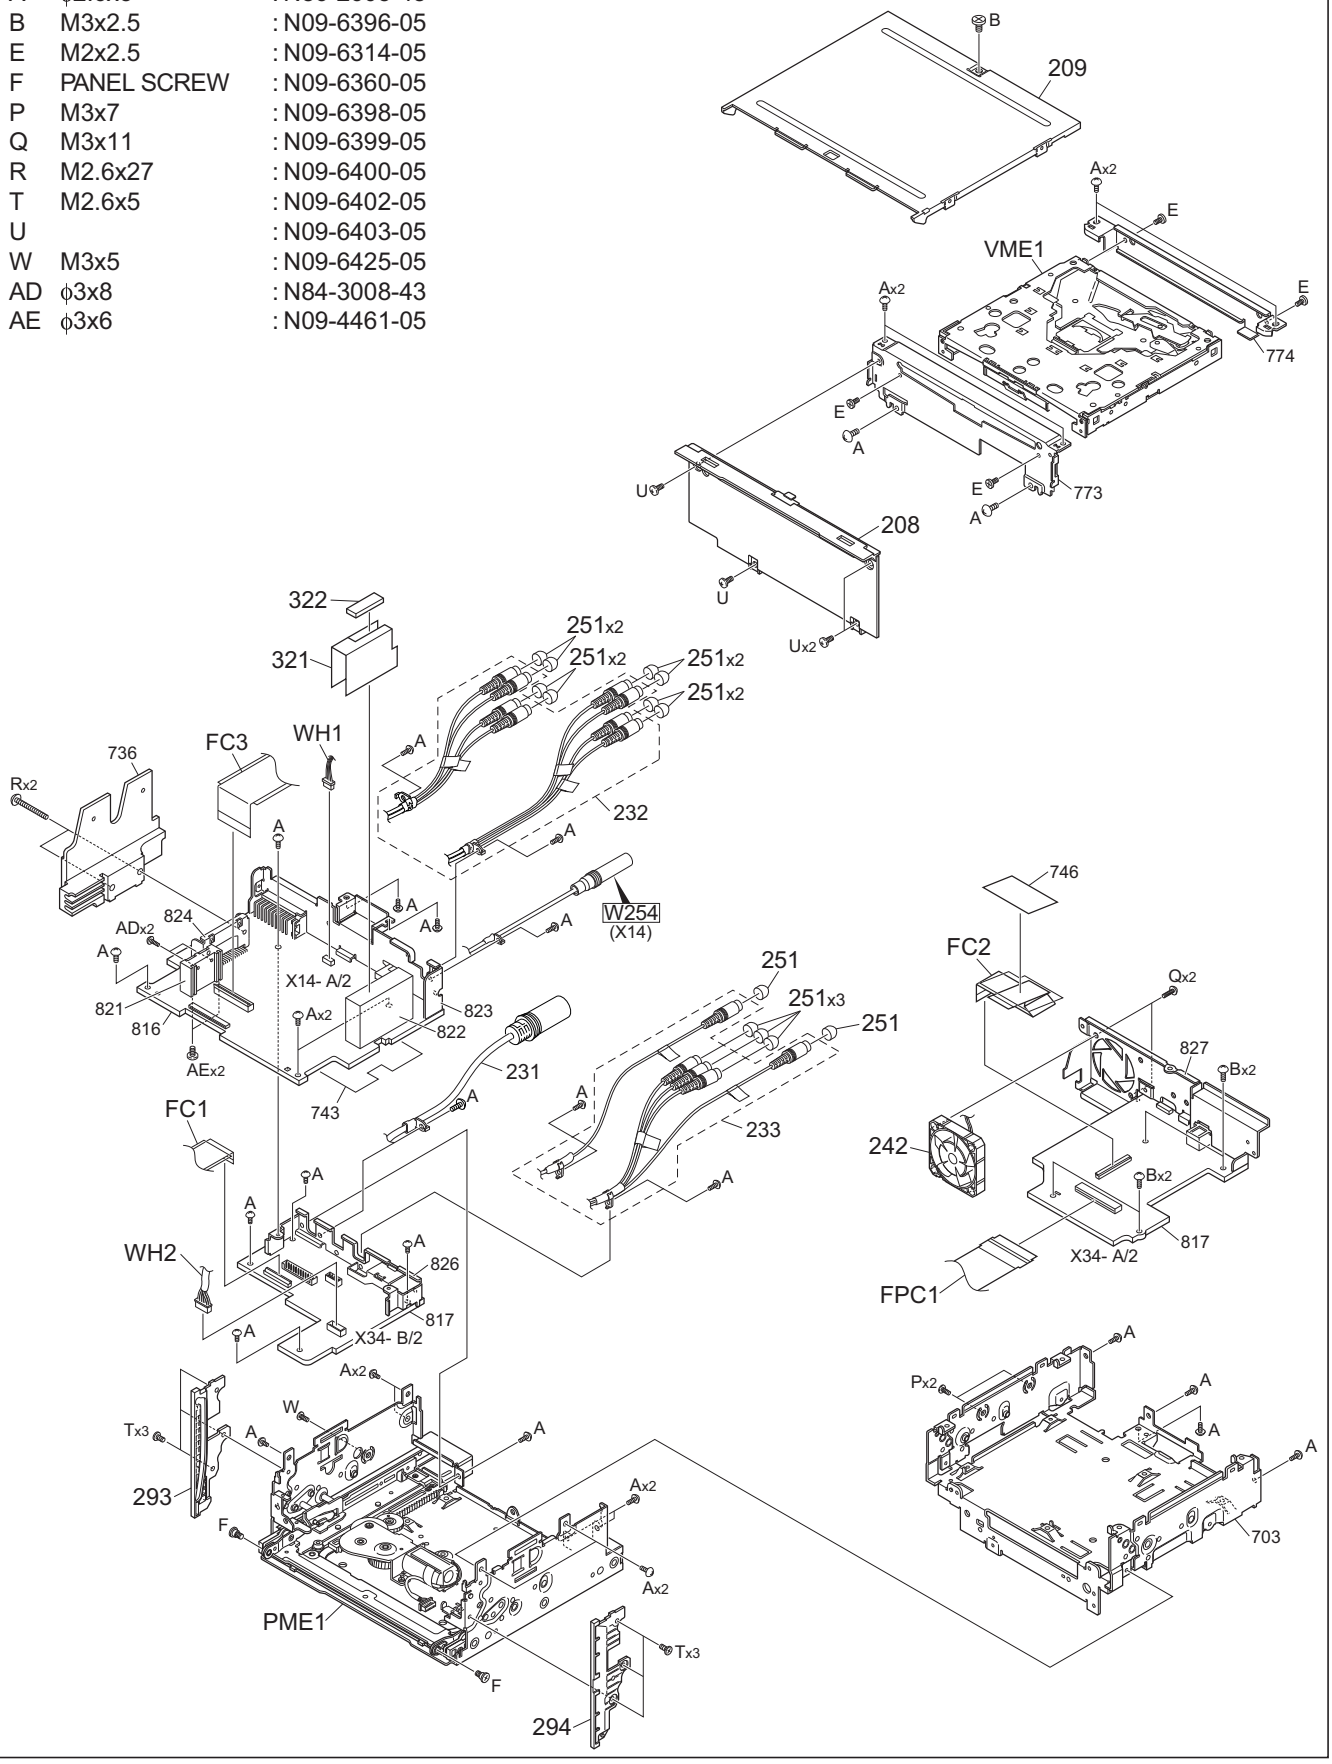

Parts with the exploded numbers larger than 700 are not supplied.

EXPLODED VIEW (PANEL / ACCESSORIES)

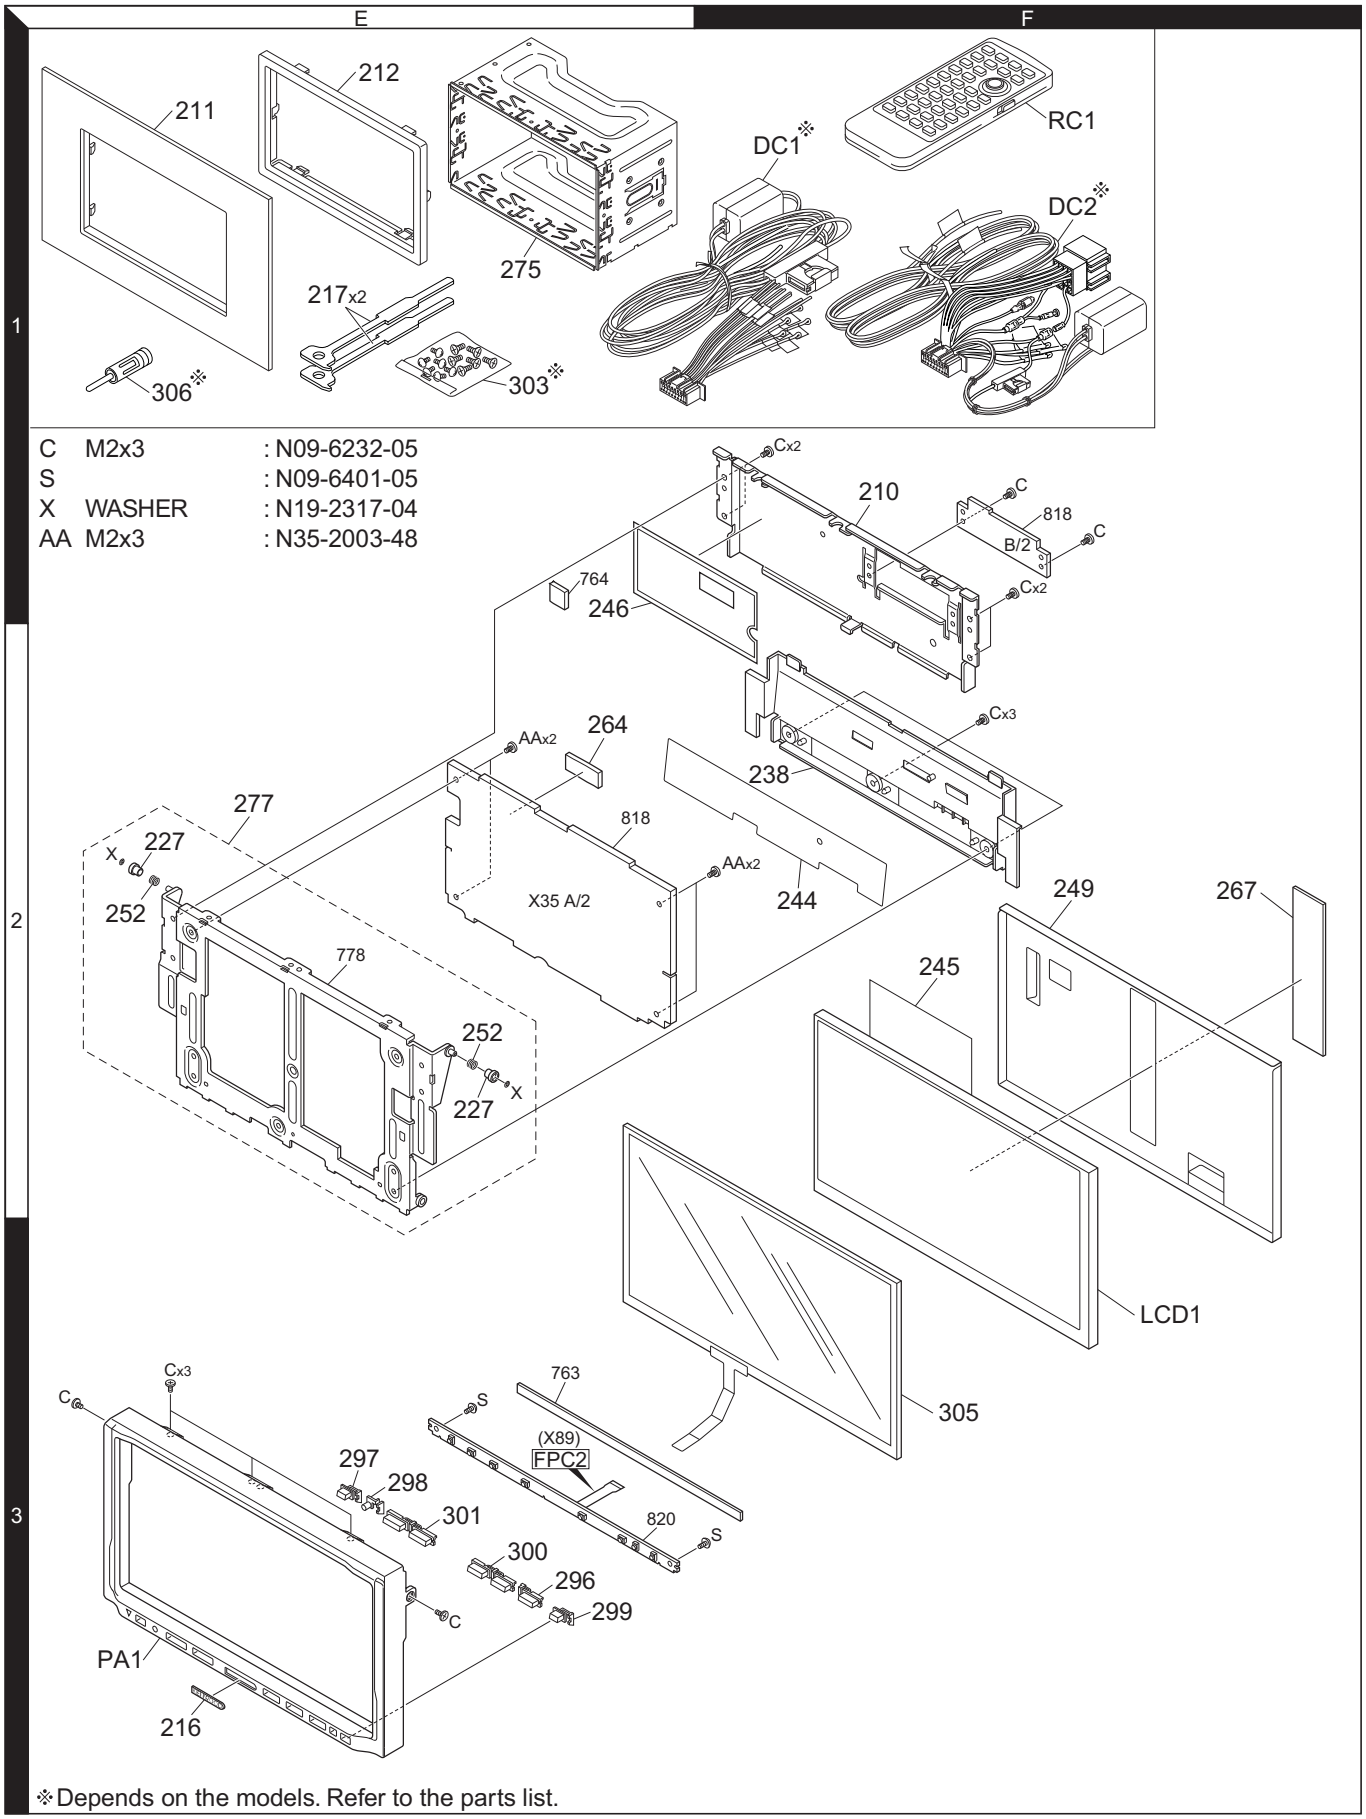

※Depends on the models. Refer to the parts list.

Parts with the exploded numbers larger than 700 are not supplied.

EXPLODED VIEW (PANEL MECHANISM)

G	M2x2.5	: N09-6361-05
H	M1.7x3.7	: N09-6363-05
J	M2x2.5	: N09-6375-05
K	M2x3.5	: N09-6376-05
L	M2x2.5	: N09-6377-05
M	ϕ2x2	: N09-6378-05
N	M2.6x4	: N09-6379-05
Y	WASHER	: N19-2321-04

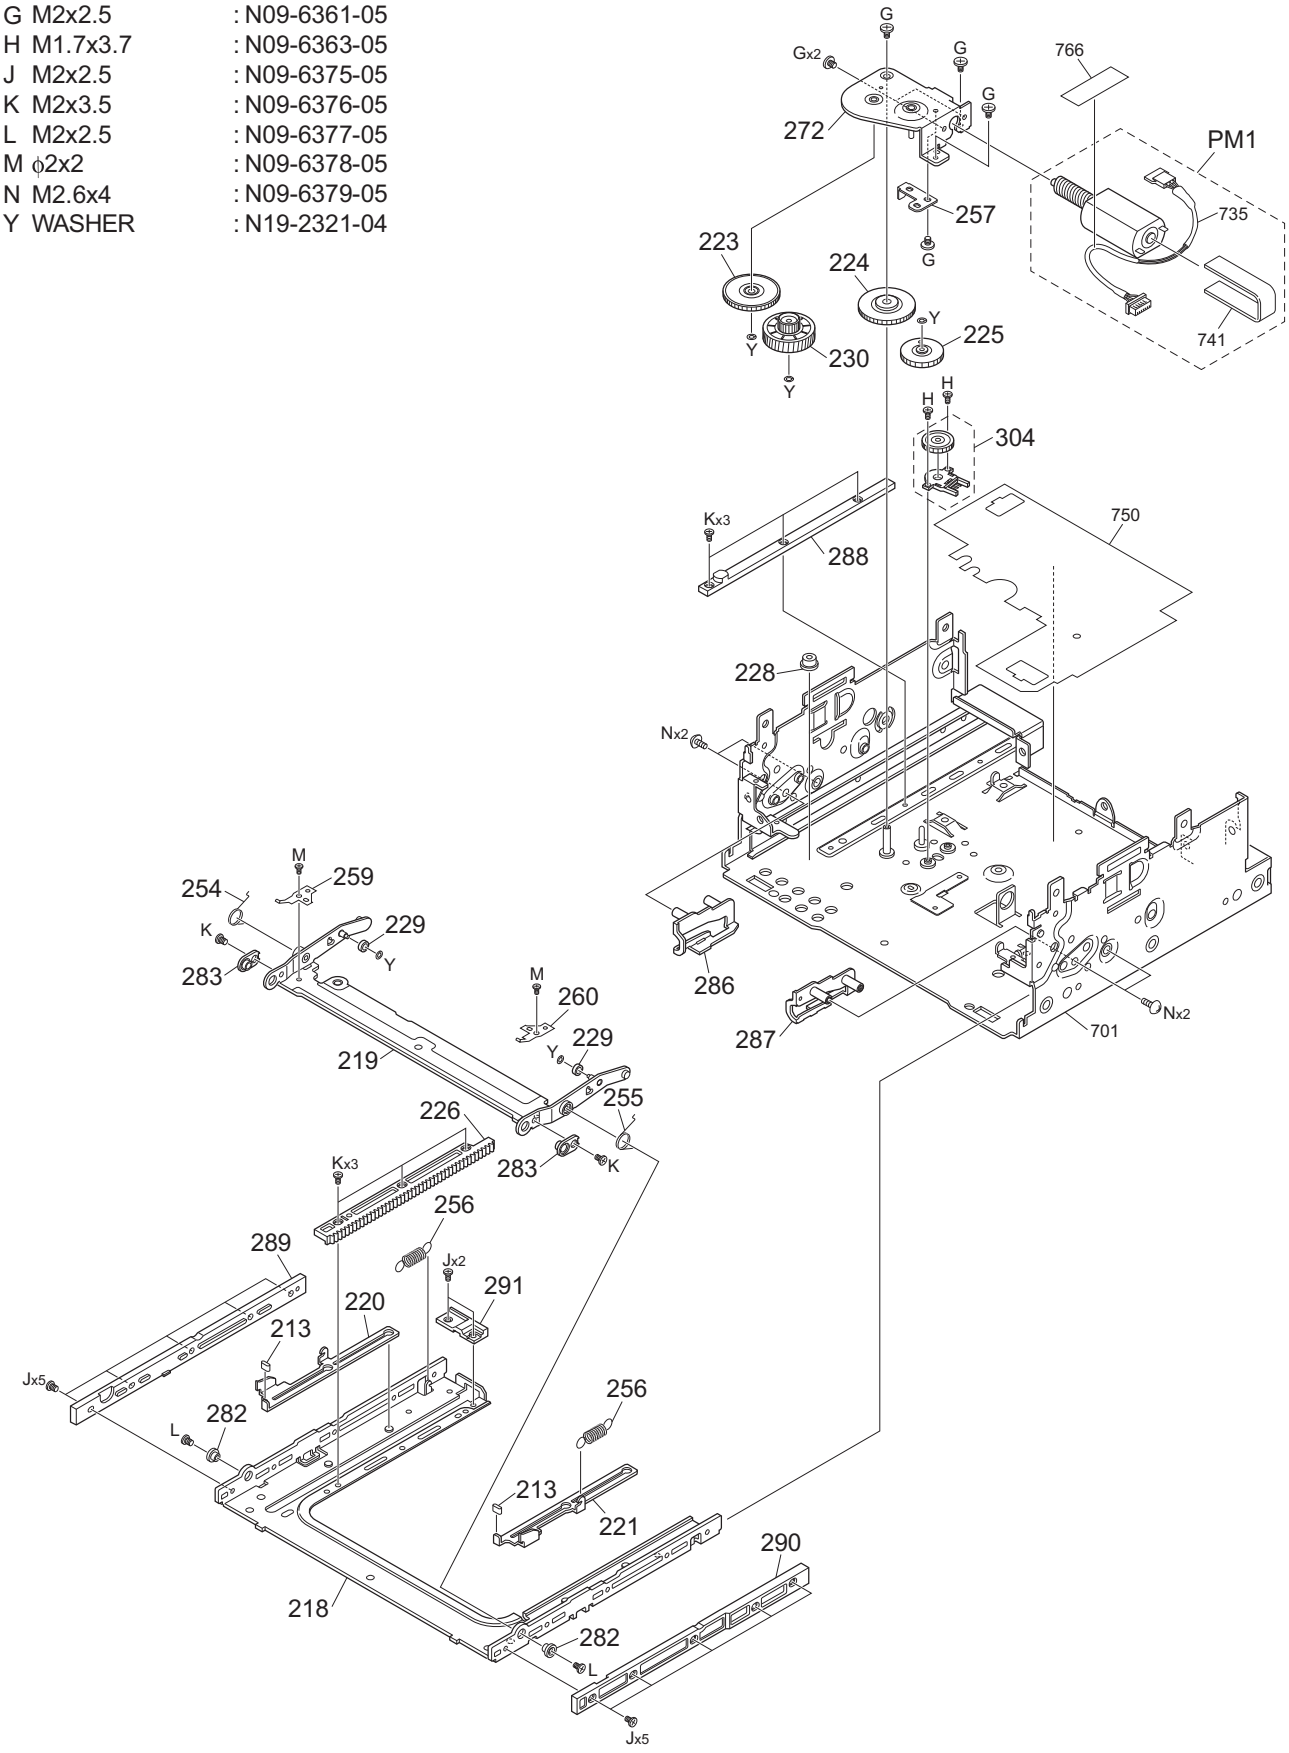

Parts with the exploded numbers larger than 700 are not supplied.

PARTS LIST

✻ New parts
Parts without **Parts No.** are not supplied.
Les articles non mentionnes dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

Ref. No.	Add	New	Parts No.	Description	Destination
DDX6019/6029/6029Y/6039					
208	1D	✻	A22-3109-23	SUB PANEL ASSY	KR1X1
208	1D	✻	A22-3114-03	SUB PANEL ASSY	M1E1E2
209	1D	✻	A52-0878-02	TOP PLATE	
210	2F	✻	A46-1842-02	REAR COVER	
PA1	3E	✻	A64-3880-01	PANEL ASSY	K
PA1	3E	✻	A64-3881-01	PANEL ASSY	M1
PA1	3E	✻	A64-3882-01	PANEL ASSY	E1E2
PA1	3E	✻	A64-3883-01	PANEL ASSY	R1X1
PME1	3C		A10-5300-11	PANEL MECHA ASSY	
RC1	1F	✻	A70-2077-05	REMOTE CONTROLLER ASSY	
-			B46-0100-50	WARRANTY CARD	KM1R1
-			B46-0100-50	WARRANTY CARD	X1
-			B46-0612-14	ID CARD	M1E1E2
-			B46-0612-14	ID CARD	X1
-			B46-0682-00	WARRANTY CARD	E1E2
-		✻	B54-4488-00	INSTALLATION MANUAL (ENG.SPA.)	KR1
-		✻	B54-4489-00	INSTALLATION MANUAL (FRE.)	K
-		✻	B54-4490-00	INSTALLATION MANUAL (POR.)	R1
-		✻	B54-4491-00	INSTALLATION MANUAL (ENG.)	M1X1
-		✻	B54-4492-00	INSTALLATION MANUAL (T-CHI.KOR)	M1
-		✻	B54-4493-00	INSTALLATION MANUAL (ENG.FRE.)	E1E2
-		✻	B54-4493-00	INSTALLATION MANUAL (GER.DUT.)	E1E2
-		✻	B54-4493-00	INSTALLATION MANU (ITA.SPA.POR)	E1E2
-		✻	B58-1440-04	CAUTION CARD (TILT)	
-		✻	B64-3367-00	INSTRUCTION MANUAL (ENGLISH)	KR1
-		✻	B64-3368-00	INSTRUCTION MANUAL (FRENCH)	K
-		✻	B64-3369-00	INSTRUCTION MANUAL (SPANISH)	KR1
-		✻	B64-3370-00	INSTRUCTION MANUAL (PORTUGUESE)	R1
-		✻	B64-3371-00	INSTRUCTION MANUAL (ENGLISH)	M1X1
-		✻	B64-3372-00	INSTRUCTION MANUAL (T-CHINESE)	M1
-		✻	B64-3373-00	INSTRUCTION MANUAL (KOREAN)	M1
-		✻	B64-3374-00	INSTRUCTION MANUAL (ENGLISH)	E1E2
-		✻	B64-3375-00	INSTRUCTION MANUAL (FRENCH)	E1
-		✻	B64-3376-00	INSTRUCTION MANUAL (GERMAN)	E1
-		✻	B64-3377-00	INSTRUCTION MANUAL (DUTCH)	E1
-		✻	B64-3378-00	INSTRUCTION MANUAL (ITALIAN)	E1
-		✻	B64-3379-00	INSTRUCTION MANUAL (SPANISH)	E1
-		✻	B64-3380-00	INSTRUCTION MANUAL (PORTUGUESE)	E1
211	1E		B07-3172-12	ESCUTCHEON	
212	1E	✻	B07-3173-01	ESCUTCHEON	
213	3G		B09-0541-04	CAP	
216	3E		B43-1518-04	BADGE	
LCD1	3F		B38-1175-05	LCD	
217	1E		D10-4674-04	LEVER	
218	3G		D10-4895-12	SLIDER ASSY	
219	2G		D10-4897-13	ARM ASSY	
220	3G		D10-4899-03	LEVER	
221	3G		D10-4900-03	LEVER	
223	1H		D13-2394-04	GEAR	
224	1H		D13-2395-04	GEAR	
225	1H		D13-2396-04	GEAR	
226	3G		D13-2397-03	RACK (GEAR)	
227	2E		D14-1009-04	ROLLER	

Ref. No.	Add	New	Parts No.	Description	Destination
228	2H		D14-1010-04	ROLLER	
229	2G		D14-1011-14	ROLLER	
230	1H		D19-0653-13	CLUTCH ASSY	
231	2C	✻	E30-6524-05	CORD WITH PLUG (NAVI)	
232	2C	✻	E30-6528-05	CORD WITH PINPLUG	
233	3D	✻	E30-6529-05	CORD WITH PINPLUG	
DC1	1F	✻	E30-6530-05	DC CORD	KM1R1
DC1	1F	✻	E30-6530-05	DC CORD	X1
DC2	1F	✻	E30-6531-05	DC CORD	E1E2
FC1	2C	✻	E39-0832-15	FLAT CABLE	
FC2	2D	✻	E39-0837-15	FLAT CABLE	
FC3	2C	✻	E39-0838-05	FLAT CABLE	
WH1	2C	✻	E39-0835-05	WIRING HARNESS	
WH2	3C	✻	E39-0836-05	WIRING HARNESS	
238	2F	✻	F07-1179-02	COVER	
242	2D		F09-2819-15	FAN	
244	2F	✻	F12-0921-04	SHIELDING SHEET	
245	2F	✻	F12-0924-03	SHIELDING SHEET	
246	2E	✻	F12-0927-04	SHIELDING SHEET	
249	3F		F20-2364-13	INSULATING SHEET	
251	2C		F29-0049-05	INSULATING COVER	
252	2E		G01-3284-04	COMPRESSION SPRING	
254	2G		G01-3288-04	TORSION COIL SPRING	
255	2G		G01-3289-04	TORSION COIL SPRING	
256	3G		G01-3290-04	EXTENSION SPRING	
257	1H		G02-1539-04	FLAT SPRING	
259	2G		G02-1544-04	FLAT SPRING	
260	2G		G02-1545-04	FLAT SPRING	
264	2E		G16-1628-04	SHEET	
267	2F		G16-1638-04	SHEET	
-		✻	H10-4981-12	POLYSTYRENE FOAMED FIXTURE	
-		✻	H10-4982-02	POLYSTYRENE FOAMED FIXTURE	
-			H12-2745-04	PACKING FIXTURE	
-			H25-0338-04	PROTECTION BAG (250X350X0.03)	
-			H25-1127-04	PROTECTION BAG (0.5X350X450)	
-			H30-0595-04	ADHESIVE DOUBLE-COATED TAPE	
-		✻	H54-3768-03	ITEM CARTON CASE	K
-		✻	H54-3769-03	ITEM CARTON CASE	M1R1X1
-		✻	H54-3770-03	ITEM CARTON CASE	E1
-		✻	H54-3772-03	ITEM CARTON CASE	E2
272	1H		J22-0444-13	MOUNTING HARDWARE ASSY	
275	1E	✻	J22-0498-03	MOUNTING HARDWARE ASSY	
277	2E	✻	J22-0503-02	MOUNTING HARDWARE ASSY	
282	3G		J31-1075-14	COLLAR (ARM COLLAR)	
283	2G		J31-1077-04	COLLAR (PANEL COLLAR)	
286	2H		J90-1124-13	GUIDE ASSY	
287	2H		J90-1126-13	GUIDE ASSY	
288	2H		J90-1128-03	RAIL	
289	3G		J90-1129-13	RAIL	
290	3G		J90-1130-13	RAIL	
291	3G		J90-1131-03	GUIDE	
293	3C		J90-1135-11	RAIL	
294	3C		J90-1136-11	RAIL	

K : DDX6019 (North America) **E1** : DDX6029 **E2** : DDX6029Y (Europe)
X1 : DDX6039 (Australia) **R1** : DDX6039 (Latin America) **M1** : DDX6039 (Other Areas)

⚠ Indicates safety critical components.

PARTS LIST

DDX6019/6029/6029Y/6039

Ref. No.	Add	New	Parts No.	Description	Destination
FPC1	3D	✻	J86-0026-05	FPC (LEAD FREE)	
296	3E	✻	K24-4555-03	PUSH KNOB (SRC)	
297	3E	✻	K24-4556-03	PUSH KNOB (ATT)	
298	3E	✻	K24-4558-04	PUSH KNOB (RESET)	
299	3E	✻	K24-4560-03	PUSH KNOB (EJECT)	
300	3E	✻	K25-1822-03	PUSH KNOB (FUNK/V.SEL)	
301	3E	✻	K25-1823-03	PUSH KNOB (VOL)	
303	1E		N99-1776-05	SCREW SET	KM1R1
303	1E		N99-1776-05	SCREW SET	X1
A	3C		N86-2605-48	BINDING HEAD TAPTITE SCREW	
AA	2E		N35-2003-48	BINDING HEAD MACHINE SCREW	
B	1D	✻	N09-6396-05	MACHINE SCREW (M3.0X2.5)	
C	3E		N09-6232-05	MACHINE SCREW (M2X3)	
E	1D		N09-6314-05	MACHINE SCREW (M2.0X2.5)	
F	3C		N09-6360-05	STEPPED SCREW (PANEL SCREW)	
G	1H		N09-6361-05	MACHINE SCREW (M2X2.5)	
H	1H		N09-6363-05	MACHINE SCREW (M1.7X3.7)	
J	3G		N09-6375-05	MACHINE SCREW (M2X2.5)	
K	2G		N09-6376-05	MACHINE SCREW (M2X3.5)	
L	3G		N09-6377-05	MACHINE SCREW (M2X2.5)	
M	2G		N09-6378-05	TAPTITE SCREW (STITE 2X2)	
N	2H		N09-6379-05	MACHINE SCREW (M2.6X4)	
P	3D		N09-6398-05	MACHINE SCREW (M3X7)	
Q	3D		N09-6399-05	MACHINE SCREW (BIND M3.0X11)	
R	2C		N09-6400-05	MACHINE SCREW (BIND M2.6X27)	
S	3E		N09-6401-05	TAPTITE SCREW	
T	3C		N09-6402-05	MACHINE SCREW (M2.6X5)	
U	1D		N09-6403-05	MACHINE SCREW	
W	3C		N09-6425-05	MACHINE SCREW (M3.0X5)	
X	2E		N19-2317-04	FLAT WASHER	
Y	1H		N19-2321-04	FLAT WASHER	
304	1H		R31-0248-05	VARIABLE RESISTOR	
305	3F		S79-0854-05	SWITCH ASSY	
306	1E		T90-0552-05	ANTENNA ADAPTOR	E1E2
PM1	1H		T42-1322-14	MOTOR ASSY	
VME1	1D	✻	X92-5430-00	DVD MECHANISM ASSY (DVS-7600V)	

RECEIVER UNIT (X14-974x-xx)

C1			CC73GCH1H070D	CHIP C	7.0PF	D	
C2			C90-6794-05	ELECTRO	6800UF	16WV	
C3-5			CK73FB1C105K	CHIP C	1.0UF	K	
C6			CK73FB1E474K	CHIP C	0.47UF	K	
C7			CK73GB1H103K	CHIP C	0.010UF	K	
C8			CD04AS1H3R3M	ELECTRO	3.3UF	50WV	
C9			CK73FB1C105K	CHIP C	1.0UF	K	
C10			CK73GB1H104K	CHIP C	0.10UF	K	
C11			CK73GB1H103K	CHIP C	0.010UF	K	
C12			CK73GB1H104K	CHIP C	0.10UF	K	
C13			CD04AY1E221M	ELECTRO	220UF	25WV	
C14			CK73GB1H103K	CHIP C	0.010UF	K	
C15			CD04AY1H100M	ELECTRO	10UF	50WV	
C16			CD04AY0J331M	ELECTRO	330UF	6.3WV	
C17			CK73GB1H473K	CHIP C	0.047UF	K	
C22			CC73GCH1H070D	CHIP C	7.0PF	D	
C23			CK73GB1A105K	CHIP C	1.0UF	K	
C25			CD04BJ1E470M	ELECTRO	47UF	25WV	
C26			CK73GB1H104K	CHIP C	0.10UF	K	
C27			CK73GB1H102K	CHIP C	1000PF	K	
C28			CK73GB1H103K	CHIP C	0.010UF	K	
C29			CK73GB1H102K	CHIP C	1000PF	K	
C30			CK73GB1H104K	CHIP C	0.10UF	K	
C37			CD04BJ1A101M	ELECTRO	100UF	10WV	
C38			CK73GB1H104K	CHIP C	0.10UF	K	
C39			CD04AY1E470M	ELECTRO	47UF	25WV	
C40			CK73GB1H104K	CHIP C	0.10UF	K	
C101			CD04BJ0J331M	ELECTRO	330UF	6.3WV	
C102			CK73FB0J106K	CHIP C	10UF	K	
C103			CK73GB1H102K	CHIP C	1000PF	K	
C104-107			CK73GB1H104K	CHIP C	0.10UF	K	
C108			CK73GB1A105K	CHIP C	1.0UF	K	
C109-114			CK73GB1H104K	CHIP C	0.10UF	K	
C115			CK73GB1H102K	CHIP C	1000PF	K	
C116			CK73GB1H104K	CHIP C	0.10UF	K	
C201			CD04BJ1E470M	ELECTRO	47UF	25WV	
C202			CD04AS1H3R3M	ELECTRO	3.3UF	50WV	
C203,204			CK73FB1E474K	CHIP C	0.47UF	K	
C205			CD04AS1H3R3M	ELECTRO	3.3UF	50WV	
C206			CK73FB1A225K	CHIP C	2.2UF	K	
C207			CK73FB1C105K	CHIP C	1.0UF	K	
C208-211			CC73GCH1H101J	CHIP C	100PF	J	
C212,213			CK73FB1E474K	CHIP C	0.47UF	K	
C214,215			CD04BJ1H2R2M	ELECTRO	2.2UF	50WV	
C216,217			CK73FB1E474K	CHIP C	0.47UF	K	
C219-221			CD04BJ1H010M	ELECTRO	1.0UF	50WV	
C222,223			CC73GCH1H101J	CHIP C	100PF	J	
C224			CC73GCH1H070D	CHIP C	7.0PF	D	
C225			CD04BJ1H100M	ELECTRO	10UF	50WV	
C226			CK73GB1H103K	CHIP C	0.010UF	K	
C227,228			CK73FB1C105K	CHIP C	1.0UF	K	
C229-232			CC73GCH1H101J	CHIP C	100PF	J	
C233,234			CK73GB1H152K	CHIP C	1500PF	K	
C235			CC73GCH1H070D	CHIP C	7.0PF	D	
C236,237			CK73GB1H103K	CHIP C	0.010UF	K	
C238			CD04AS1V100M	ELECTRO	10UF	35WV	
C239			CD04BJ1E470M	ELECTRO	47UF	25WV	
C242			CD04BJ1E470M	ELECTRO	47UF	25WV	
C243			CK73GB1H104K	CHIP C	0.10UF	K	
C252			CK73GB1H103K	CHIP C	0.010UF	K	KM1E1
C252			CK73GB1H103K	CHIP C	0.010UF	K	E2R1
C262			CK73GB1H103K	CHIP C	0.010UF	K	
C264			CC73GCH1H100D	CHIP C	10PF	D	KM1E1
C264			CC73GCH1H100D	CHIP C	10PF	D	E2R1
C265-267			CK73GB1H103K	CHIP C	0.010UF	K	
C269			CC73GCH1H331J	CHIP C	330PF	J	KM1E1
C269			CC73GCH1H331J	CHIP C	330PF	J	E2R1
C270			CC73GCH1H100D	CHIP C	10PF	D	KM1E1
C270			CC73GCH1H100D	CHIP C	10PF	D	E2R1

K : DDX6019 (North America) **E1** : DDX6029 **E2** : DDX6029Y (Europe)
X1 : DDX6039 (Australia) **R1** : DDX6039 (Latin America) **M1** : DDX6039 (Other Areas)

⚠ Indicates safety critical components.

PARTS LIST

RECEIVER UNIT (X14-974x-xx)

Ref. No.	Add	New	Parts No.	Description			Destination
C271			CK73GB1H103K	CHIP C	0.010UF	K	KM1E1
C271			CK73GB1H103K	CHIP C	0.010UF	K	E2R1
C272,273			CD04AS1V100M	ELECTRO	10UF	35WV	KM1E1
C272,273			CD04AS1V100M	ELECTRO	10UF	35WV	E2R1
C301			CC73GCH1H150J	CHIP C	15PF	J	
C302			CC73GCH1H221J	CHIP C	220PF	J	
C303			CC73GCH1H150J	CHIP C	15PF	J	
C304			CC73GCH1H221J	CHIP C	220PF	J	
C305,306			C90-6779-05	ELECTRO	0.47UF	16WV	
C307			CC73GCH1H150J	CHIP C	15PF	J	
C308			CC73GCH1H221J	CHIP C	220PF	J	
C309			CC73GCH1H150J	CHIP C	15PF	J	
C310			CC73GCH1H221J	CHIP C	220PF	J	
C311,312		✻	C90-6780-05	ELECTRO	1UF	16WV	
C313,314			CC73GCH1H150J	CHIP C	15PF	J	
C315,316			CK73GB1A105K	CHIP C	1.0UF	K	
C317,318			C90-6779-05	ELECTRO	0.47UF	16WV	
C319			CD04BM1E330M	CHIP EL	33UF	25WV	
C320,321			CC73GCH1H150J	CHIP C	15PF	J	
C322-325			CC73GCH1H221J	CHIP C	220PF	J	
C329			CD04BJ1H100M	ELECTRO	10UF	50WV	
C330,331			CK73GB1H102K	CHIP C	1000PF	K	
C333			CD04BJ1H100M	ELECTRO	10UF	50WV	
C334-337			CK73GB1H104K	CHIP C	0.10UF	K	
C340			CD04BJ1H100M	ELECTRO	10UF	50WV	
C342			CK73GB1H102K	CHIP C	1000PF	K	
C345			CK73GB1H102K	CHIP C	1000PF	K	
C347			CD04BJ1H100M	ELECTRO	10UF	50WV	
C351			CD04BJ1H100M	ELECTRO	10UF	50WV	
C352,353			CK73GB1H102K	CHIP C	1000PF	K	
C355			CD04BJ1H100M	ELECTRO	10UF	50WV	
C358			CD04BJ1H100M	ELECTRO	10UF	50WV	
C359,360			CK73GB1H102K	CHIP C	1000PF	K	
C361			CD04BJ1H100M	ELECTRO	10UF	50WV	
C401			CD04AS1H4R7M	ELECTRO	4.7UF	50WV	
C402			CD04BJ1A101M	ELECTRO	100UF	10WV	
C403			CD04AS1H4R7M	ELECTRO	4.7UF	50WV	
C404			CD04BJ1E470M	ELECTRO	47UF	25WV	
C405			CK73GB1H103K	CHIP C	0.010UF	K	
C406			CD04AS1V100M	ELECTRO	10UF	35WV	
CN1		✻	E41-2649-05	PIN ASSY			
CN2			E41-2650-05	PIN ASSY			
CN301		✻	E41-2649-05	PIN ASSY			
CN501			E41-2153-05	FLAT CABLE CONNECTOR			
CN502			E41-2197-05	FLAT CABLE CONNECTOR			
J1			E58-1043-05	RECTANGULAR RECEPTACLE			
J401			E56-0865-05	CYLINDRICAL RECEPTACLE			
W254	2C		E30-6508-05	CORD WITH PLUG (FM-ANT)			
321	2C	✻	F09-2834-04	SHEET			
322	1C	✻	F12-0920-04	SHIELDING TUBE			
F1			F53-0297-05	FUSE (UL,CSA) 1.6A			
L2-4			L92-0373-05	CHIP FERRITE			
L7			L41-4795-33	SMALL FIXED INDUCTOR (4.7U)			
L101			L92-0319-05	CHIP FERRITE			

Ref. No.	Add	New	Parts No.	Description				Destination
L201			L41-4795-33	SMALL FIXED INDUCTOR (4.7U)				
L251,252			L41-4795-33	SMALL FIXED INDUCTOR (4.7U)				KM1E1
L251,252			L41-4795-33	SMALL FIXED INDUCTOR (4.7U)				E2R1
L252			L41-4795-33	SMALL FIXED INDUCTOR (4.7U)				X1
L254			L41-4795-33	SMALL FIXED INDUCTOR (4.7U)				
L256			L33-1977-05	CHOKE COIL (52UH)				
L401			L41-4795-33	SMALL FIXED INDUCTOR (4.7U)				
X101			L78-0821-05	RESONATOR				
X251			L77-2002-05	CRYSTAL RESONATOR				KM1E1
X251			L77-2002-05	CRYSTAL RESONATOR				E2R1
AD	2C	✻	N84-3008-43	PAN HEAD TAPTITE SCREW				
AE	2C		N09-4461-05	TAPTITE SCREW				
R1			RK73EB2E103J	CHIP R	10K	J	1/4W	
R2			RK73EB2E000J	CHIP R	0.0	J	1/4W	
R3			RK73EB2E223J	CHIP R	22K	J	1/4W	
R4			RK73EB2E000J	CHIP R	0.0	J	1/4W	
R5			RK73EB2E102J	CHIP R	1.0K	J	1/4W	
R6			RK73EB2E472J	CHIP R	4.7K	J	1/4W	
R7,8			RK73EB2E682J	CHIP R	6.8K	J	1/4W	
R9			RK73GB2A912J	CHIP R	9.1K	J	1/10W	
R10			RK73GB2A153J	CHIP R	15K	J	1/10W	
R11			RK73GB2A473J	CHIP R	47K	J	1/10W	
R26			RK73GB2A104J	CHIP R	100K	J	1/10W	
R27,28			RK73GB2A103J	CHIP R	10K	J	1/10W	
R29			RK73GB2A683J	CHIP R	68K	J	1/10W	
R30			RK73GB2A822J	CHIP R	8.2K	J	1/10W	
R33			RK73GB2A393J	CHIP R	39K	J	1/10W	
R35			RK73GB2A104J	CHIP R	100K	J	1/10W	
R36			RK73FB2B472J	CHIP R	4.7K	J	1/8W	
R37			RK73GB2A223J	CHIP R	22K	J	1/10W	
R38,39			RK73PB2H102J	CHIP R	1.0K	J	1/2W	
R40			RK73GB2A222J	CHIP R	2.2K	J	1/10W	KM1R1
R40			RK73GB2A222J	CHIP R	2.2K	J	1/10W	X1
R41			RK73GB2A103J	CHIP R	10K	J	1/10W	KM1R1
R41			RK73GB2A103J	CHIP R	10K	J	1/10W	X1
R42			RK73FB2B472J	CHIP R	4.7K	J	1/8W	
R43			RK73GB2A103J	CHIP R	10K	J	1/10W	KM1R1
R43			RK73GB2A103J	CHIP R	10K	J	1/10W	X1
R45			RK73EB2E102J	CHIP R	1.0K	J	1/4W	
R46			RK73FB2B561J	CHIP R	560	J	1/8W	
R47			RK73EB2E103J	CHIP R	10K	J	1/4W	
R48			RK73GB2A473J	CHIP R	47K	J	1/10W	
R49			RK73GB2A104J	CHIP R	100K	J	1/10W	
R50			RK73FB2B223J	CHIP R	22K	J	1/8W	
R51			RK73GB2A223J	CHIP R	22K	J	1/10W	
R52			RK73FB2B222J	CHIP R	2.2K	J	1/8W	
R53			RK73GB2A473J	CHIP R	47K	J	1/10W	
R54			RK73GB2A103J	CHIP R	10K	J	1/10W	
R55			RK73GB2A224J	CHIP R	220K	J	1/10W	
R56			RK73GB2A103J	CHIP R	10K	J	1/10W	
R57,58			RK73GB2A473J	CHIP R	47K	J	1/10W	
R59			RK73GB2A223J	CHIP R	22K	J	1/10W	
R60,61			RK73PB2H102J	CHIP R	1.0K	J	1/2W	KM1R1
R60,61			RK73PB2H102J	CHIP R	1.0K	J	1/2W	X1

K : DDX6019 (North America) **E1** : DDX6029 **E2** : DDX6029Y (Europe)
X1 : DDX6039 (Australia) **R1** : DDX6039 (Latin America) **M1** : DDX6039 (Other Areas)

⚠ Indicates safety critical components.

PARTS LIST

RECEIVER UNIT (X14-974x-xx)

Ref. No.	Add	New	Parts No.	Description			Destination
R62			RK73GB2A101J	CHIP R	100	J 1/10W	
R69			RK73EB2E000J	CHIP R	0.0	J 1/4W	
R80			RK73GB2A511J	CHIP R	510	J 1/10W	
R81			RK73GB2A104J	CHIP R	100K	J 1/10W	
R82			RK73GB2A562J	CHIP R	5.6K	J 1/10W	
R83			RK73GB2A101J	CHIP R	100	J 1/10W	
R84			RK73FB2B221J	CHIP R	220	J 1/8W	
R86			RK73GH2A243D	CHIP R	24K	D 1/10W	
R87			RK73GH2A432D	CHIP R	4.3K	D 1/10W	
R88			RK73EB2E000J	CHIP R	0.0	J 1/4W	
R89			RK73GB2A101J	CHIP R	100	J 1/10W	
R90			RK73GB2A473J	CHIP R	47K	J 1/10W	
R91			RK73GB2A222J	CHIP R	2.2K	J 1/10W	
R101-103			RK73GB2A473J	CHIP R	47K	J 1/10W	
R105			RK73GB2A103J	CHIP R	10K	J 1/10W	M1E1E2
R105,106			RK73GB2A103J	CHIP R	10K	J 1/10W	K
R106,107			RK73GB2A103J	CHIP R	10K	J 1/10W	X1
R107			RK73GB2A103J	CHIP R	10K	J 1/10W	E1E2
R108			RK73GB2A104J	CHIP R	100K	J 1/10W	
R109			RK73GB2A103J	CHIP R	10K	J 1/10W	
R110			RK73GB2A473J	CHIP R	47K	J 1/10W	
R111			RK73GB2A103J	CHIP R	10K	J 1/10W	R1X1
R112			RK73GB2A104J	CHIP R	100K	J 1/10W	
R113			RK73GB2A103J	CHIP R	10K	J 1/10W	M1E1E2
R113			RK73GB2A103J	CHIP R	10K	J 1/10W	R1
R114			RK73GB2A473J	CHIP R	47K	J 1/10W	
R115			RK73GB2A103J	CHIP R	10K	J 1/10W	KM1R1
R116,117			RK73GB2A222J	CHIP R	2.2K	J 1/10W	
R118			RK73GB2A101J	CHIP R	100	J 1/10W	
R119			RK73GB2A222J	CHIP R	2.2K	J 1/10W	KM1E1
R119			RK73GB2A222J	CHIP R	2.2K	J 1/10W	E2R1
R120			RK73GB2A223J	CHIP R	22K	J 1/10W	
R121-131			RK73GB2A101J	CHIP R	100	J 1/10W	
R132			RK73GB2A472J	CHIP R	4.7K	J 1/10W	
R133			RK73GB2A103J	CHIP R	10K	J 1/10W	X1
R134			RK73GB2A104J	CHIP R	100K	J 1/10W	
R136			RK73GB2A472J	CHIP R	4.7K	J 1/10W	
R138,139			RK73GB2A473J	CHIP R	47K	J 1/10W	
R140			RK73GB2A103J	CHIP R	10K	J 1/10W	
R141-143			RK73GB2A101J	CHIP R	100	J 1/10W	
R144-146			RK73GB2A103J	CHIP R	10K	J 1/10W	
R147,148			RK73GB2A101J	CHIP R	100	J 1/10W	
R149			RK73GB2A104J	CHIP R	100K	J 1/10W	
R150-154			RK73GB2A101J	CHIP R	100	J 1/10W	
R155			RK73GB2A473J	CHIP R	47K	J 1/10W	
R156			RK73GB2A101J	CHIP R	100	J 1/10W	
R157,158			RK73GB2A473J	CHIP R	47K	J 1/10W	
R168-173			RK73GB2A101J	CHIP R	100	J 1/10W	
R174			RK73GB2A473J	CHIP R	47K	J 1/10W	
R175			RK73GB2A102J	CHIP R	1.0K	J 1/10W	
R176			RK73GB2A471J	CHIP R	470	J 1/10W	
R177			RK73GB2A153J	CHIP R	15K	J 1/10W	
R178			RK73GB2A473J	CHIP R	47K	J 1/10W	
R179			RK73GB2A102J	CHIP R	1.0K	J 1/10W	
R180-183			RK73GB2A473J	CHIP R	47K	J 1/10W	

Ref. No.	Add	New	Parts No.	Description			Destination
R185			RK73GB2A103J	CHIP R	10K	J 1/10W	
R186			RK73GB2A473J	CHIP R	47K	J 1/10W	
R187			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R188-190			RK73GB2A101J	CHIP R	100	J 1/10W	
R191			RK73GB2A104J	CHIP R	100K	J 1/10W	
R192			RK73GB2A101J	CHIP R	100	J 1/10W	
R201			RK73EB2E2R2J	CHIP R	2.2	J 1/4W	
R202			RK73GB2A104J	CHIP R	100K	J 1/10W	
R203			RK73GB2A102J	CHIP R	1.0K	J 1/10W	
R204			RK73GB2A103J	CHIP R	10K	J 1/10W	
R205			RK73GB2A101J	CHIP R	100	J 1/10W	
R206			RK73GB2A103J	CHIP R	10K	J 1/10W	
R207-215			RK73GB2A101J	CHIP R	100	J 1/10W	
R216,217			RK73GB2A100J	CHIP R	10	J 1/10W	
R218,219			RK73GB2A102J	CHIP R	1.0K	J 1/10W	
R220-223			RK73GB2A103J	CHIP R	10K	J 1/10W	
R224			RK73GB2A471J	CHIP R	470	J 1/10W	
R225			RK73GB2A223J	CHIP R	22K	J 1/10W	
R226,227			RK73GB2A103J	CHIP R	10K	J 1/10W	
R228			RK73GB2A223J	CHIP R	22K	J 1/10W	
R229			RK73GB2A471J	CHIP R	470	J 1/10W	
R230			RK73GB2A104J	CHIP R	100K	J 1/10W	
R254			RK73GB2A223J	CHIP R	22K	J 1/10W	
R255			RK73GB2A102J	CHIP R	1.0K	J 1/10W	
R257			RK73FB2B1R0J	CHIP R	1.0	J 1/8W	
R258-260			RK73GB2A222J	CHIP R	2.2K	J 1/10W	KM1E1
R258-260			RK73GB2A222J	CHIP R	2.2K	J 1/10W	E2R1
R301			RK73GB2A333J	CHIP R	33K	J 1/10W	
R302			RK73GB2A182J	CHIP R	1.8K	J 1/10W	
R303			RK73GB2A221J	CHIP R	220	J 1/10W	
R304			RK73GB2A223J	CHIP R	22K	J 1/10W	
R305			RK73GB2A432J	CHIP R	4.3K	J 1/10W	
R306			RK73GB2A100J	CHIP R	10	J 1/10W	
R309			RK73FB2B101J	CHIP R	100	J 1/8W	
R310			RK73GB2A471J	CHIP R	470	J 1/10W	
R312,313			RK73GB2A223J	CHIP R	22K	J 1/10W	
R315			RK73FB2B101J	CHIP R	100	J 1/8W	
R316			RK73GB2A471J	CHIP R	470	J 1/10W	
R324			RK73FB2B101J	CHIP R	100	J 1/8W	
R325			RK73GB2A471J	CHIP R	470	J 1/10W	
R328			RK73GB2A223J	CHIP R	22K	J 1/10W	
R331			RK73GB2A223J	CHIP R	22K	J 1/10W	
R333			RK73FB2B101J	CHIP R	100	J 1/8W	
R334			RK73GB2A471J	CHIP R	470	J 1/10W	
R339			RK73FB2B101J	CHIP R	100	J 1/8W	
R340			RK73GB2A471J	CHIP R	470	J 1/10W	
R342,343			RK73GB2A223J	CHIP R	22K	J 1/10W	
R345			RK73FB2B101J	CHIP R	100	J 1/8W	
R346			RK73GB2A471J	CHIP R	470	J 1/10W	
R349			RK73FB2B101J	CHIP R	100	J 1/8W	
R350			RK73GB2A471J	CHIP R	470	J 1/10W	
R351,352			RK73GB2A223J	CHIP R	22K	J 1/10W	
R353			RK73FB2B101J	CHIP R	100	J 1/8W	
R354			RK73GB2A471J	CHIP R	470	J 1/10W	
R355-362			RK73GB2A103J	CHIP R	10K	J 1/10W	

K : DDX6019 (North America) **E1** : DDX6029 **E2** : DDX6029Y (Europe)
X1 : DDX6039 (Australia) **R1** : DDX6039 (Latin America) **M1** : DDX6039 (Other Areas)

⚠ Indicates safety critical components.

PARTS LIST

RECEIVER UNIT (X14-974x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination
R401-403			RK73EB2E472J	CHIP R 4.7K J 1/4W	
R404,405			RK73EB2E101J	CHIP R 100 J 1/4W	
R406,407			RK73EB2E472J	CHIP R 4.7K J 1/4W	
R408			RK73EB2E101J	CHIP R 100 J 1/4W	
R409			RK73EB2E100J	CHIP R 10 J 1/4W	
R410			RK73EB2E4R7J	CHIP R 4.7 J 1/4W	
R411			RK73EB2E100J	CHIP R 10 J 1/4W	
R412			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R413			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R705			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R707			RK73GB2A000J	CHIP R 0.0 J 1/10W	E1E2
R711			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R714,715			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R717			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R725-727			RK73GB2A000J	CHIP R 0.0 J 1/10W	
D2-9			1SR154-400	DIODE	
D10,11			DAN202U	DIODE	
D12			UDZS6.2B	ZENER DIODE	
D13,14			DAN202U	DIODE	
D15,16			UDZS6.8B	ZENER DIODE	
D17			DAP202U	DIODE	
D18			UDZS6.8B	ZENER DIODE	
D19			DAP202U	DIODE	
D20-23			1SR154-400	DIODE	
D24			UDZS5.6B	ZENER DIODE	
D25			UDZS4.7B	ZENER DIODE	
D27			UDZS5.6B	ZENER DIODE	
D28			UDZS16B	ZENER DIODE	
D29			1SS352-F	DIODE	
D31			DAN202U	DIODE	
D33			UDZS5.6B	ZENER DIODE	
D101			DAN202U	DIODE	
D201-206			DAP202U	DIODE	
D252			IMSA-6801-E	SURGE ABSORBER	
D301-304			DAP202U	DIODE	
D305-310			AVRM1608180M6A	VARISTOR	
D311			DAP202U	DIODE	
D312,313			AVRM1608180M6A	VARISTOR	
D314-317			DAP202U	DIODE	
D401-405			STZ6.8N	ZENER DIODE	
D406			DAP202U	DIODE	
D407			STZ6.8N	ZENER DIODE	
D408			UDZS4.7B	ZENER DIODE	
IC1			SN74HC02APWR	MOS-IC	
IC5			M5237ML-CF0J	ANALOGUE IC	
IC101		✻	703030BYGCJ26	MICROCONTROLLER IC	
IC104			S-80842CNNB-G	MOS-IC	
IC105			TC7SET04FU-F	MOS-IC	
IC201			E-TDA7415C	ANALOGUE IC	
IC202,203			TC4052BFT	MOS-IC	
IC204			TC7SET08FU-F	MOS-IC	
IC251			E-TDA7479AD	ANALOGUE IC	KM1E1
IC251			E-TDA7479AD	ANALOGUE IC	E2R1
IC301			E-TDA7560A	ANALOGUE IC	
IC401			BA3121F	ANALOGUE IC	

Ref. No.	Add	New	Parts No.	Description	Destination
Q1			2SA1576A	TRANSISTOR	
Q2			DTC143EUA	DIGITAL TRANSISTOR	
Q3			DTC124EUA	DIGITAL TRANSISTOR	
Q4			2SC4081	TRANSISTOR	
Q14			2SC4081	TRANSISTOR	
Q16			2SC4081	TRANSISTOR	
Q18			2SB1188(Q,R)	TRANSISTOR	
Q19			2SA1576A	TRANSISTOR	
Q20			DTA114EUA	DIGITAL TRANSISTOR	
Q21			DTC114YUA	DIGITAL TRANSISTOR	
Q22			2SC4081	TRANSISTOR	KM1R1
Q22			2SC4081	TRANSISTOR	X1
Q23			2SB1188(R)	TRANSISTOR	KM1R1
Q23			2SB1188(R)	TRANSISTOR	X1
Q24			2SA1576A	TRANSISTOR	
Q25			2SB1565	TRANSISTOR	
Q26			2SC4081	TRANSISTOR	
Q27			2SB1689	TRANSISTOR	
Q28			DTC124EUA	DIGITAL TRANSISTOR	
Q29			2SC4081	TRANSISTOR	
Q30			TPC8110-F	FET	
Q31			DTA124EUA	DIGITAL TRANSISTOR	
Q32			DTC124EUA	DIGITAL TRANSISTOR	
Q34			DTC124EUA	DIGITAL TRANSISTOR	
Q42			2SB1203-FA-E	TRANSISTOR	
Q43			2SC4081	TRANSISTOR	
Q44			DTC124EUA	DIGITAL TRANSISTOR	
Q45			2SB1565	TRANSISTOR	
Q101			DTA144EUA	DIGITAL TRANSISTOR	
Q102			DTC144EUA	DIGITAL TRANSISTOR	
Q103			DTA124EUA	DIGITAL TRANSISTOR	
Q201-204			DTC124EUA	DIGITAL TRANSISTOR	
Q205,206			DTC323TU	DIGITAL TRANSISTOR	
Q207			DTA144EUA	DIGITAL TRANSISTOR	
Q253			DTC124EUA	DIGITAL TRANSISTOR	
Q255			2SB1689	TRANSISTOR	
Q301			DTC323TU	DIGITAL TRANSISTOR	
Q302			DTA144EUA	DIGITAL TRANSISTOR	
Q303-306			DTC323TU	DIGITAL TRANSISTOR	
Q307			DTA144EUA	DIGITAL TRANSISTOR	
Q308,309			DTC323TU	DIGITAL TRANSISTOR	
Q310			DTA144EUA	DIGITAL TRANSISTOR	
Q311			DTC323TU	DIGITAL TRANSISTOR	
TH301			PRF18BE471QB2	POSITIVE RESISTOR	
A251		✻	X86-4010-11	FRONT-END UNIT	KR1X1
A251		✻	X86-4012-70	FRONT-END UNIT	M1E1E2

SWITCH UNIT (X16-2380-01) IN DVD MECHA

CN1			E41-2623-05	FLAT CABLE CONNECTOR	
S1,2			S68-0827-05	PUSH SWITCH	

ELECTRIC UNIT (X34-439x-xx)

C1,2			CE32BF1E101M	CHIP EL 100UF 25WV	
C3,4			CK73EB1E105K	CHIP C 1.0UF K	
C5,6			CK73GB1H104K	CHIP C 0.10UF K	

K : DDX6019 (North America) **E1** : DDX6029 **E2** : DDX6029Y (Europe)
X1 : DDX6039 (Australia) **R1** : DDX6039 (Latin America) **M1** : DDX6039 (Other Areas)

⚠ Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-439x-xx)

Ref. No.	Add	New	Parts No.	Description			Destination
C7			CC73GCH1H101J	CHIP C	100PF	J	
C8			CC73GCH1H151J	CHIP C	150PF	J	
C9			CK73GB1H682K	CHIP C	6800PF	K	
C10			CK73GB1H103K	CHIP C	0.010UF	K	
C13			CC73GCH1H221J	CHIP C	220PF	J	
C14			CK73GB1H221K	CHIP C	220PF	K	
C15,16			CE32AU1A560M	CHIP EL	56UF	10WV	
C17			CK73EB1A106K	CHIP C	10UF	K	
C18,19			CE32CL1C220M	CHIP EL	22UF	16WV	
C20			CE32CL0J101M	CHIP EL	100UF	6.3WV	
C21			CE32BF0J101M	CHIP EL	100UF	6.3WV	
C22			CK73EB1A106K	CHIP C	10UF	K	
C25,26			CK73GB1H103K	CHIP C	0.010UF	K	
C30			CK73GB1H104K	CHIP C	0.10UF	K	
C60			CE32CL1C470M	CHIP EL	47UF	16WV	
C61			CE32BF0J101M	CHIP EL	100UF	6.3WV	
C70-73			CK73GB1H102K	CHIP C	1000PF	K	
C74,75			CC73GCH1H101J	CHIP C	100PF	J	
C80			CK73GB1H103K	CHIP C	0.010UF	K	
C82,83			CK73GB1H103K	CHIP C	0.010UF	K	
C101			CK73GB1H104K	CHIP C	0.10UF	K	
C103-105			CK73GB1H104K	CHIP C	0.10UF	K	
C106			CK73GB1A105K	CHIP C	1.0UF	K	
C107			CK73GB1H104K	CHIP C	0.10UF	K	
C108			CK73FB0J106K	CHIP C	10UF	K	
C109,110			CK73GB1H104K	CHIP C	0.10UF	K	
C111			CC73GCH1H020C	CHIP C	2.0PF	C	
C112			CK73FB0J106K	CHIP C	10UF	K	
C113-116			CK73GB1H104K	CHIP C	0.10UF	K	
C117,118			CK73GB1H103K	CHIP C	0.010UF	K	
C119			CK73FB0J106K	CHIP C	10UF	K	
C121			CK73GB1A105K	CHIP C	1.0UF	K	
C122			CC73GCH1H020C	CHIP C	2.0PF	C	
C123			CK73GB1H103K	CHIP C	0.010UF	K	
C124			CK73FB0J106K	CHIP C	10UF	K	
C223			CK73GB1H103K	CHIP C	0.010UF	K	
C227			CC73GCH1H151J	CHIP C	150PF	J	
C228			CK73GB1H104K	CHIP C	0.10UF	K	
C231			CK73GB1H103K	CHIP C	0.010UF	K	
C269			CC73GCH1H331J	CHIP C	330PF	J	
C301,302			CK73FB0J106K	CHIP C	10UF	K	
C304			CK73GB1H104K	CHIP C	0.10UF	K	E1E2
C305,306			CC73GCH1H680J	CHIP C	68PF	J	
C307-310			CK73GB1H104K	CHIP C	0.10UF	K	
C311			CC73GCH1H220J	CHIP C	22PF	J	
C312			CC73GCH1H180J	CHIP C	18PF	J	
C313			CK73GB0J475K	CHIP C	4.7UF	K	
C314-316			CK73GB1H104K	CHIP C	0.10UF	K	
C317			CK73GB1H103K	CHIP C	0.010UF	K	
C320			CK73GB1H102K	CHIP C	1000PF	K	
C350			CK73GB1H104K	CHIP C	0.10UF	K	
C405			CK73GB1H103K	CHIP C	0.010UF	K	
C406			CK73FB0J106K	CHIP C	10UF	K	
C407			CK73GB1H103K	CHIP C	0.010UF	K	
C450			CK73GB1H103K	CHIP C	0.010UF	K	

Ref. No.	Add	New	Parts No.	Description			Destination
C451			CK73FB0J106K	CHIP C	10UF	K	
C600			CE32BF1E101M	CHIP EL	100UF	25WV	
C601			CK73EB1E105K	CHIP C	1.0UF	K	
C602			CC73GCH1H101J	CHIP C	100PF	J	
C603			CK73GB1H104K	CHIP C	0.10UF	K	
C604			CC73GCH1H151J	CHIP C	150PF	J	
C605			CK73GB1H103K	CHIP C	0.010UF	K	
C607			CC73GCH1H221J	CHIP C	220PF	J	
C608,609			CK73GB1H102K	CHIP C	1000PF	K	
C610			CE32AU1A560M	CHIP EL	56UF	10WV	
C611			CK73GB1H103K	CHIP C	0.010UF	K	
C612-615			CK73GB1H102K	CHIP C	1000PF	K	
C616-621			CK73GB1H104K	CHIP C	0.10UF	K	
C622			CK73GB1A105K	CHIP C	1.0UF	K	
C623			CC73GCH1H151J	CHIP C	150PF	J	
C624			CK73GB1H104K	CHIP C	0.10UF	K	
C625			CK73GB1H102K	CHIP C	1000PF	K	
C644			CK73GB1H104K	CHIP C	0.10UF	K	
C655-657			CK73GB1H104K	CHIP C	0.10UF	K	
C658			CK73FB0J106K	CHIP C	10UF	K	
C659,660			CK73GB1H103K	CHIP C	0.010UF	K	
C665			CK73GB1H103K	CHIP C	0.010UF	K	
C700			CK73EB1A475K	CHIP C	4.7UF	K	
C701			CE32CL0J470M	CHIP EL	47UF	6.3WV	
C702-704			CK73EB1A475K	CHIP C	4.7UF	K	
C706			CK73GB1H103K	CHIP C	0.010UF	K	
C707			CE32CL1E4R7M	CHIP EL	4.7UF	25WV	
C708			CE32CL0J101M	CHIP EL	100UF	6.3WV	
C709			CE32CL1E4R7M	CHIP EL	4.7UF	25WV	
C713			CE32CL0J470M	CHIP EL	47UF	6.3WV	
C714			CK73GB1H104K	CHIP C	0.10UF	K	
C715			CK73GB1H103K	CHIP C	0.010UF	K	
C716			CE32CL1C220M	CHIP EL	22UF	16WV	
C717			CE32CL1C470M	CHIP EL	47UF	16WV	
C720			CK73GB1H103K	CHIP C	0.010UF	K	
C721			CE32CL0J470M	CHIP EL	47UF	6.3WV	
C722			CE32CL1C220M	CHIP EL	22UF	16WV	
C723			CK73GB1H103K	CHIP C	0.010UF	K	
C803-806			CK73GB1A105K	CHIP C	1.0UF	K	
C810			CK73GB1H104K	CHIP C	0.10UF	K	
C813			CK73GB1H104K	CHIP C	0.10UF	K	
C814-817			CK73GB1A105K	CHIP C	1.0UF	K	KM1R1
C814-817			CK73GB1A105K	CHIP C	1.0UF	K	X1
C814-821			CK73GB1A105K	CHIP C	1.0UF	K	E1E2
C823,824			CK73GB1A105K	CHIP C	1.0UF	K	
C828			CK73GB1H103K	CHIP C	0.010UF	K	E1E2
C829,830			CE32CL1C220M	CHIP EL	22UF	16WV	
C834			CK73GB1H104K	CHIP C	0.10UF	K	
C836-838			CK73GB1A105K	CHIP C	1.0UF	K	E1E2
C838			CK73GB1A105K	CHIP C	1.0UF	K	KM1R1
C838			CK73GB1A105K	CHIP C	1.0UF	K	X1
C840			CK73GB1A105K	CHIP C	1.0UF	K	
C841			CK73FB0J106K	CHIP C	10UF	K	
C842			CK73GB1A105K	CHIP C	1.0UF	K	
C843			CK73GB1H104K	CHIP C	0.10UF	K	

K : DDX6019 (North America) **E1** : DDX6029 **E2** : DDX6029Y (Europe)
X1 : DDX6039 (Australia) **R1** : DDX6039 (Latin America) **M1** : DDX6039 (Other Areas)

⚠ Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-439x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination
C846			CE32BQ0J331M	CHIP EL 330UF 6.3WV	
C852			CK73EB1A106K	CHIP C 10UF K	
C854			CE32BF1E220M	CHIP EL 22UF 25WV	
C864-867			CK73GB1H103K	CHIP C 0.010UF K	
C868-870			CK73GB1A105K	CHIP C 1.0UF K	KM1R1
C868-870			CK73GB1A105K	CHIP C 1.0UF K	X1
C891			CK73GB1H561K	CHIP C 560PF K	
C892			CK73GB1A105K	CHIP C 1.0UF K	
C893			CK73GB1H561K	CHIP C 560PF K	
C894			CK73GB1H103K	CHIP C 0.010UF K	
C895			CK73FB0J106K	CHIP C 10UF K	
C896-898			CK73GB1H104K	CHIP C 0.10UF K	
CN1		✻	E41-2649-05	PIN ASSY	
CN2			E41-2259-05	PIN ASSY	
CN401			E41-2153-05	FLAT CABLE CONNECTOR	
CN501			E41-2608-05	FLAT CABLE CONNECTOR	
CN601			E41-2153-05	FLAT CABLE CONNECTOR	
CN700		✻	E41-2636-05	PIN ASSY	
CN701		✻	E41-2634-05	PIN ASSY	
CN702			E40-6469-05	PIN ASSY	
CN703			E41-2650-05	PIN ASSY	
CN704			E41-2153-05	FLAT CABLE CONNECTOR	
J401			E56-0854-05	CYLINDRICAL RECEPTACLE	
J700			E58-0998-05	RECTANGULAR RECEPTACLE	
F1			F53-0297-05	FUSE (UL,CSA) 1.6A	
L2		✻	L33-1913-05	CHOKE COIL (33UH)	
L3			L33-1906-05	CHOKE COIL (47UH)	
L10			L33-1986-05	CHOKE COIL (22UH)	
L101-104			L41-1005-33	SMALL FIXED INDUCTOR (10U)	
L202,203			L92-0319-05	CHIP FERRITE	
L301-304			L92-0319-05	CHIP FERRITE	
L401			L92-0319-05	CHIP FERRITE	
L402			L92-0332-05	CHIP FERRITE	
L501			L33-2316-05	CHOKE COIL (10UH)	
L600			L33-2316-05	CHOKE COIL (10UH)	
L601		✻	L33-1913-05	CHOKE COIL (33UH)	
L602			L41-1005-33	SMALL FIXED INDUCTOR (10U)	
L603			L92-0319-05	CHIP FERRITE	
L700			L41-1005-33	SMALL FIXED INDUCTOR (10U)	
L701			L92-0319-05	CHIP FERRITE	
L800			L41-1005-33	SMALL FIXED INDUCTOR (10U)	
X2			L77-2917-05	CRYSTAL RESONATOR (32.768KHZ)	
X3			L78-1210-05	RESONATOR (4.95MHZ)	
CP1-8			RK74GB1J330J	CHIP-COM 33 J 1/16W	
R1,2			RK73GH2A124D	CHIP R 120K D 1/10W	
R3			RK73GB2A273J	CHIP R 27K J 1/10W	
R4			RK73GB2A473J	CHIP R 47K J 1/10W	
R5			RN73GH1J272D	CHIP R 2.7K D 1/16W	
R6			RN73GH1J752D	CHIP R 7.5K D 1/16W	
R7,8			RK73GB2A101J	CHIP R 100 J 1/10W	
R9			RN73GH1J223D	CHIP R 22K D 1/16W	
R10			RN73GH1J303D	CHIP R 30K D 1/16W	
R11,12			RK73GB2A000J	CHIP R 0.0 J 1/10W	

Ref. No.	Add	New	Parts No.	Description	Destination
R15			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R20			RK73GB2A104J	CHIP R 100K J 1/10W	
R22			RK73GB2A104J	CHIP R 100K J 1/10W	
R23			RN73GH1J512D	CHIP R 5.1K D 1/16W	
R24			RN73GH1J473D	CHIP R 47K D 1/16W	
R30,31			RK73EB2E000J	CHIP R 0.0 J 1/4W	
R39-42			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R44-52			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R55			RN73GH1J473D	CHIP R 47K D 1/16W	
R56			RN73GH1J333D	CHIP R 33K D 1/16W	
R57			RK73GB2A104J	CHIP R 100K J 1/10W	
R60			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R61			RK73GB2A393J	CHIP R 39K J 1/10W	
R62			RK73GB2A561J	CHIP R 560 J 1/10W	
R63			RK73EB2E000J	CHIP R 0.0 J 1/4W	
R65			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R70,71			RK73EB2E100J	CHIP R 10 J 1/4W	
R74,75			RK73GB2A101J	CHIP R 100 J 1/10W	
R76			RN73GH1J221D	CHIP R 220 D 1/16W	
R77			RN73GH1J472D	CHIP R 4.7K D 1/16W	
R79			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R80			RK73GB2A104J	CHIP R 100K J 1/10W	
R82			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R83			RN73GH1J333D	CHIP R 33K D 1/16W	
R84			RN73GH1J243D	CHIP R 24K D 1/16W	
R101			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R103-105			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R106			RK73GB2A104J	CHIP R 100K J 1/10W	
R108,109			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R147			RK73GB2A104J	CHIP R 100K J 1/10W	
R149			RN73GH1J152D	CHIP R 1.5K D 1/16W	
R150			RK73GB2A680J	CHIP R 68 J 1/10W	
R151		✻	RN73GH1J131D	CHIP R 130 D 1/16W	
R168,169		✻	RN73GH1J131D	CHIP R 130 D 1/16W	
R170,171			RK73GB2A101J	CHIP R 100 J 1/10W	
R172			RK73GB2A272J	CHIP R 2.7K J 1/10W	
R173			RK73GB2A101J	CHIP R 100 J 1/10W	
R174			RK73GB2A272J	CHIP R 2.7K J 1/10W	
R175			RK73GB2A101J	CHIP R 100 J 1/10W	
R176			RK73GB2A272J	CHIP R 2.7K J 1/10W	
R177			RK73GB2A103J	CHIP R 10K J 1/10W	
R181			RK73GB2A471J	CHIP R 470 J 1/10W	
R182			RK73GB2A473J	CHIP R 47K J 1/10W	
R183			RK73GB2A561J	CHIP R 560 J 1/10W	
R193,194		✻	RN73GH1J100D	CHIP R 10 D 1/16W	
R195			RK73GB2A101J	CHIP R 100 J 1/10W	
R196		✻	RN73GH1J100D	CHIP R 10 D 1/16W	
R226			RK73GB2A515J	CHIP R 5.1M J 1/10W	
R233			RK73GB2A101J	CHIP R 100 J 1/10W	
R237			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R239			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R246,247			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R263			RK73GB2A201J	CHIP R 200 J 1/10W	
R264			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R280			RK73GB2A000J	CHIP R 0.0 J 1/10W	

K : DDX6019 (North America) **E1** : DDX6029 **E2** : DDX6029Y (Europe)
X1 : DDX6039 (Australia) **R1** : DDX6039 (Latin America) **M1** : DDX6039 (Other Areas)

⚠ Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-439x-xx)

Ref. No.	Add	New	Parts No.	Description			Destination
R301			RK73GB2A471J	CHIP R	470	J 1/10W	
R302,303			RK73GB2A101J	CHIP R	100	J 1/10W	
R304			RK73GB2A471J	CHIP R	470	J 1/10W	
R305-312			RK73GB2A101J	CHIP R	100	J 1/10W	
R313			RK73GB2A471J	CHIP R	470	J 1/10W	
R319,320			RK73GB2A101J	CHIP R	100	J 1/10W	
R323,324			RK73GB2A473J	CHIP R	47K	J 1/10W	
R325			RK73GB2A471J	CHIP R	470	J 1/10W	
R326			RK73GB2A473J	CHIP R	47K	J 1/10W	
R327			RK73GB2A101J	CHIP R	100	J 1/10W	
R328			RK73GB2A473J	CHIP R	47K	J 1/10W	
R329,330			RK73GB2A101J	CHIP R	100	J 1/10W	
R331,332			RK73GB2A103J	CHIP R	10K	J 1/10W	
R333			RK73GB2A473J	CHIP R	47K	J 1/10W	
R335			RK73GB2A473J	CHIP R	47K	J 1/10W	
R337			RK73GB2A473J	CHIP R	47K	J 1/10W	
R338-340			RK73GB2A101J	CHIP R	100	J 1/10W	
R342			RK73GB2A102J	CHIP R	1.0K	J 1/10W	
R343			RK73GB2A103J	CHIP R	10K	J 1/10W	K
R343-345			RK73GB2A103J	CHIP R	10K	J 1/10W	R1
R343,344			RK73GB2A103J	CHIP R	10K	J 1/10W	M1
R344			RK73GB2A103J	CHIP R	10K	J 1/10W	E1E2
R345			RK73GB2A103J	CHIP R	10K	J 1/10W	X1
R346			RK73GB2A471J	CHIP R	470	J 1/10W	
R347			RK73GB2A103J	CHIP R	10K	J 1/10W	E1E2X1
R348			RK73GB2A473J	CHIP R	47K	J 1/10W	
R349			RK73GB2A103J	CHIP R	10K	J 1/10W	KX1
R350			RK73GB2A101J	CHIP R	100	J 1/10W	
R351			RK73GB2A103J	CHIP R	10K	J 1/10W	KM1E1
R351			RK73GB2A103J	CHIP R	10K	J 1/10W	E2
R352			RK73GB2A101J	CHIP R	100	J 1/10W	
R353			RK73GB2A473J	CHIP R	47K	J 1/10W	
R354			RK73GB2A514J	CHIP R	510K	J 1/10W	
R355			RK73GB2A102J	CHIP R	1.0K	J 1/10W	
R356,357			RK73GB2A473J	CHIP R	47K	J 1/10W	
R358			RK73GB2A471J	CHIP R	470	J 1/10W	
R359			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R361-364			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R365			RK73GB2A101J	CHIP R	100	J 1/10W	
R366			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R367			RK73GB2A101J	CHIP R	100	J 1/10W	
R368-371			RK73GB2A471J	CHIP R	470	J 1/10W	
R372			RK73GB2A473J	CHIP R	47K	J 1/10W	
R374			RK73GB2A473J	CHIP R	47K	J 1/10W	
R375			RK73GB2A101J	CHIP R	100	J 1/10W	
R377			RK73GB2A123J	CHIP R	12K	J 1/10W	
R378,379			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R380-382			RK73GB2A473J	CHIP R	47K	J 1/10W	
R385,386			RK73GB2A101J	CHIP R	100	J 1/10W	
R391			RK73GB2A101J	CHIP R	100	J 1/10W	
R392			RK73GB2A104J	CHIP R	100K	J 1/10W	
R393			RK73GB2A473J	CHIP R	47K	J 1/10W	
R394			RK73GB2A101J	CHIP R	100	J 1/10W	
R396-398			RK73GB2A101J	CHIP R	100	J 1/10W	
R399			RK73GB2A105J	CHIP R	1.0M	J 1/10W	

Ref. No.	Add	New	Parts No.	Description			Destination
R400			RK73GB2A473J	CHIP R	47K	J 1/10W	
R405			RK73GB2A470J	CHIP R	47	J 1/10W	
R406,407			RK73GB2A101J	CHIP R	100	J 1/10W	
R408			RK73GB2A470J	CHIP R	47	J 1/10W	
R409			RK73GB2A101J	CHIP R	100	J 1/10W	
R410-412			RK73GB2A470J	CHIP R	47	J 1/10W	
R413			RK73GB2A472J	CHIP R	4.7K	J 1/10W	
R414,415			RK73GB2A220J	CHIP R	22	J 1/10W	
R416			RK73EB2E391J	CHIP R	390	J 1/4W	
R417			RK73EB2E150J	CHIP R	15	J 1/4W	
R422			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R434			RK73GB2A272J	CHIP R	2.7K	J 1/10W	
R435			RK73GB2A151J	CHIP R	150	J 1/10W	
R437			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R438-443			RK73GB2A104J	CHIP R	100K	J 1/10W	
R450			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R453			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R460			RK73GB2A224J	CHIP R	220K	J 1/10W	
R462			RK73GB2A473J	CHIP R	47K	J 1/10W	
R463			RK73GB2A203J	CHIP R	20K	J 1/10W	
R464			RK73GB2A473J	CHIP R	47K	J 1/10W	
R465			RK73GB2A103J	CHIP R	10K	J 1/10W	
R467			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R475			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R502-519			RK73GB2A101J	CHIP R	100	J 1/10W	
R525-527			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R530,531			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R535			RK73GB2A101J	CHIP R	100	J 1/10W	
R536			RK73EB2E000J	CHIP R	0.0	J 1/4W	
R600			RK73EB2E000J	CHIP R	0.0	J 1/4W	
R601			RK73GB2A101J	CHIP R	100	J 1/10W	
R602			RK73GH2A124D	CHIP R	120K	D 1/10W	
R603			RN73GH1J333D	CHIP R	33K	D 1/16W	
R604			RN73GH1J473D	CHIP R	47K	D 1/16W	
R605			RK73GB2A273J	CHIP R	27K	J 1/10W	
R606			RN73GH1J302D	CHIP R	3.0K	D 1/16W	
R607,608			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R609			RK73GB2A104J	CHIP R	100K	J 1/10W	
R610			RK73GB2A101J	CHIP R	100	J 1/10W	
R611			RN73GH1J243D	CHIP R	24K	D 1/16W	
R613			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R614			RK73EB2E100J	CHIP R	10	J 1/4W	
R615,616			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R620			RK73GB2A223J	CHIP R	22K	J 1/10W	
R621			RK73GB2A102J	CHIP R	1.0K	J 1/10W	
R653			RK73EB2E000J	CHIP R	0.0	J 1/4W	
R655,656			RK73GB2A472J	CHIP R	4.7K	J 1/10W	
R658			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R659			RK73GB2A472J	CHIP R	4.7K	J 1/10W	
R660			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R661			RK73GB2A223J	CHIP R	22K	J 1/10W	
R662			RK73FB2B000J	CHIP R	0.0	J 1/8W	
R663			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R700-703			RK73GB2A750J	CHIP R	75	J 1/10W	
R704,705			RK73EB2E102J	CHIP R	1.0K	J 1/4W	

K : DDX6019 (North America) **E1** : DDX6029 **E2** : DDX6029Y (Europe)
X1 : DDX6039 (Australia) **R1** : DDX6039 (Latin America) **M1** : DDX6039 (Other Areas)

⚠ Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-439x-xx)

Ref. No.	Add	New	Parts No.	Description				Destination
R706-708			RK73EB2E101J	CHIP R	100	J	1/4W	
R709			RK73EB2E000J	CHIP R	0.0	J	1/4W	
R710,711			RK73EB2E102J	CHIP R	1.0K	J	1/4W	
R712			RK73EB2E100J	CHIP R	10	J	1/4W	
R713			RK73EB2E4R7J	CHIP R	4.7	J	1/4W	
R714			RK73EB2E100J	CHIP R	10	J	1/4W	
R715			RK73GB2A750J	CHIP R	75	J	1/10W	
R716,717			RK73EB2E101J	CHIP R	100	J	1/4W	E1E2
R718,719			RK73GB2A750J	CHIP R	75	J	1/10W	
R720,721			RK73EB2E101J	CHIP R	100	J	1/4W	E1E2
R721			RK73EB2E101J	CHIP R	100	J	1/4W	KM1R1
R721			RK73EB2E101J	CHIP R	100	J	1/4W	X1
R722,723			RK73EB2E100J	CHIP R	10	J	1/4W	
R724			RK73EB2E102J	CHIP R	1.0K	J	1/4W	
R725			RK73GB2A750J	CHIP R	75	J	1/10W	
R726			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R727			RK73GB2A101J	CHIP R	100	J	1/10W	
R728			RK73EB2E102J	CHIP R	1.0K	J	1/4W	
R729			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R730			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R731			RK73GB2A101J	CHIP R	100	J	1/10W	
R732			RK73EB2E102J	CHIP R	1.0K	J	1/4W	
R733			RK73GB2A750J	CHIP R	75	J	1/10W	
R734			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R735			RK73GB2A750J	CHIP R	75	J	1/10W	
R736,737			RK73EB2E101J	CHIP R	100	J	1/4W	
R738			RK73GB2A100J	CHIP R	10	J	1/10W	
R739			RK73EB2E100J	CHIP R	10	J	1/4W	
R740			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R741			RK73EB2E4R7J	CHIP R	4.7	J	1/4W	
R742			RK73EB2E100J	CHIP R	10	J	1/4W	
R743			RK73GB2A101J	CHIP R	100	J	1/10W	
R747-749			RK73EB2E101J	CHIP R	100	J	1/4W	
R750			RK73EB2E4R7J	CHIP R	4.7	J	1/4W	
R751			RK73EB2E101J	CHIP R	100	J	1/4W	
R753			RK73EB2E750J	CHIP R	75	J	1/4W	
R754-757			RK73GB2A101J	CHIP R	100	J	1/10W	
R758			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R760			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R761,762			RK73GB2A100J	CHIP R	10	J	1/10W	E1E2
R763			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R764-767			RK73GB2A100J	CHIP R	10	J	1/10W	E1E2
R764,765			RK73GB2A100J	CHIP R	10	J	1/10W	KM1R1
R764,765			RK73GB2A100J	CHIP R	10	J	1/10W	X1
R767			RK73GB2A100J	CHIP R	10	J	1/10W	KM1R1
R767			RK73GB2A100J	CHIP R	10	J	1/10W	X1
R769,770			RK73GB2A100J	CHIP R	10	J	1/10W	
R771			RK73GB2A222J	CHIP R	2.2K	J	1/10W	
R772			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R773,774			RK73GB2A100J	CHIP R	10	J	1/10W	
R775			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R776			RK73GB2A222J	CHIP R	2.2K	J	1/10W	
R777			RK73GB2A103J	CHIP R	10K	J	1/10W	
R779-784			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R790,791			RK73GB2A000J	CHIP R	0.0	J	1/10W	

Ref. No.	Add	New	Parts No.	Description				Destination
R794,795			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R805-809			RK73GB2A000J	CHIP R	0.0	J	1/10W	E1E2
R808,809			RK73GB2A000J	CHIP R	0.0	J	1/10W	KM1R1
R808,809			RK73GB2A000J	CHIP R	0.0	J	1/10W	X1
R810,811			RK73GB2A473J	CHIP R	47K	J	1/10W	
R812			RK73GB2A121J	CHIP R	120	J	1/10W	
R816-818			RK73GB2A101J	CHIP R	100	J	1/10W	
R820,821			RK73GB2A473J	CHIP R	47K	J	1/10W	
R822-824			RK73GB2A272J	CHIP R	2.7K	J	1/10W	
R825			RK73GB2A182J	CHIP R	1.8K	J	1/10W	
R827			RK73GB2A121J	CHIP R	120	J	1/10W	
R828-830			RK73GB2A473J	CHIP R	47K	J	1/10W	
R835-837			RK73GB2A121J	CHIP R	120	J	1/10W	
R840,841			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R860			RK73GB2A561J	CHIP R	560	J	1/10W	
R861			RK73GB2A334J	CHIP R	330K	J	1/10W	
R862			RK73GB2A103J	CHIP R	10K	J	1/10W	
R871-873			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R877			RK73GB2A103J	CHIP R	10K	J	1/10W	
R878			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R879			RK73GB2A103J	CHIP R	10K	J	1/10W	
R880-882			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R884-889			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R890-893			RK73GB2A473J	CHIP R	47K	J	1/10W	
R894-896			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R897-902			RK73GB2A473J	CHIP R	47K	J	1/10W	KM1R1
R897-902			RK73GB2A473J	CHIP R	47K	J	1/10W	X1
R905,906			RK73GB2A223J	CHIP R	22K	J	1/10W	
R907			RK73GB2A473J	CHIP R	47K	J	1/10W	
D1,2			EC31QS04AG	DIODE				
D14-16			DAP202U	DIODE				
D60			DAP202U	DIODE				
D301			AVRM1608120M6A	VARISTOR				
D401			AVRM1608270MAA	VARISTOR				
D509			AVRM1608120M6A	VARISTOR				
D600			EC31QS04AG	DIODE				
D601,602			AVRM1608120M6A	VARISTOR				
D603			AVRM1608180M6A	VARISTOR				
D607			DA204U	DIODE				
D610,611			AVRM1608120M6A	VARISTOR				
D612			UDZS6.2B	ZENER DIODE				
D613			DA204U	DIODE				
D615			UDZS6.2B	ZENER DIODE				
D616			UDZS5.6B	ZENER DIODE				
D617			AVRM1608120M6A	VARISTOR				
D700			STZ6.2N	ZENER DIODE				
D701			STZ6.8N	ZENER DIODE				
D704			AVRM1608270MAA	VARISTOR				
D705			STZ6.8N	ZENER DIODE				
D706			STZ6.2N	ZENER DIODE				
D708-712			STZ6.2N	ZENER DIODE				
D714,715			STZ6.2N	ZENER DIODE				E1E2
D715			STZ6.2N	ZENER DIODE				KM1R1
D715			STZ6.2N	ZENER DIODE				X1

K : DDX6019 (North America) **E1** : DDX6029 **E2** : DDX6029Y (Europe)
X1 : DDX6039 (Australia) **R1** : DDX6039 (Latin America) **M1** : DDX6039 (Other Areas)

⚠ Indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-439x-xx)

Ref. No.	Add	New	Parts No.	Description	Destination
D718			STZ6.8N	ZENER DIODE	
D719,720			STZ6.2N	ZENER DIODE	E1E2
D720			STZ6.2N	ZENER DIODE	KM1R1
D720			STZ6.2N	ZENER DIODE	X1
D722			STZ6.2N	ZENER DIODE	KM1R1
D722			STZ6.2N	ZENER DIODE	X1
D722,723			STZ6.2N	ZENER DIODE	E1E2
D725-727			STZ6.2N	ZENER DIODE	
D728			DAP202U	DIODE	
D729			UDZS4.7B	ZENER DIODE	
D730			DAP202U	DIODE	
D731			UDZS4.7B	ZENER DIODE	
D742,743			UDZS8.2B	ZENER DIODE	
D750			UDZS6.2B	ZENER DIODE	
D800			DAP202U	DIODE	
D801			AVRM1608180M6A	VARISTOR	
D804,805			AVRM1608120M6A	VARISTOR	
IC1,2			BD9781HFP	ANALOGUE IC	
IC3		✻	SI-3050LUS	ANALOGUE IC	
IC4			SI-3050KD	ANALOGUE IC	
IC5			SI-3012KD	ANALOGUE IC	
IC60			SI-3033KMS	ANALOGUE IC	
IC101		✻	23L1613TI95V6	ROM IC	
IC102			LC74735NW9817E	MOS-IC	
IC210			TC7WHU04FU-F	MOS-IC	
IC211			TC7SET08FU-F	MOS-IC	
IC301			TC74VHCT08AFT	MOS-IC	
IC302			BR24L02FV-W	ROM IC	E1E2
IC303			S-80830CNNB-G	MOS-IC	
IC304		✻	703266YGJ504A	MICROCONTROLLER IC	
IC305			TC7SET08FU-F	MOS-IC	
IC401			TC7SET32FU-F	MOS-IC	
IC600			BD9781HFP	ANALOGUE IC	
IC601		✻	TC7W14FU-F	MOS-IC	
IC603			TC7SET08FU-F	MOS-IC	
IC700			BA3121F	ANALOGUE IC	
IC702			BA3121F	ANALOGUE IC	
IC703			TC7S08FU-F	MOS-IC	
IC704			LB1836M-TLM-E	ANALOGUE IC	
IC801			BA7653AFV	ANALOGUE IC	
IC802			BA7649F	ANALOGUE IC	
IC804			BA7653AFV	ANALOGUE IC	
IC805			MM1234XFBE-E	ANALOGUE IC	E1E2
IC810			MM1508XNRE-E	ANALOGUE IC	
IC812		✻	SI-3050LUS	ANALOGUE IC	
IC815			MM1108XFFE-E	ANALOGUE IC	
Q3			2SA1576A	TRANSISTOR	
Q5			2SC4081	TRANSISTOR	
Q7			2SC4081	TRANSISTOR	
Q8			2SA1576A	TRANSISTOR	
Q60			2SB1689	TRANSISTOR	
Q61			DTC114EUA	DIGITAL TRANSISTOR	
Q101-103			2SA1576A	TRANSISTOR	
Q105			2SA1576A	TRANSISTOR	
Q106			2SC4081	TRANSISTOR	
Q301			DTC144EUA	DIGITAL TRANSISTOR	
Q302			DTA114EUA	DIGITAL TRANSISTOR	
Q307			DTA124EUA	DIGITAL TRANSISTOR	
Q308			DTC144EUA	DIGITAL TRANSISTOR	
Q404			2SA1576A	TRANSISTOR	
Q600			2SC4081	TRANSISTOR	
Q601			2SA1576A	TRANSISTOR	
Q602			2SB1689	TRANSISTOR	
Q603			DTC143ZUA	DIGITAL TRANSISTOR	
Q800-802			2SA1576A	TRANSISTOR	
Q803-806			2SC4081	TRANSISTOR	
Q807			DTA124EUA	DIGITAL TRANSISTOR	

VIDEO UNIT (X35-467x-xx)

Ref. No.	Add	New	Parts No.	Description			Destination
C1			CK73HB1E103K	CHIP C	0.010UF	K	
C2			C92-1903-05	ELECTRO	10UF	16WV	
C3			CC73HCH1H100D	CHIP C	10PF	D	
C4			CK73EB1E225K	CHIP C	2.2UF	K	
C5			CK73HB1H102K	CHIP C	1000PF	K	
C6			CK73HB1E223K	CHIP C	0.022UF	K	
C7			CC73GCH1H102J	CHIP C	1000PF	J	
C8			CK73EB1E105K	CHIP C	1.0UF	K	
C9			CK73GB1H104K	CHIP C	0.10UF	K	
C10			CK73HB1H102K	CHIP C	1000PF	K	
C11			CC73GCH1H102J	CHIP C	1000PF	J	
C12			CK73HB1E103K	CHIP C	0.010UF	K	
C13			CC73HCH1H390J	CHIP C	39PF	J	
C14			CK73EB1A106K	CHIP C	10UF	K	
C15			CK73GB1H104K	CHIP C	0.10UF	K	
C16			CK73HB1H102K	CHIP C	1000PF	K	
C17			CC73HCH1H390J	CHIP C	39PF	J	
C18			CK73HB1H102K	CHIP C	1000PF	K	
C20			CK73GB1H104K	CHIP C	0.10UF	K	
C21			CK73HB1H102K	CHIP C	1000PF	K	
C22			CK73GB1H104K	CHIP C	0.10UF	K	
C23			CC73GCH1H820J	CHIP C	82PF	J	
C24			CK73GB1H104K	CHIP C	0.10UF	K	
C25,26			CK73HB1H102K	CHIP C	1000PF	K	
C27			C93-1400-05	CHIP C	1000PF	J	
C28			C93-1399-05	CHIP C	100PF	J	
C29,30			CK73GB1H104K	CHIP C	0.10UF	K	
C31			CC73GCH1H681J	CHIP C	680PF	J	
C32			CK73GB1H104K	CHIP C	0.10UF	K	
C33			CC73HCH1H101J	CHIP C	100PF	J	
C34			CK73FB1A225K	CHIP C	2.2UF	K	
C35			CK73EB1E105K	CHIP C	1.0UF	K	
C36			CK73FB0J106K	CHIP C	10UF	K	
C37			CK73FB1C105K	CHIP C	1.0UF	K	
C38,39			CK73HB1E103K	CHIP C	0.010UF	K	
C40			CC73HCH1H100D	CHIP C	10PF	D	
C41-50			CK73HB1E103K	CHIP C	0.010UF	K	
C51			CK73GB1H104K	CHIP C	0.10UF	K	
C52,53			CK73HB1E103K	CHIP C	0.010UF	K	
C55			CK73HB1E103K	CHIP C	0.010UF	K	
C100			CK73HB1E103K	CHIP C	0.010UF	K	

K : DDX6019 (North America) **E1** : DDX6029 **E2** : DDX6029Y (Europe)
X1 : DDX6039 (Australia) **R1** : DDX6039 (Latin America) **M1** : DDX6039 (Other Areas)

⚠ Indicates safety critical components.

PARTS LIST

VIDEO UNIT (X35-467x-xx)

Ref. No.	Add	New	Parts No.	Description			Destination
C101			CK73EB1A106K	CHIP C	10UF	K	
C102			CC73GCH1H470J	CHIP C	47PF	J	
C103			CK73HB1E103K	CHIP C	0.010UF	K	
C104			C92-1946-05	ELECTRO	47UF	16WV	
C105			CK73GB1H104K	CHIP C	0.10UF	K	
C107			CK73HB1E103K	CHIP C	0.010UF	K	
C110			C92-1904-05	ELECTRO	22UF	16WV	
C111			CK73GB1H102K	CHIP C	1000PF	K	
C112			CK73GB1A105K	CHIP C	1.0UF	K	
C113			C92-1904-05	ELECTRO	22UF	16WV	
C114			CK73GB1H104K	CHIP C	0.10UF	K	
C115,116			CK73GB1H102K	CHIP C	1000PF	K	
C118			CK73GB1H103K	CHIP C	0.010UF	K	
C120			CK73GB1H103K	CHIP C	0.010UF	K	
C122			CK73GB1H103K	CHIP C	0.010UF	K	
C124			CK73GB1H103K	CHIP C	0.010UF	K	
C126			CK73GB1H103K	CHIP C	0.010UF	K	
C127			CK73GB1H102K	CHIP C	1000PF	K	
C129			CK73GB1H103K	CHIP C	0.010UF	K	
C130			CK73GB1A105K	CHIP C	1.0UF	K	
C131			CC73GCH1H821J	CHIP C	820PF	J	
C132			CK73EB1A106K	CHIP C	10UF	K	
C133			CK73GB1A105K	CHIP C	1.0UF	K	
C134			CK73GB1H104K	CHIP C	0.10UF	K	
C135			CK73GB1H682K	CHIP C	6800PF	K	
C136			C93-1403-05	CHIP C	22UF	M	
C138			CK73GB1H104K	CHIP C	0.10UF	K	
C139			C92-1946-05	ELECTRO	47UF	16WV	
C140			CK73GB1H104K	CHIP C	0.10UF	K	
C141			CK73GB1H103K	CHIP C	0.010UF	K	
C142			CC73GCH1H050C	CHIP C	5.0PF	C	
C143			CC73GCH1H080D	CHIP C	8.0PF	D	M1E1E2
C143			CC73GCH1H080D	CHIP C	8.0PF	D	R1X1
C144-146			CK73GB1A105K	CHIP C	1.0UF	K	
C147			CK73GB1A474K	CHIP C	0.47UF	K	
C148			CK73HB1E103K	CHIP C	0.010UF	K	
C150			CK73HB1E103K	CHIP C	0.010UF	K	
C201			CK73DF1E106Z	CHIP C	10UF	Z	
C204			C92-1904-05	ELECTRO	22UF	16WV	
C205			CK73GB1H103K	CHIP C	0.010UF	K	
C206			CK73GB1H104K	CHIP C	0.10UF	K	
C207			CK73GB1H103K	CHIP C	0.010UF	K	
C208			CK73GB1H104K	CHIP C	0.10UF	K	
C209			C92-1945-05	ELECTRO	100UF	6.3WV	
C210			CK73GB1H103K	CHIP C	0.010UF	K	
C212			CK73GB1H103K	CHIP C	0.010UF	K	
C213			C92-1904-05	ELECTRO	22UF	16WV	
C214			CK73GB1H103K	CHIP C	0.010UF	K	
C217,218			CK73GB1H104K	CHIP C	0.10UF	K	
C219			CK73GB1A474K	CHIP C	0.47UF	K	
C220			CK73GB1H104K	CHIP C	0.10UF	K	
C221			CC73GCH1H270J	CHIP C	27PF	J	
C222			CK73GB1E183K	CHIP C	0.018UF	K	
C223			CK73GB0J225K	CHIP C	2.2UF	K	
C224			CK73FB0J106K	CHIP C	10UF	K	

Ref. No.	Add	New	Parts No.	Description			Destination
C225,226			CK73GB0J225K	CHIP C	2.2UF	K	
C227			CK73GB1H153K	CHIP C	0.015UF	K	
C228			CK73EB1E105K	CHIP C	1.0UF	K	
C229			CK73GB1H152K	CHIP C	1500PF	K	
C230			C92-1904-05	ELECTRO	22UF	16WV	
C231,232			CK73GB1H104K	CHIP C	0.10UF	K	
C233			CK73GB1H103K	CHIP C	0.010UF	K	
C234			CK73GB1H104K	CHIP C	0.10UF	K	
C235			CK73GB1H473K	CHIP C	0.047UF	K	
C236			C93-1398-05	CHIP C	220PF		
C237			CK73GB1H473K	CHIP C	0.047UF	K	
C239			CK73DF1E106Z	CHIP C	10UF	Z	
C240			CK73GB1H103K	CHIP C	0.010UF	K	
C241			CK73DF1E106Z	CHIP C	10UF	Z	
C242			CK73GB1H103K	CHIP C	0.010UF	K	
C243			CK73HB1E103K	CHIP C	0.010UF	K	
C245			CK73FB0J106K	CHIP C	10UF	K	
C246-248			C93-1283-05	CHIP C	1.0UF	K	
C249			C93-1270-05	CHIP C	3300PF	K	
C250			C93-1273-05	CHIP C	15PF	J	
C251			C93-1278-05	CHIP C	0.018UF	K	
C252			CK73GB1H104K	CHIP C	0.10UF	K	
C253			CK73DF1E106Z	CHIP C	10UF	Z	
C254			CK73EB1E105K	CHIP C	1.0UF	K	
C255			CC73GCH1H270J	CHIP C	27PF	J	
C257			CK73FB0J106K	CHIP C	10UF	K	
C258			CK73DF1E106Z	CHIP C	10UF	Z	
C259			CK73GB1H104K	CHIP C	0.10UF	K	
C261			CK73DF1E106Z	CHIP C	10UF	Z	
C262,263			CK73GB1H104K	CHIP C	0.10UF	K	
C264			CK73FB0J106K	CHIP C	10UF	K	
C271			CK73GB1A105K	CHIP C	1.0UF	K	
C272			CK73GB1H102K	CHIP C	1000PF	K	
CN1			E41-2208-05	FLAT CABLE CONNECTOR			
CN200			E41-2608-05	FLAT CABLE CONNECTOR			
CN203			E41-2642-05	PIN ASSY			
CN204			E41-2088-05	FLAT CABLE CONNECTOR			
CN205			E41-2613-05	FLAT CABLE CONNECTOR			
L1-4			L41-1005-33	SMALL FIXED INDUCTOR (10U)			
L5			L41-6895-39	SMALL FIXED INDUCTOR (6.8U,LF)			
L6			L41-8281-15	SMALL FIXED INDUCTOR (0.82U)			
L100			L41-1005-33	SMALL FIXED INDUCTOR (10U)			
L102-104			L41-1005-33	SMALL FIXED INDUCTOR (10U)			
L201			L33-2299-05	CHOKE COIL (4.7UH)			
L203			L41-1005-33	SMALL FIXED INDUCTOR (10U)			
L205			L41-1005-33	SMALL FIXED INDUCTOR (10U)			
L206			L19-0788-05	TRANSFORMER FOR CONVERTER			
L207			L33-2248-05	CHOKE COIL (100UH)			
X100			L77-2906-05	CRYSTAL RESONATOR (4.433619MHZ)			M1E1E2
X100			L77-2906-05	CRYSTAL RESONATOR (4.433619MHZ)			R1X1
X101			L77-2905-05	CRYSTAL RESONATOR (3.579545MHZ)			
R1			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R3			RK73HB1J103J	CHIP R	10K	J 1/16W	
R4,5			RK73HB1J000J	CHIP R	0.0	J 1/16W	

K : DDX6019 (North America) **E1** : DDX6029 **E2** : DDX6029Y (Europe)
X1 : DDX6039 (Australia) **R1** : DDX6039 (Latin America) **M1** : DDX6039 (Other Areas)

⚠ Indicates safety critical components.

PARTS LIST

VIDEO UNIT (X35-467x-xx)

Ref. No.	Add	New	Parts No.	Description			Destination
R7			RK73HB1J103J	CHIP R	10K	J 1/16W	
R8-10			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R12			RK73HB1J103J	CHIP R	10K	J 1/16W	
R14			RK73HB1J103J	CHIP R	10K	J 1/16W	
R16			RK73HB1J103J	CHIP R	10K	J 1/16W	
R17			RK73HB1J101J	CHIP R	100	J 1/16W	
R18			RK73HB1J621J	CHIP R	620	J 1/16W	
R20			RK73HB1J103J	CHIP R	10K	J 1/16W	
R21			RK73HB1J220J	CHIP R	22	J 1/16W	
R22			RK73HB1J221J	CHIP R	220	J 1/16W	
R23			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R24			RK73HB1J561J	CHIP R	560	J 1/16W	
R25			RK73HB1J103J	CHIP R	10K	J 1/16W	
R26			RK73HB1J102J	CHIP R	1.0K	J 1/16W	
R27			RK73HB1J103J	CHIP R	10K	J 1/16W	
R28,29			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R30,31			RK73HB1J103J	CHIP R	10K	J 1/16W	
R32			RK73HB1J100J	CHIP R	10	J 1/16W	
R33			RK73HB1J102J	CHIP R	1.0K	J 1/16W	
R34			RK73HH1J472D	CHIP R	4.7K	D 1/16W	
R35			RK73GH2A152D	CHIP R	1.5K	D 1/10W	
R36			RK73HB1J100J	CHIP R	10	J 1/16W	
R37			RK73HB1J102J	CHIP R	1.0K	J 1/16W	
R38,39			RK73HH1J472D	CHIP R	4.7K	D 1/16W	
R40			RK73HB1J102J	CHIP R	1.0K	J 1/16W	
R41			RK73HH1J473D	CHIP R	47K	D 1/16W	
R42			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R43			RK73HH1J683D	CHIP R	68K	D 1/16W	
R44			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R45			RK73HH1J153D	CHIP R	15K	D 1/16W	
R46			RK73HH1J101D	CHIP R	100	D 1/16W	
R47			RK73HH1J331D	CHIP R	330	D 1/16W	
R48			RK73HH1J182D	CHIP R	1.8K	D 1/16W	
R49			RK73HH1J332D	CHIP R	3.3K	D 1/16W	
R51			RK73HB1J300J	CHIP R	30	J 1/16W	
R52-54			RK73HB1J101J	CHIP R	100	J 1/16W	
R55			RK73HH1J153D	CHIP R	15K	D 1/16W	
R56-63			RK73HB1J101J	CHIP R	100	J 1/16W	
R64			RK73HH1J105D	CHIP R	1.0M	D 1/16W	
R65			RK73HH1J683D	CHIP R	68K	D 1/16W	
R66			RK73GH2A512D	CHIP R	5.1K	D 1/10W	
R67			RK73HB1J242J	CHIP R	2.4K	J 1/16W	
R68			RK73GH2A103D	CHIP R	10K	D 1/10W	
R69			RK73GH2A752D	CHIP R	7.5K	D 1/10W	
R70-72			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R73,74			RK73HB1J101J	CHIP R	100	J 1/16W	
R75			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R76			RK73HB1J101J	CHIP R	100	J 1/16W	
R78			RK73HB1J103J	CHIP R	10K	J 1/16W	
R79			RK73HB1J101J	CHIP R	100	J 1/16W	
R80,81			RK73HB1J153J	CHIP R	15K	J 1/16W	
R82,83			RK73HB1J561J	CHIP R	560	J 1/16W	
R84			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R85			RK73HB1J472J	CHIP R	4.7K	J 1/16W	
R86			RK73HB1J561J	CHIP R	560	J 1/16W	

Ref. No.	Add	New	Parts No.	Description			Destination
R87-89			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R90-93			RK73HB1J102J	CHIP R	1.0K	J 1/16W	
R95			RK73HB1J103J	CHIP R	10K	J 1/16W	
R98			RK73HB1J221J	CHIP R	220	J 1/16W	
R100			RK73HB1J681J	CHIP R	680	J 1/16W	
R101,102			RK73HB1J303J	CHIP R	30K	J 1/16W	
R103			RK73HB1J102J	CHIP R	1.0K	J 1/16W	
R104			RN73GH1J473D	CHIP R	47K	D 1/16W	
R105			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R110			RK73HB1J103J	CHIP R	10K	J 1/16W	
R111			RK73HB1J473J	CHIP R	47K	J 1/16W	
R112			RK73HB1J103J	CHIP R	10K	J 1/16W	
R113			RK73HB1J102J	CHIP R	1.0K	J 1/16W	
R117			RK73HB1J271J	CHIP R	270	J 1/16W	
R118,119			RK73GH2A102D	CHIP R	1.0K	D 1/10W	
R120			RN73GH1J183D	CHIP R	18K	D 1/16W	
R121			RK73GH2A472D	CHIP R	4.7K	D 1/10W	
R122			RK73HB1J101J	CHIP R	100	J 1/16W	
R124,125			RK73GH2A102D	CHIP R	1.0K	D 1/10W	
R126			RK73HB1J101J	CHIP R	100	J 1/16W	
R127			RK73GB2A000J	CHIP R	0.0	J 1/10W	
R128			RK73GH2A512D	CHIP R	5.1K	D 1/10W	
R129			RK73GH2A152D	CHIP R	1.5K	D 1/10W	
R130			RK73HB1J101J	CHIP R	100	J 1/16W	
R132			RK73GH2A472D	CHIP R	4.7K	D 1/10W	
R134			RN73GH1J222D	CHIP R	2.2K	D 1/16W	
R137,138			RK73GH2A102D	CHIP R	1.0K	D 1/10W	
R139			RK73HB1J561J	CHIP R	560	J 1/16W	
R143			RK73GH2A472D	CHIP R	4.7K	D 1/10W	
R144			RK73HB1J105J	CHIP R	1.0M	J 1/16W	
R145			RK73HB1J102J	CHIP R	1.0K	J 1/16W	
R146			RK73GH2A103D	CHIP R	10K	D 1/10W	
R147			RK73GH2A302D	CHIP R	3.0K	D 1/10W	
R149			RK73HB1J105J	CHIP R	1.0M	J 1/16W	
R150			RK73GH2A103D	CHIP R	10K	D 1/10W	
R151			RK73GH2A302D	CHIP R	3.0K	D 1/10W	
R152			RK73HB1J102J	CHIP R	1.0K	J 1/16W	
R153			RK73GH2A103D	CHIP R	10K	D 1/10W	
R154			RK73GH2A302D	CHIP R	3.0K	D 1/10W	
R155			RN73GH1J681D	CHIP R	680	D 1/16W	M1E1E2
R155			RN73GH1J681D	CHIP R	680	D 1/16W	R1X1
R156			RN73GH1J222D	CHIP R	2.2K	D 1/16W	
R157			RK73HB1J103J	CHIP R	10K	J 1/16W	
R158			RK73HB1J822J	CHIP R	8.2K	J 1/16W	
R159			RK73HB1J562J	CHIP R	5.6K	J 1/16W	
R162-164			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R166			RK73HB1J103J	CHIP R	10K	J 1/16W	
R169			RK73HB1J103J	CHIP R	10K	J 1/16W	
R172			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R173			RK73HB1J820J	CHIP R	82	J 1/16W	
R175			RK73HB1J101J	CHIP R	100	J 1/16W	
R176,177			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R178			RK73HB1J102J	CHIP R	1.0K	J 1/16W	
R179			RK73HB1J000J	CHIP R	0.0	J 1/16W	
R183			RK73HB1J101J	CHIP R	100	J 1/16W	

K : DDX6019 (North America) **E1** : DDX6029 **E2** : DDX6029Y (Europe)
X1 : DDX6039 (Australia) **R1** : DDX6039 (Latin America) **M1** : DDX6039 (Other Areas)

⚠ Indicates safety critical components.

PARTS LIST

VIDEO UNIT (X35-467x-xx)

Ref. No.	Add	New	Parts No.	Description			Destination
R184			RK73HB1J000J	CHIP R 0.0	J	1/16W	
R185			RK73HB1J101J	CHIP R 100	J	1/16W	
R186			RK73HB1J000J	CHIP R 0.0	J	1/16W	
R201			RK73GB2A000J	CHIP R 0.0	J	1/10W	
R202			RK73EB2E101J	CHIP R 100	J	1/4W	
R203-208			RK73EB2E220J	CHIP R 22	J	1/4W	
R210			RK73GB2A000J	CHIP R 0.0	J	1/10W	
R211			RK73EB2E331J	CHIP R 330	J	1/4W	
R213			RK73HB1J222J	CHIP R 2.2K	J	1/16W	
R214			RK73HB1J153J	CHIP R 15K	J	1/16W	
R215			RK73HB1J220J	CHIP R 22	J	1/16W	
R217			RN73GH1J433D	CHIP R 43K	D	1/16W	
R218			RK73GB2A515J	CHIP R 5.1M	J	1/10W	
R219			RK73GB2A104J	CHIP R 100K	J	1/10W	
R220			RK73GB2A000J	CHIP R 0.0	J	1/10W	
R221-223			RK73EB2E000J	CHIP R 0.0	J	1/4W	
R224			RK73GB2A220J	CHIP R 22	J	1/10W	
R225			RN73GH1J513D	CHIP R 51K	D	1/16W	
R226			RK73EB2E000J	CHIP R 0.0	J	1/4W	
R227			RK73GB2A682J	CHIP R 6.8K	J	1/10W	
R228			RK73GH2A203D	CHIP R 20K	D	1/10W	
R229			RK73HB1J104J	CHIP R 100K	J	1/16W	
R230			RK73GB2A100J	CHIP R 10	J	1/10W	
R231			RK73GH2A184D	CHIP R 180K	D	1/10W	
R232			RN73GH1J184D	CHIP R 180K	D	1/16W	
R233			RK73GH2A184D	CHIP R 180K	D	1/10W	
R234			RK73HB1J105J	CHIP R 1.0M	J	1/16W	
R235			RK73GH2A133D	CHIP R 13K	D	1/10W	
R236			RK73GB2A100J	CHIP R 10	J	1/10W	
R237			RK73GH2A184D	CHIP R 180K	D	1/10W	
R238,239			RK73HB1J101J	CHIP R 100	J	1/16W	
R240			RK73GB2A512J	CHIP R 5.1K	J	1/10W	
R241			RN73GH1J623D	CHIP R 62K	D	1/16W	
R242			RK73GB2A512J	CHIP R 5.1K	J	1/10W	
R243,244			RK73EB2E000J	CHIP R 0.0	J	1/4W	
R245			RK73HB1J333J	CHIP R 33K	J	1/16W	
R246-249			RK73GB2A220J	CHIP R 22	J	1/10W	
R250			RK73HB1J333J	CHIP R 33K	J	1/16W	
R251-254			RK73EB2E100J	CHIP R 10	J	1/4W	
R255			RN73GH1J4530D	CHIP R 453.0	D	1/16W	
R256			RK73GH2A203D	CHIP R 20K	D	1/10W	
R270			RK73GB2A105J	CHIP R 1.0M	J	1/10W	
R273			RK73HB1J000J	CHIP R 0.0	J	1/16W	
R274			RK73GH2A123D	CHIP R 12K	D	1/10W	
R276			RK73GB2A100J	CHIP R 10	J	1/10W	
R278,279			RK73GB2A181J	CHIP R 180	J	1/10W	
R280			RK73FB2B621J	CHIP R 620	J	1/8W	
R281			RK73GB2A432J	CHIP R 4.3K	J	1/10W	
R282			RK73GB2A912J	CHIP R 9.1K	J	1/10W	
R283			RK73GB2A303J	CHIP R 30K	J	1/10W	
R286			RK73GB2A181J	CHIP R 180	J	1/10W	
R289			RK73GH2A243D	CHIP R 24K	D	1/10W	
R297,298			RK73GB2A682J	CHIP R 6.8K	J	1/10W	
R299-303			RK73EB2E000J	CHIP R 0.0	J	1/4W	
R305			RK73GB2A000J	CHIP R 0.0	J	1/10W	

Ref. No.	Add	New	Parts No.	Description	Destination
R309			RN73GH1J244D	CHIP R 240K D 1/16W	
VR3			R32-0328-05	SEMI FIXED VARIABLE RESISTOR	
VR100			R32-0328-05	SEMI FIXED VARIABLE RESISTOR	
D2			MA2X335	VARIABLE CAPACITANCE DIODE	
D4			DA204U	DIODE	
D200-202			AVRM1608120M6A	VARISTOR	
D204			AVRM1608120M6A	VARISTOR	
D206			AVRM1608120M6A	VARISTOR	
D210,211			AVRM1608120M6A	VARISTOR	
D213			UDZS5.6B	ZENER DIODE	
D214			EP05Q04	DIODE	
D215			AVRM1608120M6A	VARISTOR	
D216			EC10QS04AG	DIODE	
D217			EP05Q04	DIODE	
D221			1SS355	DIODE	
D227			UDZS4.7B	ZENER DIODE	
D228			MA2S784-F	DIODE	
D229			UDZS4.7B	ZENER DIODE	
D230-233			UDZS5.1B	ZENER DIODE	
D234			DA204U	DIODE	
D235			AVRM1608120M6A	VARISTOR	
D236			DA204U	DIODE	
D237-239			AVRM1608120M6A	VARISTOR	
D240,241			EP05Q04	DIODE	
D244			AVRM1608120M6A	VARISTOR	
IC1			TC7SH08FU-F	MOS-IC	
IC2			TC7SH04FU-F	MOS-IC	
IC3			TC200G02G0104	MOS-IC	
IC4			NJM2107F-ZB	ANALOGUE IC	
IC5			TC7WH74FU-F	MOS-IC	
IC6			TC7WH126FU-F	MOS-IC	
IC7			TC7SH00FU-F	MOS-IC	
IC8			TC7S02FU-F	MOS-IC	
IC9			TC74LCX74FT	MOS-IC	
IC11			TC7SH04FU-F	MOS-IC	
IC12			TC7W08FU-F	MOS-IC	
IC13			TC7W32FU-F	MOS-IC	
IC14			TC7W04FU-F	MOS-IC	
IC100			TC7WH123FU-F	MOS-IC	
IC101			TC7SET32FU-F	MOS-IC	
IC102			TC7SH04FU-F	MOS-IC	
IC103			RB5P0090M	ANALOGUE IC	
IC104			TC7SET32FU-F	MOS-IC	
IC106			TC7SET04FU-F	MOS-IC	
IC200			XC6201P502PR	ANALOGUE IC	
IC201			XC6201P332PR	ANALOGUE IC	
IC202			MP1530DM-LF-Z	ANALOGUE IC	
IC204			OZ964ISN-C	ANALOGUE IC	
IC205			BR24L08FV-W	ROM IC	
IC207			NJM78M05DL1AZB	ANALOGUE IC	
Q1			2SC4097	TRANSISTOR	
Q2			DTC124EUA	DIGITAL TRANSISTOR	
Q3,4			2SC4081	TRANSISTOR	
Q5			2SA1576A	TRANSISTOR	

K : DDX6019 (North America) **E1** : DDX6029 **E2** : DDX6029Y (Europe)
X1 : DDX6039 (Australia) **R1** : DDX6039 (Latin America) **M1** : DDX6039 (Other Areas)

⚠ Indicates safety critical components.

PARTS LIST

VIDEO UNIT (X35-467x-xx)

Ref. No.	Add	New	Parts No.	Description			Destination
Q6			2SC4081	TRANSISTOR			
Q100			2SC4081	TRANSISTOR			
Q102			DTC143ZUA	DIGITAL TRANSISTOR			
Q103-106			UMZ1N	TRANSISTOR			
Q107			DTC143ZUA	DIGITAL TRANSISTOR			M1E1E2
Q107			DTC143ZUA	DIGITAL TRANSISTOR			R1X1
Q208			2SC4081	TRANSISTOR			
Q210			2SC4081	TRANSISTOR			
Q215,216			SI5504DC-E3	DUAL FET			
Q217			DTA123JUA	DIGITAL TRANSISTOR			
Q218			DTC123JUA	DIGITAL TRANSISTOR			
Q219			DTA123JUA	DIGITAL TRANSISTOR			
Q220			DTC123JUA	DIGITAL TRANSISTOR			
Q221			DTC124EUA	DIGITAL TRANSISTOR			
DVD UNIT (X37-1150-00)							
C1-3			CK73HB1A104K	CHIP C	0.10UF	K	
C4,5			CK73HB0J105K	CHIP C	1.0UF	K	
C6			CK73GB0J475K	CHIP C	4.7UF	K	
C7			CK73FB0J106K	CHIP C	10UF	K	
C8			CK73FB0J226M	CHIP C	22UF	M	
C10			CK73HB1A104K	CHIP C	0.10UF	K	
C14			CK73FB0J106K	CHIP C	10UF	K	
C15			CK73HB0J105K	CHIP C	1.0UF	K	
C16			CK73HB1A104K	CHIP C	0.10UF	K	
C17			CK73HB0J105K	CHIP C	1.0UF	K	
C18			CK73HB1H332K	CHIP C	3300PF	K	
C19			CK73HB1A104K	CHIP C	0.10UF	K	
C20			CK73FB0J106K	CHIP C	10UF	K	
C21			CK73FB0J226M	CHIP C	22UF	M	
C23			CK73HB1A104K	CHIP C	0.10UF	K	
C24			CC73GCH1H471J	CHIP C	470PF	J	
C25			CK73HB1A104K	CHIP C	0.10UF	K	
C26			CK73HB1C473K	CHIP C	0.047UF	K	
C27			CK73HB1A104K	CHIP C	0.10UF	K	
C28			CK73HB1E103K	CHIP C	0.010UF	K	
C29			CK73HB0J105K	CHIP C	1.0UF	K	
C31			CK73HB1E223K	CHIP C	0.022UF	K	
C32			CC73HCH1H470J	CHIP C	47PF	J	
C33			CC73GCH1H102J	CHIP C	1000PF	J	
C35			CC73GCH1H102J	CHIP C	1000PF	J	
C36			CC73GCH1H681J	CHIP C	680PF	J	
C37			CK73HB1H682K	CHIP C	6800PF	K	
C38			CK73HB0J105K	CHIP C	1.0UF	K	
C39			CC73GCH1H331J	CHIP C	330PF	J	
C40			CC73GCH1H102J	CHIP C	1000PF	J	
C41			CK73HB0J105K	CHIP C	1.0UF	K	
C42			CC73GCH1H681J	CHIP C	680PF	J	
C43			CK73HB1H222K	CHIP C	2200PF	K	
C44			CK73HB1H152K	CHIP C	1500PF	K	
C45			CK73HB1H102K	CHIP C	1000PF	K	
C46			CK73HB1A104K	CHIP C	0.10UF	K	
C47-52			CK73HB0J105K	CHIP C	1.0UF	K	
C53			CK73HB1A104K	CHIP C	0.10UF	K	
C54,55			CK73HB0J105K	CHIP C	1.0UF	K	
C56			C93-1228-05	CHIP C	1.0UF	M	

Ref. No.	Add	New	Parts No.	Description			Destination
C57,58			CK73HB0J105K	CHIP C	1.0UF	K	
C60			CK73HB1A104K	CHIP C	0.10UF	K	
C61			C93-1228-05	CHIP C	1.0UF	M	
C62,63			CC73HCH1H120J	CHIP C	12PF	J	
C64			CK73HB1E103K	CHIP C	0.010UF	K	
C66			CK73FB0J106K	CHIP C	10UF	K	
C67			C93-1228-05	CHIP C	1.0UF	M	
C68,69			CK73HB0J105K	CHIP C	1.0UF	K	
C70			CK73HB1A104K	CHIP C	0.10UF	K	
C72,73			CK73HB1A104K	CHIP C	0.10UF	K	
C76			CK73HB1A104K	CHIP C	0.10UF	K	
C80			CK73FB0J106K	CHIP C	10UF	K	
C81			CK73FB0J226M	CHIP C	22UF	M	
C82			CK73HB1A104K	CHIP C	0.10UF	K	
C83,84			C92-1908-05	ELECTRO	47UF	6.3WV	
C85,86			CK73HB1H102K	CHIP C	1000PF	K	
C87-90			CK73HB1E103K	CHIP C	0.010UF	K	
C91			CK73HB1E223K	CHIP C	0.022UF	K	
C92,93			CK73HB1E103K	CHIP C	0.010UF	K	
C94			CK73GB0J475K	CHIP C	4.7UF	K	
C95			CK73FB0J106K	CHIP C	10UF	K	
C96			CK73FB0J226M	CHIP C	22UF	M	
C97			CK73HB1E103K	CHIP C	0.010UF	K	
C98			CK73GB0J475K	CHIP C	4.7UF	K	
C99			CK73FB0J226M	CHIP C	22UF	M	
C101			CK73FB0J226M	CHIP C	22UF	M	
C102			C92-1908-05	ELECTRO	47UF	6.3WV	
C104			CC73HCH1H100D	CHIP C	10PF	D	
C105-108			CC73HCH1H151J	CHIP C	150PF	J	
C109			CK73HB1H102K	CHIP C	1000PF	K	
C308			CK73HB1E103K	CHIP C	0.010UF	K	
C309			CK73HB1A104K	CHIP C	0.10UF	K	
C312,313			CK73HB1A104K	CHIP C	0.10UF	K	
C315,316			CK73HB0J105K	CHIP C	1.0UF	K	
C319-323			CK73HB0J105K	CHIP C	1.0UF	K	
C325-342			CK73HB0J105K	CHIP C	1.0UF	K	
C344			CK73HB0J105K	CHIP C	1.0UF	K	
C347			CC73HCH1H120J	CHIP C	12PF	J	
C348			CC73HCH1H060D	CHIP C	6.0PF	D	
C353			CK73GB1A105K	CHIP C	1.0UF	K	
C361			CK73HB1A104K	CHIP C	0.10UF	K	
C362			CC73GCH1E392J	CHIP C	3900PF	J	
C363			CK73HB1A104K	CHIP C	0.10UF	K	
C364			CC73GCH1E392J	CHIP C	3900PF	J	
C365-367			CC73GCH1H681J	CHIP C	680PF	J	
C370			CC73GCH1H681J	CHIP C	680PF	J	
C384			CK73HB1A104K	CHIP C	0.10UF	K	
C385			CK73FB0J226M	CHIP C	22UF	M	
C386			CK73FB0J106K	CHIP C	10UF	K	
C388			CK73FB0J226M	CHIP C	22UF	M	
C389			CK73FB0J106K	CHIP C	10UF	K	
C390			CK73HB1E103K	CHIP C	0.010UF	K	
C391			CK73HB0J105K	CHIP C	1.0UF	K	
C392			CK73FB0J226M	CHIP C	22UF	M	
C394			CK73FB0J226M	CHIP C	22UF	M	

K : DDX6019 (North America) **E1** : DDX6029 **E2** : DDX6029Y (Europe)
X1 : DDX6039 (Australia) **R1** : DDX6039 (Latin America) **M1** : DDX6039 (Other Areas)

⚠ Indicates safety critical components.

PARTS LIST

DVD UNIT (X37-1150-00)

Ref. No.	Add	New	Parts No.	Description	Destination
C396			CK73HB1A104K	CHIP C 0.10UF K	
C397			CK73FB0J226M	CHIP C 22UF M	
C398-404			CK73HB0J105K	CHIP C 1.0UF K	
C405			CK73FB0J226M	CHIP C 22UF M	
C408			CK73FB0J226M	CHIP C 22UF M	
C411			CK73GB0J475K	CHIP C 4.7UF K	
C412			CK73HB1H102K	CHIP C 1000PF K	
C413			CK73GB0J475K	CHIP C 4.7UF K	
C415			CK73HB1H102K	CHIP C 1000PF K	
C416			CK73FB0J226M	CHIP C 22UF M	
C417			CK73HB1H102K	CHIP C 1000PF K	
C418			CK73HB1A104K	CHIP C 0.10UF K	
C419			CK73HB0J105K	CHIP C 1.0UF K	
C420-422			CK73HB1A104K	CHIP C 0.10UF K	
C423			CK73GB0J475K	CHIP C 4.7UF K	
C425			CK73FB0J226M	CHIP C 22UF M	
C426,427			CC73GCH1H101J	CHIP C 100PF J	
C428-433			CK73HB1A104K	CHIP C 0.10UF K	
C434,435			CK73HB1E223K	CHIP C 0.022UF K	
C436			CK73HB1A104K	CHIP C 0.10UF K	
C440			CK73HB0J105K	CHIP C 1.0UF K	
C442			CK73HB1A104K	CHIP C 0.10UF K	
C501			CK73HB1H102K	CHIP C 1000PF K	
CN2			E41-2595-05	FLAT CABLE CONNECTOR	
CN3			E41-2622-05	FLAT CABLE CONNECTOR	
CN5			E41-2625-05	FLAT CABLE CONNECTOR	
CN6			E41-2050-05	SOCKET FOR PIN ASSY	
CN9			E41-2603-05	FLAT CABLE CONNECTOR	
CN10			E41-2624-05	FLAT CABLE CONNECTOR	
CN11			E41-2594-05	FLAT CABLE CONNECTOR	
L1-5			L92-0365-05	CHIP FERRITE	
L301			L92-0365-05	CHIP FERRITE	
X1			L77-2870-05	CRYSTAL RESONATOR (16.897849M)	
X4			L77-2886-05	CRYSTAL RESONATOR (27.00MHZ)	
CP1-4			RK74HB1J103J	CHIP-COM 10K J 1/16W	
CP5-9			RK74HB1J330J	CHIP-COM 33 J 1/16W	
CP10			RK74HB1J820J	CHIP-COM 82 J 1/16W	
CP302-310			RK74HB1J220J	CHIP-COM 22 J 1/16W	
CP312-318			RK74HB1J220J	CHIP-COM 22 J 1/16W	
CP319,320			RK74HB1J470J	CHIP-COM 47 J 1/16W	
CP322,323			RK74HB1J472J	CHIP-COM 4.7K J 1/16W	
CP324			RK74HB1J101J	CHIP-COM 100 J 1/16W	
CP326-331			RK74HB1J472J	CHIP-COM 4.7K J 1/16W	
CP336			RK74HB1J472J	CHIP-COM 4.7K J 1/16W	
CP337			RK74HB1J102J	CHIP-COM 1.0K J 1/16W	
CP338-342			RK74HB1J472J	CHIP-COM 4.7K J 1/16W	
R1			RK73GH2A101D	CHIP R 100 D 1/10W	
R2,3			RK73HB1J104J	CHIP R 100K J 1/16W	
R5-7			RK73HB1J103J	CHIP R 10K J 1/16W	
R8			RK73HB1J104J	CHIP R 100K J 1/16W	
R10			RK73HB1J103J	CHIP R 10K J 1/16W	
R11			RK73HB1J225J	CHIP R 2.2M J 1/16W	
R12			RK73HB1J103J	CHIP R 10K J 1/16W	
R15			RK73GH2A113D	CHIP R 11K D 1/10W	

Ref. No.	Add	New	Parts No.	Description	Destination
R16			RK73GH2A273D	CHIP R 27K D 1/10W	
R18			RK73HB1J125J	CHIP R 1.2M J 1/16W	
R21			RK73GH2A153D	CHIP R 15K D 1/10W	
R22			RK73HB1J105J	CHIP R 1.0M J 1/16W	
R23			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R24			RK73GH2A123D	CHIP R 12K D 1/10W	
R25-27			RK73HB1J103J	CHIP R 10K J 1/16W	
R28,29			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R30-32			RK73HB1J132J	CHIP R 1.3K J 1/16W	
R33			RK73HB1J103J	CHIP R 10K J 1/16W	
R34,35			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R36			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R37			RK73HB1J132J	CHIP R 1.3K J 1/16W	
R38,39			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R40,41			RK73HB1J473J	CHIP R 47K J 1/16W	
R45			RK73HB1J105J	CHIP R 1.0M J 1/16W	
R46			RK73HB1J152J	CHIP R 1.5K J 1/16W	
R47			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R49			RK73HB1J273J	CHIP R 27K J 1/16W	
R51			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R52			RK73HB1J132J	CHIP R 1.3K J 1/16W	
R53			RK73HB1J103J	CHIP R 10K J 1/16W	
R55			RK73HB1J202J	CHIP R 2.0K J 1/16W	
R58			RK73GH2A273D	CHIP R 27K D 1/10W	
R61			RK73GB2A121J	CHIP R 120 J 1/10W	
R62			R92-3475-05	CHIP R 0.27 F 1/2W	
R63			RK73GB2A241J	CHIP R 240 J 1/10W	
R64			RK73HB1J222J	CHIP R 2.2K J 1/16W	
R65,66			RK73HB1J103J	CHIP R 10K J 1/16W	
R67			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R68,69			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R70,71			RK73GH2A123D	CHIP R 12K D 1/10W	
R72			RK73GH2A333D	CHIP R 33K D 1/10W	
R73			RK73GH2A203D	CHIP R 20K D 1/10W	
R74			RK73HB1J123J	CHIP R 12K J 1/16W	
R75			RK73HB1J152J	CHIP R 1.5K J 1/16W	
R76			RK73HB1J122J	CHIP R 1.2K J 1/16W	
R77			RK73HB1J511J	CHIP R 510 J 1/16W	
R78			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R79			R92-5031-05	CHIP R 5.1 F 1/8W	
R80			RK73GB2A3R6J	CHIP R 3.6 J 1/10W	
R81			RK73HB1J134J	CHIP R 130K J 1/16W	
R82			RK73HB1J103J	CHIP R 10K J 1/16W	
R83			RK73HB1J820J	CHIP R 82 J 1/16W	
R84			RK73HB1J103J	CHIP R 10K J 1/16W	
R85			RK73HB1J330J	CHIP R 33 J 1/16W	
R86-88			RK73HB1J820J	CHIP R 82 J 1/16W	
R91			RK73GH2A101D	CHIP R 100 D 1/10W	
R92			RK73HB1J104J	CHIP R 100K J 1/16W	
R93			RK73HB1J222J	CHIP R 2.2K J 1/16W	
R95			R92-5031-05	CHIP R 5.1 F 1/8W	
R96,97			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R100,101			RK73HB1J510J	CHIP R 51 J 1/16W	
R102,103			RK73HB1J202J	CHIP R 2.0K J 1/16W	
R104			RK73HB1J103J	CHIP R 10K J 1/16W	

K : DDX6019 (North America) **E1** : DDX6029 **E2** : DDX6029Y (Europe)
X1 : DDX6039 (Australia) **R1** : DDX6039 (Latin America) **M1** : DDX6039 (Other Areas)

⚠ Indicates safety critical components.

PARTS LIST

DVD UNIT (X37-1150-00)

Ref. No.	Add	New	Parts No.	Description			Destination
R105			RK73HB1J132J	CHIP R 1.3K	J	1/16W	
R106,107			RK73HB1J103J	CHIP R 10K	J	1/16W	
R108			RK73HB1J223J	CHIP R 22K	J	1/16W	
R109			RK73HB1J123J	CHIP R 12K	J	1/16W	
R115			RK73GH2A132D	CHIP R 1.3K	D	1/10W	
R116,117			RK73HB1J1R0J	CHIP R 1.0	J	1/16W	
R201-204			RK73GB2A000J	CHIP R 0.0	J	1/10W	
R205-207			RK73HB1J000J	CHIP R 0.0	J	1/16W	
R302			RK73GH2A151D	CHIP R 150	D	1/10W	
R307			RK73HH1J202D	CHIP R 2.0K	D	1/16W	
R312			RK73HB1J220J	CHIP R 22	J	1/16W	
R313-316			RK73HB1J472J	CHIP R 4.7K	J	1/16W	
R332			RK73HB1J472J	CHIP R 4.7K	J	1/16W	
R333			RK73HB1J681J	CHIP R 680	J	1/16W	
R335			RK73HB1J220J	CHIP R 22	J	1/16W	
R338			RK73HB1J103J	CHIP R 10K	J	1/16W	
R340			RK73HB1J472J	CHIP R 4.7K	J	1/16W	
R342,343			RK73HB1J103J	CHIP R 10K	J	1/16W	
R347-350			RK73GH2A752D	CHIP R 7.5K	D	1/10W	
R351,352			RK73GH2A472D	CHIP R 4.7K	D	1/10W	
R353-356			RK73GB2A241J	CHIP R 240	J	1/10W	
R357,358			RK73GH2A472D	CHIP R 4.7K	D	1/10W	
R362,363			RK73HB1J121J	CHIP R 120	J	1/16W	
R386			RK73HB1J101J	CHIP R 100	J	1/16W	
R387			RK73HB1J220J	CHIP R 22	J	1/16W	
R388			RK73HB1J472J	CHIP R 4.7K	J	1/16W	
R393			RK73HB1J472J	CHIP R 4.7K	J	1/16W	
R394,395			RK73HB1J220J	CHIP R 22	J	1/16W	
R396-398			RK73HB1J472J	CHIP R 4.7K	J	1/16W	
R399-405			RK73HB1J103J	CHIP R 10K	J	1/16W	
R406,407			RK73GH2A750D	CHIP R 75	D	1/10W	
R410			RK73GH2A123D	CHIP R 12K	D	1/10W	
R412			RK73GH2A392D	CHIP R 3.9K	D	1/10W	
R414-416			RK73HB1J102J	CHIP R 1.0K	J	1/16W	
R417			RK73HB1J101J	CHIP R 100	J	1/16W	
R418			RK73HB1J103J	CHIP R 10K	J	1/16W	
R419,420			RK73HB1J472J	CHIP R 4.7K	J	1/16W	
R421			RK73HB1J103J	CHIP R 10K	J	1/16W	
R422			RK73HB1J1R0J	CHIP R 1.0	J	1/16W	
R423			RK73HB1J103J	CHIP R 10K	J	1/16W	
R424-427			RK73HB1J472J	CHIP R 4.7K	J	1/16W	
R428,429			RK73HB1J220J	CHIP R 22	J	1/16W	
R432,433			RK73HB1J472J	CHIP R 4.7K	J	1/16W	
R435			RK73HB1J2R2J	CHIP R 2.2	J	1/16W	
R436			RK73HB1J470J	CHIP R 47	J	1/16W	
R438			RK73HB1J1R0J	CHIP R 1.0	J	1/16W	
R439			RK73HB1J102J	CHIP R 1.0K	J	1/16W	
R440			RK73GH2A391D	CHIP R 390	D	1/10W	
R441			RK73HB1J105J	CHIP R 1.0M	J	1/16W	
R442			RK73HB1J220J	CHIP R 22	J	1/16W	
R443			RK73HB1J101J	CHIP R 100	J	1/16W	
R444			RK73HB1J472J	CHIP R 4.7K	J	1/16W	
R445			RK73HB1J223J	CHIP R 22K	J	1/16W	
R446,447			RK73HB1J472J	CHIP R 4.7K	J	1/16W	
R448,449			RK73HB1J123J	CHIP R 12K	J	1/16W	

Ref. No.	Add	New	Parts No.	Description			Destination
R454			RK73HB1J431J	CHIP R 430	J	1/16W	
R457			RK73GH2A111D	CHIP R 110	D	1/10W	
R459,460			R92-3350-05	CHIP R 2.2	F	1/10W	
S3			S68-0822-05	PUSH SWITCH			
S4			S68-0895-05	PUSH SWITCH			
S5			S68-0822-05	PUSH SWITCH			
D1,2			MAZS0510M	ZENER DIODE			
D3,4			1SS402-F	DIODE			
D5,6			DAP202U	DIODE			
D8			1SS402-F	DIODE			
D10			MA2S111	DIODE			
D73			MAZS0510M	ZENER DIODE			
IC1			AN22022A-V	ANALOGUE IC			
IC2			AN41204A	ANALOGUE IC			
IC3			M29W400DB55N6E	ROM IC			
IC4			MN103S71F	MOS-IC			
IC5			S-80829CNPF	ANALOGUE IC			
IC8			S-80813CNPF	ANALOGUE IC			
IC9			NJM2880U115	ANALOGUE IC			
IC10			NJM2886DL2-33	ANALOGUE IC			
IC11			S-24CS04AFT	ROM IC			
IC12			AK4382AVT	ANALOGUE IC			
IC30			ES6218SAF-K	MOS-IC			
IC40			TAR5S50-F	ANALOGUE IC			
IC41			NJM4580V-ZB	ANALOGUE IC			
IC42			74CBT16210DGGR	MOS-IC			
IC46			NJM2871AF04	ANALOGUE IC			
IC47			NJM2575	ANALOGUE IC			
IC48			74CBT3245APWR	MOS-IC			
IC50		*	W16ET70NE78V4	ROM IC			
IC51			MT48LC8M16P75I	DRAM IC			
IC52			S-1170B20UC	ANALOGUE IC			
IC53			NJM2130F3	ANALOGUE IC			
IC54			S-1170B33UC	ANALOGUE IC			
IC56			HD74LV1GT00AVS	MOS-IC			
IC57-60			HD74LV2G74AU-E	MOS-IC			
IC61,62			HD74LV1G32AVSE	MOS-IC			
IC65			NJU7042	ANALOGUE IC			
Q1,2			2SK3018	FET			
Q7,8			2SB0970	TRANSISTOR			
Q9,10			2SJ0536	FET			
Q11-14			DTA114YUA	DIGITAL TRANSISTOR			
Q16			2SK210-F(Y)	FET			
Q17			SSM3J13T-F	FET			
Q18			2SB0970	TRANSISTOR			
Q19,20			DTC114EUA	DIGITAL TRANSISTOR			
Q21			2SJ0536	FET			
Q22			DTA114YUA	DIGITAL TRANSISTOR			

DAUGHTER UNIT (X89-2882-71)

D1			B30-1566-05	LED (1608,RED)			
D2-7			B30-1731-05	LED (1608,BLUE)			
D9			B30-1731-05	LED (1608,BLUE)			
C9,10			CK73GB1A105K	CHIP C 1.0UF	K		

K : DDX6019 (North America) **E1** : DDX6029 **E2** : DDX6029Y (Europe)
X1 : DDX6039 (Australia) **R1** : DDX6039 (Latin America) **M1** : DDX6039 (Other Areas)

⚠ Indicates safety critical components.

PARTS LIST

DAUGHTER UNIT (X89-2882-71)

Ref. No.	Add	New	Parts No.	Description	Destination
S1-8			S70-0919-05	TACT SWITCH	
D8			AVRM1608120M6A	VARISTOR	
D10-17			AVRM1608120M6A	VARISTOR	
IC1		*	GP1US301XP	ANALOGUE IC	
DVD MECHANISM ASSY (X92-5430-00) (DVS-7600V)					
1	1B		A10-5084-31	CHASSIS	
2	2B		A10-5083-21	CHASSIS ASSY	
3	3A		A11-1650-01	SUB CHASSIS	
4	1B		D10-4763-32	ARM	
5	1B		D10-4764-23	ARM	
7	2B		D10-4768-12	SLIDER	
8	2B		D10-4769-03	SLIDER	
9	2A		D10-4771-02	SLIDER	
10	2A		D10-4772-03	SLIDER	
11	2A		D10-4773-13	SLIDER	
12	2B		D10-4774-03	LEVER	
13	2B		D10-4776-23	ARM	
14	3A		D10-4795-23	ARM	
21	2B		D13-2298-04	GEAR	
22	2B		D13-2299-04	GEAR	
23	2B		D13-2303-04	GEAR	
24	2B		D13-2305-04	GEAR	
25	2B		D13-2306-04	GEAR	
26	1A		D13-2308-04	GEAR	
27	1A		D13-2309-04	GEAR	
28	3B		D13-2316-24	GEAR ASSY	
29	2B		D13-2300-14	GEAR	
30	2A		D14-0799-14	ROLLER	
31	2A		D14-1006-04	ROLLER	
34	3B		D21-2476-14	SHAFT	
36	1B		D39-0259-05	DAMPER	
37	2B		E39-0556-05	LEAD WIRE	
VFC1	2A		E39-0806-05	FLAT CABLE	
38	3A		F07-1134-12	COVER	
39	3A		F09-1930-14	SHEET	
40	3A		F09-1960-04	SHEET	
41	3B		F09-2806-04	SHEET	
44	3A		F09-1870-04	SHEET	
43	3B		G02-1541-04	FLAT SPRING	
45	2B		G01-3192-04	EXTENSION SPRING	
46	2A		G01-3194-24	EXTENSION SPRING	
47	1B		G01-3195-14	EXTENSION SPRING	
48	2A		G01-3206-24	TORSION COIL SPRING	
49	2A		G01-3207-24	TORSION COIL SPRING	
50	3A		G01-3209-04	COMPRESSION SPRING	
51	3A		G02-1468-04	FLAT SPRING	
52	2B		G02-1504-43	FLAT SPRING ASSY	
53	1B		G02-1466-24	FLAT SPRING	
54	3B		G02-1488-04	FLAT SPRING	
55	3A		G02-1473-14	FLAT SPRING	
56	1B		G11-3614-04	CUSHION (PORON)	
57	3B		G11-3622-04	CUSHION (PORON)	
58	2B		J11-0654-13	CLAMPER	
59	1A		J22-0042-12	MOUNTING HARDWARE	
60	1B		J22-0043-12	MOUNTING HARDWARE	
61	3B		J22-0044-03	MOUNTING HARDWARE	
62	1A		J22-0103-23	MOUNTING HARDWARE ASSY	
63	2B		J22-0177-14	MOUNTING HARDWARE	
64	1A		J90-1066-41	GUIDE	
65	1B		J90-1067-13	GUIDE	
66	1B		J90-1087-32	GUIDE	
67	1B		J90-1088-32	GUIDE	
A	2A		N09-6143-05	MACHINE SCREW	
B	1A		N09-6144-05	MACHINE SCREW	
C	3B		N09-6145-05	MACHINE SCREW	
D	3B		N09-6156-05	MACHINE SCREW (M1.4X1.6)	
E	1B		N09-6230-05	MACHINE SCREW	
F	1A		N19-2192-04	FLAT WASHER	
G	3B		N09-6133-05	MACHINE SCREW (SERRATED)	
H	3A		N09-6134-05	STEPPED SCREW (STEPPED)	
J	3A		N09-6203-05	MACHINE SCREW	
K	3A		N09-6221-15	MACHINE SCREW (P TITE 1.4x3.5)	
L	2A		N09-6308-05	MACHINE SCREW (P TITE 1.4x4.5)	
M	2A		N19-2183-14	FLAT WASHER	
VM1	2A		T42-1329-05	MOTOR ASSY	
VM2	3A		T42-1330-05	MOTOR ASSY	
71	2A		X94-2010-01	ROLLER ASSY	
VM3	2B		X94-2000-01	NOTOR ASSY (LO)	
VPU1	3B		X94-2030-00	OPTICAL PICKUP ASSY	

K : DDX6019 (North America) **E1** : DDX6029 **E2** : DDX6029Y (Europe)
X1 : DDX6039 (Australia) **R1** : DDX6039 (Latin America) **M1** : DDX6039 (Other Areas)

⚠ Indicates safety critical components.