9. EXPLODED VIEWS AND PARTS LIST

NOTES : • *Parts marked by " * " are generally unavailable because they are not in our Master Spare Parts List.*
• *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
• *Screw adjacent to▽ mark on the product are used for disassembly.*
• *For the applying amount of lubricants or glue, follow the instructions in this manual. (In the case of no amount instructions,apply as you think it appropriate.)*

9.1 PACKING

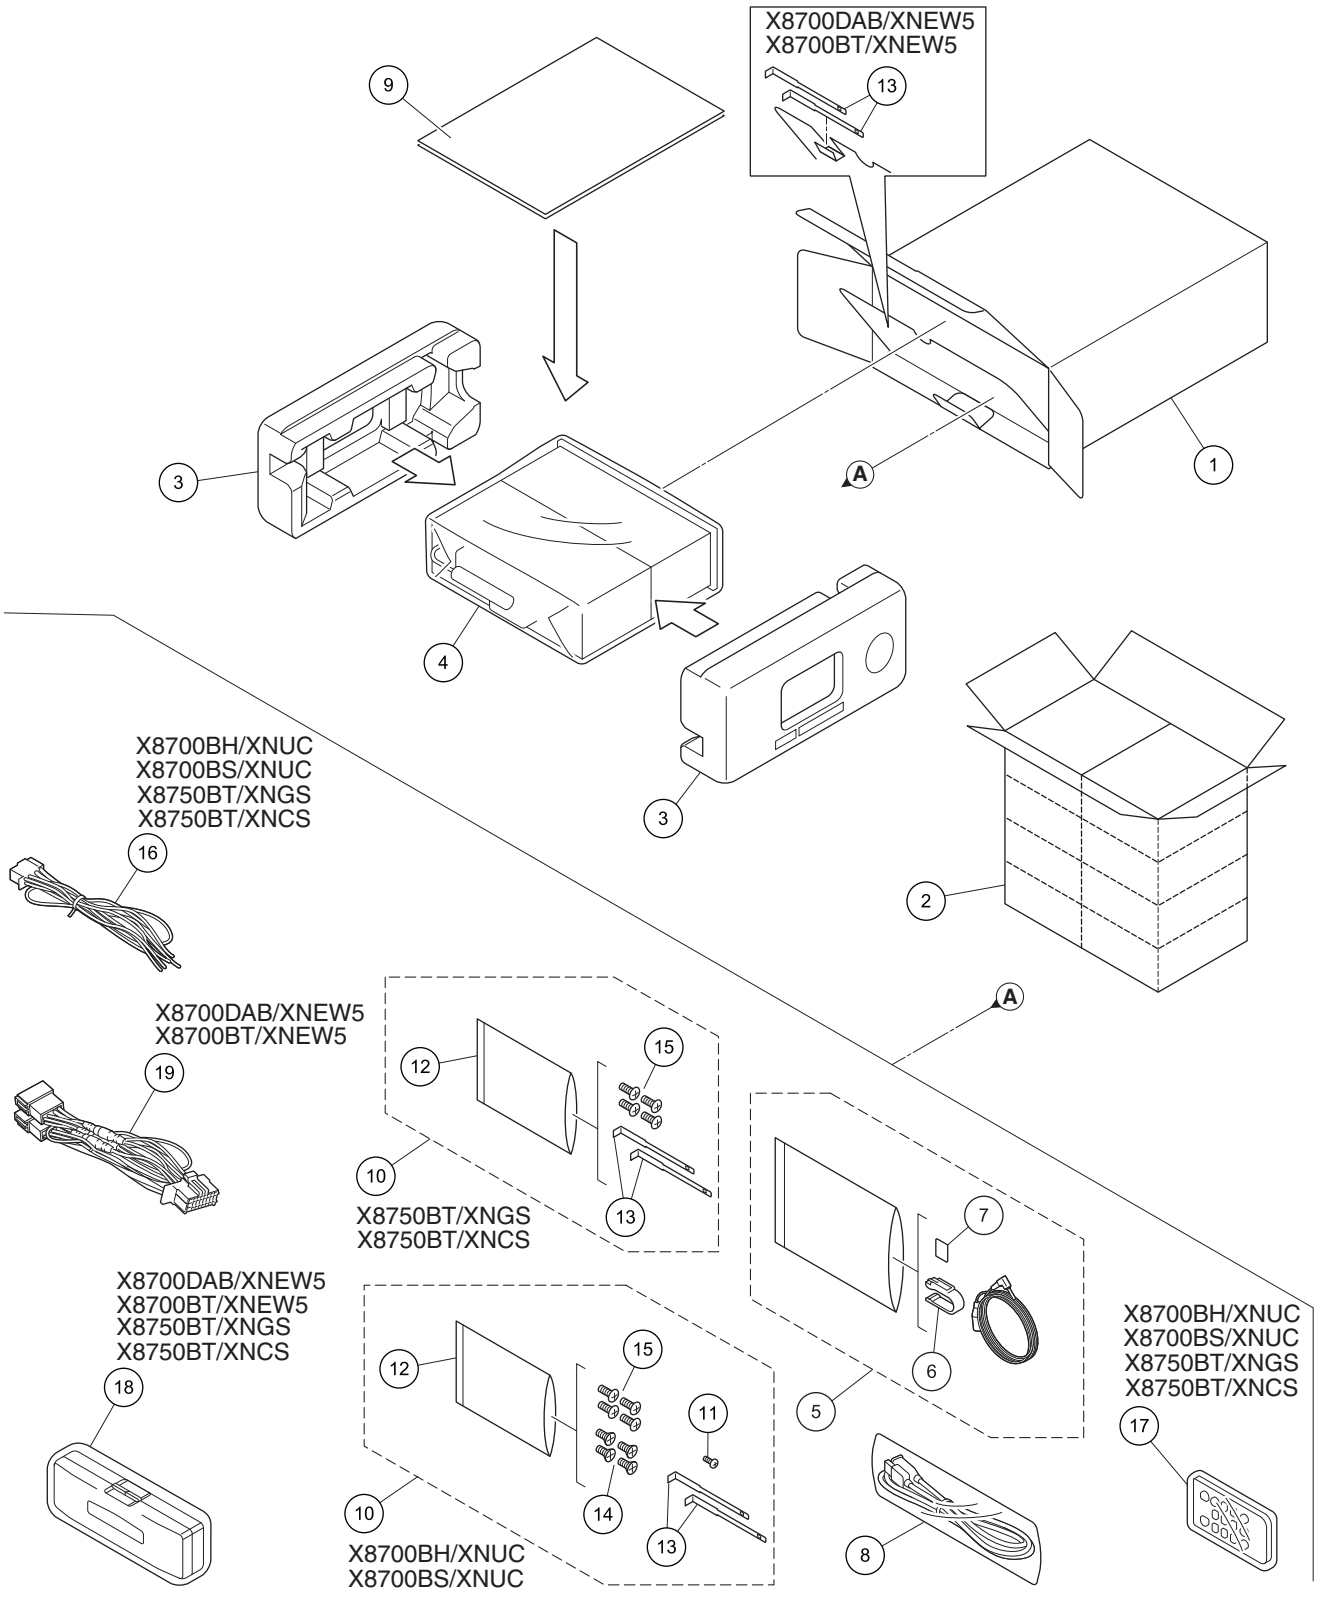

(1) PACKING SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	Unit Box	See Contrast table (2)
	2	Contain Box	See Contrast table (2)
	3	Protector	CHP4594
	4	Polyethylene Bag	See Contrast table (2)
	5	Microphone Assy	CPM1083
	6	Holder	CZN7192
	7	Cushion	CZN7193
	8	USB Extended Cable	CDP1587
*	9-1	Warranty Card	See Contrast table (2)
	9-2	Owner's Manual	See Contrast table (2)
	9-3	IM CD-ROM	See Contrast table (2)
	9-4	Installation Manual	See Contrast table (2)
	9-5	Quick Start Guide	See Contrast table (2)
*	9-6	Caution Card	See Contrast table (2)
*	9-7	Caution Card	See Contrast table (2)
*	9-8	Caution Card	See Contrast table (2)
*	10	Accessory Assy	See Contrast table (2)
	11	Screw	See Contrast table (2)
	12	Polyethylene Bag	See Contrast table (2)
	13	Handle	QNC3021
	14	Screw	See Contrast table (2)
	15	Screw	See Contrast table (2)
	16	Cord Assy	See Contrast table (2)
	17	Card Remote Control Unit	See Contrast table (2)
	18	Case Assy	See Contrast table (2)
	19	Cord Assy	See Contrast table (2)

(2) CONTRAST TABLE

DEH-X8700BH/XNUC, DEH-X8700BS/XNUC, DEH-X8700DAB/XNEW5, DEH-X8700BT/XNEW5, DEH-X8750BT/XNGS and DEH-X8750BT/XNCS are constructed the same except for the following:

Mark	No.	Description	DEH-X8700BH /XNUC	DEH-X8700BS /XNUC	DEH-X8700DAB /XNEW5	DEH-X8700BT /XNEW5	DEH-X8750BT /XNGS	DEH-X8750BT /XNCS
	1	Unit Box	QHG3729	QHG3731	QHG3728	QHG3730	QHG3733	QHG3732
	2	Contain Box	QHL3729	QHL3731	QHL3728	QHL3730	QHL3733	QHL3732
	4	Polyethylene Bag	CEG1173	CEG1173	QEG3001	QEG3001	QEG3001	QEG3001
*	9-1	Warranty Card	QRY3001	QRY3001	CRY1376	CRY1376	Not used	Not used
	9-2	Owner's Manual	QRD3260	QRD3260	QRB3441	QRB3441	QRD3262	QRD3261
	9-3	IM CD-ROM	Not used	Not used	QPJ3028	QPJ3028	Not used	Not used
	9-4	Installation Manual	Not used	Not used	QRD3259	QRD3259	Not used	Not used
	9-5	Quick Start Guide	Not used	Not used	QRD3258	QRD3258	Not used	Not used
*	9-6	Caution Card	Not used	Not used	CRP1438	CRP1438	Not used	Not used
*	9-7	Caution Card	Not used	Not used	CRP1441	CRP1441	Not used	Not used
*	9-8	Caution Card	Not used	Not used	CRP1481	Not used	Not used	Not used
*	10	Accessory Assy	QEA3008	QEA3008	Not used	Not used	QEA3009	QEA3009
	11	Screw	BPZ20P060FTC	BPZ20P060FTC	Not used	Not used	Not used	Not used
	12	Polyethylene Bag	CEG1160	CEG1160	Not used	Not used	CEG1160	CEG1160
	14	Screw	CRZ50P090FTC	CRZ50P090FTC	Not used	Not used	Not used	Not used
	15	Screw	TRZ50P080FTC	TRZ50P080FTC	Not used	Not used	TRZ50P080FTC	TRZ50P080FTC
	16	Cord Assy	CDP1484	CDP1484	Not used	Not used	CDP1484	CDP1484
	17	Card Remote Control Unit	QXE1044	QXE1044	Not used	Not used	QXE1044	QXE1044
	18	Case Assy	Not used	Not used	YXA5856	YXA5856	YXA5856	YXA5856
	19	Cord Assy	Not used	Not used	QDP3072	QDP3072	Not used	Not used

Owner's Manual,Installation Manual

Part No.	Language
QRD3260	English, French, Spanish(Espanol)
QRB3441	Russian
QRD3258	English, French, Italian, Spanish(Espanol), German, Dutch, Russian
QRD3259	English, French, Italian, Spanish(Espanol), German, Dutch, Russian
QRD3261	English, Spanish(Espanol), Portuguese(B)
QRD3262	English, Traditional Chinese, Arabic, Persian

9.2 EXTERIOR

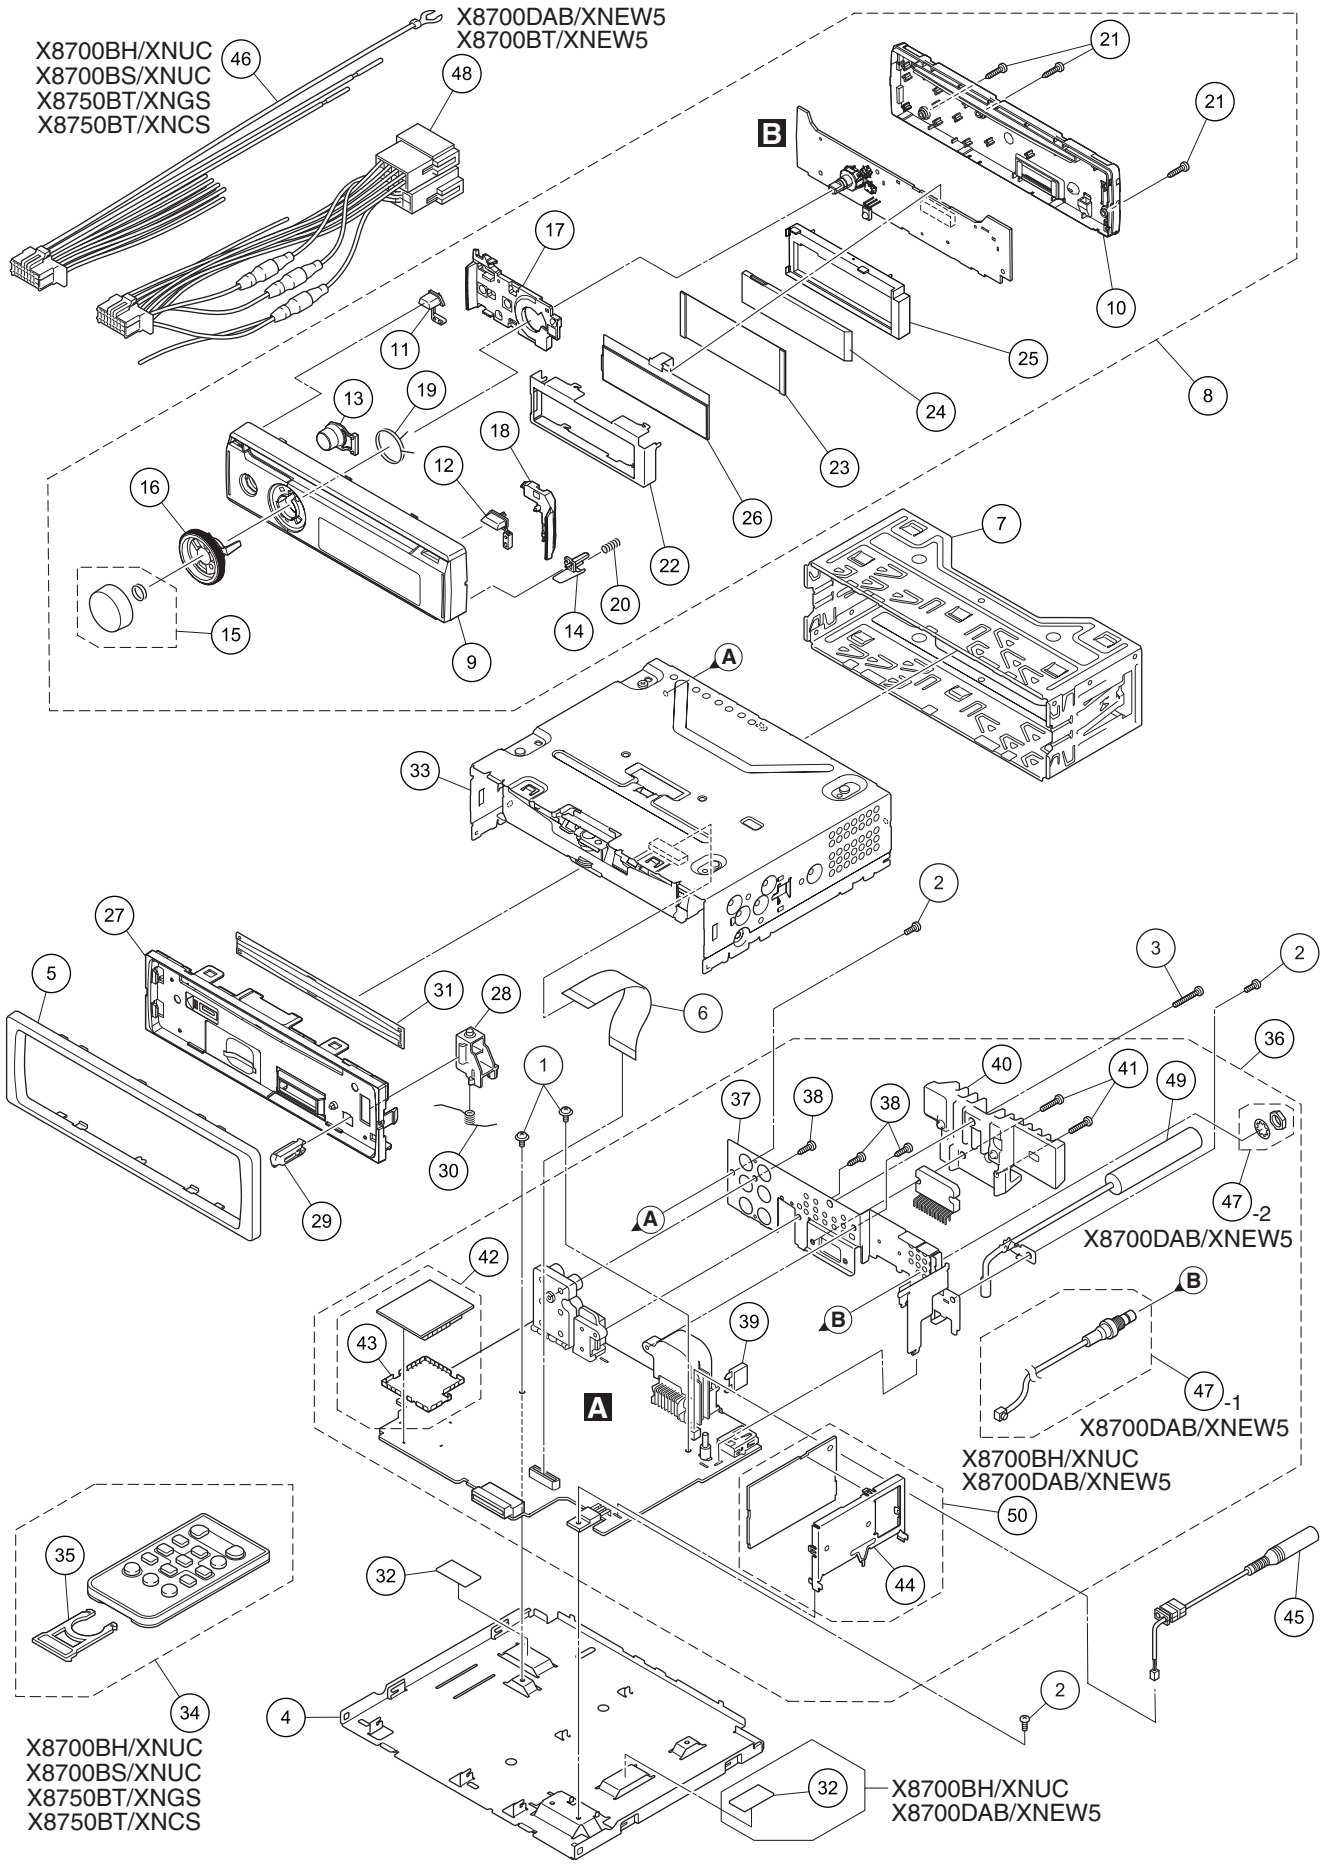
X8700DAB/XNEW5
X8700BT/XNEW5
X8700BH/XNUC
X8700BS/XNUC
X8750BT/XNGS
X8750BT/XNCS
X8700DAB/XNEW5
X8700BH/XNUC
X8700DAB/XNEW5
X8700BH/XNUC
X8700BS/XNUC
X8750BT/XNGS
X8750BT/XNCS
X8700BH/XNUC
X8700DAB/XNEW5

(1) EXTERIOR SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	Screw	ASZ26P050FTC
	2	Screw	BSZ26P060FTC
	3	Screw	BSZ26P120FTC
	4	Case	See Contrast table (2)
	5	Panel	QNS3820
	6	Cable	QDE3029
	7	Holder	QNC3020
	8	Detachable Grille Assy	See Contrast table (2)
	9	Grille Unit	See Contrast table (2)
	10	Cover	QNS3817
	11	Button (MIX)	QAC3192
	12	Button (EJECT)	QAC3193
	13	Button (PHONE)	QAC3194
	14	Button (DETACH)	QAC3195
	15	Knob Unit	QXA4283
	16	Lever	QAA3044
	17	Lighting Conductor	QNV3106
	18	Lighting Conductor	QNV3107
	19	Spring	QBH3008
	20	Spring	CBH2210
	21	Screw	BPZ20P100FTC
	22	Holder	QNC3095
	23	Sheet	QNM3122
	24	Lighting Conductor	QNV3105
	25	Holder	QNV3111
	26	STN LCD	CAW2053
	27	Panel	QNS3669
	28	Arm	QNV3025
	29	Button	QNV3026
	30	Spring	QBH3001
	31	Cover	QNM3029
	32	Sheet	QNM3105
	33	CD Mechanism Module (S11.6)	CXK5804
	34	Card Remote Control Unit	See Contrast table (2)
	35	Cover	See Contrast table (2)
	36	Tuner Amp Unit	See Contrast table (2)
	37	Holder	See Contrast table (2)
	38	Screw	BPZ26P080FTC
⚠	39	Fuse (10 A)	YEK5001
	40	Heat Sink	See Contrast table (2)
	41	Screw	BSZ26P120FTC
	42	BT Module	YWX5052
	43	Shield Case	YNC5123
	44	Holder	See Contrast table (2)
	45	Cord Assy	QDE3032
	46	Cord Assy	See Contrast table (2)
	47	Antenna Cable Assy	See Contrast table (2)
	48	Cord Assy	See Contrast table (2)
	49	Antenna Cable (JA401)	YDH5001
	50	BE Core Unit (U501)	See Contrast table (2)

(2) CONTRAST TABLE

DEH-X8700BH/XNUC, DEH-X8700BS/XNUC, DEH-X8700DAB/XNEW5, DEH-X8700BT/XNEW5, DEH-X8750BT/XNGS and DEH-X8750BT/XNCS are constructed the same except for the following:

Mark	No.	Description	DEH-X8700BH /XNUC	DEH-X8700BS /XNUC	DEH-X8700DAB /XNEW5	DEH-X8700BT /XNEW5	DEH-X8750BT /XNGS	DEH-X8750BT /XNCS
	4	Case	QNB3028	QNB3029	QNB3028	QNB3029	QNB3029	QNB3029
	8	Detachable Grille Assy	QXA4329	QXA4331	QXA4328	QXA4330	QXA4332	QXA4332
	9	Grille Unit	QXA4307	QXA4309	QXA4281	QXA4308	QXA4310	QXA4310
	34	Card Remote Control Unit	QXE1044	QXE1044	Not used	Not used	QXE1044	QXE1044
	35	Cover	CNS7068	CNS7068	Not used	Not used	CNS7068	CNS7068
	36	Tuner Amp Unit	QWM3829	QWM3847	QWM3828	QWM3830	QWM3831	QWM3832
	37	Holder	QNC3098	QNC3096	QNC3097	QNC3098	QNC3098	QNC3098
	40	Heat Sink	QNR3010	QNR3010	QNR3010	QNR3010	QNR3002	QNR3010
	44	Holder	CND7288	Not used	CND7288	Not used	Not used	Not used
	46	Cord Assy	CDP1484	CDP1484	Not used	Not used	CDP1484	CDP1484
	47	Antenna Cable Assy	Not used	Not used	QXA4122	Not used	Not used	Not used
	48	Cord Assy	Not used	Not used	QDP3072	QDP3072	Not used	Not used
	50	BE Core Unit (U501)	CWE2518	Not used	CWE2517 (Tuner Unit)	Not used	Not used	Not used

9.3 CD MECHANISM MODULE

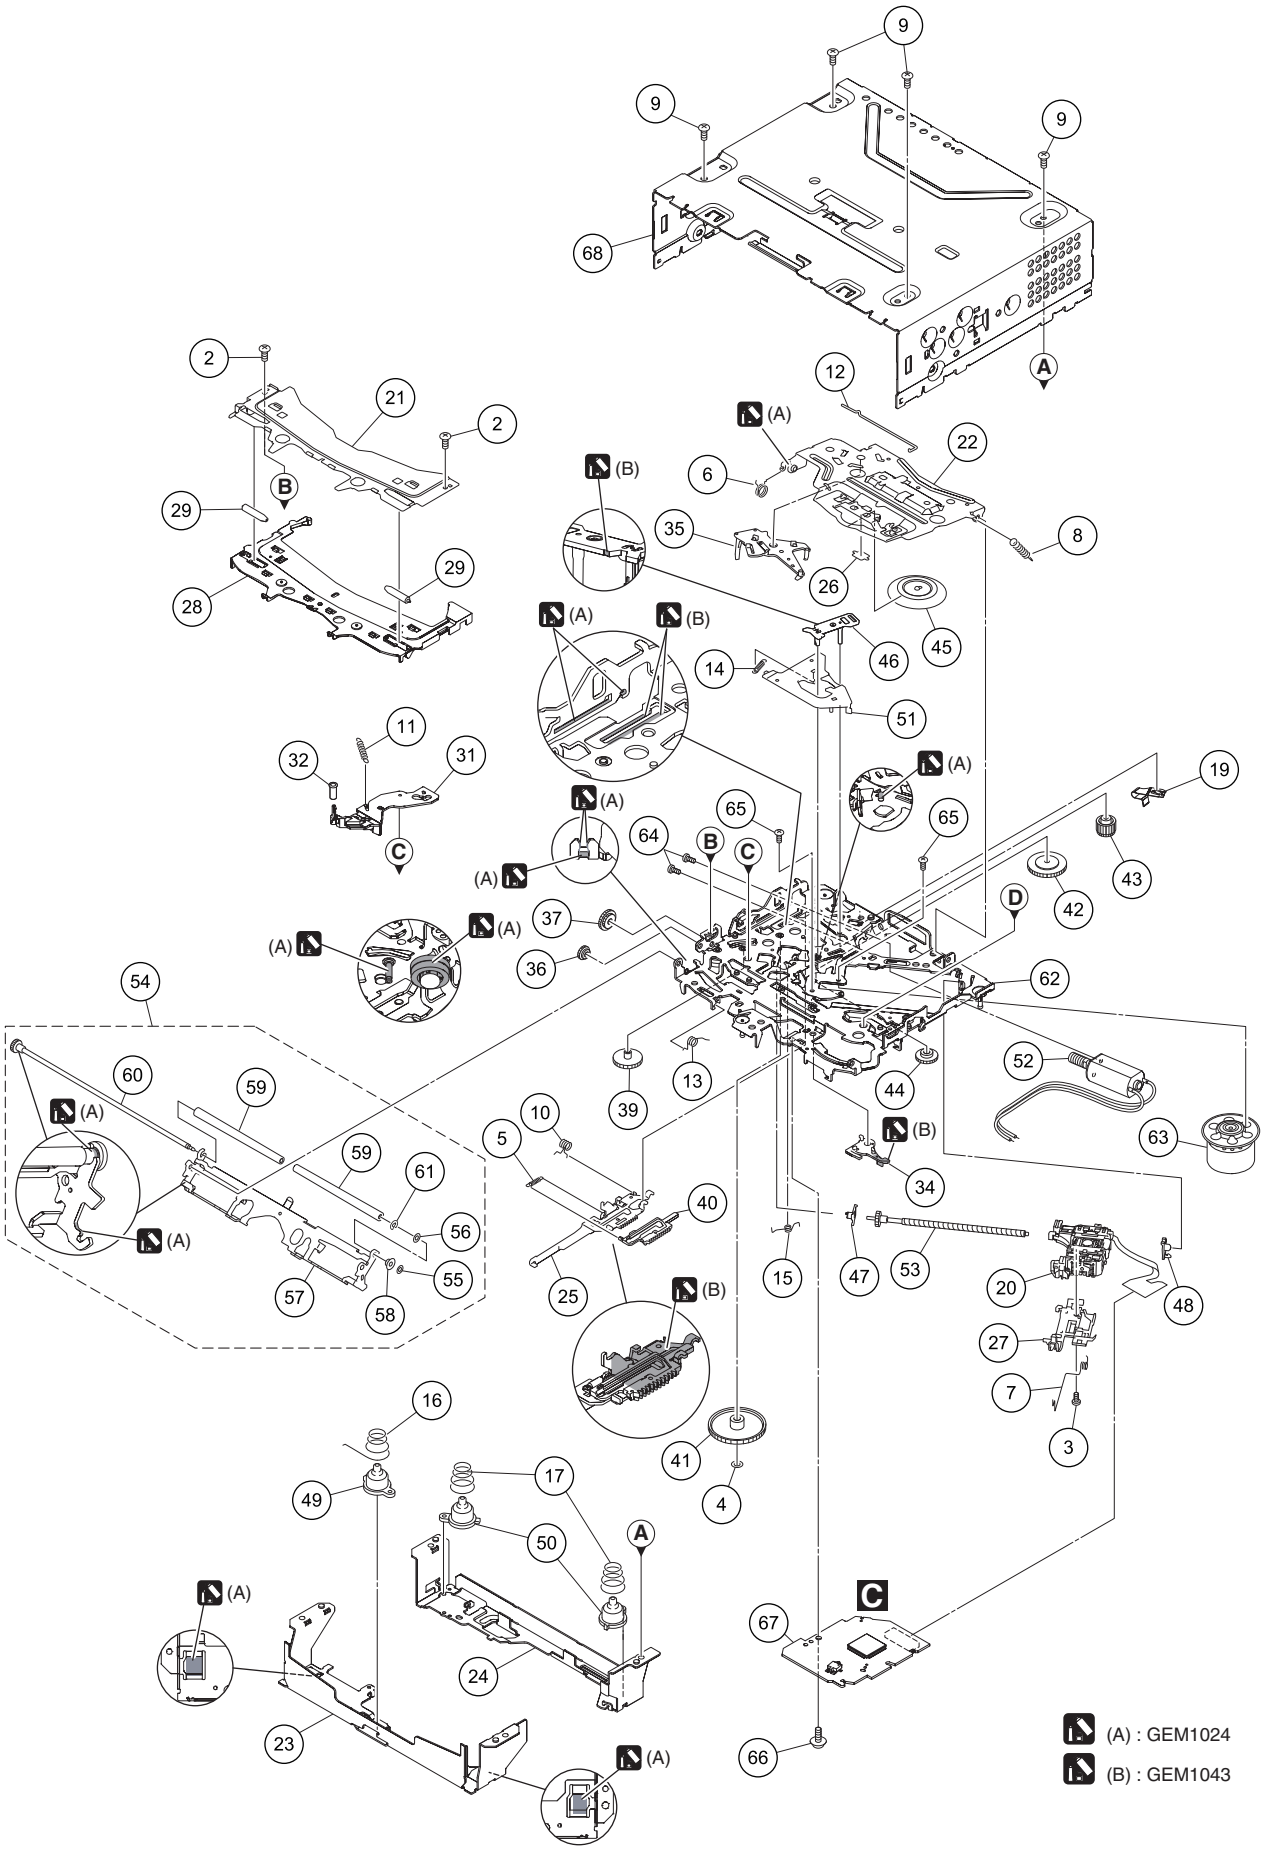

CD MECHANISM MODULE SECTION PARTS LIST

Mark No.	Description	Part No.
1	.....	
2	Screw	BSZ20P040FTC
3	Screw(M2 x 4)	CBA1835
4	Washer	CBF1038
5	Spring	CBH3010
6	Spring	CBH2855
7	Spring	CBH2856
8	Spring	CBH2860
9	Screw	BSZ26P060FTC
10	Spring	CBH3011
11	Coil Spring	CBH3095
12	Spring	CBH3014
13	Spring	CBH3015
14	Spring	CBH3016
15	Spring	CBH3017
16	Spring	CBH3086
17	Spring	CBH3019
18	.....	
19	Leaf Spring	CBL1824
20	Pickup Unit(P10.6)(Service)	CXX3556
21	Bracket	CND4553
22	Arm	CND6406
23	Bracket	CND6127
24	Bracket	CND5710
25	Lever	CND5398
26	Sheet	CNN3678
27	Rack	CNV8342
28	Guide	CNW2240
29	Roller	CNW1172
30	.....	
31	Arm	CNW2241
32	Roller	CNW1175
33	.....	
34	Arm	CNW1177
35	Arm	CNW1178
36	Gear	CNW1180
37	Gear	CNW1181
38	.....	
39	Gear	CNW1183
40	Rack	CNW1184
41	Gear	CNW1185
42	Gear	CNW1186
43	Gear	CNW1187
44	Gear	CNW2287
45	Clamper	CNW1190
46	Arm	CNW1192
47	Holder	CNW1193
48	Holder	CNW1194
49	Damper	CNW1197
50	Damper	CNW1198
51	Arm	CNW1726
52	Motor Unit(M2)(LOAD/CRG)	CXC4026
53	Screw Unit	CXC8894
54	Arm Assy	CXE4840
55	Washer	CBF1037
56	Washer	CBF1038
57	Arm	CND6242
58	Collar	CNV6906
59	Roller	CNW1196
60	Gear Unit	CXE6655
61	Washer	YE15FTC
62	Chassis Unit	CXE4528
63	Motor Unit(M1)(SPDL)	CXE2273
64	Screw	JFZ20P025FTC
65	Screw	JGZ17P022FTC
66	Screw	EBA1028
67	CD Core Unit (S11.6STD)	CWX4023
68	Chassis	CNA3181

12. ELECTRICAL PARTS LIST

NOTE:

- *Parts whose parts numbers are omitted are subject to being not supplied.*
- *The part numbers shown below indicate chip components.*

  Chip Resistor

  RS1/◯S◯◯◯J,RS1/◯◯S◯◯◯J

  Chip Capacitor (except for CQS.....)

  CKS....., CCS....., CSZS.....
- *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
- *Meaning of the figures and others in the parentheses in the parts list.*

  Example) IC 301 is on the point (face A, 91 of x-axis, and 111 of y-axis) of the corresponding PC board.

  IC 301 (A, 91, 111) IC NJM2068V
- *The expression of the unit in this manual is shown by u instead of μ. Please do not make a mistake.*

A:DEH-X8700BH/XNUC

B:DEH-X8700BS/XNUC

C:DEH-X8700DAB/XNEW5

D:DEH-X8700BT/XNEW5

E:DEH-X8750BT/XNGS

F:DEH-X8750BT/XNCS

Unit Number : QWM3829(A)

Unit Number : QWM3847(B)

Unit Number : QWM3828(C)

Unit Number : QWM3830(D)

Unit Number : QWM3831(E)

Unit Number : QWM3832(F)

Unit Name : Tuner Amp Unit

Unit Number : QWM3845

Unit Name : Keyboard Unit

Unit Number : CWX4023

Unit Name : CD Core Unit (S11.6STD)

A

Unit Number : QWM3829(A)
Unit Number : QWM3847(B)
Unit Number : QWM3828(C)
Unit Number : QWM3830(D)
Unit Number : QWM3831(E)
Unit Number : QWM3832(F)
Unit Name : Tuner Amp Unit

MISCELLANEOUS

Circuit Symbol and No.		Part No.
IC 151	(A,82,114) IC	PM9012A
IC 181	(A,108,107) DC/DC Conv IC	NJW4132U2
IC 201	(A,16,109) DC/DC Conv IC	AN33014UA
IC 271	(A,29,48) Regulator IC	MM3479A18P
IC 281	(A,21,46) Regulator IC	MM3411A33N
IC 321	(A,82,141) Power AMP IC	PA2032A
IC 371	(A,64,87) Conv IC	WM8761BGED
IC 391	(A,139,60) Regulator IC	NJM2878F3-05
IC 401	(A,145,86) Tuner IC(A,C)	TEF6688HN
	(A,145,86) Tuner IC(B,D,E,F)	TEF6686HN
IC 451	(A,134,77) Regulator IC	MM3571A33P
IC 531	(A,150,50) IC(A,C)	S-1200B33-M5
IC 541	(A,152,56) Regulator IC(A,C)	S-1172B12-E6
IC 551	(A,149,64) Regulator IC(C)	S-1172B33-E6
IC 561	(A,15,83) DC/DC Conv IC(C)	KBD9876EFJ
IC 601	(A,108,64) IC(A,B,C,E)	PEQ403A8 (* NSP)
	(A,108,64) IC(D,F)	PEQ406A8 (* NSP)
IC 603	(A,128,45) IC	S-80827CNMC-B8M
IC 604	(A,102,81) IC(B)	TC7SH126FU
IC 605	(A,99,81) L-MOS AND Gate(B)	TC7SET08FUS1
IC 651	(A,71,67) Flash Blank UC IC	R5S726B0D216FP
IC 701	(A,44,69) RAM IC	M12L64164A-5TG2Y
IC 721	(A,35,91) Regulator IC	S-1155B12-U5
IC 731	(A,74,88) IC	PEB162A8 (* NSP)
IC 741	(A,86,52)Flash Memory(A,B,C,D)	MX25L4006EM2I-12G
IC 831	(A,120,22) Regulator IC	BD00IA5WEFJ
IC 881	(A,56,92) IC	337S3959
IC 901	(A,15,62) DC/DC Conv IC	KBD9876EFJ
IC 931	(A,28,56) Regulator IC	S-1172B33-E6
IC 941	(A,141,43) Regulator IC	BD00FC0EEFJ
Q 121	(A,49,108) Chip Transistor(E)	RN4982
Q 191	(A,116,106) Transistor(A,C)	LSAR523UB
Q 192	(A,118,104) Resistor Built-IN TR(A,C)	LTC014EEB
Q 301	(A,13,129) Transistor	IMH23
Q 302	(A,21,129) Transistor	IMH23
Q 303	(A,29,129) Transistor	IMH23
Q 351	(A,59,131) Bipolar TR	LSCR523UB
Q 352	(A,65,128) Transistor	EMD52
Q 353	(A,69,127) Resistor Built-IN TR	LTC014EEB
Q 401	(A,129,86) Bipolar TR(A)	MMBT2369L

Circuit Symbol and No.		Part No.
Q 402	(A,129,89) Bipolar TR(A)	MMBT2369L
Q 403	(A,138,83) Bipolar TR(A)	MMBT2369L
Q 404	(A,132,85) Bipolar TR(A)	MMBT2369L
Q 471	(A,121,86) Bipolar TR(C)	2SB1132
Q 473	(A,119,79) Resistor Built-IN TR(C)	LTC014EEB
Q 701	(A,35,83) Bipolar TR	LSAR523UB
Q 771	(A,157,40) Bipolar TR	KTD2092
Q 772	(A,153,46) Transistor	EMD52
Q 841	(A,108,29) Bipolar TR	LSAR523UB
Q 842	(A,111,30) Resistor Built-IN TR	LTC014EEB
Q 881	(A,51,86) Bipolar TR	LSAR523UB
Q 921	(A,22,53) Transistor	2SD2153
Q 922	(A,21,58) Transistor	EMD52
Q 951	(A,145,129) Chip Transistor	HN1C01FU
Q 961	(A,95,120) Resistor Built-IN TR	LTC014EEB
D 121	(B,51,131) Diode	DZ2S068C
D 122	(B,43,131) Diode	DZ2S068C
D 123	(B,52,129) Diode	DZ2S068C
D 182	(A,104,103) Schottky Diode	RB551VM-30
D 201	(A,21,108) Diode	RB060M-30
D 202	(B,51,116) Diode	RB056L-40
D 351	(A,58,128) Rectifier Diod	DA2J101
D 352	(A,59,128) Diode	DZ2J082M0
D 353	(A,64,131) Rectifier Diode	DAN202UM
D 451	(A,134,70) Rectifier Diode	DAN202UM
D 452	(A,126,78) Rectifier Diode(A,C)	DAN202UM
D 541	(B,151,50) Rectifier Diode(A,C)	DAN202UM
D 542	(B,144,50) Rectifier Diode(A,C)	DAN202UM
D 561	(A,14,88) Diode(C)	RB056L-40
D 562	(B,12,89) Diode(C)	CRG03
D 564	(A,7,87) Diode(A)	CRG03
D 601	(A,110,75) Schottky Diode(A,B,C,D)	RB751SM-40
D 602	(A,114,76) Schottky Diode(A,B,C,D)	RB751SM-40
D 771	(A,157,46) Diode	DZ2J082M0
D 832	(A,121,28) Rectifier Diode	DAN202UM
D 901	(A,14,67) Diode	RB056L-40
D 902	(B,9,73) Diode	CRG03
D 903	(B,26,53) Diode	CRG03
D 904	(B,28,53) Diode	CRG03
D 922	(B,22,55) Diode	DZ2J056M0
D 923	(B,14,43) Rectifier Diode	DA2J101
D 924	(B,16,49) Schottky Diode(B)	DB2J31400
D 951	(A,135,123) Diode	DZ2J075M0
D 952	(A,135,125) Diode	DZ2J068M0
D 961	(B,105,124) Diode	CRG03
D 981	(A,136,131) Diode	D1F60-5053
D 982	(A,136,127) Diode	D1F60-5053
D 991	(B,95,126) Diode	CRG03
L 121	(A,58,104) Inductor	CTF1389
L 122	(A,52,104) Inductor	CTF1389
L 151	(A,93,114) Inductor	LCTAW6R8J2520
L 181	(A,101,109) Choke Coil	CTH1561
L 201	(A,164,126) Inductor	CTF1713
L 202	(A,26,105) SMD SPL Inductor	CTH1524
L 251	(A,16,34) Inductor	CTF1786
L 252	(A,16,32) Inductor	CTF1786
L 371	(A,60,95) Chip Ferrite Bead	DTL1107
L 402	(A,139,99) Inductor	LCTAW150J2520
L 404	(A,137,101) Inductor	CTF1389
L 406	(A,151,77) Inductor	CTF1786

Circuit Symbol and No.		Part No.
L 408	(A,151,101) Inductor	LCMAR27J1608
L 561	(A,14,94) SMD SPL Inductor(C)	CTH1521
L 651	(A,85,60) Chip Beads	VTL1127
L 653	(A,48,51) Chip Ferrite Bead	DTL1107
L 701	(A,33,77) Chip Ferrite Bead	DTL1107
L 731	(B,77,87) Inductor	CTF1389
L 901	(A,12,74) SMD SPL Inductor	CTH1521
L 981	(A,116,140) Choke Coil 600 uH	CTH1432
T 401	(A,146,98) Variable Coil	CTC1215
X 401	(A,153,92) Crystal Resonator 9.216 MHz	CSS1867
X 601	(A,94,65) Resonator 20.000 MHz	CSS1795
X 651	(A,87,65) Resonator 12.0 MHz	YSS5005
X 652	(A,78,83) Resonator 16.93 MHz	CSS1794
P 301	(A,38,127) Poly Switch	FSMD075-24R
P 402	(A,152,111) Surge Absorber	HSPC16701B02
P 472	(A,127,97) Poly Switch(B)	FSMD110-24R
	(A,127,97) Poly Switch(C)	FSMD020-R
BZ601	(A,88,28) Buzzer	CPV1062
VA801	(B,108,16) SMD Varistor	MLV0603ES012V0010N
VA802	(B,109,16) SMD Varistor	MLV0603ES012V0010N
VA803	(B,114,16) SMD Varistor	MLV0603ES012V0010N
VA804	(B,113,16) SMD Varistor	MLV0603ES012V0010N
VA805	(B,111,16) SMD Varistor	MLV0603ES012V0010N
VA806	(B,116,16) SMD Varistor	MLV0603ES012V0010N
VA807	(B,117,16) SMD Varistor	MLV0603ES012V0010N
VA808	(B,122,12) SMD Varistor	MLV0603ES012V0010N
U 501	(A,164,76) Be Core Unit(A)	CWE2518
	(A,164,76) Tuner Unit(C)	CWE2517
CN121	(A,154,124) Connector	B2B-EH
CN251	(A,49,33) Connector	CKS6346
CN751	(A,118,37) Connector	VKN1192
CN802	(A,113,3) Connector	CKS6452
JA101	(A,146,142) Connector(B)	CKS3806
JA121	(A,46,140) Jack	YKS5001
JA201	(A,165,135) USB Jack	CKN1105
JA301	(A,23,137) Pin Jack	XKB7001
JA401	(A,159,115) ANT Pigtail Cable	YDH5001
JA981	(A,117,140) Connector	CKM1613
	BT Module	YWX5052
⚠	Fuse (10 A)	YEK5001

RESISTORS

R 102	(B,146,131) (B)	RS1/10SR473J
R 103	(A,150,133) (B)	RS1/16SS102J
R 104	(A,149,131) (B)	RS1/16SS102J
R 105	(A,148,131) (B)	RS1/16SS102J
R 106	(A,147,131) (B)	RS1/16SS102J
R 107	(A,151,133) (B)	RS1/16SS181J
R 108	(B,150,133) (B)	RS1/10SR223J
R 109	(B,150,135) (B)	RS1/10SR223J
R 110	(A,152,133) (B)	RS1/16SS181J
R 123	(A,53,104)	RS1/10SR0R0J
R 124	(A,58,111)	RS1/10SR102J
R 125	(A,58,109)	RS1/10SR102J
R 126	(A,59,104)	RS1/10SR0R0J
R 127	(A,54,102)	RS1/10SR0R0J
R 128	(A,55,109) (E)	RS1/10SR471J
R 131	(A,53,110) (E)	RS1/10SR0R0J
R 151	(A,75,105)	RS1/16SS223J

Circuit Symbol and No.			Part No.
R 152	(A,81,105)		RS1/16SS223J
R 153	(A,76,105)		RS1/16SS331J
R 154	(A,75,124)		RS1/16SS102J
R 155	(A,73,123)		RS1/16SS102J
R 156	(A,75,122)		RS1/16SS102J
R 182	(A,113,104)		RS1/16SS0R0J
R 183	(A,111,103)		RS1/16SS4703D
R 184	(A,109,103)		RS1/16SS1802D
R 187	(A,96,113)		RS1/16SS0R0J
R 189	(A,107,103)		RS1/16SS1802D
R 190	(A,111,105)		RS1/16SS330J
R 192	(A,117,111)	(B,D,E,F)	RS1/10SR0R0J
R 194	(A,119,105)	(A,C)	RS1/16SS102J
R 195	(A,119,107)	(A,C)	RS1/16SS103J
R 196	(A,115,104)		RS1/10SR0R0J
R 202	(A,31,103)		RS1/10SR681J
R 203	(A,31,102)		RS1/10SR681J
R 204	(A,23,112)	0.056 ohm	ACN7160
R 206	(A,15,103)		RS1/16SS4702D
R 207	(A,12,103)		RS1/16SS224J
R 208	(A,9,117)		RS1/16SS152J
R 210	(A,10,115)		RS1/16SS3302D
R 211	(A,10,113)		RS1/16SS8201D
R 212	(A,11,115)		RS1/16SS223J
R 251	(B,56,28)		RS1/10SR221J
R 252	(B,56,32)		RS1/10SR221J
R 253	(B,56,30)		RS1/10SR221J
R 254	(A,51,40)		RS1/16SS102J
R 255	(A,50,40)		RS1/16SS102J
R 256	(A,18,35)		RS1/16SS222J
R 257	(B,49,42)		RS1/10SR101J
R 258	(B,48,42)		RS1/10SR101J
R 259	(B,46,42)		RS1/10SR102J
R 260	(A,18,31)		RS1/16SS222J
R 301	(A,10,128)		RS1/16SS820J
R 302	(A,15,128)		RS1/16SS820J
R 303	(A,18,128)		RS1/16SS820J
R 304	(A,24,128)		RS1/16SS820J
R 305	(A,27,128)		RS1/16SS820J
R 306	(A,33,128)		RS1/16SS820J
R 307	(A,9,129)		RS1/16SS223J
R 308	(A,16,129)		RS1/16SS223J
R 309	(A,18,129)		RS1/16SS223J
R 310	(A,24,129)		RS1/16SS223J
R 311	(A,26,129)		RS1/16SS223J
R 312	(A,33,129)		RS1/16SS223J
R 316	(B,9,127)		RS1/10SR0R0J
R 317	(B,9,125)		RS1/10SR0R0J
R 321	(A,79,123)		RS1/16SS362J
R 322	(A,80,123)		RS1/16SS362J
R 323	(A,84,123)		RS1/16SS362J
R 324	(A,85,123)		RS1/16SS362J
R 325	(A,79,124)		RS1/16SS562J
R 326	(A,81,124)		RS1/16SS562J
R 327	(A,83,124)		RS1/16SS562J
R 328	(A,85,124)		RS1/16SS562J
R 331	(B,74,131)		RS1/10SR103J
R 351	(A,65,126)		RS1/16SS473J
R 352	(A,61,133)		RS1/16SS473J
R 353	(B,57,130)		RS1/10SR473J

Circuit Symbol and No.			Part No.
R 354	(A,59,133)		RS1/16SS104J
R 355	(A,71,128)		RS1/16SS103J
R 356	(A,62,126)		RS1/16SS102J
R 357	(A,70,129)		RS1/16SS103J
R 358	(A,70,130)		RS1/16SS681J
R 371	(A,79,93)		RS1/16SS821J
R 372	(A,79,92)		RS1/16SS821J
R 401	(A,145,92)		RS1/16SS0R0J
R 402	(A,144,92)		RS1/16SS0R0J
R 403	(A,141,100)		RS1/16SS391J
R 404	(A,140,103)		RS1/16SS105J
R 405	(A,141,103)		RS1/16SS105J
R 406	(A,147,81)		RS1/16SS101J
R 407	(A,148,81)		RS1/16SS101J
R 408	(A,150,84)		RS1/16SS103J
R 410	(A,150,83)		RS1/16SS103J
R 412	(A,153,81)		RS1/10SR0R0J
R 417	(A,131,90)	(A)	RS1/16SS121J
R 418	(A,131,92)	(A)	RS1/16SS182J
R 419	(A,128,83)	(A)	RS1/16SS102J
R 420	(A,151,91)		RS1/16SS0R0J
R 421	(A,130,83)	(A)	RS1/16SS332J
R 422	(A,140,83)	(A)	RS1/16SS0R0J
R 423	(A,135,84)	(A)	RS1/16SS121J
R 424	(A,132,87)	(A)	RS1/16SS182J
R 425	(A,141,81)	(A)	RS1/16SS102J
R 426	(A,142,81)	(A)	RS1/16SS332J
R 427	(A,143,92)		RS1/16SS0R0J
R 431	(A,132,92)	(A)	RS1/16SS0R0J
R 432	(A,148,79)		RS1/16SS472J
R 433	(A,147,79)		RS1/16SS472J
R 435	(A,168,87)	(B,C,D,E,F)	RS1/10SR0R0J
R 436	(A,170,87)	(B,C,D,E,F)	RS1/10SR0R0J
R 450	(B,134,93)	(A)	RS1/10SR0R0J
R 451	(A,126,81)	(B,D,E,F)	RS1/16SS0R0J
R 452	(A,146,76)	(B,D,E,F)	RS1/16SS0R0J
R 453	(A,138,105)		RS1/10SR0R0J
R 457	(B,146,104)		RS1/10SR0R0J
R 458	(B,133,96)	(A)	RS1/10SR0R0J
R 472	(A,120,92)	(C)	RS1/10SR0R0J
R 473	(A,119,82)	(C)	RS1/16SS1003F
R 474	(A,118,81)	(B)	RS1/16SS183J
	(A,118,81)	(C)	RS1/16SS1802D
R 475	(A,123,81)	(C)	RS1/4SA471J
R 476	(A,121,81)	(C)	RS1/4SA471J
R 477	(A,107,78)	(B)	RS1/16SS183J
R 478	(A,124,85)	(C)	RS1/10SR103J
R 479	(A,123,96)	(B)	RS1/10SR0R0J
R 501	(A,148,72)	(A)	RS1/16SS101J
R 502	(A,146,73)	(A)	RS1/16SS101J
R 503	(A,148,71)	(A)	RS1/16SS101J
R 504	(A,149,72)	(A)	RS1/16SS101J
R 505	(A,136,106)	(C)	RS1/10SR0R0J
R 506	(A,159,92)	(A,C)	RS1/16SS101J
R 507	(A,159,90)	(A,C)	RS1/16SS101J
R 508	(A,159,88)	(A,C)	RS1/16SS101J
R 509	(A,159,86)	(A,C)	RS1/16SS101J
R 512	(A,158,68)	(A,C)	RS1/16SS101J
R 513	(A,158,67)	(A,C)	RS1/16SS101J
R 514	(A,158,66)	(A,C)	RS1/16SS101J

Circuit Symbol and No.		Part No.
R 516	(A,148,75) (A,C)	RS1/16SS0R0J
R 531	(A,153,50) (C)	RS1/10SR102J
R 561	(B,22,92) (C)	RS1/10SR102J
R 563	(A,10,81) (C)	RS1/16SS333J
R 564	(A,9,81) (C)	RS1/16SS103J
R 565	(A,9,83) (C)	RS1/16SS103J
R 566	(A,25,78) (C)	RS1/16SS0R0J
R 567	(A,27,78) (C)	RS1/16SS0R0J
R 601	(A,93,34)	RS1/16SS102J
R 602	(B,104,70)	RS1/10SR154J
R 603	(A,99,56)	RS1/16SS222J
R 604	(A,97,65)	RS1/16SS105J
R 606	(B,96,61)	RS1/10SR104J
R 607	(A,99,55)	RS1/16SS104J
R 608	(A,101,53)	RS1/16SS104J
R 609	(A,94,70)	RS1/16SS104J
R 610	(A,101,75)	RS1/16SS104J
R 611	(A,95,59)	RS1/16SS104J
R 612	(A,95,57)	RS1/16SS104J
R 613	(A,109,76)	RS1/16SS103J
R 614	(A,98,63)	RS1/16SS104J
R 615	(A,98,65)	RS1/16SS101J
R 616	(A,103,75) (F)	RS1/16SS104J
R 617	(A,105,75) (D,F)	RS1/16SS104J
R 618	(B,107,51)	RS1/10SR472J
R 619	(A,115,75)	RS1/16SS103J
R 620	(B,107,63)	RS1/10SR104J
R 621	(A,106,53)	RS1/16SS104J
R 622	(B,95,49)	RS1/10SR104J
R 623	(B,97,49)	RS1/10SR104J
R 624	(B,109,75)	RS1/10SR104J
R 628	(A,118,67)	RS1/16SS104J
R 631	(A,117,63)	RS1/16SS104J
R 636	(A,126,44)	RS1/16SS104J
R 638	(A,125,44)	RS1/16SS152J
R 640	(B,103,51)	RS1/10SR102J
R 641	(B,104,56)	RS1/10SR102J
R 642	(B,96,63)	RS1/10SR104J
R 643	(B,99,70)	RS1/10SR104J
R 646	(A,120,67) (B,D,E,F)	RS1/16SS104J
R 647	(A,106,81)	RS1/16SS103J
R 648	(B,103,81) (B)	RS1/10SR473J
R 650	(A,93,72) (B)	RS1/16SS0R0J
R 652	(A,81,55) (E,F)	RS1/16SS473J
R 653	(A,77,49) (E,F)	RS1/16SS473J
R 657	(A,89,61)	RS1/16SS101J
R 660	(B,86,69)	RS1/10SR221J
R 661	(B,59,85)	RS1/10SR221J
R 662	(A,87,60)	RS1/16SS181J
R 663	(A,84,66)	RS1/16SS332J
R 664	(B,78,70)	RS1/10SR473J
R 666	(B,78,74)	RS1/10SR473J
R 668	(A,90,61)	RS1/16SS221J
R 669	(A,71,80)	RS1/16SS101J
R 670	(A,71,82)	RS1/16SS101J
R 671	(A,72,82)	RS1/16SS101J
R 672	(A,73,82)	RS1/16SS101J
R 673	(A,75,80)	RS1/16SS101J
R 674	(A,76,80)	RS1/16SS101J
R 675	(A,67,80)	RS1/16SS221J

Circuit Symbol and No.		Part No.
R 676	(A,67,81)	RS1/16SS221J
R 677	(A,68,80)	RS1/16SS221J
R 678	(B,71,81)	RS1/10SR221J
R 679	(A,78,81)	RS1/16SS332J
R 680	(A,39,88)	RS1/16SS0R0J
R 681	(A,85,80)	RAB4CQ473J
R 682	(A,84,68)	RS1/16SS153J
R 683	(A,84,69)	RS1/16SS153J
R 684	(A,90,70)	RS1/16SS153J
R 685	(A,89,71)	RS1/16SS153J
R 686	(A,85,71)	RS1/16SS473J
R 687	(A,85,72)	RS1/16SS473J
R 688	(A,88,76)	RS1/16SS473J
R 689	(A,86,76)	RS1/16SS473J
R 690	(B,59,71)	RS1/10SR473J
R 691	(B,86,62)	RS1/10SR0R0J
R 692	(B,68,79)	RS1/10SR473J
R 695	(B,78,67)	RS1/10SR473J
R 697	(A,86,72)	RS1/16SS102J
R 699	(B,83,87)	RS1/10SR0R0J
R 701	(B,44,75)	RS1/10SR473J
R 702	(A,44,78)	RS1/16SS472J
R 703	(A,42,78)	RAB4CQ220J
R 704	(A,39,78)	RAB4CQ220J
R 705	(A,36,78)	RAB4CQ220J
R 707	(A,38,82)	RS1/16SS472J
R 708	(A,44,61)	RS1/16SS220J
R 710	(A,39,61)	RAB4CQ220J
R 711	(A,36,61)	RAB4CQ220J
R 731	(A,74,91)	RS1/16SS473J
R 732	(B,72,91)	RS1/10SR473J
R 733	(A,71,91)	RS1/16SS473J
R 734	(A,79,89)	RS1/16SS473J
R 735	(A,79,87)	RS1/16SS473J
R 741	(A,83,55) (A,B,C,D)	RS1/16SS101J
R 742	(A,76,49) (A,B,C,D)	RS1/16SS101J
R 743	(A,80,52) (A,B,C,D)	RS1/16SS101J
R 744	(A,80,53) (A,B,C,D)	RS1/16SS101J
R 745	(A,86,57) (A,B,C,D)	RS1/16SS473J
R 751	(B,112,32)	RS1/10SR472J
R 752	(B,108,34)	RS1/10SR473J
R 753	(B,114,32)	RS1/10SR472J
R 754	(A,118,40)	RS1/16SS104J
R 755	(B,116,32)	RS1/10SR472J
R 756	(A,105,38)	RS1/16SS221J
R 757	(A,105,39)	RS1/16SS221J
R 758	(A,105,37)	RS1/16SS101J
R 759	(A,112,40)	RS1/16SS221J
R 760	(A,105,36)	RS1/16SS101J
R 761	(A,116,40)	RS1/16SS102J
R 762	(A,119,33)	RS1/16SS151J
R 763	(A,120,40)	RS1/16SS151J
R 764	(A,120,33)	RS1/16SS151J
R 765	(A,125,40)	RS1/16SS221J
R 766	(A,124,40)	RS1/16SS104J
R 767	(B,106,36)	RS1/10SR104J
R 771	(B,146,39)	RS1/10SR473J
R 772	(B,146,41)	RS1/10SR103J
R 773	(B,157,44)	RS1/4SA391J
R 805	(A,107,15)	RS1/10SR222J

Circuit Symbol and No.		Part No.
R 806	(A,108,15)	RS1/10SR222J
R 807	(A,114,15)	RS1/10SR222J
R 808	(A,113,15)	RS1/10SR222J
R 809	(A,111,15)	RS1/10SR222J
R 810	(A,116,15)	RS1/10SR222J
R 811	(A,117,15)	RS1/10SR222J
R 812	(B,96,19)	RS1/10SR102J
R 813	(B,96,21)	RS1/10SR104J
R 832	(A,116,24)	RS1/16SS1002D
R 833	(A,116,23)	RS1/16SS2202D
R 834	(A,116,21)	RS1/16SS6801D
R 841	(A,106,28)	RS1/10SR472J
R 842	(B,108,29)	RS1/10SR102J
R 843	(B,106,29)	RS1/10SR103J
R 860	(A,73,37)	RS1/16SS473J
R 863	(B,67,43)	RS1/10SR473J
R 864	(B,62,44)	RS1/10SR0R0J
R 865	(B,72,43)	RS1/10SR473J
R 866	(B,61,35)	RS1/10SR473J
R 867	(B,64,35)	RS1/10SR473J
R 869	(B,63,44)	RS1/10SR473J
R 881	(A,49,86)	RS1/10SR103J
R 882	(A,57,95)	RS1/16SS473J
R 883	(A,56,95)	RS1/16SS222J
R 884	(A,54,89)	RS1/16SS222J
R 885	(A,56,88)	RS1/16SS272J
R 886	(A,54,84)	RS1/16SS472J
R 887	(A,55,95)	RS1/16SS101J
R 888	(A,54,88)	RS1/16SS101J
R 889	(A,57,88)	RS1/16SS472J
R 901	(B,27,71)	RS1/10SR102J
R 903	(A,10,61)	RS1/16SS5102D
R 904	(A,9,61)	RS1/16SS1002D
R 905	(A,9,63)	RS1/16SS103J
R 906	(A,7,62)	RS1/16SS183J
R 907	(A,7,61)	RS1/16SS0R0J
R 908	(A,8,59)	RS1/16SS473J
R 921	(B,21,57)	RS1/10SR223J
R 922	(B,22,59)	RS1/10SR332J
R 931	(A,32,51)	RS1/16SS473J
R 941	(B,135,40)	RS1/10SR473J
R 942	(A,136,46)	RS1/16SS182J
R 943	(A,136,45)	RS1/16SS6802D
R 944	(A,136,44)	RS1/16SS6801D
R 951	(A,144,132)	RS1/16SS103J
R 952	(A,143,129)	RS1/16SS104J
R 953	(A,144,133)	RS1/16SS473J
R 954	(A,143,130)	RS1/16SS473J
R 955	(B,121,127)	RS1/10SR682J
R 956	(A,120,129)	RS1/4SA102J
R 961	(B,101,125)	RS1/10SR103J
R 962	(A,115,129)	RS1/4SA102J
R 1001	(A,90,76)	RS1/16SS220J
R 1003	(A,91,76)	RS1/16SS220J

CAPACITORS

C 101	(B,147,141) (B)	CKSRYB105K16
C 121	(B,49,132)	CKSRYB472K50
C 122	(B,45,132)	CKSRYB472K50
C 123	(B,52,127)	CKSRYB104K16
C 124	(B,38,128)	CKSRYB102K50
C 125	(B,38,127)	CKSRYB102K50
C 126	(B,44,129)	CKSRYB471K50
C 127	(B,56,147)	CKSRYB102K50
C 128	(A,157,126)	CKSSYB102K50
C 129	(A,157,124)	CKSSYB102K50
C 151	(A,75,112)	CKSRYB105K10
C 152	(A,89,111)	CKSRYB105K10
C 153	(A,75,111)	CKSRYB105K10
C 154	(B,93,104)	CKSRYB105K10
C 155	(B,104,114) (B)	CKSRYB105K10
C 156	(B,104,112) (B)	CKSRYB105K10
C 157	(B,99,114) (B)	CKSRYB105K10
C 158	(B,99,112) (B)	CKSRYB105K10
C 159	(A,75,110)	CKSRYB105K10
C 160	(A,89,108)	CKSRYB105K10
C 161	(A,75,108) 2.2 uF	CCG1205
C 163	(A,77,114)	CKSRYB105K10
C 164	(A,88,113)	CKSRYB105K10
C 165	(A,88,116) 10 uF	DCH1201
C 166	(A,90,114) 10 uF	DCH1201
C 168	(A,87,124)	CKSQYB225K16
C 170	(A,89,121)	CKSQYB225K16
C 181	(A,93,108)	CKSSYB104K16
C 184	(A,112,105)	CCSSCH150J50
C 186	(B,102,104) 10 uF	CCG1236
C 188	(A,113,108) 10 uF/16 V	DCH1263
C 190	(B,102,107) 10 uF	CCG1236
C 201	(A,22,117)	CKSSYB104K10
C 202	(A,27,111) 22 uF	CCG1254
C 204	(A,13,103)	CKSSYB102K50
C 205	(A,18,103)	CKSSYB104K16
C 206	(A,11,103)	CKSSYB472K25
C 207	(A,16,103)	CKSSYB104K16
C 208	(A,9,115)	CCSSCH151J50
C 209	(A,15,115) 1 uF	DCH1246
C 210	(A,13,115)	CKSSYB472K25
C 211	(A,36,110) 10 uF	DCH1165
C 212	(A,11,114)	CCSSCH270J50
C 213	(A,42,110)	XCEVW221M16
C 214	(A,16,116)	CKSSYB104K16
C 215	(A,29,116)	XCEVW101M16
C 216	(A,23,117)	CKSSYB102K50
C 217	(A,19,116) 22 uF	CCG1254
C 222	(A,36,115) (A,B,E)	CKSRYB102K50
C 251	(A,37,47)	XCEVW221M4
C 253	(A,18,34)	CKSRYB105K10
C 255	(B,42,31) 4.7 uF	CCG1212
C 256	(B,42,33) 4.7 uF	CCG1212
C 262	(B,50,33)	CCSRCH270J50
C 264	(B,56,33)	CKSRYB104K16
C 265	(B,15,30)	CKSRYB104K16
C 266	(B,52,15)	CKSRYB104K16
C 272	(B,28,44) 4.7 uF	CCG1212
C 273	(B,28,49) 4.7 uF	CCG1212
C 275	(A,32,48)	CKSSYB104K10
C 281	(B,23,44) 4.7 uF	CCG1212
C 284	(B,20,44) 4.7 uF	CCG1212
C 301	(A,11,126) 10 uF	DCH1201
C 302	(A,15,126) 10 uF	DCH1201

Circuit Symbol and No.		Part No.
C 303	(A,19,126) 10 uF	DCH1201
C 304	(A,24,126) 10 uF	DCH1201
C 305	(A,28,126) 10 uF	DCH1201
C 306	(A,32,126) 10 uF	DCH1201
C 307	(A,9,130)	CKSSYB103K16
C 308	(A,16,130)	CKSSYB103K16
C 309	(A,18,130)	CKSSYB103K16
C 310	(A,24,130)	CKSSYB103K16
C 311	(A,26,130)	CKSSYB103K16
C 312	(A,33,130)	CKSSYB103K16
C 315	(B,35,141)	CKSRYB102K50
C 321	(B,69,131) 4.7 uF	CCG1212
C 322	(B,55,134) 4.7 uF	CCG1212
C 325	(B,78,131)	CKSRYB474K10
C 326	(B,80,131)	CKSRYB474K10
C 327	(B,83,131)	CKSRYB474K10
C 328	(B,85,131)	CKSRYB474K10
C 333	(A,63,135) 2.2 uF	CCG1205
C 335	(B,62,136)	CKSRYB102K50
C 337	(B,65,140)	CKSRYB103K50
C 339	(B,89,142)	CKSRYB104K16
C 340	(A,129,122) 3300 uF/16 V	CCH2027
C 341	(A,65,138) 10 uF/16 V	DCH1263
C 344	(B,66,136)	CKSRYB103K50
C 351	(A,52,130)	XCEVW220M16
C 352	(B,64,131) 2.2 uF	CCG1205
C 375	(A,68,89) 4.7 uF	CCG1212
C 376	(A,60,92)	CKSSYB103K16
C 377	(A,60,94) 4.7 uF	CCG1212
C 378	(B,66,95)	CKSRYB104K16
C 379	(A,81,93)	CKSSYB182K50
C 380	(A,81,92)	CKSSYB182K50
C 381	(B,61,89)	CKSRYB104K16
C 391	(A,135,56) 4.7 uF	CCG1212
C 393	(A,141,56)	CKSQYB474K16
C 402	(A,156,83)	CKSSYB472K25
C 406	(A,153,85)	CKSSYB472K25
C 407	(A,149,91)	CKSSYB103K16
C 409	(A,148,92)	CKSSYB224K6R3
C 410	(A,148,102)	CCSSCH220J50
C 411	(A,145,102)	CCSSCH331J50
C 414	(A,139,96)	CKSSYB102K50
C 420	(A,141,102)	CCSSCH471J50
C 422	(A,138,91)	CKSSYB152K50
C 423	(A,146,80)	CKSSYB104K10
C 428	(A,142,92)	CKSSYB103K16
C 430	(A,147,92)	CKSSYB102K50
C 431	(A,153,79) 4.7 uF	CCG1212
C 434	(A,149,103)	CCSSCH100D50
C 435	(A,154,111)	CCSSCJ3R0C50
C 437	(A,154,112) (A,B,C,F)	CCSSCK2R0C50
C 439	(B,139,87) (B,C,D,E,F)	CKSRYB103K50
C 440	(B,151,87) (A)	CKSRYB103K50
C 441	(A,128,92)	CKSSYB104K10
C 442	(A,117,76)	CKSSYB105K6R3
C 443	(A,150,89)	CCSSCH390J50
C 445	(B,159,106) (A)	CKSRYB103K50
C 447	(A,159,106) (C)	CKSRYB102K50
C 448	(A,158,96) 4.7 uF(A,C)	CCG1212
	(A,158,96) (B,D,E,F)	CKSRYB102K50

Circuit Symbol and No.		Part No.
C 451	(A,130,78)	CKSQYB474K16
C 453	(A,138,76) 4.7 uF	CCG1212
C 455	(B,168,89) (A)	CKSRYB102K50
C 472	(A,132,105) (C)	CKSRYB104K16
C 507	(A,155,105) (C)	CKSSYB104K16
C 508	(A,154,105) (C)	CCSSCH101J50
C 511	(B,155,71) (A)	CCSRCH220J50
C 512	(B,158,74) (A)	CCSRCH220J50
C 513	(A,159,69) (A)	CCSSCH220J50
C 531	(A,147,49) 4.7 uF(C)	CCG1212
C 532	(A,146,49) 4.7 uF(C)	CKSRYB102K50
C 533	(A,153,51) 4.7 uF(A,C)	CCG1212
C 534	(B,122,80) 10 uF(A,C)	DCH1201
C 535	(A,144,51) (A)	CKSRYB102K50
C 537	(A,144,53) 10 uF(A)	DCH1201
C 541	(A,147,55) 4.7 uF(A,C)	CCG1212
C 542	(B,154,63) 4.7 uF(A)	CCG1212
C 543	(A,158,62) 4.7 uF(C)	CCG1212
C 551	(A,145,63) 4.7 uF(C)	CCG1212
C 552	(B,154,67) 4.7 uF(C)	CCG1212
C 562	(A,19,98) (C)	CKSRYB105K16
C 563	(A,24,94) (C)	CEVQW221M6R3
C 564	(A,9,84) (C)	CKSSYB102K50
C 565	(A,10,82) (C)	CKSSYB682K25
C 566	(A,20,83) (C)	CKSSYB103K16
C 568	(A,20,85) (C)	CKSRYB105K16
C 569	(A,24,86) 47 uF(C)	CCG1256
C 571	(A,28,99) 10 uF(C)	DCH1201
C 572	(B,32,92) (C)	CKSRYB104K16
C 601	(A,94,67)	CCSSCH100D50
C 602	(A,94,63)	CCSSCH120J50
C 604	(A,94,69)	CKSSYB104K10
C 605	(B,100,65)	CKSRYB105K10
C 608	(B,114,63)	CKSRYB105K10
C 610	(A,104,49)	CKSRYB104K50
C 612	(B,121,46)	CKSRYB105K10
C 615	(B,98,64) 10 uF	DCH1201
C 616	(A,104,81) (B)	CKSSYB104K10
C 617	(A,98,79) (B)	CKSSYB104K10
C 621	(A,98,54)	CCSSCH150J50
C 622	(A,100,53)	CCSSCH150J50
C 651	(B,70,57)	CKSRYB104K16
C 652	(B,77,60)	CKSRYB104K16
C 653	(B,87,56)	CKSRYB104K16
C 654	(B,63,57)	CKSRYB104K16
C 655	(B,68,61)	CKSRYB104K16
C 656	(B,73,61)	CKSRYB104K16
C 657	(B,79,56)	CKSRYB104K16
C 659	(B,82,62)	CKSRYB104K16
C 660	(B,86,60)	CCSRCK2R0C50
C 661	(B,61,61)	CKSRYB104K16
C 662	(A,87,63)	CCSSCH120J50
C 663	(B,82,66)	CKSRYB104K16
C 665	(B,60,65)	CKSRYB104K16
C 666	(B,82,64)	CKSRYB104K16
C 668	(B,60,68)	CKSRYB104K16
C 669	(A,87,68)	CCSSCH120J50
C 670	(B,82,69)	CKSRYB104K16
C 671	(B,61,71)	CKSRYB104K16
C 672	(B,83,75)	CKSRYB104K16

Circuit Symbol and No.		Part No.
C 673	(B,83,77)	CKSRYB104K16
C 674	(B,66,79)	CKSRYB104K16
C 675	(B,72,74)	CKSRYB104K16
C 676	(B,77,78)	CKSRYB104K16
C 677	(B,64,79)	CKSRYB104K16
C 678	(B,71,78)	CKSRYB104K16
C 681	(B,86,74)	CKSRYB102K50
C 682	(A,39,85) 4.7 uF	CCG1212
C 683	(B,51,51)	CKSRYB224K16
C 685	(A,76,82)	CCSSCH120J50
C 686	(A,81,83)	CCSSCH120J50
C 688	(B,45,51) 4.7 uF	CCG1212
C 694	(A,89,56)	CKSRYB104K16
C 695	(B,85,71)	CKSRYB104K16
C 696	(A,65,80)	CCSSCH220J50
C 701	(B,54,70)	CKSRYB104K16
C 702	(B,53,70)	CKSRYB104K16
C 703	(B,48,70)	CKSRYB104K16
C 704	(B,44,71)	CKSRYB104K16
C 705	(B,35,72)	CKSRYB104K16
C 706	(B,50,64)	CKSRYB104K16
C 707	(B,46,64)	CKSRYB104K16
C 708	(B,33,81) 2.2 uF	CCG1205
C 711	(B,52,36)	CKSRYB104K16
C 712	(B,56,46)	CKSRYB104K16
C 721	(A,36,86) 10 uF	DCH1201
C 722	(A,33,86) 10 uF	DCH1201
C 731	(B,76,91)	CKSRYB104K16
C 741	(A,79,50)	CKSSYB104K10
C 752	(A,121,33)	CCSSCH220J50
C 753	(A,122,40)	CCSSCH100D50
C 754	(A,118,33)	CCSSCH220J50
C 755	(B,108,36)	CKSRYB103K50
C 758	(A,94,37)	CKSSYB102K50
C 760	(A,114,40)	CKSSYB221K50
C 770	(B,125,41)	CKSRYB104K16
C 771	(B,152,40) 10 uF	DCH1201
C 773	(A,155,44)	CKSSYB473K16
C 803	(A,104,20)	CKSRYB104K16
C 805	(B,101,13)	CKSRYB104K16
C 807	(B,99,10)	CKSRYB104K16
C 809	(B,118,47)	CKSRYB104K16
C 810	(B,83,35)	CKSRYB104K16
C 811	(B,101,18)	CKSRYB105K16
C 812	(A,96,20)	CKSRYB105K10
C 832	(A,115,30) 10 uF	DCH1201
C 833	(A,116,28)	CKSRYB105K10
C 834	(B,108,25) 4.7 uF	CCG1212
C 835	(A,111,23)	XCEVW101M16
C 841	(A,105,28)	CKSRYB104K16
C 881	(A,59,89)	CKSSYB104K10
C 882	(A,57,89)	CKSSYB104K10
C 891	(A,39,91)	CKSRYB104K16
C 892	(A,51,91)	CKSRYB104K16
C 901	(A,17,78)	CKSSYB102K50
C 902	(A,18,78)	CKSRYB105K16
C 903	(A,23,73)	CEVQW221M6R3
C 904	(A,9,64)	CKSSYB102K50
C 905	(A,10,62)	CKSSYB682K25
C 906	(A,20,63)	CKSSYB103K16

Circuit Symbol and No.		Part No.
C 908	(A,20,65)	CKSRYB105K16
C 909	(A,13,54)	XCEAT102M16
C 910	(A,21,66) 10 uF/16 V	DCH1263
C 911	(A,20,78) 10 uF	DCH1201
C 913	(B,11,83) 4.7 uF	CCG1222
C 921	(B,18,54)	CKSRYB104K16
C 922	(B,22,52)	CKSRYB103K50
C 931	(A,31,62) 10 uF	DCH1201
C 932	(A,33,54) 10 uF	DCH1201
C 941	(A,136,49)	CKSRYB104K16
C 946	(A,147,45)	CKSRYB104K16
C 961	(B,105,127)	CKSRYB105K10
C 991	(B,118,139)	CKSRYB104K16

B

Unit Number : QWM3845
Unit Name : Keyboard Unit

MISCELLANEOUS

IC 1621	(B,75,7) IC	PEB163A8 (* NSP)
IC 1701	(B,84,20) IC	PEQ410A8 (* NSP)
IC 1731	(A,63,6) IR RC Rec Module	PNJ4833M
IC 1742	(B,146,21) Driver IC	AN32182UA
D 1631	(A,152,18) LED	SMLVN6RGB2UK(B)
D 1632	(A,152,10) LED	SMLVN6RGB2UK(B)
D 1633	(A,8,18) LED	SMLVN6RGB2UK(B)
D 1634	(A,27,18) LED	SMLVN6RGB2UK(B)
D 1635	(A,161,20) LED	SMLVN6RGB2UK(B)
D 1701	(B,59,21) Rectifier Diode	DA2J101
D 1737	(A,63,24) LED	SMLVN6RGB2UK(B)
X 1701	(B,72,19) Ceramic Resonator 16.000 MHz	CSS1616
S 1611	(A,46,18) Encoder(MULTI-CONTROL)	CSD1193
S 1731	(A,154,40) Push Switch	CSG1155
S 1732	(A,15,19) Push Switch	CSG1155
S 1733	(A,7,6) Push Switch	CSG1155
S 1734	(A,31,8) Push Switch	CSG1155
S 1735	(A,6,40) Push Switch	CSG1155
S 1736	(A,59,18) Lever Switch	CSN1086
S 1737	(A,31,29) Push Switch	CSG1155
S 1738	(A,7,33) Push Switch	CSG1155
S 1739	(A,56,26) Lever Switch	CSN1085
CN1601	(B,108,8) Connector	CKS6451
CN1681	(B,110,28) Connector	CKS6647

RESISTORS

R 1601	(B,91,8)	RS1/10SR222J
R 1602	(B,91,10)	RS1/10SR0R0J
R 1611	(B,28,21)	RS1/16SS103J
R 1622	(B,70,5)	RS1/16SS473J
R 1623	(B,82,8)	RS1/16SS473J
R 1624	(B,88,8)	RS1/16SS473J
R 1681	(B,101,25)	RAB4CQ101J
R 1701	(B,67,18)	RS1/16SS154J
R 1702	(B,69,20)	RS1/16SS102J
R 1703	(B,59,22)	RS1/16SS154J
R 1704	(B,59,23)	RS1/16SS473J
R 1705	(B,72,22)	RS1/16SS103J
R 1706	(B,72,25)	RAB4CQ102J
R 1707	(B,98,19)	RS1/16SS103J

Circuit Symbol and No.		Part No.
R 1708	(B,72,27)	RAB4CQ103J
R 1709	(B,87,9)	RS1/16SS103J
R 1710	(B,97,25)	RAB4CQ473J
R 1711	(B,99,21)	RS1/16SS103J
R 1712	(B,98,21)	RS1/16SS103J
R 1713	(A,82,12)	RAB4CQ102J
R 1714	(A,78,12)	RAB4CQ0R0J
R 1717	(A,76,24)	RS1/10SR222J
R 1731	(B,58,5)	RS1/16SS470J
R 1751	(A,143,27)	RS1/10SR3902D
R 1752	(A,138,15)	RS1/10SR473J
R 1755	(B,134,9)	RS1/10SR222J
R 1756	(B,134,10)	RS1/10SR222J
R 1758	(A,128,10)	RS1/10SR103J
R 1759	(A,128,11)	RS1/10SR103J
R 1760	(B,140,28)	RS1/10SR0R0J

CAPACITORS

C 1601	(B,124,6) 4.7 uF	CCG1212
C 1602	(B,119,17) 10 uF	DCH1201
C 1621	(B,68,5)	CKSRYB104K16
C 1681	(B,107,18) 2.2 uF	CCG1205
C 1684	(B,117,23)	CKSQYB334K50
C 1686	(B,114,21) 4.7 uF	CCG1212
C 1687	(B,113,21) 4.7 uF	CCG1212
C 1703	(B,67,19)	CKSSYB104K10
C 1704	(B,70,22)	CKSSYB103K16
C 1705	(B,96,20)	CKSSYB103K16
C 1731	(B,64,19) 10 uF	DCH1201
C 1751	(B,159,25) 10 uF	DCH1201
C 1752	(A,136,15)	CKSRYB105K16
C 1758	(B,141,15) 10 uF	DCH1201
C 1760	(B,140,25)	CKSRYB104K16

C

Unit Number : CWX4023
Unit Name : CD Core Unit (S11.6STD)

MISCELLANEOUS

IC 201	(B,23,37)	IC	PE5791A
IC 301	(A,37,11)	IC	BD8223EFV
Q 101	(B,11,53)	Transistor	2SA1577
Q 102	(B,15,54)	Transistor	LTA123JUB
X 201	(B,25,49)	Ceramic Resonator 16.934 MHz	CSS1603
S 901	(A,42,53)	Spring Switch(HOME)	CSN1080
S 903	(B,21,12)	Spring Switch(DSCSNS)	CSN1081
CN101	(A,16,58)	Connector	CKS4808
CN701	(A,25,29)	Connector	CKS6146

RESISTORS

R 101	(B,6,57)	RS1/10SR2R4J
R 102	(B,8,57)	RS1/10SR2R4J
R 103	(B,9,57)	RS1/10SR2R7J
R 108	(B,18,55)	RS1/16SS105J
R 109	(B,12,50)	RS1/16SS222J
R 214	(B,18,28)	RS1/16SS103J
R 215	(B,17,28)	RS1/16SS393J

Circuit Symbol and No.		Part No.
R 216	(B,12,35)	RS1/16SS122J
R 217	(B,10,32)	RS1/16SS562J
R 218	(B,10,35)	RS1/16SS472J
R 229	(B,12,34)	RS1/16SS471J
R 232	(A,31,54)	RS1/16SS0R0J
R 237	(B,33,45)	RS1/16SS221J
R 240	(B,34,40)	RS1/16SS473J
R 245	(A,34,46)	RS1/16SS104J
R 254	(A,37,56)	RS1/16SS104J
R 260	(B,30,27)	RS1/16SS103J
R 264	(A,22,9)	RS1/16SS102J
R 281	(B,33,38)	RS1/16SS560J
R 282	(B,33,39)	RS1/16SS560J
R 291	(B,33,34)	RS1/16SS560J
R 294	(B,27,48)	RS1/16SS471J
R 303	(A,27,11)	RS1/16SS123J
R 304	(A,28,11)	RS1/16SS123J
R 305	(A,26,9)	RS1/16SS102J
R 306	(A,26,11)	RS1/16SS472J
R 307	(A,25,9)	RS1/16SS102J
R 308	(A,25,11)	RS1/16SS472J
R 309	(A,35,6)	RS1/16SS473J
R 310	(B,30,9)	RS1/16SS472J
R 311	(B,30,10)	RS1/16SS472J
R 312	(B,30,11)	RS1/16SS472J
R 313	(B,30,12)	RS1/16SS472J
R 701	(A,21,38)	RS1/16SS101J
R 702	(A,23,38)	RS1/16SS101J
R 706	(A,32,42)	RS1/16SS221J

CAPACITORS

C 104	(B,12,57)	CKSQYB475K6R3
C 203	(B,22,47)	CKSSYB104K10
C 209	(B,28,47)	CKSRYB104K16
C 210	(B,33,43)	CKSSYB104K10
C 211	(B,33,41)	CKSSYB104K10
C 212	(B,22,28)	CKSSYB104K10
C 213	(B,18,26)	CKSSYB332K50
C 214	(B,17,26)	CKSSYB473K16
C 215	(B,19,28)	CKSSYB104K10
C 216	(B,12,33)	CKSSYB182K50
C 217	(B,10,34)	CCSSCH560J50
C 218	(B,10,36)	CCSSCH4R0C50
C 219	(B,14,34)	CKSSYB104K10
C 220	(A,18,38)	CKSSYB104K10
C 221	(B,14,32)	CKSSYB104K10
C 222	(B,13,37)	CKSSYB104K10
C 223	(B,12,42)	CCSSCH680J50
C 224	(B,13,45)	CCSSCH470J50
C 225	(B,13,46)	CKSSYB103K16
C 228	(B,10,33)	CCSSCH270J50
C 229	(B,9,40)	CKSSYB104K10
C 233	(B,32,46)	CKSSYB103K16
C 236	(B,8,40)	CKSSYB104K10
C 238	(A,25,44)	CKSRYB104K16
C 299	(A,26,41)	CKSSYB104K10
C 302	(B,28,12)	CKSSYB102K50
C 303	(B,29,12)	CKSSYB102K50
C 304	(B,27,12)	CKSSYB223K16

Circuit Symbol and No.		Part No.
C 305	(B,26,12)	CKSSYB104K10
C 306	(A,31,7)	CKSSYB104K10
C 307	(A,41,19)	CKSRYB105K10
C 308	(A,31,15)	CKSRYB105K10
C 710	(A,34,42)	CKSSYB102K50