# EXPLODED VIEW (TK-5310(G) K, K4)

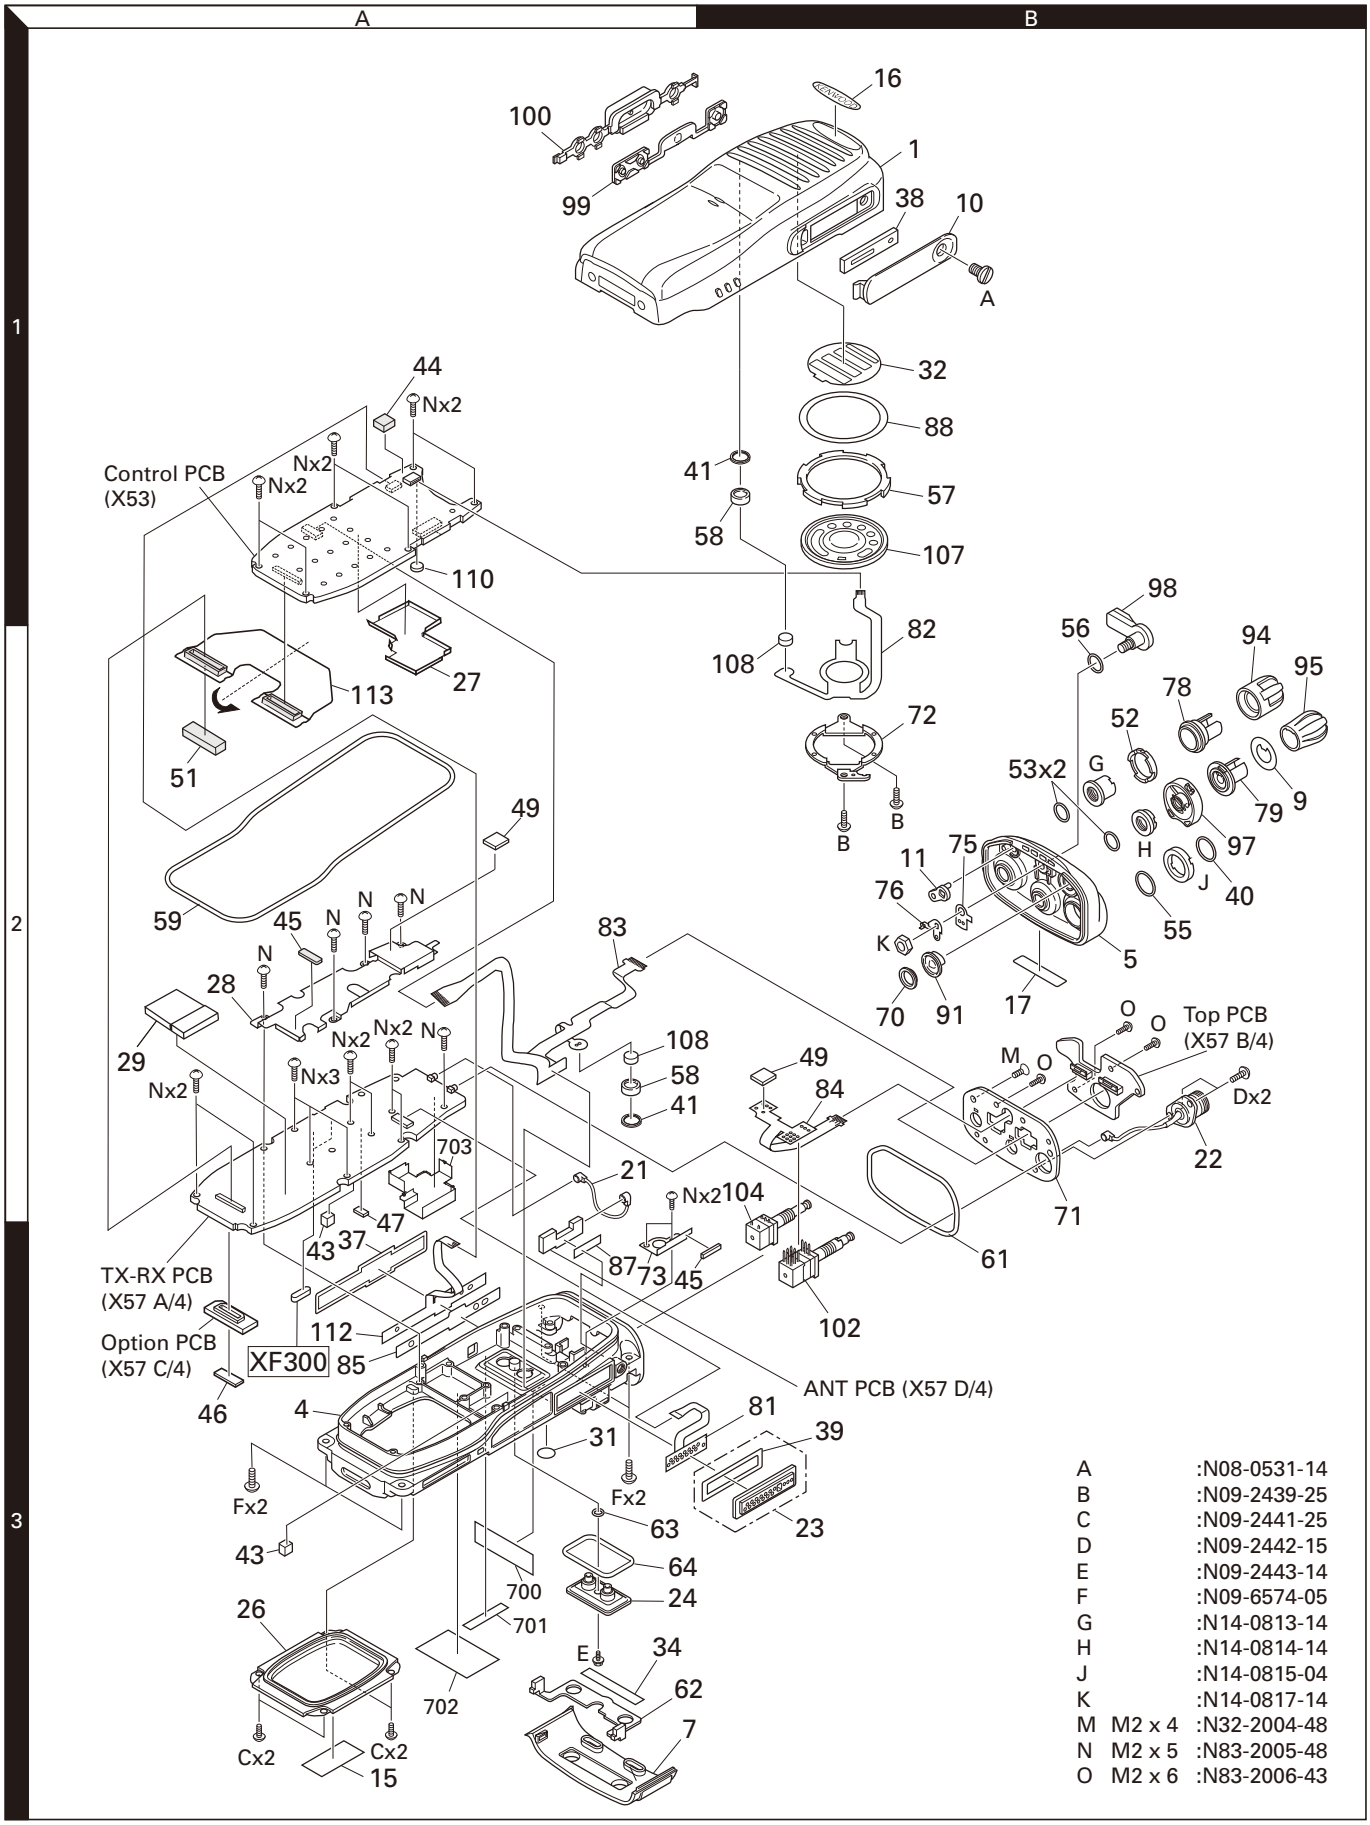


| | | |
|---|---|---|
| A | | :N08-0531-14 |
| B | | :N09-2439-25 |
| C | | :N09-2441-25 |
| D | | :N09-2442-15 |
| E | | :N09-2443-14 |
| F | | :N09-6574-05 |
| G | | :N14-0813-14 |
| H | | :N14-0814-14 |
| J | | :N14-0815-04 |
| K | | :N14-0817-14 |
| M | M2 x 4 | :N32-2004-48 |
| N | M2 x 5 | :N83-2005-48 |
| O | M2 x 6 | :N83-2006-43 |

**Parts with the exploded numbers larger than 700 are not supplied.**
**If a part reference number is listed in a box on the exploded view of the PCB, that part does not come with the PCB. These parts must be ordered separately.**

# EXPLODED VIEW (TK-5310(G) K2, K3, K5, K6, K7)

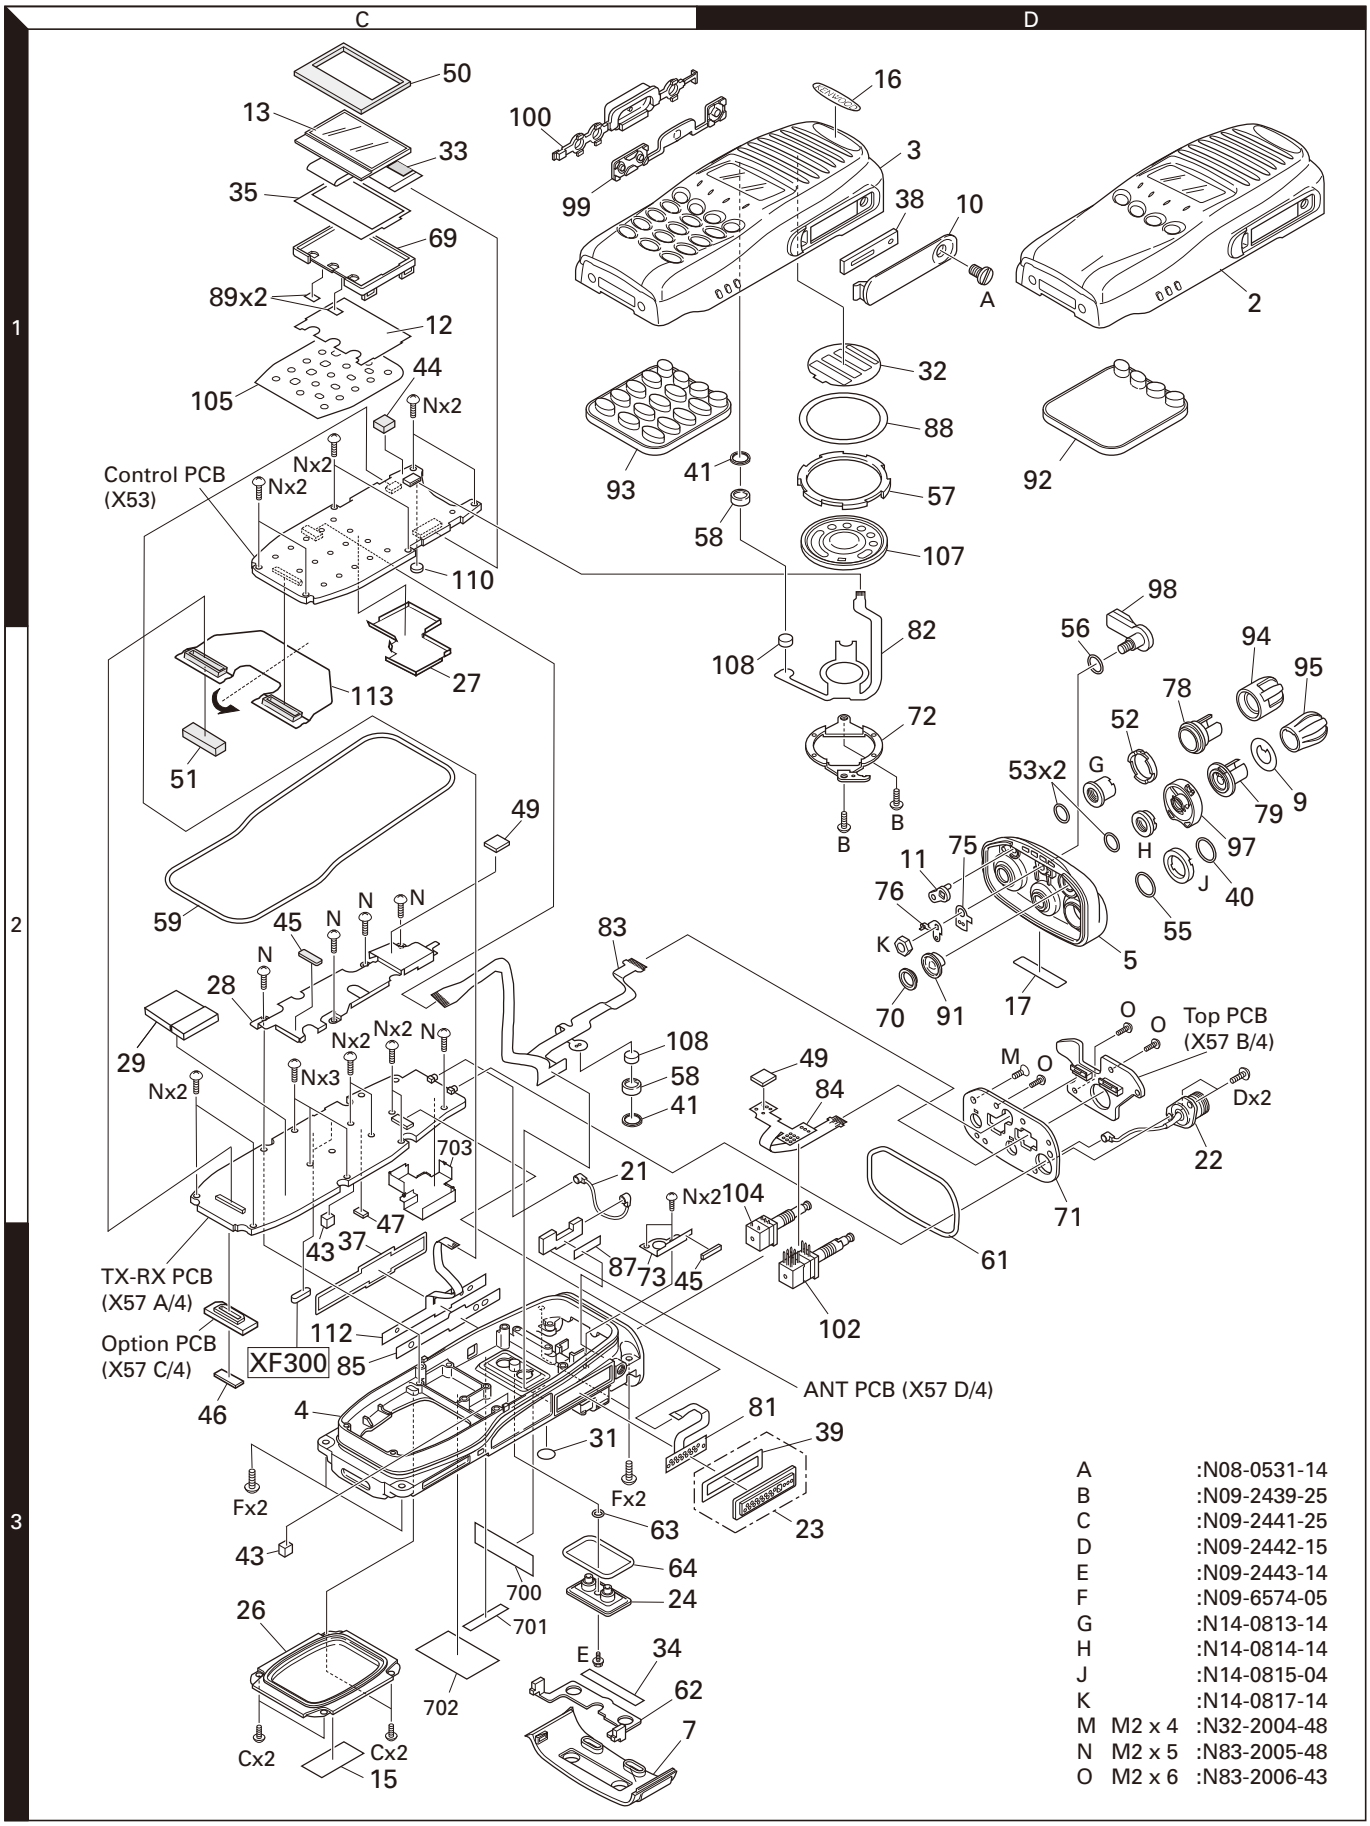


**Parts with the exploded numbers larger than 700 are not supplied.**
**If a part reference number is listed in a box on the exploded view of the PCB, that part does not come with the PCB.**
**These parts must be ordered separately.**

# PACKING

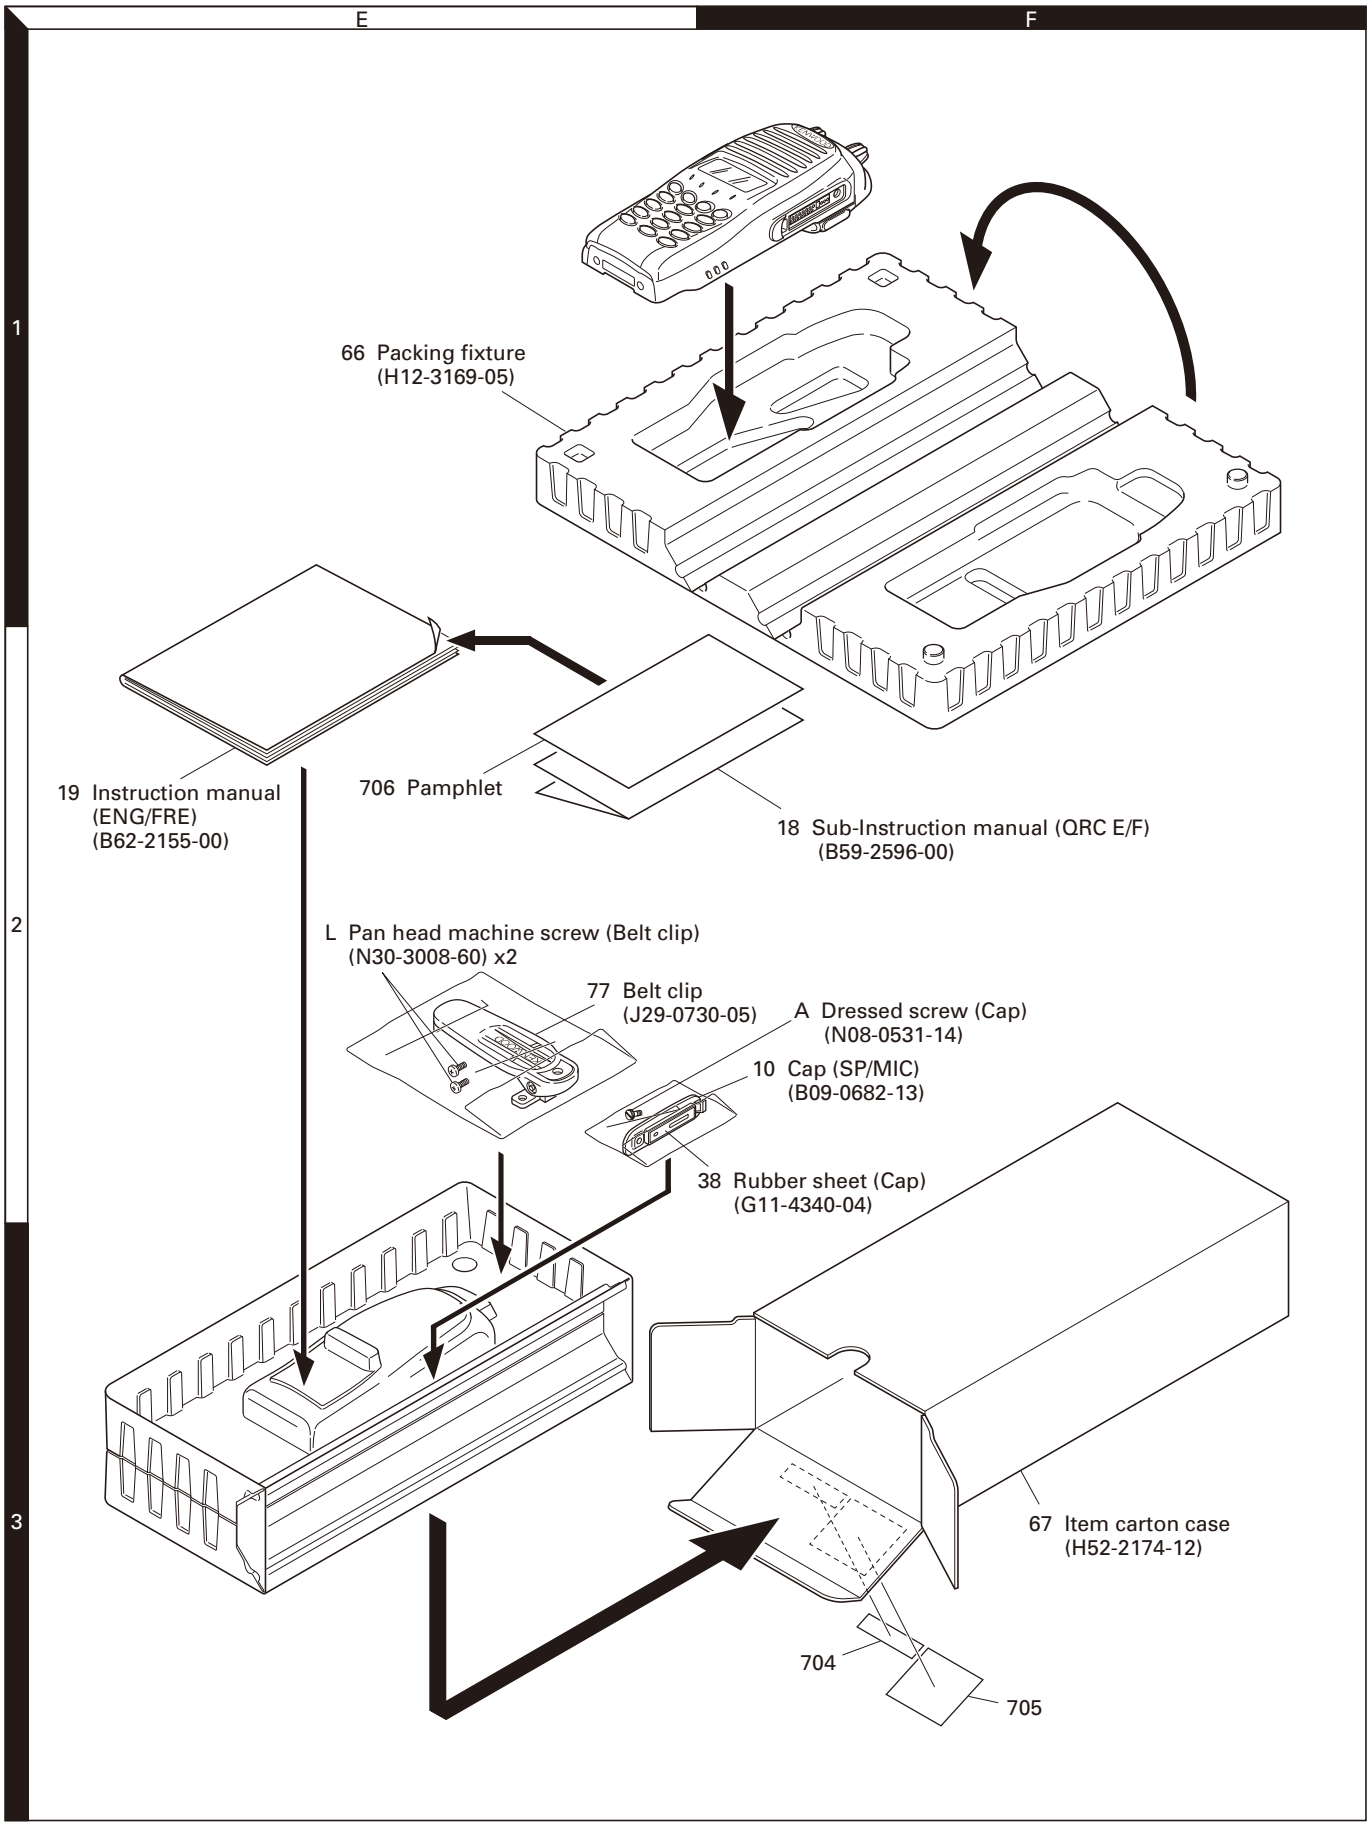


**Parts with the exploded numbers larger than 700 are not supplied.**

# PARTS LIST

✻ New Parts. ⚠indicates safety critical components.
Parts without **Parts No.** are not supplied.
Les articles non mentionnes dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

**L** : Scandinavia **K** : USA **P** : Canada
**Y** : PX (Far East, Hawaii) **T** : England **E** : Europe
**C** : China **X** : Australia **M** : Other Areas

**TK-5310(G)**

| Ref. No. | Address | New parts | Parts No. | Description | Destination |
|---|---|---|---|---|---|
| **TK-5310(G)** | | | | | |
| 1 | 1B | | A02-3875-01 | MAIN CABINET | KK4 |
| 2 | 1D | | A02-3877-11 | MAIN CABINET (4KEY) | K2K5K7 |
| 3 | 1D | | A02-3879-11 | MAIN CABINET (DTMF) | K3K6 |
| 4 | 3A,3C | | A10-4084-51 | CHASSIS | |
| 5 | 2B,2D | | A62-1104-02 | PANEL (TOP) | |
| 7 | 3A,3C | | A82-0057-02 | REAR PANEL | |
| 9 | 2B,2D | | B03-3612-04 | DRESSING PLATE (SELECTOR) | |
| 10 | 1B,1D,1E | | B09-0682-13 | CAP (SP/MIC) ACCESSOY | |
| 11 | 2B,2D | | B11-1821-03 | ILLUMINATION GUIDE (TX-BUSY) | |
| 12 | 1C | | B11-1832-04 | FILTER (LCD) | K2K3K5 |
| 12 | 1C | | B11-1832-04 | FILTER (LCD) | K6K7 |
| 13 | 1C | | B38-0929-05 | LCD | K2K3K5 |
| 13 | 1C | | B38-0929-05 | LCD | K6K7 |
| 15 | 3A,3C | | B41-1841-04 | CAUTION STICKER | |
| 16 | 1B,1D | | B43-1171-04 | BADGE (FRONT) | |
| 17 | 2B,2D | | B43-1172-04 | BADGE (REAR) | |
| 18 | 2F | | B59-2596-00 | SUB-INSTRUCTION MANUAL (QRC E/F) | |
| 19 | 2E | | B62-2155-00 | INSTRUCTION MANUAL (ENG/FRE) | |
| 21 | 2A,2C | | E37-0722-05 | LEAD WIRE WITH CONNECTOR (UNIV) | |
| 22 | 2B,2D | | E37-1126-25 | LEAD WIRE WITH CONNECTOR (ANT) | |
| 23 | 3B,3D | | E58-0510-15 | RECTANGULAR RECEPTACLE (UNIV) | |
| 24 | 3A,3C | | E72-0420-33 | TERMINAL BLOCK | |
| 26 | 3A,3C | | F07-1887-22 | COVER ASSY | |
| 27 | 2A,2B | | F10-3104-03 | SHIELDING CASE (CONT-B) | |
| 28 | 2A,2B | | F10-3114-03 | SHIELDING CASE (TXRX-A UPPER) | |
| 29 | 2A,2B | | F10-3115-04 | SHIELDING CASE (TXRX-A BOTTOM) | |
| 31 | 3A,3C | | G10-1327-04 | FIBROUS SHEET (AIR) | |
| 32 | 1B,1D | | G10-1338-04 | FIBROUS SHEET (SP) | |
| 33 | 1C | | G10-1346-04 | FIBROUS SHEET (LCD FPC) | K2K3K5 |
| 33 | 1C | | G10-1346-04 | FIBROUS SHEET (LCD FPC) | K6K7 |
| 34 | 3A,3C | | G10-1366-04 | FIBROUS SHEET (BACKPANEL) | |
| 35 | 1C | | G11-4302-04 | SHEET (LCD) | K2K3K5 |
| 35 | 1C | | G11-4302-04 | SHEET (LCD) | K6K7 |
| 37 | 3A,3C | | G11-4303-14 | SHEET (PTT) | |
| 38 | 1B,1D,2F | | G11-4340-04 | RUBBER SHEET (CAP) ACCESSORY | |
| 39 | 3B,3D | | G11-4346-08 | SHEET (UNIV) | |
| 40 | 2B,2D | | G11-4490-04 | SHEET (ANT) | |
| 41 | 1B,1D,2A,2C | | G11-4526-04 | SHEET (ANT) | |
| 43 | 3A,3C | | G13-1941-04 | CUSHION (CHASS/PCB) | |
| 44 | 1A,1C | | G13-2036-04 | CUSHION (MIC) | |
| 45 | 2A,2C,3B,3D | | G13-2046-04 | CUSHION (UNIV) | |
| 46 | 3A,3C | | G13-2070-04 | CUSHION (OPB) | |
| 47 | 2A,2C | | G13-2071-04 | CONDUCTIVE CUSHION (CHASS/PCB) | |
| 49 | 2A,2B,2C,2D | | G13-2079-04 | CUSHION (VOL) | |
| 50 | 1C | | G13-2087-14 | CUSHION (LCD) | K2K3K5 |
| 50 | 1C | | G13-2087-14 | CUSHION (LCD) | K6K7 |
| 51 | 2A,2C | | G13-2284-04 | CUSHION (CORD ASSY) | |
| 52 | 2B,2D | | G53-1628-04 | PACKING (VOLTORQ-UP) | |
| 53 | 2B,2D | | G53-1629-05 | PACKING (VOL,SEL O-RIG) | |
| 55 | 2B,2D | | G53-1630-05 | PACKING (ANT O-RIG) | |
| 56 | 2B,2D | | G53-1631-05 | PACKING (LEVER SW O-RING) | |
| 57 | 1B,1D | | G53-1633-04 | PACKING (SP) | |
| 58 | 1B,1D,2A,2C | | G53-1634-14 | PACKING (MAIN MIC,NC MIC) | |
| 59 | 2A,2C | | G53-1637-04 | PACKING (MAIN) | |
| 61 | 2B,2D | | G53-1638-04 | PACKING (TOP) | |
| 62 | 3A,3C | | G53-1640-03 | PACKING (BATT) | |
| 63 | 3A,3C | | G53-1649-05 | PACKING (TERMINAL O-RING) | |
| 64 | 3A,3C | | G53-1663-23 | PACKING (TERMINAL BLOCK) | |
| 66 | 1F | | H12-3169-05 | PACKING FIXTURE | |
| 67 | 3F | | H52-2174-12 | ITEM CARTON CASE | |
| 69 | 1C | | J19-5475-12 | HOLDER (LCD) | K2K3K5 |
| 69 | 1C | | J19-5475-12 | HOLDER (LCD) | K6K7 |
| 70 | 2B,2D | | J19-5477-04 | HOLDER (EMG) | |
| 71 | 2B,2D | | J21-8482-13 | MOUNTING HARDWARE (TOP) | |
| 72 | 2B,2D | | J21-8483-13 | MOUNTING HARDWARE (SP) | |
| 73 | 3A,3C | | J21-8484-04 | MOUNTING HARDWARE (NC MIC) | |
| 75 | 2B,2D | | J21-8495-04 | MOUNTING HARDWARE (LEVER PANEL) | |
| 76 | 2B,2D | | J21-8581-04 | MOUNTING HARDWARE (LEVER) | |
| 77 | 2E | | J29-0730-05 | BELT CLIP ACCESSORY | |
| 78 | 2B,2D | | J39-0646-03 | SPACER (VOL) | |
| 79 | 2B,2D | | J39-0647-03 | SPACER (SELECTOR) | |
| 81 | 3B,3D | | J82-0097-25 | FPC (UNIV) | |
| 82 | 2B,2D | | J82-0098-05 | FPC (SP/MIC) | |
| 83 | 2A,2C | | J87-0011-05 | FPC (LEAD FREE/CONT-TOP) | |
| 84 | 2B,2D | ✻ | J87-0025-05 | FPC (LEAD FREE/VOL.SEL) | |
| 85 | 3A,3C | | J99-0377-14 | ADHESIVE SHEET (PTT) | |
| 87 | 3A,3C | | J99-0380-04 | ADHESIVE SHEET (ANT PCB) | |
| 88 | 1B,1D | | J99-0383-14 | ADHESIVE SHEET (SP) | |
| 89 | 1C | | J99-0390-04 | ADHESIVE SHEET (LCD FILTER) | K2K3K5 |
| 89 | 1C | | J99-0390-04 | ADHESIVE SHEET (LCD FILTER) | K6K7 |
| 91 | 2B,2D | | K29-9319-03 | KEY TOP (EMG) | |
| 92 | 1D | | K29-9320-03 | KEY TOP (4KEY) | K2K5K7 |
| 93 | 1C | | K29-9321-13 | KEY TOP (DTMF) | K3K6 |
| 94 | 2B,2D | | K29-9322-03 | KNOB (VOL) | |
| 95 | 2B,2D | | K29-9323-03 | KNOB (SELECTOR) | |
| 97 | 2B,2D | | K29-9324-13 | KNOB (CONCENTRIC SW) | |
| 98 | 1B,1D | | K29-9325-04 | KNOB (LEVER SW) | |
| 99 | 1A,1C | | K29-9327-03 | KEY TOP (PTT) | |
| 100 | 1A,1C | | K29-9328-02 | KNOB (PTT) | |
| A | 1B,1D,2E | | N08-0531-14 | DRESSED SCREW (CAP) ACCESSORY | |
| B | 2B,2D | | N09-2439-25 | SPECIAL SCREW (SP) | |
| C | 3A,3C | | N09-2441-25 | SPECIAL SCREW (COVER ASSY) | |
| D | 2B,2D | | N09-2442-15 | SPECIAL SCREW (ANT) | |
| E | 3A,3C | | N09-2443-14 | HEXAGON HEAD SCREW (TERMINAL) | |
| F | 3A,3C | | N09-6574-05 | SPECIAL SCREW (CASE) | |
| G | 2B,2D | | N14-0813-14 | CIRCULAR NUT (VOL) | |
| H | 2B,2D | | N14-0814-14 | CIRCULAR NUT (SEL) | |
| J | 2B,2D | | N14-0815-04 | CIRCULAR NUT (ANT) | |
| K | 2B,2D | | N14-0817-14 | HEXAGON NUT (LEVER SW) | |
| L | 2E | | N30-3008-60 | PAN HEAD MACHINE SCREW (BELT CLIP) | |
| M | 2B,2D | | N32-2004-48 | FLAT HEAD MACHINE SCREW (TOP) | |
| N | 1A,2A,1C,2C | | N83-2005-48 | PAN HEAD TAPTITE SCREW (CONT/TXRX) | |
| O | 2B,2D | | N83-2006-43 | PAN HEAD TAPTITE SCREW (TOP) | |
| 102 | 3B,3D | | R31-0654-05 | VARIABLE RESISTOR (VOL) | |
| 104 | 2B,2D | | S60-0431-15 | ROTARY SWITCH (SEL) | |

# PARTS LIST

**TK-5310(G)**
**CONTROL UNIT (X53-4390-XX)**

| Ref. No. | Address | New parts | Parts No. | Description | Destination |
|---|---|---|---|---|---|
| 105 | 1C | | S79-0454-05 | KEYBOARD ASSY (4KEY&DTMF) | K2K3K5 |
| 105 | 1C | | S79-0454-05 | KEYBOARD ASSY (4KEY&DTMF) | K6K7 |
| 107 | 1B,1D | | T07-0755-15 | SPEAKER | |
| 108 | 2A,2B,2C,2D | | T91-0575-05 | MIC ELEMENT (MAIN MIC,NC MIC) | |
| 110 | 1A,1C | | W09-0971-05 | LITHIUM CELL | |
| 112 | 3A,3C | | X41-3690-10 | SWITCH UNIT (FPC (PTT)) | |
| 113 | 2A,2C | | X42-3370-10 | CORD ASSY (FPC (100P)) | |
| - | | ✻ | X53-4390-13 | SERVICE CONTROL UNIT | KK4 |
| - | | | X53-4390-14 | SERVICE CONTROL UNIT | K2K5K7 |
| - | | | X53-4390-15 | SERVICE CONTROL UNIT | K3K6 |
| **CONTROL UNIT (X53-4390-XX) -10: K,K4 -11: K2,K5,K7 -12: K3,K6** | | | | | |
| D2-5 | | | B30-2171-05 | LED | K3K6 |
| D5 | | | B30-2171-05 | LED | K2K5K7 |
| D6-8 | | | B30-2261-05 | LED | K2K3K5 |
| D6-8 | | | B30-2261-05 | LED | K6K7 |
| D9-12 | | | B30-2171-05 | LED | K3K6 |
| D12 | | | B30-2171-05 | LED | K2K5K7 |
| C12-15 | | | CK73HB1A104K | CHIP C 0.10UF K | |
| C16 | | | CK73HB0J105K | CHIP C 1.0UF K | |
| C17 | | | CK73HB1E103K | CHIP C 0.010UF K | |
| C18,19 | | | CK73HB1A104K | CHIP C 0.10UF K | K2K3K5 |
| C18,19 | | | CK73HB1A104K | CHIP C 0.10UF K | K6K7 |
| C19 | | | CK73HB1A104K | CHIP C 0.10UF K | KK4 |
| C21,22 | | | CK73HB1H102K | CHIP C 1000PF K | |
| C23 | | | CK73HB1A104K | CHIP C 0.10UF K | |
| C24 | | | CC73HCH1H101J | CHIP C 100PF J | K2K3K5 |
| C24 | | | CC73HCH1H101J | CHIP C 100PF J | K6K7 |
| C25 | | | CK73HB1A104K | CHIP C 0.10UF K | |
| C27 | | | CK73HB1A104K | CHIP C 0.10UF K | |
| C29 | | | CK73HB1A104K | CHIP C 0.10UF K | |
| C30 | | | CK73HB1E103K | CHIP C 0.010UF K | |
| C31 | | | CK73HB1A104K | CHIP C 0.10UF K | |
| C32 | | | CK73HB1E103K | CHIP C 0.010UF K | |
| C33 | | | CK73HB0J105K | CHIP C 1.0UF K | |
| C34 | | | CK73HB1A104K | CHIP C 0.10UF K | |
| C35 | | | CK73HB0J105K | CHIP C 1.0UF K | |
| C36 | | | CK73HB1A104K | CHIP C 0.10UF K | |
| C37 | | | CK73HB1E103K | CHIP C 0.010UF K | |
| C38,39 | | | CK73HB1A104K | CHIP C 0.10UF K | |
| C40 | | | CK73HB1E103K | CHIP C 0.010UF K | |
| C44 | | | CK73HB1E682K | CHIP C 6800PF K | |
| C47 | | | CK73HB1E103K | CHIP C 0.010UF K | |
| C48 | | | CK73HB1A104K | CHIP C 0.10UF K | |
| C49 | | | CK73GB0J106K | CHIP C 10UF K | |
| C50-55 | | | CK73HB1A104K | CHIP C 0.10UF K | |
| C56 | | | CK73HB1E103K | CHIP C 0.010UF K | |
| C57,58 | | | CK73GB1E105K | CHIP C 1.0UF K | |
| C59,60 | | | CC73HCH1H101J | CHIP C 100PF J | |
| C61 | | | CK73HB1H102K | CHIP C 1000PF K | |
| C62 | | | CK73HB1E103K | CHIP C 0.010UF K | |
| C63 | | | CK73HB0J105K | CHIP C 1.0UF K | |
| C64,65 | | | CK73HB1A104K | CHIP C 0.10UF K | |
| C66 | | | CK73HB1E682K | CHIP C 6800PF K | |

| Ref. No. | Address | New parts | Parts No. | Description | Destination |
|---|---|---|---|---|---|
| C67 | | | CK73HB1A104K | CHIP C 0.10UF K | |
| C68 | | | CK73GB0J106K | CHIP C 10UF K | |
| C69 | | | CC73HCH1H101J | CHIP C 100PF J | |
| C70,71 | | | CK73HB1A104K | CHIP C 0.10UF K | |
| C72 | | | CC73HCH1H030C | CHIP C 3.0PF C | |
| C73 | | | CK73HB1E103K | CHIP C 0.010UF K | |
| C74 | | | CK73HB0J105K | CHIP C 1.0UF K | |
| C75-78 | | | CK73HB1A104K | CHIP C 0.10UF K | |
| C79 | | | CK73HB1E103K | CHIP C 0.010UF K | |
| C80 | | | CK73HB0J105K | CHIP C 1.0UF K | |
| C81-85 | | | CK73HB1A104K | CHIP C 0.10UF K | |
| C86 | | | CC73HCH1H101J | CHIP C 100PF J | |
| C87 | | | CK73HB1A104K | CHIP C 0.10UF K | |
| C88 | | | CK73HB1H102K | CHIP C 1000PF K | |
| C90 | | | CK73HB1A104K | CHIP C 0.10UF K | |
| C91 | | | CK73HB1H102K | CHIP C 1000PF K | |
| C92 | | | CK73HB1A104K | CHIP C 0.10UF K | |
| C93 | | | CK73HB0J105K | CHIP C 1.0UF K | |
| C94 | | | CK73HB0J474K | CHIP C 0.47UF K | |
| C95 | | | CK73HB1H102K | CHIP C 1000PF K | |
| C96 | | | CK73HB0J474K | CHIP C 0.47UF K | |
| C97-100 | | | CK73HB1H471K | CHIP C 470PF K | |
| C101 | | | CK73HB1A104K | CHIP C 0.10UF K | |
| C102 | | | CK73HB1H471K | CHIP C 470PF K | |
| C103-111 | | | CK73HB1H472K | CHIP C 4700PF K | |
| C112 | | | CK73HB1A104K | CHIP C 0.10UF K | |
| C113,114 | | | CK73GB0J106K | CHIP C 10UF K | |
| C115 | | | CK73HB1H471K | CHIP C 470PF K | |
| C116 | | | CK73HB0J105K | CHIP C 1.0UF K | |
| C117 | | | CK73GB1E105K | CHIP C 1.0UF K | |
| C118,119 | | | CK73HB1E103K | CHIP C 0.010UF K | |
| C120 | | | CK73HB1H472K | CHIP C 4700PF K | |
| C121,122 | | | CK73HB1E103K | CHIP C 0.010UF K | |
| C136,137 | | | CK73HB1A104K | CHIP C 0.10UF K | |
| C141 | | | CK73HB1A104K | CHIP C 0.10UF K | |
| C143 | | | CK73HB1A104K | CHIP C 0.10UF K | K2K3K5 |
| C143 | | | CK73HB1A104K | CHIP C 0.10UF K | K6K7 |
| C144 | | | CC73HCH1H221J | CHIP C 220PF J | K2K3K5 |
| C144 | | | CC73HCH1H221J | CHIP C 220PF J | K6K7 |
| C146,147 | | | CK73HB1A104K | CHIP C 0.10UF K | K2K3K5 |
| C146,147 | | | CK73HB1A104K | CHIP C 0.10UF K | K6K7 |
| C148-152 | | | CK73HB0J105K | CHIP C 1.0UF K | K2K3K5 |
| C148-152 | | | CK73HB0J105K | CHIP C 1.0UF K | K6K7 |
| C153 | | | CK73HB1A104K | CHIP C 0.10UF K | KK4 |
| C153,154 | | | CK73HB1A104K | CHIP C 0.10UF K | K2K3K5 |
| C153,154 | | | CK73HB1A104K | CHIP C 0.10UF K | K6K7 |
| C155 | | | CK73HB1H102K | CHIP C 1000PF K | |
| C156 | | | CC73HCH1H470J | CHIP C 47PF J | |
| C157 | | | CC73HCH1H101J | CHIP C 100PF J | |
| C161 | | | CK73HB1E103K | CHIP C 0.010UF K | |
| C997 | | | CK73HB1H102K | CHIP C 1000PF K | KK4 |
| C998 | | | CK73HB1H102K | CHIP C 1000PF K | K2K5K7 |
| C999 | | | CK73HB1H102K | CHIP C 1000PF K | K3K6 |
| CN1 | | ✻ | E40-6884-05 | FLAT CABLE CONNECTOR | K2K3K5 |
| CN1 | | ✻ | E40-6884-05 | FLAT CABLE CONNECTOR | K6K7 |
| CN34 | | | E41-3183-05 | FLAT CABLE CONNECTOR | |
| CN35 | | | E40-6755-05 | FLAT CABLE CONNECTOR | |
| CN38 | | ✻ | E40-6777-05 | FLAT CABLE CONNECTOR | |
| CN40 | | | E40-6846-05 | PIN ASSY | |

# PARTS LIST

**CONTROL UNIT (X53-4390-XX)**

| Ref. No. | Address | New parts | Parts No. | Description | Destination |
|---|---|---|---|---|---|
| CN37 | | | J19-5386-05 | HOLDER | |
| L4-6 | | | L92-0444-05 | CHIP FERRITE | |
| L7,8 | | | L92-0162-05 | BEADS CORE | |
| L9 | | | L92-0444-05 | CHIP FERRITE | |
| L10 | | | L92-0149-05 | CHIP FERRITE | |
| L11,12 | | | L92-0467-05 | CHIP FERRITE | |
| L13 | | | L92-0163-05 | BEADS CORE | |
| L14,15 | | | L92-0467-05 | CHIP FERRITE | |
| L16,17 | | | L92-0444-05 | CHIP FERRITE | |
| L19 | | | L92-0444-05 | CHIP FERRITE | |
| L20,21 | | | L92-0163-05 | BEADS CORE | |
| L22,23 | | | L92-0446-05 | BEADS CORE | |
| L24,25 | | | L92-0162-05 | BEADS CORE | K2K3K5 |
| L24,25 | | | L92-0162-05 | BEADS CORE | K6K7 |
| L25 | | | L92-0162-05 | BEADS CORE | KK4 |
| L27 | | | L92-0446-05 | BEADS CORE | |
| X1 | | | L77-1802-05 | CRYSTAL RESONATOR (32.768KHZ) | |
| X2 | | | L77-3015-05 | TCXO (18.432MZ) | |
| R5 | | | RK73HB1J474J | CHIP R 470K J 1/16W | |
| R6-9 | | | RK73HB1J101J | CHIP R 100 J 1/16W | K3K6 |
| R9 | | | RK73HB1J101J | CHIP R 100 J 1/16W | K2K5K7 |
| R11-13 | | | RK73HB1J181J | CHIP R 180 J 1/16W | K2K3K5 |
| R11-13 | | | RK73HB1J181J | CHIP R 180 J 1/16W | K6K7 |
| R16 | | | RK73HB1J474J | CHIP R 470K J 1/16W | |
| R17 | | | RK73HB1J222J | CHIP R 2.2K J 1/16W | K2K3K5 |
| R17 | | | RK73HB1J222J | CHIP R 2.2K J 1/16W | K6K7 |
| R18 | | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R19,20 | | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R21 | | | RK73HB1J474J | CHIP R 470K J 1/16W | K2K3K5 |
| R21 | | | RK73HB1J474J | CHIP R 470K J 1/16W | K6K7 |
| R25,26 | | | RK73HB1J473J | CHIP R 47K J 1/16W | |
| R27 | | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R29 | | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R30 | | | RK73HB1J474J | CHIP R 470K J 1/16W | |
| R31 | | | RK73HB1J471J | CHIP R 470 J 1/16W | |
| R32-34 | | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R35,36 | | | RK73HB1J471J | CHIP R 470 J 1/16W | |
| R37-39 | | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R40-42 | | | RK73HB1J101J | CHIP R 100 J 1/16W | |
| R43 | | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R44 | | | RK73HB1J101J | CHIP R 100 J 1/16W | |
| R45 | | | RK73HB1J471J | CHIP R 470 J 1/16W | |
| R46-49 | | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R50 | | | RK73HB1J473J | CHIP R 47K J 1/16W | |
| R51 | | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R52 | | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R53 | | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R54-57 | | | RK73HB1J471J | CHIP R 470 J 1/16W | |
| R58 | | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R59 | | | RK73HB1J471J | CHIP R 470 J 1/16W | |
| R60-65 | | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R66 | | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R67 | | | RK73HB1J151J | CHIP R 150 J 1/16W | |
| R69 | | | RK73HB1J153J | CHIP R 15K J 1/16W | |
| R70 | | | RK73HB1J474J | CHIP R 470K J 1/16W | |
| R71 | | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R72 | | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R74 | | | RK73HB1J470J | CHIP R 47 J 1/16W | |
| R75 | | | RK73HB1J103J | CHIP R 10K J 1/16W | |
| R76 | | | RK73HB1J473J | CHIP R 47K J 1/16W | |
| R77,78 | | | RK73HB1J222J | CHIP R 2.2K J 1/16W | |
| R80,81 | | | RK73HB1J220J | CHIP R 22 J 1/16W | |
| R82 | | | RK73HB1J470J | CHIP R 47 J 1/16W | |
| R83,84 | | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R86 | | | RK73HB1J474J | CHIP R 470K J 1/16W | |
| R88 | | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R90 | | | RK73HH1J104D | CHIP R 100K D 1/16W | |
| R92-95 | | | RK73HH1J153D | CHIP R 15K D 1/16W | |
| R96,97 | | | RK73HH1J683D | CHIP R 68K D 1/16W | |
| R98,99 | | | RK73HH1J473D | CHIP R 47K D 1/16W | |
| R100 | | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R101 | | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R102 | | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R103 | | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R105 | | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R106 | | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R107 | | | RK73HB1J103J | CHIP R 10K J 1/16W | |
| R108 | | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R109,110 | | | RK73HH1J223D | CHIP R 22K D 1/16W | |
| R111-113 | | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R115 | | | RK73HB1J473J | CHIP R 47K J 1/16W | |
| R116 | | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R117 | | | RK73HB1J105J | CHIP R 1.0M J 1/16W | |
| R118 | | | RK73HB1J274J | CHIP R 270K J 1/16W | |
| R119 | | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R120 | | | RK73HB1J274J | CHIP R 270K J 1/16W | |
| R121,122 | | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R123,124 | | | RK73HB1J474J | CHIP R 470K J 1/16W | |
| R125 | | | RK73HB1J470J | CHIP R 47 J 1/16W | |
| R126,127 | | | RK73HB1J154J | CHIP R 150K J 1/16W | |
| R128 | | | RK73HB1J273J | CHIP R 27K J 1/16W | |
| R129 | | | RK73HB1J473J | CHIP R 47K J 1/16W | |
| R130,131 | | | RK73HB1J223J | CHIP R 22K J 1/16W | |
| R132,133 | | | RK73HB1J473J | CHIP R 47K J 1/16W | |
| R134 | | | RK73HB1J223J | CHIP R 22K J 1/16W | |
| R135,136 | | | RK73HB1J182J | CHIP R 1.8K J 1/16W | |
| R137-142 | | | RK73HB1J473J | CHIP R 47K J 1/16W | |
| R143,144 | | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R145 | | | RK73HB1J473J | CHIP R 47K J 1/16W | |
| R146,147 | | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R148 | | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R151 | | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R152 | | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R154-156 | | | RK73HB1J474J | CHIP R 470K J 1/16W | |
| R157 | | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R158 | | | RK73HB1J474J | CHIP R 470K J 1/16W | |
| R159 | | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R160 | | | RK73HB1J471J | CHIP R 470 J 1/16W | |
| R161 | | | RK73HB1J103J | CHIP R 10K J 1/16W | |
| R162 | | | RK73HB1J474J | CHIP R 470K J 1/16W | |
| R163 | | | RK73HB1J471J | CHIP R 470 J 1/16W | |
| R164,165 | | | RK73HB1J474J | CHIP R 470K J 1/16W | |
| R166-168 | | | RK73HB1J103J | CHIP R 10K J 1/16W | |
| R169,170 | | | RK73HB1J474J | CHIP R 470K J 1/16W | |
| R171 | | | RK73HB1J332J | CHIP R 3.3K J 1/16W | |
| R172 | | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R173 | | | RK73HB1J474J | CHIP R 470K J 1/16W | |
| R174,175 | | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |

# PARTS LIST

**CONTROL UNIT (X53-4390-XX)**
**TX-RX UNIT (X57-7660-XX)**

| Ref. No. | Address | New parts | Parts No. | Description | Destination |
|---|---|---|---|---|---|
| R176 | | | RK73HB1J103J | CHIP R 10K J 1/16W | |
| R177 | | | RK73HB1J474J | CHIP R 470K J 1/16W | |
| R178 | | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R179 | | | RK73HB1J473J | CHIP R 47K J 1/16W | |
| R181 | | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R182 | | | RK73HB1J473J | CHIP R 47K J 1/16W | |
| R184 | | | RK73HB1J473J | CHIP R 47K J 1/16W | |
| R185 | | | RK73HB1J100J | CHIP R 10 J 1/16W | |
| R187 | | | RK73HB1J471J | CHIP R 470 J 1/16W | |
| R188,189 | | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R190 | | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R191-199 | | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R201,202 | | | RK73HB1J103J | CHIP R 10K J 1/16W | K2K3K5 |
| R201,202 | | | RK73HB1J103J | CHIP R 10K J 1/16W | K6K7 |
| R203 | | | RK73HB1J000J | CHIP R 0.0 J 1/16W | K2K3K5 |
| R203 | | | RK73HB1J000J | CHIP R 0.0 J 1/16W | K6K7 |
| R204 | | | RK73HB1J104J | CHIP R 100K J 1/16W | K2K3K5 |
| R204 | | | RK73HB1J104J | CHIP R 100K J 1/16W | K6K7 |
| R205-212 | | | RK73HB1J103J | CHIP R 10K J 1/16W | K2K3K5 |
| R205-212 | | | RK73HB1J103J | CHIP R 10K J 1/16W | K6K7 |
| R215 | | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R219-221 | | | RK73HB1J101J | CHIP R 100 J 1/16W | |
| R225-227 | | | RK73HB1J101J | CHIP R 100 J 1/16W | |
| R230-284 | | | RK73HB1J101J | CHIP R 100 J 1/16W | |
| R285 | | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R287 | | | RK73HB1J333J | CHIP R 33K J 1/16W | |
| R288 | | | RK73HB1J393J | CHIP R 39K J 1/16W | |
| R291 | | | RK73HB1J822J | CHIP R 8.2K J 1/16W | |
| R292 | | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R293 | | | RK73HB1J473J | CHIP R 47K J 1/16W | |
| R295 | | | RK73HB1J223J | CHIP R 22K J 1/16W | |
| R997 | | | RK73HB1J000J | CHIP R 0.0 J 1/16W | KK4 |
| R998 | | | RK73HB1J000J | CHIP R 0.0 J 1/16W | K2K5K7 |
| R999 | | | RK73HB1J000J | CHIP R 0.0 J 1/16W | K3K6 |
| D1 | | | UDZW3.9(B) | ZENER DIODE | K2K3K5 |
| D1 | | | UDZW3.9(B) | ZENER DIODE | K6K7 |
| D13-16 | | | 1SS388F | DIODE | |
| D19,20 | | | AVRM1005C270M | VARISTOR | |
| D22 | | | AVRM1005C270M | VARISTOR | |
| D23 | | | 1SS301F | DIODE | |
| D24 | | | 1SS416 | DIODE | |
| D25 | | | 1SS301F | DIODE | |
| D26 | | | 1SS388F | DIODE | |
| D27 | | | AVRM1005C270M | VARISTOR | |
| IC1 | | | **Note 1** | ROM IC | |
| IC3 | | | **Note 1** | MICROPROCESSOR IC | |
| IC4 | | | **Note 1** | SRAM IC | |
| IC5 | | | XC6109C29ANN | ANALOGUE IC | |
| IC6 | | | TC7SH08FU-F | MOS-IC | |
| IC7 | | | RV5C386A | MOS-IC | |
| IC8 | | | SM5023CNDH-G | MOS-IC | |
| IC9 | | | TC7W66FK-F | MOS-IC | |
| IC10 | | | **Note 1** | MOS-IC | |
| IC11,12 | | | TPA6201A1DRBR | ANALOGUE IC | |
| IC13 | | | AK2925T | MOS-IC | |
| IC15 | | | PCA9535BS | MOS-IC | |
| IC16 | | | XC61CC5602NR | MOS-IC | |
| IC17 | | | S-812C31BPI-G | ANALOGUE IC | |
| IC18 | | | TC7WZ245FK-F | MOS-IC | K2K3K5 |
| IC18 | | | TC7WZ245FK-F | MOS-IC | K6K7 |
| IC19 | | | TC74LCX245FK | MOS-IC | K2K3K5 |
| IC19 | | | TC74LCX245FK | MOS-IC | K6K7 |
| Q1 | | | 2SB798AZ(DLDK | TRANSISTOR | K2K3K5 |
| Q1 | | | 2SB798AZ(DLDK | TRANSISTOR | K6K7 |
| Q2 | | | 2SC4617(S) | TRANSISTOR | K2K3K5 |
| Q2 | | | 2SC4617(S) | TRANSISTOR | K6K7 |
| Q3 | | | 2SB1132(Q,R) | TRANSISTOR | |
| Q4 | | | SSM3K15TE(F) | FET | |
| Q5 | | | UMG3N | TRANSISTOR | |
| Q6 | | | EMD12 | TRANSISTOR | |
| Q7,8 | | | SSM6N16FE-F | FET | |
| Q10,11 | | | SSM6L05FU-F | FET | |
| Q12 | | | EMD12 | TRANSISTOR | |
| Q13 | | | 2SA1955A-F | TRANSISTOR | |
| Q14,15 | | | SSM3K15TE(F) | FET | |
| Q16 | | | 2SA1955A-F | TRANSISTOR | |

**TX-RX UNIT (X57-7660-XX) -10: K,K2,K3 -11: K4,K5,K6,K7**

| Ref. No. | Address | New parts | Parts No. | Description | Destination |
|---|---|---|---|---|---|
| D901 | | | B30-2019-05 | LED (RE/GR) | |
| C101 | | | CK73HB1A104K | CHIP C 0.10UF K | |
| C106,107 | | | CK73HB1H471K | CHIP C 470PF K | |
| C108 | | | CK73HB1A104K | CHIP C 0.10UF K | |
| C109 | | | CK73GB1E105K | CHIP C 1.0UF K | |
| C110 | | | CK73HB1H471K | CHIP C 470PF K | |
| C111 | | | CK73GB1E105K | CHIP C 1.0UF K | |
| C114,115 | | | CK73HB1A104K | CHIP C 0.10UF K | |
| C116,117 | | | CK73HB1E103K | CHIP C 0.010UF K | |
| C118 | | | CK73HB1H471K | CHIP C 470PF K | |
| C122 | | | CC73HCH1H101J | CHIP C 100PF J | |
| C125 | | | CK73GB1C104K | CHIP C 0.10UF K | |
| C126 | | | C93-0787-05 | CHIP C 0.1UF J | |
| C127 | | | CK73HB1H471K | CHIP C 470PF K | |
| C128 | | | CC73HCH1H470J | CHIP C 47PF J | |
| C129 | | | CK73HB1E103K | CHIP C 0.010UF K | |
| C130 | | | CC73HCH1H470J | CHIP C 47PF J | |
| C131 | | | CK73HB1E103K | CHIP C 0.010UF K | |
| C132 | | | CK73HB1H471K | CHIP C 470PF K | |
| C135,136 | | | CK73HB1E103K | CHIP C 0.010UF K | |
| C137,138 | | | CC73HCH1H101J | CHIP C 100PF J | |
| C139 | | | CK73HB1E103K | CHIP C 0.010UF K | |
| C140 | | | C92-0863-05 | CHIP TNTL 0.047UF 35WV | |
| C141 | | | CK73HB1H471K | CHIP C 470PF K | |
| C142 | | ✻ | CS77CA1VR47M | CHIP TNTL 0.47UF 35WV | |
| C143 | | | CK73HB1H471K | CHIP C 470PF K | |
| C144 | | | CS77CP0J100M | CHIP TNTL 10UF 6.3WV | |
| C145 | | | CK73HB1H471K | CHIP C 470PF K | |
| C147 | | | CK73GB0J475K | CHIP C 4.7UF K | |
| C148 | | | CK73HB1H471K | CHIP C 470PF K | |
| C149 | | | CC73HCH1H150J | CHIP C 15PF J | KK2K3 |
| C149 | | | CC73HCH1H390J | CHIP C 39PF J | K4K5K6 |
| C149 | | | CC73HCH1H390J | CHIP C 39PF J | K7 |
| C150 | | | CC73HCH1H0R5B | CHIP C 0.5PF B | KK2K3 |
| C150 | | | CC73HCH1H010B | CHIP C 1.0PF B | K4K5K6 |
| C150 | | | CC73HCH1H010B | CHIP C 1.0PF B | K7 |
| C151 | | | CC73HCH1H220J | CHIP C 22PF J | KK2K3 |
| C151 | | | CC73HCH1H270J | CHIP C 27PF J | K4K5K6 |

**Note 1: This part cannot be replaced. Therefore, this part is not supplied as a service part.**

# PARTS LIST

TX-RX UNIT (X57-7660-XX)

| Ref. No. | Address | New parts | Parts No. | Description | | | Destination |
|---|---|---|---|---|---|---|---|
| C151 | | | CC73HCH1H270J | CHIP C | 27PF | J | K7 |
| C152 | | | CC73HCH1H2R5B | CHIP C | 2.5PF | B | |
| C153 | | | CK73HB1H471K | CHIP C | 470PF | K | |
| C154 | | | CC73HCH1H0R5B | CHIP C | 0.5PF | B | |
| C155 | | | CK73HB1H471K | CHIP C | 470PF | K | |
| C156 | | | CC73GCH1H050B | CHIP C | 5.0PF | B | KK2K3 |
| C156 | | | CC73GCH1H060B | CHIP C | 6.0PF | B | K4K5K6 |
| C156 | | | CC73GCH1H060B | CHIP C | 6.0PF | B | K7 |
| C157 | | | CC73GCH1H020B | CHIP C | 2.0PF | B | KK2K3 |
| C157 | | | CC73GCH1H050B | CHIP C | 5.0PF | B | K4K5K6 |
| C157 | | | CC73GCH1H050B | CHIP C | 5.0PF | B | K7 |
| C158,159 | | | CC73HCH1H470J | CHIP C | 47PF | J | K4K5K6 |
| C158,159 | | | CC73HCH1H470J | CHIP C | 47PF | J | K7 |
| C159 | | | CC73HCH1H470J | CHIP C | 47PF | J | KK2K3 |
| C160,161 | | | CC73GCH1H050B | CHIP C | 5.0PF | B | |
| C162 | | | CC73HCH1H100B | CHIP C | 10PF | B | K4K5K6 |
| C162 | | | CC73HCH1H100B | CHIP C | 10PF | B | K7 |
| C163 | | | CC73HCH1H080B | CHIP C | 8.0PF | B | KK2K3 |
| C163 | | | CC73HCH1H120J | CHIP C | 12PF | J | K4K5K6 |
| C163 | | | CC73HCH1H120J | CHIP C | 12PF | J | K7 |
| C164 | | | CC73GCH1H050B | CHIP C | 5.0PF | B | K4K5K6 |
| C164 | | | CC73GCH1H050B | CHIP C | 5.0PF | B | K7 |
| C164 | | | CC73GCH1H060B | CHIP C | 6.0PF | B | KK2K3 |
| C165 | | | CC73GCH1H040B | CHIP C | 4.0PF | B | |
| C166-168 | | | CK73HB1H471K | CHIP C | 470PF | K | |
| C169,170 | | | CC73HCH1H020B | CHIP C | 2.0PF | B | K4K5K6 |
| C169,170 | | | CC73HCH1H020B | CHIP C | 2.0PF | B | K7 |
| C170 | | | CC73HCH1H020B | CHIP C | 2.0PF | B | KK2K3 |
| C171,172 | | | CC73HCH1H0R5B | CHIP C | 0.5PF | B | |
| C173 | | | CC73HCH1H090B | CHIP C | 9.0PF | B | K4K5K6 |
| C173 | | | CC73HCH1H090B | CHIP C | 9.0PF | B | K7 |
| C174 | | | CC73HCH1H030B | CHIP C | 3.0PF | B | KK2K3 |
| C174 | | | CC73HCH1H060B | CHIP C | 6.0PF | B | K4K5K6 |
| C174 | | | CC73HCH1H060B | CHIP C | 6.0PF | B | K7 |
| C175 | | | CC73HCH1H040B | CHIP C | 4.0PF | B | K4K5K6 |
| C175 | | | CC73HCH1H040B | CHIP C | 4.0PF | B | K7 |
| C176 | | | CC73HCH1H020B | CHIP C | 2.0PF | B | KK2K3 |
| C176 | | | CC73HCH1H2R5B | CHIP C | 2.5PF | B | K4K5K6 |
| C176 | | | CC73HCH1H2R5B | CHIP C | 2.5PF | B | K7 |
| C177 | | | CC73HCH1H101J | CHIP C | 100PF | J | K4K5K6 |
| C177 | | | CC73HCH1H101J | CHIP C | 100PF | J | K7 |
| C178,179 | | | CK73HB1H471K | CHIP C | 470PF | K | |
| C180 | | | CC73HCH1H040B | CHIP C | 4.0PF | B | KK2K3 |
| C180 | | | CC73HCH1H100B | CHIP C | 10PF | B | K4K5K6 |
| C180 | | | CC73HCH1H100B | CHIP C | 10PF | B | K7 |
| C182-185 | | | CK73HB1H471K | CHIP C | 470PF | K | |
| C186 | | | CK73HB0J105K | CHIP C | 1.0UF | K | |
| C187 | | | CC73HCH1H050B | CHIP C | 5.0PF | B | KK2K3 |
| C187 | | | CC73HCH1H150J | CHIP C | 15PF | J | K4K5K6 |
| C187 | | | CC73HCH1H150J | CHIP C | 15PF | J | K7 |
| C188 | | | CK73GB1H471K | CHIP C | 470PF | K | |
| C189,190 | | | CC73HCH1H470J | CHIP C | 47PF | J | K4K5K6 |
| C189,190 | | | CC73HCH1H470J | CHIP C | 47PF | J | K7 |
| C191 | | | CK73HB1H471K | CHIP C | 470PF | K | |
| C200 | | | CK73HB1E103K | CHIP C | 0.010UF | K | |
| C201 | | | CK73HB1H471K | CHIP C | 470PF | K | K4K5K6 |
| C201 | | | CK73HB1H471K | CHIP C | 470PF | K | K7 |
| C201,202 | | | CK73HB1H471K | CHIP C | 470PF | K | KK2K3 |
| C202 | | | CC73HCH1H220J | CHIP C | 22PF | J | K4K5K6 |
| C202 | | | CC73HCH1H220J | CHIP C | 22PF | J | K7 |

| Ref. No. | Address | New parts | Parts No. | Description | | | Destination |
|---|---|---|---|---|---|---|---|
| C203,204 | | | CC73HCH1H070B | CHIP C | 7.0PF | B | K4K5K6 |
| C203,204 | | | CC73HCH1H070B | CHIP C | 7.0PF | B | K7 |
| C205,206 | | | CK73HB1H471K | CHIP C | 470PF | K | |
| C207 | | | CC73HCH1H070B | CHIP C | 7.0PF | B | |
| C209,210 | | | CK73HB1H471K | CHIP C | 470PF | K | |
| C215,216 | | | CK73HB1H471K | CHIP C | 470PF | K | |
| C218 | | | CC73HCH1H050B | CHIP C | 5.0PF | B | KK2K3 |
| C218 | | | CC73HCH1H060B | CHIP C | 6.0PF | B | K4K5K6 |
| C218 | | | CC73HCH1H060B | CHIP C | 6.0PF | B | K7 |
| C219 | | | CK73HB1E103K | CHIP C | 0.010UF | K | |
| C220 | | | CK73HB1H471K | CHIP C | 470PF | K | |
| C221 | | | CC73HCH1H150J | CHIP C | 15PF | J | |
| C223 | | | CK73HB1H471K | CHIP C | 470PF | K | |
| C224 | | | CC73GCH1H270J | CHIP C | 27PF | J | KK2K3 |
| C224 | | | CC73GCH1H390J | CHIP C | 39PF | J | K4K5K6 |
| C224 | | | CC73GCH1H390J | CHIP C | 39PF | J | K7 |
| C225 | | | CK73HB1H471K | CHIP C | 470PF | K | KK2K3 |
| C226 | | | CK73GB1H471K | CHIP C | 470PF | K | |
| C227,228 | | | CK73HB1H471K | CHIP C | 470PF | K | K4K5K6 |
| C227,228 | | | CK73HB1H471K | CHIP C | 470PF | K | K7 |
| C228 | | | CK73HB1H471K | CHIP C | 470PF | K | KK2K3 |
| C229 | | | CK73HB1E103K | CHIP C | 0.010UF | K | |
| C230 | | | CK73HB1H471K | CHIP C | 470PF | K | |
| C231 | | | CC73HCH1H101J | CHIP C | 100PF | J | |
| C232 | | | CC73GCH1H220J | CHIP C | 22PF | J | KK2K3 |
| C234,235 | | | CK73HB1H471K | CHIP C | 470PF | K | |
| C237 | | | CK73HB1E103K | CHIP C | 0.010UF | K | |
| C238 | | | CK73GB1E105K | CHIP C | 1.0UF | K | |
| C239-242 | | | CK73HB1H471K | CHIP C | 470PF | K | |
| C243 | | | C93-0951-05 | CHIP C | 47UF | G | KK2K3 |
| C243 | | | C93-0955-05 | CHIP C | 68UF | G | K4K5K6 |
| C243 | | | C93-0955-05 | CHIP C | 68UF | G | K7 |
| C244,245 | | | CK73HB1H471K | CHIP C | 470PF | K | K4K5K6 |
| C244,245 | | | CK73HB1H471K | CHIP C | 470PF | K | K7 |
| C245 | | | CK73HB1H471K | CHIP C | 470PF | K | KK2K3 |
| C246 | | | CK73HB1E103K | CHIP C | 0.010UF | K | |
| C247 | | | CK73HB1H471K | CHIP C | 470PF | K | |
| C249 | | | CK73GB1C104K | CHIP C | 0.10UF | K | |
| C250 | | | C93-0945-05 | CHIP C | 27UF | G | KK2K3 |
| C252 | | | CK73GB1H471K | CHIP C | 470PF | K | |
| C253 | | | CK73GB0J475K | CHIP C | 4.7UF | K | |
| C254 | | | CK73HB1H471K | CHIP C | 470PF | K | |
| C255 | | | C93-0941-05 | CHIP C | 18UF | G | K4K5K6 |
| C255 | | | C93-0941-05 | CHIP C | 18UF | G | K7 |
| C256 | | | C93-0878-05 | CHIP C | 2.0PF | B | KK2K3 |
| C256 | | | C93-0989-05 | CHIP C | 8.2PF | D | K4K5K6 |
| C256 | | | C93-0989-05 | CHIP C | 8.2PF | D | K7 |
| C257 | | | CC73GCH1H101J | CHIP C | 100PF | J | KK2K3 |
| C257,258 | | | CK73GB1H471K | CHIP C | 470PF | K | K4K5K6 |
| C257,258 | | | CK73GB1H471K | CHIP C | 470PF | K | K7 |
| C258 | | | CK73GB1H471K | CHIP C | 470PF | K | KK2K3 |
| C259 | | | CK73HB1E103K | CHIP C | 0.010UF | K | |
| C260 | | | CC73GCH1H050B | CHIP C | 5.0PF | B | K4K5K6 |
| C260 | | | CC73GCH1H050B | CHIP C | 5.0PF | B | K7 |
| C260 | | | CC73GCH1H090B | CHIP C | 9.0PF | B | KK2K3 |
| C261 | | | CC73GCH1H020B | CHIP C | 2.0PF | B | K4K5K6 |
| C261 | | | CC73GCH1H020B | CHIP C | 2.0PF | B | K7 |
| C261 | | | CC73GCH1H040B | CHIP C | 4.0PF | B | KK2K3 |
| C262 | | | CK73HB1H471K | CHIP C | 470PF | K | |
| C263 | | | CC73HCH1H060B | CHIP C | 6.0PF | B | KK2K3 |

# PARTS LIST

**TX-RX UNIT (X57-7660-XX)**

| Ref. No. | Address | New parts | Parts No. | Description | | | Desti-nation |
|---|---|---|---|---|---|---|---|
| C263 | | | CC73HCH1H100B | CHIP C | 10PF | B | K4K5K6 |
| C263 | | | CC73HCH1H100B | CHIP C | 10PF | B | K7 |
| C264 | | | CC73HCH1H010B | CHIP C | 1.0PF | B | |
| C265 | | | CC73HCH1H070B | CHIP C | 7.0PF | B | KK2K3 |
| C265 | | | CC73HCH1H150J | CHIP C | 15PF | J | K4K5K6 |
| C265 | | | CC73HCH1H150J | CHIP C | 15PF | J | K7 |
| C266 | | | CC73HCH1H060B | CHIP C | 6.0PF | B | K4K5K6 |
| C266 | | | CC73HCH1H060B | CHIP C | 6.0PF | B | K7 |
| C266 | | | CC73HCH1H1R5B | CHIP C | 1.5PF | B | KK2K3 |
| C267 | | | CC73HCH1H010B | CHIP C | 1.0PF | B | |
| C268 | | | CC73HCH1H0R5B | CHIP C | 0.5PF | B | KK2K3 |
| C268 | | | CC73HCH1H060B | CHIP C | 6.0PF | B | K4K5K6 |
| C268 | | | CC73HCH1H060B | CHIP C | 6.0PF | B | K7 |
| C270,271 | | | CK73GB1H471K | CHIP C | 470PF | K | |
| C273 | | | CK73HB1H471K | CHIP C | 470PF | K | |
| C277 | | | CK73HB1H471K | CHIP C | 470PF | K | |
| C278 | | | CC73GCH1H070B | CHIP C | 7.0PF | B | K4K5K6 |
| C278 | | | CC73GCH1H070B | CHIP C | 7.0PF | B | K7 |
| C278 | | | CC73GCH1H090B | CHIP C | 9.0PF | B | KK2K3 |
| C280 | | | CK73HB1H471K | CHIP C | 470PF | K | |
| C281 | | | CC73GCH1H070B | CHIP C | 7.0PF | B | K4K5K6 |
| C281 | | | CC73GCH1H070B | CHIP C | 7.0PF | B | K7 |
| C281-283 | | | CC73GCH1H090B | CHIP C | 9.0PF | B | KK2K3 |
| C282,283 | | | CC73GCH1H150J | CHIP C | 15PF | J | K4K5K6 |
| C282,283 | | | CC73GCH1H150J | CHIP C | 15PF | J | K7 |
| C284,285 | | | CK73HB1H471K | CHIP C | 470PF | K | |
| C288 | | | CC73HCH1H030B | CHIP C | 3.0PF | B | KK2K3 |
| C288 | | | CC73HCH1H060B | CHIP C | 6.0PF | B | K4K5K6 |
| C288 | | | CC73HCH1H060B | CHIP C | 6.0PF | B | K7 |
| C289 | | | CC73GCH1H050B | CHIP C | 5.0PF | B | K4K5K6 |
| C289 | | | CC73GCH1H050B | CHIP C | 5.0PF | B | K7 |
| C289 | | | CC73GCH1H2R5B | CHIP C | 2.5PF | B | KK2K3 |
| C290 | | | CC73HCH1H030B | CHIP C | 3.0PF | B | KK2K3 |
| C290 | | | CC73HCH1H060B | CHIP C | 6.0PF | B | K4K5K6 |
| C290 | | | CC73HCH1H060B | CHIP C | 6.0PF | B | K7 |
| C291 | | | CC73HCH1H040B | CHIP C | 4.0PF | B | |
| C292 | | | CC73GCH1H050B | CHIP C | 5.0PF | B | K4K5K6 |
| C292 | | | CC73GCH1H050B | CHIP C | 5.0PF | B | K7 |
| C292 | | | CC73GCH1H2R5B | CHIP C | 2.5PF | B | KK2K3 |
| C293 | | | CC73HCH1H040B | CHIP C | 4.0PF | B | |
| C295 | | | C93-0937-05 | CHIP C | 12PF | G | KK2K3 |
| C295 | | | C93-0941-05 | CHIP C | 18UF | G | K4K5K6 |
| C295 | | | C93-0941-05 | CHIP C | 18UF | G | K7 |
| C296 | | | C93-0989-05 | CHIP C | 8.2PF | D | KK2K3 |
| C297 | | | C93-0947-05 | CHIP C | 33UF | G | K4K5K6 |
| C297 | | | C93-0947-05 | CHIP C | 33UF | G | K7 |
| C299 | | | CK73HB1H471K | CHIP C | 470PF | K | |
| C300 | | | CK73GB1H104K | CHIP C | 0.10UF | K | |
| C301 | | | CK73HB1H471K | CHIP C | 470PF | K | |
| C302 | | | CK73GB1E105K | CHIP C | 1.0UF | K | |
| C303 | | | CK73GB1H104K | CHIP C | 0.10UF | K | |
| C306 | | | CC73GCH1H080B | CHIP C | 8.0PF | B | KK2K3 |
| C306 | | | CC73GCH1H120J | CHIP C | 12PF | J | K4K5K6 |
| C306 | | | CC73GCH1H120J | CHIP C | 12PF | J | K7 |
| C307 | | | CC73GCH1H100C | CHIP C | 10PF | C | K4K5K6 |
| C307 | | | CC73GCH1H100C | CHIP C | 10PF | C | K7 |
| C307 | | | CC73GCH1H120G | CHIP C | 12PF | G | KK2K3 |
| C308 | | | CK73HB1H471K | CHIP C | 470PF | K | |
| C309 | | | CC73HCH1H150J | CHIP C | 15PF | J | KK2K3 |
| C309 | | | CC73HCH1H470J | CHIP C | 47PF | J | K4K5K6 |

| Ref. No. | Address | New parts | Parts No. | Description | | | Desti-nation |
|---|---|---|---|---|---|---|---|
| C309 | | | CC73HCH1H470J | CHIP C | 47PF | J | K7 |
| C311 | | | CC73GCH1H010B | CHIP C | 1.0PF | B | KK2K3 |
| C311 | | | CC73GCH1H1R5B | CHIP C | 1.5PF | B | K4K5K6 |
| C311 | | | CC73GCH1H1R5B | CHIP C | 1.5PF | B | K7 |
| C312 | | | CC73HCH1H040B | CHIP C | 4.0PF | B | KK2K3 |
| C312 | | | CC73HCH1H050B | CHIP C | 5.0PF | B | K4K5K6 |
| C312 | | | CC73HCH1H050B | CHIP C | 5.0PF | B | K7 |
| C313 | | | CK73HB1H471K | CHIP C | 470PF | K | |
| C315 | | | CC73GCH1H390J | CHIP C | 39PF | J | KK2K3 |
| C315 | | | CC73GCH1H470J | CHIP C | 47PF | J | K4K5K6 |
| C315 | | | CC73GCH1H470J | CHIP C | 47PF | J | K7 |
| C316 | | | CC73HCH1H030B | CHIP C | 3.0PF | B | |
| C317 | | | CC73HCH1H150J | CHIP C | 15PF | J | KK2K3 |
| C317 | | | CC73HCH1H470J | CHIP C | 47PF | J | K4K5K6 |
| C317 | | | CC73HCH1H470J | CHIP C | 47PF | J | K7 |
| C318 | | | CK73GB1H471K | CHIP C | 470PF | K | |
| C321-325 | | | CK73HB1H471K | CHIP C | 470PF | K | |
| C327 | | | CK73HB0J105K | CHIP C | 1.0UF | K | |
| C329,330 | | | CK73HB1H471K | CHIP C | 470PF | K | |
| C332 | | | CC73HCH1H220J | CHIP C | 22PF | J | KK2K3 |
| C332 | | | CC73HCH1H270J | CHIP C | 27PF | J | K4K5K6 |
| C332 | | | CC73HCH1H270J | CHIP C | 27PF | J | K7 |
| C333,334 | | | CK73HB1H471K | CHIP C | 470PF | K | |
| C335 | | | CC73HCH1H030B | CHIP C | 3.0PF | B | K4K5K6 |
| C335 | | | CC73HCH1H030B | CHIP C | 3.0PF | B | K7 |
| C335 | | | CC73HCH1H090B | CHIP C | 9.0PF | B | KK2K3 |
| C336 | | | CC73HCH1H070B | CHIP C | 7.0PF | B | KK2K3 |
| C336 | | | CC73HCH1H120J | CHIP C | 12PF | J | K4K5K6 |
| C336 | | | CC73HCH1H120J | CHIP C | 12PF | J | K7 |
| C337 | | | CC73HCH1H220J | CHIP C | 22PF | J | KK2K3 |
| C337 | | | CC73HCH1H270J | CHIP C | 27PF | J | K4K5K6 |
| C337 | | | CC73HCH1H270J | CHIP C | 27PF | J | K7 |
| C338 | | | CK73HB1H471K | CHIP C | 470PF | K | |
| C339 | | | CC73HCH1H030B | CHIP C | 3.0PF | B | KK2K3 |
| C339 | | | CC73HCH1H120J | CHIP C | 12PF | J | K4K5K6 |
| C339 | | | CC73HCH1H120J | CHIP C | 12PF | J | K7 |
| C340 | | | CK73HB1H471K | CHIP C | 470PF | K | |
| C341 | | | CC73HCH1H070B | CHIP C | 7.0PF | B | KK2K3 |
| C341 | | | CC73HCH1H150J | CHIP C | 15PF | J | K4K5K6 |
| C341 | | | CC73HCH1H150J | CHIP C | 15PF | J | K7 |
| C342 | | | CC73HCH1H220J | CHIP C | 22PF | J | KK2K3 |
| C342 | | | CC73HCH1H270J | CHIP C | 27PF | J | K4K5K6 |
| C342 | | | CC73HCH1H270J | CHIP C | 27PF | J | K7 |
| C344 | | | CC73HCH1H040B | CHIP C | 4.0PF | B | KK2K3 |
| C344 | | | CC73HCH1H070B | CHIP C | 7.0PF | B | K4K5K6 |
| C344 | | | CC73HCH1H070B | CHIP C | 7.0PF | B | K7 |
| C345 | | | CK73HB1H471K | CHIP C | 470PF | K | |
| C346 | | | CC73HCH1H070B | CHIP C | 7.0PF | B | KK2K3 |
| C346 | | | CC73HCH1H080B | CHIP C | 8.0PF | B | K4K5K6 |
| C346 | | | CC73HCH1H080B | CHIP C | 8.0PF | B | K7 |
| C347 | | | CC73HCH1H220J | CHIP C | 22PF | J | KK2K3 |
| C347 | | | CC73HCH1H270J | CHIP C | 27PF | J | K4K5K6 |
| C347 | | | CC73HCH1H270J | CHIP C | 27PF | J | K7 |
| C348 | | | CC73HCH1H050B | CHIP C | 5.0PF | B | |
| C349 | | | CC73HCH1H020B | CHIP C | 2.0PF | B | |
| C350 | | | CK73HB1H471K | CHIP C | 470PF | K | |
| C351 | | | CC73HCH1H100B | CHIP C | 10PF | B | K4K5K6 |
| C351 | | | CC73HCH1H100B | CHIP C | 10PF | B | K7 |
| C351,352 | | | CC73HCH1H100B | CHIP C | 10PF | B | KK2K3 |
| C352 | | | CC73HCH1H070B | CHIP C | 7.0PF | B | K4K5K6 |

# PARTS LIST

TX-RX UNIT (X57-7660-XX)

| Ref. No. | Address | New parts | Parts No. | Description | | | Destination |
|---|---|---|---|---|---|---|---|
| C352 | | | CC73HCH1H070B | CHIP C | 7.0PF | B | K7 |
| C354 | | | CK73HB1H471K | CHIP C | 470PF | K | |
| C355 | | | CC73HCH1H0R5B | CHIP C | 0.5PF | B | |
| C356 | | | CC73HCH1H060B | CHIP C | 6.0PF | B | |
| C357,358 | | | CK73HB1H471K | CHIP C | 470PF | K | K4K5K6 |
| C357,358 | | | CK73HB1H471K | CHIP C | 470PF | K | K7 |
| C358 | | | CK73HB1H471K | CHIP C | 470PF | K | KK2K3 |
| C360,361 | | | CK73HB1H471K | CHIP C | 470PF | K | |
| C362 | | | CC73GCH1H150J | CHIP C | 15PF | J | K4K5K6 |
| C362 | | | CC73GCH1H150J | CHIP C | 15PF | J | K7 |
| C362 | | | CK73GB1H471K | CHIP C | 470PF | K | KK2K3 |
| C363 | | | CK73HB1H471K | CHIP C | 470PF | K | |
| C364 | | | CK73HB1H471K | CHIP C | 470PF | K | K4K5K6 |
| C364 | | | CK73HB1H471K | CHIP C | 470PF | K | K7 |
| C365,366 | | | CK73HB1H471K | CHIP C | 470PF | K | |
| C367,368 | | | CK73HB1A104K | CHIP C | 0.10UF | K | |
| C370 | | | CK73HB1E103K | CHIP C | 0.010UF | K | |
| C372 | | | CC73GCH1H150J | CHIP C | 15PF | J | |
| C374 | | | CC73HCH1H270J | CHIP C | 27PF | J | |
| C378 | | | CC73HCH1H120J | CHIP C | 12PF | J | |
| C379-382 | | | CK73HB1E103K | CHIP C | 0.010UF | K | |
| C383 | | | CC73HCH1H220J | CHIP C | 22PF | J | |
| C385 | | | CC73HCH1H470J | CHIP C | 47PF | J | |
| C386 | | | CC73HCH1H080B | CHIP C | 8.0PF | B | |
| C387 | | | CK73HB1H471K | CHIP C | 470PF | K | |
| C388 | | | CK73HB1E103K | CHIP C | 0.010UF | K | |
| C389 | | | CC73HCH1H470J | CHIP C | 47PF | J | |
| C390 | | | CC73HCH1H220J | CHIP C | 22PF | J | |
| C391 | | | CC73HCH1H820J | CHIP C | 82PF | J | |
| C392 | | | CC73HCH1H470J | CHIP C | 47PF | J | |
| C393-396 | | | CK73HB1A104K | CHIP C | 0.10UF | K | |
| C397 | | | CC73HCH1H680J | CHIP C | 68PF | J | |
| C399 | | | CK73HB1H102K | CHIP C | 1000PF | K | |
| C400-404 | | | CK73HB1A104K | CHIP C | 0.10UF | K | |
| C405,406 | | | CK73HB1E103K | CHIP C | 0.010UF | K | |
| C407 | | | CK73FB0J106K | CHIP C | 10UF | K | |
| C409 | | | CK73HB1A104K | CHIP C | 0.10UF | K | |
| C410 | | | CC73HCH1H390J | CHIP C | 39PF | J | |
| C411,412 | | | CC73HCH1H151J | CHIP C | 150PF | J | |
| C413 | | | CK73HB1C223K | CHIP C | 0.022UF | K | |
| C414 | | | CC73HCH1H101J | CHIP C | 100PF | J | |
| C415 | | | CK73HB1H102K | CHIP C | 1000PF | K | |
| C422 | | | CK73FB0J106K | CHIP C | 10UF | K | |
| C423 | | | CC73GCH1H060B | CHIP C | 6.0PF | B | |
| C424-426 | | | CK73HB1A104K | CHIP C | 0.10UF | K | |
| C428 | | | CK73HB1A104K | CHIP C | 0.10UF | K | |
| C430 | | | CK73GB0J225K | CHIP C | 2.2UF | K | |
| C431-434 | | | CK73HB1A104K | CHIP C | 0.10UF | K | |
| C435 | | | CK73HB1H102K | CHIP C | 1000PF | K | |
| C500 | | | CK73HB1E103K | CHIP C | 0.010UF | K | |
| C503 | | | CC73HCH1H101J | CHIP C | 100PF | J | |
| C504 | | | CK73HB1A104K | CHIP C | 0.10UF | K | |
| C505,506 | | | CC73HCH1H151J | CHIP C | 150PF | J | |
| C507 | | | CK73HB1A104K | CHIP C | 0.10UF | K | |
| C508 | | | CK73HB1H102K | CHIP C | 1000PF | K | |
| C509 | | | CK73HB0J105K | CHIP C | 1.0UF | K | |
| C510,511 | | | CK73HB1A104K | CHIP C | 0.10UF | K | |
| C512 | | | CK73HB1H102K | CHIP C | 1000PF | K | |
| C513 | | | CC73HCH1H101J | CHIP C | 100PF | J | |
| C515 | | | CK73HB1A224K | CHIP C | 0.22UF | K | |

| Ref. No. | Address | New parts | Parts No. | Description | | | Destination |
|---|---|---|---|---|---|---|---|
| C516 | | | CK73HB1E103K | CHIP C | 0.010UF | K | |
| C518 | | | CK73HB1A224K | CHIP C | 0.22UF | K | |
| C519 | | | CK73HB0J105K | CHIP C | 1.0UF | K | |
| C520,521 | | | CK73HB1A104K | CHIP C | 0.10UF | K | |
| C522 | | | CK73HB0J105K | CHIP C | 1.0UF | K | |
| C524,525 | | | CK73HB1A104K | CHIP C | 0.10UF | K | |
| C527 | | | CK73HB1A104K | CHIP C | 0.10UF | K | |
| C528 | | | CK73HB1H152K | CHIP C | 1500PF | K | |
| C529 | | | CK73HB1E103K | CHIP C | 0.010UF | K | |
| C532 | | | CK73HB1A104K | CHIP C | 0.10UF | K | |
| C533 | | | CK73HB1E103K | CHIP C | 0.010UF | K | |
| C536 | | | CC73HCH1H151J | CHIP C | 150PF | J | |
| C537,538 | | | CK73HB1A104K | CHIP C | 0.10UF | K | |
| C539,540 | | | CK73HB1E103K | CHIP C | 0.010UF | K | |
| C542,543 | | | CK73HB1E103K | CHIP C | 0.010UF | K | |
| C544 | | | CK73HB1A104K | CHIP C | 0.10UF | K | |
| C545 | | | CK73HB0J105K | CHIP C | 1.0UF | K | |
| C546 | | | CK73HB1E103K | CHIP C | 0.010UF | K | |
| C547 | | | CC73HCH1H100B | CHIP C | 10PF | B | |
| C551 | | | CK73HB1H102K | CHIP C | 1000PF | K | |
| C552 | | | CK73HB1E103K | CHIP C | 0.010UF | K | |
| C554 | | | CC73HCH1H101J | CHIP C | 100PF | J | |
| C555 | | | CK73HB0J105K | CHIP C | 1.0UF | K | |
| C556 | | | CK73HB1E103K | CHIP C | 0.010UF | K | |
| C557-560 | | | CK73HB1A104K | CHIP C | 0.10UF | K | |
| C561 | | | CC73HCH1H101J | CHIP C | 100PF | J | |
| C562 | | | CK73HB1A104K | CHIP C | 0.10UF | K | |
| C563 | | | CK73HB1H152K | CHIP C | 1500PF | K | |
| C564 | | | CK73HB1E103K | CHIP C | 0.010UF | K | |
| C565 | | | CC73HCH1H101J | CHIP C | 100PF | J | |
| C566 | | | CK73HB1H331K | CHIP C | 330PF | K | |
| C567 | | | CC73HCH1H101J | CHIP C | 100PF | J | |
| C568 | | | CK73HB1H821K | CHIP C | 820PF | K | |
| C570 | | | CK73HB1H471K | CHIP C | 470PF | K | |
| C571 | | | CK73HB1E562K | CHIP C | 5600PF | K | |
| C573 | | | CK73HB1A104K | CHIP C | 0.10UF | K | |
| C574,575 | | | CK73HB1H471K | CHIP C | 470PF | K | |
| C576 | | | CK73HB1C223K | CHIP C | 0.022UF | K | |
| C577 | | | CC73HCH1H101J | CHIP C | 100PF | J | |
| C578 | | | CK73HB1A104K | CHIP C | 0.10UF | K | |
| C579 | | | CK73HB1E103K | CHIP C | 0.010UF | K | |
| C581 | | | CK73HB1H471K | CHIP C | 470PF | K | |
| C582 | | | CK73HB1E103K | CHIP C | 0.010UF | K | |
| C583 | | | CK73HB1E682K | CHIP C | 6800PF | K | |
| C585-587 | | | CC73HCH1H101J | CHIP C | 100PF | J | |
| C589 | | | CK73HB1A224K | CHIP C | 0.22UF | K | |
| C590,591 | | | CK73HB1A104K | CHIP C | 0.10UF | K | |
| C594 | | | CC73HCH1H101J | CHIP C | 100PF | J | |
| C595 | | | CK73HB1H471K | CHIP C | 470PF | K | |
| C598 | | | CK73HB1H332K | CHIP C | 3300PF | K | |
| C599-601 | | | CC73HCH1H101J | CHIP C | 100PF | J | |
| C602 | | | CK73HB1E103K | CHIP C | 0.010UF | K | |
| C603 | | | CC73HCH1H101J | CHIP C | 100PF | J | |
| C604-606 | | | CK73HB0J105K | CHIP C | 1.0UF | K | |
| C607,608 | | | CC73HCH1H101J | CHIP C | 100PF | J | |
| C609 | | | CC73HCH1H150J | CHIP C | 15PF | J | |
| C610 | | | CC73HCH1H680J | CHIP C | 68PF | J | |
| C611-613 | | | CK73HB1A104K | CHIP C | 0.10UF | K | |
| C614 | | | CK73HB0J105K | CHIP C | 1.0UF | K | |
| C615 | | | CK73HB1A393K | CHIP C | 0.039UF | K | |

# PARTS LIST

**TX-RX UNIT (X57-7660-XX)**

| Ref. No. | Address | New parts | Parts No. | Description | Destination |
|---|---|---|---|---|---|
| C616 | | | CK73HB1E103K | CHIP C 0.010UF K | |
| C617 | | | CK73HB1A104K | CHIP C 0.10UF K | |
| C618 | | | CK73HB0J105K | CHIP C 1.0UF K | |
| C619 | | | CK73GB0J106K | CHIP C 10UF K | |
| C620 | | | CK73HB1H471K | CHIP C 470PF K | |
| C621 | | | CK73HB1C333K | CHIP C 0.033UF K | |
| C622 | | | CK73HB0J105K | CHIP C 1.0UF K | |
| C701 | | | CK73HB1H471K | CHIP C 470PF K | |
| C703 | | | CK73HB1H471K | CHIP C 470PF K | |
| C704,705 | | | CK73HB1H102K | CHIP C 1000PF K | |
| C706 | | | CK73GB1H104K | CHIP C 0.10UF K | |
| C707 | | | CK73GB1E105K | CHIP C 1.0UF K | |
| C709 | | | CK73GB0J106K | CHIP C 10UF K | |
| C711 | | | CK73GB1E105K | CHIP C 1.0UF K | |
| C712 | | | CK73GB1H104K | CHIP C 0.10UF K | |
| C713 | | | CK73GB1E105K | CHIP C 1.0UF K | |
| C714 | | | CK73HB1H471K | CHIP C 470PF K | |
| C716,717 | | | CK73HB1H471K | CHIP C 470PF K | |
| C719,720 | | | CK73GB1E105K | CHIP C 1.0UF K | |
| C724 | | | CK73GB1E105K | CHIP C 1.0UF K | |
| C725 | | | CK73HB1E682K | CHIP C 6800PF K | |
| C727 | | | CK73HB1H471K | CHIP C 470PF K | |
| C728 | | | CK73GB1E105K | CHIP C 1.0UF K | |
| C730 | | | C92-0822-05 | CHIP TNTL 33UF 10WV | |
| C731,732 | | | CK73HB0J105K | CHIP C 1.0UF K | |
| C733 | | | CK73HB1A104K | CHIP C 0.10UF K | |
| C735 | | | CK73HB1E103K | CHIP C 0.010UF K | |
| C736 | | | CK73GB1E105K | CHIP C 1.0UF K | |
| C737 | | | CC73HCH1H820J | CHIP C 82PF J | |
| C739 | | | CK73GB1E105K | CHIP C 1.0UF K | |
| C740 | | | CK73HB0J105K | CHIP C 1.0UF K | |
| C741 | | | CK73FB1E475K | CHIP C 4.7UF K | |
| C742 | | | CK73GB1E105K | CHIP C 1.0UF K | |
| C744 | | | CK73HB1H102K | CHIP C 1000PF K | |
| C745 | | | CK73HB0J105K | CHIP C 1.0UF K | |
| C746 | | | CK73FB1E475K | CHIP C 4.7UF K | |
| C748 | | | CC73HCH1H181J | CHIP C 180PF J | |
| C749 | | | CK73GB0J475K | CHIP C 4.7UF K | |
| C750 | | | CC73HCH1H220J | CHIP C 22PF J | |
| C751 | | | CK73HB1H471K | CHIP C 470PF K | |
| C752 | | | CK73FB1E475K | CHIP C 4.7UF K | |
| C753 | | | CK73GB1E105K | CHIP C 1.0UF K | |
| C754 | | | CK73FB1E475K | CHIP C 4.7UF K | |
| C755 | | | CK73GB1E105K | CHIP C 1.0UF K | |
| C756 | | | CK73FB1E475K | CHIP C 4.7UF K | |
| C758 | | | CK73GB1E105K | CHIP C 1.0UF K | |
| C759 | | | CK73HB1H102K | CHIP C 1000PF K | |
| C761,762 | | | CK73FB1E475K | CHIP C 4.7UF K | |
| C763 | | | CC73HCH1H101J | CHIP C 100PF J | |
| C765 | | | CS77CP1C2R2M | CHIP TNTL 2.2UF 16WV | |
| C766 | | | CK73HB1A104K | CHIP C 0.10UF K | |
| C767-769 | | | CS77CP1C2R2M | CHIP TNTL 2.2UF 16WV | |
| C770,771 | | | CK73HB1H102K | CHIP C 1000PF K | |
| C772 | | | CK73HB1E103K | CHIP C 0.010UF K | |
| C773-785 | | | CC73HCH1H470J | CHIP C 47PF J | |
| C786 | | | CK73HB1H102K | CHIP C 1000PF K | |
| C787 | | | CC73HCH1H470J | CHIP C 47PF J | |
| C788-791 | | | CK73HB1H102K | CHIP C 1000PF K | |
| C792-796 | | | CC73HCH1H470J | CHIP C 47PF J | |
| C797 | | | CK73HB1H102K | CHIP C 1000PF K | |
| C798-819 | | | CC73HCH1H470J | CHIP C 47PF J | |
| C821-846 | | | CC73HCH1H470J | CHIP C 47PF J | |
| CN204,205 | | | E04-0403-05 | PIN SOCKET | |
| CN301 | | | E23-0762-05 | TERMINAL | |
| CN501 | | | E40-6357-05 | PIN ASSY | |
| CN502 | | | E40-6586-05 | SOCKET FOR PIN ASSY | |
| CN505 | | | E41-3167-05 | FLAT CABLE CONNECTOR | |
| CN707 | | | E40-6846-05 | PIN ASSY | |
| CN902 | | | E40-6722-05 | FLAT CABLE CONNECTOR | |
| CN903 | | | E40-6464-05 | FLAT CABLE CONNECTOR | |
| CN923 | | | E40-6358-05 | SOCKET FOR PIN ASSY | |
| CN941 | | | E04-0403-05 | PIN SOCKET | |
| F500 | | | F53-0360-05 | FUSE (0.25A) | |
| F700 | | | F53-0372-05 | FUSE (3.15A) | |
| F701 | | | F53-0360-05 | FUSE (0.25A) | |
| CD300 | | | L79-1850-05 | TUNING COIL | |
| CF300 | | | L72-1017-05 | CERAMIC FILTER | |
| CF350 | | | L72-1021-05 | CERAMIC FILTER | |
| CF351 | | | L72-1017-05 | CERAMIC FILTER | |
| CF352 | | | L72-1040-05 | CERAMIC FILTER | |
| L100 | | | L92-0446-05 | BEADS CORE | |
| L102,103 | | | L40-1001-86 | SMALL FIXED INDUCTOR (10UH) | |
| L104-106 | | | L40-2285-92 | SMALL FIXED INDUCTOR (220NH) | |
| L107 | | | L92-0446-05 | BEADS CORE | |
| L108,109 | | | L40-2285-92 | SMALL FIXED INDUCTOR (220NH) | |
| L111-113 | | | L40-2285-92 | SMALL FIXED INDUCTOR (220NH) | |
| L114 | | | L33-0744-05 | SMALL FIXED INDUCTOR (23NH) | K4K5K6 |
| L114 | | | L33-0744-05 | SMALL FIXED INDUCTOR (23NH) | K7 |
| L114,115 | | | L33-0744-05 | SMALL FIXED INDUCTOR (23NH) | KK2K3 |
| L115 | | | L33-0745-05 | SMALL FIXED INDUCTOR (33NH) | K4K5K6 |
| L115 | | | L33-0745-05 | SMALL FIXED INDUCTOR (33NH) | K7 |
| L116,117 | | | L40-2285-92 | SMALL FIXED INDUCTOR (220NH) | |
| L118 | | | L40-3368-71 | SMALL FIXED INDUCTOR (3.3NH) | K4K5K6 |
| L118 | | | L40-3368-71 | SMALL FIXED INDUCTOR (3.3NH) | K7 |
| L119 | | | L40-1868-71 | SMALL FIXED INDUCTOR (1.8NH) | K4K5K6 |
| L119 | | | L40-1868-71 | SMALL FIXED INDUCTOR (1.8NH) | K7 |
| L119 | | | L40-2768-71 | SMALL FIXED INDUCTOR (2.7NH) | KK2K3 |
| L120,121 | | | L40-2285-92 | SMALL FIXED INDUCTOR (220NH) | |
| L122 | | | L92-0446-05 | BEADS CORE K4K5K6 | |
| L122 | | | L92-0446-05 | BEADS CORE K7 | |
| L123 | | | L40-2275-71 | SMALL FIXED INDUCTOR (22NH) | K4K5K6 |
| L123 | | | L40-2275-71 | SMALL FIXED INDUCTOR (22NH) | K7 |
| L124 | | | L40-1875-71 | SMALL FIXED INDUCTOR (18NH) | |
| L125 | | | L40-1575-71 | SMALL FIXED INDUCTOR (15NH) | K4K5K6 |
| L125 | | | L40-1575-71 | SMALL FIXED INDUCTOR (15NH) | K7 |
| L125 | | | L40-2275-71 | SMALL FIXED INDUCTOR (22NH) | KK2K3 |
| L126,127 | | | L40-1075-71 | SMALL FIXED INDUCTOR (10NH) | K4K5K6 |
| L126,127 | | | L40-1075-71 | SMALL FIXED INDUCTOR (10NH) | K7 |
| L127 | | | L40-1075-71 | SMALL FIXED INDUCTOR (10NH) | KK2K3 |
| L128 | | | L40-2275-71 | SMALL FIXED INDUCTOR (22NH) | KK2K3 |
| L128 | | | L40-2775-71 | SMALL FIXED INDUCTOR (27NH) | K4K5K6 |
| L128 | | | L40-2775-71 | SMALL FIXED INDUCTOR (27NH) | K7 |
| L200 | | | L41-2275-45 | SMALL FIXED INDUCTOR (22NH) | KK2K3 |
| L200,201 | | | L41-1875-45 | SMALL FIXED INDUCTOR (18NH) | K4K5K6 |
| L200,201 | | | L41-1875-45 | SMALL FIXED INDUCTOR (18NH) | K7 |
| L201 | | | L41-1575-45 | SMALL FIXED INDUCTOR (15NH) | KK2K3 |
| L203 | | | L41-1575-45 | SMALL FIXED INDUCTOR (15NH) | KK2K3 |
| L203 | | | L41-1875-45 | SMALL FIXED INDUCTOR (18NH) | K4K5K6 |
| L203 | | | L41-1875-45 | SMALL FIXED INDUCTOR (18NH) | K7 |

# PARTS LIST

TX-RX UNIT (X57-7660-XX)

| Ref. No. | Address | New parts | Parts No. | Description | Destination |
|---|---|---|---|---|---|
| L204 | | | L92-0140-05 | CHIP FERRITE | |
| L206 | | | L41-6865-45 | SMALL FIXED INDUCTOR (6.8NH) | KK2K3 |
| L208 | | | L92-0149-05 | CHIP FERRITE | |
| L209 | | | L41-1875-45 | SMALL FIXED INDUCTOR (18NH) | KK2K3 |
| L209 | | | L41-3975-45 | SMALL FIXED INDUCTOR (39NH) | K4K5K6 |
| L209 | | | L41-3975-45 | SMALL FIXED INDUCTOR (39NH) | K7 |
| L210 | | | L41-1575-45 | SMALL FIXED INDUCTOR (15NH) | KK2K3 |
| L211 | | | L34-4566-05 | AIR-CORE COIL | |
| L212 | | | L92-0149-05 | CHIP FERRITE | |
| L213 | | | L41-8285-14 | SMALL FIXED INDUCTOR (820NH) | |
| L214-216 | | | L34-4564-05 | AIR-CORE COIL | |
| L217,218 | | | L92-0446-05 | BEADS CORE | |
| L219,220 | | | L34-4564-05 | AIR-CORE COIL | |
| L221,222 | | | L34-4563-05 | AIR-CORE COIL | |
| L223 | | | L41-8285-14 | SMALL FIXED INDUCTOR (820NH) | |
| L225 | | | L40-8265-92 | SMALL FIXED INDUCTOR (8.2NH) | K4K5K6 |
| L225 | | | L40-8265-92 | SMALL FIXED INDUCTOR (8.2NH) | K7 |
| L227 | | | L41-1075-16 | SMALL FIXED INDUCTOR (10NH) | K4K5K6 |
| L227 | | | L41-1075-16 | SMALL FIXED INDUCTOR (10NH) | K7 |
| L228 | | | L41-1875-45 | SMALL FIXED INDUCTOR (18NH) | |
| L300 | | | L41-1878-14 | SMALL FIXED INDUCTOR (18NH) | KK2K3 |
| L300 | | | L41-2278-14 | SMALL FIXED INDUCTOR (22NH) | K4K5K6 |
| L300 | | | L41-2278-14 | SMALL FIXED INDUCTOR (22NH) | K7 |
| L301-303 | | | L41-3978-14 | SMALL FIXED INDUCTOR (39NH) | KK2K3 |
| L301,302 | | | L41-4778-14 | SMALL FIXED INDUCTOR (47NH) | K4K5K6 |
| L301,302 | | | L41-4778-14 | SMALL FIXED INDUCTOR (47NH) | K7 |
| L303 | | | L41-5678-14 | SMALL FIXED INDUCTOR (56NH) | K4K5K6 |
| L303 | | | L41-5678-14 | SMALL FIXED INDUCTOR (56NH) | K7 |
| L304 | | | L40-4763-92 | SMALL FIXED INDUCTOR (4.7NH) | K4K5K6 |
| L304 | | | L40-4763-92 | SMALL FIXED INDUCTOR (4.7NH) | K7 |
| L306 | | | L41-1085-45 | SMALL FIXED INDUCTOR (100NH) | K4K5K6 |
| L306 | | | L41-1085-45 | SMALL FIXED INDUCTOR (100NH) | K7 |
| L306 | | | L41-1285-45 | SMALL FIXED INDUCTOR (120NH) | KK2K3 |
| L307 | | | L92-0446-05 | BEADS CORE | |
| L308 | | | L41-5675-45 | SMALL FIXED INDUCTOR (56NH) | KK2K3 |
| L308 | | | L41-8275-45 | SMALL FIXED INDUCTOR (82NH) | K4K5K6 |
| L308 | | | L41-8275-45 | SMALL FIXED INDUCTOR (82NH) | K7 |
| L309 | | | L41-1878-14 | SMALL FIXED INDUCTOR (18NH) | KK2K3 |
| L309-312 | | | L41-2778-14 | SMALL FIXED INDUCTOR (27NH) | K4K5K6 |
| L309-312 | | | L41-2778-14 | SMALL FIXED INDUCTOR (27NH) | K7 |
| L310 | | | L41-2278-14 | SMALL FIXED INDUCTOR (22NH) | KK2K3 |
| L311,312 | | | L41-1878-14 | SMALL FIXED INDUCTOR (18NH) | KK2K3 |
| L313 | | | L40-1575-57 | SMALL FIXED INDUCTOR (15.0NH) | |
| L314 | | | L40-1875-57 | SMALL FIXED INDUCTOR (18.0NH) | |
| L315 | | | L40-2275-57 | SMALL FIXED INDUCTOR (22.0NH) | KK2K3 |
| L316,317 | | | L39-1272-15 | TOROIDAL COIL | |
| L318 | | | L92-0163-05 | BEADS CORE | |
| L319 | | | L39-1272-15 | TOROIDAL COIL | |
| L321,322 | | | L41-5685-14 | SMALL FIXED INDUCTOR (560NH) | |
| L323 | | | L40-6881-37 | SMALL FIXED INDUCTOR (0.680UH) | |
| L324 | | | L40-1885-92 | SMALL FIXED INDUCTOR (180NH) | |
| L325 | | | L40-1091-86 | SMALL FIXED INDUCTOR (1.0UH) | |
| L326 | | | L41-1585-14 | SMALL FIXED INDUCTOR (150NH) | |
| L327 | | | L41-1085-14 | SMALL FIXED INDUCTOR (100NH) | |
| L500 | | | L92-0140-05 | CHIP FERRITE | |
| L501 | | | L92-0444-05 | CHIP FERRITE | |
| L502 | | | L92-0140-05 | CHIP FERRITE | |
| L503,504 | | | L92-0467-05 | CHIP FERRITE | |
| L505,506 | | | L92-0163-05 | BEADS CORE | |
| L700 | | | L92-0136-05 | CHIP FERRITE | |
| L701,702 | | | L92-0162-05 | BEADS CORE | |
| L703 | | | L92-0467-05 | CHIP FERRITE | |
| L704 | | | L92-0162-05 | BEADS CORE | |
| L705 | | | L33-1462-05 | SMALL FIXED INDUCTOR (68UH) | |
| L706 | | | L33-1469-05 | SMALL FIXED INDUCTOR (68UH) | |
| L707 | | | L33-1494-05 | SMALL FIXED INDUCTOR (4.7UH) | |
| L708 | | | L33-1462-05 | SMALL FIXED INDUCTOR (68UH) | |
| L710 | | | L92-0446-05 | BEADS CORE | |
| X100 | | ✻ | L77-3013-15 | TCXO (16.8MHZ/1PPM) | |
| X300 | | ✻ | L77-1961-15 | VCXO (16.8MHZ/5PPM) | |
| XF300 | | | L71-0551-45 | MCF (49.95MHZ) | |
| CP10,11 | | | RK74HA1J101J | CHIP-COM 100 J 1/16W | |
| R102 | | | RK73HB1J473J | CHIP R 47K J 1/16W | |
| R105 | | | RK73HB1J470J | CHIP R 47 J 1/16W | |
| R106 | | | RK73HB1J101J | CHIP R 100 J 1/16W | |
| R109 | | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R110 | | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R111 | | | RK73HB1J101J | CHIP R 100 J 1/16W | |
| R112 | | | RK73HB1J100J | CHIP R 10 J 1/16W | |
| R113 | | | RK73HB1J474J | CHIP R 470K J 1/16W | |
| R114 | | | RK73HB1J224J | CHIP R 220K J 1/16W | |
| R115 | | | RK73HB1J100J | CHIP R 10 J 1/16W | |
| R116 | | | RK73HH1J473D | CHIP R 47K D 1/16W | |
| R117 | | | RK73HB1J682J | CHIP R 6.8K J 1/16W | |
| R118 | | | RK73HB1J472J | CHIP R 4.7K J 1/16W | |
| R119 | | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R120 | | | RK73HB1J106J | CHIP R 10M J 1/16W | |
| R121 | | | RK73HB1J122J | CHIP R 1.2K J 1/16W | |
| R122 | | | RK73HB1J473J | CHIP R 47K J 1/16W | |
| R123,124 | | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R125 | | | RK73HB1J122J | CHIP R 1.2K J 1/16W | |
| R127 | | | RK73HB1J683J | CHIP R 68K J 1/16W | |
| R128 | | | RK73HB1J470J | CHIP R 47 J 1/16W | |
| R129 | | | RK73HB1J122J | CHIP R 1.2K J 1/16W | |
| R131 | | | RK73HB1J122J | CHIP R 1.2K J 1/16W | |
| R132,133 | | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R134 | | | RK73HB1J332J | CHIP R 3.3K J 1/16W | |
| R135 | | | RK73HB1J472J | CHIP R 4.7K J 1/16W | |
| R136 | | | RK73HB1J104J | CHIP R 100K J 1/16W | K4K5K6 |
| R136 | | | RK73HB1J104J | CHIP R 100K J 1/16W | K7 |
| R136 | | | RK73HB1J473J | CHIP R 47K J 1/16W | KK2K3 |
| R137 | | | RK73HB1J152J | CHIP R 1.5K J 1/16W | |
| R138 | | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R139 | | | RK73HB1J474J | CHIP R 470K J 1/16W | |
| R140 | | | RK73HB1J473J | CHIP R 47K J 1/16W | |
| R141 | | | RK73HB1J000J | CHIP R 0.0 J 1/16W | KK2K3 |
| R142,143 | | | RK73HB1J473J | CHIP R 47K J 1/16W | K4K5K6 |
| R142,143 | | | RK73HB1J473J | CHIP R 47K J 1/16W | K7 |
| R144 | | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R145 | | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R146 | | | RK73HB1J221J | CHIP R 220 J 1/16W | KK2K3 |
| R146,147 | | | RK73HB1J221J | CHIP R 220 J 1/16W | K4K5K6 |
| R146,147 | | | RK73HB1J221J | CHIP R 220 J 1/16W | K7 |
| R147 | | | RK73HB1J271J | CHIP R 270 J 1/16W | KK2K3 |
| R148 | | | RK73HB1J220J | CHIP R 22 J 1/16W | |
| R149 | | | RK73HB1J154J | CHIP R 150K J 1/16W | |
| R150 | | | RK73HB1J101J | CHIP R 100 J 1/16W | |
| R151 | | | RK73HB1J560J | CHIP R 56 J 1/16W | |
| R152 | | | RK73HB1J220J | CHIP R 22 J 1/16W | KK2K3 |

**If a part reference number is listed in a shaded box, that part does not come with the PCB.**

# PARTS LIST

**TX-RX UNIT (X57-7660-XX)**

| Ref. No. | Address | New parts | Parts No. | Description | | | | Destination |
|---|---|---|---|---|---|---|---|---|
| R153 | | | RK73HB1J101J | CHIP R | 100 | J | 1/16W | |
| R155 | | | RK73HB1J270J | CHIP R | 27 | J | 1/16W | K4K5K6 |
| R155 | | | RK73HB1J270J | CHIP R | 27 | J | 1/16W | K7 |
| R155 | | | RK73HB1J390J | CHIP R | 39 | J | 1/16W | KK2K3 |
| R156 | | | RK73HB1J151J | CHIP R | 150 | J | 1/16W | KK2K3 |
| R156 | | | RK73HB1J181J | CHIP R | 180 | J | 1/16W | K4K5K6 |
| R156 | | | RK73HB1J181J | CHIP R | 180 | J | 1/16W | K7 |
| R157,158 | | | RK73HB1J473J | CHIP R | 47K | J | 1/16W | K4K5K6 |
| R157,158 | | | RK73HB1J473J | CHIP R | 47K | J | 1/16W | K7 |
| R159 | | | RK73HB1J224J | CHIP R | 220K | J | 1/16W | KK2K3 |
| R160 | | | RK73HB1J151J | CHIP R | 150 | J | 1/16W | KK2K3 |
| R160 | | | RK73HB1J181J | CHIP R | 180 | J | 1/16W | K4K5K6 |
| R160 | | | RK73HB1J181J | CHIP R | 180 | J | 1/16W | K7 |
| R162 | | | RK73HB1J103J | CHIP R | 10K | J | 1/16W | |
| R163 | | | RK73HB1J000J | CHIP R | 0.0 | J | 1/16W | KK2K3 |
| R164 | | | RK73HB1J103J | CHIP R | 10K | J | 1/16W | KK2K3 |
| R164,165 | | | RK73HB1J103J | CHIP R | 10K | J | 1/16W | K4K5K6 |
| R164,165 | | | RK73HB1J103J | CHIP R | 10K | J | 1/16W | K7 |
| R166 | | | RK73HB1J331J | CHIP R | 330 | J | 1/16W | |
| R167 | | | RK73HB1J221J | CHIP R | 220 | J | 1/16W | |
| R170 | | | RK73HB1J000J | CHIP R | 0.0 | J | 1/16W | |
| R172 | | | RK73HB1J222J | CHIP R | 2.2K | J | 1/16W | |
| R173 | | | RK73HB1J106J | CHIP R | 10M | J | 1/16W | |
| R174,175 | | | RK73HB1J271J | CHIP R | 270 | J | 1/16W | K4K5K6 |
| R174,175 | | | RK73HB1J271J | CHIP R | 270 | J | 1/16W | K7 |
| R175 | | | RK73HB1J000J | CHIP R | 0.0 | J | 1/16W | KK2K3 |
| R176 | | | RK73FB2B000J | CHIP R | 0.0 | J | 1/8W | |
| R178 | | | RK73HB1J560J | CHIP R | 56 | J | 1/16W | |
| R200 | | | RK73HB1J332J | CHIP R | 3.3K | J | 1/16W | |
| R201 | | | RK73HB1J152J | CHIP R | 1.5K | J | 1/16W | KK2K3 |
| R201 | | | RK73HB1J182J | CHIP R | 1.8K | J | 1/16W | K4K5K6 |
| R201 | | | RK73HB1J182J | CHIP R | 1.8K | J | 1/16W | K7 |
| R202 | | | RK73HB1J472J | CHIP R | 4.7K | J | 1/16W | |
| R203 | | | RK73HB1J330J | CHIP R | 33 | J | 1/16W | |
| R204 | | | RK73HB1J331J | CHIP R | 330 | J | 1/16W | |
| R205 | | | RK73HB1J220J | CHIP R | 22 | J | 1/16W | |
| R211 | | | RK73HB1J331J | CHIP R | 330 | J | 1/16W | |
| R212,213 | | | RK73HB1J104J | CHIP R | 100K | J | 1/16W | |
| R214 | | | RK73HB1J181J | CHIP R | 180 | J | 1/16W | KK2K3 |
| R214 | | | RK73HB1J271J | CHIP R | 270 | J | 1/16W | K4K5K6 |
| R214 | | | RK73HB1J271J | CHIP R | 270 | J | 1/16W | K7 |
| R215 | | | RK73HB1J180J | CHIP R | 18 | J | 1/16W | K4K5K6 |
| R215 | | | RK73HB1J180J | CHIP R | 18 | J | 1/16W | K7 |
| R215 | | | RK73HB1J330J | CHIP R | 33 | J | 1/16W | KK2K3 |
| R216 | | | RK73HB1J181J | CHIP R | 180 | J | 1/16W | KK2K3 |
| R216 | | | RK73HB1J271J | CHIP R | 270 | J | 1/16W | K4K5K6 |
| R216 | | | RK73HB1J271J | CHIP R | 270 | J | 1/16W | K7 |
| R217 | | | RK73HB1J101J | CHIP R | 100 | J | 1/16W | |
| R218 | | | RK73HB1J223J | CHIP R | 22K | J | 1/16W | |
| R219 | | | RK73HB1J103J | CHIP R | 10K | J | 1/16W | |
| R220 | | | RK73EB2HR22F | CHIP R | 0.22 | F | 1/2W | |
| R221 | | | RK73GB2A220J | CHIP R | 22 | J | 1/10W | K4K5K6 |
| R221 | | | RK73GB2A220J | CHIP R | 22 | J | 1/10W | K7 |
| R221 | | | RK73GB2A470J | CHIP R | 47 | J | 1/10W | KK2K3 |
| R222 | | | RK73EB2HR22F | CHIP R | 0.22 | F | 1/2W | |
| R223 | | | RK73HB1J473J | CHIP R | 47K | J | 1/16W | |
| R224-226 | | | RK73HH1J154D | CHIP R | 150K | D | 1/16W | |
| R227 | | | RK73HB1J220J | CHIP R | 22 | J | 1/16W | |
| R228 | | | RK73HB1J103J | CHIP R | 10K | J | 1/16W | |
| R229 | | | RK73HH1J154D | CHIP R | 150K | D | 1/16W | |

| Ref. No. | Address | New parts | Parts No. | Description | | | | Destination |
|---|---|---|---|---|---|---|---|---|
| R230 | | | RK73HB1J333J | CHIP R | 33K | J | 1/16W | |
| R231,232 | | | RK73HH1J154D | CHIP R | 150K | D | 1/16W | |
| R233 | | | RK73GB2A000J | CHIP R | 0.0 | J | 1/10W | K4K5K6 |
| R233 | | | RK73GB2A000J | CHIP R | 0.0 | J | 1/10W | K7 |
| R233 | | | RK73GB2A1R0J | CHIP R | 1.0 | J | 1/10W | KK2K3 |
| R234 | | | RK73HB1J103J | CHIP R | 10K | J | 1/16W | |
| R235 | | | RK73HB1J105J | CHIP R | 1.0M | J | 1/16W | |
| R236 | | | RK73HB1J473J | CHIP R | 47K | J | 1/16W | |
| R237 | | | RK73HB1J184J | CHIP R | 180K | J | 1/16W | |
| R238 | | | RK73HB1J474J | CHIP R | 470K | J | 1/16W | |
| R239 | | | RK73HB1J104J | CHIP R | 100K | J | 1/16W | |
| R240 | | | RK73HB1J222J | CHIP R | 2.2K | J | 1/16W | |
| R242 | | | RK73FB2B000J | CHIP R | 0.0 | J | 1/8W | KK2K3 |
| R243 | | | RK73GB2A271J | CHIP R | 270 | J | 1/10W | |
| R244 | | | RK73HB1J822J | CHIP R | 8.2K | J | 1/16W | |
| R245 | | | RK73HB1J332J | CHIP R | 3.3K | J | 1/16W | |
| R246 | | | RK73GB2A271J | CHIP R | 270 | J | 1/10W | |
| R247 | | | RK73HB1J272J | CHIP R | 2.7K | J | 1/16W | |
| R249 | | | RK73GB2A000J | CHIP R | 0.0 | J | 1/10W | KK2K3 |
| R251 | | | RK73HB1J104J | CHIP R | 100K | J | 1/16W | |
| R252 | | | RK73HB1J183J | CHIP R | 18K | J | 1/16W | |
| R254,255 | | | RK73HB1J103J | CHIP R | 10K | J | 1/16W | |
| R256 | | | RK73FB2B102J | CHIP R | 1.0K | J | 1/8W | |
| R258 | | | RK73GB2A272J | CHIP R | 2.7K | J | 1/10W | |
| R259,260 | | | RK73GB2A000J | CHIP R | 0.0 | J | 1/10W | |
| R261 | | | RK73HB1J101J | CHIP R | 100 | J | 1/16W | |
| R262 | | | RK73HB1J222J | CHIP R | 2.2K | J | 1/16W | |
| R263 | | | RK73HB1J822J | CHIP R | 8.2K | J | 1/16W | |
| R264 | | | RK73HB1J000J | CHIP R | 0.0 | J | 1/16W | |
| R300 | | | RK73HB1J103J | CHIP R | 10K | J | 1/16W | |
| R301 | | | RK73HB1J104J | CHIP R | 100K | J | 1/16W | |
| R302 | | | RK73HB1J564J | CHIP R | 560K | J | 1/16W | |
| R303,304 | | | RK73HB1J103J | CHIP R | 10K | J | 1/16W | |
| R305 | | | RK73HB1J473J | CHIP R | 47K | J | 1/16W | |
| R306 | | | RK73HB1J104J | CHIP R | 100K | J | 1/16W | |
| R307 | | | RK73HB1J274J | CHIP R | 270K | J | 1/16W | |
| R308 | | | RK73HB1J103J | CHIP R | 10K | J | 1/16W | |
| R309,310 | | | RK73HB1J105J | CHIP R | 1.0M | J | 1/16W | |
| R312 | | | RK73HB1J104J | CHIP R | 100K | J | 1/16W | |
| R313 | | | RK73HB1J473J | CHIP R | 47K | J | 1/16W | K4K5K6 |
| R313 | | | RK73HB1J473J | CHIP R | 47K | J | 1/16W | K7 |
| R313 | | | RK73HB1J683J | CHIP R | 68K | J | 1/16W | KK2K3 |
| R314 | | | RK73HB1J104J | CHIP R | 100K | J | 1/16W | |
| R316 | | | RK73HB1J121J | CHIP R | 120 | J | 1/16W | KK2K3 |
| R316 | | | RK73HB1J560J | CHIP R | 56 | J | 1/16W | K4K5K6 |
| R316 | | | RK73HB1J560J | CHIP R | 56 | J | 1/16W | K7 |
| R317 | | | RK73HB1J150J | CHIP R | 15 | J | 1/16W | KK2K3 |
| R317 | | | RK73HB1J180J | CHIP R | 18 | J | 1/16W | K4K5K6 |
| R317 | | | RK73HB1J180J | CHIP R | 18 | J | 1/16W | K7 |
| R318-321 | | | RK73HB1J104J | CHIP R | 100K | J | 1/16W | |
| R322 | | | RK73HB1J271J | CHIP R | 270 | J | 1/16W | |
| R323 | | | RK73HB1J220J | CHIP R | 22 | J | 1/16W | |
| R324 | | | RK73HB1J271J | CHIP R | 270 | J | 1/16W | |
| R325 | | | RK73HB1J151J | CHIP R | 150 | J | 1/16W | K4K5K6 |
| R325 | | | RK73HB1J151J | CHIP R | 150 | J | 1/16W | K7 |
| R325 | | | RK73HB1J271J | CHIP R | 270 | J | 1/16W | KK2K3 |
| R326 | | | RK73HB1J222J | CHIP R | 2.2K | J | 1/16W | |
| R327 | | | RK73HB1J332J | CHIP R | 3.3K | J | 1/16W | |
| R328 | | | RK73HB1J100J | CHIP R | 10 | J | 1/16W | |
| R329,330 | | | RK73FB2B000J | CHIP R | 0.0 | J | 1/8W | |

# PARTS LIST

TX-RX UNIT (X57-7660-XX)

| Ref. No. | Address | New parts | Parts No. | Description | Destination |
|---|---|---|---|---|---|
| R333 | | | RK73HH1J104D | CHIP R 100K D 1/16W | |
| R334 | | | RK73HH1J473D | CHIP R 47K D 1/16W | |
| R335 | | | RK73HB1J681J | CHIP R 680 J 1/16W | |
| R336,337 | | | RK73HB1J470J | CHIP R 47 J 1/16W | |
| R338 | | | RK73HB1J221J | CHIP R 220 J 1/16W | |
| R339 | | | RK73GB2A000J | CHIP R 0.0 J 1/10W | |
| R340 | | | RK73HB1J822J | CHIP R 8.2K J 1/16W | |
| R341 | | | RK73HB1J470J | CHIP R 47 J 1/16W | |
| R342 | | | RK73HB1J684J | CHIP R 680K J 1/16W | |
| R343,344 | | | RK73HB1J392J | CHIP R 3.9K J 1/16W | |
| R347 | | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R348,349 | | | RK73HB1J220J | CHIP R 22 J 1/16W | |
| R353 | | | RK73HB1J154J | CHIP R 150K J 1/16W | |
| R355 | | | RK73HB1J474J | CHIP R 470K J 1/16W | |
| R356 | | | RK73HB1J153J | CHIP R 15K J 1/16W | |
| R357 | | | RK73HB1J563J | CHIP R 56K J 1/16W | |
| R358 | | | RK73HB1J472J | CHIP R 4.7K J 1/16W | |
| R360 | | | RK73HB1J392J | CHIP R 3.9K J 1/16W | |
| R361 | | | RK73HB1J182J | CHIP R 1.8K J 1/16W | |
| R363 | | | RK73HB1J392J | CHIP R 3.9K J 1/16W | |
| R364 | | | RK73HB1J220J | CHIP R 22 J 1/16W | |
| R366 | | | RK73HB1J332J | CHIP R 3.3K J 1/16W | |
| R367 | | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R368 | | | RK73HB1J272J | CHIP R 2.7K J 1/16W | |
| R369 | | | RK73HB1J473J | CHIP R 47K J 1/16W | |
| R374 | | | RK73HB1J270J | CHIP R 27 J 1/16W | KK2K3 |
| R374 | | | RK73HB1J470J | CHIP R 47 J 1/16W | K4K5K6 |
| R374 | | | RK73HB1J470J | CHIP R 47 J 1/16W | K7 |
| R375 | | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R376 | | | RK73HB1J100J | CHIP R 10 J 1/16W | |
| R377 | | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R378 | | | RK73HB1J333J | CHIP R 33K J 1/16W | |
| R379 | | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R380 | | | RK73HB1J103J | CHIP R 10K J 1/16W | |
| R381 | | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R382 | | | RK73HB1J223J | CHIP R 22K J 1/16W | |
| R501 | | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R502 | | | RK73HB1J393J | CHIP R 39K J 1/16W | KK2K3 |
| R502 | | | RK73HB1J473J | CHIP R 47K J 1/16W | K4K5K6 |
| R502 | | | RK73HB1J473J | CHIP R 47K J 1/16W | K7 |
| R503 | | | RK73HB1J121J | CHIP R 120 J 1/16W | |
| R505 | | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R506 | | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R507 | | | RK73HB1J103J | CHIP R 10K J 1/16W | |
| R509 | | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R511 | | | RK73HB1J101J | CHIP R 100 J 1/16W | |
| R513 | | | RK73HB1J101J | CHIP R 100 J 1/16W | |
| R514 | | | RK73HB1J103J | CHIP R 10K J 1/16W | K4K5K6 |
| R514 | | | RK73HB1J103J | CHIP R 10K J 1/16W | K7 |
| R514 | | | RK73HB1J123J | CHIP R 12K J 1/16W | KK2K3 |
| R515 | | | RK73HB1J392J | CHIP R 3.9K J 1/16W | K4K5K6 |
| R515 | | | RK73HB1J392J | CHIP R 3.9K J 1/16W | K7 |
| R515 | | | RK73HB1J562J | CHIP R 5.6K J 1/16W | KK2K3 |
| R517 | | | RK73HB1J101J | CHIP R 100 J 1/16W | |
| R518 | | | RK73HB1J474J | CHIP R 470K J 1/16W | |
| R519 | | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R520 | | | RK73HB1J472J | CHIP R 4.7K J 1/16W | |
| R521 | | | RK73HB1J224J | CHIP R 220K J 1/16W | |
| R522 | | | RK73HB1J100J | CHIP R 10 J 1/16W | |
| R523,524 | | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |

| Ref. No. | Address | New parts | Parts No. | Description | Destination |
|---|---|---|---|---|---|
| R525 | | | RK73HB1J473J | CHIP R 47K J 1/16W | |
| R526 | | | RK73HB1J474J | CHIP R 470K J 1/16W | |
| R527 | | | RK73HB1J473J | CHIP R 47K J 1/16W | |
| R528 | | | RK73HB1J332J | CHIP R 3.3K J 1/16W | |
| R529 | | | RK73HB1J473J | CHIP R 47K J 1/16W | |
| R530 | | | RK73HB1J474J | CHIP R 470K J 1/16W | |
| R531 | | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R532,533 | | | RK73HB1J472J | CHIP R 4.7K J 1/16W | |
| R534 | | | RK73HB1J220J | CHIP R 22 J 1/16W | |
| R535 | | | RK73HB1J563J | CHIP R 56K J 1/16W | |
| R536 | | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R538 | | | RK73HB1J103J | CHIP R 10K J 1/16W | |
| R541 | | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R544-547 | | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R550 | | | RK73HB1J563J | CHIP R 56K J 1/16W | |
| R553 | | | RK73HB1J563J | CHIP R 56K J 1/16W | |
| R554 | | | RK73HB1J472J | CHIP R 4.7K J 1/16W | |
| R556 | | | RK73HB1J683J | CHIP R 68K J 1/16W | |
| R557 | | | RK73HB1J564J | CHIP R 560K J 1/16W | |
| R558,559 | | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R560 | | | RK73HB1J103J | CHIP R 10K J 1/16W | |
| R561 | | | RK73HB1J334J | CHIP R 330K J 1/16W | |
| R562-565 | | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R566 | | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R567 | | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R568 | | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R569 | | | RK73HB1J103J | CHIP R 10K J 1/16W | |
| R570 | | | RK73HB1J224J | CHIP R 220K J 1/16W | |
| R571,572 | | | RK73HB1J334J | CHIP R 330K J 1/16W | |
| R573 | | | RK73HB1J105J | CHIP R 1.0M J 1/16W | |
| R574 | | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R575 | | | RK73HB1J473J | CHIP R 47K J 1/16W | |
| R576 | | | RK73HB1J103J | CHIP R 10K J 1/16W | |
| R577 | | | RK73HB1J472J | CHIP R 4.7K J 1/16W | |
| R578 | | | RK73HB1J473J | CHIP R 47K J 1/16W | |
| R579 | | | RK73HB1J103J | CHIP R 10K J 1/16W | |
| R580 | | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R581,582 | | | RK73HB1J103J | CHIP R 10K J 1/16W | |
| R583,584 | | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R585 | | | RK73HB1J274J | CHIP R 270K J 1/16W | |
| R586,587 | | | RK73HB1J474J | CHIP R 470K J 1/16W | |
| R588 | | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R589,590 | | | RK73HB1J473J | CHIP R 47K J 1/16W | |
| R591,592 | | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R593 | | | RK73HB1J102J | CHIP R 1.0K J 1/16W | |
| R594,595 | | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R596 | | | RK73HB1J154J | CHIP R 150K J 1/16W | |
| R597-601 | | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R602 | | | RK73HB1J274J | CHIP R 270K J 1/16W | |
| R603-608 | | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R610-612 | | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R614 | | | RK73HB1J154J | CHIP R 150K J 1/16W | |
| R615 | | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R616 | | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |
| R617 | | | RK73HB1J473J | CHIP R 47K J 1/16W | |
| R618 | | | RK73HB1J103J | CHIP R 10K J 1/16W | |
| R619,620 | | | RK73HB1J104J | CHIP R 100K J 1/16W | |
| R621 | | | RK73HB1J124J | CHIP R 120K J 1/16W | |
| R622 | | | RK73HB1J223J | CHIP R 22K J 1/16W | |
| R623,624 | | | RK73HB1J000J | CHIP R 0.0 J 1/16W | |

# PARTS LIST

**TX-RX UNIT (X57-7660-XX)**

| Ref. No. | Address | New parts | Parts No. | Description | | | | Destination |
|---|---|---|---|---|---|---|---|---|
| R625 | | | RK73HB1J104J | CHIP R | 100K | J | 1/16W | |
| R626 | | | RK73HB1J183J | CHIP R | 18K | J | 1/16W | |
| R627 | | | RK73HB1J103J | CHIP R | 10K | J | 1/16W | |
| R628 | | | RK73HB1J183J | CHIP R | 18K | J | 1/16W | |
| R629,630 | | | RK73HB1J223J | CHIP R | 22K | J | 1/16W | |
| R631 | | | RK73HB1J000J | CHIP R | 0.0 | J | 1/16W | |
| R635,636 | | | RK73HB1J471J | CHIP R | 470 | J | 1/16W | |
| R637 | | | RK73HB1J102J | CHIP R | 1.0K | J | 1/16W | |
| R638 | | | RK73HB1J273J | CHIP R | 27K | J | 1/16W | |
| R640 | | | RK73HB1J102J | CHIP R | 1.0K | J | 1/16W | |
| R641 | | | RK73HB1J562J | CHIP R | 5.6K | J | 1/16W | |
| R642 | | | RK73HB1J473J | CHIP R | 47K | J | 1/16W | |
| R643,644 | | | RK73HB1J000J | CHIP R | 0.0 | J | 1/16W | |
| R645 | | | RK73HB1J102J | CHIP R | 1.0K | J | 1/16W | |
| R646 | | | RK73HB1J103J | CHIP R | 10K | J | 1/16W | |
| R647 | | | RK73HB1J471J | CHIP R | 470 | J | 1/16W | |
| R648 | | | RK73HB1J104J | CHIP R | 100K | J | 1/16W | |
| R649 | | | RK73HB1J102J | CHIP R | 1.0K | J | 1/16W | |
| R650 | | | RK73HB1J000J | CHIP R | 0.0 | J | 1/16W | |
| R651 | | | RK73HB1J102J | CHIP R | 1.0K | J | 1/16W | |
| R652 | | | RK73HB1J000J | CHIP R | 0.0 | J | 1/16W | |
| R653,654 | | | RK73HB1J103J | CHIP R | 10K | J | 1/16W | |
| R655 | | | RK73HB1J105J | CHIP R | 1.0M | J | 1/16W | |
| R656,657 | | | RK73HB1J683J | CHIP R | 68K | J | 1/16W | |
| R658 | | | RK73HB1J474J | CHIP R | 470K | J | 1/16W | |
| R659 | | | RK73HB1J473J | CHIP R | 47K | J | 1/16W | |
| R660 | | | RK73HB1J000J | CHIP R | 0.0 | J | 1/16W | |
| R661 | | | RK73HB1J684J | CHIP R | 680K | J | 1/16W | |
| R662 | | | RK73HB1J000J | CHIP R | 0.0 | J | 1/16W | |
| R663 | | | RK73HB1J564J | CHIP R | 560K | J | 1/16W | |
| R664 | | | RK73HB1J473J | CHIP R | 47K | J | 1/16W | |
| R665 | | | RK73HB1J683J | CHIP R | 68K | J | 1/16W | |
| R666 | | | RK73HB1J153J | CHIP R | 15K | J | 1/16W | |
| R667 | | | RK73HB1J333J | CHIP R | 33K | J | 1/16W | |
| R668 | | | RK73HB1J564J | CHIP R | 560K | J | 1/16W | |
| R669 | | | RK73HB1J123J | CHIP R | 12K | J | 1/16W | |
| R670 | | | RK73HB1J104J | CHIP R | 100K | J | 1/16W | |
| R671 | | | RK73HB1J102J | CHIP R | 1.0K | J | 1/16W | |
| R672 | | | RK73HB1J472J | CHIP R | 4.7K | J | 1/16W | |
| R673 | | | RK73HB1J104J | CHIP R | 100K | J | 1/16W | |
| R674 | | | RK73HB1J471J | CHIP R | 470 | J | 1/16W | |
| R675 | | | RK73HB1J182J | CHIP R | 1.8K | J | 1/16W | |
| R676 | | | RK73HB1J104J | CHIP R | 100K | J | 1/16W | |
| R690 | | | RK73HB1J103J | CHIP R | 10K | J | 1/16W | |
| R693 | | | RK73HB1J473J | CHIP R | 47K | J | 1/16W | |
| R694,695 | | | RK73HB1J104J | CHIP R | 100K | J | 1/16W | |
| R697-699 | | | RK73HB1J104J | CHIP R | 100K | J | 1/16W | |
| R700-703 | | | RK73HB1J474J | CHIP R | 470K | J | 1/16W | |
| R704 | | | RK73HB1J104J | CHIP R | 100K | J | 1/16W | |
| R705 | | | RK73HB1J474J | CHIP R | 470K | J | 1/16W | |
| R706 | | | RK73HB1J000J | CHIP R | 0.0 | J | 1/16W | |
| R707-709 | | | RK73HB1J474J | CHIP R | 470K | J | 1/16W | |
| R710 | | | RK73HB1J102J | CHIP R | 1.0K | J | 1/16W | |
| R711 | | | RK73HB1J474J | CHIP R | 470K | J | 1/16W | |
| R712 | | | RK73HB1J564J | CHIP R | 560K | J | 1/16W | |
| R714 | | | RK73HB1J154J | CHIP R | 150K | J | 1/16W | |
| R716 | | | RK73HB1J471J | CHIP R | 470 | J | 1/16W | |
| R717 | | | RK73HB1J000J | CHIP R | 0.0 | J | 1/16W | |
| R720 | | | RK73HB1J473J | CHIP R | 47K | J | 1/16W | |
| R722 | | | RK73HH1J334D | CHIP R | 330K | D | 1/16W | |

| Ref. No. | Address | New parts | Parts No. | Description | | | | Destination |
|---|---|---|---|---|---|---|---|---|
| R723 | | | RK73HH1J124D | CHIP R | 120K | D | 1/16W | |
| R724 | | | RK73GB2A100J | CHIP R | 10 | J | 1/10W | |
| R726 | | | RK73HB1J474J | CHIP R | 470K | J | 1/16W | |
| R727 | | | RK73HB1J000J | CHIP R | 0.0 | J | 1/16W | |
| R729 | | | RK73HB1J123J | CHIP R | 12K | J | 1/16W | |
| R730 | | | RK73HH1J334D | CHIP R | 330K | D | 1/16W | |
| R731 | | | RK73HH1J223D | CHIP R | 22K | D | 1/16W | |
| R749 | | | RK73HB1J104J | CHIP R | 100K | J | 1/16W | |
| R750 | | | RK73HB1J123J | CHIP R | 12K | J | 1/16W | |
| R751 | | | RK73HB1J105J | CHIP R | 1.0M | J | 1/16W | |
| R752 | | | RK73HB1J470J | CHIP R | 47 | J | 1/16W | |
| R753 | | | RK73HB1J473J | CHIP R | 47K | J | 1/16W | |
| R754 | | | RK73HB1J100J | CHIP R | 10 | J | 1/16W | |
| R756,757 | | | RK73HB1J000J | CHIP R | 0.0 | J | 1/16W | |
| R759 | | | RK73HB1J000J | CHIP R | 0.0 | J | 1/16W | |
| R761,762 | | | RK73HB1J474J | CHIP R | 470K | J | 1/16W | |
| R910 | | | RK73HB1J474J | CHIP R | 470K | J | 1/16W | |
| R912 | | | RK73HB1J103J | CHIP R | 10K | J | 1/16W | |
| R913 | | | RK73HB1J682J | CHIP R | 6.8K | J | 1/16W | |
| R914 | | | RK73HB1J105J | CHIP R | 1.0M | J | 1/16W | |
| R915 | | | RK73HB1J564J | CHIP R | 560K | J | 1/16W | |
| R916 | | | RK73HB1J473J | CHIP R | 47K | J | 1/16W | |
| R998 | | | RK73HB1J000J | CHIP R | 0.0 | J | 1/16W | KK2K3 |
| R999 | | | RK73HB1J000J | CHIP R | 0.0 | J | 1/16W | K4K5K6 |
| R999 | | | RK73HB1J000J | CHIP R | 0.0 | J | 1/16W | K7 |
| S901 | | | S64-0406-05 | LEVER SWITCH | | | | |
| S902 | | | S70-0496-05 | TACT SWITCH | | | | |
| D102 | | | 1SV325F | VARIABLE CAPACITANCE DIODE | | | | |
| D104-109 | | | 1SV282-F | VARIABLE CAPACITANCE DIODE | | | | |
| D110 | | | 1SV325F | VARIABLE CAPACITANCE DIODE | | | | |
| D111,112 | | | 1SV282-F | VARIABLE CAPACITANCE DIODE | | | | |
| D113,114 | | | HVC131 | DIODE | | | | K4K5K6 |
| D113,114 | | | HVC131 | DIODE | | | | K7 |
| D115 | | | 1SV278F | VARIABLE CAPACITANCE DIODE | | | | |
| D116,117 | | | HVC131 | DIODE | | | | K4K5K6 |
| D116,117 | | | HVC131 | DIODE | | | | K7 |
| D119 | | | DA221 | DIODE | | | | |
| D200 | | | RN142S | DIODE | | | | |
| D201 | | | HZU5CLL | ZENER DIODE | | | | |
| D202-205 | | | HVC131 | DIODE | | | | |
| D206,207 | | | EZJZ0V50023C | VARISTOR | | | | |
| D301,302 | | | 1SV286F | VARIABLE CAPACITANCE DIODE | | | | |
| D304-307 | | | 1SV286F | VARIABLE CAPACITANCE DIODE | | | | |
| D308 | | | RN142S | DIODE | | | | |
| D500 | | | RB706F-40 | DIODE | | | | |
| D501 | | | MA2S111-F | DIODE | | | | |
| D502 | | | NNCD6.8G-A | ZENER DIODE | | | | |
| D504 | | | NNCD6.8G-A | ZENER DIODE | | | | |
| D505 | | | 1SS416 | DIODE | | | | |
| D510-512 | | | RB706F-40 | DIODE | | | | |
| D515,516 | | | AVRM1005C270M | VARISTOR | | | | |
| D517 | | | DA221 | DIODE | | | | |
| D518,519 | | | 1SS416 | DIODE | | | | |
| D521 | | | 1SS416 | DIODE | | | | |
| D700 | | | 1SR154-400 | DIODE | | | | |
| D702 | | | MA2S111-F | DIODE | | | | |
| D704 | | | 1SS388F | DIODE | | | | |
| D706 | | | HRB0502A | DIODE | | | | |
| IC100 | | | TLV2381IDBV | MOS-IC | | | | |

# PARTS LIST

TX-RX UNIT (X57-7660-XX)

| Ref. No. | Address | New parts | Parts No. | Description | Destination |
|---|---|---|---|---|---|
| IC101 | | | ADF4111BCP7 | MOS-IC | |
| IC200 | | | TC75W51FK(F) | MOS-IC | |
| IC201 | | | TA75W01FUF | MOS-IC | |
| IC202,203 | | | MASWSS0181 | ANALOGUE IC | |
| IC300,301 | | | TLV2381IDBV | MOS-IC | |
| IC302 | | | SPM5001 | MOS-IC | |
| IC304 | | | TA31137FNG | MOS-IC | |
| IC350,351 | | | TC7W53FK(F) | MOS-IC | |
| IC353 | | | MCP6021-E/OT | MOS-IC | |
| IC500 | | | TC75W51FK(F) | MOS-IC | |
| IC501 | | | TC7MBD3245AFK | MOS-IC | |
| IC502 | | | AK2330 | MOS-IC | |
| IC503 | | | TC75W51FK(F) | MOS-IC | |
| IC505 | | | PCA9535BS | MOS-IC | |
| IC506 | | | TC75S51FE(F) | MOS-IC | |
| IC507-509 | | | TC7W53FK(F) | MOS-IC | |
| IC510 | | | TC75W51FK(F) | MOS-IC | |
| IC511 | | | TC7SH126FU-F | MOS-IC | |
| IC512,513 | | | TC75W51FK(F) | MOS-IC | |
| IC514 | | | TC75S51FE(F) | MOS-IC | |
| IC515 | | | TC7S66FUF | MOS-IC | |
| IC516 | | | TC75W51FK(F) | MOS-IC | |
| IC517 | | | TC7SET08FU-F | MOS-IC | |
| IC700 | | | TK11250CUCB | MOS-IC | |
| IC701 | | | XC6209B502PR | MOS-IC | |
| IC702 | | | XC6204B502MR | MOS-IC | |
| IC704 | | | TK11250CUCB | MOS-IC | |
| IC705,706 | | | XC6204B332M | MOS-IC | |
| IC707 | | | XC6365D103M | MOS-IC | |
| IC708 | | | XC9101D09AKR | ANALOGUE IC | |
| IC709 | | | XC9235A15CM1 | MOS-IC | |
| IC710 | | | XC6204B332M | MOS-IC | |
| IC712 | | | NJM2130F3-ZB | BI-POLAR IC | |
| IC713 | | | LM2682MMX | MOS-IC | |
| IC714 | | | LM73CIMKX-0 | MOS-IC | |
| Q100 | | | 2SC4617(S) | TRANSISTOR | |
| Q102 | | | SSM6L05FU-F | FET | |
| Q103 | | | 2SK879-F(Y) | FET | |
| Q104 | | | 2SC4617(S) | TRANSISTOR | |
| Q105 | | | SSM6L05FU-F | FET | |
| Q106 | | | 2SK508NV(K52) | FET | KK2K3 |
| Q106,107 | | | 2SK508NV(K52) | FET | K4K5K6 |
| Q106,107 | | | 2SK508NV(K52) | FET | K7 |
| Q107 | | | 2SK508NV(52K) | FET | KK2K3 |
| Q108 | | | 2SJ347F | FET | |
| Q109 | | | 2SC5108(Y)F | TRANSISTOR | KK2K3 |
| Q109-112 | | | 2SC5108(Y)F | TRANSISTOR | K4K5K6 |
| Q109-112 | | | 2SC5108(Y)F | TRANSISTOR | K7 |
| Q111,112 | | | 2SC5108(Y)F | TRANSISTOR | KK2K3 |
| Q200 | | | 2SC5108(Y)F | TRANSISTOR | |
| Q202 | | | RD01MUS1-T113 | FET | |
| Q203 | | | SSM3K15TE(F) | FET | |
| Q204 | | | RD07MVS2 | FET | |
| Q205 | | | EMD9 | TRANSISTOR | |
| Q206 | | | SSM3K15TE(F) | FET | |
| Q207 | | | DTA144EEB | DIGITAL TRANSISTOR | |
| Q208 | | | SSM3K15TE(F) | FET | |
| Q209 | | | 2SJ243-A | FET | |
| Q210 | | | 2SK3077F | FET | |
| Q300 | | | 2SC4617(S) | TRANSISTOR | |

| Ref. No. | Address | New parts | Parts No. | Description | Destination |
|---|---|---|---|---|---|
| Q301 | | | 3SK318 | FET | |
| Q302 | | | 2SK1215-E(E) | FET | |
| Q303 | | | 2SC5108(Y)F | TRANSISTOR | |
| Q304 | | | EMD9 | TRANSISTOR | |
| Q502 | | | 2SC4617(S) | TRANSISTOR | |
| Q503 | | | SSM3K15TE(F) | FET | |
| Q504 | | | 2SC4738(GR)F | TRANSISTOR | |
| Q505 | | | 2SA1832(GR)F | TRANSISTOR | |
| Q506 | | | 2SJ243-A | FET | |
| Q507 | | | SSM3K15TE(F) | FET | |
| Q508 | | | 2SJ347F | FET | |
| Q509 | | | SSM6N16FE-F | FET | |
| Q700,701 | | | SSM6L05FU-F | FET | |
| Q703 | | | SSM3K15TE(F) | FET | |
| Q704 | | | TPC6108-F | FET | |
| Q705 | | | SSM5H01TU-F | FET | |
| Q706 | | | TPC6108-F | FET | |
| Q707 | | | 2SJ648-A | FET | |
| Q708 | | | SSM3K15TE(F) | FET | |
| Q709 | | | SSM6L05FU-F | FET | |
| TH102 | | | B57331V2104J | THERMISTOR | |
| TH200 | | | B57331V2104J | THERMISTOR | |