EXPLODED VIEW (DVD MECHANISM)

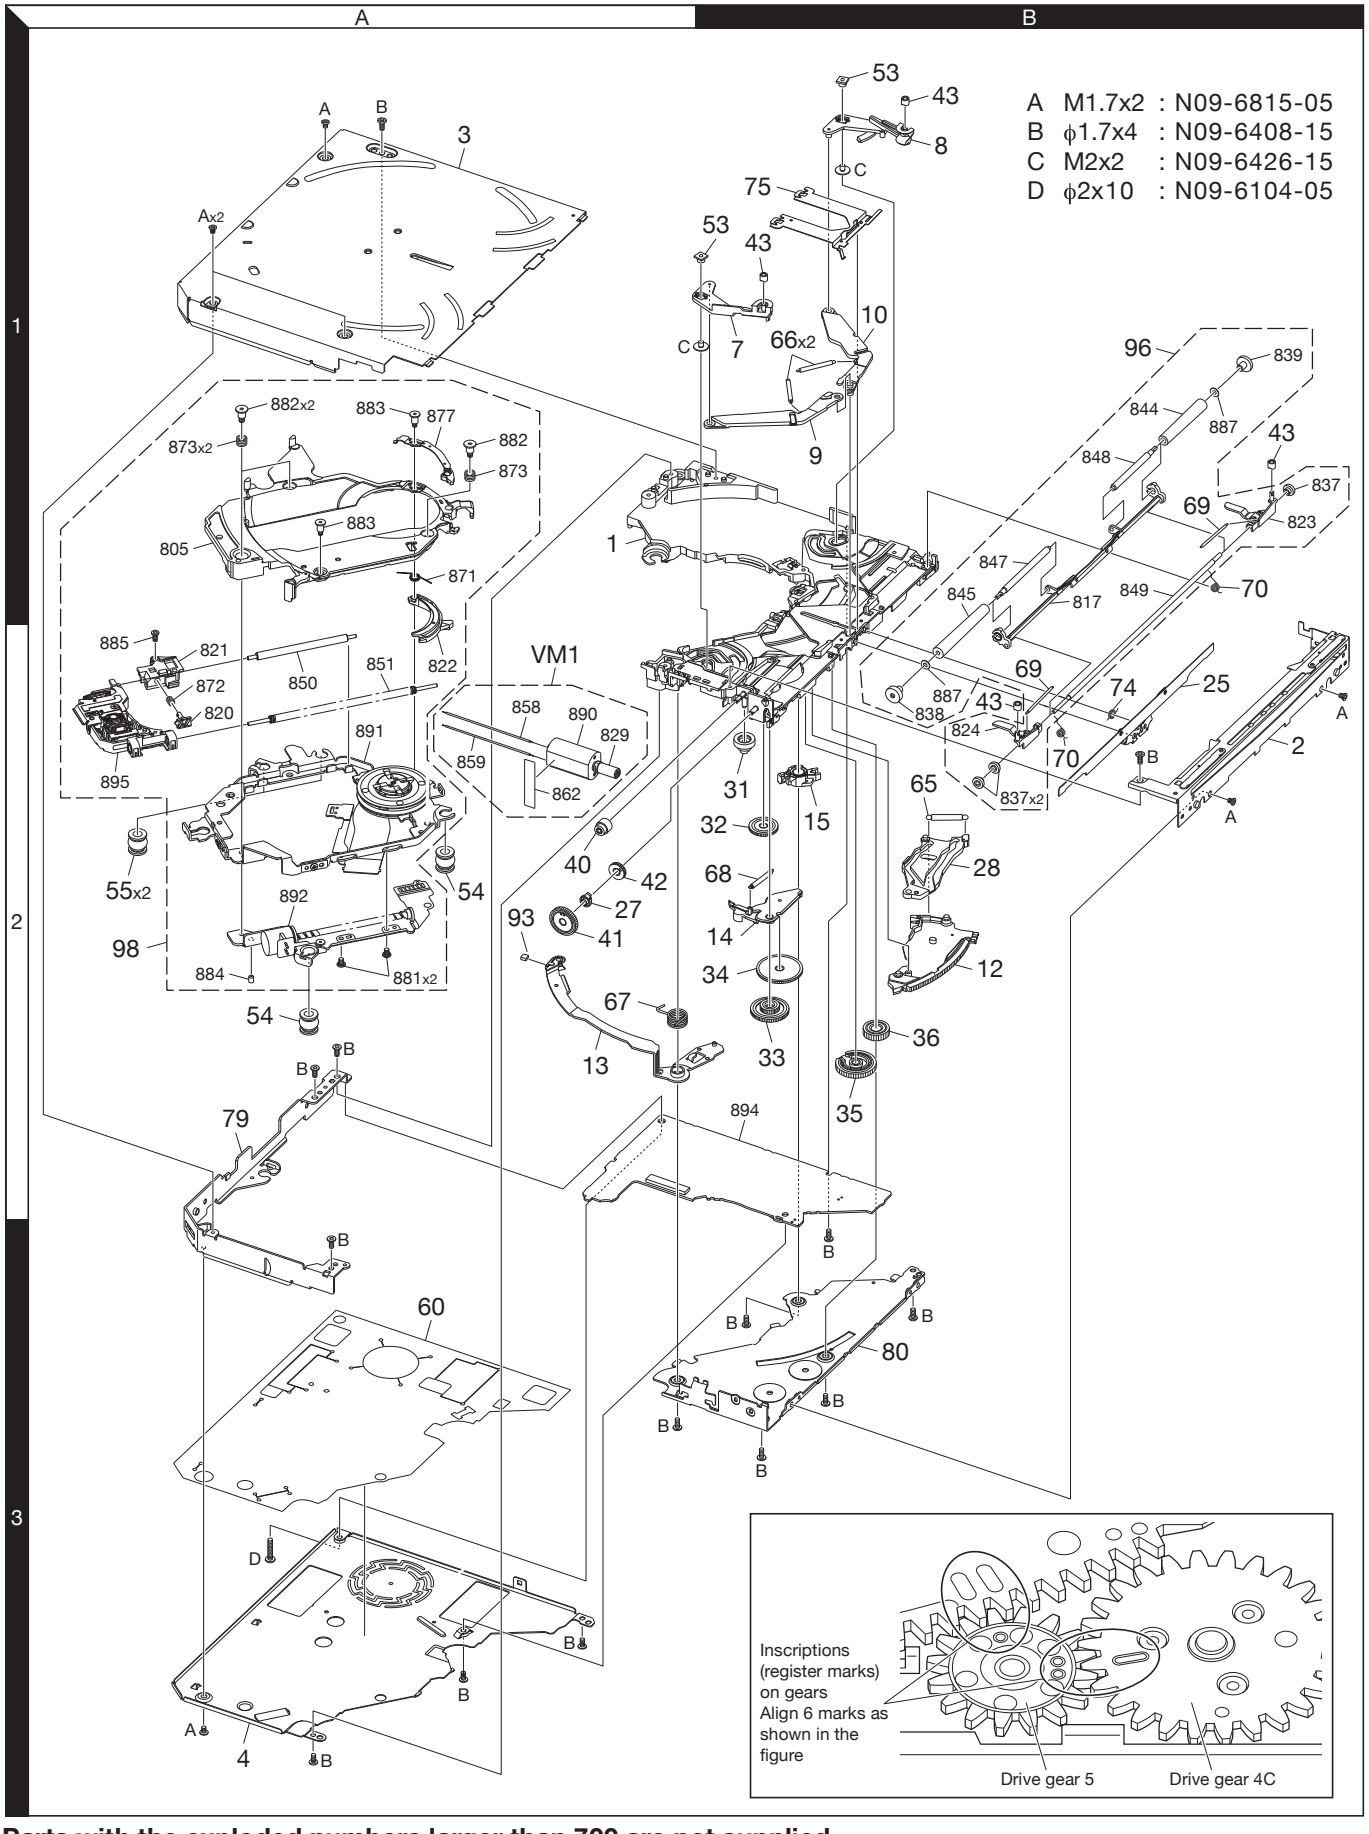

Parts with the exploded numbers larger than 700 are not supplied.

EXPLODED VIEW (UNIT)

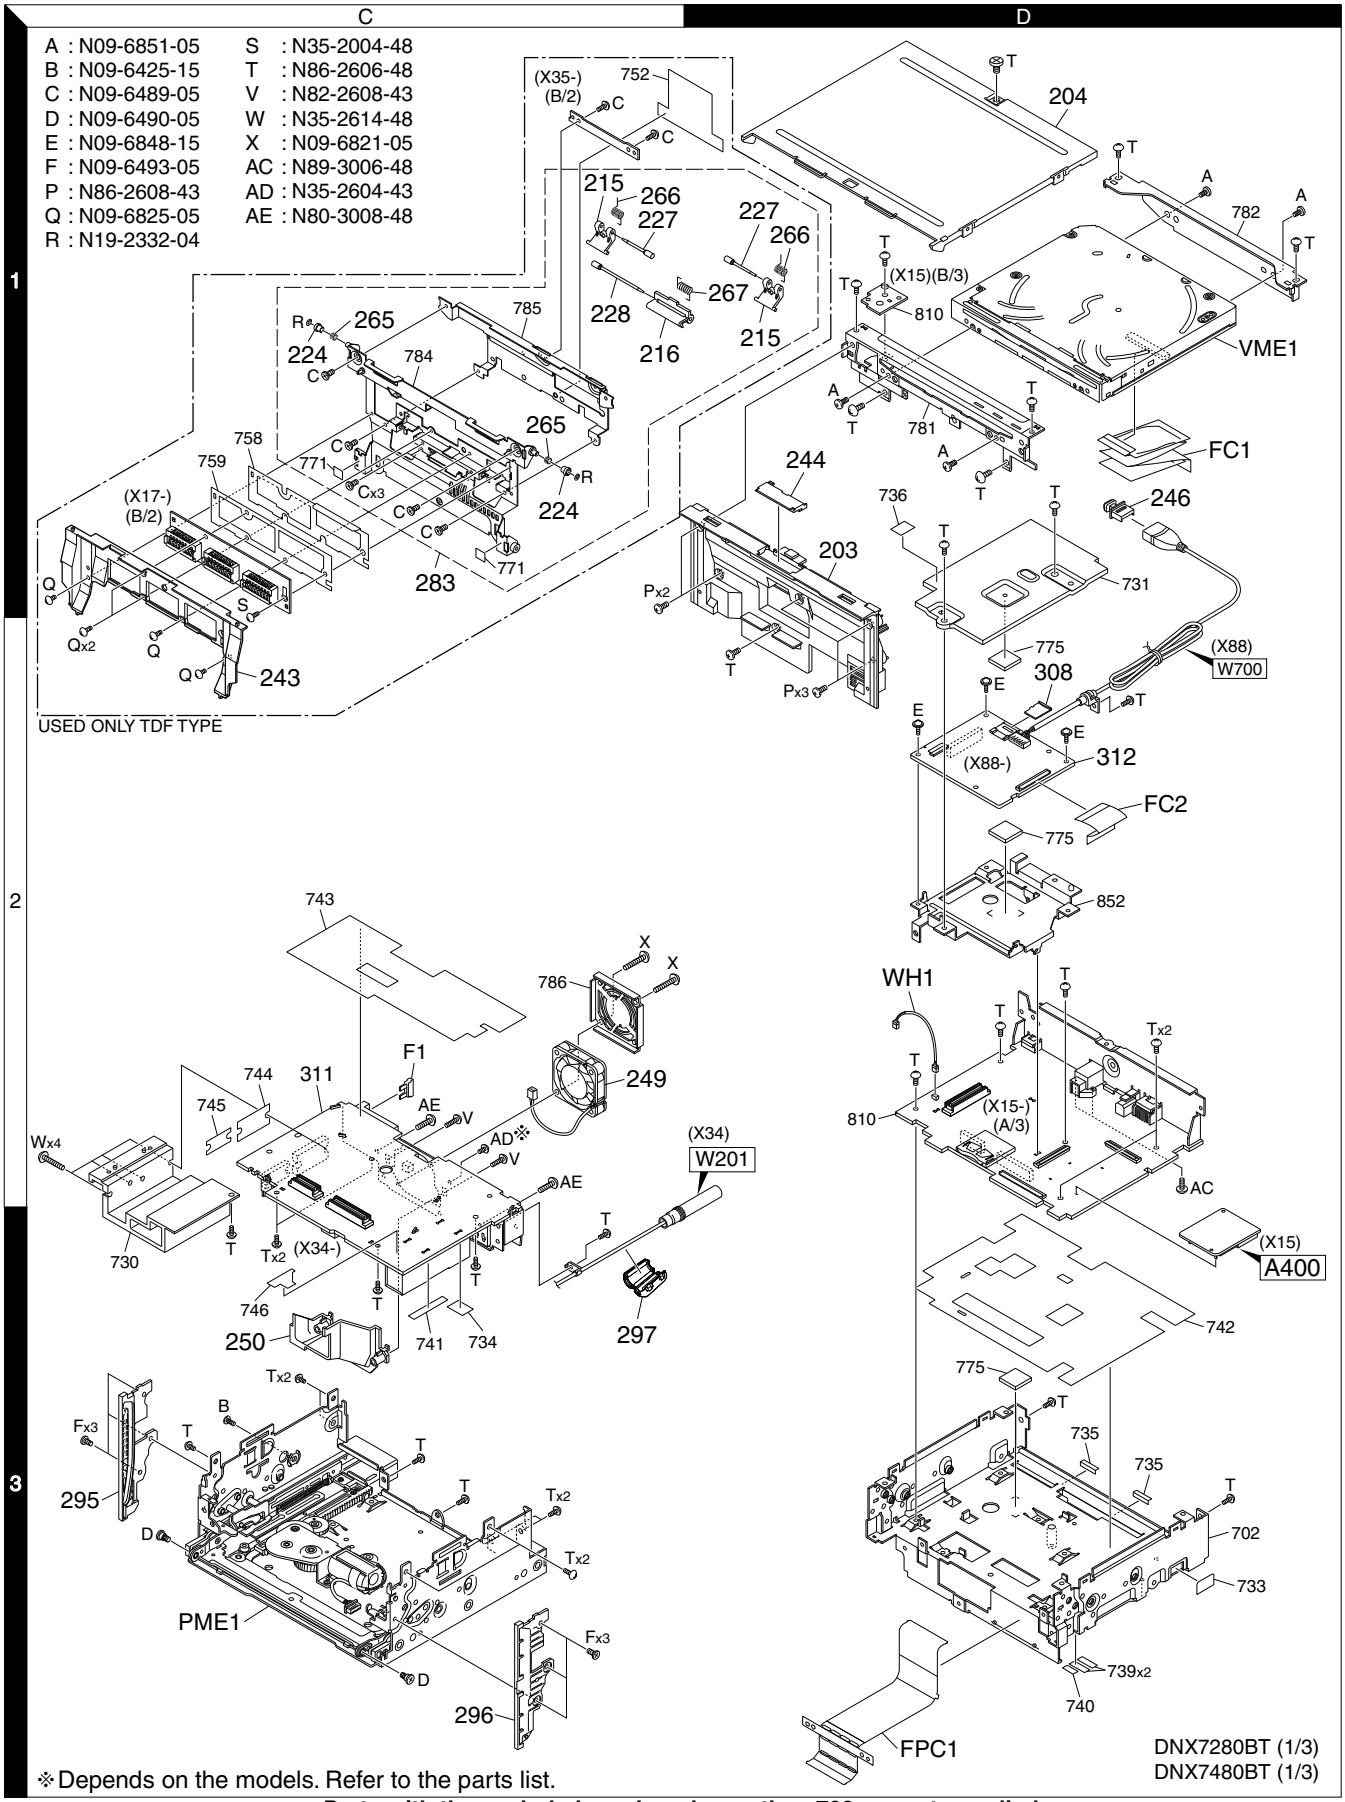

Parts with the exploded numbers larger than 700 are not supplied.

EXPLODED VIEW (DNX7280BT/7380BT/7380BTM)

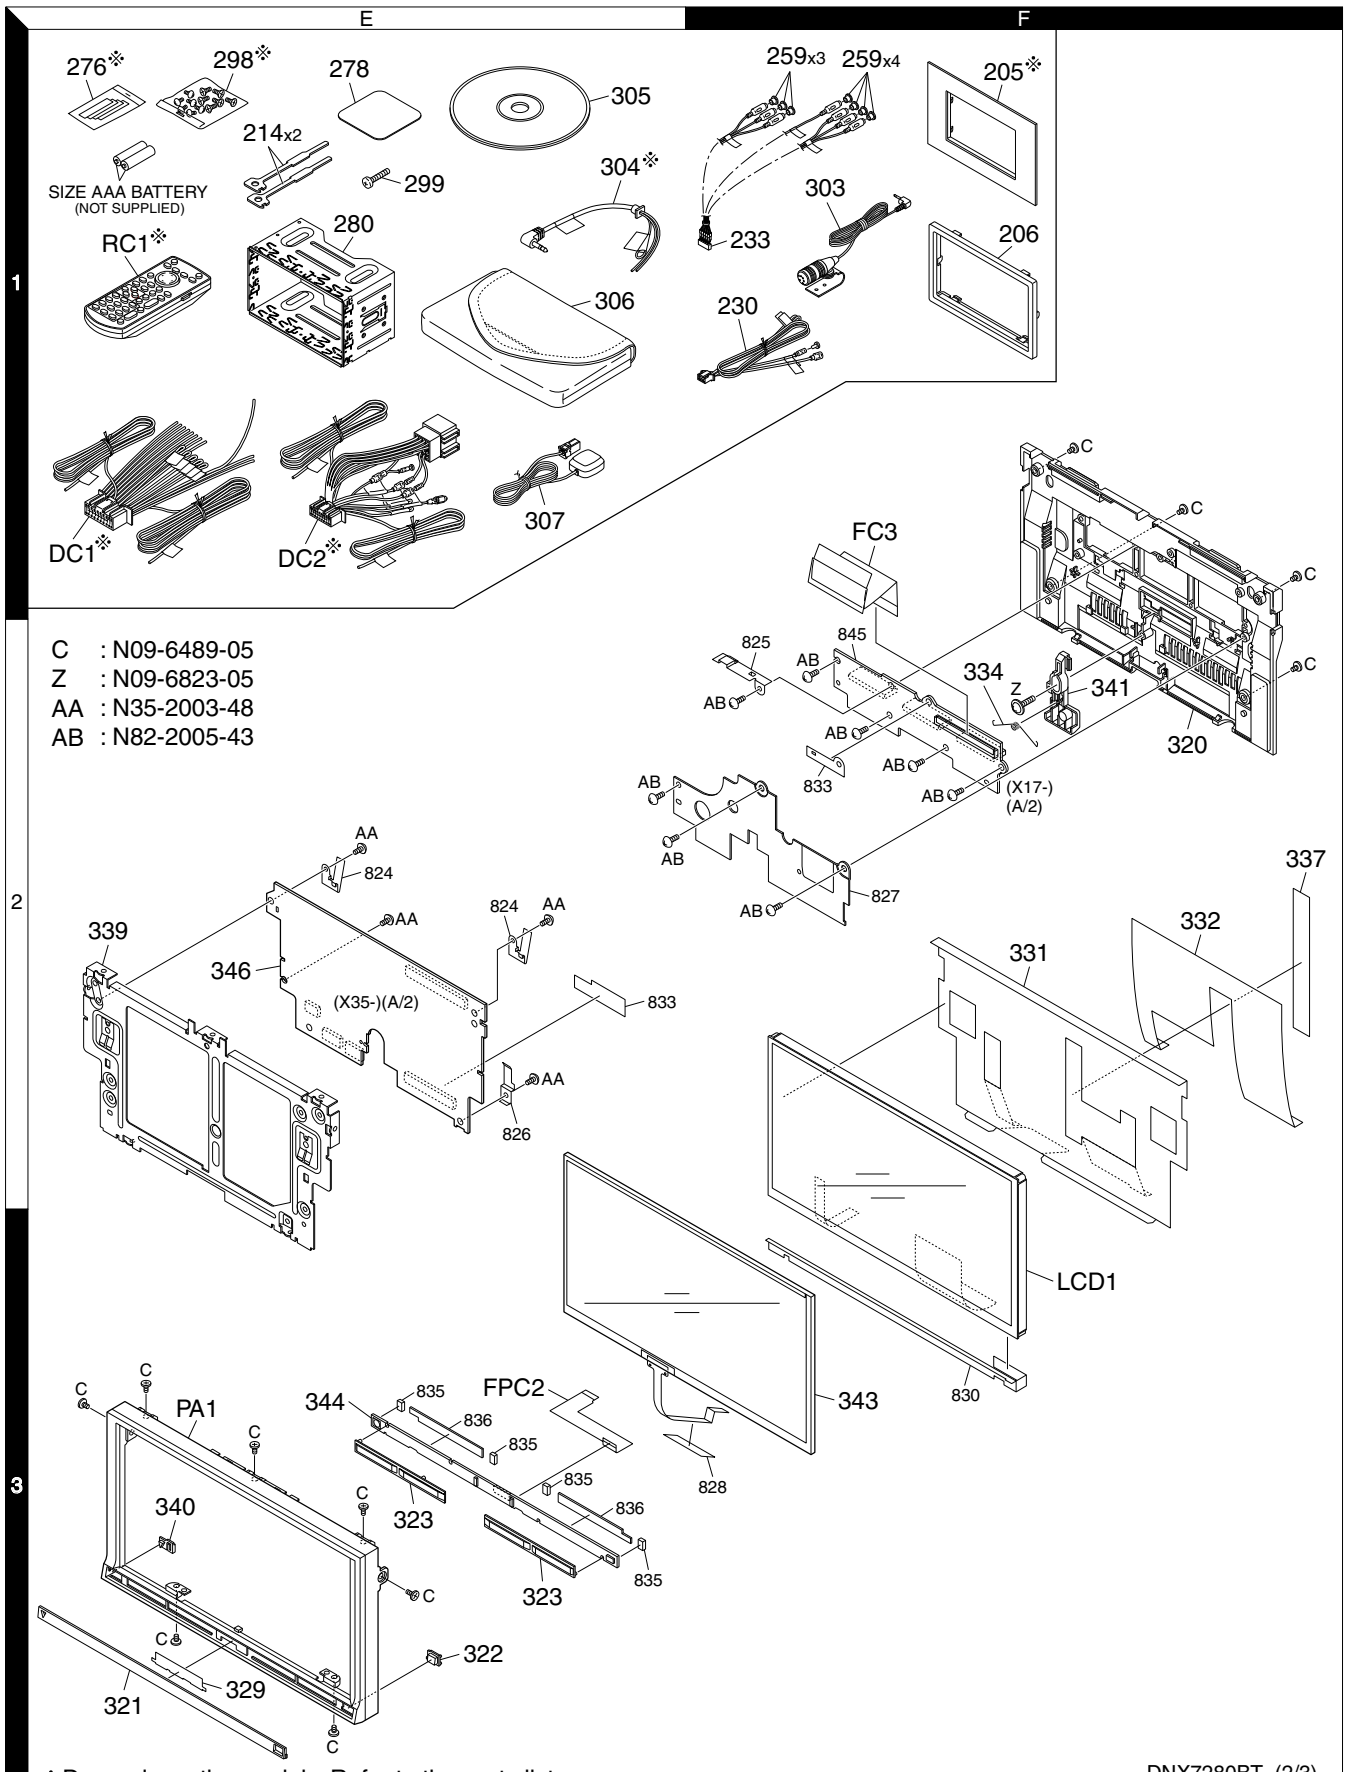

※Depends on the models. Refer to the parts list.

DNX7280BT (2/3)

Parts with the exploded numbers larger than 700 are not supplied.

EXPLODED VIEW (DNX7180/7480BT)

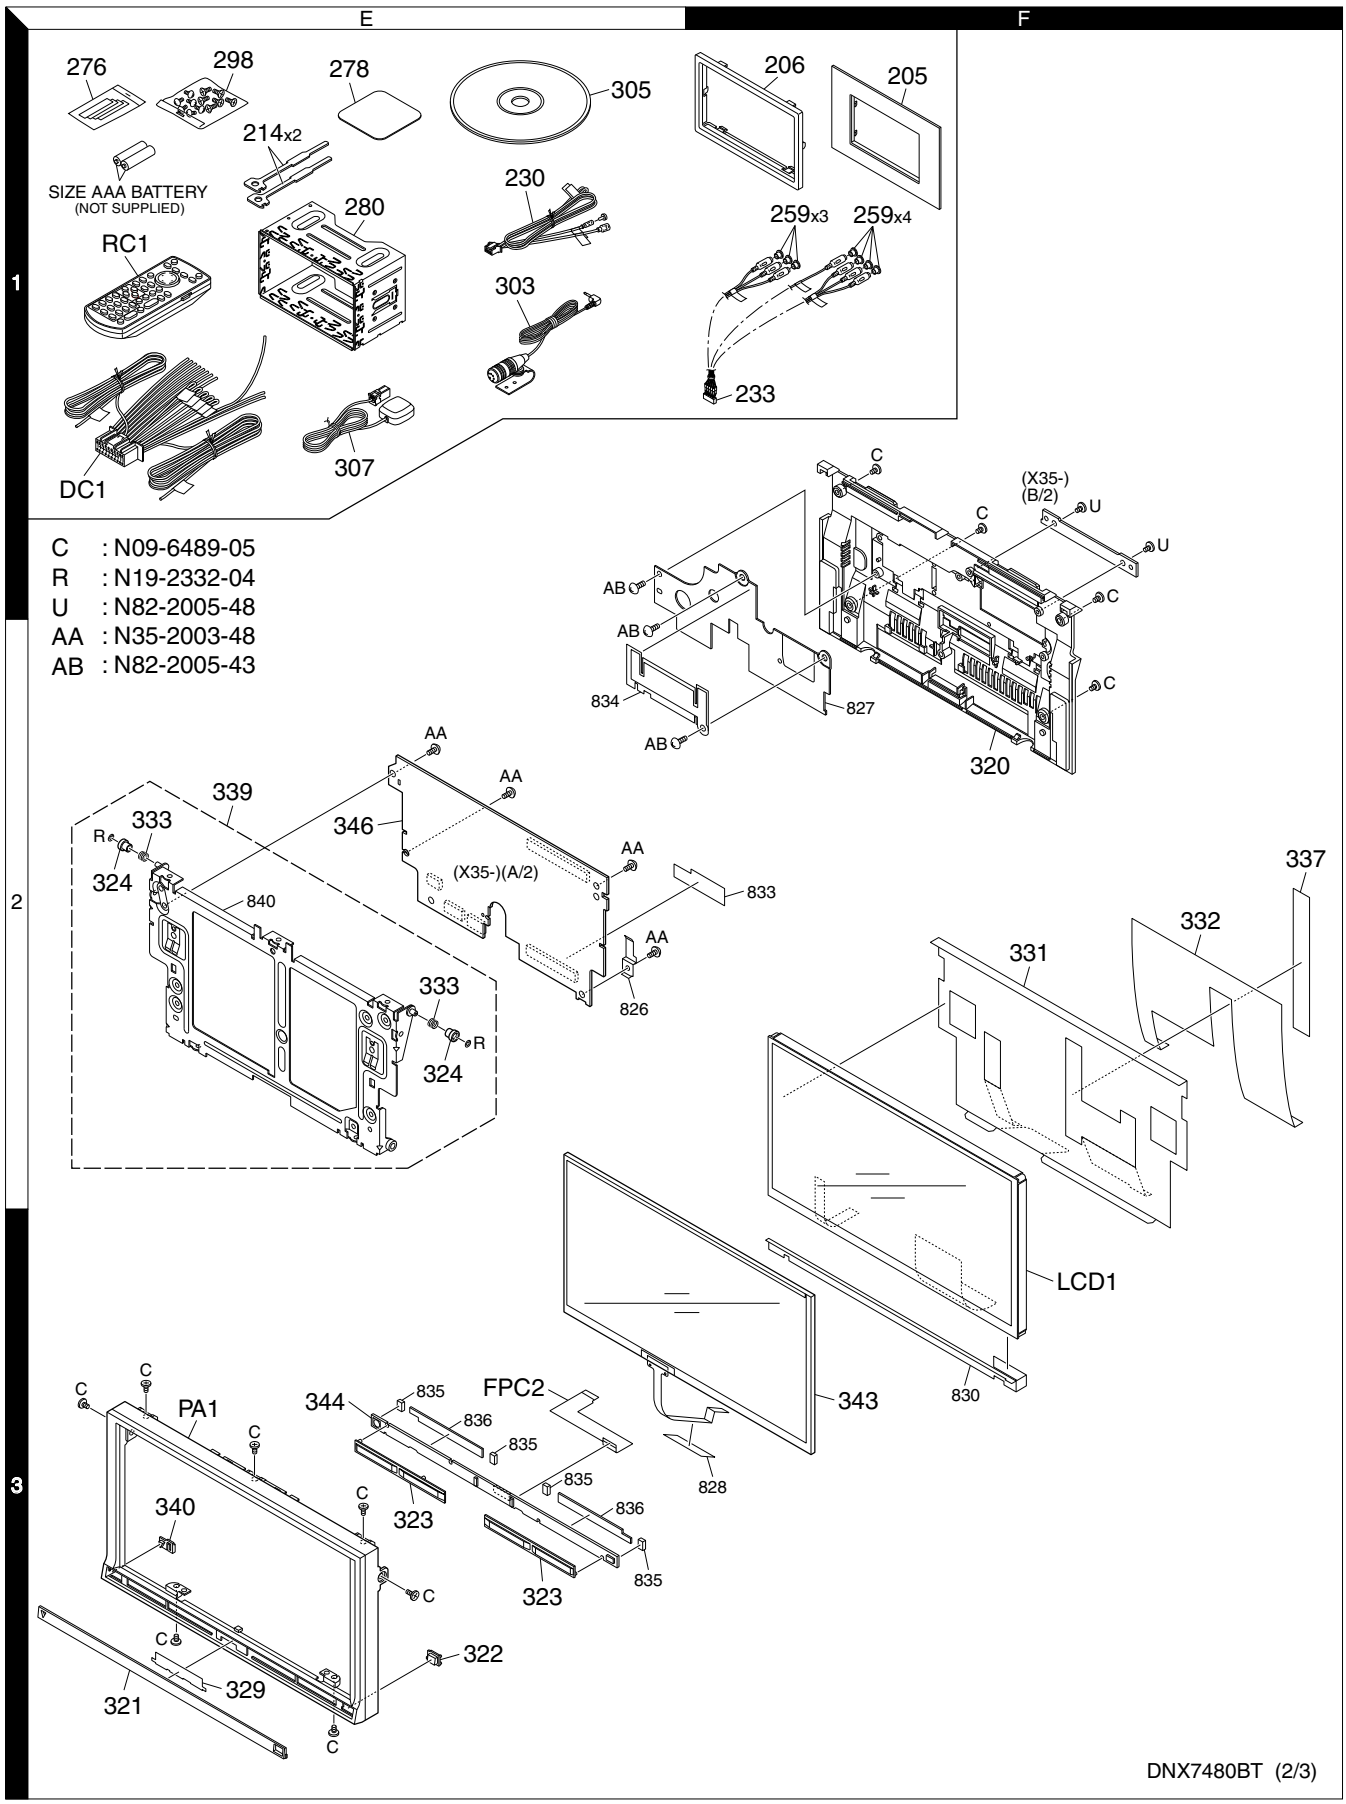

DNX7480BT (2/3)

Parts with the exploded numbers larger than 700 are not supplied.

EXPLODED VIEW (CHASSIS ASSY)

G H

1 2 3

G M2x2.5 : N09-6361-05
H M1.7x3.7 : N09-6363-05
J M2x2.5 : N09-6375-05
K M2x3.5 : N09-6376-05
L M2x2.5 : N09-6377-05
M ϕ2x2 : N09-6378-05
N M2.6x4 : N09-6379-05
Y WASHER : N19-2321-04

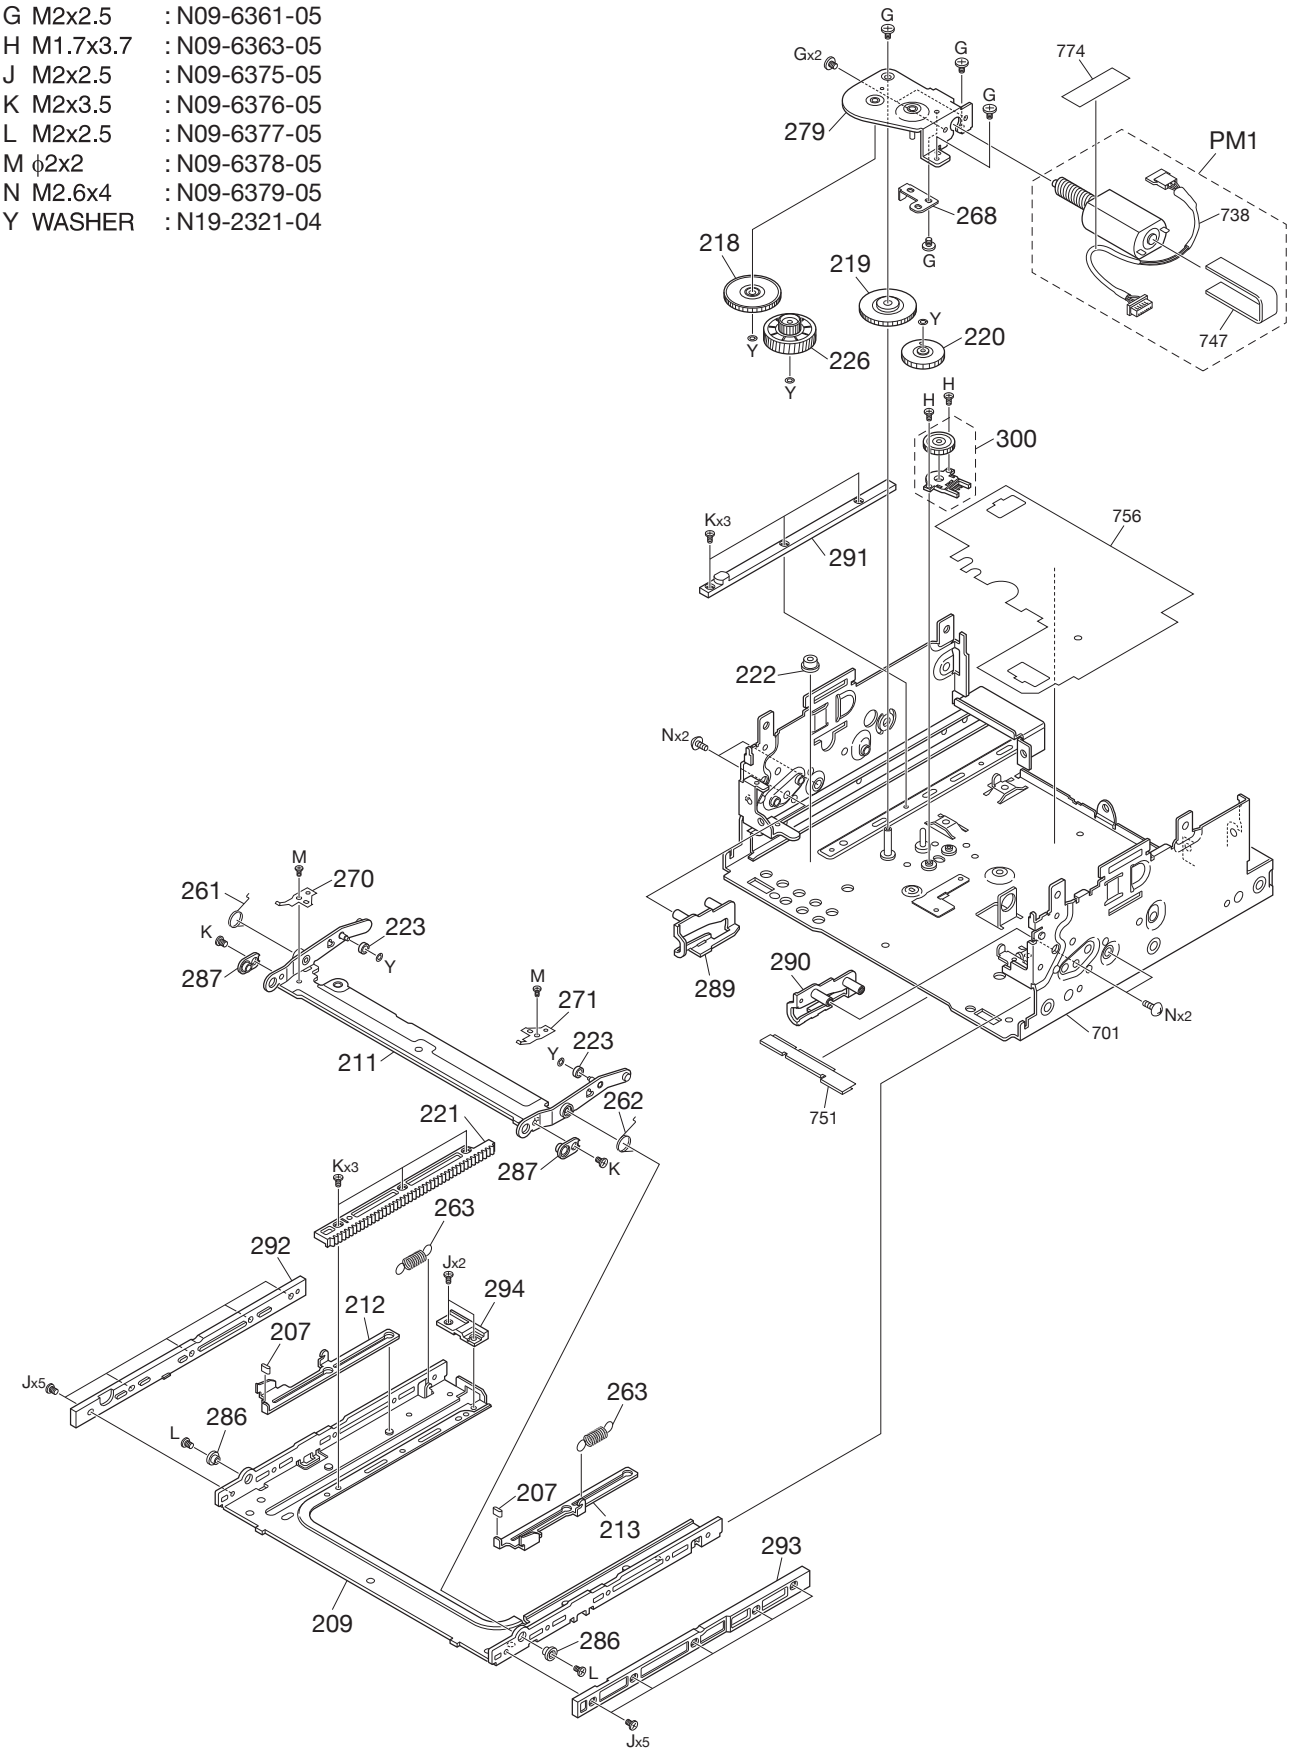

Parts with the exploded numbers larger than 700 are not supplied.

PARTS LIST

*New Parts
Parts without Parts No. are not supplied.
Les articles non mentionnes dans le Parts No. ne sont pas fournis.
Teile ohne Parts No. werden nicht geliefert.

Ref.No.	Add	New	Parts No.	Description	Destination
DNX7180/7280BT/7380BT/7380BTM/7480BT					
203	1D	*	A22-3303-01	SUB PANEL ASSY	K
203	1D	*	A22-3304-01	SUB PANEL ASSY	E1
203	1D	*	A22-3311-01	SUB PANEL ASSY	R1M1M2
203	1D	*	A22-3311-01	SUB PANEL ASSY	X1
204	1D	*	A52-1158-02	TOP PLATE	
PME1	3C	*	A10-5582-01	CHASSIS ASSY	
RC1	1E		A70-2107-05	REMOTE CONTROLLER AS(RC-DV33	KR1M1
RC1	1E		A70-2107-05	REMOTE CONTROLLER AS(RC-DV33	M2X1
-			B59-2045-00	SUB-INSTRUCTION MANUAL(ENG.SF	KR1
-			B59-2046-00	SUB-INSTRUCTION MANUAL(FRE)	K
-			B59-2047-00	SUB-INSTRUCTION MANUAL(POR)	R1
-			B59-2048-00	SUB-INSTRUCTION MANUAL(ENG)	E1
-			B59-2049-00	SUB-INSTRUCTION MA(FRE.GER.DU	E1
-			B59-2051-00	SUB-INSTRUCTION MANUAL(ENG)	M1M2X1
-			B59-2052-00	SUB-INSTRUCTION MANUAL(S-CHI)	M1
-			B59-2053-00	SUB-INSTRUCTION MANUAL(ARA)	M2
-			B59-2068-00	SUB-INSTRUCTION MA(ITA.SPA.POR	E1
-			B64-4795-00	INSTRUCTION MANUAL(ARA)	M2
-			B64-4857-00	INSTRUCTION MANUAL(ARA)	M2
205	1F		B07-3172-12	ESCUTCHEON	KR1M1
205	1F		B07-3172-12	ESCUTCHEON	M2X1
206	1F		B07-3224-31	ESCUTCHEON	
207	3G		B09-0541-04	CAP	
209	3G		D10-4895-22	SLIDER ASSY	
211	2G		D10-4897-13	ARM ASSY	
212	3G		D10-4899-03	LEVER	
213	3G		D10-4900-03	LEVER	
214	1E		D10-7012-04	LEVER	
215	1C		D10-7104-03	LEVER	E1M1M2
215	1C		D10-7104-03	LEVER	X1
216	1C	*	D10-7105-13	LEVER	E1M1M2
216	1C	*	D10-7105-13	LEVER	X1
218	1H		D13-2394-04	GEAR	
219	1H		D13-2395-04	GEAR	
220	1H		D13-2396-04	GEAR	
221	2G		D13-2397-03	RACK (GEAR)	
222	2H		D14-1010-04	ROLLER	
223	2G		D14-1011-14	ROLLER	
224	1C		D14-1024-04	ROLLER	E1M1M2
224	1C		D14-1024-04	ROLLER	X1
226	1H		D19-0653-23	CLUTCH ASSY	
227	1C		D21-2537-04	SHAFT	E1M1M2
227	1C		D21-2537-04	SHAFT	X1
228	1C		D21-2538-04	SHAFT	E1M1M2
228	1C		D21-2538-04	SHAFT	X1
230	1F		E30-6954-05	CORD WITH PLUG	
233	1F	*	E30-6985-05	CORD WITH PINPLUG	
DC1	1E		E30-6881-25	DC CORD	KR1M1
DC1	1E		E30-6881-25	DC CORD	M2X1
DC2	1E		E30-6796-15	DC CORD (ISO)	E1
FC1	1D		E39-1193-05	FLAT CABLE	
FC2	2D		E39-1194-05	FLAT CABLE	

Ref.No.	Add	New	Parts No.	Description	Destination
WH1	2D		E39-1127-05	WIRING HARNESS	
243	1C	*	F07-2234-01	COVER	E1M1M2
243	1C	*	F07-2234-01	COVER	X1
244	1D		F07-2224-03	COVER	
246	1D		F09-2929-04	CAP	
249	2C		F09-3070-05	FAN	
250	3C		F19-1839-03	COVER	
259	1F		F29-0626-04	INSULATING COVER	
⚠ F1	2C		F52-0024-05	FUSE(MINI BLADE TYPE) 15A	
261	2G		G01-3288-04	TORSION COIL SPRING	
262	2G		G01-3289-04	TORSION COIL SPRING	
263	3G		G01-3290-04	EXTENSION SPRING	
265	1C		G01-4659-04	COMPRESSION SPRING	E1M1M2
265	1C		G01-4659-04	COMPRESSION SPRING	X1
266	1C		G01-4754-04	TORSION COIL SPRING	E1M1M2
266	1C		G01-4754-04	TORSION COIL SPRING	X1
267	1C		G01-4755-04	TORSION COIL SPRING	E1M1M2
267	1C		G01-4755-04	TORSION COIL SPRING	X1
268	1H		G02-1539-04	FLAT SPRING	
270	2G		G02-1544-04	FLAT SPRING	
271	2G		G02-1545-04	FLAT SPRING	
-		*	H54-4971-03	ITEM CARTON CASE	K
-		*	H54-4972-03	ITEM CARTON CASE	R1
-		*	H54-4973-03	ITEM CARTON CASE	E1
-		*	H54-4974-03	ITEM CARTON CASE	M1X1
-		*	H54-4975-03	ITEM CARTON CASE	M2
276	1E		H30-0595-04	ADHESIVE DOUBLE-COATED TAPE	KR1M1
276	1E		H30-0595-04	ADHESIVE DOUBLE-COATED TAPE	M2X1
278	1E		J22-0964-04	MOUNTING HARDWARE	
279	1H		J22-0444-13	MOUNTING HARDWARE ASSY	
280	1E		J22-0657-03	MOUNTING HARDWARE ASSY	
283	1C		J22-0960-32	MOUNTING HARDWARE ASSY	E1M1M2
283	1C		J22-0960-32	MOUNTING HARDWARE ASSY	X1
286	3G		J31-1075-14	COLLAR (ARM COLLAR)	
287	2G		J31-1077-04	COLLAR (PANEL COLLAR)	
289	2H		J90-1124-13	GUIDE ASSY	
290	2H		J90-1126-13	GUIDE ASSY	
291	1H		J90-1128-03	RAIL	
292	3G		J90-1129-23	RAIL	
293	1H		J90-1130-23	RAIL	
294	3G		J90-1131-03	GUIDE	
295	3C		J90-1160-01	RAIL	
296	3C		J90-1161-01	RAIL	
FPC1	3D	*	J86-0087-05	FPC(LEAD FREE)	
297	3C		L92-0638-05	FERRITE CORE	
298	1E		N99-1779-15	SCREW SET	KR1M1
298	1E		N99-1779-15	SCREW SET	M2X1
299	1E		N35-2008-43	BINDING HEAD MACHINE SCREW	E1M1M2
299	1E		N35-2008-43	BINDING HEAD MACHINE SCREW	X1
A	1D		N09-6851-05	MACHINE SCREW	
B	3C		N09-6425-15	MACHINE SCREW (M3.0X5)	

K: DNX7180 (North America) **R1**: DNX7480BT (Latin America)
E1: DNX7280BT (Europe) **X1**: DNX7380BT (Australia)
M1: DNX7380BT **M2**: DNX7380BTM (Other Areas)

⚠ indicates safety critical components.

PARTS LIST

Ref.No.	Add	New	Parts No.	Description	Destination
C	1C		N09-6489-05	MACHINE SCREW (M2.0X3.0)	E1M1M2
C	1C		N09-6489-05	MACHINE SCREW (M2.0X3.0)	X1
D	3C		N09-6490-05	STEPPED SCREW (PANEL SCREW)	
E	2D		N09-6848-15	TAPTITE SCREW	
F	3C		N09-6493-05	MACHINE SCREW (M2.6X5)	
G	1H		N09-6361-05	MACHINE SCREW (M2X2.5)	
H	1H		N09-6363-05	MACHINE SCREW (M1.7X3.7)	
J	3G		N09-6375-05	MACHINE SCREW (M2X2.5)	
K	2G		N09-6376-05	MACHINE SCREW (M2X3.5)	
L	3G		N09-6377-05	MACHINE SCREW (M2X2.5)	
M	2G		N09-6378-05	TAPTITE SCREW (ST 2X2)	
N	2H		N09-6379-05	MACHINE SCREW (M2.6X4 BIND)	
P	2D		N86-2608-43	BINDING HEAD TAPTITE SCREW	
Q	1C		N09-6825-05	MACHINE SCREW (M2.0X0.4 P)	E1M1M2
Q	1C		N09-6825-05	MACHINE SCREW (M2.0X0.4 P)	X1
R	1C		N19-2332-04	FLAT WASHER	E1M1M2
R	1C		N19-2332-04	FLAT WASHER	X1
S	1C		N35-2004-48	BINDING HEAD MACHINE SCREW	E1M1M2
S	1C		N35-2004-48	BINDING HEAD MACHINE SCREW	X1
T	1D		N86-2606-48	BINDING HEAD TAPTITE SCREW	
U	1F		N82-2005-48	BINDING HEAD TAPTITE SCREW	KR1
V	2C		N82-2608-43	BINDING HEAD TAPTITE SCREW	
W	2C		N35-2614-48	BINDING HEAD MACHINE SCREW	
X	2C		N09-6821-05	MACHINE SCREW	
Y	1H		N19-2321-04	FLAT WASHER	
300	1H		R31-0248-05	VARIABLE RESISTOR	
PM1	1H	*	T42-1368-04	MOTOR ASSY	
303	1F		W01-1768-15	MICROPHONE	
304	1E		W01-2004-05	ACCESSORIES (REMOCON CABLE)	M1M2X1
305	1F		W01-2005-05	COMPACT DISC (MANUAL)	
306	1E	*	W01-2010-05	CARRYING CASE	E1M1M2
306	1E	*	W01-2010-05	CARRYING CASE	X1
307	1E		W02-5304-05	ANTENNA MODULE (GPS)	
308	2D	*	W02-5477-35	NAVIGATION MODULE	K
308	2D	*	W02-5478-35	NAVIGATION MODULE	E1
308	2D	*	W02-5479-35	NAVIGATION MODULE	R1M1M2
308	2D	*	W02-5479-35	NAVIGATION MODULE	X1
311	2C	*	X34-7020-10	ELECTRIC UNIT	K
311	2C	*	X34-7020-21	ELECTRIC UNIT	M1
311	2C	*	X34-7020-22	ELECTRIC UNIT	M2
311	2C	*	X34-7020-71	ELECTRIC UNIT	X1
311	2C	*	X34-7022-71	ELECTRIC UNIT	E1
311	2C	*	X34-7023-21	ELECTRIC UNIT	R1
312	2D	*	X88-2080-10	DIGITAL I/O UNIT	
VME1	1D		X92-6640-00	DVD MECHANISM ASSY(DVS-8710W)	

DISPLAY ASSY

320	2F		A46-1910-21	REAR COVER	KR1
320	2F		A46-1911-21	REAR COVER	E1M1M2
320	2F		A46-1911-21	REAR COVER	X1
PA1	3E	*	A64-5227-01	PANEL	K
PA1	3E	*	A64-5228-01	PANEL	R1
PA1	3E	*	A64-5229-01	PANEL	E1
PA1	3E	*	A64-5230-01	PANEL	M1M2X1

Ref.No.	Add	New	Parts No.	Description	Destination
321	3E	*	B10-5431-13	FRONT GLASS	
322	3E		B10-5379-04	FRONT GLASS	
323	3E		B11-2043-14	OPTICAL DIFFUSER	
LCD1	3F		B38-1222-05	LCD	
324	2E		D14-1024-04	ROLLER	KR1
FC3	1F	*	E39-1195-05	FLAT CABLE	E1M1M2
FC3	1F	*	E39-1195-05	FLAT CABLE	X1
329	3E		F09-3039-24	SHEET	
331	2F		F20-2532-03	INSULATING SHEET	
332	2F		F20-2537-04	INSULATING SHEET	
333	2E		G01-4659-04	COMPRESSION SPRING	KR1
334	2F		G01-4753-04	TORSION COIL SPRING	E1M1M2
334	2F		G01-4753-04	TORSION COIL SPRING	X1
337	2F		G16-1749-04	SHEET	
339	2E		J22-0922-12	MOUNTING HARDWARE ASSY	KR1
339	2E		J22-0968-02	MOUNTING HARDWARE ASSY	E1M1M2
339	2E		J22-0968-02	MOUNTING HARDWARE ASSY	X1
FPC2	3E		J86-0077-05	FPC(LEAD FREE)	
340	3E		K24-5070-14	PUSH KNOB (RESET)	
341	2F		K24-5071-03	PUSH KNOB (RELEASE)	E1M1M2
341	2F		K24-5071-03	PUSH KNOB	X1
AA	2E		N35-2003-48	BINDING HEAD MACHINE SCREW	
AB	2F		N82-2006-43	BINDING HEAD TAPTITE SCREW	
C	1F		N09-6489-05	MACHINE SCREW (M2.0X3.0)	
R	2E		N19-2332-04	FLAT WASHER	KR1
Z	2F		N09-6823-05	TAPTITE SCREW	E1M1M2
Z	2F		N09-6823-05	TAPTITE SCREW	X1
343	3F	*	S79-0880-05	SWITCH ASSY	
344	3E	*	W05-1653-00	SWITCH UNIT (X16-6870-10)	
346	2E	*	X35-5150-10	VIDEO UNIT	KR1
346	2E	*	X35-5152-71	VIDEO UNIT	E1M1M2
346	2E	*	X35-5152-71	VIDEO UNIT	X1

VIDEO CONTROL UNIT (X15-156x-xx)

D208			B30-3210-05	LED(1608 BLUE)	
C1			CK73GB1H104K	CHIP C 0.10UF K	
C2			C90-5670-05	ELECTRO 2200UF 16WV	
C3 ,4			CK73GB1H104K	CHIP C 0.10UF K	
C5			CE32BM1E101M	CHIP EL 100UF 25WV	
C6			CK73HB1E103K	CHIP C 0.010UF K	
C7 ,8			CK73GB1H104K	CHIP C 0.10UF K	
C9			CK73HB1E103K	CHIP C 0.010UF K	
C10 ,11			CK73EB1E106K	CHIP C 10UF K	
C12			CK73GB1H104K	CHIP C 0.10UF K	
C13			CK73HB1E103K	CHIP C 0.010UF K	
C14			CK73FB1E475K	CHIP C 4.7UF K	
C15			CK73GB1H104K	CHIP C 0.10UF K	
C16			CK73HB1E223K	CHIP C 0.022UF K	
C17			CK73HB1H221K	CHIP C 220PF K	
C18			CK73HB1H472K	CHIP C 4700PF K	
C19			CC73HCH1H151J	CHIP C 150PF J	

K: DNX7180 (North America) **R1**: DNX7480BT (Latin America)
E1: DNX7280BT (Europe) **X1**: DNX7380BT (Australia)
M1: DNX7380BT **M2**: DNX7380BTM (Other Areas)

⚠ indicates safety critical components.

PARTS LIST

VIDEO CONTROL UNIT (X15-156x-xx)

Ref.No.	Add	New	Parts No.	Description	Destination
C21			CK73EB1E106K	CHIP C 10UF K	
C22			CK73GB1H104K	CHIP C 0.10UF K	
C23			C92-2031-05	ELECTRO 220UF	
C24			CK73HB1A104K	CHIP C 0.10UF K	
C25			CK73HB1E103K	CHIP C 0.010UF K	
C26			CK73FB0J226M	CHIP C 22UF M	
C27			CK73GB1H104K	CHIP C 0.10UF K	
C28			CK73HB1E103K	CHIP C 0.010UF K	
C29 ,30			CK73EB1E106K	CHIP C 10UF K	
C31			CK73GB1H104K	CHIP C 0.10UF K	
C32			CK73HB1E103K	CHIP C 0.010UF K	
C33			CK73GB1H104K	CHIP C 0.10UF K	
C34			CK73GB1A105K	CHIP C 1.0UF K	
C35			CK73HB1H332K	CHIP C 3300PF K	
C36			CC73HCH1H181J	CHIP C 180PF J	
C37			CK73HB1H682K	CHIP C 6800PF K	
C38			CK73HB1C473K	CHIP C 0.047UF K	
C39 ,40			CK73HB1A104K	CHIP C 0.10UF K	
C41			CK73GB1A105K	CHIP C 1.0UF K	
C42			CK73GB1H104K	CHIP C 0.10UF K	
C43			CK73HB1E103K	CHIP C 0.010UF K	
C44			CK73HB1A104K	CHIP C 0.10UF K	
C45			CK73FB0J226M	CHIP C 22UF M	
C46			CE32AV0J221M	CHIP EL 220UF 6.3WV	
C47			CK73FB1E475K	CHIP C 4.7UF K	
C48 ,49			CK73GB1H104K	CHIP C 0.10UF K	
C50			CK73HB1E103K	CHIP C 0.010UF K	
C51 ,52			CK73EB1E106K	CHIP C 10UF K	
C53			CK73GB1H104K	CHIP C 0.10UF K	
C54			CK73HB1E103K	CHIP C 0.010UF K	
C55			CK73GB1H332K	CHIP C 3300PF K	
C56			C92-2031-05	ELECTRO 220UF	
C57			CK73HB1A104K	CHIP C 0.10UF K	
C58			CK73HB1E103K	CHIP C 0.010UF K	
C59			CK73FB0J226M	CHIP C 22UF M	
C60			CK73HB1C473K	CHIP C 0.047UF K	
C61			CK73HB1H332K	CHIP C 3300PF K	
C62			CC73HCH1H181J	CHIP C 180PF J	
C63			CK73HB1H682K	CHIP C 6800PF K	
C64			CK73HB1A104K	CHIP C 0.10UF K	
C65			CK73GB1H104K	CHIP C 0.10UF K	
C66			CK73HB1E103K	CHIP C 0.010UF K	
C67 ,68			CK73EB1E106K	CHIP C 10UF K	
C69			CK73GB1H104K	CHIP C 0.10UF K	
C70			CK73HB1E103K	CHIP C 0.010UF K	
C71			CK73GB1H332K	CHIP C 3300PF K	
C72			CE32AV1A271M	CHIP EL 270UF 10WV	
C73			CK73HB1A104K	CHIP C 0.10UF K	
C74			CK73HB1E103K	CHIP C 0.010UF K	
C75			CK73EB1A106K	CHIP C 10UF K	
C76			CC73HCH1H470J	CHIP C 47PF J	
C77			CK73HB1A104K	CHIP C 0.10UF K	
C78			CK73GB1A105K	CHIP C 1.0UF K	
C79			CK73HB1C473K	CHIP C 0.047UF K	
C80			CK73HB1H332K	CHIP C 3300PF K	
C81			CC73HCH1H181J	CHIP C 180PF J	
C82			CK73HB1H682K	CHIP C 6800PF K	
C83 -85			CK73HB1A104K	CHIP C 0.10UF K	
C86			CK73GB0J106M	CHIP C 10UF M	
C87			CK73EB1A106K	CHIP C 10UF K	
C88			CE32AV1A121M	CHIP EL 120UF 10WV	
C89			CK73GB0J106M	CHIP C 10UF M	
C90			CK73HB0J105K	CHIP C 1.0UF K	
C91			CK73GB1H222K	CHIP C 2200PF K	
C93 ,94			CK73HB0J105K	CHIP C 1.0UF K	
C95 ,96			CK73GB1H332K	CHIP C 3300PF K	
C97			CK73HB0J105K	CHIP C 1.0UF K	
C98			CK73FB0J226M	CHIP C 22UF M	
C99			CK73HB1A104K	CHIP C 0.10UF K	
C100			CK73HB1E103K	CHIP C 0.010UF K	
C101			CK73HB0J105K	CHIP C 1.0UF K	
C102			CE32BM1E470M	CHIP EL 47UF 25WV	
C103			CK73HB1E103K	CHIP C 0.010UF K	
C104			CK73GB1H104K	CHIP C 0.10UF K	
C111			CK73GB1A105K	CHIP C 1.0UF K	
C112			CK73FB0J226M	CHIP C 22UF M	
C113			CK73HB0J105K	CHIP C 1.0UF K	
C120			CK73FB0J226M	CHIP C 22UF M	
C121			CK73HB1A104K	CHIP C 0.10UF K	
C122			CK73GB1H104K	CHIP C 0.10UF K	
C124			CK73HB0J105K	CHIP C 1.0UF K	
C125			CK73HB1A104K	CHIP C 0.10UF K	
C127			CK73HB0J105K	CHIP C 1.0UF K	
C130			CK73HB0J105K	CHIP C 1.0UF K	
C200			CK73HB1E103K	CHIP C 0.010UF K	
C201			CK73EB1E106K	CHIP C 10UF K	
C202			CK73HB1H471K	CHIP C 470PF K	
C203			CK73HB0J105K	CHIP C 1.0UF K	
C204			CK73GB1H104K	CHIP C 0.10UF K	
C205			CK73HB1E103K	CHIP C 0.010UF K	
C206			CK73HB1H222K	CHIP C 2200PF K	
C207			CK73GB0J106M	CHIP C 10UF M	
C208			CK73HB1A104K	CHIP C 0.10UF K	
C209			CK73GB0J106M	CHIP C 10UF M	
C210			CK73HB0J105K	CHIP C 1.0UF K	
C211			CK73GB0J106M	CHIP C 10UF M	
C212			CK73HB1H222K	CHIP C 2200PF K	
C213-219			CK73HB1E103K	CHIP C 0.010UF K	R1
C213-220			CK73HB1E103K	CHIP C 0.010UF K	KE1M1
C213-220			CK73HB1E103K	CHIP C 0.010UF K	M2X1
C221			CK73HB0J105K	CHIP C 1.0UF K	
C222-225			CK73HB1A104K	CHIP C 0.10UF K	
C226,227			CK73HB1E103K	CHIP C 0.010UF K	
C228			CC73HCH1H120J	CHIP C 12PF J	
C229			CK73HB1E103K	CHIP C 0.010UF K	
C230			CK73HB1A104K	CHIP C 0.10UF K	
C231			CK73HB1H471K	CHIP C 470PF K	
C232			CK73EB1E106K	CHIP C 10UF K	
C233			CK73HB1E103K	CHIP C 0.010UF K	
C234			CC73HCH1H100D	CHIP C 10PF D	

K: DNX7180 (North America) **R1**: DNX7480BT (Latin America)
E1: DNX7280BT (Europe) **X1**: DNX7380BT (Australia)
M1: DNX7380BT **M2**: DNX7380BTM (Other Areas)

⚠ indicates safety critical components.

PARTS LIST

VIDEO CONTROL UNIT (X15-156x-xx)

Ref.No.	Add	New	Parts No.	Description	Destination
C235			CC73HCH1H060D	CHIP C 6.0PF D	
C236			CK73HB1E103K	CHIP C 0.010UF K	
C237			CC73HCH1H180J	CHIP C 18PF J	
C238,239			CK73HB1E103K	CHIP C 0.010UF K	E1M1M2
C238,239			CK73HB1E103K	CHIP C 0.010UF K	X1
C240			CK73HB1A104K	CHIP C 0.10UF K	R1E1M1
C240			CK73HB1A104K	CHIP C 0.10UF K	M2X1
C240,241			CK73HB1A104K	CHIP C 0.10UF K	K
C242			CE32BQ0J221M	CHIP EL 220UF 6.3WV	
C243			CK73HB0J105K	CHIP C 1.0UF K	
C244			CK73GB1A105K	CHIP C 1.0UF K	
C245			CK73HB1A104K	CHIP C 0.10UF K	
C246			CC73HCH1H470J	CHIP C 47PF J	KE1
C247-249			CK73HB1A104K	CHIP C 0.10UF K	
C250,251			CK73HB0J105K	CHIP C 1.0UF K	
C400			CK73EB1A106K	CHIP C 10UF K	
C401			CK73GB0J106M	CHIP C 10UF M	
C402,403			CC73HCH1H220J	CHIP C 22PF J	
C404			CK73HB1A104K	CHIP C 0.10UF K	
C405			CK73GB1A105K	CHIP C 1.0UF K	
C407			CK73GB1A105K	CHIP C 1.0UF K	
C409,410			CK73GB1A105K	CHIP C 1.0UF K	
C411,412			CC73HCH1H220J	CHIP C 22PF J	
C413			CK73GB0J106M	CHIP C 10UF M	
C414			CC73HCH1H221J	CHIP C 220PF J	
C415			CK73GB0J106M	CHIP C 10UF M	
C417			CK73GB1A105K	CHIP C 1.0UF K	
C418,419			CK73HB1A104K	CHIP C 0.10UF K	
C420			CK73GB0J475K	CHIP C 4.7UF K	
C421			CE32CL1C470M	CHIP EL 47UF 16WV	
C422,423			CK73HB1H102K	CHIP C 1000PF K	
C424			CK73HB1A104K	CHIP C 0.10UF K	
C425			CK73GB0J106M	CHIP C 10UF M	
C426			CK73EB1A106K	CHIP C 10UF K	
C427			CK73GB0J106M	CHIP C 10UF M	
C428			CK73HB1A104K	CHIP C 0.10UF K	
C429			CK73HB1H222K	CHIP C 2200PF K	
C430,431			CK73HB1A104K	CHIP C 0.10UF K	
C432			CK73GB0J106M	CHIP C 10UF M	
C433			CK73HB1E103K	CHIP C 0.010UF K	
C434			CE32AV0J221M	CHIP EL 220UF 6.3WV	
C435			CC73HCH1H040C	CHIP C 4.0PF C	
C436			CE32BJ1C101M	CHIP EL 100UF 16WV	
C437,438			CE32BJ1C100M	CHIP EL 10UF 16WV	
C441			CK73FB0J226M	CHIP C 22UF M	
C442			CK73HB1A104K	CHIP C 0.10UF K	
C443-445			CK73HB0J105K	CHIP C 1.0UF K	
C446,447			CK73FB0J226M	CHIP C 22UF M	
C448-450			CK73HB0J105K	CHIP C 1.0UF K	
C451,452			CK73GB0J106M	CHIP C 10UF M	
C453,454			CK73HB1A104K	CHIP C 0.10UF K	
C455,456			CK73GB0J106M	CHIP C 10UF M	
C457			CK73HB1A104K	CHIP C 0.10UF K	
C458,459			CK73HB1H332K	CHIP C 3300PF K	
C460,461			CK73GB1H332K	CHIP C 3300PF K	
C462			CK73FB0J226M	CHIP C 22UF M	
C463			CK73EB0J476M	CHIP C 47UF M	
C464			CK73HB1H332K	CHIP C 3300PF K	
C465			CK73GB1H332K	CHIP C 3300PF K	
C466			CK73HB1H332K	CHIP C 3300PF K	
C467			CK73GB1H332K	CHIP C 3300PF K	
C468			CK73HB1A104K	CHIP C 0.10UF K	
C473			CK73HB1A104K	CHIP C 0.10UF K	
C474			CK73FB0J226M	CHIP C 22UF M	
C475			CK73HB1A104K	CHIP C 0.10UF K	
C476,477			CK73HB1H222K	CHIP C 2200PF K	
C478			CK73GB1H104K	CHIP C 0.10UF K	K
C478-480			CK73GB1H104K	CHIP C 0.10UF K	E1M1M2
C478-480			CK73GB1H104K	CHIP C 0.10UF K	X1
C480			CK73GB1H104K	CHIP C 0.10UF K	K
C481			CK73EB0J476M	CHIP C 47UF M	
C482,483			CK73GB1A105K	CHIP C 1.0UF K	KE1M1
C482,483			CK73GB1A105K	CHIP C 1.0UF K	M2X1
C484			CK73FB0J226M	CHIP C 22UF M	
C485			CK73GB1A105K	CHIP C 1.0UF K	KE1M1
C485			CK73GB1A105K	CHIP C 1.0UF K	M2X1
C486-488			CK73HB1A104K	CHIP C 0.10UF K	
C489			CK73GB0J475K	CHIP C 4.7UF K	
C490			CK73HB1E103K	CHIP C 0.010UF K	
C491			CK73EB1A106K	CHIP C 10UF K	
C493			CK73HB1E103K	CHIP C 0.010UF K	K
C494			CK73HB0J105K	CHIP C 1.0UF K	
C495			CK73GB0J106M	CHIP C 10UF M	
C496,497			CK73HB1E103K	CHIP C 0.010UF K	KE1M1
C496,497			CK73HB1E103K	CHIP C 0.010UF K	M2X1
C498			CK73HB1H102K	CHIP C 1000PF K	KE1M1
C498			CK73HB1H102K	CHIP C 1000PF K	M2X1
C500			CK73HB1C473K	CHIP C 0.047UF K	
C501			CK73GB1H104K	CHIP C 0.10UF K	
C503			CK73GB1H104K	CHIP C 0.10UF K	
C504			CK73HB1E103K	CHIP C 0.010UF K	
C505			CK73GB1H104K	CHIP C 0.10UF K	
C506			CK73EB1E105K	CHIP C 1.0UF K	
C507			CC73GCH1H101J	CHIP C 100PF J	
C508			CK73GB0J106M	CHIP C 10UF M	
C509			CK73HB1A104K	CHIP C 0.10UF K	
C510			CK73HB1E103K	CHIP C 0.010UF K	
C511			CK73HB1C473K	CHIP C 0.047UF K	
C512			CE32BJ1C100M	CHIP EL 10UF 16WV	
C513,514			CK73HB1H102K	CHIP C 1000PF K	
C515			CK73EB1E105K	CHIP C 1.0UF K	
C516			CE32BJ1C100M	CHIP EL 10UF 16WV	
C517			CK73GB1C224K	CHIP C 0.22UF K	
C519			CE32BQ0J331M	CHIP EL 330UF 6.3WV	
C520,521			CK73HB0J105K	CHIP C 1.0UF K	
C522			CK73HB1A104K	CHIP C 0.10UF K	
C524			CK73GB0J106M	CHIP C 10UF M	
C525			CK73HB1A104K	CHIP C 0.10UF K	
C526			CK73HB1E103K	CHIP C 0.010UF K	
C528			CK73GB0J106M	CHIP C 10UF M	

K: DNX7180 (North America) **R1**: DNX7480BT (Latin America)
E1: DNX7280BT (Europe) **X1**: DNX7380BT (Australia)
M1: DNX7380BT **M2**: DNX7380BTM (Other Areas)

⚠ indicates safety critical components.

PARTS LIST

VIDEO CONTROL UNIT (X15-156x-xx)

Ref.No.	Add	New	Parts No.	Description	Destination
C529			CK73HB1A104K	CHIP C 0.10UF K	
C530,531			CK73HB1E103K	CHIP C 0.010UF K	
C532			CK73HB1A104K	CHIP C 0.10UF K	
C533			CK73GB0J106M	CHIP C 10UF M	
C536			CK73GB1A105K	CHIP C 1.0UF K	
C537			CK73HB1H222K	CHIP C 2200PF K	
C538			CK73HB1A104K	CHIP C 0.10UF K	
C541			CK73HB1H102K	CHIP C 1000PF K	
CN200			E41-3251-05	PIN ASSY	
CN201			E41-3252-05	PIN ASSY	
CN202			E41-2985-05	FLAT CABLE CONNECTOR	
CN203,204			E41-1476-05	PIN ASSY	
CN205			E41-2248-05	PIN ASSY	
CN207			E41-2359-05	PIN ASSY	
CN401			E41-3140-05	PIN ASSY	
CN402			E41-2979-05	FLAT CABLE CONNECTOR	
CN403			E41-3254-05	SOCKET FOR PIN ASSY	
CN404			E41-2979-05	FLAT CABLE CONNECTOR	
CN407			E41-2964-05	PIN ASSY	
CN409			E41-2207-05	PIN ASSY	
J400			E11-0625-05	PHONE JACK (LGY6502-0900)	KR1E1
J400,401			E11-0625-05	PHONE JACK (LGY6502-0900)	M1M2X1
J402			E58-1034-05	RECTANGULAR RECEPTACLE	KE1M1
J402			E58-1034-05	RECTANGULAR RECEPTACLE	M2X1
J403			E58-1145-05	RECTANGULAR RECEPTACLE	
J404			E58-1067-05	RECTANGULAR RECEPTACLE	
J407			E68-0826-05	JACK(SD CARD SLOTS)	
F1 ,2			F53-0369-05	FUSE 1.6A	
F200			F53-0369-05	FUSE 1.6A	
L1			L92-0374-05	CHIP FERRITE	
L3			L33-2600-05	CHOKE COIL	
L5			L33-2600-05	CHOKE COIL	
L7			L33-2600-05	CHOKE COIL	
L9			L33-2600-05	CHOKE COIL	
L10 ,11			L92-0373-05	CHIP FERRITE	
L12			L33-2603-05	CHOKE COIL	
L13			L33-2440-05	SMALL FIXED INDUCTOR	
L200			L92-0332-05	CHIP FERRITE	
L201			L41-4792-62	SMALL FIXED INDUCTOR(4.7U)	
L202			L92-0332-05	CHIP FERRITE	
L203			L33-2457-05	SMALL FIXED INDUCTOR	
L400			L92-0373-05	CHIP FERRITE	
L401			L33-2603-05	CHOKE COIL	
L402			L33-2457-05	SMALL FIXED INDUCTOR	
L404			L41-1001-62	SMALL FIXED INDUCTOR(10U)	
L405,406			L92-0373-05	CHIP FERRITE	
X200			L77-2921-15	CRYSTAL RESONATOR(32.768KHZ, 1	
X201			L77-3846-05	CRYSTAL RESONATOR(12MHZ)	
AC	2D		N89-3006-48	BINDING HEAD TAPTITE SCREW	
R1			RK73HB1J823J	CHIP R 82K J 1/16W	
R2			RK73HB1J103J	CHIP R 10K J 1/16W	
R3			RK73HB1J224J	CHIP R 220K J 1/16W	
R4			RK73HB1J333J	CHIP R 33K J 1/16W	
R5			RK73HB1J274J	CHIP R 270K J 1/16W	
R6			RK73HH1J104D	CHIP R 100K D 1/16W	
R7			RK73HH1J513D	CHIP R 51K D 1/16W	
R8			RK73HH1J333D	CHIP R 33K D 1/16W	
R9 ,10			RK73HB1J224J	CHIP R 220K J 1/16W	
R11			RK73HH1J113D	CHIP R 11K D 1/16W	
R12			RK73HH1J104D	CHIP R 100K D 1/16W	
R13			RK73HH1J683D	CHIP R 68K D 1/16W	
R14 ,15			RK73HB1J224J	CHIP R 220K J 1/16W	
R16 ,17			RK73HH1J334D	CHIP R 330K D 1/16W	
R18			RK73HB1J224J	CHIP R 220K J 1/16W	
R19			RK73HB1J473J	CHIP R 47K J 1/16W	
R20			RK73HB1J2R2J	CHIP R 2.2 J 1/16W	
R21			RK73HB1J123J	CHIP R 12K J 1/16W	
R22			RK73HH1J563D	CHIP R 56K D 1/16W	
R23			RK73HH1J753D	CHIP R 75K D 1/16W	
R24 -26			RK73HB1J104J	CHIP R 100K J 1/16W	
R27			RK73HB1J473J	CHIP R 47K J 1/16W	
R28 -30			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R31 ,32			R92-5244-05	CHIP R 0.039	
R33			RK73HB1J220J	CHIP R 22 J 1/16W	
R34			RK73HH1J303D	CHIP R 30K D 1/16W	
R35			RK73HH1J682D	CHIP R 6.8K D 1/16W	
R36			RK73HB1J122J	CHIP R 1.2K J 1/16W	
R37			RK73HH1J241D	CHIP R 240 D 1/16W	
R38			RK73HB1J332J	CHIP R 3.3K J 1/16W	
R39			RK73HH1J204D	CHIP R 200K D 1/16W	
R40 -42			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R43			RK73HB1J2R2J	CHIP R 2.2 J 1/16W	
R44 ,45			R92-5276-05	METAL GR 0.033 J 1/3W	
R46			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R47 ,48			RK73HH1J303D	CHIP R 30K D 1/16W	
R49			RK73HB1J122J	CHIP R 1.2K J 1/16W	
R50			RK73HH1J243D	CHIP R 24K D 1/16W	
R51			RK73HB1J332J	CHIP R 3.3K J 1/16W	
R52			RK73PB2H160J	CHIP R 16 J 1/2W	
R53 ,54			R92-5276-05	METAL GR 0.033 J 1/3W	
R55			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R56			RK73HH1J303D	CHIP R 30K D 1/16W	
R57			RK73HH1J512D	CHIP R 5.1K D 1/16W	
R58			RK73HB1J122J	CHIP R 1.2K J 1/16W	
R59			RK73HH1J331D	CHIP R 330 D 1/16W	
R60			RK73HB1J332J	CHIP R 3.3K J 1/16W	
R61			RK73HH1J204D	CHIP R 200K D 1/16W	
R62			RK73PB2H160J	CHIP R 16 J 1/2W	
R64			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R65 ,66			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R67			RK73HB1J224J	CHIP R 220K J 1/16W	
R68			RK73HB1J333J	CHIP R 33K J 1/16W	
R71 ,72			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R73 ,74			RK73GB2A123J	CHIP R 12K J 1/10W	
R75			RK73HB1J223J	CHIP R 22K J 1/16W	
R76			RK73GB2A271J	CHIP R 270 J 1/10W	
R77			R92-5276-05	METAL GR 0.033 J 1/3W	
R78			RK73HB1J223J	CHIP R 22K J 1/16W	

K: DNX7180 (North America) **R1**: DNX7480BT (Latin America)
E1: DNX7280BT (Europe) **X1**: DNX7380BT (Australia)
M1: DNX7380BT **M2**: DNX7380BTM (Other Areas)

⚠ indicates safety critical components.

PARTS LIST

VIDEO CONTROL UNIT (X15-156x-xx)

Ref.No.	Add	New	Parts No.	Description	Destination
R79			RK73GB2A151J	CHIP R 150 J 1/10W	
R80			RK73HB1J104J	CHIP R 100K J 1/16W	
R81			RK73HB1J223J	CHIP R 22K J 1/16W	
R82 ,83			RK73GB2A151J	CHIP R 150 J 1/10W	
R84			RK73HB1J274J	CHIP R 270K J 1/16W	
R85			RK73HB1J333J	CHIP R 33K J 1/16W	
R86			RK73HB1J224J	CHIP R 220K J 1/16W	
R87			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R88			RK73HB1J103J	CHIP R 10K J 1/16W	
R89			RK73HB1J153J	CHIP R 15K J 1/16W	
R90			RK73HB1J103J	CHIP R 10K J 1/16W	
R91			RK73HB1J153J	CHIP R 15K J 1/16W	
R92			RK73PB2H160J	CHIP R 16 J 1/2W	
R93			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R96			RK73HB1J103J	CHIP R 10K J 1/16W	
R97			RK73HB1J153J	CHIP R 15K J 1/16W	
R98			RK73HH1J223D	CHIP R 22K D 1/16W	
R99			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R100			RK73PB2H160J	CHIP R 16 J 1/2W	
R101			RK73HH1J682D	CHIP R 6.8K D 1/16W	
R102,103			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R104			RK73HB1J473J	CHIP R 47K J 1/16W	
R105			RK73HB1J152J	CHIP R 1.5K J 1/16W	
R106			RK73HB1J823J	CHIP R 82K J 1/16W	
R107			RK73HB1J103J	CHIP R 10K J 1/16W	
R120,121			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R122			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R124,125			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R127			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R129,130			RK73HH1J303D	CHIP R 30K D 1/16W	
R131			RK73GB2A151J	CHIP R 150 J 1/10W	
R132			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R133			RK73GB2A2R2J	CHIP R 2.2 J 1/10W	
R134			RK73HH1J563D	CHIP R 56K D 1/16W	
R135			RK73HB1J911J	CHIP R 910 J 1/16W	
R136			RK73HB1J473J	CHIP R 47K J 1/16W	
R137			RK73HB1J272J	CHIP R 2.7K J 1/16W	
R138			RK73HB1J223J	CHIP R 22K J 1/16W	
R140			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R141			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R143,144			RK73HB1J223J	CHIP R 22K J 1/16W	
R145,146			RK73HB1J101J	CHIP R 100 J 1/16W	M1M2X1
R200			RK73HB1J103J	CHIP R 10K J 1/16W	K
R200			RK73HB1J202J	CHIP R 2.0K J 1/16W	E1
R200			RK73HB1J513J	CHIP R 51K J 1/16W	X1
R200,201			RK73HB1J103J	CHIP R 10K J 1/16W	M1M2
R201			RK73HB1J103J	CHIP R 10K J 1/16W	R1E1X1
R202			RK73HB1J223J	CHIP R 22K J 1/16W	KR1E1
R202			RK73HB1J223J	CHIP R 22K J 1/16W	M1X1
R203			RK73HB1J473J	CHIP R 47K J 1/16W	M2
R204			RK73HB1J101J	CHIP R 100 J 1/16W	
R206,207			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R209			RK73HB1J223J	CHIP R 22K J 1/16W	
R210			RK73HB1J103J	CHIP R 10K J 1/16W	
R211,212			RK73HB1J104J	CHIP R 100K J 1/16W	
R213			RK73HB1J101J	CHIP R 100 J 1/16W	
R214,215			RK73HB1J473J	CHIP R 47K J 1/16W	
R216			RK73HB1J223J	CHIP R 22K J 1/16W	KE1M1
R216			RK73HB1J223J	CHIP R 22K J 1/16W	M2X1
R217,218			RK73HB1J100J	CHIP R 10 J 1/16W	
R219			RK73HB1J101J	CHIP R 100 J 1/16W	
R220,221			RK73HB1J222J	CHIP R 2.2K J 1/16W	
R222,223			RK73HB1J101J	CHIP R 100 J 1/16W	
R224			RK73HB1J000J	CHIP R 0.0 J 1/16W	KR1
R225			RK73HB1J101J	CHIP R 100 J 1/16W	
R226			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R227			RK73HB1J473J	CHIP R 47K J 1/16W	E1M1M2
R227			RK73HB1J473J	CHIP R 47K J 1/16W	X1
R228			RK73HB1J223J	CHIP R 22K J 1/16W	
R229			RK73HB1J103J	CHIP R 10K J 1/16W	
R230			RK73HB1J223J	CHIP R 22K J 1/16W	
R231			RK73HB1J103J	CHIP R 10K J 1/16W	
R232,233			RK73HB1J101J	CHIP R 100 J 1/16W	
R234			RK73HB1J104J	CHIP R 100K J 1/16W	
R235			RK73HB1J101J	CHIP R 100 J 1/16W	
R237			RK73HB1J223J	CHIP R 22K J 1/16W	
R239			RK73HB1J223J	CHIP R 22K J 1/16W	
R240,241			RK73HB1J101J	CHIP R 100 J 1/16W	
R242			RK73HB1J473J	CHIP R 47K J 1/16W	
R243,244			RK73HB1J103J	CHIP R 10K J 1/16W	
R245			RK73HB1J104J	CHIP R 100K J 1/16W	
R246			RK73HB1J473J	CHIP R 47K J 1/16W	
R247			RK73HB1J101J	CHIP R 100 J 1/16W	K
R248			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R249			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R250			RK73GB2A471J	CHIP R 470 J 1/10W	
R251			RK73HB1J272J	CHIP R 2.7K J 1/16W	
R252			RK73HB1J223J	CHIP R 22K J 1/16W	
R253			RK73HB1J470J	CHIP R 47 J 1/16W	
R255			RK73HB1J101J	CHIP R 100 J 1/16W	
R256			RK73HH1J470D	CHIP R 47 D 1/16W	
R260			RK73HH1J470D	CHIP R 47 D 1/16W	
R261,262			RK73HB1J473J	CHIP R 47K J 1/16W	
R263,264			RK73HB1J101J	CHIP R 100 J 1/16W	
R265			RK73HH1J470D	CHIP R 47 D 1/16W	
R266			RK73HB1J101J	CHIP R 100 J 1/16W	
R267			RK73HH1J470D	CHIP R 47 D 1/16W	
R268			RK73HB1J473J	CHIP R 47K J 1/16W	
R269			RK73HB1J101J	CHIP R 100 J 1/16W	
R270			RK73HB1J104J	CHIP R 100K J 1/16W	
R271			RK73HB1J101J	CHIP R 100 J 1/16W	
R272			RK73HB1J223J	CHIP R 22K J 1/16W	
R273			RK73HB1J222J	CHIP R 2.2K J 1/16W	
R274,275			RK73HB1J101J	CHIP R 100 J 1/16W	
R276			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R277			RK73HB1J101J	CHIP R 100 J 1/16W	
R278			RK73HB1J222J	CHIP R 2.2K J 1/16W	
R279-282			RK73HB1J101J	CHIP R 100 J 1/16W	E1M1M2
R279-282			RK73HB1J101J	CHIP R 100 J 1/16W	X1
R279,280			RK73HB1J101J	CHIP R 100 J 1/16W	KR1

K: DNX7180 (North America) **R1**: DNX7480BT (Latin America)
E1: DNX7280BT (Europe) **X1**: DNX7380BT (Australia)
M1: DNX7380BT **M2**: DNX7380BTM (Other Areas)

⚠ indicates safety critical components.

PARTS LIST

VIDEO CONTROL UNIT (X15-156x-xx)

Ref.No.	Add	New	Parts No.	Description	Destination
R282			RK73HB1J101J	CHIP R 100 J 1/16W	KR1
R283			RK73HB1J223J	CHIP R 22K J 1/16W	
R284,285			RK73HB1J470J	CHIP R 47 J 1/16W	
R286			RK73HB1J104J	CHIP R 100K J 1/16W	
R287			RK73HB1J101J	CHIP R 100 J 1/16W	
R288			RK73HB1J104J	CHIP R 100K J 1/16W	
R289			RK73HB1J101J	CHIP R 100 J 1/16W	
R290			RK73HB1J104J	CHIP R 100K J 1/16W	
R291			RK73HB1J222J	CHIP R 2.2K J 1/16W	
R292,293			RK73HB1J101J	CHIP R 100 J 1/16W	
R295			RK73HB1J222J	CHIP R 2.2K J 1/16W	
R296			RK73HB1J101J	CHIP R 100 J 1/16W	
R297			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R298			RK73HB1J101J	CHIP R 100 J 1/16W	
R299			RK73HB1J222J	CHIP R 2.2K J 1/16W	
R300			RK73HB1J101J	CHIP R 100 J 1/16W	
R301			RK73HB1J222J	CHIP R 2.2K J 1/16W	
R302,303			RK73HB1J101J	CHIP R 100 J 1/16W	
R304			RK73HB1J103J	CHIP R 10K J 1/16W	
R305			RK73HB1J104J	CHIP R 100K J 1/16W	
R306,307			RK73HB1J101J	CHIP R 100 J 1/16W	
R308			RK73HB1J223J	CHIP R 22K J 1/16W	
R310			RK73HB1J104J	CHIP R 100K J 1/16W	
R311,312			RK73HB1J101J	CHIP R 100 J 1/16W	
R313			RK73HB1J223J	CHIP R 22K J 1/16W	
R314,315			RK73HB1J103J	CHIP R 10K J 1/16W	
R316			RK73HB1J104J	CHIP R 100K J 1/16W	
R317			RK73HB1J473J	CHIP R 47K J 1/16W	
R318			RK73HB1J223J	CHIP R 22K J 1/16W	
R319,320			RK73HB1J302J	CHIP R 3.0K J 1/16W	
R321			RK73HB1J103J	CHIP R 10K J 1/16W	K
R323			RK73HB1J223J	CHIP R 22K J 1/16W	
R324			RK73HB1J104J	CHIP R 100K J 1/16W	
R326			RK73HB1J104J	CHIP R 100K J 1/16W	E1M1M2
R326			RK73HB1J104J	CHIP R 100K J 1/16W	X1
R327			RK73HB1J223J	CHIP R 22K J 1/16W	KR1
R328			RK73HB1J104J	CHIP R 100K J 1/16W	
R337,338			RK73HB1J101J	CHIP R 100 J 1/16W	
R339-342			RK73HB1J100J	CHIP R 10 J 1/16W	
R343			RK73HB1J101J	CHIP R 100 J 1/16W	
R344			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R346			RK73HB1J223J	CHIP R 22K J 1/16W	
R347-355			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R356			RK73HB1J473J	CHIP R 47K J 1/16W	
R357			RK73HB1J752J	CHIP R 7.5K J 1/16W	
R359,360			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R364			RK73HB1J223J	CHIP R 22K J 1/16W	
R367			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R368			RK73HB1J472J	CHIP R 4.7K J 1/16W	KE1
R369,370			RK73HB1J103J	CHIP R 10K J 1/16W	KE1
R371			RK73HB1J223J	CHIP R 22K J 1/16W	
R372			RK73HB1J101J	CHIP R 100 J 1/16W	E1M1M2
R372			RK73HB1J101J	CHIP R 100 J 1/16W	X1
R373			RK73HB1J104J	CHIP R 100K J 1/16W	R1
R400,401			RK73HB1J222J	CHIP R 2.2K J 1/16W	
R402			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R403			RK73HB1J2R2J	CHIP R 2.2 J 1/16W	
R404,405			RK73HB1J473J	CHIP R 47K J 1/16W	
R406			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R407,408			RK73HB1J473J	CHIP R 47K J 1/16W	
R409,410			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R411,412			RK73HB1J473J	CHIP R 47K J 1/16W	
R413			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R414,415			RK73HB1J473J	CHIP R 47K J 1/16W	
R418			RK73HB1J473J	CHIP R 47K J 1/16W	
R419,420			RK73GB2A101J	CHIP R 100 J 1/10W	
R421			RK73HB1J681J	CHIP R 680 J 1/16W	
R422,423			RK73FB2B101J	CHIP R 100 J 1/8W	
R425,426			RK73HB1J101J	CHIP R 100 J 1/16W	
R427			RK73HB1J223J	CHIP R 22K J 1/16W	
R428,429			RK73HB1J101J	CHIP R 100 J 1/16W	
R430			RK73HB1J473J	CHIP R 47K J 1/16W	
R431,432			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R435			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R438			RK73HB1J101J	CHIP R 100 J 1/16W	
R439			RK73HB1J100J	CHIP R 10 J 1/16W	
R440			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R441,442			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R443			RK73HB1J222J	CHIP R 2.2K J 1/16W	
R445,446			RK73GB2A471J	CHIP R 470 J 1/10W	
R447,448			RK73HB1J473J	CHIP R 47K J 1/16W	
R449-458			RK73HB1J220J	CHIP R 22 J 1/16W	
R459-464			RK73HB1J223J	CHIP R 22K J 1/16W	
R466			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R468			RK73HB1J222J	CHIP R 2.2K J 1/16W	
R469			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R470			RK73HB1J103J	CHIP R 10K J 1/16W	
R471			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R472			RK73HB1J103J	CHIP R 10K J 1/16W	
R473			RK73HB1J221J	CHIP R 220 J 1/16W	
R474			RK73GB2A221J	CHIP R 220 J 1/10W	
R475			RK73HB1J221J	CHIP R 220 J 1/16W	
R476			RK73GB2A221J	CHIP R 220 J 1/10W	
R478			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R479			RK73HB1J471J	CHIP R 470 J 1/16W	
R480			RK73GB2A471J	CHIP R 470 J 1/10W	
R481			RK73HB1J471J	CHIP R 470 J 1/16W	
R482			RK73GB2A471J	CHIP R 470 J 1/10W	
R483			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R488-492			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R494,495			RK73HB1J470J	CHIP R 47 J 1/16W	M1M2X1
R496-499			RK73HB1J223J	CHIP R 22K J 1/16W	
R501			RK73HB1J200J	CHIP R 20 J 1/16W	KE1M1
R501			RK73HB1J200J	CHIP R 20 J 1/16W	M2X1
R502			RK73HB1J100J	CHIP R 10 J 1/16W	KE1M1
R502			RK73HB1J100J	CHIP R 10 J 1/16W	M2X1
R504,505			RK73HB1J100J	CHIP R 10 J 1/16W	KE1M1
R504,505			RK73HB1J100J	CHIP R 10 J 1/16W	M2X1
R506			RK73HB1J200J	CHIP R 20 J 1/16W	KE1M1
R506			RK73HB1J200J	CHIP R 20 J 1/16W	M2X1

K: DNX7180 (North America) **R1**: DNX7480BT (Latin America)
E1: DNX7280BT (Europe) **X1**: DNX7380BT (Australia)
M1: DNX7380BT **M2**: DNX7380BTM (Other Areas)

⚠ indicates safety critical components.

PARTS LIST

VIDEO CONTROL UNIT (X15-156x-xx)

Ref.No.	Add	New	Parts No.	Description	Destination
R507			RK73HB1J100J	CHIP R 10 J 1/16W	KE1M1
R507			RK73HB1J100J	CHIP R 10 J 1/16W	M2X1
R508			RK73HB1J101J	CHIP R 100 J 1/16W	
R510			RK73HB1J102J	CHIP R 1.0K J 1/16W	KE1M1
R510			RK73HB1J102J	CHIP R 1.0K J 1/16W	M2X1
R512			RK73HB1J101J	CHIP R 100 J 1/16W	KE1M1
R512			RK73HB1J101J	CHIP R 100 J 1/16W	M2X1
R513			RK73HB1J000J	CHIP R 0.0 J 1/16W	E1M1M2
R513			RK73HB1J000J	CHIP R 0.0 J 1/16W	X1
R514			RK73HB1J102J	CHIP R 1.0K J 1/16W	KE1M1
R514			RK73HB1J102J	CHIP R 1.0K J 1/16W	M2X1
R517			RK73HB1J101J	CHIP R 100 J 1/16W	KE1M1
R517			RK73HB1J101J	CHIP R 100 J 1/16W	M2X1
R519			RK73HB1J101J	CHIP R 100 J 1/16W	KE1M1
R519			RK73HB1J101J	CHIP R 100 J 1/16W	M2X1
R521			RK73HB1J101J	CHIP R 100 J 1/16W	KE1M1
R521			RK73HB1J101J	CHIP R 100 J 1/16W	M2X1
R522			RK73HB1J241J	CHIP R 240 J 1/16W	KE1M1
R522			RK73HB1J241J	CHIP R 240 J 1/16W	M2X1
R524			RK73HB1J102J	CHIP R 1.0K J 1/16W	KE1M1
R524			RK73HB1J102J	CHIP R 1.0K J 1/16W	M2X1
R525			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R526			RK73HB1J103J	CHIP R 10K J 1/16W	
R527,528			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R529			RK73HB1J100J	CHIP R 10 J 1/16W	KE1M1
R529			RK73HB1J100J	CHIP R 10 J 1/16W	M2X1
R531			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R532			RK73HB1J000J	CHIP R 0.0 J 1/16W	KE1M1
R532			RK73HB1J000J	CHIP R 0.0 J 1/16W	M2X1
R533			RK73HB1J750J	CHIP R 75 J 1/16W	KE1M1
R533			RK73HB1J750J	CHIP R 75 J 1/16W	M2X1
R534			RK73GB2A2R2J	CHIP R 2.2 J 1/10W	
R536			RK73HB1J101J	CHIP R 100 J 1/16W	K
R539,540			RK73HB1J101J	CHIP R 100 J 1/16W	
R541			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R542			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R543			RK73HB1J473J	CHIP R 47K J 1/16W	
R544			RK73HB1J152J	CHIP R 1.5K J 1/16W	
R545			RK73HB1J473J	CHIP R 47K J 1/16W	
R546			RK73HB1J621J	CHIP R 620 J 1/16W	
R547			RK73HB1J242J	CHIP R 2.4K J 1/16W	
R548,549			RK73PB2H2R0J	CHIP R 2.0 J 1/2W	
R550			RK73HB1J100J	CHIP R 10 J 1/16W	
R552			RK73HB1J100J	CHIP R 10 J 1/16W	
R554			RK73HB1J124J	CHIP R 120K J 1/16W	
R555			RK73HB1J103J	CHIP R 10K J 1/16W	
R556			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R557			RK73HB1J182J	CHIP R 1.8K J 1/16W	
R558,559			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R560			RK73HB1J100J	CHIP R 10 J 1/16W	
R561			RK73HB1J111J	CHIP R 110 J 1/16W	
R562			RK73HB1J9R1J	CHIP R 9.1 J 1/16W	
R563			RK73HB1J100J	CHIP R 10 J 1/16W	
R565			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R566			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R567			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R569			RK73HB1J750J	CHIP R 75 J 1/16W	
R570			RK73HB1J243J	CHIP R 24K J 1/16W	
R571			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R573			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R574			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R575			RK73HB1J103J	CHIP R 10K J 1/16W	
R576			RK73HB1J223J	CHIP R 22K J 1/16W	
R577,578			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R579			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R580			RK73HB1J100J	CHIP R 10 J 1/16W	
R583,584			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R585			RK73HB1J473J	CHIP R 47K J 1/16W	
R586			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R588			RK73HB1J103J	CHIP R 10K J 1/16W	
R589			RK73HB1J473J	CHIP R 47K J 1/16W	
R590			RK73HB1J202J	CHIP R 2.0K J 1/16W	
R591			RK73HB1J100J	CHIP R 10 J 1/16W	
R592			RK73HB1J152J	CHIP R 1.5K J 1/16W	
R593			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R594,595			RK73HB1J473J	CHIP R 47K J 1/16W	
R597			RK73HB1J101J	CHIP R 100 J 1/16W	
R598			RK73HB1J471J	CHIP R 470 J 1/16W	
R599			RK73HB1J621J	CHIP R 620 J 1/16W	
R600			RK73HB1J242J	CHIP R 2.4K J 1/16W	
R601,602			RK73PB2H2R0J	CHIP R 2.0 J 1/2W	
R603,604			RK73HB1J223J	CHIP R 22K J 1/16W	
R606			RK73HH1J680D	CHIP R 68 D 1/16W	
R607			RK73HB1J124J	CHIP R 120K J 1/16W	
R608			RK73HB1J103J	CHIP R 10K J 1/16W	
R609			RK73HH1J241D	CHIP R 240 D 1/16W	
R610			RK73HB1J223J	CHIP R 22K J 1/16W	
R612			RK73HB1J750J	CHIP R 75 J 1/16W	
R613			RK73HB1J101J	CHIP R 100 J 1/16W	
R614			RK73HB1J471J	CHIP R 470 J 1/16W	
R615			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R618			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R627			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R628,629			RK73HB1J102J	CHIP R 1.0K J 1/16W	M1M2X1
R630,631			RK73HB1J104J	CHIP R 100K J 1/16W	M1M2X1
R632,633			RK73HB1J511J	CHIP R 510 J 1/16W	M1M2X1
R634,635			RK73HH1J472D	CHIP R 4.7K D 1/16W	M1M2X1
R636			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R640			RK73HH1J303D	CHIP R 30K D 1/16W	
R641			RK73HH1J512D	CHIP R 5.1K D 1/16W	
R642			RK73HH1J130D	CHIP R 13 D 1/16W	
R643			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R644-650			RK73HB1J101J	CHIP R 100 J 1/16W	
R652			RK73HB1J100J	CHIP R 10 J 1/16W	
R654			RK73HB1J000J	CHIP R 0.0 J 1/16W	R1E1M1
R654			RK73HB1J000J	CHIP R 0.0 J 1/16W	M2X1
R654,655			RK73HB1J000J	CHIP R 0.0 J 1/16W	K
D1 -4			RB080L-30	DIODE	
D5			1SR154-400	DIODE	

K: DNX7180 (North America) **R1**: DNX7480BT (Latin America)
E1: DNX7280BT (Europe) **X1**: DNX7380BT (Australia)
M1: DNX7380BT **M2**: DNX7380BTM (Other Areas)

⚠ indicates safety critical components.

PARTS LIST

VIDEO CONTROL UNIT (X15-156x-xx)

Ref.No.	Add	New	Parts No.	Description	Destination
D7			1SR154-400	DIODE	
D8			RKS801KF	DIODE	
D11			1SR154-400	DIODE	
D23			RKS801KF	DIODE	
D201-203			CVL10C270M300	VARISTOR	E1M1M2
D201-203			CVL10C270M300	VARISTOR	X1
D204			VR1005CCA270	VARISTOR	E1M1M2
D204			VR1005CCA270	VARISTOR	X1
D205			VR1005DDA080	VARISTOR	E1M1M2
D205			VR1005DDA080	VARISTOR	X1
D206,207			VR1005CCA270	VARISTOR	E1M1M2
D206,207			VR1005CCA270	VARISTOR	X1
D210-213			VR1005AAA270	VARISTOR	
D214			RKS801KF	DIODE	K
D216			VR1005CCA270	VARISTOR	K
D216,217			VR1005CCA270	VARISTOR	R1E1M1
D216,217			VR1005CCA270	VARISTOR	M2X1
D400-403			VR1005DDA080	VARISTOR	M1M2X1
D400,401			VR1005DDA080	VARISTOR	KR1E1
D404,405			RKZ6.8KG(B2)	ZENER DIODE	KE1M1
D404,405			RKZ6.8KG(B2)	ZENER DIODE	M2X1
D406			RKZ6.2KG(B2)	ZENER DIODE	KE1M1
D406			RKZ6.2KG(B2)	ZENER DIODE	M2X1
D413-420			RKZ6.2KG(B2)	ZENER DIODE	KE1M1
D413-420			RKZ6.2KG(B2)	ZENER DIODE	M2X1
D421,422			VR1005DDA080	VARISTOR	KE1M1
D421,422			VR1005DDA080	VARISTOR	M2X1
D423			VR1005CCA270	VARISTOR	KE1M1
D423			VR1005CCA270	VARISTOR	M2X1
D424-428			RKZ6.2KG(B2)	ZENER DIODE	KE1M1
D424-428			RKZ6.2KG(B2)	ZENER DIODE	M2X1
D425-428			RKZ6.2KG(B2)	ZENER DIODE	R1
D429			RKS801KF	DIODE	
D433,434			VR1005DDA080	VARISTOR	
D435,436			VR1005CCA270	VARISTOR	
D437			1SR154-400	DIODE	
D438			RKS801KF	DIODE	
D439			1SR154-400	DIODE	
D441			VR1005CCA270	VARISTOR	
D442			1SR154-400	DIODE	
D443,444			RKZ6.2KG(B2)	ZENER DIODE	
D445,446			VR1005AAA180	VARISTOR	
D447-449			VR1005DDA080	VARISTOR	
D450			VR1005CCA270	VARISTOR	
D452			1SR154-400	DIODE	
D455-457			MC2846-T111	DIODE	
D461			VR1005CCA270	VARISTOR	
D462,463			RKZ6.2KG(B2)	ZENER DIODE	M1M2X1
IC1			AN33012UA-VB	ANALOGUE IC	
IC2			AN33013UA-VB	ANALOGUE IC	
IC3			LM26003MHX	ANALOGUE IC	
IC4			XC6220B18BP-G	ANALOGUE IC	
IC5			XC6223B18BP-G	ANALOGUE IC	
IC6			XC6223B121P-G	ANALOGUE IC	
IC7			XC6223B331P-G	ANALOGUE IC	
IC8			R1114N181B-TR	ANALOGUE IC (1.8V LF)	
IC9			BA00DD0WHFP	ANALOGUE IC	
IC200			NJM2505AF-ZB	ANALOGUE IC	
IC201			R1114N331B-TR	ANALOGUE IC (3.3V LF)	
IC202			TC7SET08FU-F	MOS-IC	KE1M1
IC202			TC7SET08FU-F	MOS-IC	M2X1
IC203			XC6120N302N-G	MOS-IC	
IC204			W05-1548-00	ROM IC	K
IC204			W05-1549-00	ROM IC	E1M2
IC204			W05-1550-00	ROM IC	M1
IC204			W05-1551-00	ROM IC	R1X1
IC205			W05-1669-00	MICROCONTROLLER IC	
IC206			TC7SH08FU-F	MOS-IC	
IC400			NJM4565E-ZB	ANALOGUE IC	
IC401			XC6223B331P-G	ANALOGUE IC	
IC402			XC6209B502P1	ANALOGUE IC	
IC403			BD00C0AWFP	ANALOGUE IC	
IC404,405			AK4388AETP	MOS-IC	
IC406			AN15886A-VF	MOS-IC	
IC407			TC7SET08FU-F	MOS-IC	K
IC408			XC6120N412N-G	MOS-IC	
IC409			TC7WH126FU-F	MOS-IC	
IC410			TC7SG86FU-F	MOS-IC	
Q1			2SA1774	TRANSISTOR	
Q2			RT1N441U-T111	TRANSISTOR	
Q3			2SA1774	TRANSISTOR	
Q4			TPC8110-F	FET	
Q5			2SC5383-T1(F)	TRANSISTOR	
Q6			2SA1774	TRANSISTOR	
Q7			RT1P140M-T111	TRANSISTOR	
Q8			2SC5383-T1(F)	TRANSISTOR	
Q9			2SA1774	TRANSISTOR	
Q10			2SC5383-T1(F)	TRANSISTOR	
Q11			RT1N144U-T111	TRANSISTOR	
Q12			RT1N441U-T111	TRANSISTOR	
Q13			RT1P141U-T111	TRANSISTOR	
Q14 -16			RT1N441U-T111	TRANSISTOR	
Q17 ,18			TPCF8104-F	FET	
Q19			2SB1689	TRANSISTOR	
Q20			RT1N441U-T111	TRANSISTOR	
Q21			CPH3105-E	TRANSISTOR	
Q22			RT1N144U-T111	TRANSISTOR	
Q23			CPH3105-E	TRANSISTOR	
Q24			RT1N144U-T111	TRANSISTOR	
Q27			RTQ025P02	FET	
Q28			RT1N441U-T111	TRANSISTOR	
Q29			2SB1689	TRANSISTOR	
Q30			RT1N441U-T111	TRANSISTOR	
Q31			TPCF8104-F	FET	
Q32 ,33			RT1N441U-T111	TRANSISTOR	
Q34			2SB1689	TRANSISTOR	
Q35 ,36			2SC5383-T1(F)	TRANSISTOR	
Q37 ,38			2SA1774	TRANSISTOR	
Q39			RT1P144U-T111	TRANSISTOR	
Q40			2SA1774	TRANSISTOR	

K: DNX7180 (North America) **R1**: DNX7480BT (Latin America)
E1: DNX7280BT (Europe) **X1**: DNX7380BT (Australia)
M1: DNX7380BT **M2**: DNX7380BTM (Other Areas)

⚠ indicates safety critical components.

PARTS LIST

VIDEO CONTROL UNIT (X15-156x-xx)

Ref.No.	Add	New	Parts No.	Description	Destination
Q200			2SB1689	TRANSISTOR	E1M1M2
Q200			2SB1689	TRANSISTOR	X1
Q201			RT1P144U-T111	TRANSISTOR	
Q202			RT1N441U-T111	TRANSISTOR	
Q203			2SA1774	TRANSISTOR	
Q204			2SK3019	FET	
Q205			RT1P144U-T111	TRANSISTOR	K
Q206			RT1N436U-T111	TRANSISTOR	
Q207			2SK3019	FET	
Q208			2SA1774	TRANSISTOR	
Q209,210			2SC5383-T1(F)	TRANSISTOR	KE1
Q211			2SB1689	TRANSISTOR	
Q212			RT1N441U-T111	TRANSISTOR	
Q408			RT1N140M-T111	TRANSISTOR	
Q409			2SC4154T1(E,F	TRANSISTOR	
Q410			2SB1184(Q,R)	TRANSISTOR	
Q411			ISA1602AM1(F)	TRANSISTOR	
Q412-414			2SC4154T1(E,F	TRANSISTOR	
Q415,416			ISA1602AM1(F)	TRANSISTOR	
Q417			RT1N140M-T111	TRANSISTOR	
Q418			2SC4154T1(E,F	TRANSISTOR	
Q419			2SB1184(Q,R)	TRANSISTOR	
Q420			2SC4154T1(E,F	TRANSISTOR	
Q421			ISA1602AM1(F)	TRANSISTOR	
Q422			2SC4154T1(E,F	TRANSISTOR	
Q423			RT1N430M-T111	TRANSISTOR	
Q424			RT1P441M-T111	TRANSISTOR	
Q425			2SC4154T1(E,F	TRANSISTOR	
Q426			RT1N430M-T111	TRANSISTOR	
Q427			RT1N441U-T111	TRANSISTOR	
Q436			RT1N144U-T111	TRANSISTOR	
Q437			RTQ025P02	FET	
Q438			RT1P144U-T111	TRANSISTOR	
Q439,440			RT1N430M-T111	TRANSISTOR	
Q442,443			RT1N144U-T111	TRANSISTOR	M1M2X1
Q446			RT3J33M-1	DUAL FET	M1M2X1
Q447			2SK3019	FET	
A400		*	W02-5489-05	ELECTRIC CIRCUIT MODULE (BT)	
A401			W02-5441-05	ELECTRIC CIRCUIT MODULE (GPS)	

SWITCH UNIT (W05-1653-00): (X16-6870-10)

D101			B30-3218-05	LED	
D104			B30-1784-05	LED(RGB SIDE)	
D106			B30-1784-05	LED(RGB SIDE)	
C101			CK73HB1A104K	CHIP C 0.10UF K	
C102			CC73HCH1H102J	CHIP C 1000PF J	
CN101			E41-3150-05	FLAT CABLE CONNECTOR	
R110-113			RK73HB1J561J	CHIP R 560 J 1/16W	
R115-118			RK73HB1J561J	CHIP R 560 J 1/16W	
S101			S70-0948-05	TACT SWITCH	
D102			CVS10A120M	VARISTOR	
D107			CVS10A120M	VARISTOR	

Ref.No.	Add	New	Parts No.	Description	Destination
D108-111			AVRM1005270MA	VARISTOR	
IC101			CY8C2023412KA	MOS-IC	
IC102			PIC95603	ANALOGUE IC	
PROCESSOR UNIT (X17-2142-70)					
D212			B30-1779-05	LED(1608_SR)	E1M1M2
D212			B30-1779-05	LED(1608_SR)	X1
CN1			E41-2985-05	FLAT CABLE CONNECTOR	E1M1M2
CN1			E41-2985-05	FLAT CABLE CONNECTOR	X1
CN200			E41-2985-05	FLAT CABLE CONNECTOR	E1M1M2
CN200			E41-2985-05	FLAT CABLE CONNECTOR	X1
J1 -3			E59-0845-05	RECTANGULAR PLUG	E1M1M2
J1 -3			E59-0845-05	RECTANGULAR PLUG	X1
J200-202			E58-1138-05	RECTANGULAR RECEPTACLE	E1M1M2
J200-202			E58-1138-05	RECTANGULAR RECEPTACLE	X1
R1			RK73GB2A000J	CHIP R 0.0 J 1/10W	E1M1M2
R1			RK73GB2A000J	CHIP R 0.0 J 1/10W	X1
R201			RK73GB2A000J	CHIP R 0.0 J 1/10W	E1M1M2
R201			RK73GB2A000J	CHIP R 0.0 J 1/10W	X1
R207			RK73GB2A131J	CHIP R 130 J 1/10W	E1M1M2
R207			RK73GB2A131J	CHIP R 130 J 1/10W	X1
D2			VR1005DDA080	VARISTOR	E1M1M2
D2			VR1005DDA080	VARISTOR	X1
D3 ,4			VR1005AAA270	VARISTOR	E1M1M2
D3 ,4			VR1005AAA270	VARISTOR	X1
D5 ,6			VR1005DDA080	VARISTOR	E1M1M2
D5 ,6			VR1005DDA080	VARISTOR	X1
D13 ,14			VR1005DDA080	VARISTOR	E1M1M2
D13 ,14			VR1005DDA080	VARISTOR	X1
D17 -19			VR105C3R3BAA	VARISTOR	E1M1M2
D17 -19			VR105C3R3BAA	VARISTOR	X1
D20 ,21			VR1005AAA270	VARISTOR	E1M1M2
D20 ,21			VR1005AAA270	VARISTOR	X1
D22 -25			VR1005DDA080	VARISTOR	E1M1M2
D22 -25			VR1005DDA080	VARISTOR	X1
D26 ,27			VR1005AAA270	VARISTOR	E1M1M2
D26 ,27			VR1005AAA270	VARISTOR	X1
D28			VR1005DDA080	VARISTOR	E1M1M2
D28			VR1005DDA080	VARISTOR	X1
D201			VR1005DDA080	VARISTOR	E1M1M2
D201			VR1005DDA080	VARISTOR	X1
D202,203			VR1005AAA270	VARISTOR	E1M1M2
D202,203			VR1005AAA270	VARISTOR	X1
D204,205			VR1005DDA080	VARISTOR	E1M1M2
D204,205			VR1005DDA080	VARISTOR	X1
D206-209			VR105C3R3BAA	VARISTOR	E1M1M2
D206-209			VR105C3R3BAA	VARISTOR	X1
D210,211			VR1005DDA080	VARISTOR	E1M1M2
D210,211			VR1005DDA080	VARISTOR	X1
D213			VR105C3R3BAA	VARISTOR	E1M1M2
D213			VR105C3R3BAA	VARISTOR	X1
D214,215			VR1005DDA080	VARISTOR	E1M1M2
D214,215			VR1005DDA080	VARISTOR	X1
D218-220			VR105C3R3BAA	VARISTOR	E1M1M2

K: DNX7180 (North America) **R1**: DNX7480BT (Latin America)
E1: DNX7280BT (Europe) **X1**: DNX7380BT (Australia)
M1: DNX7380BT **M2**: DNX7380BTM (Other Areas)

⚠ indicates safety critical components.

PARTS LIST

PROCESSOR UNIT (X17-2142-70)

Ref.No.	Add	New	Parts No.	Description	Destination
D218-220			VR105C3R3BAA	VARISTOR	X1
D221,222			VR1005AAA270	VARISTOR	E1M1M2
D221,222			VR1005AAA270	VARISTOR	X1
D223-226			VR1005DDA080	VARISTOR	E1M1M2
D223-226			VR1005DDA080	VARISTOR	X1
D227,228			VR1005AAA270	VARISTOR	E1M1M2
D227,228			VR1005AAA270	VARISTOR	X1
D229,230			VR1005DDA080	VARISTOR	E1M1M2
D229,230			VR1005DDA080	VARISTOR	X1

ELECTRIC UNIT (X34-702x-xx)

Ref.No.	Add	New	Parts No.	Description	Destination
C1			C90-6866-05	ELECTRO 6800UF 16WV	
C2 ,3			CK73GB1H104K	CHIP C 0.10UF K	
C4 ,5			CK73ER2J333K	CHIP C 33000PF K	E1M2
C10 -13			C90-6777-05	ELECTRO 0.22UF 16WV	
C14 -17			CC73GCH1H150J	CHIP C 15PF J	
C20			CK73HB0J105K	CHIP C 1.0UF K	
C21			CE32CL1C100M	CHIP EL 10UF 16WV	
C22			C90-6780-05	ELECTRO 1UF 16WV	
C23			CK73HB0J105K	CHIP C 1.0UF K	
C31			C90-7001-05	ELECTRO 100UF 25WV	
C32			CK73FB1H224K	CHIP C 0.22UF K	
C33			CK73GB1C105K	CHIP C 1.0UF K	
C34			CE32CL1C470M	CHIP EL 47UF 16WV	
C35			CK73GB1C104K	CHIP C 0.10UF K	
C36			CE32CL1C470M	CHIP EL 47UF 16WV	
C37			CK73GB1C224K	CHIP C 0.22UF K	
C38			C90-7001-05	ELECTRO 100UF 25WV	
C41			CK73HB1E103K	CHIP C 0.010UF K	
C42			C90-6851-05	ELECTRO 220UF 25WV	
C44			CK73HB1A104K	CHIP C 0.10UF K	
C45 ,46			CE32CL1V100M	CHIP EL 10UF 35WV	
C51			CK73FB1C106K	CHIP C 10UF K	
C52			CK73GB1H104K	CHIP C 0.10UF K	
C53			CK73HB1A104K	CHIP C 0.10UF K	
C54			CK73FB0J106K	CHIP C 10UF K	
C55			CK73GB1H103K	CHIP C 0.010UF K	
C61			CK73FB1C106K	CHIP C 10UF K	KE1M1
C62			CK73GB1H104K	CHIP C 0.10UF K	KE1M1
C63			CK73HB1A104K	CHIP C 0.10UF K	KE1M1
C64			CK73FB0J106K	CHIP C 10UF K	KE1M1
C91			CK73GB1H102K	CHIP C 1000PF K	
C92			CK73FB1C106K	CHIP C 10UF K	
C93			CK73GB1H103K	CHIP C 0.010UF K	
C95			CE32BJ1C470M	CHIP EL 47UF 16WV	
C96			CE32BJ1C220M	CHIP EL 22UF 16WV	
C97			C90-7001-05	ELECTRO 100UF 25WV	
C111			CK73HB0J105K	CHIP C 1.0UF K	
C112			CK73HB1E103K	CHIP C 0.010UF K	
C121			CK73GB1C105K	CHIP C 1.0UF K	
C131			CK73HB0J105K	CHIP C 1.0UF K	
C132			CK73HB1E103K	CHIP C 0.010UF K	
C151			CK73FB1E474K	CHIP C 0.47UF K	
C181			CK73HB1E103K	CHIP C 0.010UF K	
C202			CK73HB1E103K	CHIP C 0.010UF K	
C203			CK73GB1C104K	CHIP C 0.10UF K	
C204			CK73HB1E103K	CHIP C 0.010UF K	
C205			CK73GB1C104K	CHIP C 0.10UF K	
C206			CK73FB1C106K	CHIP C 10UF K	
C207			CK73HB1E103K	CHIP C 0.010UF K	
C208			CK73HB1A104K	CHIP C 0.10UF K	
C209			CK73FB1C106K	CHIP C 10UF K	
C210			CK73HB1E103K	CHIP C 0.010UF K	
C211			CK73GB1C104K	CHIP C 0.10UF K	
C212			CK73FB1C106K	CHIP C 10UF K	
C214			CK73FB1C106K	CHIP C 10UF K	
C231			CK73FB1C106K	CHIP C 10UF K	KR1E1
C231			CK73FB1C106K	CHIP C 10UF K	M1M2
C232			CC73HCH1H331J	CHIP C 330PF J	KR1E1
C232			CC73HCH1H331J	CHIP C 330PF J	M1M2
C233,234			CC73GCH1H120J	CHIP C 12PF J	KR1E1
C233,234			CC73GCH1H120J	CHIP C 12PF J	M1M2
C235			CK73FB1C106K	CHIP C 10UF K	KR1E1
C235			CK73FB1C106K	CHIP C 10UF K	M1M2
C236			CK73HB1E103K	CHIP C 0.010UF K	KR1E1
C236			CK73HB1E103K	CHIP C 0.010UF K	M1M2
C241			CK73GB1H102K	CHIP C 1000PF K	KE1M1
C242			CC73GCH1H070D	CHIP C 7.0PF D	KE1M1
C243			CC73GCH1H180J	CHIP C 18PF J	KE1M1
C244			CC73GCH1H150J	CHIP C 15PF J	KE1M1
C245			CC73GCH1H180J	CHIP C 18PF J	KE1M1
C246			CC73GCH1H390J	CHIP C 39PF J	KE1M1
C247			CC73GCH1H020C	CHIP C 2.0PF C	KE1M1
C248			CC73GCH1H120J	CHIP C 12PF J	KE1M1
C249,250			CC73GCH1H102J	CHIP C 1000PF J	KE1M1
C251			CK73GB1C105K	CHIP C 1.0UF K	KE1M1
C252			CC73GCH1H221J	CHIP C 220PF J	KE1M1
C253,254			CC73GCH1H102J	CHIP C 1000PF J	KE1M1
C255			CC73GCH1H030C	CHIP C 3.0PF C	KE1M1
C256,257			CC73GCH1H560J	CHIP C 56PF J	KE1M1
C261			CC73GCH1H150J	CHIP C 15PF J	K
C261			CC73GCH1H470J	CHIP C 47PF J	E1M1
C264			CK73GB1C104K	CHIP C 0.10UF K	
C265,266			CC73GCH1H220J	CHIP C 22PF J	KE1M1
C270			CK73HB1A104K	CHIP C 0.10UF K	KE1M1
C271,272			CK73FB0J106K	CHIP C 10UF K	KE1M1
C301			CK73GB1A105K	CHIP C 1.0UF K	
C302			CK73FB1C106K	CHIP C 10UF K	
C303,304			CK73GB1A105K	CHIP C 1.0UF K	
C305			CK73FB1C106K	CHIP C 10UF K	
C306			CK73GB1A105K	CHIP C 1.0UF K	
C307			CK73HB0J105K	CHIP C 1.0UF K	
C308,309			CK73HB0J474K	CHIP C 0.47UF K	
C310			CK73HB0J105K	CHIP C 1.0UF K	
C311,312			CK73GB1A105K	CHIP C 1.0UF K	
C313			CK73HB0J105K	CHIP C 1.0UF K	
C314			CE32CL1H010M	CHIP EL 1.0UF 50WV	
C315			CE32CL1C470M	CHIP EL 47UF 16WV	
C317,318			CK73GB1A105K	CHIP C 1.0UF K	
C319			CK73HB1E103K	CHIP C 0.010UF K	
C321,322			CE32CL1H2R2M	CHIP EL 2.2UF 50WV	

K: DNX7180 (North America) **R1**: DNX7480BT (Latin America)
E1: DNX7280BT (Europe) **X1**: DNX7380BT (Australia)
M1: DNX7380BT **M2**: DNX7380BTM (Other Areas)

⚠ indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-702x-xx)

Ref.No.	Add	New	Parts No.	Description	Destination
C323-326			CK73GB1A105K	CHIP C 1.0UF K	
C341,342			CE32BJ1C100M	CHIP EL 10UF 16WV	
C343,344			CK73HB1H102K	CHIP C 1000PF K	
C351,352			CE32BJ1C100M	CHIP EL 10UF 16WV	
C353,354			CK73HB1H102K	CHIP C 1000PF K	
C361,362			CK73EB1C106K	CHIP C 10UF K	
C363,364			CK73HB1H102K	CHIP C 1000PF K	
C396			CK73GB1H332K	CHIP C 3300PF K	
C401			CE32BJ1C220M	CHIP EL 22UF 16WV	
C402			CK73GB1C104K	CHIP C 0.10UF K	
C403			CK73FB1C106K	CHIP C 10UF K	
C404-406			CK73GB1A105K	CHIP C 1.0UF K	
C411-416			CK73GB1A105K	CHIP C 1.0UF K	R1
C414-416			CK73GB1A105K	CHIP C 1.0UF K	M1M2X1
C417-419			CK73FB1C106K	CHIP C 10UF K	
C420-422			CK73GB1A105K	CHIP C 1.0UF K	
C423			CK73FB1A225K	CHIP C 2.2UF K	
C424			CK73FB1C106K	CHIP C 10UF K	
C425			CK73FB1A225K	CHIP C 2.2UF K	
C426			CK73HB1E103K	CHIP C 0.010UF K	
C428,429			CK73HB1H102K	CHIP C 1000PF K	
C502-504			CK73HB1H102K	CHIP C 1000PF K	
C551			CK73GB1H104K	CHIP C 0.10UF K	
C552,553			CK73FB1C106K	CHIP C 10UF K	
C554			CK73HB1E103K	CHIP C 0.010UF K	
C555,556			CK73GB1C104K	CHIP C 0.10UF K	
C557,558			CK73HB1E103K	CHIP C 0.010UF K	
C559			CK73GB1C104K	CHIP C 0.10UF K	
C573			CK73GB1C104K	CHIP C 0.10UF K	KE1
C574			CK73GB0J475K	CHIP C 4.7UF K	KE1
C575-577			CK73GB1A105K	CHIP C 1.0UF K	KE1
C578			CK73GB1H104K	CHIP C 0.10UF K	KE1
C579			CK73FB1H224K	CHIP C 0.22UF K	KE1
C596			CK73GB0J225K	CHIP C 2.2UF K	
C597			CE32BJ0J470M	CHIP EL 47UF 6.3WV	
C601-604			CC73HCH1H101J	CHIP C 100PF J	
C605-608			CC73HCH1H221J	CHIP C 220PF J	
C609-616			CK73HB1H222K	CHIP C 2200PF K	
C617-620			CC73HCH1H221J	CHIP C 220PF J	
C621,622			CC73HCH1H050C	CHIP C 5.0PF C	
C623			CC73GCH1H102J	CHIP C 1000PF J	
C624,625			CC73HCH1H040C	CHIP C 4.0PF C	
C626			CC73GCH1H101J	CHIP C 100PF J	R1E1M1
C626			CC73GCH1H101J	CHIP C 100PF J	M2X1
C626			CC73GCH1H102J	CHIP C 1000PF J	K
C630			CC73HCH1H060D	CHIP C 6.0PF D	K
C630			CC73HCH1H101J	CHIP C 100PF J	R1E1M1
C630			CC73HCH1H101J	CHIP C 100PF J	M2X1
C631			CC73HCH1H150J	CHIP C 15PF J	
C632			CC73HCH1H070D	CHIP C 7.0PF D	
C633			CC73HCH1H150J	CHIP C 15PF J	
C634			CC73HCH1H070D	CHIP C 7.0PF D	
C635-640			CK73HB1H332K	CHIP C 3300PF K	
C642			CK73GB1H103K	CHIP C 0.010UF K	K
C643,644			CC73GCH1H470J	CHIP C 47PF J	
C701			CK73HB1A104K	CHIP C 0.10UF K	
C702			CK73GB0J106M	CHIP C 10UF M	
C703			CK73HB1A104K	CHIP C 0.10UF K	
C704			CK73GB0J225K	CHIP C 2.2UF K	
C705,706			CK73GB1A105K	CHIP C 1.0UF K	
C707			CK73HB1E103K	CHIP C 0.010UF K	
C708			CK73HB1A104K	CHIP C 0.10UF K	
C709			CK73FB1C106K	CHIP C 10UF K	
C710			CK73HB1H222K	CHIP C 2200PF K	
C711			CK73GB1A105K	CHIP C 1.0UF K	
C712			CK73HB1H222K	CHIP C 2200PF K	
C713			CK73GB1A105K	CHIP C 1.0UF K	
C714			CK73HB1H222K	CHIP C 2200PF K	
C715			CK73GB1A105K	CHIP C 1.0UF K	
C716			CK73HB1H222K	CHIP C 2200PF K	
C717			CK73GB1A105K	CHIP C 1.0UF K	
C718			CK73HB1H222K	CHIP C 2200PF K	
C719			CK73GB1A105K	CHIP C 1.0UF K	
C720			CK73HB0J105K	CHIP C 1.0UF K	
C721			CK73HB1H222K	CHIP C 2200PF K	
C722			CK73GB1A105K	CHIP C 1.0UF K	
C723			CK73HB1E103K	CHIP C 0.010UF K	
C724			CK73HB1A104K	CHIP C 0.10UF K	
C725			CK73GB0J106M	CHIP C 10UF M	
C726			CC73GCH1H150J	CHIP C 15PF J	
C727			CC73HCH1H150J	CHIP C 15PF J	
CN101			E41-3253-05	SOCKET FOR PIN ASSY	
CN102			E41-3254-05	SOCKET FOR PIN ASSY	
CN551		*	E41-3087-05	PIN ASSY	
CN596			E41-1682-05	PIN ASSY	
J1			E58-1043-05	RECTANGULAR RECEPTACLE	
J301			E63-0987-05	PIN JACK	
J501			E11-0676-05	3.5D PHONE JACK	
J571			E58-1097-05	RECTANGULAR RECEPTACLE	KE1
W201			E30-6883-05	CORD WITH PLUG	
F571			F53-0306-05	FUSE(UL,CSA) 5A	KE1
⚠ L1			L33-2459-05	CHOKE COIL ASSY	
⚠ L2			L33-2436-05	CHOKE COIL ASSY	
L51			L41-4792-62	SMALL FIXED INDUCTOR(4.7U)	
L61			L41-4792-62	SMALL FIXED INDUCTOR(4.7U)	KE1M1
L201-204			L41-4792-62	SMALL FIXED INDUCTOR(4.7U)	
L231			L41-4792-62	SMALL FIXED INDUCTOR(4.7U)	KR1E1
L231			L41-4792-62	SMALL FIXED INDUCTOR(4.7U)	M1M2
L241			L92-0329-05	CHIP FERRITE	KE1M1
L242			L41-2705-33	SMALL FIXED INDUCTOR(27U)	KE1M1
L243			L41-1805-33	SMALL FIXED INDUCTOR(18U)	KE1M1
L244-246			L41-1588-61	SMALL FIXED INDUCTOR(C2012C-R	KE1M1
L247			L19-0825-05	BALUN TRANSFORMER	KE1M1
L248			L41-1888-61	SMALL FIXED INDUCTOR(C2012C-R	KE1M1
L261			L41-1588-61	SMALL FIXED INDUCTOR(C2012C-R	KE1M1
L262,263			L92-0329-05	CHIP FERRITE	KE1M1
L264			L41-2278-61	SMALL FIXED INDUCTOR(C2012C-R	KE1M1
L571			L41-4792-62	SMALL FIXED INDUCTOR(4.7U)	KE1

K: DNX7180 (North America) **R1**: DNX7480BT (Latin America)
E1: DNX7280BT (Europe) **X1**: DNX7380BT (Australia)
M1: DNX7380BT **M2**: DNX7380BTM (Other Areas)

⚠ indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-702x-xx)

Ref.No.	Add	New	Parts No.	Description	Destination
X231			L77-3827-05	CRYSTAL RESONATOR	KR1E1
X231			L77-3827-05	CRYSTAL RESONATOR	M1M2
X261			L77-2921-15	CRYSTAL RESONATOR(32.768KHZ, 1	KE1M1
X701			L77-3810-05	CRYSTAL RESONATOR(11.2896MHZ)	
AD	2C		N35-2604-43	BINDING HEAD MACHINE SCREW	KE1
AE	2C		N80-3008-48	PAN HEAD TAPTITE SCREW	
R1 -4			RK73GB2A680J	CHIP R 68 J 1/10W	
R5			RK73HB1J473J	CHIP R 47K J 1/16W	
R6			RK73HB1J330J	CHIP R 33 J 1/16W	
R7			RK73HB1J123J	CHIP R 12K J 1/16W	
R8			RK73HB1J473J	CHIP R 47K J 1/16W	
R9			RK73HB1J331J	CHIP R 330 J 1/16W	
R10			RK73GB2A432J	CHIP R 4.3K J 1/10W	
R31			RK73GH2A392D	CHIP R 3.9K D 1/10W	
R32			RK73GH2A751D	CHIP R 750 D 1/10W	
R33			RK73GH2A273D	CHIP R 27K D 1/10W	
R34			RK73GH2A472D	CHIP R 4.7K D 1/10W	
R35			RK73GH2A221D	CHIP R 220 D 1/10W	
R37 -39			RK73FB2B000J	CHIP R 0.0 J 1/8W	
R40			RK73EB2E4R7J	CHIP R 4.7 J 1/4W	
R41			RK73HB1J101J	CHIP R 100 J 1/16W	
R42			RK73FB2B000J	CHIP R 0.0 J 1/8W	
R61			RK73FB2B000J	CHIP R 0.0 J 1/8W	KE1M1
R91			RK73GB2A101J	CHIP R 100 J 1/10W	
R92			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R93			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R94			RK73GB2A473J	CHIP R 47K J 1/10W	
R95			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R96			RK73GB2A2R2J	CHIP R 2.2 J 1/10W	
R97			RK73GB2A332J	CHIP R 3.3K J 1/10W	
R98			RK73EB2E2R2J	CHIP R 2.2 J 1/4W	
R99 ,100			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R101			RK73GB2A513J	CHIP R 51K J 1/10W	
R102			RK73GB2A221J	CHIP R 220 J 1/10W	
R103			RK73PB2H220J	CHIP R 22 J 1/2W	
R105			RK73FB2B102J	CHIP R 1.0K J 1/8W	
R112			RK73EB2E272J	CHIP R 2.7K J 1/4W	
R113			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R123			RK73EB2E103J	CHIP R 10K J 1/4W	
R132			RK73EB2E272J	CHIP R 2.7K J 1/4W	
R133			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R141			RK73PB2H101J	CHIP R 100 J 1/2W	
R151			RK73EB2E153J	CHIP R 15K J 1/4W	
R152,153			RK73EB2E622J	CHIP R 6.2K J 1/4W	
R154			RK73HB1J912J	CHIP R 9.1K J 1/16W	
R161			RK73FB2B472J	CHIP R 4.7K J 1/8W	KR1M1
R161			RK73FB2B472J	CHIP R 4.7K J 1/8W	M2X1
R171			RK73FB2B472J	CHIP R 4.7K J 1/8W	
R172			RK73EB2E000J	CHIP R 0.0 J 1/4W	E1
R181			RK73HB1J104J	CHIP R 100K J 1/16W	
R182			RK73HB1J473J	CHIP R 47K J 1/16W	
R183			RK73EB2E103J	CHIP R 10K J 1/4W	
R201			RK73FB2B1R0J	CHIP R 1.0 J 1/8W	
R202			RK73GB2A000J	CHIP R 0.0 J 1/10W	R1M2X1
R203			RK73GB2A000J	CHIP R 0.0 J 1/10W	KE1M1
R204			RK73GB2A223J	CHIP R 22K J 1/10W	
R205			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R206-211			RK73HB1J101J	CHIP R 100 J 1/16W	
R231,232			RK73HB1J222J	CHIP R 2.2K J 1/16W	KR1E1
R231,232			RK73HB1J222J	CHIP R 2.2K J 1/16W	M1M2
R233			RK73GB2A101J	CHIP R 100 J 1/10W	KR1E1
R233			RK73GB2A101J	CHIP R 100 J 1/10W	M1M2
R234			RK73HB1J222J	CHIP R 2.2K J 1/16W	KR1E1
R234			RK73HB1J222J	CHIP R 2.2K J 1/16W	M1M2
R241			RK73GB2A332J	CHIP R 3.3K J 1/10W	KE1M1
R242			RK73GB2A562J	CHIP R 5.6K J 1/10W	KE1M1
R243			RK73GB2A330J	CHIP R 33 J 1/10W	KE1M1
R244			RK73GB2A331J	CHIP R 330 J 1/10W	KE1M1
R245			RK73GB2A330J	CHIP R 33 J 1/10W	KE1M1
R246			RK73GB2A331J	CHIP R 330 J 1/10W	KE1M1
R247			RK73GB2A431J	CHIP R 430 J 1/10W	KE1M1
R248			RK73GB2A270J	CHIP R 27 J 1/10W	KE1M1
R249			RK73GB2A331J	CHIP R 330 J 1/10W	KE1M1
R250			RK73GB2A151J	CHIP R 150 J 1/10W	KE1M1
R251			RK73GB2A431J	CHIP R 430 J 1/10W	KE1M1
R252			RK73GB2A220J	CHIP R 22 J 1/10W	E1M1
R252			RK73GB2A470J	CHIP R 47 J 1/10W	K
R262			RK73GB2A000J	CHIP R 0.0 J 1/10W	KE1M1
R263			RK73HB1J101J	CHIP R 100 J 1/16W	
R264			RK73HB1J103J	CHIP R 10K J 1/16W	KE1M1
R265			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R266,267			RK73HB1J101J	CHIP R 100 J 1/16W	KE1M1
R269			RK73GB2A000J	CHIP R 0.0 J 1/10W	KE1M1
R270,271			RK73HB1J102J	CHIP R 1.0K J 1/16W	KE1M1
R272			RK73HB1J221J	CHIP R 220 J 1/16W	KE1M1
R273			RK73HB1J103J	CHIP R 10K J 1/16W	KE1M1
R276			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R301			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R302			RK73HB1J104J	CHIP R 100K J 1/16W	
R303,304			RK73HB1J103J	CHIP R 10K J 1/16W	
R305			RK73GB2A101J	CHIP R 100 J 1/10W	
R306			RK73HB1J101J	CHIP R 100 J 1/16W	
R307			RK73EB2E2R2J	CHIP R 2.2 J 1/4W	
R311-314			RK73HB1J430J	CHIP R 43 J 1/16W	
R315,316			RK73HB1J680J	CHIP R 68 J 1/16W	
R341,342			RK73HB1J471J	CHIP R 470 J 1/16W	
R343,344			RK73HB1J223J	CHIP R 22K J 1/16W	
R345,346			RK73HB1J100J	CHIP R 10 J 1/16W	
R351,352			RK73HB1J471J	CHIP R 470 J 1/16W	
R353,354			RK73HB1J223J	CHIP R 22K J 1/16W	
R355,356			RK73HB1J100J	CHIP R 10 J 1/16W	
R361,362			RK73HB1J471J	CHIP R 470 J 1/16W	
R363,364			RK73HB1J223J	CHIP R 22K J 1/16W	
R365,366			RK73HB1J100J	CHIP R 10 J 1/16W	
R375,376			RK73EB2E820J	CHIP R 82 J 1/4W	
R385,386			RK73EB2E820J	CHIP R 82 J 1/4W	
R395,396			RK73EB2E820J	CHIP R 82 J 1/4W	
R401			RK73EB2E4R7J	CHIP R 4.7 J 1/4W	
R402,403			RK73HB1J101J	CHIP R 100 J 1/16W	

K: DNX7180 (North America) **R1**: DNX7480BT (Latin America)
E1: DNX7280BT (Europe) **X1**: DNX7380BT (Australia)
M1: DNX7380BT **M2**: DNX7380BTM (Other Areas)

⚠ indicates safety critical components.

PARTS LIST

The IC261 in the ELECTRIC UNIT (X34-702x-xx) are not replaceable components. When these ICs are defective, replace the whole ELECTRIC UNIT (X34-702x-xx) .

ELECTRIC UNIT (X34-702x-xx)

Ref.No.	Add	New	Parts No.	Description	Destination
R404			RK73HB1J473J	CHIP R 47K J 1/16W	
R405			RK73HB1J223J	CHIP R 22K J 1/16W	
R406			RK73GB2A162J	CHIP R 1.6K J 1/10W	
R407,408			RK73GB2A103J	CHIP R 10K J 1/10W	
R409,410			RK73GB2A332J	CHIP R 3.3K J 1/10W	
R411,412			RK73GB2A223J	CHIP R 22K J 1/10W	
R413			RK73EB2E102J	CHIP R 1.0K J 1/4W	
R414			RK73HB1J4R7J	CHIP R 4.7 J 1/16W	
R502			RK73EB2E4R7J	CHIP R 4.7 J 1/4W	
R503			RK73EB2E100J	CHIP R 10 J 1/4W	
R504			RK73GB2A620J	CHIP R 62 J 1/10W	
R505			RK73EB2E100J	CHIP R 10 J 1/4W	
R506			RK73EB2E162J	CHIP R 1.6K J 1/4W	
R507			RK73GB2A223J	CHIP R 22K J 1/10W	
R508			RK73EB2E000J	CHIP R 0.0 J 1/4W	
R509			RK73GB2A223J	CHIP R 22K J 1/10W	
R511			RK73EB2E162J	CHIP R 1.6K J 1/4W	
R512,513			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R551			RK73HB1J511J	CHIP R 510 J 1/16W	
R552			RK73HB1J104J	CHIP R 100K J 1/16W	
R553			RK73HB1J562J	CHIP R 5.6K J 1/16W	
R554,555			RK73HB1J103J	CHIP R 10K J 1/16W	
R556			RK73HB1J105J	CHIP R 1.0M J 1/16W	
R571,572			RK73EB2E102J	CHIP R 1.0K J 1/4W	KE1
R573-575			RK73EB2E101J	CHIP R 100 J 1/4W	KE1
R580			RK73GB2A103J	CHIP R 10K J 1/10W	KE1
R581			RK73HB1J473J	CHIP R 47K J 1/16W	KE1
R582			RK73HB1J103J	CHIP R 10K J 1/16W	KE1
R583			RK73HB1J223J	CHIP R 22K J 1/16W	KE1
R584,585			RK73HB1J103J	CHIP R 10K J 1/16W	KE1
R586			RK73EB2E100J	CHIP R 10 J 1/4W	KE1
R587			RK73EB2E4R7J	CHIP R 4.7 J 1/4W	KE1
R588			RK73EB2E100J	CHIP R 10 J 1/4W	KE1
R589			RK73GB2A823J	CHIP R 82K J 1/10W	KE1
R590			RK73GB2A103J	CHIP R 10K J 1/10W	KE1
R591			RK73GB2A473J	CHIP R 47K J 1/10W	KE1
R601-604			RK73HB1J100J	CHIP R 10 J 1/16W	
R609			RK73HB1J100J	CHIP R 10 J 1/16W	
R616			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R619			RK73GB2A000J	CHIP R 0.0 J 1/10W	E1M1
R620			RK73GB2A100J	CHIP R 10 J 1/10W	K
R701			RK73GB2A2R2J	CHIP R 2.2 J 1/10W	
R702-707			RK73HB1J471J	CHIP R 470 J 1/16W	
R708			RK73GB2A101J	CHIP R 100 J 1/10W	
R709			RK73HB1J104J	CHIP R 100K J 1/16W	
R710,711			RK73HB1J101J	CHIP R 100 J 1/16W	
R712			RK73GB2A2R2J	CHIP R 2.2 J 1/10W	
R713			RK73HB1J105J	CHIP R 1.0M J 1/16W	
R714			RK73HB1J152J	CHIP R 1.5K J 1/16W	
D1			RM4ZLF-J4NF	DIODE	
D2			MC2846-T111	DIODE	
D4 ,5			RR264M-400	DIODE	
D51			HSU119TRF-E	DIODE	
D61			HSU119TRF-E	DIODE	KE1M1

Ref.No.	Add	New	Parts No.	Description	Destination
D91			HSU119TRF-E	DIODE	
D92			1SR154-400	DIODE	
D93			RKZ5.6KG(B2)	ZENER DIODE	
D94			RKZ12KG(B2)	ZENER DIODE	
D111			HSU119TRF-E	DIODE	
D121			HSU119TRF-E	DIODE	
D131			HSU119TRF-E	DIODE	
D141			RKZ6.2KG(B2)	ZENER DIODE	
D151			RKZ6.2KG(B2)	ZENER DIODE	
D152			HSU119TRF-E	DIODE	
D161			RR264M-400	DIODE	KR1M1
D161			RR264M-400	DIODE	M2X1
D162			1SR154-400	DIODE	KR1M1
D162			1SR154-400	DIODE	M2X1
D171			RR264M-400	DIODE	
D172			1SR154-400	DIODE	
D181			RKZ4.7KG(B2)	ZENER DIODE	
D241			EZAEG3A50A	SURGE ABSORBER	
D301-303			MC2846-T111	DIODE	
D304,305			HSU119TRF-E	DIODE	
D341,342			MC2846-T111	DIODE	
D345,346			VR1005AAA180	VARISTOR	
D351			MC2846-T111	DIODE	
D355,356			VR1005AAA180	VARISTOR	
D361,362			MC2846-T111	DIODE	
D365-367			VR1005AAA180	VARISTOR	
D402			RKZ8.2KG(B2)	ZENER DIODE	
D403			RKZ6.2KG(B2)	ZENER DIODE	
D404			RKZ8.2KG(B2)	ZENER DIODE	
D501			VR1005AAA270	VARISTOR	
D502-504			VR1005AAA180	VARISTOR	
D551			RKZ5.6KG(B2)	ZENER DIODE	
D571-573			VR1005AAA270	VARISTOR	KE1
D574			HSU119TRF-E	DIODE	KE1
D575-577			VR1005AAA180	VARISTOR	KE1
D578,579			VR1005AAA270	VARISTOR	KE1
D601-604			CVL10C270M300	VARISTOR	
IC1			TB2923HQ	ANALOGUE IC	
IC2			LV5680P	INTEGRATED CIRCUIT(ANALOGUE)	
IC3			XC6201P502PR	ANALOGUE IC	
IC4			XC6201P332PR	ANALOGUE IC	KE1M1
IC91			NJM4565E-ZB	ANALOGUE IC	
IC231			E-TDA7478AD	ANALOGUE IC	KR1E1
IC231			E-TDA7478AD	ANALOGUE IC	M1M2
IC261		*	-	MOS-IC	KE1M1
IC301			E-TDA7415CB	ANALOGUE IC	
IC401			AN15863UA-VB	ANALOGUE IC	
IC551			LB1836M-TLM-E	ANALOGUE IC	
IC571			TC74VHCT08AFT	MOS-IC	KE1
IC701			AK7600VF	MOS-IC	
Q91 ,92			2SC4154T1(E,F	TRANSISTOR	
Q93			2SB1184(Q,R)	TRANSISTOR	
Q94			RT1P241M-T111	TRANSISTOR	
Q95			RT1N241M-T111	TRANSISTOR	
Q111			RT1N241M-T111	TRANSISTOR	

K: DNX7180 (North America) **R1**: DNX7480BT (Latin America)
E1: DNX7280BT (Europe) **X1**: DNX7380BT (Australia)
M1: DNX7380BT **M2**: DNX7380BTM (Other Areas)

⚠ indicates safety critical components.

PARTS LIST

ELECTRIC UNIT (X34-702x-xx)

Ref.No.	Add	New	Parts No.	Description	Destination
Q121			RT1P144M-T111	TRANSISTOR	
Q131			RT1N241M-T111	TRANSISTOR	
Q151			2SC4154T1(E,F	TRANSISTOR	
Q201			2SA1577	TRANSISTOR	
Q202			RT1N144M-T111	TRANSISTOR	
Q241			2SC3357-A	TRANSISTOR	KE1M1
Q341,342			RT1N430M-T111	TRANSISTOR	
Q343			RT1P436M-T111	TRANSISTOR	
Q344			RT1N144M-T111	TRANSISTOR	
Q351,352			RT1N430M-T111	TRANSISTOR	
Q361,362			RT1N430M-T111	TRANSISTOR	
Q363			RT1P441M-T111	TRANSISTOR	
Q364			RT1N144M-T111	TRANSISTOR	
Q551			2SB1184(Q,R)	TRANSISTOR	
Q552			2SC4154T1(E,F	TRANSISTOR	
Q553			RT1N144M-T111	TRANSISTOR	
Q573,574			RT1N441M-T111	TRANSISTOR	KE1
Q575			RT1N144M-T111	TRANSISTOR	KE1
Q576			MTM981400BF	FET	KE1
TH1			B59601A0085B0	THERMISTOR	
A201			X86-4270-11	FRONT-END UNIT	KR1X1
A201			X86-4272-70	FRONT-END UNIT	E1M1M2
VIDEO UNIT (X35-515x-xx)					
D571,572			B30-1780-05	LED(1608_PG)	
C101			CK73FB1E475K	CHIP C 4.7UF K	
C102			CK73GB1E105K	CHIP C 1.0UF K	
C103-106			CK73HB1A104K	CHIP C 0.10UF K	
C111-115			CK73EB1E106K	CHIP C 10UF K	
C116			CK73GB1H104K	CHIP C 0.10UF K	
C117			CK73HB1E103K	CHIP C 0.010UF K	
C118			CC73GCH1H471J	CHIP C 470PF J	
C120			CK73GB1H103K	CHIP C 0.010UF K	
C121			CK73GB1H104K	CHIP C 0.10UF K	
C122-125			CK73EB1H475K	CHIP C 4.7UF K	
C131			CC73HCH1H560J	CHIP C 56PF J	
C132			CK73HB0J224K	CHIP C 0.22UF K	
C133			CC73HCH1H101J	CHIP C 100PF J	
C134			CK73EB1E105K	CHIP C 1.0UF K	
C135			CK73HB0J105K	CHIP C 1.0UF K	
C136			C93-1509-05	CHIP C 100PF F	
C137			CK73GB1H104K	CHIP C 0.10UF K	
C138			CK73HB1E103K	CHIP C 0.010UF K	
C139			CK73HB0J105K	CHIP C 1.0UF K	
C201			CK73GB0J106M	CHIP C 10UF M	
C202			CK73HB1H222K	CHIP C 2200PF K	
C203			CK73HB1A104K	CHIP C 0.10UF K	
C204			CC73HCH1H070D	CHIP C 7.0PF D	
C205			CC73HCH1H150J	CHIP C 15PF J	
C206-208			CK73HB1A104K	CHIP C 0.10UF K	
C209,210			CK73HB0J105K	CHIP C 1.0UF K	
C211			CK73GB0J106M	CHIP C 10UF M	
C212			CK73HB1H222K	CHIP C 2200PF K	
C221			CK73HB0J105K	CHIP C 1.0UF K	
C222			CK73HB0J474K	CHIP C 0.47UF K	
C223,224			CK73HB0J105K	CHIP C 1.0UF K	
C225,226			CK73HB1A104K	CHIP C 0.10UF K	
C227			CK73HB1H102K	CHIP C 1000PF K	
C228			CC73GCH1H101J	CHIP C 100PF J	
C229			CC73HCH1H101J	CHIP C 100PF J	
C231			CK73GB0J106M	CHIP C 10UF M	
C232-234			CK73HB1A104K	CHIP C 0.10UF K	
C301,302			CK73HB1A104K	CHIP C 0.10UF K	
C303			CK73GB0J475K	CHIP C 4.7UF K	
C304,305			CK73HB1A104K	CHIP C 0.10UF K	
C306,307			CK73HB1E103K	CHIP C 0.010UF K	
C308			CK73HB1A104K	CHIP C 0.10UF K	
C309			CK73HB1E103K	CHIP C 0.010UF K	
C310			CK73HB1A104K	CHIP C 0.10UF K	
C311			CK73HB1E103K	CHIP C 0.010UF K	
C312			CK73HB1A104K	CHIP C 0.10UF K	
C319			CK73HB1A104K	CHIP C 0.10UF K	
C320			CK73GB0J106M	CHIP C 10UF M	
C329,330			CK73HB1A104K	CHIP C 0.10UF K	
C333			CK73GB0J106M	CHIP C 10UF M	
C334			CK73HB1A104K	CHIP C 0.10UF K	
C335			CK73GB0J106M	CHIP C 10UF M	
C336-339			CK73HB1A104K	CHIP C 0.10UF K	
C340-342			CK73HB1E103K	CHIP C 0.010UF K	
C343			CK73GB0J106M	CHIP C 10UF M	
C344,345			CK73HB1A104K	CHIP C 0.10UF K	
C350			CK73HB1A104K	CHIP C 0.10UF K	
C353			CK73HB1A104K	CHIP C 0.10UF K	
C354			CC73HCH1H220J	CHIP C 22PF J	
C355-358			CK73HB1A104K	CHIP C 0.10UF K	
C359			CK73GB0J106M	CHIP C 10UF M	
C360,361			CK73HB1A104K	CHIP C 0.10UF K	
C362			CC73HCH1H070D	CHIP C 7.0PF D	
C363			CC73HCH1H120J	CHIP C 12PF J	
C364			CK73HB1A104K	CHIP C 0.10UF K	
C371,372			CK73HB0J105K	CHIP C 1.0UF K	
C373,374			CK73GB0J106M	CHIP C 10UF M	
C375,376			CK73HB0J105K	CHIP C 1.0UF K	
C377			CK73FB0J226M	CHIP C 22UF M	
C378,379			CK73HB0J105K	CHIP C 1.0UF K	
C382			CK73HB1A104K	CHIP C 0.10UF K	
C383			CK73GB0J106M	CHIP C 10UF M	
C384			CK73HB1A104K	CHIP C 0.10UF K	
C385			CK73GB0J106M	CHIP C 10UF M	
C386			CK73HB1E103K	CHIP C 0.010UF K	
C387			CK73HB1A104K	CHIP C 0.10UF K	
C401-403			CK73GB0J106M	CHIP C 10UF M	
C404			CK73HB1E103K	CHIP C 0.010UF K	
C405			CK73HB1H102K	CHIP C 1000PF K	
C406			CC73HCH1H151J	CHIP C 150PF J	
C407			CK73GB1C224K	CHIP C 0.22UF K	
C409			CK73HB1A104K	CHIP C 0.10UF K	
C411,412			CK73FB1C106K	CHIP C 10UF K	
C414			CK73GB1H104K	CHIP C 0.10UF K	
C415,416			CK73FB1C106K	CHIP C 10UF K	

K: DNX7180 (North America) **R1**: DNX7480BT (Latin America)
E1: DNX7280BT (Europe) **X1**: DNX7380BT (Australia)
M1: DNX7380BT **M2**: DNX7380BTM (Other Areas)

⚠ indicates safety critical components.

PARTS LIST

VIDEO UNIT (X35-515x-xx)

Ref.No.	Add	New	Parts No.	Description	Destination
C417			CK73FB1E475K	CHIP C 4.7UF K	
C418			CK73FB1C106K	CHIP C 10UF K	
C421			CK73HB1E103K	CHIP C 0.010UF K	
C422			CK73GB1H104K	CHIP C 0.10UF K	
C423			CK73FB1C106K	CHIP C 10UF K	
C424			CK73GB1H104K	CHIP C 0.10UF K	
C429			CK73GB1H104K	CHIP C 0.10UF K	
C430			CK73GB1A105K	CHIP C 1.0UF K	
C441			CK73GB1E154K	CHIP C 0.15UF K	
C442			CK73GB1H103K	CHIP C 0.010UF K	
C443			CK73GB1H104K	CHIP C 0.10UF K	
C444			CK73EB1E106K	CHIP C 10UF K	
C445,446			CK73GB0J106M	CHIP C 10UF M	
C447,448			CK73FB1E475K	CHIP C 4.7UF K	
C449			CK73FB1C106K	CHIP C 10UF K	
C451,452			CK73HB0J105K	CHIP C 1.0UF K	
C461			CK73HB1H472K	CHIP C 4700PF K	
C501			CK73HB0J105K	CHIP C 1.0UF K	
C502			CK73FB1E475K	CHIP C 4.7UF K	
C503			CK73GB1H104K	CHIP C 0.10UF K	
C504			CK73HB1E103K	CHIP C 0.010UF K	
C505			CK73FB1E475K	CHIP C 4.7UF K	
C506			CK73HB1A104K	CHIP C 0.10UF K	
C507			CK73HB1E103K	CHIP C 0.010UF K	
C508-510			CK73GB0J106M	CHIP C 10UF M	
C511			CK73HB1A104K	CHIP C 0.10UF K	
C512			CK73HB1E103K	CHIP C 0.010UF K	
C513-517			CK73FB1C106K	CHIP C 10UF K	
C518			CK73GB1H104K	CHIP C 0.10UF K	
C519			CK73HB1E103K	CHIP C 0.010UF K	
C534-547			CK73HB1H102K	CHIP C 1000PF K	
C551-554			CK73HB1A104K	CHIP C 0.10UF K	
C555			CK73FB0J226M	CHIP C 22UF M	
C556,557			CK73HB1H102K	CHIP C 1000PF K	
C558			CK73GB0J106M	CHIP C 10UF M	
C561,562			CK73HB1A104K	CHIP C 0.10UF K	
C563			CK73GB1H103K	CHIP C 0.010UF K	
C565,566			CK73GB0J475K	CHIP C 4.7UF K	
C603			CK73GB0J106M	CHIP C 10UF M	
CN101			E41-2615-05	FLAT CABLE CONNECTOR	
CN102			E41-2985-05	FLAT CABLE CONNECTOR	
CN201			E41-2248-05	PIN ASSY	
CN501			E41-2812-05	FLAT CABLE CONNECTOR	
CN502			E41-3144-05	FLAT CABLE CONNECTOR	
CN601			E41-2276-05	FLAT CABLE CONNECTOR	
F401			F53-0280-05	FUSE	
L101			L33-2583-05	CHOKE COIL	
L102			L33-2607-05	CHOKE COIL	
L201,202			L92-0332-05	CHIP FERRITE	
L203			L92-0319-05	CHIP FERRITE	
L301-303			L92-0180-05	CHIP FERRITE	
L304			L92-0373-05	CHIP FERRITE	
L305-310			L92-0180-05	CHIP FERRITE	

Ref.No.	Add	New	Parts No.	Description	Destination
L311			L41-1001-62	SMALL FIXED INDUCTOR(10U)	
L320			L41-2281-15	SMALL FIXED INDUCTOR(220NH)	
L321-338			L92-0172-05	CHIP FERRITE	
L401			L33-2583-05	CHOKE COIL	
L402			L33-2611-05	CHOKE COIL	
L403			L33-2619-05	SMALL FIXED INDUCTOR	
L404-406			L41-1001-62	SMALL FIXED INDUCTOR(10U)	
L501-503			L92-0180-05	CHIP FERRITE	
L504			L92-0668-05	CHIP FERRITE	
L505			L92-0180-05	CHIP FERRITE	
L506			L92-0668-05	CHIP FERRITE	
L551,552			L92-0180-05	CHIP FERRITE	
L601			L41-1001-62	SMALL FIXED INDUCTOR(10U)	
X201			L77-3846-05	CRYSTAL RESONATOR(12MHZ)	
X301			L77-3850-05	CRYSTAL RESONATOR(12MHZ 15PPM	
CP301			RK74HB1J101J	CHIP-COM 100 J 1/16W	
CP302-305			RK74HB1J121J	CHIP-COM 120 J 1/16W	
R101			RK73FB2B302J	CHIP R 3.0K J 1/8W	
R102,103			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R104			RK73FB2B392J	CHIP R 3.9K J 1/8W	
R106			RK73HB1J473J	CHIP R 47K J 1/16W	
R107			RK73HH1J123D	CHIP R 12K D 1/16W	
R108			RK73HH1J103D	CHIP R 10K D 1/16W	
R109,110			RK73HB1J473J	CHIP R 47K J 1/16W	
R112-115			RK73HB1J473J	CHIP R 47K J 1/16W	
R116			RK73HB1J101J	CHIP R 100 J 1/16W	
R118-120			RK73HB1J473J	CHIP R 47K J 1/16W	
R131			RK73HH1J823D	CHIP R 82K D 1/16W	
R132			RK73HH1J914D	CHIP R 910K D 1/16W	
R133			RK73HH1J363D	CHIP R 36K D 1/16W	
R134			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R135			RK73HB1J104J	CHIP R 100K J 1/16W	
R136,137			RK73HB1J473J	CHIP R 47K J 1/16W	
R138			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R139			RK73HH1J393D	CHIP R 39K D 1/16W	
R140			RK73HB1J473J	CHIP R 47K J 1/16W	
R141			RK73HB1J121J	CHIP R 120 J 1/16W	
R142			RK73EB2E100J	CHIP R 10 J 1/4W	
R151			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R152			RK73HB1J101J	CHIP R 100 J 1/16W	
R153,154			RK73HB1J470J	CHIP R 47 J 1/16W	
R155			RK73HB1J101J	CHIP R 100 J 1/16W	E1M1M2
R155			RK73HB1J101J	CHIP R 100 J 1/16W	X1
R156,157			RK73HB1J100J	CHIP R 10 J 1/16W	
R158			RK73HB1J101J	CHIP R 100 J 1/16W	E1M1M2
R158			RK73HB1J101J	CHIP R 100 J 1/16W	X1
R158,159			RK73HB1J101J	CHIP R 100 J 1/16W	KR1
R160,161			RK73HB1J100J	CHIP R 10 J 1/16W	
R201,202			RK73HB1J512J	CHIP R 5.1K J 1/16W	
R204			RK73HB1J101J	CHIP R 100 J 1/16W	
R205			RK73HB1J154J	CHIP R 150K J 1/16W	
R206			RK73HB1J101J	CHIP R 100 J 1/16W	
R207			RK73HB1J222J	CHIP R 2.2K J 1/16W	
R209			RK73HB1J103J	CHIP R 10K J 1/16W	
R210-214			RK73HB1J101J	CHIP R 100 J 1/16W	

K: DNX7180 (North America) **R1**: DNX7480BT (Latin America)
E1: DNX7280BT (Europe) **X1**: DNX7380BT (Australia)
M1: DNX7380BT **M2**: DNX7380BTM (Other Areas)

⚠ indicates safety critical components.

PARTS LIST

VIDEO UNIT (X35-515x-xx)

Ref.No.	Add	New	Parts No.	Description	Destination
R215			RK73HB1J473J	CHIP R 47K J 1/16W	
R216			RK73HB1J101J	CHIP R 100 J 1/16W	
R217			RK73HB1J473J	CHIP R 47K J 1/16W	
R218			RK73HB1J101J	CHIP R 100 J 1/16W	
R219			RK73HB1J473J	CHIP R 47K J 1/16W	
R220			RK73HB1J101J	CHIP R 100 J 1/16W	
R221,222			RK73HB1J103J	CHIP R 10K J 1/16W	
R223,224			RK73HB1J100J	CHIP R 10 J 1/16W	
R225			RK73HB1J473J	CHIP R 47K J 1/16W	
R226			RK73HB1J100J	CHIP R 10 J 1/16W	
R227			RK73HB1J473J	CHIP R 47K J 1/16W	
R228			RK73HB1J101J	CHIP R 100 J 1/16W	
R229			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R230			RK73HB1J473J	CHIP R 47K J 1/16W	KR1
R230,231			RK73HB1J473J	CHIP R 47K J 1/16W	E1M1M2
R230,231			RK73HB1J473J	CHIP R 47K J 1/16W	X1
R232			RK73HB1J473J	CHIP R 47K J 1/16W	KR1
R234,235			RK73HB1J473J	CHIP R 47K J 1/16W	
R237			RK73HB1J101J	CHIP R 100 J 1/16W	
R238			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R239			RK73HB1J473J	CHIP R 47K J 1/16W	
R240-242			RK73HB1J101J	CHIP R 100 J 1/16W	
R243			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R244			RK73HB1J101J	CHIP R 100 J 1/16W	
R245			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R246,247			RK73HB1J101J	CHIP R 100 J 1/16W	
R248			RK73HB1J473J	CHIP R 47K J 1/16W	
R249,250			RK73HB1J101J	CHIP R 100 J 1/16W	
R251			RK73HB1J473J	CHIP R 47K J 1/16W	
R252			RK73HB1J470J	CHIP R 47 J 1/16W	
R253,254			RK73HB1J101J	CHIP R 100 J 1/16W	
R255			RK73HB1J104J	CHIP R 100K J 1/16W	
R256,257			RK73HB1J473J	CHIP R 47K J 1/16W	
R258			RK73HB1J101J	CHIP R 100 J 1/16W	
R259			RK73HB1J123J	CHIP R 12K J 1/16W	
R260-263			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R264,265			RK73HB1J101J	CHIP R 100 J 1/16W	
R266			RK73HB1J473J	CHIP R 47K J 1/16W	
R271			RK73HB1J101J	CHIP R 100 J 1/16W	
R272			RK73HB1J473J	CHIP R 47K J 1/16W	
R273			RK73HB1J153J	CHIP R 15K J 1/16W	
R274			RK73HB1J101J	CHIP R 100 J 1/16W	
R275			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R276			RK73HB1J471J	CHIP R 470 J 1/16W	
R277			RK73HB1J204J	CHIP R 200K J 1/16W	
R278			RK73HB1J473J	CHIP R 47K J 1/16W	
R279			RK73HB1J101J	CHIP R 100 J 1/16W	
R280,281			RK73HB1J103J	CHIP R 10K J 1/16W	
R282			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R283			RK73HB1J473J	CHIP R 47K J 1/16W	
R286,287			RK73HB1J473J	CHIP R 47K J 1/16W	
R288			RK73HB1J223J	CHIP R 22K J 1/16W	
R292			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R293,294			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R295			RK73HB1J103J	CHIP R 10K J 1/16W	
R296			RK73HB1J473J	CHIP R 47K J 1/16W	
R297			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R301			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R302			RK73HH1J470D	CHIP R 47 D 1/16W	
R303			RK73HH1J181D	CHIP R 180 D 1/16W	
R304			RK73HH1J470D	CHIP R 47 D 1/16W	
R305			RK73HH1J181D	CHIP R 180 D 1/16W	
R306,307			RK73HH1J102D	CHIP R 1.0K D 1/16W	
R308			RK73HH1J470D	CHIP R 47 D 1/16W	
R309			RK73HH1J181D	CHIP R 180 D 1/16W	
R310			RK73HH1J220D	CHIP R 22 D 1/16W	
R311			RK73HH1J241D	CHIP R 240 D 1/16W	
R312			RK73HH1J822D	CHIP R 8.2K D 1/16W	
R313			RK73HH1J472D	CHIP R 4.7K D 1/16W	
R314			RK73HB1J473J	CHIP R 47K J 1/16W	
R315			RK73HH1J752D	CHIP R 7.5K D 1/16W	
R316			RK73HH1J153D	CHIP R 15K D 1/16W	
R317			RK73HB1J473J	CHIP R 47K J 1/16W	
R318			RK73HH1J103D	CHIP R 10K D 1/16W	
R319,320			RK73HB1J473J	CHIP R 47K J 1/16W	
R321-323			RK73HB1J101J	CHIP R 100 J 1/16W	
R324			RK73HB1J473J	CHIP R 47K J 1/16W	
R325,326			RK73HB1J101J	CHIP R 100 J 1/16W	
R328-332			RK73HB1J101J	CHIP R 100 J 1/16W	
R333,334			RK73HB1J473J	CHIP R 47K J 1/16W	
R335			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R336,337			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R340			RK73HB1J101J	CHIP R 100 J 1/16W	
R341			RK73HB1J103J	CHIP R 10K J 1/16W	
R342			RK73HB1J470J	CHIP R 47 J 1/16W	
R343,344			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R345-347			RK73HB1J101J	CHIP R 100 J 1/16W	
R348			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R349			RK73HB1J101J	CHIP R 100 J 1/16W	
R350			RK73HB1J270J	CHIP R 27 J 1/16W	
R351			RK73HB1J100J	CHIP R 10 J 1/16W	
R352			RK73HB1J121J	CHIP R 120 J 1/16W	
R353			RK73HB1J470J	CHIP R 47 J 1/16W	
R354			RK73HB1J101J	CHIP R 100 J 1/16W	
R355,356			RK73HB1J121J	CHIP R 120 J 1/16W	
R357			RK73HB1J470J	CHIP R 47 J 1/16W	
R358			RK73HB1J121J	CHIP R 120 J 1/16W	
R359			RK73HB1J470J	CHIP R 47 J 1/16W	
R360			RK73HB1J103J	CHIP R 10K J 1/16W	
R361			RK73HB1J101J	CHIP R 100 J 1/16W	
R362			RK73HB1J222J	CHIP R 2.2K J 1/16W	
R363			RK73HB1J105J	CHIP R 1.0M J 1/16W	
R371,372			RK73HB1J103J	CHIP R 10K J 1/16W	
R374			RK73HB1J101J	CHIP R 100 J 1/16W	
R375			RK73HB1J103J	CHIP R 10K J 1/16W	
R376			RK73HB1J471J	CHIP R 470 J 1/16W	
R377			RK73HB1J104J	CHIP R 100K J 1/16W	
R381			RK73HB1J101J	CHIP R 100 J 1/16W	
R382			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R383			RK73HB1J330J	CHIP R 33 J 1/16W	

K: DNX7180 (North America) **R1**: DNX7480BT (Latin America)
E1: DNX7280BT (Europe) **X1**: DNX7380BT (Australia)
M1: DNX7380BT **M2**: DNX7380BTM (Other Areas)

⚠ indicates safety critical components.

PARTS LIST

VIDEO UNIT (X35-515x-xx)

Ref.No.	Add	New	Parts No.	Description	Destination
R384			RK73HB1J101J	CHIP R 100 J 1/16W	
R385,386			RK73HB1J330J	CHIP R 33 J 1/16W	
R387,388			RK73HB1J473J	CHIP R 47K J 1/16W	
R391			RK73HH1J123D	CHIP R 12K D 1/16W	
R392			RK73HH1J912D	CHIP R 9.1K D 1/16W	
R393			RK73HH1J472D	CHIP R 4.7K D 1/16W	
R394			RK73HH1J123D	CHIP R 12K D 1/16W	
R395			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R396,397			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R401			RK73HB1J752J	CHIP R 7.5K J 1/16W	
R403			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R404			RK73HH1J104D	CHIP R 100K D 1/16W	
R405			RK73HH1J133D	CHIP R 13K D 1/16W	
R406			RK73HH1J114D	CHIP R 110K D 1/16W	
R407			RK73HH1J822D	CHIP R 8.2K D 1/16W	
R411			RK73HB1J473J	CHIP R 47K J 1/16W	
R412			RK73HB1J302J	CHIP R 3.0K J 1/16W	
R413			RK73HB1J272J	CHIP R 2.7K J 1/16W	
R414			RK73HB1J332J	CHIP R 3.3K J 1/16W	
R415			RK73HB1J203J	CHIP R 20K J 1/16W	
R416			RK73HH1J203D	CHIP R 20K D 1/16W	
R417			RK73HH1J103D	CHIP R 10K D 1/16W	
R418			RK73HH1J122D	CHIP R 1.2K D 1/16W	
R421			RK73FB2B122J	CHIP R 1.2K J 1/8W	
R422			RK73HB1J103J	CHIP R 10K J 1/16W	
R423			RK73HB1J473J	CHIP R 47K J 1/16W	
R424			RK73HB1J104J	CHIP R 100K J 1/16W	
R425			RK73HB1J103J	CHIP R 10K J 1/16W	
R426			RK73HH1J822D	CHIP R 8.2K D 1/16W	
R427			RK73HH1J113D	CHIP R 11K D 1/16W	
R428			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R429			RK73HB1J104J	CHIP R 100K J 1/16W	
R430			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R431			RK73HB1J101J	CHIP R 100 J 1/16W	
R432			RK73HB1J103J	CHIP R 10K J 1/16W	
R433			RK73HB1J101J	CHIP R 100 J 1/16W	
R434			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R435			RK73HB1J103J	CHIP R 10K J 1/16W	
R436			RK73GB2A822J	CHIP R 8.2K J 1/10W	
R451			RK73HH1J133D	CHIP R 13K D 1/16W	
R452			RK73HH1J471D	CHIP R 470 D 1/16W	
R453			RK73HH1J103D	CHIP R 10K D 1/16W	
R454-456			RK73HB1J222J	CHIP R 2.2K J 1/16W	
R457			RK73HH1J153D	CHIP R 15K D 1/16W	
R458			RK73HH1J622D	CHIP R 6.2K D 1/16W	
R460,461			RK73HB1J473J	CHIP R 47K J 1/16W	
R462			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R463			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R464			RK73HB1J473J	CHIP R 47K J 1/16W	
R465			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R466			RK73HB1J153J	CHIP R 15K J 1/16W	
R467			RK73HB1J473J	CHIP R 47K J 1/16W	
R501			RK73HB1J101J	CHIP R 100 J 1/16W	
R502			RK73EB2E392J	CHIP R 3.9K J 1/4W	
R504,505			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R507			RK73EB2E102J	CHIP R 1.0K J 1/4W	
R508			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R510			RK73HH1J620D	CHIP R 62 D 1/16W	
R511			RK73HH1J161D	CHIP R 160 D 1/16W	
R512			RK73HH1J430D	CHIP R 43 D 1/16W	
R513			RK73HH1J390D	CHIP R 39 D 1/16W	
R514			RK73HH1J101D	CHIP R 100 D 1/16W	
R515			RK73HH1J161D	CHIP R 160 D 1/16W	
R516			RK73HH1J101D	CHIP R 100 D 1/16W	
R517			RK73HH1J390D	CHIP R 39 D 1/16W	
R518			RK73HH1J430D	CHIP R 43 D 1/16W	
R519			RK73HH1J161D	CHIP R 160 D 1/16W	
R520			RK73HH1J820D	CHIP R 82 D 1/16W	
R521			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R551			RK73GB2A221J	CHIP R 220 J 1/10W	
R552			RK73GB2A101J	CHIP R 100 J 1/10W	
R553,554			RK73GB2A100J	CHIP R 10 J 1/10W	
R556			RK73GB2A100J	CHIP R 10 J 1/10W	
R558			RK73GB2A100J	CHIP R 10 J 1/10W	
R559			RK73GB2A103J	CHIP R 10K J 1/10W	
R560			RK73GB2A431J	CHIP R 430 J 1/10W	
R561			RK73GB2A100J	CHIP R 10 J 1/10W	
R562			RK73GB2A101J	CHIP R 100 J 1/10W	
R563			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R564			RK73HB1J473J	CHIP R 47K J 1/16W	
R565			RK73GH2A331D	CHIP R 330 D 1/10W	
R566			RK73GH2A361D	CHIP R 360 D 1/10W	
R567			RK73HB1J473J	CHIP R 47K J 1/16W	
R568			RK73GH2A331D	CHIP R 330 D 1/10W	
R569			RK73GH2A361D	CHIP R 360 D 1/10W	
R570			RK73HB1J473J	CHIP R 47K J 1/16W	
R571			RK73GH2A331D	CHIP R 330 D 1/10W	
R572			RK73GH2A361D	CHIP R 360 D 1/10W	
R573			RK73HB1J473J	CHIP R 47K J 1/16W	
R574			RK73GH2A331D	CHIP R 330 D 1/10W	
R575			RK73GH2A361D	CHIP R 360 D 1/10W	
R577			RK73HB1J100J	CHIP R 10 J 1/16W	KR1
R578			RK73HB1J100J	CHIP R 10 J 1/16W	E1M1M2
R578			RK73HB1J100J	CHIP R 10 J 1/16W	X1
R580			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R581-587			RK73GB2A821J	CHIP R 820 J 1/10W	
R589			RK73GB2A821J	CHIP R 820 J 1/10W	
R590			RK73HH1J331D	CHIP R 330 D 1/16W	
R591			RK73HH1J361D	CHIP R 360 D 1/16W	
R592			RK73HH1J331D	CHIP R 330 D 1/16W	
R593			RK73HH1J361D	CHIP R 360 D 1/16W	
R594			RK73HH1J331D	CHIP R 330 D 1/16W	
R595			RK73HH1J361D	CHIP R 360 D 1/16W	
R596			RK73HH1J331D	CHIP R 330 D 1/16W	
R597			RK73HH1J361D	CHIP R 360 D 1/16W	
R601			RK73GH2A220D	CHIP R 22 D 1/10W	
R602			RK73GH2A100D	CHIP R 10 D 1/10W	
R603			RK73GH2A220D	CHIP R 22 D 1/10W	
R604			RK73GH2A100D	CHIP R 10 D 1/10W	
R605-608			RK73GB2A100J	CHIP R 10 J 1/10W	

K: DNX7180 (North America) **R1**: DNX7480BT (Latin America)
E1: DNX7280BT (Europe) **X1**: DNX7380BT (Australia)
M1: DNX7380BT **M2**: DNX7380BTM (Other Areas)

⚠ indicates safety critical components.

PARTS LIST

The IC101 and IC401 in the VIDEO UNIT (X35-515x-xx) are not replaceable components. When these ICs are defective, replace the whole VIDEO UNIT (X35-515x-xx) .

VIDEO UNIT (X35-515x-xx)

Ref.No.	Add	New	Parts No.	Description	Destination
R611-614			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R615,616			RK73HB1J473J	CHIP R 47K J 1/16W	
R619,620			RK73HB1J222J	CHIP R 2.2K J 1/16W	
R621,622			RK73HB1J473J	CHIP R 47K J 1/16W	
R623,624			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R625			RK73HH1J473D	CHIP R 47K D 1/16W	
R626			RK73HH1J223D	CHIP R 22K D 1/16W	
R628			RK73HH1J102D	CHIP R 1.0K D 1/16W	
R629			RK73GB2A224J	CHIP R 220K J 1/10W	
R701			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R706,707			RK73GB2A000J	CHIP R 0.0 J 1/10W	
S101			S68-0929-05	PUSH SWITCH	E1M1M2
S101			S68-0929-05	PUSH SWITCH	X1
D102,103			SJPB-L4	DIODE	
D151-155			VR105C3R3BAA	VARISTOR	
D200-202			RB521S-30	DIODE	
D302			RB521S-30	DIODE	
D401-403			RB162M-40	DIODE	
D404			RB162M-60	DIODE	
D552			VR1005AAA270	VARISTOR	
D555-558			VR1005AAA270	VARISTOR	
D559,560			VR1005DDA080	VARISTOR	
D562,563			VR1005DDA080	VARISTOR	
D601-604			VR1005AAA270	VARISTOR	
D704			MC2850-T111	DIODE	
D707			MC2850-T111	DIODE	
IC101		*	-	ANALOGUE IC	
IC102			TC7WH08FK-F	MOS-IC	
IC103			TC7SH17FU-F	MOS-IC	
IC104			TC7SH08FU-F	MOS-IC	
IC105			TC7SH32FU-F	MOS-IC	
IC106			XC6216B332M-G	ANALOGUE IC	
IC201			W05-1701-00	MICROCONTROLLER IC	
IC202			MFI341S2162	MICROPROCESSOR IC	
IC203			XC6120N422N-G	MOS-IC	
IC204			XC6223B331P-G	ANALOGUE IC	
IC205			TC7WH34FK-F	MOS-IC	
IC301			MST7912KC-ALF	MOS-IC	
IC302			W05-1703-00	ROM IC	
IC303			TC7SH08FU-F	MOS-IC	
IC304			NJM2107F-ZB	ANALOGUE IC	
IC305			RP131S331D-FE	ANALOGUE IC	
IC306,307			XC6223B181P-G	ANALOGUE IC	
IC308			TC7SH08FU-F	MOS-IC	
IC401		*	-	ANALOGUE IC	
IC402			XC6213B332N-G	ANALOGUE IC	
IC500			TC7WH04FK-F	MOS-IC	
IC552			TC7SH04FU-F	MOS-IC	
Q101			TPCF8104-F	FET	
Q102			CPH3105-E	TRANSISTOR	
Q103			2SC5383-T1(F)	TRANSISTOR	
Q105			2SC4154T1(E,F	TRANSISTOR	
Q106			ISA1602AM1(F)	TRANSISTOR	
Q107			RT1N144U-T111	TRANSISTOR	
Q201			TPCF8104-F	FET	
Q202			2SC4154T1(E,F	TRANSISTOR	
Q203			RT1P144U-T111	TRANSISTOR	
Q204			ISA1602AM1(F)	TRANSISTOR	
Q205-209			RT1N144U-T111	TRANSISTOR	
Q210			2SC4154T1(E,F	TRANSISTOR	
Q211			RT1N144U-T111	TRANSISTOR	
Q303			ISA1602AM1(F)	TRANSISTOR	
Q304			2SC4154T1(E,F	TRANSISTOR	
Q311			2SC4154T1(E,F	TRANSISTOR	
Q312			RT1P144U-T111	TRANSISTOR	
Q313			ISA1602AM1(F)	TRANSISTOR	
Q314			TPCF8104-F	FET	
Q401			2SC4154T1(E,F	TRANSISTOR	
Q402			2SA1577	TRANSISTOR	
Q403			ISA1602AM1(F)	TRANSISTOR	
Q404			2SC4154T1(E,F	TRANSISTOR	
Q405			RT1N144U-T111	TRANSISTOR	
Q406			RT1P144U-T111	TRANSISTOR	
Q407			RT1N144U-T111	TRANSISTOR	
Q410			2SC4154T1(E,F	TRANSISTOR	
Q411			ISA1602AM1(F)	TRANSISTOR	
Q414			RT1N144U-T111	TRANSISTOR	
Q415			RT1P144U-T111	TRANSISTOR	
Q416			ISA1602AM1(F)	TRANSISTOR	
Q417			2SA1577	TRANSISTOR	
Q418			2SC4154T1(E,F	TRANSISTOR	
Q419			RT1P144U-T111	TRANSISTOR	
Q420			2SC4154T1(E,F	TRANSISTOR	
Q451,452			2SC4154T1(E,F	TRANSISTOR	
Q453,454			ISA1602AM1(F)	TRANSISTOR	
Q456,457			RT1N144U-T111	TRANSISTOR	
Q458			2SC4154T1(E,F	TRANSISTOR	
Q466			2SC4154T1(E,F	TRANSISTOR	
Q510			2SC4154T1(E,F	TRANSISTOR	
Q551-554			2SC4154T1(E,F	TRANSISTOR	
Q555			RT1N144U-T111	TRANSISTOR	E1M1M2
Q555			RT1N144U-T111	TRANSISTOR	X1
Q556			RT1P144U-T111	TRANSISTOR	E1M1M2
Q556			RT1P144U-T111	TRANSISTOR	X1
Q557-559			2SC4154T1(E,F	TRANSISTOR	
Q601,602			2SC5585	TRANSISTOR	
Q603,604			2SA2018	TRANSISTOR	
Q605			RT1P144M-T111	TRANSISTOR	
Q606			2SC4154T1(E,F	TRANSISTOR	

DVD UNIT (X37-1300-00)

C5 -7			CK73HB1E103K	CHIP C 0.010UF K	
C11			CK73HB1E103K	CHIP C 0.010UF K	
C15			CK73HB1A104K	CHIP C 0.10UF K	
C16			CK73FB0J106K	CHIP C 10UF K	
C17			CK73GB0J475K	CHIP C 4.7UF K	
C72			CK73HB1A104K	CHIP C 0.10UF K	
C100			CK73HB1A104K	CHIP C 0.10UF K	

K: DNX7180 (North America) **R1**: DNX7480BT (Latin America)
E1: DNX7280BT (Europe) **X1**: DNX7380BT (Australia)
M1: DNX7380BT **M2**: DNX7380BTM (Other Areas)

⚠ indicates safety critical components.

PARTS LIST

DVD UNIT (X37-1300-00)

Ref.No.	Add	New	Parts No.	Description	Destination
C102			CK73HB1A104K	CHIP C 0.10UF K	
C106			CK73HB1A104K	CHIP C 0.10UF K	
C109			CK73HB1A104K	CHIP C 0.10UF K	
C111			CK73HB1C333K	CHIP C 0.033UF K	
C113			CK73HB1A104K	CHIP C 0.10UF K	
C114			CK73GB1H562K	CHIP C 5600PF K	
C115			CK73HB1C183K	CHIP C 0.018UF K	
C117			CK73HB1A104K	CHIP C 0.10UF K	
C118			CK73HB0J105K	CHIP C 1.0UF K	
C120,121			CK73HB1A104K	CHIP C 0.10UF K	
C122			CK73GB0J475K	CHIP C 4.7UF K	
C126-129			CK73HB1A104K	CHIP C 0.10UF K	
C130-133			CC73HCH1H151J	CHIP C 150PF J	
C134			CC73HCH1H102J	CHIP C 1000PF J	
C137,138			CK73HB0J105K	CHIP C 1.0UF K	
C143,144			CC73HCH1H100D	CHIP C 10PF D	
C145			CK73HB1A104K	CHIP C 0.10UF K	
C148			CK73HB1A104K	CHIP C 0.10UF K	
C153			CK73HB1A104K	CHIP C 0.10UF K	
C158			CK73HB1A104K	CHIP C 0.10UF K	
C200-203			CK73FB0J106K	CHIP C 10UF K	
C271			CC73HCH1H102J	CHIP C 1000PF J	
C272			CK73HB0J105K	CHIP C 1.0UF K	
C302			CK73FB0J106K	CHIP C 10UF K	
C434			CK73FB0J106K	CHIP C 10UF K	
C435			CK73HB1E103K	CHIP C 0.010UF K	
C443			CK73FB0J226M	CHIP C 22UF M	
C450			CK73HB1A104K	CHIP C 0.10UF K	
C454,455			CK73HB1A104K	CHIP C 0.10UF K	
C461			CK73HB1H472K	CHIP C 4700PF K	
C462			CK73HB1E103K	CHIP C 0.010UF K	
C467			CC73HCH1H121J	CHIP C 120PF J	
C468,469			CK73HB1A104K	CHIP C 0.10UF K	
C476			CC73HCH1H101J	CHIP C 100PF J	
C498			CK73FB0J226M	CHIP C 22UF M	
C510			CC73HCH1H102J	CHIP C 1000PF J	
C511			CK73GB0J475K	CHIP C 4.7UF K	
C521			CK73HB1A104K	CHIP C 0.10UF K	
C531-539			CK73HB1A104K	CHIP C 0.10UF K	
C541-546			CK73HB1A104K	CHIP C 0.10UF K	
C548,549			CK73HB1A104K	CHIP C 0.10UF K	
C551			CK73HB1A104K	CHIP C 0.10UF K	
C552			CK73FB0J226M	CHIP C 22UF M	
C553			CK73HB0J105K	CHIP C 1.0UF K	
C554			CK73FB0J106K	CHIP C 10UF K	
C557			CC73HCH1H680J	CHIP C 68PF J	
C558			CK73HB1A104K	CHIP C 0.10UF K	
C561			CK73HB0J105K	CHIP C 1.0UF K	
C562			CK73HB1A104K	CHIP C 0.10UF K	
C564,565			CK73HB1A104K	CHIP C 0.10UF K	
C566			CK73FB0J226M	CHIP C 22UF M	
C567			CK73HB0J105K	CHIP C 1.0UF K	
C805			CC73HCH1H102J	CHIP C 1000PF J	
C809,810			CC73HCH1H471J	CHIP C 470PF J	
C811,812			CC73HCH1H102J	CHIP C 1000PF J	
C813,814			CK73HB1H472K	CHIP C 4700PF K	
C815			CK73FB0J106K	CHIP C 10UF K	
C816-819			CC73HCH1H102J	CHIP C 1000PF J	
C820			CK73HB1A104K	CHIP C 0.10UF K	
C821,822			CC73HCH1H102J	CHIP C 1000PF J	
CN1			E41-2594-05	FLAT CABLE CONNECTOR	
CN3			E41-2596-05	FLAT CABLE CONNECTOR	
CN6			E41-2603-05	FLAT CABLE CONNECTOR	
L15			L33-2280-05	SMALL FIXED INDUCTOR	
X2			L77-3830-05	CRYSTAL RESONATOR(27MHZ)	
CP61			RK74HB1J103J	CHIP-COM 10K J 1/16W	
CP68			RK74HB1J470J	CHIP-COM 47 J 1/16W	
R2 -4			RK73HB1J103J	CHIP R 10K J 1/16W	
R10			RK73HB1J163J	CHIP R 16K J 1/16W	
R16			RK73HB1J103J	CHIP R 10K J 1/16W	
R17			RK73HB1J271J	CHIP R 270 J 1/16W	
R19			RK73HB1J301J	CHIP R 300 J 1/16W	
R21 ,22			RK73HB1J103J	CHIP R 10K J 1/16W	
R80			RK73HB1J220J	CHIP R 22 J 1/16W	
R81			RK73HB1J470J	CHIP R 47 J 1/16W	
R84 ,85			RK73HB1J202J	CHIP R 2.0K J 1/16W	
R86			RK73HB1J105J	CHIP R 1.0M J 1/16W	
R87			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R89			RK73HH1J303D	CHIP R 30K D 1/16W	
R90			RK73HB1J223J	CHIP R 22K J 1/16W	
R92			RK73HH1J123D	CHIP R 12K D 1/16W	
R94			RK73HH1J512D	CHIP R 5.1K D 1/16W	
R112,113			RK73HB1J101J	CHIP R 100 J 1/16W	
R116			RK73HB1J103J	CHIP R 10K J 1/16W	
R119			RK73HB1J103J	CHIP R 10K J 1/16W	
R150,151			RK73HB1J100J	CHIP R 10 J 1/16W	
R152,153			RK73HB1J471J	CHIP R 470 J 1/16W	
R154,155			RK73HB1J751J	CHIP R 750 J 1/16W	
R156,157			RK73HB1J560J	CHIP R 56 J 1/16W	
R158,159			RK73HB1J2R2J	CHIP R 2.2 J 1/16W	
R164,165			RK73HB1J101J	CHIP R 100 J 1/16W	
R200			RK73HH1J201D	CHIP R 200 D 1/16W	
R400,401			RK73HB1J470J	CHIP R 47 J 1/16W	
R409			RK73HB1J470J	CHIP R 47 J 1/16W	
R410,411			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R470			RK73HB1J103J	CHIP R 10K J 1/16W	
R475			RK73GB2A2R2J	CHIP R 2.2 J 1/10W	
R476			RK73GB2A4R7J	CHIP R 4.7 J 1/10W	
R478			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R481			RK73HH1J203D	CHIP R 20K D 1/16W	
R485,486			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R487			RK73HB1J103J	CHIP R 10K J 1/16W	
R497			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R501			RK73HB1J132J	CHIP R 1.3K J 1/16W	
R502			RK73HB1J333J	CHIP R 33K J 1/16W	
R503			RK73HB1J203J	CHIP R 20K J 1/16W	
R504			RK73HB1J242J	CHIP R 2.4K J 1/16W	
R505			RK73HB1J821J	CHIP R 820 J 1/16W	
R511,512			RK73HB1J103J	CHIP R 10K J 1/16W	

K: DNX7180 (North America) **R1**: DNX7480BT (Latin America)
E1: DNX7280BT (Europe) **X1**: DNX7380BT (Australia)
M1: DNX7380BT **M2**: DNX7380BTM (Other Areas)

⚠ indicates safety critical components.

PARTS LIST

DVD UNIT (X37-1300-00)

Ref.No.	Add	New	Parts No.	Description	Destination
R523,524			RK73HB1J4R7J	CHIP R 4.7 J 1/16W	
R588			RK73GB2A4R7J	CHIP R 4.7 J 1/10W	
R591			RK73HB1J820J	CHIP R 82 J 1/16W	
R615			RK73HB1J1R0J	CHIP R 1.0 J 1/16W	
R621			RK73HB1J103J	CHIP R 10K J 1/16W	
R622			RK73HB1J333J	CHIP R 33K J 1/16W	
R630			R92-3416-05	METAL GR 0.27 1/2W	
R631-634			RK73HB1J103J	CHIP R 10K J 1/16W	
R651			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R653			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R654-656			RK73HB1J330J	CHIP R 33 J 1/16W	
R659			RK73HB1J103J	CHIP R 10K J 1/16W	
R663,664			RK73HB1J101J	CHIP R 100 J 1/16W	
R665			RK73HB1J103J	CHIP R 10K J 1/16W	
R672			RK73HB1J101J	CHIP R 100 J 1/16W	
R673			RK73HB1J103J	CHIP R 10K J 1/16W	
R674			RK73HB1J101J	CHIP R 100 J 1/16W	
R676,677			RK73HB1J103J	CHIP R 10K J 1/16W	
R678			RK73HB1J101J	CHIP R 100 J 1/16W	
R688			RK73HH1J124D	CHIP R 120K D 1/16W	
R689			RK73HH1J274D	CHIP R 270K D 1/16W	
R694-696			RK73HB1J103J	CHIP R 10K J 1/16W	
R697			RK73HB1J153J	CHIP R 15K J 1/16W	
R698			RK73HB1J682J	CHIP R 6.8K J 1/16W	
R701			RK73HH1J202D	CHIP R 2.0K D 1/16W	
R703-706			RK73HB1J821J	CHIP R 820 J 1/16W	
R707			RK73HB1J103J	CHIP R 10K J 1/16W	
R712			RK73HB1J103J	CHIP R 10K J 1/16W	
R713			RK73HB1J822J	CHIP R 8.2K J 1/16W	
R715			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R716-718			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R803-805			RK73HH1J121D	CHIP R 120 D 1/16W	
R807,808			RK73HB1J123J	CHIP R 12K J 1/16W	
R809,810			RK73HB1J682J	CHIP R 6.8K J 1/16W	
R811,812			RK73HB1J122J	CHIP R 1.2K J 1/16W	
R813			RK73HB1J103J	CHIP R 10K J 1/16W	
R815,816		*	RK73HB1J221JH	CHIP R 220 J 1/16W	
R817,818		*	RK73HB1J471JH	CHIP R 470 J 1/16W	
R819-821			RK73HB1J101J	CHIP R 100 J 1/16W	
R823,824			RK73HB1J4R7J	CHIP R 4.7 J 1/16W	
S1			S68-0911-15	PUSH SWITCH	
S2			S68-0917-05	PUSH SWITCH	
IC1			MN2DS0016AA	MOS-IC	
IC5		*	-	ROM IC	
IC10			AN41250A-VB	ANALOGUE IC	
IC54		*	M12L1281687L	DRAM IC	
IC59			XC9223B082A1	MOS-IC	
IC61			AK4387ET	MOS-IC	
Q1 ,2			RT1P432U-T111	TRANSISTOR	
Q4			RT1P432U-T111	TRANSISTOR	
Q10 ,11			2SC5383-T1(F)	TRANSISTOR	
Q12 ,13			2SB1709	TRANSISTOR	
Q14 ,15			2SK3019	FET	
Q33 -36			2SA1774	TRANSISTOR	

K: DNX7180 (North America) **R1**: DNX7480BT (Latin America)
E1: DNX7280BT (Europe) **X1**: DNX7380BT (Australia)
M1: DNX7380BT **M2**: DNX7380BTM (Other Areas)

The IC5 in the DVD unit (X37-1300-00) are not replaceable components. When these ICs are defective, replace the whole DVD mechanism assembly (X92-6640-00).

Ref.No.	Add	New	Parts No.	Description	Destination
DIGITAL I/O UNIT (X88-2080-10)					
C10 -13			CK73HB1H102K	CHIP C 1000PF K	
C14			CK73HB1E103K	CHIP C 0.010UF K	
C15 ,16			CK73HB1H102K	CHIP C 1000PF K	
C17			CK73HB1E103K	CHIP C 0.010UF K	
C18 ,19			CK73HB1H102K	CHIP C 1000PF K	
C20 -26			CK73HB1E103K	CHIP C 0.010UF K	
C30 -33			CK73HB1H102K	CHIP C 1000PF K	
C34			CK73HB1E103K	CHIP C 0.010UF K	
C35 ,36			CK73HB1H102K	CHIP C 1000PF K	
C37			CK73HB1E103K	CHIP C 0.010UF K	
C38 ,39			CK73HB1H102K	CHIP C 1000PF K	
C40 -46			CK73HB1E103K	CHIP C 0.010UF K	
C47			CK73HB0J105K	CHIP C 1.0UF K	
C48			CK73GB0J106M	CHIP C 10UF M	
C50 -53			CK73HB1H102K	CHIP C 1000PF K	
C54			CK73HB1E103K	CHIP C 0.010UF K	
C55 ,56			CK73HB1H102K	CHIP C 1000PF K	
C57			CK73HB1E103K	CHIP C 0.010UF K	
C58 ,59			CK73HB1H102K	CHIP C 1000PF K	
C60 -66			CK73HB1E103K	CHIP C 0.010UF K	
C70 -73			CK73HB1H102K	CHIP C 1000PF K	
C74			CK73HB1E103K	CHIP C 0.010UF K	
C75 ,76			CK73HB1H102K	CHIP C 1000PF K	
C77			CK73HB1E103K	CHIP C 0.010UF K	
C78 ,79			CK73HB1H102K	CHIP C 1000PF K	
C80 -86			CK73HB1E103K	CHIP C 0.010UF K	
C87			CK73HB0J105K	CHIP C 1.0UF K	
C88			CK73GB0J106M	CHIP C 10UF M	
C100			CK73GB0J106M	CHIP C 10UF M	
C102			CK73GB0J106M	CHIP C 10UF M	
C103			CK73HB1A104K	CHIP C 0.10UF K	
C104			CK73GB0J106M	CHIP C 10UF M	
C108-111			CK73HB1A104K	CHIP C 0.10UF K	
C112			CK73HB1H102K	CHIP C 1000PF K	
C113,114			CK73HB1A104K	CHIP C 0.10UF K	
C115,116			CK73HB1H102K	CHIP C 1000PF K	
C117			CK73HB1A104K	CHIP C 0.10UF K	
C118,119			CK73HB1E103K	CHIP C 0.010UF K	
C120			CK73HB1H102K	CHIP C 1000PF K	
C121			CK73HB1A104K	CHIP C 0.10UF K	
C122			CK73HB1H102K	CHIP C 1000PF K	
C123,124			CK73HB1E103K	CHIP C 0.010UF K	
C125			CK73HB1A104K	CHIP C 0.10UF K	
C126,127			CK73HB1H102K	CHIP C 1000PF K	
C128			CK73HB1A104K	CHIP C 0.10UF K	
C129-131			CK73HB1E103K	CHIP C 0.010UF K	
C132			CK73HB1A104K	CHIP C 0.10UF K	
C133			CC73HCH1H471J	CHIP C 470PF J	
C134			CK73HB1H102K	CHIP C 1000PF K	
C135			CK73HB1A104K	CHIP C 0.10UF K	
C136,137			CK73GB0J106M	CHIP C 10UF M	
C138			CK73HB1A104K	CHIP C 0.10UF K	
C139			CK73HB1H102K	CHIP C 1000PF K	

⚠ indicates safety critical components.

PARTS LIST

DIGITAL I/O UNIT (X88-2080-10)

Ref.No.	Add	New	Parts No.	Description	Destination
C140			CK73HB0J105K	CHIP C 1.0UF K	
C141			CK73HB1E103K	CHIP C 0.010UF K	
C142			CK73HB1H102K	CHIP C 1000PF K	
C143			CC73HCH1H471J	CHIP C 470PF J	
C144,145			CK73HB1A104K	CHIP C 0.10UF K	
C146			CK73HB1H102K	CHIP C 1000PF K	
C147			CK73HB1A104K	CHIP C 0.10UF K	
C148			CK73HB1E103K	CHIP C 0.010UF K	
C149			CK73HB1A104K	CHIP C 0.10UF K	
C150			CK73HB0J105K	CHIP C 1.0UF K	
C151			CC73HCH1H150J	CHIP C 15PF J	
C153			CC73HCH1H050C	CHIP C 5.0PF C	
C155			CK73HB1A104K	CHIP C 0.10UF K	
C156			CK73HB1E103K	CHIP C 0.010UF K	
C157,158			CK73HB1H102K	CHIP C 1000PF K	
C159			CK73HB1A104K	CHIP C 0.10UF K	
C160,161			CK73HB1H102K	CHIP C 1000PF K	
C162-164			CK73HB1A104K	CHIP C 0.10UF K	
C165			CK73HB0J105K	CHIP C 1.0UF K	
C166			CK73HB1A104K	CHIP C 0.10UF K	
C168,169			CK73HB1A104K	CHIP C 0.10UF K	
C170			CK73GB0J106M	CHIP C 10UF M	
C171,172			CK73HB1A104K	CHIP C 0.10UF K	
C173,174			CC73HCH1H470J	CHIP C 47PF J	
C175			CC73HCH1H331J	CHIP C 330PF J	
C176			CC73HCH1H470J	CHIP C 47PF J	
C181			CC73HCH1H820J	CHIP C 82PF J	
C182			CC73HCH1H470J	CHIP C 47PF J	
C183-186			CK73HB1A104K	CHIP C 0.10UF K	
C187			CK73HB1E103K	CHIP C 0.010UF K	
C408-410			CK73HB1A104K	CHIP C 0.10UF K	
C501,502			CK73HB1A104K	CHIP C 0.10UF K	
C505			CK73HB1A104K	CHIP C 0.10UF K	
C510-514			CK73GB0J106M	CHIP C 10UF M	
C702,703			CK73FB0J226M	CHIP C 22UF M	
C715			CK73HB1H102K	CHIP C 1000PF K	
C718			CK73HB1H102K	CHIP C 1000PF K	
C739			CK73GB0J106M	CHIP C 10UF M	
C740,741			CK73HB1A104K	CHIP C 0.10UF K	
C742			CK73GB0J106M	CHIP C 10UF M	
C744-748			CK73HB1A104K	CHIP C 0.10UF K	
C749			CK73GB0J106M	CHIP C 10UF M	
C750			CK73HB1A104K	CHIP C 0.10UF K	
C752			CK73HB1A104K	CHIP C 0.10UF K	
C753,754			CK73HB0J105K	CHIP C 1.0UF K	
C757-760			CK73HB1A104K	CHIP C 0.10UF K	
C761,762			CK73HB0J105K	CHIP C 1.0UF K	
C764			CK73GB0J106M	CHIP C 10UF M	
C772			CK73HB0J105K	CHIP C 1.0UF K	
C773-778			CK73HB1A104K	CHIP C 0.10UF K	
C785			CC73HCH1H080D	CHIP C 8.0PF D	
C786			CK73HB1A104K	CHIP C 0.10UF K	
C787			CC73HCH1H120J	CHIP C 12PF J	
C788			CK73GB0J106M	CHIP C 10UF M	
C789,790			CK73HB1A104K	CHIP C 0.10UF K	

Ref.No.	Add	New	Parts No.	Description	Destination
C792,793			CK73HB1A104K	CHIP C 0.10UF K	
C794-796			CK73HB0J474K	CHIP C 0.47UF K	
C797-799			CK73HB1A104K	CHIP C 0.10UF K	
C804			CK73HB0J105K	CHIP C 1.0UF K	
C805			CK73HB1A104K	CHIP C 0.10UF K	
C809			CK73GB0J106M	CHIP C 10UF M	
C810			CK73HB0J105K	CHIP C 1.0UF K	
C820			CK73HB0J105K	CHIP C 1.0UF K	
C821			CK73HB1A104K	CHIP C 0.10UF K	
C822-825			CK73EB0J476M	CHIP C 47UF M	
C826			CK73HB1A104K	CHIP C 0.10UF K	
C827			CK73FB0J226M	CHIP C 22UF M	
CN700			E41-3252-05	PIN ASSY	
CN702			E41-2603-05	FLAT CABLE CONNECTOR	
J400			E68-0832-05	JACK(OTHERS)	
W700			E30-8202-05	CORD WITH CONNECTOR (USB)	
L100-103			L92-0373-05	CHIP FERRITE	
L105-107			L92-0373-05	CHIP FERRITE	
L109,110			L92-0373-05	CHIP FERRITE	
L112-114			L92-0373-05	CHIP FERRITE	
L120			L92-0373-05	CHIP FERRITE	
L500-502			L92-0373-05	CHIP FERRITE	
L510			L92-0373-05	CHIP FERRITE	
L700,701			L92-0641-05	FERRITE CORE	
L705			L92-0373-05	CHIP FERRITE	
L707			L92-0373-05	CHIP FERRITE	
L710-712			L92-0373-05	CHIP FERRITE	
X100			L77-3846-05	CRYSTAL RESONATOR(12MHZ)	
X700			L77-3849-05	CRYSTAL RESONATOR(32MHZ)	
CP100-105			RK74HB1J220J	CHIP-COM 22 J 1/16W	
CP400-407			RK74HB1J220J	CHIP-COM 22 J 1/16W	
CP700			RK74HB1J103J	CHIP-COM 10K J 1/16W	
CP701			RK74HB1J473J	CHIP-COM 47K J 1/16W	
CP702,703			RK74HB1J220J	CHIP-COM 22 J 1/16W	
CP705			RK74HB1J220J	CHIP-COM 22 J 1/16W	
CP706			RK74HB1J473J	CHIP-COM 47K J 1/16W	
R1			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R2			RK73HB1J332J	CHIP R 3.3K J 1/16W	
R3			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R6			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R7			RK73HB1J470J	CHIP R 47 J 1/16W	
R8 ,9			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R30			RK73EB2E000J	CHIP R 0.0 J 1/4W	
R100			RK73HB1J223J	CHIP R 22K J 1/16W	
R101			RK73HB1J220J	CHIP R 22 J 1/16W	
R102			RK73HB1J105J	CHIP R 1.0M J 1/16W	
R104			RK73HB1J152J	CHIP R 1.5K J 1/16W	
R106			RK73HB1J223J	CHIP R 22K J 1/16W	
R107			RK73HH1J44R2D	CHIP R 44.2 D 1/16W	
R108			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R116-120			RK73HB1J220J	CHIP R 22 J 1/16W	
R122			RK73HB1J220J	CHIP R 22 J 1/16W	
R123			RK73HB1J103J	CHIP R 10K J 1/16W	
R124			RK73HB1J101J	CHIP R 100 J 1/16W	

K: DNX7180 (North America) **R1**: DNX7480BT (Latin America)
E1: DNX7280BT (Europe) **X1**: DNX7380BT (Australia)
M1: DNX7380BT **M2**: DNX7380BTM (Other Areas)

⚠ indicates safety critical components.

PARTS LIST

DIGITAL I/O UNIT (X88-2080-10)

Ref.No.	Add	New	Parts No.	Description	Destination
R126			RK73HB1J220J	CHIP R 22 J 1/16W	
R128			RK73HB1J220J	CHIP R 22 J 1/16W	
R130			RK73HB1J223J	CHIP R 22K J 1/16W	
R131,132			RK73HB1J220J	CHIP R 22 J 1/16W	
R134			RK73HB1J103J	CHIP R 10K J 1/16W	
R135			RK73HH1J122D	CHIP R 1.2K D 1/16W	
R139			RK73HB1J223J	CHIP R 22K J 1/16W	
R142,143			RK73HB1J220J	CHIP R 22 J 1/16W	
R145,146			RK73HB1J220J	CHIP R 22 J 1/16W	
R147			RK73HB1J223J	CHIP R 22K J 1/16W	
R148,149			RK73HB1J220J	CHIP R 22 J 1/16W	
R151			RK73HB1J470J	CHIP R 47 J 1/16W	
R153			RK73HB1J220J	CHIP R 22 J 1/16W	
R154			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R155			RK73HB1J222J	CHIP R 2.2K J 1/16W	
R156			RK73HB1J220J	CHIP R 22 J 1/16W	
R158			RK73HB1J220J	CHIP R 22 J 1/16W	
R160			RK73HB1J220J	CHIP R 22 J 1/16W	
R162,163			RK73HB1J220J	CHIP R 22 J 1/16W	
R164			RK73HB1J223J	CHIP R 22K J 1/16W	
R166-169			RK73HB1J220J	CHIP R 22 J 1/16W	
R172-176			RK73HB1J220J	CHIP R 22 J 1/16W	
R177			RK73HB1J473J	CHIP R 47K J 1/16W	
R179			RK73HB1J220J	CHIP R 22 J 1/16W	
R181			RK73HB1J101J	CHIP R 100 J 1/16W	
R182			RK73HB1J220J	CHIP R 22 J 1/16W	
R183			RK73HB1J103J	CHIP R 10K J 1/16W	
R184			RK73HB1J220J	CHIP R 22 J 1/16W	
R186			RK73HB1J473J	CHIP R 47K J 1/16W	
R188-190			RK73HB1J220J	CHIP R 22 J 1/16W	
R191			RK73HB1J223J	CHIP R 22K J 1/16W	
R194,195			RK73HB1J220J	CHIP R 22 J 1/16W	
R196			RK73HB1J223J	CHIP R 22K J 1/16W	
R197,198			RK73HB1J220J	CHIP R 22 J 1/16W	
R199			RK73HB1J222J	CHIP R 2.2K J 1/16W	
R201			RK73HB1J223J	CHIP R 22K J 1/16W	
R202			RK73HB1J220J	CHIP R 22 J 1/16W	
R204			RK73HB1J101J	CHIP R 100 J 1/16W	
R206			RK73HB1J223J	CHIP R 22K J 1/16W	
R207			RK73HB1J220J	CHIP R 22 J 1/16W	
R210			RK73HB1J220J	CHIP R 22 J 1/16W	
R212,213			RK73HB1J101J	CHIP R 100 J 1/16W	
R215,216			RK73HB1J101J	CHIP R 100 J 1/16W	
R220			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R221			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R222-224			RK73HB1J223J	CHIP R 22K J 1/16W	
R225			RK73HB1J301J	CHIP R 300 J 1/16W	
R250-256			RK73HB1J220J	CHIP R 22 J 1/16W	
R257			RK73HB1J222J	CHIP R 2.2K J 1/16W	
R258			RK73HB1J220J	CHIP R 22 J 1/16W	
R259			RK73HB1J222J	CHIP R 2.2K J 1/16W	
R260			RK73HB1J223J	CHIP R 22K J 1/16W	
R261-263			RK73HB1J220J	CHIP R 22 J 1/16W	
R264			RK73HB1J101J	CHIP R 100 J 1/16W	
R265-267			RK73HB1J220J	CHIP R 22 J 1/16W	
R275,276			RK73HB1J223J	CHIP R 22K J 1/16W	
R278,279			RK73HB1J220J	CHIP R 22 J 1/16W	
R280			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R281,282			RK73HB1J223J	CHIP R 22K J 1/16W	
R283			RK73HB1J220J	CHIP R 22 J 1/16W	
R300			RK73HB1J220J	CHIP R 22 J 1/16W	
R400-411			RK73HB1J220J	CHIP R 22 J 1/16W	
R412			RK73HB1J223J	CHIP R 22K J 1/16W	
R413-422			RK73HB1J220J	CHIP R 22 J 1/16W	
R423			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R424-430			RK73HB1J220J	CHIP R 22 J 1/16W	
R431			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R432			RK73HB1J220J	CHIP R 22 J 1/16W	
R433,434			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R436-439			RK73HB1J220J	CHIP R 22 J 1/16W	
R445,446			RK73HH1J103D	CHIP R 10K D 1/16W	
R500,501			RK73HH1J103D	CHIP R 10K D 1/16W	
R502,503			RK73HB1J301J	CHIP R 300 J 1/16W	
R704			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R712,713			RK73HB1J223J	CHIP R 22K J 1/16W	
R716			RK73GH2A362D	CHIP R 3.6K D 1/10W	
R718,719			RK73HB1J223J	CHIP R 22K J 1/16W	
R720			RK73GH2A201D	CHIP R 200 D 1/10W	
R723			RK73HH1J750D	CHIP R 75 D 1/16W	
R724,725			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R726			RK73HH1J750D	CHIP R 75 D 1/16W	
R731			RK73HB1J332J	CHIP R 3.3K J 1/16W	
R733			RK73HH1J750D	CHIP R 75 D 1/16W	
R735			RK73HB1J100J	CHIP R 10 J 1/16W	
R736			RK73HH1J430D	CHIP R 43 D 1/16W	
R746			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R752,753			RK73HB1J473J	CHIP R 47K J 1/16W	
R755			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R756			RK73HB1J101J	CHIP R 100 J 1/16W	
R759			RK73HB1J122J	CHIP R 1.2K J 1/16W	
R760			RK73HB1J111J	CHIP R 110 J 1/16W	
R761			RK73HB1J105J	CHIP R 1.0M J 1/16W	
R763			RK73HB1J220J	CHIP R 22 J 1/16W	
R770-773			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R781			RK73HB1J223J	CHIP R 22K J 1/16W	
R786,787			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R788,789			RK73HB1J220J	CHIP R 22 J 1/16W	
R790,791			RK73HB1J103J	CHIP R 10K J 1/16W	
R792			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R793-795			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R798,799			RK73HB1J220J	CHIP R 22 J 1/16W	
R800-802			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R803			RK73HB1J100J	CHIP R 10 J 1/16W	
R804			RK73HB1J473J	CHIP R 47K J 1/16W	
R806-808			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R811			RK73GB2A152J	CHIP R 1.5K J 1/10W	
R812			RK73FB2B151J	CHIP R 150 J 1/8W	
IC103		*	-	MICROPROCESSOR IC	
IC402,403		*	-	DRAM IC	

K: DNX7180 (North America) **R1**: DNX7480BT (Latin America)
E1: DNX7280BT (Europe) **X1**: DNX7380BT (Australia)
M1: DNX7380BT **M2**: DNX7380BTM (Other Areas)

⚠ indicates safety critical components.

PARTS LIST

The IC103,402, 403, 500 and IC501 in the DIGITAL I/O UNIT (X88-2080-10) are not replaceable components. When these ICs are defective, replace the whole DIGITAL I/O UNIT (X88-2080-10)

DIGITAL I/O UNIT (X88-2080-10)

Ref.No.	Add	New	Parts No.	Description	Destination
IC500,501		*	-	DRAM IC	
IC704			THS8136IPHPR	MOS-IC	
IC705			TC7SG86FU-F	MOS-IC	
IC706			W05-1700-00	ROM IC	
IC707			TC7SG04FU-F	MOS-IC	
IC708			XC6215B182NR	ANALOGUE IC	
IC714			ML86V8202T03	MOS-IC	

DVD MECHANISM ASSY (X92-6640-00) (DVS-8710W)

Ref.No.	Add	New	Parts No.	Description	Destination
1	1A		A10-5523-11+	CHASSIS	
2	2B		A10-5543-01	CHASSIS	
3	1A		A10-5535-01	CHASSIS	
4	3A		A10-5534-12	CHASSIS	
7	1B		D10-7080-02	ARM	
8	1B		D10-7081-02	ARM	
9	1B		D10-7082-02	LEVER	
10	1B		D10-7083-02	LEVER	
12	2B		D10-7084-02+	SLIDER	
13	2A		D10-7100-02	ARM	
14	2B		D10-7086-03+	ARM	
15	2B		D10-7087-02	ARM	
25	2B		D10-7092-04+	SLIDER ASSY	
27	2A		D10-7091-04	LEVER	
28	2B		D12-0640-02+	CAM	
31	2B		D13-3029-04	GEAR	
32	2B		D13-3030-04	GEAR	
33	2B		D13-3031-04	GEAR	
34	2B		D13-3032-04	GEAR	
35	2B		D13-3033-04	GEAR	
36	2B		D13-3034-04	GEAR	
40	2A		D13-3038-04	GEAR	
41	2A		D13-3039-04	GEAR	
42	2A		D13-3040-04	GEAR	
43	1B	*	D14-1034-04	ROLLER	
53	1B		D21-2487-24+	SHAFT	
54	2A		D39-0275-05	DAMPER	
55	2A		D39-0276-05	DAMPER	
60	3A		F09-3037-03	SHEET	
65	2B		G01-4734-04	EXTENSION SPRING	
66	1B		G01-4735-14	EXTENSION SPRING	
67	2A		G01-3300-14+	TORSION COIL SPRING	
68	2B		G01-4737-14	EXTENSION SPRING	
69	1B		G01-4602-14+	EXTENSION SPRING	
70	1B		G01-4740-04	TORSION COIL SPRING	
74	2B		G01-4609-24+	TORSION COIL SPRING	
75	1B		G02-1904-03+	FLAT SPRING	
79	2A		J22-0898-01	MOUNTING HARDWARE	
80	3B		J22-0891-11+	MOUNTING HARDWARE	
A	1A		N09-6815-05	MACHINE SCREW (M1.7X2.0)	
B	3B		N09-6408-15	TAPTITE SCREW (1.7X4.0 PT)	
C	1B		N09-6426-15	MACHINE SCREW (LOAD ARM SCREW	
D	3A		N09-6104-05	MACHINE SCREW (2X10 ST)	
93	2A		T99-0471-05	MAGNET	
96	1B		X94-2080-00	ROLLER ASSY	
98	2A		X94-2120-00	TRAVERSE ASSY (PICKUP,SPINDLE)	
VM1	2A		X94-2070-00	MOTOR ASSY (LOADING)	

K: DNX7180 (North America) **R1**: DNX7480BT (Latin America)
E1: DNX7280BT (Europe) **X1**: DNX7380BT (Australia)
M1: DNX7380BT **M2**: DNX7380BTM (Other Areas)

⚠ indicates safety critical components.