PARTS LIST

✻ New Parts. ⚠indicates safety critical components.
Parts without **Parts No.** are not supplied.
Les articles non mentionnes dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

L : Scandinavia **K** : USA **P** : Canada
Y : PX (Far East, Hawaii) **T** : England **E** : Europe
Y : AAFES (Europe) **X** : Australia **M** : Other Areas

TK-2102G (Y50-6410-XX)
TX-RX UNIT (X57-6020-10)

Ref. No.	Address	New parts	Parts No.	Description	Destination
TK-2102G					
1	1A	✻	A02-4049-03	PLASTIC CABINET ASSY	
2	3B		A82-0034-03	REAR PANEL	
4	2D		B09-0351-03	CAP (SP/MIC) ACCESSORY	
5	1D	✻	B62-2103-00	INSTRUCTION MANUAL	
7	2B		E04-0449-05	RF COAXIAL RECEPTACLE(SMA)	
8	3B		E23-1183-04	RELAY TERMINAL (BATT-)	
9	1A		G01-0881-04	COIL SPRING (BATT RELEASE)	
10	3B		G10-1288-04	FIBROUS SHEET (CHASSIS)	
11	-		G11-2583-04	SHEET (HOLDER)	
12	3B	✻	G11-2588-14	RUBBER SHEET (CHASSIS)	
13	1B	✻	G11-4478-04	SHEET (CH)	
15	3B		G13-1709-04	CUSHION(VOL)	
16	3B		G13-1763-04	CUSHION (TERMINAL BATT+)	
17	3B		G13-1867-14	CUSHION (TERMINAL BATT-)	
18	2B		G13-1959-04	CUSHION (RECEPTACLE)	
19	2A		G13-1985-04	CUSHION (X400)	
21	2B		G13-1986-04	CUSHION (VR501)	
22	3B		G13-2069-24	CUSHION (HOLDER)	
23	2B		G53-0791-03	PACKING (SP/MIC)	
24	2A		G53-0842-13	PACKING (SP)	
25	2B		G53-0860-04	PACKING (CHASSIS)	
27	2B		G53-1528-04	PACKING (SMA)	
30	1D		H25-0085-04	PROTECTION BAG (100/200/0.07)	
31	2D		H25-2012-04	PROTECTION BAG (75/100/0.08)	
33	1A		J19-1572-04	HOLDER (BATT RELEASE)	
34	2B		J19-5344-13	HOLDER (VOL/CH)	
35	2D		J21-4493-04	SP/MIC HOLDER ACCESSORY	
36	2D		J29-0734-05	BELT CLIP ACCESSORY	
37	1B		J69-0345-04	RING (VOL,CH)	
39	2B		J82-0059-15	FPC	
41	1B		K29-5255-03	KNOB (VOL)	
42	1A		K29-5274-03	BUTTON KNOB (MONI)	
43	1A		K29-5275-23	BUTTON KNOB (PTT)	
44	1B		K29-5278-03	KNOB (CH)	
45	1A		K29-5337-03	LEVER KNOB (BATT RELEASE)	
A	2B		N09-2438-05	BINDING HEAD SCREW (SMA)	
B	1B	✻	N14-0581-44	CIRCULAR NUT (VOL,CH)	
C	1B	✻	N14-0804-24	CIRCULAR NUT (SMA)	
D	3A		N30-2606-48	PAN HEAD MACHINE SCREW	
E	3B		N79-2030-48	PAN HEAD TAPTITE SCREW	
F	2A,2B		N83-2005-48	PAN HEAD TAPTITE SCREW	
47	2D		N99-0396-15	SCREW SET ACCESSORY	
49	2B		R31-0647-05	VARIABLE RESISTOR	
51	2B		S60-0424-25	ROTARY SWITCH	
53	1A		T07-0369-15	SPEAKER	
54	2D		T90-1036-15	HELICAL ANTENNA ACCESSORY	
56	1C	✻	W08-0479-25	AC ADAPTER (AC 120V) ACCESSORY	K
58	1C		W08-0558-35	AC ADAPTER (AC 230V) ACCESSORY	M
59	1C	✻	W08-0598-15	CHARGER ACCESSORY	
60	2C		W09-0940-25	BATTERY ASSY ACCESSORY	
TX-RX UNIT (X57-6020-10)					
D400			B30-2156-05	LED (RED)	
D401			B30-2157-05	LED (YELLOW)	
C1			CK73GB1C104K	CHIP C 0.10UF K	
C2,3			CC73GCH1H101J	CHIP C 100PF J	
C4			CK73GB1C104K	CHIP C 0.10UF K	
C5			CS77AA0J4R7M	CHIP TNTL 4.7UF 6.3WV	
C6			CC73GCH1H101J	CHIP C 100PF J	
C7			CK73GB1H102K	CHIP C 1000PF K	
C8			CK73FB1C224K	CHIP C 0.22UF K	
C9			CC73GCH1H130J	CHIP C 13PF J	
C10			CC73GCH1H470J	CHIP C 47PF J	
C12			CK73FB1C224K	CHIP C 0.22UF K	
C14			CC73GCH1H130J	CHIP C 13PF J	
C15			CS77AA1A6R8M	CHIP TNTL 6.8UF 10WV	
C16			CC73GCH1H680J	CHIP C 68PF J	
C17			CK73GB1H331K	CHIP C 330PF K	
C18			CS77AA1DR68M	CHIP TNTL 0.68UF 20WV	
C19,20			CK73GB1H103K	CHIP C 0.010UF K	
C23			CS77AA0J100M	CHIP TNTL 10UF 6.3WV	
C24			CK73GB1H681K	CHIP C 680PF K	
C25			CK73GB1H471K	CHIP C 470PF K	
C26			CC73GCH1H121J	CHIP C 120PF J	
C27			CK73GB1H102K	CHIP C 1000PF K	
C28			CC73GCH1H330J	CHIP C 33PF J	
C29-31			CK73GB1H102K	CHIP C 1000PF K	
C32			CC73GCH1H101J	CHIP C 100PF J	
C33			CC73GCH1H390J	CHIP C 39PF J	
C34			CC73GCH1HR75B	CHIP C 0.75PF B	
C35			CC73GCH1H060D	CHIP C 6.0PF D	
C36			CC73GCH1H180J	CHIP C 18PF J	
C37			CC73GCH1H050B	CHIP C 5.0PF B	
C38			CC73GCH1H180J	CHIP C 18PF J	
C39			CK73GB1H103K	CHIP C 0.010UF K	
C40,41			CK73GB1H102K	CHIP C 1000PF K	
C42			CK73GB1H103K	CHIP C 0.010UF K	
C43,44			CC73GCH1H0R5B	CHIP C 0.5PF B	
C45,46			CK73GB1H102K	CHIP C 1000PF K	
C47			CC73GCH1H330J	CHIP C 33PF J	
C48			CC73GCH1H100D	CHIP C 10PF D	
C49			CK73GB1H102K	CHIP C 1000PF K	
C50			CS77AA0J4R7M	CHIP TNTL 4.7UF 6.3WV	
C51			CC73GCH1H680J	CHIP C 68PF J	
C100			CC73GCH1H150J	CHIP C 15PF J	
C101,102			CK73GB1H102K	CHIP C 1000PF K	
C103			CC73GCH1H220J	CHIP C 22PF J	
C104-107			CK73GB1H102K	CHIP C 1000PF K	
C108			CC73GCH1H120J	CHIP C 12PF J	
C109			CK73GB1H102K	CHIP C 1000PF K	

PARTS LIST

TX-RX UNIT (X57-6020-10)

Ref. No.	Address	New parts	Parts No.	Description			Destination
C110			CK73GB1C104K	CHIP C	0.10UF	K	
C111,112			CK73GB1H102K	CHIP C	1000PF	K	
C113			CC73GCH1H200J	CHIP C	20PF	J	
C114-116			CK73GB1H102K	CHIP C	1000PF	K	
C118-120			CK73GB1H102K	CHIP C	1000PF	K	
C121			CK73EB1C105K	CHIP C	1.0UF	K	
C123			CK73GB1H103K	CHIP C	0.010UF	K	
C124			CK73GB1H102K	CHIP C	1000PF	K	
C125			CK73GB1C104K	CHIP C	0.10UF	K	
C126			CC73GCH1H560J	CHIP C	56PF	J	
C127			CS77AA1A6R8M	CHIP TNTL	6.8UF	10WV	
C128			CC73GCH1H150G	CHIP C	15PF	G	
C129			CC73GCH1H100C	CHIP C	10PF	C	
C130,131			CK73GB1H102K	CHIP C	1000PF	K	
C132			CK73GB1H471K	CHIP C	470PF	K	
C133			CK73GB1H102K	CHIP C	1000PF	K	
C134			CC73GCH1H101J	CHIP C	100PF	J	
C135			CC73GCH1H270J	CHIP C	27PF	J	
C136			CC73GCH1H390J	CHIP C	39PF	J	
C137			CK73GB1H102K	CHIP C	1000PF	K	
C138			CC73GCH1H100D	CHIP C	10PF	D	
C139			CK73GB1H102K	CHIP C	1000PF	K	
C140			CC73GCH1H100D	CHIP C	10PF	D	
C141			CK73GB1H471K	CHIP C	470PF	K	
C142			CC73GCH1H220J	CHIP C	22PF	J	
C143			CC73GCH1H080D	CHIP C	8.0PF	D	
C144			CC73GCH1H090D	CHIP C	9.0PF	D	
C146			CC73GCH1H200J	CHIP C	20PF	J	
C147			CC73GCH1H100D	CHIP C	10PF	D	
C200			CS77AA0J100M	CHIP TNTL	10UF	6.3WV	
C201			CK73GB1H103K	CHIP C	0.010UF	K	
C202			CC73GCH1H270J	CHIP C	27PF	J	
C203			CK73GB1H471K	CHIP C	470PF	K	
C204			CK73GB1H472K	CHIP C	4700PF	K	
C205,206			CC73GCH1H391J	CHIP C	390PF	J	
C207			CK73GB1C104K	CHIP C	0.10UF	K	
C208			CC73GCH1H270J	CHIP C	27PF	J	
C209			CK73GB1C104K	CHIP C	0.10UF	K	
C210			CK73GB1H103K	CHIP C	0.010UF	K	
C211			CK73GB1C104K	CHIP C	0.10UF	K	
C212			CC73GCH1H150J	CHIP C	15PF	J	
C213			CK73GB1C104K	CHIP C	0.10UF	K	
C214			CK73GB1H103K	CHIP C	0.010UF	K	
C215			CC73GCH1H100D	CHIP C	10PF	D	
C216			CC73GCH1H020C	CHIP C	2.0PF	C	
C217			CK73GB1H103K	CHIP C	0.010UF	K	
C218			CK73GB1H102K	CHIP C	1000PF	K	
C219			CC73GCH1H100C	CHIP C	10PF	C	
C220			CK73HB1H102K	CHIP C	1000PF	K	
C221			CK73GB1H103K	CHIP C	0.010UF	K	
C222			CC73HCH1H050B	CHIP C	5.0PF	B	
C223			CC73GCH1H020C	CHIP C	2.0PF	C	
C224,225			CK73GB1C104K	CHIP C	0.10UF	K	
C233			CC73HCH1H080B	CHIP C	8.0PF	B	
C234			CC73HCH1H300J	CHIP C	30PF	J	
C235			CK73GB1C104K	CHIP C	0.10UF	K	
C236			CK73HB1H102K	CHIP C	1000PF	K	
C237			CC73GCH1H060B	CHIP C	6.0PF	B	
C238			CC73GCH1H200J	CHIP C	20PF	J	
C239			CK73GB1H102K	CHIP C	1000PF	K	

Ref. No.	Address	New parts	Parts No.	Description			Destination
C241			CC73GCH1H040B	CHIP C	4.0PF	B	
C243			CC73GCH1H020C	CHIP C	2.0PF	C	
C245,246			CK73GB1H102K	CHIP C	1000PF	K	
C247			CC73GCH1H200J	CHIP C	20PF	J	
C248			CC73GCH1H080D	CHIP C	8.0PF	D	
C249-251			CK73GB1H102K	CHIP C	1000PF	K	
C252			CC73HCH1H180J	CHIP C	18PF	J	
C253			CK73HB1H102K	CHIP C	1000PF	K	
C254			CC73GCH1H1R5C	CHIP C	1.5PF	C	
C255			CC73GCH1H160J	CHIP C	16PF	J	
C256			CK73GB1H102K	CHIP C	1000PF	K	
C257			CC73GCH1H1R5C	CHIP C	1.5PF	C	
C259			CC73GCH1H200J	CHIP C	20PF	J	
C260			CK73GB1H102K	CHIP C	1000PF	K	
C261			CC73GCH1H150J	CHIP C	15PF	J	
C262-264			CK73HB1H102K	CHIP C	1000PF	K	
C266			CK73HB1A104K	CHIP C	0.10UF	K	
C267			CK73GB1C104K	CHIP C	0.10UF	K	
C300			CK73GB1H822K	CHIP C	8200PF	K	
C301			CK73GB1E183K	CHIP C	0.018UF	K	
C302,303			CK73GB1C104K	CHIP C	0.10UF	K	
C304			CS77AA0J100M	CHIP TNTL	10UF	6.3WV	
C305			CK73GB1H103J	CHIP C	0.010UF	J	
C306			CK73GB1C473K	CHIP C	0.047UF	K	
C307			CS77AA0J100M	CHIP TNTL	10UF	6.3WV	
C308			CK73GB1H562K	CHIP C	5600PF	K	
C309			CK73GB1H103J	CHIP C	0.010UF	J	
C311			CS77AA0J100M	CHIP TNTL	10UF	6.3WV	
C312			CK73GB1H103J	CHIP C	0.010UF	J	
C313			CK73FB1A105K	CHIP C	1.0UF	K	
C314			CK73GB1H102K	CHIP C	1000PF	K	
C316			CK73GB1H103J	CHIP C	0.010UF	J	
C318			CK73GB1C333K	CHIP C	0.033UF	K	
C319			CK73GB1C473K	CHIP C	0.047UF	K	
C320,321			CK73GB1C333J	CHIP C	0.033UF	J	
C322			CK73FB1E104K	CHIP C	0.10UF	K	
C327			CK73GB1C104K	CHIP C	0.10UF	K	
C330			CC73GCH1H101J	CHIP C	100PF	J	
C331			CK73FB1C474K	CHIP C	0.47UF	K	
C332			CS77AA0J100M	CHIP TNTL	10UF	6.3WV	
C333			CK73GB1A474K	CHIP C	0.47UF	K	
C334			CC73GCH1H221J	CHIP C	220PF	J	
C335			CK73GB1C473K	CHIP C	0.047UF	K	
C336			CK73GB1H103K	CHIP C	0.010UF	K	
C337			CS77CC0J101M	CHIP TNTL	100UF	6.3WV	
C338			CC73GCH1H560J	CHIP C	56PF	J	
C400			CK73GB1C104K	CHIP C	0.10UF	K	
C402-404			CK73GB1H102K	CHIP C	1000PF	K	
C406,407			CK73GB1H102K	CHIP C	1000PF	K	
C408			CS77AA0J100M	CHIP TNTL	10UF	6.3WV	
C409			CC73GCH1H030C	CHIP C	3.0PF	C	
C410			CK73GB1H102K	CHIP C	1000PF	K	
C411			CK73GB1H471K	CHIP C	470PF	K	
C412			CC73GCH1H100D	CHIP C	10PF	D	
C413,414			CK73GB1H102K	CHIP C	1000PF	K	
C415			CC73GCH1H100D	CHIP C	10PF	D	
C416			CK73GB1H102K	CHIP C	1000PF	K	
C417			CK73EF1C105Z	CHIP C	1.0UF	Z	
C418			CK73GB1H103K	CHIP C	0.010UF	K	
C420,421			CK73GB1H103K	CHIP C	0.010UF	K	

PARTS LIST

TX-RX UNIT (X57-6020-10)

Ref. No.	Address	New parts	Parts No.	Description	Destination
C422			CK73HB1E103K	CHIP C 0.010UF K	
C423			CK73GB1H102K	CHIP C 1000PF K	
C424			CK73FB1A105K	CHIP C 1.0UF K	
C425			CK73HB1E103K	CHIP C 0.010UF K	
C427			CK73GB1H102K	CHIP C 1000PF K	
C429,430			CK73FB1A105K	CHIP C 1.0UF K	
C500,501			CK73GB1C273K	CHIP C 0.027UF K	
C502			CK73GB1H392K	CHIP C 3900PF K	
C503			CK73GB1C333K	CHIP C 0.033UF K	
C504			CS77AA0J4R7M	CHIP TNTL 4.7UF 6.3WV	
C505			CK73FB1A105K	CHIP C 1.0UF K	
C506			CK73GB1H471K	CHIP C 470PF K	
C507			CS77CP0G2R2M	CHIP TNTL 2.2UF 4WV	
C508			CK73GB1H103K	CHIP C 0.010UF K	
C509			CK73GB1H332K	CHIP C 3300PF K	
C510			CC73GCH1E821J	CHIP C 820PF J	
C511			CK73GB1C473K	CHIP C 0.047UF K	
C512			CK73GB1H332K	CHIP C 3300PF K	
C513			CC73GCH1E681J	CHIP C 680PF J	
C514			CK73GB1C473K	CHIP C 0.047UF K	
C515			CK73GB1H103K	CHIP C 0.010UF K	
C516			CC73GCH1H100D	CHIP C 10PF D	
C517			CK73GB1H102K	CHIP C 1000PF K	
C518			CK73GB1E223J	CHIP C 0.022UF J	
C519			CS77AA0J4R7M	CHIP TNTL 4.7UF 6.3WV	
C520			CK73GB1E223J	CHIP C 0.022UF J	
C521			CK73GB1H102K	CHIP C 1000PF K	
C522			CK73FB1E104K	CHIP C 0.10UF K	
C523			CS77CP0G2R2M	CHIP TNTL 2.2UF 4WV	
C524			CK73GB1C273K	CHIP C 0.027UF K	
C525			CK73GB1C104K	CHIP C 0.10UF K	
C526			CK73GB1H471K	CHIP C 470PF K	
C527			CS77AA0J100M	CHIP TNTL 10UF 6.3WV	
C528			CK73GB1H102K	CHIP C 1000PF K	
C529			CK73FB1H102K	CHIP C 1000PF K	
C530			CC73HCH1H221J	CHIP C 220PF J	
C531			CC73GCH1H221J	CHIP C 220PF J	
C532			CK73GB1H471K	CHIP C 470PF K	
C533			CK73GB1C104K	CHIP C 0.10UF K	
TC1			C05-0384-05	CERAMIC TRIMMER CAPACITOR (10PF)	
TC2			C05-0383-05	CERAMIC TRIMMER CAPACITOR (6PF)	
TC201			C05-0371-05	CERAMIC TRIMMER CAPACITOR (10PF)	
101	2B	✻	E23-1182-04	RELAY TERMINAL (BATT+)	
CN400			E40-5998-15	PIN ASSY	
J500			E11-0703-05	PHONE JACK (2.5/3.5)	
F500			F53-0130-05	FUSE (3A)	
F500			F53-0392-05	FUSE (3A)	
102	2B		G13-1867-14	CUSHION (TERMINAL BATT+)	
103	2B		G53-0862-04	PACKING (TERMINAL BATT+)	
104	2B		J19-1571-04	HOLDER (TERMINAL BATT+)	
105	2B		J30-1249-04	SPACER (TERMINAL BATT+)	
CF200			L72-0958-05	CERAMIC FILTER	
L1			L92-0140-05	CHIP FERRITE	
L2		✻	L41-8295-39	SMALL FIXED INDUCTOR (8.2UH)	
L4			L40-4781-86	SMALL FIXED INDUCTOR (0.47UH)	
L5			L40-5681-86	SMALL FIXED INDUCTOR (0.56UH)	
L6			L40-6891-86	SMALL FIXED INDUCTOR (6.8UH)	
L7			L92-0140-05	CHIP FERRITE	

Ref. No.	Address	New parts	Parts No.	Description	Destination
L8,9			L40-6891-86	SMALL FIXED INDUCTOR (6.8UH)	
L10			L33-0744-05	SMALL FIXED INDUCTOR	
L11			L33-0745-05	SMALL FIXED INDUCTOR	
L12			L40-1085-92	SMALL FIXED INDUCTOR (100NH)	
L13			L40-4775-92	SMALL FIXED INDUCTOR (47NH)	
L14			L92-0140-05	CHIP FERRITE	
L15			L40-6891-86	SMALL FIXED INDUCTOR (6.8UH)	
L16,17			L40-2285-38	SMALL FIXED INDUCTOR (220NH)	
L100			L40-8275-92	SMALL FIXED INDUCTOR (82NH)	
L101			L40-6875-92	SMALL FIXED INDUCTOR (68NH)	
L102			L92-0140-05	CHIP FERRITE	
L103			L40-2775-92	SMALL FIXED INDUCTOR (27NH)	
L104			L41-1098-40	SMALL FIXED INDUCTOR (1000NH)	
L105			L92-0149-05	CHIP FERRITE	
L107			L40-3375-54	SMALL FIXED INDUCTOR (33NH)	
L108			L34-4548-05	AIR-CORE COIL	
L109			L92-0149-05	CHIP FERRITE	
L110			L34-4594-05	AIR-CORE COIL	
L111			L34-4547-05	AIR-CORE COIL	
L112			L41-2295-39	SMALL FIXED INDUCTOR (2.2UH)	
L113			L34-4550-05	AIR-CORE COIL	
L114			L34-4548-05	AIR-CORE COIL	
L115			L34-4549-05	AIR-CORE COIL	
L117			L34-4548-05	AIR-CORE COIL	
L118			L41-1092-44	SMALL FIXED INDUCTOR (1UH)	
L200			L41-5685-39	SMALL FIXED INDUCTOR (0.56UH)	
L201			L41-8285-39	SMALL FIXED INDUCTOR (0.82UH)	
L202		✻	L40-1285-38	SMALL FIXED INDUCTOR (120NH)	
L203			L41-5678-03	SMALL FIXED INDUCTOR (56NH)	
L204		✻	L41-7588-40	SMALL FIXED INDUCTOR (750NH)	
L208,209			L41-5678-03	SMALL FIXED INDUCTOR (56NH)	
L210		✻	L41-4778-03	SMALL FIXED INDUCTOR (47NH)	
L211			L40-3375-92	SMALL FIXED INDUCTOR (33NH)	
L212			L34-4554-05	COIL	
L212		✻	L34-4850-15	COIL	
L214			L41-5678-03	SMALL FIXED INDUCTOR (56NH)	
L215			L41-5685-39	SMALL FIXED INDUCTOR (0.56UH)	
L400			L40-2281-86	SMALL FIXED INDUCTOR (0.22UH)	
L401			L92-0140-05	CHIP FERRITE	
L402,403			L40-2281-86	SMALL FIXED INDUCTOR (0.22UH)	
L500			L92-0140-05	CHIP FERRITE	
L501,502			L92-0149-05	CHIP FERRITE	
X1			L77-1877-15	TCXO	
X400		✻	L77-1761-15	CRYSTAL RESONATOR (7.3728MHZ)	
XF200			L71-0522-05	MCF (38.85MHZ)	
106	2B	✻	N78-2640-48	PAN HEAD TAPTITE SCREW	
CP1			RK75GB1J102J	CHIP-COM 1.0K J 1/16W	
R1			RK73GB2A154J	CHIP R 150K J 1/10W	
R2			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R3			RK73GB2A100J	CHIP R 10 J 1/10W	
R4			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R5			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R6			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R7			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R8			RK73GB2A334J	CHIP R 330K J 1/10W	
R9			RK73GB2A681J	CHIP R 680 J 1/10W	
R10			RK73GB2A151J	CHIP R 150 J 1/10W	
R11			RK73GB2A473J	CHIP R 47K J 1/10W	
R12			RK73GB2A274J	CHIP R 270K J 1/10W	

PARTS LIST

TX-RX UNIT (X57-6020-10)

Ref. No.	Address	New parts	Parts No.	Description				Destination
R13			RK73GB2A151J	CHIP R	150	J	1/10W	
R14			RK73GB2A101J	CHIP R	100	J	1/10W	
R15			RK73GB2A103J	CHIP R	10K	J	1/10W	
R16			RK73GB2A683J	CHIP R	68K	J	1/10W	
R17			RK73GB2A104J	CHIP R	100K	J	1/10W	
R18			RK73GB2A271J	CHIP R	270	J	1/10W	
R19			RK73GB2A473J	CHIP R	47K	J	1/10W	
R20			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R21			RK73GB2A104J	CHIP R	100K	J	1/10W	
R22			RK73GB2A271J	CHIP R	270	J	1/10W	
R23			RK73GB2A124J	CHIP R	120K	J	1/10W	
R24			RK73GB2A104J	CHIP R	100K	J	1/10W	
R25			RK73GB2A681J	CHIP R	680	J	1/10W	
R26			RK73GB2A472J	CHIP R	4.7K	J	1/10W	
R27			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R28 ,29			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R100			RK73GB2A332J	CHIP R	3.3K	J	1/10W	
R101			RK73GB2A103J	CHIP R	10K	J	1/10W	
R102			RK73GB2A221J	CHIP R	220	J	1/10W	
R103			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R104			RK73GB2A101J	CHIP R	100	J	1/10W	
R105,106			RK73GB2A332J	CHIP R	3.3K	J	1/10W	
R107			RK73GB2A392J	CHIP R	3.9K	J	1/10W	
R108			RK73GB2A152J	CHIP R	1.5K	J	1/10W	
R109			RK73GB2A100J	CHIP R	10	J	1/10W	
R110			RK73GB2A331J	CHIP R	330	J	1/10W	
R112			RK73GB2A180J	CHIP R	18	J	1/10W	
R114			RK73GB2A154J	CHIP R	150K	J	1/10W	
R115			RK73GB2A473J	CHIP R	47K	J	1/10W	
R116,117			RK73GB2A470J	CHIP R	47	J	1/10W	
R118			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R119			RK73GB2A472J	CHIP R	4.7K	J	1/10W	
R120			RK73GB2A332J	CHIP R	3.3K	J	1/10W	
R121			RK73GB2A473J	CHIP R	47K	J	1/10W	
R122			RK73GB2A681J	CHIP R	680	J	1/10W	
R123			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R124			RK73GB2A561J	CHIP R	560	J	1/10W	
R125			RK73GB2A332J	CHIP R	3.3K	J	1/10W	
R126			RK73GB2A681J	CHIP R	680	J	1/10W	
R127,128			RK73GB2A271J	CHIP R	270	J	1/10W	
R130-132			RK73EB2ER39K	CHIP R	0.39	K	1/4W	
R133-138			RK73GH2A154D	CHIP R	150K	D	1/10W	
R140			RK73GB2A103J	CHIP R	10K	J	1/10W	
R141			RK73GB2A473J	CHIP R	47K	J	1/10W	
R142			RK73GB2A105J	CHIP R	1.0M	J	1/10W	
R143			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R144			RK73GB2A331J	CHIP R	330	J	1/10W	
R145			RK73GB2A184J	CHIP R	180K	J	1/10W	
R146			RK73GB2A104J	CHIP R	100K	J	1/10W	
R147,148			RK73GB2A331J	CHIP R	330	J	1/10W	
R200			RK73GB2A100J	CHIP R	10	J	1/10W	
R201			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R202			RK73GB2A394J	CHIP R	390K	J	1/10W	
R203,204			RK73GB2A332J	CHIP R	3.3K	J	1/10W	
R205			RK73GB2A153J	CHIP R	15K	J	1/10W	
R206			RK73GB2A474J	CHIP R	470K	J	1/10W	
R207			RK73GB2A104J	CHIP R	100K	J	1/10W	
R208			RK73GB2A684J	CHIP R	680K	J	1/10W	
R209			RK73GB2A272J	CHIP R	2.7K	J	1/10W	
R210,211			RK73GB2A471J	CHIP R	470	J	1/10W	

Ref. No.	Address	New parts	Parts No.	Description				Destination
R212			RK73GB2A330J	CHIP R	33	J	1/10W	
R213			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R214			RK73GB2A103J	CHIP R	10K	J	1/10W	
R215			RK73GB2A271J	CHIP R	270	J	1/10W	
R216			RK73HB1J104J	CHIP R	100K	J	1/16W	
R217			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R220			RK73GB2A561J	CHIP R	560	J	1/10W	
R222			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R223			RK73HB1J101J	CHIP R	100	J	1/16W	
R225			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R226			RK73GB2A104J	CHIP R	100K	J	1/10W	
R228			RK73GB2A470J	CHIP R	47	J	1/10W	
R229			RK73GB2A471J	CHIP R	470	J	1/10W	
R230			RK73GB2A104J	CHIP R	100K	J	1/10W	
R231			RK73GB2A151J	CHIP R	150	J	1/10W	
R232			RK73GB2A470J	CHIP R	47	J	1/10W	
R233			RK73HB1J104J	CHIP R	100K	J	1/16W	
R237			RK73HB1J104J	CHIP R	100K	J	1/16W	
R238,239			RK73GB2A104J	CHIP R	100K	J	1/10W	
R240			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R241			RK73GB2A154J	CHIP R	150K	J	1/10W	
R242			RK73HB1J104J	CHIP R	100K	J	1/16W	
R243			RK73HB1J683J	CHIP R	68K	J	1/16W	
R244			RK73GB2A104J	CHIP R	100K	J	1/10W	
R245			RK73HB1J104J	CHIP R	100K	J	1/16W	
R300			RK73GH2A913D	CHIP R	91K	D	1/10W	
R301,302			RK73GB2A562J	CHIP R	5.6K	J	1/10W	
R303			RK73GB2A332J	CHIP R	3.3K	J	1/10W	
R304			RK73GB2A105J	CHIP R	1.0M	J	1/10W	
R305			RK73GB2A183J	CHIP R	18K	J	1/10W	
R306			RK73GB2A124J	CHIP R	120K	J	1/10W	
R307			RK73GB2A473J	CHIP R	47K	J	1/10W	
R308			RK73GB2A103J	CHIP R	10K	J	1/10W	
R309			RK73GB2A474J	CHIP R	470K	J	1/10W	
R311			RK73FB2B000J	CHIP R	0.0	J	1/8W	
R312			RK73GB2A123J	CHIP R	12K	J	1/10W	
R313			RK73GB2A104J	CHIP R	100K	J	1/10W	
R314			RK73GH2A474D	CHIP R	470K	D	1/10W	
R315			RK73GH2A394D	CHIP R	390K	D	1/10W	
R316			RK73GB2A274J	CHIP R	270K	J	1/10W	
R317			RK73GH2A274D	CHIP R	270K	D	1/10W	
R318			RK73GB2A184J	CHIP R	180K	J	1/10W	
R320			RK73GB2A473J	CHIP R	47K	J	1/10W	
R321			RK73GB2A223J	CHIP R	22K	J	1/10W	
R322			RK73GH2A224D	CHIP R	220K	D	1/10W	
R323			RK73GB2A104J	CHIP R	100K	J	1/10W	
R324			RK73GB2A562J	CHIP R	5.6K	J	1/10W	
R325			RK73GB2A104J	CHIP R	100K	J	1/10W	
R326			RK73GH2A562D	CHIP R	5.6K	D	1/10W	
R327			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R328			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R329			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R330			RK73GB2A473J	CHIP R	47K	J	1/10W	
R331			RK73GB2A222J	CHIP R	2.2K	J	1/10W	
R332			RK73GB2A151J	CHIP R	150	J	1/10W	
R333			RK73GB2A474J	CHIP R	470K	J	1/10W	
R334			RK73GB2A100J	CHIP R	10	J	1/10W	
R335			RK73GB2A563J	CHIP R	56K	J	1/10W	
R336			RK73GB2A333J	CHIP R	33K	J	1/10W	
R338			RK73GB2A473J	CHIP R	47K	J	1/10W	

PARTS LIST

TX-RX UNIT (X57-6020-10)

Ref. No.	Address	New parts	Parts No.	Description	Destination
R339			RK73GB2A822J	CHIP R 8.2K J 1/10W	
R340			RK73GH2A124D	CHIP R 120K D 1/10W	
R341			RK73GB2A104J	CHIP R 100K J 1/10W	
R400			RK73GB2A334J	CHIP R 330K J 1/10W	
R401			RK73GB2A104J	CHIP R 100K J 1/10W	
R402			RK73GB2A221J	CHIP R 220 J 1/10W	
R403			RK73GB2A181J	CHIP R 180 J 1/10W	
R404			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R405			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R406			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R407			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R408			RK73GB2A104J	CHIP R 100K J 1/10W	
R409			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R410			RK73GB2A822J	CHIP R 8.2K J 1/10W	
R411			RK73GB2A224J	CHIP R 220K J 1/10W	
R412			RK73GB2A100J	CHIP R 10 J 1/10W	
R413			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R414,415			RK73GB2A473J	CHIP R 47K J 1/10W	
R416			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R417			RK73GB2A100J	CHIP R 10 J 1/10W	
R418			RK73GB2A222J	CHIP R 2.2K J 1/10W	
R419			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R420			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R421			RK73HB1J473J	CHIP R 47K J 1/16W	
R422			RK73GB2A272J	CHIP R 2.7K J 1/10W	
R423			RK73HB1J473J	CHIP R 47K J 1/16W	
R424,425			RK73GB2A332J	CHIP R 3.3K J 1/10W	
R426			RK73GB2A822J	CHIP R 8.2K J 1/10W	
R427			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R428			RK73GB2A272J	CHIP R 2.7K J 1/10W	
R429			RK73GB2A821J	CHIP R 820 J 1/10W	
R430			RK73GB2A101J	CHIP R 100 J 1/10W	
R431			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R432			RK73GB2A103J	CHIP R 10K J 1/10W	
R433,434			RK73GB2A153J	CHIP R 15K J 1/10W	
R435			RK73GB2A103J	CHIP R 10K J 1/10W	
R500,501			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R502			RK73GB2A823J	CHIP R 82K J 1/10W	
R503			RK73GB2A682J	CHIP R 6.8K J 1/10W	
R504			RK73GB2A223J	CHIP R 22K J 1/10W	
R505			RK73GB2A682J	CHIP R 6.8K J 1/10W	
R506			RK73GB2A821J	CHIP R 820 J 1/10W	
R507			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R508			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R509			RK73GB2A124J	CHIP R 120K J 1/10W	
R510			RK73GB2A332J	CHIP R 3.3K J 1/10W	
R511			RK73GB2A103J	CHIP R 10K J 1/10W	
R512			RK73GB2A185J	CHIP R 1.8M J 1/10W	
R513			RK73GB2A153J	CHIP R 15K J 1/10W	
R514,515			RK73GB2A333J	CHIP R 33K J 1/10W	
R516			RK73GB2A103J	CHIP R 10K J 1/10W	
R517			RK73GB2A185J	CHIP R 1.8M J 1/10W	
R518			RK73GB2A154J	CHIP R 150K J 1/10W	
R519,520			RK73GB2A333J	CHIP R 33K J 1/10W	
R521			RK73GB2A332J	CHIP R 3.3K J 1/10W	
R522			RK73GB2A182J	CHIP R 1.8K J 1/10W	
R523			RK73GB2A682J	CHIP R 6.8K J 1/10W	
R524			RK73GB2A513J	CHIP R 51K J 1/10W	
R525			RK73GB2A152J	CHIP R 1.5K J 1/10W	
R526			RK73GH2A153D	CHIP R 15K D 1/10W	

Ref. No.	Address	New parts	Parts No.	Description	Destination
R527			RK73GH2A163D	CHIP R 16K D 1/10W	
R528			RK73GB2A754J	CHIP R 750K J 1/10W	
R529			RK73GB2A183J	CHIP R 18K J 1/10W	
R530			RK73GB2A101J	CHIP R 100 J 1/10W	
R531			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R532			RK73GB2A821J	CHIP R 820 J 1/10W	
R533			RK73GB2A104J	CHIP R 100K J 1/10W	
R534			RK73GB2A182J	CHIP R 1.8K J 1/10W	
R535			RK73GB2A471J	CHIP R 470 J 1/10W	
R536			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R537			RK73HB1J101J	CHIP R 100 J 1/16W	
R538			RK73GB2A101J	CHIP R 100 J 1/10W	
R539			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R540			RK73FB2B000J	CHIP R 0.0 J 1/8W	
R541			RK73GB2A472J	CHIP R 4.7K J 1/10W	
R542			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R548			RK73GB2A332J	CHIP R 3.3K J 1/10W	
VR1			R32-0736-05	SEMI FIXED VARIABLE RESISTOR	
VR500			R32-0736-05	SEMI FIXED VARIABLE RESISTOR	
VR501			R32-0732-05	SEMI FIXED VARIABLE RESISTOR	
S402,403			S70-0414-05	TACT SWITCH	
MIC500			T91-0651-15	MIC ELEMENT	
D1-4			1SV283F	VARIABLE CAPACITANCE DIODE	
D5			1SV214-F	VARIABLE CAPACITANCE DIODE	
D6,7			MA2S111-F	DIODE	
D100-104			HSC277	DIODE	
D200			HSC277	DIODE	
D201-205			HVC350B	VARIABLE CAPACITANCE DIODE	
D300			DA221	DIODE	
D500			1SS372F	DIODE	
D501			DAN222	DIODE	
D502			1SR154-400	DIODE	
D505			UDZW4.7(B)	ZENER DIODE	
IC1			MB15A02PFV2E1	MOS-IC	
IC100			NJM2904V-ZB	MOS-IC	
IC200			TA31136FNG	MOS-IC	
IC300			NJM2902V-ZB	MOS-IC	
IC301			NJM2904V-ZB	MOS-IC	
IC302			TA7368FG	MOS-IC	
IC400		✻	BD4840G-TR	MOS-IC	
IC401			AT24C08A10SU18	ROM IC	
IC401			CAT24WC08JI18	ROM IC	
IC402			R3111N451C-F	MOS-IC	
IC403		✻	38268MCA060GU	MICROPROCESSOR IC	
IC404			XC6201P502PR	MOS-IC	
IC500			NJM2100V-ZB	MOS-IC	
Q1			2SC4649(N,P)	TRANSISTOR	
Q2			2SC5108(Y)F	TRANSISTOR	
Q3,4		✻	2SK1875-F(V)	FET	
Q5			2SJ243-A	FET	
Q6			2SC5108(Y)F	TRANSISTOR	
Q7			UMC4N	TRANSISTOR	
Q8			2SC4617(S)	TRANSISTOR	
Q100			2SC5108(Y)F	TRANSISTOR	
Q101		✻	2SC4988-E	TRANSISTOR	
Q102			2SK2596-E	FET	
Q103			2SK1824-A	FET	
Q104			UFMMT717	TRANSISTOR	

PARTS LIST

TX-RX UNIT (X57-6020-10)

Ref. No.	Address	New parts	Parts No.	Description	Destination
Q105			2SK2595-E	FET	
Q106			2SK1824-A	FET	
Q107			DTC114TE	DIGITAL TRANSISTOR	
Q108			DTC114EE	DIGITAL TRANSISTOR	
Q109			DTA144EE	DIGITAL TRANSISTOR	
Q200			DTA114EE	DIGITAL TRANSISTOR	
Q201			2SC4649(N,P)	TRANSISTOR	
Q202,203			3SK318	FET	
Q300			2SC4617(S)	TRANSISTOR	
Q302			2SK1824-A	FET	
Q303			DTA144EE	DIGITAL TRANSISTOR	
Q304			DTC144EE	DIGITAL TRANSISTOR	
Q305			2SA1362-F(GR)	TRANSISTOR	
Q306			DTC144EE	DIGITAL TRANSISTOR	
Q307			2SK1588-AZ	FET	
Q400,401			DTC114EE	DIGITAL TRANSISTOR	
Q402			DTA114YE	DIGITAL TRANSISTOR	
Q403			DTC144EE	DIGITAL TRANSISTOR	
Q404			UMG3N	TRANSISTOR	
Q405			UPA672T-A	FET	
Q406			FP210	TRANSISTOR	
Q407			UMG3N	TRANSISTOR	
Q408			DTA123JE	DIGITAL TRANSISTOR	
Q500			2SK1824-A	FET	
Q501,502			2SC4617(S)	TRANSISTOR	
Q503			2SC4919	TRANSISTOR	
Q504			DTA143ZE	DIGITAL TRANSISTOR	
TH100			157-503-65001	THERMISTOR	
TH500			157-302-65801	THERMISTOR	

Ref. No.	Address	New parts	Parts No.	Description	Destination

EXPLODED VIEW

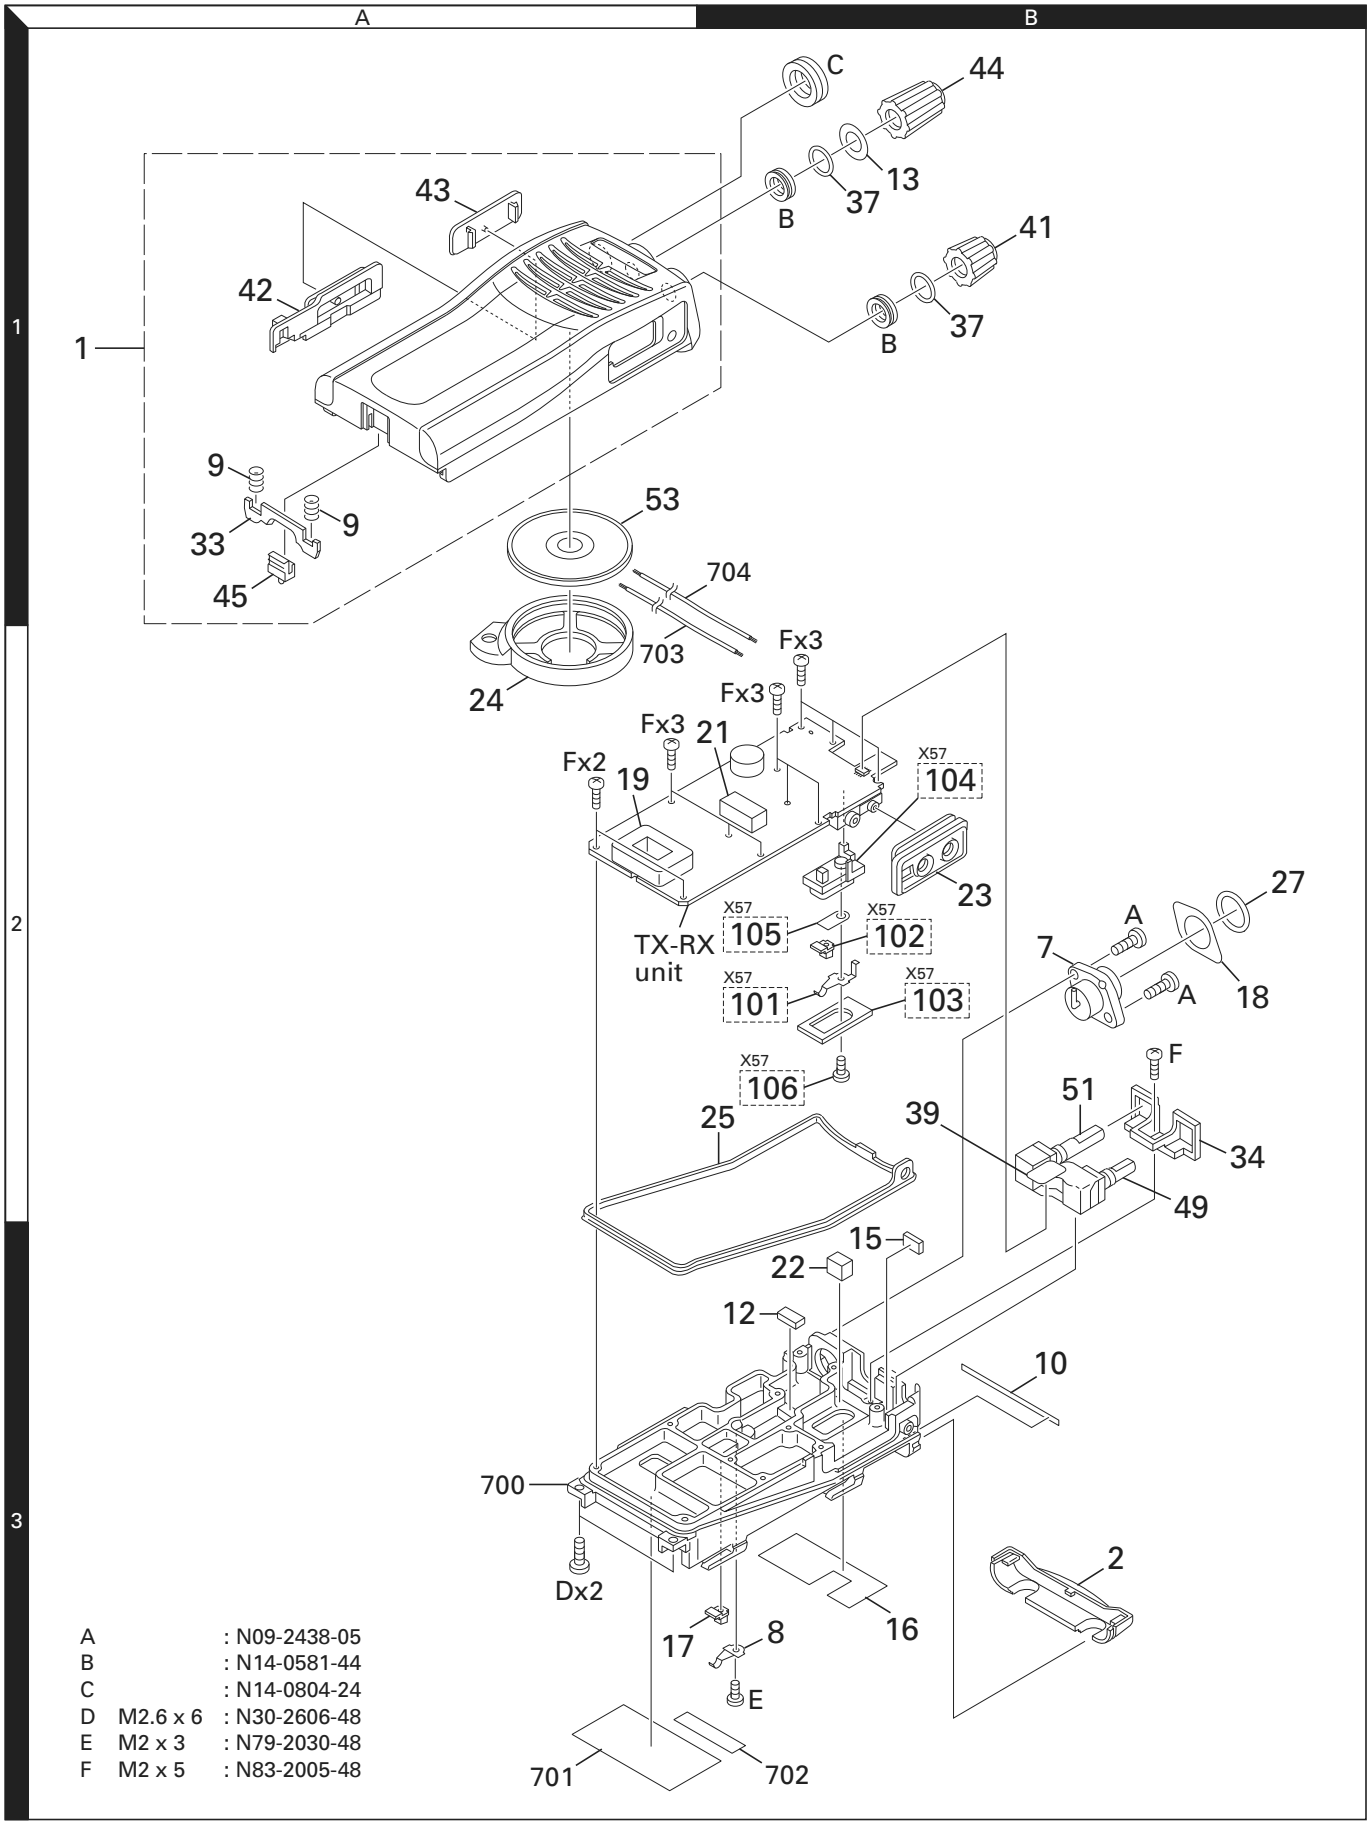

A		: N09-2438-05
B		: N14-0581-44
C		: N14-0804-24
D	M2.6 x 6	: N30-2606-48
E	M2 x 3	: N79-2030-48
F	M2 x 5	: N83-2005-48

Parts with the exploded numbers larger than 700 are not supplied.

PACKING

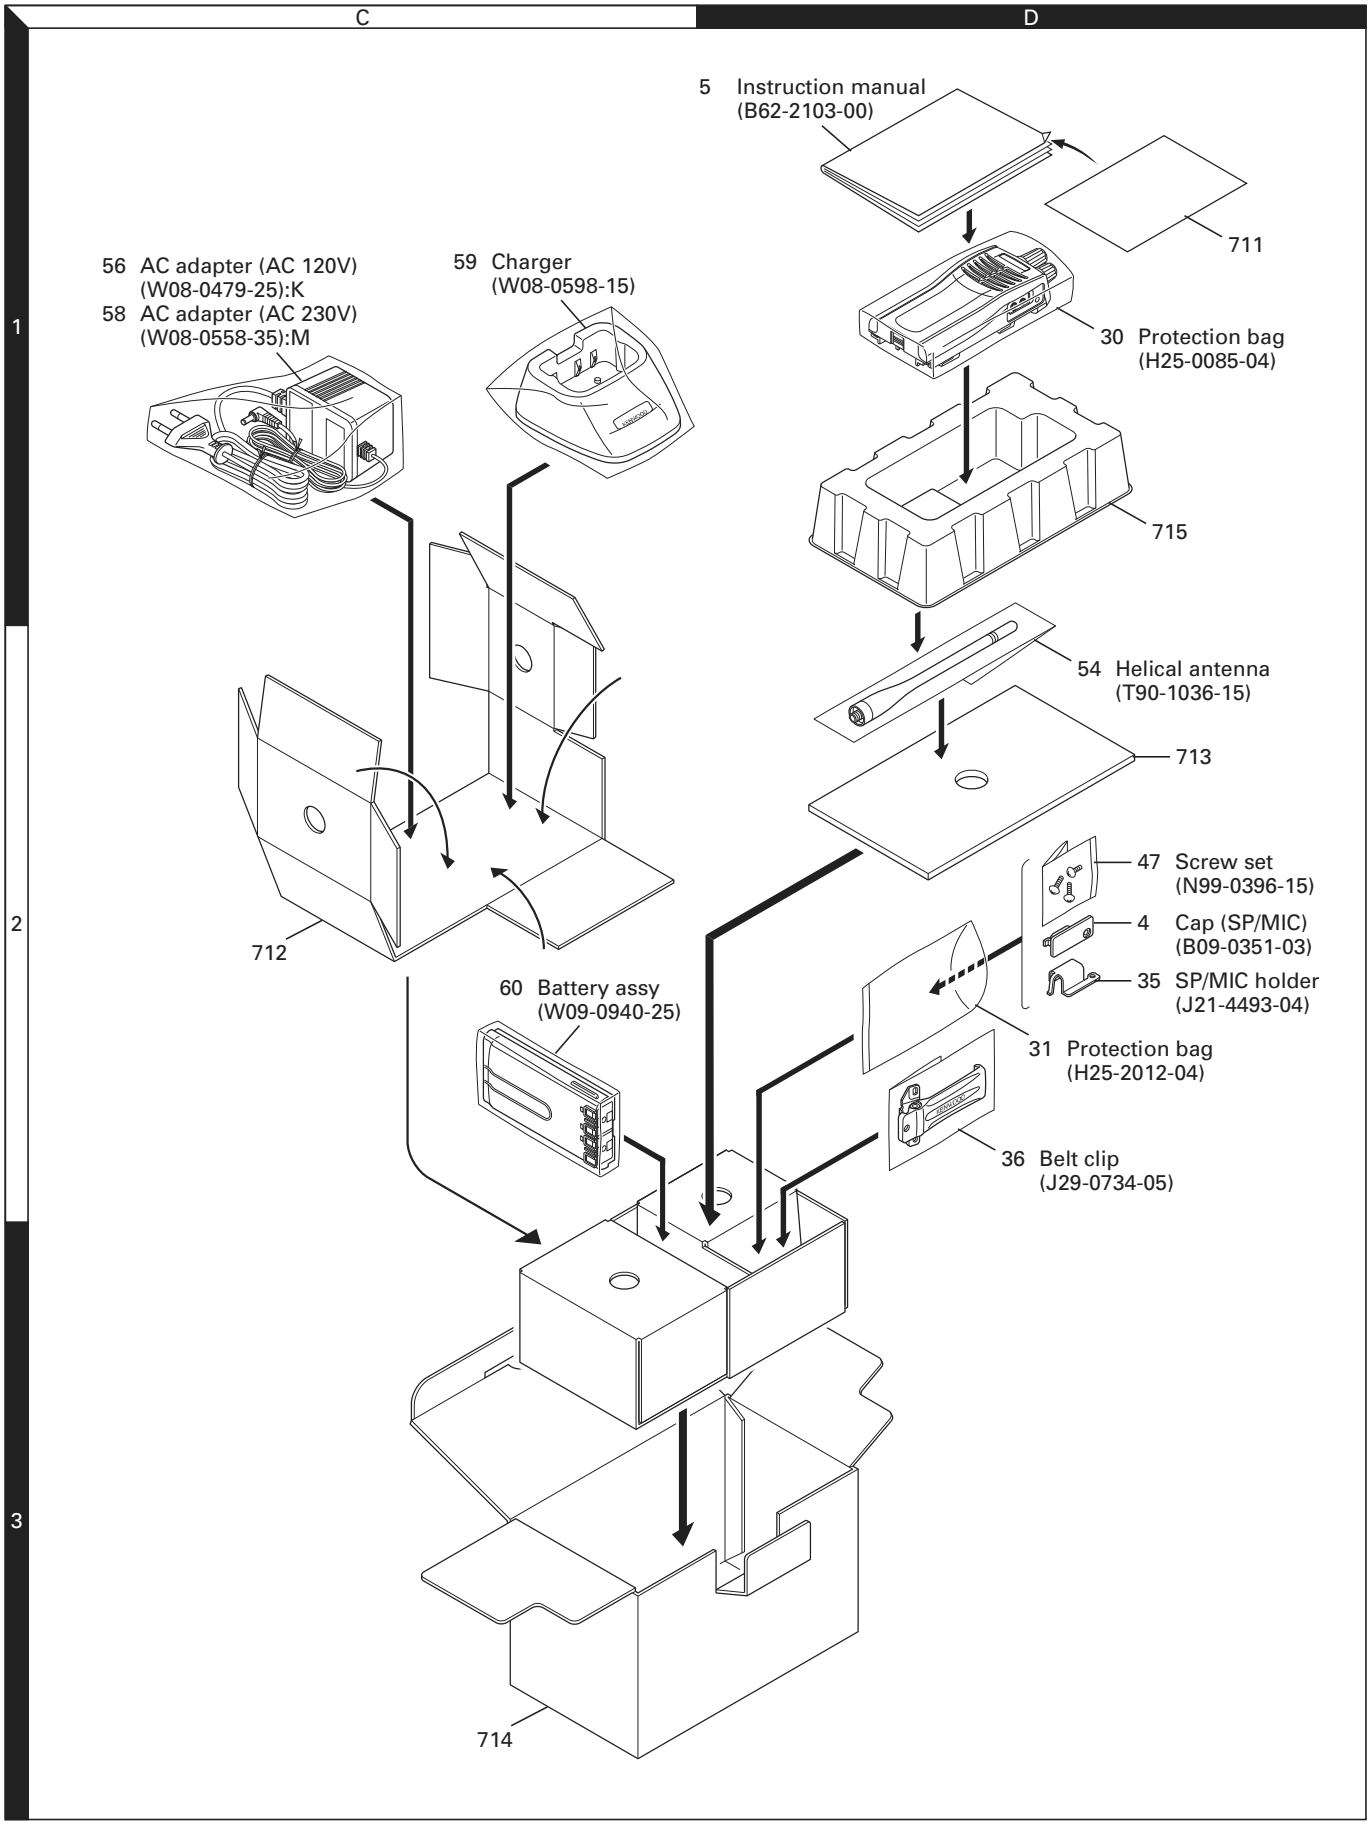

Parts with the exploded numbers larger than 700 are not supplied.