EXPLODED VIEW

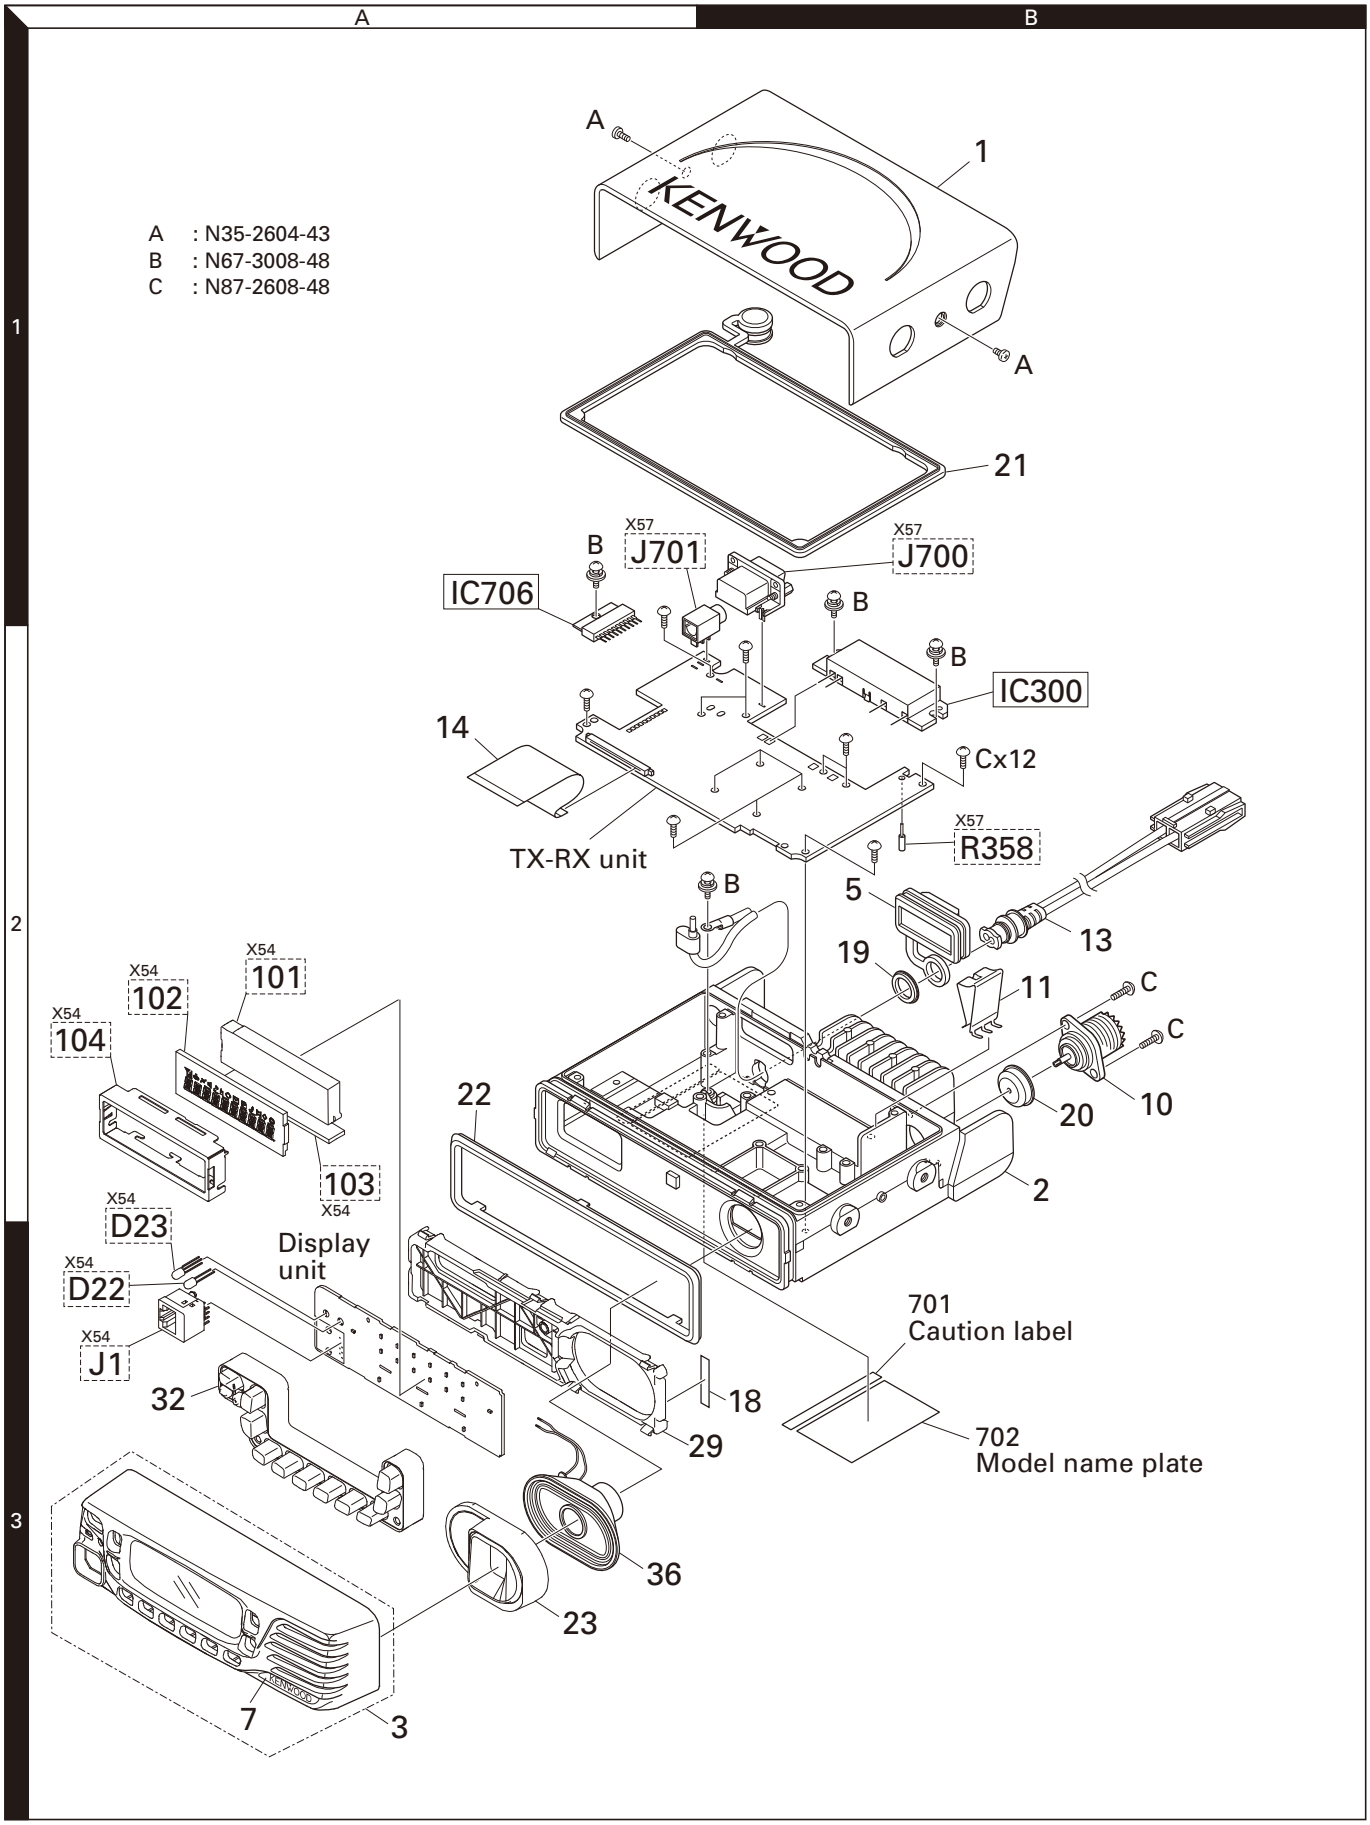

Parts with the exploded numbers larger than 700 are not supplied.
If a part reference number is listed in a box on the exploded view of the PCB, that part does not come with the PCB.
These parts must be ordered separately.

PACKING

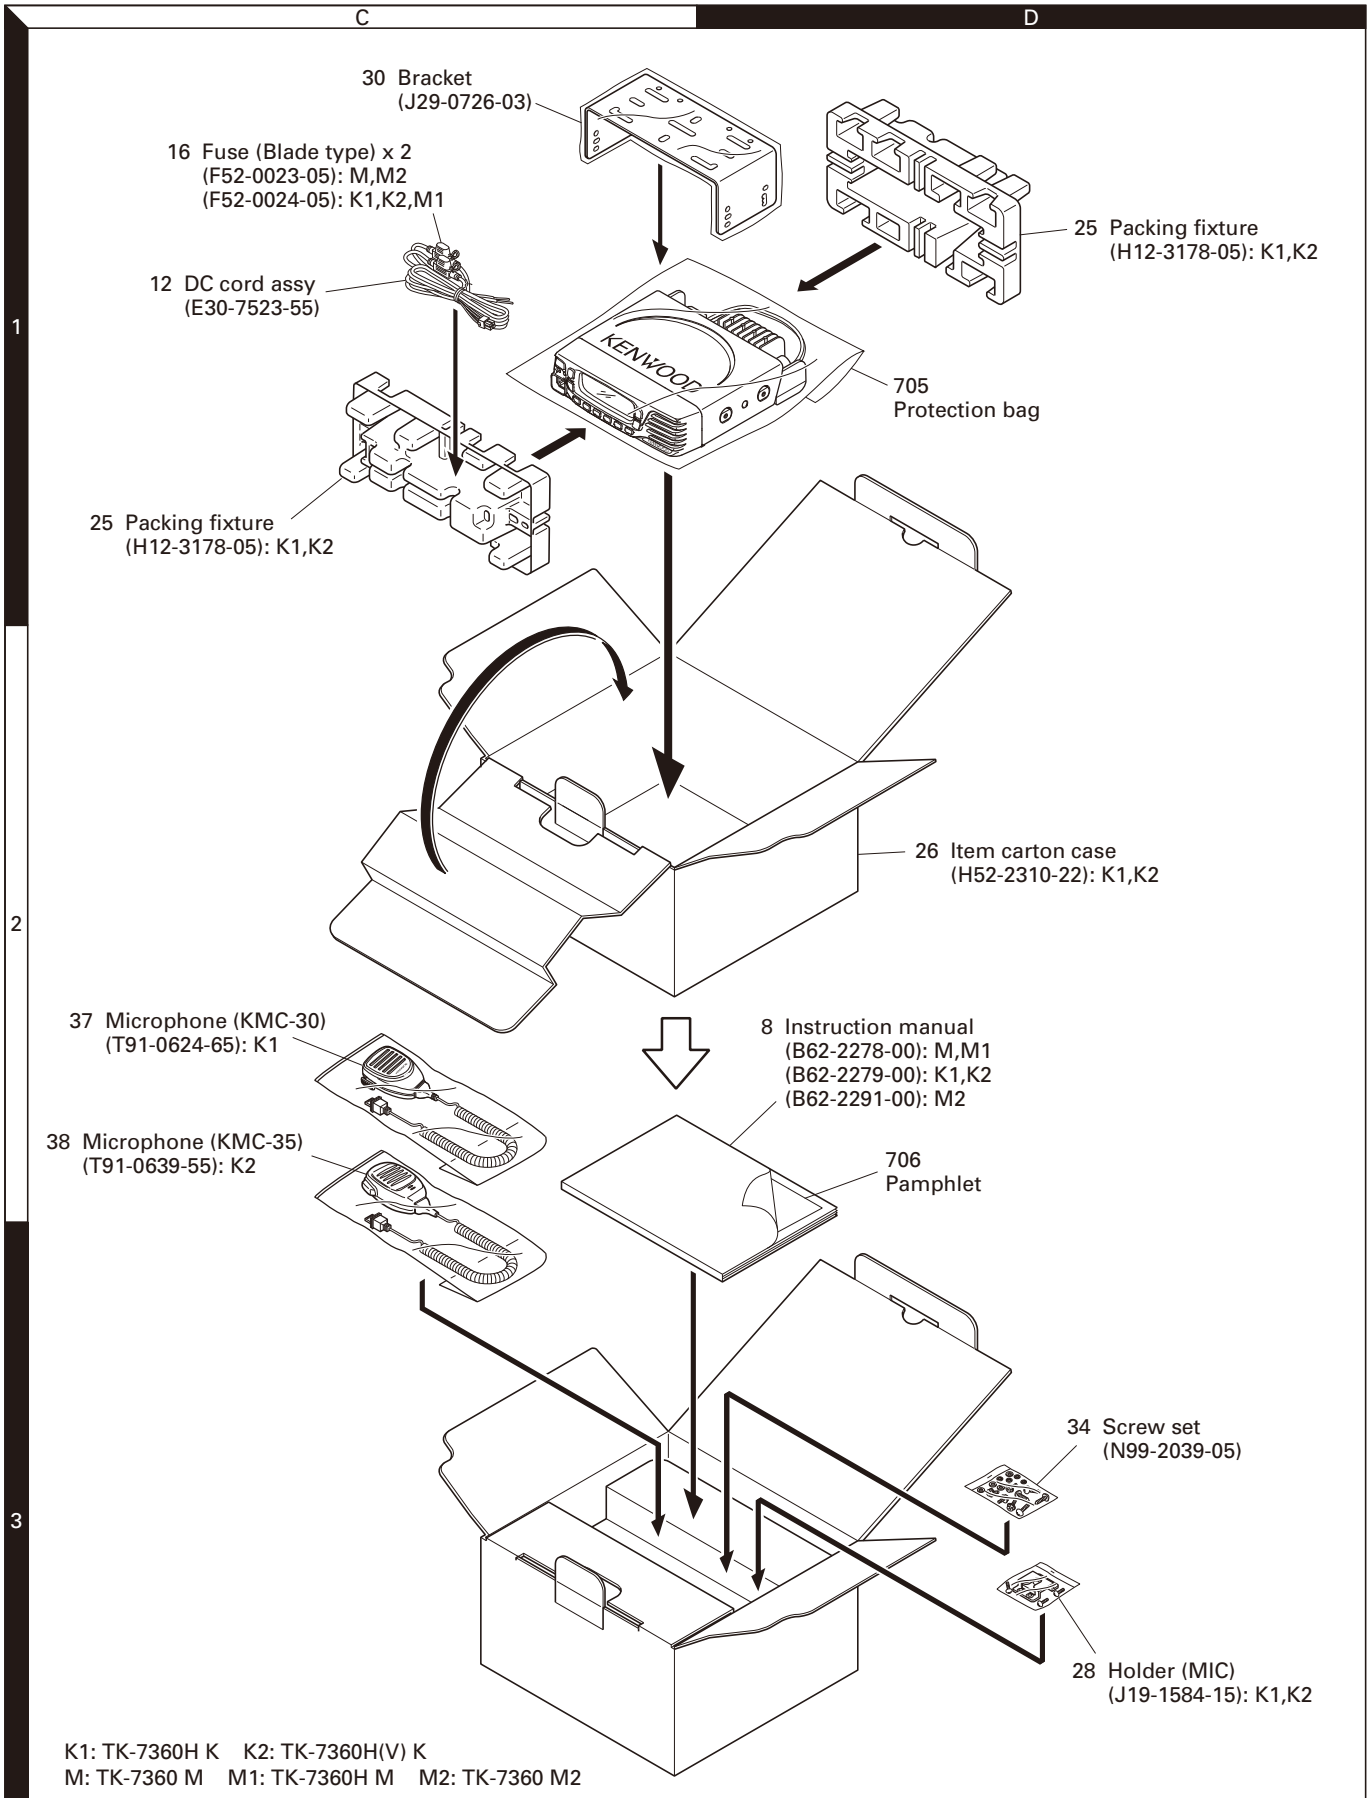

Parts with the exploded numbers larger than 700 are not supplied.

PARTS LIST

✻ New Parts. ⚠indicates safety critical components.
Parts without **Parts No.** are not supplied.
Les articles non mentionnes dans le **Parts No.** ne sont pas fournis.
Teile ohne **Parts No.** werden nicht geliefert.

L : Scandinavia **K** : USA **P** : Canada
Y : PX (Far East, Hawaii) **T** : England **E** : Europe
C : China **X** : Australia **M** : Other Areas

TK-7360/7360H/7360H(V)
DISPLAY UNIT (X54-3740-20)

Ref. No.	Address	New parts	Parts No.	Description	Destination
TK-7360/7360H/7360H(V)					
1	1B		A02-4073-21	PLASTIC CABINET	
2	2B		A10-4129-01	CHASSIS	
3	3A	✻	A62-1180-13	PANEL ASSY	
5	2B		B09-0732-03	CAP (D-SUB)	
7	3A	✻	B43-1650-04	BADGE	
8	2D	✻	B62-2278-00	INSTRUCTION MANUAL (E/R) ACCESSORY	M,M1
8	2D	✻	B62-2279-00	INSTRUCTION MANUAL (E/S/F) ACCESSORY	K1,K2
8	2D	✻	B62-2291-00	INSTRUCTION MANUAL (E/K) ACCESSORY	M2
10	2B		E04-0167-15	RF COAXIAL RECEPTACLE (M)	
11	2B		E23-1346-14	GROUND TERMINAL (CLIP)	M1,K1,K2
12	1C		E30-7523-55	DC CORD ASSY ACCESSORY	
13	2B		E30-7684-05	DC CORD	
14	2A		E37-1461-05	FLAT CABLE (30P)	
16	1C		F52-0023-05	FUSE (10A BLADE TYPE) ACCESSORY	M,M2
16	1C		F52-0024-05	FUSE (15A BLADE TYPE) ACCESSORY	M1,K1,K2
18	3B		G13-2363-04	CUSHION	
19	2B		G53-1643-04	PACKING (DC CORD)	
20	2B		G53-1662-04	PACKING (RECEPTACLE)	
21	1B		G53-1819-21	PACKING (CHASSIS)	
22	2A		G53-1820-03	PACKING (PANEL)	
23	3A	✻	G53-1858-03	PACKING (SP)	
25	1C,1D		H12-3178-05	PACKING FIXTURE	K1,K2
26	2D	✻	H52-2310-22	ITEM CARTON CASE	K1,K2
28	3D		J19-1584-15	HOLDER (MIC)	K1,K2
29	3A	✻	J19-5542-02	HOLDER (SP)	
30	1C		J29-0726-03	BRACKET ACCESSORY	
32	3A	✻	K29-9479-01	KEY TOP	
A	1A,1B		N35-2604-43	BINDING HEAD MACHINE SCREW	
B	1A,1B,2B		N67-3008-48	PAN HEAD SEMS SCREW	
C	2B		N87-2608-48	BRAZIER HEAD TAPTITE SCREW	
34	3D		N99-2039-05	SCREW SET ACCESSORY	
36	3A		T07-0785-15	SPEAKER	
37	2C		T91-0624-65	MICROPHONE ACCESSORY	K1
38	2C		T91-0639-55	MICROPHONE ACCESSORY	K2
DISPLAY UNIT (X54-3740-20)					
101	2A	✻	B11-1885-03	ILLUMINATION GUIDE	
102	2A	✻	B38-0936-05	LCD	
D5-9			B30-2337-05	LED (YELLOW)	
D11-21			B30-2337-05	LED (YELLOW)	
D22	3A		B30-2321-05	LED (BLUE)	
D23	3A		B30-2151-05	LED (RED/GRN)	
D24			B30-2337-05	LED (YELLOW)	
C1			CC73HCH1H101J	CHIP C 100PF J	
C2,3			CK73HB1H221K	CHIP C 220PF K	
C4			CC73HCH1H101J	CHIP C 100PF J	
C5			CK73HB1H221K	CHIP C 220PF K	

Ref. No.	Address	New parts	Parts No.	Description	Destination
C6			CK73HB1H471K	CHIP C 470PF K	
C7			CK73HB1H102K	CHIP C 1000PF K	
C8			CK73HB1H221K	CHIP C 220PF K	
C9			CK73HB1H471K	CHIP C 470PF K	
C10			CK73HB1H102K	CHIP C 1000PF K	
C11			CK73HB1H221K	CHIP C 220PF K	
C12			CC73HCH1H101J	CHIP C 100PF J	
C13			CK73HB1E103K	CHIP C 0.010UF K	
C14,15			CK73HB1H102K	CHIP C 1000PF K	
C20			CC73HCH1H101J	CHIP C 100PF J	
C21			CK73HB1E103K	CHIP C 0.010UF K	
C22			CK73HB1H221K	CHIP C 220PF K	
C23			CK73HB1H102K	CHIP C 1000PF K	
C24			CK73HB1E103K	CHIP C 0.010UF K	
C25,26			CK73HB1H471K	CHIP C 470PF K	
C27,28			CK73HB1A105K	CHIP C 1.0UF K	
C29-31			CK73HB1H102K	CHIP C 1000PF K	
C32,33			CK73HB1C473K	CHIP C 0.047UF K	
103	2A	✻	E29-1231-15	INTER CONNECTOR (LCD)	
CN1			E40-6851-05	FLAT CABLE CONNECTOR (30P)	
J1	3A		E58-0535-05	MODULAR JACK (MIC)	
104	2A	✻	J21-8629-03	MOUNTING HARDWARE (LCD)	
L1			L92-0138-05	CHIP FERRITE	
CP1			RK74HB1J102J	CHIP-COM 1.0K J 1/16W	
R1			RK73HB1J100J	CHIP R 10 J 1/16W	
R2-4			RK73HB1J103J	CHIP R 10K J 1/16W	
R5			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R6			RK73HB1J150J	CHIP R 15 J 1/16W	
R7			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R8			RK73FB2B100J	CHIP R 10 J 1/8W	
R9			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R12			RK73HB1J101J	CHIP R 100 J 1/16W	
R14			RK73HB1J122J	CHIP R 1.2K J 1/16W	
R15			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R17			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R18			RK73HB1J181J	CHIP R 180 J 1/16W	
R19			RK73HB1J820J	CHIP R 82 J 1/16W	
R20			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R22			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R23			RK73HB1J473J	CHIP R 47K J 1/16W	
R24,25			RK73HB1J103J	CHIP R 10K J 1/16W	
R26			RK73HB1J123J	CHIP R 12K J 1/16W	
R27			RK73HB1J473J	CHIP R 47K J 1/16W	
R28,29			RK73HB1J151J	CHIP R 150 J 1/16W	
R30,31			RK73HB1J121J	CHIP R 120 J 1/16W	
R32			RK73HB1J103J	CHIP R 10K J 1/16W	
R33			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R34-37			RK73HB1J151J	CHIP R 150 J 1/16W	
D1			UDZW6.2(B)	ZENER DIODE	
D2			DA221	DIODE	
D10			MC2850	DIODE	
IC1		✻	LC75857W-E	MOS-IC	
Q2,3			RT1N141U-T111	TRANSISTOR	

K1: TK-7360H K K2: TK-7360H(V) K
M: TK-7360 M M1: TK-7360H M M2: TK-7360 M2

PARTS LIST

DISPLAY UNIT (X54-3740-20)
TX-RX UNIT (X57-8020-XX)

Ref. No.	Address	New parts	Parts No.	Description			Destination
Q4,5			RT1P141U-T111	TRANSISTOR			
Q6			RT1N141U-T111	TRANSISTOR			
Q7			KRA225S	TRANSISTOR			
Q8		*	RT1N141C-T112	TRANSISTOR			
Q9			RN47A4-F	TRANSISTOR			
Q10			2SB1132(Q,R)	TRANSISTOR			
TX-RX UNIT (X57-8020-XX) -10: K1,K2,M1 -21: M,M2							
C1			CK73HB1H471K	CHIP C	470PF	K	
C2			CC73HCH1H101J	CHIP C	100PF	J	
C5,6			CC73HCH1H101J	CHIP C	100PF	J	
C7			CK73HB1H102K	CHIP C	1000PF	K	
C8,9			CK73HB1A104K	CHIP C	0.10UF	K	
C10			CK73HB1H102K	CHIP C	1000PF	K	
C11			CC73GCH1H101J	CHIP C	100PF	J	
C12			CC73HCH1H200J	CHIP C	20PF	J	
C14			CC73HCH1H101J	CHIP C	100PF	J	
C16			CC73HCH1H101J	CHIP C	100PF	J	
C17			CC73HCH1H080B	CHIP C	8.0PF	B	
C19			CK73FB0J106K	CHIP C	10UF	K	
C21			CK73HB1A104K	CHIP C	0.10UF	K	
C22			CK73HB0J105K	CHIP C	1.0UF	K	
C23,24			CK73HB1A104K	CHIP C	0.10UF	K	
C25			CK73FB0J106K	CHIP C	10UF	K	
C27			CK73HB1A104K	CHIP C	0.10UF	K	
C28			CK73FB0J106K	CHIP C	10UF	K	
C29			CK73HB1H471K	CHIP C	470PF	K	
C30			CK73HB1E103K	CHIP C	0.010UF	K	
C31			CK73HB1A104K	CHIP C	0.10UF	K	
C32,33			CK73HB1H102K	CHIP C	1000PF	K	
C36			CK73HB1H471K	CHIP C	470PF	K	
C37			CC73HCH1H040B	CHIP C	4.0PF	B	
C40			CC73HCH1H060B	CHIP C	6.0PF	B	
C41			CC73HCH1H3R5B	CHIP C	3.5PF	B	
C42			CS77CA1V0R1M	CHIP TNTL	0.1UF	35WV	
C43			CK73HB1H471K	CHIP C	470PF	K	
C45			CC73HCH1H390J	CHIP C	39PF	J	
C46			CC73HCH1H470J	CHIP C	47PF	J	
C47			CK73HB1H471K	CHIP C	470PF	K	
C48			CS77BA1E010M	CHIP TNTL	1.0UF	25WV	
C49			CC73HCH1H270J	CHIP C	27PF	J	
C50			CC73GCH1H080B	CHIP C	8.0PF	B	
C51			CC73HCH1H390J	CHIP C	39PF	J	
C52			CC73HCH1H330J	CHIP C	33PF	J	
C55			CK73HB1H102K	CHIP C	1000PF	K	
C56			CC73HCH1H060B	CHIP C	6.0PF	B	
C57			C92-0863-05	CHIP TNTL	0.047UF	35WV	
C59			CK73HB1H102K	CHIP C	1000PF	K	
C63			C93-0787-05	CHIP C	0.1UF	J	
C65			CK73HB1A104K	CHIP C	0.10UF	K	
C68			CC73HCH1H470J	CHIP C	47PF	J	
C70			CC73HCH1H101J	CHIP C	100PF	J	
C72			CK73HB1H102K	CHIP C	1000PF	K	
C74			CK73HB1H102K	CHIP C	1000PF	K	
C75			CK73FB0J106K	CHIP C	10UF	K	
C77			CC73HCH1H101J	CHIP C	100PF	J	
C79			CC73HCH1H330J	CHIP C	33PF	J	
C80			CC73HCH1H101J	CHIP C	100PF	J	

Ref. No.	Address	New parts	Parts No.	Description			Destination
C82			CC73HCH1HR75B	CHIP C	0.75PF	B	
C83,84			CK73HB1H102K	CHIP C	1000PF	K	
C85,86			CK73GB1H102K	CHIP C	1000PF	K	
C87,88			CC73HCH1H040B	CHIP C	4.0PF	B	
C89,90			CK73GB1H102K	CHIP C	1000PF	K	
C91			CC73HCH1H060B	CHIP C	6.0PF	B	
C92			CC73HCH1H080B	CHIP C	8.0PF	B	
C93			CC73HCH1H3R5B	CHIP C	3.5PF	B	
C94			CC73HCH1H060B	CHIP C	6.0PF	B	
C95			CK73HB1H471K	CHIP C	470PF	K	
C96,97			CC73HCH1H010B	CHIP C	1.0PF	B	
C98			CS77BB21C100M	CHIP TNTL	10UF	16WV	
C99			CK73HB1H102K	CHIP C	1000PF	K	
C100			CK73HB1H471K	CHIP C	470PF	K	
C101			CK73HB1H102K	CHIP C	1000PF	K	
C102			CC73HCH1H180J	CHIP C	18PF	J	
C103			CC73HCH1H050B	CHIP C	5.0PF	B	
C104			CC73GCH1H050B	CHIP C	5.0PF	B	
C105-107			CK73HB1H102K	CHIP C	1000PF	K	
C108			CC73HCH1H120J	CHIP C	12PF	J	
C109			CK73HB1H102K	CHIP C	1000PF	K	
C110			CC73GCH1H180J	CHIP C	18PF	J	
C111			CK73HB1E103K	CHIP C	0.010UF	K	
C112			CK73HB1H471K	CHIP C	470PF	K	
C113			CK73HB1H102K	CHIP C	1000PF	K	
C114			CK73FB0J226M	CHIP C	22UF	M	
C300			CC73GCH1H151J	CHIP C	150PF	J	
C301			CC73HCH1H080B	CHIP C	8.0PF	B	
C302			CC73HCH1H070B	CHIP C	7.0PF	B	
C303			CK73HB1H471K	CHIP C	470PF	K	
C304			CC73HCH1H120J	CHIP C	12PF	J	
C305			CK73HB1H102K	CHIP C	1000PF	K	
C308			CC73HCH1H130J	CHIP C	13PF	J	
C309			CK73HB1H102K	CHIP C	1000PF	K	
C310			CC73HCH1H2R5B	CHIP C	2.5PF	B	
C311			CK73HB1E223K	CHIP C	0.022UF	K	
C312			CC73GCH1H151J	CHIP C	150PF	J	
C313			CS77BA1C4R7M	CHIP TNTL	4.7UF	16WV	
C314			CK73GB1H102K	CHIP C	1000PF	K	
C319			CK73HB1H471K	CHIP C	470PF	K	
C321			CC73HCH1H101J	CHIP C	100PF	J	
C322			CK73GB1H221K	CHIP C	220PF	K	
C324			CC73GCH1H220J	CHIP C	22PF	J	
C325			CK73GB1H102K	CHIP C	1000PF	K	
C326,327			CC73GCH1H101J	CHIP C	100PF	J	
C328			CK73HB1A104K	CHIP C	0.10UF	K	
C330			CK73GB1H102K	CHIP C	1000PF	K	
C332			CK73GB1H471K	CHIP C	470PF	K	
C333			CC73GCH1H470J	CHIP C	47PF	J	
C334			CC73GCH1H220J	CHIP C	22PF	J	
C335			C93-0559-05	CHIP C	9.0PF	D	M1,K1,K2
C335			C93-0561-05	CHIP C	12PF	J	M,M2
C338			CK73HB1A104K	CHIP C	0.10UF	K	
C339			CK73GB1H102K	CHIP C	1000PF	K	
C342			CK73HB1H102K	CHIP C	1000PF	K	
C343			CK73GB1H102K	CHIP C	1000PF	K	
C345			CK73GB1H103K	CHIP C	0.010UF	K	
C346,347			CK73HB1H102K	CHIP C	1000PF	K	
C348			CK73GB1H103K	CHIP C	0.010UF	K	
C349			CK73HB1H102K	CHIP C	1000PF	K	

K1: TK-7360H K K2: TK-7360H(V) K
M: TK-7360 M M1: TK-7360H M M2: TK-7360 M2

PARTS LIST

TX-RX UNIT (X57-8020-XX)

Ref. No.	Address	New parts	Parts No.	Description			Destination
C350			CC73GCH1H050B	CHIP C	5.0PF	B	
C351			C93-0561-05	CHIP C	12PF	J	M1,K1,K2
C351			C93-0562-05	CHIP C	15PF	J	M,M2
C352,353			C93-0603-05	CHIP C	1000PF	K	
C354			CC73GCH1H020B	CHIP C	2.0PF	B	M1,K1,K2
C354			CC73GCH1H080B	CHIP C	8.0PF	B	M,M2
C355			CC73GCH1H430J	CHIP C	43PF	J	
C356			C93-0562-05	CHIP C	15PF	J	
C357			C93-0552-05	CHIP C	2.0PF	C	
C358			CM73F2H180J	CHIP C	18PF	J	M,M2
C358			CM73F2H200J	CHIP C	20PF	J	M1,K1,K2
C359			C93-0552-05	CHIP C	2.0PF	C	
C361			C93-0554-05	CHIP C	4.0PF	C	
C363			C93-0562-05	CHIP C	15PF	J	
C364			CK73GB1H102K	CHIP C	1000PF	K	
C366			CK73GB1H102K	CHIP C	1000PF	K	
C367			CK73HB1H102K	CHIP C	1000PF	K	
C401			CK73HB1A104K	CHIP C	0.10UF	K	
C402			CK73HB1E103K	CHIP C	0.010UF	K	
C404			CS77BB21C220M	CHIP TNTL	22UF	16WV	
C406			CS77BB21C220M	CHIP TNTL	22UF	16WV	
C407			CK73HB1A104K	CHIP C	0.10UF	K	
C410-412			CK73HB1A104K	CHIP C	0.10UF	K	
C414			CK73HB0J105K	CHIP C	1.0UF	K	
C415			CK73GB1H102K	CHIP C	1000PF	K	
C416,417			CK73HB1H102K	CHIP C	1000PF	K	
C418			CK73GB1A105K	CHIP C	1.0UF	K	
C419			CK73GB1H102K	CHIP C	1000PF	K	
C420			CS77BA1A100M	CHIP TNTL	10UF	10WV	
C421			CK73HB1H102K	CHIP C	1000PF	K	
C422			CK73HB1E103K	CHIP C	0.010UF	K	
C423,424			CK73GB1H102K	CHIP C	1000PF	K	
C425			CK73HB1E103K	CHIP C	0.010UF	K	
C426			CK73GB1A105K	CHIP C	1.0UF	K	
C427			CK73HB1H102K	CHIP C	1000PF	K	
C428			CK73FB1E225K	CHIP C	2.2UF	K	
C429			CK73EB1E106K	CHIP C	10UF	K	
C430			CK73HB1H102K	CHIP C	1000PF	K	
C433			CK73HB1A104K	CHIP C	0.10UF	K	
C434			CK73GB1H102K	CHIP C	1000PF	K	
C435			CK73GB1H221K	CHIP C	220PF	K	
C436			CK73GB1H471K	CHIP C	470PF	K	
C437			CC73GCH1H220J	CHIP C	22PF	J	
C438			CK73GB1H102K	CHIP C	1000PF	K	
C439			CC73GCH1H470J	CHIP C	47PF	J	
C443			CK73GB1H102K	CHIP C	1000PF	K	
C444			CK73HB1A334K	CHIP C	0.33UF	K	
C446			CK73GB1H471K	CHIP C	470PF	K	
C447			CK73GB1H221K	CHIP C	220PF	K	
C448			CK73GB1H102K	CHIP C	1000PF	K	
C449			CK73HB1H102K	CHIP C	1000PF	K	
C500			CC73HCH1H470J	CHIP C	47PF	J	
C502			CC73HCH1H101J	CHIP C	100PF	J	
C504			CK73HB1E103K	CHIP C	0.010UF	K	
C505			CC73HCH1H470J	CHIP C	47PF	J	
C506			CC73HCH1H160J	CHIP C	16PF	J	
C508			CC73HCH1H270J	CHIP C	27PF	J	
C509			CK73HB1E103K	CHIP C	0.010UF	K	
C510-515			CK73HB1A104K	CHIP C	0.10UF	K	
C517			CK73HB1H102K	CHIP C	1000PF	K	

Ref. No.	Address	New parts	Parts No.	Description			Destination
C518			CK73HB1E103K	CHIP C	0.010UF	K	
C519			CK73HB1H331K	CHIP C	330PF	K	
C520			CK73FB0J106K	CHIP C	10UF	K	
C521			CK73HB1H331K	CHIP C	330PF	K	
C522,523			CK73HB1A104K	CHIP C	0.10UF	K	
C524			CK73GB1C104K	CHIP C	0.10UF	K	
C525			CK73HB1H102K	CHIP C	1000PF	K	
C527			CK73HB1E562K	CHIP C	5600PF	K	
C528			CC73HCH1H820J	CHIP C	82PF	J	
C529			CC73HCH1H100C	CHIP C	10PF	C	
C530			CK73HB1E103K	CHIP C	0.010UF	K	
C531			CK73HB1A104K	CHIP C	0.10UF	K	
C532			CK73HB1H471K	CHIP C	470PF	K	
C533			CK73HB1A104K	CHIP C	0.10UF	K	
C535			CK73HB1H102K	CHIP C	1000PF	K	
C537			CK73HB1A104K	CHIP C	0.10UF	K	
C538			CK73HB1H102K	CHIP C	1000PF	K	
C540			CK73HB1H102K	CHIP C	1000PF	K	
C541,542			CK73HB1E103K	CHIP C	0.010UF	K	
C543			CK73HB1E223K	CHIP C	0.022UF	K	
C544			CC73HCH1H010B	CHIP C	1.0PF	B	
C545			CC73HCH1H180J	CHIP C	18PF	J	
C546			CC73HCH1H150J	CHIP C	15PF	J	
C549			CK73HB0J224K	CHIP C	0.22UF	K	
C550			CK73HB1A104K	CHIP C	0.10UF	K	
C551			CK73HB1E103K	CHIP C	0.010UF	K	
C552			CK73HB1H102K	CHIP C	1000PF	K	
C553			CC73HCH1H150G	CHIP C	15PF	G	
C554			CC73HCH1H070B	CHIP C	7.0PF	B	
C555			CK73HB1E103K	CHIP C	0.010UF	K	
C556			CK73HB1H102K	CHIP C	1000PF	K	
C557			CK73GB1H471K	CHIP C	470PF	K	
C558			CK73HB1H102K	CHIP C	1000PF	K	
C559			CK73HB1E103K	CHIP C	0.010UF	K	
C560			CK73HB1H102K	CHIP C	1000PF	K	
C561			CC73HCH1H220J	CHIP C	22PF	J	
C562			CK73HB1H102K	CHIP C	1000PF	K	
C563			CK73HB1H471K	CHIP C	470PF	K	
C570			CC73HCH1H010B	CHIP C	1.0PF	B	
C571			CC73HCH1H560J	CHIP C	56PF	J	
C572			CC73HCH1H040B	CHIP C	4.0PF	B	
C573			CK73HB1H102K	CHIP C	1000PF	K	
C574			CC73HCH1H010B	CHIP C	1.0PF	B	
C575			CC73HCH1H560J	CHIP C	56PF	J	
C578			CC73HCH1H1R5B	CHIP C	1.5PF	B	
C579			CK73HB1H102K	CHIP C	1000PF	K	
C580			CK73HB1H471K	CHIP C	470PF	K	
C582			CK73HB1A104K	CHIP C	0.10UF	K	
C583			CK73HB1H102K	CHIP C	1000PF	K	
C585			CK73HB1H102K	CHIP C	1000PF	K	
C586			CK73HB1H471K	CHIP C	470PF	K	
C587			CK73HB1H102K	CHIP C	1000PF	K	
C588,589			CK73HB1H471K	CHIP C	470PF	K	
C590			CC73HCH1H020B	CHIP C	2.0PF	B	
C591			CC73GCH1H471J	CHIP C	470PF	J	
C592			CC73HCH1H560J	CHIP C	56PF	J	
C593			CC73HCH1H030B	CHIP C	3.0PF	B	
C594			CK73HB1H102K	CHIP C	1000PF	K	
C595			CC73HCH1H030B	CHIP C	3.0PF	B	
C596			CC73HCH1H560J	CHIP C	56PF	J	

K1: TK-7360H K K2: TK-7360H(V) K
M: TK-7360 M M1: TK-7360H M M2: TK-7360 M2

PARTS LIST

TX-RX UNIT (X57-8020-XX)

Ref. No.	Address	New parts	Parts No.	Description			Destination
C597			CC73HCH1H020B	CHIP C	2.0PF	B	
C598			CC73GCH1H240J	CHIP C	24PF	J	
C600			CC73HCH1H040B	CHIP C	4.0PF	B	
C601			CC73HCH1H070B	CHIP C	7.0PF	B	
C602			CC73HCH1H180J	CHIP C	18PF	J	
C605			CC73HCH1H080B	CHIP C	8.0PF	B	
C606			CC73HCH1H120J	CHIP C	12PF	J	
C607			CK73HB1H471K	CHIP C	470PF	K	
C700			CC73HCH1H101J	CHIP C	100PF	J	
C701			CK73HB1H102K	CHIP C	1000PF	K	
C702			CK73HB1H471K	CHIP C	470PF	K	
C703,704			CK73HB1H102K	CHIP C	1000PF	K	
C705			CK73HB1H471K	CHIP C	470PF	K	
C706			CK73HB1H102K	CHIP C	1000PF	K	
C707,708			CK73HB1H471K	CHIP C	470PF	K	
C709			CK73HB1H102K	CHIP C	1000PF	K	
C710			CK73HB1H471K	CHIP C	470PF	K	
C712			CK73HB1H471K	CHIP C	470PF	K	
C714			CK73HB1H471K	CHIP C	470PF	K	
C716-718			CK73HB1H471K	CHIP C	470PF	K	
C720			CK73HB1H471K	CHIP C	470PF	K	
C722-724			CK73HB1H471K	CHIP C	470PF	K	
C726			CK73HB1H471K	CHIP C	470PF	K	
C728			CK73HB1H471K	CHIP C	470PF	K	
C730			CK73HB1H471K	CHIP C	470PF	K	
C732			CK73HB1H471K	CHIP C	470PF	K	
C734			CK73HB1H471K	CHIP C	470PF	K	
C735			CK73HB1H221K	CHIP C	220PF	K	
C736			CK73HB1H471K	CHIP C	470PF	K	
C738			CK73HB1H471K	CHIP C	470PF	K	
C739			CC73HCH1H101J	CHIP C	100PF	J	
C740			CK73HB1H471K	CHIP C	470PF	K	
C742,743			CC73HCH1H470J	CHIP C	47PF	J	
C744			CK73HB1H471K	CHIP C	470PF	K	
C745			CC73HCH1H470J	CHIP C	47PF	J	
C746			CK73HB1H471K	CHIP C	470PF	K	
C747			CK73GB1H102K	CHIP C	1000PF	K	
C748			CK73GB1A105K	CHIP C	1.0UF	K	
C749			CK73HB0J105K	CHIP C	1.0UF	K	
C752			CK73HB0J105K	CHIP C	1.0UF	K	
C754			CK73GB1H102K	CHIP C	1000PF	K	
C755			CK73HB0J105K	CHIP C	1.0UF	K	
C756			CK73GB1C104K	CHIP C	0.10UF	K	
C758			CK73HB1A104K	CHIP C	0.10UF	K	
C761			CK73HB1H471K	CHIP C	470PF	K	
C762,763			CK73GB1E105K	CHIP C	1.0UF	K	
C764			CK73HB1A104K	CHIP C	0.10UF	K	
C765			CK73FB0J106K	CHIP C	10UF	K	
C766			CK73HB1A104K	CHIP C	0.10UF	K	
C767,768			CK73GB1E105K	CHIP C	1.0UF	K	
C769			CK73HB1A104K	CHIP C	0.10UF	K	
C771			CC73HCH1H390J	CHIP C	39PF	J	
C772			CK73HB1A104K	CHIP C	0.10UF	K	
C773			CK73HB0J105K	CHIP C	1.0UF	K	
C774,775			CK73HB1A104K	CHIP C	0.10UF	K	
C777			CK73HB1A104K	CHIP C	0.10UF	K	
C778			CK73HB0J105K	CHIP C	1.0UF	K	
C779			CK73HB1A104K	CHIP C	0.10UF	K	
C780			CK73GB0J475K	CHIP C	4.7UF	K	
C784			CK73HB1A104K	CHIP C	0.10UF	K	

Ref. No.	Address	New parts	Parts No.	Description			Destination
C785			CK73HB1C333K	CHIP C	0.033UF	K	
C786			CC73HCH1H121J	CHIP C	120PF	J	
C788			CK73HB1H102K	CHIP C	1000PF	K	
C790			CK73GB0J106K	CHIP C	10UF	K	
C791			CK73HB1A104K	CHIP C	0.10UF	K	
C792			CC73HCH1H391J	CHIP C	390PF	J	
C793			CK73HB1H471K	CHIP C	470PF	K	
C794			CK73HB1A104K	CHIP C	0.10UF	K	
C795			CK73HB0J105K	CHIP C	1.0UF	K	
C796			CK73HB1E103K	CHIP C	0.010UF	K	
C797			CK73HB1A104K	CHIP C	0.10UF	K	
C799-801			CK73HB1A104K	CHIP C	0.10UF	K	
C802			CK73HB1E103K	CHIP C	0.010UF	K	
C803			CK73HB0J105K	CHIP C	1.0UF	K	
C804			CK73GB0J106K	CHIP C	10UF	K	
C807			CK73GB1C104K	CHIP C	0.10UF	K	
C808			CK73GB1H471K	CHIP C	470PF	K	
C809			CK73HB0J105K	CHIP C	1.0UF	K	
C810			CC73HCH1H101J	CHIP C	100PF	J	
C811			CK73FB0J106K	CHIP C	10UF	K	
C812			CK73HB0J105K	CHIP C	1.0UF	K	
C813			CC73HCH1H101J	CHIP C	100PF	J	
C814			CK73HB0J105K	CHIP C	1.0UF	K	
C815			CC73HCH1H151J	CHIP C	150PF	J	
C816			CK73HB0J105K	CHIP C	1.0UF	K	
C818			CK73FB0J106K	CHIP C	10UF	K	
C819			CK73HB1E103K	CHIP C	0.010UF	K	
C820			CK73GB1H104K	CHIP C	0.10UF	K	
C821			CK73GB0J106K	CHIP C	10UF	K	
C822			CK73FB0J226M	CHIP C	22UF	M	
C823			CK73GB1A105K	CHIP C	1.0UF	K	
C824			CK73HB1H102K	CHIP C	1000PF	K	
C826			CK73HB1A683K	CHIP C	0.068UF	K	
C829			CK73HB1H682K	CHIP C	6800PF	K	
C832			CK73GB1H102K	CHIP C	1000PF	K	
C834			CK73HB1H332K	CHIP C	3300PF	K	
C836			CK73HB1E103K	CHIP C	0.010UF	K	
C838-841			CK73HB1H471K	CHIP C	470PF	K	
C842			CK73GB1H102K	CHIP C	1000PF	K	
C843			CK73HB0J105K	CHIP C	1.0UF	K	
C844			CK73HB1H102K	CHIP C	1000PF	K	
C848			CC73HCH1H180G	CHIP C	18PF	G	
C849			CC73HCH1H0R3B	CHIP C	0.3PF	B	
C851			CC73HCH1H180G	CHIP C	18PF	G	
C852			CK73HB1H102K	CHIP C	1000PF	K	
C853			CK73HB1A104K	CHIP C	0.10UF	K	
C854			CK73GB1C104K	CHIP C	0.10UF	K	
C855			CK73GB1H102K	CHIP C	1000PF	K	
C858-861			CK73HB1H102K	CHIP C	1000PF	K	
C862,863			CK73GB1A105K	CHIP C	1.0UF	K	
C864,865			CK73HB0J105K	CHIP C	1.0UF	K	
C866			CK73HB1A224K	CHIP C	0.22UF	K	
C867			CK73GB1C224K	CHIP C	0.22UF	K	
C869			CK73HB1H102K	CHIP C	1000PF	K	
C871			CS77BA1C4R7M	CHIP TNTL	4.7UF	16WV	
C872			C92-0873-05	ELECTRO	47UF	16WV	
C873			CE32BD1C471M	CHIP EL	470UF	16WV	
C874			CK73HB1H102K	CHIP C	1000PF	K	
C875			CE32BD1C471M	CHIP EL	470UF	16WV	
C876			CC73HCH1H220J	CHIP C	22PF	J	

K1: TK-7360H K K2: TK-7360H(V) K
M: TK-7360 M M1: TK-7360H M M2: TK-7360 M2

PARTS LIST

TX-RX UNIT (X57-8020-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination
C877			CC73HCH1H470J	CHIP C 47PF J	
C880			CC73HCH1H101J	CHIP C 100PF J	
C881			CK73HB1H471K	CHIP C 470PF K	
C882			CC73HCH1H220J	CHIP C 22PF J	
C883			CK73HB1H471K	CHIP C 470PF K	
C884			CC73HCH1H220J	CHIP C 22PF J	
C886			CK73HB1A104K	CHIP C 0.10UF K	
C887			CK73HB1E103K	CHIP C 0.010UF K	
C888,889			CK73HB1H471K	CHIP C 470PF K	
C890			CC73HCH1H121J	CHIP C 120PF J	
C891			CK73HB1A104K	CHIP C 0.10UF K	
C893			CK73HB1A104K	CHIP C 0.10UF K	
C894			CK73HB1H103K	CHIP C 0.010UF K	
C895			CK73HB1H102K	CHIP C 1000PF K	
C896			CK73HB1E103K	CHIP C 0.010UF K	
C897			CK73HB1H471K	CHIP C 470PF K	
C900			CC73HCH1H101J	CHIP C 100PF J	
C902			CC73HCH1H101J	CHIP C 100PF J	
CN700			E40-6361-05	PIN ASSY (26P)	
CN701			E40-6847-05	FLAT CABLE CONNECTOR (30P)	
J700	1B		E58-0536-05	D-SUB SOCKET (ACC)	
J701	1B		E11-0425-05	3.5D PHONE JACK (EXT-SP)	
F400			F53-0327-15	FUSE (4A)	
CD500			L79-1866-05	TUNING COIL (450KHZ)	
CF500			L72-0993-05	CERAMIC FILTER (450KHZ/WID)	
CF501			L72-0999-05	CERAMIC FILTER (450KHZ/NAR)	
L2			L41-1591-08	SMALL FIXED INDUCTOR (1.5NH)	
L3			L92-0442-05	CHIP FERRITE	
L4			L40-1075-71	SMALL FIXED INDUCTOR (10NH)	
L5			L40-6875-71	SMALL FIXED INDUCTOR (68NH)	
L6			L40-2275-71	SMALL FIXED INDUCTOR (22NH)	
L7			L40-2775-71	SMALL FIXED INDUCTOR (27NH)	
L9			L92-0443-05	CHIP FERRITE	
L10			L40-4791-86	SMALL FIXED INDUCTOR (4.7UH)	
L12			L40-4791-86	SMALL FIXED INDUCTOR (4.7UH)	
L15,16			L92-0163-05	BEADS CORE	
L17			L40-1891-86	SMALL FIXED INDUCTOR (1.8UH)	
L20,21			L40-1891-86	SMALL FIXED INDUCTOR (1.8UH)	
L25			L40-1891-86	SMALL FIXED INDUCTOR (1.8UH)	
L27			L40-1001-86	SMALL FIXED INDUCTOR (10UH)	
L29			L92-0443-05	CHIP FERRITE	
L30			L40-1001-86	SMALL FIXED INDUCTOR (10UH)	
L31		✻	L41-1588-14	SMALL FIXED INDUCTOR (150NH)	
L32			L41-1288-14	SMALL FIXED INDUCTOR (120NH)	
L33,34			L40-2702-86	SMALL FIXED INDUCTOR (27UH)	
L38,39			L40-2702-86	SMALL FIXED INDUCTOR (27UH)	
L40			L92-0443-05	CHIP FERRITE	
L41,42			L40-1085-71	SMALL FIXED INDUCTOR (100NH)	
L300			L40-1575-71	SMALL FIXED INDUCTOR (15NH)	
L301			L40-1075-71	SMALL FIXED INDUCTOR (10NH)	
L302			L40-1275-92	SMALL FIXED INDUCTOR (12NH)	
L303			L40-8265-92	SMALL FIXED INDUCTOR (8.2NH)	
L304			L40-1285-92	SMALL FIXED INDUCTOR (120NH)	
L305			L40-4775-92	SMALL FIXED INDUCTOR (47NH)	
L307-309			L92-0179-05	CHIP FERRITE	
L310			L34-4902-05	AIR-CORE COIL (9.5T)	
L311			L34-1039-05	AIR-CORE COIL (1.5T)	
L313-315			L34-4903-05	AIR-CORE COIL (5T)	

Ref. No.	Address	New parts	Parts No.	Description	Destination
L316			L34-4902-05	AIR-CORE COIL (9.5T)	
L500,501			L40-4781-86	SMALL FIXED INDUCTOR (0.47UH)	
L503			L40-4781-86	SMALL FIXED INDUCTOR (0.47UH)	
L504			L40-2775-71	SMALL FIXED INDUCTOR (27NH)	
L507			L40-2275-71	SMALL FIXED INDUCTOR (22NH)	
L509,510			L41-4785-39	SMALL FIXED INDUCTOR (0.47UH)	
L513			L41-5678-14	SMALL FIXED INDUCTOR (56NH)	
L515			L41-6878-45	SMALL FIXED INDUCTOR (68NH)	
L516			L40-2275-92	SMALL FIXED INDUCTOR (22NH)	
L518,519			L41-5678-14	SMALL FIXED INDUCTOR (56NH)	
L521			L40-6875-92	SMALL FIXED INDUCTOR (68NH)	
L522			L40-6875-57	SMALL FIXED INDUCTOR (68NH)	
L700,701			L92-0163-05	BEADS CORE	
L702			L92-0443-05	CHIP FERRITE	
L704			L92-0443-05	CHIP FERRITE	
L706			L92-0161-05	BEADS CORE	
L707-712			L92-0163-05	BEADS CORE	
X1			L77-3055-05	TCXO (19.2MHZ)	
X700			L77-1950-05	CRYSTAL RESONATOR (11.0592MHZ)	
XF500			L71-0659-05	MCF (38.85MHZ)	
CP700-703			RK74HA1J102J	CHIP-COM 1.0K J 1/16W	
CP704			RK74HA1J101J	CHIP-COM 100 J 1/16W	
R1			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R3			RK73HB1J100J	CHIP R 10 J 1/16W	
R5			RK73HB1J103J	CHIP R 10K J 1/16W	
R6-8			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R9			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R10			RK73HB1J152J	CHIP R 1.5K J 1/16W	
R11			RK73HB1J223J	CHIP R 22K J 1/16W	
R12			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R13			RK73HB1J563J	CHIP R 56K J 1/16W	
R14			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R15			RK73HB1J103J	CHIP R 10K J 1/16W	
R16			RK73HB1J561J	CHIP R 560 J 1/16W	
R17			RK73HB1J100J	CHIP R 10 J 1/16W	
R19,20			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R21			RK73HB1J100J	CHIP R 10 J 1/16W	
R22			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R23			RK73HB1J100J	CHIP R 10 J 1/16W	
R24			RK73HB1J273J	CHIP R 27K J 1/16W	
R25			RK73HB1J560J	CHIP R 56 J 1/16W	
R26			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R30			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R31			RK73HB1J473J	CHIP R 47K J 1/16W	
R34			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R35			RK73HB1J153J	CHIP R 15K J 1/16W	
R36			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R37,38			RK73HB1J153J	CHIP R 15K J 1/16W	
R39			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R41			RK73HB1J223J	CHIP R 22K J 1/16W	
R42			RK73HB1J222J	CHIP R 2.2K J 1/16W	
R43			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R44			RK73HB1J153J	CHIP R 15K J 1/16W	
R45			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R47			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R48			RK73HB1J221J	CHIP R 220 J 1/16W	
R49			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R50			RK73HB1J105J	CHIP R 1.0M J 1/16W	
R51,52			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R53			RK73FB2B102J	CHIP R 1.0K J 1/8W	

K1: TK-7360H K K2: TK-7360H(V) K
M: TK-7360 M M1: TK-7360H M M2: TK-7360 M2

PARTS LIST

TX-RX UNIT (X57-8020-XX)

Ref. No.	Address	New parts	Parts No.	Description				Destination
R55			RK73HB1J393J	CHIP R	39K	J	1/16W	
R56,57			RK73HB1J103J	CHIP R	10K	J	1/16W	
R58,59			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R61			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R62			RK73HB1J104J	CHIP R	100K	J	1/16W	
R63			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R64			RK73HB1J393J	CHIP R	39K	J	1/16W	
R65			RK73HB1J104J	CHIP R	100K	J	1/16W	
R66			RK73HB1J473J	CHIP R	47K	J	1/16W	
R67			RN73HH1J101D	CHIP R	100	D	1/16W	
R68		*	RN73HH1J471D	CHIP R	470	D	1/16W	
R69			RK73GB2A104J	CHIP R	100K	J	1/10W	
R70			RK73HB1J472J	CHIP R	4.7K	J	1/16W	
R71			RN73HH1J271D	CHIP R	270	D	1/16W	
R72			RN73HH1J121D	CHIP R	120	D	1/16W	
R73			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R74,75			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R76			RK73HB1J273J	CHIP R	27K	J	1/16W	
R77			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R78			RK73HB1J101J	CHIP R	100	J	1/16W	
R79			RK73HB1J103J	CHIP R	10K	J	1/16W	
R80			RK73HB1J822J	CHIP R	8.2K	J	1/16W	
R81-83			RK73HB1J101J	CHIP R	100	J	1/16W	
R84			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R85			RK73HB1J222J	CHIP R	2.2K	J	1/16W	
R86			RK73HB1J472J	CHIP R	4.7K	J	1/16W	
R87			RK73GB2A472J	CHIP R	4.7K	J	1/10W	
R88,89			RK73HB1J474J	CHIP R	470K	J	1/16W	
R300			RK73HB1J472J	CHIP R	4.7K	J	1/16W	
R301			RK73HB1J273J	CHIP R	27K	J	1/16W	
R302			RK73HB1J103J	CHIP R	10K	J	1/16W	
R309,310			RK73GB2A100J	CHIP R	10	J	1/10W	
R311			RK73GB2A121J	CHIP R	120	J	1/10W	
R313			RK73HB1J101J	CHIP R	100	J	1/16W	
R315			RK73GB2A470J	CHIP R	47	J	1/10W	
R316			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R317			RK73HB1J154J	CHIP R	150K	J	1/16W	
R319,320			RK73HB1J103J	CHIP R	10K	J	1/16W	
R321			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R323			RK73HB1J153J	CHIP R	15K	J	1/16W	M,M2
R323			RK73HB1J223J	CHIP R	22K	J	1/16W	M1,K1,K2
R324			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R326			RK73HB1J473J	CHIP R	47K	J	1/16W	
R328,329			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R330,331			RK73HB1J104J	CHIP R	100K	J	1/16W	
R333			RK73HB1J104J	CHIP R	100K	J	1/16W	
R334			RK73GH2A101D	CHIP R	100	D	1/10W	
R335			RK73GH2A681D	CHIP R	680	D	1/10W	
R336,337			RK73HB1J104J	CHIP R	100K	J	1/16W	
R340,341			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R342			RK73HB1J104J	CHIP R	100K	J	1/16W	
R343			RK73GH2A680D	CHIP R	68	D	1/10W	
R344			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R345			RK73RB2H101J	CHIP R	100	J	1/2W	
R346			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R348-351			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R352			RK73GH2A121D	CHIP R	120	D	1/10W	
R353			RK73GH2A181D	CHIP R	180	D	1/10W	
R358	2B		R92-1061-05	JUMPER REST		0 OHM		
R400			RK73HB1J103J	CHIP R	10K	J	1/16W	

Ref. No.	Address	New parts	Parts No.	Description				Destination
R401			RK73HB1J472J	CHIP R	4.7K	J	1/16W	
R402			RK73HB1J152J	CHIP R	1.5K	J	1/16W	
R403,404			RK73HB1J473J	CHIP R	47K	J	1/16W	
R405,406			RK73HB1J104J	CHIP R	100K	J	1/16W	
R407			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R408			RK73GB2A221J	CHIP R	220	J	1/10W	
R409			RK73GB2A473J	CHIP R	47K	J	1/10W	
R410			RK73GB2A334J	CHIP R	330K	J	1/10W	
R411			RK73HB1J474J	CHIP R	470K	J	1/16W	
R412			RK73HB1J564J	CHIP R	560K	J	1/16W	
R413			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R414			RK73HB1J474J	CHIP R	470K	J	1/16W	
R500			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R502			RK73HB1J824J	CHIP R	820K	J	1/16W	
R503			RK73HB1J101J	CHIP R	100	J	1/16W	
R504-508			RK73HB1J103J	CHIP R	10K	J	1/16W	
R510			RK73HB1J103J	CHIP R	10K	J	1/16W	
R511			RK73GB2A100J	CHIP R	10	J	1/10W	
R512			RK73HB1J152J	CHIP R	1.5K	J	1/16W	
R513			RK73HB1J563J	CHIP R	56K	J	1/16W	
R515			RK73HB1J274J	CHIP R	270K	J	1/16W	
R516			RK73GB2A472J	CHIP R	4.7K	J	1/10W	
R518			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R520			RK73HB1J332J	CHIP R	3.3K	J	1/16W	
R521			RK73HB1J222J	CHIP R	2.2K	J	1/16W	
R522			RK73HB1J103J	CHIP R	10K	J	1/16W	
R523			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R524			RK73HB1J103J	CHIP R	10K	J	1/16W	
R525			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R526			RK73HB1J474J	CHIP R	470K	J	1/16W	
R527			RK73HB1J101J	CHIP R	100	J	1/16W	
R528			RK73HB1J224J	CHIP R	220K	J	1/16W	
R529			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R530			RK73HB1J560J	CHIP R	56	J	1/16W	
R531			RK73HB1J391J	CHIP R	390	J	1/16W	
R533			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R534			RK73HB1J331J	CHIP R	330	J	1/16W	
R536			RK73HB1J562J	CHIP R	5.6K	J	1/16W	
R537			RK73HB1J223J	CHIP R	22K	J	1/16W	
R538			RK73HB1J470J	CHIP R	47	J	1/16W	
R539			RK73HB1J332J	CHIP R	3.3K	J	1/16W	
R540,541			RK73HB1J823J	CHIP R	82K	J	1/16W	
R542			RK73HB1J224J	CHIP R	220K	J	1/16W	
R543			RK73HB1J684J	CHIP R	680K	J	1/16W	
R545			RK73HB1J151J	CHIP R	150	J	1/16W	
R546			RK73HB1J823J	CHIP R	82K	J	1/16W	
R547			RK73HB1J394J	CHIP R	390K	J	1/16W	
R548			RK73HB1J154J	CHIP R	150K	J	1/16W	
R549			RK73HB1J330J	CHIP R	33	J	1/16W	
R550,551			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R553,554			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R557,558			RK73HB1J104J	CHIP R	100K	J	1/16W	
R561			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R562			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R563			RK73HB1J820J	CHIP R	82	J	1/16W	
R564			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R565			RK73HB1J223J	CHIP R	22K	J	1/16W	
R566			RK73HB1J221J	CHIP R	220	J	1/16W	
R567			RK73HB1J104J	CHIP R	100K	J	1/16W	
R568			RK73HB1J564J	CHIP R	560K	J	1/16W	

K1: TK-7360H K K2: TK-7360H(V) K
M: TK-7360 M M1: TK-7360H M M2: TK-7360 M2

PARTS LIST

TX-RX UNIT (X57-8020-XX)

Ref. No.	Address	New parts	Parts No.	Description				Destination
R569			RK73HB1J223J	CHIP R	22K	J	1/16W	
R570			RK73HB1J104J	CHIP R	100K	J	1/16W	
R571			RK73HB1J683J	CHIP R	68K	J	1/16W	
R572			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R573,574			RK73HB1J223J	CHIP R	22K	J	1/16W	
R575			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R576,577			RK73HB1J104J	CHIP R	100K	J	1/16W	
R578			RK73FB2B000J	CHIP R	0.0	J	1/8W	
R582			RK73HB1J151J	CHIP R	150	J	1/16W	
R583			RK73HB1J390J	CHIP R	39	J	1/16W	
R584			RK73HB1J151J	CHIP R	150	J	1/16W	
R586			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R700			RK73HB1J223J	CHIP R	22K	J	1/16W	
R701			RK73HB1J103J	CHIP R	10K	J	1/16W	
R703			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R707			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R708			RK73HB1J101J	CHIP R	100	J	1/16W	
R709			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R710,711			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R713			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R718			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R721-723			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R724			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R725			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R726			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R728			RK73HB1J472J	CHIP R	4.7K	J	1/16W	
R730			RK73HB1J681J	CHIP R	680	J	1/16W	
R733			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R734			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R735			RK73GB2A473J	CHIP R	47K	J	1/10W	
R736			RK73HB1J821J	CHIP R	820	J	1/16W	
R737			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R738			RK73GB2A221J	CHIP R	220	J	1/10W	
R739			RK73HB1J223J	CHIP R	22K	J	1/16W	
R741			RK73HB1J223J	CHIP R	22K	J	1/16W	
R742			RK73HB1J823J	CHIP R	82K	J	1/16W	
R743			RK73HB1J561J	CHIP R	560	J	1/16W	
R744			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R745,746			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R747			RK73HB1J101J	CHIP R	100	J	1/16W	
R748			RK73HB1J123J	CHIP R	12K	J	1/16W	
R749			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R750			RK73HB1J105J	CHIP R	1.0M	J	1/16W	
R751			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R754			RK73HB1J123J	CHIP R	12K	J	1/16W	
R755			RK73HB1J154J	CHIP R	150K	J	1/16W	
R756			RK73HB1J103J	CHIP R	10K	J	1/16W	
R757			RK73HB1J222J	CHIP R	2.2K	J	1/16W	
R760,761			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R762			RK73HB1J334J	CHIP R	330K	J	1/16W	
R763			RK73HB1J154J	CHIP R	150K	J	1/16W	
R765			RK73HB1J103J	CHIP R	10K	J	1/16W	
R769			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R772			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R773			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R774			RK73HB1J561J	CHIP R	560	J	1/16W	
R775			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R776			RK73GB2A124J	CHIP R	120K	J	1/10W	
R779,780			RK73HH1J473D	CHIP R	47K	D	1/16W	
R781			RK73HB1J183J	CHIP R	18K	J	1/16W	

Ref. No.	Address	New parts	Parts No.	Description				Destination
R782			RK73HB1J104J	CHIP R	100K	J	1/16W	
R785			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R786			RK73HB1J473J	CHIP R	47K	J	1/16W	
R787			RK73HB1J823J	CHIP R	82K	J	1/16W	
R788			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R789			RK73HB1J563J	CHIP R	56K	J	1/16W	
R790			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R791			RK73HB1J223J	CHIP R	22K	J	1/16W	
R792			RK73HB1J561J	CHIP R	560	J	1/16W	
R793			RK73HB1J103J	CHIP R	10K	J	1/16W	
R794,795			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R799			RK73HB1J273J	CHIP R	27K	J	1/16W	
R801			RK73HB1J562J	CHIP R	5.6K	J	1/16W	
R802			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R803			RK73HB1J563J	CHIP R	56K	J	1/16W	
R804,805			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R806,807			RK73HB1J104J	CHIP R	100K	J	1/16W	
R809,810			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R811			RK73HB1J104J	CHIP R	100K	J	1/16W	
R813			RK73HB1J104J	CHIP R	100K	J	1/16W	
R814			RK73HB1J101J	CHIP R	100	J	1/16W	
R815			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R816			RK73HB1J104J	CHIP R	100K	J	1/16W	
R817			RK73GB2A104J	CHIP R	100K	J	1/10W	
R818			RK73HB1J104J	CHIP R	100K	J	1/16W	
R819			RK73HB1J101J	CHIP R	100	J	1/16W	
R820			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R823			RK73HB1J124J	CHIP R	120K	J	1/16W	
R824			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R825			RK73HB1J104J	CHIP R	100K	J	1/16W	
R826			RK73HB1J101J	CHIP R	100	J	1/16W	
R827			RK73HB1J104J	CHIP R	100K	J	1/16W	
R829			RK73HB1J101J	CHIP R	100	J	1/16W	
R830			RK73GB2A100J	CHIP R	10	J	1/10W	
R831			RK73HB1J473J	CHIP R	47K	J	1/16W	
R832			RK73HB1J472J	CHIP R	4.7K	J	1/16W	
R840			RK73HB1J473J	CHIP R	47K	J	1/16W	
R841			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R842			RK73HB1J103J	CHIP R	10K	J	1/16W	
R843			RK73HB1J393J	CHIP R	39K	J	1/16W	
R845			RK73GB2A000J	CHIP R	0.0	J	1/10W	
R846			RK73HB1J472J	CHIP R	4.7K	J	1/16W	
R849			RK73HB1J682J	CHIP R	6.8K	J	1/16W	
R850			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R851			RK73HB1J223J	CHIP R	22K	J	1/16W	
R852			RK73HB1J473J	CHIP R	47K	J	1/16W	
R853			RK73HB1J332J	CHIP R	3.3K	J	1/16W	
R854,855			RK73HB1J473J	CHIP R	47K	J	1/16W	
R856			RK73HB1J222J	CHIP R	2.2K	J	1/16W	
R857,858			RK73HB1J104J	CHIP R	100K	J	1/16W	
R859			RK73HB1J105J	CHIP R	1.0M	J	1/16W	
R860			RK73GB2A102J	CHIP R	1.0K	J	1/10W	
R861			RK73HB1J153J	CHIP R	15K	J	1/16W	
R863			RK73GB2A472J	CHIP R	4.7K	J	1/10W	
R864			RK73HB1J123J	CHIP R	12K	J	1/16W	
R866,867			RK73HB1J102J	CHIP R	1.0K	J	1/16W	
R868			RK73HB1J000J	CHIP R	0.0	J	1/16W	
R869			RK73GH2A134D	CHIP R	130K	D	1/10W	
R870			RK73GH2A183D	CHIP R	18K	D	1/10W	
R871			RK73GB2A000J	CHIP R	0.0	J	1/10W	

K1: TK-7360H K K2: TK-7360H(V) K
M: TK-7360 M M1: TK-7360H M M2: TK-7360 M2

PARTS LIST

TX-RX UNIT (X57-8020-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination
R872-874			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R875			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R876-878			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R879			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R880			RK73HB1J154J	CHIP R 150K J 1/16W	
R881			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R883			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R885			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R886			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R887			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R888			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R889			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R893,894			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R895			RK73HB1J102J	CHIP R 1.0K J 1/16W	
R896			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R897,898			RK73HB1J473J	CHIP R 47K J 1/16W	
R899-902			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R905			RK73GB2A000J	CHIP R 0.0 J 1/10W	
R906,907			RK73HB1J473J	CHIP R 47K J 1/16W	
R908,909			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R910			RK73HB1J471J	CHIP R 470 J 1/16W	
R911			RK73HB1J152J	CHIP R 1.5K J 1/16W	
R912			RK73GB2A102J	CHIP R 1.0K J 1/10W	
R913			RK73HB1J473J	CHIP R 47K J 1/16W	
R914-917			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R918			RK73HB1J223J	CHIP R 22K J 1/16W	
R919			RK73HB1J473J	CHIP R 47K J 1/16W	
R920			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R921			RK73HB1J473J	CHIP R 47K J 1/16W	
R923			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R924,925			RK73HB1J473J	CHIP R 47K J 1/16W	
R927,928			RK73HB1J473J	CHIP R 47K J 1/16W	
R929,930			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R931,932			RK73HB1J224J	CHIP R 220K J 1/16W	
R933,934			RK73HB1J823J	CHIP R 82K J 1/16W	
R935,936			RK73HB1J222J	CHIP R 2.2K J 1/16W	
R938			RK73HB1J391J	CHIP R 390 J 1/16W	
R940-942			RK73FB2B000J	CHIP R 0.0 J 1/8W	
R943			RK73HB1J104J	CHIP R 100K J 1/16W	
R944			RK73HB1J473J	CHIP R 47K J 1/16W	
R945			RK73HB1J103J	CHIP R 10K J 1/16W	
R947			RK73HB1J103J	CHIP R 10K J 1/16W	
R948			RK73HB1J684J	CHIP R 680K J 1/16W	
R949			RK73HB1J394J	CHIP R 390K J 1/16W	
R950			RK73HB1J105J	CHIP R 1.0M J 1/16W	
R951			RK73HB1J332J	CHIP R 3.3K J 1/16W	
R952			RK73HB1J101J	CHIP R 100 J 1/16W	
R953			RK73HB1J103J	CHIP R 10K J 1/16W	
R954			RK73HB1J332J	CHIP R 3.3K J 1/16W	
R955			RK73HB1J472J	CHIP R 4.7K J 1/16W	
R956,957			RK73HB1J223J	CHIP R 22K J 1/16W	
R960			RK73HB1J000J	CHIP R 0.0 J 1/16W	
R962			RK73HB1J823J	CHIP R 82K J 1/16W	
D1			1SS389-F	DIODE	
D2-4			HSC277	DIODE	
D6-9			HVC376B	VARIABLE CAPACITANCE DIODE	
D10-15			1SV325F	VARIABLE CAPACITANCE DIODE	
D16			1SV278F	VARIABLE CAPACITANCE DIODE	
D17,18			HVC131	DIODE	

Ref. No.	Address	New parts	Parts No.	Description	Destination
D300			UDZW5.1(B)	ZENER DIODE	
D301			1SS355	DIODE	
D302			HSC277	DIODE	
D303,304			L407CDB	DIODE (50V/1W)	
D305,306			HSB88AS-E	DIODE	
D307,308		✻	RKP350KV	DIODE	
D309,310			UDZW3.3(B)	ZENER DIODE	
D400			Z5W27V	SURGE ABSORBER	
D500,501			MC2858-T111	DIODE	
D502			HSB88AS-E	DIODE	
D504-507			1SV305F	VARIABLE CAPACITANCE DIODE	
D700			DA2S101	DIODE	
D701-711			DA221	DIODE	
D712			MC2858-T111	DIODE	
D713			1SS372F	DIODE	
D715			UDZW18(B)	ZENER DIODE	
D716			DA2S101	DIODE	
IC1			TC75S51FE(F)	MOS-IC	
IC2			MB15E03SL-E1	MOS-IC	
IC3			BD7542FVM	MOS-IC	
IC300	2B		RA60H1317M1A	POWER MODULE	M1,K1,K2
IC300	2B		S-AV33A	POWER MODULE	M,M2
IC301			HA17358BFEL-E	MOS-IC	
IC400			TA4809BF	ANALOGUE IC	
IC401		✻	XC6221B332N-G	MOS-IC	
IC402			TA7805F-NQ	MOS-IC	
IC403			BD4740G	MOS-IC	
IC404		✻	XC6120N402N-G	MOS-IC	
IC500		✻	UA31136L	MOS-IC	
IC501			HA17358BFEL-E	MOS-IC	
IC700			ADM202EARNZ	MOS-IC	
IC701			NJM2100V-ZB	MOS-IC	
IC702			CD686AQ3	MOS-IC	
IC703		✻	XC6221B332N-G	MOS-IC	
IC704		✻	F3650TDFBKEBA	MCU	
IC705			EX25512ATA00A	ROM IC	
IC706	1A		LA4600	BI-POLAR IC	
IC707			TC7S66FUF	MOS-IC	
IC708			TC4W53FU-F	MOS-IC	
IC709			NJM2746RB1-ZB	ANALOGUE IC	
IC710			TC7W53FK(F)	MOS-IC	
Q1			KTC4075E(Y,GR)	TRANSISTOR	
Q2			RT1N141U-T111	TRANSISTOR	
Q3			2SC5108(Y)F	TRANSISTOR	
Q4			SSM3J05FU-F	FET	
Q5			2SK1830F	FET	
Q6			MCH3914(7)-H	FET	
Q7			2SJ347F	FET	
Q8			MCH3914(7)-H	FET	
Q10			KRX102U	TRANSISTOR	
Q11			KTC4075E(Y,GR)	TRANSISTOR	
Q12,13			2SC5108(Y)F	TRANSISTOR	
Q300			RD00HVS1-T113	FET	
Q400,401			RT1N141U-T111	TRANSISTOR	
Q402,403			2SB1694	TRANSISTOR	
Q404,405			SSM3J05FU-F	FET	
Q406			KTC4075E(Y,GR)	TRANSISTOR	
Q407			2SJ645	FET	
Q500			2SC5108(Y)F	TRANSISTOR	
Q502			RT1P441U-T111	TRANSISTOR	

K1: TK-7360H K K2: TK-7360H(V) K
M: TK-7360 M M1: TK-7360H M M2: TK-7360 M2

If a part reference number is listed in a shaded box, that part does not come with the PCB.

PARTS LIST

TX-RX UNIT (X57-8020-XX)

Ref. No.	Address	New parts	Parts No.	Description	Destination
Q503			RT1N441U-T111	TRANSISTOR	
Q504			2SC5108(Y)F	TRANSISTOR	
Q505			2SC2412K	TRANSISTOR	
Q506			KTC4075E(Y,GR)	TRANSISTOR	
Q507			3SK318	FET	
Q508			RT1N141U-T111	TRANSISTOR	
Q511			3SK318	FET	
Q700			2SC4116(Y)F	TRANSISTOR	
Q702			2SJ645	FET	
Q703			2SC4919-S	TRANSISTOR	
Q704			2SK1830F	FET	
Q705			KTC4075E(Y,GR)	TRANSISTOR	
Q708			KTC4075E(Y,GR)	TRANSISTOR	
Q709			SSM3J05FU-F	FET	
Q710			KTC4075E(Y,GR)	TRANSISTOR	
Q712			SSM3J05FU-F	FET	
Q713			2SK1824-A	FET	
Q714			RT1N440M-T111	TRANSISTOR	
Q715			DTC114YEB	TRANSISTOR	
Q716			KTC4075E(Y,GR)	TRANSISTOR	
Q717			RT1N441U-T111	TRANSISTOR	
Q718,719			SSM3K05FU	FET	
Q720			RT1N141U-T111	TRANSISTOR	
TH300-302			B57331V2104J	THERMISTOR	
TH501			NCP18WB473J0S	THERMISTOR (47K)	

Ref. No.	Address	New parts	Parts No.	Description	Destination

K1: TK-7360H K K2: TK-7360H(V) K
M: TK-7360 M M1: TK-7360H M M2: TK-7360 M2