EXPLODED VIEW (UNIT)

Block No.200

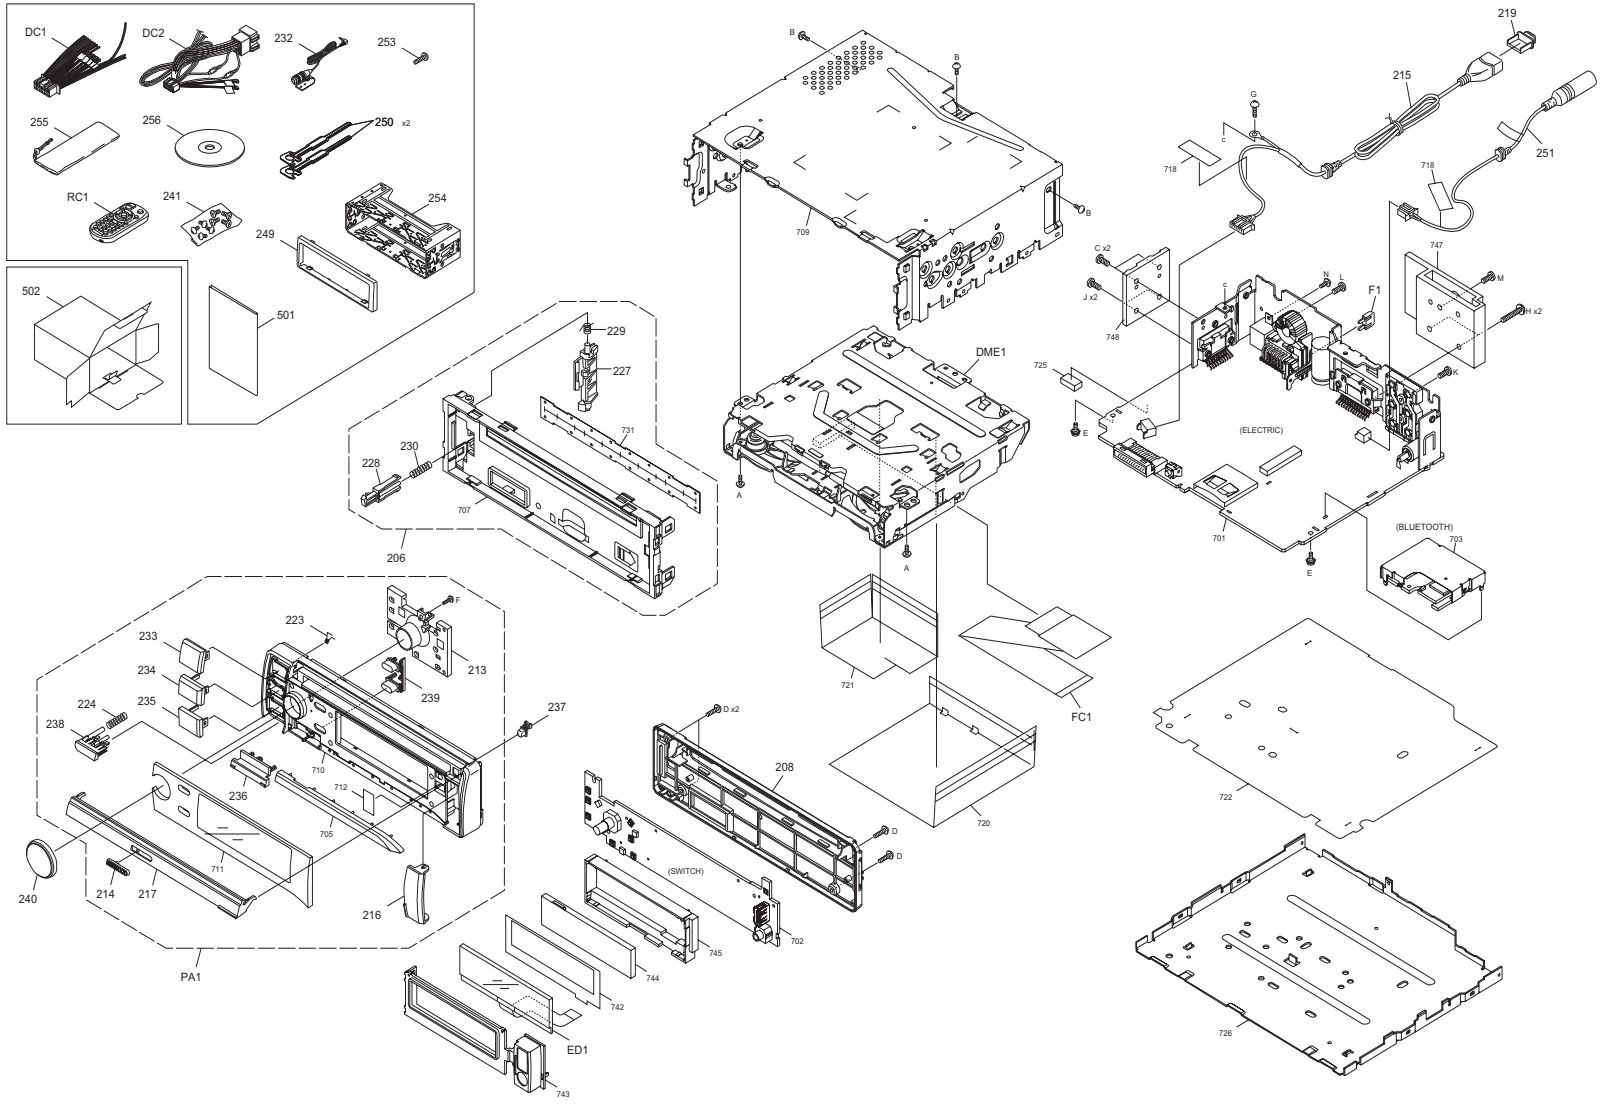

Parts with the exploded numbers larger than 700 are not supplied.

No.WA074

created date:2013-04-01

MODEL	MARK	MODEL	MARK	MODEL	MARK	MODEL	MARK
KDC-5057SD	E2	KDC-655U	K5	KDC-BT855U	K3	KDC-X697	K4
KDC-X897	K2						

Safe	Symbol No.	Parts No.	Parts Name	Description	QTY	Local
EXPLODED VIEW (UNIT) <200>						
⚠	DC1	E30-6939-05	DC CORD		1	K5,K3,K4,K2
⚠	DC2	E30-6940-15	DC CORD		1	E2
	DME1	X92-6800-00	MECHANISM ASSY	FC2-1A00WXN	1	
	ED1	B38-1250-05	LCD		1	
⚠	F1	F52-0023-05	FUSE(MINI BLADE TYPE)	32V 10A	1	
	FC1	E39-1325-05	FLAT CABLE		1	
	PA1	A64-5460-11	PANEL ASSY		1	E2
	PA1	A64-5456-11	PANEL ASSY		1	K5
	PA1	A64-5454-11	PANEL ASSY		1	K3
	PA1	A64-5455-11	PANEL ASSY		1	K4
	PA1	A64-5453-11	PANEL ASSY		1	K2
	RC1	QAL1303-004	REMOTE CONTROL UNIT	RC-406	1	K5,K3,K4,K2
	A	QYSDST2604ZA	TAP SCREW	M2.6 x 4mm	2	
	B	QYSDST2606ZA	TAP SCREW	M2.6 x 6mm	3	
	C	QYSDST2608ZA	TAP SCREW	M2.6 x 8mm	2	
	D	QYSPSF2008MA	TAP SCREW	M2 x 8mm	4	
	E	N09-6758-05	TAPTITE SCREW		2	
	F	N80-2006-48	PAN HEAD TAPTITE SCREW	2X 6	1	
	G	N84-2005-48	PAN HEAD TAPTITE SCREW	2X 5	1	
	H	GE40377-005A	SPECIAL SCREW		2	
	J	GE40662-001A	SPECIAL SCREW		2	
	K	QYSDSF2608ZA	TAP SCREW	M2.6 x 8mm	1	
	L	QYSDSG3006ZA	TAP SCREW	M3 x 6mm	1	
	M	QYSDST2610ZA	TAP SCREW	M2.6 x 10mm	1	
	N	QYSDST2606ZA	TAP SCREW	M2.6 x 6mm	1	K5,K3,K4,K2
	206	A22-3356-03	SUB PANEL ASSY		1	E2
	206	A22-3354-03	SUB PANEL ASSY		1	K5,K3,K4,K2
	208	A46-1936-01	REAR COVER		1	
	213	B19-2636-02	LIGHTING BOARD		1	
	214	B43-1518-04	BADGE		1	
	215	E30-8317-05	CORD WITH CONNECTOR	USB	1	E2
	215	E30-8326-05	CORD WITH CONNECTOR	USB	1	K5,K3,K4,K2
	216	F07-2269-03	COVER	USB	1	
	217	F07-2279-02	COVER		1	E2
	217	F07-2275-02	COVER		1	K5
	217	F07-2273-02	COVER		1	K3
	217	F07-2274-02	COVER		1	K4
	217	F07-2272-02	COVER		1	K2
	219	F09-2929-04	CAP	USB	1	
	223	G01-4823-04	TORSION COIL SPRING		1	
	224	G01-4824-04	COMPRESSION SPRING		1	
	227	GE35078-001A	LOCK LEVER		1	
	228	GE35079-001A	RELEASE LEVER		1	
	229	GE40504-001A	SPRING		1	
	230	GE40505-001A	SPRING		1	
	232	QAN0126-001	MICROPHONE	3m	1	K3,K2
	233	K24-5276-03	PUSH KNOB	SRC	1	E2,K5,K3
	233	K24-5275-03	PUSH KNOB	SRC	1	K4,K2
	234	K24-5278-03	PUSH KNOB	SEARCH/RETURN	1	
	235	K24-5282-02	PUSH KNOB	A-Z	1	E2,K5
	235	K24-5280-02	PUSH KNOB	TEL	1	K3
	235	K24-5281-02	PUSH KNOB	A-Z	1	K4
	235	K24-5279-02	PUSH KNOB	TEL	1	K2
	236	K24-5286-03	PUSH KNOB	TRACK-UP	1	E2,K5,K3
	236	K24-5285-03	PUSH KNOB	TRACK-UP,PLATING	1	K4,K2
	237	K24-5290-03	PUSH KNOB	EJECT	1	
	238	K24-5291-03	PUSH KNOB	RELEASE	1	
	239	K25-3156-03	PUSH KNOB	FOLDER-UP/DOWN	1	
	240	K28-0562-13	KNOB ASSY	VOL	1	
	241	N99-1757-15	SCREW SET		1	K5,K3,K4,K2
	249	B07-3361-02	ESCUTCHEON		1	
	250	D10-7139-04	LEVER		2	
	251	E30-6832-05	CORD WITH CONNECTOR	MINI JACK	1	K3,K2
	253	QYSPSF2008ZA	TAP SCREW	M2 x 8mm	1	K5,K3,K4,K2
	254	J22-2049-03	MOUNTING HARDWARE ASSY		1	
	255	W01-1710-05	CARRYING CASE		1	E2
	255	W01-1664-05	CARRYING CASE	EXCELON	1	K4,K2
	256	W01-2061-05	COMPACT DISC		1	E2
	501	B59-2186-00	SUB-INSTRUCTION MANUAL	ENG FRE GER DUT ITA SPA POR RUS	1	E2
	501	B59-2187-00	SUB-INSTRUCTION MANUAL	ENG FRE SPA	1	K5,K3,K4,K2
	502	H54-5331-03	ITEM CARTON CASE		1	E2
	502	H54-5327-03	ITEM CARTON CASE		1	K5
	502	H54-5325-03	ITEM CARTON CASE		1	K3
	502	H54-5326-03	ITEM CARTON CASE		1	K4
	502	H54-5324-03	ITEM CARTON CASE		1	K2

EXPLODED VIEW (CD MECHANISM: X92-6800-00)

Block No.130

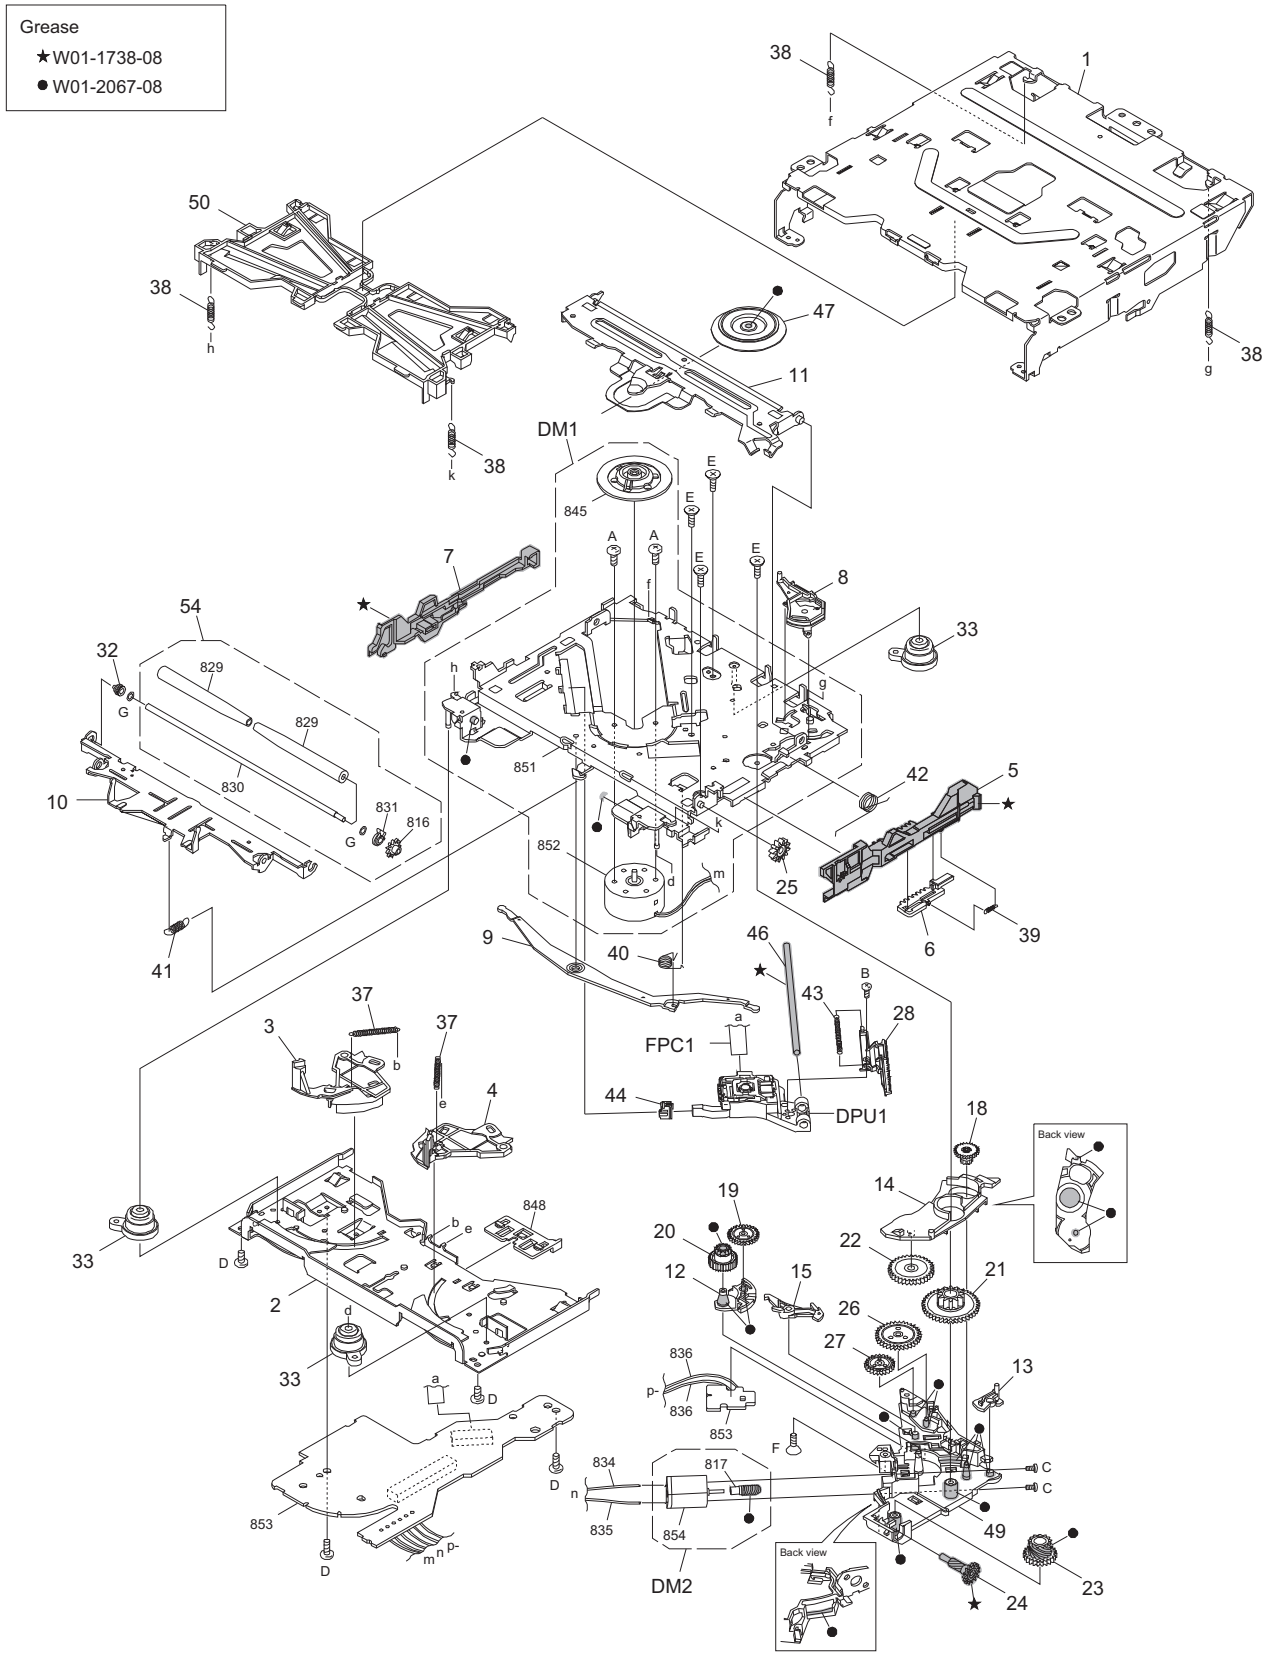

Parts with the exploded numbers larger than 800 are not supplied.

MODEL	MARK	MODEL	MARK	MODEL	MARK	MODEL	MARK
KDC-5057SD	E2	KDC-655U	K5	KDC-BT855U	K3	KDC-X697	K4
KDC-X897	K2						

Safe	Symbol No.	Parts No.	Parts Name	Description	QTY	Local
EXPLODED VIEW (CD MECHANISM: X92-6800-00) <130>						
	DM1	X94-2230-00	MD CHASSIS ASSY		1	
	DM2	X94-2240-00	LOADING MOTOR ASSY		1	
	DPU1	QAL1498-001	PICK UP		1	
	FPC1	QAL1465-001	FPC		1	
	A	LV45568-001A	MINI SCREW		2	
	B	QYSPSGT1745ZA	TAP SCREW	M1.7 x 4.5mm	1	
	C	QYSPSPT2025MA	SCREW	M2 x 2.5mm	2	
	D	N09-6108-15	TAPTITE SCREW		4	
	E	N09-6738-15	GEAR SCREW		4	
	F	N09-6921-05	MAIN SHAFT SCREW		1	
	G	N19-2356-04	ROLLER WASHER		1	
	1	A10-5625-11	OUTER CHASSIS		1	
	2	A10-5626-01	LOWER CHASSIS		1	
	3	D10-7174-03	DISC ARM L		1	
	4	D10-7175-03	DISC ARM R		1	
	5	D10-7177-02	SLIDER R		1	
	6	D10-7178-03	TRIGER SLIDER		1	
	7	D10-7179-02	SLIDER L		1	
	8	D10-7180-03	TRIGER ARM		1	
	9	D10-7181-13	JOINT LEVER		1	
	10	D10-7182-12	ROLLER LEVER		1	
	11	D10-7183-02	CLAMP ARM		1	
	12	D10-7184-03	TRANSFER ARM		1	
	13	D10-7185-04	SL LOCK CAM		1	
	14	D10-7186-03	SL LCOK ARM		1	
	15	D10-7187-13	PICK LOCK ARM		1	
	18	D13-3104-04	HELICAL GEAR 1		1	
	19	D13-3105-04	TRANSFER GEAR		1	
	20	D13-3106-04	LOAD GEAR H		1	
	21	D13-3107-04	DRIVE GEAR		1	
	22	D13-3108-04	JOINT GEAR		1	
	23	D13-3109-04	WORM GEAR 2		1	
	24	D13-3110-04	HELICAL GEAR 2		1	
	25	D13-3111-04	LOAD GEAR V		1	
	26	D13-3112-04	PICK GEAR 1		1	
	27	D13-3113-04	PICK GEAR 2		1	
	28	D13-3114-03	RACK GEAR		1	
	32	D23-0974-14	ROLLER RETAIER L		1	
	33	D39-0401-05	DAMPER 1		3	
	37	G01-4810-04	DISC ARM SPRING		2	
	38	G01-4811-14	FLOATING SPRING F		4	
	39	G01-4813-04	TRIGER SPRING		1	
	40	G01-4814-04	LOAD SPRING		1	
	41	G01-4815-04	ROLLER SPRING		1	
	42	G01-4816-04	CLAMP SPRING		1	
	43	G01-4817-04	PICK SPRING		1	
	44	LV36813-501A	SUB GUIDE CAP		1	
	46	LV44555-001A	MAIN SHAFT		1	
	47	J11-0692-03	CLAMPER		1	
	49	J19-7360-11	GEAR HOLDER		1	
	50	J90-1209-11	DISC GUIDE		1	
	54	X94-2250-00	ROLLER ASSY		1	

MODEL	MARK	MODEL	MARK	MODEL	MARK	MODEL	MARK
KDC-5057SD	E2	KDC-655U	K5	KDC-BT855U	K3	KDC-X697	K4
KDC-X897	K2						

Safe	Symbol No.	Parts No.	Parts Name	Description	QTY	Local
ELECTRIC UNIT (X34-750x-xx) <X34>						
	IC1	LV5684PVD	IC(ANALOGUE)		1	
	IC31	BD9876EFJ	IC(MOS-IC)	3.0A DOWN DCDC 1CH	1	
	IC41	BD9876EFJ	IC(MOS-IC)	3.0A DOWN DCDC 1CH	1	
	IC51	BD9876EFJ	IC(MOS-IC)	3.0A DOWN DCDC 1CH	1	
	IC71	TPS2553DBV	IC(MOS-IC)		1	
	IC81	TPS2553DBV	IC(MOS-IC)		1	
	IC171	XC6201P502MR	IC(ANALOGUE)	SOT25 5V	1	K5,K3,K4,K2
	IC181	BU1CTD3WG	IC(ANALOGUE)	1.25V	1	
	IC201	TB2931HQ	IC(ANALOGUE)	25PIN 1.0MM PITCH	1	
	IC251	TDA7720B-X	IC(ANALOGUE)		1	
	IC301	TEF6642HW	IC(ANALOGUE)		1	
	IC302	BU12TD3WG	IC(ANALOGUE)	1.2V	1	
	IC461	TC7SET08FU-F	IC(MOS-IC)		1	K5,K3,K4,K2
	IC462	TC7SH17FU-F	IC(MOS-IC)		1	K5,K3,K4,K2
	IC701	XC6201P332M-G	IC(ANALOGUE)	SOT25 3.3V	1	
	IC801	R5S726B0D216FP	IC(MCU)		1	
	IC831	W10-0847-08	IC(ROM)		1	E2
	IC831	W10-0846-08	IC(ROM)		1	K5,K3,K4,K2
	IC841	BD5228FVE	IC(ANALOGUE)	2.8V	1	
	IC851	BR24T16FVT-W	IC(ROM)	16K	1	E2
	IC851	BR24T256FVT-W	IC(ROM)	256K	1	K5,K3,K4,K2
	IC861	MFI337S3959-X	IC(MICROPROCESSOR)		1	
	IC901	BH31MA3WHFV	IC(ANALOGUE)	3.1V 300MA	1	
	Q111	LSAR523UBFS8	TRANSISTOR		1	K3,K4,K2
	Q112	LSAR523UBFS8	TRANSISTOR		1	K3,K4,K2
	Q113	LSAR523UBFS8	TRANSISTOR		1	K3,K4,K2
	Q114	2SB1188(Q,R)	TRANSISTOR		1	K3,K4,K2
	Q115	LSCR523UBFS8	TRANSISTOR		1	K3,K4,K2
	Q116	LTC043ZUBFS8	DIGI TRANSISTOR		1	K3,K4,K2
	Q131	LSCR523UBFS8	TRANSISTOR		1	
	Q132	LSCR523UBFS8	TRANSISTOR		1	
	Q133	LSCR523UBFS8	TRANSISTOR		1	
	Q134	LTC044EUBFS8	DIGI TRANSISTOR		1	
	Q135	LSCR523UBFS8	TRANSISTOR		1	
	Q231	LTC043TUBFS8	DIGI TRANSISTOR		1	
	Q232	LTC043TUBFS8	DIGI TRANSISTOR		1	
	Q233	LTC043TUBFS8	DIGI TRANSISTOR		1	
	Q234	LTC043TUBFS8	DIGI TRANSISTOR		1	
	Q235	LTC043TUBFS8	DIGI TRANSISTOR		1	
	Q236	LTC043TUBFS8	DIGI TRANSISTOR		1	
	Q237	LTA014YUBFS8	DIGI TRANSISTOR		1	
	Q401	LSAR523UBFS8	TRANSISTOR		1	K3,K2
	Q402	LTC043ZUBFS8	DIGI TRANSISTOR		1	K3,K2
	Q403	LSCR523UBFS8	TRANSISTOR		1	K3,K2
	Q441	2SB1689	TRANSISTOR		1	E2
	Q701	2SB1188(Q,R)	TRANSISTOR		1	
	Q702	LTC043ZUBFS8	DIGI TRANSISTOR		1	
	Q703	LSAR523UBFS8	TRANSISTOR		1	
	Q704	LTC043ZUBFS8	DIGI TRANSISTOR		1	
	Q861	LTA023JUBFS8	TRANSISTOR		1	
	Q901	LTA023JUBFS8	TRANSISTOR		1	
	D1	RB160L-40	DIODE		1	
	D31	RB080L-30	SCHOTTKY BARRIER DIODE		1	
	D41	RB080L-30	SCHOTTKY BARRIER DIODE		1	
	D51	RB080L-30	SCHOTTKY BARRIER DIODE		1	
	D111	DA2J101-X	SILICON DIODE		1	K3,K4,K2
	D112	DZ2J051/M/-X	ZENER DIODE		1	K3,K4,K2
	D131	DZ2J068/M/-X	ZENER DIODE		1	
	D132	DZ2J068/M/-X	ZENER DIODE		1	
	D133	DZ2J068/M/-X	ZENER DIODE		1	
	D134	DZ2J051/M/-X	ZENER DIODE		1	
	D135	RB521SM-30	DIODE		1	
	D136	MC2846-T111	DIODE		1	
	D137	GS1J-LTP-X	SILICON DIODE		1	
	D138	GS1J-LTP-X	SILICON DIODE		1	
	D139	GS1J-LTP-X	SILICON DIODE		1	
	D140	GS1J-LTP-X	SILICON DIODE		1	
	D141	S2V60-5009F46	DIODE		1	
	D201	MC2846-T111	DIODE		1	
	D231	MC2846-T111	DIODE		1	
	D232	MC2850-T111	DIODE		1	
	D251	MC2846-T111	DIODE		1	
	D302	RN731V	DIODE		1	
	D303	RN731V	DIODE		1	
	D360	IMSA680201901	SURGE ABSORBER		1	
	D406	DZ2J056/M/-X	ZENER DIODE		1	K3,K2
	D461	DZ2J068/M/-X	ZENER DIODE		1	K5,K3,K4,K2
	D462	DZ2J068/M/-X	ZENER DIODE		1	K5,K3,K4,K2
	D463	DZ2J062/M/-X	ZENER DIODE		1	K5,K3,K4,K2
	D465	DZ2J062/M/-X	ZENER DIODE		1	K5,K3,K4,K2
	D466	DZ2J062/M/-X	ZENER DIODE		1	K5,K3,K4,K2
	D467	DZ2J062/M/-X	ZENER DIODE		1	K5,K3,K4,K2
	D511	DZ2J068/M/-X	ZENER DIODE		1	
	D512	DZ2J068/M/-X	ZENER DIODE		1	
	D513	DZ2J068/M/-X	ZENER DIODE		1	
	D521	VR105C3R3BAA	VARISTOR		1	
	D522	VR105C3R3BAA	VARISTOR		1	
	D523	STZ6.8N	ZENER DIODE		1	

MODEL	MARK	MODEL	MARK	MODEL	MARK	MODEL	MARK
KDC-5057SD	E2	KDC-655U	K5	KDC-BT855U	K3	KDC-X697	K4
KDC-X897	K2						

Safe	Symbol No.	Parts No.	Parts Name	Description	QTY	Local
	D531	VR105C3R3BAA	VARISTOR		1	
	D532	VR105C3R3BAA	VARISTOR		1	
	D701	SJPM-H4	DIODE	2A	1	
	D913	MC2850-T111	DIODE		1	
	C1	CK73FB1C105K	CHIP C	1.0UF 16V K	1	
	C3	CK73GB1A105K	CHIP C	1.0UF 10V K	1	
	C5	CK73GB1A105K	CHIP C	1.0UF 10V K	1	
	C6	CD04AR1C471M	ELECTRO	470UF 16V M	1	
	C7	CD04AS0J101M	ELECTRO	100UF 6.3V M	1	
	C8	CK73GB1A105K	CHIP C	1.0UF 10V K	1	
	C9	CK73GB1A105K	CHIP C	1.0UF 10V K	1	
	C10	CK73EB1H474K	CHIP C	0.47UF K	1	K5,K3,K4,K2
	C11	CK73FB1H224K	CHIP C	0.22UF 50V K	1	
	C12	CC73GCH1H060D	CHIP C	6.0PF 50V D	1	
	C13	CC73GCH1H060D	CHIP C	6.0PF 50V D	1	
	C32	CK73EB1E106K	CHIP C	10UF 25V K	1	
	C34	CK73GB1H104K	CHIP C	0.10UF 50V K	1	
	C35	CK73GB1C473K	CHIP C	0.047UF 16V K	1	
	C37	CK73FB1E475K	CHIP C	4.7UF 25V K	1	
	C40	CK73GB1H103K	CHIP C	0.010UF 50V K	1	
	C42	CK73EB1E106K	CHIP C	10UF 25V K	1	
	C44	CK73GB1H104K	CHIP C	0.10UF 50V K	1	
	C45	CK73GB1H103K	CHIP C	0.010UF 50V K	1	
	C47	CK73FB0J226M	CHIP C	22UF M	1	
	C50	CK73GB1H103K	CHIP C	0.010UF 50V K	1	
	C52	CK73EB1E106K	CHIP C	10UF 25V K	1	
	C54	CK73GB1H104K	CHIP C	0.10UF 50V K	1	
	C55	CK73GB1H472K	CHIP C	4700PF 50V K	1	
	C57	CK73FB0J226M	CHIP C	22UF M	1	
	C60	CK73GB1H103K	CHIP C	0.010UF 50V K	1	
	C71	CK73GB1H104K	CHIP C	0.10UF 50V K	1	
	C72	CK73GB1H104K	CHIP C	0.10UF 50V K	1	
	C73	CD04BR1C221M	ELECTRO	220UF 16V M	1	
	C81	CK73GB1H104K	CHIP C	0.10UF 50V K	1	
	C82	CK73GB1H104K	CHIP C	0.10UF 50V K	1	
	C83	CD04BR1C221M	ELECTRO	220UF 16V M	1	
	C111	CD04AS1C220M	ELECTRO	22UF 16V M	1	K3,K4,K2
	C113	CC73GCH1H470J	CHIP C	47PF 50V J	1	K3,K4,K2
	C114	CK73GB1A105K	CHIP C	1.0UF 10V K	1	K3,K4,K2
	C115	CK73GB1H102K	CHIP C	1000PF 50V K	1	K3,K4,K2
	C132	CK73GB1H103K	CHIP C	0.010UF 50V K	1	
	C133	CK73GB1H104K	CHIP C	0.10UF 50V K	1	
	C135	CK73GB1A105K	CHIP C	1.0UF 10V K	1	
	C136	CK73GB1H223K	CHIP C	0.022UF 50V K	1	
	C138	CD04AZ1C332M2	ELECTRO	3300UF 16V M	1	
	C171	CK73GB1A105K	CHIP C	1.0UF 10V K	1	K5,K3,K4,K2
	C174	CK73GB1A105K	CHIP C	1.0UF 10V K	1	K5,K3,K4,K2
	C181	CK73GB1A105K	CHIP C	1.0UF 10V K	1	
	C183	CK73GB1A105K	CHIP C	1.0UF 10V K	1	
	C201	CK73GB1C224K	CHIP C	0.22UF 16V K	1	
	C202	CK73GB1C224K	CHIP C	0.22UF 16V K	1	
	C203	CK73GB1C224K	CHIP C	0.22UF 16V K	1	
	C204	CK73GB1C224K	CHIP C	0.22UF 16V K	1	
	C205	CK73GB1A105K	CHIP C	1.0UF 10V K	1	
	C206	CD04AS1V100M	ELECTRO	10UF 35V M	1	
	C207	CK73GB1A105K	CHIP C	1.0UF 10V K	1	
	C208	CK73GB1A105K	CHIP C	1.0UF 10V K	1	
	C231	CD04AS1V100M	ELECTRO	10UF 35V M	1	
	C232	CD04AS1V100M	ELECTRO	10UF 35V M	1	
	C233	CD04AS1V100M	ELECTRO	10UF 35V M	1	
	C234	CD04AS1V100M	ELECTRO	10UF 35V M	1	
	C235	CD04AS1V100M	ELECTRO	10UF 35V M	1	
	C236	CD04AS1V100M	ELECTRO	10UF 35V M	1	
	C251	CK73GB1A105K	CHIP C	1.0UF 10V K	1	
	C252	CK73GB1A105K	CHIP C	1.0UF 10V K	1	
	C255	CK73GB1A105K	CHIP C	1.0UF 10V K	1	
	C256	CD04AS1C470M	ELECTRO	47UF 16V M	1	
	C258	CD04AS1H010M	ELECTRO	1UF 50V M	1	
	C301	CC73GCH1H220J	CHIP C	22PF 50V J	1	
	C302	CC73GCH1H060D	CHIP C	6.0PF 50V D	1	
	C306	CK73GB1H102K	CHIP C	1000PF 50V K	1	
	C307	CK73GB1H102K	CHIP C	1000PF 50V K	1	
	C311	CC73GCH1H470J	CHIP C	47PF 50V J	1	
	C312	CC73GCH1H030C	CHIP C	3.0PF 50V C	1	
	C315	CK73GB1H222K	CHIP C	2200PF 50V K	1	
	C316	CC73GCH1H150J	CHIP C	15PF 50V J	1	
	C317	CC73GCH1H060D	CHIP C	6.0PF 50V D	1	
	C318	CC73GCH1H080D	CHIP C	8.0PF 50V D	1	
	C319	CC73GCH1H080D	CHIP C	8.0PF 50V D	1	
	C320	CC73GCH1H080D	CHIP C	8.0PF 50V D	1	
	C321	CC73GCH1H080D	CHIP C	8.0PF 50V D	1	
	C322	CC73GCH1H471J	CHIP C	470PF 50V J	1	
	C323	CK73GB1H104K	CHIP C	0.10UF 50V K	1	
	C324	CK73GB1H102K	CHIP C	1000PF 50V K	1	
	C325	CK73GB1H102K	CHIP C	1000PF 50V K	1	
	C326	CK73GB1A105K	CHIP C	1.0UF 10V K	1	
	C327	CK73FB1C106K	CHIP C	10UF 16V K	1	
	C328	CK73GB1C224K	CHIP C	0.22UF 16V K	1	
	C329	CK73HB1H332K	CHIP C	3300PF 50V K	1	
	C330	CK73FB1C106K	CHIP C	10UF 16V K	1	
	C331	CK73FB1C106K	CHIP C	10UF 16V K	1	
	C332	CK73GB1H103K	CHIP C	0.010UF 50V K	1	
	C333	CK73GB1H103K	CHIP C	0.010UF 50V K	1	

MODEL	MARK	MODEL	MARK	MODEL	MARK	MODEL	MARK
KDC-5057SD	E2	KDC-655U	K5	KDC-BT855U	K3	KDC-X697	K4
KDC-X897	K2						

Safe	Symbol No.	Parts No.	Parts Name	Description	QTY	Local
	C336	CK73HB1A104K	CHIP C	0.10UF 10V K	1	
	C337	CK73GB1H682K	CHIP C	6800PF 50V K	1	
	C338	CK73GB1H682K	CHIP C	6800PF 50V K	1	
	C339	CK73GB0J475K	CHIP C	4.7UF 6.3V K	1	
	C340	CK73GB1A105K	CHIP C	1.0UF 10V K	1	
	C341	CK73GB1A105K	CHIP C	1.0UF 10V K	1	
	C345	CK73GB1H104K	CHIP C	0.10UF 50V K	1	
	C346	CK73GB1H104K	CHIP C	0.10UF 50V K	1	
	C349	CK73GB1H104K	CHIP C	0.10UF 50V K	1	
	C350	CK73FB1C106K	CHIP C	10UF 16V K	1	
	C351	CK73GB1A105K	CHIP C	1.0UF 10V K	1	
	C352	CK73GB1A105K	CHIP C	1.0UF 10V K	1	
	C354	CC73GCH1H101J	CHIP C	100PF 50V J	1	
	C401	C90-6990-05	ELECTRO	220UF 10V M	1	K3,K2
	C402	CK73GB1H104K	CHIP C	0.10UF 50V K	1	K3,K2
	C404	CK73GB1H104K	CHIP C	0.10UF 50V K	1	K3,K2
	C417	CK73GB1H222K	CHIP C	2200PF 50V K	1	K3,K2
	C418	CK73GB1H222K	CHIP C	2200PF 50V K	1	K3,K2
	C419	CK73GB1A105K	CHIP C	1.0UF 10V K	1	K3,K2
	C420	CK73GB1A105K	CHIP C	1.0UF 10V K	1	K3,K2
	C423	CK73FB0J226M	CHIP C	22UF M	1	K3,K2
	C424	CK73GB1H103K	CHIP C	0.010UF 50V K	1	K3,K2
	C425	CK73GB1A105K	CHIP C	1.0UF 10V K	1	K3,K2
	C444	CC73GCH1H101J	CHIP C	100PF 50V J	1	E2
	C445	CK73GB1H104K	CHIP C	0.10UF 50V K	1	E2
	C447	CK73GB1H103K	CHIP C	0.010UF 50V K	1	E2
	C448	CC73GCH1H101J	CHIP C	100PF 50V J	1	E2
	C449	CC73GCH1H101J	CHIP C	100PF 50V J	1	E2
	C461	CK73GB1A105K	CHIP C	1.0UF 10V K	1	K5,K3,K4,K2
	C462	CK73GB1A105K	CHIP C	1.0UF 10V K	1	K5,K3,K4,K2
	C463	CD04AS0J470M	ELECTRO	47UF 6.3V M	1	K5,K3,K4,K2
	C486	CK73GB1H103K	CHIP C	0.010UF 50V K	1	
	C511	CK73GB1H102K	CHIP C	1000PF 50V K	1	
	C512	CK73GB1H102K	CHIP C	1000PF 50V K	1	
	C513	CK73GB1H104K	CHIP C	0.10UF 50V K	1	
	C514	CK73GB1H104K	CHIP C	0.10UF 50V K	1	
	C515	CD04AS0J470M	ELECTRO	47UF 6.3V M	1	
	C516	CK73GB1H103K	CHIP C	0.010UF 50V K	1	
	C701	CD04AS1H4R7M	ELECTRO	4.7UF 50V M	1	
	C702	CD04AS1H4R7M	ELECTRO	4.7UF 50V M	1	
	C706	CK73GB1A105K	CHIP C	1.0UF 10V K	1	
	C707	CK73GB1A105K	CHIP C	1.0UF 10V K	1	
	C710	CD04AS1C101M	ELECTRO	100UF 16V M	1	
	C801	CK73GB1H104K	CHIP C	0.10UF 50V K	1	
	C802	CK73GB1H104K	CHIP C	0.10UF 50V K	1	
	C803	CK73GB1H104K	CHIP C	0.10UF 50V K	1	
	C804	CK73GB1H104K	CHIP C	0.10UF 50V K	1	
	C805	CK73GB1H104K	CHIP C	0.10UF 50V K	1	
	C806	CK73GB1H104K	CHIP C	0.10UF 50V K	1	
	C807	CK73HB1A104K	CHIP C	0.10UF 10V K	1	
	C808	CK73GB1H104K	CHIP C	0.10UF 50V K	1	
	C809	CK73HB1A104K	CHIP C	0.10UF 10V K	1	
	C810	CK73HB1A104K	CHIP C	0.10UF 10V K	1	
	C811	CK73HB1A104K	CHIP C	0.10UF 10V K	1	
	C812	CK73HB1A104K	CHIP C	0.10UF 10V K	1	
	C813	CK73HB1A104K	CHIP C	0.10UF 10V K	1	
	C814	CK73HB1A104K	CHIP C	0.10UF 10V K	1	
	C815	CK73GB1H104K	CHIP C	0.10UF 50V K	1	
	C816	CK73GB1H104K	CHIP C	0.10UF 50V K	1	
	C817	CK73GB1H104K	CHIP C	0.10UF 50V K	1	
	C818	CK73GB1H104K	CHIP C	0.10UF 50V K	1	
	C819	CK73HB1A104K	CHIP C	0.10UF 10V K	1	
	C820	CK73GB1H104K	CHIP C	0.10UF 50V K	1	
	C821	CK73GB1H104K	CHIP C	0.10UF 50V K	1	
	C822	CK73GB1H104K	CHIP C	0.10UF 50V K	1	
	C823	CK73GB1H103K	CHIP C	0.010UF 50V K	1	
	C824	CK73GB1H103K	CHIP C	0.010UF 50V K	1	
	C825	CK73GB1H104K	CHIP C	0.10UF 50V K	1	
	C831	CK73GB1H104K	CHIP C	0.10UF 50V K	1	
	C841	CC73GCH1H150J	CHIP C	15PF 50V J	1	
	C842	CC73GCH1H150J	CHIP C	15PF 50V J	1	
	C846	CK73GB1H682K	CHIP C	6800PF 50V K	1	
	C851	CK73GB1H104K	CHIP C	0.10UF 50V K	1	
	C861	CK73GB1H104K	CHIP C	0.10UF 50V K	1	
	C901	CK73GB1A105K	CHIP C	1.0UF 10V K	1	
	C902	CK73GB0J225K	CHIP C	2.2UF 6.3V K	1	
	C903	CK73HB1E103K	CHIP C	0.010UF 25V K	1	
	C908	CK73FB1C105K	CHIP C	1.0UF 16V K	1	
	R1	RK73GH2A563D	CHIP R	56K D 1/10W	1	
	R2	RK73GH2A752D	CHIP R	7.5K D 1/10W	1	
	R3	RK73GH2A472D	CHIP R	4.7K D 1/10W	1	
	R4	RK73GH2A273D	CHIP R	27K D 1/10W	1	
	R5	RK73GB2A472J	CHIP R	4.7K J 1/10W	1	
	R6	RK73GB2A103J	CHIP R	10K J 1/10W	1	
	R7	RK73GB2A472J	CHIP R	4.7K J 1/10W	1	
	R8	RK73GB2A103J	CHIP R	10K J 1/10W	1	
	R12	RK73GB2A100J	CHIP R	10 J 1/10W	1	
	R31	RK73GB2A102J	CHIP R	1.0K J 1/10W	1	
	R32	RK73GH2A164D	CHIP R	160K D 1/10W	1	
	R33	RK73GH2A333D	CHIP R	33K D 1/10W	1	
	R37	RK73GB2A101J	CHIP R	100 J 1/10W	1	
	R39	RK73GB2A102J	CHIP R	1.0K J 1/10W	1	
	R41	RK73GB2A472J	CHIP R	4.7K J 1/10W	1	
	R42	RK73GH2A513D	CHIP R	51K D 1/10W	1	

MODEL	MARK	MODEL	MARK	MODEL	MARK	MODEL	MARK
KDC-5057SD	E2	KDC-655U	K5	KDC-BT855U	K3	KDC-X697	K4
KDC-X897	K2						

Safe	Symbol No.	Parts No.	Parts Name	Description	QTY	Local
	R43	RK73GH2A223D	CHIP R	22K D 1/10W	1	
	R47	RK73GB2A101J	CHIP R	100 J 1/10W	1	
	R49	RK73GB2A102J	CHIP R	1.0K J 1/10W	1	
	R51	RK73GB2A682J	CHIP R	6.8K J 1/10W	1	
	R52	RK73GH2A104D	CHIP R	100K D 1/10W	1	
	R53	RK73GH2A243D	CHIP R	24K D 1/10W	1	
	R71	RK73GB2A104J	CHIP R	100K J 1/10W	1	
	R72	RK73GH2A223D	CHIP R	22K D 1/10W	1	
	R73	RK73GB2A102J	CHIP R	1.0K J 1/10W	1	
	R81	RK73GB2A104J	CHIP R	100K J 1/10W	1	
	R82	RK73GH2A223D	CHIP R	22K D 1/10W	1	
	R83	RK73GB2A102J	CHIP R	1.0K J 1/10W	1	
	R111	RK73GH2A562D	CHIP R	5.6K D 1/10W	1	K3,K4,K2
	R112	RK73GH2A432D	CHIP R	4.3K D 1/10W	1	K3,K4,K2
	R113	RK73FB2B561J	CHIP R	560 J 1/8W	1	K3,K4,K2
	R114	RK73FB2B4R7J	CHIP R	4.7 J 1/8W	1	K3,K4,K2
	R115	RK73FB2B201J	CHIP R	200 J 1/8W	1	K3,K4,K2
	R116	RK73FB2B152J	CHIP R	1.5K J 1/8W	1	K3,K4,K2
	R117	RK73FB2B432J	CHIP R	4.3K J 1/8W	1	K3,K4,K2
	R118	RK73GB2A103J	CHIP R	10K J 1/10W	1	K3,K4,K2
	R131	RK73GB2A473J	CHIP R	47K J 1/10W	1	
	R132	RK73GB2A104J	CHIP R	100K J 1/10W	1	
	R133	RK73GB2A103J	CHIP R	10K J 1/10W	1	
	R134	RK73FB2B683J	CHIP R	68K J 1/8W	1	
	R135	RK73EB2E203J	CHIP R	20K J 1/4W	1	
	R136	RK73GB2A103J	CHIP R	10K J 1/10W	1	
	R138	RK73EB2E102J	CHIP R	1.0K J 1/4W	1	
	R139	RK73EB2E102J	CHIP R	1.0K J 1/4W	1	
	R140	RK73EB2E102J	CHIP R	1.0K J 1/4W	1	
	R141	RK73GB2A103J	CHIP R	10K J 1/10W	1	
	R142	RK73GB2A103J	CHIP R	10K J 1/10W	1	
	R143	RK73EB2E333J	CHIP R	33K J 1/4W	1	
	R144	RK73GB2A223J	CHIP R	22K J 1/10W	1	
	R145	RK73GB2A104J	CHIP R	100K J 1/10W	1	
	R146	RK73EB2E471J	CHIP R	470 J 1/4W	1	
	R147	RK73GB2A123J	CHIP R	12K J 1/10W	1	
	R148	RK73GB2A683J	CHIP R	68K J 1/10W	1	
	R150	RK73EB2E103J	CHIP R	10K J 1/4W	1	
	R151	RK73GB2A103J	CHIP R	10K J 1/10W	1	
	R153	RK73FB2B472J	CHIP R	4.7K J 1/8W	1	
	R154	RK73FB2B472J	CHIP R	4.7K J 1/8W	1	
	R156	RK73GB2A000J	CHIP R	0.0 J 1/10W	1	K5,K3,K4,K2
	R157	RK73GB2A000J	CHIP R	0.0 J 1/10W	1	E2
	R158	RK73GB2A104J	CHIP R	100K J 1/10W	1	
	R159	RK73GB2A363J	CHIP R	36K J 1/10W	1	
	R160	RK73GB2A104J	CHIP R	100K J 1/10W	1	
	R201	RK73GB2A473J	CHIP R	47K J 1/10W	1	
	R203	RK73GB2A182J	CHIP R	1.8K J 1/10W	1	
	R204	RK73GB2A6R8J	CHIP R	6.8 J 1/10W	1	
	R205	RK73GB2A473J	CHIP R	47K J 1/10W	1	
	R206	RK73GB2A331J	CHIP R	330 J 1/10W	1	
	R207	RK73GB2A153J	CHIP R	15K J 1/10W	1	
	R208	RK73GB2A000J	CHIP R	0.0 J 1/10W	1	
	R210	RK73GB2A000J	CHIP R	0.0 J 1/10W	1	
	R231	RK73GB2A331J	CHIP R	330 J 1/10W	1	
	R232	RK73GB2A331J	CHIP R	330 J 1/10W	1	
	R233	RK73GB2A223J	CHIP R	22K J 1/10W	1	
	R234	RK73GB2A223J	CHIP R	22K J 1/10W	1	
	R235	RK73FB2B181J	CHIP R	180 J 1/8W	1	
	R236	RK73FB2B181J	CHIP R	180 J 1/8W	1	
	R237	RK73GB2A331J	CHIP R	330 J 1/10W	1	
	R238	RK73GB2A331J	CHIP R	330 J 1/10W	1	
	R239	RK73GB2A223J	CHIP R	22K J 1/10W	1	
	R240	RK73GB2A223J	CHIP R	22K J 1/10W	1	
	R241	RK73FB2B181J	CHIP R	180 J 1/8W	1	
	R242	RK73FB2B181J	CHIP R	180 J 1/8W	1	
	R243	RK73GB2A331J	CHIP R	330 J 1/10W	1	
	R244	RK73GB2A331J	CHIP R	330 J 1/10W	1	
	R245	RK73GB2A223J	CHIP R	22K J 1/10W	1	
	R246	RK73GB2A223J	CHIP R	22K J 1/10W	1	
	R247	RK73FB2B181J	CHIP R	180 J 1/8W	1	
	R248	RK73FB2B181J	CHIP R	180 J 1/8W	1	
	R251	RK73GB2A472J	CHIP R	4.7K J 1/10W	1	
	R252	RK73GB2A103J	CHIP R	10K J 1/10W	1	
	R263	RK73GB2A000J	CHIP R	0.0 J 1/10W	1	E2,K5
	R302	RK73GB2A105J	CHIP R	1.0M J 1/10W	1	
	R303	RK73GB2A471J	CHIP R	470 J 1/10W	1	
	R304	RK73GB2A271J	CHIP R	270 J 1/10W	1	
	R305	RK73GB2A105J	CHIP R	1.0M J 1/10W	1	
	R307	RK73GB2A105J	CHIP R	1.0M J 1/10W	1	
	R308	RK73GB2A105J	CHIP R	1.0M J 1/10W	1	
	R311	RK73GB2A120J	CHIP R	12 J 1/10W	1	
	R341	RK73GB2A000J	CHIP R	0.0 J 1/10W	1	
	R342	RK73GB2A000J	CHIP R	0.0 J 1/10W	1	
	R343	RK73GB2A000J	CHIP R	0.0 J 1/10W	1	
	R344	RK73GB2A000J	CHIP R	0.0 J 1/10W	1	
	R347	RK73HB1J101J	CHIP R	100 J 1/16W	1	
	R350	RK73GB2A000J	CHIP R	0.0 J 1/10W	1	
	R351	RK73GB2A000J	CHIP R	0.0 J 1/10W	1	
	R352	RK73GB2A000J	CHIP R	0.0 J 1/10W	1	
	R353	RK73GB2A101J	CHIP R	100 J 1/10W	1	
	R354	RK73GB2A101J	CHIP R	100 J 1/10W	1	
	R357	RK73GB2A470J	CHIP R	47 J 1/10W	1	

MODEL	MARK	MODEL	MARK	MODEL	MARK	MODEL	MARK
KDC-5057SD	E2	KDC-655U	K5	KDC-BT855U	K3	KDC-X697	K4
KDC-X897	K2						

Safe	Symbol No.	Parts No.	Parts Name	Description	QTY	Local
	R361	RK73GB2A332J	CHIP R	3.3K J 1/10W	1	
	R362	RK73GB2A332J	CHIP R	3.3K J 1/10W	1	
	R365	RK73GB2A332J	CHIP R	3.3K J 1/10W	1	
	R398	RK73GB2A472J	CHIP R	4.7K J 1/10W	1	
	R399	RK73GB2A472J	CHIP R	4.7K J 1/10W	1	
	R401	RK73EB2E101J	CHIP R	100 J 1/4W	1	K3,K2
	R402	RK73EB2E101J	CHIP R	100 J 1/4W	1	K3,K2
	R403	RK73GB2A473J	CHIP R	47K J 1/10W	1	K3,K2
	R405	RK73GB2A473J	CHIP R	47K J 1/10W	1	K3,K2
	R406	RK73GB2A122J	CHIP R	1.2K J 1/10W	1	K3,K2
	R407	RK73GB2A122J	CHIP R	1.2K J 1/10W	1	K3,K2
	R409	RK73GB2A102J	CHIP R	1.0K J 1/10W	1	K3,K2
	R411	RK73GB2A220J	CHIP R	22 J 1/10W	1	K3,K2
	R412	RK73GB2A222J	CHIP R	2.2K J 1/10W	1	K3,K2
	R425	RK73GB2A471J	CHIP R	470 J 1/10W	1	K3,K2
	R426	RK73GB2A471J	CHIP R	470 J 1/10W	1	K3,K2
	R428	RK73GB2A472J	CHIP R	4.7K J 1/10W	1	K3,K2
	R430	RK73GB2A472J	CHIP R	4.7K J 1/10W	1	K3,K2
	R436	RK73GB2A471J	CHIP R	470 J 1/10W	1	K3,K2
	R442	RK73GB2A101J	CHIP R	100 J 1/10W	1	E2
	R443	RK73GB2A101J	CHIP R	100 J 1/10W	1	E2
	R444	RK73GB2A102J	CHIP R	1.0K J 1/10W	1	E2
	R445	RK73GB2A473J	CHIP R	47K J 1/10W	1	E2
	R446	RK73GB2A473J	CHIP R	47K J 1/10W	1	E2
	R447	RK73GB2A473J	CHIP R	47K J 1/10W	1	E2
	R448	RK73GB2A473J	CHIP R	47K J 1/10W	1	E2
	R450	RK73GB2A820J	CHIP R	82 J 1/10W	1	E2
	R451	RK73GB2A101J	CHIP R	100 J 1/10W	1	E2
	R461	RK73GB2A103J	CHIP R	10K J 1/10W	1	K5,K3,K4,K2
	R462	RK73GB2A103J	CHIP R	10K J 1/10W	1	K5,K3,K4,K2
	R463	RK73EB2E100J	CHIP R	10 J 1/4W	1	K5,K3,K4,K2
	R464	RK73EB2E100J	CHIP R	10 J 1/4W	1	K5,K3,K4,K2
	R465	RK73EB2E4R7J	CHIP R	4.7 J 1/4W	1	K5,K3,K4,K2
	R467	RK73EB2E221J	CHIP R	220 J 1/4W	1	K5,K3,K4,K2
	R468	RK73GB2A101J	CHIP R	100 J 1/10W	1	K5,K3,K4,K2
	R469	RK73EB2E101J	CHIP R	100 J 1/4W	1	K5,K3,K4,K2
	R470	RK73EB2E221J	CHIP R	220 J 1/4W	1	K5,K3,K4,K2
	R471	RK73GB2A473J	CHIP R	47K J 1/10W	1	K5,K3,K4,K2
	R475	RK73GB2A221J	CHIP R	220 J 1/10W	1	K5,K3,K4,K2
	R476	RK73GB2A221J	CHIP R	220 J 1/10W	1	K5,K3,K4,K2
	R477	RK73GB2A221J	CHIP R	220 J 1/10W	1	K5,K3,K4,K2
	R511	RK73GB2A100J	CHIP R	10 J 1/10W	1	
	R512	RK73GB2A100J	CHIP R	10 J 1/10W	1	
	R513	RK73GB2A103J	CHIP R	10K J 1/10W	1	
	R514	RK73GB2A103J	CHIP R	10K J 1/10W	1	
	R515	RK73GB2A4R7J	CHIP R	4.7 J 1/10W	1	
	R516	RK73GB2A102J	CHIP R	1.0K J 1/10W	1	
	R521	RK73GB2A100J	CHIP R	10 J 1/10W	1	
	R522	RK73GB2A100J	CHIP R	10 J 1/10W	1	
	R523	RK73GB2A153J	CHIP R	15K J 1/10W	1	
	R524	RK73GB2A153J	CHIP R	15K J 1/10W	1	
	R531	RK73GB2A100J	CHIP R	10 J 1/10W	1	
	R532	RK73GB2A100J	CHIP R	10 J 1/10W	1	
	R533	RK73GB2A153J	CHIP R	15K J 1/10W	1	
	R534	RK73GB2A153J	CHIP R	15K J 1/10W	1	
	R535	RK73GB2A220J	CHIP R	22 J 1/10W	1	
	R536	RK73GB2A220J	CHIP R	22 J 1/10W	1	
	R701	RK73GB2A101J	CHIP R	100 J 1/10W	1	
	R702	RK73GB2A101J	CHIP R	100 J 1/10W	1	
	R703	RK73GB2A101J	CHIP R	100 J 1/10W	1	
	R704	RK73GB2A101J	CHIP R	100 J 1/10W	1	
	R705	RK73GB2A101J	CHIP R	100 J 1/10W	1	
	R706	RK73GB2A101J	CHIP R	100 J 1/10W	1	
	R707	RK73GB2A101J	CHIP R	100 J 1/10W	1	
	R708	RK73GB2A101J	CHIP R	100 J 1/10W	1	
	R709	RK73GB2A101J	CHIP R	100 J 1/10W	1	
	R710	RK73GB2A101J	CHIP R	100 J 1/10W	1	
	R711	RK73GB2A101J	CHIP R	100 J 1/10W	1	
	R712	RK73GB2A101J	CHIP R	100 J 1/10W	1	
	R713	RK73GB2A101J	CHIP R	100 J 1/10W	1	
	R714	RK73GB2A102J	CHIP R	1.0K J 1/10W	1	
	R715	RK73GB2A101J	CHIP R	100 J 1/10W	1	
	R716	RK73GB2A102J	CHIP R	1.0K J 1/10W	1	
	R717	RK73GB2A473J	CHIP R	47K J 1/10W	1	
	R718	RK73GB2A473J	CHIP R	47K J 1/10W	1	
	R719	RK73GB2A222J	CHIP R	2.2K J 1/10W	1	
	R720	RK73GB2A222J	CHIP R	2.2K J 1/10W	1	
	R721	RK73GB2A222J	CHIP R	2.2K J 1/10W	1	
	R724	RK73GB2A223J	CHIP R	22K J 1/10W	1	
	R725	RK73GB2A471J	CHIP R	470 J 1/10W	1	
	R726	RK73GB2A223J	CHIP R	22K J 1/10W	1	
	R727	RK73GB2A103J	CHIP R	10K J 1/10W	1	
	R801	RK73GB2A473J	CHIP R	47K J 1/10W	1	E2,K5,K2
	R801	RK73GB2A223J	CHIP R	22K J 1/10W	1	K3
	R802	RK73GB2A473J	CHIP R	47K J 1/10W	1	K3,K4
	R802	RK73GB2A223J	CHIP R	22K J 1/10W	1	K2
	R803	RK73GB2A473J	CHIP R	47K J 1/10W	1	E2
	R804	RK73GB2A473J	CHIP R	47K J 1/10W	1	K5,K3,K4,K2
	R806	RK73GB2A473J	CHIP R	47K J 1/10W	1	
	R807	RK73GB2A473J	CHIP R	47K J 1/10W	1	
	R809	RK73GB2A473J	CHIP R	47K J 1/10W	1	
	R810	RK73GB2A473J	CHIP R	47K J 1/10W	1	
	R811	RK73GB2A473J	CHIP R	47K J 1/10W	1	

MODEL	MARK	MODEL	MARK	MODEL	MARK	MODEL	MARK
KDC-5057SD	E2	KDC-655U	K5	KDC-BT855U	K3	KDC-X697	K4
KDC-X897	K2						

Safe	Symbol No.	Parts No.	Parts Name	Description	QTY	Local
	R812	RK73GB2A473J	CHIP R	47K J 1/10W	1	
	R815	RK73HB1J104J	CHIP R	100K J 1/16W	1	
	R816	RK73GB2A104J	CHIP R	100K J 1/10W	1	
	R817	RK73GB2A104J	CHIP R	100K J 1/10W	1	
	R818	RK73HB1J104J	CHIP R	100K J 1/16W	1	
	R827	RK73GB2A101J	CHIP R	100 J 1/10W	1	
	R828	RK73GB2A101J	CHIP R	100 J 1/10W	1	
	R831	RK73GB2A473J	CHIP R	47K J 1/10W	1	
	R835	RK73GB2A473J	CHIP R	47K J 1/10W	1	
	R836	RK73GB2A104J	CHIP R	100K J 1/10W	1	
	R841	RK73GB2A332J	CHIP R	3.3K J 1/10W	1	
	R842	RK73GB2A105J	CHIP R	1.0M J 1/10W	1	
	R845	RK73GB2A473J	CHIP R	47K J 1/10W	1	
	R846	RK73GB2A102J	CHIP R	1.0K J 1/10W	1	
	R851	RK73GB2A332J	CHIP R	3.3K J 1/10W	1	
	R852	RK73GB2A332J	CHIP R	3.3K J 1/10W	1	
	R861	RK73GB2A332J	CHIP R	3.3K J 1/10W	1	
	R862	RK73GB2A332J	CHIP R	3.3K J 1/10W	1	
	R863	RK73GB2A223J	CHIP R	22K J 1/10W	1	
	R865	RK73GB2A103J	CHIP R	10K J 1/10W	1	
	R901	RK73EB2E222J	CHIP R	2.2K J 1/4W	1	
	R902	RK73EB2E102J	CHIP R	1.0K J 1/4W	1	
	R903	RK73EB2E102J	CHIP R	1.0K J 1/4W	1	
	R904	RK73EB2E102J	CHIP R	1.0K J 1/4W	1	
	R905	RK73EB2E102J	CHIP R	1.0K J 1/4W	1	
	R906	RK73EB2E102J	CHIP R	1.0K J 1/4W	1	
	R907	RK73EB2E102J	CHIP R	1.0K J 1/4W	1	
	R908	RK73EB2E102J	CHIP R	1.0K J 1/4W	1	
	R909	RK73EB2E102J	CHIP R	1.0K J 1/4W	1	
	R910	RK73GB2A473J	CHIP R	47K J 1/10W	1	
	R911	RK73GB2A473J	CHIP R	47K J 1/10W	1	
	R912	RK73GB2A473J	CHIP R	47K J 1/10W	1	
	R913	RK73GB2A473J	CHIP R	47K J 1/10W	1	
	R914	RK73GB2A104J	CHIP R	100K J 1/10W	1	
	L32	L33-3213-05	CHOKE COIL	47UH	1	
	L42	QQLA1AM-220	INDUCTOR	22uH M	1	
	L52	L33-3203-05	CHOKE COIL	15UH	1	
	L131	QQR1909-001	CHOKE COIL		1	
	L254	L41-4792-67	SMALL FIXED INDUCTOR		1	
	L305	L41-1895-52	SMALL FIXED INDUCTOR	1.8U	1	
	L306	L41-2785-61	SMALL FIXED INDUCTOR	C2012C R27J	1	
	L311	L41-6885-52	SMALL FIXED INDUCTOR	680NH	1	
	L313	L41-6885-52	SMALL FIXED INDUCTOR	680NH	1	
	L314	L41-4785-52	SMALL FIXED INDUCTOR	470NH	1	
	L316	L41-5611-66	SMALL FIXED INDUCTOR	560UH	1	
	L317	L41-5611-66	SMALL FIXED INDUCTOR	560UH	1	
	L321	QQR1905-001	RF COIL		1	
	L324	L92-1008-05	CHIP FERRITE		1	
	L329	L92-1008-05	CHIP FERRITE		1	
	L401	L92-0652-05	CHIP FERRITE	1500 OHM	1	K3,K2
	L402	L41-4792-67	SMALL FIXED INDUCTOR		1	K3,K2
	L521	L92-1009-05	CHIP FERRITE		1	
	L531	L92-1009-05	CHIP FERRITE		1	
	L831	L92-1011-05	CHIP FERRITE		1	
	CN401	E41-1699-05	PIN ASSY	02P SIDE PH	1	K3,K2
	CN531	E41-1701-05	PIN ASSY	04P SIDE PH	1	
	CN701	QGF1030F3-26X	FFC/FPC CONNECTOR	FFC/FPC (1-26)	1	
	CP831	RK74GB1J101J	CHIP-COM	100 J 1/16W	1	
	F111	F53-0298-05	FUSE	UL,CSA 0.25A	1	K3,K4,K2
⚠	J131	E58-0991-05	RECTANGULAR RECEPTACLE	DC-CN	1	
	J231	QNN0866-001	PIN JACK		1	
	J301	QNB0358-001	ANT TERMINAL		1	
	J441	E68-0826-15	JACK	SD CARD SLOT	1	E2
	J461	QNZ0907-001	CIR CONNECTOR		1	K5,K3,K4,K2
	J901	E58-1124-05	RECTANGULAR RECEPTACLE	20PIN	1	
	S841	S70-0959-05	TACT SWITCH		1	
	TH201	NAD0052-471X	P THERMISTOR	470Ω	1	
	X303	NAX1199-001X	CRYSTAL RESONATOR		1	
	X841	L77-3846-05	CRYSTAL RESONATOR	12MHZ	1	

SWITCH UNIT (X16-745x-xx) <X16>

	IC1	W10-0849-08	IC(MICROCONTROLLER)		1	
	IC2	PIC95603	IC(ANALOGUE)		1	
	Q1	LTC043ZUBFS8	DIGI TRANSISTOR		1	
	Q2	LTC023JUBFS8	DIGI TRANSISTOR		1	
	Q3	LTC023JUBFS8	DIGI TRANSISTOR		1	
	Q4	LTC043ZUBFS8	DIGI TRANSISTOR		1	
	Q5	LTC023JUBFS8	DIGI TRANSISTOR		1	
	Q6	LTC043ZUBFS8	DIGI TRANSISTOR		1	
	Q7	LTC023JUBFS8	DIGI TRANSISTOR		1	
	Q8	LTC023JUBFS8	DIGI TRANSISTOR		1	
	Q9	LTC023JUBFS8	DIGI TRANSISTOR		1	
	Q10	LTC023JUBFS8	DIGI TRANSISTOR		1	

MODEL	MARK	MODEL	MARK	MODEL	MARK	MODEL	MARK
KDC-5057SD	E2	KDC-655U	K5	KDC-BT855U	K3	KDC-X697	K4
KDC-X897	K2						

Safe	Symbol No.	Parts No.	Parts Name	Description	QTY	Local
	Q11	LTC023JUBFS8	DIGI TRANSISTOR		1	
	Q12	LTC023JUBFS8	DIGI TRANSISTOR		1	
	D10	B30-1779-05	LED	1608_SR	1	
	D15	B30-3259-05	LED	FULL COLOR R G B	1	
	D17	B30-1779-05	LED	1608_SR	1	
	D18	B30-1788-05	LED	1608 WHITE	1	
	D19	B30-3259-05	LED	FULL COLOR R G B	1	
	D21	B30-3259-05	LED	FULL COLOR R G B	1	
	D22	B30-3259-05	LED	FULL COLOR R G B	1	
	D23	B30-3259-05	LED	FULL COLOR R G B	1	
	D24	B30-3259-05	LED	FULL COLOR R G B	1	
	C3	CK73GB1H472K	CHIP C	4700PF 50V K	1	
	C4	CC73GCH1H101J	CHIP C	100PF 50V J	1	
	C5	CC73GCH1H101J	CHIP C	100PF 50V J	1	
	C6	CK73GB1H103K	CHIP C	0.010UF 50V K	1	
	C9	CK73HB1E103K	CHIP C	0.010UF 25V K	1	
	C10	CK73HB1E103K	CHIP C	0.010UF 25V K	1	
	C11	CK73GB0J225K	CHIP C	2.2UF 6.3V K	1	
	C12	CK73GB1H103K	CHIP C	0.010UF 50V K	1	
	C14	CK73HB0J105K	CHIP C	1.0UF 6.3V K	1	
	C15	CK73FB1C106K	CHIP C	10UF 16V K	1	
	C16	CK73FB1C105K	CHIP C	1.0UF 16V K	1	
	C18	CK73FB1C105K	CHIP C	1.0UF 16V K	1	
	C19	CK73GB1A105K	CHIP C	1.0UF 10V K	1	
	C20	CK73GB1A105K	CHIP C	1.0UF 10V K	1	
	C21	CK73HB0J105K	CHIP C	1.0UF 6.3V K	1	
	C22	CK73HB0J105K	CHIP C	1.0UF 6.3V K	1	
	C23	CK73GB1A105K	CHIP C	1.0UF 10V K	1	
	C24	CK73GB1A105K	CHIP C	1.0UF 10V K	1	
	C25	CK73FB1C105K	CHIP C	1.0UF 16V K	1	
	R5	RK73HB1J220J	CHIP R	22 J 1/16W	1	
	R6	RK73HB1J220J	CHIP R	22 J 1/16W	1	
	R9	RK73GB2A473J	CHIP R	47K J 1/10W	1	
	R10	RK73HB1J102J	CHIP R	1.0K J 1/16W	1	
	R11	RK73HB1J102J	CHIP R	1.0K J 1/16W	1	
	R13	RK73GB2A102J	CHIP R	1.0K J 1/10W	1	
	R14	RK73GB2A105J	CHIP R	1.0M J 1/10W	1	
	R15	RK73HB1J513J	CHIP R	51K J 1/16W	1	E2
	R15	RK73HB1J563J	CHIP R	56K J 1/16W	1	K5,K3,K4,K2
	R16	RK73GB2A103J	CHIP R	10K J 1/10W	1	
	R18	RK73EB2E821J	CHIP R	820 J 1/4W	1	
	R19	RK73HB1J101J	CHIP R	100 J 1/16W	1	
	R28	RK73EB2E681J	CHIP R	680 J 1/4W	1	
	R29	RK73EB2E681J	CHIP R	680 J 1/4W	1	
	R31	RK73EB2E821J	CHIP R	820 J 1/4W	1	
	R32	RK73EB2E561J	CHIP R	560 J 1/4W	1	
	R35	RK73GB2A202J	CHIP R	2.0K J 1/10W	1	
	R36	RK73HB1J101J	CHIP R	100 J 1/16W	1	
	R37	RK73HB1J102J	CHIP R	1.0K J 1/16W	1	
	R39	RK73GB2A621J	CHIP R	620 J 1/10W	1	
	R40	RK73GB2A621J	CHIP R	620 J 1/10W	1	
	R41	RK73FB2B681J	CHIP R	680 J 1/8W	1	
	R42	RK73FB2B911J	CHIP R	910 J 1/8W	1	
	R43	RK73GB2A621J	CHIP R	620 J 1/10W	1	
	R44	RK73GB2A112J	CHIP R	1.1K J 1/10W	1	
	R45	RK73GB2A621J	CHIP R	620 J 1/10W	1	
	R46	RK73EB2E911J	CHIP R	910 J 1/4W	1	
	R47	RK73FB2B681J	CHIP R	680 J 1/8W	1	
	R48	RK73HB1J101J	CHIP R	100 J 1/16W	1	
	R49	RK73HB1J473J	CHIP R	47K J 1/16W	1	
	CN1	E41-3246-05	FLAT CABLE CONNECTOR		1	
	CP1	RK74HB1J223J	CHIP-COM	22K J 1/16W	1	
	CP3	RK74HB1J223J	CHIP-COM	22K J 1/16W	1	
	CP5	RK74HB1J473J	CHIP-COM	47K J 1/16W	1	
	CP6	RK74HB1J101J	CHIP-COM	100 J 1/16W	1	
	CP8	RK74HB1J332J	CHIP-COM	3.3K J 1/16W	1	
	CP9	RK74HB1J102J	CHIP-COM	1.0K J 1/16W	1	
	J1	QNZ1076-001	USB CONNECTOR		1	
	J2	QNS0308-001	3.5 JACK		1	
	J3	QGZ1102K3-20X	DETACHABLE CONNECTOR	(1-20)	1	
	S1	S70-0960-05	TACT SWITCH	2.5MM/1.76N	1	
	S2	S70-0960-05	TACT SWITCH	2.5MM/1.76N	1	
	S3	S70-0960-05	TACT SWITCH	2.5MM/1.76N	1	
	S4	S70-0960-05	TACT SWITCH	2.5MM/1.76N	1	
	S5	T99-0484-05	ROTARY ENCODER		1	
	S6	S70-0960-05	TACT SWITCH	2.5MM/1.76N	1	
	S7	S70-0960-05	TACT SWITCH	2.5MM/1.76N	1	
	S8	S70-0960-05	TACT SWITCH	2.5MM/1.76N	1	
	S9	S70-0960-05	TACT SWITCH	2.5MM/1.76N	1	
	X1	L78-1211-05	RESONATOR	8.000MHZ	1	
BLUETOOTH UNIT (X17-2220-10) K3,K2 <X17>						
	IC2	AK4387ET	IC(MOS-IC)		1	K3,K2
	IC3	BU18TD3WG	IC(ANALOGUE)	5PIN 0.95PITCH	1	K3,K2
	IC4	BA4560RFV	IC(ANALOGUE)		1	K3,K2
	IC5	TCC860000XEAU	IC(MOS-IC)		1	K3,K2
	IC6	E29LV32BT73F8	IC(ROM)		1	K3,K2
	IC7	EM639165TS6IG	IC(DRAM)		1	K3,K2
	C1	CC73HCH1H331J	CHIP C	330PF J	1	K3,K2
	C2	CK73GB1A105K	CHIP C	1.0UF 10V K	1	K3,K2
	C5	CK73HB1H102K	CHIP C	1000PF K	1	K3,K2
	C6	CK73HB0J105K	CHIP C	1.0UF 6.3V K	1	K3,K2

MODEL	MARK	MODEL	MARK	MODEL	MARK	MODEL	MARK
KDC-5057SD	E2	KDC-655U	K5	KDC-BT855U	K3	KDC-X697	K4
KDC-X897	K2						

Safe	Symbol No.	Parts No.	Parts Name	Description	QTY	Local
	C7	CK73HB0J105K	CHIP C	1.0UF 6.3V K	1	K3,K2
	C8	CK73GB0J475K	CHIP C	4.7UF 6.3V K	1	K3,K2
	C9	CK73HB1H471K	CHIP C	470PF 50V K	1	K3,K2
	C10	CK73HB1H471K	CHIP C	470PF 50V K	1	K3,K2
	C11	CC73HCH1H220J	CHIP C	22PF J	1	K3,K2
	C12	CK73GB1A105K	CHIP C	1.0UF 10V K	1	K3,K2
	C13	CK73HB1A104K	CHIP C	0.10UF 10V K	1	K3,K2
	C14	CK73HB1A104K	CHIP C	0.10UF 10V K	1	K3,K2
	C16	CK73HB1C333K	CHIP C	0.033UF K	1	K3,K2
	C17	CK73GB0J475K	CHIP C	4.7UF 6.3V K	1	K3,K2
	C18	CK73FB0J106K	CHIP C	10UF K	1	K3,K2
	C19	CK73FB0J106K	CHIP C	10UF K	1	K3,K2
	C20	CK73HB1H222K	CHIP C	2200PF K	1	K3,K2
	C21	CK73HB1C333K	CHIP C	0.033UF K	1	K3,K2
	C22	CK73HB1H222K	CHIP C	2200PF K	1	K3,K2
	C23	CK73HB1A104K	CHIP C	0.10UF 10V K	1	K3,K2
	C24	CK73HB1A104K	CHIP C	0.10UF 10V K	1	K3,K2
	C25	CK73HB1A104K	CHIP C	0.10UF 10V K	1	K3,K2
	C26	CK73HB1H122K	CHIP C	1200PF K	1	K3,K2
	C27	CC73HCH1H180J	CHIP C	18PF J	1	K3,K2
	C28	CC73HCH1H331J	CHIP C	330PF J	1	K3,K2
	C29	CK73HB1A104K	CHIP C	0.10UF 10V K	1	K3,K2
	C30	CK73HB1A104K	CHIP C	0.10UF 10V K	1	K3,K2
	C31	CK73HB1A104K	CHIP C	0.10UF 10V K	1	K3,K2
	C32	CK73HB1E103K	CHIP C	0.010UF 25V K	1	K3,K2
	C33	CK73HB0J105K	CHIP C	1.0UF 6.3V K	1	K3,K2
	C34	CK73HB1A104K	CHIP C	0.10UF 10V K	1	K3,K2
	C35	CK73HB1A104K	CHIP C	0.10UF 10V K	1	K3,K2
	C36	CC73HCH1H100D	CHIP C	10PF D	1	K3,K2
	C37	CC73HCH1H100D	CHIP C	10PF D	1	K3,K2
	C38	CK73HB1A104K	CHIP C	0.10UF 10V K	1	K3,K2
	C39	CK73HB1A104K	CHIP C	0.10UF 10V K	1	K3,K2
	C40	CK73HB1A104K	CHIP C	0.10UF 10V K	1	K3,K2
	C41	CK73HB1A104K	CHIP C	0.10UF 10V K	1	K3,K2
	C42	CK73HB1A104K	CHIP C	0.10UF 10V K	1	K3,K2
	C43	CK73HB1A104K	CHIP C	0.10UF 10V K	1	K3,K2
	C44	CK73HB1A104K	CHIP C	0.10UF 10V K	1	K3,K2
	C45	CK73HB1A104K	CHIP C	0.10UF 10V K	1	K3,K2
	C46	CK73HB1A104K	CHIP C	0.10UF 10V K	1	K3,K2
	C47	CK73HB1A104K	CHIP C	0.10UF 10V K	1	K3,K2
	C48	CK73HB1A104K	CHIP C	0.10UF 10V K	1	K3,K2
	C49	CK73GB0J475K	CHIP C	4.7UF 6.3V K	1	K3,K2
	C50	CK73HB1A104K	CHIP C	0.10UF 10V K	1	K3,K2
	C51	CK73FB0J106K	CHIP C	10UF K	1	K3,K2
	C52	CK73HB1A104K	CHIP C	0.10UF 10V K	1	K3,K2
	C53	CK73HB1A104K	CHIP C	0.10UF 10V K	1	K3,K2
	C54	CK73HB1A104K	CHIP C	0.10UF 10V K	1	K3,K2
	C55	CK73HB1A104K	CHIP C	0.10UF 10V K	1	K3,K2
	C56	CK73HB1A104K	CHIP C	0.10UF 10V K	1	K3,K2
	C57	CK73HB1A104K	CHIP C	0.10UF 10V K	1	K3,K2
	C58	CK73HB1A104K	CHIP C	0.10UF 10V K	1	K3,K2
	R1	RK73HB1J000J	CHIP R	0.0 J 1/16W	1	K3,K2
	R2	RK73HB1J000J	CHIP R	0.0 J 1/16W	1	K3,K2
	R3	RK73HB1J000J	CHIP R	0.0 J 1/16W	1	K3,K2
	R5	RK73HB1J000J	CHIP R	0.0 J 1/16W	1	K3,K2
	R6	RK73HB1J103J	CHIP R	10K J 1/16W	1	K3,K2
	R7	RK73HB1J103J	CHIP R	10K J 1/16W	1	K3,K2
	R9	RK73HB1J470J	CHIP R	47 J 1/16W	1	K3,K2
	R10	RK73HB1J470J	CHIP R	47 J 1/16W	1	K3,K2
	R11	RK73HB1J470J	CHIP R	47 J 1/16W	1	K3,K2
	R12	RK73HB1J470J	CHIP R	47 J 1/16W	1	K3,K2
	R14	RK73HB1J122J	CHIP R	1.2K J 1/16W	1	K3,K2
	R15	RK73HB1J122J	CHIP R	1.2K J 1/16W	1	K3,K2
	R16	RK73HB1J124J	CHIP R	120K J 1/16W	1	K3,K2
	R17	RK73HB1J124J	CHIP R	120K J 1/16W	1	K3,K2
	R18	RK73HB1J333J	CHIP R	33K J 1/16W	1	K3,K2
	R19	RK73HB1J471J	CHIP R	470 J 1/16W	1	K3,K2
	R20	RK73HB1J103J	CHIP R	10K J 1/16W	1	K3,K2
	R21	RK73HB1J822J	CHIP R	8.2K J 1/16W	1	K3,K2
	R22	RK73HB1J471J	CHIP R	470 J 1/16W	1	K3,K2
	R23	RK73HB1J103J	CHIP R	10K J 1/16W	1	K3,K2
	R24	RK73HB1J472J	CHIP R	4.7K J 1/16W	1	K3,K2
	R25	RK73HB1J153J	CHIP R	15K J 1/16W	1	K3,K2
	R26	RK73HB1J153J	CHIP R	15K J 1/16W	1	K3,K2
	R27	RK73HB1J472J	CHIP R	4.7K J 1/16W	1	K3,K2
	R28	RK73HB1J472J	CHIP R	4.7K J 1/16W	1	K3,K2
	R29	RK73HB1J472J	CHIP R	4.7K J 1/16W	1	K3,K2
	R32	RK73GB2A000J	CHIP R	0.0 J 1/10W	1	K3,K2
	R33	RK73GB2A4R7J	CHIP R	4.7 J 1/10W	1	K3,K2
	R34	RK73HB1J000J	CHIP R	0.0 J 1/16W	1	K3,K2
	R35	RK73HB1J153J	CHIP R	15K J 1/16W	1	K3,K2
	R36	RK73HB1J153J	CHIP R	15K J 1/16W	1	K3,K2
	R37	RK73HB1J220J	CHIP R	22 J 1/16W	1	K3,K2
	R38	RK73HB1J220J	CHIP R	22 J 1/16W	1	K3,K2
	R39	RK73HB1J220J	CHIP R	22 J 1/16W	1	K3,K2
	R40	RK73HB1J220J	CHIP R	22 J 1/16W	1	K3,K2
	R41	RK73HB1J470J	CHIP R	47 J 1/16W	1	K3,K2
	R42	RK73HB1J223J	CHIP R	22K J 1/16W	1	K3,K2
	R43	RK73HB1J223J	CHIP R	22K J 1/16W	1	K3,K2
	R44	RK73HB1J330J	CHIP R	33 J 1/16W	1	K3,K2

MODEL	MARK	MODEL	MARK	MODEL	MARK	MODEL	MARK
KDC-5057SD	E2	KDC-655U	K5	KDC-BT855U	K3	KDC-X697	K4
KDC-X897	K2						

Safe	Symbol No.	Parts No.	Parts Name	Description	QTY	Local
	R45	RK73HB1J330J	CHIP R	33 J 1/16W	1	K3,K2
	R50	RK73HB1J470J	CHIP R	47 J 1/16W	1	K3,K2
	R51	RK73HB1J470J	CHIP R	47 J 1/16W	1	K3,K2
	R52	RK73HB1J472J	CHIP R	4.7K J 1/16W	1	K3,K2
	R53	RK73HB1J472J	CHIP R	4.7K J 1/16W	1	K3,K2
	R54	RK73HB1J472J	CHIP R	4.7K J 1/16W	1	K3,K2
	R55	RK73HB1J472J	CHIP R	4.7K J 1/16W	1	K3,K2
	R56	RK73HB1J472J	CHIP R	4.7K J 1/16W	1	K3,K2
	R58	RK73HB1J470J	CHIP R	47 J 1/16W	1	K3,K2
	R59	RK73HB1J470J	CHIP R	47 J 1/16W	1	K3,K2
	R60	RK73HB1J470J	CHIP R	47 J 1/16W	1	K3,K2
	R61	RK73HB1J223J	CHIP R	22K J 1/16W	1	K3,K2
	R62	RK73HB1J102J	CHIP R	1.0K J 1/16W	1	K3,K2
	R63	RK73HB1J102J	CHIP R	1.0K J 1/16W	1	K3,K2
	R64	RK73HB1J105J	CHIP R	1.0M J 1/16W	1	K3,K2
	R65	RK73HB1J332J	CHIP R	3.3K J 1/16W	1	K3,K2
	R66	RK73HB1J472J	CHIP R	4.7K J 1/16W	1	K3,K2
	R67	RK73HB1J470J	CHIP R	47 J 1/16W	1	K3,K2
	R68	RK73HB1J472J	CHIP R	4.7K J 1/16W	1	K3,K2
	R69	RK73HB1J470J	CHIP R	47 J 1/16W	1	K3,K2
	R70	RK73GB2A000J	CHIP R	0.0 J 1/10W	1	K3,K2
	R71	RK73HB1J470J	CHIP R	47 J 1/16W	1	K3,K2
	R72	RK73GB2A000J	CHIP R	0.0 J 1/10W	1	K3,K2
	R73	RK73GB2A000J	CHIP R	0.0 J 1/10W	1	K3,K2
	R74	RK73HB1J472J	CHIP R	4.7K J 1/16W	1	K3,K2
	R76	RK73HB1J104J	CHIP R	100K J 1/16W	1	K3,K2
	R77	RK73HB1J000J	CHIP R	0.0 J 1/16W	1	K3,K2
	R78	RK73HB1J102J	CHIP R	1.0K J 1/16W	1	K3,K2
	R79	RK73HB1J473J	CHIP R	47K J 1/16W	1	K3,K2
	R80	RK73HB1J473J	CHIP R	47K J 1/16W	1	K3,K2
	R81	RK73HB1J470J	CHIP R	47 J 1/16W	1	K3,K2
	R82	RK73HB1J472J	CHIP R	4.7K J 1/16W	1	K3,K2
	R83	RK73HB1J470J	CHIP R	47 J 1/16W	1	K3,K2
	R87	RK73HB1J000J	CHIP R	0.0 J 1/16W	1	K3,K2
	R88	RK73HB1J000J	CHIP R	0.0 J 1/16W	1	K3,K2
	R89	RK73HB1J104J	CHIP R	100K J 1/16W	1	K3,K2
	R90	RK73HB1J104J	CHIP R	100K J 1/16W	1	K3,K2
	R91	RK73GB2A000J	CHIP R	0.0 J 1/10W	1	K3,K2
	R93	RK73HB1J223J	CHIP R	22K J 1/16W	1	K3,K2
	A1	W02-5568-05	ELECTRIC CIRCUIT MODULE	BTR602	1	K3,K2
	CN1	E41-3376-05	SOCKET FOR PIN ASSY	18PIN 2.0PITCH	1	K3,K2
	X1	L77-3873-05	CRYSTAL RESONATOR	12.000MHZ	1	K3,K2

CD PLAYER UNIT (X32-6560-00) IN CD MECHA <X32>

	IC1	JCV8027	IC(MOS-IC)		1
	IC2	BD8222EFV	IC(ANALOGUE)		1
	IC4	XC6213B152N-G	IC(ANALOGUE)	1.5V	1
	Q1	2SA2188-T1(E)	TRANSISTOR	HFE=150-300	1
	C1	CK73HB1A104K	CHIP C	0.10UF 10V K	1
	C2	CK73FB0J106K	CHIP C	10UF K	1
	C3	CK73HB1A104K	CHIP C	0.10UF 10V K	1
	C4	CK73HB0J105K	CHIP C	1.0UF 6.3V K	1
	C5	CC73HCH1H680J	CHIP C	68PF J	1
	C6	CK73HB1H332K	CHIP C	3300PF 50V K	1
	C7	CK73HB1H222K	CHIP C	2200PF K	1
	C8	CK73HB1A104K	CHIP C	0.10UF 10V K	1
	C9	CK73HB0J105K	CHIP C	1.0UF 6.3V K	1
	C10	CK73HB1E103K	CHIP C	0.010UF 25V K	1
	C11	CK73HB1E153K	CHIP C	0.015UF K	1
	C12	CK73HB1A104K	CHIP C	0.10UF 10V K	1
	C13	CK73HB1E103K	CHIP C	0.010UF 25V K	1
	C14	CK73HB1C333K	CHIP C	0.033UF K	1
	C15	CK73HB1E153K	CHIP C	0.015UF K	1
	C19	CC73HCH1H470J	CHIP C	47PF J	1
	C22	CK73HB1A104K	CHIP C	0.10UF 10V K	1
	C23	CK73HB0J105K	CHIP C	1.0UF 6.3V K	1
	C24	CK73HB1A104K	CHIP C	0.10UF 10V K	1
	C25	CK73HB1A104K	CHIP C	0.10UF 10V K	1
	C26	CK73HB1A104K	CHIP C	0.10UF 10V K	1
	C27	CK73HB1A104K	CHIP C	0.10UF 10V K	1
	C28	CK73HB1H222K	CHIP C	2200PF K	1
	C29	CK73HB1H222K	CHIP C	2200PF K	1
	C30	CK73EB1A106K	CHIP C	10UF K	1
	C31	CK73EB1A106K	CHIP C	10UF K	1
	C37	CK73HB1H472K	CHIP C	4700PF K	1
	C38	CK73HB1A104K	CHIP C	0.10UF 10V K	1
	C40	CK73EB0J226K	CHIP C	22UF K	1
	C41	CK73GB0J225K	CHIP C	2.2UF 6.3V K	1
	C44	CK73HB0J105K	CHIP C	1.0UF 6.3V K	1
	C51	CK73HB1A104K	CHIP C	0.10UF 10V K	1
	C52	CC73HCH1H560J	CHIP C	56PF J	1
	C53	CK73HB1H152K	CHIP C	1500PF K	1
	C54	CK73HB1H682K	CHIP C	6800PF K	1
	C55	CK73HB1C333K	CHIP C	0.033UF K	1
	C56	CK73FB1A225K	CHIP C	2.2UF K	1
	C57	CK73HB1H332K	CHIP C	3300PF 50V K	1
	C60	CK73HB1A104K	CHIP C	0.10UF 10V K	1
	C62	CK73HB1A104K	CHIP C	0.10UF 10V K	1
	R1	RK73HB1J472J	CHIP R	4.7K J 1/16W	1
	R2	RK73HB1J104J	CHIP R	100K J 1/16W	1

MODEL	MARK	MODEL	MARK	MODEL	MARK	MODEL	MARK
KDC-5057SD	E2	KDC-655U	K5	KDC-BT855U	K3	KDC-X697	K4
KDC-X897	K2						

Safe	Symbol No.	Parts No.	Parts Name	Description	QTY	Local
	R3	RK73FB2B4R7J	CHIP R	4.7 J 1/8W	1	
	R4	RK73HB1J225J	CHIP R	2.2M J 1/16W	1	
	R5	RK73GB2A000J	CHIP R	0.0 J 1/10W	1	
	R6	RK73HB1J221J	CHIP R	220 J 1/16W	1	
	R7	RK73HB1J000J	CHIP R	0.0 J 1/16W	1	
	R8	RK73HB1J153J	CHIP R	15K J 1/16W	1	
	R9	RK73HB1J334J	CHIP R	330K J 1/16W	1	
	R10	RK73HB1J104J	CHIP R	100K J 1/16W	1	
	R11	RK73HB1J103J	CHIP R	10K J 1/16W	1	
	R12	RK73HB1J103J	CHIP R	10K J 1/16W	1	
	R13	RK73HB1J101J	CHIP R	100 J 1/16W	1	
	R14	RK73HB1J105J	CHIP R	1.0M J 1/16W	1	
	R15	RK73HB1J681J	CHIP R	680 J 1/16W	1	
	R16	RK73HB1J4R7J	CHIP R	4.7 J 1/16W	1	
	R17	RK73HB1J4R7J	CHIP R	4.7 J 1/16W	1	
	R18	RK73HB1J131J	CHIP R	130 J 1/16W	1	
	R23	RK73HB1J000J	CHIP R	0.0 J 1/16W	1	
	R24	RK73HB1J000J	CHIP R	0.0 J 1/16W	1	
	R25	RK73HB1J000J	CHIP R	0.0 J 1/16W	1	
	R26	RK73HB1J000J	CHIP R	0.0 J 1/16W	1	
	R27	RK73HB1J000J	CHIP R	0.0 J 1/16W	1	
	R34	RK73HB1J113J	CHIP R	11K J 1/16W	1	
	R36	RK73HB1J333J	CHIP R	33K J 1/16W	1	
	R38	RK73HB1J273J	CHIP R	27K J 1/16W	1	
	R42	RK73HB1J363J	CHIP R	36K J 1/16W	1	
	R44	RK73HB1J101J	CHIP R	100 J 1/16W	1	
	R45	RK73HB1J101J	CHIP R	100 J 1/16W	1	
	R46	RK73HB1J101J	CHIP R	100 J 1/16W	1	
	R47	RK73HB1J101J	CHIP R	100 J 1/16W	1	
	R48	RK73HB1J101J	CHIP R	100 J 1/16W	1	
	R49	RK73HB1J101J	CHIP R	100 J 1/16W	1	
	R50	RK73HB1J101J	CHIP R	100 J 1/16W	1	
	R51	RK73HB1J101J	CHIP R	100 J 1/16W	1	
	R52	RK73HB1J000J	CHIP R	0.0 J 1/16W	1	
	R60	RK73HB1J202J	CHIP R	2.0K J 1/16W	1	
	R61	RK73HB1J682J	CHIP R	6.8K J 1/16W	1	
	R62	RK73HB1J101J	CHIP R	100 J 1/16W	1	
	R63	RK73HB1J472J	CHIP R	4.7K J 1/16W	1	
	R64	RK73HB1J472J	CHIP R	4.7K J 1/16W	1	
	R65	RK73HB1J101J	CHIP R	100 J 1/16W	1	
	R66	RK73HB1J104J	CHIP R	100K J 1/16W	1	
	R69	RK73HB1J332J	CHIP R	3.3K J 1/16W	1	
	R71	RK73HB1J332J	CHIP R	3.3K J 1/16W	1	
	R72	RK73HB1J332J	CHIP R	3.3K J 1/16W	1	
	R76	RK73HB1J331J	CHIP R	330 J 1/16W	1	
	R77	RK73HB1J101J	CHIP R	100 J 1/16W	1	
	R78	RK73HB1J101J	CHIP R	100 J 1/16W	1	
	R79	RK73HB1J000J	CHIP R	0.0 J 1/16W	1	
	R80	RK73HB1J000J	CHIP R	0.0 J 1/16W	1	
	R81	RK73HB1J000J	CHIP R	0.0 J 1/16W	1	
	L2	L92-0330-05	CHIP FERRITE		1	
	L3	L92-0330-05	CHIP FERRITE		1	
	CN1	E41-3423-05	FLAT CABLE CONNECTOR	15P/0.5MM/ZIF/UP/AU	1	
	CN2	E41-3373-05	FLAT CABLE CONNECTOR	26PIN/NON-ZIF/0.5A	1	
	S1	S68-0931-05	PUSH SWITCH		1	
	S2	S68-0931-05	PUSH SWITCH		1	
	S3	S68-0932-05	PUSH SWITCH		1	
	X1	L78-1246-05	RESONATOR	16.934MHZ	1	