9. EXPLODED VIEWS AND PARTS LIST

NOTES : • *Parts marked by " * " are generally unavailable because they are not in our Master Spare Parts List.*
• *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
• *Screw adjacent to▽ mark on the product are used for disassembly.*
• *For the applying amount of lubricants or glue, follow the instructions in this manual. (In the case of no amount instructions,apply as you think it appropriate.)*

9.1 PACKING

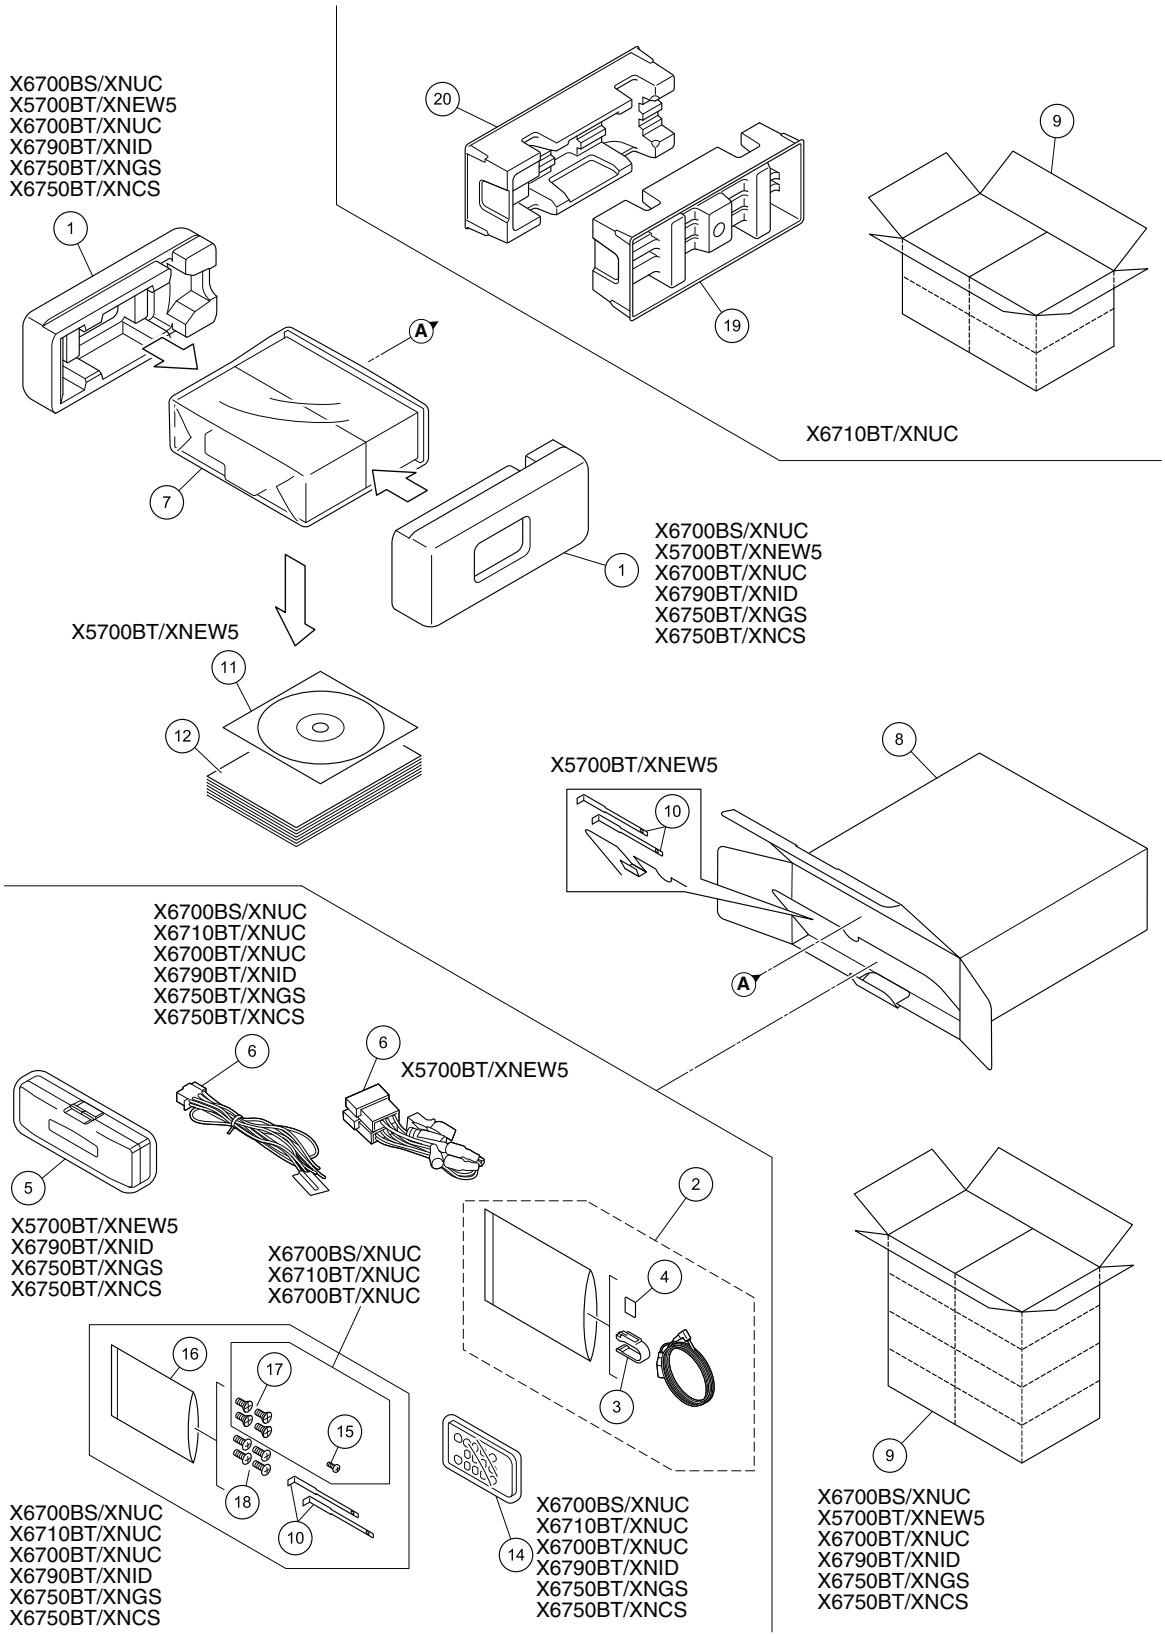

(1) PACKING SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	Protector	See Contrast table (2)
	2	Microphone Assy	CPM1083
	3	Holder	CZN7192
	4	Cushion	CZN7193
	5	Case Assy	See Contrast table (2)
	6	Cord Assy	See Contrast table (2)
	7	Polyethylene Bag	See Contrast table (2)
	8	Unit Box	See Contrast table (2)
	9	Contain Box	See Contrast table (2)
	10	Handle	QNC3021
	11	IM CD ROM	See Contrast table (2)
	12-1	Owner's Manual	See Contrast table (2)
	12-2	Quick Start Guide	See Contrast table (2)
	12-3	Installation Manual	See Contrast table (2)
*	12-4	Caution Card	See Contrast table (2)
*	12-5	Caution Card	See Contrast table (2)
*	12-6	Warranty Card	See Contrast table (2)
*	12-7	Service Network	See Contrast table (2)
	13	•••••	
	14	Card Remote Control Unit	See Contrast table (2)
	15	Screw	See Contrast table (2)
	16	Polyethylene Bag	See Contrast table (2)
	17	Screw	See Contrast table (2)
	18	Screw	See Contrast table (2)
	19	Protector	See Contrast table (2)
	20	Protector	See Contrast table (2)

(2) CONTRAST TABLE

DEH-X6700BS/XNUC, DEH-X5700BT/XNEW5, DEH-X6710BT/XNUC, DEH-X6700BT/XNUC, DEH-X6790BT/XNID, DEH-X6750BT/XNGS and DEH-X6750BT/XNCS are constructed the same except for the following:

Mark	No.	Description	DEH-X6700BS/XNUC	DEH-X5700BT/XNEW5	DEH-X6710BT/XNUC	DEH-X6700BT/XNUC	DEH-X6790BT/XNID
	1	Protector	CHP4594	CHP4594	Not used	CHP4594	CHP4594
	5	Case Assy	Not used	QXA3129	Not used	Not used	QXA3129
	6	Cord Assy	CDP1484	QDP3072	CDP1484	CDP1484	CDP1484
	7	Polyethylene Bag	CEG1173	QEG3001	CEG1173	CEG1173	QEG3001
	8	Unit Box	QHG3642	QHG3641	QHG3644	QHG3643	QHG3647
	9	Contain Box	QHL3642	QHL3641	QHL3644	QHL3643	QHL3647
	11	IM CD ROM	Not used	QPJ3029	Not used	Not used	Not used
	12-1	Owner's Manual	QRD3265	QRB3457	QRD3265	QRD3265	QRB3466
	12-2	Quick Start Guide	Not used	QRD3263	Not used	Not used	Not used
	12-3	Installation Manual	Not used	QRD3264	Not used	Not used	Not used
*	12-4	Caution Card	Not used	CRP1438	Not used	Not used	Not used
*	12-5	Caution Card	Not used	CRP1441	Not used	Not used	Not used
*	12-6	Warranty Card	QRY3001	CRY1376	QRY3001	QRY3001	CRY1304
*	12-7	Service Network	Not used	Not used	Not used	Not used	CRY1305
	14	Card Remote Control Unit	QXE1044	Not used	QXE1044	QXE1044	QXE1044
	15	Screw	BPZ20P060FTC	Not used	BPZ20P060FTC	BPZ20P060FTC	Not used
	16	Polyethylene Bag	CEG1160	Not used	CEG1160	CEG1160	CEG1160
	17	Screw	CRZ50P090FTC	Not used	CRZ50P090FTC	CRZ50P090FTC	Not used
	18	Screw	TRZ50P080FTC	Not used	TRZ50P080FTC	TRZ50P080FTC	TRZ50P080FTC
	19	Protector	Not used	Not used	CHP4103	Not used	Not used
	20	Protector	Not used	Not used	CHP4104	Not used	Not used

Mark	No.	Description	DEH-X6750BT/XNGS	DEH-X6750BT/XNCS
	1	Protector	CHP4594	CHP4594
	5	Case Assy	QXA3129	QXA3129
	6	Cord Assy	CDP1484	CDP1484
	7	Polyethylene Bag	QEG3001	QEG3001
	8	Unit Box	QHG3646	QHG3645
	9	Contain Box	QHL3646	QHL3645
	11	IM CD ROM	Not used	Not used
	12-1	Owner's Manual	QRD3267	QRD3266
	12-2	Quick Start Guide	Not used	Not used
	12-3	Installation Manual	Not used	Not used

9.2 EXTERIOR

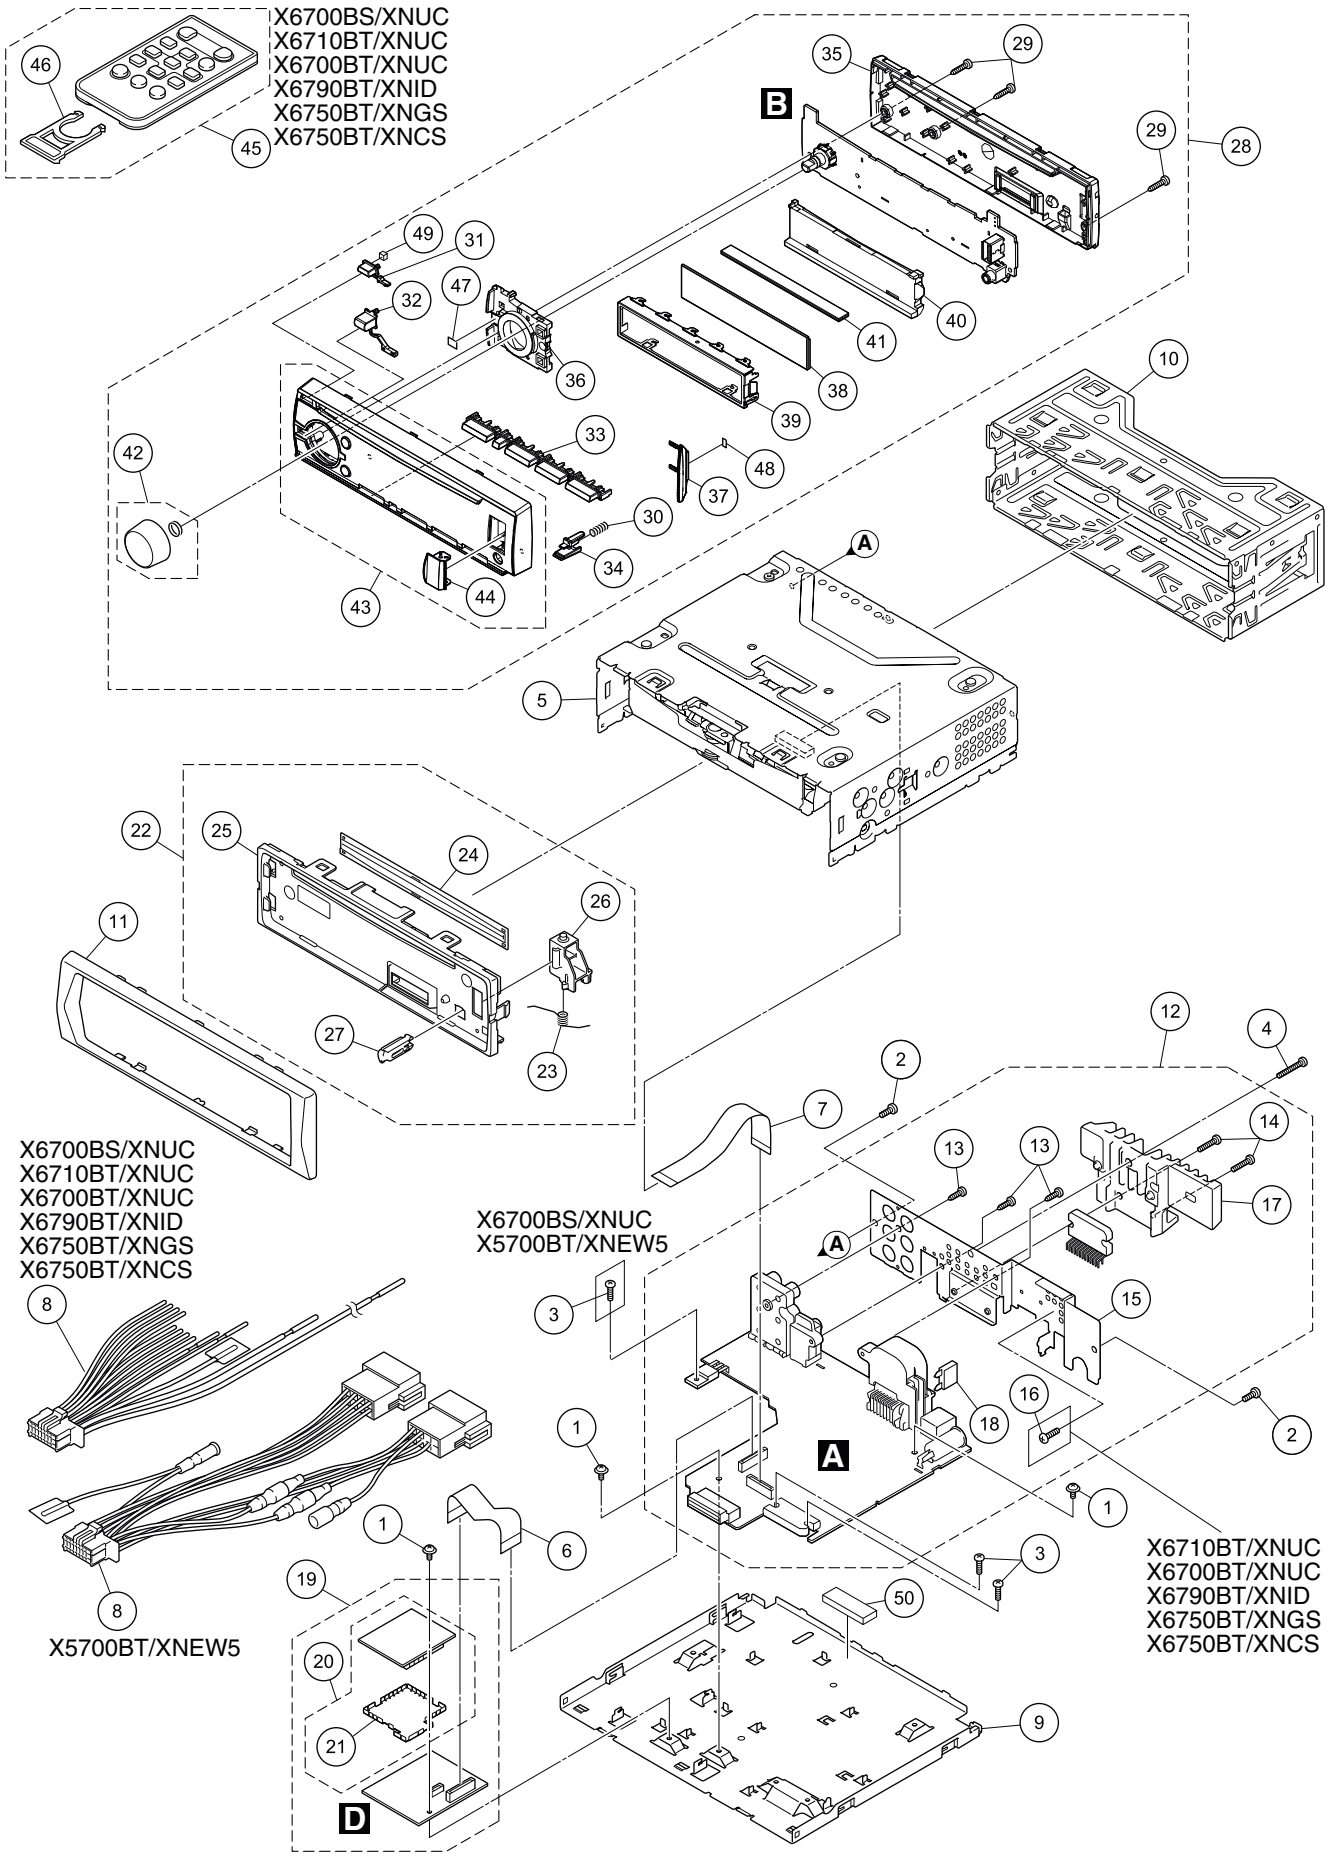
X6700BS/XNUC
X6710BT/XNUC
X6700BT/XNUC
X6790BT/XNID
X6750BT/XNGS
X6750BT/XNCS
X6700BS/XNUC
X6710BT/XNUC
X6700BT/XNUC
X6790BT/XNID
X6750BT/XNGS
X6750BT/XNCS
X6700BS/XNUC
X5700BT/XNEW5
X5700BT/XNEW5
X6710BT/XNUC
X6700BT/XNUC
X6790BT/XNID
X6750BT/XNGS
X6750BT/XNCS

(1) EXTERIOR SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	Screw	ASZ26P050FTC
	2	Screw	BSZ26P060FTC
	3	Screw	BSZ26P080FTC
	4	Screw	BSZ26P120FTC
	5	CD Mechanism Module (S11.6VA)	CXK5805
	6	FFC	QDE3028
	7	FFC	QDE3029
	8	Cord Assy	See Contrast table (2)
	9	Case	See Contrast table (2)
	10	Holder	QNC3020
	11	Panel	QNS3576
	12	Tuner Amp Unit	See Contrast table (2)
	13	Screw	BPZ26P080FTC
	14	Screw	BSZ26P120FTC
	15	Holder	See Contrast table (2)
	16	Screw	See Contrast table (2)
	17	Heat Sink	See Contrast table (2)
⚠	18	Fuse (10 A)	YEK5001
	19	BT Unit	QWM3995
	20	BT Module	YWX5052
	21	Shield Case	YNC5123
	22	Panel Assy	QXA3261
	23	Spring	QBH3001
	24	Cover	QNM3029
	25	Panel	QNS3126
	26	Arm	QNV3025
	27	Button	QNV3026
	28	Detachable Grille Assy	See Contrast table (2)
	29	Screw	BPZ20P100FTC
	30	Spring	CBH2210
	31	Button (EJECT)	QAC3166
	32	Button (PHONE)	QAC3167
	33	Button (1-6)	QAC3170
	34	Button (DETACH)	QAC3171
	35	Cover	QNS3701
	36	Lighting Conductor	QNV3094
	37	Lighting Conductor	QNV3095
	38	Segment LCD (V1801)	CAW2041
	39	Holder	QNC3088
	40	Lighting Conductor	QNV3093
	41	Rubber Connector	QNV3079
	42	Knob Unit	See Contrast table (2)
	43	Grille Unit	See Contrast table (2)
	44	Door	QAT3013
	45	Card Remote Control Unit	See Contrast table (2)
	46	Cover	See Contrast table (2)
	47	Sheet	QNM3123
	48	Sheet	QNM3124
	49	Cushion	QNM3131
	50	Sheet	See Contrast table (2)

(2) CONTRAST TABLE

DEH-X6700BS/XNUC, DEH-X5700BT/XNEW5, DEH-X6710BT/XNUC, DEH-X6700BT/XNUC, DEH-X6790BT/XNID, DEH-X6750BT/XNGS and DEH-X6750BT/XNCS are constructed the same except for the following:

Mark	No.	Description	DEH-X6700BS/XNUC	DEH-X5700BT/XNEW5	DEH-X6710BT/XNUC	DEH-X6700BT/XNUC	DEH-X6790BT/XNID
	8	Cord Assy	CDP1484	QDP3072	CDP1484	CDP1484	CDP1484
	9	Case	QNB3019	QNB3019	QNB3022	QNB3022	QNB3022
	12	Tuner Amp Unit	QWM3861	QWM3860	QWM3863	QWM3862	QWM3866
	15	Holder	QNC3075	QNC3074	QNC3053	QNC3053	QNC3053
	16	Screw	Not used	Not used	BSZ26P060FTC	BSZ26P060FTC	BSZ26P060FTC
	17	Heat Sink	QNR3010	QNR3010	QNR3010	QNR3010	QNR3002
	28	Detachable Grille Assy	QXA4153	QXA4152	QXA4155	QXA4154	QXA4158
	42	Knob Unit	CXE3692	QXA3694	CXE3692	CXE3692	QXA3694
	43	Grille Unit	QXA4126	QXA4127	QXA4128	QXA4125	QXA4131
	45	Card Remote Control Unit	QXE1044	Not used	QXE1044	QXE1044	QXE1044
	46	Cover	CNS7068	Not used	CNS7068	CNS7068	CNS7068
	50	Sheet	QNM3130	QNM3130	QNM3130	QNM3130	Not used

Mark	No.	Description	DEH-X6750BT/XNGS	DEH-X6750BT/XNCS
	8	Cord Assy	CDP1484	CDP1484
	9	Case	QNB3022	QNB3022
	12	Tuner Amp Unit	QWM3865	QWM3864
	15	Holder	QNC3053	QNC3053
	16	Screw	BSZ26P060FTC	BSZ26P060FTC

Mark	No.	Description	DEH-X6750BT/ XNGS	DEH-X6750BT/ XNCS
	17	Heat Sink	QNR3002	QNR3010
	28	Detachable Grille Assy	QXA4157	QXA4156
	42	Knob Unit	QXA3694	CXE3692
	43	Grille Unit	QXA4130	QXA4129
	45	Card Remote Control Unit	QXE1044	QXE1044
	46	Cover	CNS7068	CNS7068
	50	Sheet	Not used	Not used

9.3 CD MECHANISM MODULE

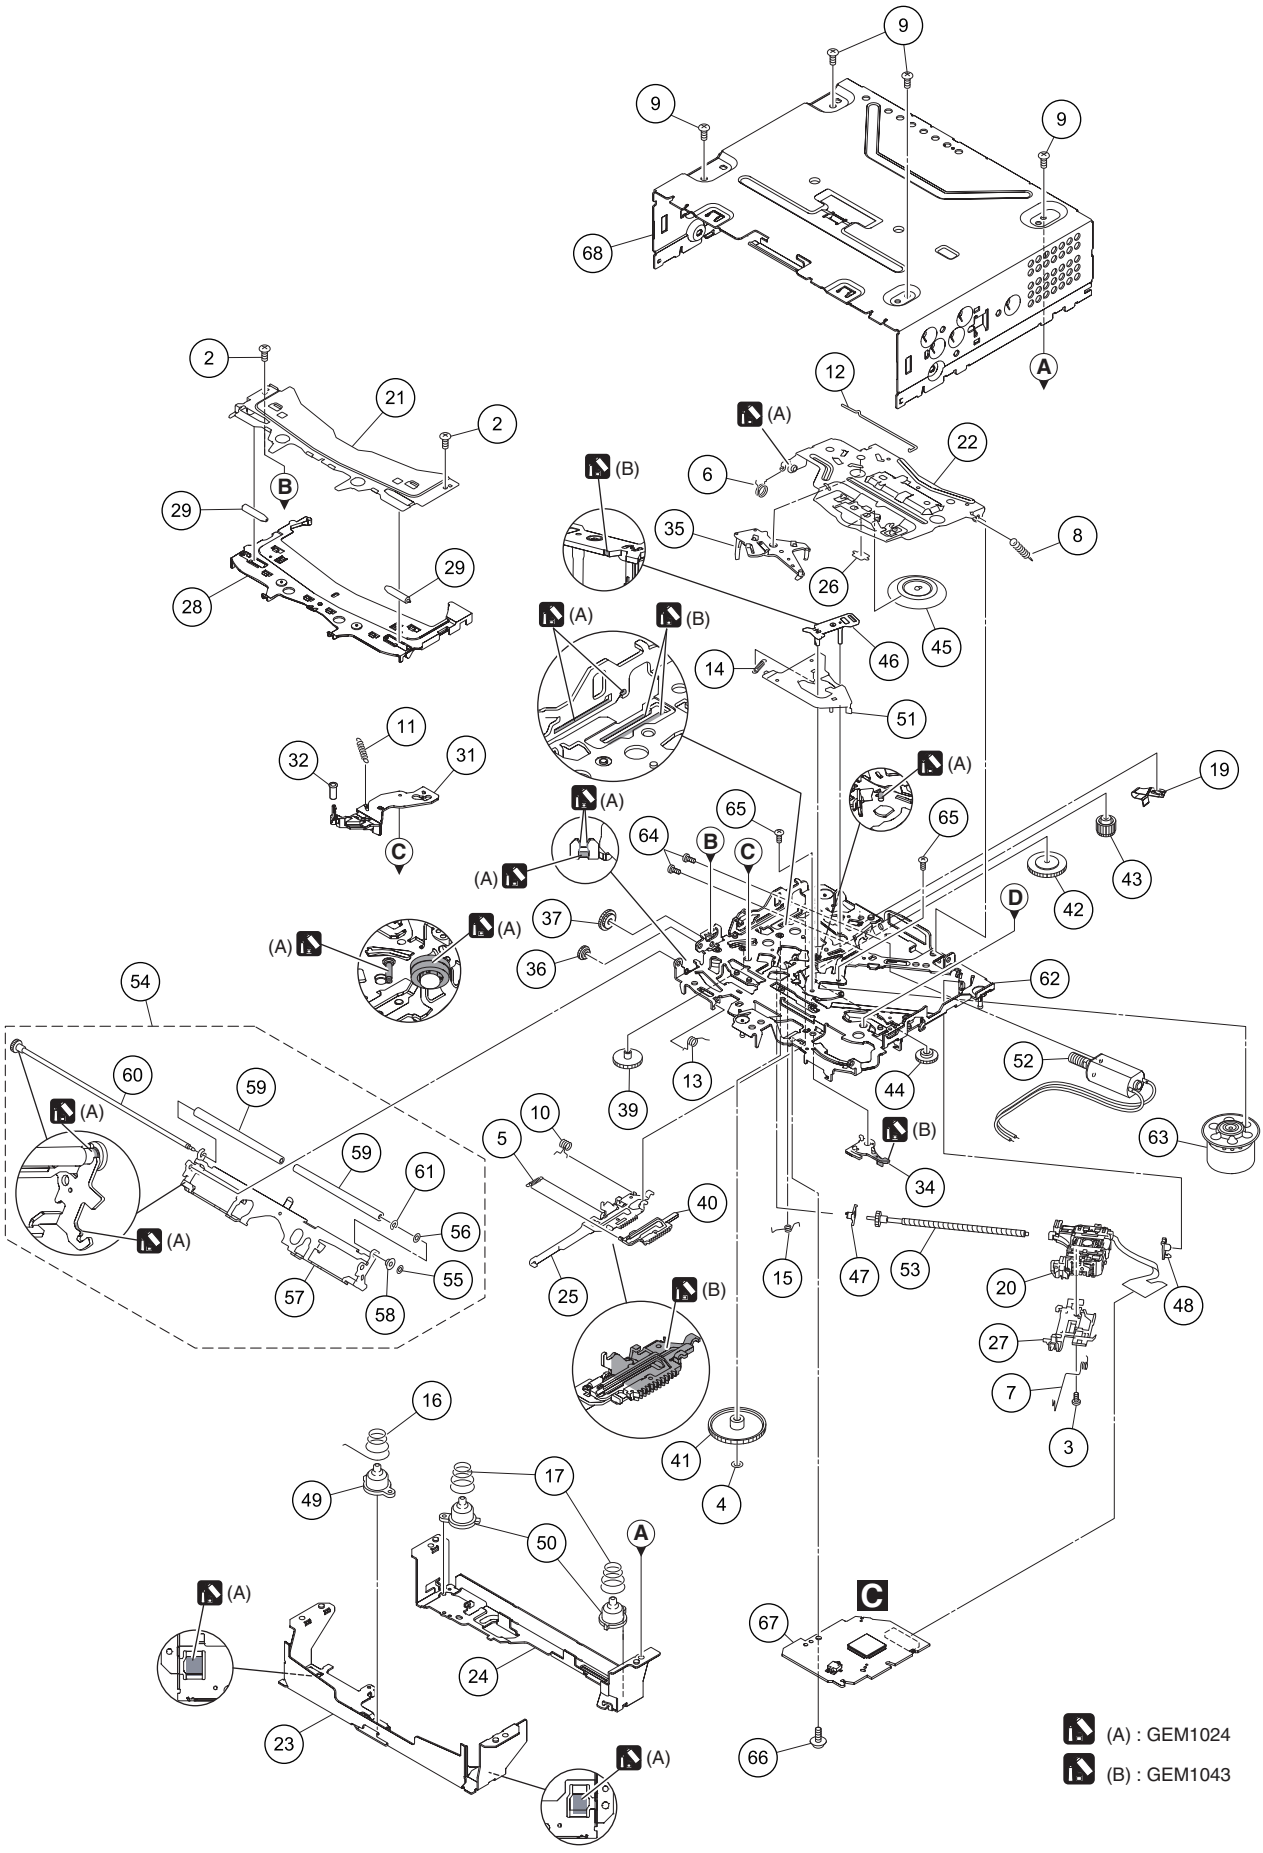

CD MECHANISM MODULE SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	.....	
	2	Screw	BSZ20P040FTC
	3	Screw(M2 x 4)	CBA1835
	4	Washer	CBF1038
	5	Spring	CBH3010
	6	Spring	CBH2855
	7	Spring	CBH2856
	8	Spring	CBH2860
	9	Screw	BSZ26P060FTC
	10	Spring	CBH3011
	11	Coil Spring	CBH3095
	12	Spring	CBH3014
	13	Spring	CBH3015
	14	Spring	CBH3016
	15	Spring	CBH3017
	16	Spring	CBH3086
	17	Spring	CBH3019
	18	.....	
	19	Leaf Spring	CBL1824
	20	PU Unit(P11)(Service)	CXX4754
	21	Bracket	CND4553
	22	Arm	CND6406
	23	Bracket	CND6127
	24	Bracket	CND5710
	25	Lever	CND5398
	26	Sheet	CNN3678
	27	Rack	CNV8342
	28	Guide	CNW2240
	29	Roller	CNW1172
	30	.....	
	31	Arm	CNW2241
	32	Roller	CNW1175
	33	.....	
	34	Arm	CNW1177
	35	Arm	CNW1178
	36	Gear	CNW1180
	37	Gear	CNW1181
	38	.....	
	39	Gear	CNW1183
	40	Rack	CNW1184
	41	Gear	CNW1185
	42	Gear	CNW1186
	43	Gear	CNW1187
	44	Gear	CNW2287
	45	Clamper	CNW1190
	46	Arm	CNW1192
	47	Holder	CNW1193
	48	Holder	CNW1194
	49	Damper	CNW1197
	50	Damper	CNW1198
	51	Arm	CNW1726
	52	Motor Unit(M2)(LOAD/CRG)	CXC4026
	53	Screw Unit	CXC8894
	54	Arm Assy	CXE6232
	55	Washer	CBF1037
	56	Washer	CBF1038
	57	Arm	CND6242
	58	Collar	CNW2444
	59	Roller	CNW2500
	60	Gear Unit	CXE6225
	61	Washer	YE15FTC
	62	Chassis Unit	CXE4528
	63	Motor Unit(M1)(SPDL)	CXE2273
	64	Screw	JFZ20P025FTC
	65	Screw	JGZ17P022FTC
	66	Screw	EBA1028
	67	CD Core Unit (S11.6VA)	CWX4269
	68	Chassis	CNA3181

12. ELECTRICAL PARTS LIST

NOTE:

- *Parts whose parts numbers are omitted are subject to being not supplied.*
- *The part numbers shown below indicate chip components.*

  Chip Resistor

  RS1/◯S◯◯◯J,RS1/◯◯S◯◯◯J

  Chip Capacitor (except for CQS.....)

  CKS....., CCS....., CSZS.....
- *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
- *Meaning of the figures and others in the parentheses in the parts list.*

  Example) IC 301 is on the point (face A, 91 of x-axis, and 111 of y-axis) of the corresponding PC board.

  IC 301 (A, 91, 111) IC NJM2068V
- *The expression of the unit in this manual is shown by u instead of μ. Please do not make a mistake.*

A:DEH-X6700BS/XNUC
B:DEH-X5700BT/XNEW5
C:DEH-X6710BT/XNUC
D:DEH-X6700BT/XNUC
E:DEH-X6790BT/XNID
F:DEH-X6750BT/XNGS
G:DEH-X6750BT/XNCS
Unit Number : QWM3861(A)
Unit Number : QWM3860(B)
Unit Number : QWM3863(C)
Unit Number : QWM3862(D)
Unit Number : QWM3866(E)
Unit Number : QWM3865(F)
Unit Number : QWM3864(G)
Unit Name : Tuner Amp Unit
Unit Number : (A,C,D,E,F,G)
Unit Number : (B)
Unit Name : Keyboard Unit
Unit Number : CWX4269
Unit Name : CD Core Unit(S11.6VA)
Unit Number : QWM3995
Unit Name : BT Unit

A

Unit Number : QWM3861(A)
Unit Number : QWM3860(B)
Unit Name : Tuner Amp Unit

Circuit Symbol and No.		Part No.
MISCELLANEOUS		
IC 201	(A,99,106) E-VOL SYS LSI	PM9013A
IC 301	(A,79,141) IC	PAL013A
IC 401	(A,149,87) IC	TEF6686HN
IC 451	(A,164,75) IC	MM3571A33P
IC 531	(A,93,86) IC	337S3959
IC 551	(A,42,112) IC	KBD9876EFJ
IC 552	(A,107,24) IC	BD2232G-G
IC 601	(A,112,74) FLASH BLANK UC IC	R5S726B0D216FP
IC 602	(A,131,68) IC	TC7SH126FU
IC 603	(A,137,66) L-MOS And Gate	TC7SET08FUS1
IC 671	(A,133,74) IC	S-80827CNMC-B8M
IC 681	(A,115,94) FLASHROM IC(A)	* PEB143A8
	(A,115,94) FLASHROM IC(B)	* PEB142A8
IC 801	(A,105,18) L-MOS And Gate	TC7SET08FUS1
IC 911	(A,145,28) IC	BA49183-V12
Q 251	(A,20,129) Transistor	EMH53
Q 252	(A,28,129) Transistor(A)	EMH53
Q 253	(A,13,129) Transistor	EMH53
Q 301	(A,60,124) Transistor	EMD52
Q 531	(A,89,94) Transistor	LSAR523UB
Q 751	(A,14,102) Transistor	KTD2092
Q 752	(A,10,107) Transistor	EMD52
Q 871	(A,151,62) Transistor	2SAR502UB
Q 872	(A,150,54) Transistor	LTC143EUB
Q 941	(A,128,108) Transistor	LSCR523UB
Q 1011	(A,98,120) Transistor	LTC014EEB
D 301	(A,92,125) Diode	CRG03
D 302	(A,92,128) Diode	CRG03
D 551	(A,24,118) Diode	CMS30I30A
D 552	(A,44,105) Diode	RB056L-40
D 601	(A,136,79) Diode	RB751SM-40
D 602	(A,126,63) Diode	RB751SM-40
D 751	(A,16,107) Diode	DZ2J082M0
D 801	(A,108,12) Diode	DZ2S068C
D 802	(A,93,16) Diode	DZ2S068C
D 803	(A,125,15) Diode	DZ2S068C
D 804	(A,119,13) Diode	DZ2S068C

Circuit Symbol and No.		Part No.
D 805	(A,121,13) Diode	DZ2S068C
D 806	(A,117,13) Diode	DZ2S068C
D 807	(A,114,13) Diode	DZ2S068C
D 901	(A,138,127) Diode	D1F60-5053
D 902	(A,135,127) Diode	D1F60-5053
D 911	(A,159,66) Diode	CRG03
D 912	(A,162,66) Diode	CRG03
D 941	(A,129,112) Diode(A)	DZ2J068M0
	(A,129,112) Diode(B)	DZ2J075M0
D 1011	(A,101,124) Diode	CRG03
L 202	(A,91,101) Inductor	CTF1793
L 402	(A,142,93) Inductor	LCTAW150J2520
L 404	(A,145,108) Inductor	CTF1389
L 408	(A,154,104) Inductor	LCMAR27J1608
L 551	(A,52,107) Inductor	CTH1584
L 801	(A,115,16) Inductor	CTF1713
L 901	(A,112,141) Choke Coil 600 uH	CTH1432
T 401	(A,151,99) Variable Coil	CTC1215
X 401	(A,159,85) Resonator 9.216 MHz	CSS1864
X 601	(A,128,74) Resonator 12.0 MHz	CSS1847
X 603	(A,125,91) Resonator 16.93 MHz	CSS1794
⚠ P251	(A,6,130) Fuse 3.0 A	CEK1386
P 402	(A,159,110) Absorber	HSPC16701B02
⚠ P1001	(A,153,72) Fuse 1.25 A(B)	CEK1281
P 1002	(A,158,73) Poly Switch(A)	FSMD110-24R
VA801	(A,107,14) Varistor	MLV0402ES012V0010N
VA802	(A,102,13) Varistor	MLV0402ES012V0010N
CN701	(A,114,32) Connector	VKN1192
CN801	(A,109,3) Connector	CKS6452
CN971	(A,93,49) Connector	VKN1192
JA251	(A,19,141) Pin Jack(A)	XKB7001
	(A,19,141) Jack(B)	CKB1109
JA401	(A,162,128) Plug	YKS5041
JA892	(A,43,141) Jack	CKN1103
JA901	(A,114,141) Plug	CKM1624
JA961	(A,142,143) Connector	CKS3806
⚠	Fuse (10 A)	YEK5001

RESISTORS

R 251	(A,22,127)	RS1/16SS821J
R 252	(A,20,124)	RS1/16SS821J
R 253	(A,22,129)	RS1/16SS223J
R 254	(A,18,125)	RS1/16SS223J
R 255	(A,31,128) (A)	RS1/16SS821J
R 256	(A,25,127) (A)	RS1/16SS821J
R 257	(A,30,130) (A)	RS1/16SS223J
R 258	(A,25,129) (A)	RS1/16SS223J
R 260	(A,14,125)	RS1/16SS821J
R 261	(A,11,128)	RS1/16SS821J
R 262	(A,15,126)	RS1/16SS223J
R 263	(A,11,129)	RS1/16SS223J
R 264	(A,16,129) (A)	RS1/16SS0R0J
R 265	(A,17,127) (B)	RS1/16SS0R0J
R 266	(A,17,128) (A)	RS1/16SS0R0J
R 267	(A,15,129) (B)	RS1/16SS0R0J
R 305	(A,59,121)	RS1/16SS103J
R 306	(A,61,121)	RS1/16SS221J
R 307	(A,61,122)	RS1/16SS223J
R 309	(A,84,120)	RS1/16SS103J
R 401	(A,151,94)	RS1/16SS0R0J
R 402	(A,150,94)	RS1/16SS0R0J
R 403	(A,140,94)	RS1/16SS391J
R 404	(A,151,109)	RS1/16SS105J
R 405	(A,154,109)	RS1/16SS105J
R 406	(A,152,81)	RS1/16SS101J
R 407	(A,153,81)	RS1/16SS101J
R 408	(A,156,81)	RS1/16SS103J
R 410	(A,155,81)	RS1/16SS103J
R 437	(A,153,79)	RS1/16SS472J
R 438	(A,151,79)	RS1/16SS472J
R 452	(A,165,89)	RS1/16SS0R0J
R 454	(A,147,74)	RS1/16SS0R0J
R 455	(A,166,88)	RS1/16SS0R0J
R 531	(A,90,90)	RS1/16SS473J
R 532	(A,90,84)	RS1/16SS222J
R 533	(A,91,84)	RS1/16SS222J
R 534	(A,94,90)	RS1/16SS272J
R 535	(A,95,89)	RS1/16SS472J
R 536	(A,97,89)	RS1/16SS472J
R 537	(A,95,85)	RS1/16SS101J
R 538	(A,95,83)	RS1/16SS101J
R 551	(A,48,112)	RS1/16SS682J
R 552	(A,53,113)	RS1/16SS0R0J
R 553	(A,49,113)	RS1/16SS1803D
R 554	(A,49,111)	RS1/16SS4302D
R 555	(A,64,103)	RS1/10SR471J
R 601	(A,101,63)	RS1/16SS473J
R 603	(A,111,46)	RS1/16SS473J
R 609	(A,125,65)	RS1/16SS473J
R 610	(A,125,67)	RS1/16SS473J
R 611	(A,129,69)	RS1/16SS473J
R 613	(A,125,74)	RS1/16SS152J
R 614	(A,132,78)	RS1/16SS473J
R 615	(A,135,77)	RS1/16SS473J
R 616	(A,124,76)	RS1/16SS473J
R 617	(A,138,79)	RS1/16SS103J
R 618	(A,127,81)	RS1/16SS473J
R 622	(A,122,85)	RS1/16SS473J
R 623	(A,129,93)	RAB4CQ473J
R 624	(A,124,89)	RS1/16SS222J
R 625	(A,116,89)	RS1/16SS221J
R 626	(A,115,89)	RS1/16SS221J
R 627	(A,114,89)	RS1/16SS221J
R 628	(A,113,89)	RS1/16SS221J
R 629	(A,110,91)	RS1/16SS221J
R 630	(A,109,91)	RS1/16SS221J
R 631	(A,107,92)	RS1/16SS473J
R 632	(A,108,87)	RS1/16SS473J
R 633	(A,106,92)	RS1/16SS101J
R 634	(A,103,90)	RS1/16SS102J
R 636	(A,100,91)	RS1/16SS473J
R 637	(A,101,89)	RS1/16SS473J
R 638	(A,104,92)	RS1/16SS473J
R 643	(A,98,81)	RS1/16SS104J
R 644	(A,97,78)	RS1/16SS101J
R 645	(A,94,79)	RS1/16SS101J
R 646	(A,124,62)	RS1/16SS103J
R 647	(A,98,74)	RS1/16SS101J
R 648	(A,94,76)	RS1/16SS102J
R 649	(A,94,75)	RS1/16SS102J

Circuit Symbol and No.		Part No.
R 650	(A,94,74)	RS1/16SS102J
R 651	(A,91,72)	RS1/16SS473J
R 652	(A,95,68)	RS1/16SS222J
R 653	(A,97,65)	RS1/16SS103J
R 655	(A,116,60)	RS1/16SS0R0J
R 656	(A,117,52)	RS1/16SS0R0J
R 659	(A,125,61)	RS1/16SS153J
R 660	(A,124,60)	RS1/16SS153J
R 662	(A,129,66)	RS1/16SS473J
R 663	(A,141,76)	RS1/16SS0R0J
R 664	(A,92,68)	RS1/16SS103J
R 665	(A,124,85)	RS1/16SS473J
R 667	(A,129,64)	RS1/16SS473J
R 669	(A,108,61)	RS1/16SS473J
R 671	(A,131,70)	RS1/16SS104J
R 681	(A,110,96)	RS1/16SS473J
R 682	(A,111,90)	RS1/16SS473J
R 683	(A,121,92)	RS1/16SS473J
R 684	(A,110,94)	RS1/16SS473J
R 685	(A,121,96)	RS1/16SS473J
R 701	(A,109,37)	RS1/16SS473J
R 702	(A,115,37)	RS1/16SS104J
R 703	(A,118,27)	RAB4CQ472J
R 704	(A,110,40)	RS1/16SS104J
R 706	(A,108,36)	RS1/16SS221J
R 707	(A,108,37)	RS1/16SS221J
R 708	(A,110,37)	RS1/16SS101J
R 709	(A,111,37)	RS1/16SS221J
R 710	(A,112,37)	RS1/16SS101J
R 711	(A,114,38)	RS1/16SS102J
R 715	(A,117,36)	RAB4CQ151J
R 718	(A,122,36)	RS1/16SS221J
R 719	(A,121,36)	RS1/16SS104J
R 752	(A,14,108)	RS1/4SA391J
R 753	(A,106,40)	RS1/16SS473J
R 754	(A,105,41)	RS1/16SS103J
R 801	(A,124,20)	RS1/10SR222J
R 803	(A,121,17)	RS1/16SS223J
R 804	(A,119,17)	RS1/16SS223J
R 805	(A,121,19)	RS1/10SR101J
R 806	(A,118,19)	RS1/10SR101J
R 807	(A,120,19)	RS1/10SR101J
R 808	(A,124,19)	RS1/10SR222J
R 809	(A,116,20)	RS1/10SR220J
R 810	(A,114,20)	RS1/10SR220J
R 813	(A,107,15)	RS1/10SR222J
R 814	(A,101,18)	RS1/10SR222J
R 815	(A,100,18)	RS1/16SS822J
R 816	(A,96,19)	RS1/10SR222J
R 817	(A,95,19)	RS1/10SR222J
R 819	(A,90,19)	RS1/10SR0R0J
R 851	(A,93,19)	RS1/16SS472J
R 871	(A,157,66)	RS1/10SR332J
R 872	(A,157,68)	RS1/16SS103J
R 878	(A,124,26)	RS1/10SR473J
R 891	(A,58,137)	RS1/16SS102J
R 892	(A,58,136)	RS1/16SS102J
R 911	(A,145,40)	RS1/10SR1R0J
R 912	(A,141,41)	RS1/10SR1R0J

Circuit Symbol and No.		Part No.
R 913	(A,154,42)	RS1/16SS223J
R 914	(A,133,41)	RS1/16SS223J
R 930	(A,138,122)	RS1/10SR0R0J
R 941	(A,126,110)	RS1/16SS223J
R 942	(A,126,111)	RS1/16SS473J
R 943	(A,131,112) (A)	RS1/16SS682J
	(A,131,112) (B)	RS1/16SS333J
R 944	(A,126,114) (A)	RS1/4SA102J
	(A,126,114) (B)	RS1/4SA122J
R 961	(A,148,133) (A)	RS1/16SS181J
R 962	(A,145,132) (A)	RS1/16SS223J
R 963	(A,145,130) (A)	RS1/16SS181J
R 964	(A,145,131) (A)	RS1/16SS223J
R 965	(A,143,131)	RAB4CQ102J
R 973	(A,90,62)	RS1/16SS222J
R 974	(A,98,54)	RS1/16SS101J
R 975	(A,98,53)	RS1/16SS101J
R 976	(A,98,51)	RS1/16SS101J
R 1003	(A,140,59)	RS1/16SS473J
R 1008	(A,147,66)	RS1/10SR0R0J
R 1009	(A,137,58)	RS1/16SS473J
R 1011	(A,101,120)	RS1/16SS103J
R 1013	(A,101,126)	RS1/4SA102J

CAPACITORS

C 201	(A,94,115)	CKSRYB105K10
C 202	(A,101,115)	CKSRYB105K10
C 203	(A,89,115)	CKSRYB105K10
C 204	(A,105,114)	CKSRYB105K10
C 205	(A,92,115)	CKSRYB105K10
C 206	(A,104,112)	CKSRYB105K10
C 207	(A,89,108)	CKSSYB104K10
C 208	(A,91,106)	CKSSYB104K10
C 209	(A,90,104) 10 uF	CCG1192
C 210	(A,93,106)	CCSSCH151J50
C 211	(A,107,106)	CCSSCH151J50
C 212	(A,105,108) 10 uF	CCG1192
C 213	(A,106,105)	CKSSYB104K10
C 214	(A,106,104)	CKSSYB104K10
C 215	(A,105,102)	CKSSYB104K10
C 216	(A,88,100) 10 uF	CCG1192
C 217	(A,92,100)	CKSSYB104K10
C 218	(A,112,109)	XCEVW470M16
C 219	(A,110,102) 10 uF	CCG1192
C 220	(A,103,98) 10 uF	CCG1192
C 223	(A,87,101)	CKSSYB102K50
C 224	(A,112,103)	CKSSYB104K10
C 229	(A,108,111)	CKSSYB102K50
C 236	(A,107,103)	CKSRYB105K10
C 237	(A,92,114) (A)	CKSRYB105K10
C 238	(A,107,113) (A)	CKSRYB105K10
C 239	(A,105,116) (A)	CKSRYB105K10
C 240	(A,93,111) (A)	CKSRYB105K10
C 241	(A,86,100)	CKSSYB102K50
C 251	(A,26,125) 10 uF	DCH1201
C 252	(A,22,125) 10 uF	DCH1201
C 253	(A,22,128)	CCSSCH101J50
C 254	(A,17,126)	CCSSCH101J50
C 255	(A,34,126) 10 uF(A)	DCH1201
C 256	(A,30,125) 10 uF(A)	DCH1201

Circuit Symbol and No.		Part No.	Circuit Symbol and No.		Part No.
C 257	(A,30,129) (A)	CCSSCH101J50	C 612	(A,125,81)	CKSSYB104K10
C 258	(A,25,130) (A)	CCSSCH101J50	C 613	(A,124,84)	CKSSYB104K10
C 260	(A,34,131)	CKSSYB103K16	C 618	(A,126,89)	CCSSCH120J50
C 261	(A,6,132)	CKSSYB104K10	C 619	(A,126,94)	CCSSCH120J50
C 262	(A,16,123) 10 uF	DCH1201	C 620	(A,116,87)	CKSSYB104K10
C 263	(A,12,123) 10 uF	DCH1201	C 621	(A,112,87)	CKSSYB104K10
C 264	(A,15,127)	CCSSCH101J50	C 622	(A,105,93)	CCSSCH220J50
C 265	(A,11,130)	CCSSCH101J50	C 623	(A,109,88)	CKSSYB104K10
C 301	(A,69,128)	CKSRYB474K10	C 624	(A,106,87)	CKSSYB104K10
C 303	(A,80,128)	CKSRYB474K10	C 625	(A,104,90)	CKSSYB104K10
C 305	(A,73,128)	CKSRYB474K10	C 626	(A,99,78)	CKSSYB104K10
C 307	(A,77,128)	CKSRYB474K10	C 627	(A,96,81)	CCSSCH220J50
C 313	(A,82,129) 2.2 uF	CCG1205	C 628	(A,95,81)	CCSSCH220J50
C 314	(A,132,125)	CKSRYB104K16	C 629	(A,99,72)	CKSSYB104K10
C 318	(A,64,130) 10 uF/16 V	DCH1263	C 630	(A,98,69)	CKSSYB104K10
C 327	(A,63,123)	CKSRYB105K10	C 631	(A,96,74)	CCSSCH220J50
C 328	(A,52,130) 2.2 uF	CCG1205	C 634	(A,108,60)	CKSSYB104K10
C 336	(A,87,125)	CKSRYB104K16	C 635	(A,104,87)	CKSSYB104K10
C 407	(A,155,92)	CKSSYB103K16	C 636	(A,99,75)	CKSSYB104K10
C 409	(A,152,92)	CKSSYB224K6R3	C 637	(A,134,69)	CKSSYB104K10
C 410	(A,152,105)	CCSSCH220J50	C 638	(A,136,68)	CKSSYB104K10
C 411	(A,150,105)	CCSSCH331J50	C 639	(A,113,56) 4.7 uF(B)	CCG1212
C 414	(A,144,89)	CKSSYB102K50	C 641	(A,105,88)	CKSSYB104K10
C 420	(A,152,109)	CCSSCH471J50	C 672	(A,127,71) 1 uF	DCH1246
C 422	(A,144,86)	CKSSYB152K50	C 681	(A,122,96)	CKSSYB104K10
C 425	(A,155,91)	CCSSCH390J50	C 683	(A,121,93)	CCSSCJ3R0C50
C 428	(A,147,92)	CKSSYB104K10	C 684	(A,130,98)	CKSSYB104K10
C 430	(A,152,93)	CKSSYB102K50	C 701	(A,111,40)	CKSSYB103K16
C 434	(A,158,104)	CCSSCH100D50	C 704	(A,120,38)	CCSSCH100D50
C 442	(A,148,80) 10 uF	DCH1201	C 705	(A,118,38)	CCSSCH100D50
C 452	(A,160,78)	CKSRYB104K16	C 706	(A,117,38)	CCSSCH100D50
C 453	(A,167,71)	CKSRYB105K10	C 752	(A,18,106)	CKSSYB104K10
C 458	(A,144,81)	CCSSCH102J50	C 753	(A,23,100) 10 uF	DCH1201
C 459	(A,154,107)	CKSRYB104K16	C 801	(A,124,5)	CCSRCH102J50
C 461	(A,154,81)	CCSSCH330J50	C 806	(A,125,7)	CKSRYB104K16
C 531	(A,90,89)	CKSSYB104K10	C 807	(A,122,14)	CKSRYB105K10
C 532	(A,92,89)	CKSSYB104K10	C 808	(A,108,18)	CKSRYB104K16
C 551	(A,27,111)	XCEVW221M16	C 809	(A,97,15)	CCSRCH221J50
C 552	(A,35,108)	CKSRYB105K16	C 810	(A,97,13)	CCSRCH221J50
C 553	(A,37,111)	CKSSYB103K16	C 811	(A,104,19)	CKSSYB104K10
C 555	(A,47,113)	CKSSYB682K25	C 812	(A,120,25)	CKSSYB104K10
C 556	(A,65,111)	CEVQW221M6R3	C 872	(A,124,27)	CKSRYB105K16
C 557	(A,60,112)	CKSRYB105K10	C 873	(A,124,24)	CKSRYB105K16
C 560	(A,109,21)	CKSRYB105K10	C 891	(A,53,136)	CKSRYB104K16
C 561	(A,103,23)	CKSRYB105K10	C 892	(A,36,132)	CKSRYB104K16
C 564	(A,58,112) 4.7 uF	CCG1201	C 893	(A,39,129)	CKSRYB102K50
C 565	(A,37,107) 4.7 uF	CCG1222	C 894	(A,53,133)	CKSRYB102K50
C 568	(A,64,101) 10 uF	CCG1192	C 901	(A,130,123) 2 200 uF/16 V	CCH2040
C 572	(A,69,121)	CKSRYB104K16	C 911	(A,133,119)	CKSRYB104K16
C 601	(A,102,61)	CKSSYB104K10	C 912	(A,152,40)	CKSSYB102K50
C 602	(A,110,62)	CKSSYB104K10	C 913	(A,135,41)	CKSSYB102K50
C 603	(A,113,60)	CKSSYB104K10	C 914	(A,156,56)	XCEAT102M16
C 604	(A,116,59)	CKSSYB104K10	C 915	(A,136,41)	CKSRYB104K16
C 605	(A,118,60)	CKSSYB104K10	C 916	(A,146,43) 10 uF	DCH1201
C 606	(A,125,68)	CKSSYB104K10	C 917	(A,145,45)	CKSSYB102K50
C 607	(A,127,72)	CCSSCH120J50	C 919	(A,151,41) 10 uF	DCH1201
C 608	(A,128,76)	CCSSCH120J50	C 921	(A,130,40) 10 uF	DCH1201
C 609	(A,125,69)	CKSSYB104K10	C 923	(A,159,40) 10 uF	DCH1201
C 610	(A,125,72)	CKSSYB104K10	C 926	(A,140,43) 10 uF	DCH1201
C 611	(A,124,77)	CKSSYB104K10	C 927	(A,140,41)	CKSSYB102K50

Circuit Symbol and No.		Part No.
C 941	(A,132,112)	CKSRYB104K16
C 961	(A,149,130)	CKSRYB105K16
C 963	(A,137,134) (B)	CKSRYB104K16
C 973	(A,98,52)	CCSSCH470J50
C 1011	(A,97,122)	CKSRYB105K16

A

Unit Number : QWM3863(C)
Unit Number : QWM3862(D)
Unit Number : QWM3866(E)
Unit Number : QWM3865(F)
Unit Number : QWM3864(G)
Unit Name : Tuner Amp Unit

MISCELLANEOUS

IC 201	(A,100,105) E-VOL SYS LSI	PM9013A
IC 301	(A,77,141) IC(C,D)	PAL013A
	(A,77,141) IC(E,F,G)	PA2032A
IC 401	(A,144,85) IC	TEF6686HN
IC 451	(A,158,75) IC	MM3571A33P
IC 531	(A,92,83) IC	337S3959
IC 551	(A,18,110) IC	KBD9876EFJ
IC 552	(A,105,23) IC	BD2232G-G
IC 601	(A,109,76) FLASH BLANK UC IC	R5S726A0D216FP
IC 671	(A,130,74) IC	S-80827CNMC-B8M
IC 681	(A,113,93) FLASHROM IC(C,D)	* PEB146A8
	(A,113,93) FLASHROM IC(E,F,G)	* PEB144A8
IC 801	(A,103,18) L-MOS And Gate	TC7SET08FUS1
IC 911	(A,143,27) IC	BA49183-V12
Q 251	(A,12,129) Transistor	EMH53
Q 252	(A,22,130) Transistor	EMH53
Q 301	(A,85,126) Transistor	EMD52
Q 531	(A,92,92) Transistor	LSAR523UB
Q 601	(A,91,94) Transistor(E,F)	RN4982
Q 751	(A,140,138) Transistor	KTD2092
Q 752	(A,139,132) Transistor	EMD52
Q 871	(A,142,58) Transistor	2SAR502UB
Q 872	(A,142,66) Transistor	LTC143EUB
Q 941	(A,95,121) Transistor	LSCR523UB
Q 1011	(A,129,105) Transistor	LTC014EEB
D 301	(A,103,124) Diode(C,D)	CRG03
D 302	(A,100,124) Diode	CRG03
D 551	(A,21,123) Diode	CMS30I30A
D 552	(A,20,103) Diode	RB056L-40
D 601	(A,128,80) Diode(C,D)	RB751SM-40
D 602	(A,132,69) Diode(C,D)	RB751SM-40
D 751	(A,135,134) Diode	DZ2J082M0
D 802	(A,91,16) Diode	DZ2S068C
D 803	(A,125,14) Diode	DZ2S068C
D 804	(A,118,12) Diode	DZ2S068C
D 805	(A,119,12) Diode	DZ2S068C
D 806	(A,114,12) Diode	DZ2S068C
D 807	(A,112,12) Diode	DZ2S068C
D 901	(A,139,126) Diode	D1F60-5053
D 902	(A,136,126) Diode	D1F60-5053
D 911	(A,156,66) Diode	CRG03
D 912	(A,159,66) Diode	CRG03

Circuit Symbol and No.		Part No.
D 941	(A,92,124) Diode	DZ2J068M0
D 1011	(A,126,107) Diode	CRG03
L 202	(A,93,101) Inductor	CTF1793
L 402	(A,137,91) Inductor(C,D,G)	LCTAW150J2520
	(A,137,91) Chip Coil(E,F)	LCTAW3R3J2520
L 403	(A,137,95) Chip Coil(E,F)	LCTAWR27J2520
L 404	(A,139,105) Inductor(C,D,G)	CTF1389
L 406	(A,143,77) Inductor(C,D,G)	CTF1786
L 408	(A,148,103) Inductor	LCMAR27J1608
L 410	(A,139,107) Inductor(E,F)	ATL7033
L 551	(A,29,105) Inductor	CTH1584
L 801	(A,113,16) Inductor	CTF1713
L 901	(A,111,140) Choke Coil 600 uH	CTH1432
T 401	(A,145,96) Variable Coil	CTC1215
X 401	(A,153,85) Resonator 9.216 MHz	CSS1864
X 601	(A,125,74) Resonator 12.0 MHz	CSS1847
X 603	(A,122,91) Resonator 16.93 MHz	CSS1794
⚠ P251	(A,4,129) Fuse 3.0 A	CEK1386
P 402	(A,154,108) Absorber	HSPC16701B02
VA801	(A,106,12) Varistor	MLV0402ES012V0010N
VA802	(A,100,12) Varistor	MLV0402ES012V0010N
CN701	(A,112,31) Connector	VKN1192
CN801	(A,108,3) Connector	CKS6452
CN971	(A,92,48) Connector	VKN1192
JA251	(A,17,137) Jack	CKB1109
JA401	(A,156,128) Plug	YKS5041
JA892	(A,41,140) Jack	CKN1103
JA901	(A,112,140) Plug	CKM1624
⚠	Fuse (10 A)	YEK5001

RESISTORS

R 251	(A,16,130)	RS1/16SS821J
R 252	(A,11,127)	RS1/16SS821J
R 253	(A,14,130)	RS1/16SS223J
R 254	(A,11,129)	RS1/16SS223J
R 255	(A,28,131)	RS1/16SS821J
R 256	(A,18,130)	RS1/16SS821J
R 257	(A,26,130)	RS1/16SS223J
R 258	(A,20,130)	RS1/16SS223J
R 305	(A,88,126)	RS1/16SS103J
R 306	(A,88,128)	RS1/16SS221J
R 307	(A,87,127)	RS1/16SS223J
R 309	(A,88,124)	RS1/16SS103J
R 401	(A,145,91)	RS1/16SS0R0J
R 402	(A,143,91)	RS1/16SS0R0J
R 403	(A,135,91) (C,D,G)	RS1/16SS391J
	(A,135,91) (E,F)	RS1/16SS101J
R 404	(A,142,108)	RS1/16SS105J
R 405	(A,147,108)	RS1/16SS105J
R 406	(A,146,80)	RS1/16SS101J
R 407	(A,147,80)	RS1/16SS101J
R 408	(A,149,81)	RS1/16SS103J
R 410	(A,148,81)	RS1/16SS103J
R 422	(A,144,77) (E,F)	RS1/16SS0R0J
R 437	(A,147,77)	RS1/16SS472J
R 438	(A,146,77)	RS1/16SS472J
R 452	(A,159,85)	RS1/16SS0R0J
R 453	(A,143,73) (C,D)	RS1/10SR0R0J
R 455	(A,161,88)	RS1/16SS0R0J
R 531	(A,90,89)	RS1/16SS473J

Circuit Symbol and No.		Part No.
R 532	(A,90,86)	RS1/16SS222J
R 533	(A,91,86)	RS1/16SS222J
R 534	(A,93,86)	RS1/16SS272J
R 535	(A,94,86)	RS1/16SS472J
R 536	(A,96,87)	RS1/16SS472J
R 537	(A,94,83)	RS1/16SS101J
R 538	(A,94,82)	RS1/16SS101J
R 551	(A,24,110)	RS1/16SS682J
R 552	(A,29,111)	RS1/16SS0R0J
R 553	(A,26,111)	RS1/16SS1803D
R 554	(A,26,109)	RS1/16SS4302D
R 555	(A,38,123)	RS1/10SR471J
R 601	(A,93,68)	RS1/16SS473J
R 602	(A,120,68)	RS1/16SS102J
R 603	(A,108,61)	RS1/16SS473J
R 609	(A,121,63)	RS1/16SS473J
R 610	(A,121,65)	RS1/16SS473J
R 611	(A,122,68)	RS1/16SS473J
R 613	(A,120,75)	RS1/16SS152J
R 614	(A,121,77)	RS1/16SS473J
R 615	(A,129,77)	RS1/16SS473J
R 616	(A,125,67)	RS1/16SS473J
R 617	(A,130,80)	RS1/16SS103J
R 618	(A,124,81) (D,G)	RS1/16SS473J
	(A,124,81) (E)	RS1/16SS103J
R 619	(A,125,81) (C,E,F)	RS1/16SS473J
R 622	(A,124,86)	RS1/16SS473J
R 623	(A,128,84)	RAB4CQ473J
R 624	(A,118,88)	RS1/16SS222J
R 625	(A,112,89)	RS1/16SS221J
R 626	(A,111,88)	RS1/16SS221J
R 627	(A,110,87)	RS1/16SS221J
R 628	(A,110,89)	RS1/16SS221J
R 629	(A,107,90)	RS1/16SS221J
R 630	(A,108,88)	RS1/16SS221J
R 631	(A,106,91)	RS1/16SS473J
R 632	(A,104,90)	RS1/16SS473J
R 633	(A,105,89)	RS1/16SS101J
R 634	(A,101,87)	RS1/16SS102J
R 636	(A,98,90)	RS1/16SS473J
R 637	(A,99,89)	RS1/16SS473J
R 638	(A,102,91)	RS1/16SS473J
R 643	(A,98,81)	RS1/16SS104J
R 644	(A,97,78)	RS1/16SS101J
R 645	(A,94,78)	RS1/16SS101J
R 646	(A,132,72) (C,D,G)	RS1/16SS103J
	(A,132,72) (E,F)	RS1/16SS1002F
R 647	(A,97,76)	RS1/16SS101J
R 648	(A,94,75)	RS1/16SS102J
R 649	(A,94,74)	RS1/16SS102J
R 650	(A,94,73)	RS1/16SS102J
R 651	(A,96,70)	RS1/16SS473J
R 652	(A,96,68)	RS1/16SS222J
R 653	(A,98,65)	RS1/16SS103J
R 655	(A,111,61)	RS1/16SS0R0J
R 656	(A,113,63)	RS1/16SS0R0J
R 659	(A,122,60)	RS1/16SS153J
R 660	(A,122,59)	RS1/16SS153J
R 664	(A,132,61)	RS1/16SS103J
R 667	(A,101,59)	RS1/16SS473J

Circuit Symbol and No.		Part No.
R 668	(A,101,58)	RS1/16SS473J
R 671	(A,128,68)	RS1/16SS104J
R 681	(A,107,96)	RS1/16SS473J
R 682	(A,109,90)	RS1/16SS473J
R 683	(A,118,91)	RS1/16SS473J
R 684	(A,107,92)	RS1/16SS473J
R 685	(A,118,95)	RS1/16SS473J
R 687	(A,126,95) (E,F)	RS1/10SR0R0J
R 701	(A,107,37)	RS1/16SS473J
R 702	(A,112,37)	RS1/16SS104J
R 703	(A,116,27)	RAB4CQ472J
R 704	(A,109,39)	RS1/16SS104J
R 706	(A,106,35)	RS1/16SS221J
R 707	(A,108,37)	RS1/16SS221J
R 708	(A,109,37)	RS1/16SS101J
R 709	(A,110,37)	RS1/16SS221J
R 710	(A,111,37)	RS1/16SS101J
R 711	(A,112,38)	RS1/16SS102J
R 715	(A,115,35)	RS1/16SS151J
R 716	(A,116,35)	RS1/16SS151J
R 717	(A,117,35)	RS1/16SS151J
R 718	(A,121,35)	RS1/16SS221J
R 719	(A,120,35)	RS1/16SS104J
R 752	(A,142,133)	RS1/4SA391J
R 753	(A,126,90)	RS1/16SS473J
R 754	(A,126,91)	RS1/16SS103J
R 801	(A,123,20)	RS1/10SR222J
R 803	(A,119,17)	RS1/16SS223J
R 804	(A,117,17)	RS1/16SS223J
R 805	(A,119,18)	RS1/10SR101J
R 806	(A,117,19)	RS1/10SR101J
R 807	(A,118,19)	RS1/10SR101J
R 808	(A,122,19)	RS1/10SR222J
R 809	(A,114,20)	RS1/10SR220J
R 810	(A,112,20)	RS1/10SR220J
R 813	(A,106,15)	RS1/10SR222J
R 814	(A,100,18)	RS1/10SR222J
R 815	(A,98,18)	RS1/16SS822J
R 816	(A,95,18)	RS1/10SR222J
R 817	(A,93,18)	RS1/10SR222J
R 851	(A,91,19)	RS1/16SS472J
R 871	(A,141,64)	RS1/10SR332J
R 872	(A,141,61)	RS1/16SS103J
R 878	(A,122,25)	RS1/10SR473J
R 891	(A,56,136) (C,D,G)	RS1/16SS102J
	(A,56,136) (E,F)	RS1/16SS1001F
R 892	(A,56,135)	RS1/16SS102J
R 900	(A,53,135) (E,F)	RS1/16SS471J
R 911	(A,144,39)	RS1/10SR1R0J
R 912	(A,139,40)	RS1/10SR1R0J
R 913	(A,152,40)	RS1/16SS223J
R 914	(A,129,39)	RS1/16SS223J
R 915	(A,138,120)	RS1/10SR0R0J
R 941	(A,92,121)	RS1/16SS223J
R 942	(A,93,121)	RS1/16SS473J
R 943	(A,93,124)	RS1/16SS682J
R 944	(A,97,123)	RS1/4SA102J
R 973	(A,88,61)	RS1/16SS222J
R 974	(A,96,54)	RS1/16SS101J
R 975	(A,96,53)	RS1/16SS101J

Circuit Symbol and No.		Part No.
R 976	(A,96,51)	RS1/16SS101J
R 977	(A,90,73)	RS1/16SS0R0J
R 978	(A,88,69)	RS1/16SS0R0J
R 1011	(A,130,107)	RS1/16SS103J
R 1013	(A,126,114)	RS1/4SA102J

CAPACITORS

C 201	(A,99,116)	CKSRYB105K10
C 202	(A,103,115)	CKSRYB105K10
C 203	(A,91,115)	CKSRYB105K10
C 204	(A,106,114)	CKSRYB105K10
C 205	(A,92,115)	CKSRYB105K10
C 206	(A,106,111)	CKSRYB105K10
C 207	(A,93,107)	CKSSYB104K10
C 208	(A,93,105)	CKSSYB104K10
C 209	(A,92,103) 10 uF	CCG1192
C 210	(A,94,105)	CCSSCH151J50
C 211	(A,108,106)	CCSSCH151J50
C 212	(A,106,108) 10 uF	CCG1192
C 213	(A,107,105)	CKSSYB104K10
C 214	(A,107,103)	CKSSYB104K10
C 215	(A,107,101)	CKSSYB104K10
C 216	(A,91,100) 10 uF	CCG1192
C 217	(A,93,99)	CKSSYB104K10
C 218	(A,113,108)	XCEVW470M16
C 219	(A,111,102) 10 uF	CCG1192
C 220	(A,104,97) 10 uF	CCG1192
C 221	(A,94,103)	CKSSYB102K50
C 223	(A,90,100) 1 uF	DCH1246
C 224	(A,113,102)	CKSSYB104K10
C 227	(A,90,108) (G)	CKSSYB102K50
C 229	(A,109,111) 1 uF	DCH1246
C 236	(A,108,103)	CKSRYB105K10
C 251	(A,33,127) 10 uF	DCH1201
C 252	(A,15,126) 10 uF	DCH1201
C 253	(A,15,129)	CCSSCH101J50
C 254	(A,10,129)	CCSSCH101J50
C 255	(A,33,131) 10 uF	DCH1201
C 256	(A,29,129) 10 uF	DCH1201
C 257	(A,25,130)	CCSSCH101J50
C 258	(A,19,130)	CCSSCH101J50
C 260	(A,32,136)	CKSSYB104K10
C 261	(A,4,132)	CKSSYB103K16
C 301	(A,68,128)	CKSRYB474K10
C 303	(A,78,128)	CKSRYB474K10
C 305	(A,72,129)	CKSRYB474K10
C 307	(A,76,128)	CKSRYB474K10
C 313	(A,82,129) 2.2 uF	CCG1205
C 314	(A,134,125)	CKSRYB104K16
C 318	(A,63,129) 10 uF/16 V	DCH1263
C 322	(A,104,125)	CKSRYB104K16
C 327	(A,86,128)	CKSRYB105K10
C 328	(A,51,129) 2.2 uF	CCG1205
C 407	(A,151,91)	CKSSYB104K10
C 409	(A,147,90)	CKSSYB224K6R3
C 410	(A,146,103)	CCSSCH220J50
C 411	(A,144,103)	CCSSCH331J50
C 414	(A,138,88)	CKSSYB102K50
C 416	(A,139,97) (E,F)	CCSSCH120J50
C 417	(A,138,97) (E,F)	CCSSCK1R0C50
C 418	(A,139,102) (E,F)	CCSSCK2R0C50
C 419	(A,139,103) (E,F)	CCSSCK1R0C50
C 420	(A,145,107)	CCSSCH471J50
C 422	(A,139,85)	CKSSYB152K50
C 425	(A,148,88)	CCSSCH390J50
C 428	(A,141,89)	CKSSYB104K10
C 430	(A,147,91)	CKSSYB102K50
C 434	(A,152,103)	CCSSCH100D50
C 442	(A,143,79) 10 uF	DCH1201
C 452	(A,154,78)	CKSRYB104K16
C 453	(A,158,71)	CKSRYB105K10
C 455	(A,143,74) (C,D)	CKSSYB102K50
C 456	(A,143,75) 1 uF	DCH1246
C 458	(A,138,80)	CKSSYB102K50
C 459	(A,149,105)	CKSRYB104K16
C 463	(A,140,74) (E,F)	CKSSYB104K10
C 531	(A,90,88)	CKSSYB104K10
C 532	(A,92,87)	CKSSYB104K10
C 551	(A,11,120)	XCEVW221M16
C 552	(A,11,106)	CKSRYB105K16
C 553	(A,13,109)	CKSSYB103K16
C 555	(A,23,111)	CKSSYB682K25
C 556	(A,30,119)	CEVQW221M6R3
C 557	(A,31,115)	CKSRYB105K10
C 560	(A,107,20)	CKSRYB105K10
C 561	(A,101,23)	CKSRYB105K10
C 564	(A,31,113) 4.7 uF	CCG1201
C 565	(A,13,105) 4.7 uF	CCG1222
C 601	(A,103,64)	CKSSYB104K10
C 602	(A,107,64)	CKSSYB104K10
C 603	(A,110,64)	CKSSYB104K10
C 604	(A,111,64)	CKSSYB104K10
C 605	(A,115,64)	CKSSYB104K10
C 606	(A,120,70)	CKSSYB104K10
C 607	(A,125,72)	CCSSCH120J50
C 608	(A,125,77)	CCSSCH120J50
C 609	(A,120,72) (C,D,G)	CKSSYB104K10
	(A,120,72) (E,F)	CCSSCH101J50
C 610	(A,120,74) (C,D,G)	CKSSYB104K10
	(A,120,74) (E,F)	CKSSYB102K50
C 611	(A,120,76)	CKSSYB102K50
C 612	(A,121,81)	CKSSYB104K10
C 613	(A,122,81)	CKSSYB104K10
C 618	(A,122,88)	CCSSCH120J50
C 619	(A,121,93)	CCSSCH120J50
C 620	(A,112,87)	CKSSYB104K10
C 621	(A,107,87)	CKSSYB104K10
C 622	(A,104,92)	CCSSCH220J50
C 623	(A,105,87)	CKSSYB104K10
C 624	(A,104,87)	CKSSYB104K10
C 625	(A,102,89)	CKSSYB104K10
C 626	(A,98,79)	CKSSYB104K10
C 627	(A,95,80)	CCSSCH220J50
C 628	(A,94,79)	CCSSCH220J50
C 629	(A,98,74)	CKSSYB104K10
C 630	(A,97,72)	CKSSYB103K16
C 631	(A,95,76)	CCSSCH220J50
C 635	(A,111,98) (E,F,G)	CKSSYB104K10
C 641	(A,95,88)	CCSRCH330J50
C 672	(A,122,72) 1 uF	DCH1246

Circuit Symbol and No.		Part No.
C 683	(A,119,93)	CCSSCJ3R0C50
C 685	(A,118,98) (E,F)	CKSRYB105K10
C 687	(A,121,96)	CKSRYB105K10
C 701	(A,110,39)	CKSSYB103K16
C 704	(A,118,38)	CCSSCH100D50
C 705	(A,117,38)	CCSSCH100D50
C 706	(A,115,37)	CCSSCH100D50
C 710	(A,122,47)	CKSRYB104K16
C 752	(A,138,135)	CKSSYB104K10
C 753	(A,146,129) 10 uF	DCH1201
C 754	(A,136,112) (E,F,G)	CKSSYB102K50
C 801	(A,122,5)	CCSRCH102J50
C 806	(A,123,7)	CKSRYB104K16
C 807	(A,120,13)	CKSRYB105K10
C 808	(A,107,18)	CKSRYB104K16
C 809	(A,95,15)	CCSRCH221J50
C 810	(A,95,12)	CCSRCH221J50
C 811	(A,102,20)	CKSSYB104K10
C 872	(A,122,26)	CKSRYB105K16
C 873	(A,122,23)	CKSRYB105K16
C 891	(A,51,137)	CKSRYB104K16
C 892	(A,32,138)	CKSRYB104K16
C 893	(A,32,134)	CKSRYB102K50
C 894	(A,51,133)	CKSRYB102K50
C 901	(A,131,123) 2 200 uF/16 V	CCH2040
C 911	(A,137,116)	CKSRYB104K16
C 912	(A,150,39)	CKSSYB102K50
C 913	(A,129,42)	CKSSYB102K50
C 914	(A,155,55)	XCEAT102M16
C 915	(A,131,41)	CKSRYB104K16
C 916	(A,146,42) 10 uF	DCH1201
C 917	(A,144,45)	CKSSYB102K50
C 919	(A,149,40) 10 uF	DCH1201
C 921	(A,133,41) 10 uF	DCH1201
C 923	(A,158,40) 10 uF	DCH1201
C 926	(A,138,43) 10 uF	DCH1201
C 927	(A,138,41)	CKSSYB102K50
C 941	(A,95,124)	CKSRYB104K16
C 973	(A,96,52)	CCSSCH470J50
C 1011	(A,132,108)	CKSRYB105K16
C 1013	(A,136,76)	CKSRYB104K16

B

Unit Number : (A,C,D,E,F,G)
Unit Number : (B)
Unit Name : Keyboard Unit

MISCELLANEOUS

IC 1801	(B,81,19) IC	PDC205A
IC 1951	(A,154,37)IR RC REC MODULE(A,C,D,E,F,G)	PNJ4833M
Q 1841	(B,27,8) Transistor	LSCR523UB
Q 1842	(B,19,8) Transistor	LSCR523UB
Q 1843	(B,8,16) Transistor	LSCR523UB
Q 1847	(B,107,22) Transistor	LSCR523UB
Q 1848	(B,117,24) Transistor	LSCR523UB
Q 1849	(B,127,26) Transistor	LSCR523UB
D 1841	(A,3,17) LED	SMLVN6RGB2UK(B)
D 1842	(A,38,17) LED	SMLVN6RGB2UK(B)

Circuit Symbol and No.		Part No.
D 1843	(A,160,23) LED	SMLVN6RGB2UK(B)
D 1844	(A,145,20) LED	SMLVN6RGB2UK(B)
D 1845	(A,45,20) LED	SMLVN6RGB2UK(B)
X 1801	(B,66,20) Ceramic Resonator 5.00 MHz	CSS1547
S 1821	(A,50,3) Push Switch	CSG1155
S 1822	(A,9,39) Push Switch	CSG1155
S 1823	(A,64,3) Push Switch	CSG1155
S 1824	(A,6,6) Push Switch	CSG1155
S 1825	(A,5,22) Push Switch	CSG1155
S 1826	(A,38,27) Push Switch	CSG1155
S 1827	(A,38,8) Push Switch	CSG1155
S 1828	(A,73,3) Push Switch	CSG1155
S 1829	(A,143,3) Push Switch	CSG1155
S 1830	(A,120,3) Push Switch	CSG1155
S 1831	(A,129,3) Push Switch	CSG1155
S 1832	(A,97,3) Push Switch	CSG1155
S 1833	(A,105,3) Push Switch	CSG1155
V 1801	(A,51,30) LCD	CAW2041
S 1834	(A,82,3) Push Switch	CSG1155
S 1835	(A,7,29) Push Switch	CSG1155
S 1836	(A,21,17) Encoder(MULTI-CONTROL)	CSD1193
CN1941	(B,107,7) Connector	CKS6451
JA1901	(A,153,23) Connector	CKS6443
JA1921	(A,154,8) Jack(A,C,D,E,F,G)	CKN1108
	(A,154,8) Jack(B)	CKN1090

RESISTORS

R 1801	(B,61,20)	RS1/16SS103J
R 1821	(B,33,25)	RS1/16SS273J
R 1841	(B,32,7)	RS1/16SS222J
R 1842	(B,32,5)	RS1/16SS102J
R 1843	(B,23,7)	RS1/16SS222J
R 1844	(B,23,5)	RS1/16SS102J
R 1845	(B,14,7)	RS1/16SS222J
R 1846	(B,12,7)	RS1/16SS102J
R 1847	(B,24,7)	RS1/16SS470J
R 1849	(B,14,6)	RS1/16SS470J
R 1851	(B,10,7)	RS1/16SS470J
R 1865	(B,102,23)	RS1/16SS222J
R 1866	(B,111,26)	RS1/16SS102J
R 1867	(B,114,23)	RS1/16SS222J
R 1868	(B,114,25)	RS1/16SS102J
R 1869	(B,123,26)	RS1/16SS222J
R 1870	(B,123,28)	RS1/16SS102J
R 1871	(B,112,23)	RS1/16SS470J
R 1873	(B,122,26)	RS1/16SS470J
R 1875	(B,132,25)	RS1/16SS470J
R 1884	(B,46,23)	RS1/10SR221J
R 1887	(B,47,22)	RS1/16SS101J
R 1888	(B,38,22)	RS1/16SS101J
R 1921	(B,133,8)	RS1/10SR0R0J
R 1922	(B,130,5)	RS1/10SR0R0J
R 1923	(B,138,5)	RS1/10SR0R0J
R 1941	(B,77,4)	RS1/10SR222J
R 1942	(B,74,5)	RS1/10SR222J
R 1952	(B,142,30) (B)	RS1/16SS473J
R 1953	(B,141,24) (A,C,D,E,F,G)	RS1/10SR101J

CAPACITORS

C 1801	(B,70,19) 4.7 uF	CCG1212

Circuit Symbol and No.			Part No.
C 1802	(B,70,21)		CKSSYB104K10
C 1803	(B,75,9)		CKSSYB104K10
C 1804	(B,76,9)		CKSSYB104K10
C 1805	(B,77,9)		CKSSYB104K10
C 1856	(B,48,25)		CKSRYB105K16
C 1901	(B,160,31)		CKSRYB104K16
C 1902	(B,138,13)		CKSRYB102K50
C 1904	(B,137,26)		CKSRYB105K10
C 1905	(B,46,20)		CKSRYB105K10
C 1923	(B,136,8)		CCSRCH221J50
C 1951	(B,142,27)	10 uF(A,C,D,E,F,G)	CCG1192

C

Unit Number : CWX4269
Unit Name : CD Core Unit(S11.6VA)

MISCELLANEOUS

IC 201	(B,24,38)	IC	PEQ094A
IC 301	(A,37,12)	IC	BD8223EFV
Q 101	(B,12,54)	Transistor	2SA1577
Q 102	(B,16,55)	Chip Digital Transistor	LTA123JUB
X 201	(B,25,50)	Ceramic Resonator 16.934 MHz	CSS1603
S 901	(A,43,54)	Spring Switch(HOME)	CSN1080
S 903	(B,22,13)	Spring Switch(DSCSNS)	CSN1081
CN101	(A,17,58)	Connector	CKS4808
CN701	(A,26,30)	Connector	CKS6146

RESISTORS

R 101	(B,7,59)	RS1/10SR2R4J
R 102	(B,8,59)	RS1/10SR2R4J
R 103	(B,10,59)	RS1/10SR2R7J
R 108	(B,14,58)	RS1/16SS105J
R 109	(B,15,50)	RS1/16SS152J
R 214	(B,18,28)	RS1/16SS103J
R 215	(B,17,28)	RS1/16SS393J
R 216	(B,13,36)	RS1/16SS102J
R 217	(B,10,33)	RS1/16SS562J
R 218	(B,10,36)	RS1/16SS472J
R 229	(B,13,35)	RS1/16SS471J
R 232	(A,31,55)	RS1/16SS0R0J
R 237	(B,34,45)	RS1/16SS221J
R 240	(B,35,40)	RS1/16SS473J
R 245	(A,34,46)	RS1/16SS104J
R 254	(A,37,56)	RS1/16SS104J
R 260	(B,30,27)	RS1/16SS103J
R 264	(A,22,9)	RS1/16SS102J
R 281	(B,34,38)	RS1/16SS560J
R 282	(B,34,39)	RS1/16SS560J
R 291	(B,34,35)	RS1/16SS560J
R 294	(B,28,49)	RS1/16SS471J
R 303	(A,28,12)	RS1/16SS123J
R 304	(A,29,11)	RS1/16SS123J
R 305	(A,27,9)	RS1/16SS102J
R 306	(A,27,12)	RS1/16SS472J
R 307	(A,26,9)	RS1/16SS102J
R 308	(A,26,12)	RS1/16SS472J
R 309	(A,35,7)	RS1/16SS473J
R 310	(B,31,9)	RS1/16SS472J

Circuit Symbol and No.		Part No.
R 311	(B,31,10)	RS1/16SS472J
R 312	(B,31,11)	RS1/16SS472J
R 313	(B,31,12)	RS1/16SS472J
R 701	(A,22,38)	RS1/16SS101J
R 702	(A,24,38)	RS1/16SS101J
R 706	(A,33,42)	RS1/16SS221J

CAPACITORS

C 104	(B,15,52)	CKSQYB475K6R3
C 110	(B,11,44)	CKSSYB104K10
C 111	(B,12,44)	CKSSYB103K16
C 203	(B,22,47)	CKSSYB104K10
C 205	(A,17,41)	CKSRYB105K10
C 209	(B,29,48)	CKSRYB104K16
C 210	(B,33,44)	CKSSYB104K10
C 211	(B,34,42)	CKSSYB104K10
C 212	(B,23,29)	CKSSYB104K10
C 213	(B,18,26)	CKSSYB332K50
C 214	(B,17,26)	CKSSYB473K16
C 215	(B,19,29)	CKSSYB104K10
C 216	(B,13,33)	CKSSYB152K50
C 217	(B,10,35)	CCSSCH390J50
C 218	(B,10,37)	CCSSCH5R0C50
C 219	(B,14,35)	CKSSYB104K10
C 220	(A,18,39)	CKSSYB104K10
C 221	(B,14,32)	CKSSYB104K10
C 222	(B,14,37)	CKSSYB104K10
C 223	(B,13,42)	CCSSCH680J50
C 224	(B,14,45)	CCSSCH470J50
C 225	(B,14,47)	CKSSYB103K16
C 228	(B,10,34)	CCSSCH180J50
C 229	(B,9,41)	CKSSYB104K10
C 233	(B,33,46)	CKSSYB103K16
C 236	(B,8,41)	CKSSYB104K10
C 238	(A,26,45)	CKSRYB104K16
C 299	(A,26,43)	CKSSYB104K10
C 302	(B,29,12)	CKSSYB102K50
C 303	(B,30,12)	CKSSYB102K50
C 304	(B,28,12)	CKSSYB223K16
C 305	(B,27,12)	CKSSYB104K10
C 306	(A,32,7)	CKSSYB104K10
C 307	(A,42,19)	CKSRYB105K10
C 308	(A,32,16)	CKSRYB105K10
C 710	(A,34,43)	CKSSYB102K50

D

Unit Number : QWM3995
Unit Name : BT Unit

MISCELLANEOUS

IC 21	(A,8,47)	IC	MM3479A18P
IC 22	(A,20,46)	IC	MM3411A33N
CN21	(A,34,26)	Connector	CKS6346
CN23	(A,41,43)	Connector	CKS3857
	BT Module		YWX5052

RESISTORS

Circuit Symbol and No.		Part No.
R 28	(A,42,30)	RS1/16SS222J
R 29	(A,29,40)	RS1/16SS102J
R 30	(A,29,37)	RS1/16SS102J
R 38	(A,42,16)	RS1/16SS0R0J
R 39	(A,41,22)	RS1/16SS221J
R 40	(A,39,22)	RS1/16SS221J
R 41	(A,38,22)	RS1/16SS221J

CAPACITORS

C 23	(A,24,39)	XCEVW221M4
C 24	(A,6,43)	CKSRYB105K10
C 26	(A,27,47) 4.7 uF	CCG1212
C 29	(A,17,45)	CKSRYB105K10
C 33	(A,9,53) 4.7 uF	CCG1212
C 34	(A,42,29)	CKSRYB105K10
C 36	(A,31,40)	CKSRYB104K16
C 38	(A,15,45) 4.7 uF	CCG1212
C 39	(A,6,41) 4.7 uF	CCG1212
C 40	(A,12,50)	CKSRYB104K16